
FORM NO. 3317–755

TORO®

MODEL NO. 09600–60001 & UP

PARTS CATALOG

HC 4000 AERATOR

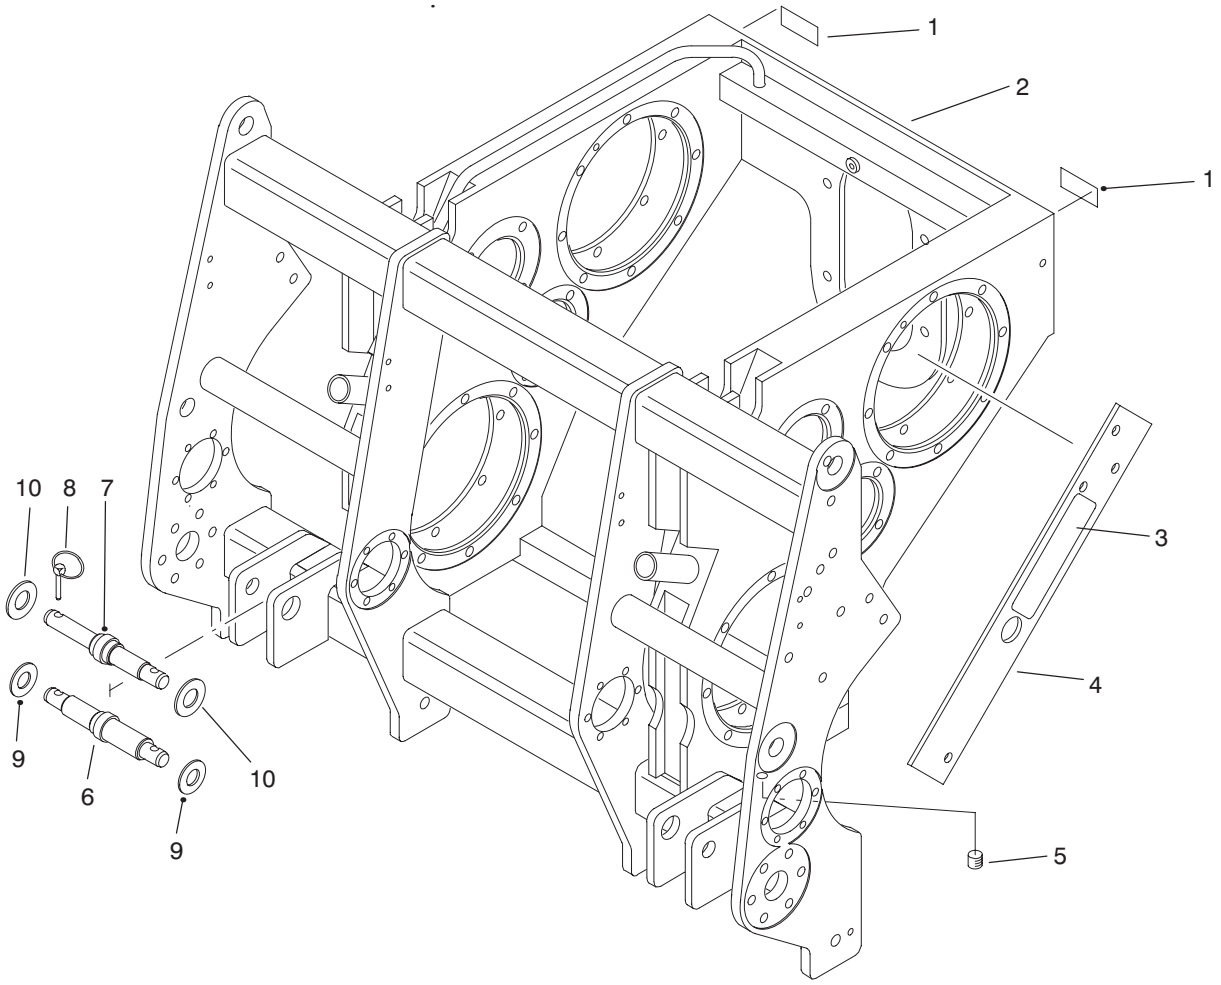


T–1855

FRAME & LINK PIN ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	59–9930	Decal – Danger	2
2	92–9366	Frame	1
3	82–3220	Decal – Bar, Timing	1
4	92–9876	Bar – Timing	1
5	285–21	Plug – Pipe	2
6	92–9865	Pin 'B' – Link, Lower (1.12 & 1.25" Dia.)	2
7	92–9864	Pin 'A' – Link, Lower (.87 & 1" Dia.)	2
8	283–71	Pin – Lynch	4
9	93–8753	Washer – Spacer, .88	4
10	93–8754	Washer – Spacer, 1.00	4
*	93–8755	Washer – Spacer, 1.12	4
*	93–8756	Washer – Spacer, 1.25	4

© The TORO Company – 1995
All Rights Reserved


TPS

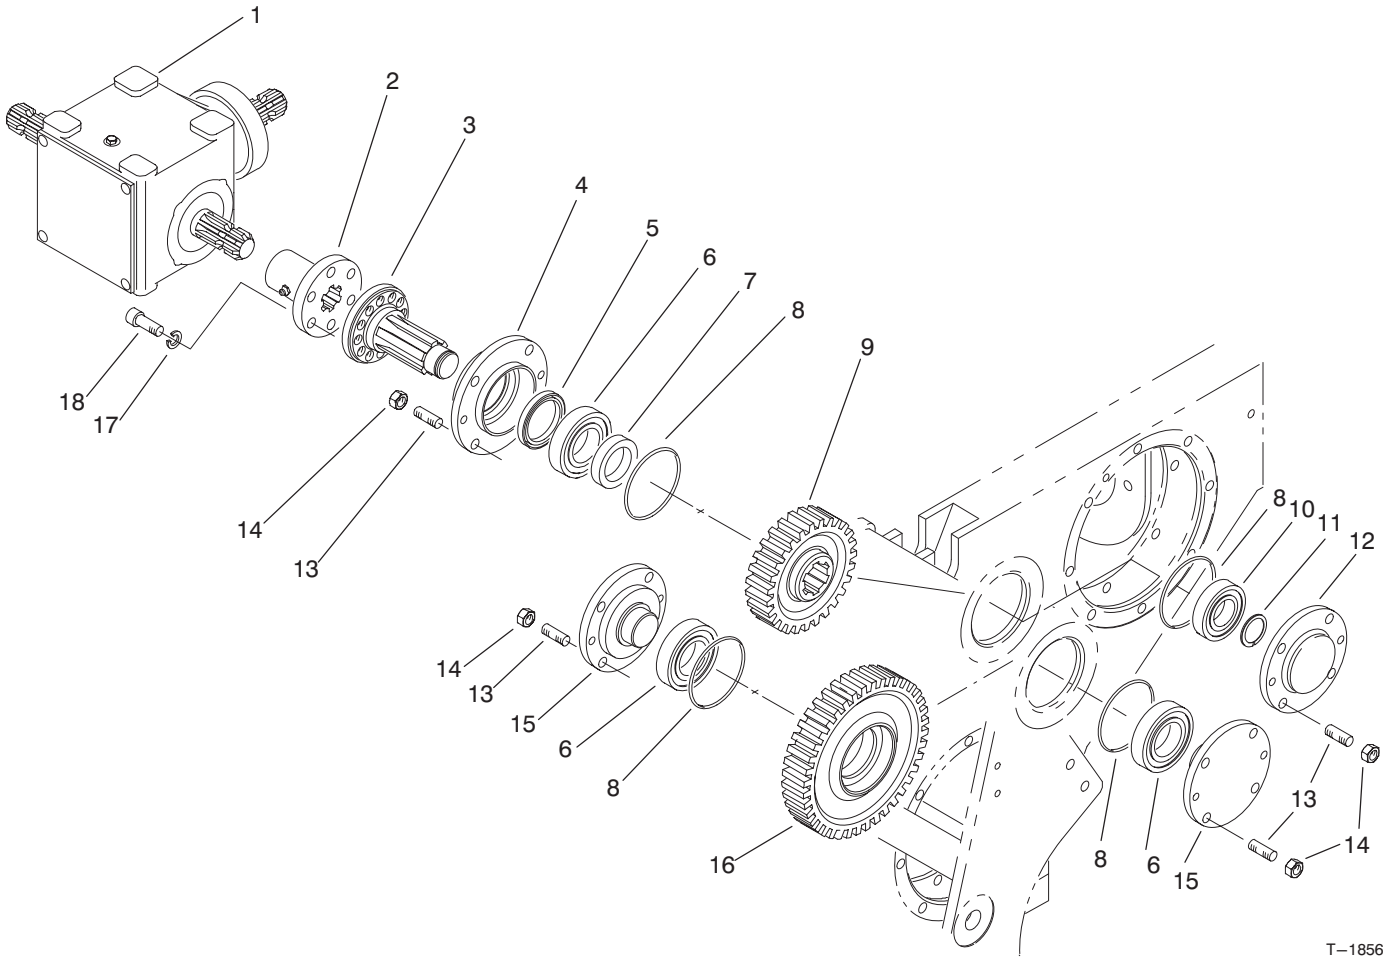

SPLINED SHAFT & IDLER GEARS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–8776	Gear Box Assembly	1
2	76–3710	Coupling – Flange, Splined	2
3	92–9360	Shaft – Drive, Splined	2
4	92–9362	Housing – Bearing	2
5	92–9875	Seal	2
6	70–9220	Bearing	6
7	92–9361	Spacer	2
8	92–3013	O–Ring, Seal	8
9	92–9359	Gear – Drive, Input	2

Ref. No.	Part No.	Description	No. Used
10	72–3820	Bearing	2
11	92–9873	Ring – Retaining	2
12	92–9363	Housing – Bearing	2
13	92–3005	Stud	32
14	92–3006	Nut	32
15	92–9364	Flange – Gear, Idler	4
16	92–9365	Gear – Idler	2
17	3253–7	Washer – Lock	12
18	3274–89	Screw – Hex. Socket Hd.	12

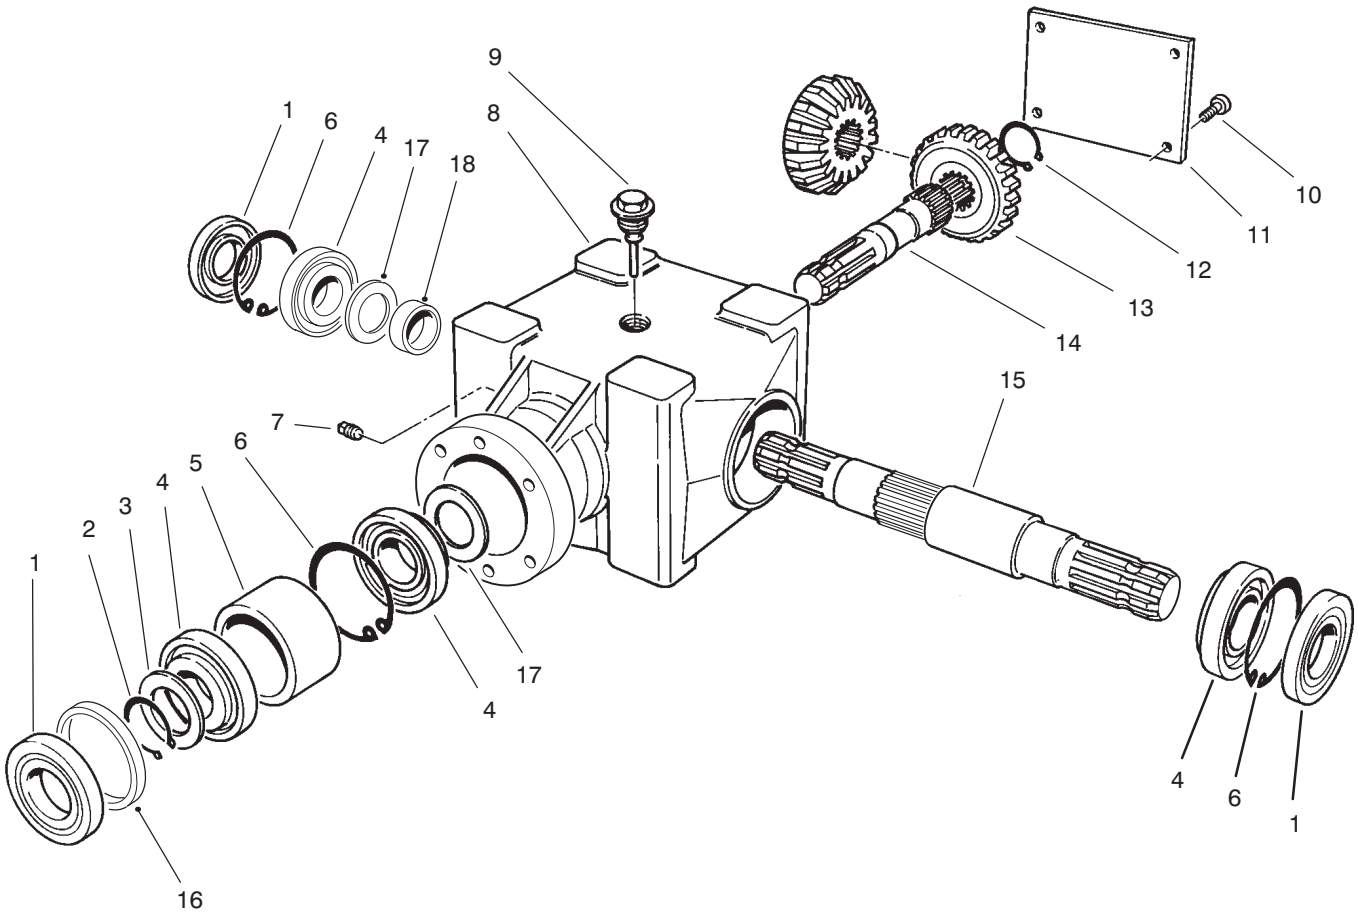


T–1127

GEAR BOX ASSEMBLY NO. 93–8776

Ref. No.	Part No.	Description	No. Used
1	92–9922	Seal – Oil	3
2	92–9873	Ring – Retaining	1
3	92–9908	Spacer – Shaft	1
4	71–6630	Bearing	4
5	92–9909	Spacer – Bearing	1
6	32151–88	Ring – Snap	3
7	285–21	Plug – Pipe	2
8	93–8777	Case	1
9	92–9924	Plug – Oil Level/Filler	1
10	92–9925	Bolt – Hex. Socket Hd.	4
11	92–9905	Cover	1
12	92–9923	Ring – Retaining	1
13	92–9906	Gear – Bevel	2
14	92–9911	Shaft – Input	1

Ref. No.	Part No.	Description	No. Used
15	92–9921	Output – Shaft Assembly (Incl. Ref. #18)	1
16	92–9910	Spacer – Seal	1
17	92–9913	Shim – Standard (48 x 35 x .60 mm)	2
†18		Collar – Output Shaft	1
*	92–9920	Kit – Shims	A/R
		Includes:	
		Shim (72 x 60.5 x .05 mm)	1
		Shim (72 x 60.5 x .10 mm)	1
		Shim (72 x 60.5 x .25 mm)	1
		Shim (48 x 35 x .05 mm)	2
		Shim (48 x 35 x .10 mm)	2
		Shim (48 x 35 x .25 mm)	2


*Not Illustrated
†Not Sold Separately

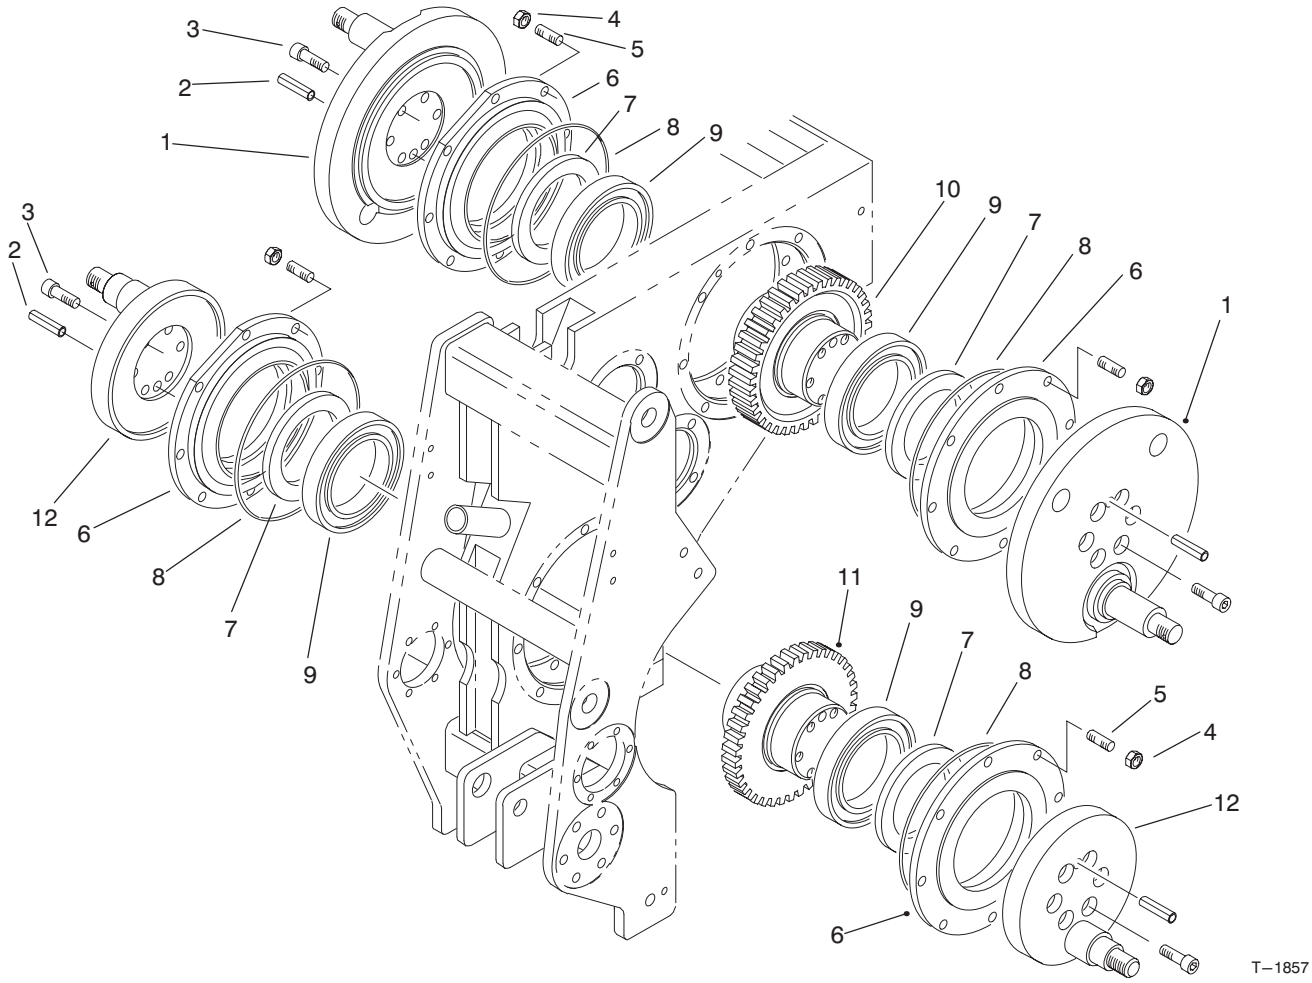

CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9948	Assembly – Crank, Top	4
2	71–7100	Pin – Roll	8
3	3274–4	Screw – Hex. Socket Hd.	48
4	92–3006	Nut	64
5	92–3005	Stud	64
6	92–3000	Flange – Bearing, Crank	8

Ref. No.	Part No.	Description	No. Used
7	70–9340	Seal	8
8	92–3012	O–Ring, Seal	8
9	70–9330	Bearing	8
10	76–3650	Gear – Crank, Top	2
11	76–3660	Gear – Crank, Bottom	2
12	72–8100	Assembly – Crank, Bottom	4

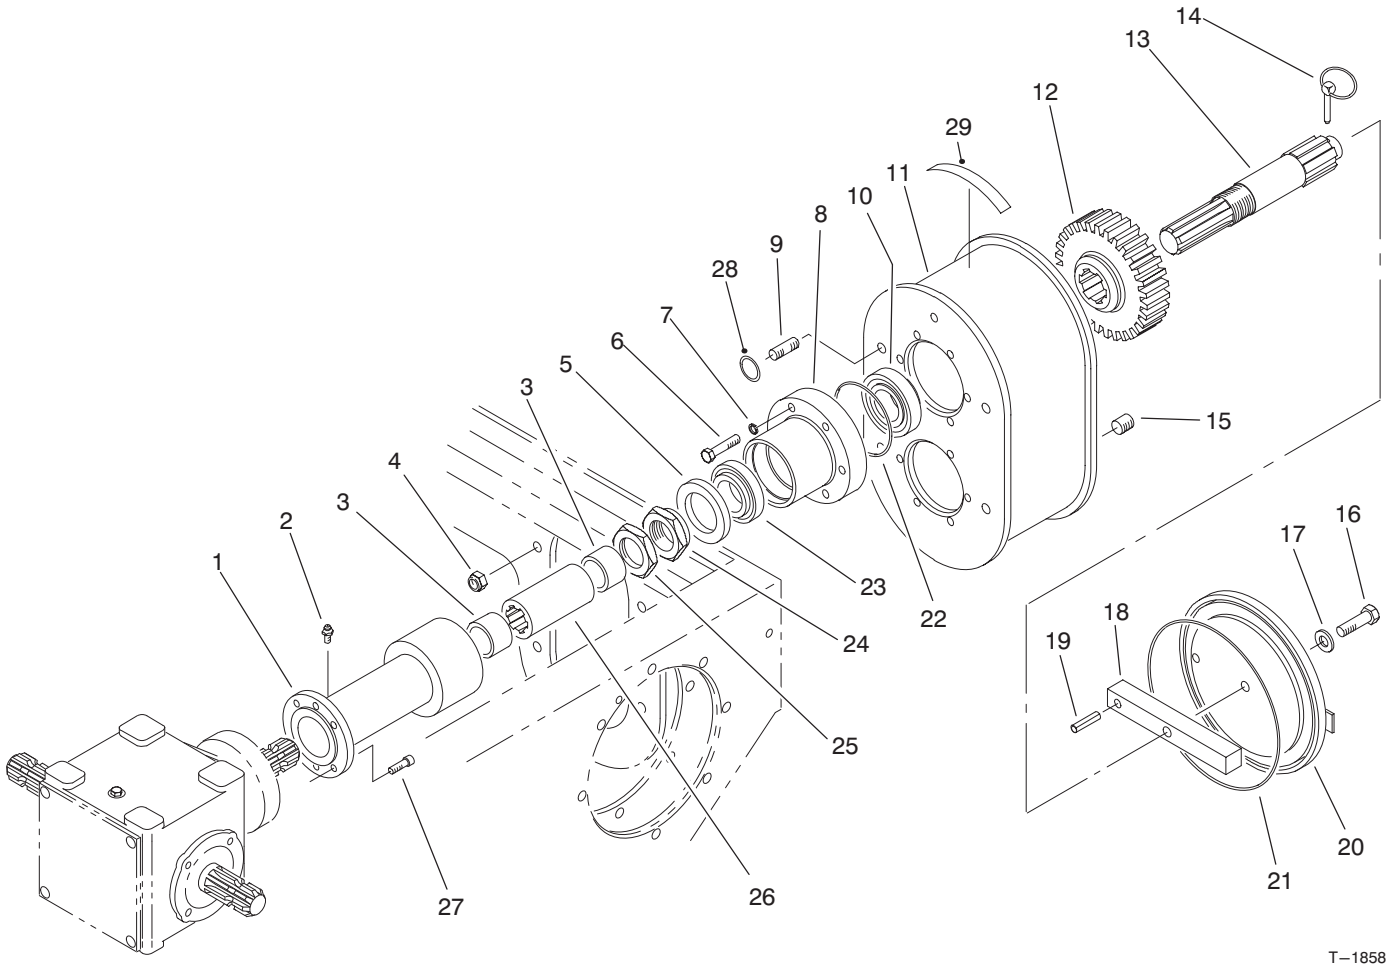


T–1858

PICKOFF GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–8778	Tube – Support	1
2	302–5	Fitting – Grease	1
3	92–9944	Spacer – Coupling	2
4	92–3006	Nut	4
5	71–6490	Seal	1
6	323–8	Screw – Cap Hex. Hd.	6
7	3253–21	Washer – Lock	6
8	92–3010	Housing – Bearing	1
9	92–3005	Stud	4
10	71–6700	Bearing	1
11	92–9415	Housing W.A. – Gearbox	1
12	71–7400	Gear – 40 Tooth	1
*	71–7390	Gear – 39 Tooth	1
*	71–7380	Gear – 38 Tooth	1
*	71–7370	Gear – 37 Tooth	1
*	71–7360	Gear – 36 Tooth	1
*	71–7350	Gear – 35 Tooth	1
*	71–7340	Gear – 34 Tooth	1
*	71–7330	Gear – 33 Tooth	1
*	71–7320	Gear – 32 Tooth	1
*	71–7310	Gear – 31 Tooth	1
*	71–7300	Gear – 30 Tooth	1

Ref. No.	Part No.	Description	No. Used
13	92–9943	Shaft – Output	1
14	283–72	Pin – Lynch	1
15	285–21	Plug – Pipe	1
16	325–6	Screw – Cap Hex. Hd.	1
17	3256–5	Washer – Flat	1
18	92–9421	Bar – Latch	1
19	32121–49	Pin – Roll	1
20	92–9420	Cover – Hatch	1
21	92–3012	O–Ring, Seal	1
22	92–3013	O–Ring, Seal	1
23	71–6690	Bearing	1
24	93–8762	Nut	1
25	70–9720	Nut	1
26	92–9428	Coupling – Splined	1
27	93–8752	Screw – Hex. Socket Hd.	6
28	237–185	Seal – O–Ring	2
29	65–3090	Decal – Instruction	1

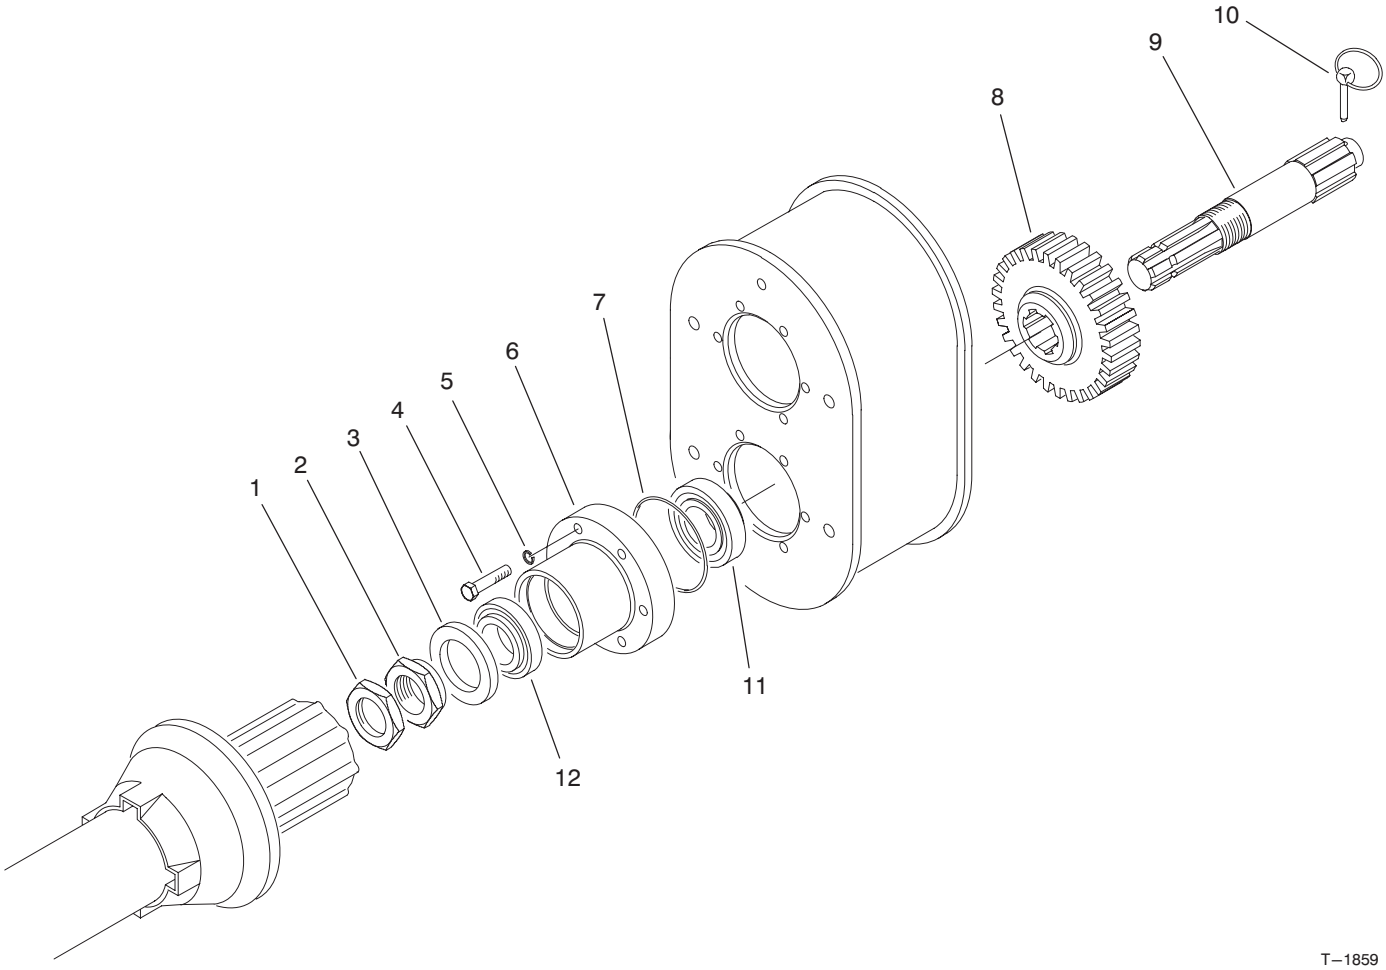


T–1859

LOWER SHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–9720	Nut	1
2	93–8762	Nut	1
3	71–6490	Seal	1
4	323–8	Screw – Cap Hex. Hd.	6
5	3253–21	Washer – Lock	6
6	92–3010	Housing – Bearing	1
7	92–3013	O–Ring, Seal	1
	71–7400	Gear – 40 Tooth	1
*	71–7390	Gear – 39 Tooth	1
*	71–7380	Gear – 38 Tooth	1
*	71–7370	Gear – 37 Tooth	1
*	71–7360	Gear – 36 Tooth	1

Ref. No.	Part No.	Description	No. Used
*8	71–7350	Gear – 35 Tooth	1
*	71–7340	Gear – 34 Tooth	1
*	71–7330	Gear – 33 Tooth	1
*	71–7320	Gear – 32 Tooth	1
*	71–7310	Gear – 31 Tooth	1
*	71–7300	Gear – 30 Tooth	1
9	71–6570	Shaft – Input (6 tooth)	1
*	93–8788	Shaft – Input (21 tooth)	1
10	283–72	Pin – Lynch	1
11	71–6700	Bearing	1
12	71–6690	Bearing	1

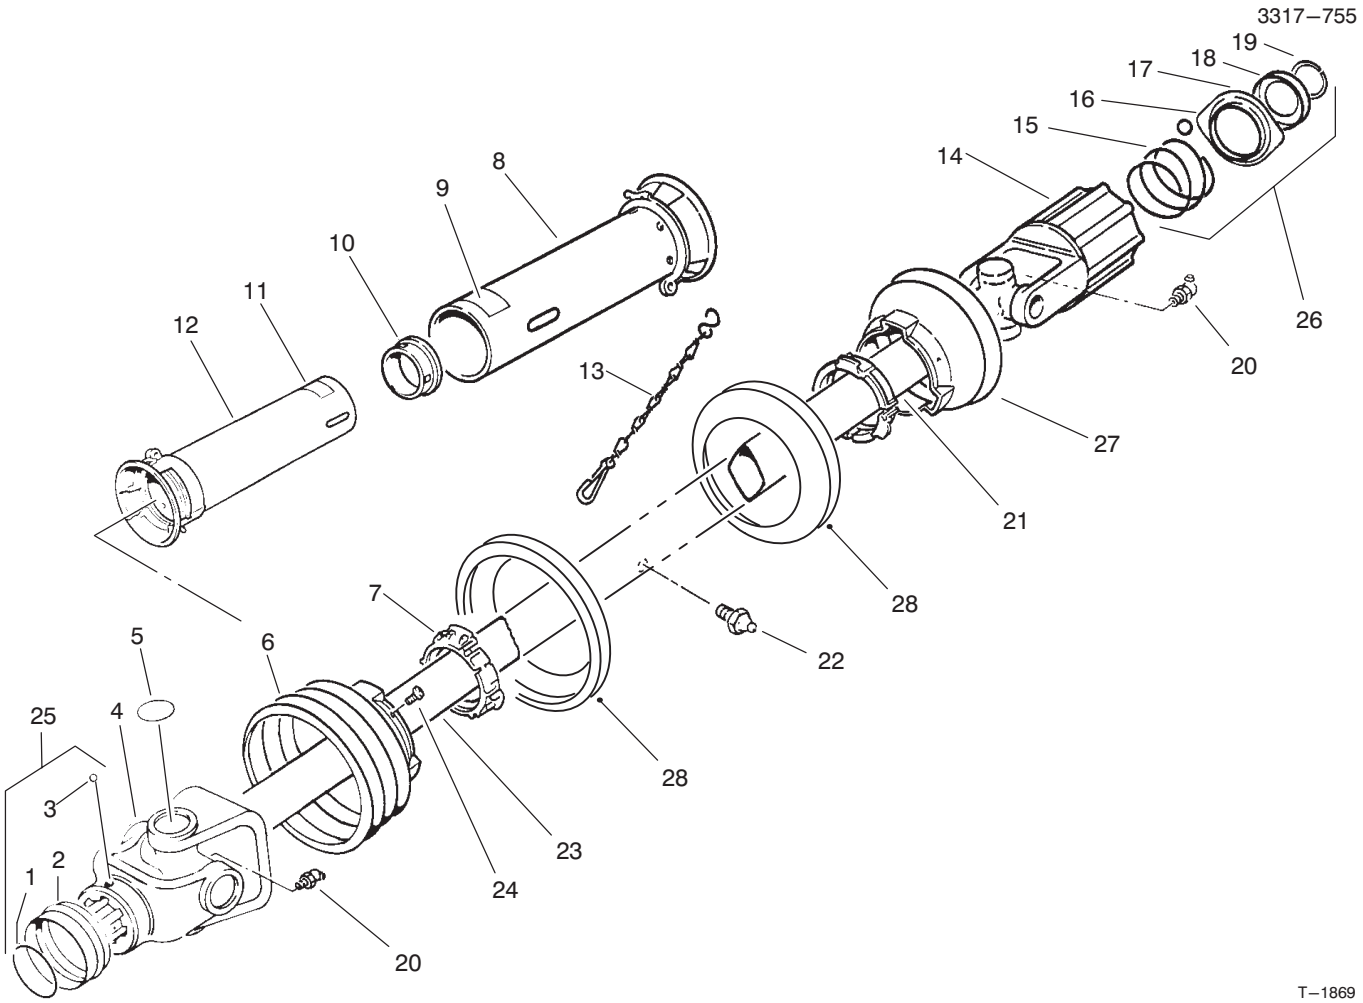


FRONT DRIVE LINE ASSEMBLY NO. 93–7735
(6 Tooth Clutch)

Ref. No.	Part No.	Description	No. Used
1		Ring – Retaining	1
2		Assembly – Collar	1
3		Ball	3
4	77–4710	Yoke	1
5	77–4720	Cross & Bearing Kit	2
6	77–4730	Cone – Shield	1
7	77–4740	Ring – Bearing	2
8	93–7738	Tube – Shield, Outer	1
9	92–7936	Decal – Out	1
10	77–4790	Bearing – Support	1
11	92–7937	Decal – In	1
12	84–6330	Tube – Inner, Shield	1
13	77–4760	Chain – Safety	2
14	93–7739	Clutch – Radial Pin (6 Tooth)	1
15		Spring – Compression	1
16		Ball	3

Ref. No.	Part No.	Description	No. Used
17		Collar – Lock	1
18		Ring – Flanged	1
19		Ring – Snap	1
20	92–7938	Fitting – Grease 45°	2
21		Outer Shaft & Yoke	1
22	84–6370	Fitting – Grease	1
23		Inner Shaft & Yoke	1
24	84–6360	Screw	2
25	77–4670	Kit – Collar (Incl. Ref. #1–3)	1
26	77–4660	Kit – Flange (Incl. Ref. #15–19)	1
27	93–7736	Cone – Shield	1
28	93–7734	Collar	2
*	94–1775	Kit – Clutch Cams & Springs	4
*	93–7735	Drive Line (Complete)	1

*Not Illustrated

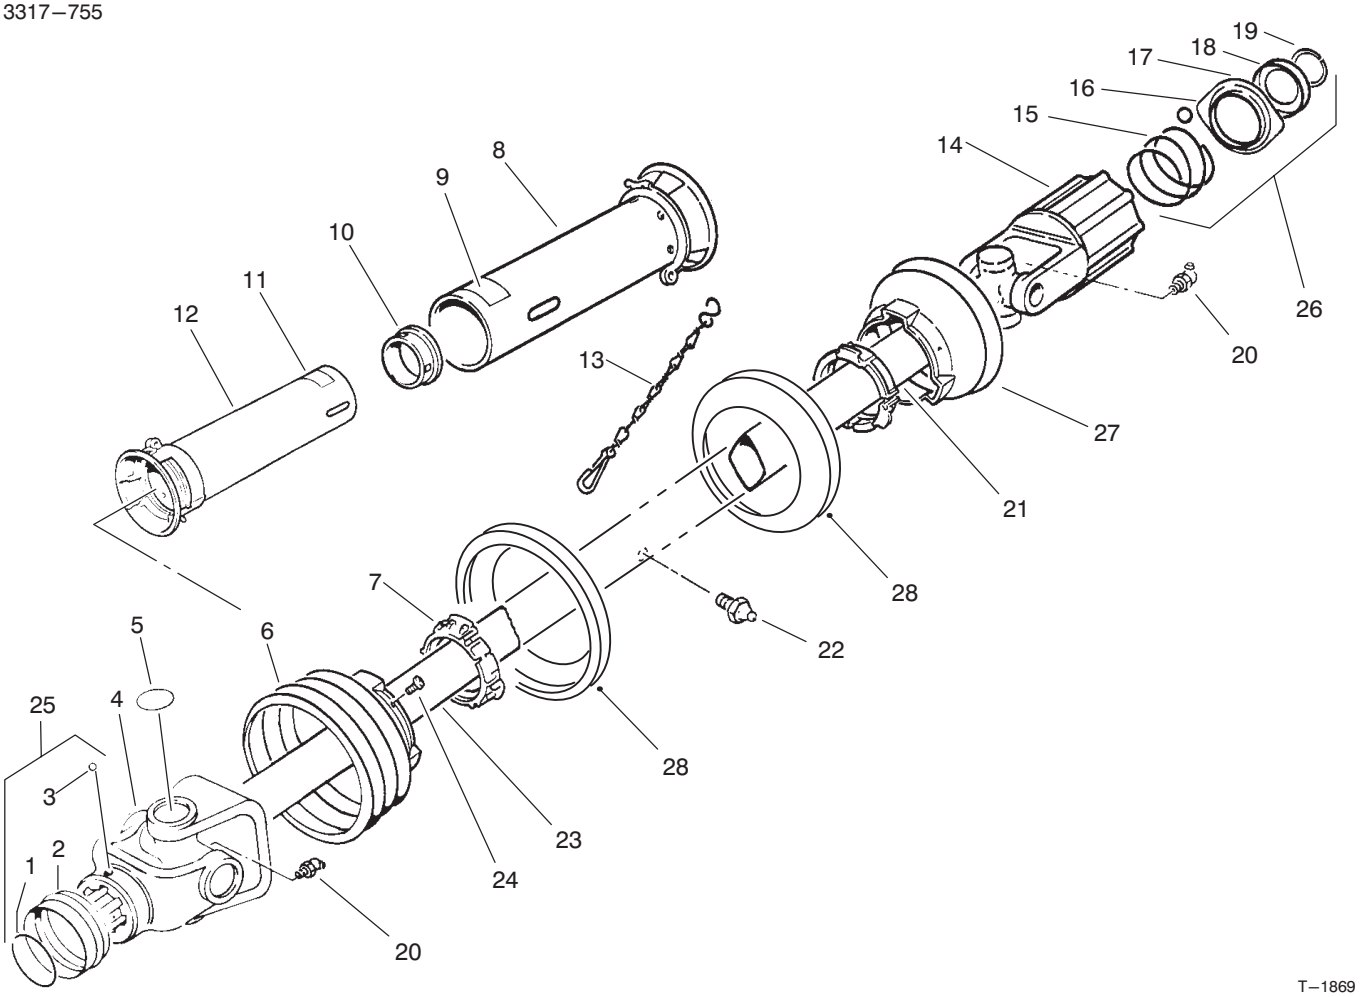


T–1869

FRONT DRIVE LINE ASSEMBLY NO. 93–8786
(21 Tooth Clutch)

Ref. No.	Part No.	Description	No. Used
1		Ring – Retaining	1
2		Assembly – Collar	1
3		Ball	3
4	77–4710	Yoke	1
5	77–4720	Cross & Bearing Kit	2
6	77–4730	Cone – Shield	1
7	77–4740	Ring – Bearing	2
8	93–7738	Tube – Shield, Outer	1
9	92–7936	Decal – Out	1
10	77–4790	Bearing – Support	1
11	92–7937	Decal – In	1
12	84–6330	Tube – Inner, Shield	1
13	77–4760	Chain – Safety	2
14	93–8787	Clutch – Radial Pin (21 Tooth)	1
15		Spring – Compression	1
16		Ball	3

Ref. No.	Part No.	Description	No. Used
17		Collar – Lock	1
18		Ring – Flanged	1
19		Ring – Snap	1
20	92–7938	Fitting – Grease 45°	2
21		Outer Shaft & Yoke	1
22	84–6370	Fitting – Grease	1
23		Inner Shaft & Yoke	1
24	84–6360	Screw	2
25	77–4670	Kit – Collar (Incl. Ref. #1–3)	1
26	77–4660	Kit – Flange (Incl. Ref. #15–19)	1
27	93–7736	Cone – Shield	1
28	93–7734	Collar	2
*	94–1775	Kit – Clutch Cams & Springs	4
*	93–8786	Drive Line (Complete)	1


*Not Illustrated

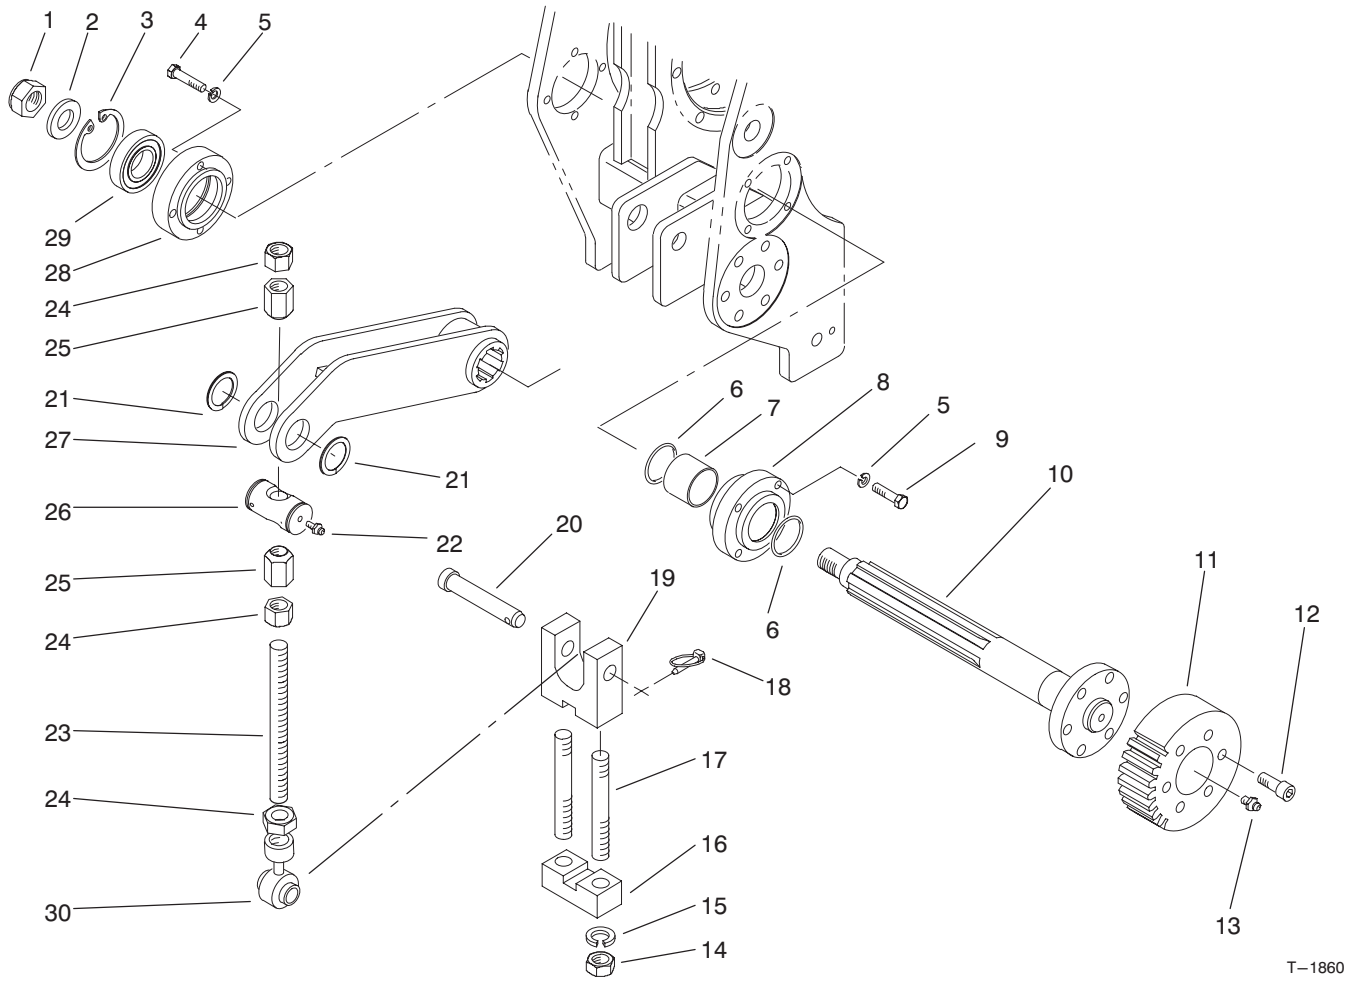

TORSION SHAFT & ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–70	Nut – Lock	2
2	92–9387	Washer	2
3	32151–88	Ring – Retaining	2
4	323–9	Screw – Cap Hex. Hd.	8
5	3253–21	Washer – Lock	16
6	237–38	O–Ring, Seal	4
7	92–9874	Bushing	4
8	92–9388	Housing – Outer, Shaft	2
9	323–8	Screw – Cap Hex. Hd.	8
10	92–9384	Shaft – Torsion	2
11	92–9390	Gear – Quadrant	2
12	3274–89	Screw – Hex. Socket Hd.	12
13	92–9872	Fitting – Grease	2
14	3217–12	Nut	4
15	3253–9	Washer – Lock	4


Ref. No.	Part No.	Description	No. Used
16	92–9407	Plate – Tie	2
17	92–9408	Stud	4
18	283–72	Pin – Lynch	2
19	92–9406	Bracket – Tie	2
20	92–9409	Pin – Tie	2
21	32120–30	Ring – Retaining	4
22	302–5	Fitting – Grease	2
23	92–9928	Rod – Adjuster	2
24	3217–12	Nut – Lock	6
25	92–9413	Nut – Adjuster	4
26	92–9405	Trunnion – Adjuster	2
27	92–9401	Arm W.A. – Torsion	2
28	92–9389	Housing – Shaft, Inner	2
29	251–314	Bearing	2
30	92–9926	Assembly – Ball End	2

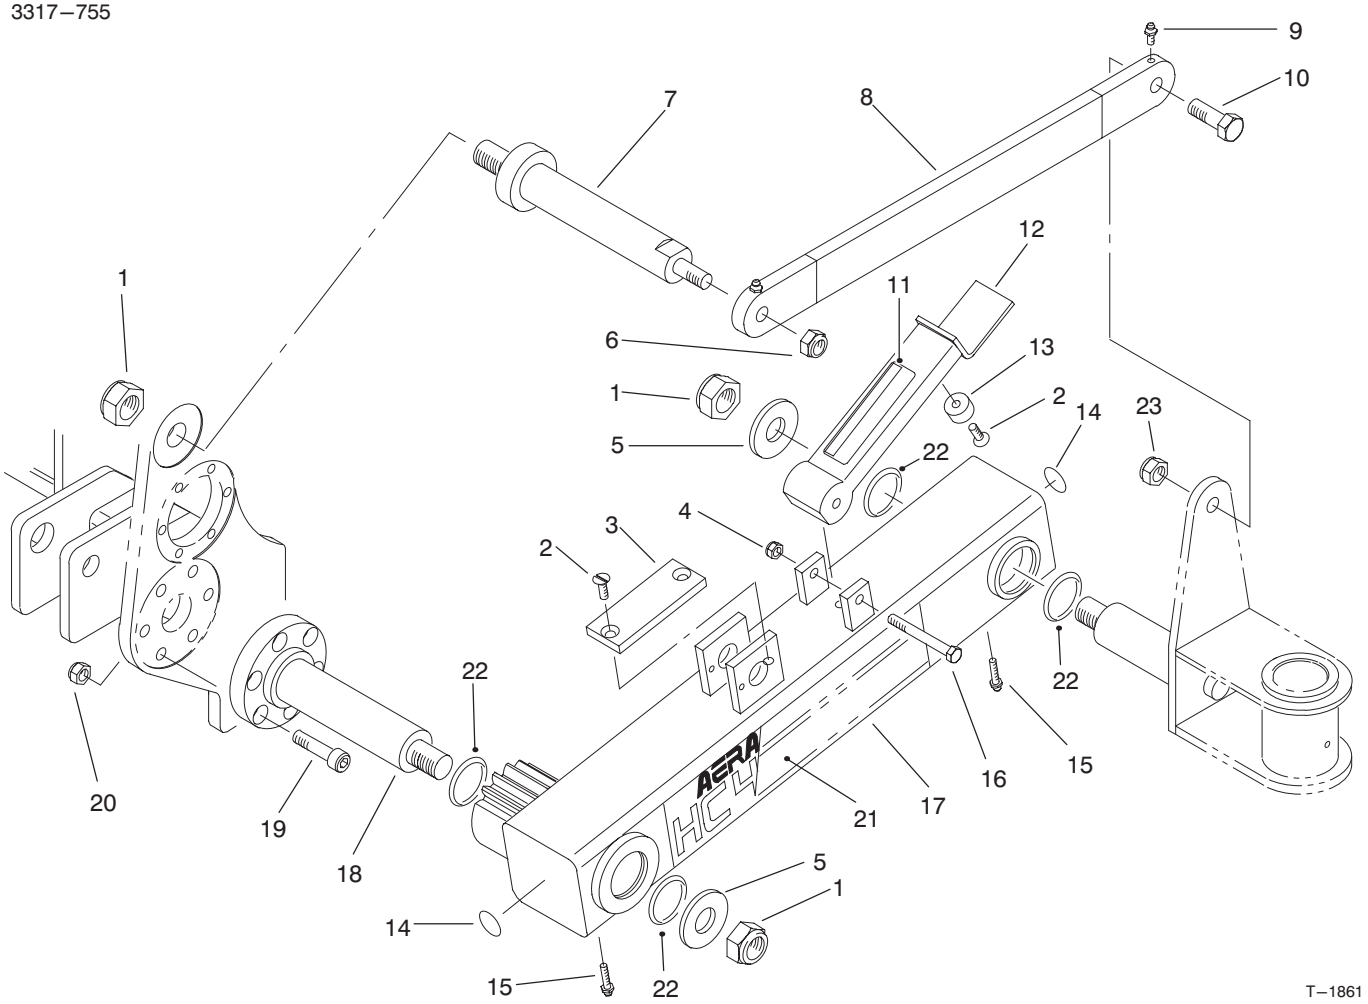

TRAILING & STABILIZING ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–70	Nut – Lock	6
2	32108–20	Screw – Flat Hd. Slotted	4
3	71–7510	Pad – Absorber, Shock	2
4	3296–39	Nut – Lock	2
5	92–9444	Washer	4
6	3296–61	Nut – Lock	2
7	92–9459	Shaft W.A. – Pivot	2
8	92–9461	Arm – Stabilizer	2
9	302–5	Fitting – Grease	4
10	327–5	Screw – Cap Hex. Hd.	2
11	65–5370	Decal	2
12	92–9478	Stop – Traveling	2

Ref. No.	Part No.	Description	No. Used
13	71–7530	Grommet	2
14	58–6520	Decal – Grease	4
15	302–64	Fitting – Grease	4
16	323–20	Screw – Cap Hex. Hd.	2
17	92–9445	Assy. – Trailing Arm, L.H.	1
*	92–9446	Assy. – Trailing Arm, R.H.	1
18	92–9441	Shaft W.A. – Trailing Arm	2
19	3274–5	Screw – Cap Hex. Socket	12
20	3296–23	Nut – Lock	12
21	92–3173	Decal	2
22	237–38	O–Ring	8
23	3217–11	Nut – Hex.	2

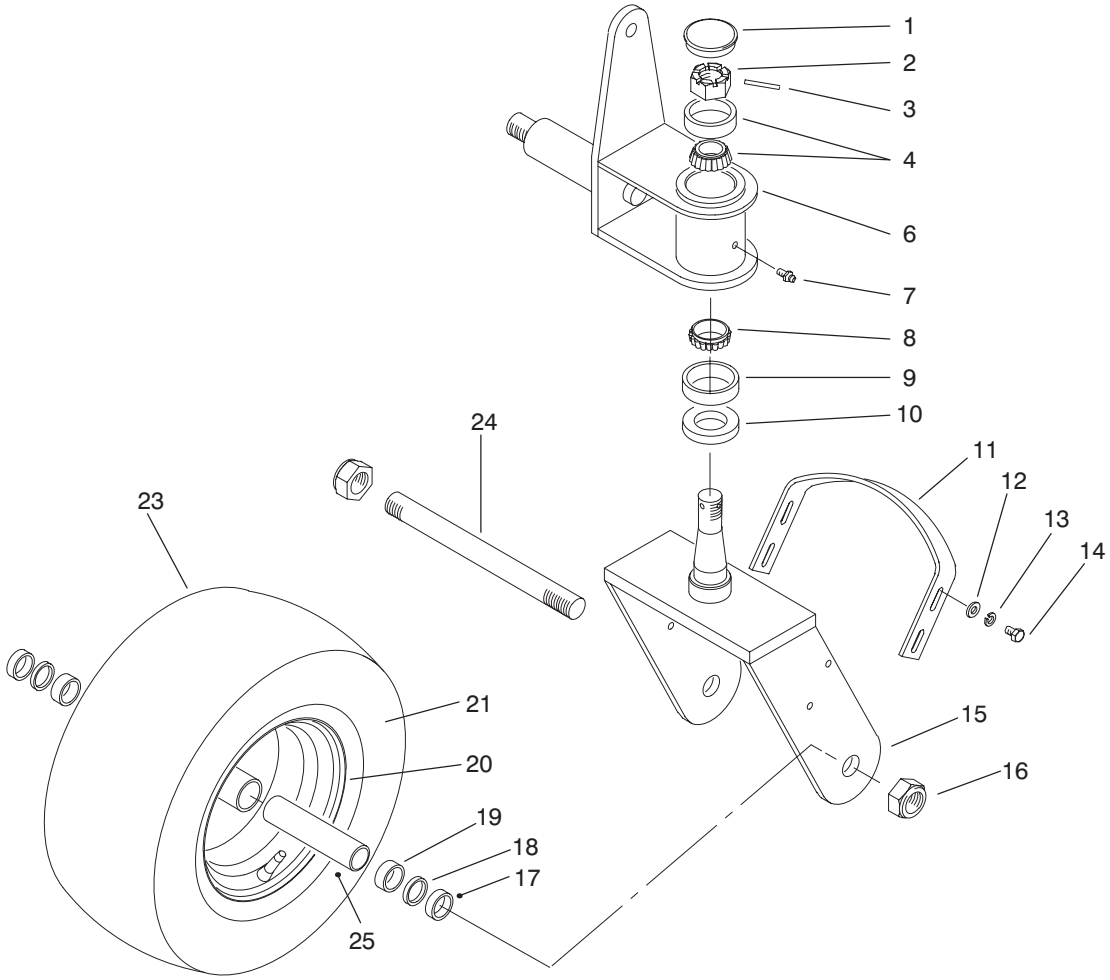


T–1862

CASTOR WHEEL & FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9878	Cap	2
2	70–9460	Nut – Castle	2
3	32121–34	Pin – Roll	2
4	71–6780	Bearing	2
6	92–9464	Mount W.A. – Caster Brg.	2
7	302–5	Fitting – Grease	2
8	254–106	Cone	2
9	254–107	Cup	2
10	92–9879	Seal	2
11	92–9479	Scraper – Tire	2
12	3256–24	Washer – Flat	4
13	3253–4	Washer – Lock	4

Ref. No.	Part No.	Description	No. Used
14	322–3	Screw – Cap Hex. Hd.	4
15	92–9470	Fork W.A. – Caster	2
16	3296–70	Nut – Lock	4
17	71–6750	Spacer	4
18	253–163	Seal	4
19	251–350	Bearing	4
20	92–9880	Wheel	2
21	92–9881	Tube – Inner	2
23	92–9882	Tire	2
24	92–9475	Shaft – Axle	2
25	92–9945	Spacer – Tube	2

3317–755

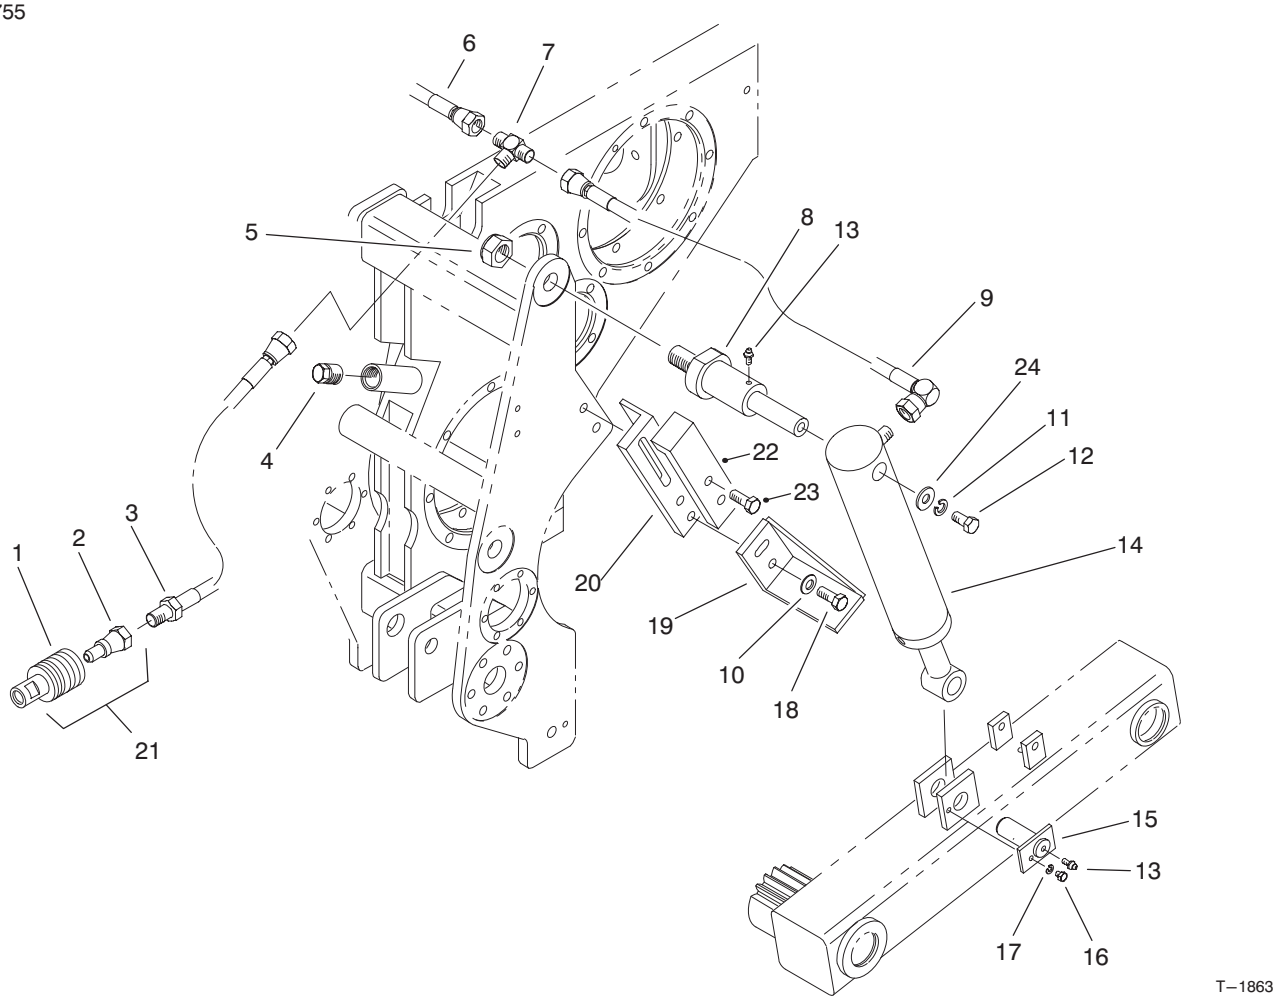


HYD. CYLINDER, HOSE & HEIGHT ADJUSTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Body – Female	1
2		Tip – Male	1
3	92–9884	Hose – Hydraulic	1
4	285–20	Plug – Pipe	2
5	3296–70	Nut – Lock	2
6	92–9886	Hose – Hydraulic, Right	1
7	92–9883	Fitting – Tee	1
8	92–9453	Shaft – Mount, Cylinder	2
9	92–9885	Hose – Hydraulic, Left	1
10	3256–5	Washer – Flat	4
11	3253–21	Washer – Lock	2
12	323–4	Screw – Cap Hex. Hd.	2
13	302–5	Fitting – Grease	4
14	71–6560	Cylinder – Hydraulic	2

Ref. No.	Part No.	Description	No. Used
15	92–9456	Pin W.A. – Short	2
16	321–4	Screw – Cap Hex. Hd.	2
17	3253–3	Washer – Lock	2
18	325–5	Screw – Cap Hex. Hd.	4
19	92–9395	Foot W.A. – Height Adj. L.H.	1
*	92–9396	Foot W.A. – Height Adj. R.H.	1
20	92–9391	Adjuster – Height, L.H.	1
*	92–9392	Adjuster – Height, R.H.	1
21	71–7060	Coupler – Quick (Incl. Ref. #1 & 2)	1
22	93–8751	Depth Restrictor	2
23	325–8	Screw – Cap Hex. Hd.	4
24	3256–4	Washer	2

*Not Illustrated

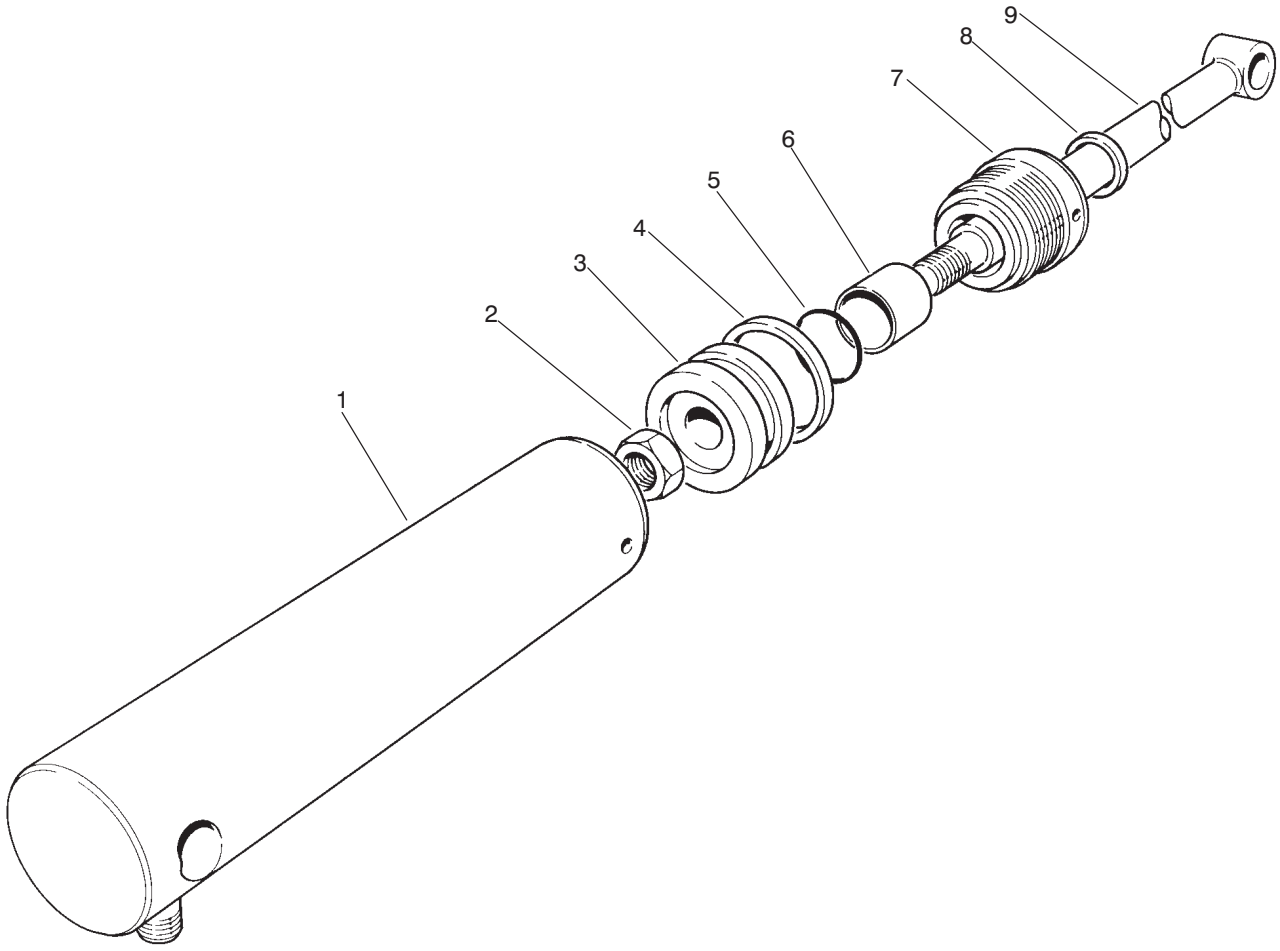


T–0899

CYLINDER ASSEMBLY 71–6560

Ref. No.	Part No.	Description	No. Used
1		Barrel	1
†2		Nut	1
†3		Piston	1
†4		Seal – Piston	1
†5		O–Ring, Seal	1
†6		Bushing – Bronze	1
†7		Cap – End	1
†8		Seal – Wiper	1
†9		Rod	1
*	71–6560	Cylinder – Complete	1
*	71–6640	Kit – Seal (Incl. Ref. #4–6 & 8)	1

*Not Illustrated


† Not Serviced Separately

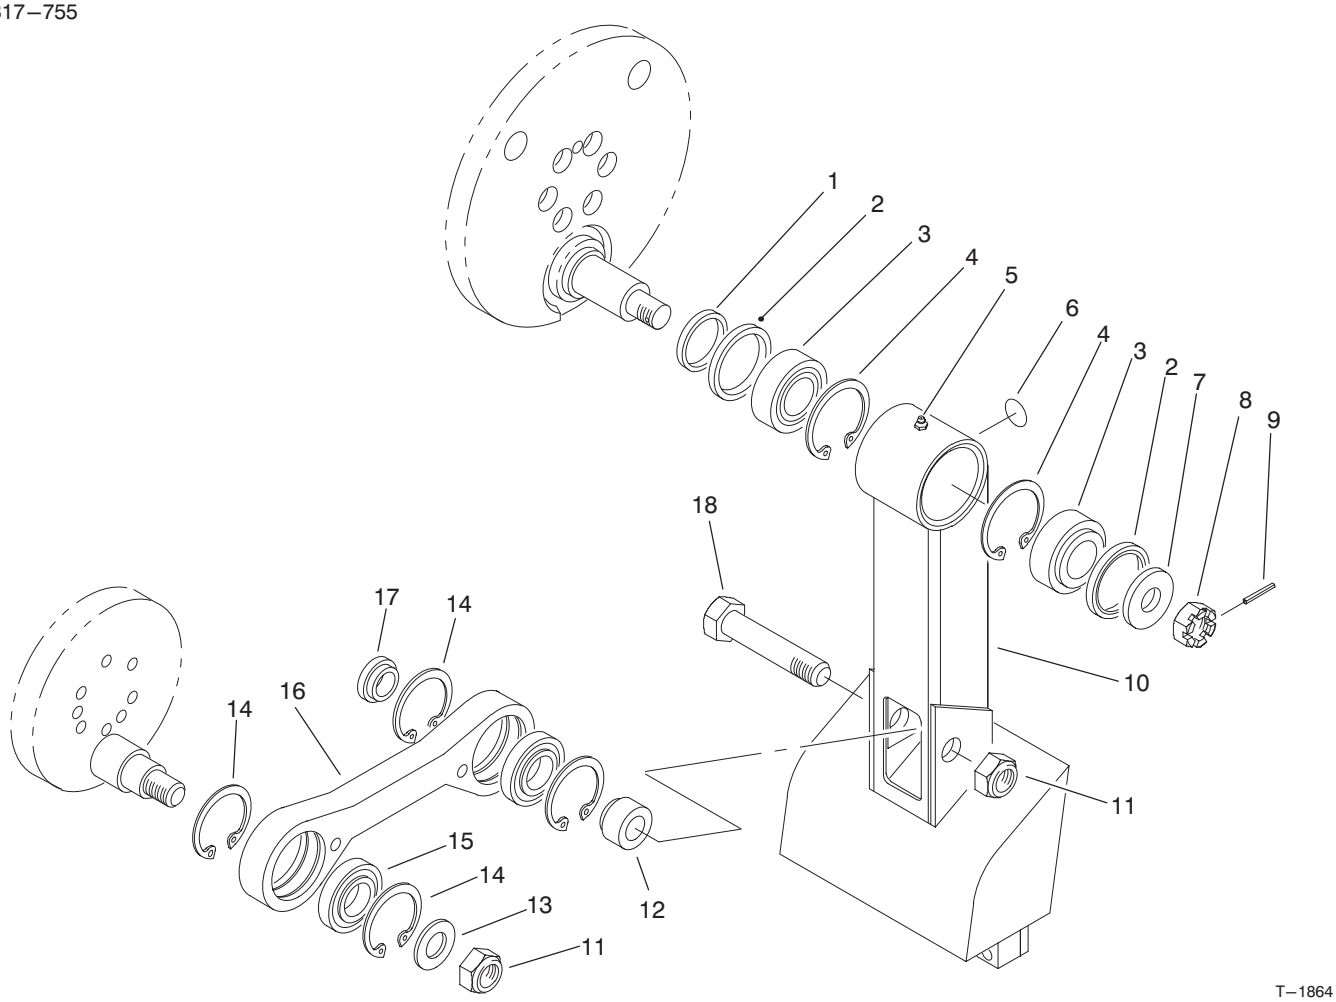

STOMPER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–9580	Ring – Retaining, Seal	4
2	72–3840	Seal	8
3	72–3810	Bearing	8
4	82–3190	Ring – Retaining	8
5	302–5	Fitting – Grease	4
6	58–6520	Decal – Grease	4
7	70–9570	Washer – Retaining, Seal	4
8	70–9460	Nut – Castle	4
9	32121–34	Pin – Roll	4

Ref. No.	Part No.	Description	No. Used
10	92–9430	Stomper W.A.	4
11	3296–70	Nut – Lock	8
12	72–8060	Spacer – Long	4
13	3256–62	Washer – Flat	4
14	32151–88	Ring – Retaining	16
15	72–8070	Bearing	8
16	77–3040	Conrod	4
17	72–8090	Spacer – Short	4
18	70–9550	Screw – Cap Hex. Hd.	4

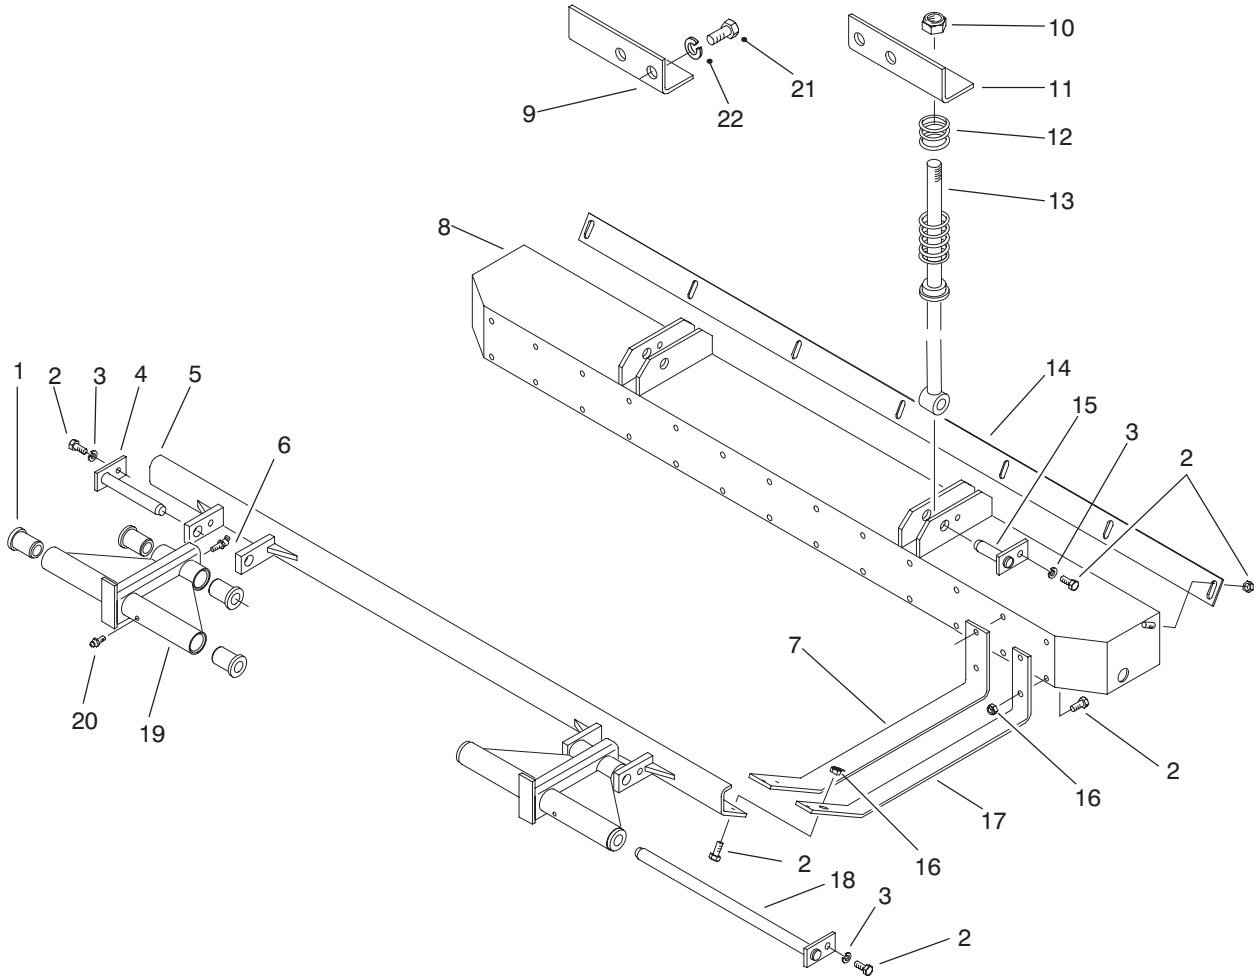


T–1865

6 TINE FINGER PLATE & SCRAPER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9485	Bushing	8
2	322–3	Screw – Cap Hex. Hd.	45
3	3253–4	Washer – Lock	6
4	92–9492	Pin W.A.. – Short	2
5	92–9486	Panel W.A. – Front	1
6	302–61	Fitting – Grease 45°	2
7	92–9493	Leaf – Inner	11
8	92–9496	Panel W.A. – Rear	1
9	92–9930	Bracket – Spring, R.H.	1
10	3296–50	Nut – Lock	2
11	92–9929	Bracket – Spring, L.H.	1


Ref. No.	Part No.	Description	No. Used
12	92–9863	Spring	2
13	92–9859	Shaft –Spring	2
14	92–9852	Scraper – Roller	1
15	92–9856	Pin W.A.	2
16	3296–29	Nut – Lock	39
17	92–9494	Leaf – Outer	2
18	92–9490	Pin W.A. – Long	2
19	92–9480	Attachment W.A.	2
20	302–5	Fitting – Grease	2
21	325–2	Screw – Cap Hex. Hd.	4
22	3253–7	Washer – Lock	4

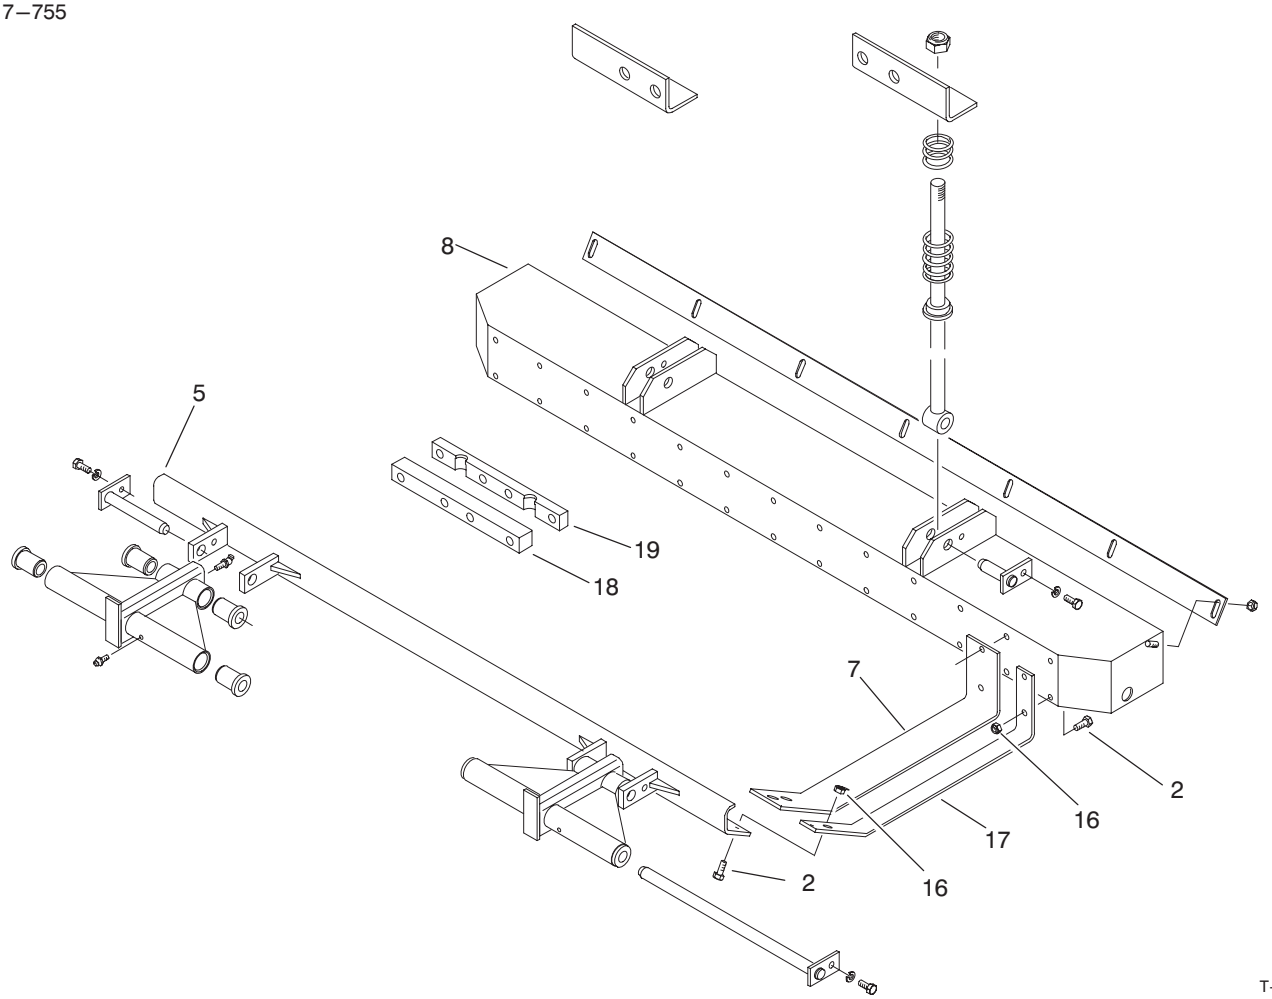

MODEL NO. 09610 OPTIONAL 2 TINE ADAPTION KIT

Ref. No.	Part No.	Description	No. Used
2	322–5	Screw – Cap Hex. Hd.	36
5	92–9866	Panel W.A. – Front	1
7	92–9495	Leaf – Inner	7
8	92–9868	Panel W.A. – Rear	1

Ref. No.	Part No.	Description	No. Used
16	3296–29	Nut – Lock	36
17	92–9494	Leaf – Outer	2
18	70–9270	Block – Inner	4
19	70–9260	Block – Outer	4

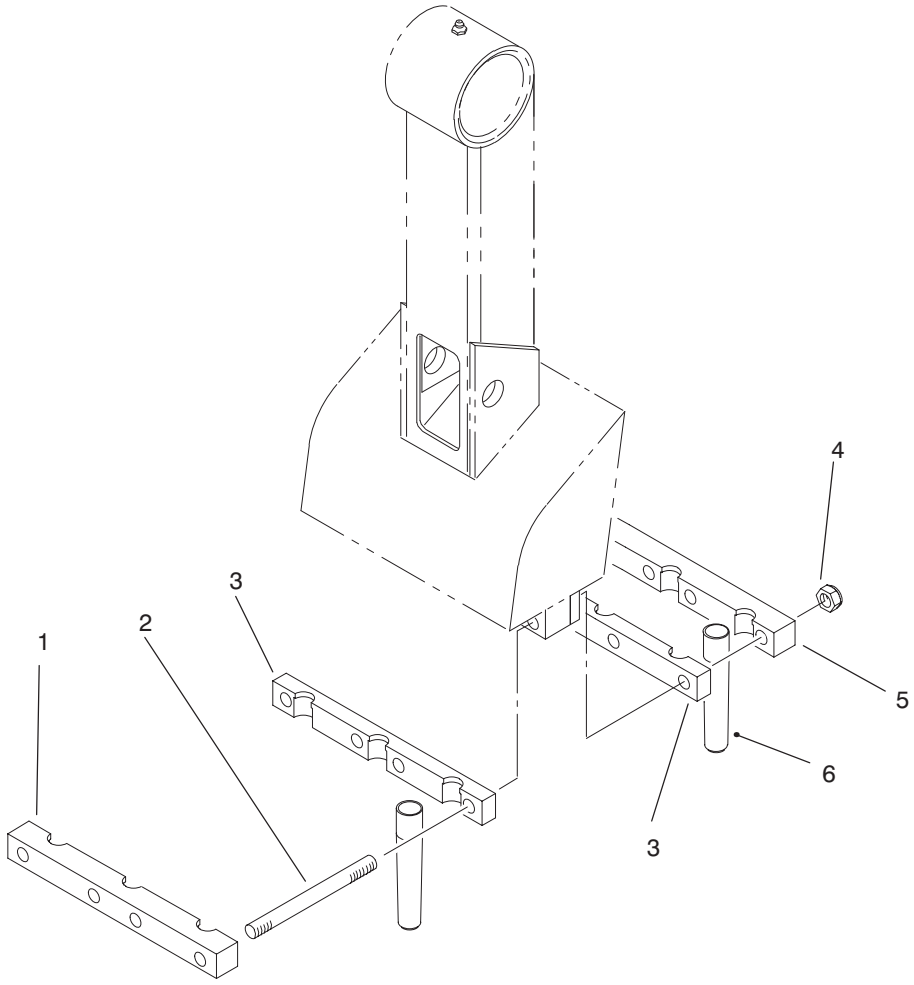


T–1866

6 TINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–9390	Block – Bridging, 6 Tine	4
2	71–7120	Stud – 1/2" x 5–7/8" (150mm)	16
3	70–9400	Block – Inner, 6 Tine	8
4	3296–23	Nut – Lock	16
5	70–9380	Block – Outer, 6 Tine	4

Ref. No.	Part No.	Description	No. Used
6	62–4600	Tine – Tubular 3/4 x 4–3/4" Long	24
*	86–9720	Tine – Tubular 3/4 x 5–3/4" Long	24
*	92–7941	Tine – Open Center 3/4 x 4–3/4" Long	24
*	92–7900	Tine – Open Center 3/4 x 5–3/4" Long	24

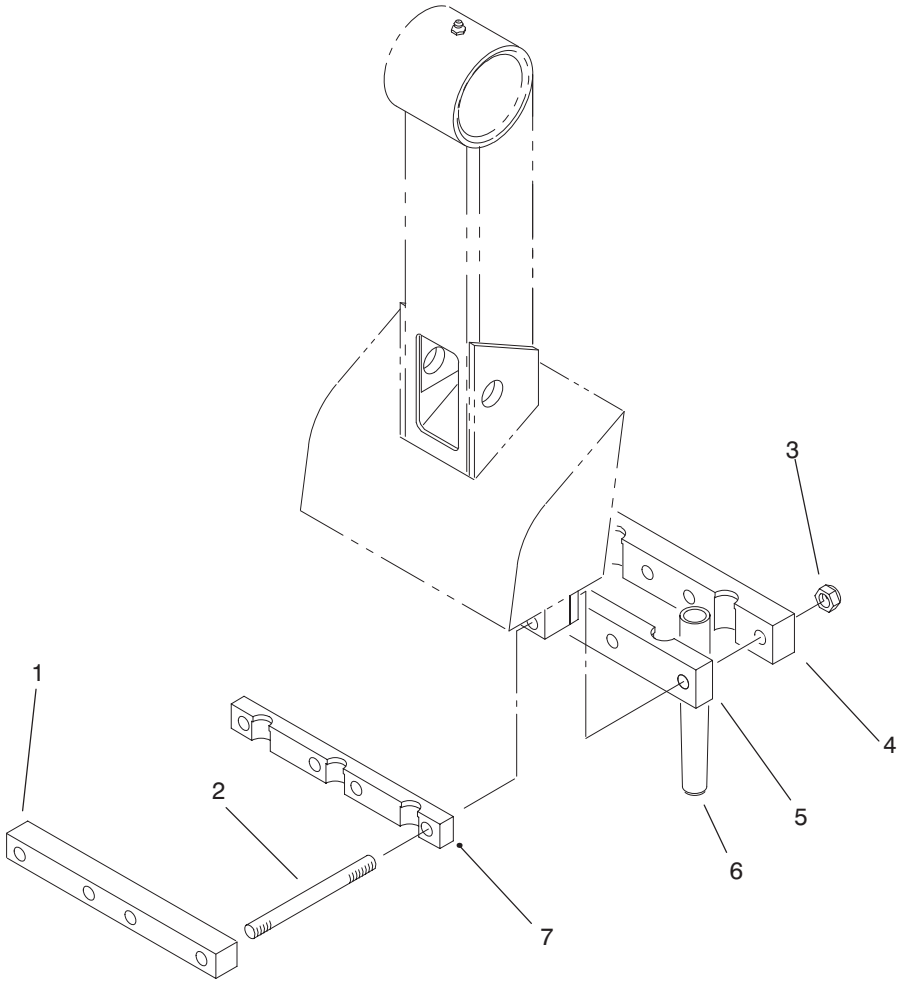


T–1873

OPTIONAL 2 TINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	70–9390	Block – Bridging	4
†2	71–7120	Stud – 1/2" x 5–7/8" (150mm)	16
†3	3296–23	Nut – Lock	16

Ref. No.	Part No.	Description	No. Used
‡4	70–9260	Block – Outer	4
‡5	70–9270	Block – Inner	4
6	71–0940	Tine – Tubular, 7/8 x 7" Lg.	8
†7	70–9400	Block	4

† Parts supplied with unit.
‡ Parts supplied with Adaption Kit.

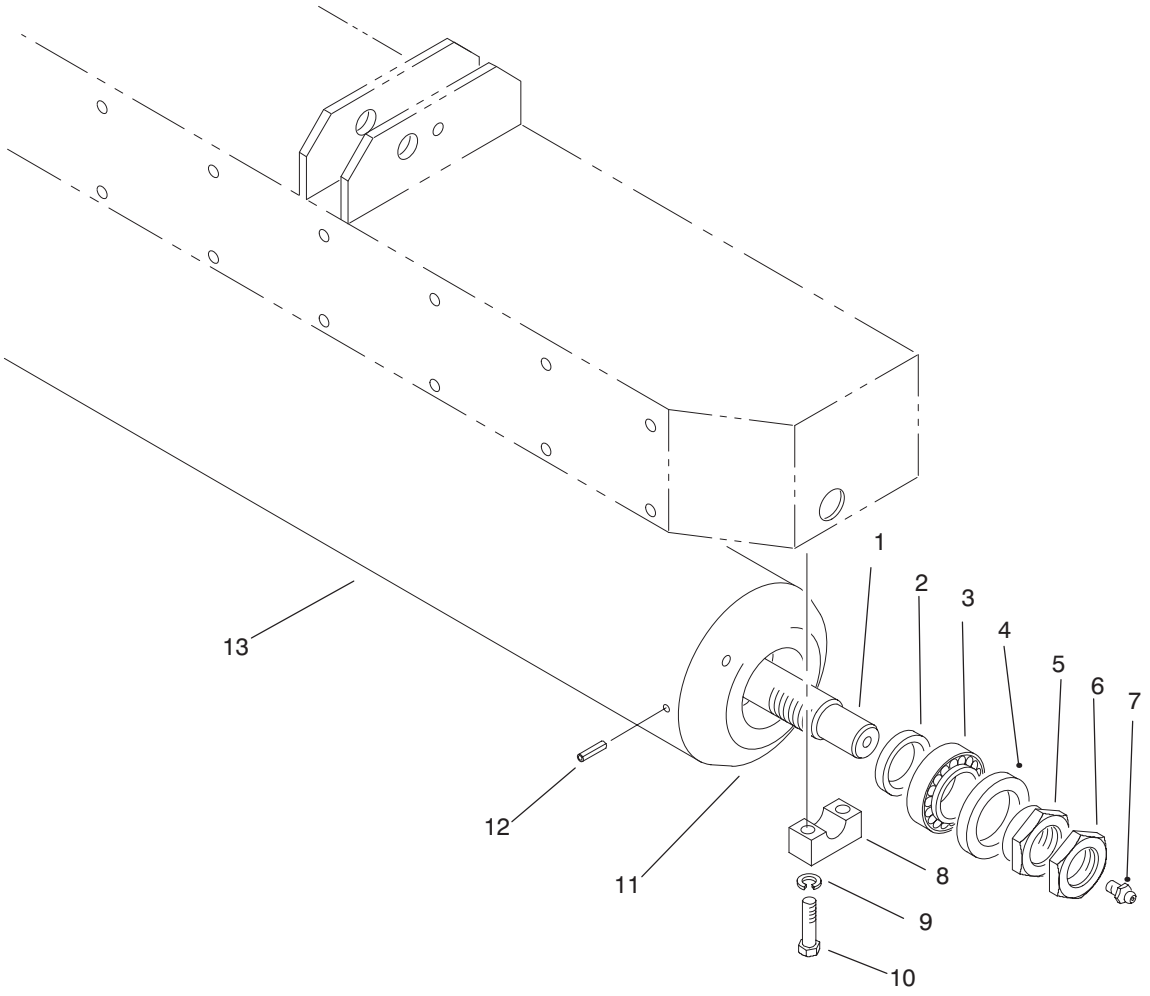


T–1867

ROLLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9854	Shaft – Roller	1
2	72–3830	Seal	2
3	71–6780	Bearing – Roller	2
4	71–6790	Seal	2
5	71–7290	Nut – Roller	2
6	92–9855	Nut – Lock, Roller	2
7	302–5	Fitting – Grease	2

Ref. No.	Part No.	Description	No. Used
8	92–9851	Block – Mount	2
9	3253–6	Washer – Lock	4
10	3212–6	Screw – Cap Hex. Hd.	4
11	92–2429	Cap – End	2
12	32121–3	Pin – Roll	2
13	92–9853	Tube – Roller	1

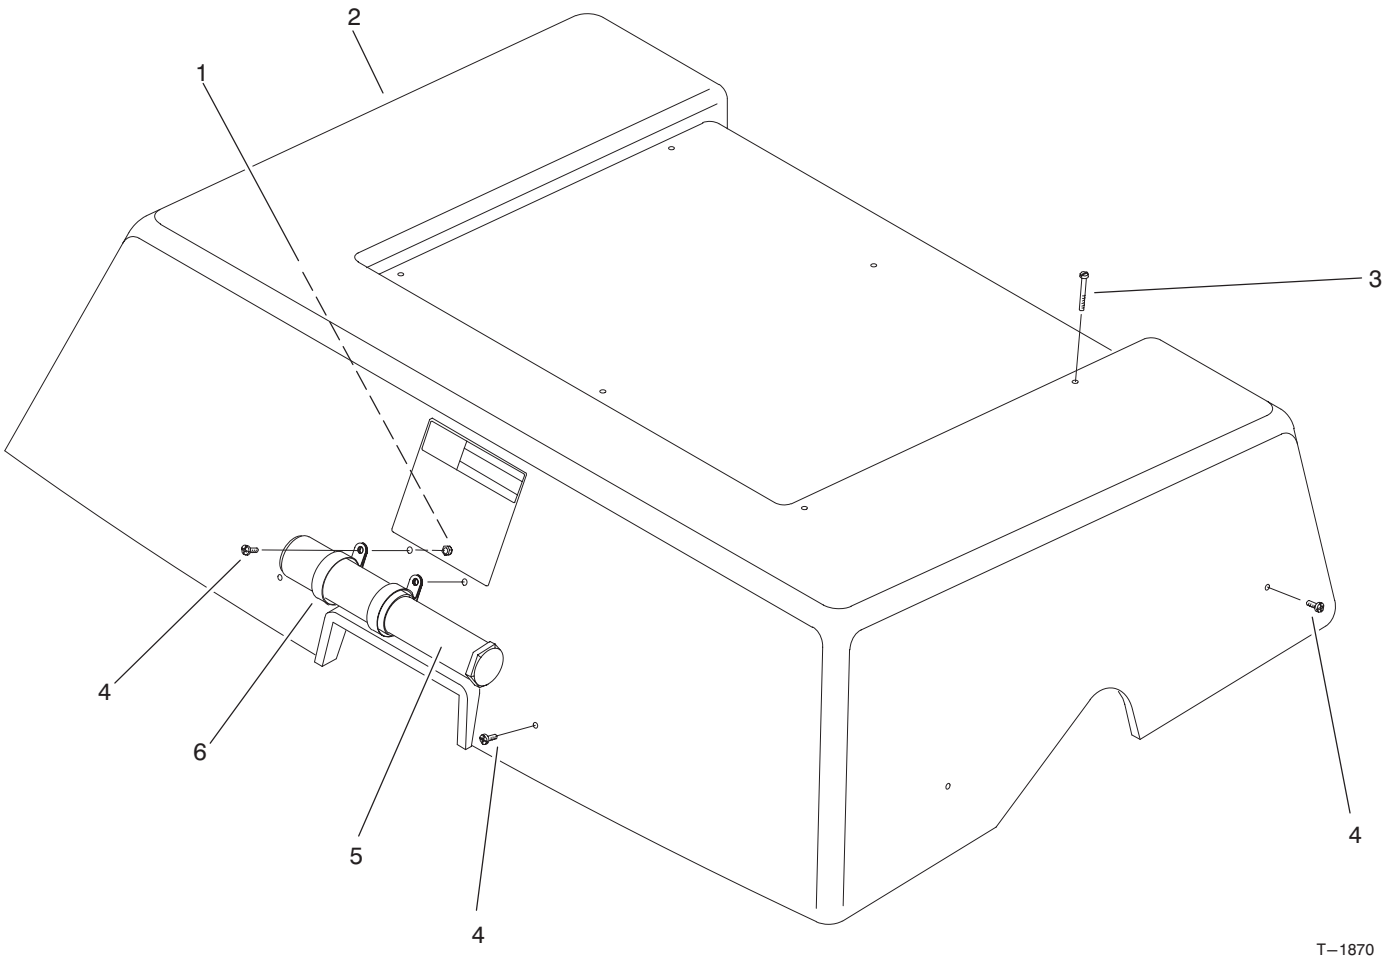


T−1870

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296−42	Nut − Lock	2
2	92−9931	Hood	1
3	3250−21	Screw	6

Ref. No.	Part No.	Description	No. Used
4	3250−32	Screw	8
5	74−0720	Tube − Manual	1
6	2412−133	R−Clamp	2

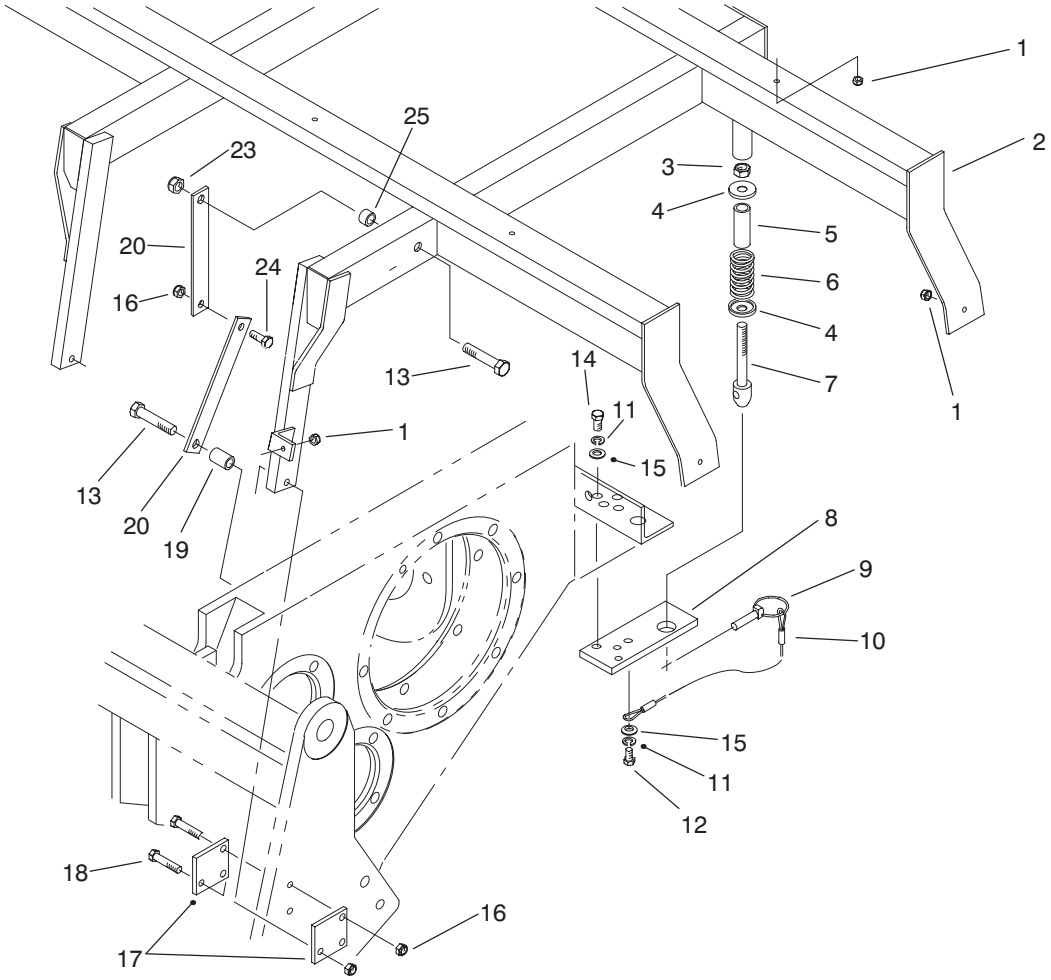


T–1975

HOOD FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–42	Nut – Lock	10
2	92–9932	Frame W.A.	1
3	3217–9	Nut	2
4	92–9942	Washer	4
5	92–9888	Spacer – Tube	2
6	92–9895	Spring	2
7	92–9889	Pin – Latch	2
8	92–9940	Plate	2
9	283–71	Pin – Lynch	2
10	92–9941	Retainer – Pin & Cable (Incl. Ref. #9)	2
11	3253–21	Washer – Lock	2

Ref. No.	Part No.	Description	No. Used
12	323–4	Screw – Cap Hex. Hd.	2
13	325–9	Screw – Cap Hex. Hd.	2
14	323–5	Screw – Cap Hex. Hd.	6
15	3256–3	Washer – Flat	8
16	3296–22	Nut – Lock	6
17	92–9947	Plate – Hinge	4
18	323–10	Screw – Cap Hex. Hd.	6
19		Spacer – Long	1
20	92–9892	Link – Bottom	2
23	3296–23	Nut – Lock	1
24	323–6	Screw – Cap Hex. Hd.	1
25		Spacer – Short	1

3317–755

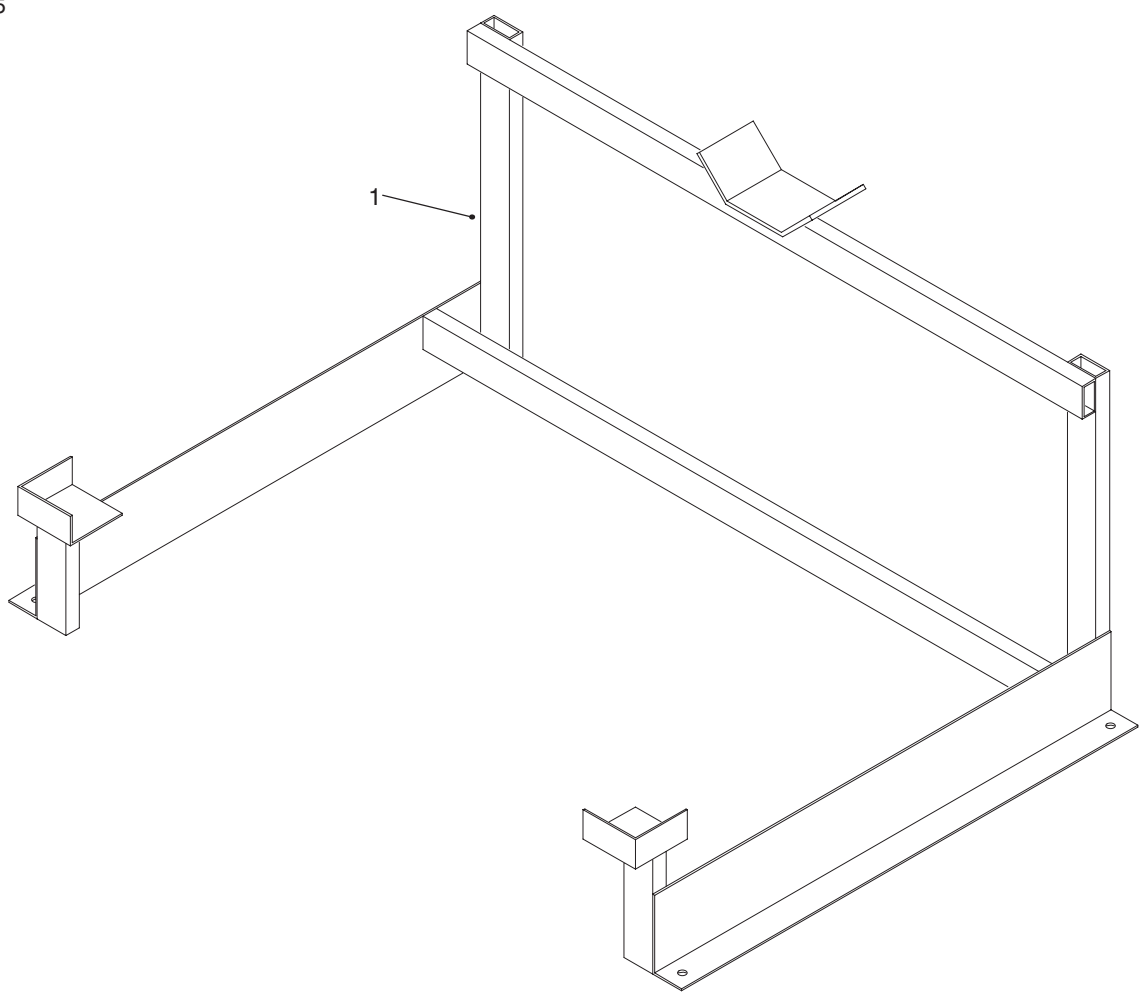

T–1868

STAND ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–9870	Stand W.A.	1

Ref. No.	Part No.	Description	No. Used

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
58–6520	Decal – Grease	14	6	4
58–6520	Decal – Grease	10	14	4
59–9930	Decal – Danger	1	1	2
62–4600	Tine – Tubular	17	6	24
65–3090	Decal – Instruction	5	29	1
65–5370	Decal	10	11	2
70–9220	Bearing	2	6	6
70–9260	Block – Outer	18	4	4
70–9260	Block – Outer	16	19	4
70–9270	Block – Inner	18	5	4
70–9270	Block – Inner	16	18	4
70–9330	Bearing	4	9	8
70–9340	Seal	4	7	8
70–9380	Block – Outer, 6 Tine	17	5	4
70–9390	Block – Bridging	18	1	4
70–9390	Block – Bridging, 6 Tine	17	1	4
70–9400	Block	18	7	4
70–9400	Block – Inner, 6 Tine	17	3	8
70–9460	Nut – Castle	11	2	2
70–9460	Nut – Castle	14	8	4
70–9550	Screw – Cap Hex. Hd.	14	18	4
70–9570	Washer – Retaining, Seal	14	7	4
70–9580	Ring – Retaining, Seal	14	1	4
70–9720	Nut	6	1	1
70–9720	Nut	5	25	1
71–0940	Tine – Tubular, 7/8 x 7 Lg.	18	6	8
71–6490	Seal	6	3	1
71–6490	Seal	5	5	1
71–6560	Cylinder – Complete	13	*	1
71–6560	Cylinder – Hydraulic	12	14	2
71–6570	Shaft – Input (6 tooth)	6	9	1
71–6630	Bearing	3	4	4
71–6640	Kit – Seal	13	*	1
71–6690	Bearing	6	12	1
71–6690	Bearing	5	23	1
71–6700	Bearing	5	10	1
71–6700	Bearing	6	11	1
71–6750	Spacer	11	17	4
71–6780	Bearing	11	4	2
71–6780	Bearing – Roller	19	3	2
71–6790	Seal	19	4	2
71–7060	Coupler – Quick	12	21	1
71–7100	Pin – Roll	4	2	8
71–7120	Stud – 1/2 x 5–7/8	18	2	16
71–7120	Stud – 1/2 x 5–7/8	17	2	
71–7290	Nut – Roller	19	5	2
71–7300	Gear – 30 Tooth	5	*	1
71–7300	Gear – 30 Tooth	6	*	1
71–7310	Gear – 31 Tooth	5	*	1
71–7310	Gear – 31 Tooth	6	*	1
71–7320	Gear – 32 Tooth	5	*	1
71–7320	Gear – 32 Tooth	6	*	1
71–7330	Gear – 33 Tooth	5	*	1
71–7330	Gear – 33 Tooth	6	*	1
71–7340	Gear – 34 Tooth	5	*	1
71–7340	Gear – 34 Tooth	6	*	1
71–7350	Gear – 35 Tooth	5	*	1
71–7350	Gear – 35 Tooth	6	*8	1
71–7360	Gear – 36 Tooth	5	*	1
71–7360	Gear – 36 Tooth	6	*	1
71–7370	Gear – 37 Tooth	5	*	1
71–7370	Gear – 37 Tooth	6	*	1
71–7380	Gear – 38 Tooth	5	*	1
71–7380	Gear – 38 Tooth	6	*	1
71–7390	Gear – 39 Tooth	5	*	1
71–7390	Gear – 39 Tooth	6	*	1
71–7400	Gear – 40 Tooth	6		1
71–7400	Gear – 40 Tooth	5	12	1
71–7510	Pad – Absorber, Shock	10	3	2
71–7530	Grommet	10	13	2
72–3810	Bearing	14	3	8
72–3820	Bearing	2	10	2
72–3830	Seal	19	2	2
72–3840	Seal	14	2	8
72–8060	Spacer – Long	14	12	4
72–8070	Bearing	14	15	8
72–8090	Spacer – Short	14	17	4
72–8100	Assembly – Crank, Bottom	4	12	4
74–0720	Tube – Manual	20	5	1
76–3650	Gear – Crank, Top	4	10	2
76–3660	Gear – Crank, Bottom	4	11	2
76–3710	Coupling – Flange, Splined	2	2	2
77–3040	Conrod	14	16	4
77–4660	Kit – Flange	7	26	1
77–4660	Kit – Flange	8	26	1
77–4670	Kit – Collar	7	25	1
77–4670	Kit – Collar	8	25	1
77–4710	Yoke	7	4	1
77–4710	Yoke	8	4	1
77–4720	Cross & Bearing Kit	7	5	2
77–4720	Cross & Bearing Kit	8	5	2
77–4730	Cone – Shield	7	6	1
77–4730	Cone – Shield	8	6	1
77–4740	Ring – Bearing	7	7	2
77–4740	Ring – Bearing	8	7	2
77–4760	Chain – Safety	7	13	2
77–4760	Chain – Safety	8	13	2
77–4790	Bearing – Support	7	10	1
77–4790	Bearing – Support	8	10	1
82–3190	Ring – Retaining	14	4	8
82–3220	Decal – Bar, Timing	1	3	1
84–6330	Tube – Inner, Shield	7	12	1
84–6330	Tube – Inner, Shield	8	12	1
84–6360	Screw	7	24	2
84–6360	Screw	8	24	2
84–6370	Fitting – Grease	7	22	1
84–6370	Fitting – Grease	8	22	1
86–9720	Tine – Tubular	17	*	24
92–2429	Cap – End	19	11	2
92–3000	Flange – Bearing, Crank	4	6	8
92–3005	Stud	4	5	64
92–3005	Stud	5	9	4
92–3005	Stud	2	13	32
92–3006	Nut	4	4	64
92–3006	Nut	5	4	4
92–3006	Nut	2	14	32
92–3010	Housing – Bearing	6	6	1
92–3010	Housing – Bearing	5	8	1
92–3012	O–Ring, Seal	4	8	8
92–3012	O–Ring, Seal	5	21	1
92–3013	O–Ring, Seal	6	7	1
92–3013	O–Ring, Seal	2	8	8
92–3013	O–Ring, Seal	5	22	1
92–3173	Decal	10	21	2
92–7900	Tine – Open Center	17	*	24
92–7936	Decal – Out	7	9	1
92–7936	Decal – Out	8	9	1
92–7937	Decal – In	7	11	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–7937	Decal – In	8	11	1
92–7938	Fitting – Grease 45°	7	20	2
92–7938	Fitting – Grease 45°	8	20	2
92–7941	Tine – Open Center	17	*	24
92–9359	Gear – Drive, Input	2	9	2
92–9360	Shaft – Drive, Splined	2	3	2
92–9361	Spacer	2	7	2
92–9362	Housing – Bearing	2	4	2
92–9363	Housing – Bearing	2	12	2
92–9364	Flange – Gear, Idler	2	15	4
92–9365	Gear – Idler	2	16	2
92–9366	Frame	1	2	1
92–9384	Shaft – Torsion	9	10	2
92–9387	Washer	9	2	2
92–9388	Housing – Outer, Shaft	9	8	2
92–9389	Housing – Shaft, Inner	9	28	2
92–9390	Gear – Quadrant	9	11	2
92–9391	Adjuster – Height, L.H.	12	20	1
92–9392	Adjuster – Height, R.H.	12	*	1
92–9395	Foot W.A. – Height Adj. L.H.	12	19	1
92–9396	Foot W.A. – Height Adj. R.H.	12	*	1
92–9401	Arm W.A. – Torsion	9	27	2
92–9405	Trunnion – Adjuster	9	26	2
92–9406	Bracket – Tie	9	19	2
92–9407	Plate – Tie	9	16	2
92–9408	Stud	9	17	4
92–9409	Pin – Tie	9	20	2
92–9413	Nut – Adjuster	9	25	4
92–9415	Housing W.A. – Gearbox	5	11	1
92–9420	Cover – Hatch	5	20	1
92–9421	Bar – Latch	5	18	1
92–9428	Coupling – Splined	5	26	1
92–9430	Stomper W.A.	14	10	4
92–9441	Shaft W.A. – Trailing Arm	10	18	2
92–9444	Washer	10	5	4
92–9445	Assy. – Trailing Arm, L.H.	10	17	1
92–9446	Assy. – Trailing Arm, R.H.	10	*	1
92–9453	Shaft – Mount, Cylinder	12	8	2
92–9456	Pin W.A. – Short	12	15	2
92–9459	Shaft W.A. – Pivot	10	7	2
92–9461	Arm – Stabilizer	10	8	2
92–9464	Mount W.A. – Caster Brg.	11	6	2
92–9470	Fork W.A. – Caster	11	15	2
92–9475	Shaft – Axle	11	24	2
92–9478	Stop – Traveling	10	12	2
92–9479	Scraper – Tire	11	11	2
92–9480	Attachment W.A.	15	19	2
92–9485	Bushing	15	1	8
92–9486	Panel W.A. – Front	15	5	1
92–9490	Pin W.A. – Long	15	18	2
92–9492	Pin W.A.. – Short	15	4	2
92–9493	Leaf – Inner	15	7	11
92–9494	Leaf – Outer	15	17	2
92–9494	Leaf – Outer	16	17	2
92–9495	Leaf – Inner	16	7	7
92–9496	Panel W.A. – Rear	15	8	1
92–9851	Block – Mount	19	8	2
92–9852	Scraper – Roller	15	14	1
92–9853	Tube – Roller	19	13	1
92–9854	Shaft – Roller	19	1	1
92–9855	Nut – Lock, Roller	19	6	2
92–9856	Pin W.A.	15	15	2
92–9859	Shaft –Spring	15	13	2
92–9863	Spring	15	12	2
92–9864	Pin 'A' – Link, Lower	1	7	2
92–9865	Pin 'B' – Link, Lower	1	6	2
92–9866	Panel W.A. – Front	16	5	1
92–9868	Panel W.A. – Rear	16	8	1
92–9870	Stand W.A.	22	1	1
92–9872	Fitting – Grease	9	13	2
92–9873	Ring – Retaining	3	2	1
92–9873	Ring – Retaining	2	11	2
92–9874	Bushing	9	7	4
92–9875	Seal	2	5	2
92–9876	Bar – Timing	1	4	1
92–9878	Cap	11	1	2
92–9879	Seal	11	10	2
92–9880	Wheel	11	20	2
92–9881	Tube – Inner	11	21	2
92–9882	Tire	11	23	2
92–9883	Fitting – Tee	12	7	1
92–9884	Hose – Hydraulic	12	3	1
92–9885	Hose – Hydraulic, Left	12	9	1
92–9886	Hose – Hydraulic, Right	12	6	1
92–9888	Spacer – Tube	21	5	2
92–9889	Pin – Latch	21	7	2
92–9892	Link – Bottom	21	20	2
92–9895	Spring	21	6	2
92–9905	Cover	3	11	1
92–9906	Gear – Bevel	3	13	2
92–9908	Spacer – Shaft	3	3	1
92–9909	Spacer – Bearing	3	5	1
92–9910	Spacer – Seal	3	16	1
92–9911	Shaft – Input	3	14	1
92–9913	Shim – Std. (.60 mm)	3	17	2
92–9921	Output – Shaft Assembly	3	15	1
92–9922	Seal – Oil	3	1	3
92–9923	Ring – Retaining	3	12	1
92–9924	Plug – Oil Level/Filler	3	9	1
92–9925	Bolt – Hex. Socket Hd.	3	10	4
92–9926	Assembly – Ball End	9	30	2
92–9928	Rod – Adjuster	9	23	2
92–9929	Bracket – Spring, L.H.	15	11	1
92–9930	Bracket – Spring, R.H.	15	9	1
92–9931	Hood	20	2	1
92–9932	Frame W.A.	21	2	1
92–9940	Plate	21	8	2
92–9941	Retainer – Pin & Cable	21	10	2
92–9942	Washer	21	4	4
92–9943	Shaft – Output	5	13	1
92–9944	Spacer – Coupling	5	3	2
92–9945	Spacer – Tube	11	25	2
92–9947	Plate – Hinge	21	17	4
92–9948	Assembly – Crank, Top	4	1	4
93–7734	Collar	7	28	2
93–7734	Collar	8	28	2
93–7735	Drive Line (Complete)	7	*	1
93–7736	Cone – Shield	7	27	1
93–7736	Cone – Shield	8	27	1
93–7738	Tube – Shield, Outer	7	8	1
93–7738	Tube – Shield, Outer	8	8	1
93–7739	Clutch – Radial Pin	7	14	1
93–8751	Depth Restrictor	12	22	2
93–8752	Screw – Hex. Socket Hd.	5	27	6
93–8753	Washer – Spacer, .88	1	9	4
93–8754	Washer – Spacer, 1.00	1	10	4
93–8755	Washer – Spacer, 1.12	1	*	4
93–8756	Washer – Spacer, 1.25	1	*	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
93−8762	Nut	6	2	1
93−8762	Nut	5	24	1
93−8776	Gear Box Assembly	2	1	1
93−8778	Tube − Support	5	1	1
93−8786	Drive Line (Complete)	8	*	1
93−8787	Clutch − Radial Pin	8	14	1
93−8788	Shaft − Input (21 tooth)	6	*	1
94−1775	Kit − Clutch Cams & Springs	7	*	4
94−1775	Kit − Clutch Cams & Springs	8	*	4
237−38	O−Ring	10	22	8
237−38	O−Ring, Seal	9	6	4
237−185	Seal − O−Ring	5	28	2
2412−133	R−Clamp	20	6	2
251−314	Bearing	9	29	2
251−350	Bearing	11	19	4
253−163	Seal	11	18	4
254−106	Cone	11	8	2
254−107	Cup	11	9	2
283−71	Pin − Lynch	1	8	4
283−71	Pin − Lynch	21	9	2
283−72	Pin − Lynch	6	10	1
283−72	Pin − Lynch	5	14	1
283−72	Pin − Lynch	9	18	2
285−20	Plug − Pipe	12	4	2
285−21	Plug − Pipe	1	5	2
285−21	Plug − Pipe	3	7	2
285−21	Plug − Pipe	5	15	1
302−5	Fitting − Grease	5	2	1
302−5	Fitting − Grease	14	5	4
302−5	Fitting − Grease	11	7	2
302−5	Fitting − Grease	19	7	2
302−5	Fitting − Grease	10	9	4
302−5	Fitting − Grease	12	13	4
302−5	Fitting − Grease	15	20	2
302−5	Fitting − Grease	9	22	2
302−61	Fitting − Grease 45°	15	6	2
302−64	Fitting − Grease	10	15	4
321−4	Screw − Cap Hex. Hd.	12	16	2
322−3	Screw − Cap Hex. Hd.	15	2	45
322−3	Screw − Cap Hex. Hd.	11	14	4
322−5	Screw − Cap Hex. Hd.	16	2	36
323−4	Screw − Cap Hex. Hd.	12	12	2
323−4	Screw − Cap Hex. Hd.	21	12	2
323−5	Screw − Cap Hex. Hd.	21	14	6
323−6	Screw − Cap Hex. Hd.	21	24	1
323−8	Screw − Cap Hex. Hd.	6	4	6
323−8	Screw − Cap Hex. Hd.	5	6	6
323−8	Screw − Cap Hex. Hd.	9	9	8
323−9	Screw − Cap Hex. Hd.	9	4	8
323−10	Screw − Cap Hex. Hd.	21	18	6
323−20	Screw − Cap Hex. Hd.	10	16	2
325−2	Screw − Cap Hex. Hd.	15	21	4
325−5	Screw − Cap Hex. Hd.	12	18	4
325−6	Screw − Cap Hex. Hd.	5	16	1
325−8	Screw − Cap Hex. Hd.	12	23	4
325−9	Screw − Cap Hex. Hd.	21	13	2
327−5	Screw − Cap Hex. Hd.	10	10	2
3212−6	Screw − Cap Hex. Hd.	19	10	4
3217−9	Nut	21	3	2
3217−11	Nut − Hex.	10	23	2
3217−12	Nut	9	14	4
3217−12	Nut − Lock	9	24	6
3250−21	Screw	20	3	6
3250−32	Screw	20	4	8
3253−3	Washer − Lock	12	17	2
3253−4	Washer − Lock	15	3	6
3253−4	Washer − Lock	11	13	4
3253−6	Washer − Lock	19	9	4
3253−7	Washer − Lock	2	17	12
3253−7	Washer − Lock	15	22	4
3253−9	Washer − Lock	9	15	4
3253−21	Washer − Lock	6	5	6
3253−21	Washer − Lock	9	5	16
3253−21	Washer − Lock	5	7	6
3253−21	Washer − Lock	12	11	2
3253−21	Washer − Lock	21	11	2
3256−3	Washer − Flat	21	15	8
3256−4	Washer	12	24	2
3256−5	Washer − Flat	12	10	4
3256−5	Washer − Flat	5	17	1
3256−24	Washer − Flat	11	12	4
3256−62	Washer − Flat	14	13	4
3274−4	Screw − Hex. Socket Hd.	4	3	48
3274−5	Screw − Cap Hex. Socket	10	19	12
3274−89	Screw − Hex. Socket Hd.	9	12	12
3274−89	Screw − Hex. Socket Hd.	2	18	12
3296−22	Nut − Lock	21	16	6
3296−23	Nut − Lock	18	3	16
3296−23	Nut − Lock	17	4	16
3296−23	Nut − Lock	10	20	12
3296−23	Nut − Lock	21	23	1
3296−29	Nut − Lock	15	16	39
3296−29	Nut − Lock	16	16	36
3296−39	Nut − Lock	10	4	2
3296−42	Nut − Lock	20	1	2
3296−42	Nut − Lock	21	1	10
3296−50	Nut − Lock	15	10	2
3296−61	Nut − Lock	10	6	2
3296−70	Nut − Lock	10	1	6
3296−70	Nut − Lock	9	1	2
3296−70	Nut − Lock	12	5	2
3296−70	Nut − Lock	14	11	8
3296−70	Nut − Lock	11	16	4
32108−20	Screw − Flat Hd. Slotted	10	2	4
32120−30	Ring − Retaining	9	21	4
32121−3	Pin − Roll	19	12	2
32121−34	Pin − Roll	11	3	2
32121−34	Pin − Roll	14	9	4
32121−49	Pin − Roll	5	19	1
32151−88	Ring − Retaining	9	3	2
32151−88	Ring − Retaining	14	14	16
32151−88	Ring − Snap	3	6	3

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The HC 4000 Aerator has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate located on the rear upper left hand corner of the main frame. In any correspondence concerning the HC 4000 Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the HC 4000 Aerator.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Frame & Link Pin Assembly	1
Splined Shaft & Idler Gears Assembly	2
Gear Box 93–8776	3
Crankshaft Assembly	4
Pickoff Gear Box Assembly	5
Lower Shaft Assembly	6
Front Drive Line Assembly 93–7735 (6 Tooth Clutch)	7
Front Drive Line Assembly 93–8786 (21 Tooth Clutch)	8
Torsion Shaft & Arm Assembly	9
Trailing & Stablizing Arm Assembly	10
Castor Wheel & Fork Assembly	11
Hyd. Cylinder, Hose & Height Adjuster Assembly	12
Cylinder Assembly 71–6560	13
Stomper Arm Assembly	14
6 Finger Plate & Scraper Assembly	15
Model No. 09610 Optional 2 Tine Adaption Kit	16
6 Tine Assembly	17
Optional 2 Tine Assembly	18
Roller Assembly	19
Hood Assembly	20
Hood Frame Assembly	21
Stand Assembly	22
Parts Index	23–24

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								