FORM NO. 3317–766

TORO®

PART NO. 93–6641


PARTS CATALOG

CE UPDATE KIT
72” SIDE DISCHARGE DECK

INTERNATIONAL PARTS REFERENCE
EUROPEAN PARTS KIT NO. 93–6641

ENGLISH PARTS DESCRIPTION	LOCATION	ENGLISH PART NO.	EUROPEAN PART NO.	QTY.
DECAL, DANGER	LH & RH TOP END OF DECK	43–8480	93–7815	2
DECAL, DANGER	LH & RH FRONT OF DECK	66–1340	93–7824	2
DECAL, DANGER	RH END TOP OF DECK	66–6380	93–7828	1
DECAL, DANGER	LH & RH TOP OF REAR DECK RAIL	67–5360	93–7273	2
DECAL BLADE BOLT TORQUE	LH REAR TOP OF DECK	68–7280	93–7817	1
DECAL LUBE	RH SIDE OF GEAR BOX PLATE	70–2560	93–6697	1
DECAL, BLANK	RH REAR TOP OF DECK	88–6700	93–8074	1
DECAL, WARNING	LH FRONT TOP OF DECK	92–7847	93–7809	1
BAFFLE – RH	UNDER RH FRONT OF DECK	–	93–6604	1
BAFFLE – LH	UNDER LH FRONT OF DECK	–	93–6605	1
FLANGE HEAD CAPSCREW	USE WITH BAFFLES	–	3234–5	7
LOCK NUT	USE WITH BAFFLES	–	32128–20	7
CAPSCREW	RH SIDE OF LH DECK COVER	–	323–7	2
OUTER GUARD ASSEMBLY	DRIVE SHAFT	–	93–9985	1
INNER GUARD ASSEMBLY	DRIVE SHAFT	–	93–9965	1
RETAINING RING	INNER & OUTER GUARD ASSEMBLY	–	–	2
NYLON BUSHING	INNER & OUTER GUARD ASSEMBLY	–	–	2
CE – CERTIFICATE OF COMPLIANCE	LOOSE PARTS BAG	–	94–1006	1

© The TORO Company – 1995
All Rights Reserved

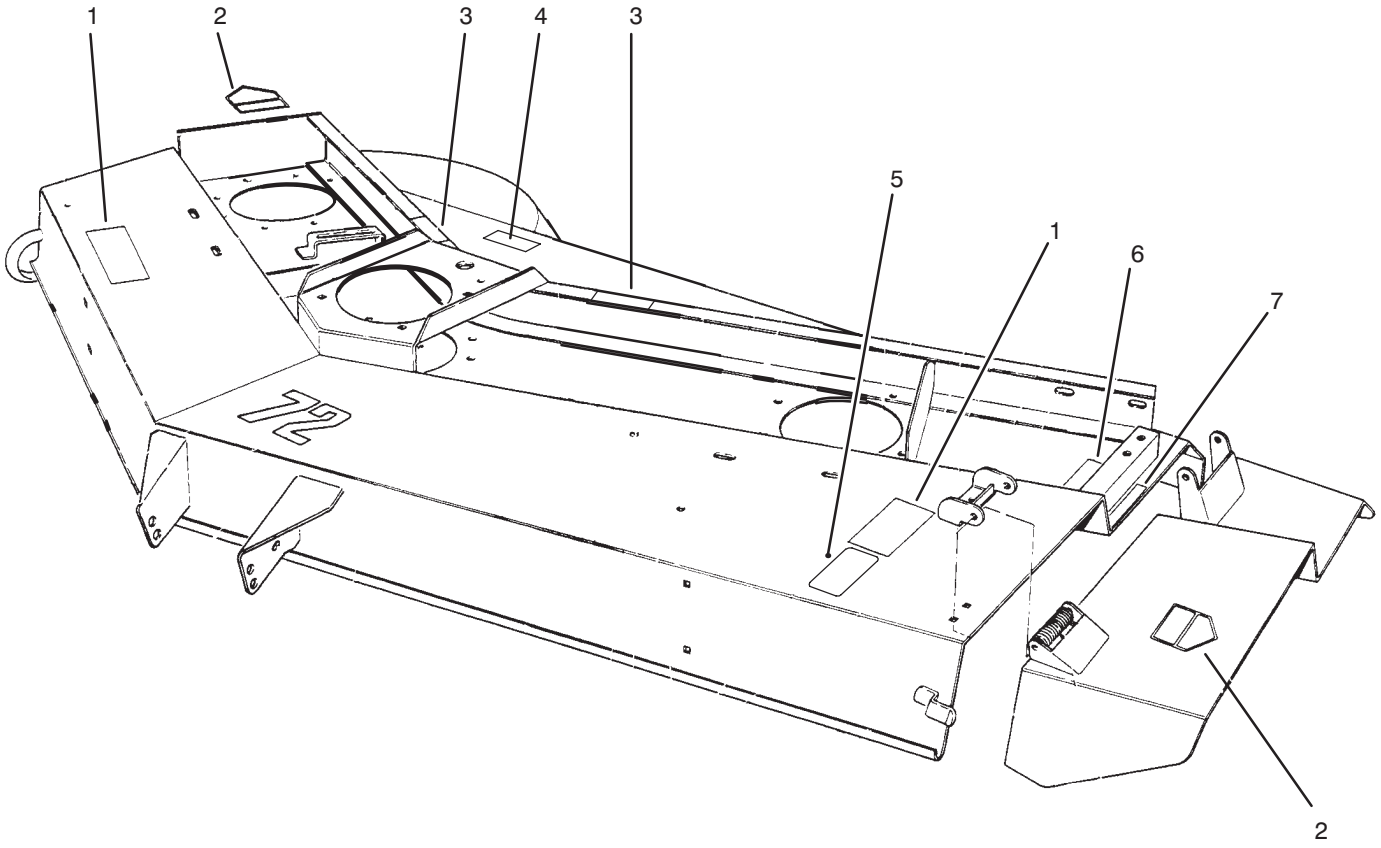


T–2032

CE KIT COMPONENT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–7824	Decal – Danger	2
2	93–7815	Decal – Danger	2
3	93–7273	Decal – Danger	2
4	93–8074	Decal – Blank	1

Ref. No.	Part No.	Description	No. Used
5	93–7809	Decal – Warning	1
6	93–7817	Decal – Torque	1
7	93–7828	Decal – Danger	1

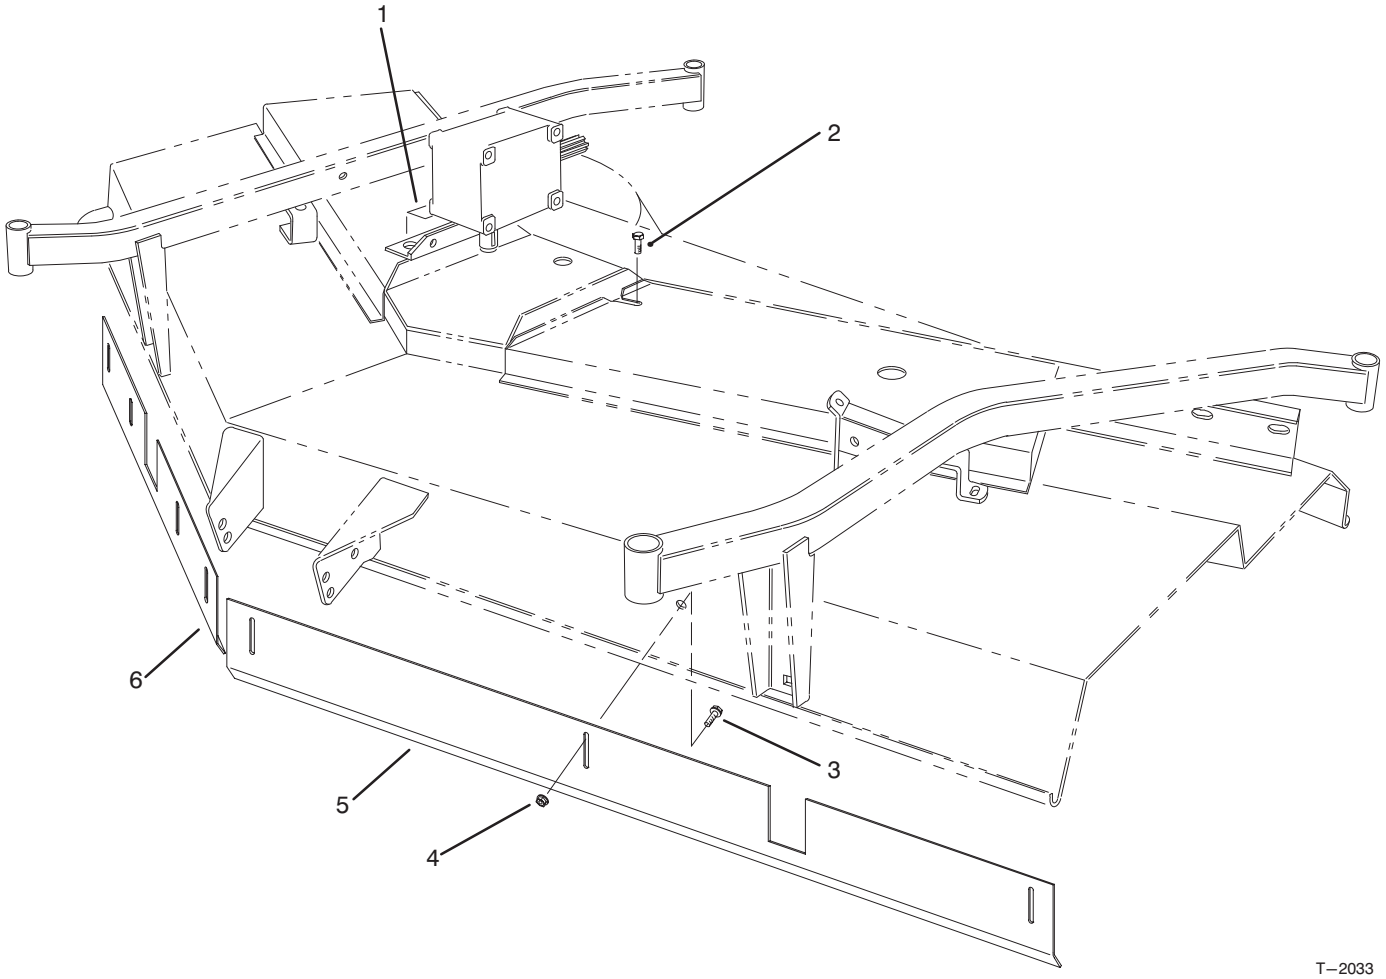


T–2033

CE KIT COMPONENT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	93–6697	Decal – Lube	1
2	323–7	Screw – Cap Hex. Hd.	2
3	3234–5	Screw – Cap Flange Hd.	7

Ref. No.	Part No.	Description	No. Used
4	32128–20	Nut – Lock, Flange Hd.	7
5	93–6605	Baffle – LH	1
6	93–6604	Baffle – RH	1

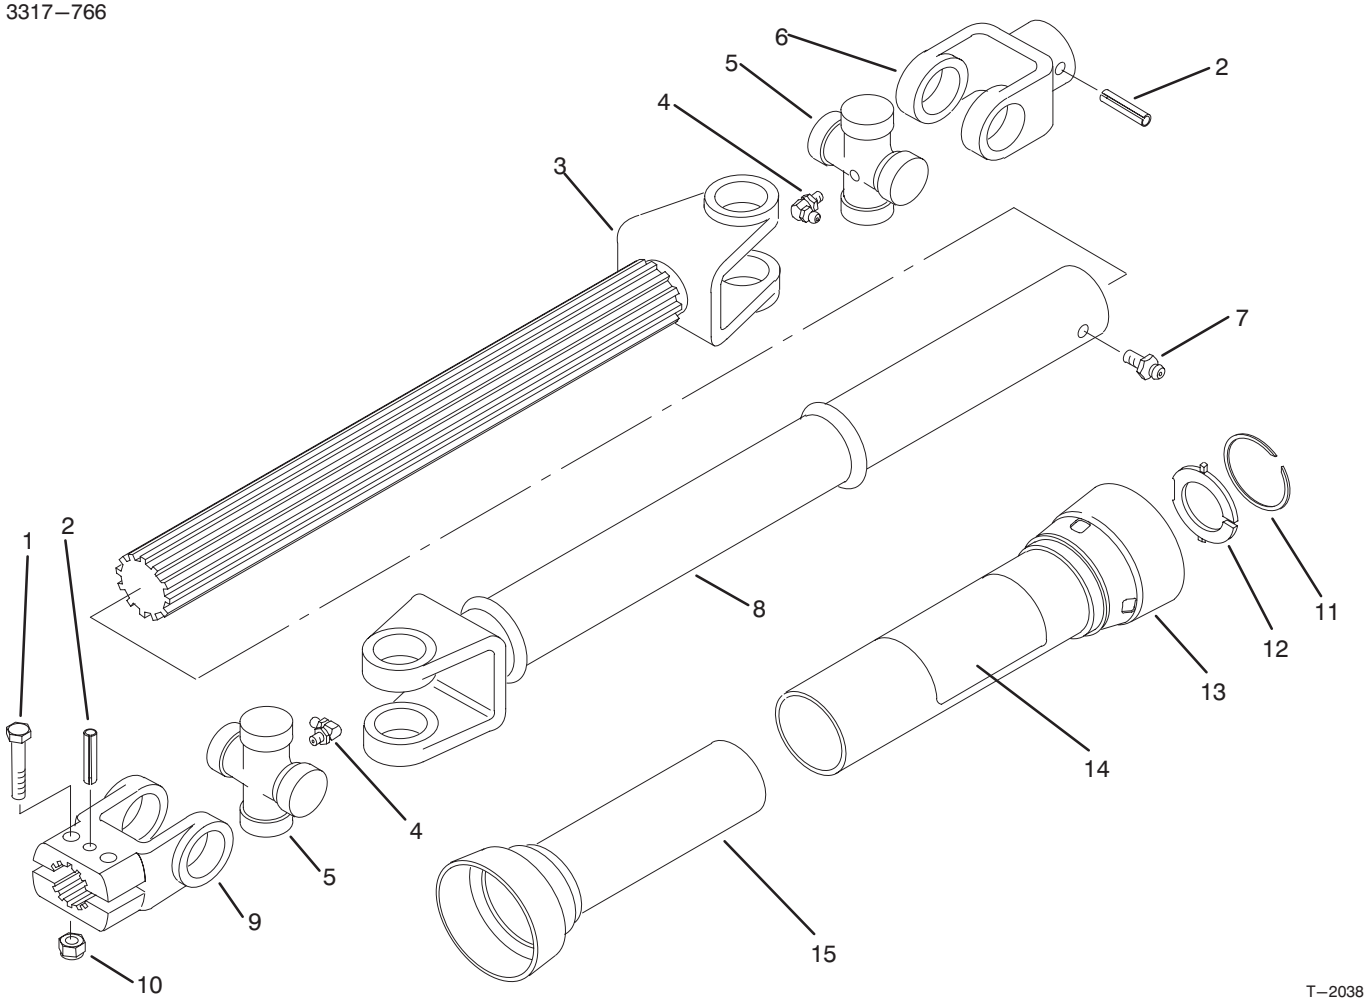

T–2038

CE KIT COMPONENT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	322–9	Screw – Cap Hex. Hd.	2
2	32121–34	Pin – Roll	2
3	93–9963	Slip Yoke – Shaft	1
4	62–3820	Fitting – Grease	2
5	54–9180	Kit – U–Joint	2
6	62–3800	Yoke – End	1
7	302–58	Fitting – Grease	1
8	93–9966	Slip Yoke – Tube	1
9	54–9040	Yoke – End (Split)	1
10	3296–29	Nut – Lock	2
11		Ring – Retaining	2
12		Bushing – Nylon	2
13	93–9985	Assembly – Guard, Outer (Incl. Ref. #11–12 & 14)	1
14	93–7283	Decal – Danger	1
15	93–9965	Assembly – Guard, Inner (Incl. Ref. #11–12)	1
*	93–9958	Kit – Repair, Nylon (Incl. 2 Each Ref. #11–12)	1
*	93–9986	Assembly – Drive Shaft (Incl. Ref. #3–9 & 13–15)	1

*Not Illustrated