FORM NO. 3317–947


TORO®

MODEL NO. 03870–60001–60267

PARTS CATALOG

DETHATCHING CUTTING UNITS

Reelmaster® 6500D & 6700D

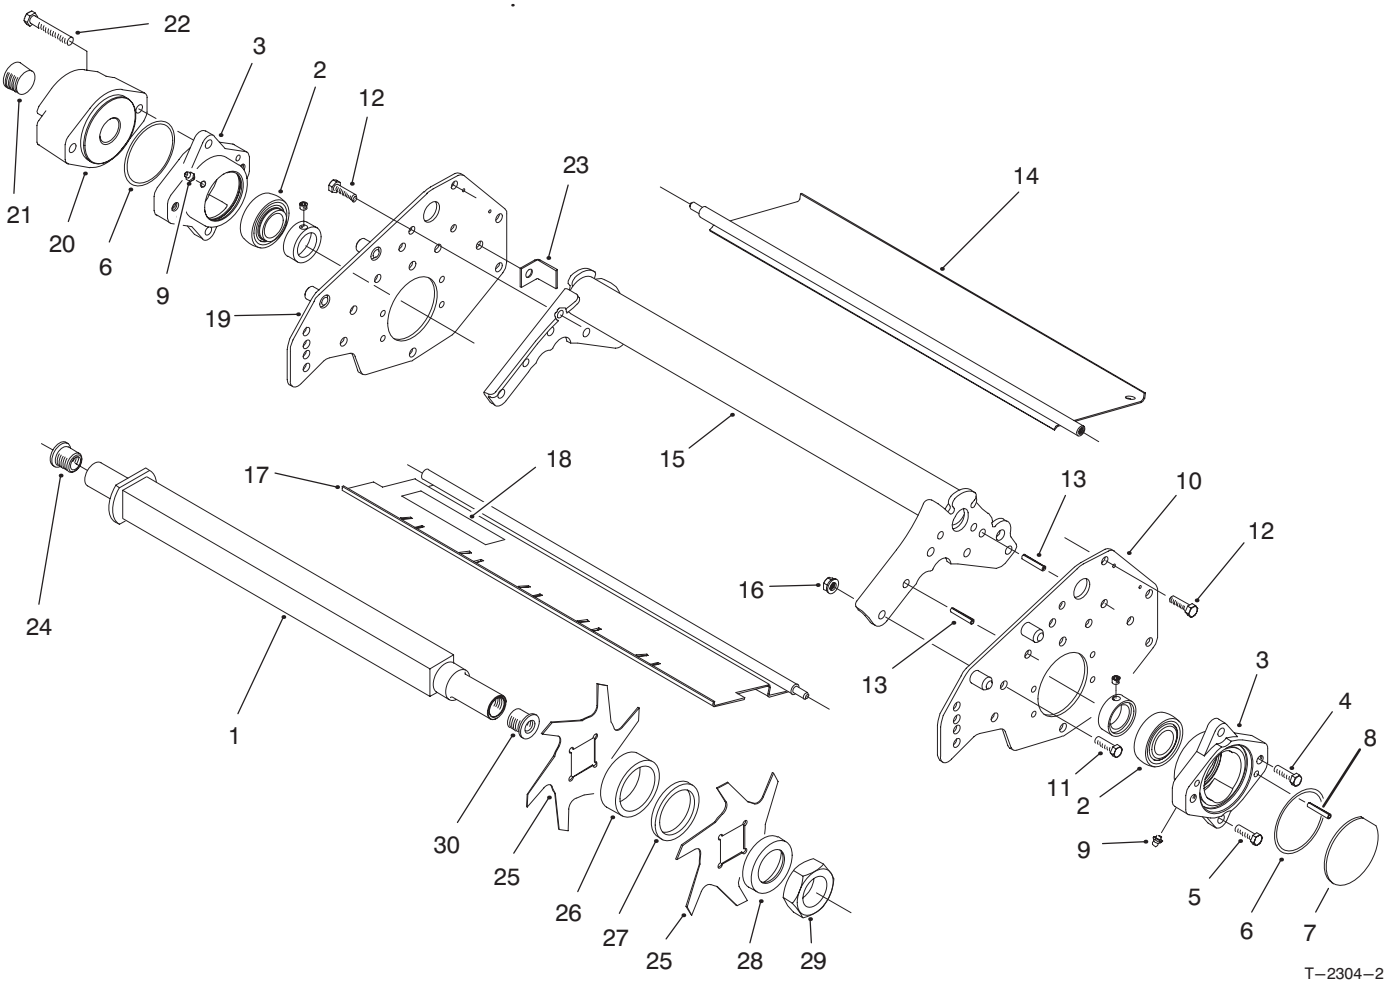


REEL & FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–2976	Dethatcher Shaft Assembly (Incl. Ref. #24 & 30)	1
2	94–2710	Bearing & Collar Assembly	2
3	94–2708	Housing – Bearing	2
4	93–7522	Screw – Cap Hex. Hd.	2
5	33105–030	Screw – Cap Hex. Hd.	4
6	93–9783	Seal – O–Ring	2
7	94–2703	Plug	1
8	32121–69	Pin – Spring	4
9	302–5	Fitting – Grease	2
10	94–2719	Plate – Side LH	1
11	33105–025	Screw – Cap Hex. Hd.	8
12	33104–020	Screw – Cap Hex. Hd.	2
13	32121–36	Pin – Roll	4
14	93–2881	Shield – Grass Rear	1
15	94–2709	Frame – Reel	1

Ref. No.	Part No.	Description	No. Used
16	33025–00	Nut – Lock	8
17	94–8942	Front Grass Shield Assembly (Incl. Ref. #18)	1
18	67–7960	Decal – Danger	1
19	94–2718	Plate – Side RH	1
20	94–4347	Weight – End	1
21	93–8717	Plug	1
22	33105–060	Screw – Cap Hex. Hd.	2
23	94–2747	Tab – Stop	1
24	94–2732	Insert – Threaded RH	1
25	93–3038	Blade	16
26	93–3092	Spacer	15
27	94–2720	Spacer	15
28	93–3091	Spacer – End	1
29	3218–17	Nut – Hex.	1
30	94–2733	Insert – Threaded LH	1

© The TORO Company – 1996
All Rights Reserved

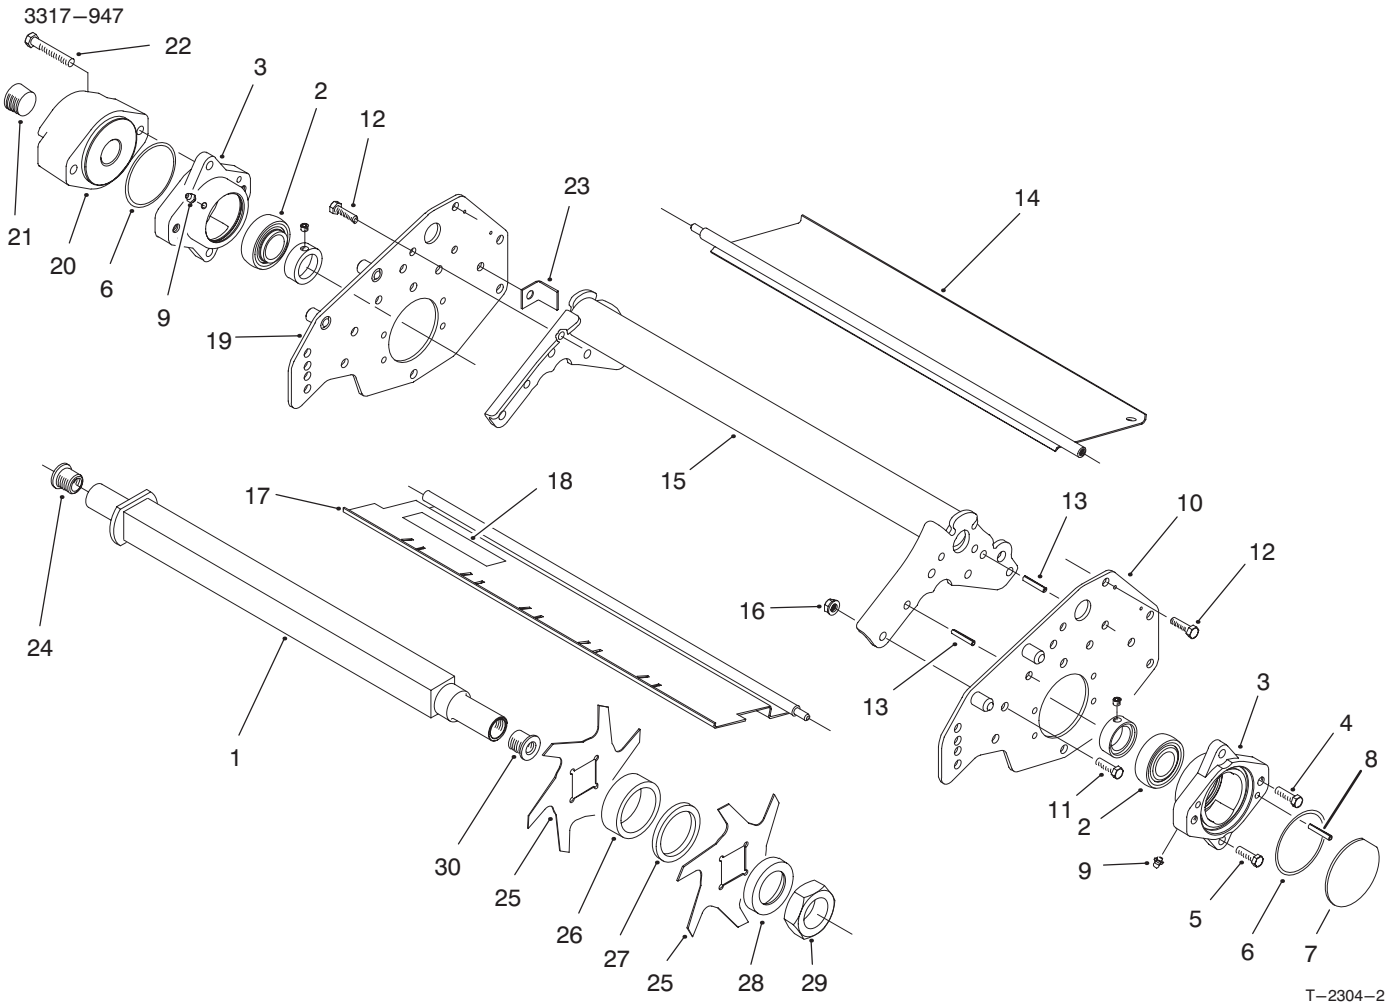


REEL & FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
*	94–2712	Dethatcher Shaft Assembly (Incl. Ref. #1 & 24–30)	1

Ref. No.	Part No.	Description	No. Used
*	94–4346	Dethatcher Spacer Kit (Incl. 4 ea. #25 & 26, and 15 ea. #27)	1

*Not Illustrated

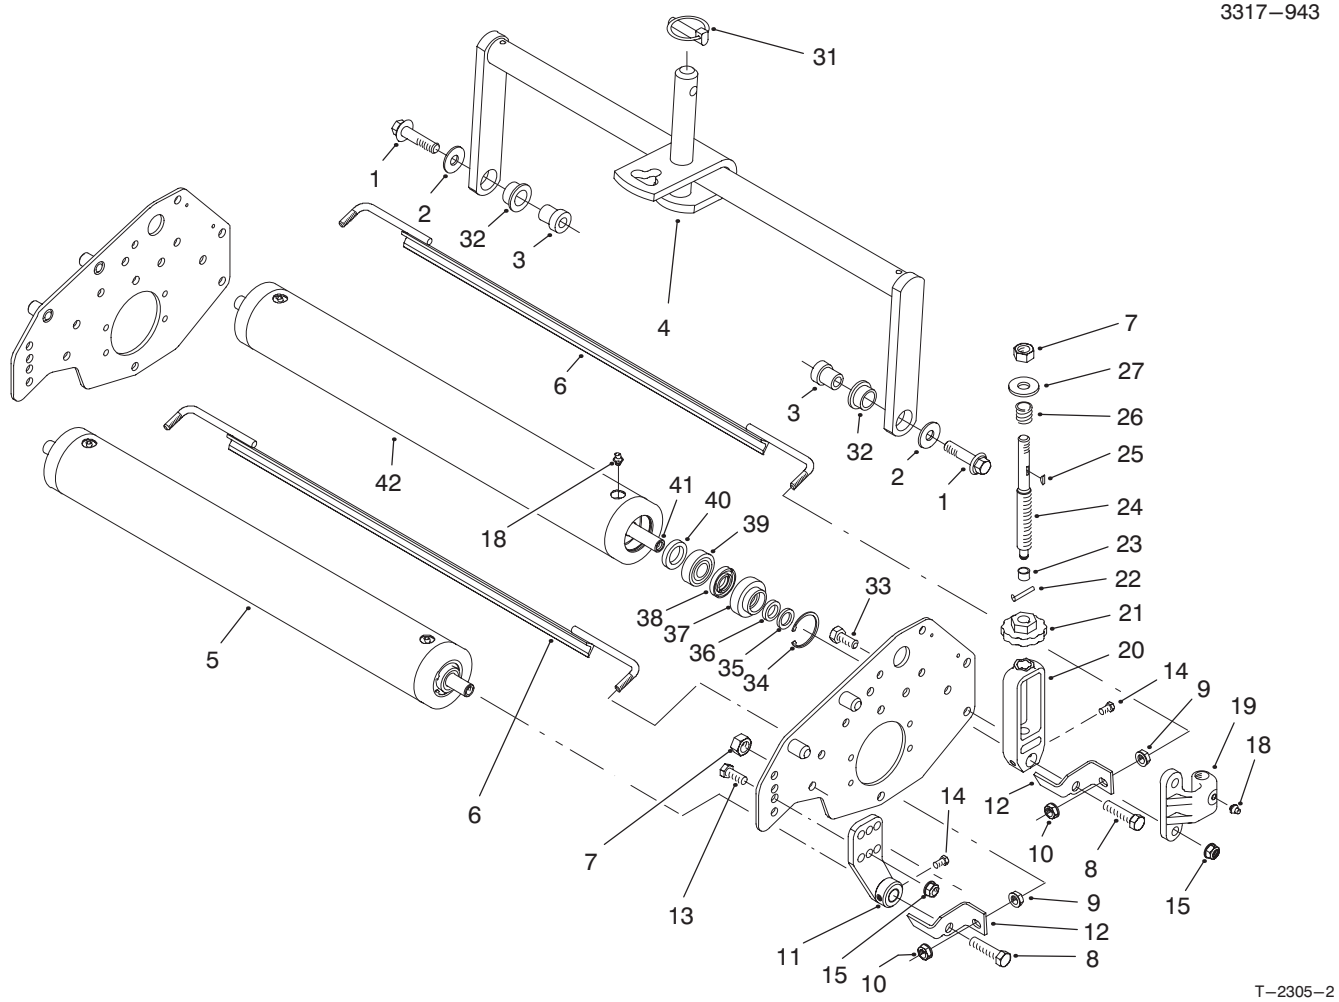

ROLLER ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	94–2702	Bolt	2
2	94–2701	Washer	2
3	94–2745	Spacer – Frame	2
4	93–3063	Carrier Frame Assembly (Incl. Ref. #32)	1
5	93–3040	Roller Assembly (Incl. Ref. #18 & 34–42)	2
6	94–6983	Scraper – Roller	2
7	94–4307	Nut – Hex. Lock	4
8	33105–025	Screw – Cap Hex. Hd.	4
9	32128–20	Nut – Flange Lock	4
10	32128–25	Nut – Flange Lock	4
11	94–4332	Bracket – H.O.C. Front LH	1
*	94–4333	Bracket – H.O.C. Front RH	1
12	94–6979	Bracket – Scraper LH	2
*	94–6978	Bracket – Scraper RH	2
13	33105–020	Screw – Cap Hex. Hd.	4
14	93–9757	Screw – Cap Hex. Hd.	4
15	33025–00	Nut – Lock	8
18	302–5	Fitting – Grease	6
19	93–3036	Mount – H.O.C.	2

Ref. No.	Part No.	Description	No. Used
20	93–3034	Bracket – H.O.C. Rear	2
21	93–3039	Knob	2
22	32121–50	Pin – Roll	2
23	256–159	Bushing – Sleeve	2
24	93–3046	Shaft – H.O.C.	2
25	3257–1	Key – Woodruff	2
26	94–2742	Spring – Compression	2
27	33096–00	Washer – Flat	2
31	283–71	Pin – Lynch	1
32	93–2877	Bushing – Flange	2
33	32105–030	Screw – Cap Hex. Hd.	4
34	32120–62	Ring – Retaining	2
35	93–2931	Washer – Roller	2
36	253–70	Seal – Oil	2
37	93–1252	Seal – Outer	2
38	93–1251	Seal – Inner	2
39	109966	Bearing – Ball	2
40	93–3007	Seal – Oil	2
41	93–2887	Shaft – Roller	1
42	93–3041	Roller Tube Assembly	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.