Form No. 3360-732 Rev C

TORO®

Count on it.

Parts Catalog

60in E-Z Vac™ DFS Collection System

Z Master® G3 Mower

Model No. 78567—Serial No. 290000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Bagger Mount Assembly 4
Bagger Hood Assembly 5
Tube and Weight Assembly 6
Bagger Assembly 7

© 2011—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

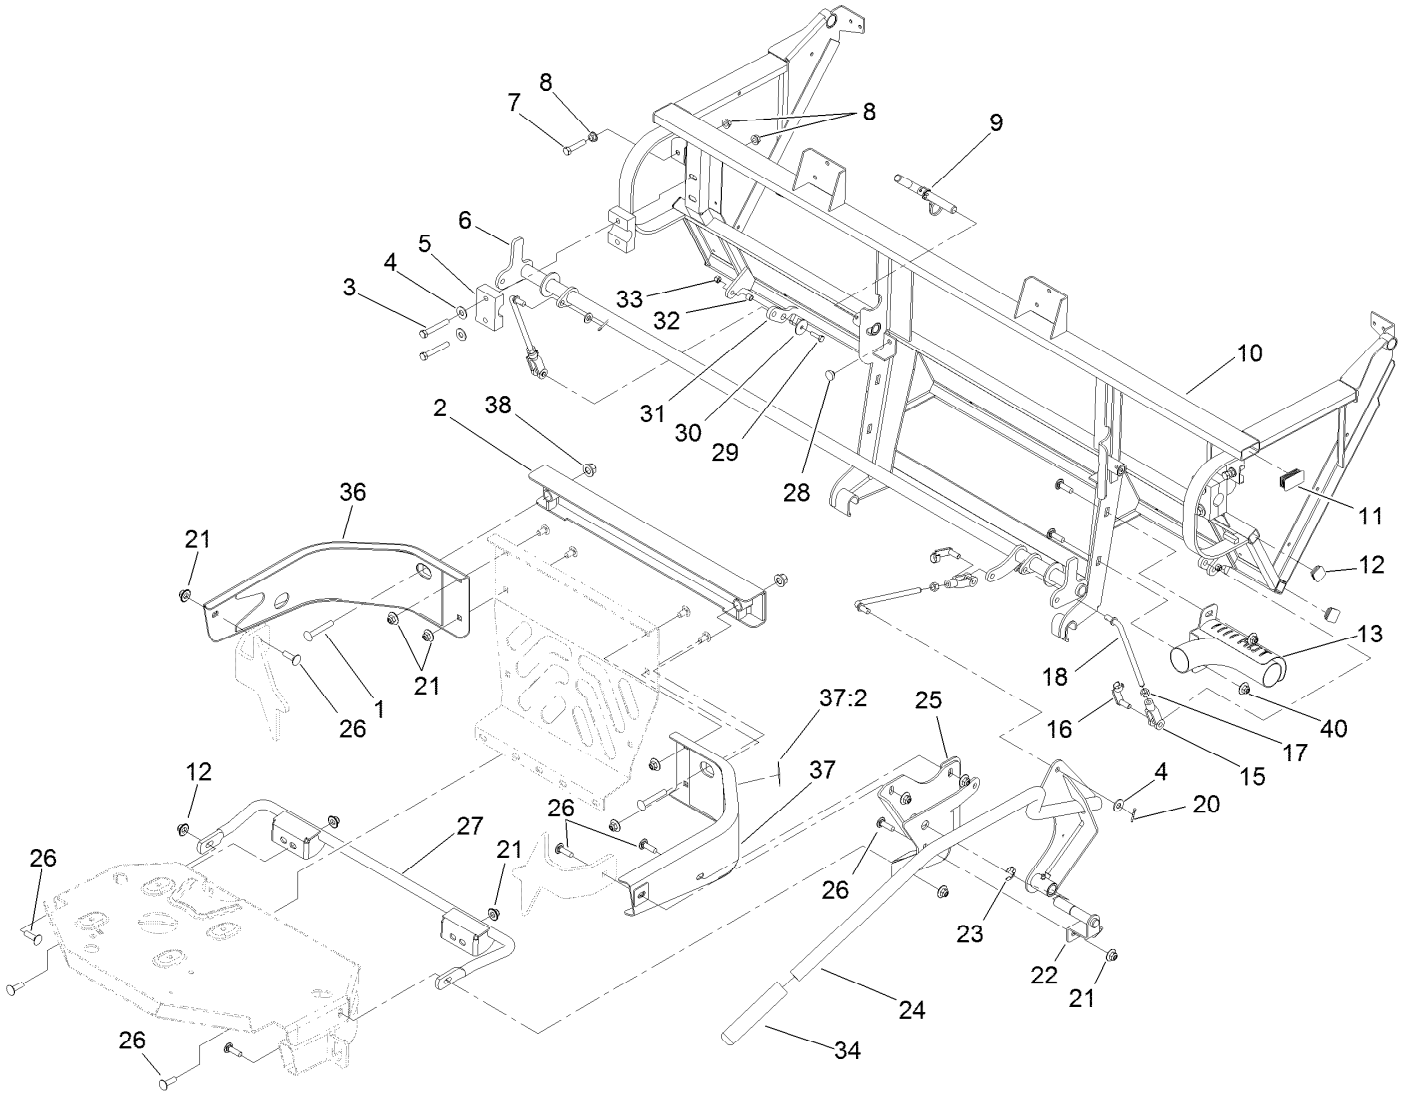

Bagger Mount Assembly


Ref.	Part Number	Qty.	Description
1	3233-34	2	Screw-CARR
2	116-0473-03	1	Mount-Bagger, Upper
3	323-12	4	Screw-HH
4	3256-4	7	Washer-Flat
5	103-2409	4	Half-Block, Bearing
6	103-2412-03	1	Link-Intermediate
7	323-53	2	Screw-HH
8	3290-357	8	Nut-HHF, Whiz
9	116-0458	2	Bagger Mount Pin ASM
10	109-8709-03	1	Frame
11	103-3201	2	Cap
12	103-3202	4	Cap
13	109-9338	1	Diverter-Exhaust
15	1-633131	3	Yoke-Linkage, Brake
16	103-2399	3	Pin-Spring, Clevis
17	3219-3	3	Nut-Hex
18	103-2413	3	Link-Handle
20	3272-10	3	Pin-Cotter
21	109-6658	14	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
22	109-6869	1	Handle Pin
23	32151-48	1	E-Ring
24	115-3604-03	1	Bagger Handle ASM
25	109-8712-03	1	Mount-Pivot
26	3231-28	10	Screw-CARR
27	109-9248	1	Mount-Bagger, Lower
28	1-513658	2	Bumper
29	321-6	2	Screw-HH
30	3256-55	2	Washer-Flat
31	103-3191-03	2	Latch
32	1-633545	2	Spacer
33	3296-42	2	Nut-Lock, NI
34	103-7115	1	Handle-Grip
36	116-0057-03	1	Bumper-RH
37	116-0180	1	LH Bumper ASM
37:2	103-2076	1	Decal-Caution
38	99-5107	2	Nut-Lock
40	104-8301	2	Nut-Flange, NI

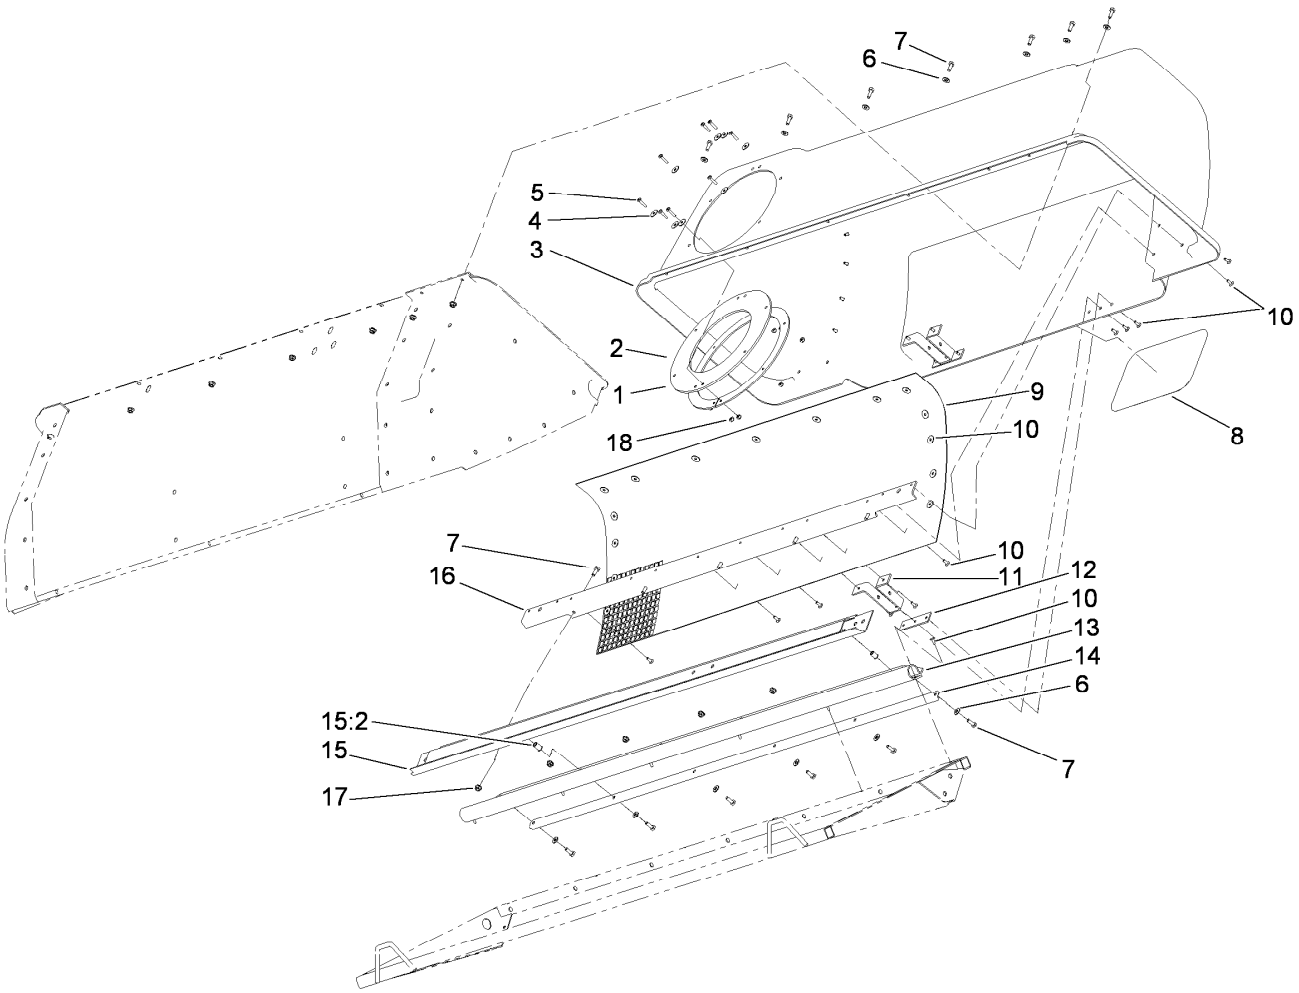

Bagger Hood Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	103-0378	2	Clamp-Seal
2	103-0439	1	Seal-Tube
3	114-8246	1	Hood ASM
4	3256-61	23	Washer-Flat
5	3250-27	8	Screw-PPH
6	3256-22	13	Washer-Flat
7	321-4	18	Screw-HH
8	67-7310	1	Decal
9	103-0440	1	Screen-Bagger
10	114439	39	Rivet-Pop
11	103-0379	2	Bracket-Mount
12	103-0376	2	Plate-Latch, Reinforcement
13	103-2360	1	Seal-Door Hinge
14	103-3010-03	1	Strap-Hold Down
15	103-2710	1	Rear Crossmember ASM
15:2	32148-6	6	Insert-Nut
16	103-2662-03	1	Support-Screen
17	32128-33	12	Nut-HF
18	3296-2	8	Nut-Lock, NI

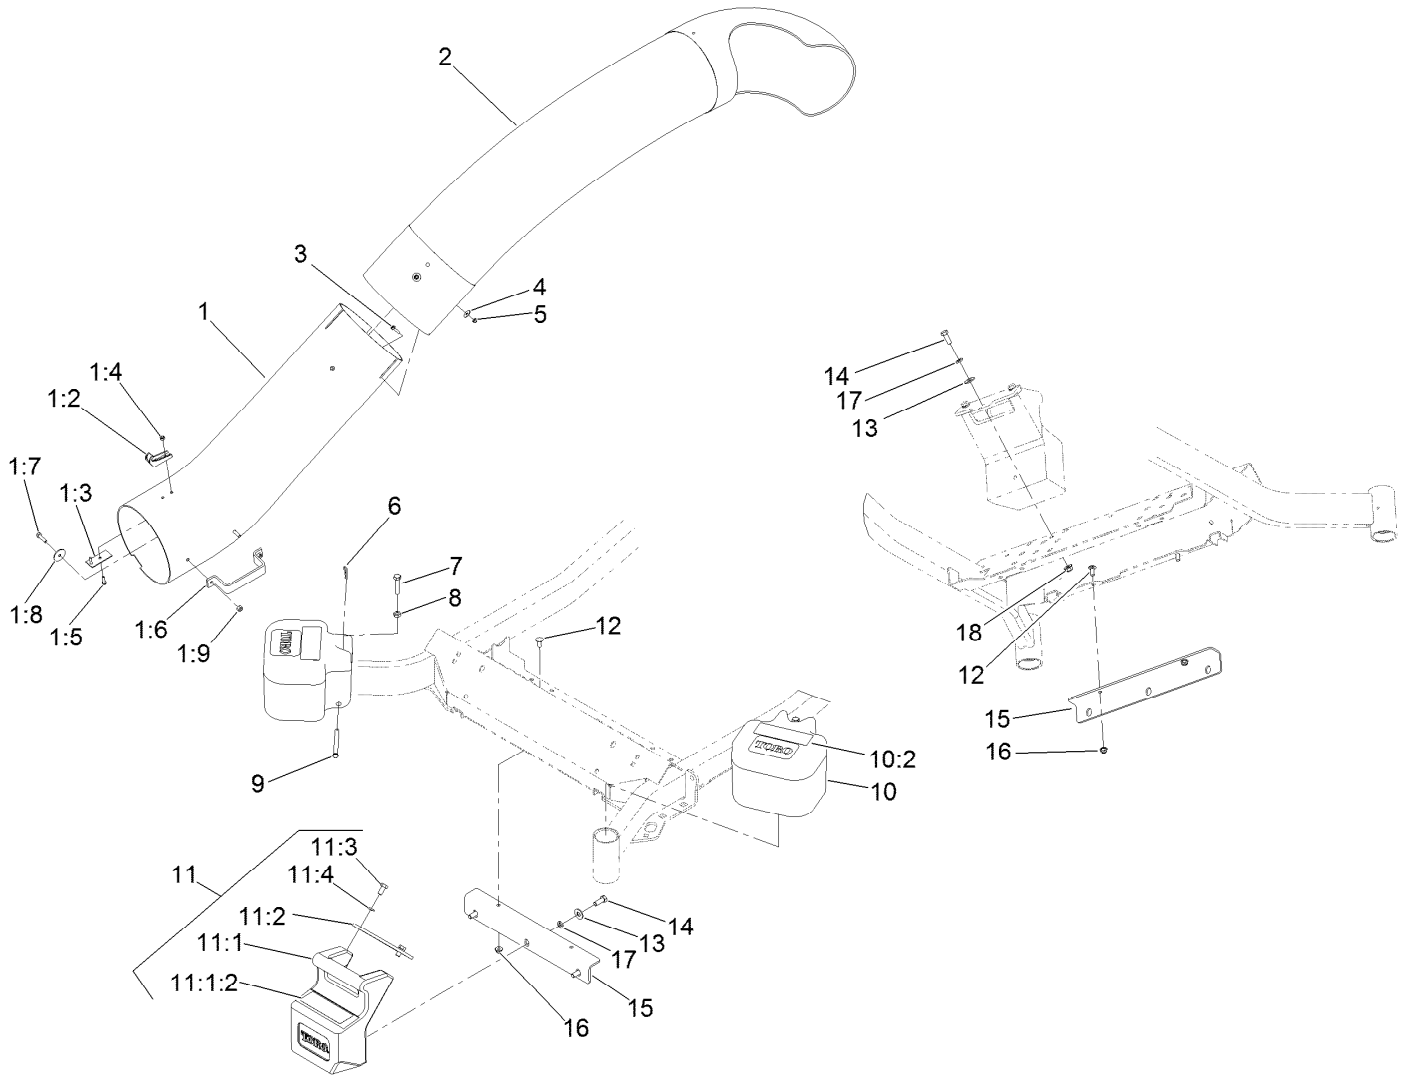

Tube and Weight Assembly

Ref.	Part Number	Qty.	Description
1	109-1973	1	Lower Tube ASM
1:2	103-2897	2	Latch-Catch
1:3	103-3079	2	Plate-Backing
1:4	3296-2	4	Nut-Lock, NI
1:5	32105-13	4	Screw-HWH
1:6	1-353005-03	1	Handle
1:7	321-6	2	Screw-HH
1:8	3256-55	2	Washer-Flat
1:9	3296-42	2	Nut-Lock, NI
2	109-3525	1	Tube-Upper
3	32105-13	3	Screw-HWH
4	3256-61	3	Washer-Flat
5	3296-2	3	Nut-Lock, NI
6	1-806003	2	Pin-Cotter, Hair
7	323-50	2	Bolt-HH
8	3217-7	2	Nut-Hex
9	100-1413	2	Pin-Clevis

Ref.	Part Number	Qty.	Description
10	115-3636	2	63 Lbs Weight ASM
10:2	106-0871	1	Decal-Warning, Counterweight
11	120-7883	3	Weight ASM
11:1	120-7882	1	Weight
11:1:2	106-0871	1	Decal-Warning, Counterweight
11:2	115-3616-01	1	Tab-Weight Support
11:3	323-4	2	Screw-HH
11:4	3253-5	2	Washer-Lock
12	3230-23	2	Screw-CARR
13	3256-4	6	Washer-Flat
14	323-6	6	Screw-HH
15	115-3615-01	1	Bracket-Weight Mount
16	104-8300	2	Nut-Flange, NI
17	3253-5	6	Washer-Lock
18	104-8301	3	Nut-Flange, NI

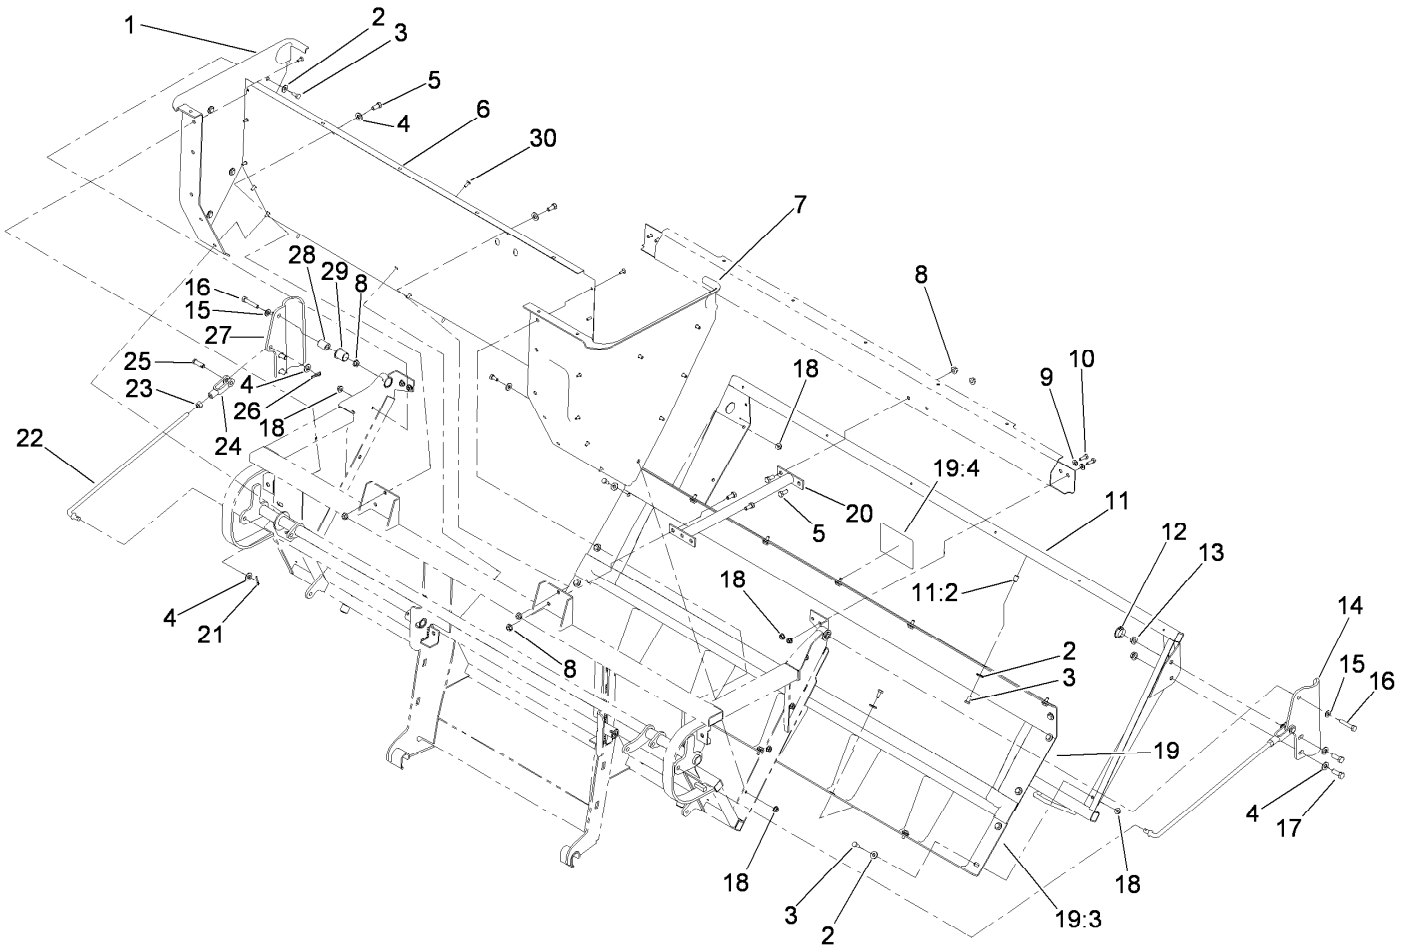

Bagger Assembly

Ref.	Part Number	Qty.	Description
1	103-7827	1	Panel-Bagger, RH
2	3256-2	32	Washer-Flat
3	321-3	32	Screw-HH
4	3256-24	8	Washer-Flat
5	322-3	6	Screw-HH
6	103-2404-03	1	Sheet-Wall
7	103-7826	1	Panel-Bagger, LH
8	32128-20	8	Nut-HF
9	3256-22	4	Washer-Flat
10	321-4	4	Screw-HH
11	103-2737	1	Door ASM
11:2	32148-6	12	Insert-Nut
12	103-8018	2	Plug-Dome
13	3290-357	4	Nut-HHF, Whiz
14	103-3332-03	1	Arm-Hinge, LH
15	3256-23	2	Washer-Flat
16	322-9	2	Screw-HH

Ref.	Part Number	Qty.	Description
17	323-6	4	Screw-HH
18	32128-33	24	Nut-HF
19	103-2383	1	Bag And Bottom Panel ASM
19:3	103-2486	1	Pan-Bag, Bottom
19:4	1-653554	1	Decal-Bag Warning
20	103-2414-03	1	Support
21	3272-10	2	Pin-Cotter
22	103-2365	2	Link-Hinge
23	3219-3	2	Nut-Hex
24	1-633131	2	Yoke-Linkage, Brake
25	1-808285	2	Pin-Clevis
26	1-806003	2	Pin-Cotter, Hair
27	103-3331-03	1	Arm-Hinge, RH
28	103-2361	2	Pin-Pivot, Hinge
29	103-2377	2	Bushing
30	114439	21	Rivet-Pop



Count on it.