
FORM NO. 3318–108 Rev. A

TORO®

MODEL NO. 30580–60001 & UP

PARTS CATALOG

GROUNDSMASTER® 580–D
Traction Unit

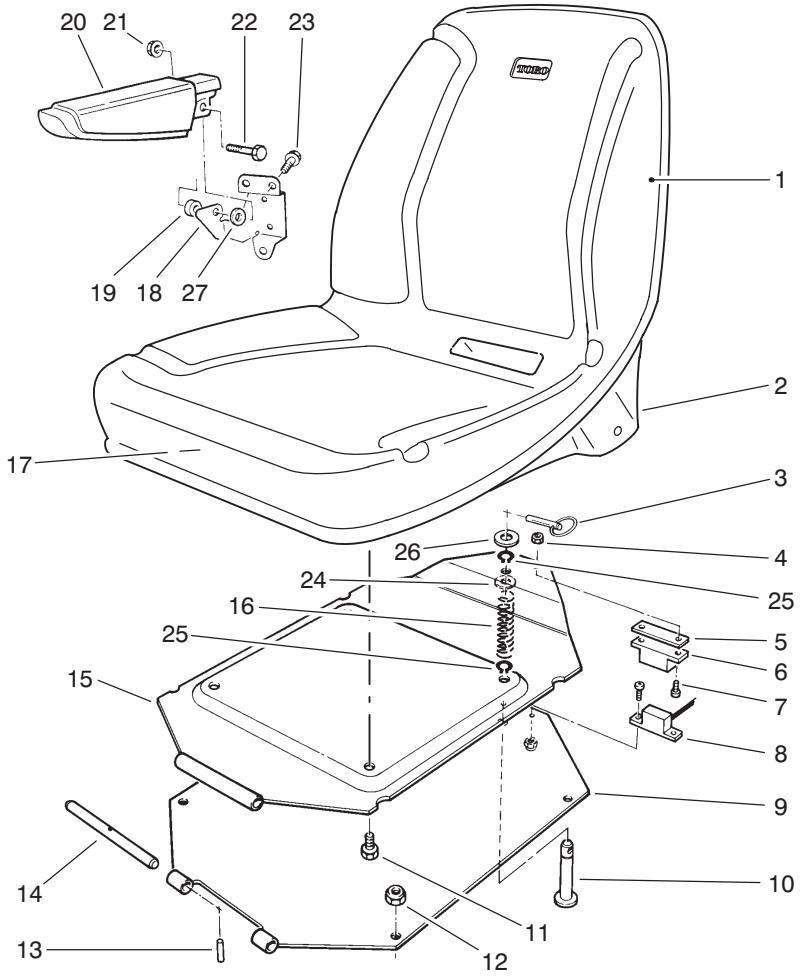

T–1278–1

SEAT ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	92–1180	Assembly – Seat (Incl. Ref. #2)	1
2	67–9560	Shell – Seat	1
3	283–72	Pin – Lynch	1
4	3296–54	Nut – Lock	4
5	83–6630	Shim – Switch	2
6	92–8753	Catch – Magnetic	1
7	32122–53	Screw – Pan Head	4
8	83–6640	Sensor – Switch	1
9	83–6700	Plate – Suspension	1
10	85–6160	Pin – Spring	1
11	3234–5	Screw – Cap Hex. Hd.	4
12	3296–29	Nut – Lock	4
13	32121–4	Pin – Roll	1
14	27–4720	Pin – Pivot Seat	1

Ref. No.	Part No.	Description	No. Used
15	83–6690	Plate – Seat	1
16	85–6140	Spring	1
17	92–1179	Cushion – Seat	1
18	69–0770	Bracket – Arm Rest R.H.	1
*	69–0760	Bracket – Arm Rest L.H.	1
19	92–7301	Spacer	2
20	69–1180	Armrest	2
21	32128–19	Nut – Lock Flange Hd.	2
22	323–9	Screw – Cap Hex. Hd.	2
23	3234–14	Screw – Cap Hex. Hd.	6
24	3256–27	Washer – Flat	1
25	32120–64	Ring – Retaining	2
26	3256–7	Washer – Flat	1
27	3256–24	Washer – Flat	2

*Not Illustrated

© The TORO Company – 1995, Rev. 1996
All Rights Reserved

TPS

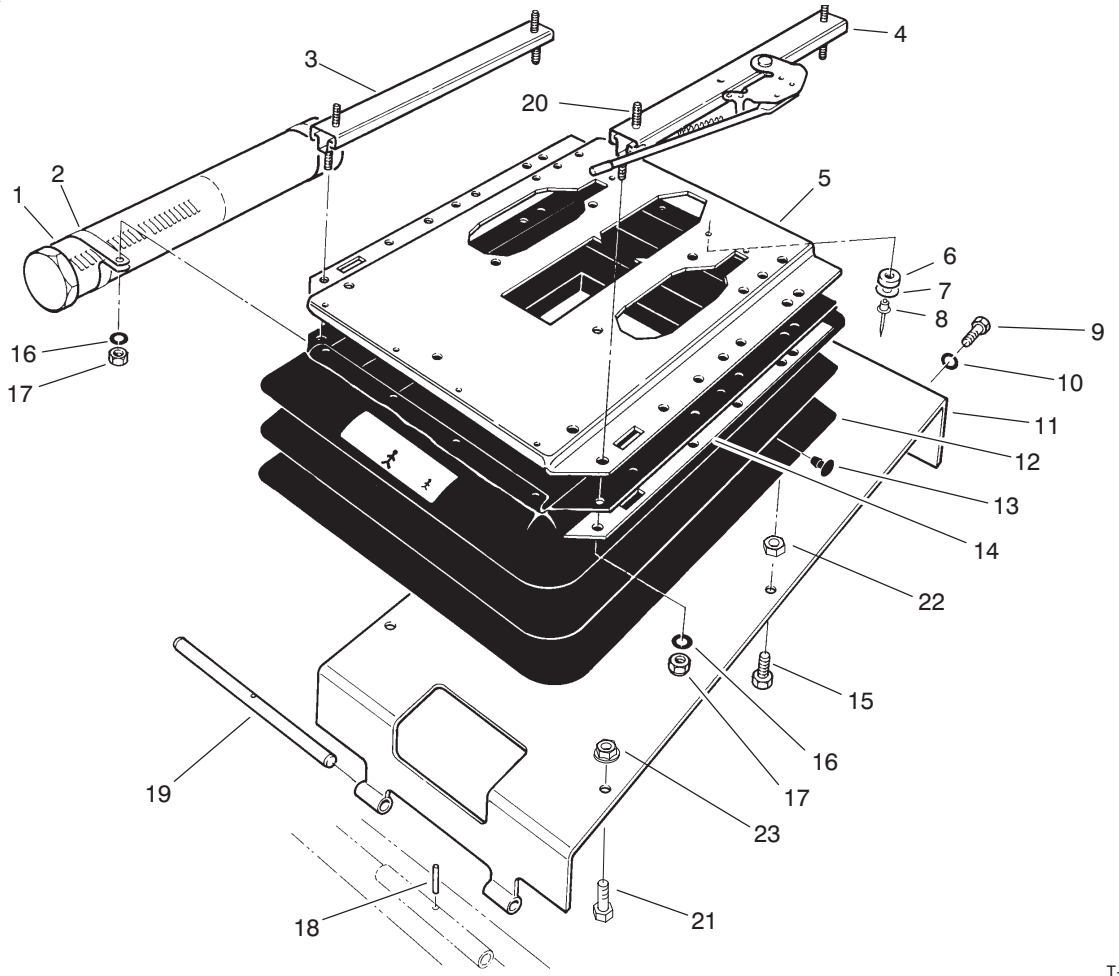


T−1279−1

SEAT PIVOT AND BELLOWS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74−0720	Tube − Manual	1
2	2412−133	Clamp	2
3	66−8530	Track − Adjustment	1
4	82−9060	Track & Latch − Adjustment	1
5	71−2410	Plate − Upper Suspension (Incl. Ref. #6)	1
6	71−2400	Assembly − Bumper (Incl. Ref. #7 & 8)	2
7	71−2380	Washer	2
8	71−2390	Rivet − Pop	2
9	323−6	Screw − Cap Hex. Hd.	2
10	3253−21	Washer − Lock	2
11	83−6660	Support − Seat	1

Ref. No.	Part No.	Description	No. Used
12	71−2420	Bellows − Rubber	1
13	39−5710	Plug	21
14	40−3890	Trim	2
15	48−7780	Screw − Cap Hex. Hd.	2
16	3256−23	Washer − Flat	4
17	3296−29	Nut − Lock	4
18	32121−4	Pin − Roll	1
19	27−4720	Pin − Pivot, Seat	1
20	3230−22	Bolt − Carriage	1
21	33104−025	Screw − HHF	2
22	33015−00	Nut	2
23	33004−00	Nut − HWH	2

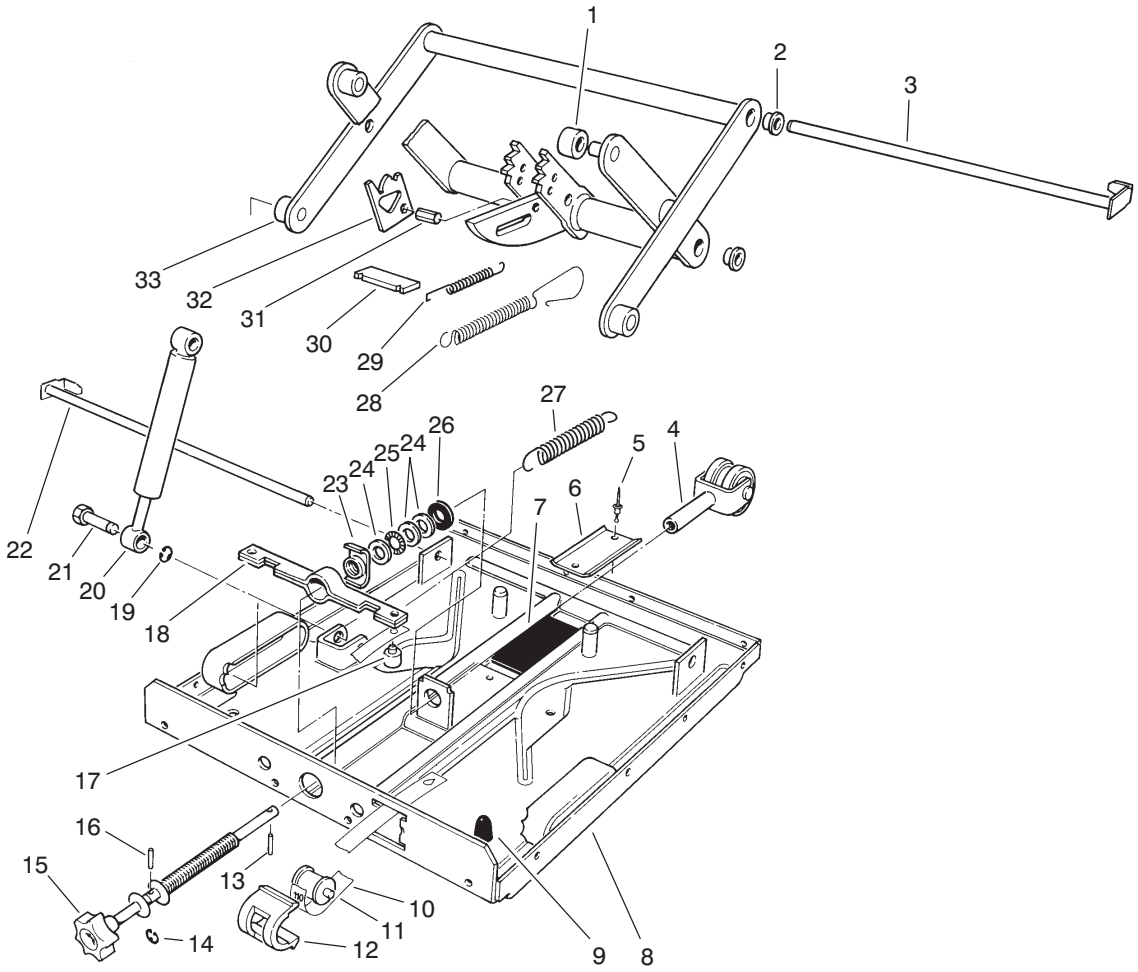


T–0483–1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40–4010	Roller	4
2	71–2180	Bearing	4
3	71–2190	Pin	1
4	71–2290	Bearing – Trible	1
5	40–4090	Rivet – Pop	2
6	40–4080	Track – U	1
7	40–4120	Plate – Rubber	1
8	71–2310	Plate – Lower Suspension (Incl. Ref. #5–7 & 9)	1
9	71–2300	Bumper	2
10	71–2280	Band – Weight Indicator	1
11	40–4150	Roller	1
12	40–4160	Guide – Sleeve	1
13	71–2210	Pin	1
14	71–2230	Ring – Snap	1
15	71–2240	Knob Assembly (Incl. Ref. #13, 14 & 16)	1
16	71–2220	Pin	1
17	40–4230	Plug	1
18	71–2250	Bracket – Spring	1
19	71–2330	Ring – Snap	2
20	71–2340	Absorber – Shock	1
21	71–2320	Pin	2
22	71–2170	Pin	1
23	71–2270	Nut – Special	1
24	40–4070	Washer	3
25	40–4310	Bearing – Thrust Needle	1
26	40–4060	Washer – Rubber	1
27	71–2260	Spring	2
28	40–4340	Spring – Extension	1
29	40–4350	Spring – Extension	2
30	40–4360	Plate	1
31	40–4370	Bolt	1
32	40–4380	Bracket – Release	2
33	71–2200	Bracket – Swing Arm (Incl. Ref. #1–3, 22 & 29–32)	1
*	71–0480	Suspension Assembly (Incl. Ref. #1–33, & 6–8, 12 & 13, from page 2)	1

*Not Illustrated

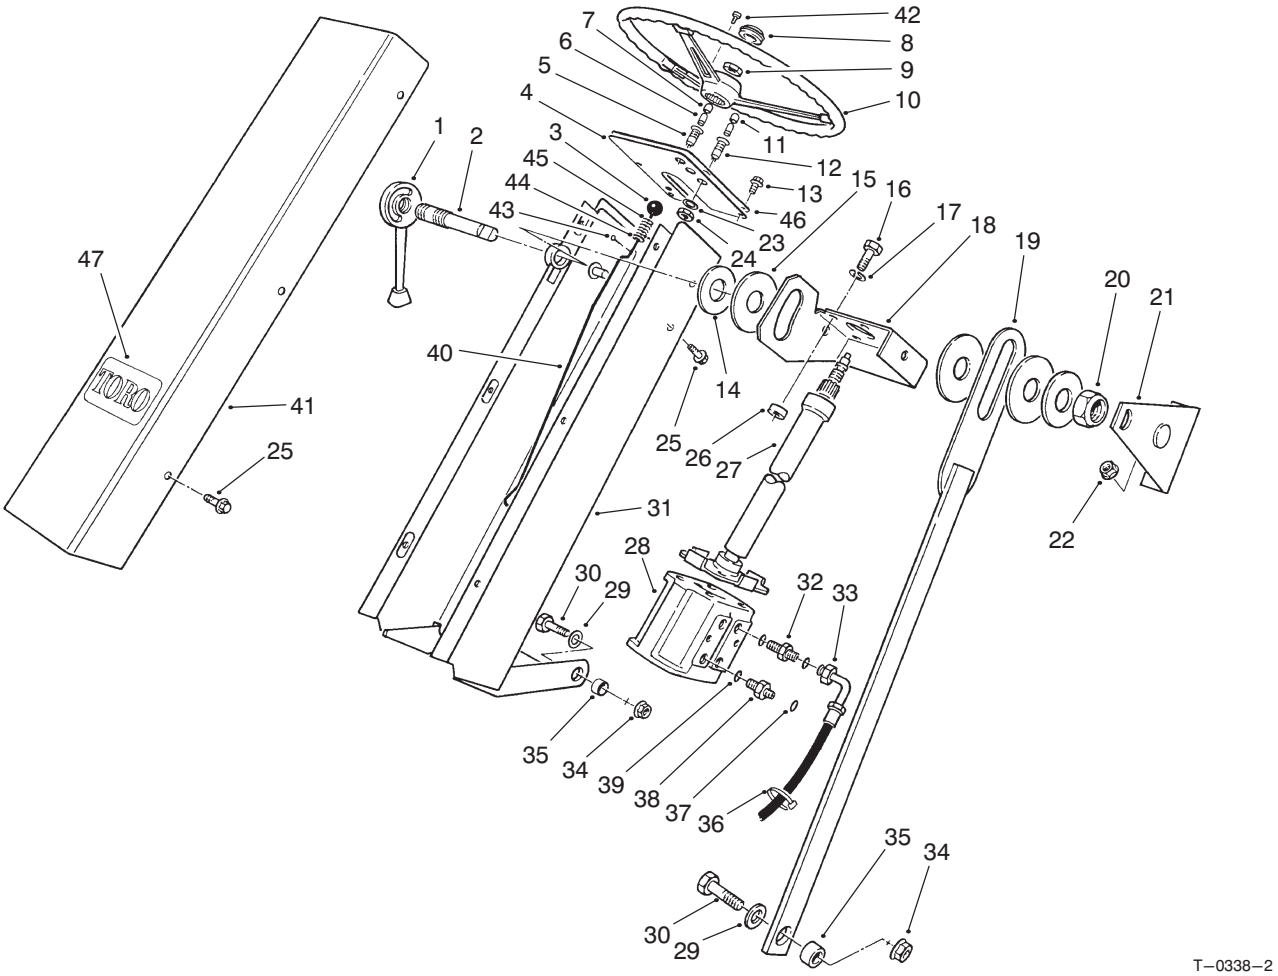


STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–1560	Lever – Lock	1
2	69–9230	Shaft – Steering Pivot	1
3	233–17	Knob	1
4	69–9440	Panel – Steering Tower	1
5	44–2210	Body – Indicator Light (Incl. Ref. #6–7 & 23–24)	1
†6		Bulb – Indicator Light (#1891)	3
7	218–533	Lens – Indicator Light (Red)	1
8	213–31	Cover – Steering Wheel	1
9	47–6990	Nut – Hex.	1
10	68–8080	Wheel – Steering	1
11	218–562	Lens – Indicator Light (Amber)	2
12	44–2212	Body – Indicator Light (Incl. Ref. #6, 11 & 23–24)	2
13	32144–64	Screw – Hex. Washer Hd.	4
14	20–9500	Spacer	2
15	31–0390	Washer – Friction	3
16	323–7	Screw – Cap Hex. Hd.	4
17	3253–21	Washer – Lock	4
18	69–9540	Bracket – Steering Gear	1
19	69–7760	Link – Steering Gear	1
20	3296–49	Nut – Lock	1
21	69–7740	Support – Steering Gear	1
22	32128–20	Nut – Flange Lock	2
23	218–536	Washer – Lock	3

Ref. No.	Part No.	Description	No. Used
24	218–535	Nut – Hex.	3
25	3234–14	Screw – Hex. Washer Hd.	8
26	46–1600	Spacer	4
27	71–0540	Column – Steering	1
28	92–9748	Valve – Power Steering	1
29	3256–26	Washer – Flat	3
30	325–5	Screw – Cap Hex. Hd.	3
31	69–8160	Tower – Steering	1
32	340–133	Fitting – Hydraulic Straight (Incl. Ref. #37 & 39)	3
33	69–5500	Hose – Hydraulic	4
34	32128–23	Nut – Flange Lock	3
35	28–0380	Spacer	3
36	3290–378	Tie–Cable	5
37	237–22	Seal – O–Ring	4
38	69–6980	Valve – Check (Incl. Ref. # 37 & 39)	1
39	237–79	Seal – O–Ring	4
40	71–4060	Rod – Brake Latch	1
41	69–8510	Cover – Steering Tower	1
42	32144–96	Screw – Mach. Round Hd.	3
43	3272–5	Pin – Cotter	1
44	3256–22	Washer – Flat	1
45	3–3251	Spring – Compression	1
46	69–0970	Panel – Control	1
47	62–5550	Decal	1

†Obtain Locally

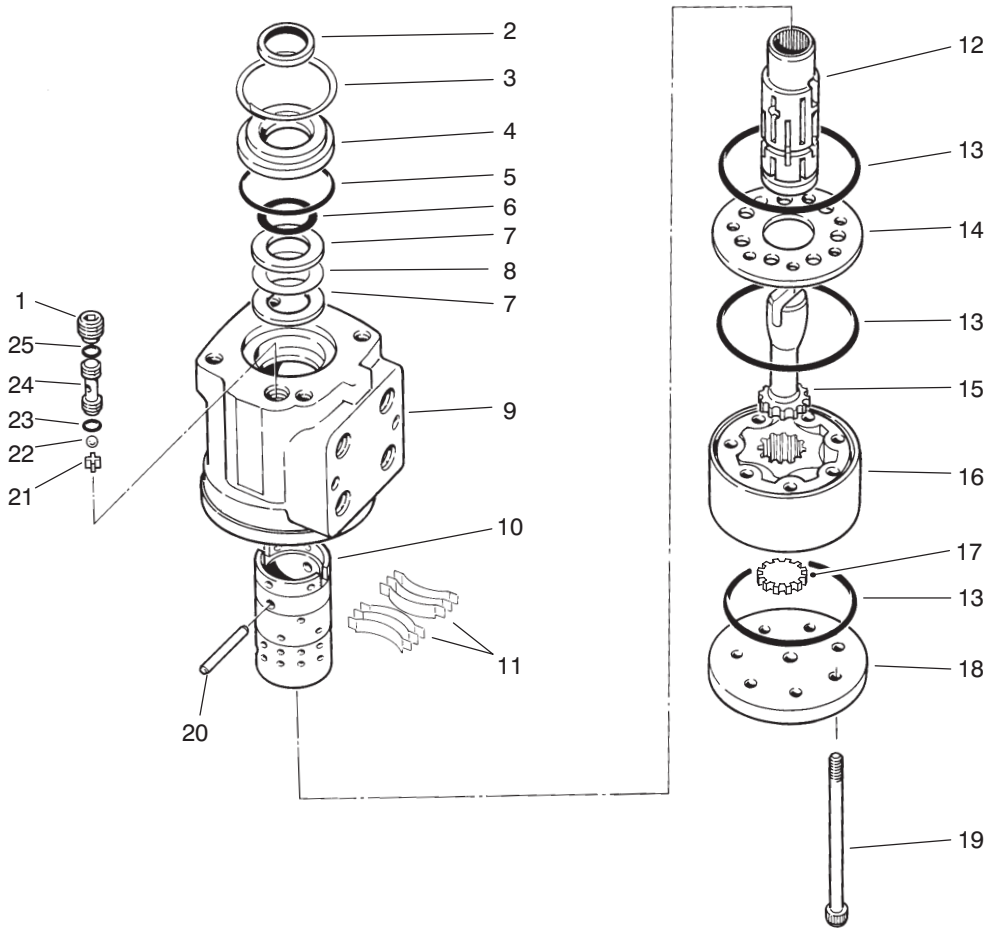


T—0383—1

POWER STEERING VALVE ASSEMBLY NO. 92—9748

Ref. No.	Part No.	Description	No. Used
1	52—9260	Screw — Set	1
†2		Seal — 1” ID	1
3	52—9230	Ring — Retaining	1
4	52—9240	Bushing — Gland Seal	1
†5		Seal — 1.875” ID	1
†6		Seal — Quad Ring	1
7	59—6730	Race — Bearing	2
8	59—6740	Bearing — Needle Thrust	1
†9		Housing	1
†10		Sleeve — Control	1
11	59—6820	Centering Spring Kit	1
†12		Spool — Control	1
†13		Seal	3
14	92—9732	Plate — Wear	1
15	52—9320	Drive	1

Ref. No.	Part No.	Description	No. Used
16	69—1860	Gerotor	1
17	69—1880	Spacer	1
18	92—9730	Cap — End	1
19	92—9735	Screw — Cap	7
20	59—6830	Kit — Centering Pin	1
21	52—9290	Retainer — Check Ball	1
22	52—9280	Ball — Check	1
†23		Seal	1
24	52—9270	Seat — Check Ball	1
†25		Seal	1
*	52—9250	Needle Bearing Kit (Incl. Ref. #7—8)	1
*	92—9749	Seal Kit (Incl. Ref. #2, 5—6, 13, 23 & 25)	1

*Not Illustrated
†Not Serviceable Separately

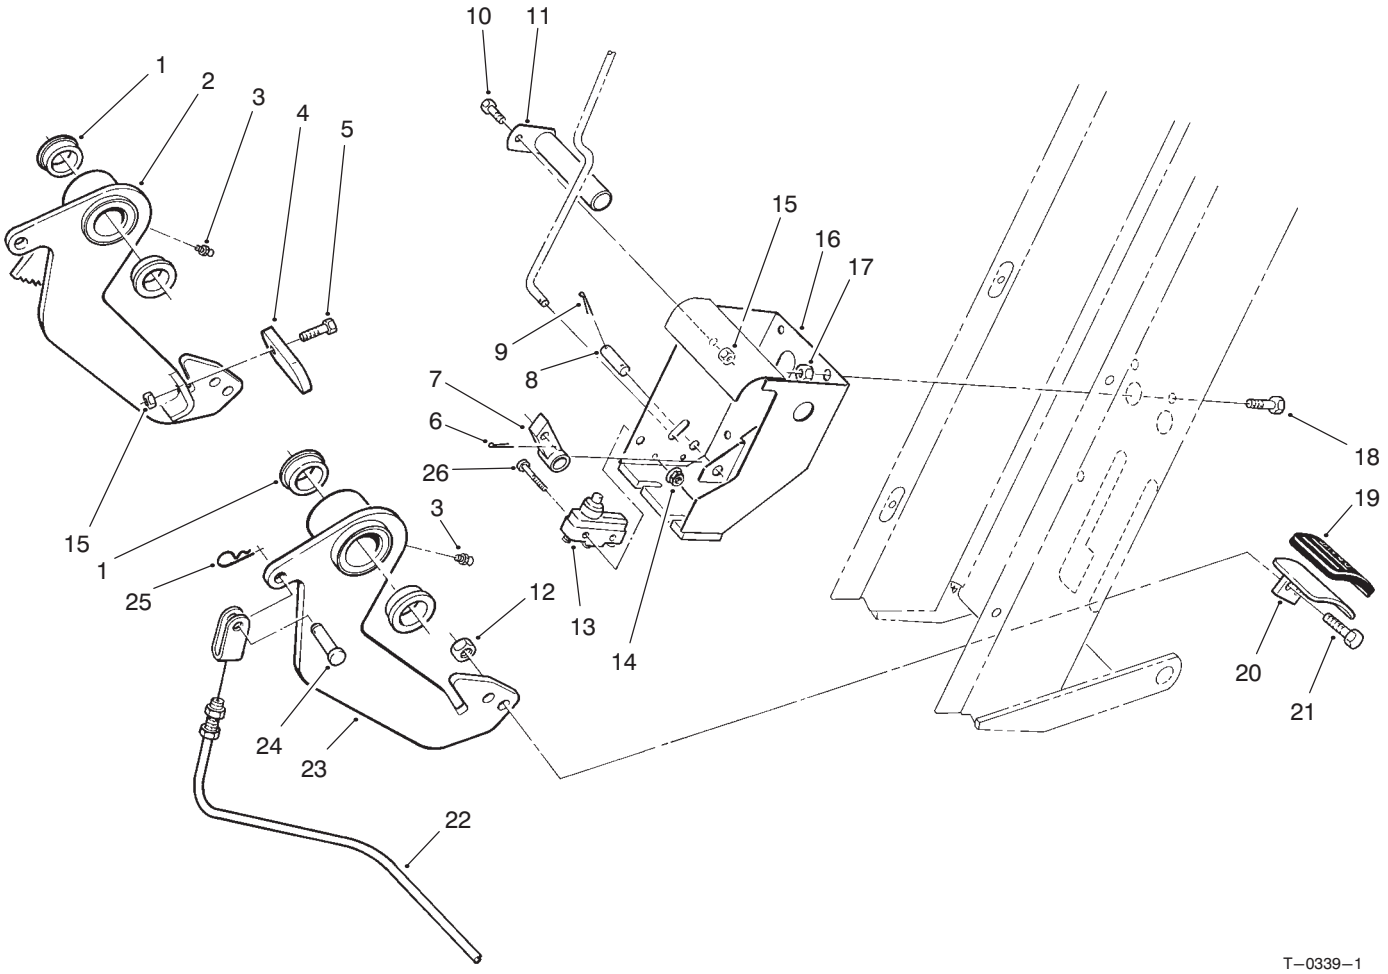


T–0339–1

STEERING BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	256–247	Bushing – Flange	4
2	69–7890	Arm – Brake R.H. (Incl. Ref. #1 & 3)	1
3	302–5	Fitting – Grease	2
4	69–9210	Lever – Brake Latch	1
5	321–4	Screw – Cap Hex. Hd.	1
6	3272–5	Pin – Cotter	1
7	69–7720	Pawl – Brake	1
8	69–9200	Pin – Brake Pawl	1
9	3272–6	Pin – Cotter	2
10	321–2	Screw – Cap Hex. Hd.	1
11	69–7790	Pin – Brake Arm	1
12	32152–1	Nut – Lock	4
13	29–6163	Switch – Micro	1
14	3296–9	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
15	32152–4	Nut – Lock	2
16	69–7840	Mount – Brake Arm	1
17	32128–20	Nut – Lock	3
18	3234–14	Screw – Cap Hex. Hd.	3
19	49–6171	Pad – Brake Pedal L.H.	1
*	49–6172	Pad – Brake Pedal R.H.	1
20	69–7700	Pedal – Brake	2
21	323–4	Screw – Cap Hex. Hd.	4
22	69–5670	Cable – Brake	2
23	69–7880	Arm – Brake L.H. (Incl. Ref. #1 & 3)	1
24	283–1	Pin – Clevis	2
25	3290–307	Pin – Cotter, Hair	2
26	3249–11	Screw – Machine	2
*	3290–378	Tie – Cable	3

*Not Illustrated

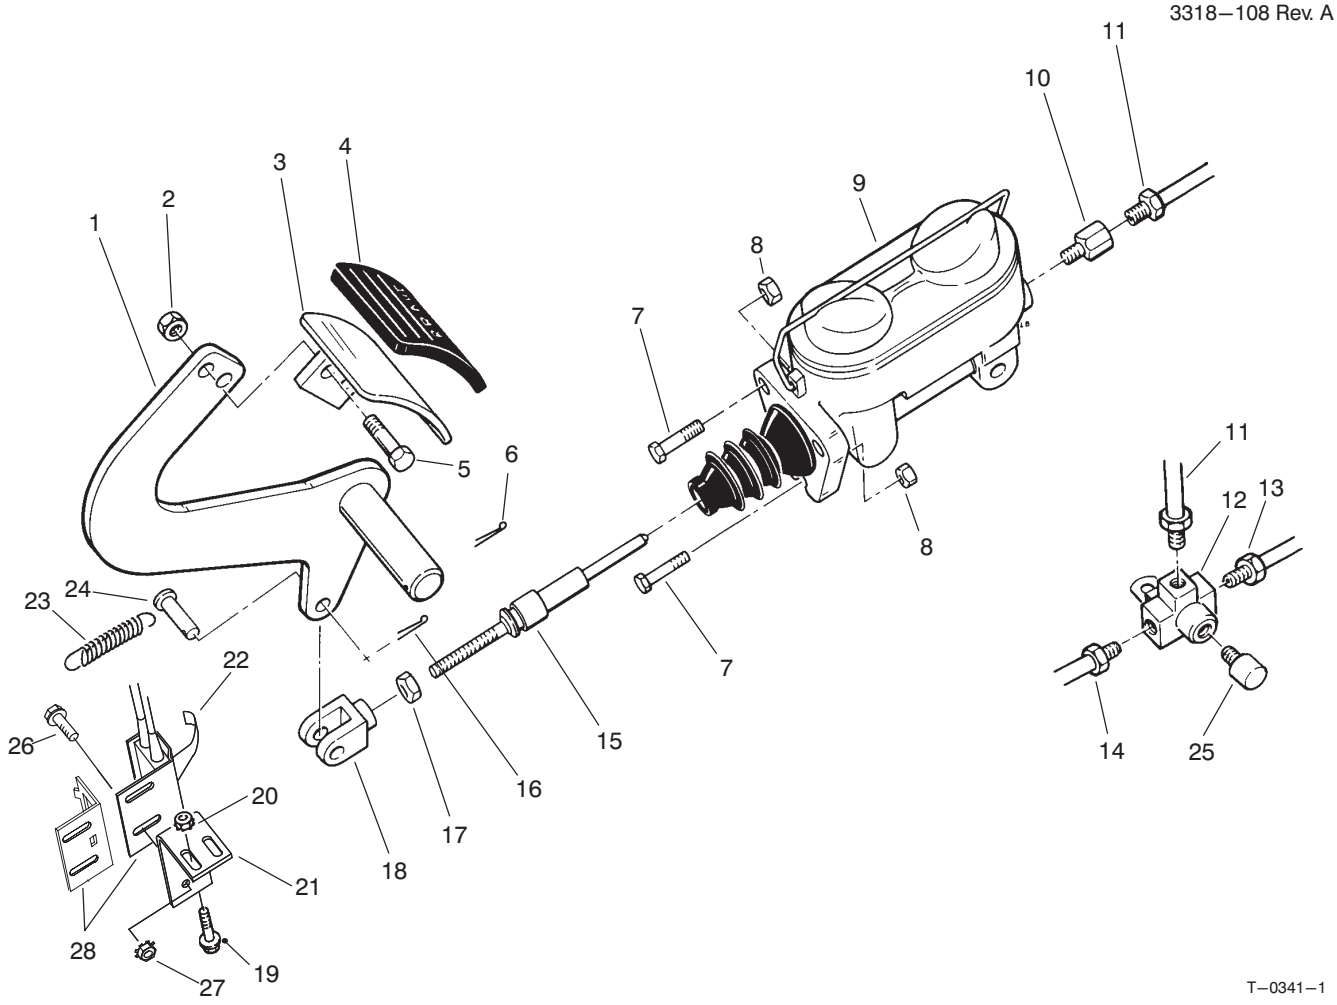


T–0341–1

SERVICE BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–8750	Arm – Brake	1
2	32152–1	Nut – Lock	2
3	69–7700	Pedal – Brake	1
4	49–6170	Pad – Brake	1
5	322–3	Screw – Cap Hex. Hd.	2
6	3272–12	Pin – Cotter	1
7	323–7	Screw – Cap Hex. Hd.	3
8	32128–21	Nut – Lock	3
9	69–2640	Master Cylinder Assembly	1
10	353–994	Adapter	1
11	74–2530	Tube – Hydraulic	1
12	218–243	Fitting – Tee	1
13	74–2510	Tube – Hydraulic L.H.	1
14	74–2520	Tube – Hydraulic R.H.	1

Ref. No.	Part No.	Description	No. Used
15	69–9340	Rod – Brake	1
16	3272–10	Pin – Cotter	1
17	3220–2	Nut – Jam	1
18	282–2	Clevis – Brake Rod	1
19	3234–13	Screw – Hex. Washer Hd.	2
20	32149–2	Nut – Keps	2
21	93–7039	Bracket – Service Brake	1
22	93–7037	Switch	1
23	21–1830	Spring – Extension	1
24	283–1	Pin – Clevis	1
25	218–242	Switch – Brake	1
26	32144–1	Screw – Hex. Hd.	2
27	32127–11	Nut – Flexlok	2
28	93–9337	Bracket – Swiitch	1

*Not Illustrated

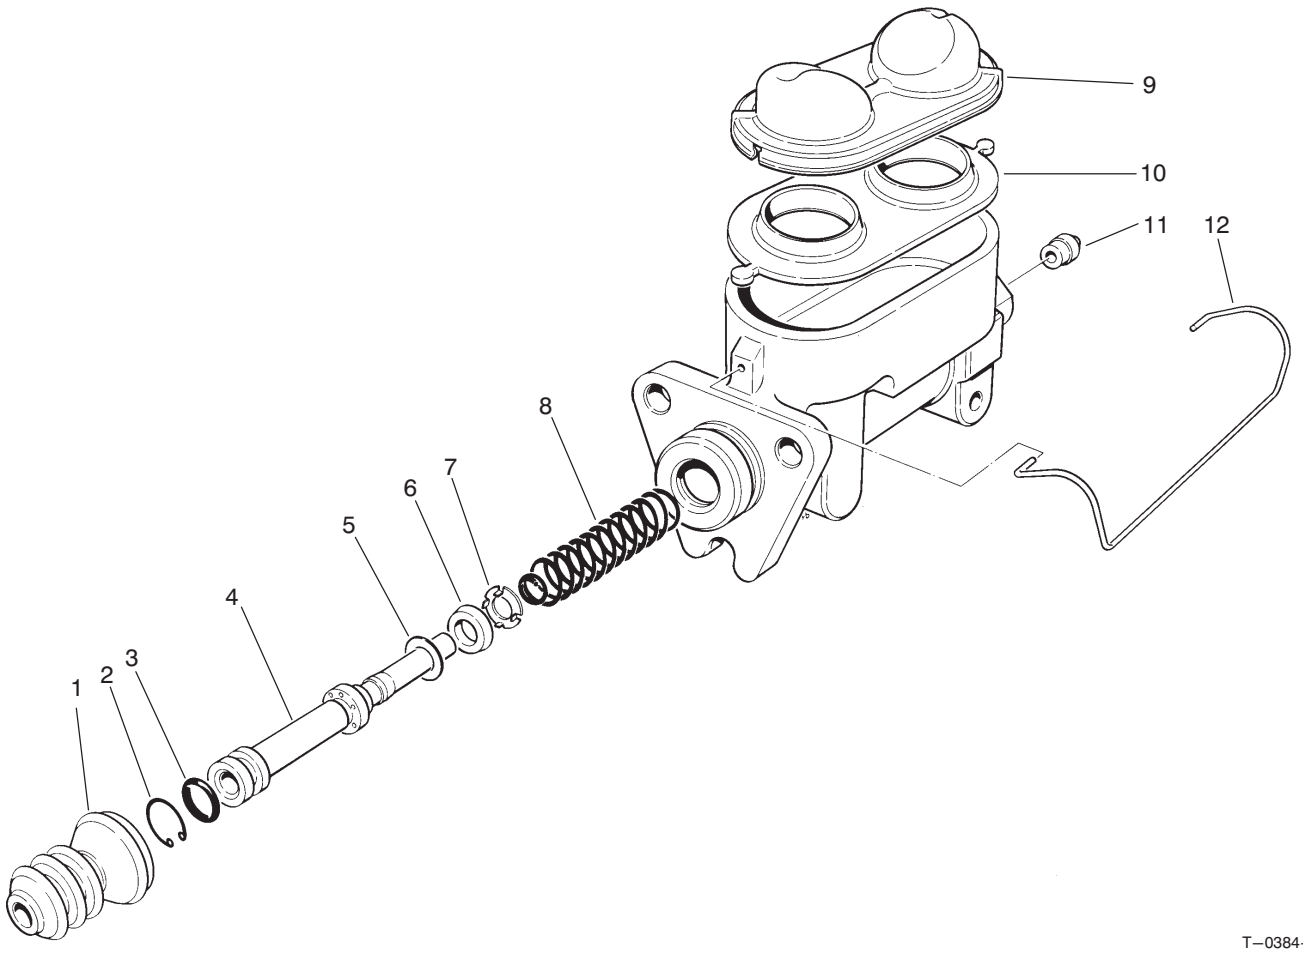


T–0384–1

BRAKE SYSTEM MASTER CYLINDER NO. 69–2640

Ref. No.	Part No.	Description	No. Used
1	69–2650	Boot – Rod	1
2	69–2660	Ring – Retaining	1
†3		Seal – Lip	1
†4		Piston	1
†5		Protector – Cup	1
†6		Cup – Pumping	1
†7		Retainer – Cup	1
†8		Spring – Piston Return	1
9	69–2750	Cover – Reservoir	1
10	69–2760	Gasket – Diaphragm	1
11	69–2770	Seat – Tube	1
12	69–2740	Bail – Cover	1
*	69–2730	Piston Assembly (Incl. Ref. #3–8)	1

*Not Illustrated
†Not serviceable separately.

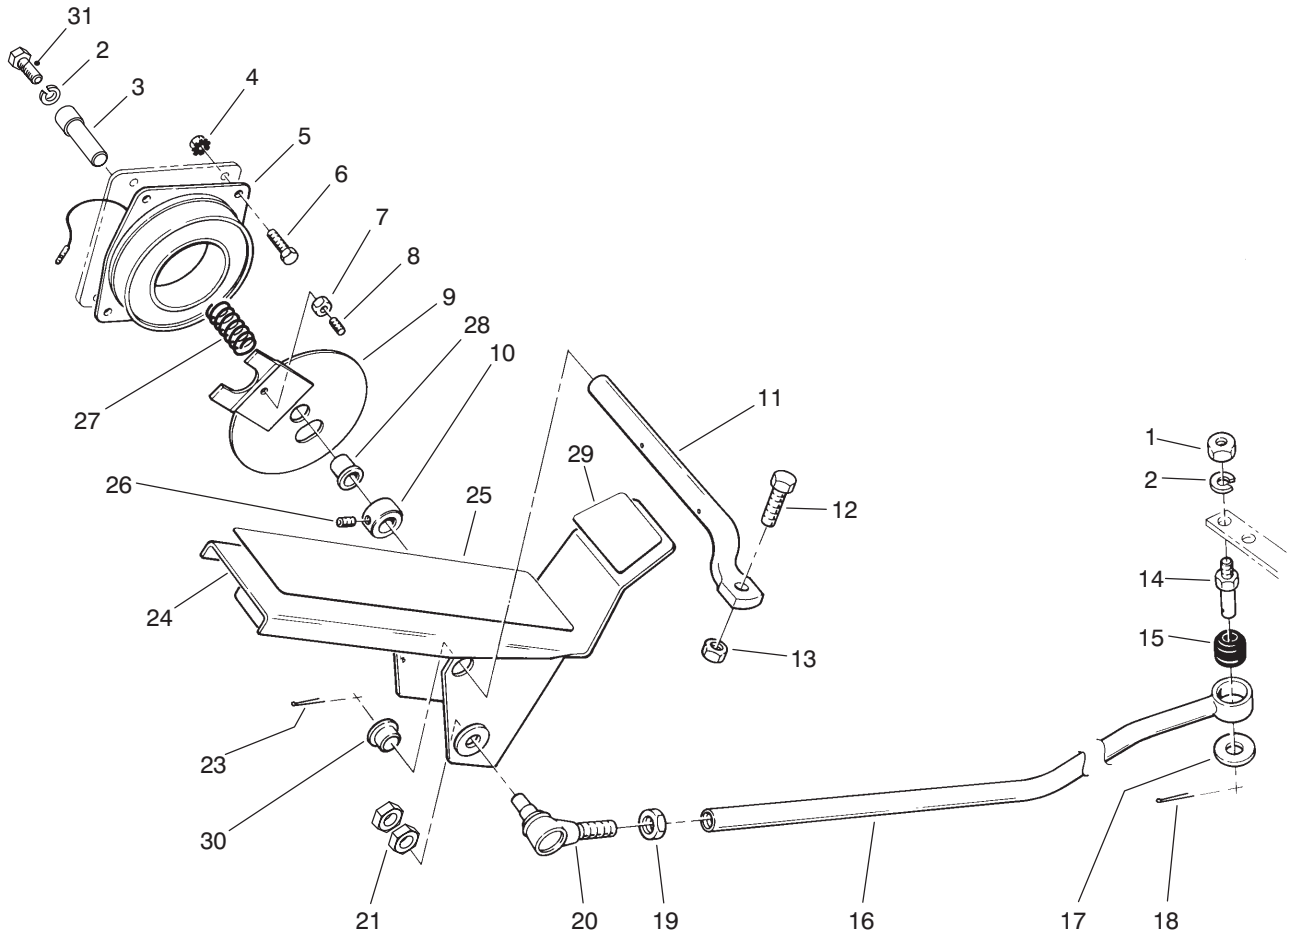


T–0351–1

TRACTION PEDAL & CRUISE CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3217–7	Nut – Lock	1
2	3253–21	Washer – Lock	2
3	92–9701	Shaft – Cruise Control	1
4	32149–2	Nut – Keps	4
5	42–1720	Field Core Coil Assembly	1
6	321–3	Screw – Cap Hex. Hd.	4
7	3217–26	Nut – Lock	1
8	3245–31	Screw – Set	1
9	43–6110	Plate – Clutch	1
10	43–6320	Collar – Locking	1
11	69–9390	Shaft – Pedal	1
12	3234–14	Screw – Cap Hex. Hd.	1
13	32128–20	Nut – Lock	1
14	69–9030	Post – Neutral Device	1
15	23–2270	Bushing – Rubber	1


Ref. No.	Part No.	Description	No. Used
16	74–2700	Rod – Control	1
17	3256–6	Washer – Flat	1
18	3272–10	Pin – Cotter	1
19	3220–5	Nut – Jam	1
20	21–0141	Joint – Ball	1
21	3220–3	Nut – Jam	2
23	3272–7	Pin – Cotter	2
24	69–7650	Pedal – Traction	1
25	71–0440	Abrasive – Pedal Front	1
26	3245–32	Screw – Set	1
27	43–6200	Spring – Compression	1
28	256–273	Bushing – Flange	1
29	71–0450	Abrasive – Pedal Rear	1
30	256–156	Bushing – Flange	2
31	323–6	Screw – Cap Hex. Hd.	1

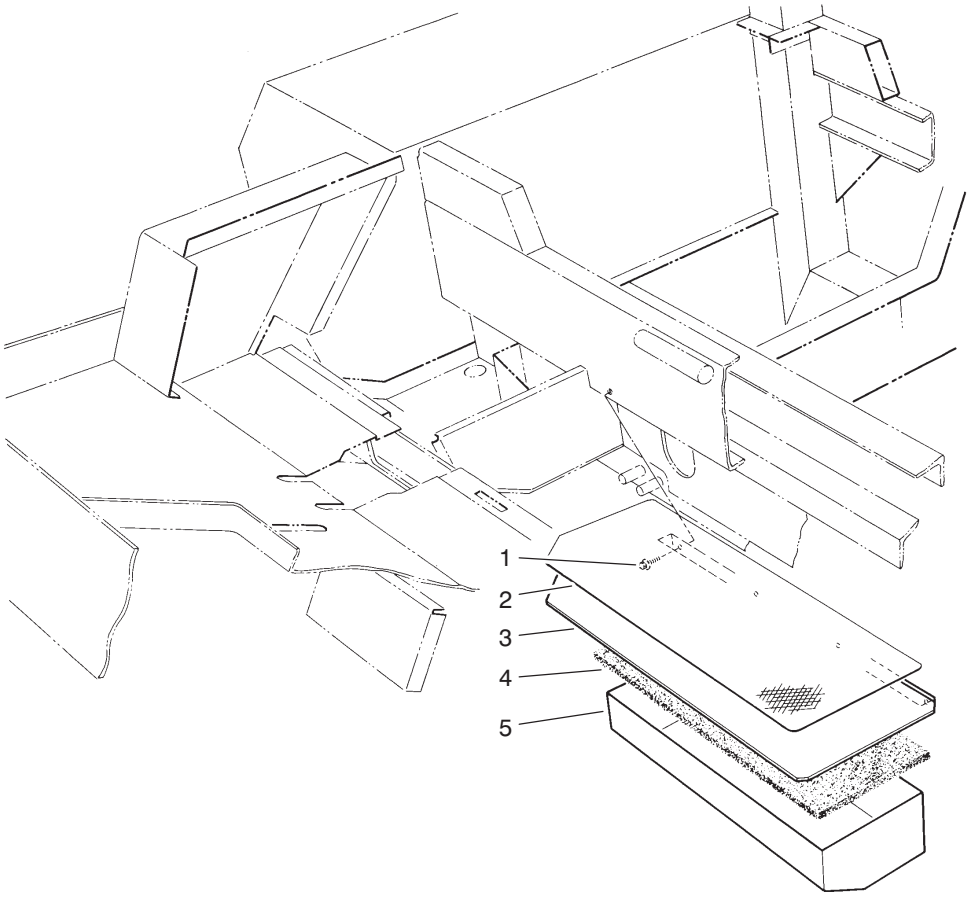


T–0876–1

TOOL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234–14	Screw – Hex. Flange Hd.	4
2	71–0410	Cover – Abrasive	1
3	69–8080	Cover – Tool Box	1
4	69–9430	Foam – Tool Box	1
5	69–8110	Box – Tool	1

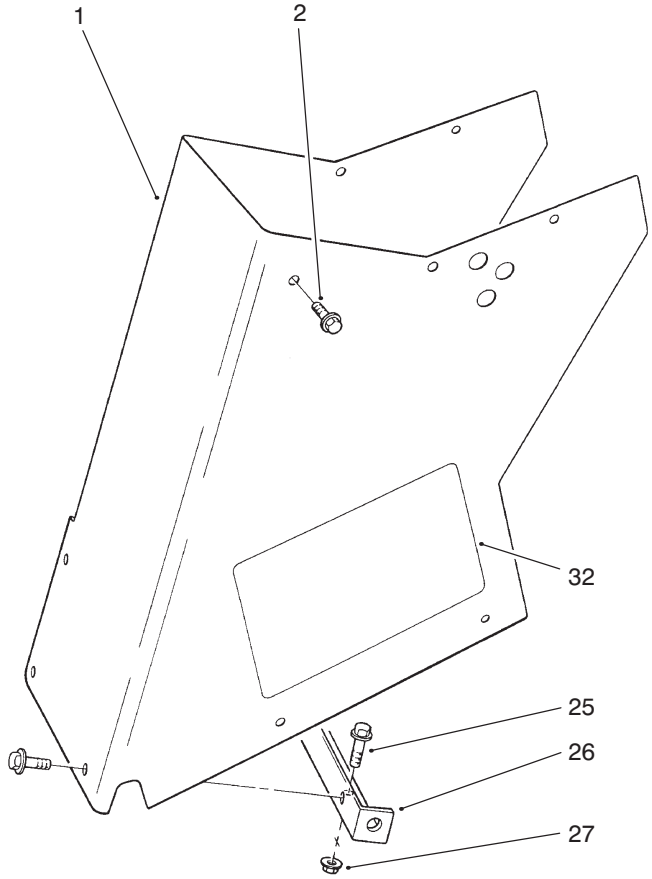

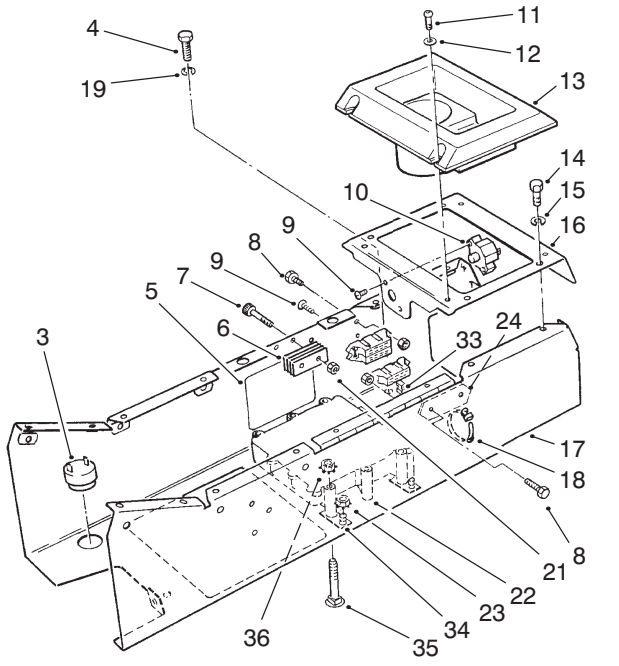


T–0340–2

CONTROL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–9560	Housing – Control	1
2	3234–7	Screw – Hex. Washer Hd.	11
3	80–9330	Alarm – Audio	1
4	323–4	Screw – Cap Hex. Hd.	4
5	88–9430	Decal – Fuse	1
6	69–6260	Magnet	1
7	32105–12	Screw – Hex. Socket Hd.	2
8	32105–13	Screw – Hex. Hd.	4
9	32122–53	Screw – Phil. Truss Hd.	2
10	43–4000	Breaker – Circuit 40A	1
11	3290–133	Screw – Round Hd.	4
12	3256–22	Washer – Flat	4
13	69–7040	Holder – Cup	1
14	321–3	Screw – Cap Hex. Hd.	4
15	3253–3	Washer – Lock	4
16	71–2430	Plate – Rear	1
17	71–4130	Support – Control	1
18	3290–378	Tie – Cable	2

Ref. No.	Part No.	Description	No. Used
19	3253–21	Washer – Lock	4
21	3296–2	Nut – Lock	6
22	92–5720	Controller	1
23	32149–7	Nut – Keps	3
24	67–7160	Block – Fuse	4
25	3234–14	Screw – Cap Hex. Hd.	2
26	69–8210	Support – Cover	1
27	32128–20	Nut – Flange Lock	2
32	80–4890	Decal – Service	1
33	218–581	Fuse – 15A	6
34	92–8661	Tab	3
35	3229–8	Bolt – Carriage	3
36	32149–2	Nut – Keps	3
*	88–9420	Wire Harness Assembly (Incl. Ref. #24)	1
*	218–573	Fuse – 5A	1
*	3290–378	Tie – Cable	25

*Not Illustrated

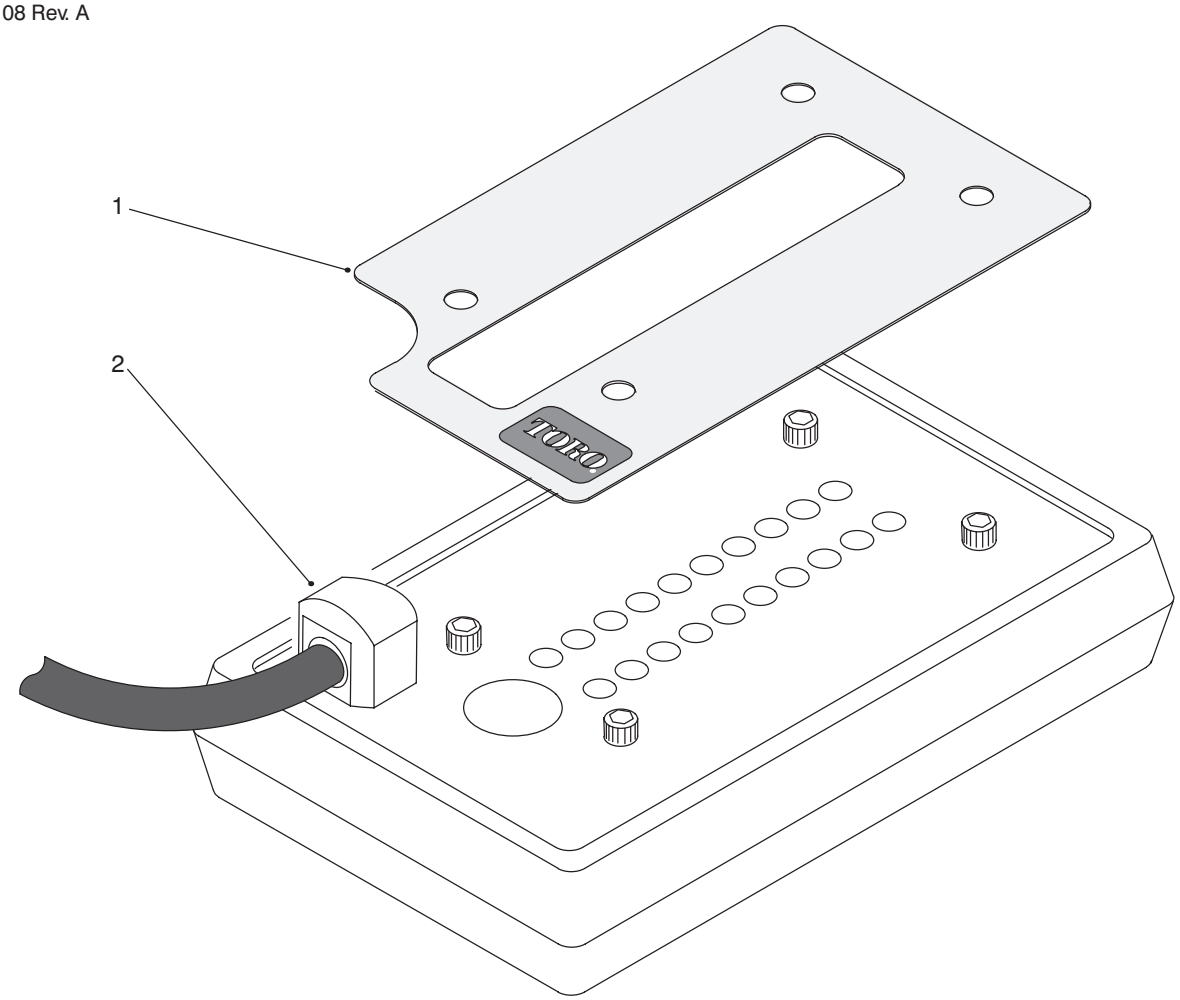


T–1458–1

DIAGNOSTIC DISPLAY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–4087	Decal – Diagnostic V2.0 GM 580D	1

Ref. No.	Part No.	Description	No. Used
2	85–4750	Display – Diagnostic	1

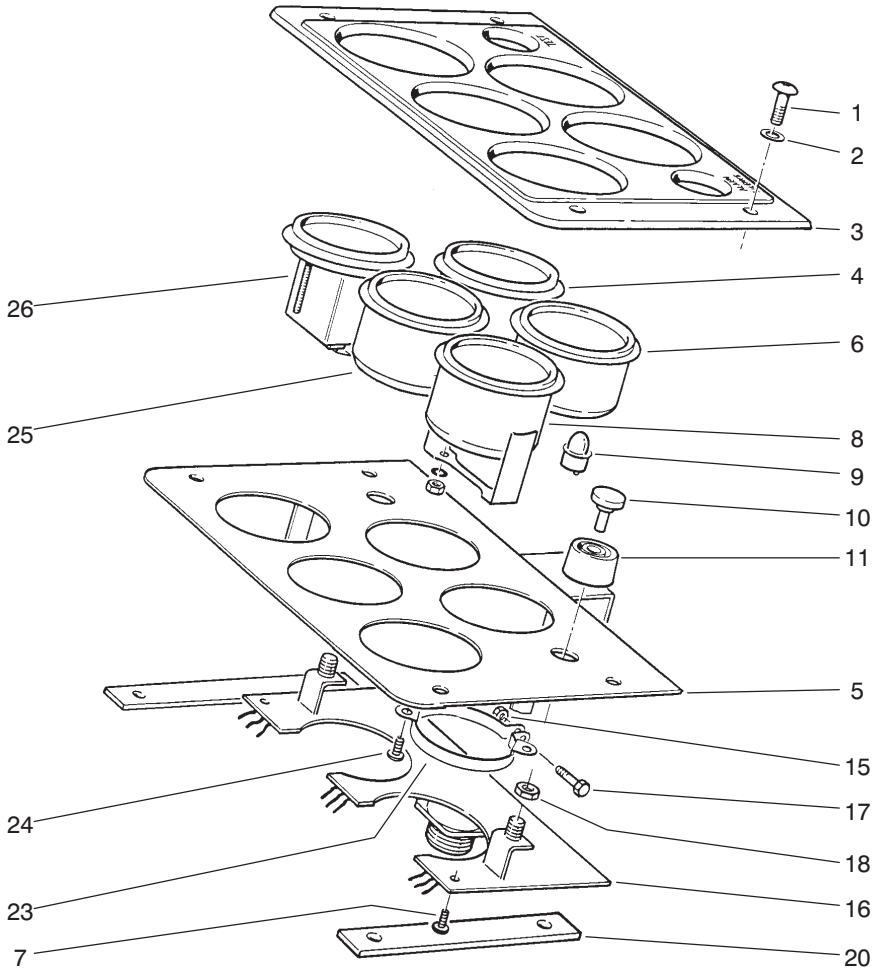


T–1448–1

UPPER CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290–133	Screw – Round Hd.	4
2	3256–23	Washer	4
3	71–4230	Panel	1
4	71–4210	Cluster – Warning Light	1
5	86–7410	Plate – Gage	1
6	71–4200	Cluster – Warning Light	1
7	32104–16	Screw – Tapping	4
8	63–7430	Gauge – Temperature	1
9	219–17	Bulb – Light	8
10	43–6280	Button	2

Ref. No.	Part No.	Description	No. Used
11	43–6420	Bezel	2
15	3296–2	Nut – Lock	2
16	92–1771	Board – Instrument	1
17	32105–1	Screw – Cap Hex. Hd.	2
18	218–498	Nut	2
20	71–4250	Spacer	2
23	69–4780	Clamp – Gauge	2
24	32144–19	Screw – Round Hd.	4
25	66–2940	Gauge – Fuel	1
26	66–2950	Hourmeter	1

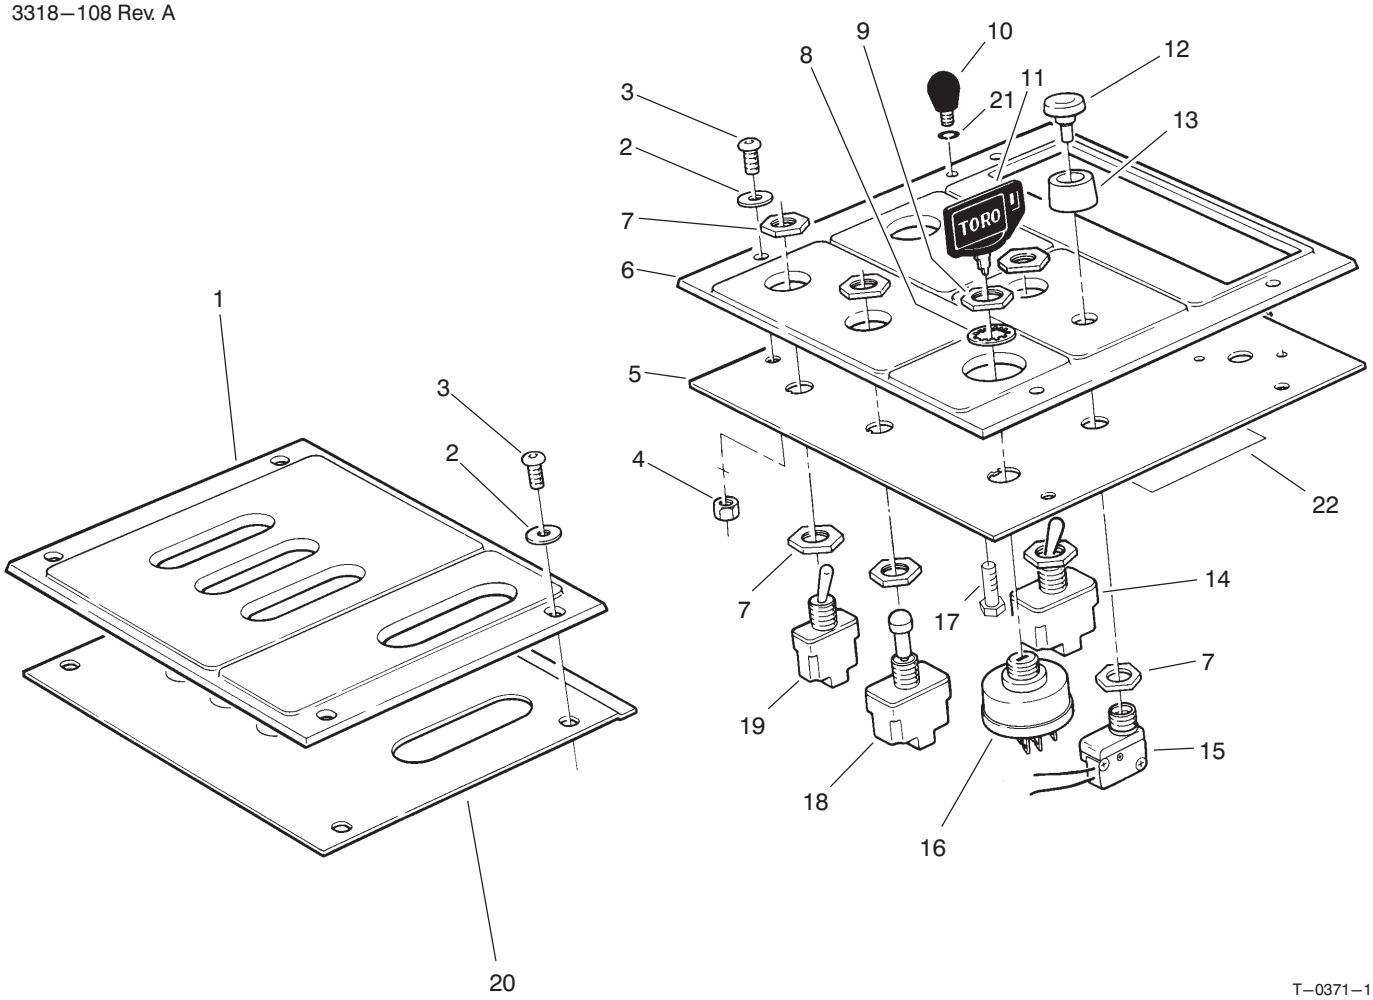


T–0371–1

LOWER CONTROL PANEL ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	69–0980	Panel – Lever	1
2	3256–22	Washer – Flat	8
3	3290–133	Screw – Round Hd.	8
4	3296–42	Nut – Lock	4
5	71–2460	Plate – Control	1
6	69–0990	Panel – Control	1
7	218–498	Nut – Hex	10
8	218–447	Washer – Lock	1
9	218–446	Nut – Hex	1
10	233–66	Knob	1
11	63–8360	Key – Ignition	1
12	43–6280	Button	2
13	43–6420	Bezel	2
14	69–9740	Switch – Toggle (Incl. Ref. #7)	1

Ref. No.	Part No.	Description	No. Used
15	72–9760	Switch (Incl. Ref. #7, 12 & 13)	2
16	27–2360	Switch – Ignition (Incl. Ref. #8 & 9)	1
17	3290–392	Screw – HH	1
18	69–9730	Switch – Toggle (Incl. Ref. #7)	1
19	71–4170	Switch – Toggle (Incl. Ref. #7)	1
20	69–9310	Plate – Lever	1
21	3253–15	Washer – Lock	A/R
22	74–2340	Decal – Fuse	1


ELECTRICAL SCHEMATIC

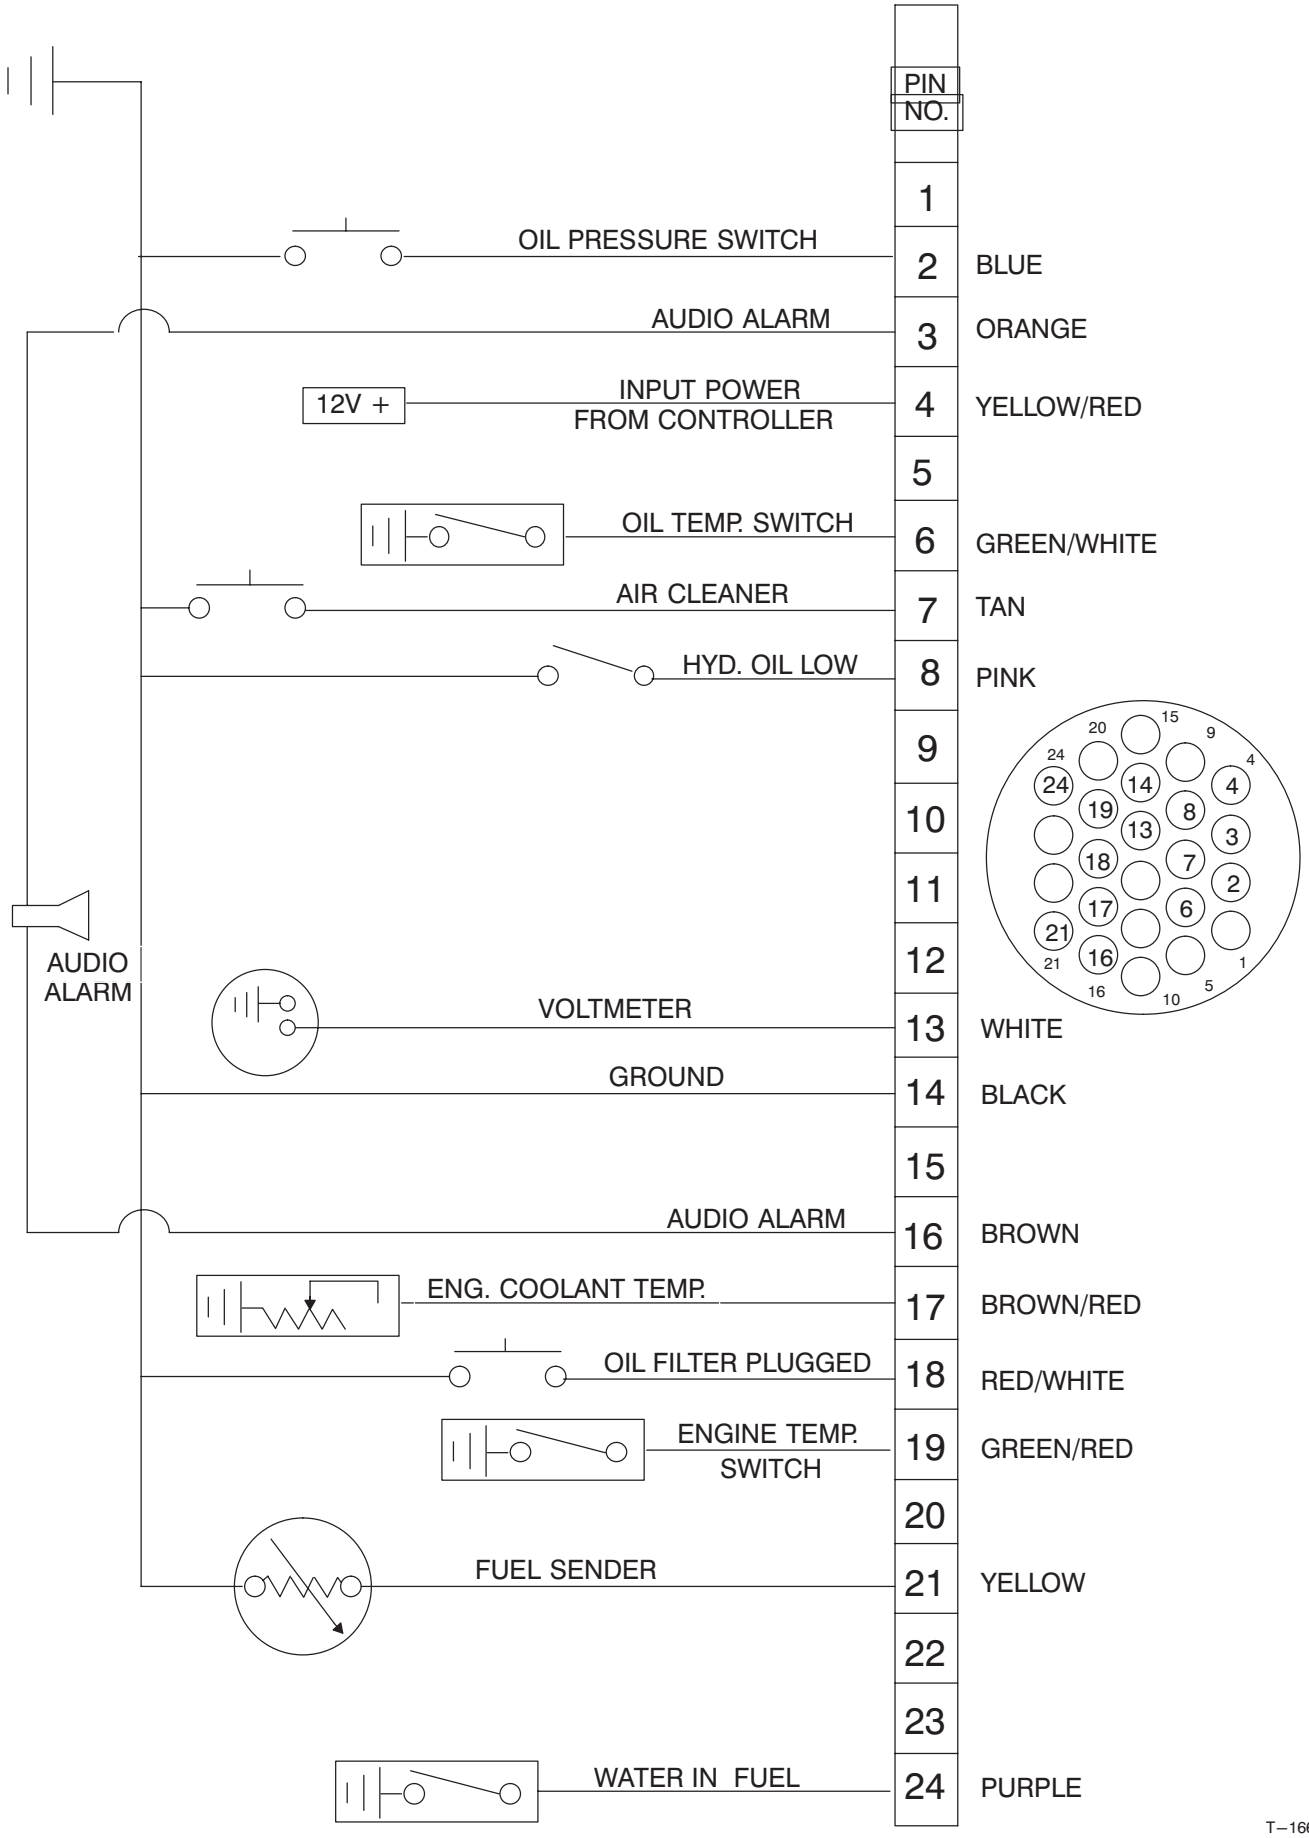


CONTROLLER ELECTRICAL SCHEMATIC

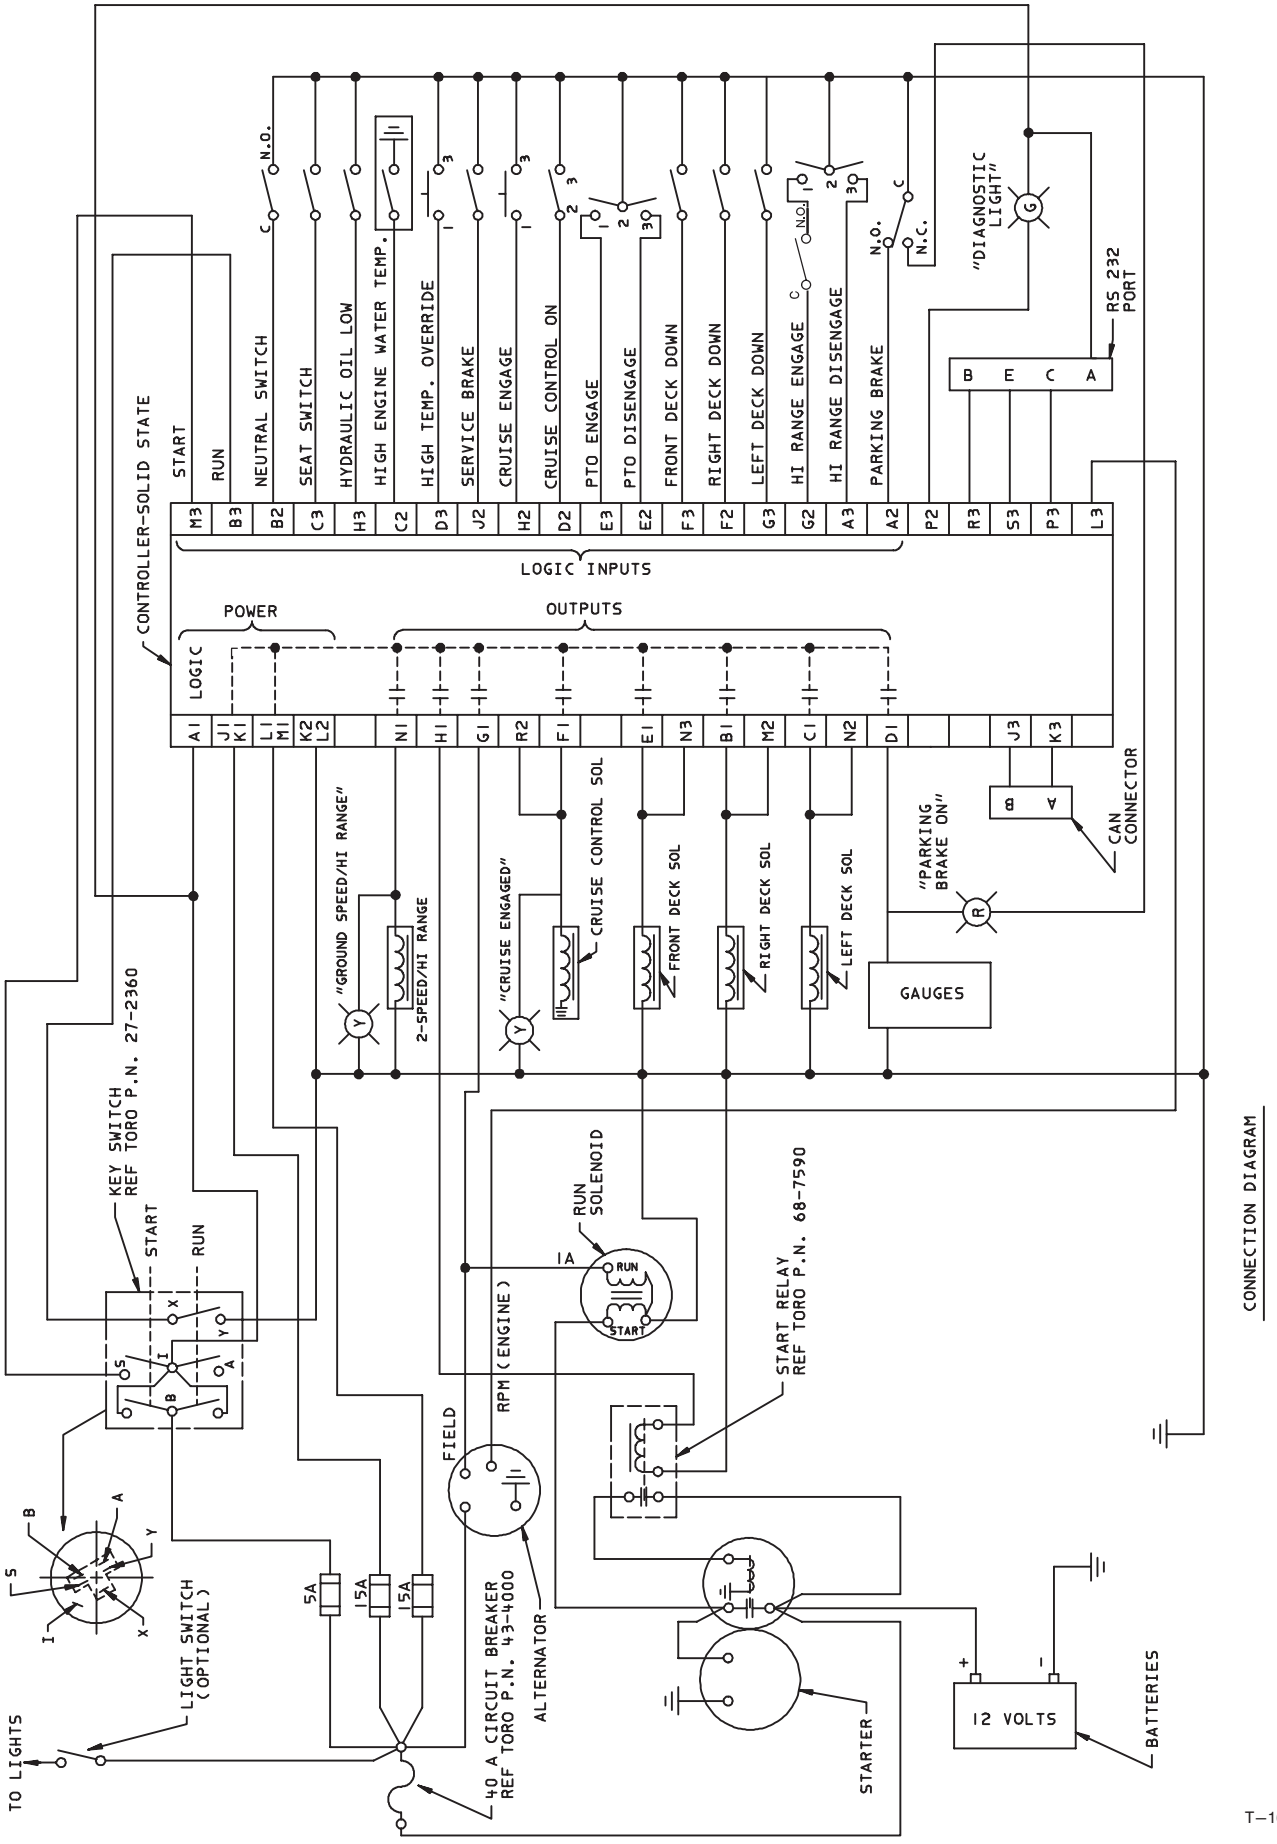

OPERATORS CONTROL PANEL ELECTRICAL SCHEMATIC

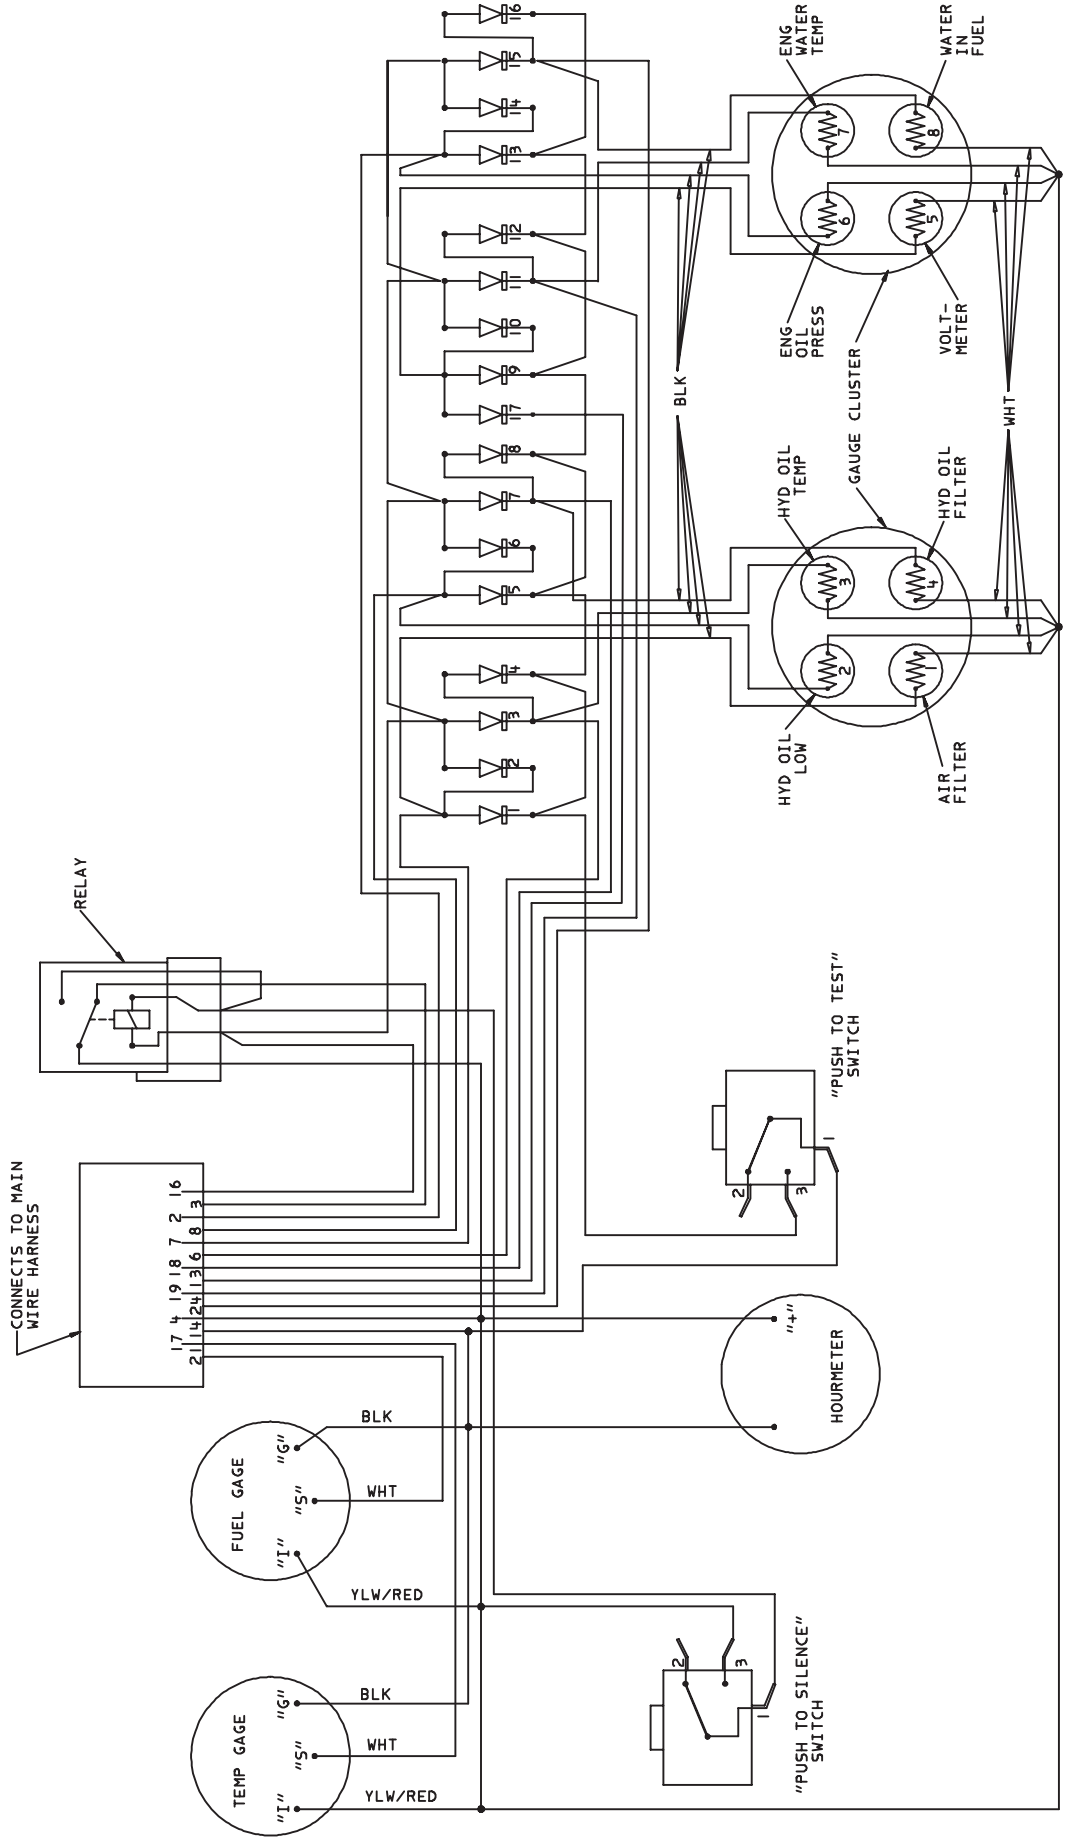

T–1655–1

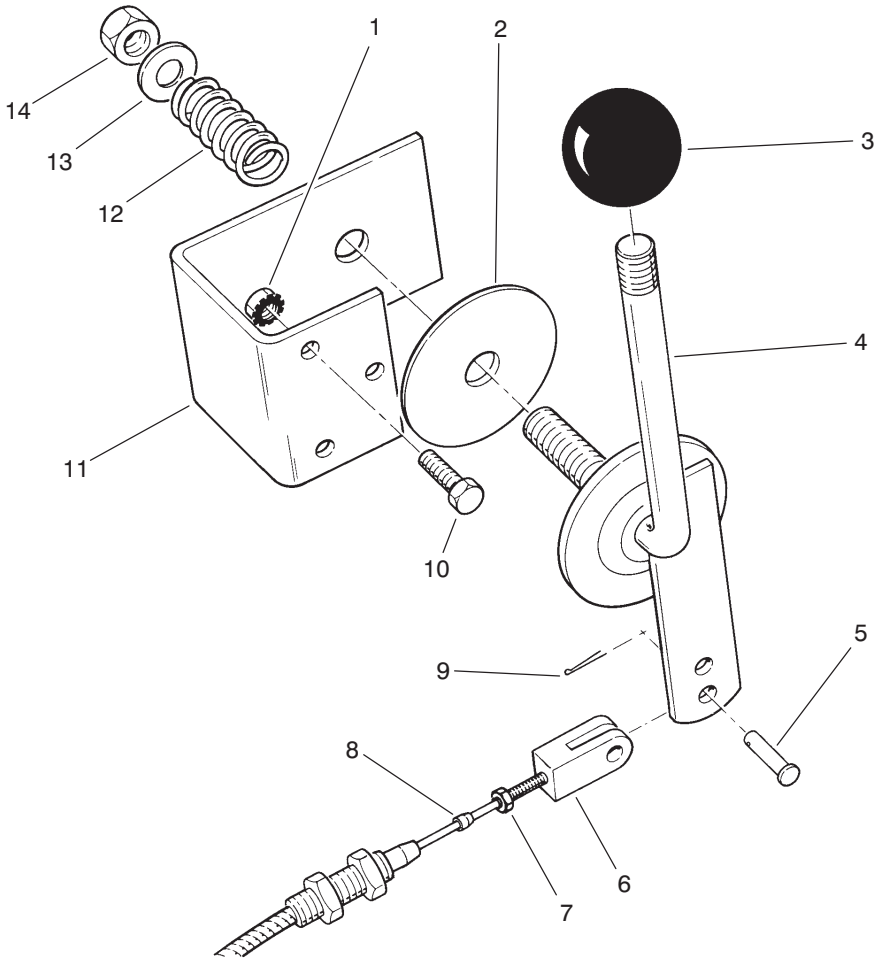


T–0352–1

THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–42	Nut – Keps	3
2	3–2858	Disc – Friction	1
3	233–48	Knob	1
4	69–8040	Arm – Throttle	1
5	283–67	Pin – Clevis Arm End	1
*	69–0090	Pin – Clevis Engine End	1
6	282–28	Clevis – Adjustable	2
7	3219–14	Nut – Hex.	2

Ref. No.	Part No.	Description	No. Used
8	77–2990	Cable – Throttle	1
9	3272–1	Pin – Cotter	3
10	321–3	Screw – Cap Hex. Hd.	3
11	69–9130	Bracket – Throttle	1
12	3–8596	Spring – Compression	1
13	3256–26	Washer – Flat	1
14	3296–23	Nut – Lock	1

*Not Illustrated

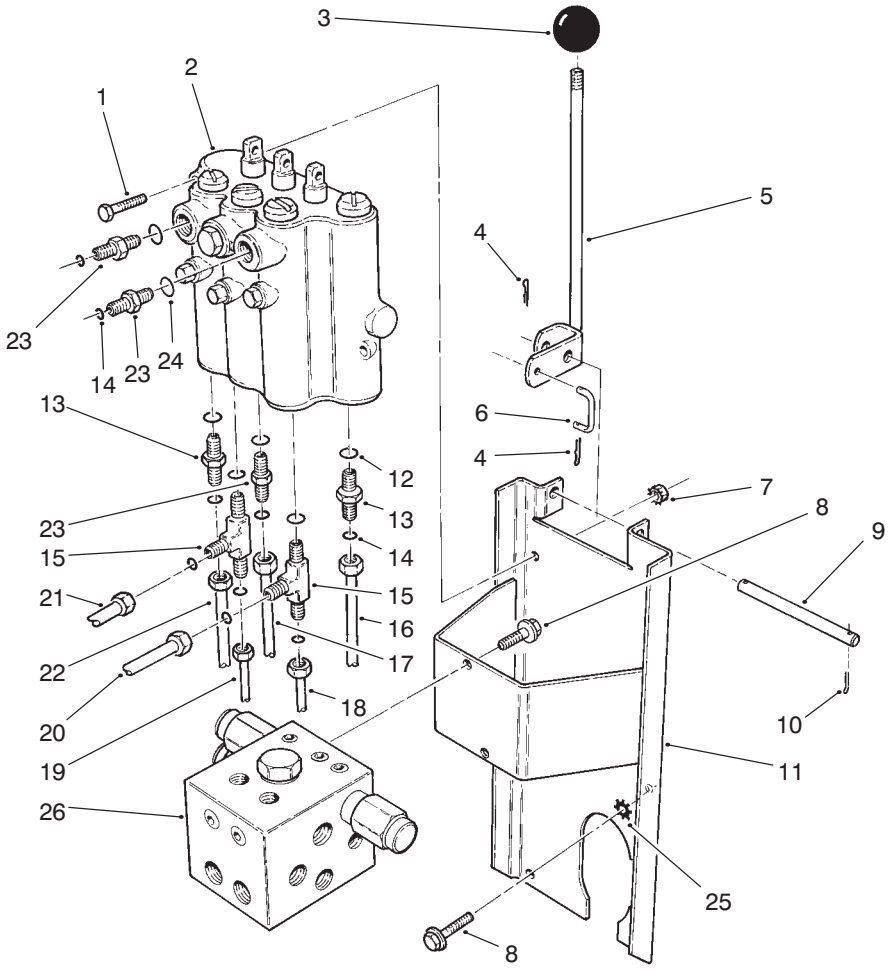


T—0355—1

LIFT VALVE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321—10	Screw — Cap Hex. Hd.	2
2	69—1780	Lift Valve Assembly	1
3	233—42	Knob	3
4	3272—1	Pin — Cotter	6
5	69—7010	Lever — Valve L.H.	1
*	69—6990	Lever — Valve Mid.	1
*	69—7000	Lever — Valve R.H.	1
6	69—9140	Link — Valve Lever	3
7	32149—2	Nut — Keps	2
8	3234—14	Screw — Hex. Flange Hd.	6
9	69—9150	Shaft — Valve Lever	1
10	3272—6	Pin — Cotter	2
11	69—7810	Bracket — Valve	1
12	237—79	Seal — O—Ring	2
13	340—3	Fitting — Hydraulic Straight (Incl. Ref. #12 & 14)	2
14	237—22	Seal — O—Ring	9
15	340—86	Fitting — Hydraulic Tee (Incl. Ref. #14 & 24)	2
16	69—5860	Tube — Hydraulic	1
17	69—5720	Tube — Hydraulic	1
18	69—5700	Tube — Hydraulic	1
19	69—5740	Tube — Hydraulic	1
20	69—5680	Tube — Hydraulic	1
21	69—5890	Tube — Hydraulic	1
22	69—5870	Tube — Hydraulic	1
23	340—2	Fitting — Hydraulic Straight (Incl. Ref. #14 & 24)	3
24	237—42	Seal — O—Ring	5
25	3254—6	Washer — Lock	1
26	69—4060	Counterbalance Manifold Assembly	1

*Not Illustrated

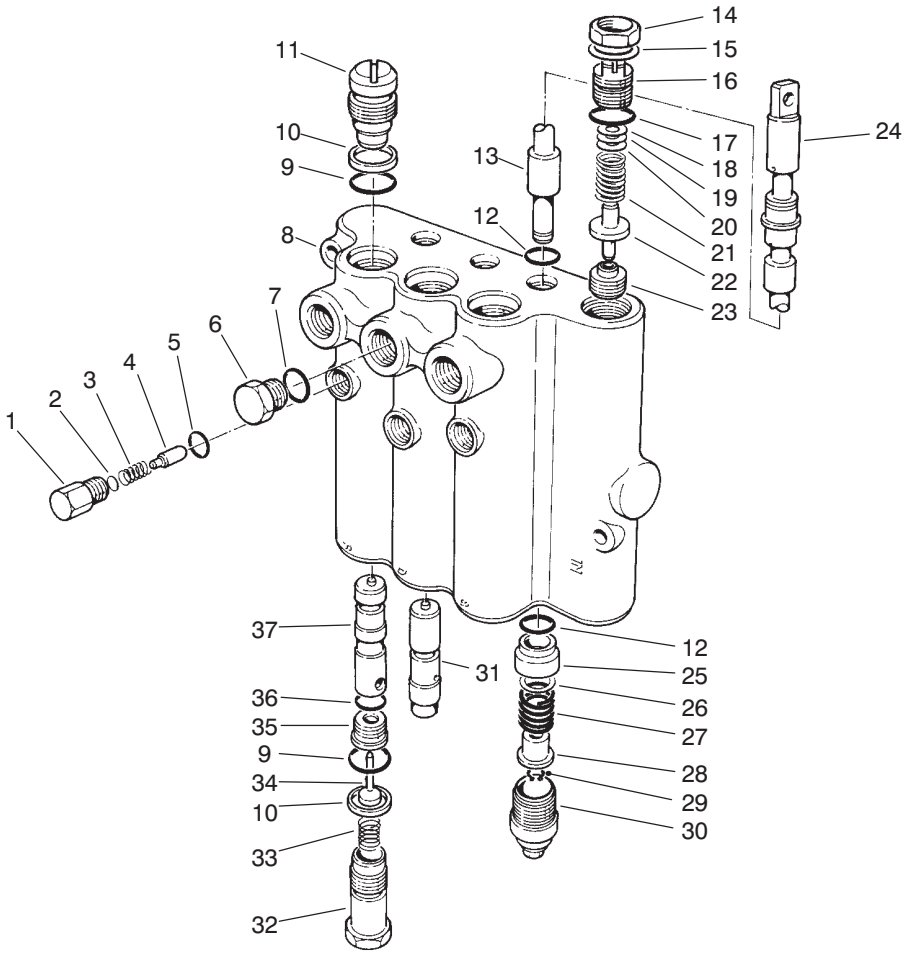


T–0379–1

LIFT VALVE ASSEMBLY NO. 69–1780

Ref. No.	Part No.	Description	No. Used
1	58–6780	Plug Assy. (Incl. Ref. #5)	3
2	60–6450	Disc	A/R
3	58–6760	Spring	3
4	58–6770	Plunger – Detent	3
5	58–6790	Seal – O–Ring	3
6	58–6710	Plug Assy. (Incl. Ref. #7)	1
7	58–6720	Seal – O–Ring	1
†8		Body	1
9	60–5720	Seal – O–Ring	6
10	58–6370	Washer – Back–Up	6
11	58–6350	Plug Assembly (Incl. Ref. #9–10)	3
12	58–6450	Seal – O–Ring	6
†13		Spool	3
14		Nut – Lock	1
15		Washer	1
16	69–1830	Plug Assembly (Incl. Ref. #14, 15 & 17)	1
17	58–6750	Seal – O–Ring	1
18	58–6470	Washer	A/R
19	58–6480	Washer	A/R
20	58–6490	Washer	A/R

Ref. No.	Part No.	Description	No. Used
21	69–1820	Spring – Black	1
22	58–6440	Poppet	1
†23		Seat	1
24	58–6320	Wiper – Seal	3
25	58–6400	Bushing	3
26	58–6700	Washer	3
27	58–6730	Spring	3
28	58–6310	Spacer	3
29	58–6460	Ring – Retaining	3
30	58–6420	Cap Assembly	3
31	69–1840	Plunger	1
32	69–1800	Plug Assembly (Incl. Ref. #9–10)	3
33	69–1810	Spring	3
34	58–6290	Poppet Assembly	3
35	58–6330	Seat Assy. (Incl. Ref. #36)	3
36	58–6340	Seal – O–Ring	3
37	69–1790	Plunger	2
*	60–3780	Seal Kit (Incl. Ref. #5, 7, 9, 10, 12, 17, 24, 29, 34, & 36)	


*Not Illustrated
†Not Serviceable Separately

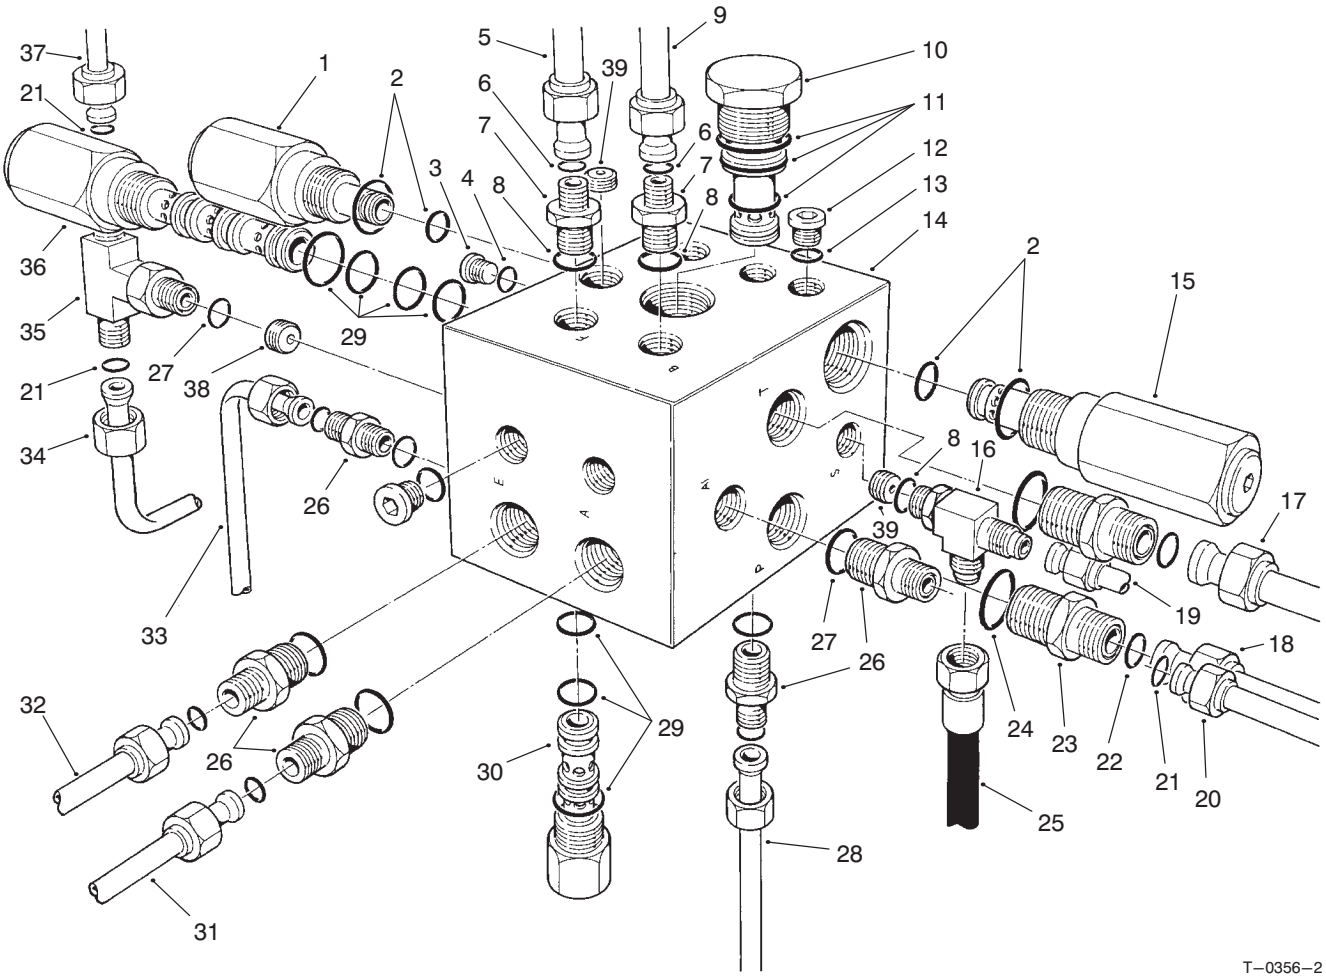

COUNTERBALANCE MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–4080	Valve – Hydraulic Cartridge (Incl. Ref. #2)	1
2	75–2080	Kit – Seal	2
3	353–990	Plug – Hose (Incl. Ref. #4)	2
4	237–78	Seal – O–Ring	2
5	69–5890	Tube – Hydraulic	1
6	237–21	Seal – O–Ring	2
7	340–92	Fitting – Hydraulic Straight (Incl. Ref. #6 & 8)	2
8	237–78	Seal – O–Ring	3
9	69–5680	Tube – Hydraulic	1
10	69–4120	Valve – Hydraulic Cartridge (Incl. Ref. #11)	1
11	69–4240	Kit – Seal	1
12	353–991	Plug – Hole (Incl. Ref. #13)	8
13	237–156	Seal – O–Ring	8
14	69–4070	Manifold – Counter Balance	1
15	69–4100	Valve – Hydraulic Cartridge (Incl. Ref. #2)	1
16	353–566	Tee – Hydraulic (Incl. Ref. #8)	1
17	92–4967	Tube – Hydraulic	1
18	69–5850	Tube – Hydraulic	1
19	69–5910	Tube – Hydraulic	1
20	69–5710	Tube – Hydraulic	1
21	237–22	Seal – O–Ring	7
22	237–30	Seal – O–Ring	2
23	340–4	Fitting – Hydraulic Straight (Incl. Ref. #22 & 24)	2
24	237–79	Seal – O–Ring	2
25	93–7192	Hose – Hydraulic Diagnostic	1
26	340–2	Fitting – Hydraulic Straight (Incl. Ref. #21 & 27)	5
27	237–42	Seal – O–Ring	6
28	69–5870	Tube – Hydraulic	1
29	69–4250	Kit – Seal	3
30	69–4110	Valve – Hydraulic Cartridge (Incl. Ref. #29)	2
31	69–5820	Tube – Hydraulic	1
32	69–5830	Tube – Hydraulic	1
33	69–5730	Tube – Hydraulic	1
34	69–5860	Tube – Hydraulic	1
35	340–94	Tee – Hydraulic (Incl. Ref. #21 & 27)	1
36	69–4090	Valve – Hydraulic Cartridge (Incl. Ref. #29)	1
37	69–5920	Tube – Hydraulic	1
*	69–4060	Counterbalance Manifold (Incl. Ref. #1–4, 10–15, 29, 30 & 36)	1
38	69–4140	Plug – Orifice .120	1
39	69–4130	Plug – Orifice .047	2

*Not Illustrated

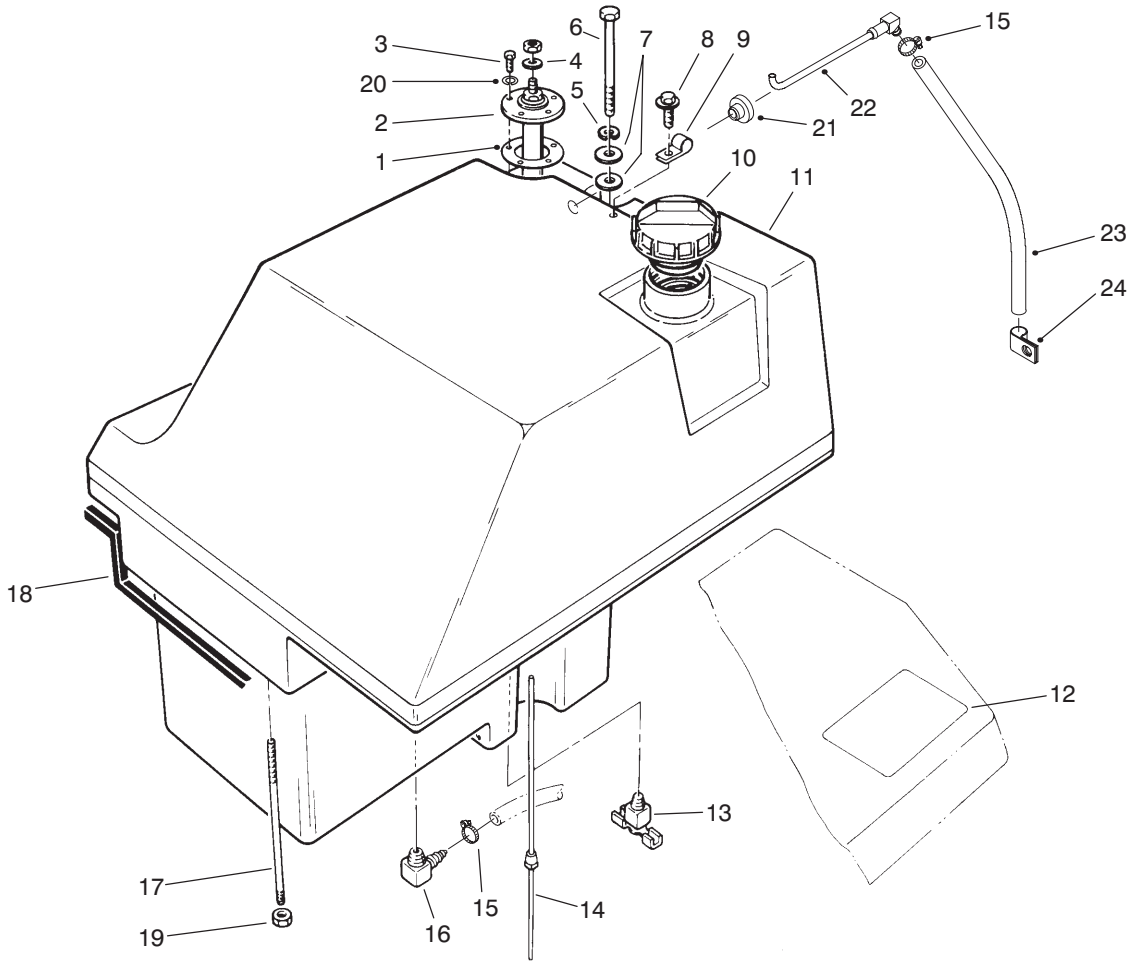


T−0353−2

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62−7650	Gasket − Level Sensing Unit	1
2	70−6990	Level Sensing Unit Assembly	1
3	32122−24	Screw − Cap Hex. Hd.	5
4	5−3637	Spacer − Terminal	1
5	3253−21	Washer − Lock	2
6	323−21	Screw − Cap Hex. Hd.	1
7	3256−5	Washer − Flat	2
8	3234−13	Screw − Hex. Washer Hd.	1
9	2412−89	Clamp − R	1
10	93−3102	Cap − Fuel	1
11	80−0010	Tank − Fuel (Serial No. 60001−60191)	1
*	94−2865	Tank − Fuel (Serial No. 60192 & Up)	1
12	69−0930	Decal − Warning	1
13	304−46	Drain − Fuel Tank	1

Ref. No.	Part No.	Description	No. Used
14	69−7200	Tube − Vent (Serial No. 60001−60191)	1
15	2412−108	Clamp − Hose	2
16	353−536	Fitting − Fuel 90° Elbow	1
17	72−9550	Stud − Fuel Tank	1
18	68−7572	Strip − Sealing	1
19	3217−7	Nut − Hex.	1
20	3253−15	Washer − Lock	5
21	46−6560	Bushing (Serial No. 60192 & Up)	1
22	94−3310	Tube − Vent (Serial No. 60192 & Up)	1
23	94−3311	Hose − Fuel (Serial No. 60192 & Up)	1
24	2412−138	Clamp − R (Serial No. 60192 & Up)	1

* Not Illustrated.

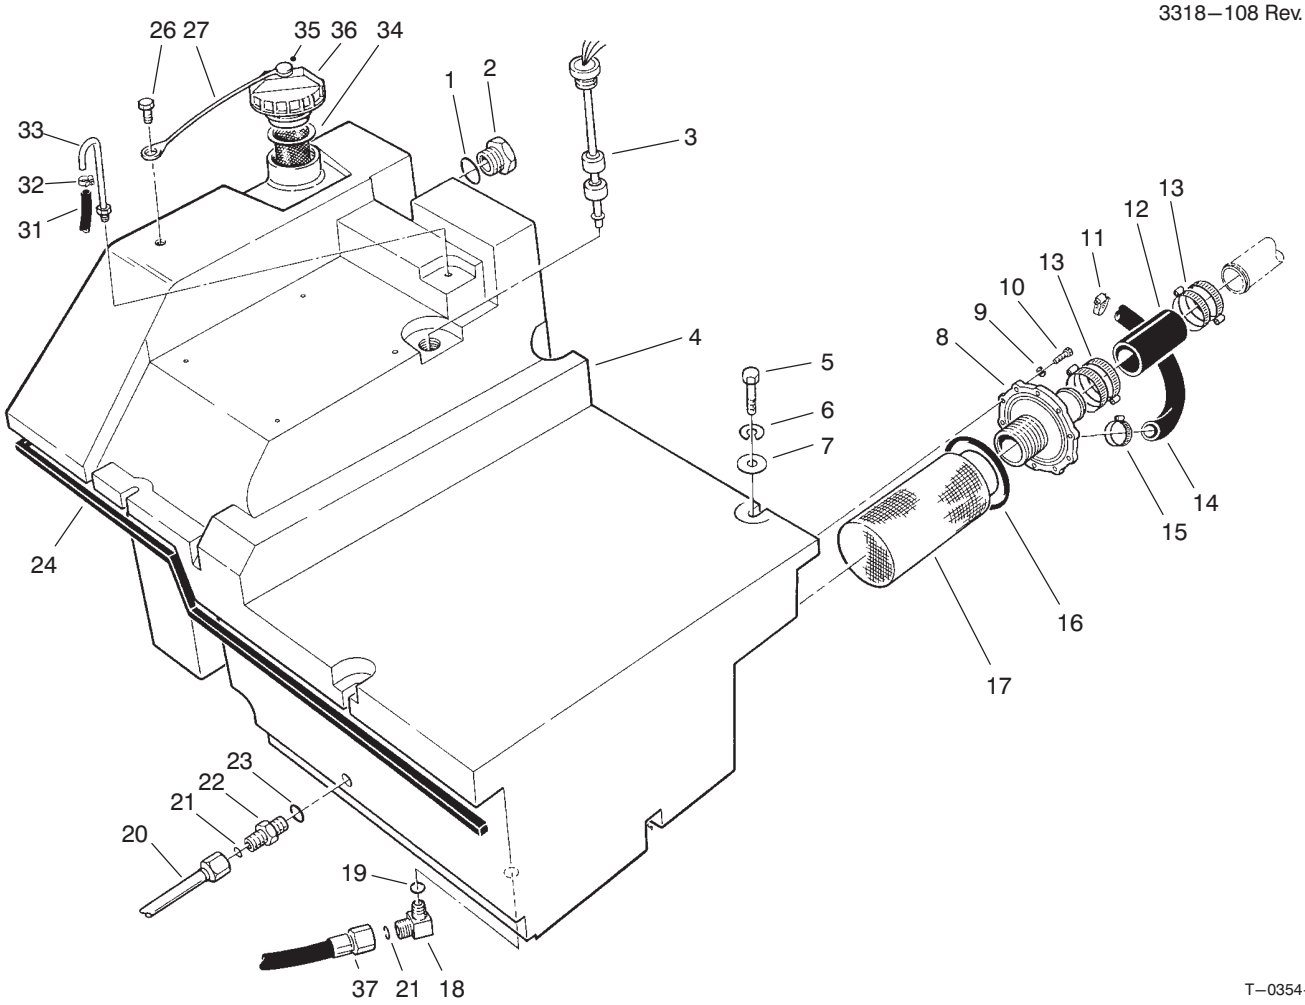


T–0354–2

HYDRAULIC TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237–81	Seal – O–Ring	1
2	69–1170	Gauge – Sight (Incl. Ref. #1)	1
3	85–6260	Level Sensing Unit	1
4	94–1893	Tank – Hydraulic	1
5	323–10	Screw – Cap Hex. Hd.	4
6	3253–21	Washer – Lock	4
7	5–3177	Washer – Flat	4
8	69–1610	Adapter – Suction Hose	1
9	3253–3	Washer – Lock	10
10	321–5	Screw – Cap Hex. Hd.	10
11	2412–34	Clamp – Hose	1
12	69–5640	Hose – Suction	1
13	2412–42	Clamp – Hose	4
14	94–1892	Hose – Auxiliary Suction	1
15	2412–3	Clamp – Hose	1
16	237–157	Seal – O–Ring	1
17	69–1650	Screen – Suction	1

Ref. No.	Part No.	Description	No. Used
18	340–130	Fitting – Hydraulic 90° (Incl. Ref. #19 & 21)	1
19	237–80	Seal – O–Ring	3
20	69–5800	Tube – Hydraulic	1
21	237–22	Seal – O–Ring	2
22	340–3	Fitting – Hydraulic Straight (Incl. Ref. #21 & 23)	1
23	237–79	Seal – O–Ring	1
24	68–7571	Strip – Sealing	1
26	321–2	Screw – Cap, Hex. Hd.	1
27	75–0540	Tether – Cap, Reservoir	1
31	71–2680	Hose – Vent	1
32	2412–108	Clamp – Hose	1
33	69–4280	Tube – Hydraulic Vent	1
34	61–2790	Filler – Screen	1
35	2410–73	Pin – Tether	1
36	93–3103	Cap – Hydraulic (Incl. Ref. #27 & 35)	1
37	92–4970	Hose – Hydraulic	1

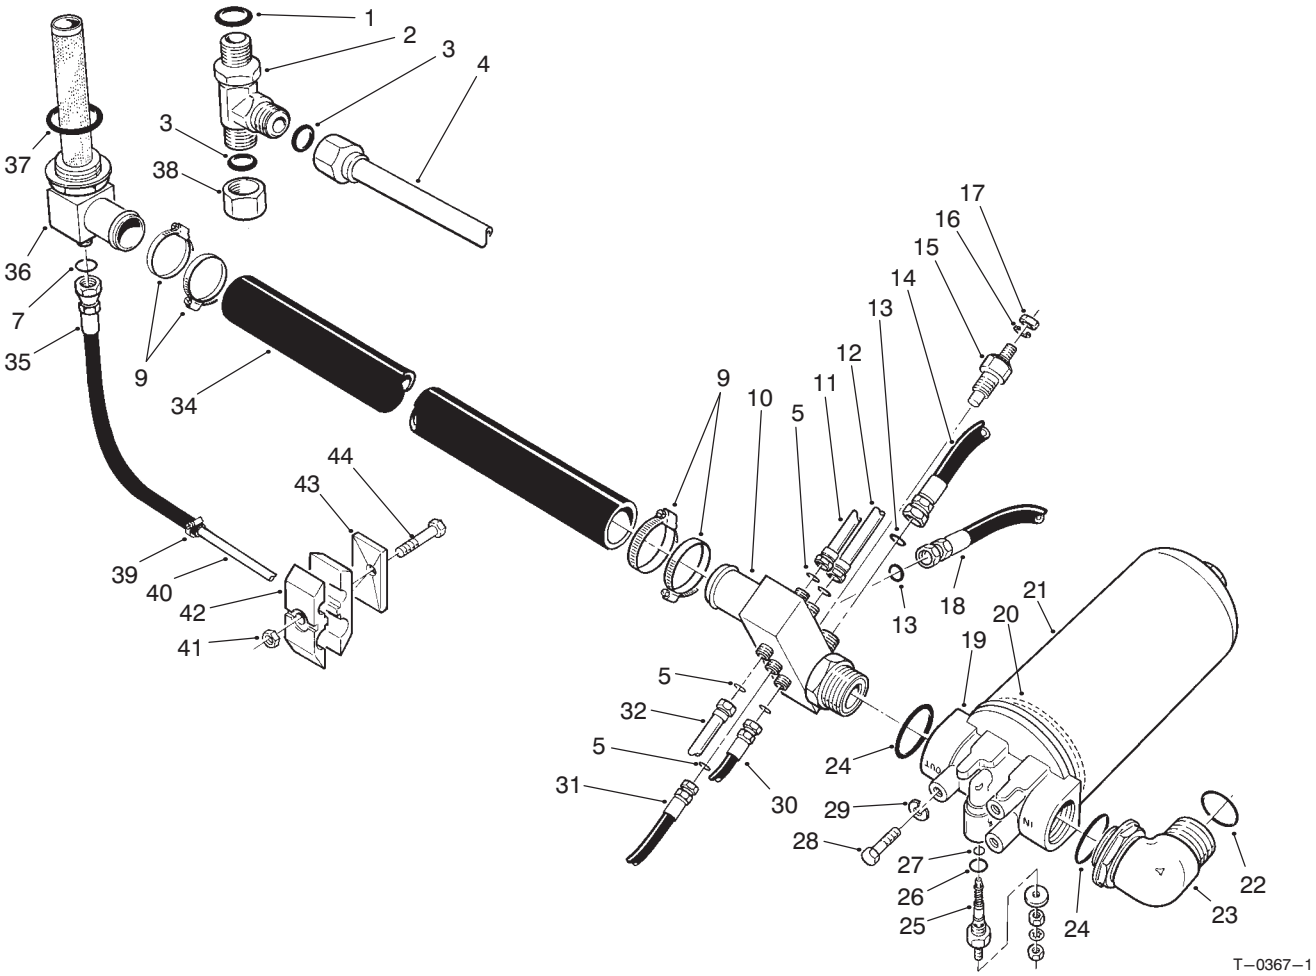


HYDRAULIC FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237–80	Seal – O–Ring	1
2	340–22	Fitting – Hydraulic Tee (Incl. Ref. #1 & 3)	1
3	237–65	Seal – O–Ring	2
4	92–4807	Tube – Hydraulic	1
5	237–22	Seal – O–Ring	3
7	237–58	Seal – O–Ring	1
9	2412–92	Clamp – Hose	4
10	69–5410	Manifold – Return (Incl. Ref. #5, 13 & 24)	1
11	69–6000	Tube – Hydraulic (Incl. Ref. #5)	1
12	69–5990	Tube – Hydraulic (Incl. Ref. #5)	1
13	237–30	Seal – O–Ring	2
14	69–5460	Hose – Hydraulic	1
15	39–7593	Temperature Sending Unit	1
16	3253–2	Washer – Lock	1
17	3219–14	Nut – Hex.	1
18	69–5650	Hose – Hydraulic	1
19	69–1700	Hydraulic Filter Assembly (Incl. Ref. #20, 21 & 25–27)	1
20	237–155	Seal – O–Ring	1
21	69–1720	Element – Filter (Incl. Ref. #20)	1

Ref. No.	Part No.	Description	No. Used
22	340–65	Seal – O–Ring	1
23	340–79	Fitting – Hydraulic 90˚ (Incl. Ref. #22 & 24)	1
24	237–101	Seal – O–Ring	2
25	69–1710	Indicator – Filter (Incl. Ref. # 26 & 27)	1
†26		Seal – O–Ring	1
†27		Seal – O–Ring	1
28	323–4	Screw – Cap Hex. Hd.	3
29	3253–21	Washer – Lock	3
30	69–5440	Hose – Hydraulic	1
31	69–8440	Hose – Hydraulic	1
32	69–5950	Tube – Hydraulic	1
34	74–2660	Hose – Hydraulic Return	1
35	92–2352	Hose – Hydraulic	1
36	92–2351	Fitting – Tank Return (Incl. Ref. #7 & 37)	1
37	340–136	Seal – O–Ring	1
38	340–150	Cap – Hydraulic	1
39	2412–129	Clamp – Hose	1
40	92–1742	Tube – Hydraulic	1
41	32152–1	Nut – Lock	3
42	56–7978	Clamp Half – Hydraulic Line	6
43	69–9761	Plate – Cover	3
44	322–12	Screw – Cap Hex. Hd.	3

†Not serviceable separately.

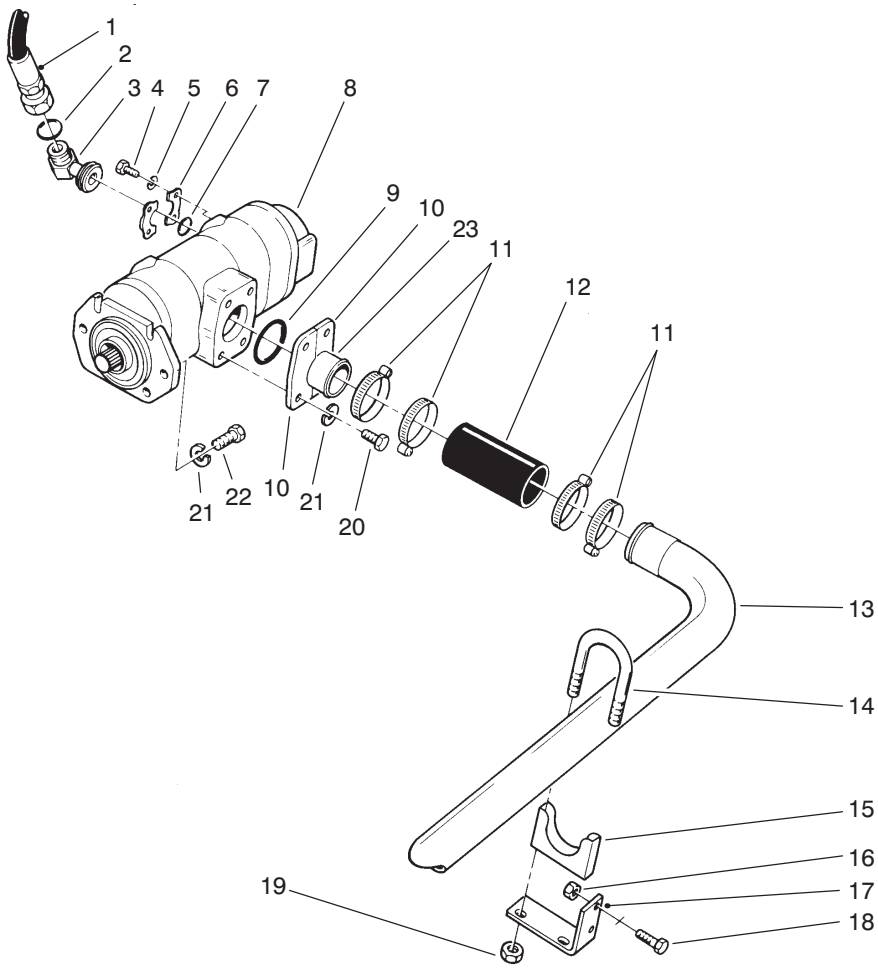


T–0349–1

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–5590	Hydraulic Hose Assembly	2
2	237–58	Seal – O–Ring	2
3	69–6240	Fitting – Hydraulic 90° (Incl. Ref # 2 & 7)	2
4	323–7	Screw – Cap Hex. Hd.	8
5	3253–21	Washer – Lock	8
6	353–992	Flange – Fitting	4
7	340–135	Seal – O–Ring	2
8	69–2050	Hydraulic Pump Assembly	1
9	237–116	Seal – O–Ring	1
10	354–42	Flange – Half	2
11	2412–42	Clamp – Hose	4
12	69–5640	Hose – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
13	94–1891	Hydraulic Tube Assembly	1
†14		Bolt – U	2
15	20–4840	Clamp – Tube (Incl. Ref. #14 & 19)	2
16	32152–2	Nut – Lock	4
17	69–9220	Support – Tube Clamp	2
18	323–6	Screw – Cap Hex. Hd.	4
19	32128–25	Nut – Lock	4
20	325–6	Screw – Cap Hex. Hd.	4
21	3253–7	Washer – Lock	8
22	3213–2	Screw – Cap Hex. Hd.	4
23	74–2270	Fitting – Suction	1

†Not serviceable separately.

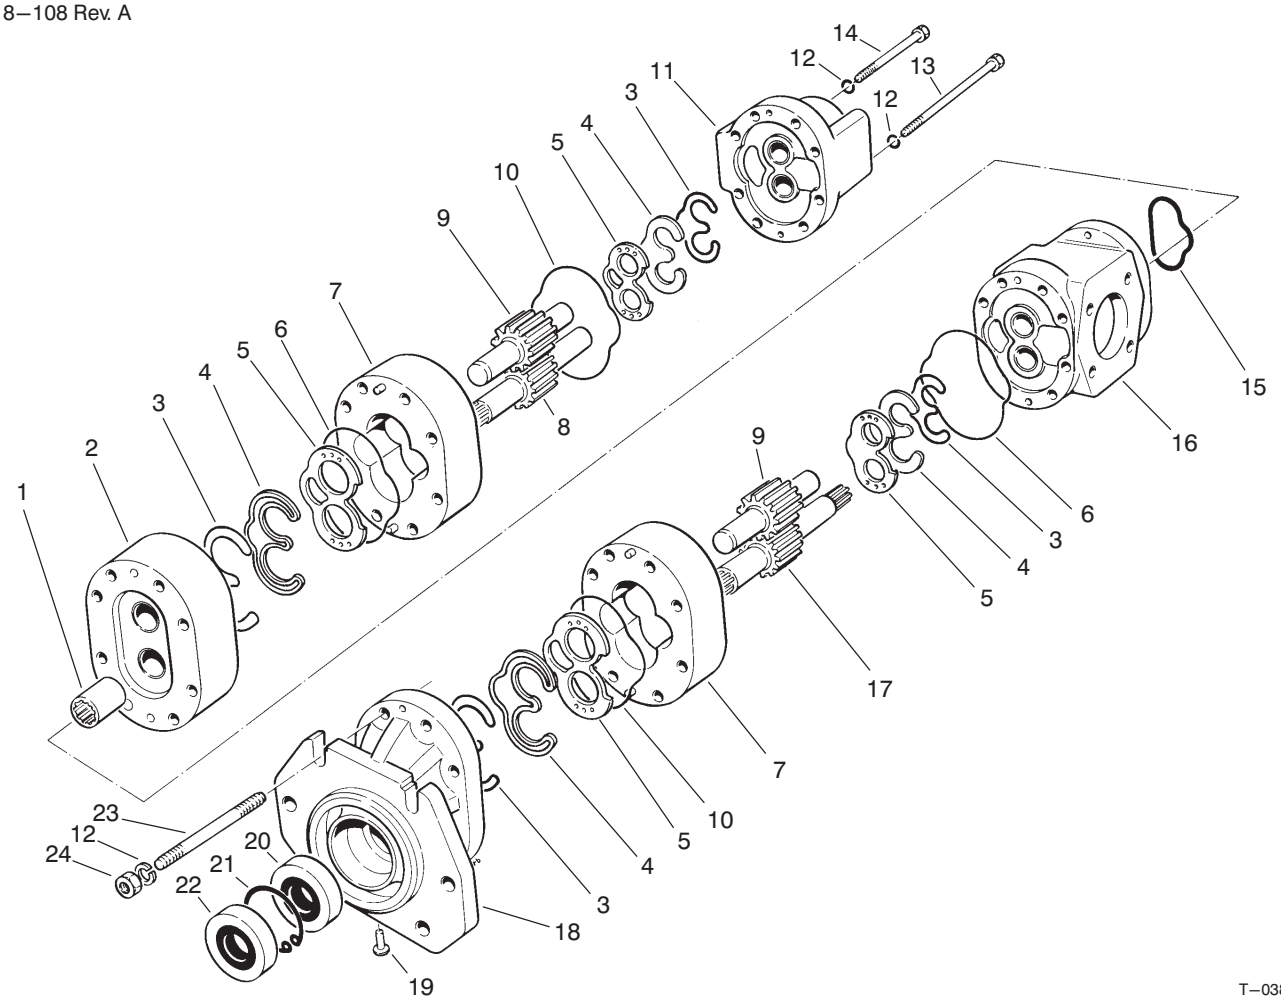


T–0382–1

DOUBLE GEAR PUMP NO. 69–2050

Ref. No.	Part No.	Description	No. Used
1	69–2110	Coupling	1
2	69–2170	Adapter Section Assembly	1
3	59–7990	Seal – Gland	4
4	59–8470	Retainer – Seal	4
5	69–2070	Plate – Flex	4
6	69–2200	Seal – O–Ring	2
7	69–2080	Center Section Assembly	2
8	69–2090	Gear/Shaft – Rear Drive	1
9	59–8600	Gear – Driven	2
10	69–2120	Seal – O–Ring	2
11	69–2100	Rear Cover Assembly	1
12	59–7590	Washer – Lock	16
13	69–2150	Screw – Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
14	69–2140	Screw – Cap Hex. Hd.	4
15	69–2210	Seal – O–Ring	1
16	69–2160	Port Section Assembly	1
17	59–8500	Gear/Shaft – Front Drive	1
18	69–2060	Shaft End Cover Assembly	1
19	69–2130	Plug	1
20	59–8590	Seal – Shaft	1
21	59–8580	Ring – Retaining	1
22	59–8570	Seal – Shaft	1
23	59–7970	Stud – Threaded	8
24	59–7580	Nut – Hex.	8
*	59–8610	Repair Kit (Incl. Ref. #3, 4, 20 & 22)	1

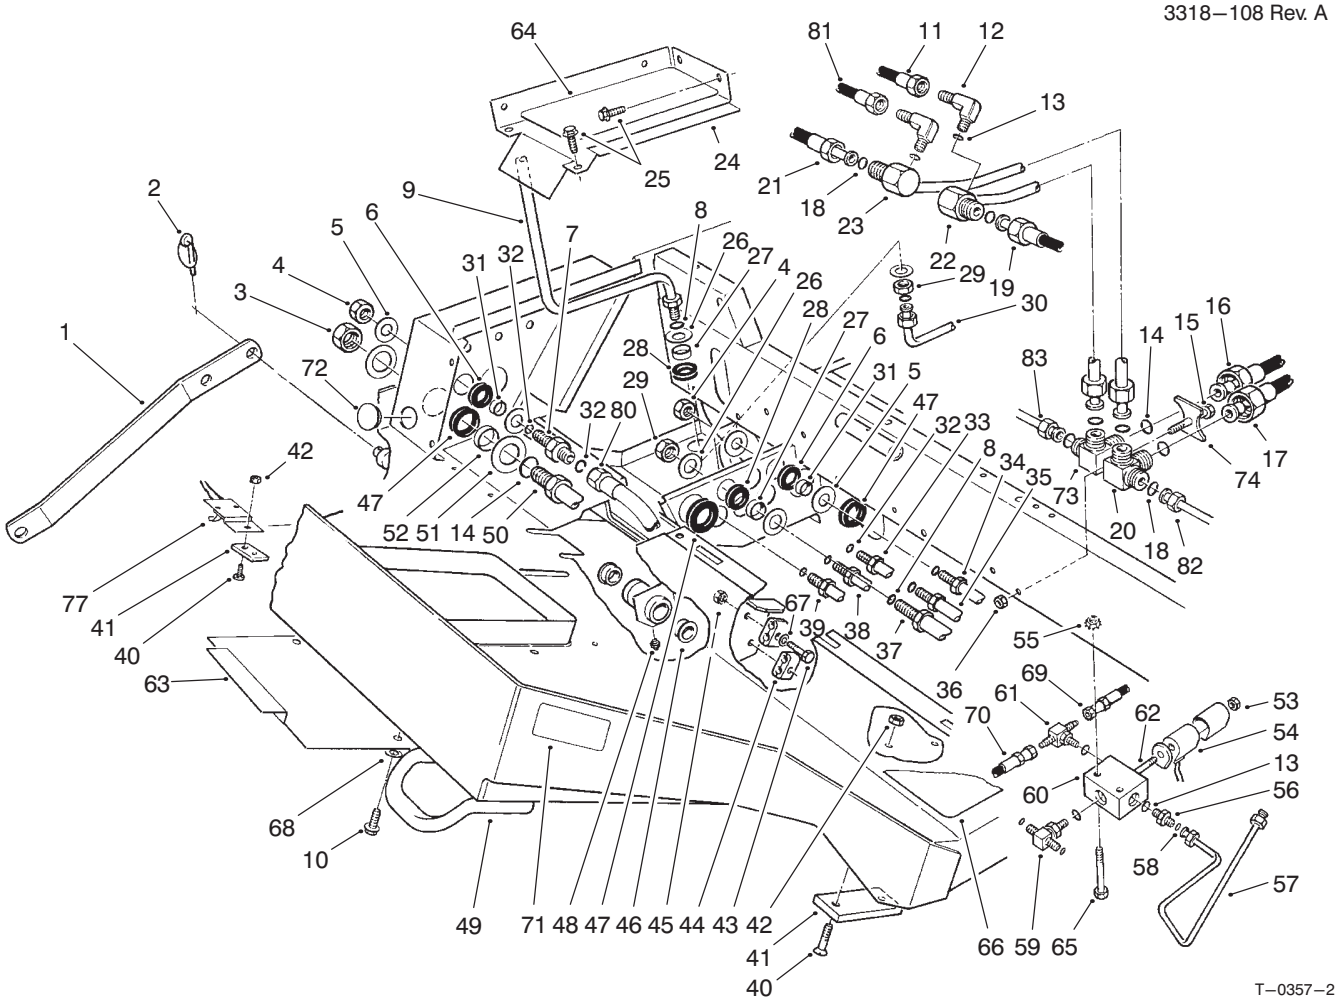


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	85–6190	Link – Deck Tilt	1
2	3290–495	Pin – Lynch	2
3	340–126	Nut – Bulkhead	2
4	340–70	Nut – Bulkhead	6
5	69–8940	Washer	12
6	240–4	Grommet	6
7	340–71	Fitting – Hydraulic Bulkhead (Incl. Ref. #32)	1
8	237–30	Seal – O–Ring	3
9	92–4967	Tube – Hydraulic (Incl. Ref. #8)	1
10	3234–28	Screw – Hex. Flange Hd.	2
11	93–7422	Hose – Hydraulic	1
12	353–375	Fitting – Hydraulic 90˚ (Incl. Ref. #13)	2
13	237–78	Seal – O– Ring	5
14	237–58	Seal – O– Ring	4
15	3274–86	Screw – Cap Socket Hd.	1
16	69–5470	Hose – Hydraulic	1
17	69–5480	Hose – Hydraulic	1
18	237–65	Seal – O–Ring	6
19	93–7177	Assy. – Tube, Traction L.H.	1
20	83–8350	Fitting – Traction, L.H. (Incl. Ref. #14 & 18)	1
21	93–7178	Assy. – Tube, Traction R.H.	1

Ref. No.	Part No.	Description	No. Used
22	69–6200	Tube – Hydraulic (Incl. Ref. #18)	1
23	69–6190	Tube – Hydraulic (Incl. Ref. #18	1
24	71–2450	Cover – Access	1
25	3234–14	Screw – Hex. Flange Hd.	4
26	69–8930	Washer	4
27	69–8960	Spacer	2
28	240–5	Grommet	2
29	340–127	Nut – Bulkhead	2
30	85–6150	Tube – Hydraulic	1
31	69–8970	Spacer	6
32	237–22	Seal – O–Ring	7
33	69–6050	Tube – Hydraulic (Incl. Ref. #32)	1
34	69–6040	Tube – Hydraulic (Incl. Ref. #32)	1
35	69–6030	Tube – Hydraulic (Incl. Ref. #32)	1
36	32152–1	Nut – Lock	1
37	69–5790	Tube – Hydraulic (Incl. Ref. #8)	1
38	69–6060	Tube – Hydraulic (Incl. Ref. #32)	1
39	93–7426	Tube – Hydraulic (Incl. Ref. #32)	1

*Not Illustrated

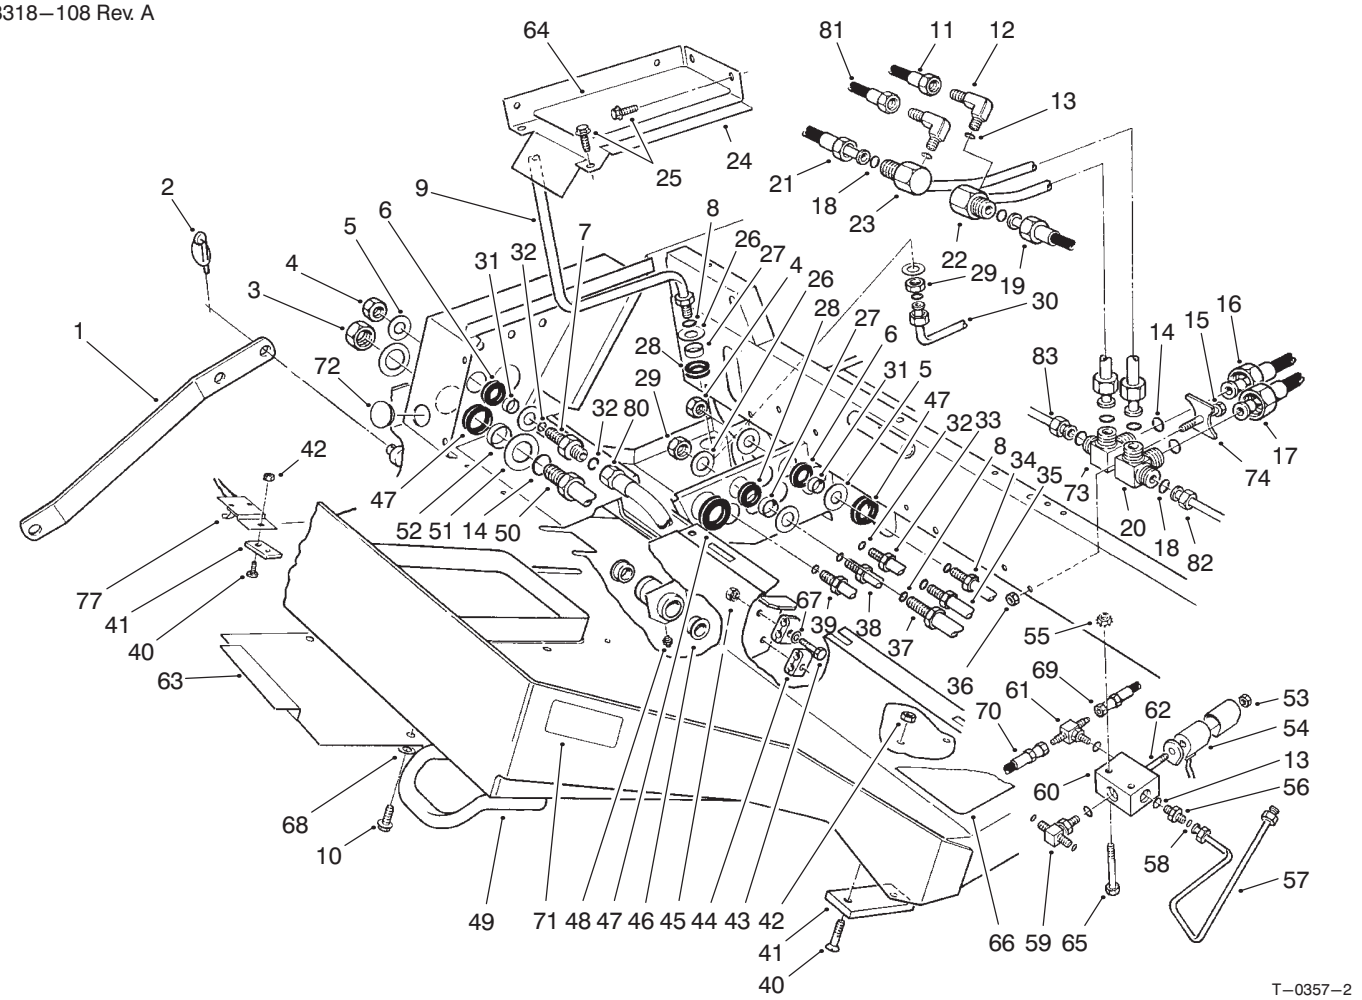


FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
40	32108–103	Screw – Machine Flat Hd.	4
41	69–9300	Cushion – Rubber	2
42	32152–1	Nut – Lock	4
43	321–9	Screw – Cap Hex. Hd.	2
44	56–7973	Clamp Half – Hydraulic Line	4
45	32152–4	Nut – Lock	2
46	256–247	Bushing – Flange	2
47	240–7	Grommet	4
48	302–5	Fitting – Grease	1
49	69–0100	Frame – Assembly (Incl. Ref. #46 & 48)	1
50	69–6100	Tube – Hydraulic Pressure (Incl. Ref. #14)	1
*	69–5810	Tube – Hydraulic Return (Incl. Ref. #14)	1
51	69–8910	Washer	4
52	69–8900	Spacer	2
53	3220–4	Nut	1
54	92–3048	Solenoid Coil Kit	3
55	32149–2	Nut – Keps	2
56	340–92	Fitting – Hydraulic (Incl. Ref. #13 & 58)	1
57	69–5950	Tube – Hydraulic	1
58	237–21	Seal – O–Ring	3
59	340–125	Fitting – Hydraulic (Incl. Ref. #13 & 58)	1

Ref. No.	Part No.	Description	No. Used
†60		Body – Valve	1
61	93–9988	Fitting – Hydraulic (Incl. Ref. #13)	1
62	92–3047	Valve – Solenoid (Incl. Ref. #53)	1
63	69–9470	Cover – Access	1
64	71–0430	Cover – Abrasive	1
65	321–11	Screw – Cap Hex. Hd.	2
66	71–0420	Floor – Abrasive	1
67	3256–56	Washer – Flat	2
68	3256–23	Washer – Flat	2
69	93–7424	Hose – Diagnostic	1
70	93–7193	Hose – Diagnostic	1
71	72–4080	Decal – Danger	2
72	2410–10	Plug – Button	1
73	83–8360	Fitting – Traction, R.H.	1
74	83–8370	Plate – Clamp	1
77	93–7038	Switch	1
80	92–4970	Hose – Hydraulic	1
81	93–7192	Hose – Diagnostic	1
82	83–4330	Assy. – Tube, Traction LH	1
83	83–4340	Assy. – Tube, Traction RH	1
*	92–3049	Valve Seal Kit	1
*	71–2630	Solenoid Valve Assembly (Incl. Ref. #53, 54, 60, 62 & Valve Seal Kit #92–3049)	1

*Not Illustrated

†Not serviceable separately.

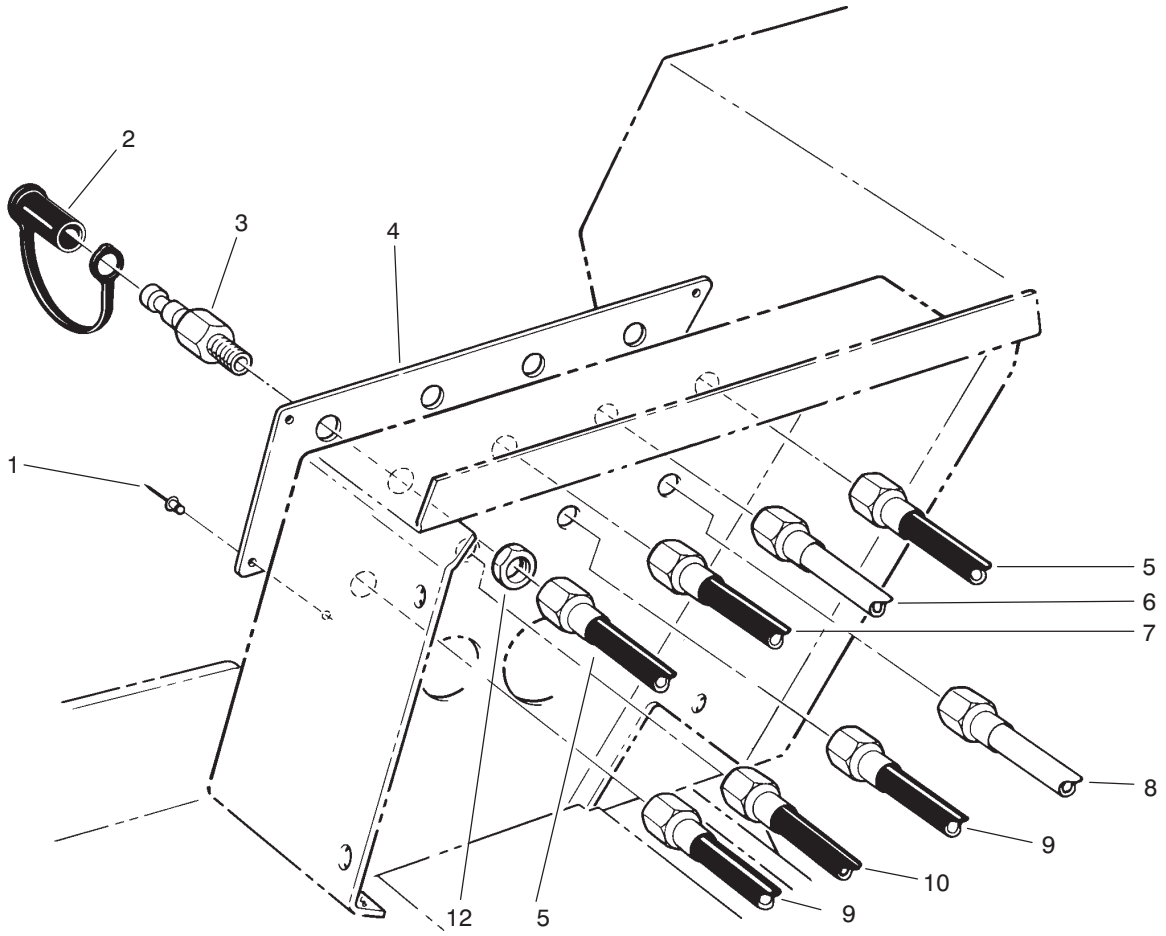


T–0363–1

HYDRAULIC SYSTEM DIAGNOSTIC PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3269–25	Rivet – Pop	4
2	353–947	Cap – Fitting	8
3	353–997	Fitting – Hydraulic Bulkhead (Incl. Ref. #12)	8
4	69–0960	Panel – Diagnostic	1
5	93–7422	Hose – Hyd. Diagnostic	1

Ref. No.	Part No.	Description	No. Used
6	69–5910	Tube – Hyd. Diagnostic	1
7	93–7193	Hose – Hyd. Diagnostic	1
8	69–5920	Tube – Diagnostic	1
9	93–7423	Hose – Hyd. Diagnostic	2
10	93–7425	Hose – Hyd. Diagnostic	1
12	3220–4	Nut – Bulkhead	8

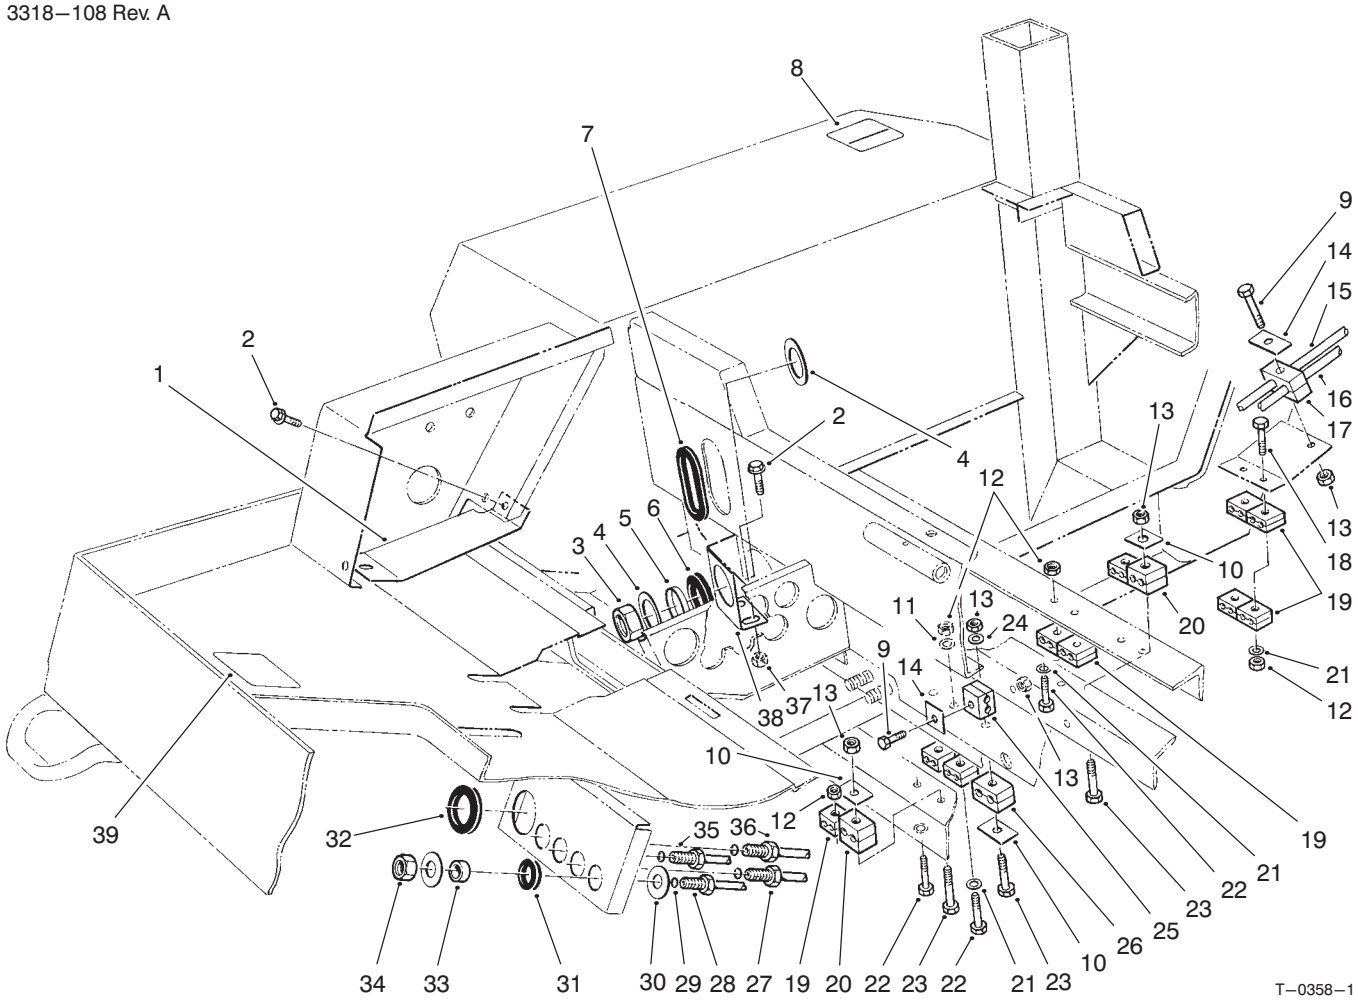


HYDRAULIC LINE CLAMPS ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	69–9330	Cover	1
2	3234–14	Screw – Hex. Flange Hd.	6
3	340–128	Nut – Bulkhead	2
4	69–8920	Washer	4
5	69–8950	Spacer	2
6	240–2	Grommet	2
7	237–164	Grommet	1
8	69–0920	Decal – Hydraulic Oil	1
9	322–12	Screw – Cap Hex. Hd.	4
10	69–9760	Plate – Cover	3
11	3256–22	Washer – Flat	2
12	32152–4	Nut – Lock	6
13	32152–1	Nut – Lock	8
14	69–9761	Plate – Cover	5
15	69–6130	Tube – Hydraulic	1
16	69–6120	Tube – Hydraulic	1
17	56–7974	Clamp Half – Hydraulic Line	2
18	321–15	Screw – Cap Hex. Hd.	2
19	56–7973	Clamp Half – Hydraulic Line	20
20	56–7972	Clamp Half – Hydraulic Line	4
21	3256–56	Washer – Flat	8
22	321–9	Screw – Cap Hex. Hd.	6

Ref. No.	Part No.	Description	No. Used
23	322–21	Screw – Cap Hex. Hd.	3
24	3256–23	Washer – Flat	1
25	56–7978	Clamp Half – Hydraulic Line	8
26	56–7971	Clamp Half – Hydraulic Line	2
27	93–7179	Tube – Hydraulic (Incl. Ref. #29)	1
28	69–5800	Tube – Hydraulic (Incl. Ref. #29)	1
29	237–21	Seal – O–Ring	4
30	69–8980	Washer	8
31	240–6	Grommet	4
32	240–7	Grommet	1
33	69–8990	Spacer	4
34	340–78	Nut – Bulkhead	4
35	69–6080	Tube – Hydraulic (Incl. Ref. #29)	1
36	69–6070	Tube – Hydraulic (Incl. Ref. #29)	1
37	32128–20	Nut – Lock	4
38	71–2560	Support – Bulkhead	2
39	69–0940	Decal – Caution	1

HYDRAULIC SCHEMATIC

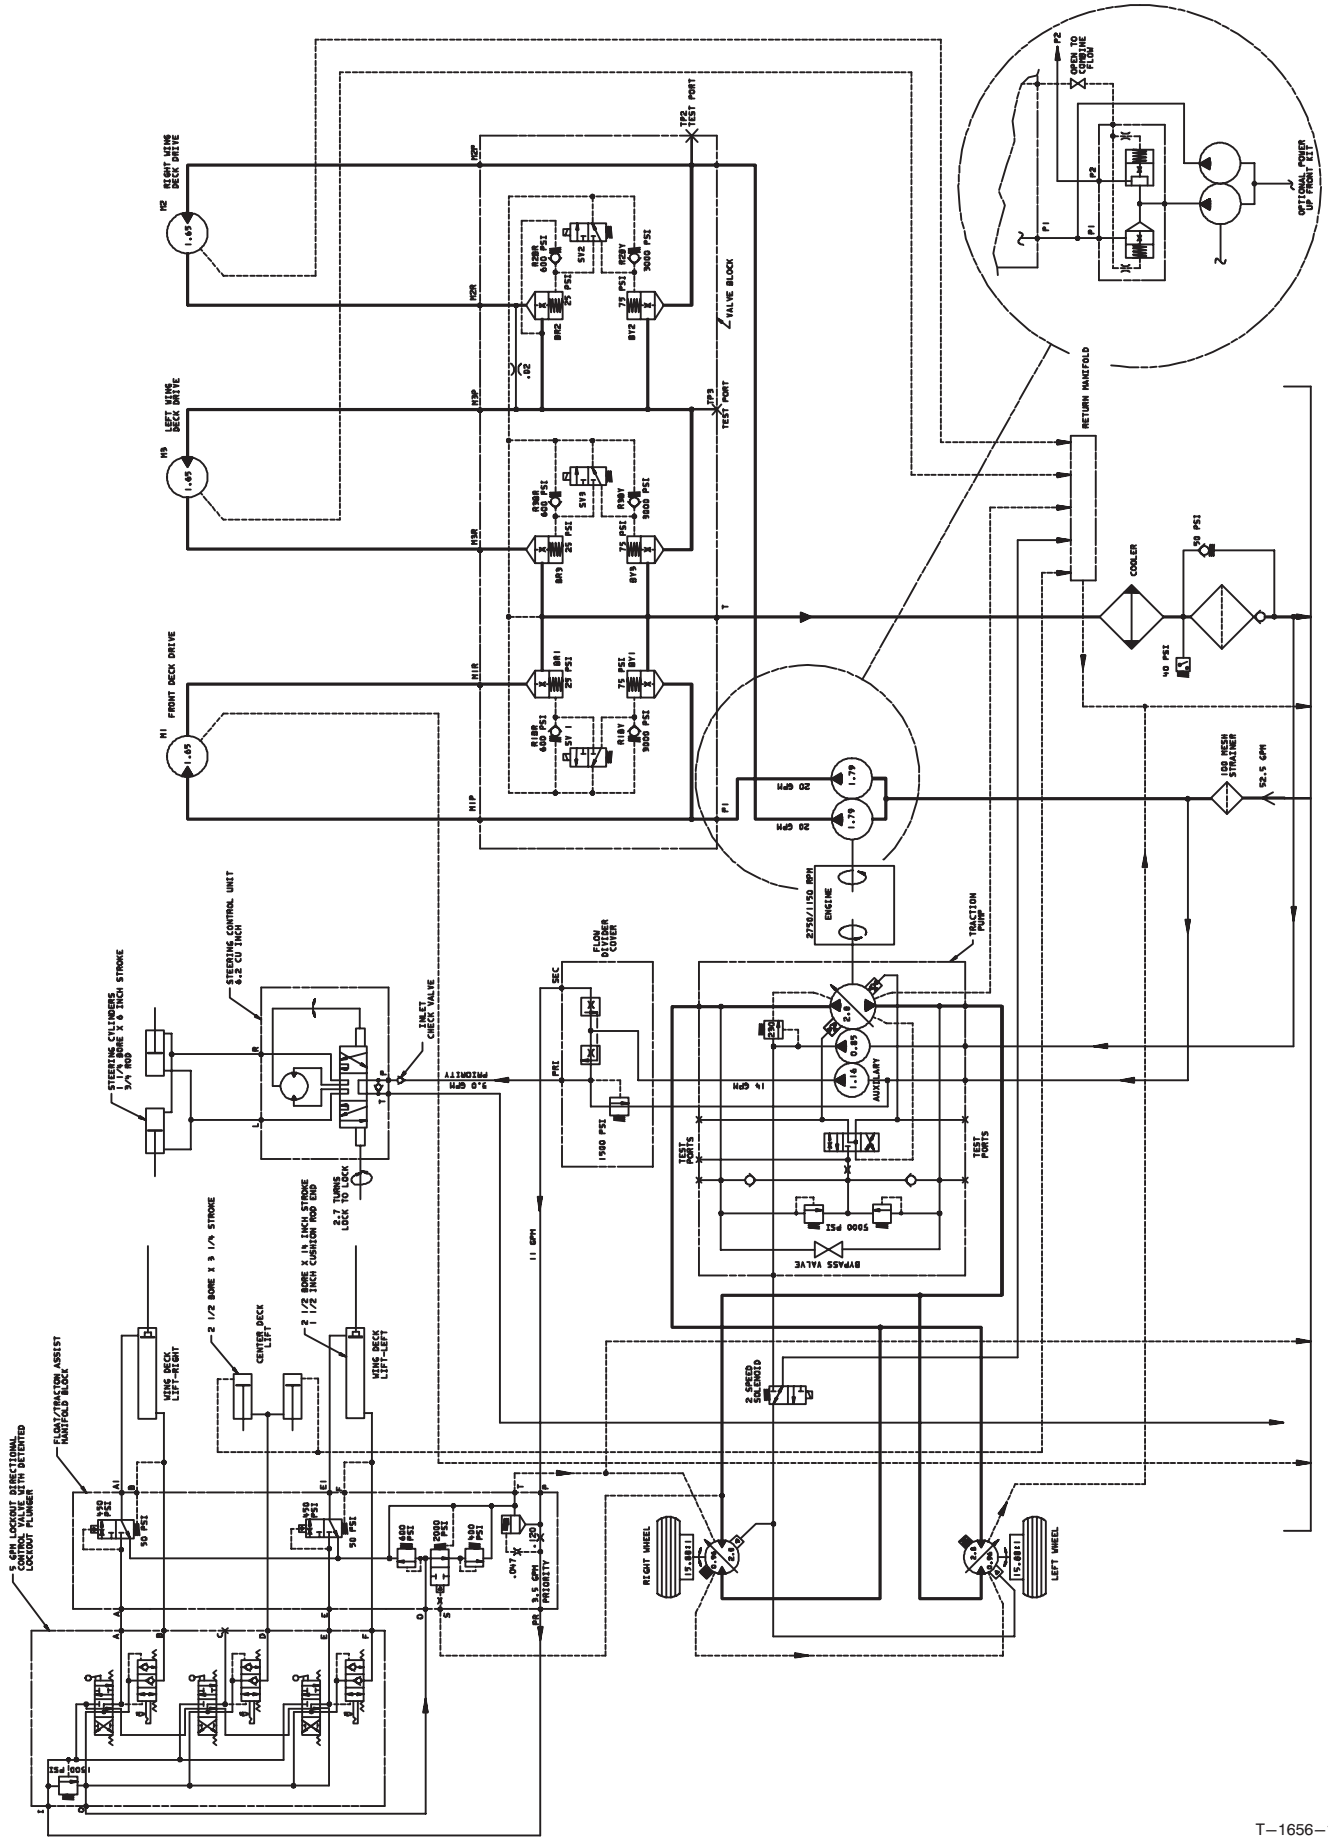

T–1656–1

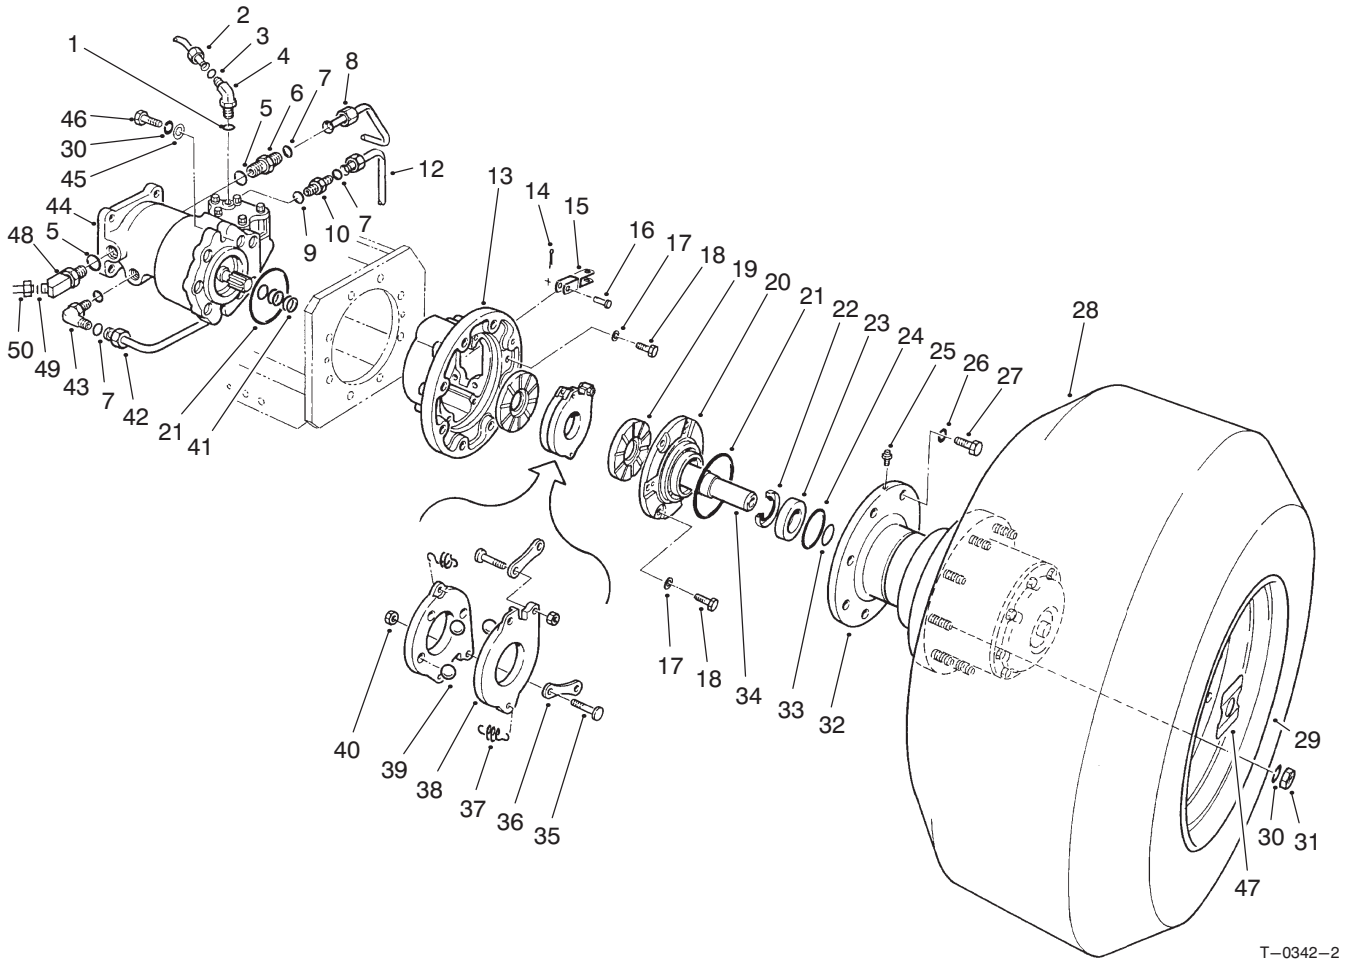


FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237–42	Seal – O–Ring	2
2	69–5940	Tube – Hydraulic L.H.	1
*	69–5930	Tube – Hydraulic R.H.	1
3	237–21	Seal – O–Ring	2
4	340–82	Fitting – Hydraulic Elbow (Incl. Ref. #1 & 3)	2
5	237–146	Seal – O–Ring	4
6	340–91	Fitting – Hydraulic Straight (Incl. Ref. #5 & 7)	2
7	237–58	Seal – O–Ring	7
8	83–4330	Tube – Hydraulic L.H.	1
*	83–4340	Tube – Hydraulic R.H.	1
9	237–81	Seal – O–Ring	4
10	340–9	Fitting – Hydraulic St. L.H. (Incl. Ref. #7 & 9)	1
*	340–148	Fitting – Hydraulic Tee R.H. (Incl. Ref. #7 & 9)	1
12	92–1742	Tube – Hydraulic L.H.	1
*	92–4807	Tube – Hyd. R.H. Run	1
*	85–6150	Tube – Hyd. R.H. Branch	1
13	71–4010	Housing – Brake	2
14	3272–6	Pin – Cotter	2
15	71–3880	Clevis – Brake Cable	2
16	283–2	Pin – Clevis	2
17	3253–21	Washer – Lock	14
18	323–6	Screw – Cap Hex. Hd.	14
19	71–0470	Disc – Middle	4
20	71–3990	Cap – Brake Housing	2

Ref. No.	Part No.	Description	No. Used
21	237–158	Seal – O–Ring	4
22	253–156	Seal – Oil	2
23	251–340	Bearing – Ball	2
24	32120–22	Ring – Retaining Internal	2
25	302–39	Vent	2
26	3253–8	Washer – Lock	16
27	327–22	Screw – Cap Hex. Hd.	16
28	69–9800	Tire	2
*	58–5620	Tube – Inner	2
*	231–140	Tire – (Optional)	2
29	71–2470	Rim	2
30	3253–7	Washer – Lock	22
31	3219–5	Nut – Hex.	18
32	69–1730	Planetary Gear Drive Assy.	2
33	32120–84	Ring – Retaining External	2
34	71–3810	Coupling – Hydraulic Motor	2
35	69–9970	Stud	4
36	69–9960	Link	4
37	69–9950	Spring – Extension	4
38	69–9990	Disc – Actuating	4
39	69–9980	Ball	6
40	69–9940	Nut – Jam	4
41	253–157	Ring – Cup	8
42	92–1741	Tube – Hydraulic	1
43	340–142	Fitting – Hydraulic Elbow (Incl. Ref. #9 & 11)	2
44	69–3050	Motor – Hydraulic Wheel	2
45	3256–26	Washer – Flat	4


*Not Illustrated

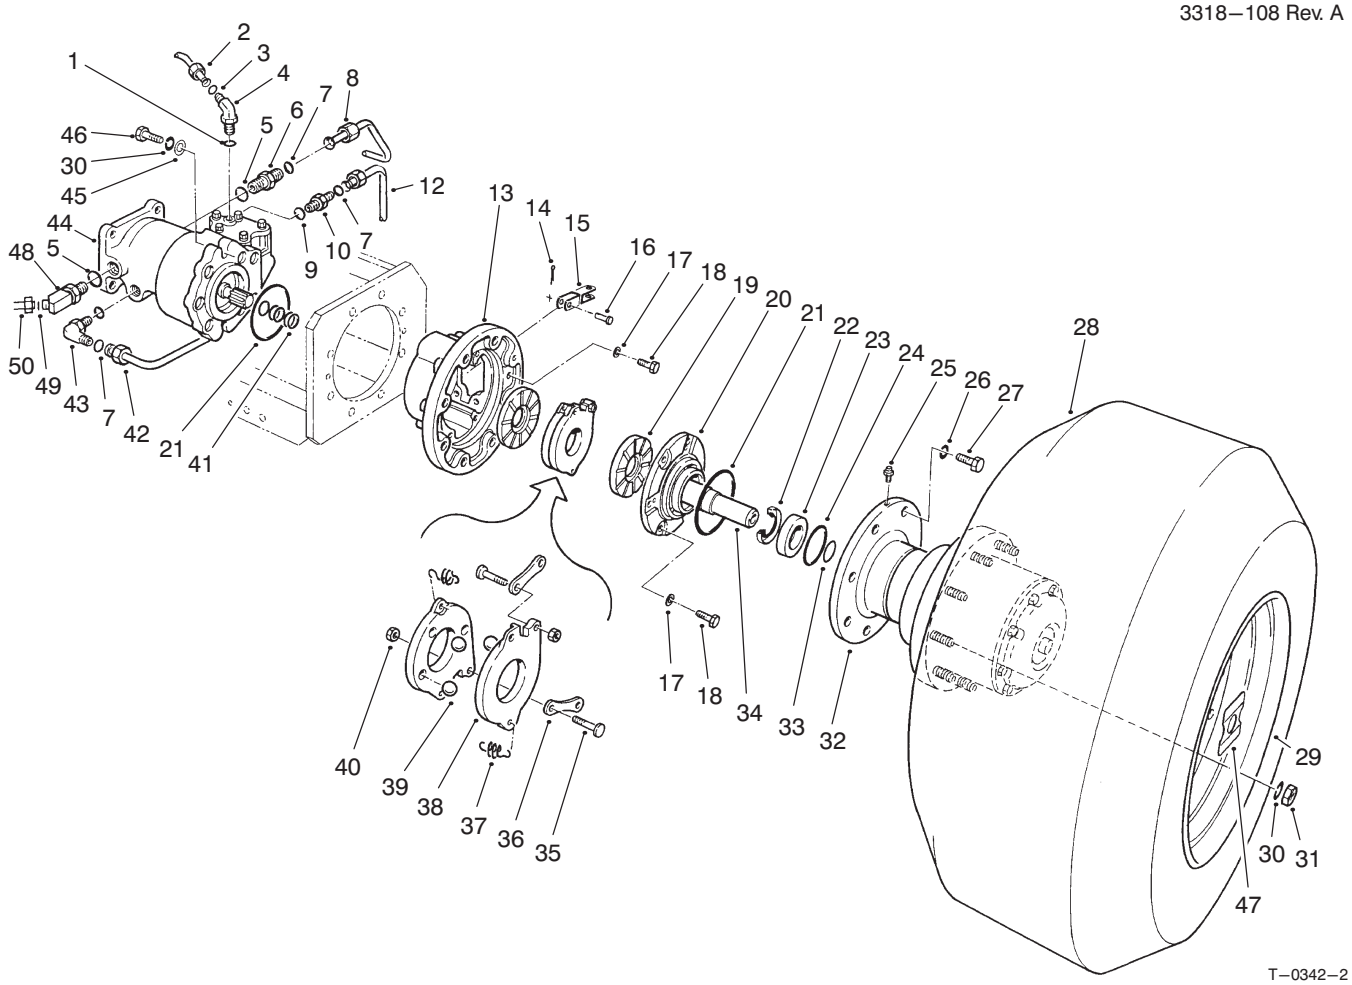

FRONT WHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	325–7	Screw – Cap Hex. Hd.	4
47	72–4070	Decal – Danger	2
48	93–7176	Fitting – 45˚ ORFS	2

Ref. No.	Part No.	Description	No. Used
49	237–65	O–Ring	2
50	93–7177	Tube – Hydraulic, LH	1
*	93–7178	Tube – Hydraulic, RH	1

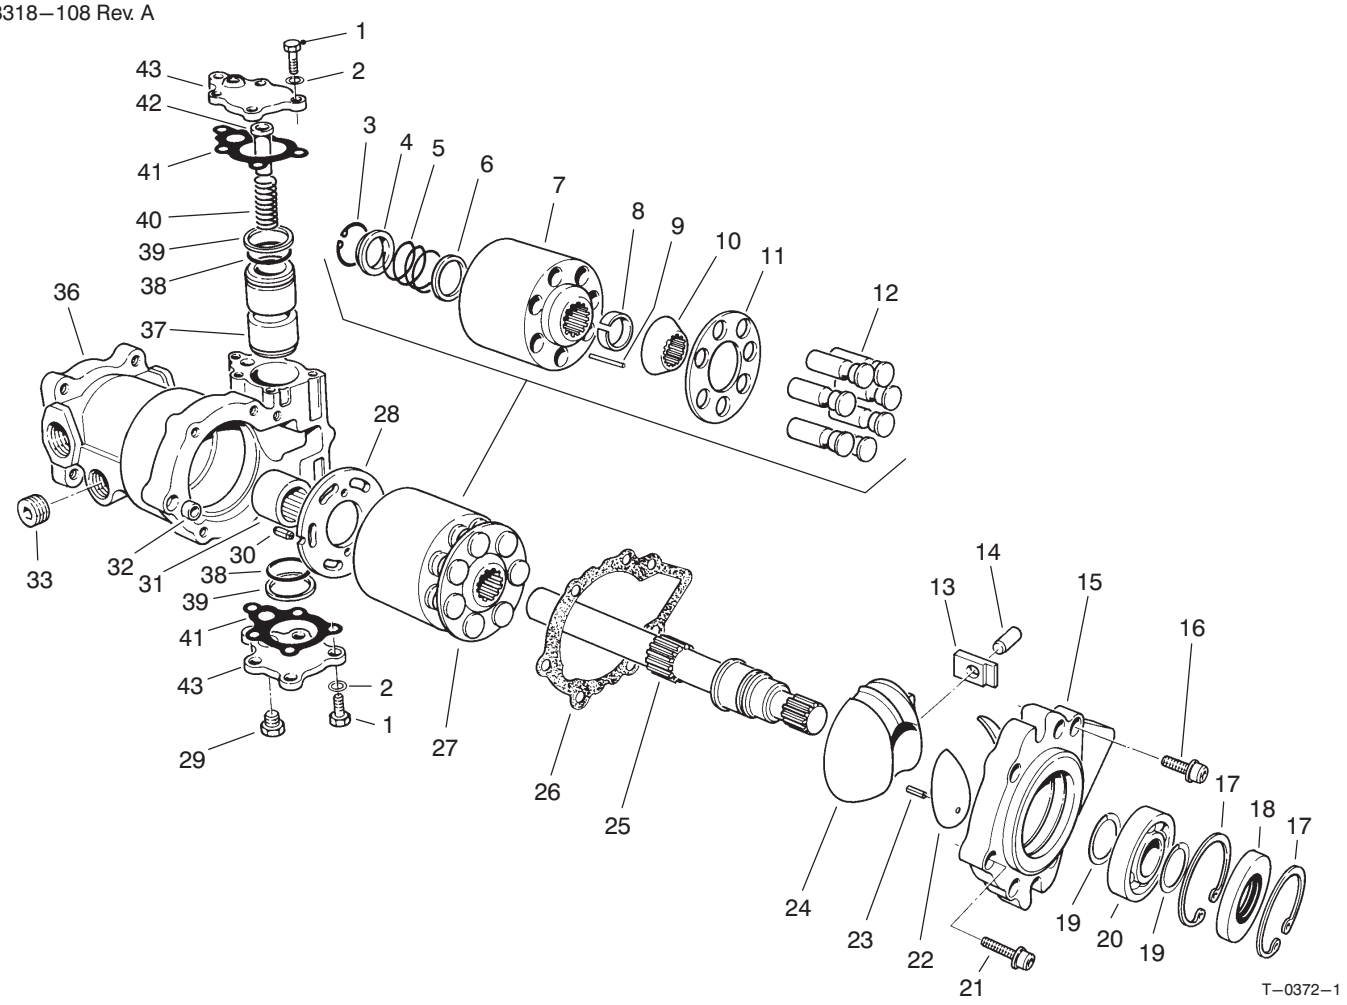


WHEEL MOTOR NO. 69−3050

Ref. No.	Part No.	Description	No. Used
1	69−3150	Screw Hex. Hd.	10
2	69−3070	Washer − Plain	10
†3		Ring − Retaining	1
†4		Washer	1
†5		Spring − Compression	1
†6		Washer	1
†7		Block − Cylinder	1
†8		Retainer	1
†9		Pin − Slipper Hold Down	3
†10		Guide − Retainer	1
†11		Guide − Slipper	1
†12		Piston Assembly	7
13	69−3500	Bearing − Sleeve	1
14	69−3510	Pin	1
15	76−4610	Cover − Front	1
16	76−4590	Screw	6
17	69−3200	Ring − Retaining	2
18	69−3190	Seal − Lip	1
19	69−3170	Ring − Retaining	2
20	69−3210	Bearing − Ball	1
21	69−3960	Screw	1
22	69−3970	Bearing − Journal	2

Ref. No.	Part No.	Description	No. Used
23	69−3520	Pin − Spring	2
24	69−3980	Swashplate − Variable	1
25	69−3950	Shaft − Motor	1
26	76−4600	Gasket − Front Cover	1
27	69−3910	Cylinder Block Kit (Incl. Ref. #3−12	1
28	69−3990	Plate − Motor Valve	1
29	69−3940	Plug	1
30	69−3450	Pin	1
31	69−3370	Bearing − Needle	1
32	69−3230	Pin − Spring	1
33	69−3130	Plug − Hole	1
†36		Housing	1
37	69−4020	Piston − Servo	1
38	69−3560	Seal − O−Ring	2
39	69−3570	Ring − Piston	2
40	69−4030	Spring − Servo	1
41	69−3710	Gasket − Servo Cover	2
42	69−4040	Stop − Servo Piston	1
43	69−3720	Cover − Servo	2
*	69−3920	Piston Ring & O−Ring Kit (Incl. Ref. #38 & 39)	1

*Not Illustrated
†Not serviceable separately.

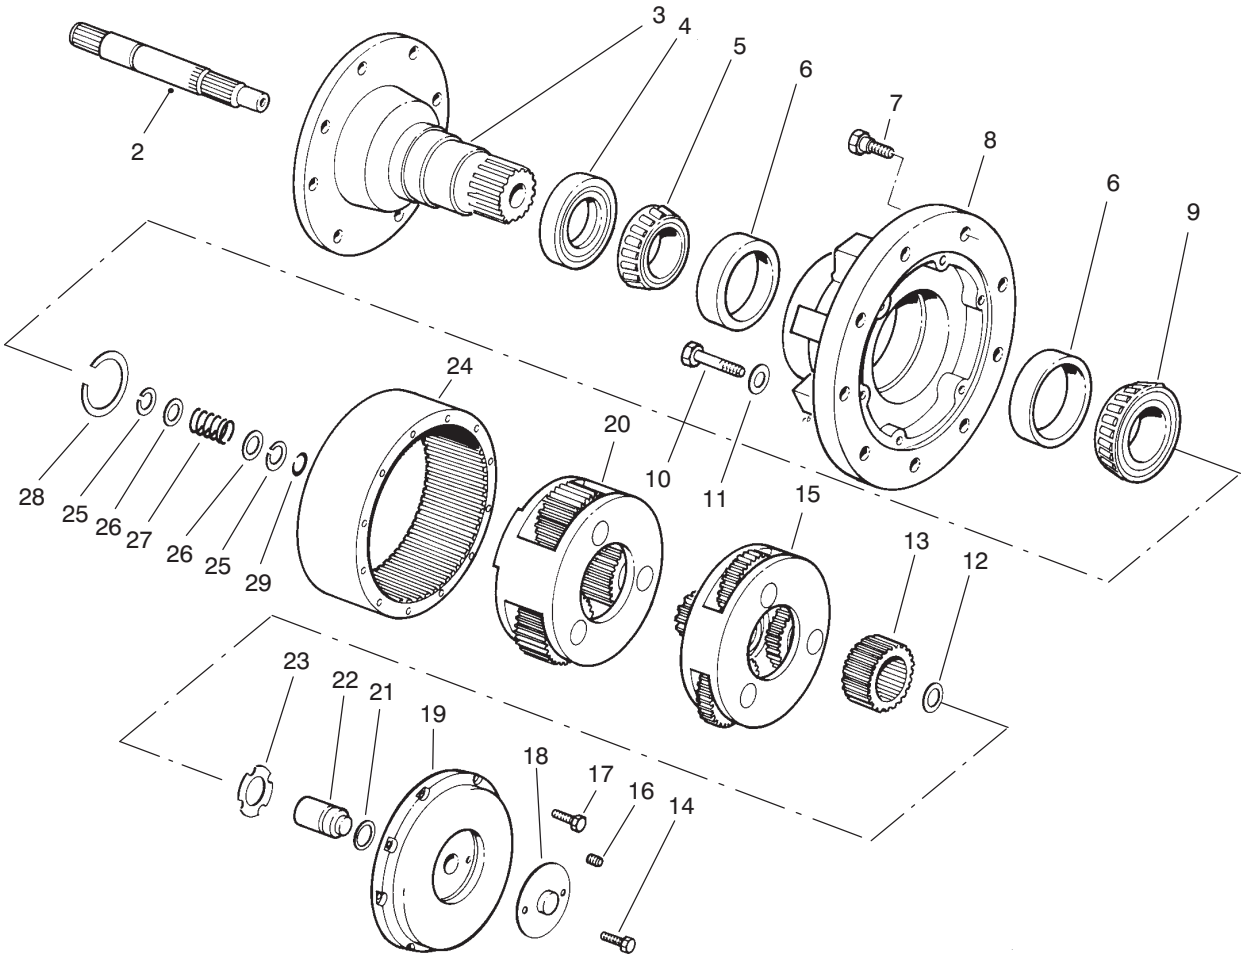

T—0140—1


PLANETARY GEAR ASSEMBLY NO. 69—1730

Ref. No.	Part No.	Description	No. Used
2	60—3810	Shaft — Input	1
3	69—1740	Spindle	1
4	60—3830	Seal — Oil	1
5	60—3840	Cone — Bearing	1
6	60—3850	Cup — Bearing	2
7	60—3860	Bolt — Wheel	9
8	60—3870	Hub	1
9	60—3880	Cone — Bearing	1
10	60—3890	Bolt — Hex. Hd.	6
11	60—3910	Washer — Flat	6
12	60—3980	Washer — Thrust	1
13	60—3970	Gear — Primary Sun	1
14	60—4070	Bolt — Hex. Hd.	2
15	60—3960	Primary Carrier Assembly	1

Ref. No.	Part No.	Description	No. Used
16	60—4040	Plug — Pipe	1
17	60—4030	Bolt — Hex. Hd.	8
18	60—4060	Cover — Disengage	1
19	60—4050	Cover — Large	1
20	60—4000	Secondary Carrier Assy.	1
21	60—4020	Seal — O—Ring	1
22	60—4010	Plunger — Disengage	1
23	60—3990	Washer — Thrust	1
24	60—3900	Gear — Ring	1
25	60—3930	Ring — Retaining	2
26	60—3940	Washer	2
27	60—3950	Spring — Disengage	1
†28	62—6450	Kit — Retaining Ring	1
*	62—6460	Sealant — RTV (Tube)	1

*Not Illustrated

†Includes 7 different thickness retaining rings for service adjustment of bearings.

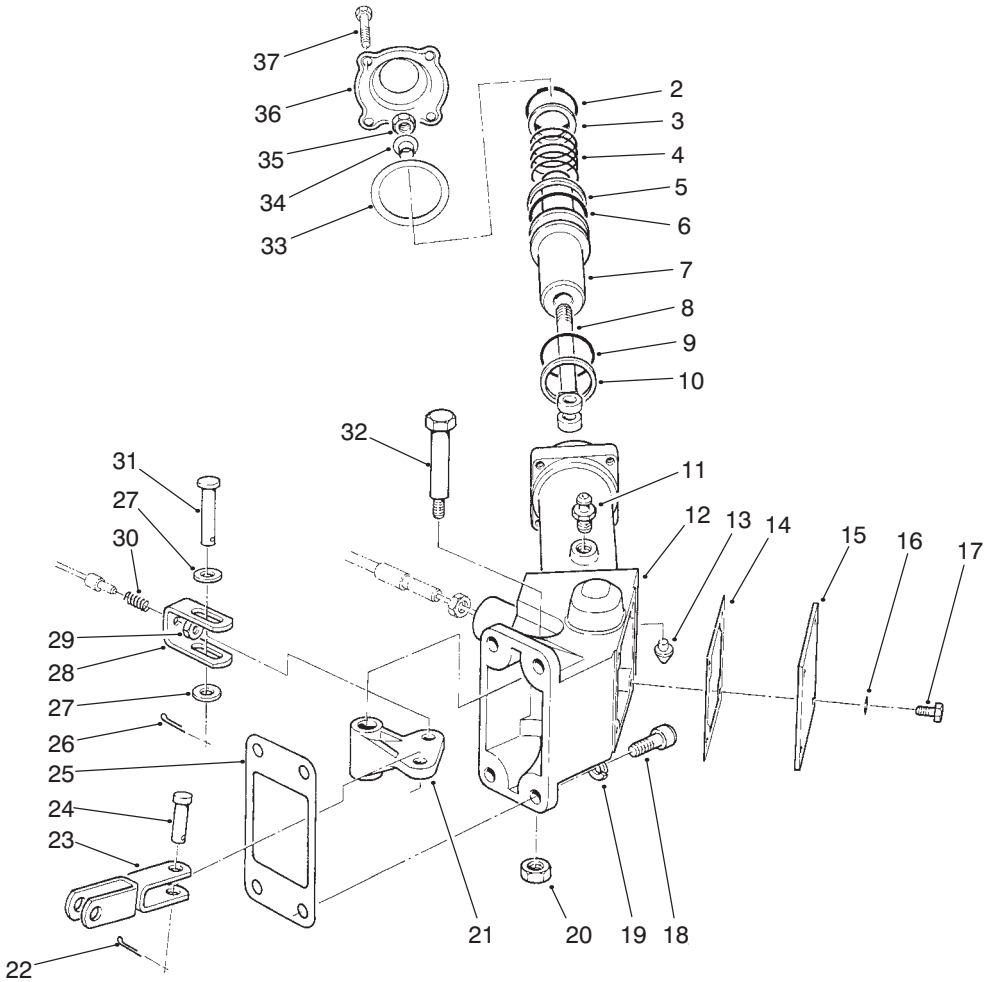


T–1277–1

WHEEL BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	32151–100	Ring – Retaining	2
3	69–8910	Washer	2
4	82–7850	Spring – Compression	2
5	354–104	Ring – Backup	2
6	237–175	O–Ring	2
7	82–7840	Piston – Brake	2
8	21–2070	Yoke – End	2
9	237–174	O–Ring	2
10	354–105	Ring – Backup	2
11	82–7830	Screw – Bleed, Brake	2
12	92–8003	Housing – Actuator, R.H.	1
*	92–8004	Housing – Actuator, L.H.	1
13	82–7820	Seat – Brake, Tube	2
14	71–3870	Gasket	2
15	71–3850	Cover – Housing	2
16	3253–3	Washer – Lock	8
17	321–2	Screw – Cap Hex. Hd.	8
18	3274–7	Screw – Cap Socket Hd.	8
19	3253–21	Washer – Lock	8

Ref. No.	Part No.	Description	No. Used
20	32128–25	Nut – Lock	2
21	71–3830	Bellcrank – Brake	2
22	3272–6	Pin – Cotter	2
23	71–3880	Clevis – Brake Cable	2
24	283–2	Pin – Clevis	2
25	71–3900	Gasket	2
26	3272–10	Pin – Cotter	2
27	3256–24	Washer – Flat	4
28	71–3860	Clevis	2
29	3296–3	Nut – Lock	2
30	69–0030	Spring – Compression	2
31	283–15	Pin – Clevis	2
32	12–8900	Bolt – Shoulder	2
33	93–7417	Gasket	2
34	71–3910	Collar	2
35	3296–59	Nut – Lock	2
36	93–7418	Cap – Actuator	2
37	321–6	Screw – Cap Hex. Hd.	8


*Not Illustrated

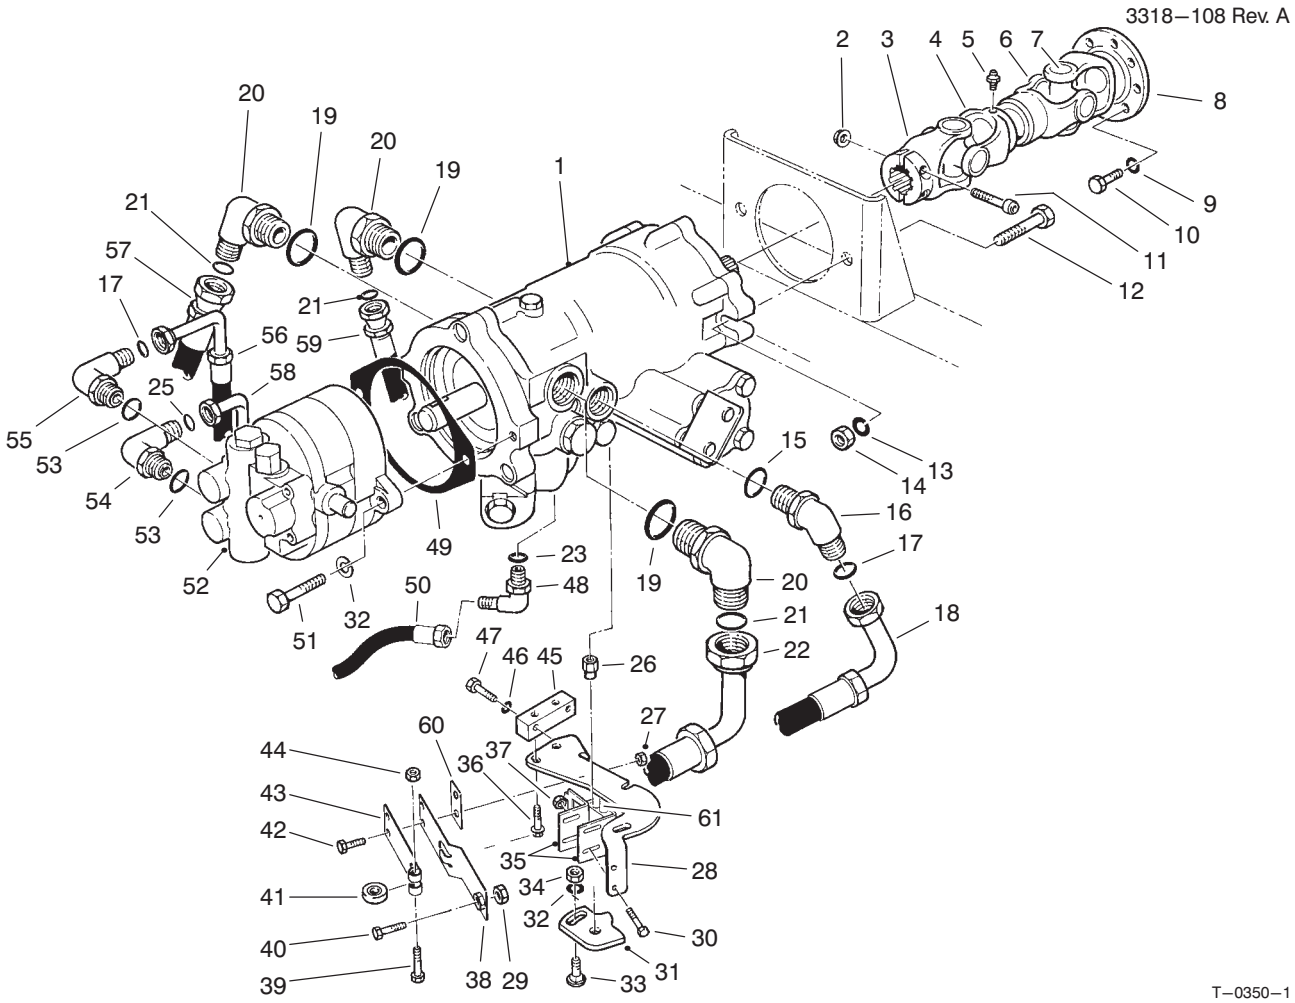

VARIABLE DISPLACEMENT PUMP INSTALLATION

Ref. No.	Part No.	Description	No. Used
1	93–9322	Variable Displacement Pump	1
2	32128–21	Nut – Flange Lock	2
3	93–7189	Yoke – Pump End	1
4	93–7191	Tube – Slip Yoke	1
5	302–2	Fitting – Grease	1
6	93–7188	Shaft – Slip Yoke	1
7	93–7190	Kit – Universal Joint	2
8	93–7187	Yoke – Engine End	1
9	48–9570	Washer – Lock	8
10	48–7710	Screw – Cap Hex. Hd.	8
11	3274–20	Screw – Hex. Socket Hd.	2
12	325–7	Screw – Cap Hex. Hd.	2
13	3253–7	Washer – Lock	2
14	3217–9	Nut – Hex.	2
15	237–81	Seal – O–Ring	1
16	340–131	Fitting – Hydraulic Elbow (Incl. Ref. #15 & 17)	1
17	237–30	Seal – O–Ring	2
18	69–5460	Hose – Hydraulic	1
19	237–146	Seal – O–Ring	3
20	340–15	Fitting – Hydraulic Elbow (Incl. Ref. #19 & 21)	3
21	237–58	Seal – O–Ring	3
22	69–5650	Hose – Hydraulic	1
23	237–42	Seal – O–Ring	1
25	237–22	Seal – O–Ring	1
26	69–9020	Nut – Special	1


Ref. No.	Part No.	Description	No. Used
27	32152–4	Nut – Lock	2
28	69–9480	Bracket – Neutral Device	1
29	3219–2	Nut – Hex.	1
30	32144–1	Screw – Hex. Hd.	2
31	69–9040	Cam – Neutral Device	1
32	3253–21	Washer – Lock	3
33	3231–30	Bolt – Carriage	1
34	3217–7	Nut – Hex.	1
35	93–9337	Bracket – Switch	1
36	3234–13	Screw – Hex. Flange Hd.	4
37	32127–11	Nut – Flexlok	2
38	29–6170	Leaf Spring Assembly	1
39	322–17	Screw – Cap Hex. Hd.	1
40	3210–7	Screw – Cap Hex. Hd.	1
41	251–259	Bearing – Neutral Detent	1
42	321–4	Screw – Cap Hex. Hd.	2
43	29–6150	Spring – Leaf	1
44	32153–3	Nut – Lock	1
45	69–9050	Bar – Neutral Device	1
46	3253–3	Washer – Lock	2
47	321–10	Screw – Cap Hex. Hd.	2
48	340–134	Fitting – Hydraulic Elbow (Incl. Ref. #23)	1
49	41–8760	Gasket – Pump	1
50	93–7424	Hose – Hydraulic	1
51	323–7	Screw – Cap Hex. Hd	2
52	69–2220	Pump/Valve	1

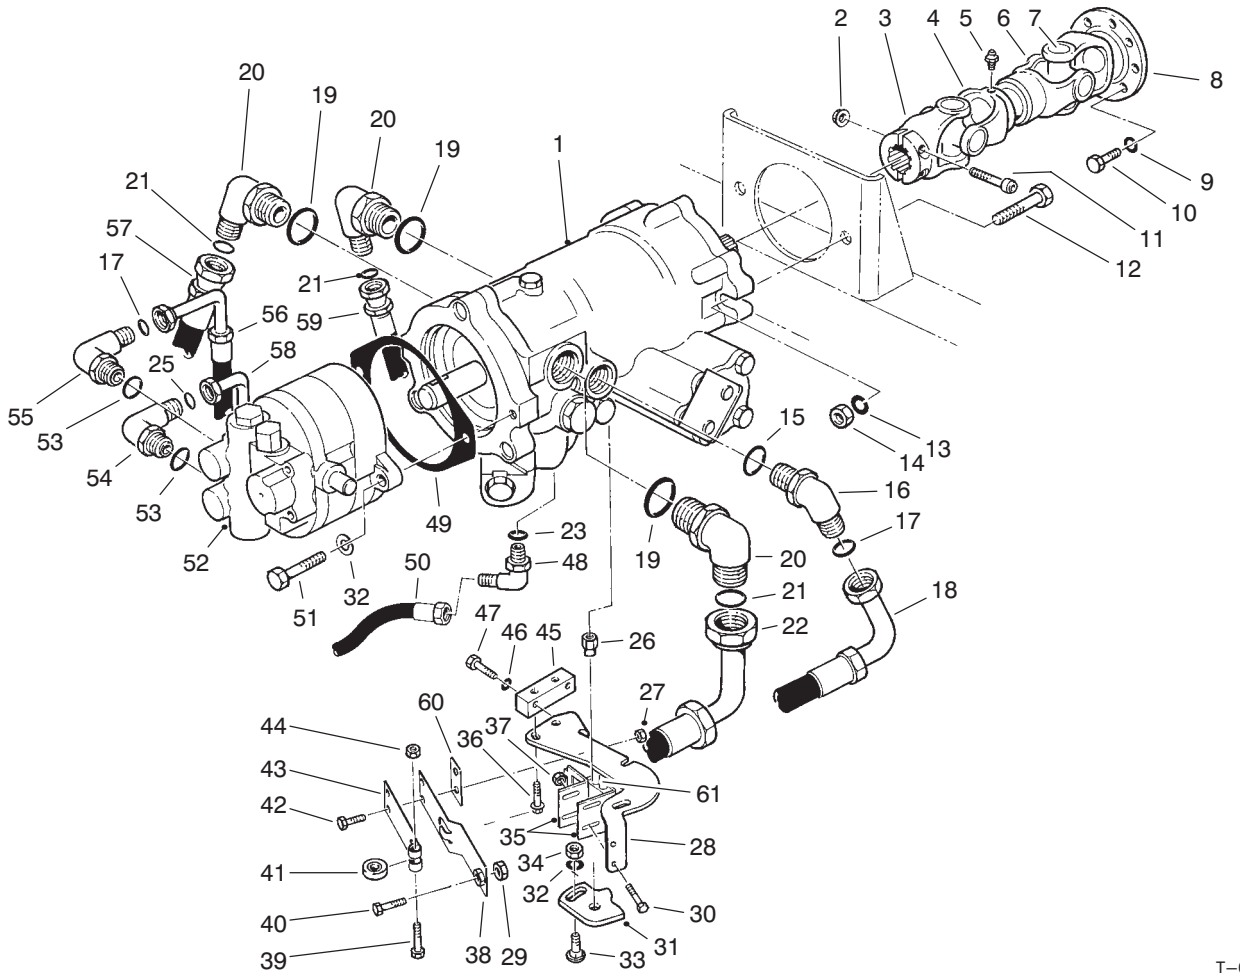

VARIABLE DISPLACEMENT PUMP INSTALLATION (Cont.)

Ref. No.	Part No.	Description	No. Used
53	327−80	Seal − O−Ring	2
54	340−130	Fitting − Hydraulic Elbow (Incl. Ref. #25 & 53)	1
55	340−105	Fitting − Hydraulic Elbow (Incl. Ref. #17 & 53)	1
56	69−5450	Hose − Hydraulic	1
57	69−5470	Hose − Hydraulic	1

Ref. No.	Part No.	Description	No. Used
58	69−5440	Hose − Hydraulic	1
59	69−5480	Hose − Hydraulic	1
60	51−3150	Shim − Spring	A/R
61	93−7037	Switch	1
*	93−3219	Pump Drive Shaft Assembly (Incl. Ref. #3−8)	1

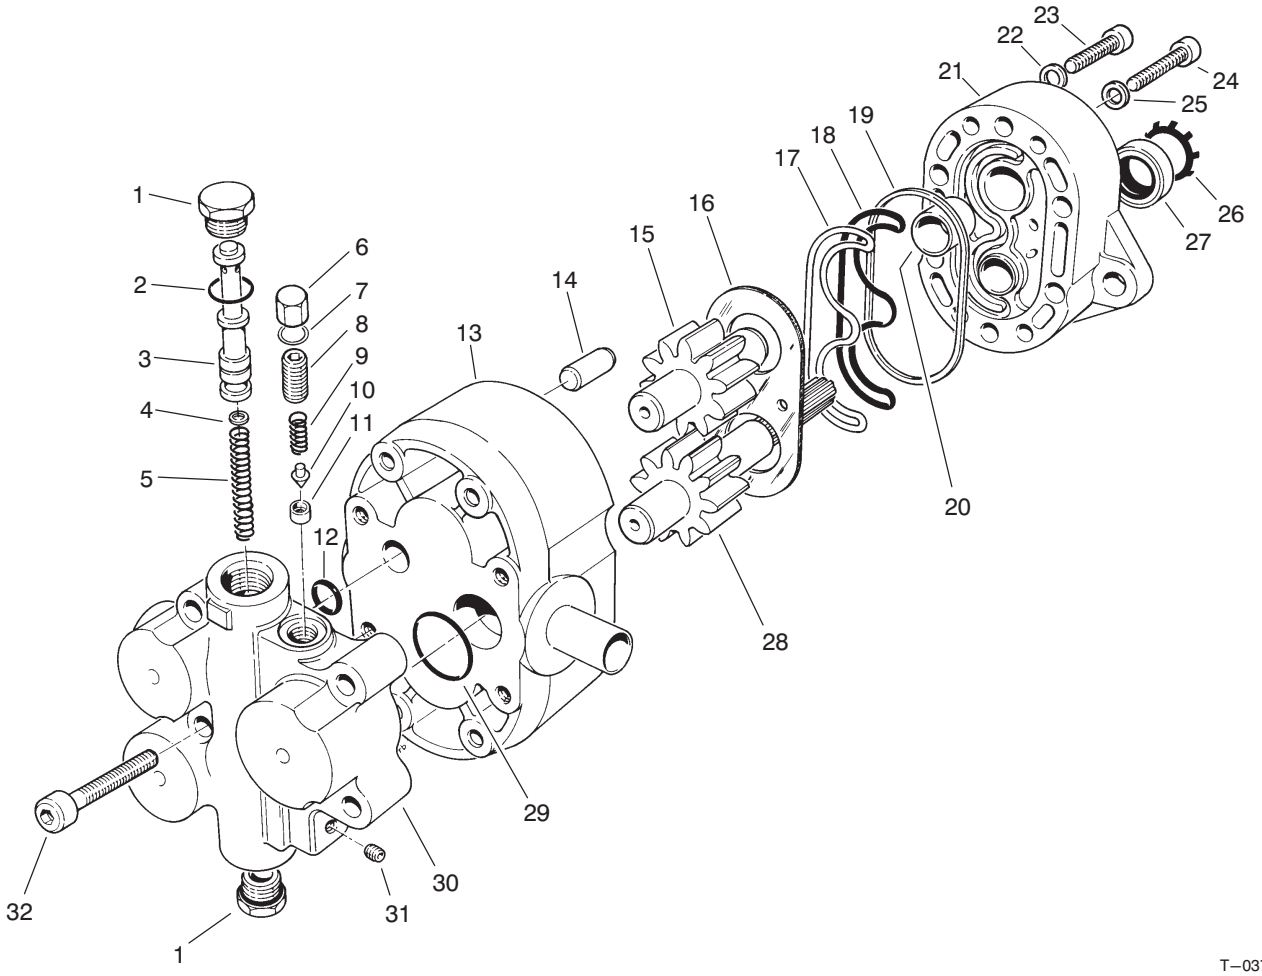


T—0374—1

GEAR PUMP & FLOW DIVIDER NO. 69—2220

Ref. No.	Part No.	Description	No. Used
1	69—2410	Plug (Incl. Ref. #2)	2
2	69—2420	Seal — O—Ring	2
3	69—2450	Piston	1
4	69—2440	Orifice	1
5	69—2430	Spring — Compression	1
6	69—2460	Cap	1
7	69—2470	Gasket — Cap	1
8	69—2480	Screw — Set	1
9	69—2490	Spring — Compression	1
10	69—2500	Poppet	1
11	69—2510	Seat	1
12	69—2530	Seal — O—Ring	1
13	69—2540	Cover Assembly (Incl. Ref. #20)	1
14	69—2340	Pin — Dowel	2
15	69—2280	Shaft/Gear — Idler	1
16	69—2320	Plate — Wear	1
17	69—2260	Seal — Load	1
18	69—2270	Seal — Pre—Load	1
19	69—2350	Ring — Sealing	1

Ref. No.	Part No.	Description	No. Used
20	69—2250	Bearing — Sleeve	4
21	69—2330	Body Assembly (Incl. Ref. #20)	1
22	69—2370	Washer	4
23	69—2360	Screw	4
24	69—2380	Screw	4
25	69—2390	Washer	4
26	69—2300	Ring — Retaining	1
27	69—2310	Seal — Shaft	1
28	69—2290	Shaft/Gear — Drive	1
29	69—2400	Seal — O—Ring	1
30	69—2230	Flow Divider Assembly (Incl. Ref. #1—11 & 31)	1
31	69—2520	Plug — Pipe	1
32	69—2240	Screw	4
*	69—2550	Repair Kit — Pump (Incl. Ref. #16—19, 22 & 25—27)	1
*	69—2560	Repair Kit — Pump & Divider Incl. Ref. #2, 7, 9—10, 12, 16—19, 22, 25—27 & 29)	1

*Not Illustrated

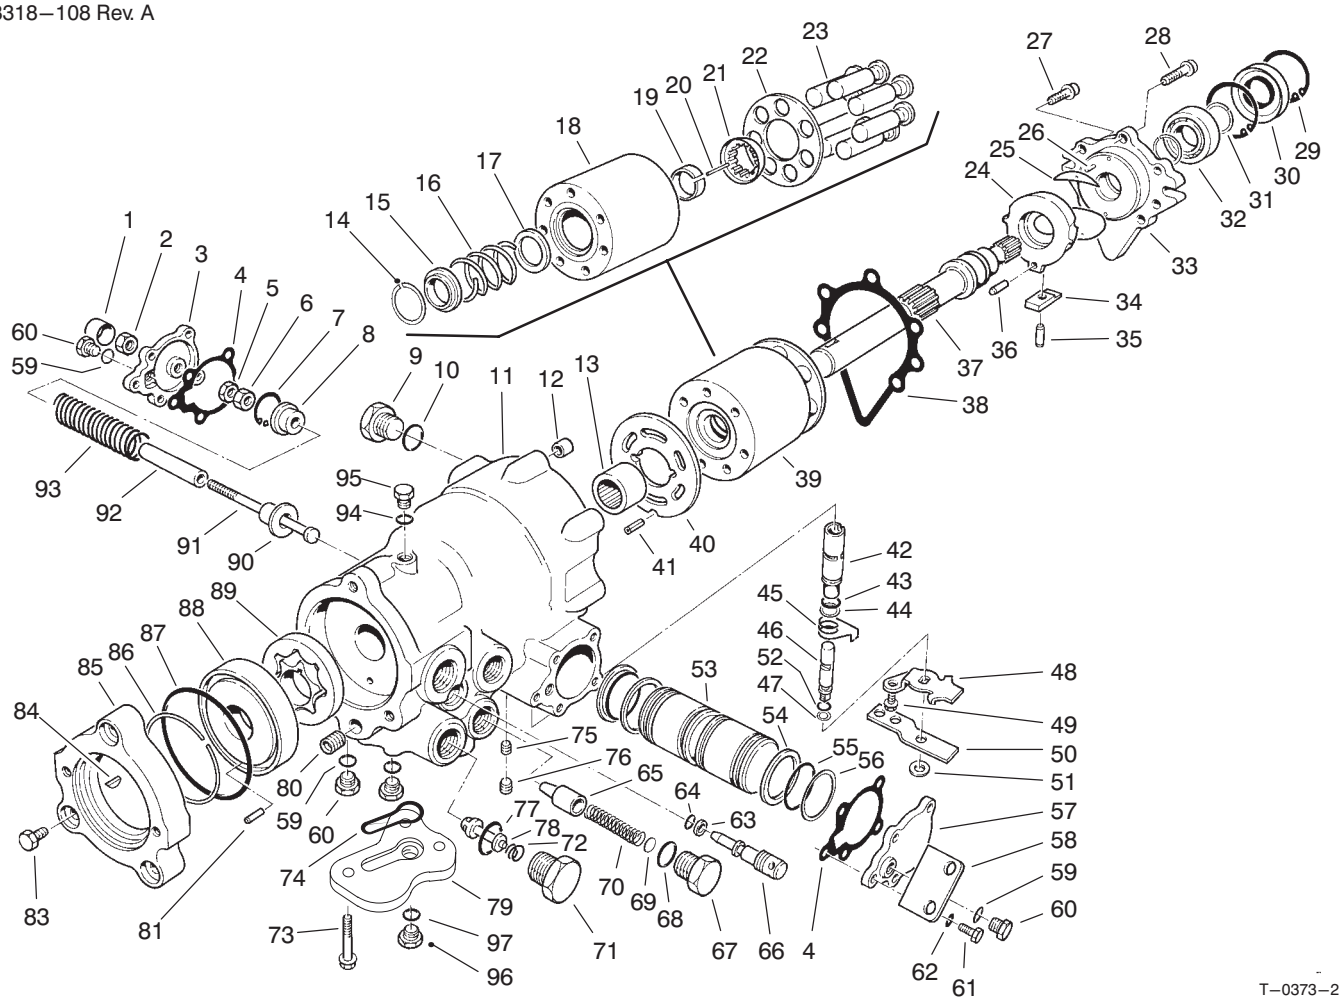


VARIABLE DISPLACEMENT PUMP NO. 93–9322

Ref. No.	Part No.	Description	No. Used
1	69–3620	Cover – Servo Adjustment	1
2	69–3630	Nut Special	1
3	69–3640	Cover –Servo	1
4	69–3710	Gasket – Servo	2
5	69–3610	Nut – Jam	1
6	69–3600	Nut – Hex.	1
7	69–3590	Ring – Retaining	1
8	69–3580	Guide – Spring	1
9	69–3130	Plug (Incl. Ref. #10)	1
†10		Seal – O–Ring	1
†11		Housing – Pump	1
12	69–3230	Pin – Spring	1
13	69–3370	Bearing – Needle	1
†14		Ring – Retaining	1
†15		Washer	1
†16		Spring – Compression	1
†17		Washer	1
†18		Block – Cylinder	1
†19		Retainer	1
†20		Pin – Slipper Hold Down	3
†21		Guide – Retainer	1
†22		Guide – Slipper	1
†23		Piston – Assembly	7
24	69–3250	Swashplate – Variable	1
25	69–3240	Bearing – Journal	2
26	94–2878	Pin	2
27	76–4590	Screw	6

Ref. No.	Part No.	Description	No. Used
28	69–3220	Screw	1
29	69–3200	Ring – Retaining	2
30	69–3190	Seal – Lip	1
31	69–3170	Ring – Retaining	2
32	69–3210	Bearing – Ball	1
33	76–4610	Cover	1
34	69–3500	Sleeve – Bearing	1
35	69–3510	Pin	1
36	69–3470	Pin	1
37	69–3180	Shaft Pump	1
38	76–4600	Gasket – Cover	1
39	69–3910	Cylinder Block Assembly (Incl. Ref #14–23)	1
40	93–9320	Plate – Valve L.H.	1
41	69–3450	Pin	1
42	69–3820	Sleeve – Control Valve	1
43	28–3590	Seal O–Ring	1
44	28–3580	Ring – Back Up	1
45	69–3880	Spring – Neutral Return	1
46	69–3830	Spool – Rotary Valve	1
47	25–2630	Ring Back Up	1
48	69–3890	Bracket – Neutral Return	1
49	69–3860	Screw – Flange Hd.	1
50	69–3870	Handle – Control Valve	1
51	69–3900	Washer	1
52	69–3840	Seal – O–Ring	1
53	69–3650	Piston – Servo	1

†Not serviceable separately.

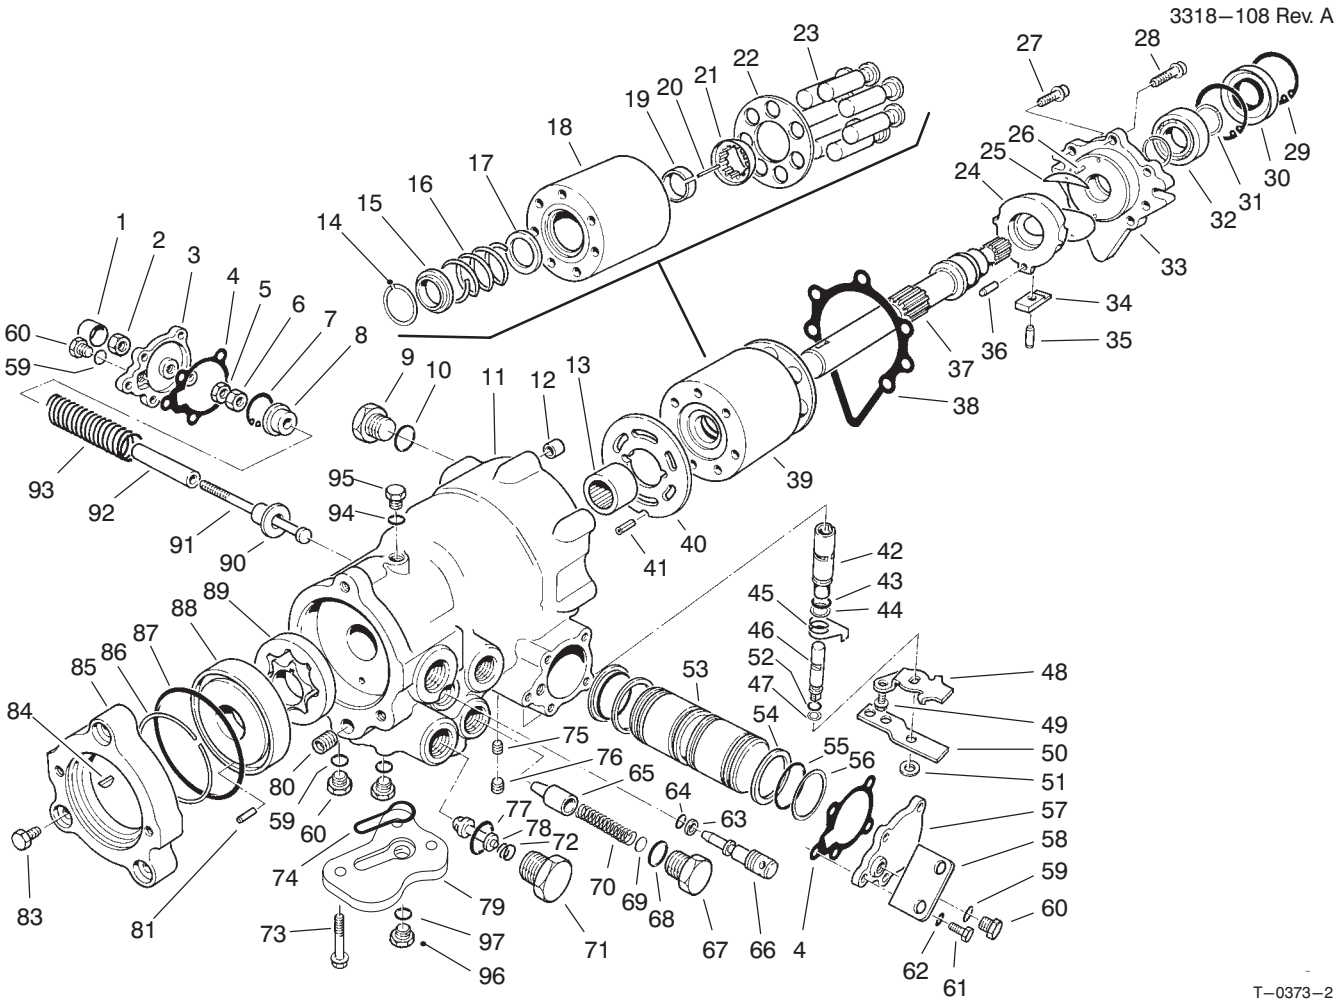


VARIABLE DISPLACEMENT PUMP NO. 93–9322 (Cont.)

Ref. No.	Part No.	Description	No. Used
54	69–3690	Bearing	2
55	69–3560	Seal – O–Ring	2
56	69–3570	Ring – Piston	2
57	69–3720	Cover Servo	1
58	69–3140	Bracket – Lifting	1
†59		Seal – O–Ring	4
60	69–3080	Plug (Incl. Ref. #59)	4
61	69–3150	Screw – Hex. Hd.	10
62	69–3070	Washer – Lock	10
63	25–2630	Ring – Back Up	1
64	237–22	Seal – O–Ring	1
65	69–3800	Valve	1
66	69–3810	Valve – By Pass	1
67	69–3780	Plug (Incl, Ref. #68)	1
68	237–80	Seal – O–Ring	1
69	69–3770	Shim	1
70	69–3790	Spring Compression	1
71	69–3760	Plug Special (Incl. Ref. #77)	2
72	69–3740	Spring – Compression	2
73	94–9413	Screw	3
74	94–9412	Seal – Adapter	1
75	93–9321	Plug – Orifice	1

Ref. No.	Part No.	Description	No. Used
76	285–17	Plug – Pipe	2
77	69–3750	Seal –O–Ring	2
78	69–3730	Valve – Relief (Incl. Ref. #71, 72 & 77)	2
79	94–9414	Adapter – Suction	1
80	69–3460	Plug Expansion	1
81	69–3550	Pin	1
83	69–3400	Screw Hex. Hd.	3
84	69–3430	Key – Woodruff	1
85	69–3410	Adapter – A Flange	1
86	69–3420	Ring – Temper Load	1
87	69–3440	Seal – O–Ring	1
88	69–3540	Cover – Gerotor	1
89	69–3390	Gerotor Assembly	1
90	69–3700	Guide – Spring	1
91	69–3660	Screw – Special	1
92	69–3680	Stop – Servo	1
93	69–3670	Spring – Compression	1
†94		Seal O–Ring	1
95	69–3120	Plug (Incl, Ref. #94)	1
96	94–9415	Plug (Incl. Ref. #97)	1
†97		Seal O–Ring	1

†Not serviceable separately.

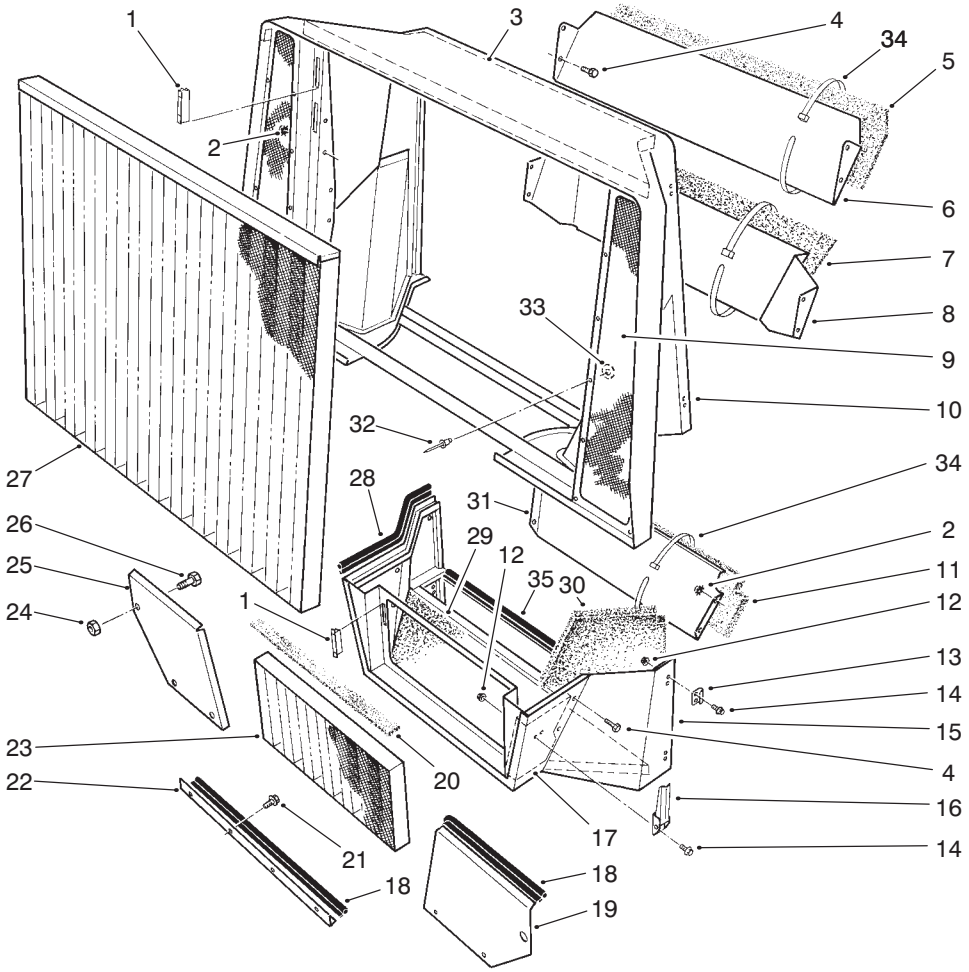


T−0368−1

COWL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	58−4250	Magnet	6
2	32149−2	Nut − Keps	16
3	71−0280	Foam − Cowl Top	1
4	321−2	Screw − Cap Hex. Hd.	16
5	71−0240	Foam − Louver Top	2
6	69−9370	Louver − Top	2
7	71−0230	Foam − Louver Middle	1
8	69−1130	Louver − Middle	1
9	69−9650	Screen − Cowl	2
10	69−8650	Cowl − Radiator	1
*	82−6330	Cowl − Radiator, Optional	1
11	71−0220	Foam − Louver Lower	1
12	3296−2	Nut − Flange Lock	20
13	69−3030	Strike − Latch	8
14	3290−321	Screw − Hex. Washer Hd.	20
15	69−8690	Support − Grille	1
16	69−3020	Handle − Latch	2
17	71−0300	Foam − Low Front Cowl L.H.	1
*	71−0310	Foam − Low Front Cowl R.H.	1

Ref. No.	Part No.	Description	No. Used
18	69−9721	Strip − Sealing	3
19	75−9460	Bracket − Sealing L.H.	1
20	69−0040	Foam − Lower Grille	1
21	32144−11	Screw − Hex. Flange Hd.	8
22	75−9480	Bracket − Sealing Bottom	1
23	69−7150	Grille − Lower	1
24	32153−6	Nut Lock	2
25	75−9470	Bracket − Sealing R.H.	1
26	328−11	Screw − Cap Hex. Hd.	2
27	69−7120	Grille − Upper	1
28	69−9720	Strip − Sealing	2
29	71−0290	Foam − Cowl Bottom	1
30	71−0330	Foam − Low Rear Cowl L.H.	1
*	71−0320	Foam − Low Rear Cowl R.H.	1
31	69−1140	Louver − Lower	1
32	3269−15	Rivet − Pop	22
33	3269−6	Washer − Backup	22
34	250−5	Tie − Cable	16
35	69−9722	Trim − Sealing	1

*Not Illustrated

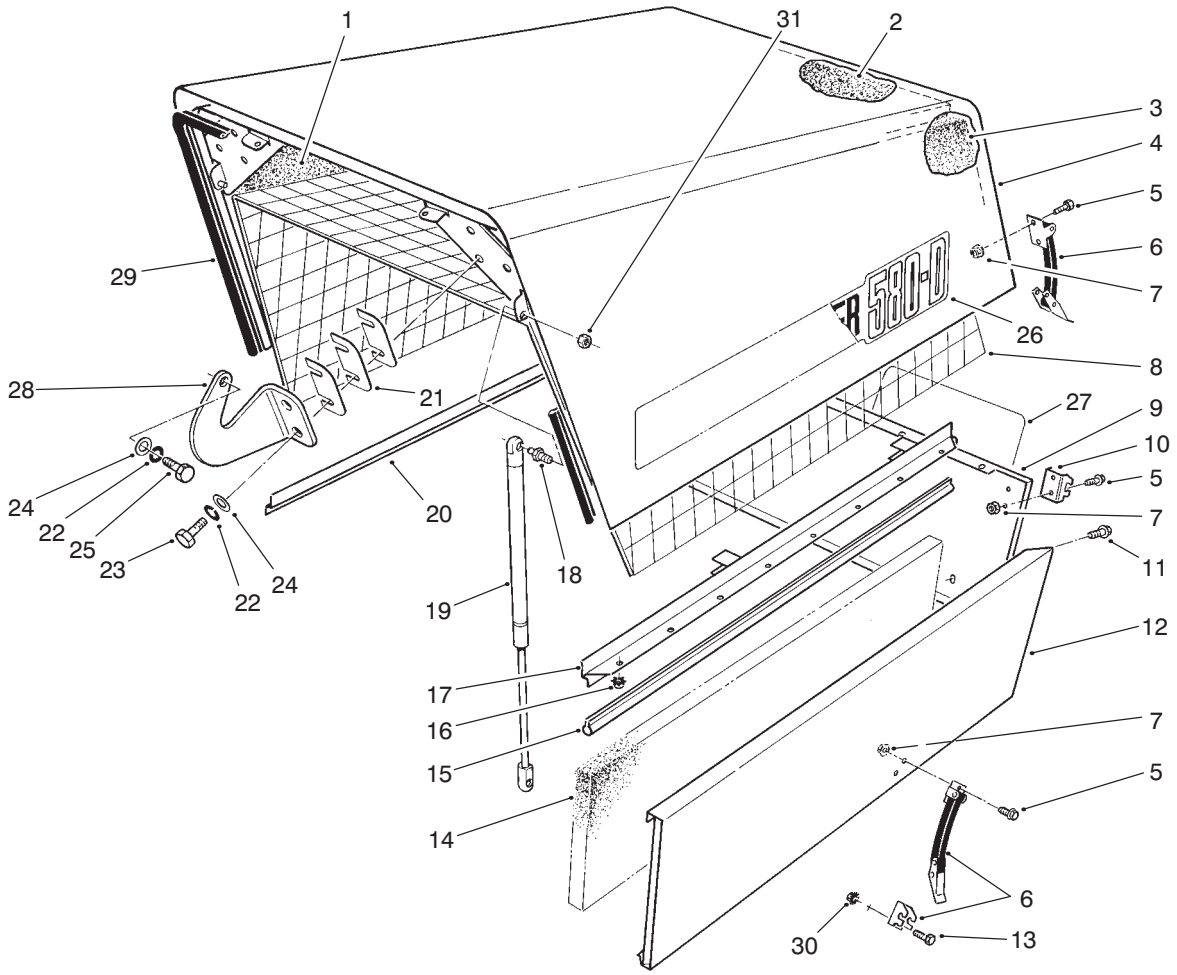


T–0360–1

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–0270	Foam – Hood Side R.H.	1
2	71–0250	Foam – Hood Top	1
3	71–0260	Foam – Hood Side L.H.	1
4	92–1772	Hood Assembly (Incl. Ref.#1–4, 8, 15–17, 20, 26 & 29)	1
5	3290–321	Screw – Cap Hex. Hd.	12
6	69–3010	Strap – Hold Down (Incl. Ref. #10)	4
7	3296–2	Nut – Flange Lock	12
8	71–0060	Support – Foam	1
9	69–9520	Panel – Rear	1
†10		Latch – Hold – Down	4
11	3234–14	Screw – Cap Hex. Hd.	6
12	69–1390	Panel – Side L.H.	1
*	69–1380	Panel – Side R.H.	1
13	3290–134	Screw – Cap Hex. Hd.	4
14	71–0400	Foam – Side Panel	2

Ref. No.	Part No.	Description	No. Used
15	69–9723	Seal – Hood Bottom	2
16	32149–2	Nut – Keps	16
17	69–8230	Bracket – Trim L.H.	1
18	88–6770	Stud – Ball	2
19	88–6760	Spring – Gas	2
20	69–8250	Bracket – Trim R.H	1
21	69–8500	Shim – Hinge Bracket	6
22	3253–21	Washer – Lock	6
23	323–6	Screw – Cap Hex. Hd.	4
24	3256–24	Washer – Flat	6
25	323–4	Screw – Cap Hex. Hd.	2
26	69–0950	Decal – 580D	2
27	66–6140	Decal – TORO	1
28	69–8520	Bracket – Hinge	2
29	69–9724	Seal – Hood Front	1
30	32149–7	Nut	4
31	32152–1	Nut	2

*Not Illustrated
†Not serviceable separately.

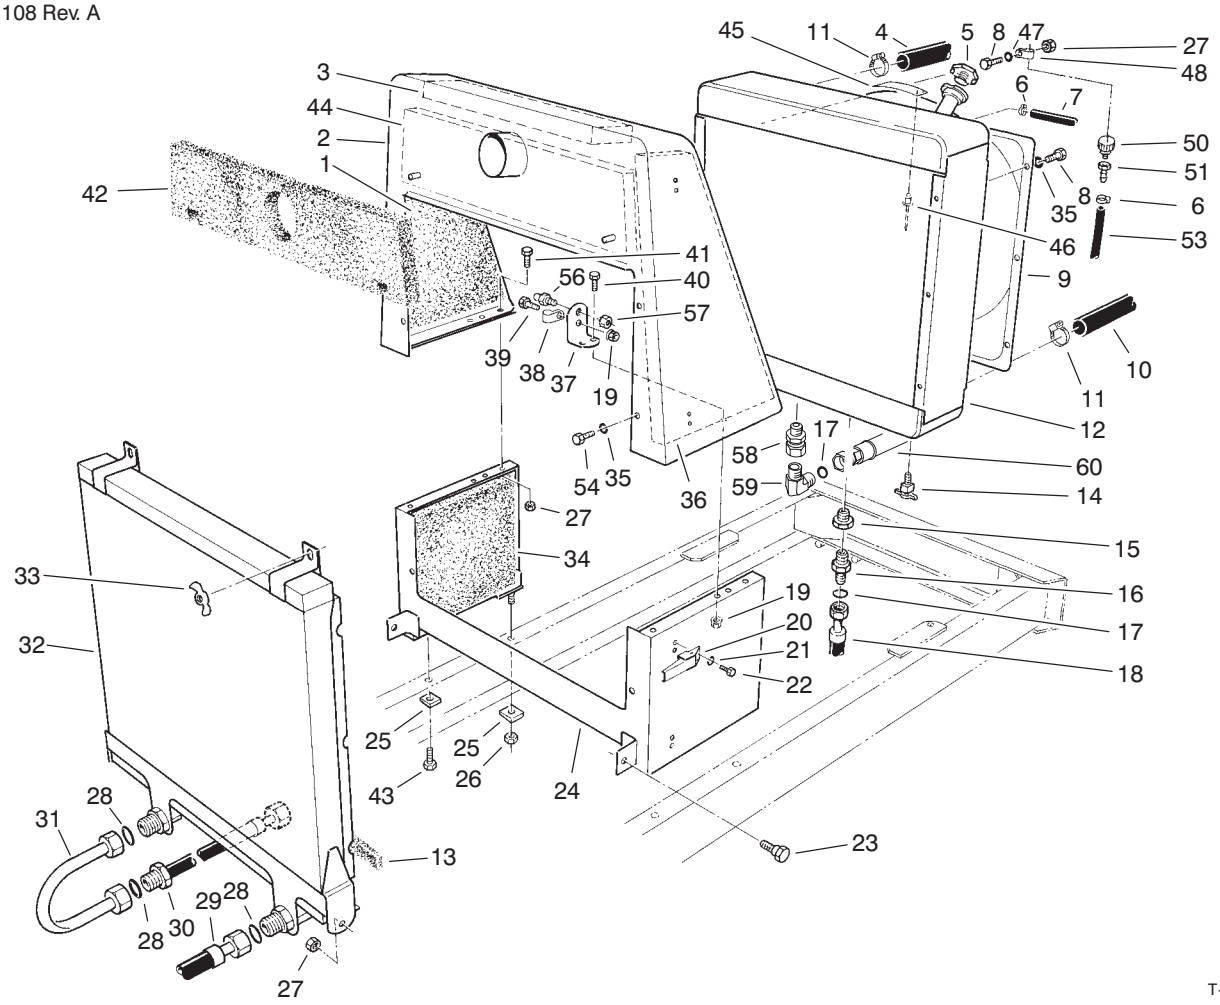


T–0359–2

RADIATOR & OIL COOLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–0350	Foam – Rad. Support R.H.	1
2	69–8590	Support – Radiator Upper	1
3	71–0360	Foam – Rad. Support Top	1
4	69–5380	Hose – Upper Radiator	1
5	66–3241	Cap – Radiator	1
6	2412–108	Clamp – Hose	2
7	23–2140	Hose – Radiator Vent	1
8	323–34	Screw – Cap Hex. Hd.	7
9	13–4239	Shroud – Fan (Incl. Ref. #45 & 46)	1
10	69–5390	Hose – Lower Radiator	1
11	2412–92	Clamp – Hose	4
12	94–2860	Radiator	1
13	71–0210	Foam – Radiator Seal	1
14	304–46	Valve – Drain	1
15	2812–4	Fitting – Reducer	1
16	340–124	Fitting – Hydraulic Straight (Incl. Ref. #17)	1
17	237–22	Seal – O–Ring	1
18	94–3335	Hose – Hydraulic	1
19	32128–20	Nut – Flange Lock	5
20	69–3020	Latch	8
21	3253–2	Washer – Lock	16
22	3290–321	Screw – Cap Hex. Hd.	16
23	46–3380	Bolt – Shoulder	2
24	69–7100	Support – Radiator Lower	1


Ref. No.	Part No.	Description	No. Used
25	3290–216	Washer – Bevel	4
26	32153–5	Nut – Lock	2
27	32152–2	Nut – Lock	7
28	340–65	Seal – O–Ring	3
29	69–5620	Hose – Hydraulic	1
30	69–8450	Hose – Hydraulic (Incl. Ref. #28)	1
31	69–5900	Tube – Hydraulic	1
32	69–1670	Cooler – Oil (Incl. Ref. #28)	1
33	32103–3	Nut – Wing	2
34	71–0370	Foam – Lower Rad. Support	2
35	3253–21	Washer – Lock	12
36	71–0340	Foam – Rad. Support L.H.	1
37	88–9450	Bracket – Hood Cylinder	2
38	2412–41	Clamp – R	1
39	322–5	Screw – Cap Hex. Hd.	1
40	322–6	Screw – Cap Hex. Hd.	4
41	323–7	Screw – Cap Hex. Hd.	4
42	71–0380	Foam – Rad. Support Front	1
43	325–6	Screw – Cap Hex. Hd.	2
44	71–0390	Foam – Rad. Support Rear	1
45	76–8750	Plate – Caution	2
46	3290–271	Rivet – Pop	4
47	3256–56	Washer – Flat	2
48	2412–147	Clamp – R	1
50	68–6150	Breather	1

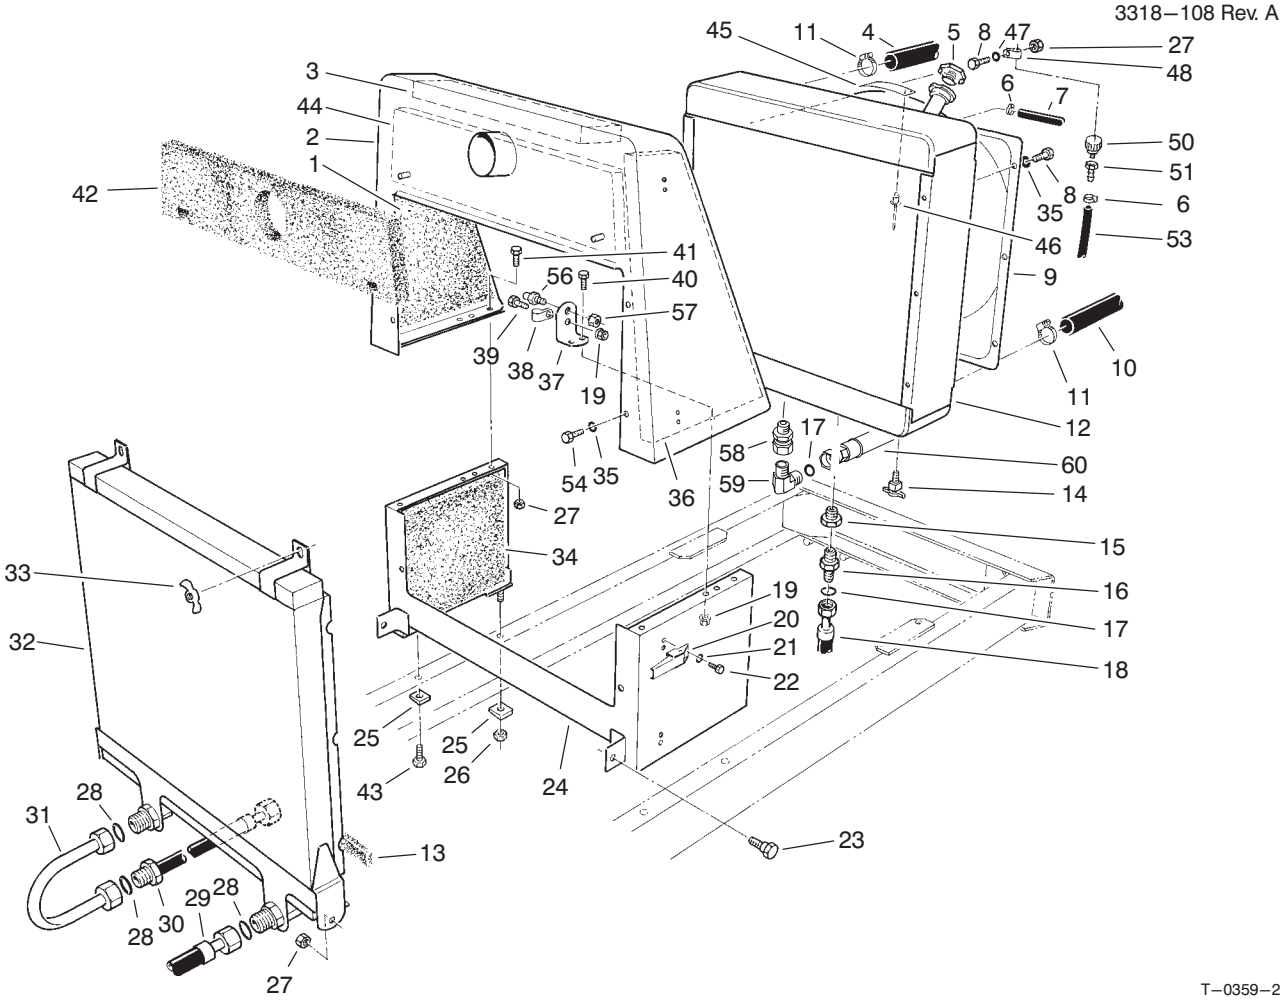

RADIATOR & OIL COOLER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
51	354–95	Fitting	1
53	71–2680	Hose – Vent	1
54	32144–69	Screw – Cap, Hex. Hd.	6
56	88–6770	Stud – Ball	2
57	32152–1	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
58	94–3336	Fitting – Hydraulic Straight	1
59	94–3337	Fitting – Hydraulic 90˚ (Incl. Ref. #17)	1
60	94–3334	Hose – Hydraulic	1

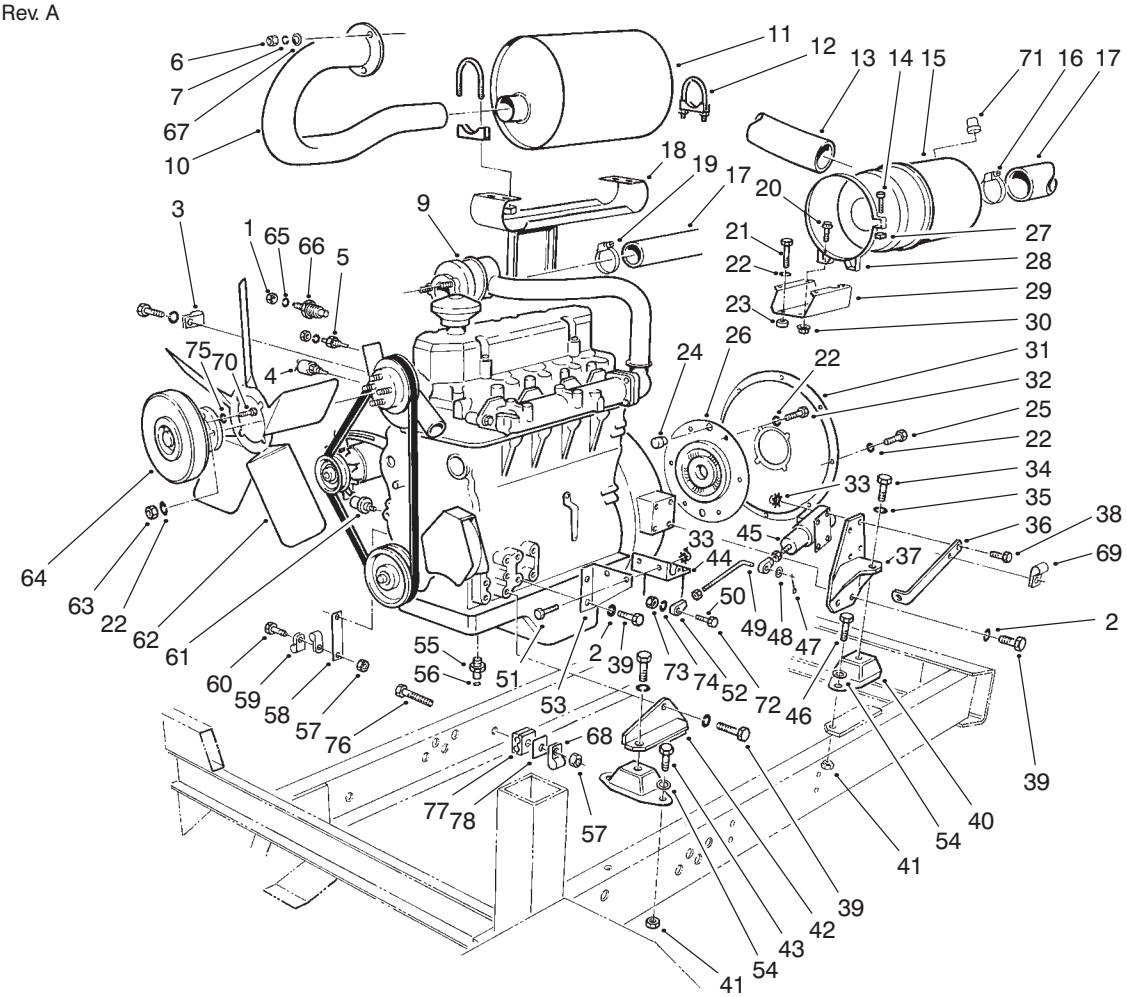


T–0347–1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3219–14	Nut – Hex.	2
2	48–8070	Washer – Lock	16
3	2412–70	Clamp – R	1
4	67–4510	Sending Unit – Temperature	1
5	39–7592	Switch – Temperature	1
6	48–7930	Nut – Lock	3
7	48–9570	Washer – Lock	3
9	69–6250	Engine – Assembly	1
10	76–0980	Pipe – Exhaust	1
11	69–9420	Muffler	1
12	20–4840	Clamp – Exhaust	2
13	69–5350	Hose – Air Cleaner Inlet	1
14	3258–19	Screw – Machine	2
15	69–1890	Air Cleaner Assembly	1
16	2412–110	Clamp – Hose	3
17	69–5360	Hose – Air Cleaner	1
18	93–4382	Bracket – Muffler	1
19	2412–42	Clamp – Hose	1
20	3234–14	Screw – Hex. Washer Hd.	4
21	48–9480	Screw – Cap Hex. Hd.	4
22	48–9590	Washer – Lock	22
23	17–7190	Spacer	4
24	58–3590	Pin – Flywheel	2
25	48–9470	Screw – Cap Hex. Hd.	8
26	92–1753	Coupling – Spring Centering	1
27	32107–11	Nut – Square	2
28	69–1950	Band – Air Cleaner (Incl. Ref. #14 & 27)	2

Ref. No.	Part No.	Description	No. Used
29	69–9530	Bracket – Air Cleaner	1
30	32128–20	Nut – Flange Lock	4
31	69–9550	Plate – Adapter	1
32	48–7780	Screw – Cap Hex. Hd.	6
33	32149–2	Nut – Keps	5
34	69–8410	Screw – Cap Hex. Hd.	4
35	69–8420	Washer – Lock	4
36	69–8490	Bracket – Throttle Cable	1
37	85–6210	Bracket – Rear Eng. Mount	2
38	321–6	Screw – Cap Hex. Hd.	3
39	69–0060	Screw – Cap Hex. Hd.	16
40	69–1660	Mount – Engine	4
41	32153–5	Nut – Lock	8
42	69–7580	Bracket – Front Engine Mount L.H.	1
*	69–7570	Bracket – Front Engine Mount R. H.	1
43	325–17	Screw – Cap Hex. Hd.	4
44	69–1750	Fuel Filter Assembly	1
45	85–6230	Solenoid – Engine Run	1
46	325–4	Screw – Cap Hex. Hd.	4
47	3272–6	Pin – Cotter	1
48	3256–1	Washer – Flat	1
49	69–9110	Rod – Engine Run Solenoid	1
50	3220–1	Nut – Jam	2
51	321–4	Screw – Cap Hex. Hd.	2
52	2411–41	End – Rod	2
53	69–9360	Bracket – Fuel Filter	1

*Not Illustrated

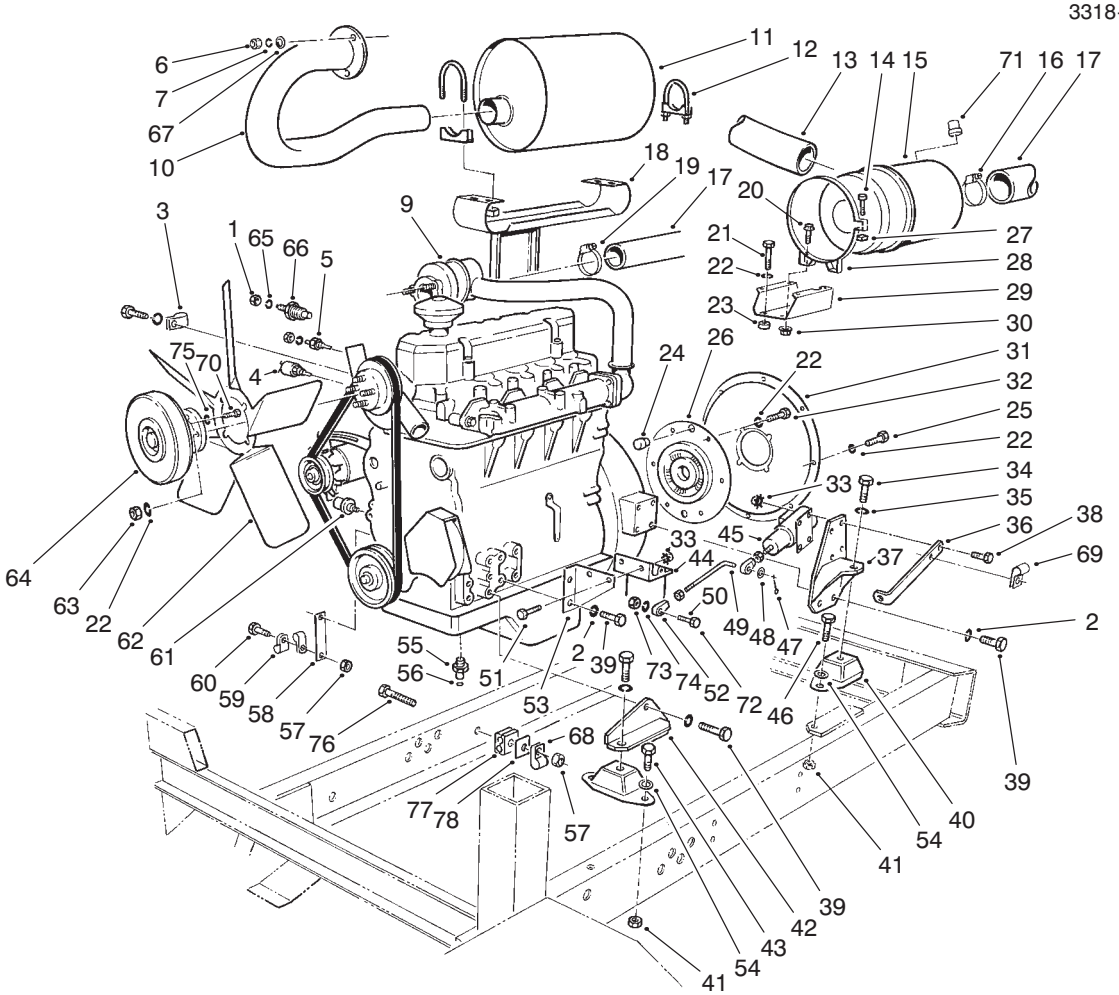


T—0347—1

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
54	3256—26	Washer — Flat	8
55	69—8460	Fitting — Hydraulic Straight (Incl. Ref. #56)	2
56	237—22	Seal — O—Ring	2
57	32152—1	Nut — Lock	2
58	69—9070	Bracket — Clamp	1
59	2412—41	Clamp — R	2
60	323—6	Screw — Cap Hex. Hd.	1
61	71—4280	Sending Unit — Oil Pressure	1
62	69—1680	Fan	1
63	69—9710	Nut — Lock	4
64	69—1690	Clutch — Fan	1
65	3253—2	Washer — Lock	2

Ref. No.	Part No.	Description	No. Used
66	39—7591	Thermo Switch Assembly	1
67	3256—3	Washer — Flat	3
68	2412—39	Clamp — R	1
69	2412—73	Clamp — R	1
70	323—4	Screw — Cap Hex. Hd.	4
71	69—1940	Indicator — Electrical	1
72	48—7630	Screw	1
73	48—7890	Nut — Hex.	1
74	3253—3	Washer — Lock	1
75	3253—21	Washer — Lock	4
76	322—13	Screw — Cap Hex. Hd.	1
77	56—7974	Clamp Half — Hydraulic Line	2
78	69—9761	Plate — Cover	1


*Not Illustrated

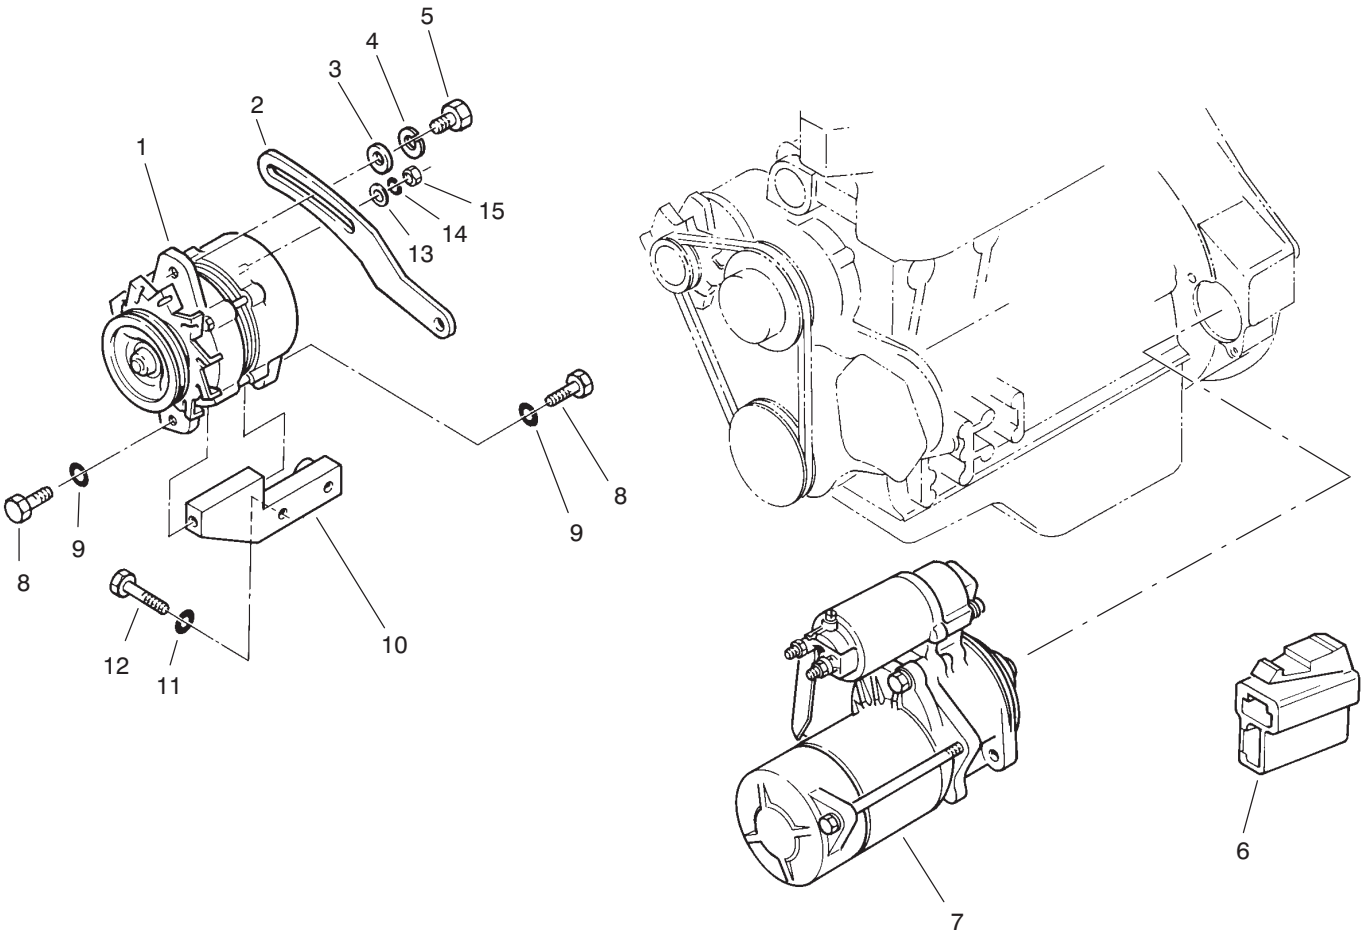

STARTER & ALTERNATOR INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–5760	Alternator Assembly	1
2	70–5740	Plate	1
3	51–8590	Washer	1
4	51–7250	Washer – Lock	1
5	60–7370	Bolt	1
6	59–6910	Connector	1
7	70–5860	Starter Assembly	1
8	51–8640	Bolt	2

Ref. No.	Part No.	Description	No. Used
9	51–6390	Washer – Lock	2
10	70–5750	Bracket	1
11	51–8610	Washer – Lock	2
12	70–2940	Bolt	2
13	5–3637	Washer – Flat	1
14	43–5920	Washer – Lock	1
15	43–5970	Nut – Hex.	1

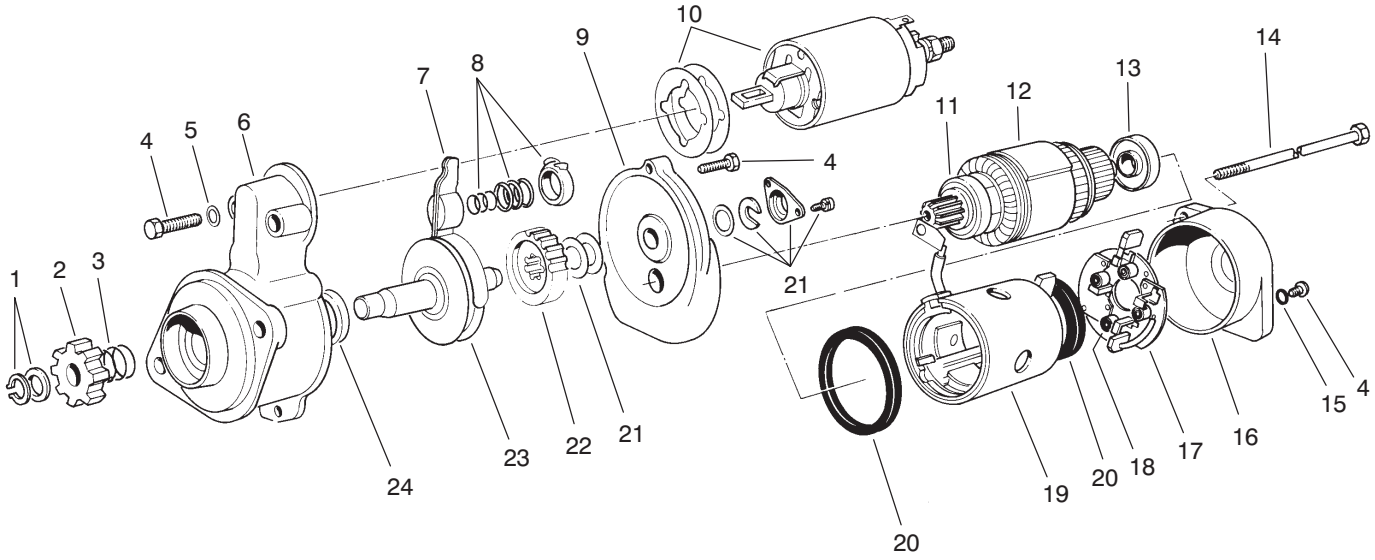


T—0160—1

STARTER MOTOR ASSEMBLY NO. 70—5860

Ref. No.	Part No.	Description	No. Used
1	51—7740	Retaining Ring Assembly	1
2	51—7730	Gear Pinion Assembly (Incl. Ref. #1 & 3)	1
†3		Spring	1
4	51—7600	Screw Set	1
5	51—7610	Packing	2
6	70—3280	Cover Assembly Front (Incl. Ref. #24)	1
7	51—7640	Lever Assembly	1
8	51—7650	Spring Assembly	1
9	51—7660	Bracket Assembly Center	1
10	51—7670	Solenoid	1
11	51—7690	Bearing	1
12	70—3260	Armature Assembly (Incl. Ref. #11 & 13)	1
13	70—3330	Bearing	1

Ref. No.	Part No.	Description	No. Used
14	70—3310	Bolt Set	1
15	51—7840	Ring — Rubber	2
16	51—7830	Cover — Rear	1
17	70—3290	Brush Holder Assembly (Incl. Ref. #18)	1
18	70—3270	Spring — Brush	4
19	70—3300	Yoke Assembly	1
20	51—7790	Packing	2
21	51—7780	Cover Assembly	1
22	51—7770	Gear — Pinion	1
23	51—7760	Shaft Assembly	1
24	51—7630	Seal — Oil	1
*	51—7750	Gear Assembly (Incl. Ref. #22 & 23)	1
*	51—7720	Clutch Assy. (Incl. Ref. #1—3 & 21—24)	1

*Not Illustrated
†Not Serviceable Separately

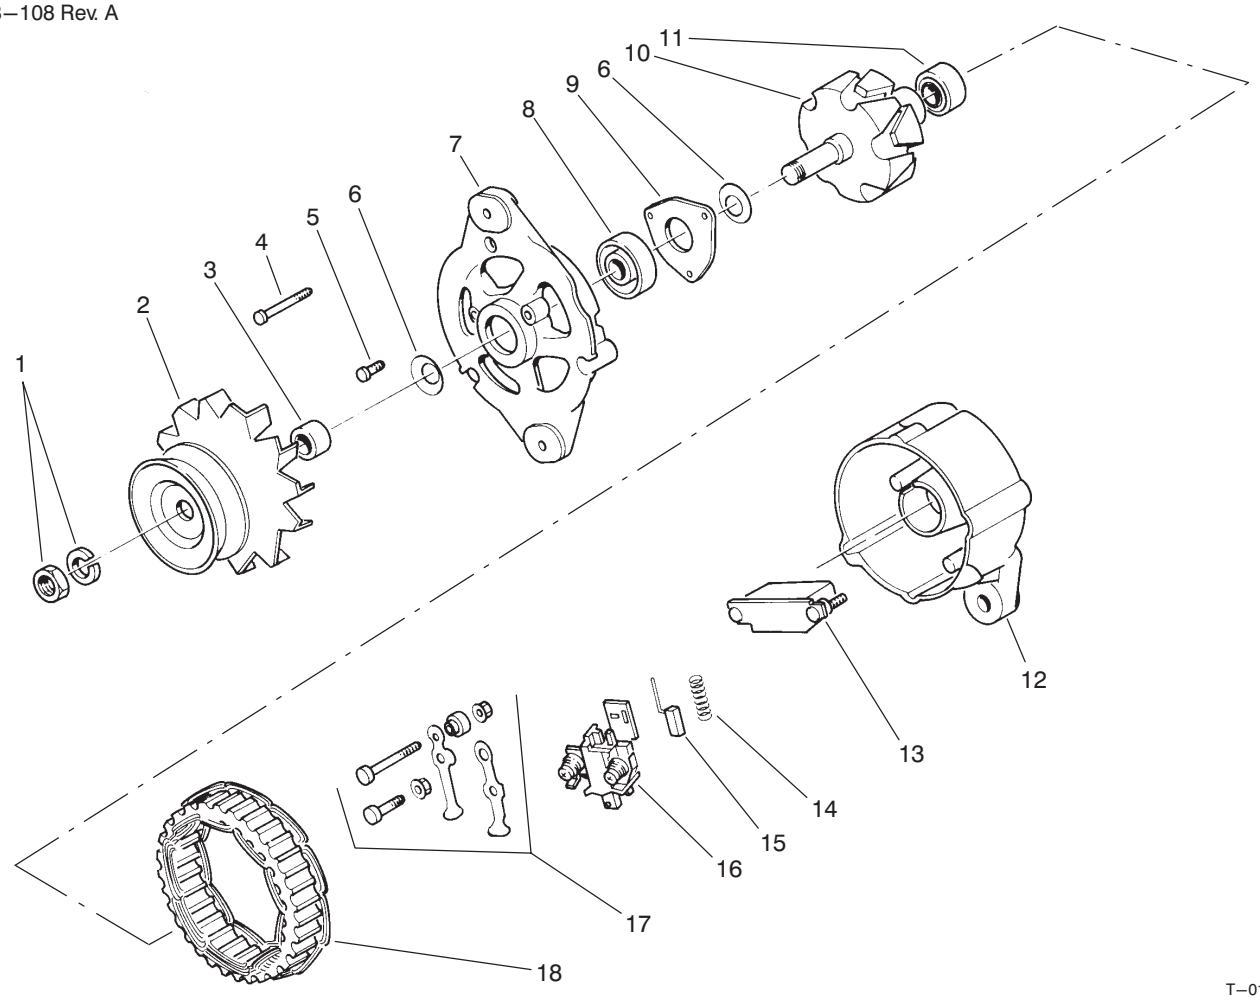


T–0161–1

ALTERNATOR ASSEMBLY NO. 70–5760

Ref. No.	Part No.	Description	No. Used
1	51–7850	Nut Assembly	1
2	70–2800	Pulley Assembly (Incl. Ref. #3)	1
†3		Collar – Shaft	1
4	51–7870	Screw Set	1
5	51–7890	Screw Set	1
†6		Spring Washer	2
7	60–5340	Cover Assembly – Front (Incl. Ref. #5, 6, 8 & 9)	1
8	70–3320	Bearing	1
†9		Plate – Bearing Retainer	1

Ref. No.	Part No.	Description	No. Used
10	51–7910	Rotor Assembly (Incl. Ref. #11)	1
11	60–5360	Bearing	1
12	60–5380	Cover Assembly – Rear (Incl. Ref. #13–17)	1
13	60–5370	Rectifier Assembly	1
14	70–2810	Spring – Return	2
15	51–7970	Brush	2
16	51–7960	Regulator Assembly (Incl. Ref. #14 & 15)	1
17	51–7950	Terminal Assembly	1
18	51–7930	Stator	1

†Not Serviceable Separately

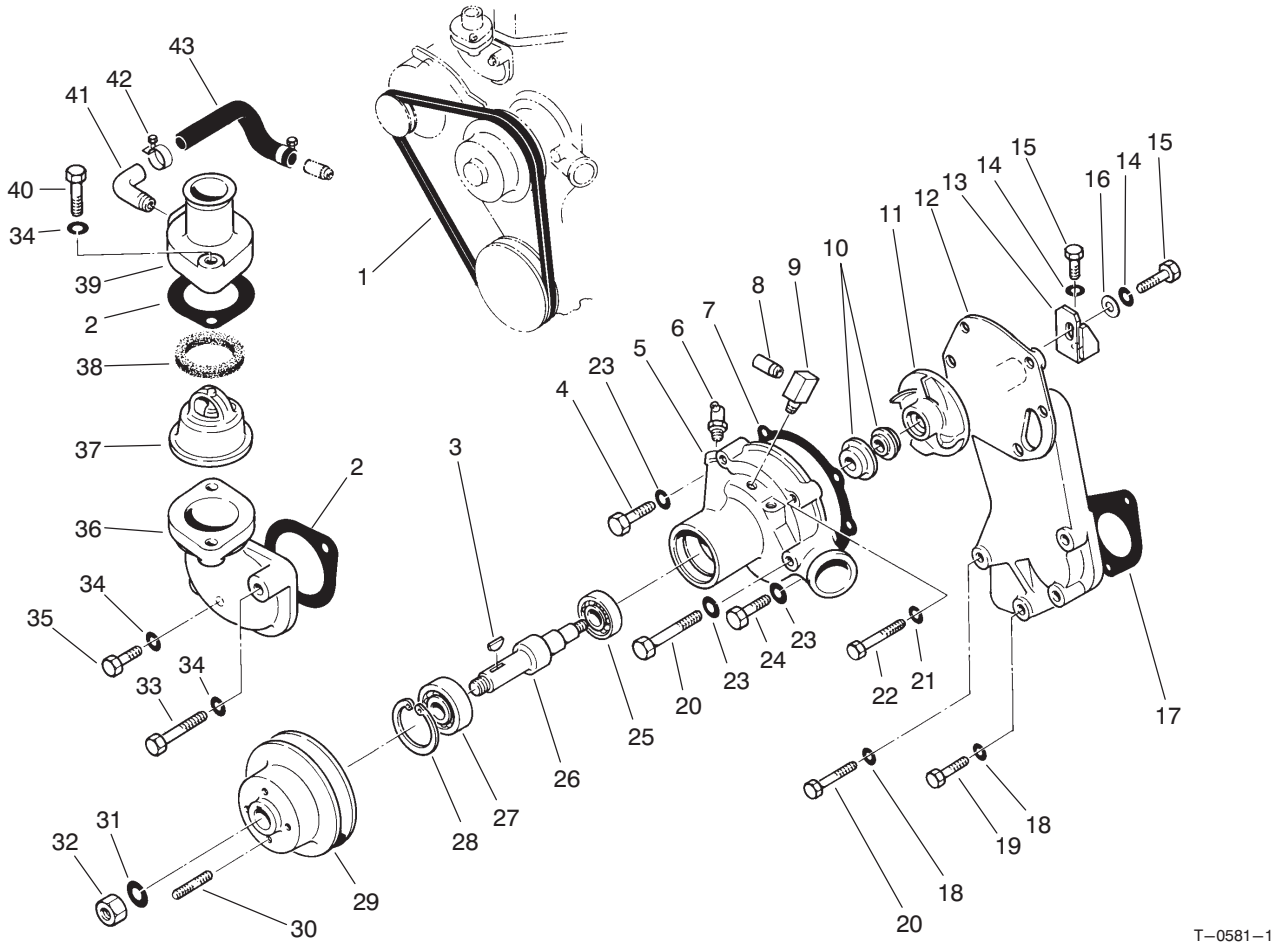


WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70—3450	V—Belt	1
†2	51—7210	Gasket	2
3	51—6960	Key	1
4	70—2910	Bolt	1
5	70—5600	Water Pump Assembly (Incl. Ref #3—4, 6, 8—11 & 25—32)	1
6	51—7020	Nipple	1
7	70—5650	Gasket	1
8	51—7170	Pipe	1
9	70—5620	Connector	1
10	51—7030	Seal	1
11	70—5610	Impeller	1
12	70—5640	Bracket	1
13	70—5670	Stay	1
14	51—6390	Washer — Lock	2
15	70—2890	Bolt	2
16	70—2990	Washer	1
†17	70—5660	Gasket	1
18	51—6390	Washer — Lock	4
19	70—2900	Bolt	1
20	70—2920	Bolt	3
21	51—6920	Washer — Lock	2

Ref. No.	Part No.	Description	No. Used
22	70—2850	Bolt	2
23	51—6390	Washer — Lock	4
24	51—4910	Bolt	2
25	51—6980	Bearing	1
26	70—5630	Shaft	1
27	51—6950	Bearing	1
28	51—6940	Ring	1
29	70—5680	Pulley	1
30	70—2950	Stud	4
31	51—6920	Washer — Lock	1
32	51—6910	Nut	1
33	70—2860	Bolt	1
34	51—7250	Washer — Lock	4
35	60—7280	Bolt	1
36	70—5690	Elbow	1
37	51—7230	Thermostat	1
†38	51—7220	Gasket	1
39	70—5050	Cover	1
40	60—7040	Bolt	2
41	70—5590	Connector	1
42	51—7200	Clamp	2
43	70—5040	Hose	1

†Included in Gasket Set No. 70—6950

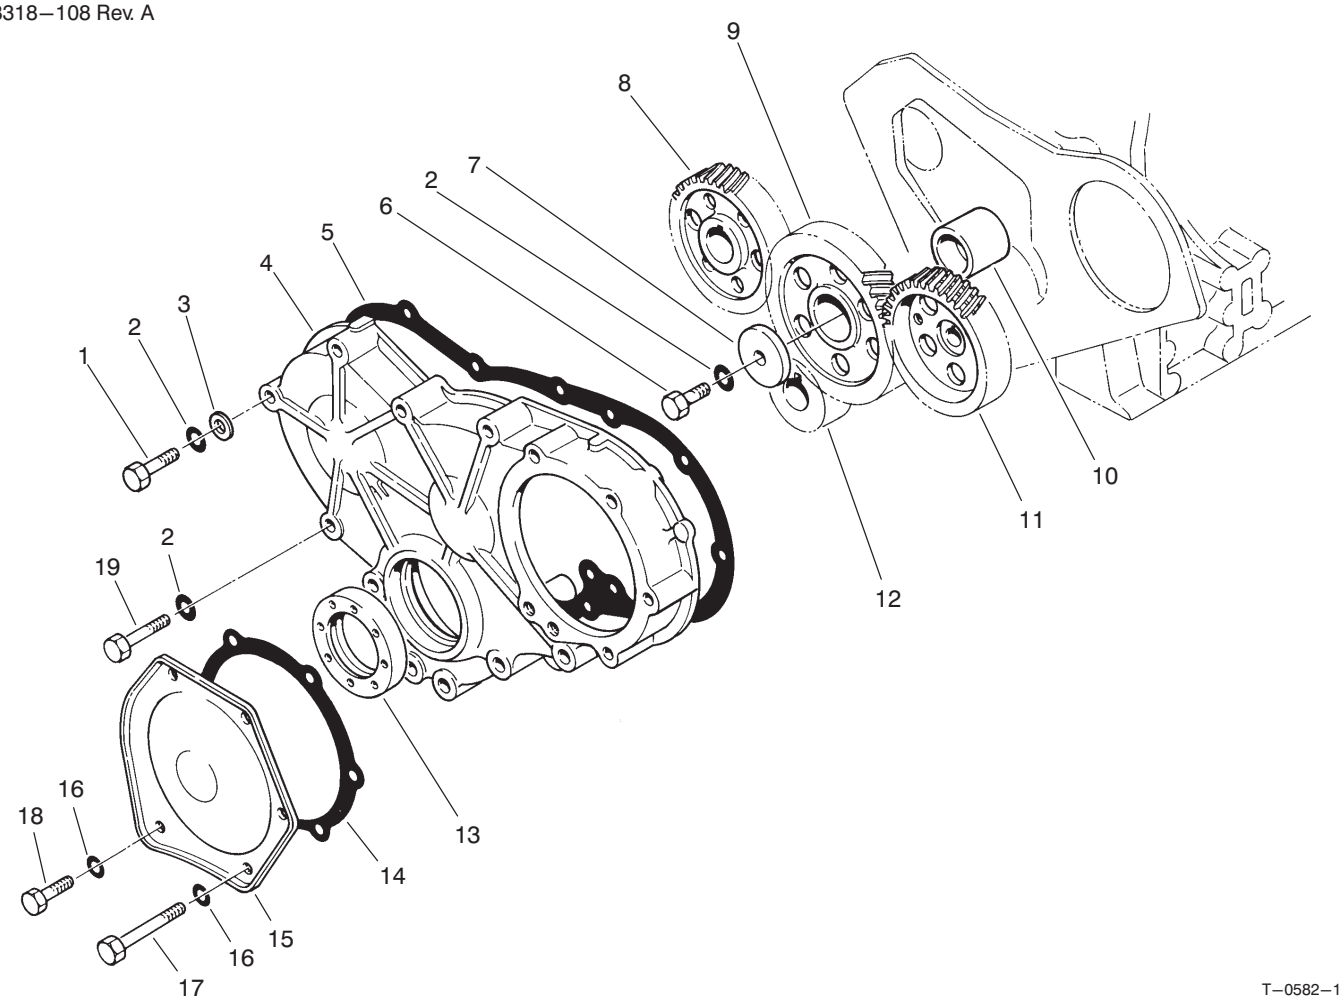


T−0582−1

TIMING GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51−4920	Bolt	1
2	51−6390	Washer − Lock	11
3	70−2990	Washer	1
4	70−5790	Case	1
†5	70−5370	Gasket	1
6	60−7210	Bolt	1
7	51−6400	Plate	1
8	70−5020	Gear − Camshaft	1
9	70−5450	Idler Assembly (Incl. Ref. #10)	1

Ref. No.	Part No.	Description	No. Used
10	51−6430	Bushing	1
11	70−6040	Gear − Injection Pump	1
12	70−5830	Gear − Crankshaft	1
†13	70−5780	Seal	1
†14	51−5860	Gasket	1
15	51−5850	Cover	1
16	51−7250	Washer − Lock	5
17	70−2860	Bolt	4
18	60−7110	Bolt	1
19	70−2930	Bolt	9

†Included in Gasket Set No. 70−6950
‡Included In Oil Seal Kit No. 70−6960

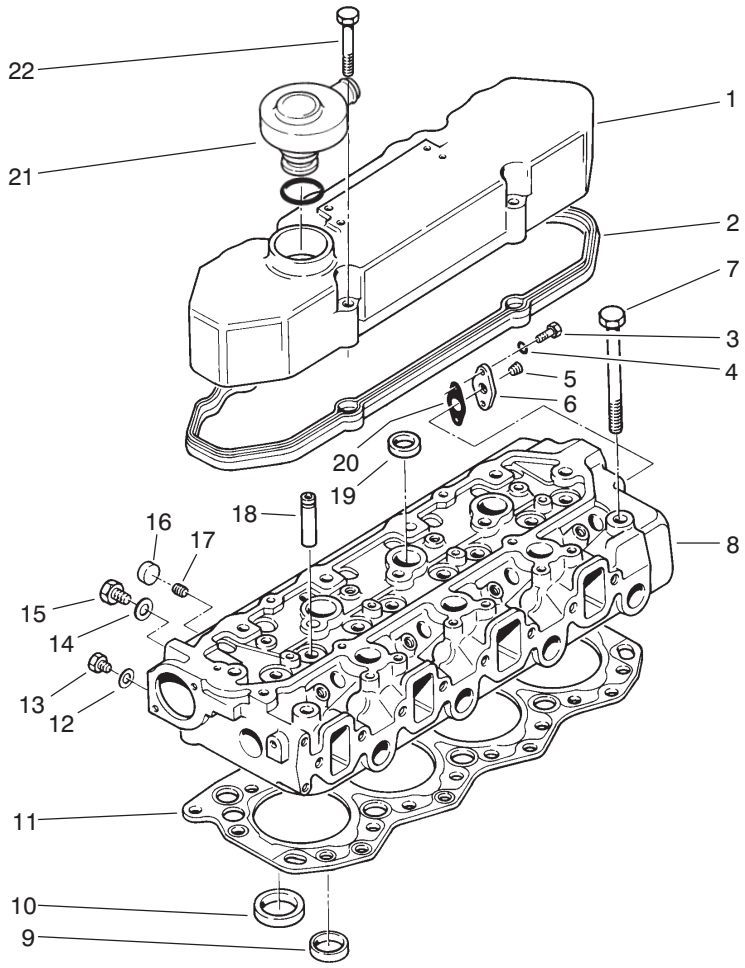


T—0583—1

ROCKER COVER & CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93—3681	Cover	1
†2	93—3682	Gasket	1
3	60—7280	Bolt	2
4	51—7250	Washer — Lock	2
5	70—5140	Plug	1
6	70—5890	Flange	1
7	63—4740	Bolt	17
8	70—5900	Cylinder Head Assembly (Incl. Ref. #3—6, 9—10 & 12—20)	1
9	70—5870	Insert — Exhaust	4
10	70—5880	Insert — Inlet	4

Ref. No.	Part No.	Description	No. Used
†11	70—5130	Gasket	1
†12	51—5840	Washer	1
13	70—3100	Plug	1
†14	51—6890	Gasket	1
15	70—3230	Plug	1
16	70—3360	Cap	4
17	70—3390	Plug	4
18	51—4950	Guide	8
19	70—3380	Cap	15
20	70—5090	Gasket	1
21	70—5570	Breather	1
22	70—2930	Bolt	4

†Included in Gasket Set No. 70—6950

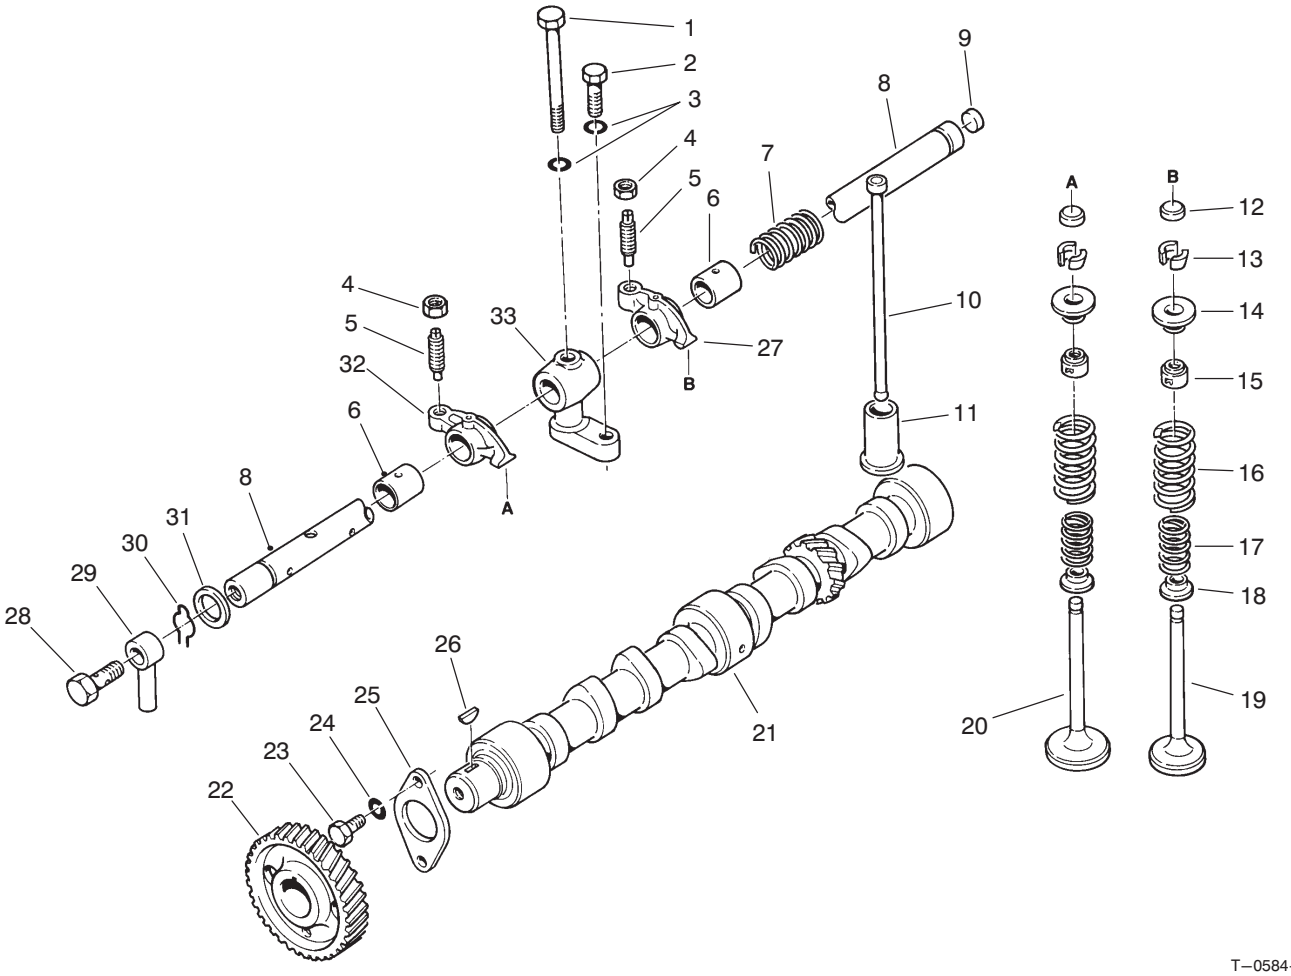


T−0584−1

VALVE & CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70−2870	Bolt	4
2	60−7280	Bolt	4
3	51−7250	Washer − Lock	8
4	70−2970	Nut	8
5	70−3160	Screw	8
6	70−5080	Bushing	8
7	70−5190	Spring	3
8	70−5180	Rocker Shaft Assembly (Incl. Ref. #9)	1
9	51−5090	Plug	1
10	70−5230	Rod − Push	8
11	70−5010	Tappet	8
12	51−5280	Cap	8
13	51−5290	Cotter (Available in set w/pair)	16
14	51−5300	Retainer	8
‡15	51−5310	Seal	8
16	70−5930	Spring	8
17	70−4990	Spring	8

Ref. No.	Part No.	Description	No. Used
18	70−5000	Retainer	8
19	70−5920	Valve − Exhaust	4
20	70−5910	Valve − Inlet	4
21	70−5940	Camshaft	1
22	70−5020	Gear − Camshaft	1
23	60−7110	Bolt	2
24	51−7250	Washer − Lock	2
25	51−5470	Plate	1
26	51−5460	Key	1
27	70−5160	Rocker Assembly − Exhaust (Incl. Ref. #4−6)	4
28	70−3050	Bolt	1
29	70−5170	Pipe	1
30	51−5260	Ring − Retaining	2
31	70−5110	Washer	2
32	70−5150	Rocker Assembly − Intake (Incl. Ref. #4−6)	4
33	70−5200	Bracket	4


‡Included in Oil Seal Kit No. 70−6960

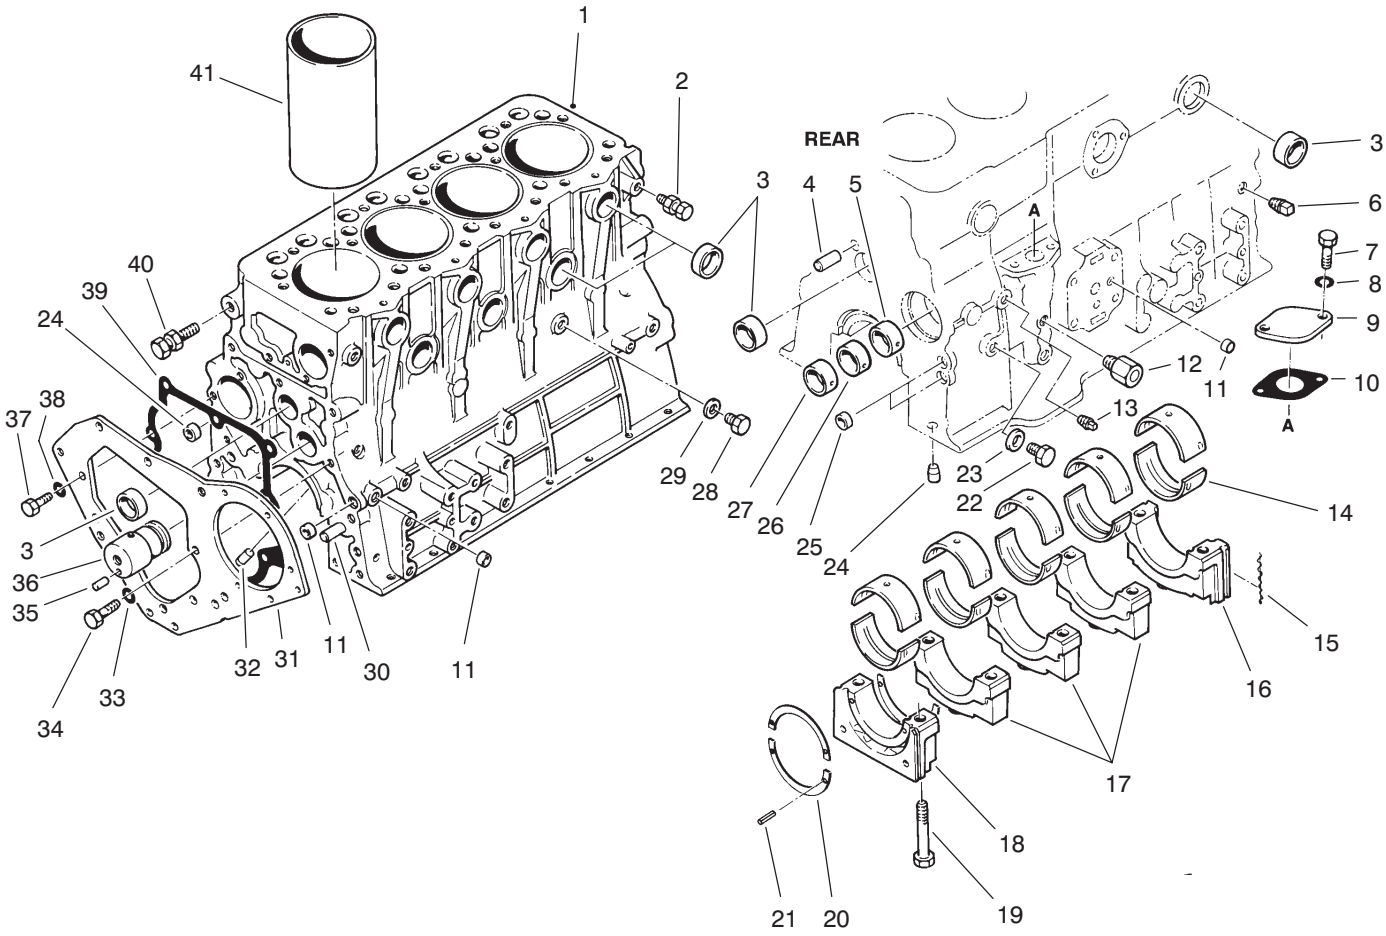

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70—5960	Crankcase Assembly (Incl. Ref. #2—6, 11, 13, 15—19, 21—30, 32, 35—36, & 40—41)	1
2	51—5580	Hanger	1
3	51—5600	Cap	11
4	70—3000	Pin	2
5	51—5500	Bushing No. 1	1
6	70—3400	Plug	6
7	60—7280	Bolt	2
8	51—7250	Washer	2
9	51—6480	Cover	1
†10	51—6490	Gasket	1
11	70—3350	Cap	6
12	70—5950	Connector	1
13	70—3410	Plug	1
14	70—5350	Bearing — Main (Std.)	10
14	70—5351	Bearing — Main U.S. 0.25mm	10
14	70—5352	Bearing — Main U.S. 0.50mm	10
14	70—5353	Bearing — Main U.S. 0.75mm	10
‡15	70—5240	Seal	4
16		Cap — Bearing No. 1	1
17		Cap — Bearing No. 2,3, & 4	3
18		Cap — Bearing No. 5	1
19	70—5300	Bolt	10
20	70—5360	Plate — Thrust (Std.)	3
20	70—5361	Plate — Thrust O.S. 0.15mm	3
20	70—5362	Plate — Thrust O.S. 0.30mm	3
20	70—5363	Plate — Thrust O.S. 0.45mm	3
21	51—5650	Pin	6
22	70—3120	Plug	1
†23	70—3080	Gasket	1
24		Plug	2
25	70—3370	Cap	3
26	51—5510	Bushing — No. 2	1
27	51—5520	Bushing — No. 3	1
28	51—8280	Bolt	1
†29	51—8270	Washer	1
30	70—5320	Pin	2
31	70—5250	Plate	1
32	70—5340	Valve	4
33	51—6390	Washer	1
34	70—2890	Bolt	1
35	51—5650	Pin	1
36	51—5640	Idler Shaft Assembly (Incl. Ref. #35)	1
37	60—7110	Bolt	1
38	51—7250	Washer	1
†39	70—5260	Gasket	1
40	70—5290	Hanger	1
41	70—5280	Sleeve	4

†Included in Gasket Set No. 70—6950
‡Included In Oil Seal Kit No. 70—6960

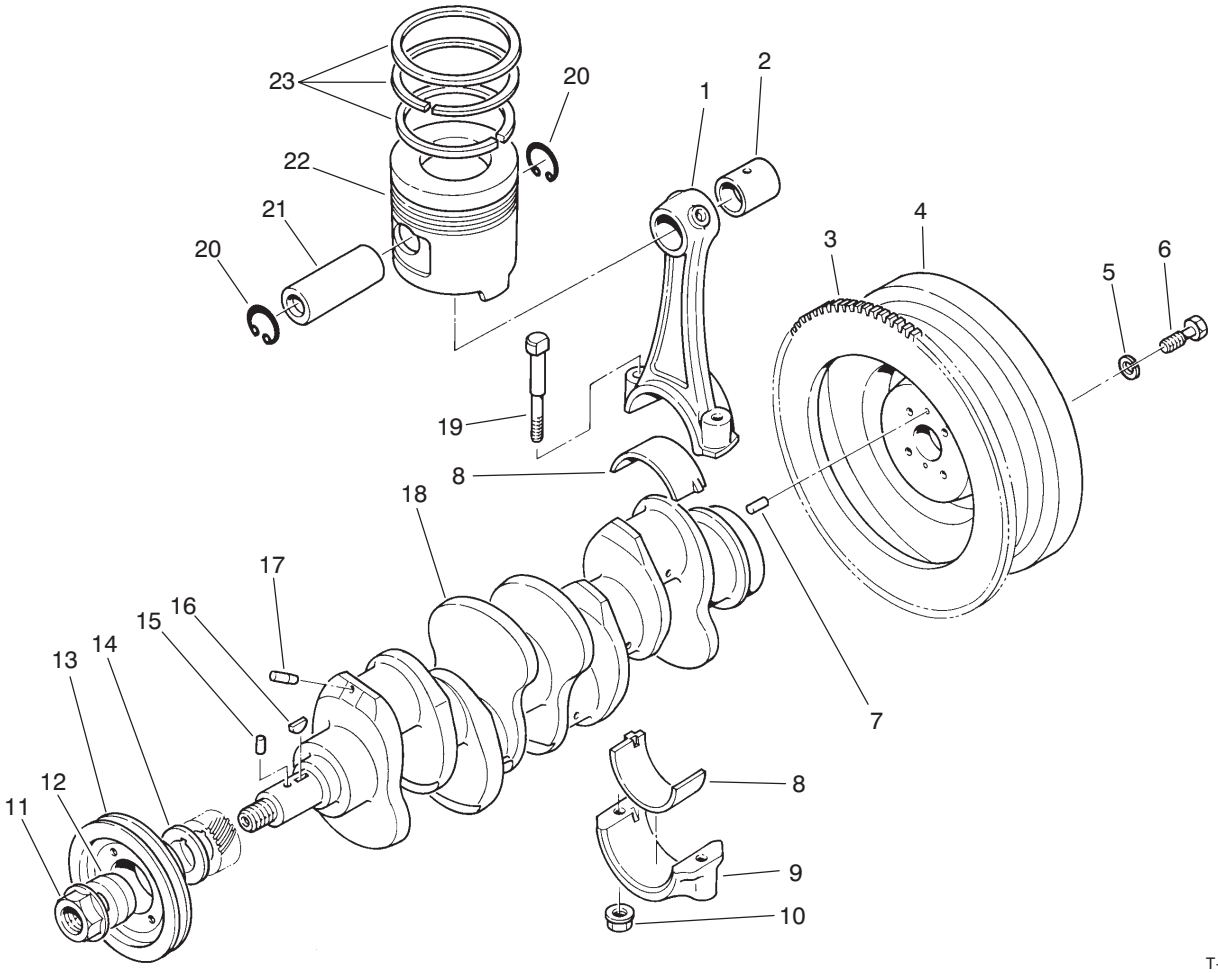


T−0586−1

PISTON, CONNECTING ROD, CRANKSHAFT & FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	70−5990	Connecting Rod − Std. (Incl. Ref. #2, 8−10 & 19)	4
2	70−6000	Bushing	4
3	51−6350	Gear	1
4	70−6030	Flywheel Assembly (Incl. Ref. #3)	1
5	51−8610	Washer − Lock	4
6	70−2880	Bolt	4
7	70−5800	Pin	2
8	70−5430	Bearing − Rod (Std.)	8
9		Cap	4
10	70−5420	Nut	8
11	70−3170	Nut	1
12	70−5820	Cone	1
13	70−5440	Pulley	1
14	70−5810	Plate	1
15	51−5650	Pin	1
16	51−5460	Key	1
17		Plug	2
18	70−6020	Crankshaft Assembly (Incl. Ref. #7, 11, & 15−17)	1
19	70−6010	Bolt	8
20	70−3020	Ring	8
21	70−5410	Pin	4
22	70−5980	Piston (Std.)	4
23	70−5400	Ring Set − Std.	4
*	70−5401	Ring Set − O.S. 0.25mm	4
*	70−5402	Ring Set − O.S. 0.50mm	4
*	70−5431	Bearing − Rod U.S. 0.25mm	4
*	70−5432	Bearing − Rod U.S. 0.50mm	4
*	70−5433	Bearing − Rod U.S. 0.75mm	4
*	70−5981	Piston − O.S. 0.25mm	4
*	70−5982	Piston − O.S. 0.50mm	4

*Not Illustrated

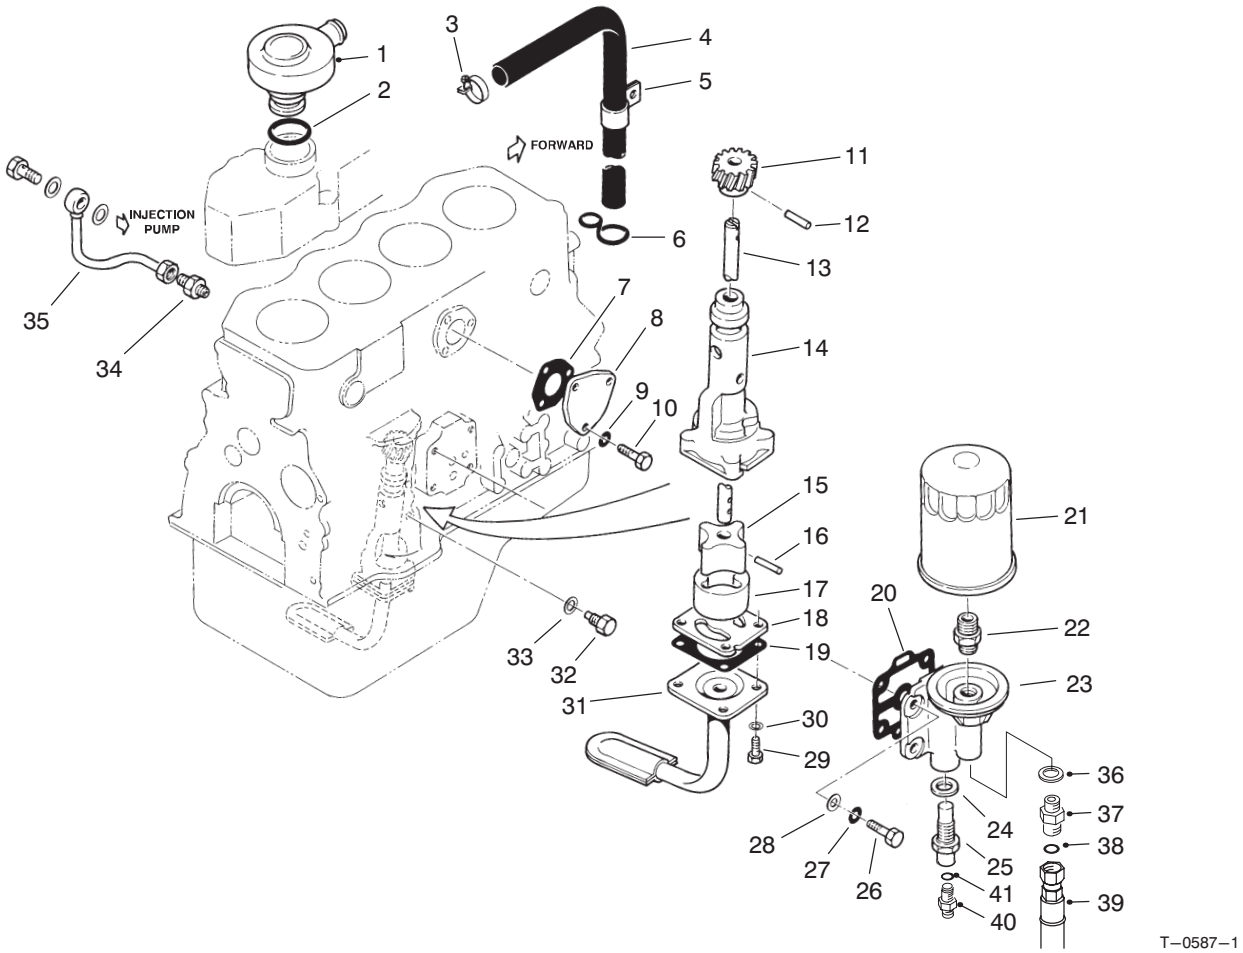


OIL PUMP, BREATHER & FILTER

Ref. No.	Part No.	Description	No. Used
1	70—5570	Breather	1
†2	70—3220	O—Ring	1
3	70—3090	Clamp	1
4	70—3030	Tube	1
5	70—3420	Clip	1
6	70—5580	Stay	1
†7	70—5100	Gasket	1
8	70—5270	Cover	1
9	51—7250	Washer	3
10	60—7110	Bolt	3
11		Gear	1
12		Pin	1
13		Shaft	1
14	70—5840	Oil Pump Assembly (Incl. Ref. #11—13, 15—18 & 29—30)	1
15		Rotor	1
16		Pin	2
17		Rotor	1
18	70—5850	Cover	1
†19	70—5510	Gasket	1
†20	70—5550	Gasket	1
21	49—2500	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
22	70—5520	Union	1
23	70—5530	Bracket Assembly (Incl. Ref. #22, 24 & 25)	1
24	51—6820	Washer	1
25	51—6830	Relief Valve Assembly	1
26	60—7480	Bolt	4
27	51—6390	Washer — Lock	4
28	70—2990	Washer	4
29	60—7290	Bolt	4
30	51—7400	Washer	4
31	70—5500	Strainer	1
32	70—5120	Bolt	1
†33	70—3070	Gasket	1
34	70—3340	Connector	1
35	70—5030	Pipe	1
36	70—3080	Gasket	1
37	69—8460	Fitting — Hydraulic Straight (Incl. Ref. #38)	1
38	237—22	Seal — O—Ring	1
39	69—8430	Hose — Hydraulic	1
40	94—2867	Valve — Relief	1
*	70—5540	Oil Filter Assembly (Incl. Ref. #21—25)	1

†Included in Gasket Set No. 70—6950

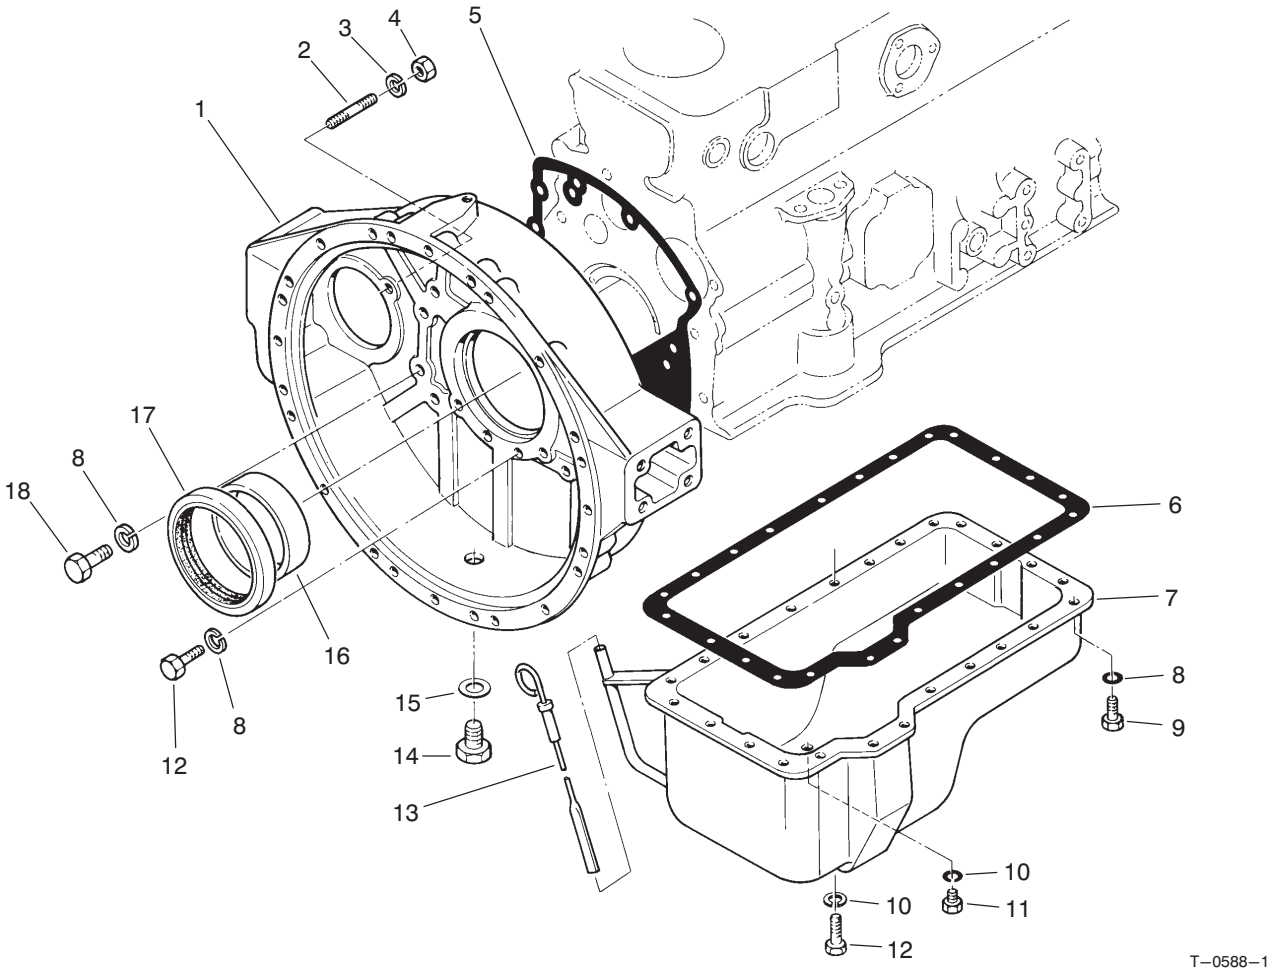


FLYWHEEL HOUSING & OIL PAN ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–5970	Housing	1
2	51–5950	Stud	2
3	51–6390	Washer – Lock	13
4	51–5970	Nut	2
†5	70–5330	Gasket	1
†6	70–5390	Gasket	1
7	70–5380	Pan – Oil (Incl. Ref. #10 & 11)	1
8	51–7250	Washer – Lock	28
9	60–7280	Bolt	23

Ref. No.	Part No.	Description	No. Used
†10	70–3470	Washer – Drain Plug	1
11	70–3110	Plug – Drain	1
12	60–7370	Bolt	5
13	70–5560	Gage	1
14	70–3230	Plug	1
†15	51–6890	Gasket – Plug	1
16		Sleeve	1
‡17	51–5890	Oil Seal Assembly (Incl. Ref. #16)	1
18	70–2900	Bolt	11

†Included in Gasket Set No. 70–6950
‡Included In Oil Seal Kit No. 70–6960

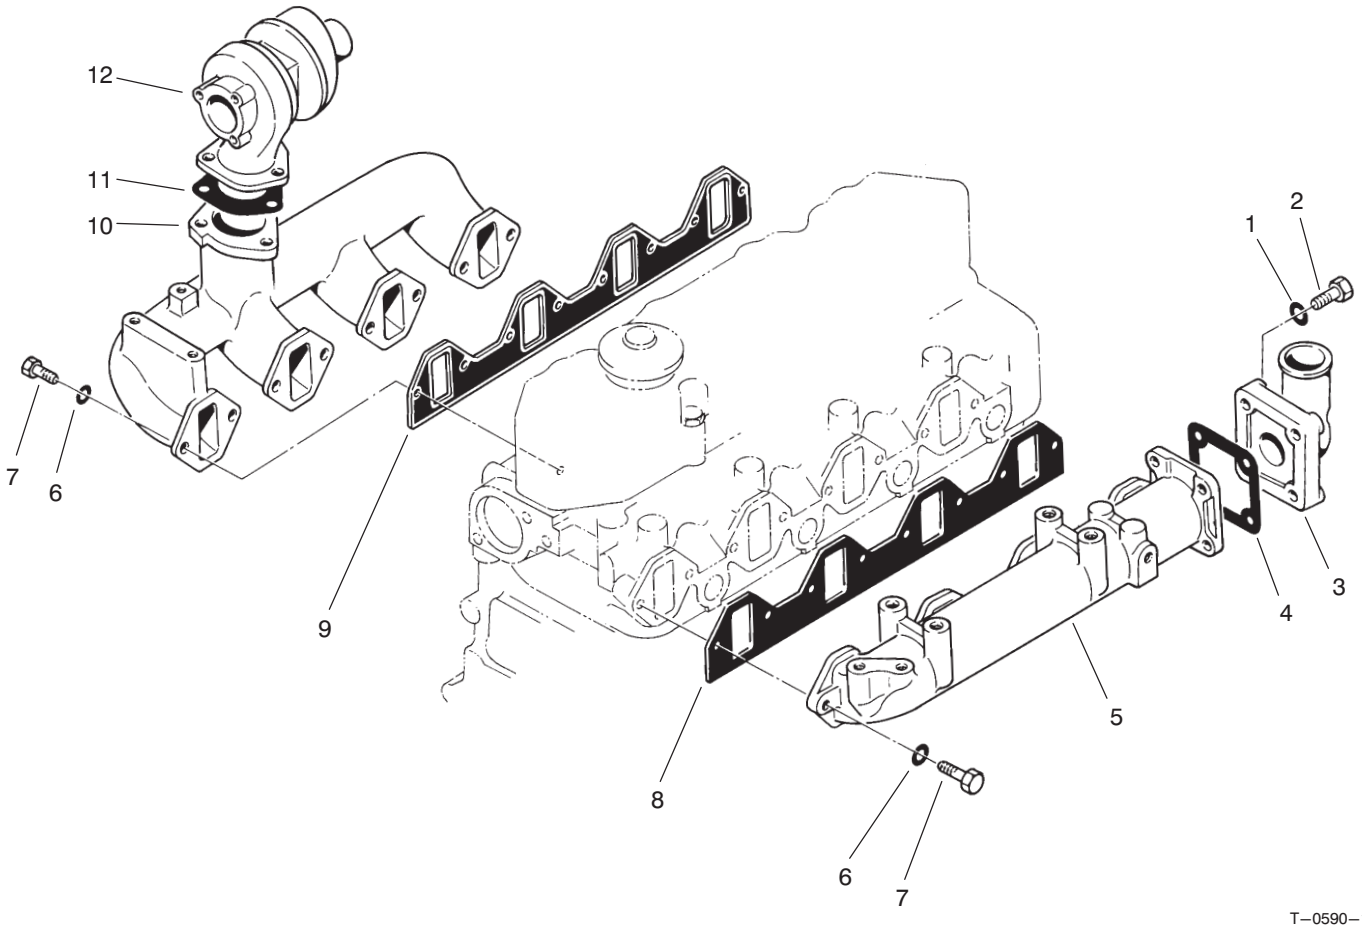


T—0590—1

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51—7250	Washer	4
2	60—7370	Bolt	4
3	70—6090	Elbow	1
†4	70—3130	Gasket	1
5	70—6050	Manifold	1
6	51—7250	Washer	16

Ref. No.	Part No.	Description	No. Used
7	60—7370	Bolt	16
†8	70—6060	Gasket	1
†9	70—5460	Gasket	1
10	70—5470	Manifold	1
†11	70—6250	Gasket	1
12	70—6430	Turbocharger Assembly	1

†Included in Gasket Set No. 70—6950

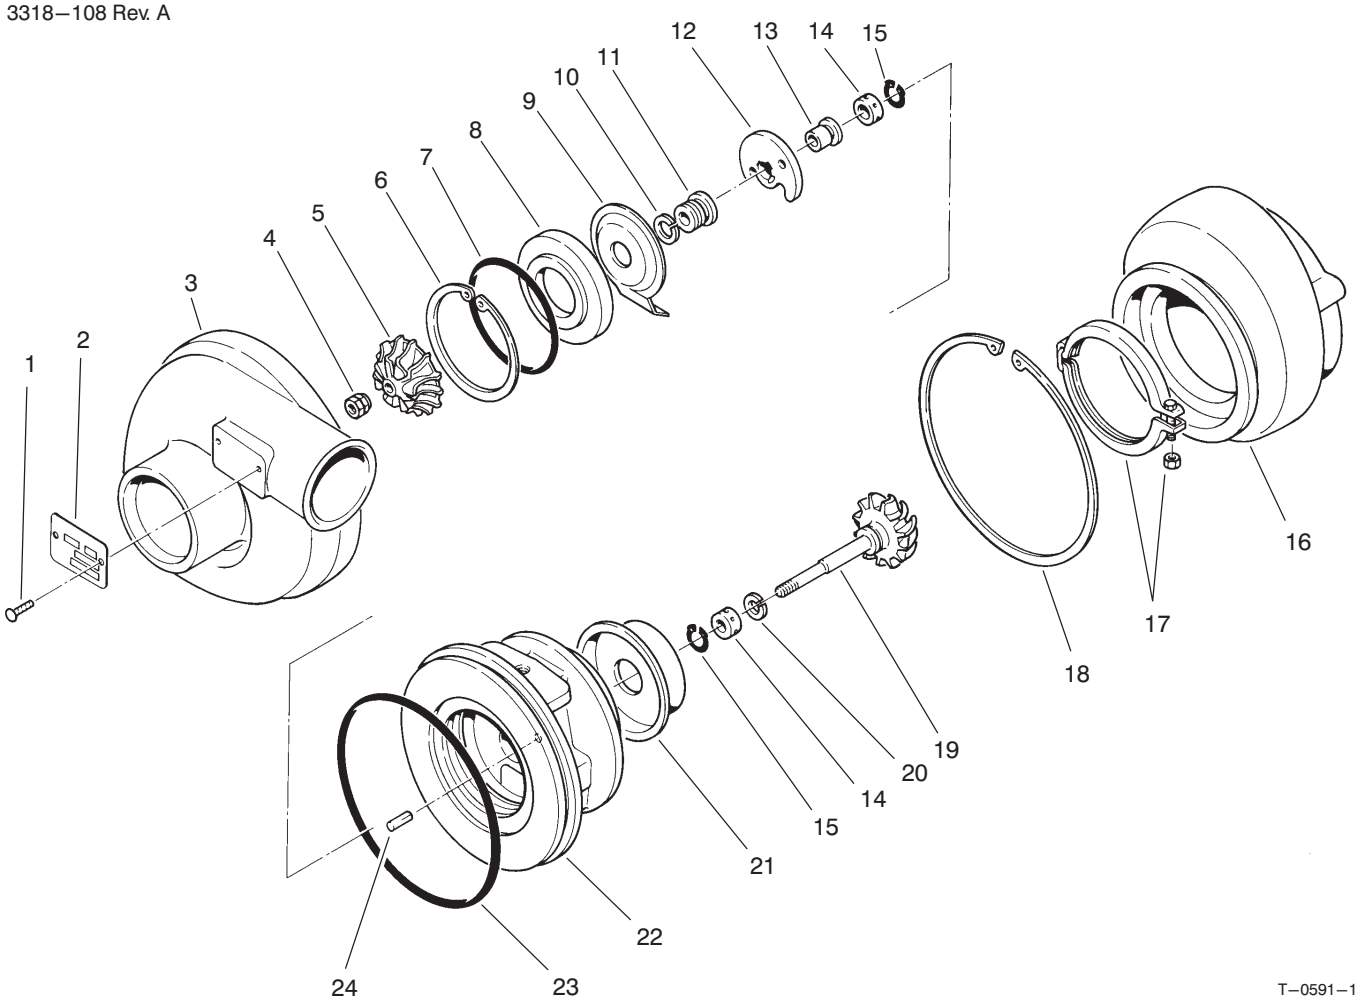


T−0591−1

TURBOCHARGER ASSEMBLY NO. 70−6430

Ref. No.	Part No.	Description	No. Used
1	60−7160	Rivet	2
2	70−6360	Plate	1
3	70−6340	Cover	1
4	70−6330	Nut	1
5	70−6320	Wheel	1
6	70−6300	Ring	1
7	70−6270	O−Ring	1
8	70−6290	Insert	1
9	70−6280	Deflector	1
10	70−6310	Ring	1
11	70−6410	Sleeve	1
12	70−6380	Bearing	1
13	70−6420	Ring	1
14	70−6370	Bearing	2

Ref. No.	Part No.	Description	No. Used
15	70−6390	Ring	2
16	70−6450	Housing	1
17	70−6230	Coupling Assembly	1
18	70−6400	Ring	1
19	70−6470	Shaft & Turbine Wheel Assy.	1
20	70−6350	Ring	1
21	70−6260	Plate	1
22	70−6460	Bearing Housing Assembly (Incl. Ref. #24)	1
23	70−3010	O−Ring	1
24		Pin	1
*	70−6440	Cartridge Assembly (Incl. Ref. #4−15 & 19−24)	1

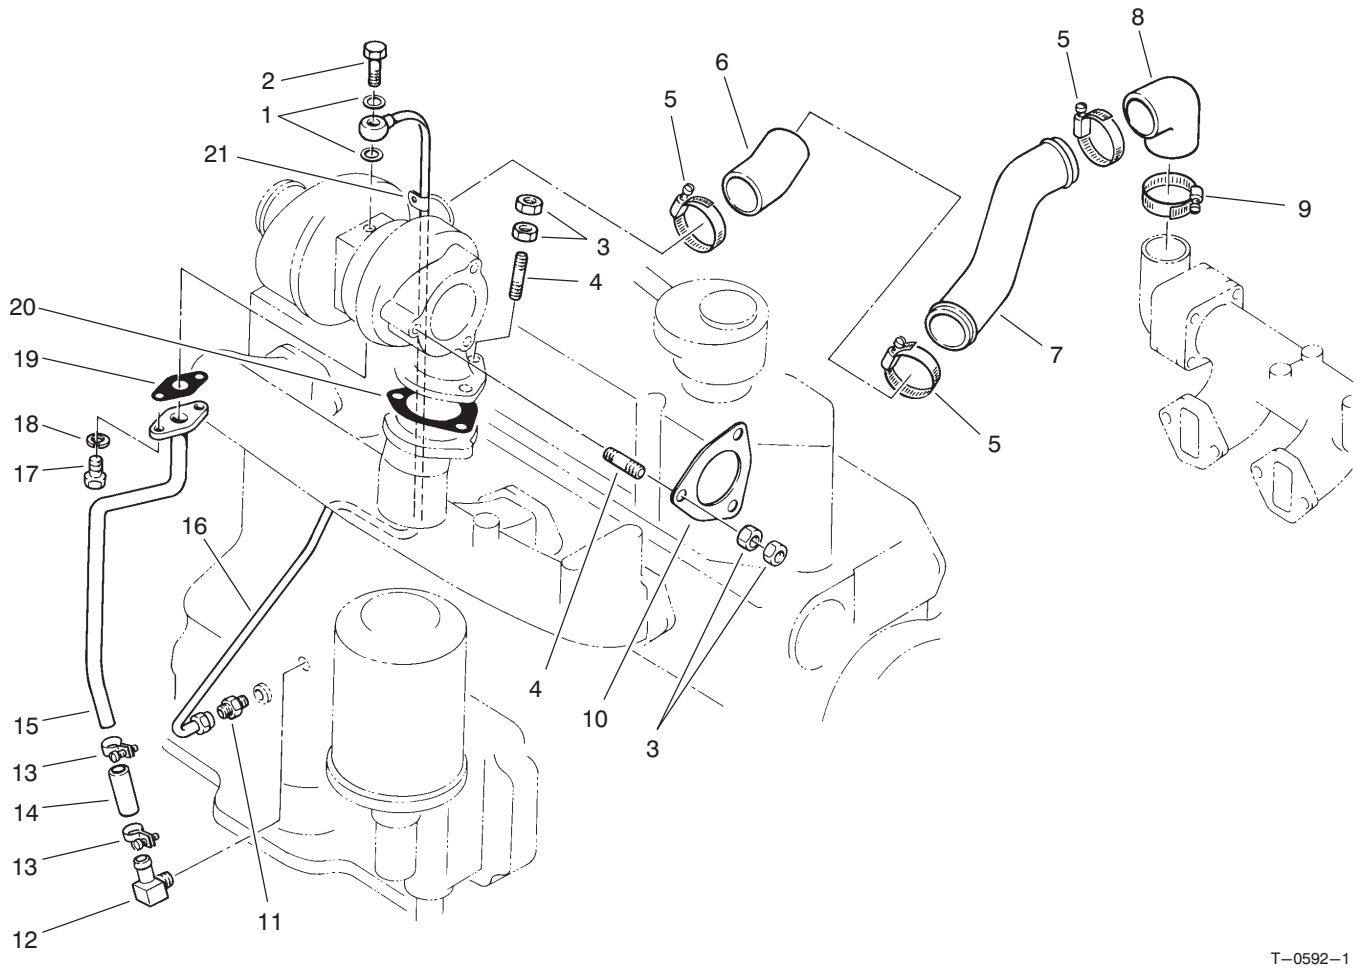


T—0592—1

TURBOCHARGER OIL PIPE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	70—3060	Gasket	2
2	70—4980	Bolt — Cap Hex Hd.	1
3	60—7120	Nut — Hex.	12
4	70—3480	Stud	6
5	70—3430	Clamp — Hose	3
6	70—6080	Hose	1
7	70—6070	Pipe	1
8	70—4950	Hose — 90˚ Elbow	1
9	70—3440	Clamp — Hose	1
10	70—6240	Gasket	1
11	70—3340	Connector	1

Ref. No.	Part No.	Description	No. Used
12	70—5310	Fitting — 90˚ Elbow	1
13	70—3090	Clamp — Hose	2
14	70—3040	Hose	1
15	70—5490	Pipe — Oil	1
16	70—5480	Pipe — Oil	1
17	70—2830	Bolt — Cap Hex. Hd.	2
18	51—7400	Washer — Lock	2
19	70—4970	Gasket	1
†20	70—6250	Gasket	1
21	70—4960	Clamp — R	1

†Included in Gasket Set No. 70—6950

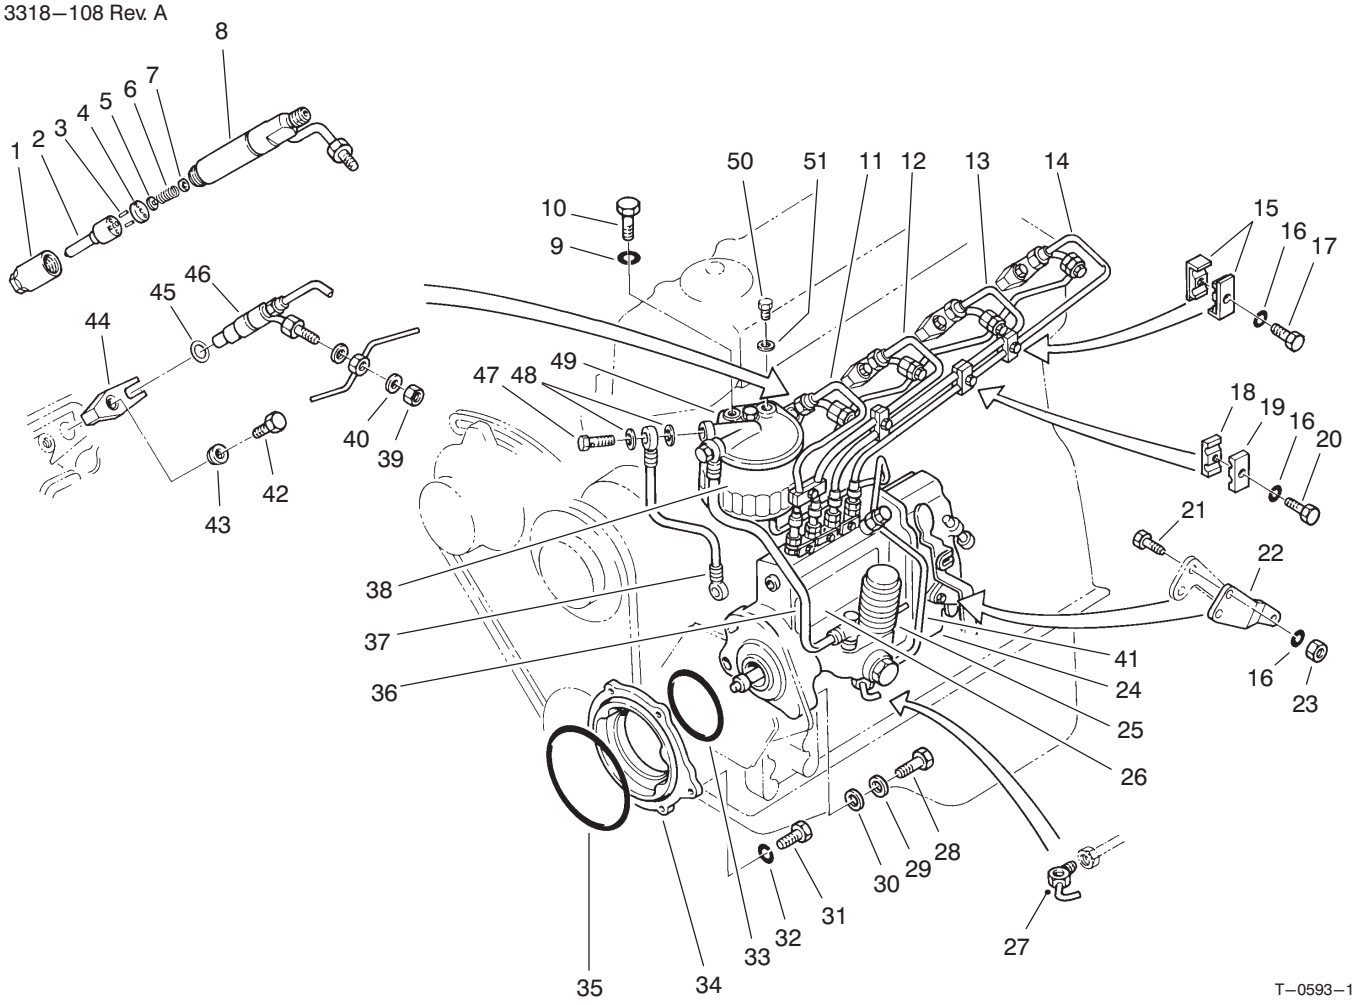


FUEL SYSTEM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70−4840	Nut	4
2	70−6170	Nozzle Tip Assembly	4
3	70−6830	Pin	8
4	70−4930	Packing	4
5	70−4820	Pin	4
6	70−4830	Spring	4
7	70−4860	Washer 1.00 mm	A/R
*	70−4870	Washer 1.05 mm	A/R
*	70−4880	Washer 1.10 mm	A/R
*	70−4850	Washer 2.15 mm	A/R
*	70−4890	Washer 1.275 mm	A/R
*	70−4900	Washer 1.325 mm	A/R
*	70−4910	Washer 1.775 mm	A/R
*	70−4920	Washer 0.95 mm	A/R
8	70−4810	Body Assembly	4
9	51−6390	Washer − Lock	2
10	60−7480	Bolt	2
11	70−6190	Pipe − No. 1	1
12	70−6100	Pipe − No. 2	1
13	70−6200	Pipe − No. 3	1
14	70−6110	Pipe − No. 4	1
15	60−5210	Clamp	2
16	51−7400	Washer − Lock	6
17	70−2840	Bolt	1

Ref. No.	Part No.	Description	No. Used
18	70−3180	Clamp	3
19	70−3190	Clamp	3
20	70−2830	Bolt	3
21	70−2820	Bolt	2
22	70−5770	Lever	1
23	70−2960	Nut	2
24		Governor	1
25	70−5700	Fuel Feed Pump	1
26	70−6180	Injection Pump (Incl. Ref. #24 & 25)	1
27	70−5060	Joint	1
28	51−4910	Bolt	4
29	51−6390	Washer	4
30	70−2990	Washer	4
31	60−7280	Bolt	2
32	51−7250	Washer − Lock	2
†33	70−6130	O−Ring	1
34	70−6210	Flange	1
†35	70−5070	O−Ring	1
36	70−3140	Pipe	1
37	70−3150	Pipe	1
38	70−5730	Filter Element Assembly	1
39	70−2980	Nut	4
†40	70−3460	Washer	8

*Not Illustrated
†Included in Gasket Set No. 70−6950

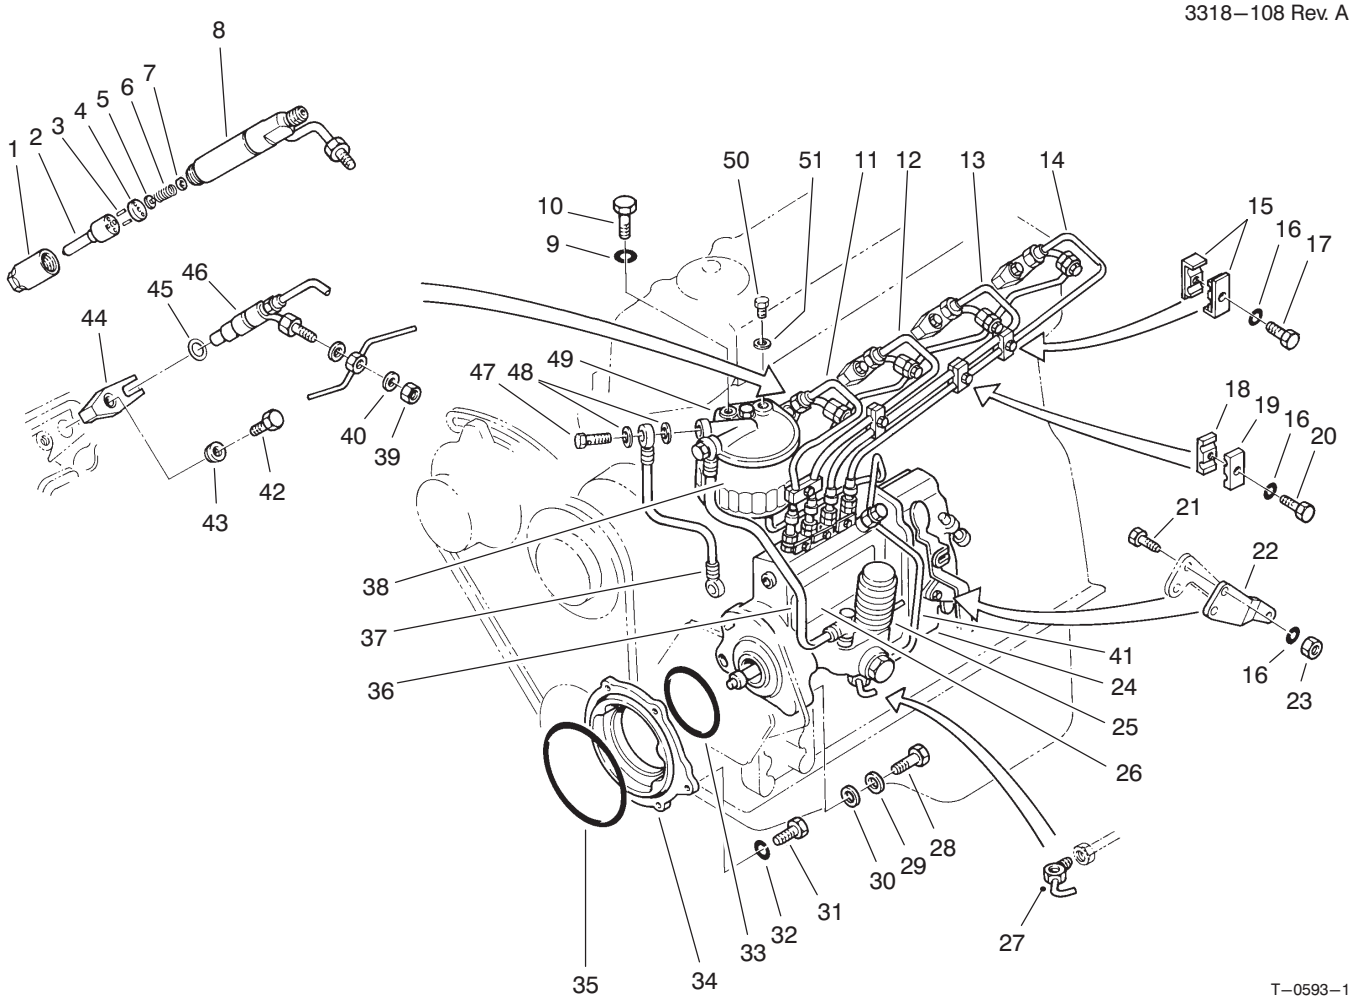


FUEL SYSTEM ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
41	70−6120	Pipe	1
42	70−2850	Bolt	4
43	70−6140	Washer	4
44	70−6220	Gland	4
†45	70−6150	Gasket	4
46	70−6160	Nozzle Assembly (Incl. Ref. #1−8)	4

Ref. No.	Part No.	Description	No. Used
47	70−3250	Bolt	2
48	70−3210	Packing	4
49	70−5720	Bracket	1
50	70−3200	Washer	1
51	70−3240	Plug	1
*	70−5710	Fuel Filter Assembly (Incl. Ref. #38 & 47−51)	1

*Not Illustrated
†Included in Gasket Set No. 70−6950

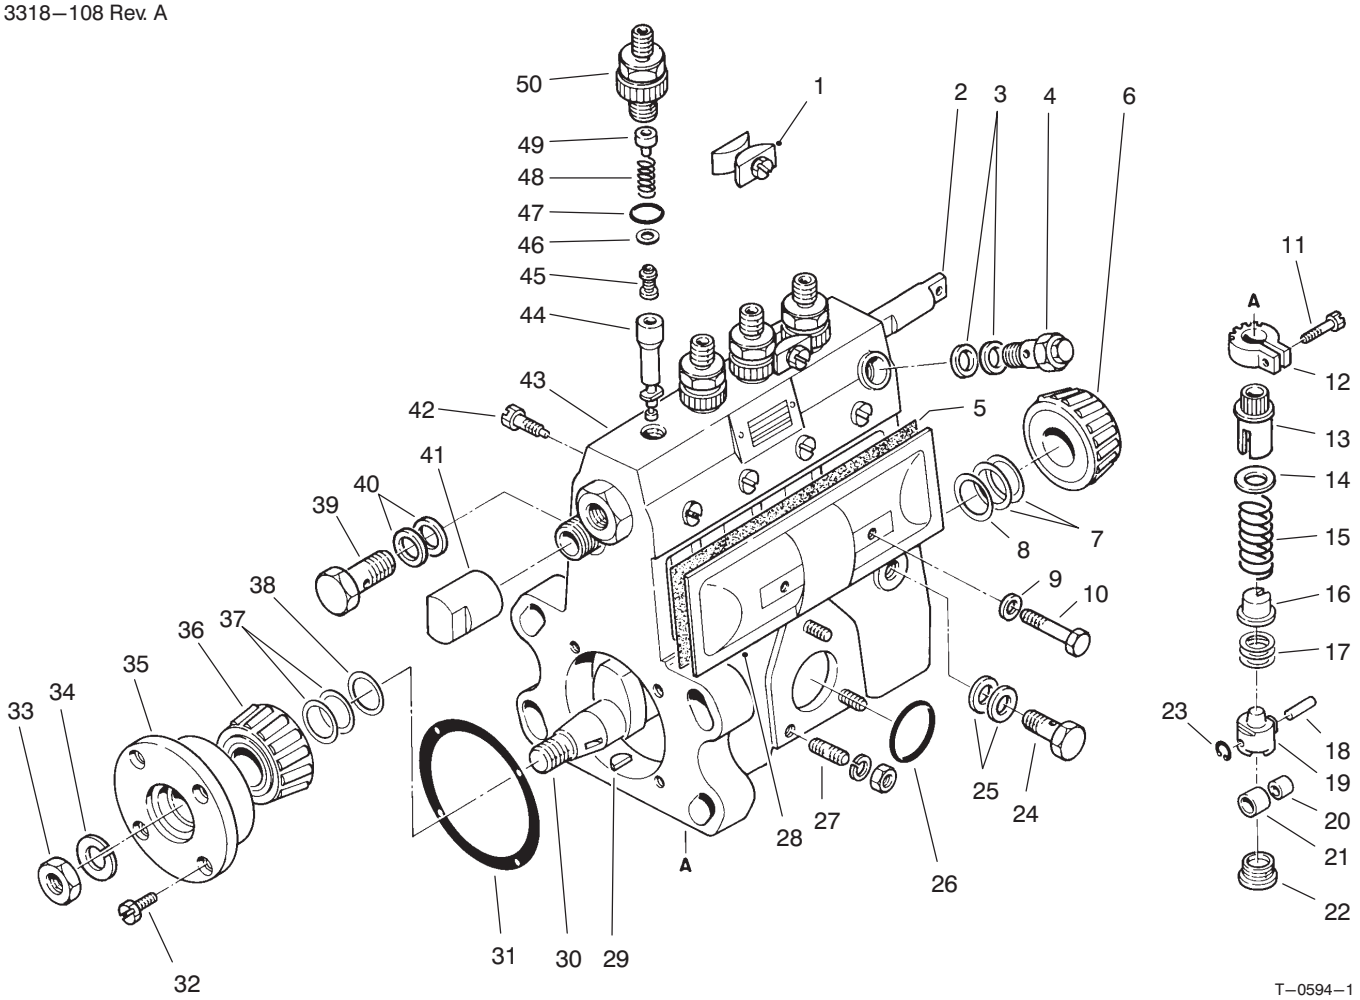


FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–3880	Plate	2
2	70–3840	Rack	1
3	70–3860	Washer	2
4	70–3960	Valve	1
5	70–3930	Gasket	1
6	70–6850	Bearing	2
7	70–3710	Plate – 0.10	A/R
*	70–3720	Plate – 0.12	A/R
*	70–3730	Plate – 0.14	A/R
*	70–3740	Plate – 0.16	A/R
*	70–3750	Plate – 0.18	A/R
*	70–3760	Plate – 0.50	A/R
*	70–3770	Plate – 0.30	A/R
8	70–3690	Ring	1
9	70–3900	Packing	2
10	70–3950	Screw	2
11	70–3570	Screw	4
12	70–3560	Pinion	4
13	70–3580	Sleeve	4
14	70–3590	Seat	4
15	70–3600	Spring	4
16	70–3610	Seat	4

Ref. No.	Part No.	Description	No. Used
17	70–3970	Plate – 0.6	A/R
*	70–3980	Plate – 0.7	A/R
*	70–3990	Plate – 0.8	A/R
*	70–4000	Plate – 0.9	A/R
*	70–4010	Plate – 1.0	A/R
*	70–4020	Plate – 1.1	A/R
*	70–4030	Plate – 1.2	A/R
*	70–4040	Plate – 1.3	A/R
*	70–4050	Plate – 1.4	A/R
*	70–4060	Plate – 0.1	A/R
*	70–4070	Plate – 0.2	A/R
*	70–4080	Plate – 0.3	A/R
*	70–4090	Plate – 0.4	A/R
*	70–4100	Plate – 0.5	A/R
*	70–4110	Plate – 0.15	A/R
18	70–3640	Pin	4
19	70–3620	Body	4
20	70–3650	Bushing	4
21	70–3660	Roller	4
22	70–3670	Plug	4
23	70–6800	E–Ring	4
24	70–6930	Screw	1

*Not Illustrated

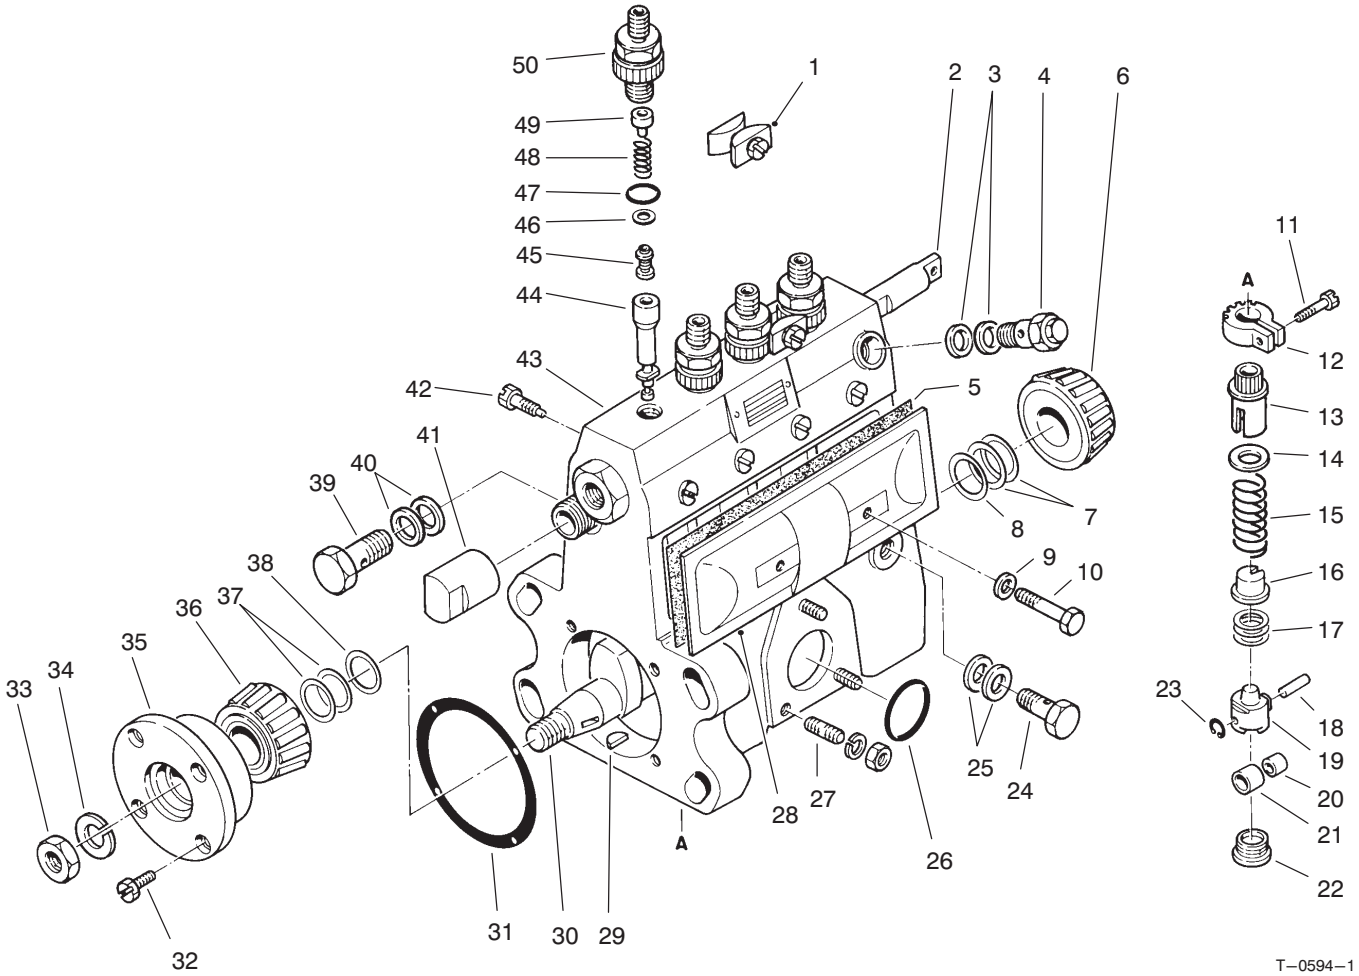


T−0594−1

FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
25	70−3910	Washer	2
26	70−6900	O−Ring	1
27	70−6720	Stud	3
28	70−3940	Plate	2
29	70−6880	Key	1
30	70−3680	Camshaft	1
31	70−3830	Gasket	1
32	70−6540	Bolt	4
33	70−6780	Nut	1
34	70−6680	Washer	1
35	70−3820	Cover	1
36	70−6840	Bearing	1
37	70−3780	Plate − 0.1	A/R
*	70−3790	Plate − 0.15	A/R
*	70−3800	Plate − 0.3	A/R
*	70−3810	Plate − 0.5	A/R
38	70−3700	Ring	1

Ref. No.	Part No.	Description	No. Used
39	70−6940	Screw	1
†40	70−3870	Washer	2
41	70−3490	Cover	1
42	70−3850	Screw	1
43	70−4940	Housing Assembly (Incl. Ref. #27)	1
44	70−3550	Element Assembly	4
45	70−3540	Valve Assembly	4
46	70−3530	Gasket	4
47	70−6910	O−Ring	4
48	70−3520	Spring	4
49	70−3510	Stopper	4
50	70−3500	Holder	4
*	70−3920	Cover Assembly (Incl. Ref. #5, 9−10 & 28)	1
*	70−3630	Tappet Assembly (Incl. Ref. #18−21 & 23)	1


*Not Illustrated
†Included in Gasket Set No. 70−6950

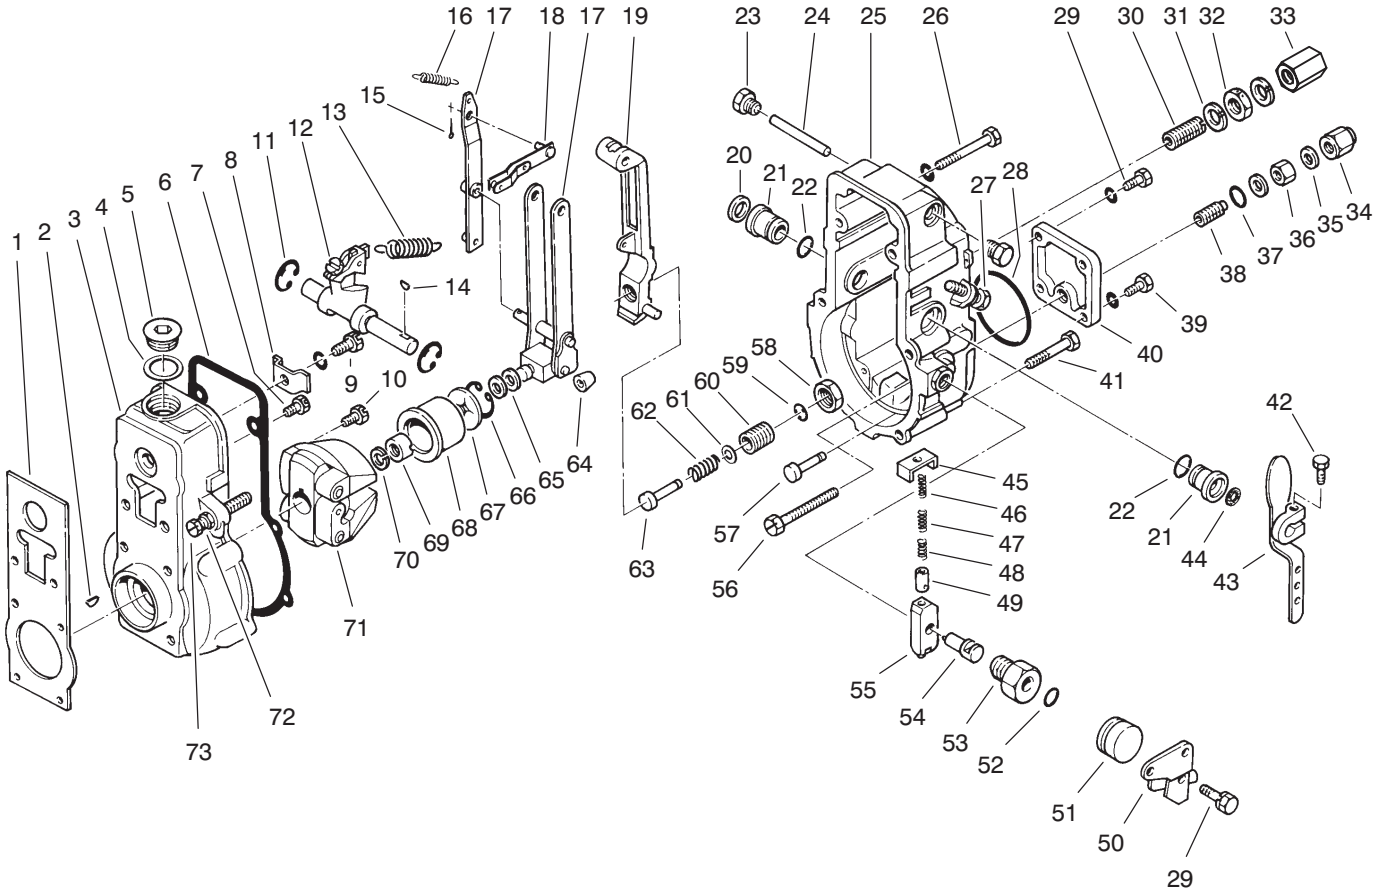

GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–4160	Gasket	1
2	70–6870	Key	1
3	70–4130	Housing	1
4	70–6710	Washer	1
5	70–4590	Plug	1
6	70–4150	Gasket	1
7	70–6530	Bolt	5
8	70–4210	Plate	1
9	70–6550	Bolt	1
10	70–6520	Bolt	1
11	70–6810	E–Ring	2
12	70–4220	Swiveling Lever Assembly	1
13	70–4370	Spring	1
14	70–6860	Key	1
15	70–6480	Pin	1
16	70–4380	Spring	1
17	70–4320	Lever Assembly	1
18	70–4340	Shackle Assembly	1
19	70–4250	Tension Lever Assembly	1
20	70–4580	Cap	1
21	70–4230	Bushing	2
22	70–6510	O–Ring	2
23	70–4360	Plug	2
24	70–4350	Shaft	1
25	70–4400	Cover	1
26	70–6740	Bolt	2

Ref. No.	Part No.	Description	No. Used
27	70–4140	Stopper	1
28	70–6790	Packing	1
29	70–6520	Bolt & Washer	3
30	70–4120	Capsule	1
31	70–3890	Washer	2
32	70–4310	Nut	1
33	70–4440	Nut	1
34	70–4450	Nut	1
35	70–6690	Washer	2
36	70–6770	Nut	1
37	70–6500	O–Ring	1
38	70–4330	Bushing	1
39	70–6760	Bolt & Washer	2
40	70–4550	Plate	1
41	70–6750	Bolt	4
42	70–6730	Bolt	1
43	70–4560	Adjusting Lever Assembly	1
44	70–6920	Seal	1
45	70–4460	Plate	1
46	70–4500	Spring	1
47	70–4520	Spring	1
48	70–4510	Spring	1
49	70–4490	Cup	1
50	70–4570	Stop Lever Assembly	1
51	70–4530	Cover	1
52	70–6890	O–Ring	1

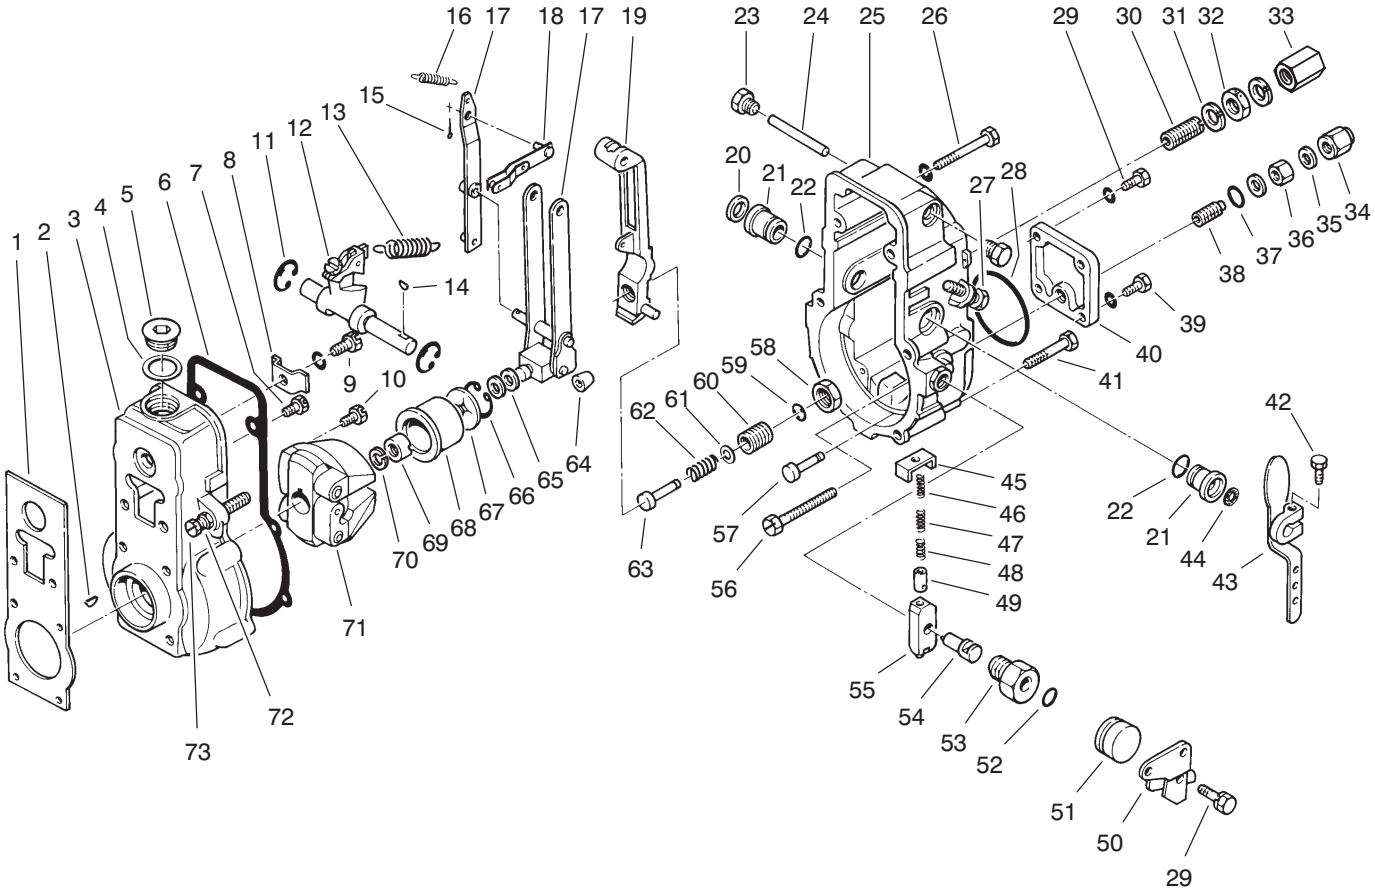


T—0595—1

GOVERNOR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
53	70—4420	Bushing	1
54	70—4480	Shaft	1
55	70—4470	Lever	1
56	70—4390	Screw	1
57	70—4410	Pin	1
58	70—4300	Nut	1
59	70—4240	E—Ring	1
60	70—4270	Screw	1
61	70—6570	Washer — 0.1	A/R
*	70—6600	Washer — 0.2	A/R
*	70—6580	Washer — 0.25	A/R
*	70—6590	Washer — 0.5	A/R
*	70—6660	Washer — 1.0	A/R
62	70—4280	Spring	1
63	70—4290	Adapter	1
64	70—4540	Slider	1

Ref. No.	Part No.	Description	No. Used
65	70—6610	Washer — 0.2	A/R
*	70—6620	Washer — 0.3	A/R
*	70—6630	Washer — 0.4	A/R
*	70—6640	Washer — 0.1	A/R
*	70—6650	Washer — 1.0	A/R
66	70—6490	Ring	1
67	70—4200	Plate	1
68	70—4190	Sleeve	1
69	70—4180	Nut	1
70	70—6670	Washer	1
71	70—4170	Flyweight Assembly	1
72	70—6560	Nut	2
73	70—4430	Screw	1
*	70—4260	Adapter Assembly (Incl. Ref. #59—63)	1

*Not Illustrated

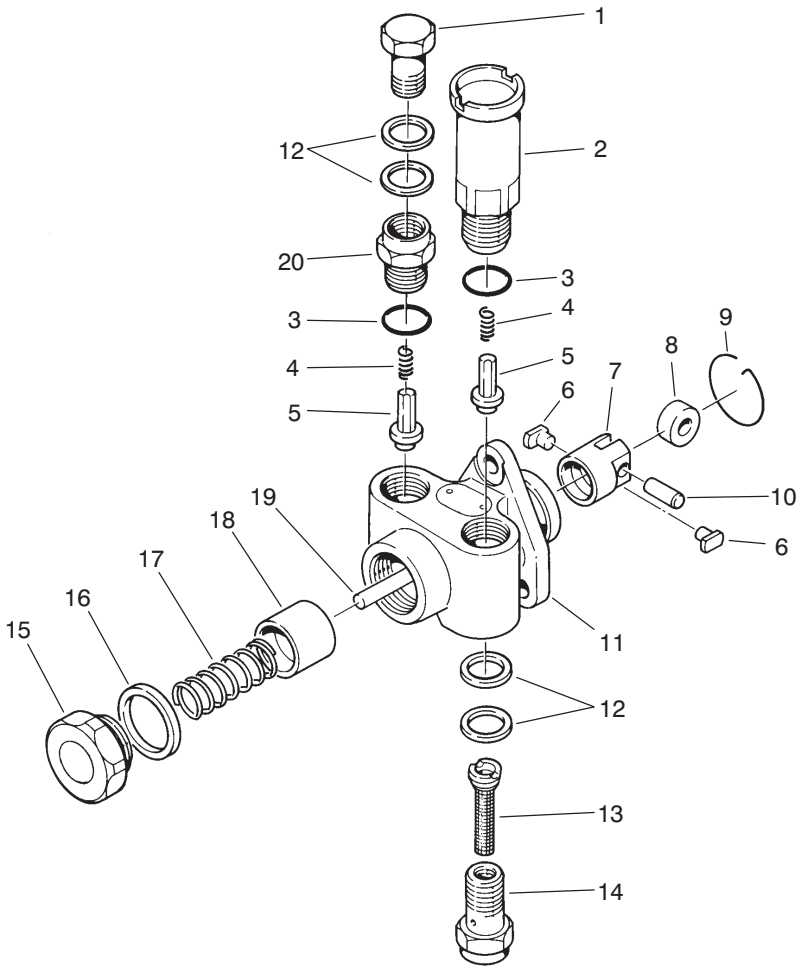


T–0596–1

FUEL FEED PUMP ASSEMBLY NO. 70–5700

Ref. No.	Part No.	Description	No. Used
1	70–6940	Screw	1
2	70–4650	Pump Assembly	1
3	70–4630	Gasket	2
4	70–4620	Spring	2
5	70–4610	Valve	2
6	70–4760	Block	2
7	70–4730	Tappet	1
8	70–4740	Roller	1
9	70–6820	Ring	1
10	70–4750	Pin	1
11	70–4600	Housing Assembly	1
†12	70–3870	Washer	4
13	70–4790	Filter	1

Ref. No.	Part No.	Description	No. Used
14	70–4800	Screw	1
15	70–4780	Plug	1
16	70–6700	Washer	1
17	70–4770	Spring	1
18	70–4720	Piston	1
19	70–4660	Rod, Blue Small Dia.	A/R
*	70–4670	Rod, Red Small Dia.	A/R
*	70–4680	Rod, Yellow Small Dia.	A/R
*	70–4690	Rod, Green Small Dia.	A/R
*	70–4700	Rod, White Small Dia.	A/R
*	70–4710	Rod, Brown Big Dia.	A/R
20	70–4640	Support	1

*Not Illustrated
†Included in Gasket Set No. 70–6950

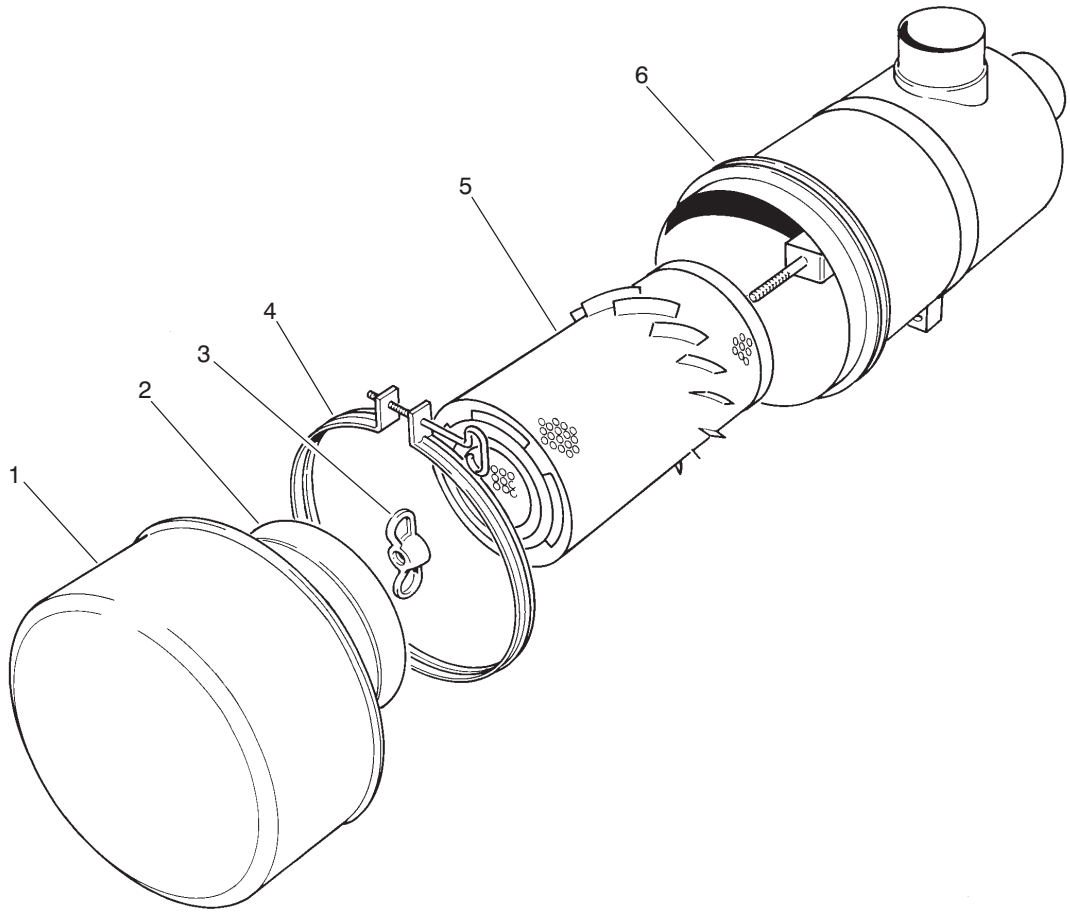


T—0387—1

AIR CLEANER ASSEMBLY NO. 69—1890

Ref. No.	Part No.	Description	No. Used
1	69—1930	Cup Assembly	1
2	69—1920	Baffle	1
3	27—7120	Nut	1
4	69—1910	Clamp Assembly	1

Ref. No.	Part No.	Description	No. Used
5	69—1900	Element Assembly	1
†6		Housing	1
*	27—7220	Detergent — Element	1

*Not Illustrated
†Not Serviceable

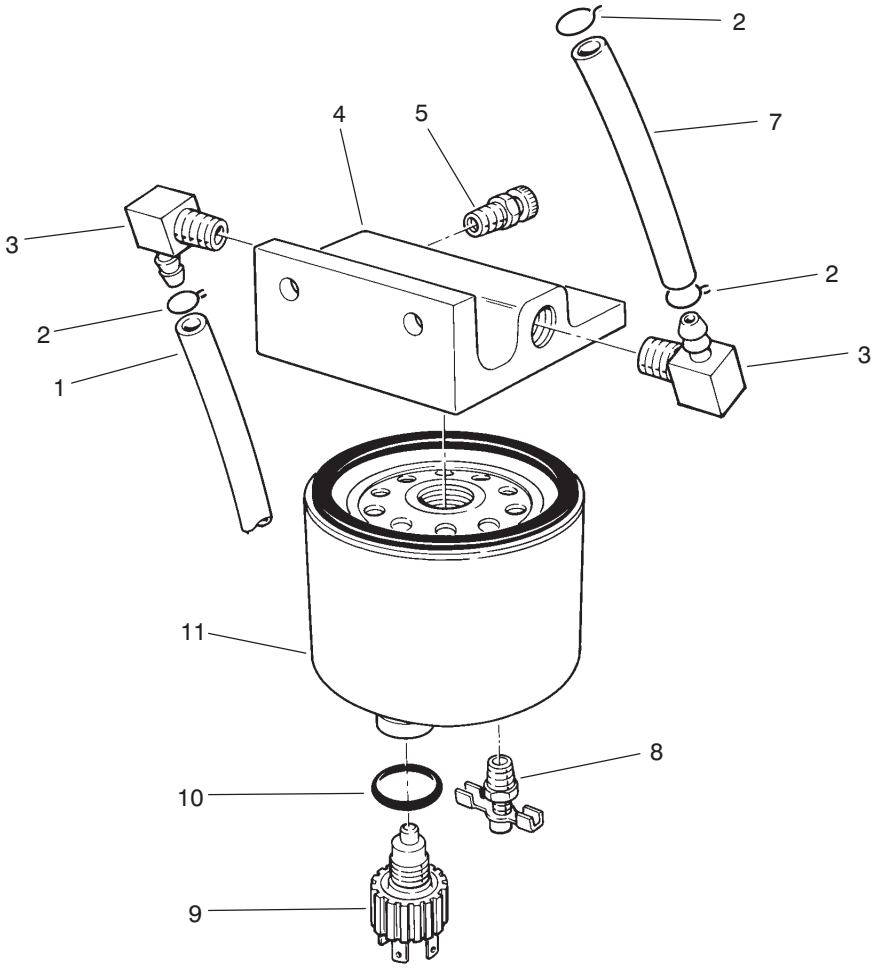


T−0376−1

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	37−9560	Hose − Fuel	1
2	2412−108	Clamp − Hose	3
3	353−781	Fitting − Fuel Elbow	2
4	63−8280	Head − Fuel Filter (Incl. Ref. #5)	1
5	63−8290	Vent − Air	1
7	71−2690	Hose − Fuel	1

Ref. No.	Part No.	Description	No. Used
8	63−8310	Valve − Drain	1
9	69−1760	Sensor − Water	1
10	237−154	Seal − O−Ring	1
11	69−1770	Element − Spin−On (Incl. Ref. #6)	1
*	69−1750	Fuel Filter Assembly (Incl. Ref. #4, 5 & 8−11)	1

*Not Illustrated

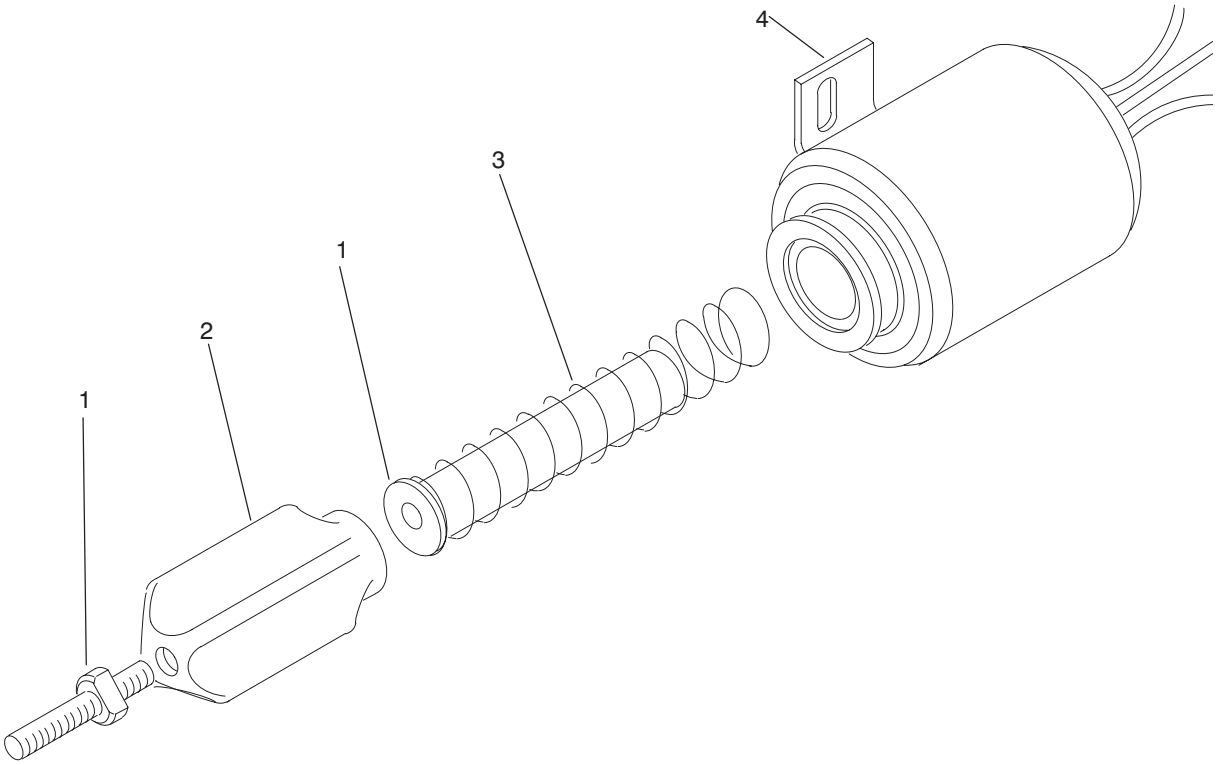


T—1758—1

SOLENOID VALVE NO. 85—6230

Ref. No.	Part No.	Description	No. Used
1	85—6300	Assembly — Plunger	1
2	85—6290	Boot — Rubber	1
3	85—6280	Spring — Return	1

Ref. No.	Part No.	Description	No. Used
4		Body — Solenoid	1
*	85—6230	Assembly — Solenoid Valve (Incl. Ref. #1—4)	1

*Not Illustrated

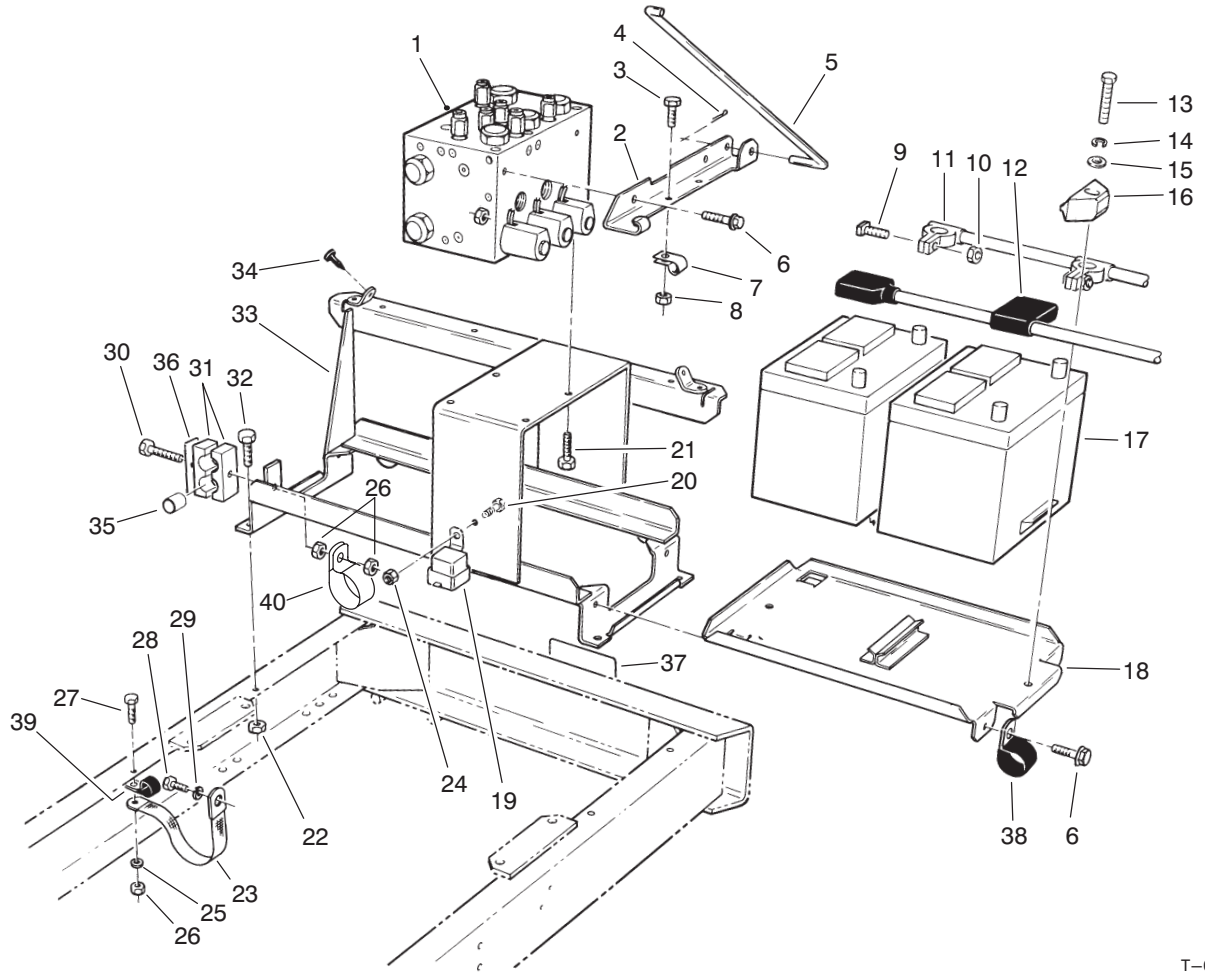


T−0346−1

BATTERY FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69−4150	PTO Manifold Assembly	1
2	69−9350	Bracket − Hood Prop Rod	1
3	321−3	Screw − Cap Hex. Hd.	3
4	3272−6	Pin − Cotter	1
5	69−9120	Rod − Hood Prop	1
6	3234−17	Screw − Hex. Flange Hd.	4
7	2412−73	Clamp − R	3
8	32149−2	Nut − Keps	3
†9		Bolt − Clamp	4
†10		Nut − Clamp	4
11	80−0130	Cable − Negative	1
12	92−4997	Cable − Positive	1
13	323−9	Screw − Cap Hex. Hd.	2
14	3253−21	Washer − Lock	2
15	3256−24	Washer − Flat	2
16	66−2490	Hold−Down − Battery	2
‡17		Battery (Type 24, LTV)	2
18	80−0160	Tray − Battery	1
19	63−7590	Relay	1
20	3290−321	Screw − Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
21	323−4	Screw − Cap Hex. Hd.	4
22	32152−2	Nut − Lock	4
23	18−2770	Strap − Ground	1
24	3296−2	Nut − Flange Lock	1
25	3254−2	Washer − Lock	1
26	32152−1	Nut − Lock	3
27	322−5	Screw − Cap Hex Hd.	1
28	69−0060	Screw − Cap Hex. Hd.	1
29	48−8070	Washer − Lock	1
30	322−11	Screw − Cap Hex. Hd.	1
31	56−7974	Clamp − Hydraulic Lines	2
32	323−6	Screw − Cap Hex. Hd.	4
33	69−8290	Frame − Battery	1
34	237−37	Bumper − Rubber	4
35	23−7250	Spacer	1
36	69−9761	Plate − Clamp	1
37	72−4080	Decal − Danger	1
38	2412−41	Clamp	2
39	2412−39	Clamp	1
40	2412−104	Clamp−R	1

†Not serviceable separately.
‡Obtain Locally

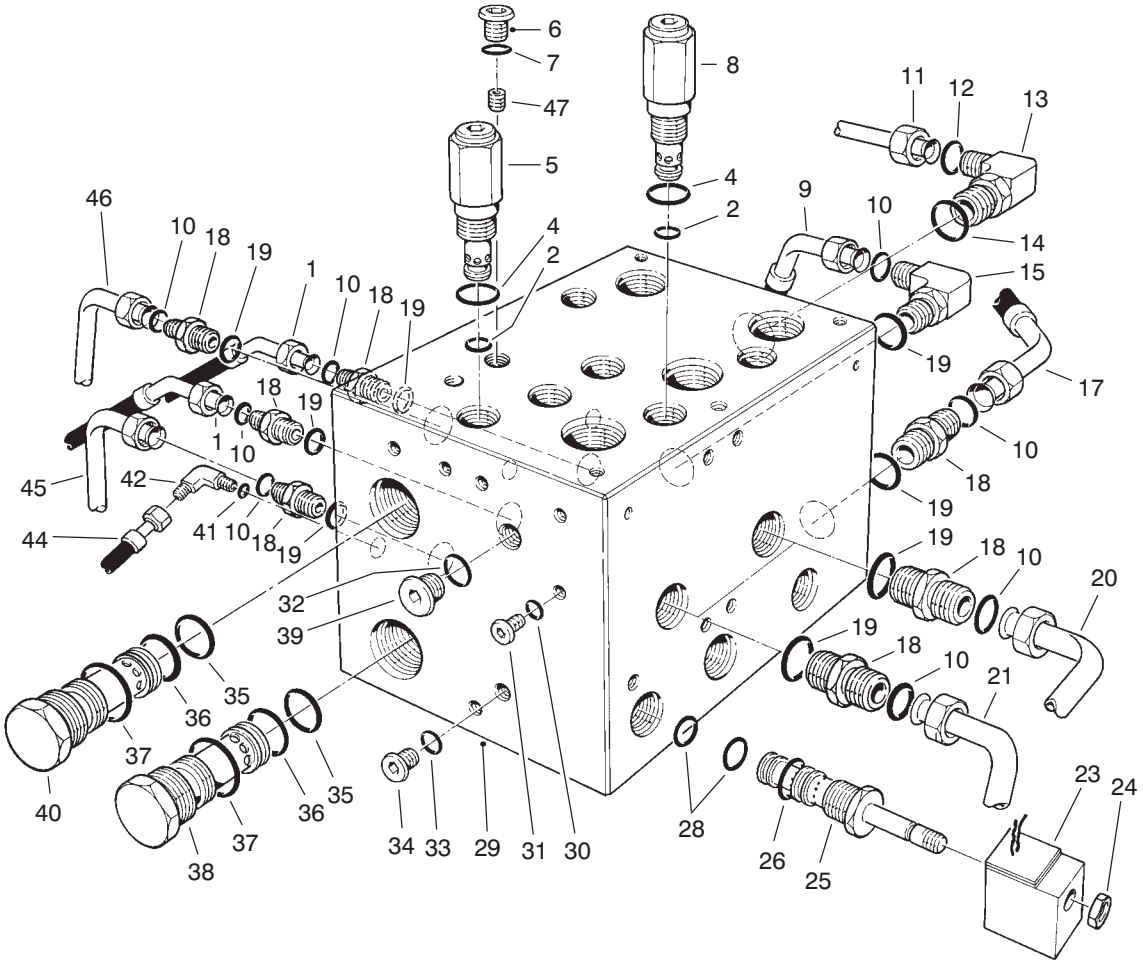


T–0364–2

PTO MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–5590	Hose – Hydraulic	2
†2		Seal – O–Ring	6
†4		Seal – O–Ring	6
5	94–4843	Valve – Cartridge (600 lbs) (Incl. Ref. #2–4)	3
6	353–989	Plug (Incl. Ref. #7)	1
7	237–42	Seal – O–Ring	1
8	69–4180	Valve – Cartridge (3000 lbs) (Incl. Ref. #2–4)	3
9	69–5600	Hose – Hydraulic	1
10	237–58	Seal – O–Ring	8
11	69–6160	Tube – Hydraulic	1
12	340–65	Seal – O–Ring	2
13	340–129	Fitting – Hydraulic Elbow (Incl. Ref. #12 & 14)	1
14	237–146	Seal – O–Ring	1
15	340–142	Fitting – Hydraulic Elbow (Incl. Ref. #10 & 16)	1
17	69–5610	Hose – Hydraulic	1
18	340–9	Fitting – Hydraulic Straight (Incl. Ref. #10 & 19)	7
19	237–81	Seal – O–Ring	8
20	69–6180	Tube – Hydraulic	1
21	69–6170	Tube – Hydraulic	1
23	88–9190	Solenoid Coil Assembly	3

Ref. No.	Part No.	Description	No. Used
24	3219–10	Nut – Jam	3
25	92–3071	Spool – Solenoid Valve (Incl. Ref. # 24, 26–28)	3
†26		Seal – O–Ring	3
†28		Seal – O–Ring	6
†29		Manifold – PTO	1
30	237–156	Seal – O–Ring	30
31	353–991	Plug (Incl. Ref. #30)	30
32	237–79	Seal – O–Ring	4
33	237–78	Seal – O–Ring	1
34	353–990	Plug (Incl. Ref. #33)	1
†35		Seal – O–Ring	6
†36		Seal – O–Ring	6
†37		Seal – O–Ring	6
38	69–4200	Valve – Cartridge (75 lbs) (Incl. Ref. #35–37)	3
39	353–988	Plug (Incl. Ref. #32)	4
40	69–4190	Valve – Cartridge (20 lbs) (Incl. Ref. #35–37)	3
41	237–78	Seal – O–Ring	2
42	353–431	Fitting – Hydraulic 45° (Incl. Ref. #41 & 43)	2
44	93–7423	Hose – Diagnostic	2
45	69–6140	Tube – Hydraulic	1
46	69–6150	Tube – Hydraulic	1

†Not serviceable separately.

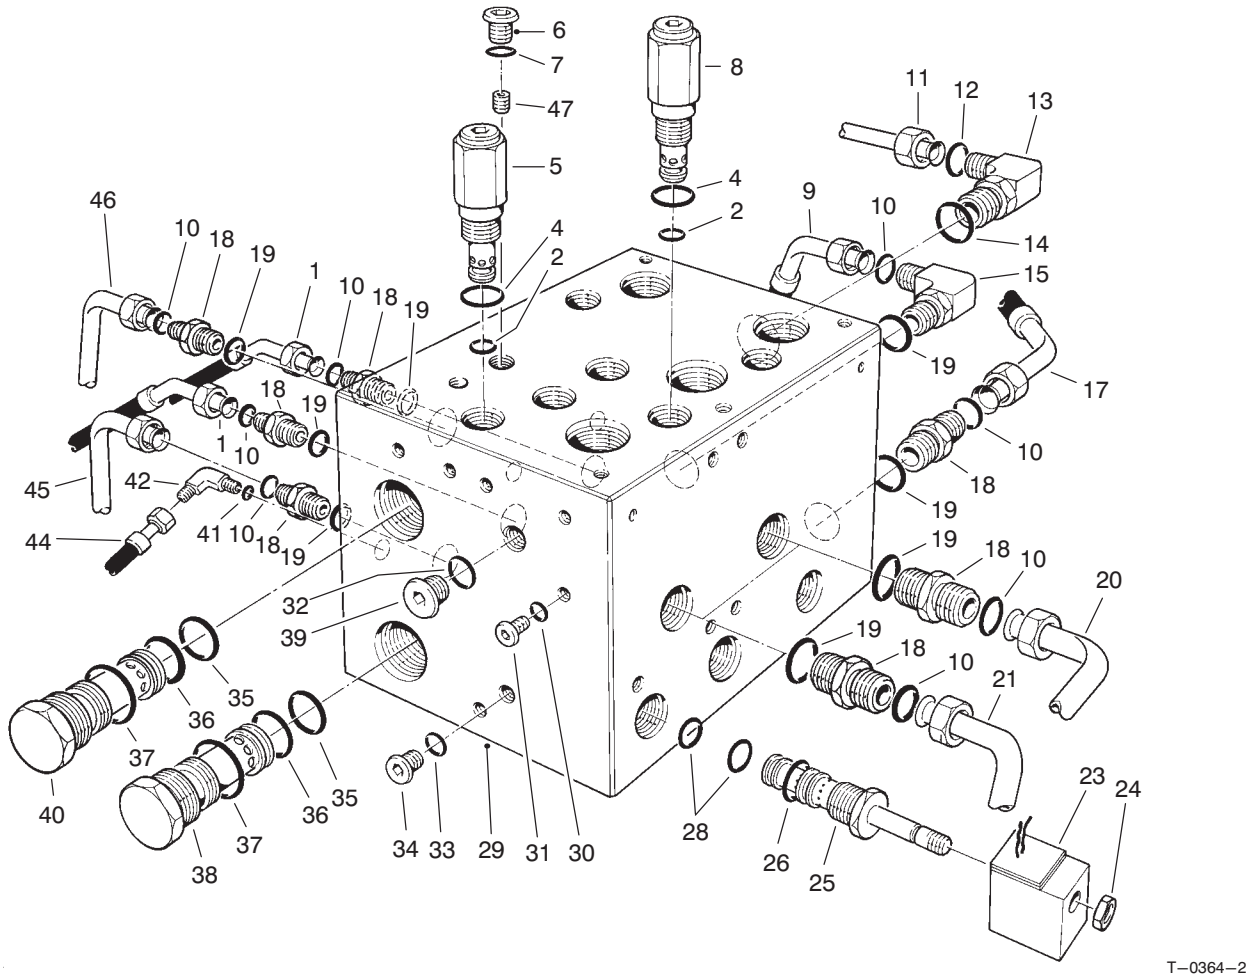


T−0364−2

PTO MANIFOLD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	69−4220	Plug − Orifice	1
*	75−2080	Cartridge Valve Seal Kit (Incl. Ref. #2 & 4)	6
*	69−4270	Cartridge Valve Seal Kit (Incl. Ref. #35−37)	6

Ref. No.	Part No.	Description	No. Used
*	69−4260	Solenoid Valve Seal Kit (Incl. Ref. #26−28)	3
*	69−4150	PTO Manifold Assembly (Incl. Ref. #2, 4−8, 22−40 & 47)	1

*Not Illustrated

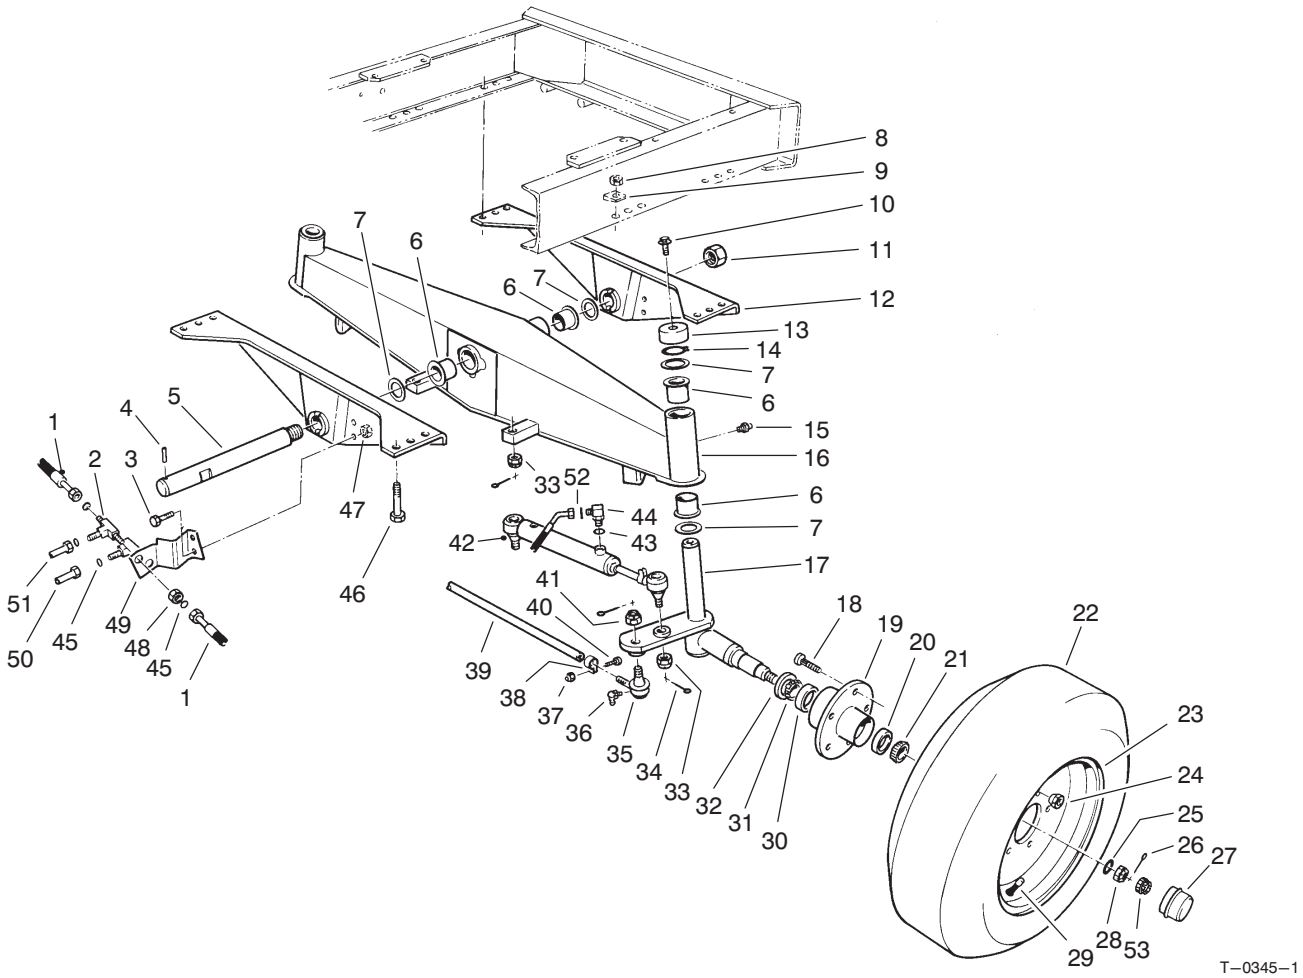


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–5510	Hose – Hydraulic	4
2	340–68	Fitting – Hydraulic Bulkhead Tee (Incl. Ref. #45)	2
3	323–6	Screw – Cap Hex. Hd.	2
4	32121–110	Pin – Roll	1
5	71–2590	Shaft – Pivot	1
6	69–6470	Bushing – Flange	6
7	256–304	Washer – Thrust	6
8	32128–23	Nut – Lock	12
9	3290–216	Washer – Bevel	12
10	3234–12	Screw – Hex. Flange Hd.	2
11	3296–68	Nut – Lock	1
12	69–7960	Support – Axle	2
13	69–8890	Cap – Spindle	2
14	32151–10	Ring – Retaining	2
15	302–5	Fitting – Grease	3
16	69–7420	Axle – Rear (Incl. Ref. #6 & 15)	1
17	93–0311	Spindle – Wheel L.H.	1
*	93–0310	Spindle – Wheel R.H.	1
18	69–2990	Screw – Drive	10
19	69–2960	Hub – Rear Wheel (Incl. Ref. #18, 20 & 30)	2
20	254–72	Cup – Bearing Outer	2
21	254–92	Cone – Bearing Outer	2
22	69–9880	Tire	2
23	217–116	Rim	2

Ref. No.	Part No.	Description	No. Used
24	23–7270	Nut – Lug	10
25	93–0309	Washer	2
26	3272–13	Pin – Cotter	2
27	69–2970	Cap – Hub	2
28	3220–7	Nut – Jam	2
29	232–27	Stem – Valve	2
30	254–107	Cup – Bearing Inner	2
31	254–106	Cone – Bearing Inner	2
32	69–2980	Seal – Inner	2
33	32136–13	Nut – Castle	4
34	3272–12	Pin – Cotter	6
35	2116–4	Joint – Ball R.H.	1
*	2116–3	Joint – Ball L.H.	1
36	302–33	Fitting – Grease	2
†37		Nut – Lock	2
38	2412–7	Clamp Assembly (Incl. Ref. #37 & 40)	2
39	3–3710	Tie Rod Assembly (Incl. Ref. #35–41)	1
†40		Screw – Cap Hex. Hd.	2
41	32136–2	Nut – Castle	2
42	69–1960	Hydraulic Cylinder Assembly	2
43	237–78	Seal – O–Ring	4
44	340–132	Fitting – Hydraulic Elbow (Incl. Ref. #43 & 52)	4
45	237–22	Seal – O–Ring	6
46	325–6	Screw – Cap Hex. Hd.	12


*Not Illustrated
†Not serviceable separately.

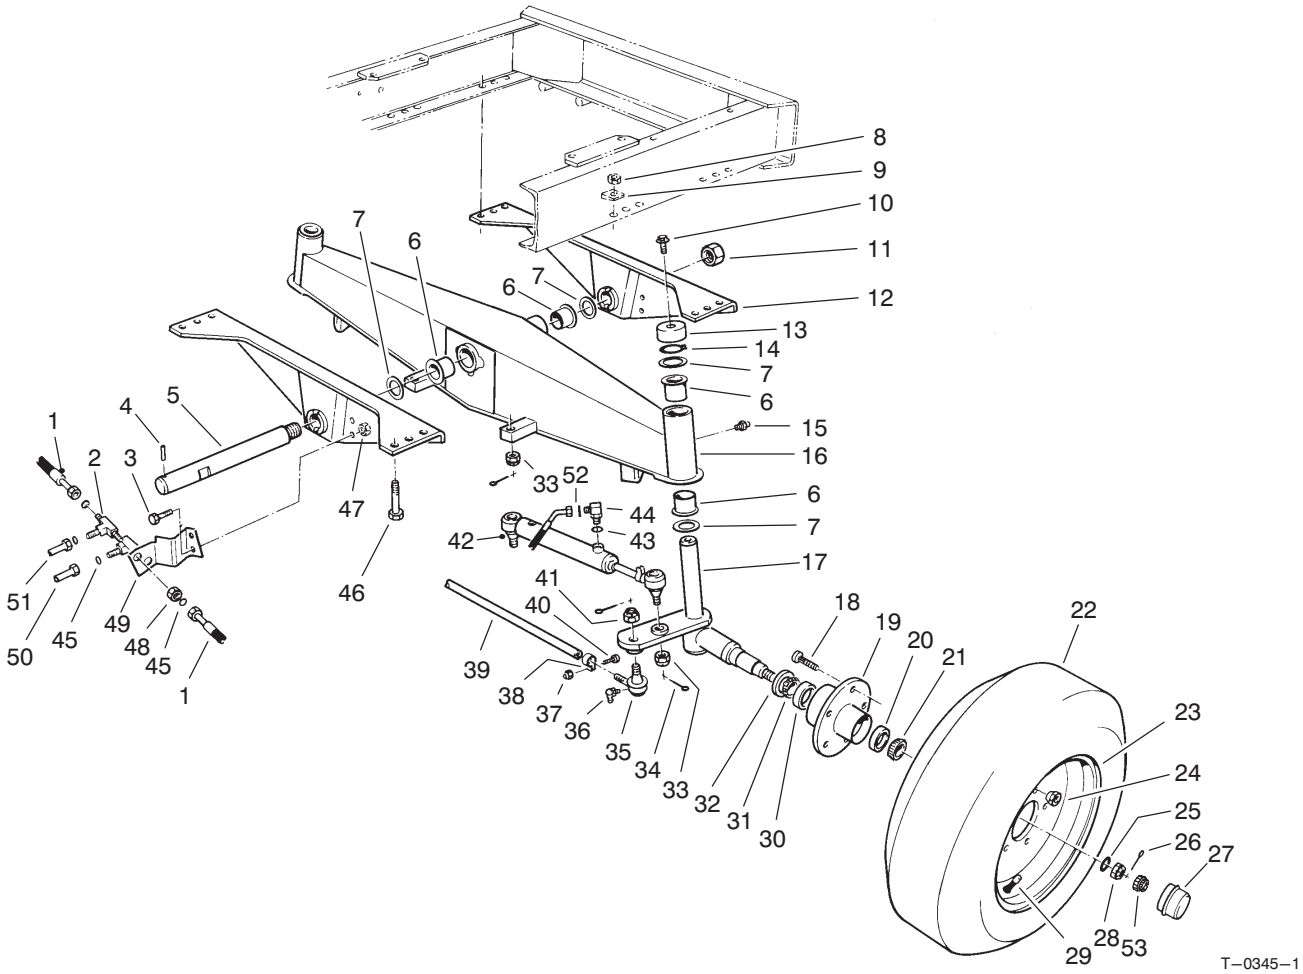

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	32152–2	Nut – Lock	2
48	340–70	Nut – Bulkhead	2
49	69–9400	Bracket – Hose Support	1
50	69–6010	Tube – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
51	69–6020	Tube – Hydraulic	1
52	237–21	Seal – O–Ring	4
53	93–0307	Nut – Retainer	2

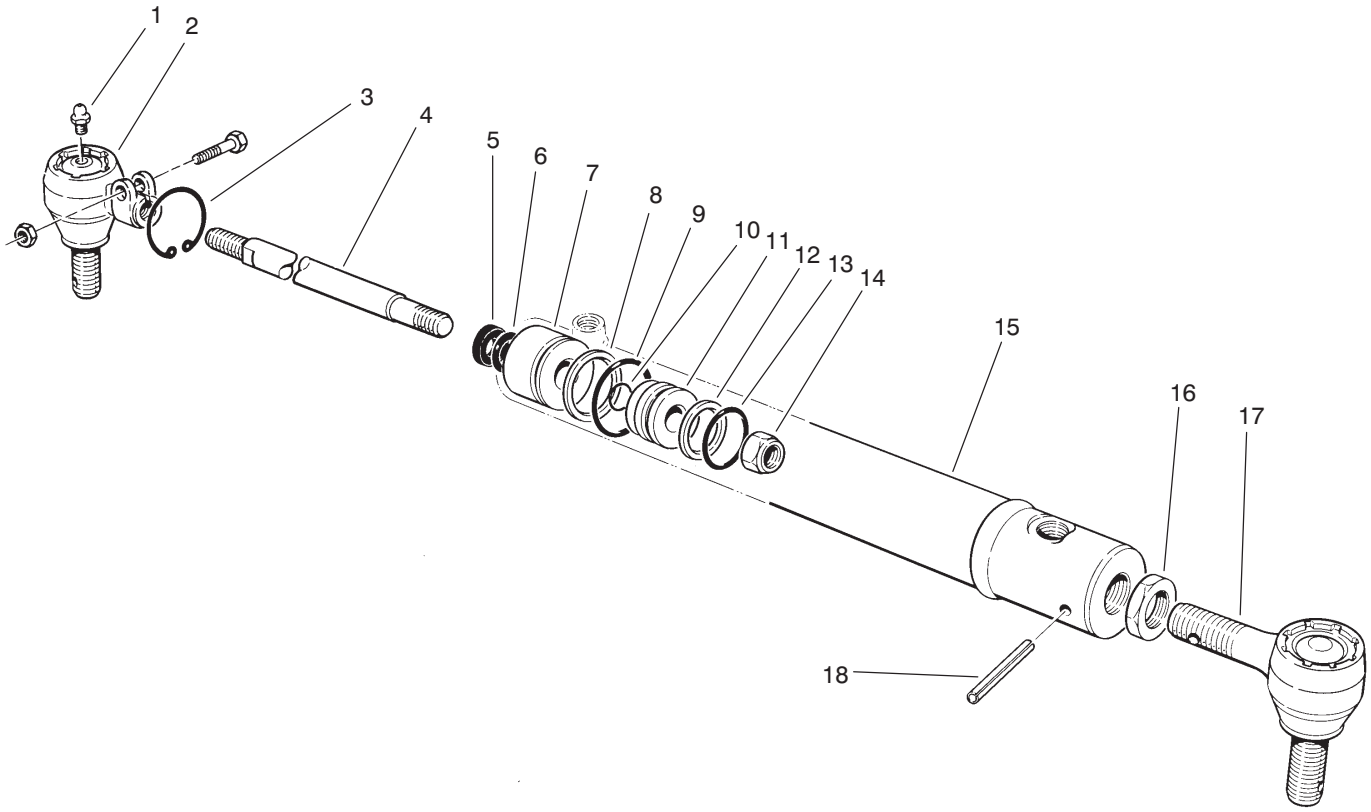


T–0378–1

HYDRAULIC CYLINDER ASSEMBLY NO. 69–1960

Ref. No.	Part No.	Description	No. Used
1	302–5	Fitting – Grease	1
2	69–9810	Joint – Ball	1
3		Ring – Retaining	1
4	69–2020	Rod – Piston	1
5		Wiper – Rod	1
6		Seal – U–Cup	1
7	69–2030	Ring – Head	1
8		Ring – Back–Up	1
9		Seal – O–Ring	1
10		Seal – O–Ring	1
11	69–2000	Piston	1
12		Ring – Piston	1
13		Seal – O–Ring	1
14	69–1990	Nut – Lock	1
15		Barrel – Cylinder	1
16	69–1980	Nut – Jam	1
17	69–1970	Joint – Ball	1
18	32121–34	Pin – Roll	1
*	92–1792	Repair Kit (Incl. Ref. #3, 5, 6, 8–10 & 12–13)	1
*	69–1960	Steering Cylinder (Complete) (Incl. Ref. #3–18)	2


*Not Illustrated

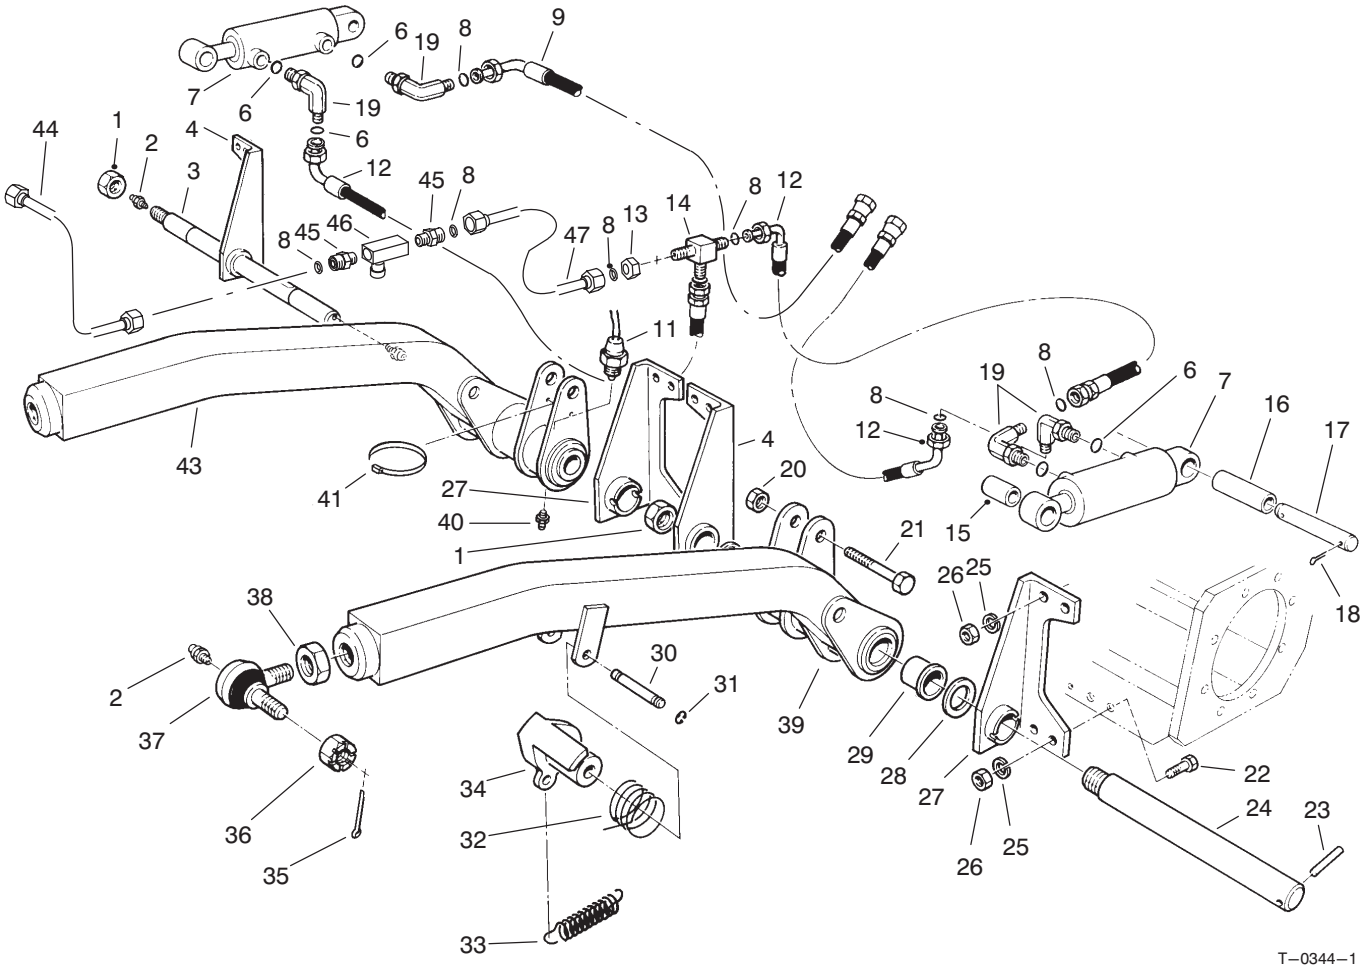

FRONT LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–68	Nut – Lock	2
2	302–2	Fitting – Grease	4
3	71–2570	Shaft – Pivot	1
4	69–7940	Support – Lift Arm R.H.	2
6	237–42	Seal – O–Ring	4
7	92–4971	Hydraulic Cylinder Assembly	2
8	237–22	Seal – O–Ring	9
9	69–8440	Hose – Hydraulic	1
11	72–4310	Switch – Ball	1
12	69–5440	Hose – Hydraulic	3
13	340–70	Nut – Bulkhead	1
14	340–68	Fitting – Hydraulic Bulk. Tee (Incl. Ref. #8)	1
15	69–9190	Tube – Cylinder Bushing	2
16	20–4360	Tube – Spacer	2
17	69–9180	Pin – Cylinder	2
18	3272–23	Pin – Cotter	4
19	340–77	Fitting – Hydraulic Elbow (Incl. Ref. #6 & 8)	4
20	32153–6	Nut – Lock	2
21	328–5	Screw – Cap Hex. Hd.	2
22	325–6	Screw – Cap Hex. Hd.	12
23	32121–110	Pin – Roll	2
24	71–2590	Shaft – Pivot	1
25	3253–7	Washer – Lock	16

Ref. No.	Part No.	Description	No. Used
26	3217–9	Nut – Hex.	16
27	69–7920	Support – Lift Arm L.H.	2
28	256–304	Washer – Thrust	2
29	69–6470	Bushing – Flange	4
30	92–4806	Pin – Latch	1
31	32120–47	Ring – Retaining	2
32	69–8470	Spring – Torsion	1
33	76–1670	Spring – Extension	1
34	69–1540	Pivot – Spring	1
35	3272–12	Pin – Cotter	2
36	32136–2	Nut – Slotted	2
37	86–8100	Joint – Ball (Incl. Ref. #2 & 36)	2
38	21–3000	Nut – Jam	2
39	69–9580	Front Lift Arm Assy. L.H. (Incl. Ref. #29 & 40)	1
40	302–5	Fitting – Grease	2
41	3290–378	Tie – Cable	1
43	69–9570	Front Lift Arm Assy. R.H. (Incl. Ref. #29 & 40)	1
44	93–7426	Tube – Hydraulic	1
45	340–57	Fitting – Hydraulic Straight (Incl. Ref. #8)	2
46	93–1397	Valve – Flow Control	1
47	93–7427	Tube – Hydraulic	1

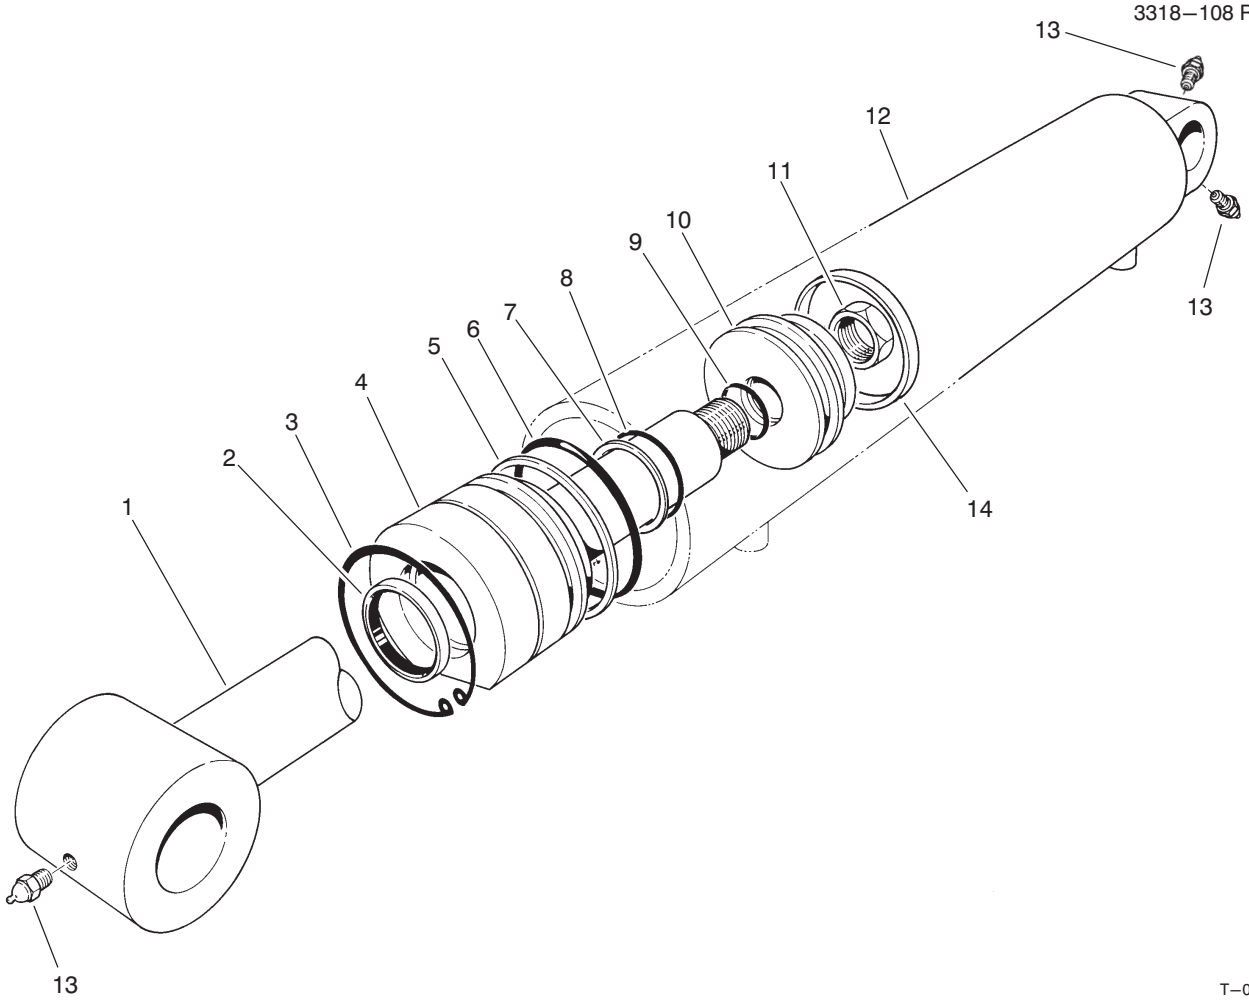


T–0380–1

HYDRAULIC CYLINDER ASSEMBLY NO. 92–4971

Ref. No.	Part No.	Description	No. Used
1	69–2580	Shaft w/clevis	1
†2		Seal – Dust	1
3	61–4990	Ring – Retaining	1
4	69–2570	Head	1
†5		Ring – Back–Up	1
†6		Seal – O–Ring	1
†7		Ring – Back–Up	1
†8		Seal – O–Ring	1

Ref. No.	Part No.	Description	No. Used
†9		Uni–Ring	1
10	60–9770	Piston	1
11	60–9760	Nut – Lock	1
†12		Barrel	1
13	302–5	Fitting – Grease	3
14		Seal – Uni–Ring	1
*	86–7350	Seal Repair Kit (Incl. Ref. #2 & 5–9)	1

*Not Illustrated
†Not serviceable separately.

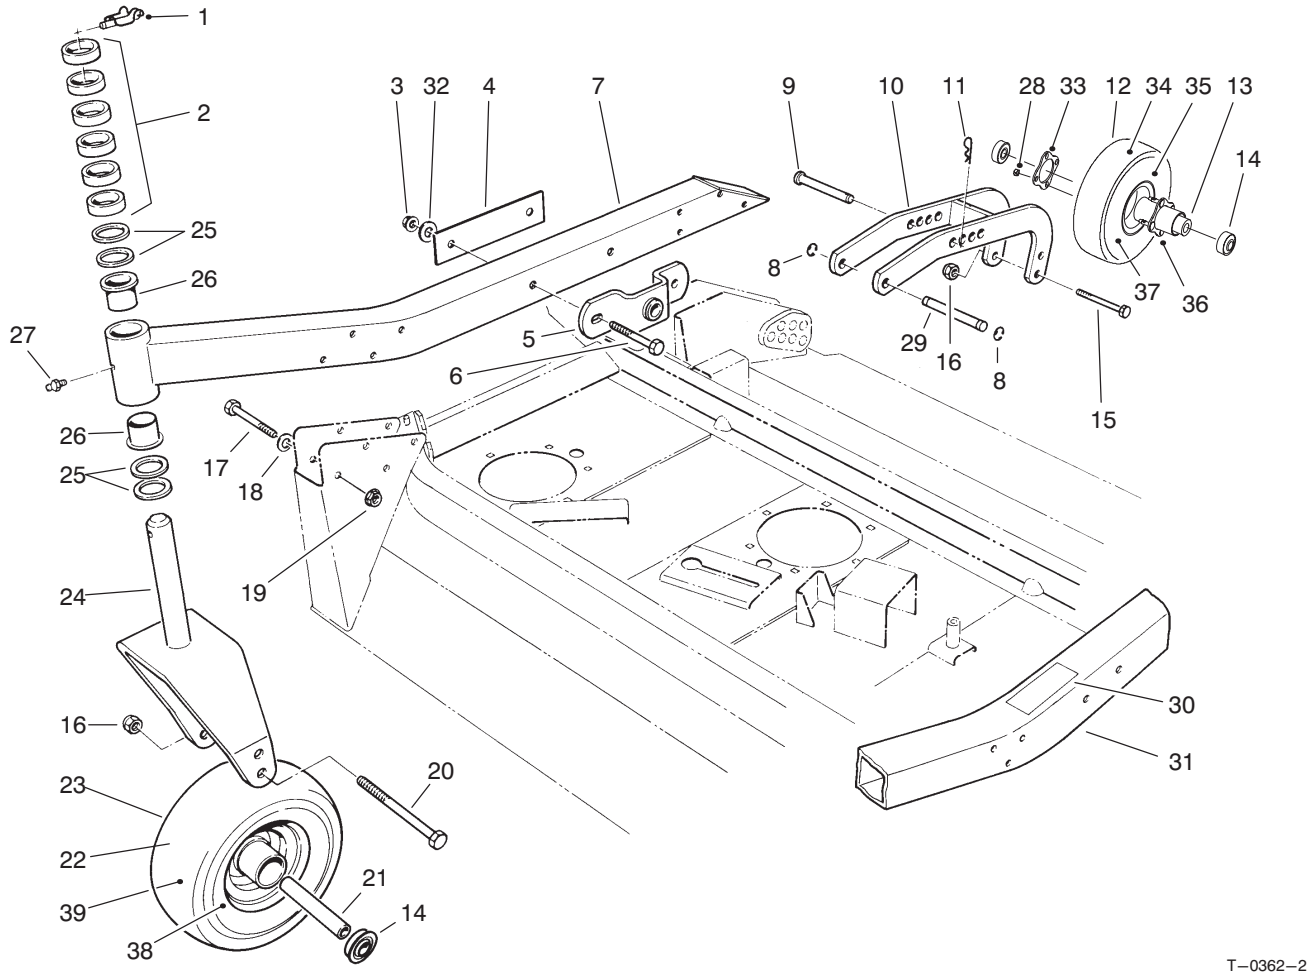


T–0362–2

CENTER DECK MODEL NO. 30592
CARRIER FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290–384	Pin – Lynch	2
2	69–1510	Spacer – Caster	12
3	32128–23	Nut – Flange Lock	4
4	69–8790	Plate – Reinforcing	2
5	69–7290	Mount – Ball Joint	2
6	325–15	Screw – Cap Hex. Hd.	4
7	69–8860	Arm – Castor R.H. (Incl. Ref. #26–27)	1
8	32151–48	Ring – Retaining	4
9	283–70	Pin – Hitch (Incl. Ref. #11)	2
10	75–9790	Arm – Pivot	2
11	3290–343	Pin – Cotter Hair	2
12	93–4240	10” Wheel – Pneumatic (Incl. Ref. #13–14, 28 & 33–37)	2
13	93–4241	Spacer	2
14	93–4237	Bearing	8
15	327–24	Screw Cap Hex. Hd.	2
16	3296–53	Nut – Lock	4
17	323–15	Screw – Cap Hex. Hd.	16
18	5–0838	Washer – Flat	16
19	32128–43	Nut – Lock	16
20	327–25	Screw – Cap Hex. Hd.	2


Ref. No.	Part No.	Description	No. Used
21	93–5630	Spacer – Bearing	2
22	93–5508	Tire – 13”	2
23	93–5452	Wheel – Pneumatic, 13” (Incl. Ref. #14, 21–22 & 38–39)	2
24	69–6270	Fork – Castor	2
25	69–6860	Washer – Castor	8
26	69–6470	Bushing – Flange	4
27	302–5	Fitting – Grease	2
28	32128–16	Nut – HHF	8
29	69–9260	Pin – Clevis	2
30	69–0880	Decal – Torque	1
31	13–5069	Arm – Castor L.H. (Incl. Ref. #26–27, & 30)	1
32	30–8770	Washer – Flat	4
33	93–4242	Plate	2
34	93–4243	Tire – 10”	2
35	93–4239	Rim – Wheel	4
36	93–5980	Hub	2
37	93–4244	Tube – w/Valve	2
38	93–5631	Rim – Wheel	2
39	93–5963	Tube – w/Valve	2

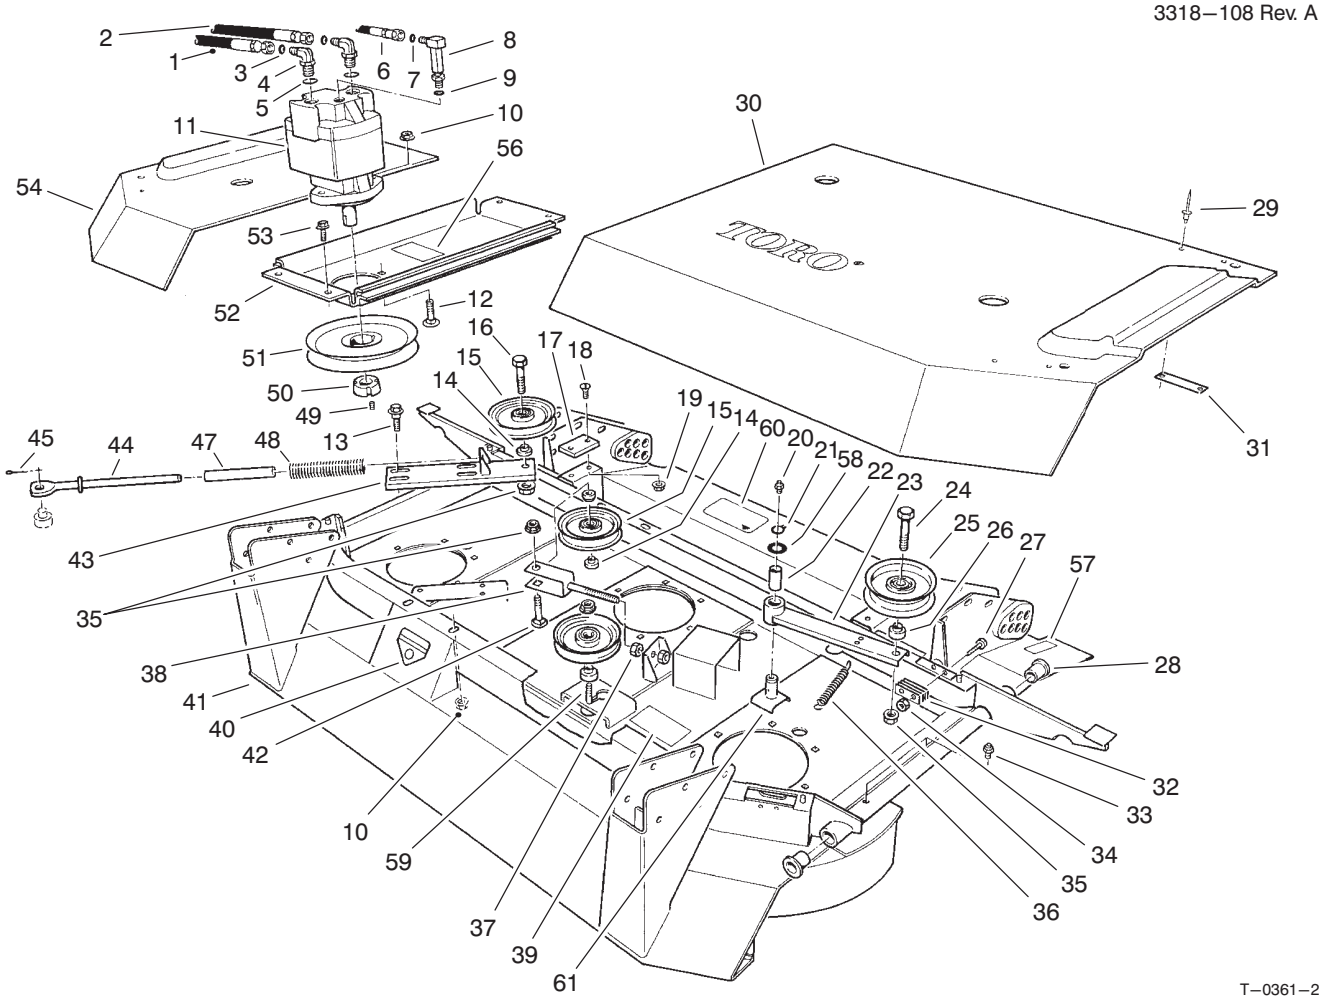

CENTER DECK MODEL NO. 30592

Ref. No.	Part No.	Description	No. Used
1	76–2760	Hydraulic Hose Assembly	1
2	76–2750	Hydraulic Hose Assembly	1
3	237–58	Seal – O–Ring	2
4	340–142	Fitting – Hydraulic Elbow (Incl. Ref #3 & 5)	2
5	237–81	Seal – O–Ring	2
6	76–2770	Hydraulic Hose Assembly	1
7	237–22	Seal – O–Ring	1
8	69–4320	Fitting – Hydraulic 90˚ (Incl. Ref. #7 & 9)	1
9	237–42	Seal O–Ring	1
10	32128–21	Nut – Flange Lock	6
11	94–4907	Motor – Hydraulic	1
12	3231–28	Bolt – Carriage	2
13	19–1470	Bolt – Shoulder	4
14	69–6960	Spacer – Idler	4
15	63–1540	Pulley – Idler	3
16	325–7	Screw – Cap Hex. Hd.	1
17	69–9290	Pad – Bumper	2
18	32108–103	Screw – Flat Hd.	4
19	32128 –20	Nut – Lock	4
20	302–2	Fitting – Grease	1
21	32120–72	Ring – Retaining	1
22	256–188	Bushing – Sleeve	1
23	69–6610	Arm – Idler (Incl. Ref. #22)	1
24	325–8	Screw – Cap Hex. Hd.	1
25	69–5430	Pulley–Idler	1

Ref. No.	Part No.	Description	No. Used
26	69–6970	Spacer – Idler	1
27	32105–1	Screw – Machine	8
28	256–117	Bushing – Flange	4
29	3269–25	Rivet – Pop	8
30	69–6780	Cover – Center Left	1
31	69–6870	Plate – Magnet	4
32	69–6260	Magnet – Cover	4
33	302–5	Fitting – Grease	4
34	3296–2	Nut – Lock	8
35	32128–23	Nut – Flange Lock	4
36	76–1670	Spring – Extension	1
37	3217–9	Nut – Jam	2
38	69–6550	Arm – Tension	1
39	82–2560	Decal – Belt Routing	1
40	43–8480	Decal – Danger	1
41	13–4969	Deck – Center (Incl. Ref. #20, 28, 33, 39, 40 & 57)	1
42	3233–27	Bolt – Carriage	1
43	69–6490	Plate – Tension	1
44	77–2830	Rod – Spring	1
45	3272–7	Pin – Cotter	1
47	69–6890	Spacer – Spring	1
48	86–7480	Spring – Compression	1
49		Screw – Set	2
50	23–1640	Bushing – Taper Lock (Incl. Ref. #49)	1

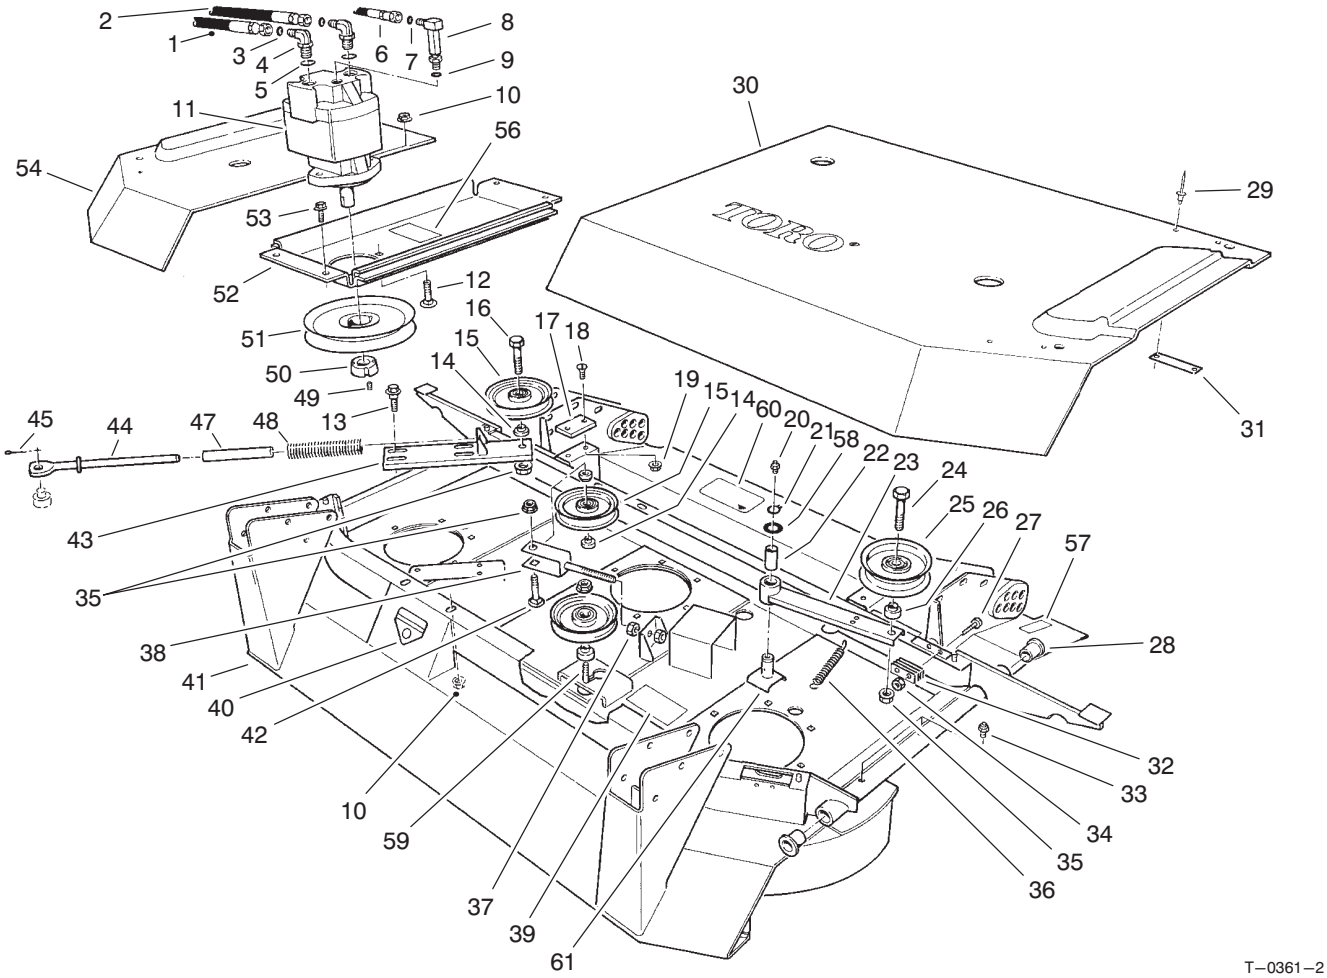


CENTER DECK MODEL NO. 30592 (Continued)

Ref. No.	Part No.	Description	No. Used
51	63–0660	Pulley – Drive	1
52	69–6390	Plate – Gearbox	1
53	3234–12	Screw – Hex. Flange Hd.	4
54	69–6790	Cover – Center Right	1
56	71–4260	Decal – H.O.C.	1
57	69–0820	Decal – H.O.C.	1

Ref. No.	Part No.	Description	No. Used
58	3–6498	Washer – Flat	1
59	3233–30	Bolt – Carriage	1
60	66–1340	Decal – Danger	1
61	93–9324	Pivot – Idler	1
*	93–8457	Hex.–Belt – Deck Drive	1
*	3290–378	Tie – Cable	2

*Not Illustrated

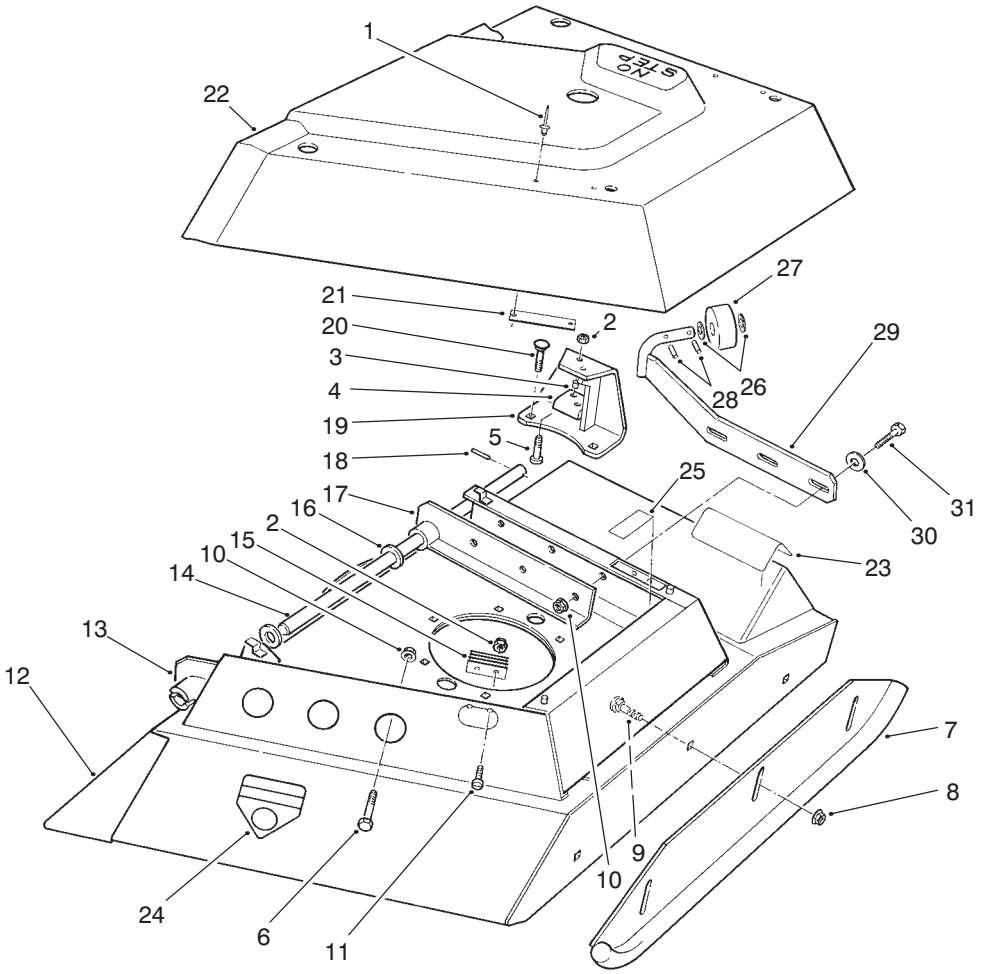


T–0366–2

CENTER DECK MODEL NO. 30592 LEFT WING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3269–25	Rivet – Pop	4
2	3296–2	Nut – Lock	6
3	40–9520	Spacer – Split	2
4	40–0330	Cushion – Rubber	1
5	32122–28	Screw – Truss Hd.	2
6	323–6	Screw – Cap Hex. Hd.	3
7	69–6730	Skid	1
8	32128–23	Nut – Flange Lock	3
9	3233–9	Bolt – Carriage	3
10	32128–21	Nut – Flange Lock	6
11	32105–1	Screw – Machine	4
12	13–4989	Deck – Left Wing (Incl. Ref. #23–25)	1
13	69–6640	Hinge – Left Front	1
14	69–6900	Shaft – Hinge	1
15	69–6260	Magnet – Cover	2
16	256–305	Washer – Thrust	2
17	69–6670	Hinge – Left Rear	1
18	32121–6	Pin – Roll	2
19	94–6760	Bracket – Support	1
20	3231–25	Bolt – Carriage	2
21	69–6870	Plate – Magnet	2
22	69–6850	Cover – Left Wing	1
23	66–1340	Decal – Danger	1
24	43–8480	Decal – Danger	1
25	67–5360	Decal – Danger	1
26	3256–69	Washer	2
27	82–4910	Roller	1
28	32121–4	Pin – Roll	2
29	88–9270	Bracket – Roller LH	1
30	5–0838	Washer – Flat	3
31	323–7	Screw – Cap Hex. Hd.	3
*	76–2060	V–Belt	1
*	42–6200	Shim – Cushion	A/R

*Not Illustrated

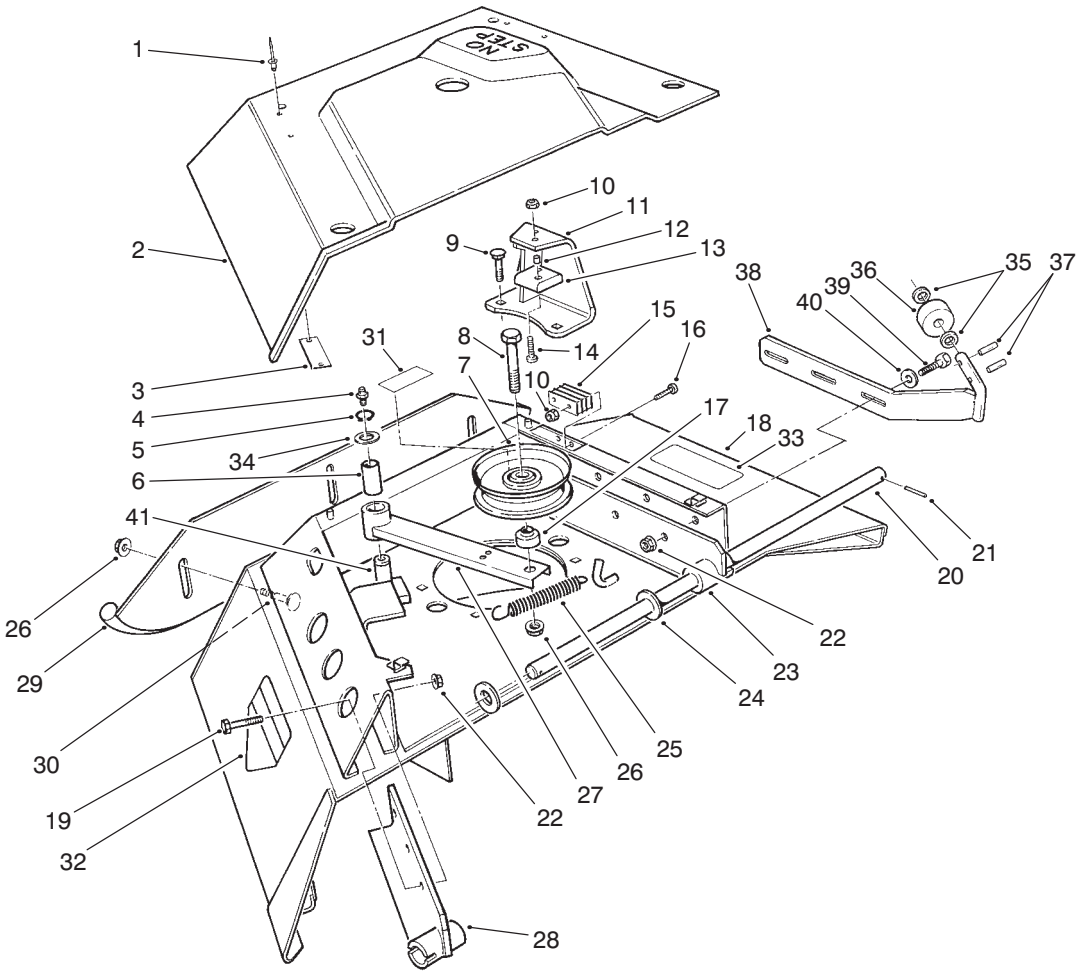


T−0365−2

CENTER DECK MODEL NO. 30592 RIGHT WING ASSY.

Ref. No.	Part No.	Description	No. Used
1	3269−25	Rivet − Pop	4
2	69−6840	Cover − Right Wing	1
3	69−6870	Plate − Magnet	2
4	302−2	Fitting − Grease	1
5	32120−72	Ring − Retaining	1
6	256−188	Bushing − Sleeve	1
7	69−5430	Pulley − Idler	1
8	325−8	Screw − Cap Hex. Hd.	1
9	3231−25	Bolt − Carriage	2
10	3296−2	Nut − Lock	6
11	94−6762	Bracket − Support	1
12	40−9520	Spacer − Split	2
13	40−0330	Cushion − Rubber	1
14	32122−28	Screw − Truss Hd.	2
15	69−6260	Magnet − Cover	2
16	32105−1	Screw − Machine	4
17	69−6970	Spacer − Idler	1
18	13−4979	Right Wing Deck Assembly (Incl. Ref. #4, 32 & 33)	1
19	323−6	Screw − Cap Hex. Hd.	3
20	69−6900	Shaft − Hinge	1
21	32121−6	Pin − Roll	2
22	32128−21	Nut − Flange Lock	6

Ref. No.	Part No.	Description	No. Used
23	69−6710	Hinge − Right Rear	1
24	256−305	Washer − Thrust	2
25	76−1670	Spring − Extension	1
26	32128−23	Nut − Flange Lock	4
27	69−6610	Idler Arm Assembly (Incl. Ref. #6)	1
28	69−6690	Hinge − Right Front	1
29	69−6730	Skid	1
30	3233−9	Bolt − Carriage	3
31	67−5360	Decal − Danger	1
32	43−8480	Decal − Danger	1
33	66−1340	Decal − Danger	1
34	3−6498	Washer	1
35	3256−69	Washer	2
36	82−4910	Roller	1
37	32121−4	Pin − Roll	2
38	88−9260	Bracket − Roller RH	1
39	323−7	Screw − Cap Hex. Hd.	3
40	5−0838	Washer − Flat	3
41	93−9324	Pivot − Idler	1
*	76−2060	V−Belt	1
*	42−6200	Shim − Cushion	A/R

*Not Illustrated

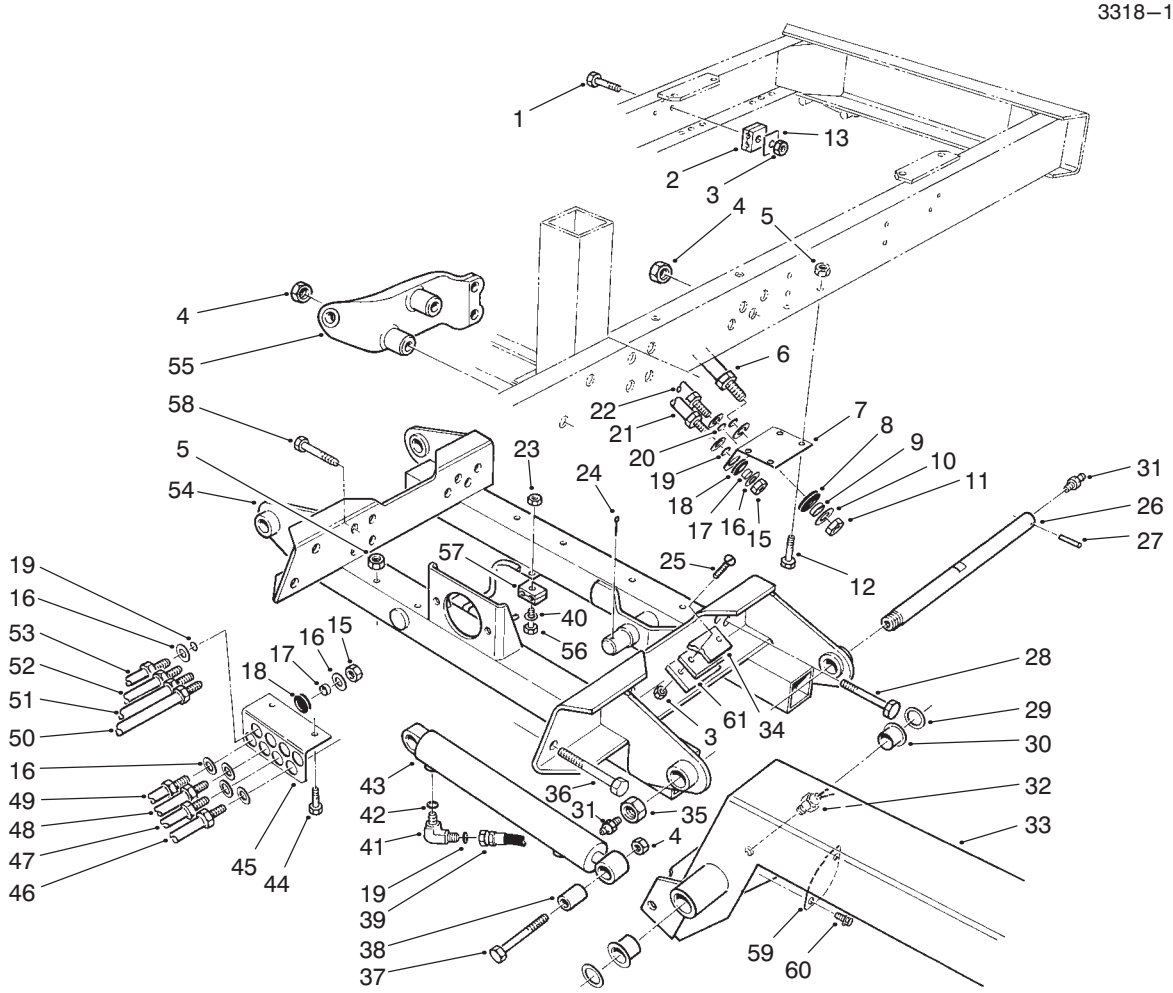


T–0348–1

WING DECK LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–11	Screw – Cap Hex. Hd.	1
2	56–7974	Clamp Half – Hydraulic Line	2
3	32152–1	Nut – Lock	5
4	32153–6	Nut – Lock	22
5	32152–2	Nut – Lock	6
6	69–6170	Tube – Hydraulic L.H. (Incl. Ref. #20)	1
*	69–6140	Tube – Hydraulic R.H. (Incl. Ref. # 20)	1
7	69–9450	Bracket – Wing Hose L.H.	1
*	69–9460	Bracket – Wing Hose R.H.	1
8	240–3	Grommet	4
9	69–9000	Spacer	4
10	69–9010	Washer	8
11	340–74	Nut – Bulkhead	4
12	323–6	Screw – Cap Hex. Hd.	4
13	69–9761	Plate – Cover	1
15	340–70	Nut – Bulkhead	10
16	69–8940	Washer	20
17	69–8970	Spacer	10
18	240–4	Grommet	10
19	237–22	Seal – O–Ring	14
20	237–65	Seal – O–Ring	4
21	69–5980	Tube – Hydraulic L.H. (Incl. Ref. #19)	1
*	69–5970	Tube – Hydraulic R.H. (Incl. Ref #19)	1

Ref. No.	Part No.	Description	No. Used
22	69–6180	Tube – Hydraulic L.H. (Incl. Ref. #20)	1
*	69–6150	Tube – Hydraulic R.H. (Incl. Ref. #20)	1
23	32152–4	Nut Lock	3
24	3272–33	Pin – Cotter	2
25	32108–103	Screw – Machine Flat Hd.	4
26	71–2580	Shaft – Lift Arm Pivot	2
27	32121–110	Pin – Roll	2
28	328–26	Screw – Cap Hex. Hd.	12
29	256–304	Washer – Thrust	4
30	69–6470	Bushing – Flange	4
31	302–2	Fitting – Grease	4
32	72–4310	Switch – Lift	2
33	92–8664	Lift Arm Assembly L.H. (Incl. Ref. #30–31)	1
*	92–8665	Lift Arm Assembly R.H. (Incl. Ref. #30–31)	1
34	69–9300	Cushion – Rubber	2
35	3296–68	Nut Lock	2
36	328–8	Screw – Cap Hex. Hd.	4
37	328–8	Screw – Cap Hex. Hd.	2
38	69–9190	Bushing – Cylinder	2
39	69–5490	Hose – Cylinder	4
40	3256–56	Washer – Flat	3
41	340–77	Fitting – Hydraulic Elbow (Incl. Ref. #19 & 42)	4


*Not Illustrated

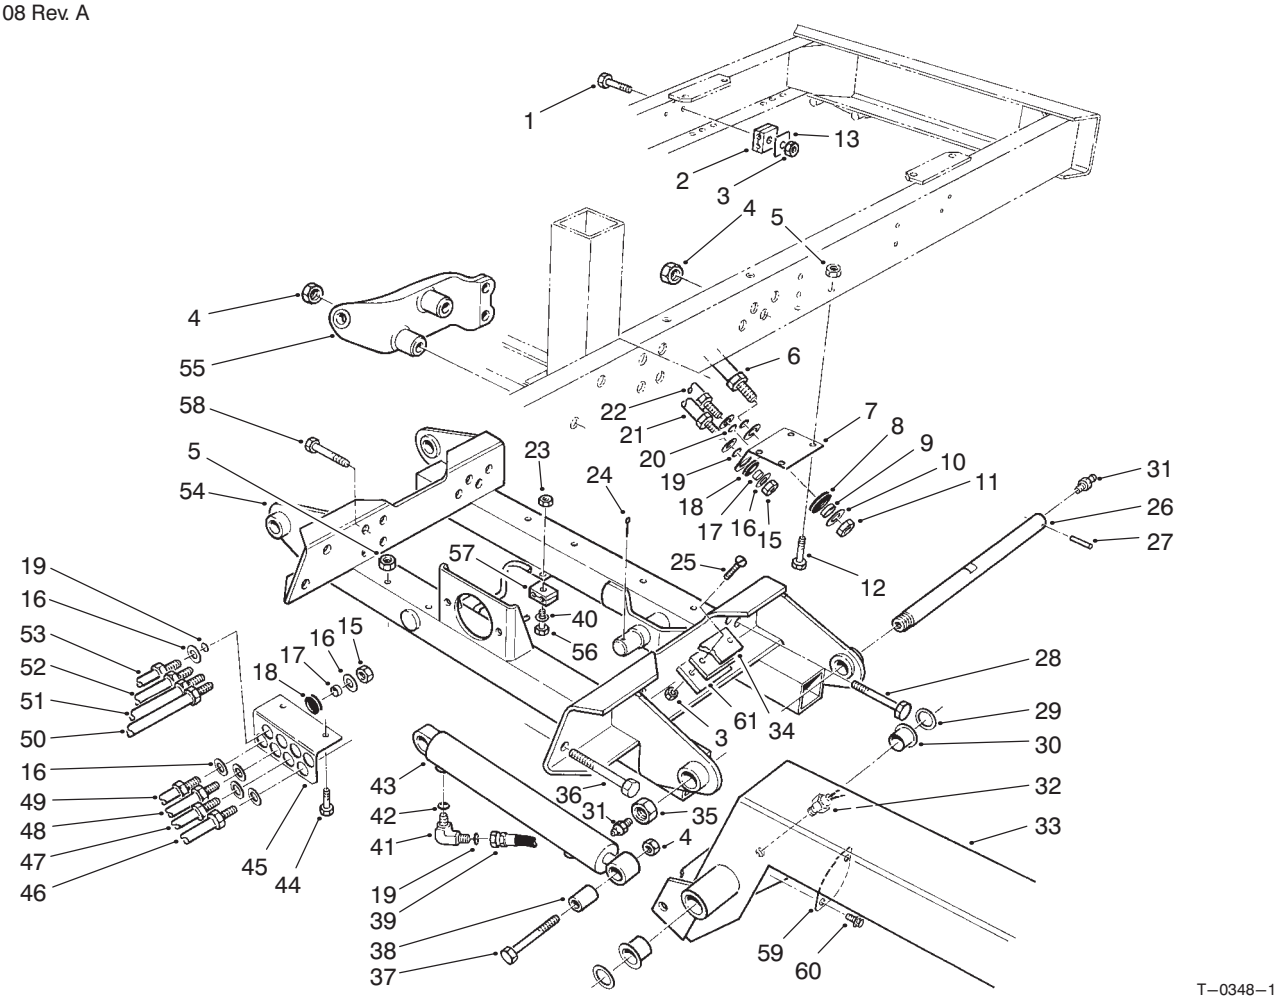

WING DECK LIFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
42	237−42	Seal − O−Ring	4
43	74−2170	Cylinder − Lift	2
44	323−15	Screw − Cap Hex. Hd.	2
45	74−2680	Bracket − Bulkhead	1
46	69−6030	Tube − Hydraulic (Incl. Ref. #19)	1
47	69−6060	Tube − Hydraulic (Incl. Ref. #19)	1
48	69−6070	Tube − Hydraulic (Incl. Ref. #19)	1
49	69−6000	Tube − Hydraulic (Incl. Ref. #19)	1
50	69−6040	Tube − Hydraulic (Incl. Ref. #19)	1
51	69−6050	Tube − Hydraulic (Incl. Ref. #19)	1
52	69−6080	Tube − Hydraulic (Incl. Ref. #19)	1
53	69−5990	Tube − Hydraulic (Incl. Ref. #19)	1
54	69−4400	Carrier −Wing Deck	1
55	69−1580	Anchor − Latch L.H.	1
*	69−1600	Anchor − Latch R.H.	1
56	321−9	Screw − Cap Hex. Hd.	3
57	56−7973	Clamp Half − Hydraulic Line	6
58	328−24	Screw − Cap Hex. Hd.	4
59	39−7650	Plate − Cover	2
60	32144−11	Screw − Thread Forming	4
61	93−9922	Spacer	2
*	3290−378	Tie − Cable	3

*Not Illustrated

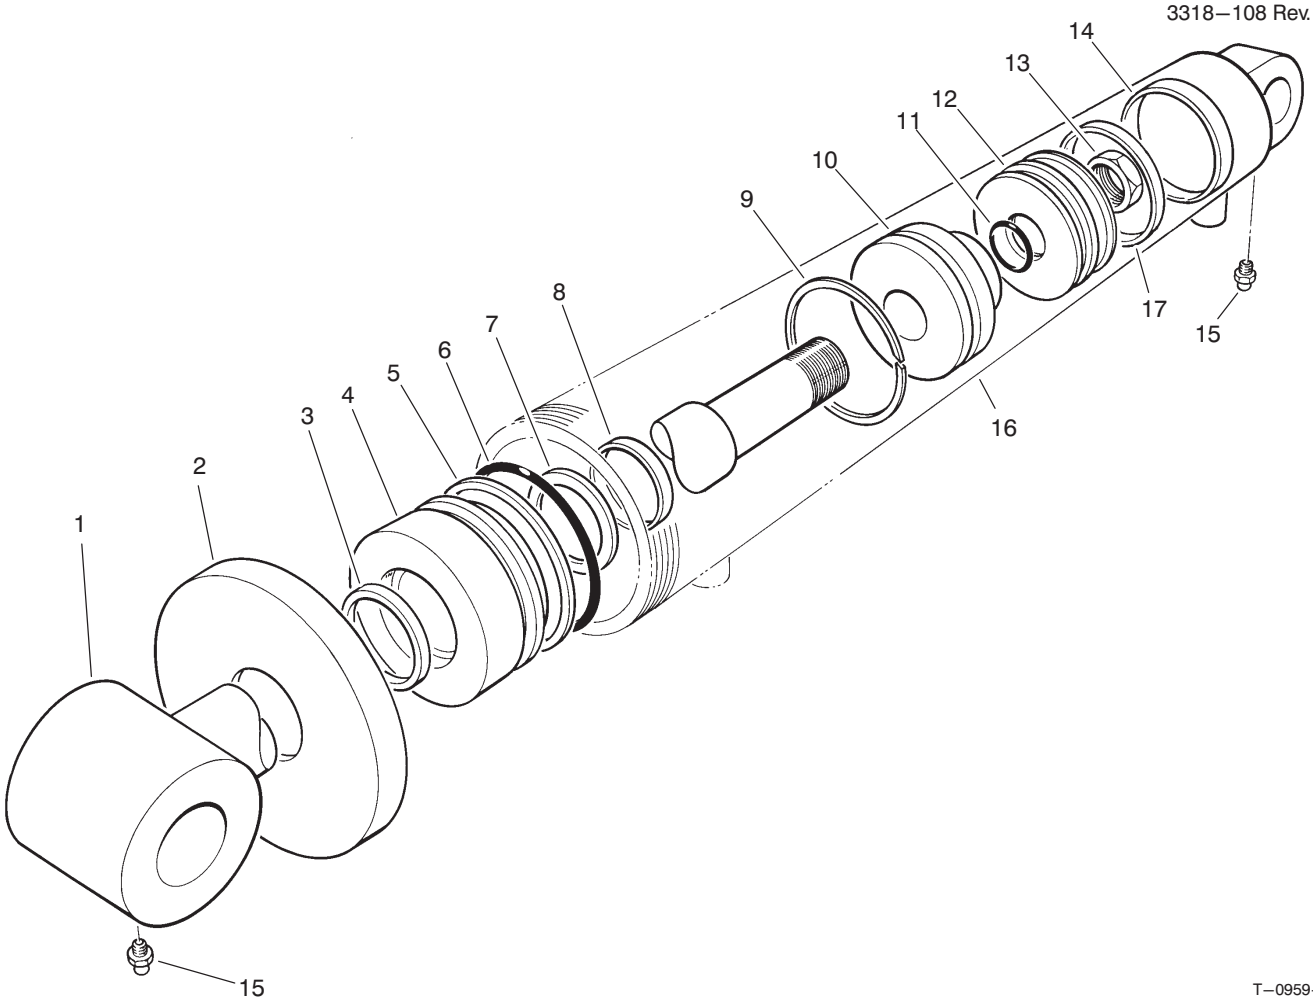


T–0959–1

HYDRAULIC CYLINDER ASSEMBLY NO. 74–2170

Ref. No.	Part No.	Description	No. Used
1	74–2230	Shaft/Clevis	1
2	74–2220	Collar	1
†3		Seal – Dust	1
4	74–2200	Head	1
†5		Ring – Back–Up	1
†6		Seal – O–Ring	1
†7		Seal – Uni–Ring	1
†8		Ring – Wear	1
9	74–2180	Ring – Steel	1
10	74–2190	Cushion	1

Ref. No.	Part No.	Description	No. Used
†11		Seal – Uni–Ring	1
12	74–2210	Piston	1
13	60–9760	Nut – Lock	1
†14		Ring – Wear	1
15	302–5	Fitting – Grease	2
†16		Barrel/Clevis	1
†17		Seal – Uni–Ring	1
*	86–7350	Seal Repair Kit (Incl. Ref. #3, 5–8, 11, 14 & 17)	1


*Not Illustrated
†Not serviceable separately.

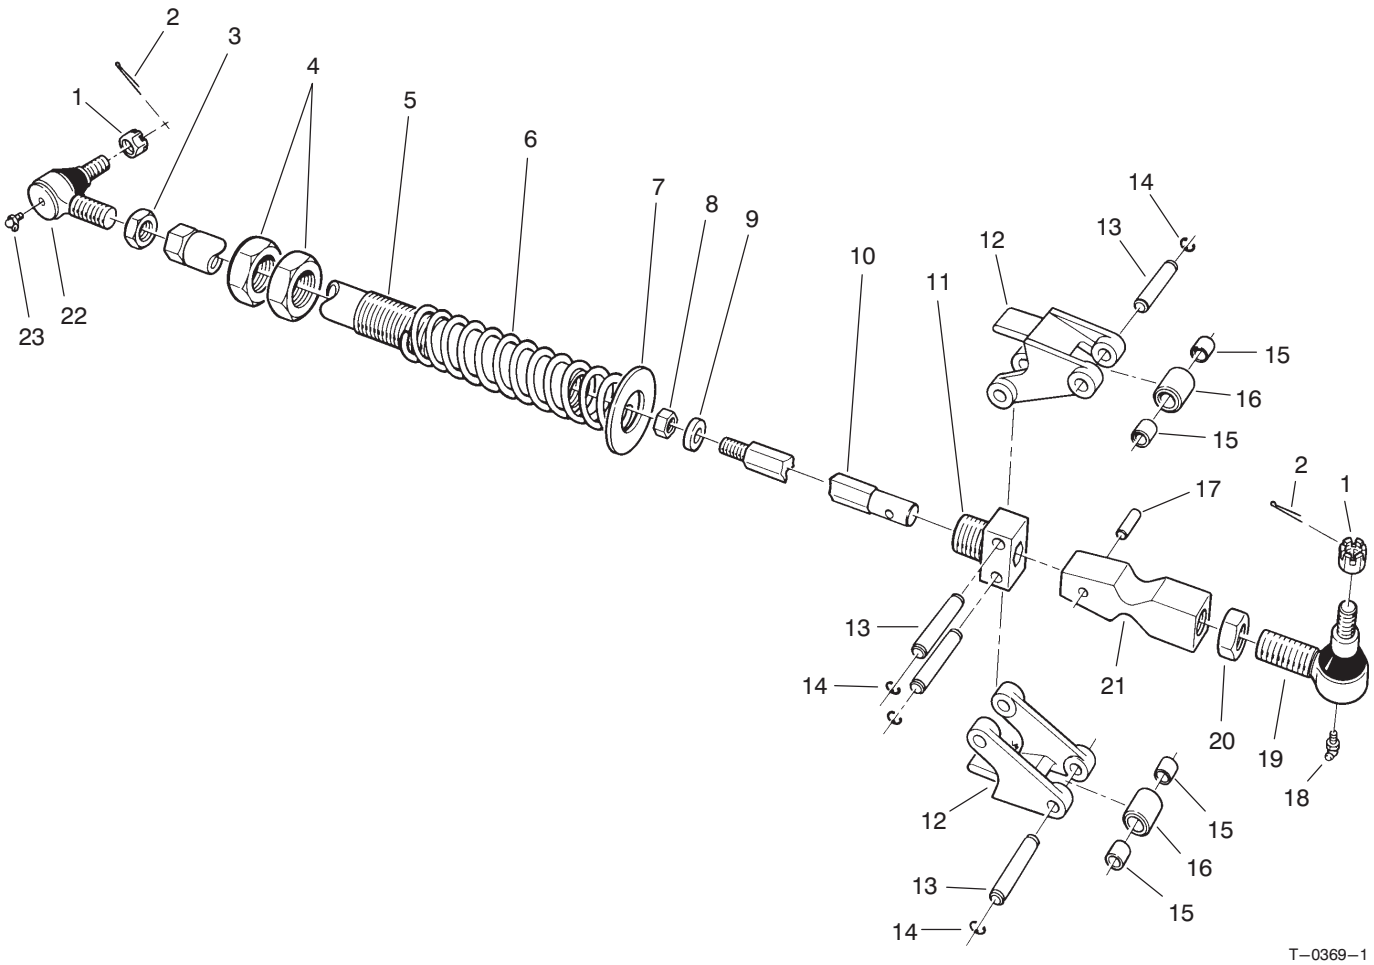

WING DECK LATCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32136–2	Nut – Castle	4
2	3272–12	Pin – Cotter	4
3	21–3001	Nut – Jam L.H. Thread	2
4	3220–22	Nut – Jam	4
5	69–7210	Tube – Latch	2
6	69–8480	Spring – Compression	2
7	69–9100	Washer – Latch	2
8	3296–41	Nut – Lock	2
9	71–2550	Washer – Latch Shaft	2
10	69–9680	Shaft – Latch	2
11	92–4804	Block – Latch Pivot	2
12	69–1630	Arm – Latch Pivot	4
13	92–4806	Pin – Latch	8

Ref. No.	Part No.	Description	No. Used
14	32120–47	Ring – Retaining	16
15	256–172	Bearing – Sleeve	8
16	92–4094	Roller – Latch	4
17	32121–49	Pin – Roll	2
18	302–5	Fitting – Grease	2
19	86–8100	Joint – Ball ((Incl. Ref. #1 & 18)	2
20	21–3000	Nut – Jam	2
21	92–4805	Cam – Spring Trip	2
22	86–8101	Joint – Ball (Incl. Ref. #1 & 23)	2
23	302–40	Fitting – Grease	2

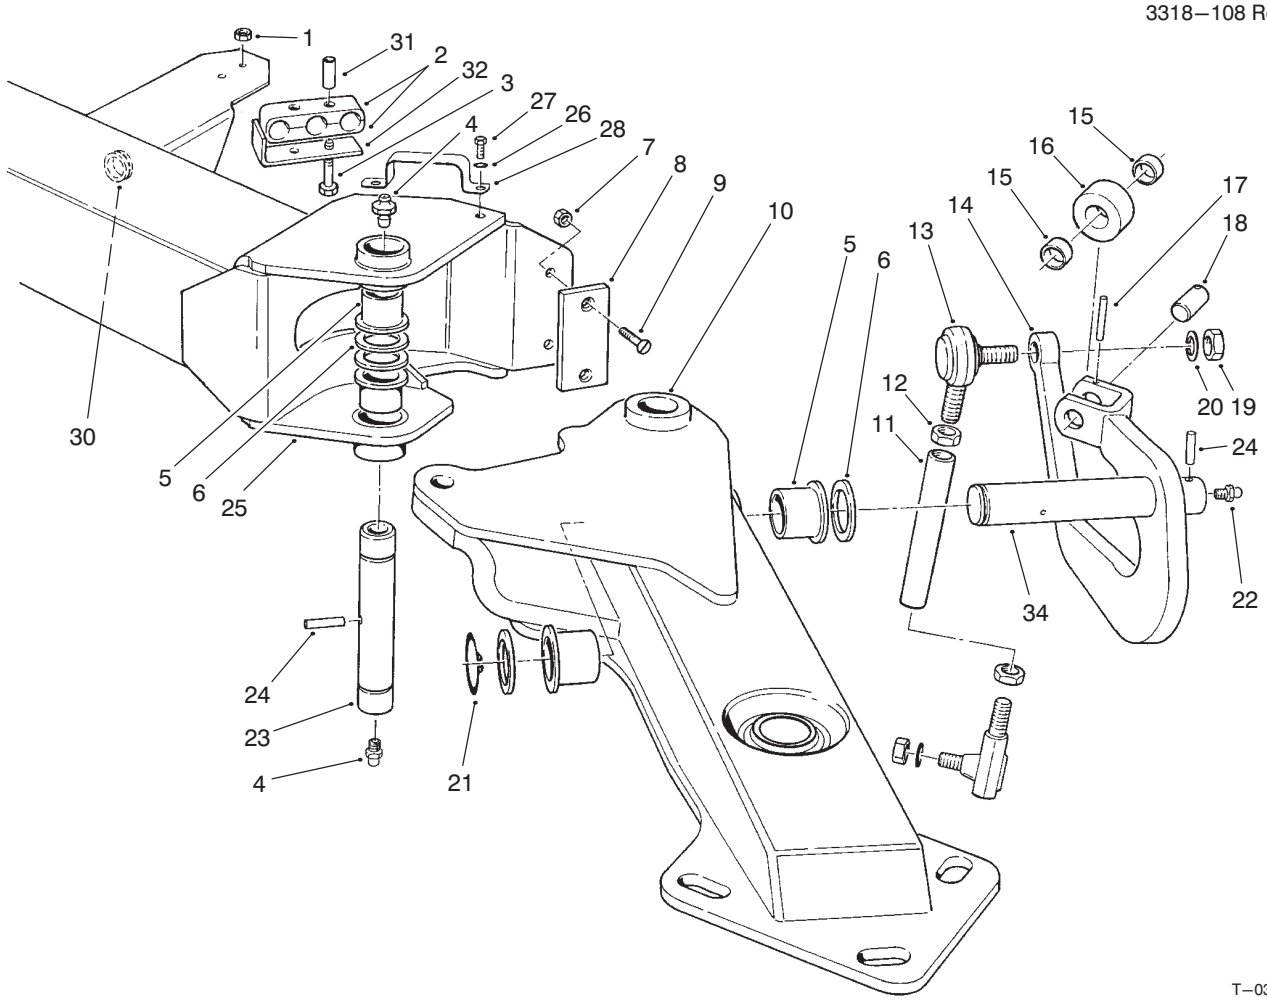


T—0370—2

WING DECK LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32152—4	Nut — Lock	4
2	74—2710	Clamp Half — Hydraulic Line	4
3	321—15	Screw — Cap Hex. Hd.	4
4	302—2	Fitting — Grease	4
5	69—6470	Bushing — Flange	8
6	256—304	Washer — Thrust	8
7	32152—1	Nut — Lock	4
8	69—9300	Cushion — Rubber	2
9	32108—103	Screw — Machine Flat Hd.	4
10	93—9942	Arm — Outer Lift L.H. (Incl. Ref. #5)	1
*	93—9941	Arm — Outer Lift R.H. (Incl. Ref. #5)	1
11	71—2600	Tube — Anti — Sway	2
12	3220—7	Nut — Jam	4
13	2411—40	Joint — Ball	4
14	82—7930	Arm — Anti—Sway L.H.	1
*	82—7940	Arm — Anti—Sway R.H.	1
15	256—76	Bushing — Sleeve	4
16	69—9240	Roller — Cam	2

Ref. No.	Part No.	Description	No. Used
17	32121—34	Pin — Roll	2
18	69—9250	Shaft — Roller	2
19	3219—7	Nut — Lock	4
20	3253—9	Washer — Lock	4
21	32151—10	Ring — Retaining	2
22	302—5	Fitting — Grease	2
23	71—2620	Shaft — Lift Arm Elbow	2
24	32121—110	Pin Roll	4
25	93—9926	Lift Arm Assembly L.H. (Incl. Ref. #5)	1
*	93—9925	Lift Arm Assembly R.H. (Incl. Ref. #5)	1
26	3254—2	Washer	4
27	322—3	Screw — HH	4
28	93—9928	Clamp — Hose	2
30	93—9912	Grommet	2
31	74—2730	Tube — Clamp	4
32	94—6772	Retainer — Clamp	2
34	82—7900	Shaft — Arm	2

*Not Illustrated

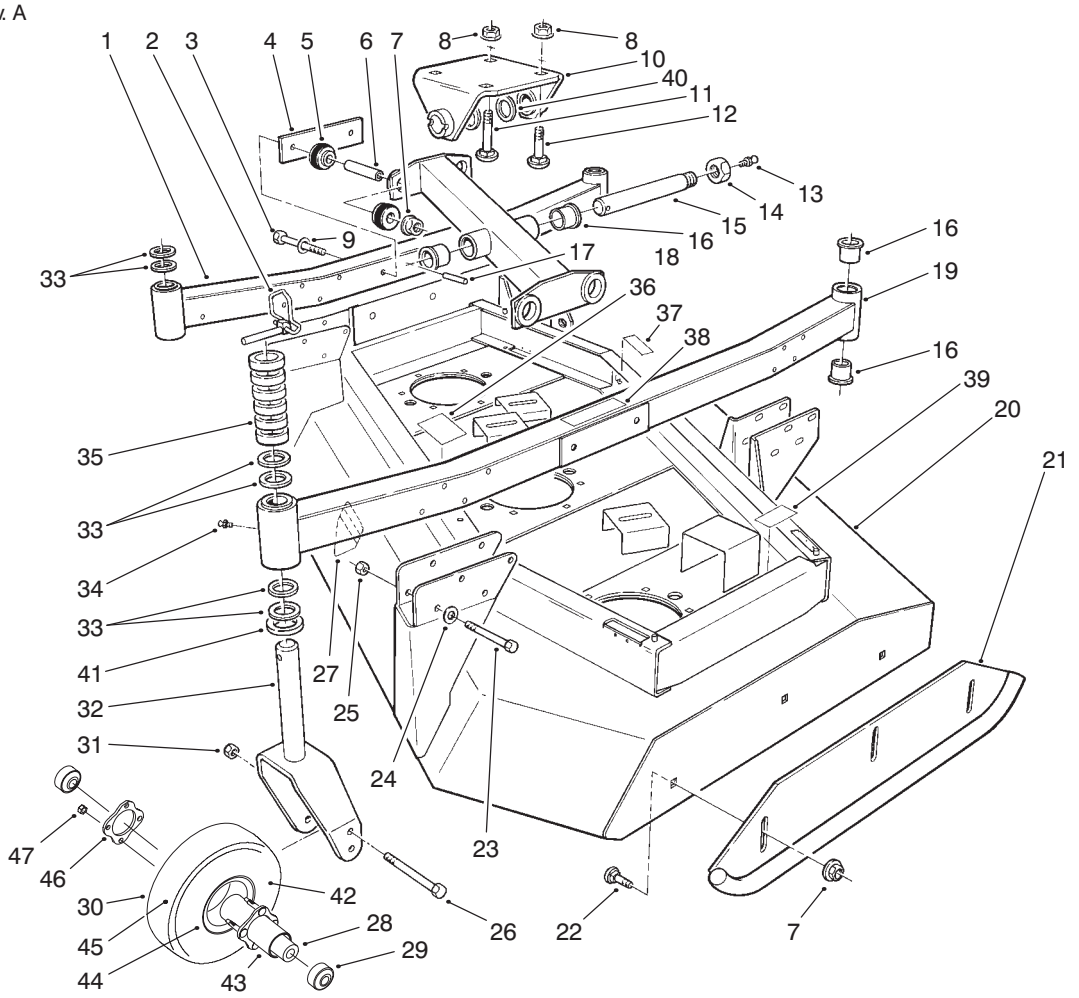


T–0335–2

WING DECK MODEL NO 30591 L.H. & 30593 R.H.

Ref. No.	Part No.	Description	No. Used
1	69–8830	Arm – Inside Castor (Incl. Ref. #16 & 34)	2
2	3290–384	Pin – Lynch	8
3	325–20	Screw – Cap Hex. Hd.	8
4	69–8790	Plate – Reinforcing	2
5	69–9700	Mount – Rubber (Incl. Ref. #6)	8
6		Spacer	8
7	32128–23	Nut – Flange Lock	20
8	32128–45	Nut – Lock	8
9	30–8770	Washer – Flat	8
10	69–7170	Clevis – Deck	2
11	3233–29	Bolt – Carriage	2
12	3233–28	Bolt – Carriage	6
13	302–2	Fitting – Grease	2
14	3296–68	Nut – Lock	2
15	71–2610	Shaft – Deck Pivot	2
16	69–6470	Bushing – Flange	20
17	32121–110	Pin – Roll	2
18	69–6420	Bar – Lift L.H. (Incl. Ref. #16)	1
*	69–6480	Bar – Lift R.H. (Incl. Ref. #16)	1
19	13–5059	Arm – Outside Castor (Incl. Ref. #16, 34 & 38)	2
20	13–5009	Deck – Wing L.H. (Incl. Ref. #27, 36, 37 & 39)	1
*	13–4999	Deck – Wing R.H. (Incl. Ref. #27, 36, 37 & 39)	1

Ref. No.	Part No.	Description	No. Used
21	69–6730	Skid	4
22	3233–9	Bolt – Carriage	12
23	323–15	Screw – Cap Hex. Hd.	32
24	5–0838	Washer – Flat	32
25	32128–43	Nut – Lock	32
26	327–17	Screw Cap Hex. Hd.	8
27	43–8480	Decal – Danger	2
28	93–4241	Spacer	8
29	93–4237	Bearing	16
30	93–4240	10” Wheel – Pneumatic (Incl. Ref. #28–29 & 42–47)	8
31	3296–53	Nut – Lock	8
32	75–9670	Fork – Castor	8
33	69–6860	Washer – Thrust	28
34	302–5	Fitting – Grease	8
35	69–1510	Spacer – Castor	48
36	69–0890	Decal – Belt Routing L.H.	1
*	69–0900	Decal – Belt Routing R.H.	1
37	66–1340	Decal – Danger	2
38	69–0880	Decal – Torque	2
39	67–5360	Decal – Danger	4
40	256–304	Washer – Thrust	4
41	77–0950	Washer – Castor	8
42	93–4243	Tire – 10”	8
43	93–5980	Hub	8
44	93–4239	Rim – Wheel	16
45	93–4244	Tube – w/Valve	8
46	93–4242	Plate	8
47	32128–16	Nut – HHF	32

*Not Illustrated

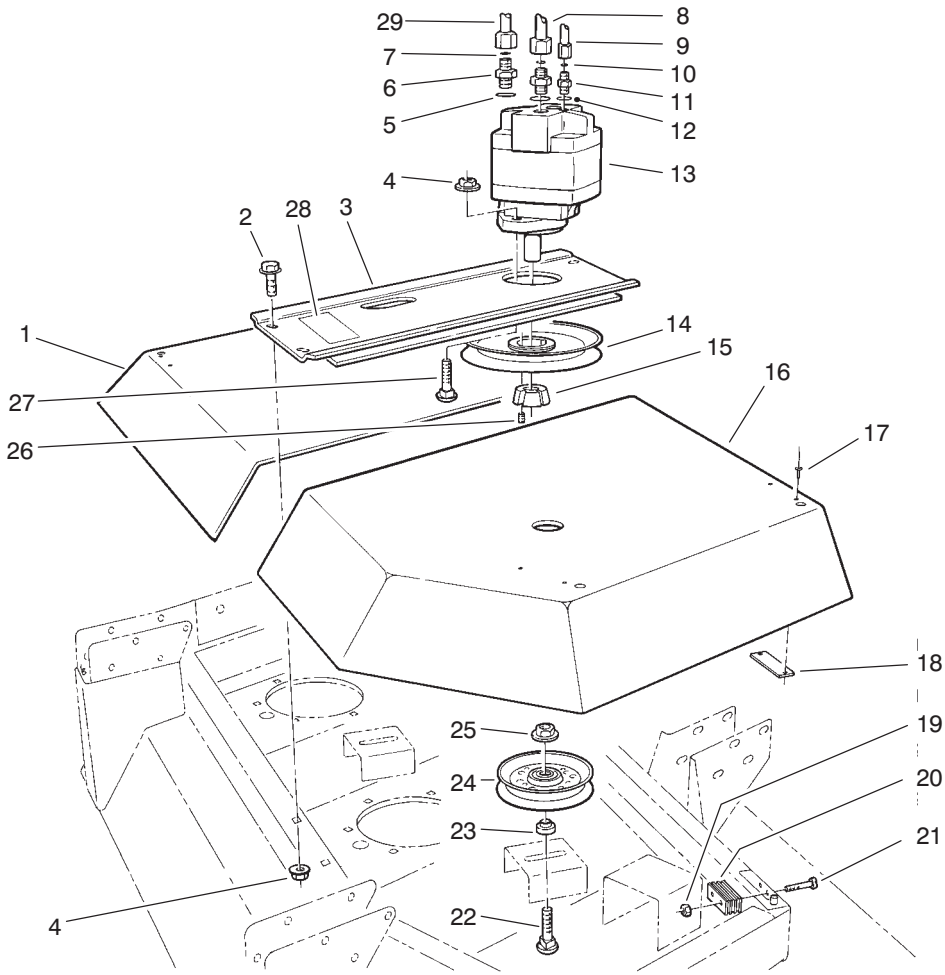


T–0336–1

WING DECK MODEL NO. 30591 L.H. & 30593 R.H. DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	69–6800	Cover – Inner L.H.	1
*	69–6820	Cover – Inner R.H.	1
2	3234–12	Screw – Hex. Washer Hd.	8
3	69–6360	Plate – Motor Mounting L.H.	1
*	69–6340	Plate – Motor Mounting R.H.	1
4	32128–21	Nut – Flange Lock	12
5	237–81	Seal – O–Ring	4
6	340–8	Fitting – Hydraulic Straight (Incl. Ref. #5 & 7)	4
7	237–65	Seal – O–Ring	4
8	93–9918	Asm. – Hose, Hydraulic	2
9	93–9917	Asm. – Hose, Hydraulic	2
10	237–22	Seal – O–Ring	2
11	340–2	Fitting – Hydraulic Straight (Incl. Ref. # 10 & 12)	2
12	237–42	Seal – O–Ring	2
13	94–4907	Motor – Hydraulic	2
14	63–0660	Pulley – Wing Deck Drive	2
15	23–1640	Bushing – Taper Lock (Incl. Ref. #26)	2

Ref. No.	Part No.	Description	No. Used
16	69–6810	Cover – Outer L.H.	1
*	69–6830	Cover – Outer R.H.	1
17	3269–25	Rivet – Pop	16
18	69–6870	Plate – Magnet	8
19	3296–2	Nut – Lock	16
20	69–6260	Magnet – Cover	8
21	32105–1	Screw – Pan Hd.	16
22	3233–30	Bolt – Carriage	6
23	69–6960	Spacer – Idler	6
24	63–1540	Pulley – Idler	6
25	32128–23	Nut – Flange Lock	6
26		Screw – Set	4
27	3231–28	Bolt – Carriage	4
28	71–4260	Decal – H.O.C.	2
29	93–9919	Asm. – Hose, Hydraulic	2
*	76–2060	V–Belt	6
*	3290–378	Tie – Cable	24

*Not Illustrated

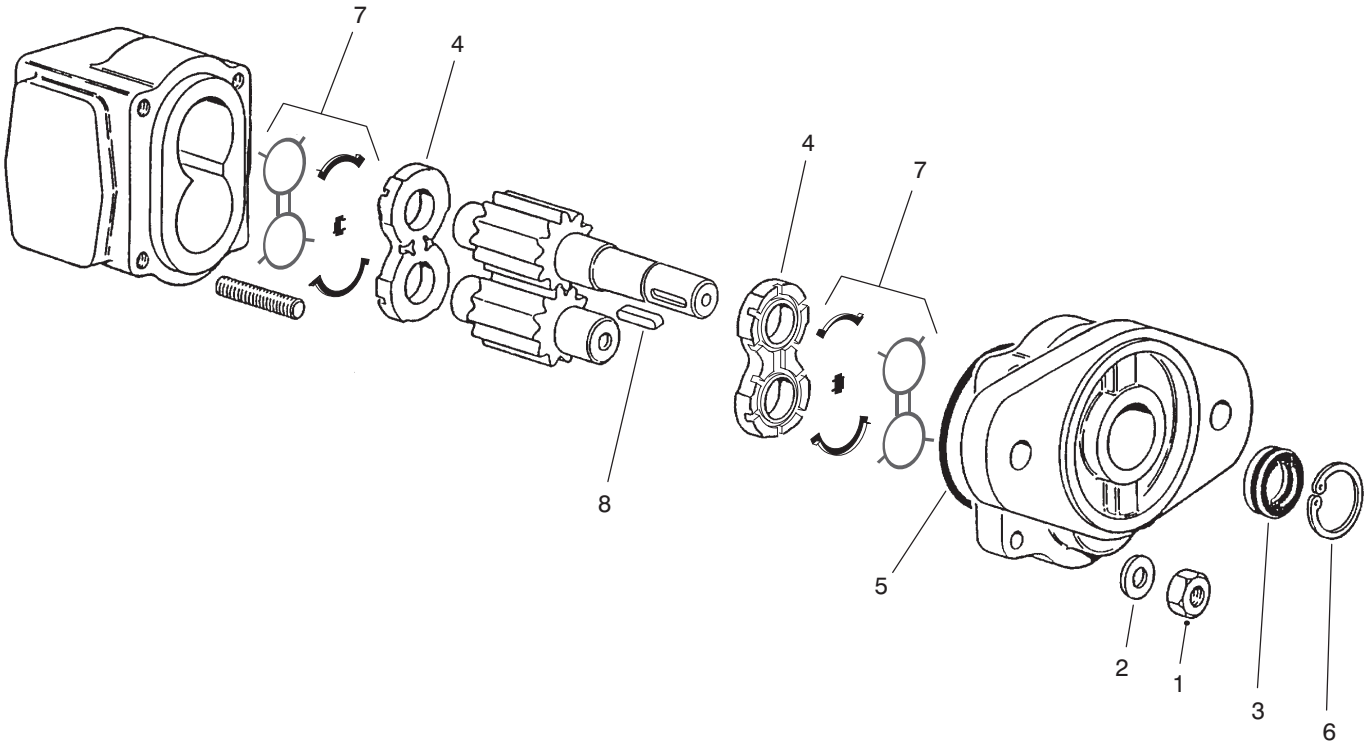


T–2313–1

HYDRAULIC MOTOR ASSEMBLY NO. 94–4907

Ref. No.	Part No.	Description	No. Used
1	33016–00	Nut – Hex.	4
2	33096–00	Washer – Flat	4
3	94–5391	Seal – Shaft	1
4	94–5390	Plate – Load	2
5		Seal – O–Ring	1

Ref. No.	Part No.	Description	No. Used
6		Ring – Retaining	1
7		Seal – Load	2
8	93–7637	Key – Square	1
*	94–5392	Kit – Seal (Incl. Ref. #3 & 5–8)	1

*Not Illustrated

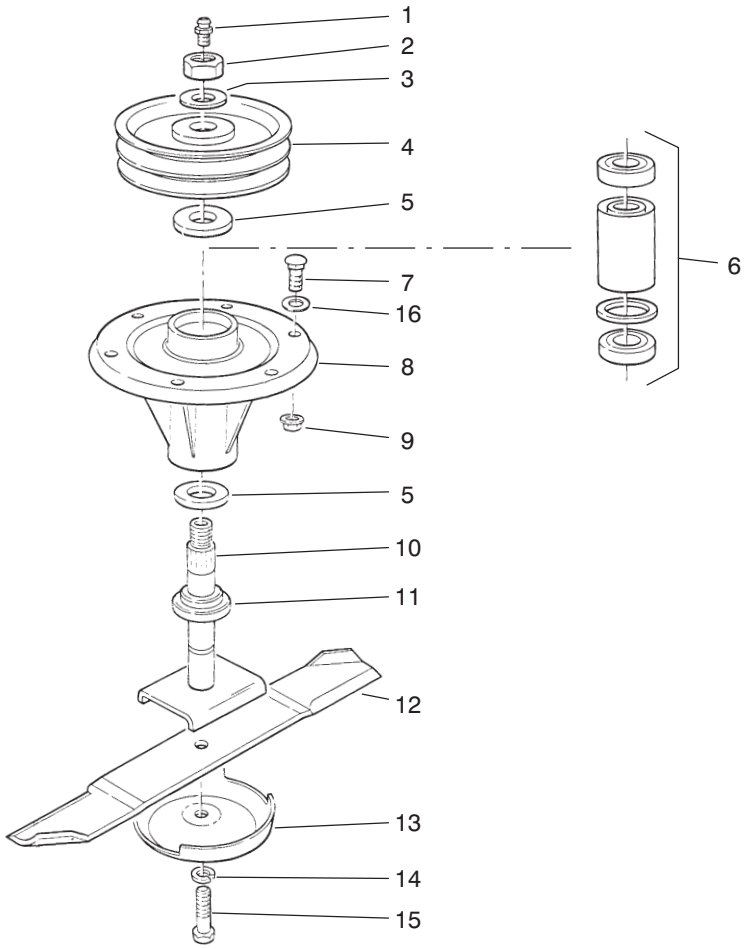


T—0337—1

SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302—2	Fitting — Grease Str.	1
*	302—10	Fitting — Grease 45° (Used only on wing deck center & inside spindles)	1
2	3296—49	Nut — Lock	1
3	3—8514	Washer	1
4	69—8390	Pulley — Spindle	1
5	253—154	Seal — Wave	2
6	71—2530	Bearing Assembly	1
7	3231—22	Bolt — Carriage	6

Ref. No.	Part No.	Description	No. Used
8	69—1530	Housing — Spindle	1
9	32128—21	Nut — Flange Lock	6
10	69—6760	Shaft — Spindle	1
11	92—9800	Spacer — Spindle	1
12	69—6920	Blade — 20”	1
13	67—7561	Cup — Anti Scalp	1
14	3253—8	Washer — Lock	1
15	51—4060	Bolt — Blade	1
16	3256—24	Washer — Flat	A/R

*Not Illustrated

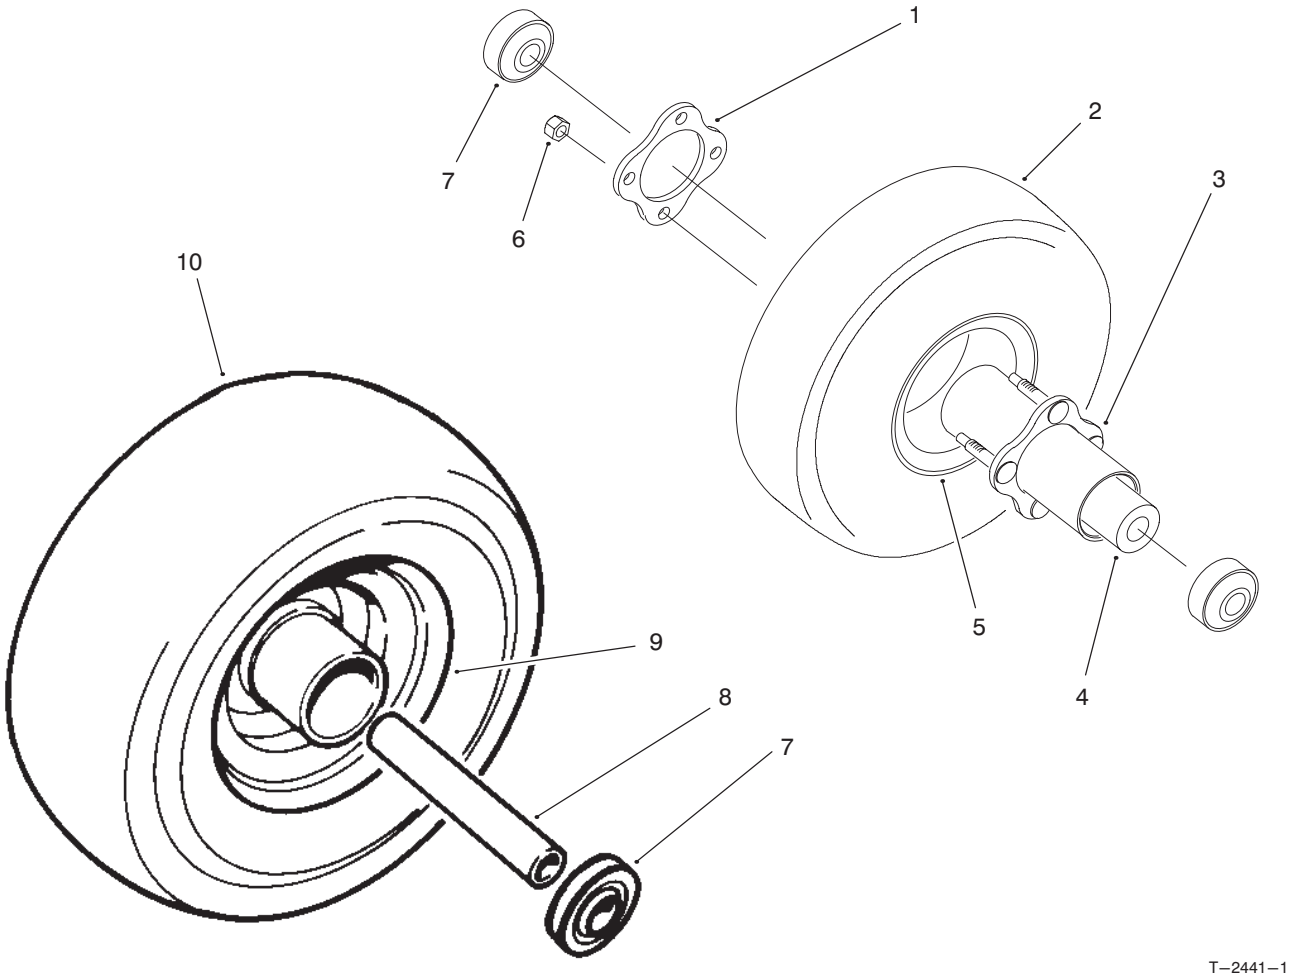

T–2441–1

10” & 13” FOAM FILLED TIRE ASSEMBLIES (Optional)

Ref. No.	Part No.	Description	No. Used
†1		Plate	1
2	93–5973	10” Foam Filled Tire Asm. (Incl. Ref. #1, 3–7)	1
†3		Hub	1
4	93–4241	Spacer – Bearing, Inner	1
†5		Rim	2
†6		Nut – HHF	4
7	93–4237	Bearing	4
8	93–5630	Spacer – Bearing, Inner	1
†9		Rim	1
10	93–5999	13” Foam Filled Tire Asm. (Incl. Ref. #7–9)	1

† Not Serviced Separately.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–2858	Disc – Friction	18	2	1
3–3251	Spring – Compression	4	45	1
3–3710	Tie Rod Assembly	75	39	1
3–6498	Washer	84	34	1
3–6498	Washer – Flat	82	58	1
3–8514	Washer	93	3	1
3–8596	Spring – Compression	18	12	1
5–0838	Washer – Flat	80	18	16
5–0838	Washer – Flat	90	24	32
5–0838	Washer – Flat	83	30	3
5–0838	Washer – Flat	84	40	3
5–3177	Washer – Flat	23	7	4
5–3637	Spacer – Terminal	22	4	1
5–3637	Washer – Flat	48	13	1
12–8900	Bolt – Shoulder	36	32	2
13–4239	Shroud – Fan	44	9	1
13–4969	Deck – Center	81	41	1
13–4979	Right Wing Deck Assembly	84	18	1
13–4989	Deck – Left Wing	83	12	1
13–4999	Deck – Wing R.H.	90	*	1
13–5009	Deck – Wing L.H.	90	20	1
13–5059	Arm – Outside Castor	90	19	2
13–5069	Arm – Castor L.H.	80	31	1
17–7190	Spacer	46	23	4
18–2770	Strap – Ground	72	23	1
19–1470	Bolt – Shoulder	81	13	4
20–4360	Tube – Spacer	78	16	2
20–4840	Clamp – Exhaust	46	12	2
20–4840	Clamp – Tube	25	15	2
20–9500	Spacer	4	14	2
21–0141	Joint – Ball	9	20	1
21–1830	Spring – Extension	7	23	1
21–2070	Yoke – End	36	8	2
21–3000	Nut – Jam	88	20	2
21–3000	Nut – Jam	78	38	2
21–3001	Nut – Jam L.H. Thread	88	3	2
23–1640	Bushing – Taper Lock	81	50	1
23–1640	Bushing – Taper Lock	91	15	2
23–2140	Hose – Radiator Vent	44	7	1
23–2270	Bushing – Rubber	9	15	1
23–7250	Spacer	72	35	1
23–7270	Nut – Lug	75	24	10
25–2630	Ring – Back Up	41	63	1
25–2630	Ring Back Up	40	47	1
27–2360	Switch – Ignition	14	16	1
27–4720	Pin – Pivot Seat	1	14	1
27–4720	Pin – Pivot, Seat	2	19	1
27–7120	Nut	69	3	1
27–7220	Detergent – Element	69	*	1
28–0380	Spacer	4	35	3
28–3580	Ring – Back Up	40	44	1
28–3590	Seal O–Ring	40	43	1
29–6150	Spring – Leaf	37	43	1
29–6163	Switch – Micro	6	13	1
29–6170	Leaf Spring Assembly	37	38	1
30–8770	Washer – Flat	90	9	8
30–8770	Washer – Flat	80	32	4
31–0390	Washer – Friction	4	15	3
37–9560	Hose – Fuel	70	1	1
39–5710	Plug	2	13	21
39–7591	Thermo Switch Assembly	47	66	1
39–7592	Switch – Temperature	46	5	1
39–7593	Temperature Sending Unit	24	15	1
39–7650	Plate – Cover	86	59	2
40–0330	Cushion – Rubber	83	4	1
40–0330	Cushion – Rubber	84	13	1
40–3890	Trim	2	14	2
40–4010	Roller	3	1	4
40–4060	Washer – Rubber	3	26	1
40–4070	Washer	3	24	3
40–4080	Track – U	3	6	1
40–4090	Rivet – Pop	3	5	2
40–4120	Plate – Rubber	3	7	1
40–4150	Roller	3	11	1
40–4160	Guide – Sleeve	3	12	1
40–4230	Plug	3	17	1
40–4310	Bearing – Thrust Needle	3	25	1
40–4340	Spring – Extension	3	28	1
40–4350	Spring – Extension	3	29	2
40–4360	Plate	3	30	1
40–4370	Bolt	3	31	1
40–4380	Bracket – Release	3	32	2
40–9520	Spacer – Split	83	3	2
40–9520	Spacer – Split	84	12	2
41–8760	Gasket – Pump	37	49	1
42–1720	Field Core Coil Assembly	9	5	1
42–6200	Shim – Cushion	83	*	A/R
42–6200	Shim – Cushion	84	*	A/R
43–4000	Breaker – Circuit 40A	11	10	1
43–5920	Washer – Lock	48	14	1
43–5970	Nut – Hex.	48	15	1
43–6110	Plate – Clutch	9	9	1
43–6200	Spring – Compression	9	27	1
43–6280	Button	13	10	2
43–6280	Button	14	12	2
43–6320	Collar – Locking	9	10	1
43–6420	Bezel	13	11	2
43–6420	Bezel	14	13	2
43–8480	Decal – Danger	83	24	1
43–8480	Decal – Danger	90	27	2
43–8480	Decal – Danger	84	32	1
43–8480	Decal – Danger	81	40	1
44–2210	Body – Indicator Light	4	5	1
44–2212	Body – Indicator Light	4	12	2
46–1600	Spacer	4	26	4
46–3380	Bolt – Shoulder	44	23	2
46–6560	Bushing	22	21	1
47–6990	Nut – Hex.	4	9	1
48–7630	Screw	47	72	1
48–7710	Screw – Cap Hex. Hd.	37	10	8
48–7780	Screw – Cap Hex. Hd.	2	15	2
48–7780	Screw – Cap Hex. Hd.	46	32	6
48–7890	Nut – Hex.	47	73	1
48–7930	Nut – Lock	46	6	3
48–8070	Washer – Lock	46	2	16
48–8070	Washer – Lock	72	29	1
48–9470	Screw – Cap Hex. Hd.	46	25	8
48–9480	Screw – Cap Hex. Hd.	46	21	4
48–9570	Washer – Lock	46	7	3
48–9570	Washer – Lock	37	9	8
48–9590	Washer – Lock	46	22	22
49–2500	Element Assembly	57	21	1
49–6170	Pad – Brake	7	4	1
49–6171	Pad – Brake Pedal L.H.	6	19	1
49–6172	Pad – Brake Pedal R.H.	6	*	1
51–3150	Shim – Spring	38	60	A/R
51–4060	Bolt – Blade	93	15	1
51–4910	Bolt	51	24	2
51–4910	Bolt	62	28	4
51–4920	Bolt	52	1	1
51–4950	Guide	53	18	8
51–5090	Plug	54	9	1
51–5260	Ring – Retaining	54	30	2
51–5280	Cap	54	12	8
51–5290	Cotter	54	13	16
51–5300	Retainer	54	14	8
51–5310	Seal	54	15	8
51–5460	Key	56	16	1
51–5460	Key	54	26	1
51–5470	Plate	54	25	1
51–5500	Bushing No. 1	55	5	1
51–5510	Bushing – No. 2	55	26	1
51–5520	Bushing – No. 3	55	27	1
51–5580	Hanger	55	2	1
51–5600	Cap	55	3	11
51–5640	Idler Shaft Assembly	55	36	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
51—5650	Pin	56	15	1
51—5650	Pin	55	21	6
51—5650	Pin	55	35	1
51—5840	Washer	53	12	1
51—5850	Cover	52	15	1
51—5860	Gasket	52	14	1
51—5890	Oil Seal Assembly	58	17	1
51—5950	Stud	58	2	2
51—5970	Nut	58	4	2
51—6350	Gear	56	3	1
51—6390	Washer	62	29	4
51—6390	Washer	55	33	1
51—6390	Washer — Lock	52	2	11
51—6390	Washer — Lock	58	3	13
51—6390	Washer — Lock	48	9	2
51—6390	Washer — Lock	62	9	2
51—6390	Washer — Lock	51	14	2
51—6390	Washer — Lock	51	18	4
51—6390	Washer — Lock	51	23	4
51—6390	Washer — Lock	57	27	4
51—6400	Plate	52	7	1
51—6430	Bushing	52	10	1
51—6480	Cover	55	9	1
51—6490	Gasket	55	10	1
51—6820	Washer	57	24	1
51—6830	Relief Valve Assembly	57	25	1
51—6890	Gasket	53	14	1
51—6890	Gasket — Plug	58	15	1
51—6910	Nut	51	32	1
51—6920	Washer — Lock	51	21	2
51—6920	Washer — Lock	51	31	1
51—6940	Ring	51	28	1
51—6950	Bearing	51	27	1
51—6960	Key	51	3	1
51—6980	Bearing	51	25	1
51—7020	Nipple	51	6	1
51—7030	Seal	51	10	1
51—7170	Pipe	51	8	1
51—7200	Clamp	51	42	2
51—7210	Gasket	51	2	2
51—7220	Gasket	51	38	1
51—7230	Thermostat	51	37	1
51—7250	Washer	59	1	4
51—7250	Washer	59	6	16
51—7250	Washer	55	8	2
51—7250	Washer	57	9	3
51—7250	Washer	55	38	1
51—7250	Washer — Lock	54	3	8
51—7250	Washer — Lock	48	4	1
51—7250	Washer — Lock	53	4	2
51—7250	Washer — Lock	58	8	28
51—7250	Washer — Lock	52	16	5
51—7250	Washer — Lock	54	24	2
51—7250	Washer — Lock	62	32	2
51—7250	Washer — Lock	51	34	4
51—7400	Washer	57	30	4
51—7400	Washer — Lock	62	16	6
51—7400	Washer — Lock	61	18	2
51—7600	Screw Set	49	4	1
51—7610	Packing	49	5	2
51—7630	Seal — Oil	49	24	1
51—7640	Lever Assembly	49	7	1
51—7650	Spring Assembly	49	8	1
51—7660	Bracket Assembly Center	49	9	1
51—7670	Solenoid	49	10	1
51—7690	Bearing	49	11	1
51—7720	Clutch Assy.	49	*	1
51—7730	Gear Pinion Assembly	49	2	1
51—7740	Retaining Ring Assembly	49	1	1
51—7750	Gear Assembly	49	*	1
51—7760	Shaft Assembly	49	23	1
51—7770	Gear — Pinion	49	22	1
51—7780	Cover Assembly	49	21	1
51—7790	Packing	49	20	2
51—7830	Cover — Rear	49	16	1
51—7840	Ring — Rubber	49	15	2
51—7850	Nut Assembly	50	1	1
51—7870	Screw Set	50	4	1
51—7890	Screw Set	50	5	1
51—7910	Rotor Assembly	50	10	1
51—7930	Stator	50	18	1
51—7950	Terminal Assembly	50	17	1
51—7960	Regulator Assembly	50	16	1
51—7970	Brush	50	15	2
51—8270	Washer	55	29	1
51—8280	Bolt	55	28	1
51—8590	Washer	48	3	1
51—8610	Washer — Lock	56	5	4
51—8610	Washer — Lock	48	11	2
51—8640	Bolt	48	8	2
52—9230	Ring — Retaining	5	3	1
52—9240	Bushing — Gland Seal	5	4	1
52—9250	Needle Bearing Kit	5	*	1
52—9260	Screw — Set	5	1	1
52—9270	Seat — Check Ball	5	24	1
52—9280	Ball — Check	5	22	1
52—9290	Retainer — Check Ball	5	21	1
52—9320	Drive	5	15	1
56—7971	Clamp Half — Hydraulic Line	30	26	2
56—7972	Clamp Half — Hydraulic Line	30	20	4
56—7973	Clamp Half — Hydraulic Line	30	19	20
56—7973	Clamp Half — Hydraulic Line	28	44	4
56—7973	Clamp Half — Hydraulic Line	86	57	6
56—7974	Clamp — Hydraulic Lines	72	31	2
56—7974	Clamp Half — Hydraulic Line	85	2	2
56—7974	Clamp Half — Hydraulic Line	30	17	2
56—7974	Clamp Half — Hydraulic Line	47	77	2
56—7978	Clamp Half — Hydraulic Line	30	25	8
56—7978	Clamp Half — Hydraulic Line	24	42	6
58—3590	Pin — Flywheel	46	24	2
58—4250	Magnet	42	1	6
58—5620	Tube — Inner	32	*	2
58—6290	Poppet Assembly	20	34	3
58—6310	Spacer	20	28	3
58—6320	Wiper — Seal	20	24	3
58—6330	Seat Assy.	20	35	3
58—6340	Seal — O—Ring	20	36	3
58—6350	Plug Assembly	20	11	3
58—6370	Washer — Back—Up	20	10	6
58—6400	Bushing	20	25	3
58—6420	Cap Assembly	20	30	3
58—6440	Poppet	20	22	1
58—6450	Seal — O—Ring	20	12	6
58—6460	Ring — Retaining	20	29	3
58—6470	Washer	20	18	A/R
58—6480	Washer	20	19	A/R
58—6490	Washer	20	20	A/R
58—6700	Washer	20	26	3
58—6710	Plug Assy.	20	6	1
58—6720	Seal — O—Ring	20	7	1
58—6730	Spring	20	27	3
58—6750	Seal — O—Ring	20	17	1
58—6760	Spring	20	3	3
58—6770	Plunger — Detent	20	4	3
58—6780	Plug Assy.	20	1	3
58—6790	Seal — O—Ring	20	5	3
59—6730	Race — Bearing	5	7	2
59—6740	Bearing — Needle Thrust	5	8	1
59—6820	Centering Spring Kit	5	11	1
59—6830	Kit — Centering Pin	5	20	1
59—6910	Connector	48	6	1
59—7580	Nut — Hex.	26	24	8
59—7590	Washer — Lock	26	12	16
59—7970	Stud — Threaded	26	23	8
59—7990	Seal — Gland	26	3	4
59—8470	Retainer — Seal	26	4	4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
59–8500	Gear/Shaft – Front Drive	26	17	1
59–8570	Seal – Shaft	26	22	1
59–8580	Ring – Retaining	26	21	1
59–8590	Seal – Shaft	26	20	1
59–8600	Gear – Driven	26	9	2
59–8610	Repair Kit	26	*	1
60–3780	Seal Kit	20	*	
60–3810	Shaft – Input	35	2	1
60–3830	Seal – Oil	35	4	1
60–3840	Cone – Bearing	35	5	1
60–3850	Cup – Bearing	35	6	2
60–3860	Bolt – Wheel	35	7	9
60–3870	Hub	35	8	1
60–3880	Cone – Bearing	35	9	1
60–3890	Bolt – Hex. Hd.	35	10	6
60–3900	Gear – Ring	35	24	1
60–3910	Washer – Flat	35	11	6
60–3930	Ring – Retaining	35	25	2
60–3940	Washer	35	26	2
60–3950	Spring – Disengage	35	27	1
60–3960	Primary Carrier Assembly	35	15	1
60–3970	Gear – Primary Sun	35	13	1
60–3980	Washer – Thrust	35	12	1
60–3990	Washer – Thrust	35	23	1
60–4000	Secondary Carrier Assy.	35	20	1
60–4010	Plunger – Disengage	35	22	1
60–4020	Seal – O–Ring	35	21	1
60–4030	Bolt – Hex. Hd.	35	17	8
60–4040	Plug – Pipe	35	16	1
60–4050	Cover – Large	35	19	1
60–4060	Cover – Disengage	35	18	1
60–4070	Bolt – Hex. Hd.	35	14	2
60–5210	Clamp	62	15	2
60–5340	Cover Assembly – Front	50	7	1
60–5360	Bearing	50	11	1
60–5370	Rectifier Assembly	50	13	1
60–5380	Cover Assembly – Rear	50	12	1
60–5720	Seal – O–Ring	20	9	6
60–6450	Disc	20	2	A/R
60–7040	Bolt	51	40	2
60–7110	Bolt	57	10	3
60–7110	Bolt	52	18	1
60–7110	Bolt	54	23	2
60–7110	Bolt	55	37	1
60–7120	Nut – Hex.	61	3	12
60–7160	Rivet	60	1	2
60–7210	Bolt	52	6	1
60–7280	Bolt	54	2	4
60–7280	Bolt	53	3	2
60–7280	Bolt	55	7	2
60–7280	Bolt	58	9	23
60–7280	Bolt	62	31	2
60–7280	Bolt	51	35	1
60–7290	Bolt	57	29	4
60–7370	Bolt	59	2	4
60–7370	Bolt	48	5	1
60–7370	Bolt	59	7	16
60–7370	Bolt	58	12	5
60–7480	Bolt	62	10	2
60–7480	Bolt	57	26	4
60–9760	Nut – Lock	79	11	1
60–9760	Nut – Lock	87	13	1
60–9770	Piston	79	10	1
61–2790	Filler – Screen	23	34	1
61–4990	Ring – Retaining	79	3	1
62–5550	Decal	4	47	1
62–6450	Kit – Retaining Ring	35	28	1
62–6460	Sealant – RTV (Tube)	35	*	1
62–7650	Gasket – Level Sensing Unit	22	1	1
63–0660	Pulley – Drive	82	51	1
63–0660	Pulley – Wing Deck Drive	91	14	2
63–1540	Pulley – Idler	81	15	3
63–1540	Pulley – Idler	91	24	6
63–4740	Bolt	53	7	17
63–7430	Gauge – Temperature	13	8	1
63–7590	Relay	72	19	1
63–8280	Head – Fuel Filter	70	4	1
63–8290	Vent – Air	70	5	1
63–8310	Valve – Drain	70	8	1
63–8360	Key – Ignition	14	11	1
66–1340	Decal – Danger	83	23	1
66–1340	Decal – Danger	84	33	1
66–1340	Decal – Danger	90	37	2
66–1340	Decal – Danger	82	60	1
66–2490	Hold–Down – Battery	72	16	2
66–2940	Gauge – Fuel	13	25	1
66–2950	Hourmeter	13	26	1
66–3241	Cap – Radiator	44	5	1
66–6140	Decal – TORO	43	27	1
66–8530	Track – Adjustment	2	3	1
67–4510	Sending Unit – Temperature	46	4	1
67–5360	Decal – Danger	83	25	1
67–5360	Decal – Danger	84	31	1
67–5360	Decal – Danger	90	39	4
67–7160	Block – Fuse	11	24	4
67–7561	Cup – Anti Scalp	93	13	1
67–9560	Shell – Seat	1	2	1
68–6150	Breather	44	50	1
68–7571	Strip – Sealing	23	24	1
68–7572	Strip – Sealing	22	18	1
68–8080	Wheel – Steering	4	10	1
69–0030	Spring – Compression	36	30	2
69–0040	Foam – Lower Grille	42	20	1
69–0060	Screw – Cap Hex. Hd.	72	28	1
69–0060	Screw – Cap Hex. Hd.	46	39	16
69–0090	Pin – Clevis Engine End	18	*	1
69–0100	Frame – Assembly	28	49	1
69–0760	Bracket – Arm Rest L.H.	1	*	1
69–0770	Bracket – Arm Rest R.H.	1	18	1
69–0820	Decal – H.O.C.	82	57	1
69–0880	Decal – Torque	80	30	1
69–0880	Decal – Torque	90	38	2
69–0890	Decal – Belt Routing L.H.	90	36	1
69–0900	Decal – Belt Routing R.H.	90	*	1
69–0920	Decal – Hydraulic Oil	30	8	1
69–0930	Decal – Warning	22	12	1
69–0940	Decal – Caution	30	39	1
69–0950	Decal – 580D	43	26	2
69–0960	Panel – Diagnostic	29	4	1
69–0970	Panel – Control	4	46	1
69–0980	Panel – Lever	14	1	1
69–0990	Panel – Control	14	6	1
69–1130	Louver – Middle	42	8	1
69–1140	Louver – Lower	42	31	1
69–1170	Gauge – Sight	23	2	1
69–1180	Armrest	1	20	2
69–1380	Panel – Side R.H.	43	*	1
69–1390	Panel – Side L.H.	43	12	1
69–1510	Spacer – Caster	80	2	12
69–1510	Spacer – Castor	90	35	48
69–1530	Housing – Spindle	93	8	1
69–1540	Pivot – Spring	78	34	1
69–1560	Lever – Lock	4	1	1
69–1580	Anchor – Latch L.H.	86	55	1
69–1600	Anchor – Latch R.H.	86	*	1
69–1610	Adapter – Suction Hose	23	8	1
69–1630	Arm – Latch Pivot	88	12	4
69–1650	Screen – Suction	23	17	1
69–1660	Mount – Engine	46	40	4
69–1670	Cooler – Oil	44	32	1
69–1680	Fan	47	62	1
69–1690	Clutch – Fan	47	64	1
69–1700	Hydraulic Filter Assembly	24	19	1
69–1710	Indicator – Filter	24	25	1
69–1720	Element – Filter	24	21	1
69–1730	Planetary Gear Drive Assy.	32	32	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
69–1740	Spindle	35	3	1
69–1750	Fuel Filter Assembly	46	44	1
69–1750	Fuel Filter Assembly	70	*	1
69–1760	Sensor – Water	70	9	1
69–1770	Element – Spin–On	70	11	1
69–1780	Lift Valve Assembly	19	2	1
69–1790	Plunger	20	37	2
69–1800	Plug Assembly	20	32	3
69–1810	Spring	20	33	3
69–1820	Spring – Black	20	21	1
69–1830	Plug Assembly	20	16	1
69–1840	Plunger	20	31	1
69–1860	Gerotor	5	16	1
69–1880	Spacer	5	17	1
69–1890	Air Cleaner Assembly	46	15	1
69–1900	Element Assembly	69	5	1
69–1910	Clamp Assembly	69	4	1
69–1920	Baffle	69	2	1
69–1930	Cup Assembly	69	1	1
69–1940	Indicator – Electrical	47	71	1
69–1950	Band – Air Cleaner	46	28	2
69–1960	Hydraulic Cylinder Assembly	75	42	2
69–1960	Steering Cylinder (Complete)	77	*	2
69–1970	Joint – Ball	77	17	1
69–1980	Nut – Jam	77	16	1
69–1990	Nut – Lock	77	14	1
69–2000	Piston	77	11	1
69–2020	Rod – Piston	77	4	1
69–2030	Ring – Head	77	7	1
69–2050	Hydraulic Pump Assembly	25	8	1
69–2060	Shaft End Cover Assembly	26	18	1
69–2070	Plate – Flex	26	5	4
69–2080	Center Section Assembly	26	7	2
69–2090	Gear/Shaft – Rear Drive	26	8	1
69–2100	Rear Cover Assembly	26	11	1
69–2110	Coupling	26	1	1
69–2120	Seal – O–Ring	26	10	2
69–2130	Plug	26	19	1
69–2140	Screw – Cap Hex. Hd.	26	14	4
69–2150	Screw – Cap Hex. Hd.	26	13	4
69–2160	Port Section Assembly	26	16	1
69–2170	Adapter Section Assembly	26	2	1
69–2200	Seal – O–Ring	26	6	2
69–2210	Seal – O–Ring	26	15	1
69–2220	Pump/Valve	37	52	1
69–2230	Flow Divider Assembly	39	30	1
69–2240	Screw	39	32	4
69–2250	Bearing – Sleeve	39	20	4
69–2260	Seal – Load	39	17	1
69–2270	Seal – Pre–Load	39	18	1
69–2280	Shaft/Gear – Idler	39	15	1
69–2290	Shaft/Gear – Drive	39	28	1
69–2300	Ring – Retaining	39	26	1
69–2310	Seal – Shaft	39	27	1
69–2320	Plate – Wear	39	16	1
69–2330	Body Assembly	39	21	1
69–2340	Pin – Dowel	39	14	2
69–2350	Ring – Sealing	39	19	1
69–2360	Screw	39	23	4
69–2370	Washer	39	22	4
69–2380	Screw	39	24	4
69–2390	Washer	39	25	4
69–2400	Seal – O–Ring	39	29	1
69–2410	Plug	39	1	2
69–2420	Seal – O–Ring	39	2	2
69–2430	Spring – Compression	39	5	1
69–2440	Orifice	39	4	1
69–2450	Piston	39	3	1
69–2460	Cap	39	6	1
69–2470	Gasket – Cap	39	7	1
69–2480	Screw – Set	39	8	1
69–2490	Spring – Compression	39	9	1
69–2500	Poppet	39	10	1
69–2510	Seat	39	11	1
69–2520	Plug – Pipe	39	31	1
69–2530	Seal – O–Ring	39	12	1
69–2540	Cover Assembly	39	13	1
69–2550	Repair Kit – Pump	39	*	1
69–2560	Repair Kit – Pump & Divider	39	*	1
69–2570	Head	79	4	1
69–2580	Shaft w/clevis	79	1	1
69–2640	Master Cylinder Assembly	7	9	1
69–2650	Boot – Rod	8	1	1
69–2660	Ring – Retaining	8	2	1
69–2730	Piston Assembly	8	*	1
69–2740	Bail – Cover	8	12	1
69–2750	Cover – Reservoir	8	9	1
69–2760	Gasket – Diaphragm	8	10	1
69–2770	Seat – Tube	8	11	1
69–2960	Hub – Rear Wheel	75	19	2
69–2970	Cap – Hub	75	27	2
69–2980	Seal – Inner	75	32	2
69–2990	Screw – Drive	75	18	10
69–3010	Strap – Hold Down	43	6	4
69–3020	Handle – Latch	42	16	2
69–3020	Latch	44	20	8
69–3030	Strike – Latch	42	13	8
69–3050	Motor – Hydraulic Wheel	32	44	2
69–3070	Washer – Lock	41	62	10
69–3070	Washer – Plain	34	2	10
69–3080	Plug	41	60	4
69–3120	Plug	41	95	1
69–3130	Plug	40	9	1
69–3130	Plug – Hole	34	33	1
69–3140	Bracket – Lifting	41	58	1
69–3150	Screw – Hex. Hd.	41	61	10
69–3150	Screw Hex. Hd.	34	1	10
69–3170	Ring – Retaining	34	19	2
69–3170	Ring – Retaining	40	31	2
69–3180	Shaft Pump	40	37	1
69–3190	Seal – Lip	34	18	1
69–3190	Seal – Lip	40	30	1
69–3200	Ring – Retaining	34	17	2
69–3200	Ring – Retaining	40	29	2
69–3210	Bearing – Ball	34	20	1
69–3210	Bearing – Ball	40	32	1
69–3220	Screw	40	28	1
69–3230	Pin – Spring	40	12	1
69–3230	Pin – Spring	34	32	1
69–3240	Bearing – Journal	40	25	2
69–3250	Swashplate – Variable	40	24	1
69–3370	Bearing – Needle	40	13	1
69–3370	Bearing – Needle	34	31	1
69–3390	Gerotor Assembly	41	89	1
69–3400	Screw Hex. Hd.	41	83	3
69–3410	Adapter – A Flange	41	85	1
69–3420	Ring – Temper Load	41	86	1
69–3430	Key – Woodruff	41	84	1
69–3440	Seal – O–Ring	41	87	1
69–3450	Pin	34	30	1
69–3450	Pin	40	41	1
69–3460	Plug Expansion	41	80	1
69–3470	Pin	40	36	1
69–3500	Bearing – Sleeve	34	13	1
69–3500	Sleeve – Bearing	40	34	1
69–3510	Pin	34	14	1
69–3510	Pin	40	35	1
69–3520	Pin – Spring	34	23	2
69–3540	Cover – Gerotor	41	88	1
69–3550	Pin	41	81	1
69–3560	Seal – O–Ring	34	38	2
69–3560	Seal – O–Ring	41	55	2
69–3570	Ring – Piston	34	39	2
69–3570	Ring – Piston	41	56	2
69–3580	Guide – Spring	40	8	1
69–3590	Ring – Retaining	40	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
69–3600	Nut – Hex.	40	6	1
69–3610	Nut – Jam	40	5	1
69–3620	Cover – Servo Adjustment	40	1	1
69–3630	Nut Special	40	2	1
69–3640	Cover –Servo	40	3	1
69–3650	Piston – Servo	40	53	1
69–3660	Screw – Special	41	91	1
69–3670	Spring – Compression	41	93	1
69–3680	Stop – Servo	41	92	1
69–3690	Bearing	41	54	2
69–3700	Guide – Spring	41	90	1
69–3710	Gasket – Servo	40	4	2
69–3710	Gasket – Servo Cover	34	41	2
69–3720	Cover – Servo	34	43	2
69–3720	Cover Servo	41	57	1
69–3730	Valve – Relief	41	78	2
69–3740	Spring – Compression	41	72	2
69–3750	Seal –O–Ring	41	77	2
69–3760	Plug Special	41	71	2
69–3770	Shim	41	69	1
69–3780	Plug	41	67	1
69–3790	Spring Compression	41	70	1
69–3800	Valve	41	65	1
69–3810	Valve – By Pass	41	66	1
69–3820	Sleeve – Control Valve	40	42	1
69–3830	Spool – Rotary Valve	40	46	1
69–3840	Seal – O–Ring	40	52	1
69–3860	Screw – Flange Hd.	40	49	1
69–3870	Handle – Control Valve	40	50	1
69–3880	Spring – Neutral Return	40	45	1
69–3890	Bracket – Neutral Return	40	48	1
69–3900	Washer	40	51	1
69–3910	Cylinder Block Assembly	40	39	1
69–3910	Cylinder Block Kit	34	27	1
69–3920	Piston Ring & O–Ring Kit	34	*	1
69–3940	Plug	34	29	1
69–3950	Shaft – Motor	34	25	1
69–3960	Screw	34	21	1
69–3970	Bearing – Journal	34	22	2
69–3980	Swashplate – Variable	34	24	1
69–3990	Plate – Motor Valve	34	28	1
69–4020	Piston – Servo	34	37	1
69–4030	Spring – Servo	34	40	1
69–4040	Stop – Servo Piston	34	42	1
69–4060	Counterbalance Manifold	21	*	1
69–4060	Counterbalance Manifold	19	26	1
69–4070	Manifold – Counter Balance	21	14	1
69–4080	Valve – Hydraulic Cartridge	21	1	1
69–4090	Valve – Hydraulic Cartridge	21	36	1
69–4100	Valve – Hydraulic Cartridge	21	15	1
69–4110	Valve – Hydraulic Cartridge	21	30	2
69–4120	Valve – Hydraulic Cartridge	21	10	1
69–4130	Plug – Orifice .047	21	39	2
69–4140	Plug – Orifice .120	21	38	1
69–4150	PTO Manifold Assembly	74	*	1
69–4150	PTO Manifold Assembly	72	1	1
69–4180	Valve – Cartridge (3000 lbs)	73	8	3
69–4190	Valve – Cartridge (20 lbs)	73	40	3
69–4200	Valve – Cartridge (75 lbs)	73	38	3
69–4220	Plug – Orifice	74	47	1
69–4240	Kit – Seal	21	11	1
69–4250	Kit – Seal	21	29	3
69–4260	Solenoid Valve Seal Kit	74	*	3
69–4270	Cartridge Valve Seal Kit	74	*	6
69–4280	Tube – Hydraulic Vent	23	33	1
69–4320	Fitting – Hydraulic 90°	81	8	1
69–4400	Carrier –Wing Deck	86	54	1
69–4780	Clamp – Gauge	13	23	2
69–5350	Hose – Air Cleaner Inlet	46	13	1
69–5360	Hose – Air Cleaner	46	17	1
69–5380	Hose – Upper Radiator	44	4	1
69–5390	Hose – Lower Radiator	44	10	1
69–5410	Manifold – Return	24	10	1
69–5430	Pulley – Idler	84	7	1
69–5430	Pulley–Idler	81	25	1
69–5440	Hose – Hydraulic	78	12	3
69–5440	Hose – Hydraulic	24	30	1
69–5440	Hose – Hydraulic	38	58	1
69–5450	Hose – Hydraulic	38	56	1
69–5460	Hose – Hydraulic	24	14	1
69–5460	Hose – Hydraulic	37	18	1
69–5470	Hose – Hydraulic	27	16	1
69–5470	Hose – Hydraulic	38	57	1
69–5480	Hose – Hydraulic	27	17	1
69–5480	Hose – Hydraulic	38	59	1
69–5490	Hose – Cylinder	85	39	4
69–5500	Hose – Hydraulic	4	33	4
69–5510	Hose – Hydraulic	75	1	4
69–5590	Hose – Hydraulic	73	1	2
69–5590	Hydraulic Hose Assembly	25	1	2
69–5600	Hose – Hydraulic	73	9	1
69–5610	Hose – Hydraulic	73	17	1
69–5620	Hose – Hydraulic	44	29	1
69–5640	Hose – Hydraulic	25	12	1
69–5640	Hose – Suction	23	12	1
69–5650	Hose – Hydraulic	24	18	1
69–5650	Hose – Hydraulic	37	22	1
69–5670	Cable – Brake	6	22	2
69–5680	Tube – Hydraulic	21	9	1
69–5680	Tube – Hydraulic	19	20	1
69–5700	Tube – Hydraulic	19	18	1
69–5710	Tube – Hydraulic	21	20	1
69–5720	Tube – Hydraulic	19	17	1
69–5730	Tube – Hydraulic	21	33	1
69–5740	Tube – Hydraulic	19	19	1
69–5790	Tube – Hydraulic	27	37	1
69–5800	Tube – Hydraulic	23	20	1
69–5800	Tube – Hydraulic	30	28	1
69–5810	Tube – Hydraulic Return	28	*	1
69–5820	Tube – Hydraulic	21	31	1
69–5830	Tube – Hydraulic	21	32	1
69–5850	Tube – Hydraulic	21	18	1
69–5860	Tube – Hydraulic	19	16	1
69–5860	Tube – Hydraulic	21	34	1
69–5870	Tube – Hydraulic	19	22	1
69–5870	Tube – Hydraulic	21	28	1
69–5890	Tube – Hydraulic	21	5	1
69–5890	Tube – Hydraulic	19	21	1
69–5900	Tube – Hydraulic	44	31	1
69–5910	Tube – Hyd. Diagnostic	29	6	1
69–5910	Tube – Hydraulic	21	19	1
69–5920	Tube – Diagnostic	29	8	1
69–5920	Tube – Hydraulic	21	37	1
69–5930	Tube – Hydraulic R.H.	32	*	1
69–5940	Tube – Hydraulic L.H.	32	2	1
69–5950	Tube – Hydraulic	24	32	1
69–5950	Tube – Hydraulic	28	57	1
69–5970	Tube – Hydraulic R.H.	85	*	1
69–5980	Tube – Hydraulic L.H.	85	21	1
69–5990	Tube – Hydraulic	24	12	1
69–5990	Tube – Hydraulic	86	53	1
69–6000	Tube – Hydraulic	24	11	1
69–6000	Tube – Hydraulic	86	49	1
69–6010	Tube – Hydraulic	76	50	1
69–6020	Tube – Hydraulic	76	51	1
69–6030	Tube – Hydraulic	27	35	1
69–6030	Tube – Hydraulic	86	46	1
69–6040	Tube – Hydraulic	27	34	1
69–6040	Tube – Hydraulic	86	50	1
69–6050	Tube – Hydraulic	27	33	1
69–6050	Tube – Hydraulic	86	51	1
69–6060	Tube – Hydraulic	27	38	1
69–6060	Tube – Hydraulic	86	47	1
69–6070	Tube – Hydraulic	30	36	1
69–6070	Tube – Hydraulic	86	48	1
69–6080	Tube – Hydraulic	30	35	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
69—6080	Tube — Hydraulic	86	52	1
69—6100	Tube — Hydraulic Pressure	28	50	1
69—6120	Tube — Hydraulic	30	16	1
69—6130	Tube — Hydraulic	30	15	1
69—6140	Tube — Hydraulic	73	45	1
69—6140	Tube — Hydraulic R.H.	85	*	1
69—6150	Tube — Hydraulic	73	46	1
69—6150	Tube — Hydraulic R.H.	85	*	1
69—6160	Tube — Hydraulic	73	11	1
69—6170	Tube — Hydraulic	73	21	1
69—6170	Tube — Hydraulic L.H.	85	6	1
69—6180	Tube — Hydraulic	73	20	1
69—6180	Tube — Hydraulic L.H.	85	22	1
69—6190	Tube — Hydraulic	27	23	1
69—6200	Tube — Hydraulic	27	22	1
69—6240	Fitting — Hydraulic 90˚	25	3	2
69—6250	Engine — Assembly	46	9	1
69—6260	Magnet	11	6	1
69—6260	Magnet — Cover	83	15	2
69—6260	Magnet — Cover	84	15	2
69—6260	Magnet — Cover	91	20	8
69—6260	Magnet — Cover	81	32	4
69—6270	Fork — Castor	80	24	2
69—6340	Plate — Motor Mounting R.H.	91	*	1
69—6360	Plate — Motor Mounting L.H.	91	3	1
69—6390	Plate — Gearbox	82	52	1
69—6420	Bar — Lift L.H.	90	18	1
69—6470	Bushing — Flange	89	5	8
69—6470	Bushing — Flange	75	6	6
69—6470	Bushing — Flange	90	16	20
69—6470	Bushing — Flange	80	26	4
69—6470	Bushing — Flange	78	29	4
69—6470	Bushing — Flange	85	30	4
69—6480	Bar — Lift R.H.	90	*	1
69—6490	Plate — Tension	81	43	1
69—6550	Arm — Tension	81	38	1
69—6610	Arm — Idler	81	23	1
69—6610	Idler Arm Assembly	84	27	1
69—6640	Hinge — Left Front	83	13	1
69—6670	Hinge — Left Rear	83	17	1
69—6690	Hinge — Right Front	84	28	1
69—6710	Hinge — Right Rear	84	23	1
69—6730	Skid	83	7	1
69—6730	Skid	90	21	4
69—6730	Skid	84	29	1
69—6760	Shaft — Spindle	93	10	1
69—6780	Cover — Center Left	81	30	1
69—6790	Cover — Center Right	82	54	1
69—6800	Cover — Inner L.H.	91	1	1
69—6810	Cover — Outer L.H.	91	16	1
69—6820	Cover — Inner R.H.	91	*	1
69—6830	Cover — Outer R.H.	91	*	1
69—6840	Cover — Right Wing	84	2	1
69—6850	Cover — Left Wing	83	22	1
69—6860	Washer — Castor	80	25	8
69—6860	Washer — Thrust	90	33	28
69—6870	Plate — Magnet	84	3	2
69—6870	Plate — Magnet	91	18	8
69—6870	Plate — Magnet	83	21	2
69—6870	Plate — Magnet	81	31	4
69—6890	Spacer — Spring	81	47	1
69—6900	Shaft — Hinge	83	14	1
69—6900	Shaft — Hinge	84	20	1
69—6920	Blade — 20	93	12	1
69—6960	Spacer — Idler	81	14	4
69—6960	Spacer — Idler	91	23	6
69—6970	Spacer — Idler	84	17	1
69—6970	Spacer — Idler	81	26	1
69—6980	Valve — Check	4	38	1
69—6990	Lever — Valve Mid.	19	*	1
69—7000	Lever — Valve R.H.	19	*	1
69—7010	Lever — Valve L.H.	19	5	1
69—7040	Holder — Cup	11	13	1
69—7100	Support — Radiator Lower	44	24	1
69—7120	Grille — Upper	42	27	1
69—7150	Grille — Lower	42	23	1
69—7170	Clevis — Deck	90	10	2
69—7200	Tube — Vent	22	14	1
69—7210	Tube — Latch	88	5	2
69—7290	Mount — Ball Joint	80	5	2
69—7420	Axle — Rear	75	16	1
69—7570	Bracket — Front Engine	46	*	1
69—7580	Bracket — Front Engine	46	42	1
69—7650	Pedal — Traction	9	24	1
69—7700	Pedal — Brake	7	3	1
69—7700	Pedal — Brake	6	20	2
69—7720	Pawl — Brake	6	7	1
69—7740	Support — Steering Gear	4	21	1
69—7760	Link — Steering Gear	4	19	1
69—7790	Pin — Brake Arm	6	11	1
69—7810	Bracket — Valve	19	11	1
69—7840	Mount — Brake Arm	6	16	1
69—7880	Arm — Brake L.H.	6	23	1
69—7890	Arm — Brake R.H.	6	2	1
69—7920	Support — Lift Arm L.H.	78	27	2
69—7940	Support — Lift Arm R.H.	78	4	2
69—7960	Support — Axle	75	12	2
69—8040	Arm — Throttle	18	4	1
69—8080	Cover — Tool Box	10	3	1
69—8110	Box — Tool	10	5	1
69—8160	Tower — Steering	4	31	1
69—8210	Support — Cover	11	26	1
69—8230	Bracket — Trim L.H.	43	17	1
69—8250	Bracket — Trim R.H	43	20	1
69—8290	Frame — Battery	72	33	1
69—8390	Pulley — Spindle	93	4	1
69—8410	Screw — Cap Hex. Hd.	46	34	4
69—8420	Washer — Lock	46	35	4
69—8430	Hose — Hydraulic	57	39	1
69—8440	Hose — Hydraulic	78	9	1
69—8440	Hose — Hydraulic	24	31	1
69—8450	Hose — Hydraulic	44	30	1
69—8460	Fitting — Hydraulic Straight	57	37	1
69—8460	Fitting — Hydraulic Straight	47	55	2
69—8470	Spring — Torsion	78	32	1
69—8480	Spring — Compression	88	6	2
69—8490	Bracket — Throttle Cable	46	36	1
69—8500	Shim — Hinge Bracket	43	21	6
69—8510	Cover — Steering Tower	4	41	1
69—8520	Bracket — Hinge	43	28	2
69—8590	Support — Radiator Upper	44	2	1
69—8650	Cowl — Radiator	42	10	1
69—8690	Support — Grille	42	15	1
69—8750	Arm — Brake	7	1	1
69—8790	Plate — Reinforcing	80	4	2
69—8790	Plate — Reinforcing	90	4	2
69—8830	Arm — Inside Castor	90	1	2
69—8860	Arm — Castor R.H.	80	7	1
69—8890	Cap — Spindle	75	13	2
69—8900	Spacer	28	52	2
69—8910	Washer	36	3	2
69—8910	Washer	28	51	4
69—8920	Washer	30	4	4
69—8930	Washer	27	26	4
69—8940	Washer	27	5	12
69—8940	Washer	85	16	20
69—8950	Spacer	30	5	2
69—8960	Spacer	27	27	2
69—8970	Spacer	85	17	10
69—8970	Spacer	27	31	6
69—8980	Washer	30	30	8
69—8990	Spacer	30	33	4
69—9000	Spacer	85	9	4
69—9010	Washer	85	10	8
69—9020	Nut — Special	37	26	1
69—9030	Post — Neutral Device	9	14	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
69–9040	Cam – Neutral Device	37	31	1
69–9050	Bar – Neutral Device	37	45	1
69–9070	Bracket – Clamp	47	58	1
69–9100	Washer – Latch	88	7	2
69–9110	Rod – Engine Run Solenoid	46	49	1
69–9120	Rod – Hood Prop	72	5	1
69–9130	Bracket – Throttle	18	11	1
69–9140	Link – Valve Lever	19	6	3
69–9150	Shaft – Valve Lever	19	9	1
69–9180	Pin – Cylinder	78	17	2
69–9190	Bushing – Cylinder	85	38	2
69–9190	Tube – Cylinder Bushing	78	15	2
69–9200	Pin – Brake Pawl	6	8	1
69–9210	Lever – Brake Latch	6	4	1
69–9220	Support – Tube Clamp	25	17	2
69–9230	Shaft – Steering Pivot	4	2	1
69–9240	Roller – Cam	89	16	2
69–9250	Shaft – Roller	89	18	2
69–9260	Pin – Clevis	80	29	2
69–9290	Pad – Bumper	81	17	2
69–9300	Cushion – Rubber	89	8	2
69–9300	Cushion – Rubber	85	34	2
69–9300	Cushion – Rubber	28	41	2
69–9310	Plate – Lever	14	20	1
69–9330	Cover	30	1	1
69–9340	Rod – Brake	7	15	1
69–9350	Bracket – Hood Prop Rod	72	2	1
69–9360	Bracket – Fuel Filter	46	53	1
69–9370	Louver – Top	42	6	2
69–9390	Shaft – Pedal	9	11	1
69–9400	Bracket – Hose Support	76	49	1
69–9420	Muffler	46	11	1
69–9430	Foam – Tool Box	10	4	1
69–9440	Panel – Steering Tower	4	4	1
69–9450	Bracket – Wing Hose L.H.	85	7	1
69–9460	Bracket – Wing Hose R.H.	85	*	1
69–9470	Cover – Access	28	63	1
69–9480	Bracket – Neutral Device	37	28	1
69–9520	Panel – Rear	43	9	1
69–9530	Bracket – Air Cleaner	46	29	1
69–9540	Bracket – Steering Gear	4	18	1
69–9550	Plate – Adapter	46	31	1
69–9560	Housing – Control	11	1	1
69–9570	Front Lift Arm Assy. R.H.	78	43	1
69–9580	Front Lift Arm Assy. L.H.	78	39	1
69–9650	Screen – Cowl	42	9	2
69–9680	Shaft – Latch	88	10	2
69–9700	Mount – Rubber	90	5	8
69–9710	Nut – Lock	47	63	4
69–9720	Strip – Sealing	42	28	2
69–9721	Strip – Sealing	42	18	3
69–9722	Trim – Sealing	42	35	1
69–9723	Seal – Hood Bottom	43	15	2
69–9724	Seal – Hood Front	43	29	1
69–9730	Switch – Toggle	14	18	1
69–9740	Switch – Toggle	14	14	1
69–9760	Plate – Cover	30	10	3
69–9761	Plate – Clamp	72	36	1
69–9761	Plate – Cover	85	13	1
69–9761	Plate – Cover	30	14	5
69–9761	Plate – Cover	24	43	3
69–9761	Plate – Cover	47	78	1
69–9800	Tire	32	28	2
69–9810	Joint – Ball	77	2	1
69–9880	Tire	75	22	2
69–9940	Nut – Jam	32	40	4
69–9950	Spring – Extension	32	37	4
69–9960	Link	32	36	4
69–9970	Stud	32	35	4
69–9980	Ball	32	39	6
69–9990	Disc – Actuating	32	38	4
70–2800	Pulley Assembly	50	2	1
70–2810	Spring – Return	50	14	2
70–2820	Bolt	62	21	2
70–2830	Bolt	62	20	3
70–2830	Bolt – Cap Hex. Hd.	61	17	2
70–2840	Bolt	62	17	1
70–2850	Bolt	51	22	2
70–2850	Bolt	63	42	4
70–2860	Bolt	52	17	4
70–2860	Bolt	51	33	1
70–2870	Bolt	54	1	4
70–2880	Bolt	56	6	4
70–2890	Bolt	51	15	2
70–2890	Bolt	55	34	1
70–2900	Bolt	58	18	11
70–2900	Bolt	51	19	1
70–2910	Bolt	51	4	1
70–2920	Bolt	51	20	3
70–2930	Bolt	52	19	9
70–2930	Bolt	53	22	4
70–2940	Bolt	48	12	2
70–2950	Stud	51	30	4
70–2960	Nut	62	23	2
70–2970	Nut	54	4	8
70–2980	Nut	62	39	4
70–2990	Washer	52	3	1
70–2990	Washer	51	16	1
70–2990	Washer	57	28	4
70–2990	Washer	62	30	4
70–3000	Pin	55	4	2
70–3010	O–Ring	60	23	1
70–3020	Ring	56	20	8
70–3030	Tube	57	4	1
70–3040	Hose	61	14	1
70–3050	Bolt	54	28	1
70–3060	Gasket	61	1	2
70–3070	Gasket	57	33	1
70–3080	Gasket	55	23	1
70–3080	Gasket	57	36	1
70–3090	Clamp	57	3	1
70–3090	Clamp – Hose	61	13	2
70–3100	Plug	53	13	1
70–3110	Plug – Drain	58	11	1
70–3120	Plug	55	22	1
70–3130	Gasket	59	4	1
70–3140	Pipe	62	36	1
70–3150	Pipe	62	37	1
70–3160	Screw	54	5	8
70–3170	Nut	56	11	1
70–3180	Clamp	62	18	3
70–3190	Clamp	62	19	3
70–3200	Washer	63	50	1
70–3210	Packing	63	48	4
70–3220	O–Ring	57	2	1
70–3230	Plug	58	14	1
70–3230	Plug	53	15	1
70–3240	Plug	63	51	1
70–3250	Bolt	63	47	2
70–3260	Armature Assembly	49	12	1
70–3270	Spring – Brush	49	18	4
70–3280	Cover Assembly Front	49	6	1
70–3290	Brush Holder Assembly	49	17	1
70–3300	Yoke Assembly	49	19	1
70–3310	Bolt Set	49	14	1
70–3320	Bearing	50	8	1
70–3330	Bearing	49	13	1
70–3340	Connector	61	11	1
70–3340	Connector	57	34	1
70–3350	Cap	55	11	6
70–3360	Cap	53	16	4
70–3370	Cap	55	25	3
70–3380	Cap	53	19	15
70–3390	Plug	53	17	4
70–3400	Plug	55	6	6
70–3410	Plug	55	13	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
70–3420	Clip	57	5	1
70–3430	Clamp – Hose	61	5	3
70–3440	Clamp – Hose	61	9	1
70–3450	V–Belt	51	1	1
70–3460	Washer	62	40	8
70–3470	Washer – Drain Plug	58	10	1
70–3480	Stud	61	4	6
70–3490	Cover	65	41	1
70–3500	Holder	65	50	4
70–3510	Stopper	65	49	4
70–3520	Spring	65	48	4
70–3530	Gasket	65	46	4
70–3540	Valve Assembly	65	45	4
70–3550	Element Assembly	65	44	4
70–3560	Pinion	64	12	4
70–3570	Screw	64	11	4
70–3580	Sleeve	64	13	4
70–3590	Seat	64	14	4
70–3600	Spring	64	15	4
70–3610	Seat	64	16	4
70–3620	Body	64	19	4
70–3630	Tappet Assembly	65	*	1
70–3640	Pin	64	18	4
70–3650	Bushing	64	20	4
70–3660	Roller	64	21	4
70–3670	Plug	64	22	4
70–3680	Camshaft	65	30	1
70–3690	Ring	64	8	1
70–3700	Ring	65	38	1
70–3710	Plate – 0.10	64	7	A/R
70–3720	Plate – 0.12	64	*	A/R
70–3730	Plate – 0.14	64	*	A/R
70–3740	Plate – 0.16	64	*	A/R
70–3750	Plate – 0.18	64	*	A/R
70–3760	Plate – 0.50	64	*	A/R
70–3770	Plate – 0.30	64	*	A/R
70–3780	Plate – 0.1	65	37	A/R
70–3790	Plate – 0.15	65	*	A/R
70–3800	Plate – 0.3	65	*	A/R
70–3810	Plate – 0.5	65	*	A/R
70–3820	Cover	65	35	1
70–3830	Gasket	65	31	1
70–3840	Rack	64	2	1
70–3850	Screw	65	42	1
70–3860	Washer	64	3	2
70–3870	Washer	65	40	2
70–3870	Washer	68	12	4
70–3880	Plate	64	1	2
70–3890	Washer	66	31	2
70–3900	Packing	64	9	2
70–3910	Washer	65	25	2
70–3920	Cover Assembly	65	*	1
70–3930	Gasket	64	5	1
70–3940	Plate	65	28	2
70–3950	Screw	64	10	2
70–3960	Valve	64	4	1
70–3970	Plate – 0.6	64	17	A/R
70–3980	Plate – 0.7	64	*	A/R
70–3990	Plate – 0.8	64	*	A/R
70–4000	Plate – 0.9	64	*	A/R
70–4010	Plate – 1.0	64	*	A/R
70–4020	Plate – 1.1	64	*	A/R
70–4030	Plate – 1.2	64	*	A/R
70–4040	Plate – 1.3	64	*	A/R
70–4050	Plate – 1.4	64	*	A/R
70–4060	Plate – 0.1	64	*	A/R
70–4070	Plate – 0.2	64	*	A/R
70–4080	Plate – 0.3	64	*	A/R
70–4090	Plate – 0.4	64	*	A/R
70–4100	Plate – 0.5	64	*	A/R
70–4110	Plate – 0.15	64	*	A/R
70–4120	Capsule	66	30	1
70–4130	Housing	66	3	1
70–4140	Stopper	66	27	1
70–4150	Gasket	66	6	1
70–4160	Gasket	66	1	1
70–4170	Flyweight Assembly	67	71	1
70–4180	Nut	67	69	1
70–4190	Sleeve	67	68	1
70–4200	Plate	67	67	1
70–4210	Plate	66	8	1
70–4220	Swiveling Lever Assembly	66	12	1
70–4230	Bushing	66	21	2
70–4240	E–Ring	67	59	1
70–4250	Tension Lever Assembly	66	19	1
70–4260	Adapter Assembly	67	*	1
70–4270	Screw	67	60	1
70–4280	Spring	67	62	1
70–4290	Adapter	67	63	1
70–4300	Nut	67	58	1
70–4310	Nut	66	32	1
70–4320	Lever Assembly	66	17	1
70–4330	Bushing	66	38	1
70–4340	Shackle Assembly	66	18	1
70–4350	Shaft	66	24	1
70–4360	Plug	66	23	2
70–4370	Spring	66	13	1
70–4380	Spring	66	16	1
70–4390	Screw	67	56	1
70–4400	Cover	66	25	1
70–4410	Pin	67	57	1
70–4420	Bushing	67	53	1
70–4430	Screw	67	73	1
70–4440	Nut	66	33	1
70–4450	Nut	66	34	1
70–4460	Plate	66	45	1
70–4470	Lever	67	55	1
70–4480	Shaft	67	54	1
70–4490	Cup	66	49	1
70–4500	Spring	66	46	1
70–4510	Spring	66	48	1
70–4520	Spring	66	47	1
70–4530	Cover	66	51	1
70–4540	Slider	67	64	1
70–4550	Plate	66	40	1
70–4560	Adjusting Lever Assembly	66	43	1
70–4570	Stop Lever Assembly	66	50	1
70–4580	Cap	66	20	1
70–4590	Plug	66	5	1
70–4600	Housing Assembly	68	11	1
70–4610	Valve	68	5	2
70–4620	Spring	68	4	2
70–4630	Gasket	68	3	2
70–4640	Support	68	20	1
70–4650	Pump Assembly	68	2	1
70–4660	Rod, Blue Small Dia.	68	19	A/R
70–4670	Rod, Red Small Dia.	68	*	A/R
70–4680	Rod, Yellow Small Dia.	68	*	A/R
70–4690	Rod, Green Small Dia.	68	*	A/R
70–4700	Rod, White Small Dia.	68	*	A/R
70–4710	Rod, Brown Big Dia.	68	*	A/R
70–4720	Piston	68	18	1
70–4730	Tappet	68	7	1
70–4740	Roller	68	8	1
70–4750	Pin	68	10	1
70–4760	Block	68	6	2
70–4770	Spring	68	17	1
70–4780	Plug	68	15	1
70–4790	Filter	68	13	1
70–4800	Screw	68	14	1
70–4810	Body Assembly	62	8	4
70–4820	Pin	62	5	4
70–4830	Spring	62	6	4
70–4840	Nut	62	1	4
70–4850	Washer 2.15 mm	62	*	A/R
70–4860	Washer 1.00 mm	62	7	A/R

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
70–4870	Washer 1.05 mm	62	*	A/R
70–4880	Washer 1.10 mm	62	*	A/R
70–4890	Washer 1.275 mm	62	*	A/R
70–4900	Washer 1.325 mm	62	*	A/R
70–4910	Washer 1.775 mm	62	*	A/R
70–4920	Washer 0.95 mm	62	*	A/R
70–4930	Packing	62	4	4
70–4940	Housing Assembly	65	43	1
70–4950	Hose – 90˚ Elbow	61	8	1
70–4960	Clamp – R	61	21	1
70–4970	Gasket	61	19	1
70–4980	Bolt – Cap Hex Hd.	61	2	1
70–4990	Spring	54	17	8
70–5000	Retainer	54	18	8
70–5010	Tappet	54	11	8
70–5020	Gear – Camshaft	52	8	1
70–5020	Gear – Camshaft	54	22	1
70–5030	Pipe	57	35	1
70–5040	Hose	51	43	1
70–5050	Cover	51	39	1
70–5060	Joint	62	27	1
70–5070	O–Ring	62	35	1
70–5080	Bushing	54	6	8
70–5090	Gasket	53	20	1
70–5100	Gasket	57	7	1
70–5110	Washer	54	31	2
70–5120	Bolt	57	32	1
70–5130	Gasket	53	11	1
70–5140	Plug	53	5	1
70–5150	Rocker Assembly – Intake	54	32	4
70–5160	Rocker Assembly – Exhaust	54	27	4
70–5170	Pipe	54	29	1
70–5180	Rocker Shaft Assembly	54	8	1
70–5190	Spring	54	7	3
70–5200	Bracket	54	33	4
70–5230	Rod – Push	54	10	8
70–5240	Seal	55	15	4
70–5250	Plate	55	31	1
70–5260	Gasket	55	39	1
70–5270	Cover	57	8	1
70–5280	Sleeve	55	41	4
70–5290	Hanger	55	40	1
70–5300	Bolt	55	19	10
70–5310	Fitting – 90˚ Elbow	61	12	1
70–5320	Pin	55	30	2
70–5330	Gasket	58	5	1
70–5340	Valve	55	32	4
70–5350	Bearing – Main (Std.)	55	14	10
70–5351	Bearing – Main U.S. 0.25mm	55	14	10
70–5352	Bearing – Main U.S. 0.50mm	55	14	10
70–5353	Bearing – Main U.S. 0.75mm	55	14	10
70–5360	Plate – Thrust (Std.)	55	20	3
70–5361	Plate – Thrust O.S. 0.15mm	55	20	3
70–5362	Plate – Thrust O.S. 0.30mm	55	20	3
70–5363	Plate – Thrust O.S. 0.45mm	55	20	3
70–5370	Gasket	52	5	1
70–5380	Pan – Oil	58	7	1
70–5390	Gasket	58	6	1
70–5400	Ring Set – Std.	56	23	4
70–5401	Ring Set – O.S. 0.25mm	56	*	4
70–5402	Ring Set – O.S. 0.50mm	56	*	4
70–5410	Pin	56	21	4
70–5420	Nut	56	10	8
70–5430	Bearing – Rod (Std.)	56	8	8
70–5431	Bearing – Rod U.S. 0.25mm	56	*	4
70–5432	Bearing – Rod U.S. 0.50mm	56	*	4
70–5433	Bearing – Rod U.S. 0.75mm	56	*	4
70–5440	Pulley	56	13	1
70–5450	Idler Assembly	52	9	1
70–5460	Gasket	59	9	1
70–5470	Manifold	59	10	1
70–5480	Pipe – Oil	61	16	1
70–5490	Pipe – Oil	61	15	1
70–5500	Strainer	57	31	1
70–5510	Gasket	57	19	1
70–5520	Union	57	22	1
70–5530	Bracket Assembly	57	23	1
70–5540	Oil Filter Assembly	57	*	1
70–5550	Gasket	57	20	1
70–5560	Gage	58	13	1
70–5570	Breather	57	1	1
70–5570	Breather	53	21	1
70–5580	Stay	57	6	1
70–5590	Connector	51	41	1
70–5600	Water Pump Assembly	51	5	1
70–5610	Impeller	51	11	1
70–5620	Connector	51	9	1
70–5630	Shaft	51	26	1
70–5640	Bracket	51	12	1
70–5650	Gasket	51	7	1
70–5660	Gasket	51	17	1
70–5670	Stay	51	13	1
70–5680	Pulley	51	29	1
70–5690	Elbow	51	36	1
70–5700	Fuel Feed Pump	62	25	1
70–5710	Fuel Filter Assembly	63	*	1
70–5720	Bracket	63	49	1
70–5730	Filter Element Assembly	62	38	1
70–5740	Plate	48	2	1
70–5750	Bracket	48	10	1
70–5760	Alternator Assembly	48	1	1
70–5770	Lever	62	22	1
70–5780	Seal	52	13	1
70–5790	Case	52	4	1
70–5800	Pin	56	7	2
70–5810	Plate	56	14	1
70–5820	Cone	56	12	1
70–5830	Gear – Crankshaft	52	12	1
70–5840	Oil Pump Assembly	57	14	1
70–5850	Cover	57	18	1
70–5860	Starter Assembly	48	7	1
70–5870	Insert – Exhaust	53	9	4
70–5880	Insert – Inlet	53	10	4
70–5890	Flange	53	6	1
70–5900	Cylinder Head Assembly	53	8	1
70–5910	Valve – Inlet	54	20	4
70–5920	Valve – Exhaust	54	19	4
70–5930	Spring	54	16	8
70–5940	Camshaft	54	21	1
70–5950	Connector	55	12	1
70–5960	Crankcase Assembly	55	1	1
70–5970	Housing	58	1	1
70–5980	Piston (Std.)	56	22	4
70–5981	Piston – O.S. 0.25mm	56	*	4
70–5982	Piston – O.S. 0.50mm	56	*	4
70–5990	Connecting Rod – Std.	56	1	4
70–6000	Bushing	56	2	4
70–6010	Bolt	56	19	8
70–6020	Crankshaft Assembly	56	18	1
70–6030	Flywheel Assembly	56	4	1
70–6040	Gear – Injection Pump	52	11	1
70–6050	Manifold	59	5	1
70–6060	Gasket	59	8	1
70–6070	Pipe	61	7	1
70–6080	Hose	61	6	1
70–6090	Elbow	59	3	1
70–6100	Pipe – No. 2	62	12	1
70–6110	Pipe – No. 4	62	14	1
70–6120	Pipe	63	41	1
70–6130	O–Ring	62	33	1
70–6140	Washer	63	43	4
70–6150	Gasket	63	45	4
70–6160	Nozzle Assembly	63	46	4
70–6170	Nozzle Tip Assembly	62	2	4
70–6180	Injection Pump	62	26	1
70–6190	Pipe – No. 1	62	11	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
70—6200	Pipe — No. 3	62	13	1
70—6210	Flange	62	34	1
70—6220	Gland	63	44	4
70—6230	Coupling Assembly	60	17	1
70—6240	Gasket	61	10	1
70—6250	Gasket	59	11	1
70—6250	Gasket	61	20	1
70—6260	Plate	60	21	1
70—6270	O—Ring	60	7	1
70—6280	Deflector	60	9	1
70—6290	Insert	60	8	1
70—6300	Ring	60	6	1
70—6310	Ring	60	10	1
70—6320	Wheel	60	5	1
70—6330	Nut	60	4	1
70—6340	Cover	60	3	1
70—6350	Ring	60	20	1
70—6360	Plate	60	2	1
70—6370	Bearing	60	14	2
70—6380	Bearing	60	12	1
70—6390	Ring	60	15	2
70—6400	Ring	60	18	1
70—6410	Sleeve	60	11	1
70—6420	Ring	60	13	1
70—6430	Turbocharger Assembly	59	12	1
70—6440	Cartridge Assembly	60	*	1
70—6450	Housing	60	16	1
70—6460	Bearing Housing Assembly	60	22	1
70—6470	Shaft & Turbine Wheel Assy.	60	19	1
70—6480	Pin	66	15	1
70—6490	Ring	67	66	1
70—6500	O—Ring	66	37	1
70—6510	O—Ring	66	22	2
70—6520	Bolt	66	10	1
70—6520	Bolt & Washer	66	29	3
70—6530	Bolt	66	7	5
70—6540	Bolt	65	32	4
70—6550	Bolt	66	9	1
70—6560	Nut	67	72	2
70—6570	Washer — 0.1	67	61	A/R
70—6580	Washer — 0.25	67	*	A/R
70—6590	Washer — 0.5	67	*	A/R
70—6600	Washer — 0.2	67	*	A/R
70—6610	Washer — 0.2	67	65	A/R
70—6620	Washer — 0.3	67	*	A/R
70—6630	Washer — 0.4	67	*	A/R
70—6640	Washer — 0.1	67	*	A/R
70—6650	Washer — 1.0	67	*	A/R
70—6660	Washer — 1.0	67	*	A/R
70—6670	Washer	67	70	1
70—6680	Washer	65	34	1
70—6690	Washer	66	35	2
70—6700	Washer	68	16	1
70—6710	Washer	66	4	1
70—6720	Stud	65	27	3
70—6730	Bolt	66	42	1
70—6740	Bolt	66	26	2
70—6750	Bolt	66	41	4
70—6760	Bolt & Washer	66	39	2
70—6770	Nut	66	36	1
70—6780	Nut	65	33	1
70—6790	Packing	66	28	1
70—6800	E—Ring	64	23	4
70—6810	E—Ring	66	11	2
70—6820	Ring	68	9	1
70—6830	Pin	62	3	8
70—6840	Bearing	65	36	1
70—6850	Bearing	64	6	2
70—6860	Key	66	14	1
70—6870	Key	66	2	1
70—6880	Key	65	29	1
70—6890	O—Ring	66	52	1
70—6900	O—Ring	65	26	1
70—6910	O—Ring	65	47	4
70—6920	Seal	66	44	1
70—6930	Screw	64	24	1
70—6940	Screw	68	1	1
70—6940	Screw	65	39	1
70—6990	Level Sensing Unit Assembly	22	2	1
71—0060	Support — Foam	43	8	1
71—0210	Foam — Radiator Seal	44	13	1
71—0220	Foam — Louver Lower	42	11	1
71—0230	Foam — Louver Middle	42	7	1
71—0240	Foam — Louver Top	42	5	2
71—0250	Foam — Hood Top	43	2	1
71—0260	Foam — Hood Side L.H.	43	3	1
71—0270	Foam — Hood Side R.H.	43	1	1
71—0280	Foam — Cowl Top	42	3	1
71—0290	Foam — Cowl Bottom	42	29	1
71—0300	Foam — Low Front Cowl L.H.	42	17	1
71—0310	Foam — Low Front Cowl R.H.	42	*	1
71—0320	Foam — Low Rear Cowl R.H.	42	*	1
71—0330	Foam — Low Rear Cowl L.H.	42	30	1
71—0340	Foam — Rad. Support L.H.	44	36	1
71—0350	Foam — Rad. Support R.H.	44	1	1
71—0360	Foam — Rad. Support Top	44	3	1
71—0370	Foam — Lower Rad. Support	44	34	2
71—0380	Foam — Rad. Support Front	44	42	1
71—0390	Foam — Rad. Support Rear	44	44	1
71—0400	Foam — Side Panel	43	14	2
71—0410	Cover — Abrasive	10	2	1
71—0420	Floor — Abrasive	28	66	1
71—0430	Cover — Abrasive	28	64	1
71—0440	Abrasive — Pedal Front	9	25	1
71—0450	Abrasive — Pedal Rear	9	29	1
71—0470	Disc — Middle	32	19	4
71—0480	Suspension Assembly	3	*	1
71—0540	Column — Steering	4	27	1
71—2170	Pin	3	22	1
71—2180	Bearing	3	2	4
71—2190	Pin	3	3	1
71—2200	Bracket — Swing Arm	3	33	1
71—2210	Pin	3	13	1
71—2220	Pin	3	16	1
71—2230	Ring — Snap	3	14	1
71—2240	Knob Assembly	3	15	1
71—2250	Bracket — Spring	3	18	1
71—2260	Spring	3	27	2
71—2270	Nut — Special	3	23	1
71—2280	Band — Weight Indicator	3	10	1
71—2290	Bearing — Trible	3	4	1
71—2300	Bumper	3	9	2
71—2310	Plate — Lower Suspension	3	8	1
71—2320	Pin	3	21	2
71—2330	Ring — Snap	3	19	2
71—2340	Absorber — Shock	3	20	1
71—2380	Washer	2	7	2
71—2390	Rivet — Pop	2	8	2
71—2400	Assembly — Bumper	2	6	2
71—2410	Plate — Upper Suspension	2	5	1
71—2420	Bellows — Rubber	2	12	1
71—2430	Plate — Rear	11	16	1
71—2450	Cover — Access	27	24	1
71—2460	Plate — Control	14	5	1
71—2470	Rim	32	29	2
71—2530	Bearing Assembly	93	6	1
71—2550	Washer — Latch Shaft	88	9	2
71—2560	Support — Bulkhead	30	38	2
71—2570	Shaft — Pivot	78	3	1
71—2580	Shaft — Lift Arm Pivot	85	26	2
71—2590	Shaft — Pivot	75	5	1
71—2590	Shaft — Pivot	78	24	1
71—2600	Tube — Anti — Sway	89	11	2
71—2610	Shaft — Deck Pivot	90	15	2
71—2620	Shaft — Lift Arm Elbow	89	23	2
71—2630	Solenoid Valve Assembly	28	*	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
71–2680	Hose – Vent	23	31	1
71–2680	Hose – Vent	45	53	1
71–2690	Hose – Fuel	70	7	1
71–3810	Coupling – Hydraulic Motor	32	34	2
71–3830	Bellcrank – Brake	36	21	2
71–3850	Cover – Housing	36	15	2
71–3860	Clevis	36	28	2
71–3870	Gasket	36	14	2
71–3880	Clevis – Brake Cable	32	15	2
71–3880	Clevis – Brake Cable	36	23	2
71–3900	Gasket	36	25	2
71–3910	Collar	36	34	2
71–3990	Cap – Brake Housing	32	20	2
71–4010	Housing – Brake	32	13	2
71–4060	Rod – Brake Latch	4	40	1
71–4130	Support – Control	11	17	1
71–4170	Switch – Toggle	14	19	1
71–4200	Cluster – Warning Light	13	6	1
71–4210	Cluster – Warning Light	13	4	1
71–4230	Panel	13	3	1
71–4250	Spacer	13	20	2
71–4260	Decal – H.O.C.	91	28	2
71–4260	Decal – H.O.C.	82	56	1
71–4280	Sending Unit – Oil Pressure	47	61	1
72–4070	Decal – Danger	33	47	2
72–4080	Decal – Danger	72	37	1
72–4080	Decal – Danger	28	71	2
72–4310	Switch – Ball	78	11	1
72–4310	Switch – Lift	85	32	2
72–9550	Stud – Fuel Tank	22	17	1
72–9760	Switch	14	15	2
74–0720	Tube – Manual	2	1	1
74–2170	Cylinder – Lift	86	43	2
74–2180	Ring – Steel	87	9	1
74–2190	Cushion	87	10	1
74–2200	Head	87	4	1
74–2210	Piston	87	12	1
74–2220	Collar	87	2	1
74–2230	Shaft/Clevis	87	1	1
74–2270	Fitting – Suction	25	23	1
74–2340	Decal – Fuse	14	22	1
74–2510	Tube – Hydraulic L.H.	7	13	1
74–2520	Tube – Hydraulic R.H.	7	14	1
74–2530	Tube – Hydraulic	7	11	1
74–2660	Hose – Hydraulic Return	24	34	1
74–2680	Bracket – Bulkhead	86	45	1
74–2700	Rod – Control	9	16	1
74–2710	Clamp Half – Hydraulic Line	89	2	4
74–2730	Tube – Clamp	89	31	4
75–0540	Tether – Cap, Reservoir	23	27	1
75–2080	Cartridge Valve Seal Kit	74	*	6
75–2080	Kit – Seal	21	2	2
75–9460	Bracket – Sealing L.H.	42	19	1
75–9470	Bracket – Sealing R.H.	42	25	1
75–9480	Bracket – Sealing Bottom	42	22	1
75–9670	Fork – Castor	90	32	8
75–9790	Arm – Pivot	80	10	2
76–0980	Pipe – Exhaust	46	10	1
76–1670	Spring – Extension	84	25	1
76–1670	Spring – Extension	78	33	1
76–1670	Spring – Extension	81	36	1
76–2060	V–Belt	83	*	1
76–2060	V–Belt	84	*	1
76–2060	V–Belt	91	*	6
76–2750	Hydraulic Hose Assembly	81	2	1
76–2760	Hydraulic Hose Assembly	81	1	1
76–2770	Hydraulic Hose Assembly	81	6	1
76–4590	Screw	34	16	6
76–4590	Screw	40	27	6
76–4600	Gasket – Cover	40	38	1
76–4600	Gasket – Front Cover	34	26	1
76–4610	Cover	40	33	1
76–4610	Cover – Front	34	15	1
76–8750	Plate – Caution	44	45	2
77–0950	Washer – Castor	90	41	8
77–2830	Rod – Spring	81	44	1
77–2990	Cable – Throttle	18	8	1
80–0010	Tank – Fuel	22	11	1
80–0130	Cable – Negative	72	11	1
80–0160	Tray – Battery	72	18	1
80–4890	Decal – Service	11	32	1
80–9330	Alarm – Audio	11	3	1
82–2560	Decal – Belt Routing	81	39	1
82–4910	Roller	83	27	1
82–4910	Roller	84	36	1
82–6330	Cowl – Radiator, Optional	42	*	1
82–7820	Seat – Brake, Tube	36	13	2
82–7830	Screw – Bleed, Brake	36	11	2
82–7840	Piston – Brake	36	7	2
82–7850	Spring – Compression	36	4	2
82–7900	Shaft – Arm	89	34	2
82–7930	Arm – Anti–Sway L.H.	89	14	1
82–7940	Arm – Anti–Sway R.H.	89	*	1
82–9060	Track & Latch – Adjustment	2	4	1
83–4330	Assy. – Tube, Traction LH	28	82	1
83–4330	Tube – Hydraulic L.H.	32	8	1
83–4340	Assy. – Tube, Traction RH	28	83	1
83–4340	Tube – Hydraulic R.H.	32	*	1
83–6630	Shim – Switch	1	5	2
83–6640	Sensor – Switch	1	8	1
83–6660	Support – Seat	2	11	1
83–6690	Plate – Seat	1	15	1
83–6700	Plate – Suspension	1	9	1
83–8350	Fitting – Traction, L.H.	27	20	1
83–8360	Fitting – Traction, R.H.	28	73	1
83–8370	Plate – Clamp	28	74	1
85–4750	Display – Diagnostic	12	2	1
85–6140	Spring	1	16	1
85–6150	Tube – Hyd. R.H. Branch	32	*	1
85–6150	Tube – Hydraulic	27	30	1
85–6160	Pin – Spring	1	10	1
85–6190	Link – Deck Tilt	27	1	1
85–6210	Bracket – Rear Eng. Mount	46	37	2
85–6230	Assembly – Solenoid Valve	71	*	1
85–6230	Solenoid – Engine Run	46	45	1
85–6260	Level Sensing Unit	23	3	1
85–6280	Spring – Return	71	3	1
85–6290	Boot – Rubber	71	2	1
85–6300	Assembly – Plunger	71	1	1
86–7350	Seal Repair Kit	87	*	1
86–7350	Seal Repair Kit	79	*	1
86–7410	Plate – Gage	13	5	1
86–7480	Spring – Compression	81	48	1
86–8100	Joint – Ball	88	19	2
86–8100	Joint – Ball	78	37	2
86–8101	Joint – Ball	88	22	2
88–6760	Spring – Gas	43	19	2
88–6770	Stud – Ball	43	18	2
88–6770	Stud – Ball	45	56	2
88–9190	Solenoid Coil Assembly	73	23	3
88–9260	Bracket – Roller RH	84	38	1
88–9270	Bracket – Roller LH	83	29	1
88–9420	Wire Harness Assembly	11	*	1
88–9430	Decal – Fuse	11	5	1
88–9450	Bracket – Hood Cylinder	44	37	2
92–1179	Cushion – Seat	1	17	1
92–1180	Assembly – Seat	1	1	1
92–1741	Tube – Hydraulic	32	42	1
92–1742	Tube – Hydraulic	24	40	1
92–1742	Tube – Hydraulic L.H.	32	12	1
92–1753	Coupling – Spring Centering	46	26	1
92–1771	Board – Instrument	13	16	1
92–1772	Hood Assembly	43	4	1
92–1792	Repair Kit	77	*	1
92–2351	Fitting – Tank Return	24	36	1
92–2352	Hose – Hydraulic	24	35	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–3047	Valve – Solenoid	28	62	1
92–3048	Solenoid Coil Kit	28	54	3
92–3049	Valve Seal Kit	28	*	1
92–3071	Spool – Solenoid Valve	73	25	3
92–4087	Decal – Diagnostic V2.0	12	1	1
92–4094	Roller – Latch	88	16	4
92–4804	Block – Latch Pivot	88	11	2
92–4805	Cam – Spring Trip	88	21	2
92–4806	Pin – Latch	88	13	8
92–4806	Pin – Latch	78	30	1
92–4807	Tube – Hyd. R.H. Run	32	*	1
92–4807	Tube – Hydraulic	24	4	1
92–4967	Tube – Hydraulic	27	9	1
92–4967	Tube – Hydraulic	21	17	1
92–4970	Hose – Hydraulic	23	37	1
92–4970	Hose – Hydraulic	28	80	1
92–4971	Hydraulic Cylinder Assembly	78	7	2
92–4997	Cable – Positive	72	12	1
92–5720	Controller	11	22	1
92–7301	Spacer	1	19	2
92–8003	Housing – Actuator, R.H.	36	12	1
92–8004	Housing – Actuator, L.H.	36	*	1
92–8661	Tab	11	34	3
92–8664	Lift Arm Assembly L.H.	85	33	1
92–8665	Lift Arm Assembly R.H.	85	*	1
92–8753	Catch – Magnetic	1	6	1
92–9701	Shaft – Cruise Control	9	3	1
92–9730	Cap – End	5	18	1
92–9732	Plate – Wear	5	14	1
92–9735	Screw – Cap	5	19	7
92–9748	Valve – Power Steering	4	28	1
92–9749	Seal Kit	5	*	1
92–9800	Spacer – Spindle	93	11	1
93–0307	Nut – Retainer	76	53	2
93–0309	Washer	75	25	2
93–0310	Spindle – Wheel R.H.	75	*	1
93–0311	Spindle – Wheel L.H.	75	17	1
93–1397	Valve – Flow Control	78	46	1
93–3102	Cap – Fuel	22	10	1
93–3103	Cap – Hydraulic	23	36	1
93–3219	Pump Drive Shaft Assembly	38	*	1
93–3681	Cover	53	1	1
93–3682	Gasket	53	2	1
93–4237	Bearing	94	7	4
93–4237	Bearing	80	14	8
93–4237	Bearing	90	29	16
93–4239	Rim – Wheel	80	35	4
93–4239	Rim – Wheel	90	44	16
93–4240	10 Wheel – Pneumatic	90	30	8
93–4240	10 Wheel – Pneumatic	80	12	2
93–4241	Spacer	80	13	2
93–4241	Spacer	90	28	8
93–4241	Spacer – Bearing, Inner	94	4	1
93–4242	Plate	80	33	2
93–4242	Plate	90	46	8
93–4243	Tire – 10	80	34	2
93–4243	Tire – 10	90	42	8
93–4244	Tube – w/Valve	80	37	2
93–4244	Tube – w/Valve	90	45	8
93–4382	Bracket – Muffler	46	18	1
93–5452	Wheel – Pneumatic, 13	80	23	2
93–5508	Tire – 13	80	22	2
93–5630	Spacer – Bearing	80	21	2
93–5630	Spacer – Bearing, Inner	94	8	1
93–5631	Rim – Wheel	80	38	2
93–5963	Tube – w/Valve	80	39	2
93–5973	10 Foam Filled Tire Asm.	94	2	1
93–5980	Hub	80	36	2
93–5980	Hub	90	43	8
93–5999	13 Foam Filled Tire Asm.	94	10	1
93–7037	Switch	7	22	1
93–7037	Switch	38	61	1
93–7038	Switch	28	77	1
93–7039	Bracket – Service Brake	7	21	1
93–7176	Fitting – 45˚ ORFS	33	48	2
93–7177	Assy. – Tube, Traction L.H.	27	19	1
93–7177	Tube – Hydraulic, LH	33	50	1
93–7178	Assy. – Tube, Traction R.H.	27	21	1
93–7178	Tube – Hydraulic, RH	33	*	1
93–7179	Tube – Hydraulic	30	27	1
93–7187	Yoke – Engine End	37	8	1
93–7188	Shaft – Slip Yoke	37	6	1
93–7189	Yoke – Pump End	37	3	1
93–7190	Kit – Universal Joint	37	7	2
93–7191	Tube – Slip Yoke	37	4	1
93–7192	Hose – Diagnostic	28	81	1
93–7192	Hose – Hydraulic Diagnostic	21	25	1
93–7193	Hose – Diagnostic	28	70	1
93–7193	Hose – Hyd. Diagnostic	29	7	1
93–7417	Gasket	36	33	2
93–7418	Cap – Actuator	36	36	2
93–7422	Hose – Hyd. Diagnostic	29	5	1
93–7422	Hose – Hydraulic	27	11	1
93–7423	Hose – Diagnostic	73	44	2
93–7423	Hose – Hyd. Diagnostic	29	9	2
93–7424	Hose – Diagnostic	28	69	1
93–7424	Hose – Hydraulic	37	50	1
93–7425	Hose – Hyd. Diagnostic	29	10	1
93–7426	Tube – Hydraulic	27	39	1
93–7426	Tube – Hydraulic	78	44	1
93–7427	Tube – Hydraulic	78	47	1
93–7637	Key – Square	92	8	1
93–8457	Hex.–Belt – Deck Drive	82	*	1
93–9320	Plate – Valve L.H.	40	40	1
93–9321	Plug – Orifice	41	75	1
93–9322	Variable Displacement Pump	37	1	1
93–9324	Pivot – Idler	84	41	1
93–9324	Pivot – Idler	82	61	1
93–9337	Bracket – Swiitch	7	28	1
93–9337	Bracket – Switch	37	35	1
93–9912	Grommet	89	30	2
93–9917	Asm. – Hose, Hydraulic	91	9	2
93–9918	Asm. – Hose, Hydraulic	91	8	2
93–9919	Asm. – Hose, Hydraulic	91	29	2
93–9922	Spacer	86	61	2
93–9925	Lift Arm Assembly R.H.	89	*	1
93–9926	Lift Arm Assembly L.H.	89	25	1
93–9928	Clamp – Hose	89	28	2
93–9941	Arm – Outer Lift R.H.	89	*	1
93–9942	Arm – Outer Lift L.H.	89	10	1
93–9988	Fitting – Hydraulic	28	61	1
94–1891	Hydraulic Tube Assembly	25	13	1
94–1892	Hose – Auxiliary Suction	23	14	1
94–1893	Tank – Hydraulic	23	4	1
94–2860	Radiator	44	12	1
94–2865	Tank – Fuel	22	*	1
94–2867	Valve – Relief	57	40	1
94–2878	Pin	40	26	2
94–3310	Tube – Vent	22	22	1
94–3311	Hose – Fuel	22	23	1
94–3334	Hose – Hydraulic	45	60	1
94–3335	Hose – Hydraulic	44	18	1
94–3336	Fitting – Hydraulic Straight	45	58	1
94–3337	Fitting – Hydraulic 90˚	45	59	1
94–4843	Valve – Cartridge (600 lbs)	73	5	3
94–4907	Motor – Hydraulic	81	11	1
94–4907	Motor – Hydraulic	91	13	2
94–5390	Plate – Load	92	4	2
94–5391	Seal – Shaft	92	3	1
94–5392	Kit – Seal	92	*	1
94–6760	Bracket – Support	83	19	1
94–6762	Bracket – Support	84	11	1
94–6772	Retainer – Clamp	89	32	2
94–9412	Seal – Adapter	41	74	1
94–9413	Screw	41	73	3
94–9414	Adapter – Suction	41	79	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94–9415	Plug	41	96	1
213–31	Cover – Steering Wheel	4	8	1
217–116	Rim	75	23	2
218–242	Switch – Brake	7	25	1
218–243	Fitting – Tee	7	12	1
218–446	Nut – Hex	14	9	1
218–447	Washer – Lock	14	8	1
218–498	Nut	13	18	2
218–498	Nut – Hex	14	7	10
218–533	Lens – Indicator Light (Red)	4	7	1
218–535	Nut – Hex.	4	24	3
218–536	Washer – Lock	4	23	3
218–562	Lens – Indicator Light	4	11	2
218–573	Fuse – 5A	11	*	1
218–581	Fuse – 15A	11	33	6
219–17	Bulb – Light	13	9	8
2116–3	Joint – Ball L.H.	75	*	1
2116–4	Joint – Ball R.H.	75	35	1
231–140	Tire – (Optional)	32	*	2
232–27	Stem – Valve	75	29	2
233–17	Knob	4	3	1
233–42	Knob	19	3	3
233–48	Knob	18	3	1
233–66	Knob	14	10	1
237–21	Seal – O–Ring	32	3	2
237–21	Seal – O–Ring	21	6	2
237–21	Seal – O–Ring	30	29	4
237–21	Seal – O–Ring	76	52	4
237–21	Seal – O–Ring	28	58	3
237–22	Seal – O–Ring	27	32	7
237–22	Seal – O–Ring	24	5	3
237–22	Seal – O–Ring	81	7	1
237–22	Seal – O–Ring	78	8	9
237–22	Seal – O–Ring	91	10	2
237–22	Seal – O–Ring	19	14	9
237–22	Seal – O–Ring	44	17	1
237–22	Seal – O–Ring	85	19	14
237–22	Seal – O–Ring	21	21	7
237–22	Seal – O–Ring	23	21	2
237–22	Seal – O–Ring	37	25	1
237–22	Seal – O–Ring	4	37	4
237–22	Seal – O–Ring	57	38	1
237–22	Seal – O–Ring	75	45	6
237–22	Seal – O–Ring	47	56	2
237–22	Seal – O–Ring	41	64	1
237–30	Seal – O–Ring	27	8	3
237–30	Seal – O–Ring	24	13	2
237–30	Seal – O–Ring	37	17	2
237–30	Seal – O–Ring	21	22	2
237–37	Bumper – Rubber	72	34	4
237–42	Seal – O–Ring	32	1	2
237–42	Seal – O–Ring	78	6	4
237–42	Seal – O–Ring	73	7	1
237–42	Seal – O–Ring	91	12	2
237–42	Seal – O–Ring	37	23	1
237–42	Seal – O–Ring	19	24	5
237–42	Seal – O–Ring	21	27	6
237–42	Seal – O–Ring	86	42	4
237–42	Seal O–Ring	81	9	1
237–58	Seal – O– Ring	27	14	4
237–58	Seal – O–Ring	25	2	2
237–58	Seal – O–Ring	81	3	2
237–58	Seal – O–Ring	24	7	1
237–58	Seal – O–Ring	32	7	7
237–58	Seal – O–Ring	73	10	8
237–58	Seal – O–Ring	37	21	3
237–65	O–Ring	33	49	2
237–65	Seal – O–Ring	24	3	2
237–65	Seal – O–Ring	91	7	4
237–65	Seal – O–Ring	27	18	6
237–65	Seal – O–Ring	85	20	4
237–78	Seal – O– Ring	27	13	5
237–78	Seal – O–Ring	21	4	2
237–78	Seal – O–Ring	21	8	3
237–78	Seal – O–Ring	73	33	1
237–78	Seal – O–Ring	73	41	2
237–78	Seal – O–Ring	75	43	4
237–79	Seal – O–Ring	19	12	2
237–79	Seal – O–Ring	23	23	1
237–79	Seal – O–Ring	21	24	2
237–79	Seal – O–Ring	73	32	4
237–79	Seal – O–Ring	4	39	4
237–80	Seal – O–Ring	24	1	1
237–80	Seal – O–Ring	23	19	3
237–80	Seal – O–Ring	41	68	1
237–81	Seal – O–Ring	23	1	1
237–81	Seal – O–Ring	81	5	2
237–81	Seal – O–Ring	91	5	4
237–81	Seal – O–Ring	32	9	4
237–81	Seal – O–Ring	37	15	1
237–81	Seal – O–Ring	73	19	8
237–101	Seal – O–Ring	24	24	2
237–116	Seal – O–Ring	25	9	1
237–146	Seal – O–Ring	32	5	4
237–146	Seal – O–Ring	73	14	1
237–146	Seal – O–Ring	37	19	3
237–154	Seal – O–Ring	70	10	1
237–155	Seal – O–Ring	24	20	1
237–156	Seal – O–Ring	21	13	8
237–156	Seal – O–Ring	73	30	30
237–157	Seal – O–Ring	23	16	1
237–158	Seal – O–Ring	32	21	4
237–164	Grommet	30	7	1
237–174	O–Ring	36	9	2
237–175	O–Ring	36	6	2
240–2	Grommet	30	6	2
240–3	Grommet	85	8	4
240–4	Grommet	27	6	6
240–4	Grommet	85	18	10
240–5	Grommet	27	28	2
240–6	Grommet	30	31	4
240–7	Grommet	30	32	1
240–7	Grommet	28	47	4
2410–10	Plug – Button	28	72	1
2410–73	Pin – Tether	23	35	1
2411–40	Joint – Ball	89	13	4
2411–41	End – Rod	46	52	2
2412–3	Clamp – Hose	23	15	1
2412–7	Clamp Assembly	75	38	2
2412–34	Clamp – Hose	23	11	1
2412–39	Clamp	72	39	1
2412–39	Clamp – R	47	68	1
2412–41	Clamp	72	38	2
2412–41	Clamp – R	44	38	1
2412–41	Clamp – R	47	59	2
2412–42	Clamp – Hose	25	11	4
2412–42	Clamp – Hose	23	13	4
2412–42	Clamp – Hose	46	19	1
2412–70	Clamp – R	46	3	1
2412–73	Clamp – R	72	7	3
2412–73	Clamp – R	47	69	1
2412–89	Clamp – R	22	9	1
2412–92	Clamp – Hose	24	9	4
2412–92	Clamp – Hose	44	11	4
2412–104	Clamp–R	72	40	1
2412–108	Clamp – Hose	70	2	3
2412–108	Clamp – Hose	44	6	2
2412–108	Clamp – Hose	22	15	2
2412–108	Clamp – Hose	23	32	1
2412–110	Clamp – Hose	46	16	3
2412–129	Clamp – Hose	24	39	1
2412–133	Clamp	2	2	2
2412–138	Clamp – R	22	24	1
2412–147	Clamp – R	44	48	1
250–5	Tie – Cable	42	34	16
251–259	Bearing – Neutral Detent	37	41	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
251–340	Bearing – Ball	32	23	2
253–154	Seal – Wave	93	5	2
253–156	Seal – Oil	32	22	2
253–157	Ring – Cup	32	41	8
254–72	Cup – Bearing Outer	75	20	2
254–92	Cone – Bearing Outer	75	21	2
254–106	Cone – Bearing Inner	75	31	2
254–107	Cup – Bearing Inner	75	30	2
256–76	Bushing – Sleeve	89	15	4
256–117	Bushing – Flange	81	28	4
256–156	Bushing – Flange	9	30	2
256–172	Bearing – Sleeve	88	15	8
256–188	Bushing – Sleeve	84	6	1
256–188	Bushing – Sleeve	81	22	1
256–247	Bushing – Flange	6	1	4
256–247	Bushing – Flange	28	46	2
256–273	Bushing – Flange	9	28	1
256–304	Washer – Thrust	89	6	8
256–304	Washer – Thrust	75	7	6
256–304	Washer – Thrust	78	28	2
256–304	Washer – Thrust	85	29	4
256–304	Washer – Thrust	90	40	4
256–305	Washer – Thrust	83	16	2
256–305	Washer – Thrust	84	24	2
282–2	Clevis – Brake Rod	7	18	1
282–28	Clevis – Adjustable	18	6	2
283–1	Pin – Clevis	6	24	2
283–1	Pin – Clevis	7	24	1
283–2	Pin – Clevis	32	16	2
283–2	Pin – Clevis	36	24	2
283–15	Pin – Clevis	36	31	2
283–67	Pin – Clevis Arm End	18	5	1
283–70	Pin – Hitch	80	9	2
283–72	Pin – Lynch	1	3	1
285–17	Plug – Pipe	41	76	2
2812–4	Fitting – Reducer	44	15	1
302–2	Fitting – Grease	85	31	4
302–2	Fitting – Grease	78	2	4
302–2	Fitting – Grease	84	4	1
302–2	Fitting – Grease	89	4	4
302–2	Fitting – Grease	37	5	1
302–2	Fitting – Grease	90	13	2
302–2	Fitting – Grease	81	20	1
302–2	Fitting – Grease Str.	93	1	1
302–5	Fitting – Grease	77	1	1
302–5	Fitting – Grease	6	3	2
302–5	Fitting – Grease	79	13	3
302–5	Fitting – Grease	75	15	3
302–5	Fitting – Grease	87	15	2
302–5	Fitting – Grease	88	18	2
302–5	Fitting – Grease	89	22	2
302–5	Fitting – Grease	80	27	2
302–5	Fitting – Grease	81	33	4
302–5	Fitting – Grease	90	34	8
302–5	Fitting – Grease	78	40	2
302–5	Fitting – Grease	28	48	1
302–10	Fitting – Grease 45°	93	*	1
302–33	Fitting – Grease	75	36	2
302–39	Vent	32	25	2
302–40	Fitting – Grease	88	23	2
304–46	Drain – Fuel Tank	22	13	1
304–46	Valve – Drain	44	14	1
321–2	Screw – Cap Hex. Hd.	42	4	16
321–2	Screw – Cap Hex. Hd.	6	10	1
321–2	Screw – Cap Hex. Hd.	36	17	8
321–2	Screw – Cap, Hex. Hd.	23	26	1
321–3	Screw – Cap Hex. Hd.	72	3	3
321–3	Screw – Cap Hex. Hd.	9	6	4
321–3	Screw – Cap Hex. Hd.	18	10	3
321–3	Screw – Cap Hex. Hd.	11	14	4
321–4	Screw – Cap Hex. Hd.	6	5	1
321–4	Screw – Cap Hex. Hd.	37	42	2
321–4	Screw – Cap Hex. Hd.	46	51	2
321–5	Screw – Cap Hex. Hd.	23	10	10
321–6	Screw – Cap Hex. Hd.	36	37	8
321–6	Screw – Cap Hex. Hd.	46	38	3
321–9	Screw – Cap Hex. Hd.	30	22	6
321–9	Screw – Cap Hex. Hd.	28	43	2
321–9	Screw – Cap Hex. Hd.	86	56	3
321–10	Screw – Cap Hex. Hd.	19	1	2
321–10	Screw – Cap Hex. Hd.	37	47	2
321–11	Screw – Cap Hex. Hd.	28	65	2
321–15	Screw – Cap Hex. Hd.	89	3	4
321–15	Screw – Cap Hex. Hd.	30	18	2
322–3	Screw – Cap Hex. Hd.	7	5	2
322–3	Screw – HH	89	27	4
322–5	Screw – Cap Hex Hd.	72	27	1
322–5	Screw – Cap Hex. Hd.	44	39	1
322–6	Screw – Cap Hex. Hd.	44	40	4
322–11	Screw – Cap Hex. Hd.	85	1	1
322–11	Screw – Cap Hex. Hd.	72	30	1
322–12	Screw – Cap Hex. Hd.	30	9	4
322–12	Screw – Cap Hex. Hd.	24	44	3
322–13	Screw – Cap Hex. Hd.	47	76	1
322–17	Screw – Cap Hex. Hd.	37	39	1
322–21	Screw – Cap Hex. Hd.	30	23	3
323–4	Screw – Cap Hex. Hd.	11	4	4
323–4	Screw – Cap Hex. Hd.	6	21	4
323–4	Screw – Cap Hex. Hd.	72	21	4
323–4	Screw – Cap Hex. Hd.	43	25	2
323–4	Screw – Cap Hex. Hd.	24	28	3
323–4	Screw – Cap Hex. Hd.	47	70	4
323–6	Screw – Cap Hex. Hd.	75	3	2
323–6	Screw – Cap Hex. Hd.	83	6	3
323–6	Screw – Cap Hex. Hd.	2	9	2
323–6	Screw – Cap Hex. Hd.	85	12	4
323–6	Screw – Cap Hex. Hd.	25	18	4
323–6	Screw – Cap Hex. Hd.	32	18	14
323–6	Screw – Cap Hex. Hd.	84	19	3
323–6	Screw – Cap Hex. Hd.	43	23	4
323–6	Screw – Cap Hex. Hd.	9	31	1
323–6	Screw – Cap Hex. Hd.	72	32	4
323–6	Screw – Cap Hex. Hd.	47	60	1
323–7	Screw – Cap Hex. Hd	37	51	2
323–7	Screw – Cap Hex. Hd.	25	4	8
323–7	Screw – Cap Hex. Hd.	7	7	3
323–7	Screw – Cap Hex. Hd.	4	16	4
323–7	Screw – Cap Hex. Hd.	83	31	3
323–7	Screw – Cap Hex. Hd.	84	39	3
323–7	Screw – Cap Hex. Hd.	44	41	4
323–9	Screw – Cap Hex. Hd.	72	13	2
323–9	Screw – Cap Hex. Hd.	1	22	2
323–10	Screw – Cap Hex. Hd.	23	5	4
323–15	Screw – Cap Hex. Hd.	80	17	16
323–15	Screw – Cap Hex. Hd.	90	23	32
323–15	Screw – Cap Hex. Hd.	86	44	2
323–21	Screw – Cap Hex. Hd.	22	6	1
323–34	Screw – Cap Hex. Hd.	44	8	7
325–4	Screw – Cap Hex. Hd.	46	46	4
325–5	Screw – Cap Hex. Hd.	4	30	3
325–6	Screw – Cap Hex. Hd.	25	20	4
325–6	Screw – Cap Hex. Hd.	78	22	12
325–6	Screw – Cap Hex. Hd.	44	43	2
325–6	Screw – Cap Hex. Hd.	75	46	12
325–7	Screw – Cap Hex. Hd.	37	12	2
325–7	Screw – Cap Hex. Hd.	81	16	1
325–7	Screw – Cap Hex. Hd.	33	46	4
325–8	Screw – Cap Hex. Hd.	84	8	1
325–8	Screw – Cap Hex. Hd.	81	24	1
325–15	Screw – Cap Hex. Hd.	80	6	4
325–17	Screw – Cap Hex. Hd.	46	43	4
325–20	Screw – Cap Hex. Hd.	90	3	8
327–17	Screw Cap Hex. Hd.	90	26	8
327–22	Screw – Cap Hex. Hd.	32	27	16
327–24	Screw Cap Hex. Hd.	80	15	2
327–25	Screw – Cap Hex. Hd.	80	20	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
327–80	Seal – O–Ring	38	53	2
328–5	Screw – Cap Hex. Hd.	78	21	2
328–8	Screw – Cap Hex. Hd.	85	36	4
328–8	Screw – Cap Hex. Hd.	85	37	2
328–11	Screw – Cap Hex. Hd.	42	26	2
328–24	Screw – Cap Hex. Hd.	86	58	4
328–26	Screw – Cap Hex. Hd.	85	28	12
3210–7	Screw – Cap Hex. Hd.	37	40	1
3213–2	Screw – Cap Hex. Hd.	25	22	4
3217–7	Nut – Hex.	22	19	1
3217–7	Nut – Hex.	37	34	1
3217–7	Nut – Lock	9	1	1
3217–9	Nut – Hex.	37	14	2
3217–9	Nut – Hex.	78	26	16
3217–9	Nut – Jam	81	37	2
3217–26	Nut – Lock	9	7	1
3219–2	Nut – Hex.	37	29	1
3219–5	Nut – Hex.	32	31	18
3219–7	Nut – Lock	89	19	4
3219–10	Nut – Jam	73	24	3
3219–14	Nut – Hex.	46	1	2
3219–14	Nut – Hex.	18	7	2
3219–14	Nut – Hex.	24	17	1
3220–1	Nut – Jam	46	50	2
3220–2	Nut – Jam	7	17	1
3220–3	Nut – Jam	9	21	2
3220–4	Nut	28	53	1
3220–4	Nut – Bulkhead	29	12	8
3220–5	Nut – Jam	9	19	1
3220–7	Nut – Jam	89	12	4
3220–7	Nut – Jam	75	28	2
3220–22	Nut – Jam	88	4	4
3229–8	Bolt – Carriage	11	35	3
3230–22	Bolt – Carriage	2	20	1
3231–22	Bolt – Carriage	93	7	6
3231–25	Bolt – Carriage	84	9	2
3231–25	Bolt – Carriage	83	20	2
3231–28	Bolt – Carriage	81	12	2
3231–28	Bolt – Carriage	91	27	4
3231–30	Bolt – Carriage	37	33	1
3233–9	Bolt – Carriage	83	9	3
3233–9	Bolt – Carriage	90	22	12
3233–9	Bolt – Carriage	84	30	3
3233–27	Bolt – Carriage	81	42	1
3233–28	Bolt – Carriage	90	12	6
3233–29	Bolt – Carriage	90	11	2
3233–30	Bolt – Carriage	91	22	6
3233–30	Bolt – Carriage	82	59	1
3234–5	Screw – Cap Hex. Hd.	1	11	4
3234–7	Screw – Hex. Washer Hd.	11	2	11
3234–12	Screw – Hex. Flange Hd.	75	10	2
3234–12	Screw – Hex. Flange Hd.	82	53	4
3234–12	Screw – Hex. Washer Hd.	91	2	8
3234–13	Screw – Hex. Flange Hd.	37	36	4
3234–13	Screw – Hex. Washer Hd.	22	8	1
3234–13	Screw – Hex. Washer Hd.	7	19	2
3234–14	Screw – Cap Hex. Hd.	43	11	6
3234–14	Screw – Cap Hex. Hd.	9	12	1
3234–14	Screw – Cap Hex. Hd.	6	18	3
3234–14	Screw – Cap Hex. Hd.	1	23	6
3234–14	Screw – Cap Hex. Hd.	11	25	2
3234–14	Screw – Hex. Flange Hd.	10	1	4
3234–14	Screw – Hex. Flange Hd.	30	2	6
3234–14	Screw – Hex. Flange Hd.	19	8	6
3234–14	Screw – Hex. Flange Hd.	27	25	4
3234–14	Screw – Hex. Washer Hd.	46	20	4
3234–14	Screw – Hex. Washer Hd.	4	25	8
3234–17	Screw – Hex. Flange Hd.	72	6	4
3234–28	Screw – Hex. Flange Hd.	27	10	2
3245–31	Screw – Set	9	8	1
3245–32	Screw – Set	9	26	1
3249–11	Screw – Machine	6	26	2
3253–2	Washer – Lock	24	16	1
3253–2	Washer – Lock	44	21	16
3253–2	Washer – Lock	47	65	2
3253–3	Washer – Lock	23	9	10
3253–3	Washer – Lock	11	15	4
3253–3	Washer – Lock	36	16	8
3253–3	Washer – Lock	37	46	2
3253–3	Washer – Lock	47	74	1
3253–7	Washer – Lock	37	13	2
3253–7	Washer – Lock	25	21	8
3253–7	Washer – Lock	78	25	16
3253–7	Washer – Lock	32	30	22
3253–8	Washer – Lock	93	14	1
3253–8	Washer – Lock	32	26	16
3253–9	Washer – Lock	89	20	4
3253–15	Washer – Lock	22	20	5
3253–15	Washer – Lock	14	21	A/R
3253–21	Washer – Lock	9	2	2
3253–21	Washer – Lock	22	5	2
3253–21	Washer – Lock	25	5	8
3253–21	Washer – Lock	23	6	4
3253–21	Washer – Lock	2	10	2
3253–21	Washer – Lock	72	14	2
3253–21	Washer – Lock	32	17	14
3253–21	Washer – Lock	4	17	4
3253–21	Washer – Lock	11	19	4
3253–21	Washer – Lock	36	19	8
3253–21	Washer – Lock	43	22	6
3253–21	Washer – Lock	24	29	3
3253–21	Washer – Lock	37	32	3
3253–21	Washer – Lock	44	35	12
3253–21	Washer – Lock	47	75	4
3254–2	Washer	89	26	4
3254–2	Washer – Lock	72	25	1
3254–6	Washer – Lock	19	25	1
3256–1	Washer – Flat	46	48	1
3256–3	Washer – Flat	47	67	3
3256–5	Washer – Flat	22	7	2
3256–6	Washer – Flat	9	17	1
3256–7	Washer – Flat	1	26	1
3256–22	Washer – Flat	14	2	8
3256–22	Washer – Flat	30	11	2
3256–22	Washer – Flat	11	12	4
3256–22	Washer – Flat	4	44	1
3256–23	Washer	13	2	4
3256–23	Washer – Flat	2	16	4
3256–23	Washer – Flat	30	24	1
3256–23	Washer – Flat	28	68	2
3256–24	Washer – Flat	72	15	2
3256–24	Washer – Flat	93	16	A/R
3256–24	Washer – Flat	43	24	6
3256–24	Washer – Flat	1	27	2
3256–24	Washer – Flat	36	27	4
3256–26	Washer – Flat	18	13	1
3256–26	Washer – Flat	4	29	3
3256–26	Washer – Flat	32	45	4
3256–26	Washer – Flat	47	54	8
3256–27	Washer – Flat	1	24	1
3256–56	Washer – Flat	30	21	8
3256–56	Washer – Flat	85	40	3
3256–56	Washer – Flat	44	47	2
3256–56	Washer – Flat	28	67	2
3256–69	Washer	83	26	2
3256–69	Washer	84	35	2
3258–19	Screw – Machine	46	14	2
3269–6	Washer – Backup	42	33	22
3269–15	Rivet – Pop	42	32	22
3269–25	Rivet – Pop	29	1	4
3269–25	Rivet – Pop	83	1	4
3269–25	Rivet – Pop	84	1	4
3269–25	Rivet – Pop	91	17	16
3269–25	Rivet – Pop	81	29	8
3272–1	Pin – Cotter	19	4	6
3272–1	Pin – Cotter	18	9	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3272–5	Pin – Cotter	6	6	1
3272–5	Pin – Cotter	4	43	1
3272–6	Pin – Cotter	72	4	1
3272–6	Pin – Cotter	6	9	2
3272–6	Pin – Cotter	19	10	2
3272–6	Pin – Cotter	32	14	2
3272–6	Pin – Cotter	36	22	2
3272–6	Pin – Cotter	46	47	1
3272–7	Pin – Cotter	9	23	2
3272–7	Pin – Cotter	81	45	1
3272–10	Pin – Cotter	7	16	1
3272–10	Pin – Cotter	9	18	1
3272–10	Pin – Cotter	36	26	2
3272–12	Pin – Cotter	88	2	4
3272–12	Pin – Cotter	7	6	1
3272–12	Pin – Cotter	75	34	6
3272–12	Pin – Cotter	78	35	2
3272–13	Pin – Cotter	75	26	2
3272–23	Pin – Cotter	78	18	4
3272–33	Pin – Cotter	85	24	2
3274–7	Screw – Cap Socket Hd.	36	18	8
3274–20	Screw – Hex. Socket Hd.	37	11	2
3274–86	Screw – Cap Socket Hd.	27	15	1
3290–133	Screw – Round Hd.	13	1	4
3290–133	Screw – Round Hd.	14	3	8
3290–133	Screw – Round Hd.	11	11	4
3290–134	Screw – Cap Hex. Hd.	43	13	4
3290–216	Washer – Bevel	75	9	12
3290–216	Washer – Bevel	44	25	4
3290–271	Rivet – Pop	44	46	4
3290–307	Pin – Cotter, Hair	6	25	2
3290–321	Screw – Cap Hex. Hd.	43	5	12
3290–321	Screw – Cap Hex. Hd.	72	20	1
3290–321	Screw – Cap Hex. Hd.	44	22	16
3290–321	Screw – Hex. Washer Hd.	42	14	20
3290–343	Pin – Cotter Hair	80	11	2
3290–378	Tie – Cable	11	*	25
3290–378	Tie – Cable	6	*	3
3290–378	Tie – Cable	82	*	2
3290–378	Tie – Cable	86	*	3
3290–378	Tie – Cable	91	*	24
3290–378	Tie – Cable	11	18	2
3290–378	Tie – Cable	78	41	1
3290–378	Tie–Cable	4	36	5
3290–384	Pin – Lynch	80	1	2
3290–384	Pin – Lynch	90	2	8
3290–392	Screw – HH	14	17	1
3290–495	Pin – Lynch	27	2	2
3296–2	Nut – Flange Lock	43	7	12
3296–2	Nut – Flange Lock	42	12	20
3296–2	Nut – Flange Lock	72	24	1
3296–2	Nut – Lock	83	2	6
3296–2	Nut – Lock	84	10	6
3296–2	Nut – Lock	13	15	2
3296–2	Nut – Lock	91	19	16
3296–2	Nut – Lock	11	21	6
3296–2	Nut – Lock	81	34	8
3296–3	Nut – Lock	36	29	2
3296–9	Nut – Lock	6	14	2
3296–23	Nut – Lock	18	14	1
3296–29	Nut – Lock	1	12	4
3296–29	Nut – Lock	2	17	4
3296–41	Nut – Lock	88	8	2
3296–42	Nut – Keps	18	1	3
3296–42	Nut – Lock	14	4	4
3296–49	Nut – Lock	93	2	1
3296–49	Nut – Lock	4	20	1
3296–53	Nut – Lock	80	16	4
3296–53	Nut – Lock	90	31	8
3296–54	Nut – Lock	1	4	4
3296–59	Nut – Lock	36	35	2
3296–68	Nut – Lock	78	1	2
3296–68	Nut – Lock	75	11	1
3296–68	Nut – Lock	90	14	2
3296–68	Nut Lock	85	35	2
32103–3	Nut – Wing	44	33	2
32104–16	Screw – Tapping	13	7	4
32105–1	Screw – Cap Hex. Hd.	13	17	2
32105–1	Screw – Machine	83	11	4
32105–1	Screw – Machine	84	16	4
32105–1	Screw – Machine	81	27	8
32105–1	Screw – Pan Hd.	91	21	16
32105–12	Screw – Hex. Socket Hd.	11	7	2
32105–13	Screw – Hex. Hd.	11	8	4
32107–11	Nut – Square	46	27	2
32108–103	Screw – Flat Hd.	81	18	4
32108–103	Screw – Machine Flat Hd.	89	9	4
32108–103	Screw – Machine Flat Hd.	85	25	4
32108–103	Screw – Machine Flat Hd.	28	40	4
32120–22	Ring – Retaining Internal	32	24	2
32120–47	Ring – Retaining	88	14	16
32120–47	Ring – Retaining	78	31	2
32120–64	Ring – Retaining	1	25	2
32120–72	Ring – Retaining	84	5	1
32120–72	Ring – Retaining	81	21	1
32120–84	Ring – Retaining External	32	33	2
32121–4	Pin – Roll	1	13	1
32121–4	Pin – Roll	2	18	1
32121–4	Pin – Roll	83	28	2
32121–4	Pin – Roll	84	37	2
32121–6	Pin – Roll	83	18	2
32121–6	Pin – Roll	84	21	2
32121–34	Pin – Roll	89	17	2
32121–34	Pin – Roll	77	18	1
32121–49	Pin – Roll	88	17	2
32121–110	Pin – Roll	75	4	1
32121–110	Pin – Roll	90	17	2
32121–110	Pin – Roll	78	23	2
32121–110	Pin – Roll	85	27	2
32121–110	Pin Roll	89	24	4
32122–24	Screw – Cap Hex. Hd.	22	3	5
32122–28	Screw – Truss Hd.	83	5	2
32122–28	Screw – Truss Hd.	84	14	2
32122–53	Screw – Pan Head	1	7	4
32122–53	Screw – Phil. Truss Hd.	11	9	2
32127–11	Nut – Flexlok	7	27	2
32127–11	Nut – Flexlok	37	37	2
32128–16	Nut – HHF	80	28	8
32128–16	Nut – HHF	90	47	32
32128–19	Nut – Lock Flange Hd.	1	21	2
32128–20	Nut – Flange Lock	44	19	5
32128–20	Nut – Flange Lock	4	22	2
32128–20	Nut – Flange Lock	11	27	2
32128–20	Nut – Flange Lock	46	30	4
32128–20	Nut – Lock	9	13	1
32128–20	Nut – Lock	6	17	3
32128 –20	Nut – Lock	81	19	4
32128–20	Nut – Lock	30	37	4
32128–21	Nut – Flange Lock	37	2	2
32128–21	Nut – Flange Lock	91	4	12
32128–21	Nut – Flange Lock	93	9	6
32128–21	Nut – Flange Lock	81	10	6
32128–21	Nut – Flange Lock	83	10	6
32128–21	Nut – Flange Lock	84	22	6
32128–21	Nut – Lock	7	8	3
32128–23	Nut – Flange Lock	80	3	4
32128–23	Nut – Flange Lock	90	7	20
32128–23	Nut – Flange Lock	83	8	3
32128–23	Nut – Flange Lock	91	25	6
32128–23	Nut – Flange Lock	84	26	4
32128–23	Nut – Flange Lock	4	34	3
32128–23	Nut – Flange Lock	81	35	4
32128–23	Nut – Lock	75	8	12
32128–25	Nut – Lock	25	19	4
32128–25	Nut – Lock	36	20	2
32128–43	Nut – Lock	80	19	16

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
32128–43	Nut – Lock	90	25	32
32128–45	Nut – Lock	90	8	8
32136–2	Nut – Castle	88	1	4
32136–2	Nut – Castle	75	41	2
32136–2	Nut – Slotted	78	36	2
32136–13	Nut – Castle	75	33	4
32144–1	Screw – Hex. Hd.	7	26	2
32144–1	Screw – Hex. Hd.	37	30	2
32144–11	Screw – Hex. Flange Hd.	42	21	8
32144–11	Screw – Thread Forming	86	60	4
32144–19	Screw – Round Hd.	13	24	4
32144–64	Screw – Hex. Washer Hd.	4	13	4
32144–69	Screw – Cap, Hex. Hd.	45	54	6
32144–96	Screw – Mach. Round Hd.	4	42	3
32149–2	Nut – Keps	42	2	16
32149–2	Nut – Keps	9	4	4
32149–2	Nut – Keps	19	7	2
32149–2	Nut – Keps	72	8	3
32149–2	Nut – Keps	43	16	16
32149–2	Nut – Keps	7	20	2
32149–2	Nut – Keps	46	33	5
32149–2	Nut – Keps	11	36	3
32149–2	Nut – Keps	28	55	2
32149–7	Nut	43	30	4
32149–7	Nut – Keps	11	23	3
32151–10	Ring – Retaining	75	14	2
32151–10	Ring – Retaining	89	21	2
32151–48	Ring – Retaining	80	8	4
32151–100	Ring – Retaining	36	2	2
32152–1	Nut	43	31	2
32152–1	Nut – Lock	7	2	2
32152–1	Nut – Lock	85	3	5
32152–1	Nut – Lock	89	7	4
32152–1	Nut – Lock	6	12	4
32152–1	Nut – Lock	30	13	8
32152–1	Nut – Lock	72	26	3
32152–1	Nut – Lock	27	36	1
32152–1	Nut – Lock	24	41	3
32152–1	Nut – Lock	28	42	4
32152–1	Nut – Lock	45	57	2
32152–1	Nut – Lock	47	57	2
32152–2	Nut – Lock	85	5	6
32152–2	Nut – Lock	25	16	4
32152–2	Nut – Lock	72	22	4
32152–2	Nut – Lock	44	27	7
32152–2	Nut – Lock	76	47	2
32152–4	Nut – Lock	89	1	4
32152–4	Nut – Lock	30	12	6
32152–4	Nut – Lock	6	15	2
32152–4	Nut – Lock	37	27	2
32152–4	Nut – Lock	28	45	2
32152–4	Nut Lock	85	23	3
32153–3	Nut – Lock	37	44	1
32153–5	Nut – Lock	44	26	2
32153–5	Nut – Lock	46	41	8
32153–6	Nut – Lock	85	4	22
32153–6	Nut – Lock	78	20	2
32153–6	Nut Lock	42	24	2
33004–00	Nut – HWH	2	23	2
33015–00	Nut	2	22	2
33016–00	Nut – Hex.	92	1	4
33096–00	Washer – Flat	92	2	4
33104–025	Screw – HHF	2	21	2
340–2	Fitting – Hydraulic Straight	19	23	3
340–2	Fitting – Hydraulic Straight	21	26	5
340–2	Fitting – Hydraulic Straight	91	11	2
340–3	Fitting – Hydraulic Straight	19	13	2
340–3	Fitting – Hydraulic Straight	23	22	1
340–4	Fitting – Hydraulic Straight	21	23	2
340–8	Fitting – Hydraulic Straight	91	6	4
340–9	Fitting – Hydraulic St. L.H.	32	10	1
340–9	Fitting – Hydraulic Straight	73	18	7
340–15	Fitting – Hydraulic Elbow	37	20	3
340–22	Fitting – Hydraulic Tee	24	2	1
340–57	Fitting – Hydraulic Straight	78	45	2
340–65	Seal – O–Ring	73	12	2
340–65	Seal – O–Ring	24	22	1
340–65	Seal – O–Ring	44	28	3
340–68	Fitting – Hydraulic Bulk. Tee	78	14	1
340–68	Fitting – Hydraulic Bulkhead	75	2	2
340–70	Nut – Bulkhead	27	4	6
340–70	Nut – Bulkhead	78	13	1
340–70	Nut – Bulkhead	85	15	10
340–70	Nut – Bulkhead	76	48	2
340–71	Fitting – Hydraulic Bulkhead	27	7	1
340–74	Nut – Bulkhead	85	11	4
340–77	Fitting – Hydraulic Elbow	78	19	4
340–77	Fitting – Hydraulic Elbow	85	41	4
340–78	Nut – Bulkhead	30	34	4
340–79	Fitting – Hydraulic 90˚	24	23	1
340–82	Fitting – Hydraulic Elbow	32	4	2
340–86	Fitting – Hydraulic Tee	19	15	2
340–91	Fitting – Hydraulic Straight	32	6	2
340–92	Fitting – Hydraulic Straight	21	7	2
340–92	Fitting – Hydraulic	28	56	1
340–94	Tee – Hydraulic	21	35	1
340–105	Fitting – Hydraulic Elbow	38	55	1
340–124	Fitting – Hydraulic Straight	44	16	1
340–125	Fitting – Hydraulic	28	59	1
340–126	Nut – Bulkhead	27	3	2
340–127	Nut – Bulkhead	27	29	2
340–128	Nut – Bulkhead	30	3	2
340–129	Fitting – Hydraulic Elbow	73	13	1
340–130	Fitting – Hydraulic 90˚	23	18	1
340–130	Fitting – Hydraulic Elbow	38	54	1
340–131	Fitting – Hydraulic Elbow	37	16	1
340–132	Fitting – Hydraulic Elbow	75	44	4
340–133	Fitting – Hydraulic Straight	4	32	3
340–134	Fitting – Hydraulic Elbow	37	48	1
340–135	Seal – O–Ring	25	7	2
340–136	Seal – O–Ring	24	37	1
340–142	Fitting – Hydraulic Elbow	81	4	2
340–142	Fitting – Hydraulic Elbow	73	15	1
340–142	Fitting – Hydraulic Elbow	32	43	2
340–148	Fitting – Hydraulic Tee R.H.	32	*	1
340–150	Cap – Hydraulic	24	38	1
353–375	Fitting – Hydraulic 90˚	27	12	2
353–431	Fitting – Hydraulic 45˚	73	42	2
353–536	Fitting – Fuel 90˚ Elbow	22	16	1
353–566	Tee – Hydraulic	21	16	1
353–781	Fitting – Fuel Elbow	70	3	2
353–947	Cap – Fitting	29	2	8
353–988	Plug	73	39	4
353–989	Plug	73	6	1
353–990	Plug	73	34	1
353–990	Plug – Hose	21	3	2
353–991	Plug	73	31	30
353–991	Plug – Hole	21	12	8
353–992	Flange – Fitting	25	6	4
353–994	Adapter	7	10	1
353–997	Fitting – Hydraulic Bulkhead	29	3	8
354–42	Flange – Half	25	10	2
354–95	Fitting	45	51	1
354–104	Ring – Backup	36	5	2
354–105	Ring – Backup	36	10	2

*Not Illustrated

TABLE OF CONTENTS

Description	Page
Seat Assembly	1
Seat Pivot & Bellows Assembly	2
Seat Suspension Assembly	3
Steering Tower Assembly	4
Power Steering Valve Assembly No. 92−9748	5
Steering Brake Assembly	6
Service Brake Assembly	7
Brake System Master Cylinder No. 69−2640	8
Traction Pedal & Cruise Control Assembly	9
Tool Box Assembly	10
Control Box Assembly	11
Diagnostic Display Assembly	12
Upper Control Panel Assembly	13
Lower Control Panel Assembly	14
Electrical Schematic	15
Controller Electrical Schematic	16
Operators Control Panel Electrical Schematic	17
Throttle Assembly	18
Lift Valve Installation Assembly	19
Lift Valve Assembly No. 69−1780	20
Counterbalance Manifold Assembly	21
Fuel Tank Assembly	22
Hydraulic Tank Assembly	23
Hydraulic Filter Assembly	24
Hydraulic Pump Installation Assembly	25
Double Gear Pump No. 69−2050	26
Frame Assembly	27−28
Hydraulic System Diagnostic Panel Assembly	29
Hydraulic Line Clamps Assembly	30
Hydraulic Schematic	31
Front Wheel Assembly	32−33
Wheel Motor No. 69−3050	34
Planetary Gear Drive Assembly No. 69−1730	35
Wheel Brake Assembly	36
Variable Displacement Pump Installation	37−38
Gear Pump & Flow Divider No. 69−2220	39
Variable Displacement Pump No. 93−9322	40−41
Cowl Assembly	42
Hood Assembly	43
Radiator & Oil Cooler Assembly	44−45
Engine Installation Assembly	46−47
Starter & Alternator Installation Assembly	48
Starter Motor Assembly No. 70−5860	49
Alternator Assembly No. 70−5760	50
Water Pump Assembly	51
Timing Gear Case Assembly	52
Rocker Cover & Cylinder Head Assembly	53
Valve & Camshaft Assembly	54
Crankcase Assembly	55
Piston, Connecting Rod, Crankshaft & Flywheel	56
Oil Pump, Breather & Filter	57
Flywheel Housing & Oil Pan Assembly	58
Intake & Exhaust Manifold Assembly	59
Turbocharger Assembly No. 70−6430	60
Turbocharger Oil Pipe Assembly	61
Fuel System Assembly	62−63
Fuel Injection Pump Assembly	64−65
Governor Assembly	66−67
Fuel Feed Pump Assembly No. 70−5700	68
Air Cleaner Assembly No. 69−1890	69
Fuel Filter Assembly	70
Solenoid Valve Assembly No. 85−6230	71
Battery Frame Assembly	72
PTO Manifold Assembly	73−74
Rear Axle Assembly	75−76
Hydraulic Cylinder Assembly No. 69−1960	77
Front Lift Arm Assembly	78
Hydraulic Cylinder Assembly No. 92−4971	79
Center Deck Model No. 30592 Carrier Frame Assembly	80
Center Deck Model No. 30592	81−82
Center Deck Model No. 30592 Left Wing Assembly	83
Center Deck Model No. 30592 Ring Wing Assembly	84
Wing Deck Lift Assembly	85−86
Hydraulic Cylinder Assembly No. 74−2170	87
Wing Deck Latch Assembly	88
Wing Deck Lift Arm Assembly	89
Wing Deck Model No. 30591 L.H. & 30593 R.H.	90
Wing Deck Model No. 30591 L.H. & 30593 R.H. Drive Assembly	91
Hydraulic Motor Assembly No. 93−4363	92
Spindle Assembly	93
10” & 13” Foam Filled Tire Assemblies (Optional)	94
TORO Part Number Index	95−111

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.