Form No. 3372-165 Rev A

TORO®

Count on it.

Parts Catalog

# Commercial Walk-Behind Mower

## Fixed Deck, Pistol Grip, Gear Drive with 48in TURBO FORCE® Cutting Unit

**Model No. 39638—Serial No. 312000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3372-165* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Engine and Exhaust Assembly . . . . . 4
Fuel System Assembly . . . . . 6
Frame and Transmission Assembly . . . . . 7
Drive Wheel and Brake Assembly . . . . . 9
Handle Control Assembly . . . . . 11
Handle Assembly . . . . . 12
Deck Assembly . . . . . 13
Deck Decal Assembly No. 110-4909 . . . . . 14
Deflector Assembly No. 110-0758 . . . . . 15
Sheave, Spindle and Blade Assembly . . . . . 16
Idler Assembly . . . . . 17
Caster Assembly . . . . . 18
Attachments and Accessories . . . . . 19

**© 2012—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

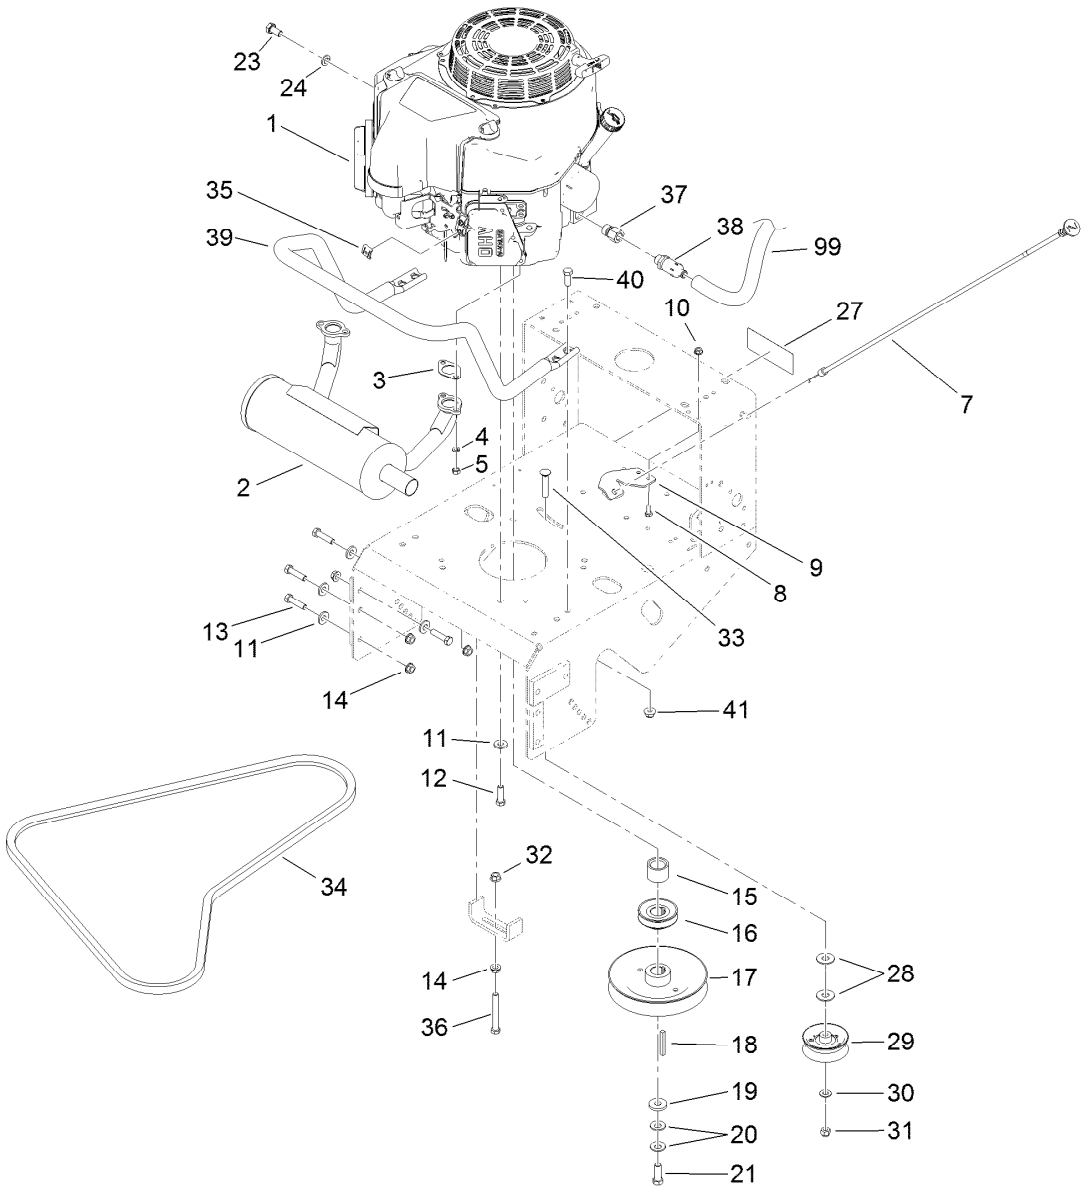



# Engine and Exhaust Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki, Fs481V-As06 ●■ |
| 2 | 116-3734 | 1 | Muffler-Horizontal, Offset |
| 3 | 1-653313 | 2 | Gasket-Exhaust |
| 4 | 114-3550 | 4 | Washer-Lock, Spring |
| 5 | 114-3549 | 4 | Nut |
| 7 | 103-1796 | 1 | Cable-Choke |
| 8 | 321-3 | 2 | Screw-HH |
| 9 | 103-1797-01 | 1 | Bracket-Cable, Choke |
| 10 | 32128-33 | 2 | Nut-HF |
| 11 | 98-5975 | 12 | Washer-Belleville |
| 12 | 323-7 | 4 | Screw-HH |
| 13 | 323-8 | 8 | Screw-HH |
| 14 | 3290-357 | 9 | Nut-HHF, Whiz |
| 15 | 1-633453 | 1 | Spacer-Clutch |
| 16 | 103-1666 | 1 | Sheave-Transmission |
| 17 | 110-4890 | 1 | Pulley ASM |
| 18 | 103-4177 | 1 | Key |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 1-373034 | 1 | Washer |
| 20 | 1-603610 | 2 | Washer-Spring |
| 21 | 116-3702 | 1 | Screw-HH |
| 23 | 33114-016 | 1 | Screw-HH |
| 24 | 3253-4 | 1 | Washer-Lock |
| 27 | 98-0776 | 1 | Decal-Caution |
| 28 | 3256-5 | 2 | Washer-Flat |
| 29 | 1-323285 | 1 | Pulley-Idler, Flat |
| 30 | 3256-24 | 1 | Washer-Flat |
| 31 | 3296-39 | 1 | Nut-Lock, NI |
| 32 | 32128-21 | 1 | Nut-HF |
| 33 | 3231-6 | 1 | Screw-CARR |
| 34 | 110-0543 | 1 | Belt-V |
| 35 | 81-1690 | 1 | Clamp-Cable |
| 36 | 323-14 | 1 | Screw-HH |
| 37 | 103-1966 | 1 | Adapter |
| 38 | 92-6877 | 1 | Valve-Drain, Oil |
| 39 | 116-6278-03 | 1 | Guard-Muffler |

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

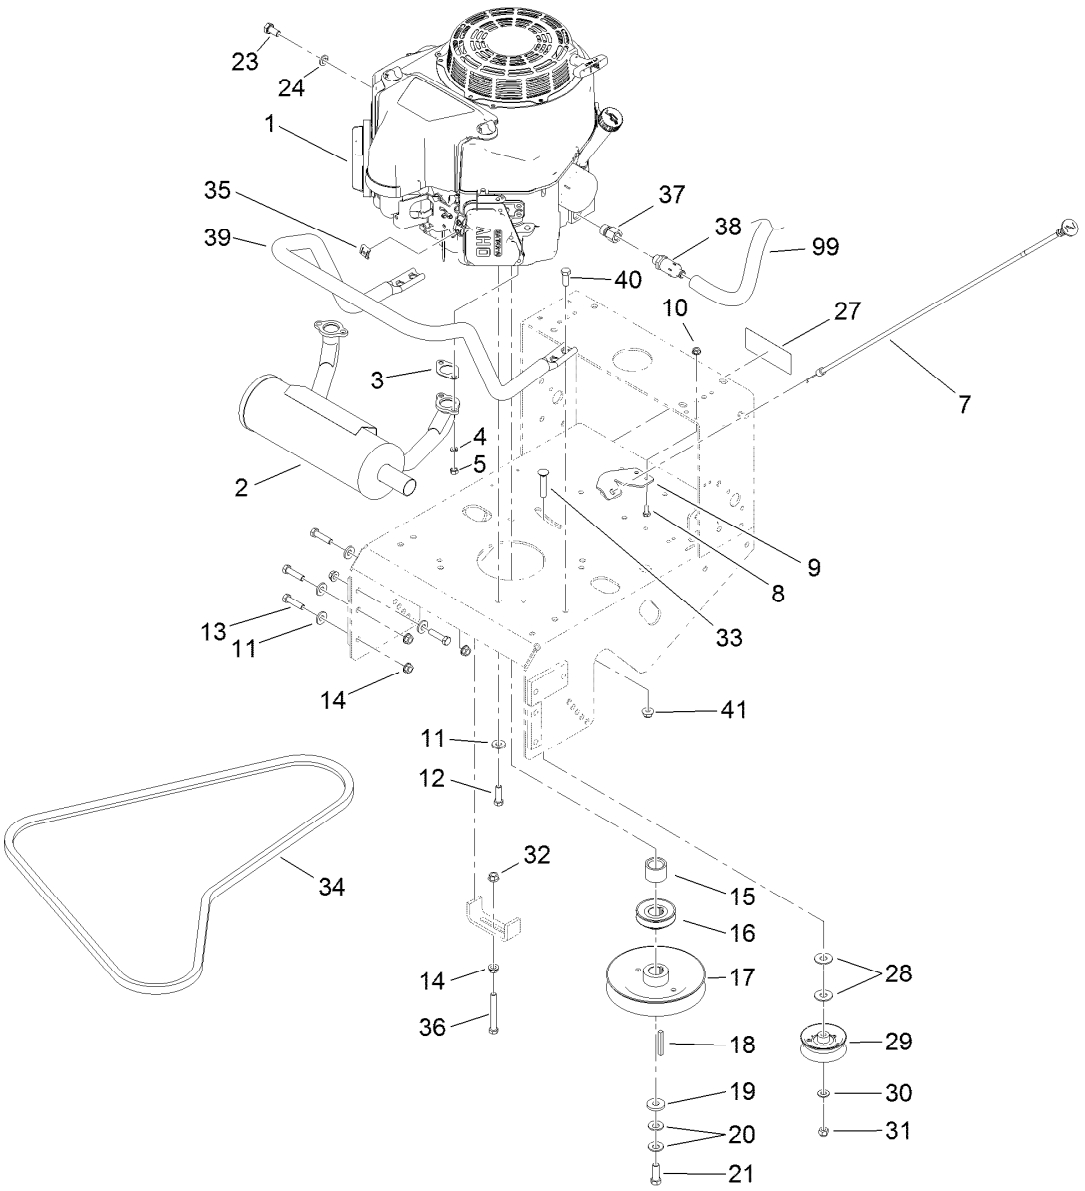



# Engine and Exhaust Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 40 | 323-6 | 4 | Screw-HH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 41 | 104-8301 | 4 | Nut-Flange, NI |
| 99 | 103-1964 | 1 | Hose-Drain, Oil |

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

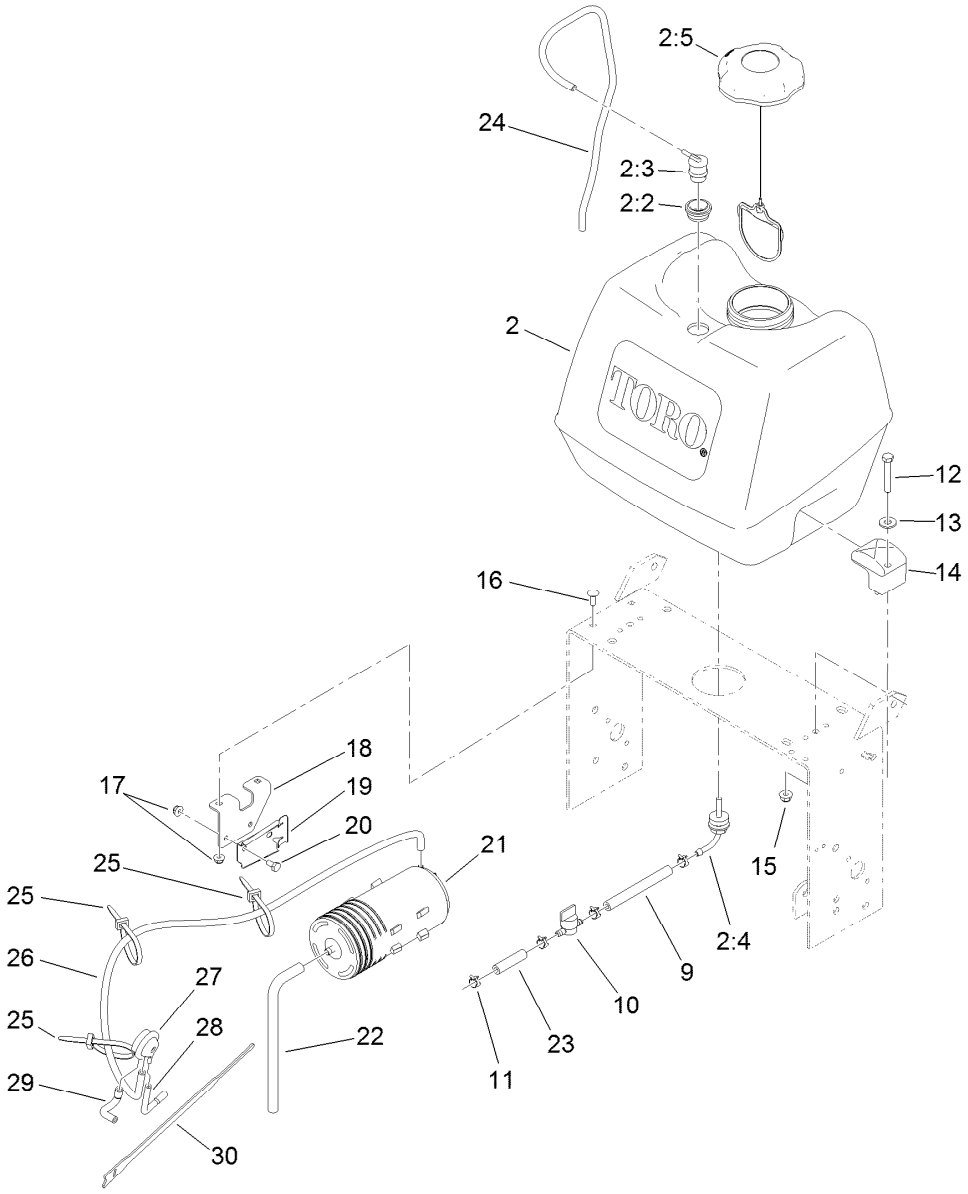


# Fuel System Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 119-7899 | 1 | Fuel Tank ASM |
| 2:2 | 114-0284 | 1 | Grommet |
| 2:3 | 114-0285 | 1 | Valve-Rollover |
| 2:4 | 103-2605 | 1 | Fitting-Fuel, Bulkhead |
| 2:5 | 120-5461 | 1 | Cap-Fuel, Ratcheting |
| 9 | 109-0650 | 1 | Hose-Fuel |
| 10 | 1-603770 | 1 | Valve-Fuel |
| 11 | 2412-98 | 4 | Clamp-Hose |
| 12 | 322-10 | 2 | Screw-HH |
| 13 | 3256-3 | 2 | Washer-Flat |
| 14 | 107-4543 | 2 | Clamp |
| 15 | 104-8300 | 2 | Nut-Flange, NI |
| 16 | 3229-1 | 2 | Bolt-CARR |
| 17 | 104-7201 | 4 | Nut-HF |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 18 | 115-4486-01 | 1 | Bracket-Canister, Carbon |
| 19 | 114-0292 | 1 | Bracket-Canister, Carbon |
| 20 | 321-2 | 2 | Screw-HH |
| 21 | 117-1221 | 1 | Canister-Carbon, 800Cc |
| 22 | 115-0962 | 1 | Hose-Vent, Canister |
| 23 | 99-9415 | 1 | Hose-Fuel |
| 24 | 114-0286 | 1 | Hose-Vent |
| 25 | 3290-378 | 3 | Tie-Cable |
| 26 | 116-2231 | 1 | Hose-Vent, Formed |
| 27 | 116-2232 | 1 | Valve-Control, Vacuum |
| 28 | 119-8501 | 1 | Hose-Vent, Formed |
| 29 | 119-8502 | 1 | Hose-Vent, Formed |
| 30 | 116-2469 | 1 | Strap-Velcro, Cable Tie |

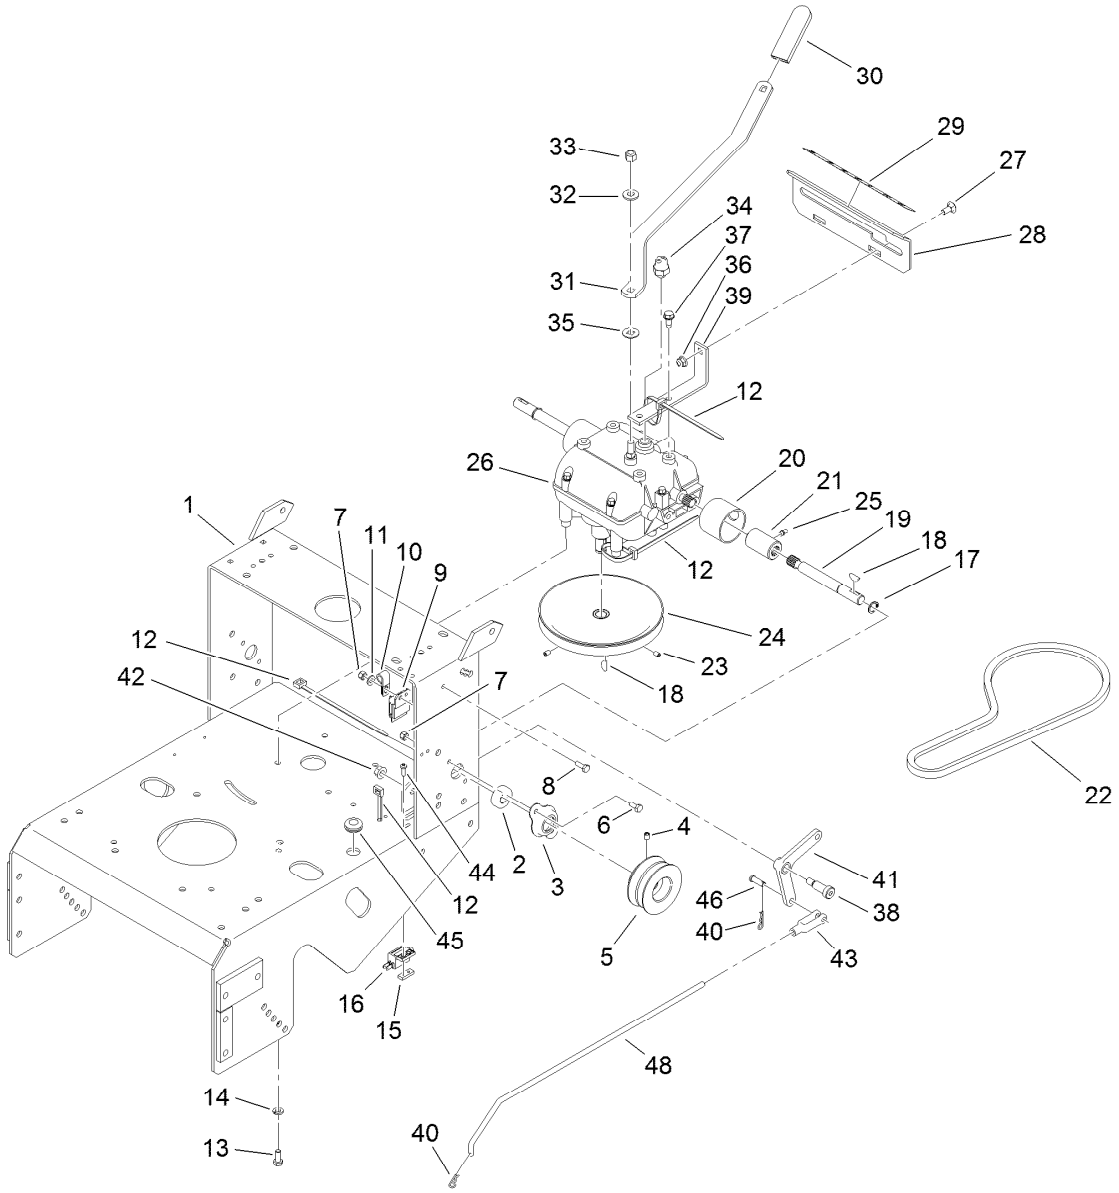


# Frame and Transmission Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-6084-01 | 1 | Gear Frame ASM |
| 2 | 1-323252 | 2 | Bearing-Shaft |
| 3 | 1-323254 | 2 | Flange-Output |
| 4 | 3246-18 | 2 | Setscrew |
| 5 | 103-6511 | 2 | Sheave-Transmission |
| 6 | 321-3 | 4 | Screw-HH |
| 7 | 3296-42 | 5 | Nut-Lock, NI |
| 8 | 321-4 | 1 | Screw-HH |
| 9 | 1-323430 | 1 | Module-Interlock |
| 10 | 1-513762 | 1 | Clip-Loom |
| 11 | 3256-22 | 1 | Washer-Flat |
| 12 | 1-303335 | 3 | Tie-Plastic |
| 13 | 322-3 | 4 | Screw-HH |
| 14 | 1-805005 | 4 | Washer-Lock |
| 15 | 1-633181 | 1 | Plate-Tapped |
| 16 | 1-513051 | 1 | Switch-Open, Normally |
| 17 | 32151-62 | 2 | Ring-Retaining |
| 18 | 3257-5 | 3 | Key-Woodruff |
| 19 | 1-323502 | 2 | Shaft-Transmission |
| 20 | 51-4220 | 2 | Guard-Coupler |
| 21 | 1-323680 | 2 | Coupler |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 22 | 1-323630 | 1 | V-Belt |
| 23 | 3245-41 | 2 | Screw-HSH |
| 24 | 1-323278 | 1 | Sheave-Transmission |
| 25 | 302-19 | 2 | Fitting-Grease |
| 26 | 1-323500 | 1 | Transmission |
| 27 | 3230-1 | 2 | Bolt-CARR |
| 28 | 1-323387-03 | 1 | Plate-Shift |
| 29 | 105-4104 | 1 | Decal-Speed, Ground |
| 30 | 1-303020 | 1 | Grip-Lever |
| 31 | 98-3274-03 | 1 | Lever-Shift |
| 32 | 98-5975 | 1 | Washer-Belleville |
| 33 | 3296-6 | 1 | Nut-Lock |
| 34 | 1-303282 | 1 | Switch-Start, Neutral |
| 35 | 1-323379 | 1 | Washer |
| 36 | 104-8300 | 2 | Nut-Flange, NI |
| 37 | 9264964 | 4 | Screw-HWH, Thread Cut |
| 38 | 1-603403 | 1 | Bolt-Shoulder |
| 39 | 1-323389-03 | 2 | Bracket-Plate, Shift |
| 40 | 1-806003 | 2 | Pin-Cotter, Hair |
| 41 | 1-303186 | 1 | Bellcrank |
| 42 | 3290-357 | 1 | Nut-HHF, Whiz |

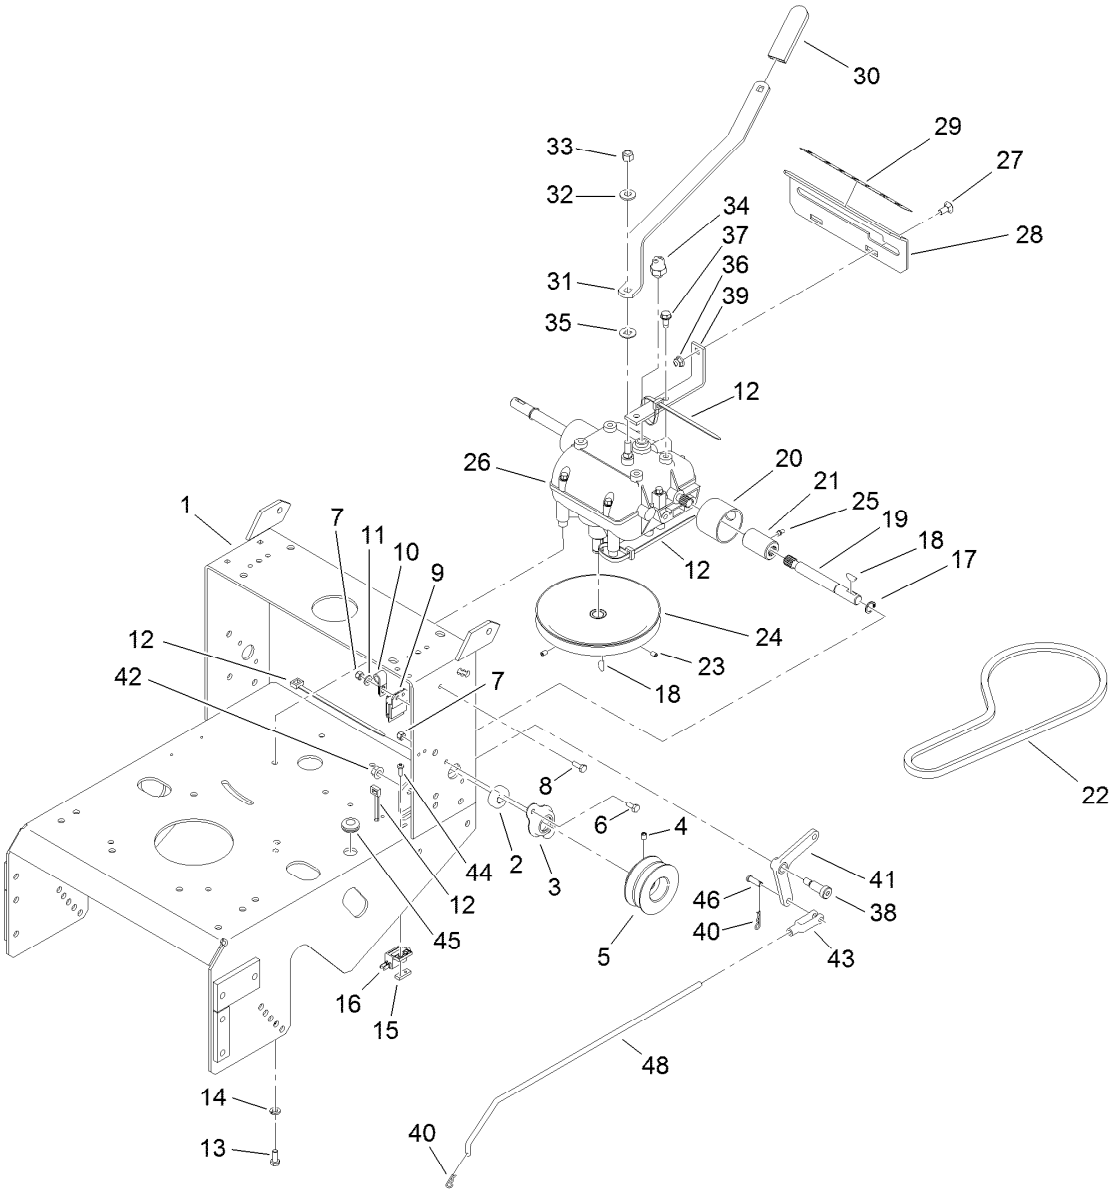


# Frame and Transmission Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 43 | 1-303105 | 1 | Yoke-Adjustable |
| 44 | 3290-500 | 2 | Screw-PPH |
| 45 | 1-543296 | 1 | Grommet |
| 46 | 1-808280 | 1 | Pin-Clevis |
| 48 | 1-323303 | 1 | Linkage-Arm |

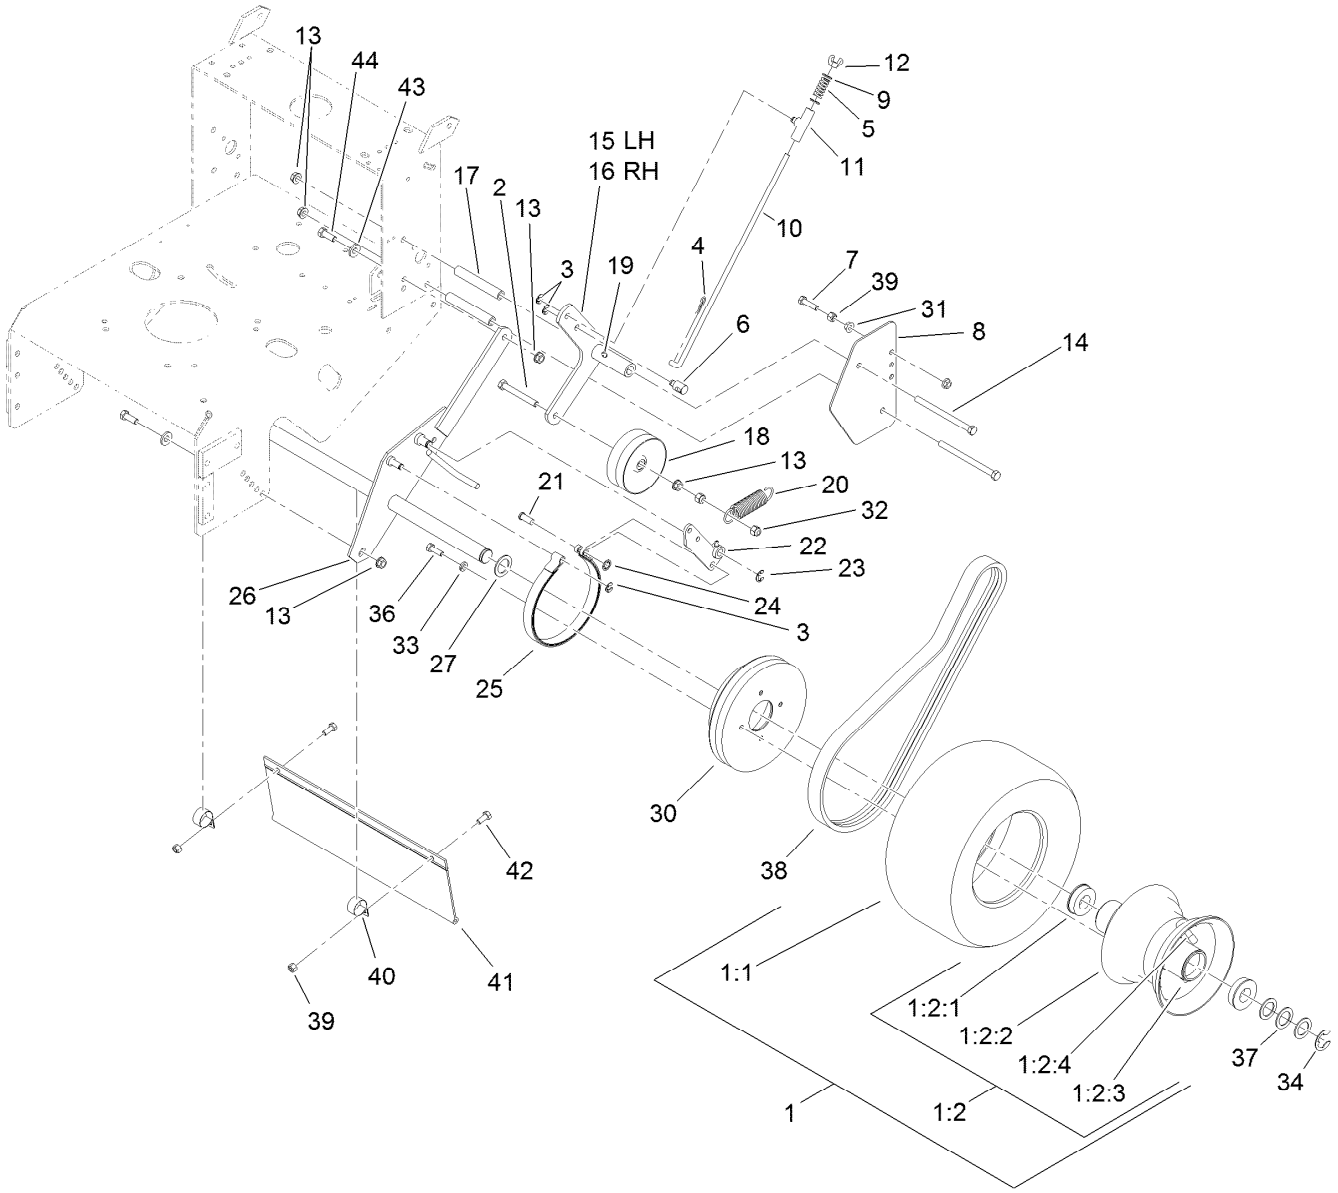



# Drive Wheel and Brake Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-323719 | 2 | Wheel And Tire ASM |
| 1:1 | 1-323720 | 1 | Tire-Turfmaster |
| 1:2 | 1-323328 | 1 | Wheel And Hub ASM |
| 1:2:1 | 1-323329 | 2 | Bearing-Flanged |
| 1:2:2 | | 1 | Rim ASM ● |
| 1:2:3 | | 1 | Fitting-Grease ● |
| 1:2:4 | | 1 | Stem-Valve ● |
| 2 | 99-8664 | 2 | Screw-HH |
| 3 | 32151-47 | 6 | Ring-Retaining |
| 4 | 1-806003 | 2 | Pin-Cotter, Hair |
| 5 | 1-323245 | 2 | Spring-Compression |
| 6 | 103-1864 | 2 | Swivel-Lever, Drive |
| 7 | 116-3515 | 2 | Screw-HH, Special |
| 8 | 1-323287-01 | 2 | Shield-Wheel, Drive |
| 9 | 3256-23 | 4 | Washer-Flat |
| 10 | 1-323548 | 2 | Linkage-Brake |
| 11 | 110-5866 | 2 | Swivel-Brake |
| 12 | 1-513959 | 2 | Wingnut-Nylock |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 3290-357 | 10 | Nut-HHF, Whiz |
| 14 | 323-39 | 4 | Screw-HH |
| 15 | 116-7542-03 | 1 | LH Idler Arm ASM |
| 16 | 116-7543-03 | 1 | RH Idler Arm ASM |
| 17 | 1-323283 | 4 | Spacer-Shield |
| 18 | 119-7887 | 2 | Pulley-Idler |
| 19 | 302-19 | 2 | Fitting-Grease |
| 20 | 1-603402 | 2 | Spring-Extension |
| 21 | 1-323307 | 2 | Pin-Clevis |
| 22 | 103-1611-03 | 2 | Arm-Brake |
| 23 | 32120-47 | 2 | Ring-Retaining, External |
| 24 | 1-803051 | 2 | Nut-Push |
| 25 | 1-323262 | 2 | Band-Brake |
| 26 | 1-322117-03 | 1 | Axle |
| 27 | 1-543436 | 2 | Washer-Spacer |
| 30 | 109-4359 | 2 | Drum And Sheave ASM |
| 31 | 32128-20 | 4 | Nut-HF |
| 32 | 3296-39 | 4 | Nut-Lock, NI |

● Not serviced separately

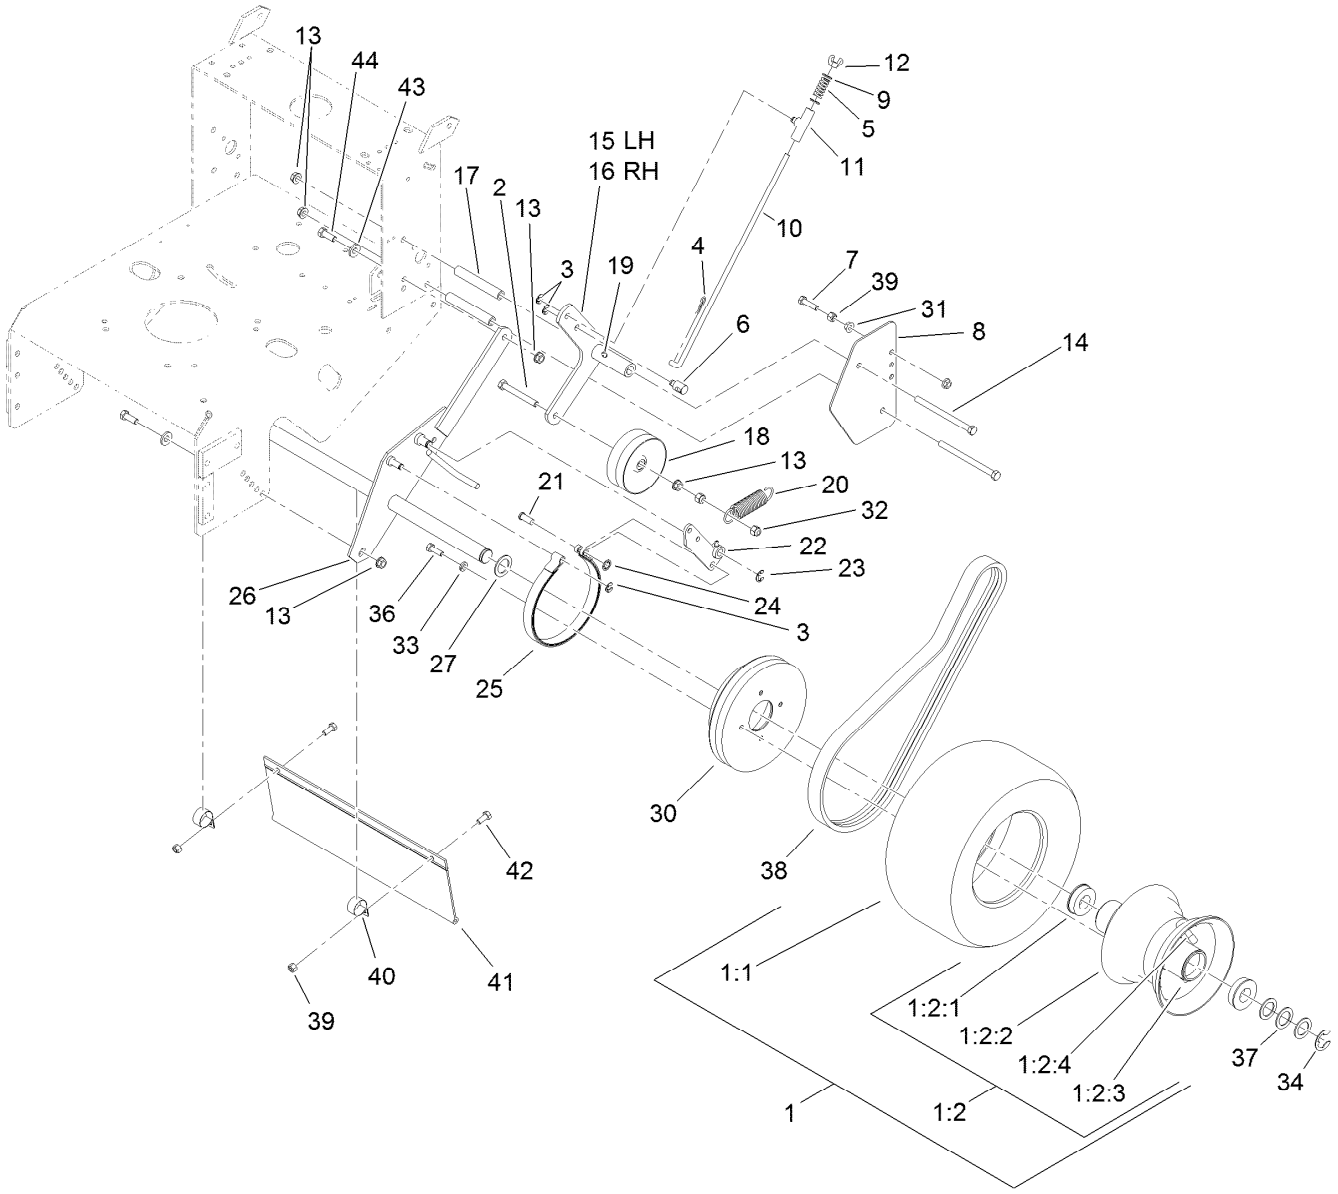



# Drive Wheel and Brake Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 33 | 1-805005 | 8 | Washer-Lock |
| 34 | 1-808519 | 2 | Ring-Snap |
| 36 | 322-5 | 8 | Screw-HH |
| 37 | 1-523157 | 6 | Washer-Spacer |
| 38 | 1-323631 | 2 | V-Belt |
| 39 | 3296-29 | 4 | Nut-Lock, NI |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 40 | 2412-104 | 2 | Clamp-R |
| 41 | 98-3259 | 1 | Shield-Trailing |
| 42 | 322-3 | 2 | Screw-HH |
| 43 | 98-5975 | 4 | Washer-Belleville |
| 44 | 323-6 | 4 | Screw-HH |

● Not serviced separately

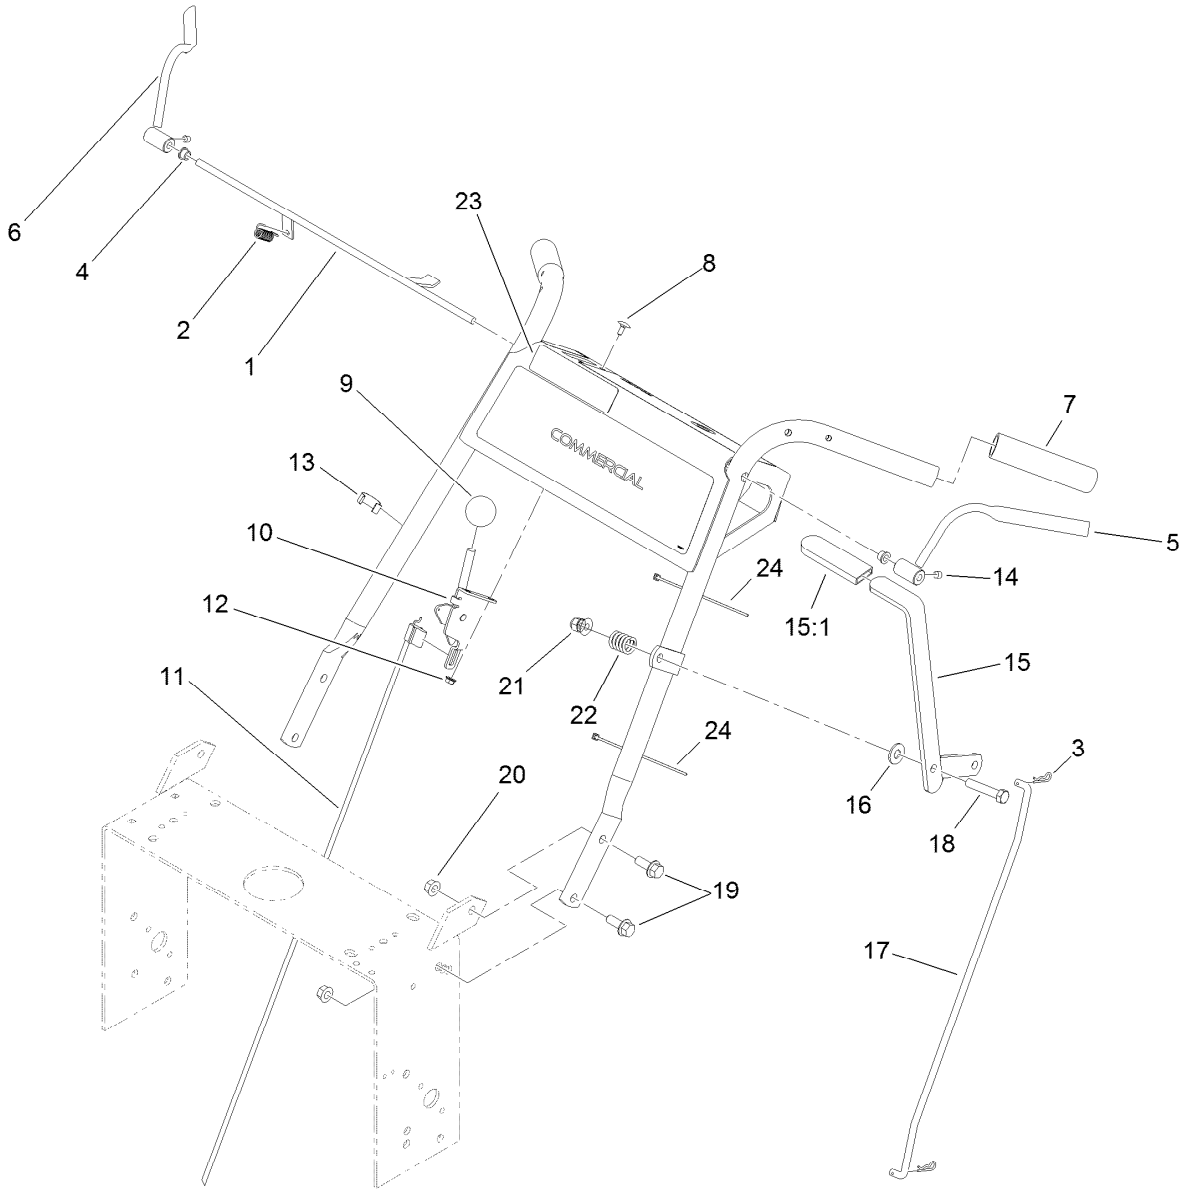


# Handle Control Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 106-2717-03 | 1 | Rod-Control, Operator Presence |
| 2 | 1-303363 | 1 | Spring-Extension |
| 3 | 1-806003 | 2 | Pin-Cotter, Hair |
| 4 | 1-303365 | 2 | Bushing-Nylon |
| 5 | 106-5485 | 1 | LH Operator Presence Control Lever ASM |
| 6 | 106-5486 | 1 | RH Operator Presence Control Lever ASM |
| 7 | 104-9838 | 2 | Grip-Foam |
| 8 | 1-807513 | 2 | Bolt-CARR |
| 9 | 1-603175 | 1 | Knob-Ball |
| 10 | 110-5547 | 1 | Control Lever ASM |
| 11 | 119-1823 | 1 | Cable-Control, Throttle |
| 12 | 32128-17 | 2 | Nut-Lock, Flange |
| 13 | 1-303088 | 1 | Clip-Cable |
| 14 | 1-803322 | 2 | Screw-Set |
| 15 | 116-6331 | 1 | Lever ASM |
| 15:1 | 1-303020 | 1 | Grip-Lever |
| 16 | 3256-4 | 1 | Washer-Flat |
| 17 | 1-323298 | 1 | Linkage-Blade, Upper |
| 18 | 323-10 | 1 | Screw-HH |
| 19 | 32128-21 | 4 | Nut-HF |
| 20 | 3234-11 | 4 | Screw-HHF |
| 21 | 104-8301 | 1 | Nut-Flange, NI |
| 22 | 1-303160 | 1 | Spring-Compression |
| 23 | 117-2718 | 1 | Decal-Arrester, Spark |
| 24 | 1-303287 | 2 | Tie-Cable |

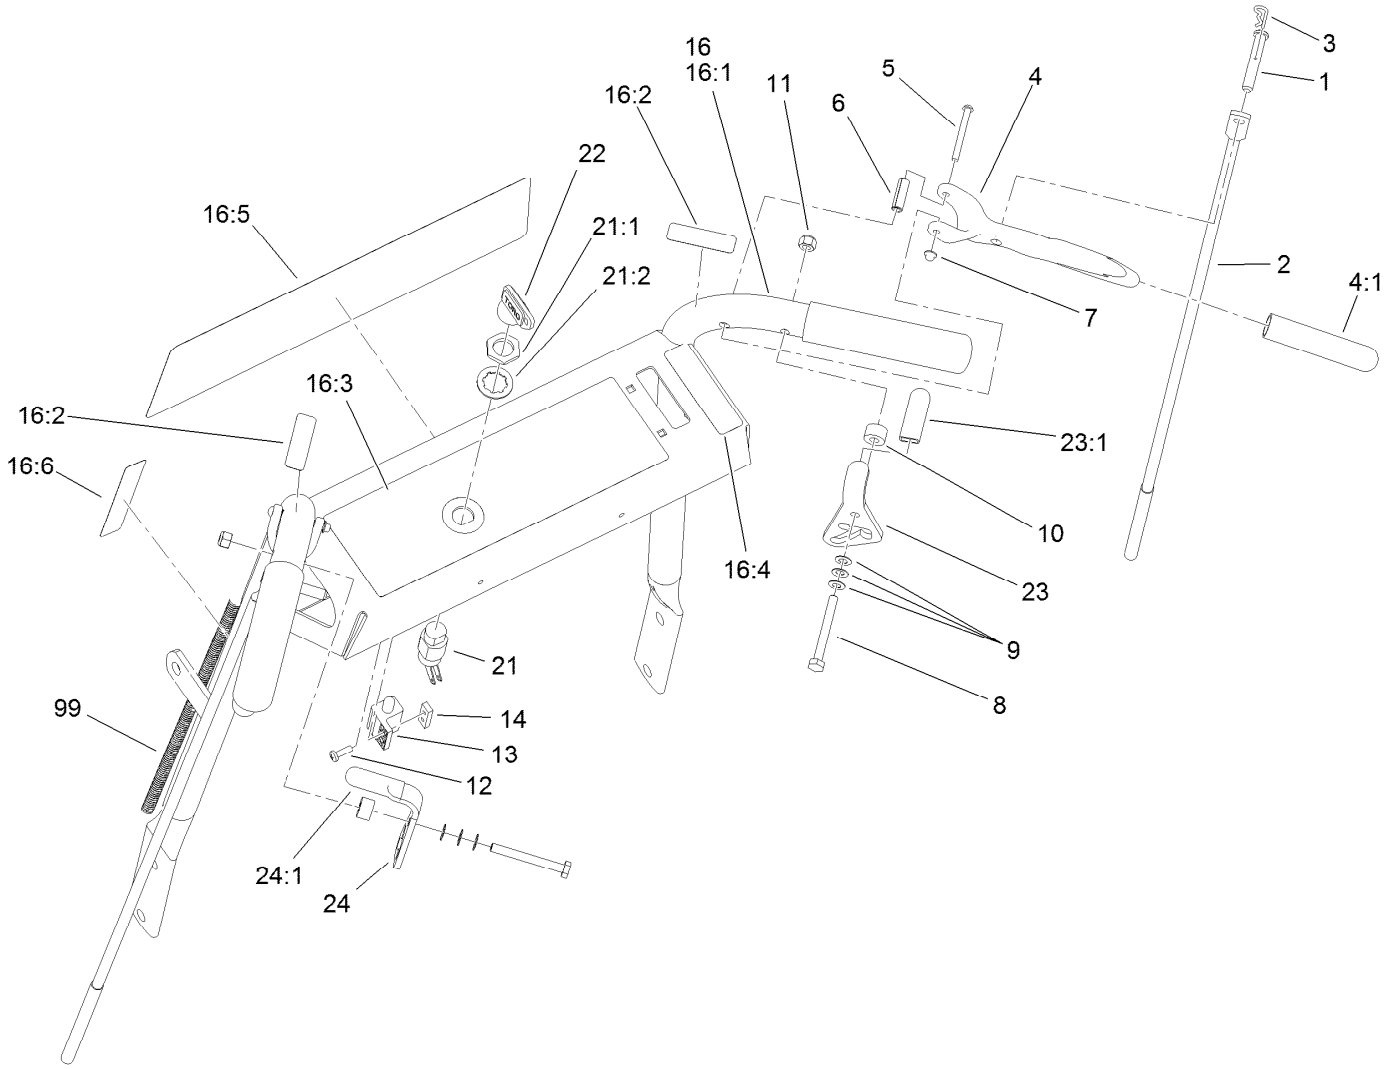



# Handle Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-808286 | 2 | Pin-Clevis |
| 2 | 1-323359 | 2 | Linkage-Wheel, Drive |
| 3 | 1-806003 | 2 | Pin-Cotter, Hair |
| 4 | 1-302006 | 2 | Drive Lever ASM |
| 4:1 | 1-303021 | 1 | Grip-Lever, Drive |
| 5 | 1-808250 | 2 | Pin-Lever, Drive |
| 6 | 1-806340 | 2 | Pin-Roll |
| 7 | 1-803001 | 2 | Nut |
| 8 | 321-18 | 2 | Screw-HH |
| 9 | 1-303435 | 6 | Washer-Spring |
| 10 | 1-323549 | 2 | Spacer |
| 11 | 3296-42 | 2 | Nut-Lock, NI |
| 12 | 3290-500 | 2 | Screw-PPH |
| 13 | 1-513051 | 1 | Switch-Open, Normally |
| 14 | 1-633181 | 1 | Plate-Tapped |
| 16 | 119-3638 | 1 | Handle ASM |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16:1 | | 1 | Pistol Grip Handle ASM ● |
| 16:2 | 105-4111 | 2 | Decal-Lock, Neutral |
| 16:3 | 106-2737 | 1 | Decal-Warning |
| 16:4 | 106-2733 | 1 | Decal-Throttle |
| 16:5 | 110-6917 | 1 | Decal |
| 16:6 | 95-5537 | 1 | Decal-Engage, Deck |
| 21 | 29-5560 | 1 | Switch-On / Off |
| 21:1 | 218-461 | 1 | Nut-HH |
| 21:2 | 3254-5 | 1 | Washer-Tooth, Internal |
| 22 | 63-8360 | 1 | Key-Ignition (W/Shield) |
| 23 | 1-324280 | 1 | RH Thumb Latch ASM |
| 23:1 | 1-303019 | 1 | Grip-Latch |
| 24 | 1-324279 | 1 | LH Thumb Latch ASM |
| 24:1 | 1-303019 | 1 | Grip-Latch |
| 99 | 116-2661 | 1 | Harness-Wire |


● Not serviced separately

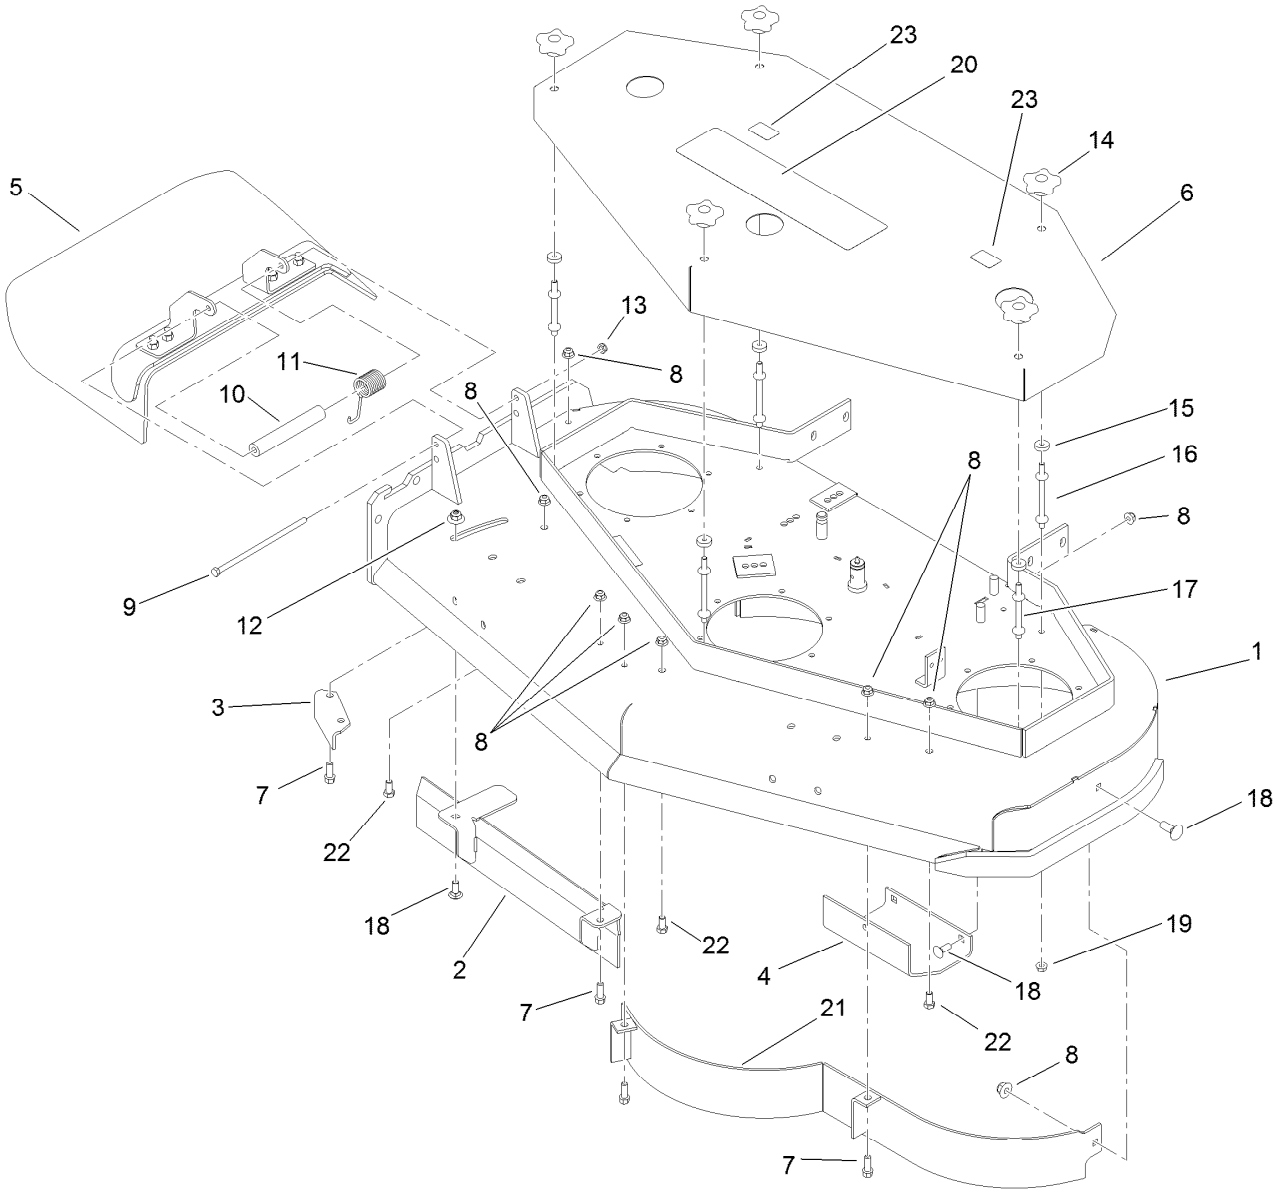


# Deck Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 110-4909 | 1 | Deck ASM |
| 2 | 121-1775-03 | 1 | Baffle ASM |
| 3 | 110-0744-01 | 1 | Baffle-Discharge |
| 4 | 107-3166-01 | 1 | Skid |
| 5 | 110-0758 | 1 | Deflector ASM |
| 6 | 110-2119-01 | 1 | Cover |
| 7 | 92-1624 | 5 | Screw-HWH |
| 8 | 104-8301 | 12 | Nut-Flange, NI |
| 9 | 322-50 | 1 | Screw-HH |
| 10 | 105-4622 | 1 | Spacer |
| 11 | 108-4052 | 1 | Spring-Torsion |
| 12 | 109-6658 | 1 | Nut-Flange, NI |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 3296-47 | 1 | Nut-Lock, NI |
| 14 | 106-4161 | 5 | Knob-Handle |
| 15 | 1-323417 | 5 | Washer |
| 16 | 1-303536 | 3 | Stud-Shield, Belt (Long) |
| 17 | 1-303537 | 2 | Stud-Shield, Belt (Short) |
| 18 | 3231-2 | 5 | Bolt-CARR |
| 19 | 32128-20 | 5 | Nut-HF |
| 20 | 112-9712 | 1 | Decal |
| 21 | 110-0735-03 | 1 | Baffle ASM |
| 22 | 323-4 | 3 | Screw-HH |
| 23 | 103-2076 | 2 | Decal-Caution |

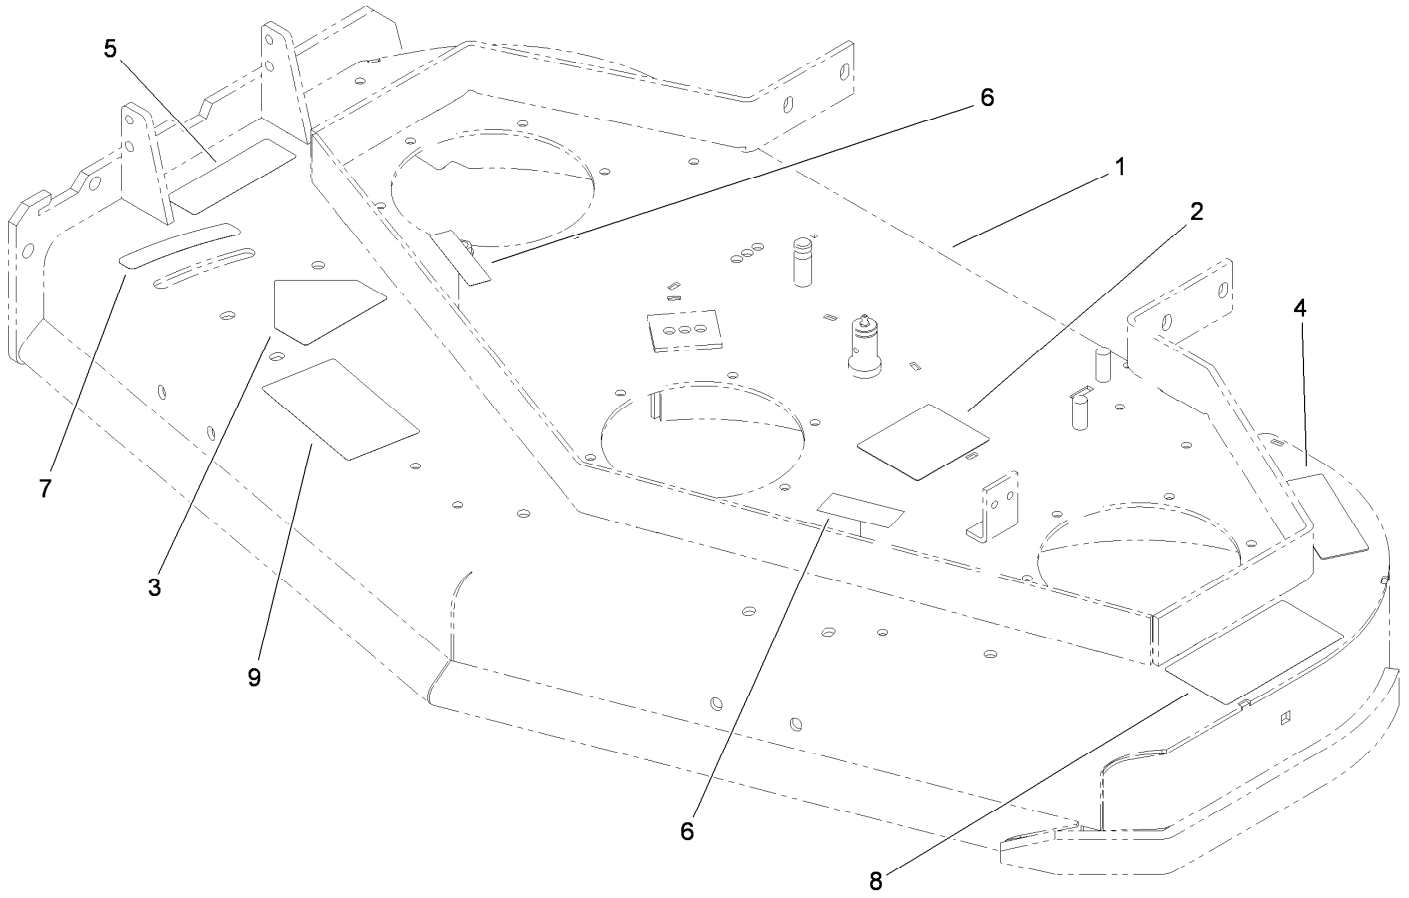


# Deck Decal Assembly No. 110-4909


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | | 1 | 48 Inch Deck ASM ● |
| 2 | 99-3943 | 1 | Decal-Routing, Belt |
| 3 | 1-403005 | 1 | Decal-Danger |
| 4 | 98-5130 | 1 | Decal-Torque, Bolt |
| 5 | 104-8569 | 1 | Decal-Warning |
| 6 | 98-5954 | 2 | Decal-Cover, Missing |
| 7 | 110-2067 | 1 | Decal-Setting, Baffle |
| 8 | 66-1340 | 1 | Decal-Danger, Thrown Object |
| 9 | 110-2068 | 1 | Decal-Adjustment, Baffle |

● Not serviced separately

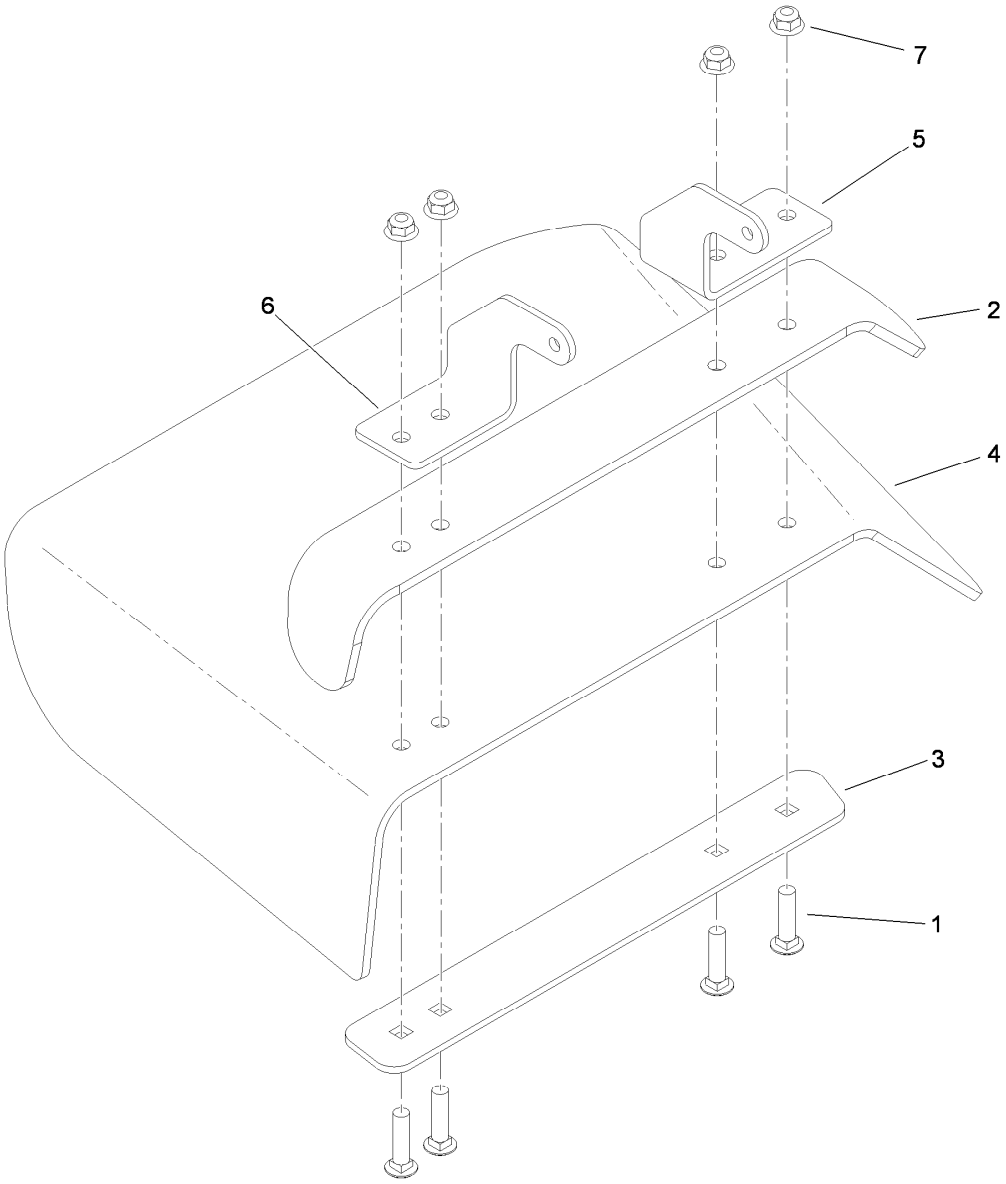


# Deflector Assembly No. 110-0758


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 3231-4 | 4 | Screw-CARR |
| 2 | 106-3246-01 | 1 | Deflector |
| 3 | 106-3248-03 | 1 | Strap-Discharge |
| 4 | 110-0759 | 1 | Deflector-Rubber |
| 5 | 107-4197-01 | 1 | Bracket-Hinge, Rear |
| 6 | 107-4196-01 | 1 | Bracket-Hinge, Front |
| 7 | 104-8301 | 4 | Nut-Flange, NI |

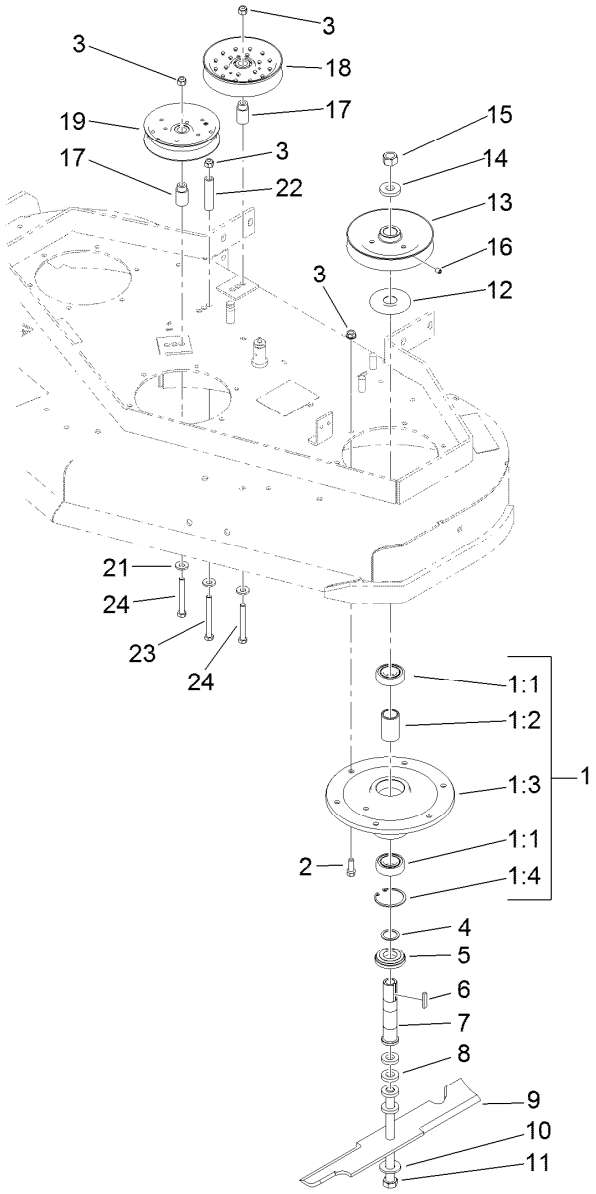


# Sheave, Spindle and Blade Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 108-6697 | 3 | Spindle Housing ASM |
| 1:1 | 119-7857 | 2 | Bearing-Ball, 1 Inch |
| 1:2 | 110-2116 | 1 | Spacer-Bearing |
| 1:3 | 108-6694 | 1 | Housing-Spindle |
| 1:4 | 32120-8 | 1 | Ring-Snap |
| 2 | 92-1624 | 18 | Screw-HWH |
| 3 | 104-8301 | 21 | Nut-Flange, NI |
| 4 | 110-4888 | 3 | Washer-Spacer |
| 5 | 103-2535 | 3 | Spacer-Guard, Bottom |
| 6 | 1-807267 | 3 | Key |
| 7 | 1-323529 | 3 | Tube-Spindle, Short |
| 8 | 1-323539 | 12 | Spacer |
| 9 | 107-3192-03 | 3 | Blade-16.5 Inch (High Flow) |
| 10 | 1-513208 | 3 | Washer-Spring |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 1-800861 | 3 | Screw-Cap, HH |
| 12 | 103-1330 | 3 | Guard-Bearing, Top |
| 13 | 1-403183 | 3 | Sheave |
| 14 | 1-323339 | 3 | Washer-Retainer, Sheave |
| 15 | 3219-6 | 3 | Nut-Hex |
| 16 | 3246-18 | 3 | Setscrew |
| 17 | 1-413113 | 2 | Bushing-Idler |
| 18 | 116-4665 | 1 | Idler-Pulley, Flat |
| 19 | 1-613098 | 1 | Pulley-Idler |
| 21 | 98-5975 | 3 | Washer-Belleville |
| 22 | 1-403188 | 1 | Spacer |
| 23 | 323-15 | 1 | Screw-HH |
| 24 | 323-14 | 2 | Screw-HH |

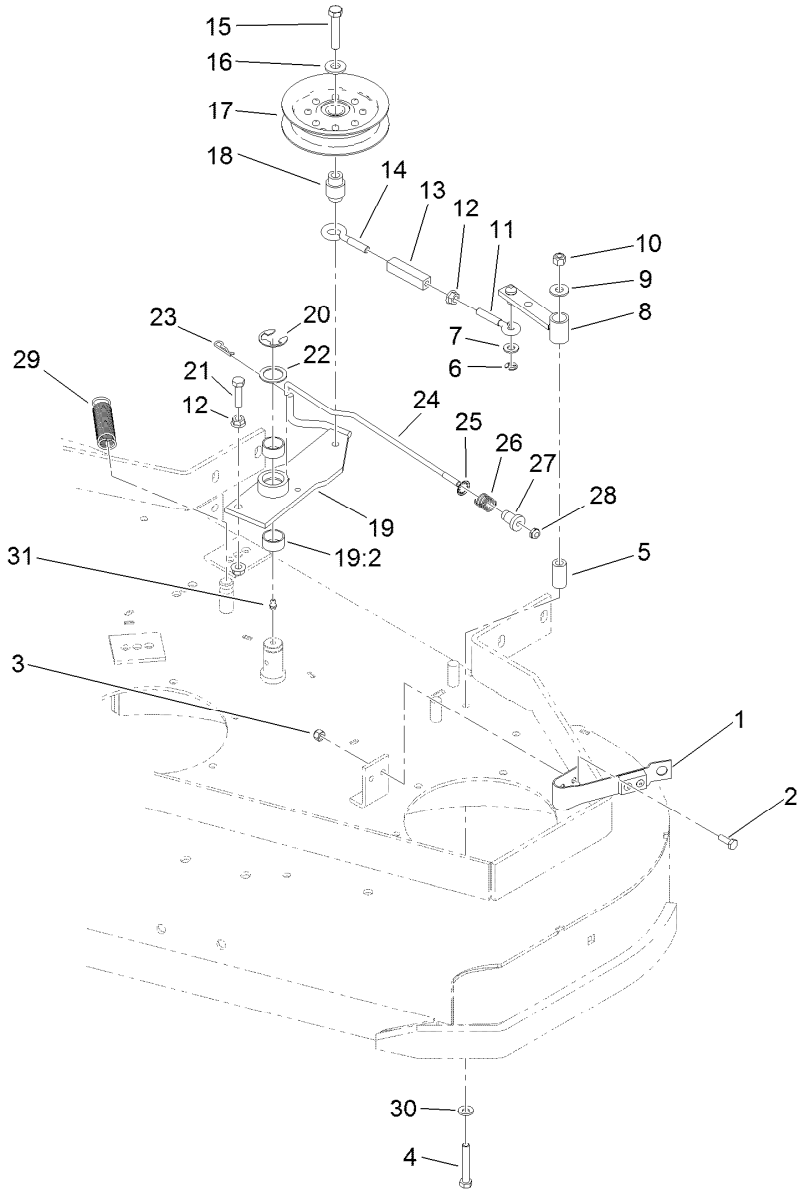


# Idler Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-324372 | 1 | Pad And Spring ASM |
| 2 | 321-4 | 2 | Screw-HH |
| 3 | 3296-42 | 2 | Nut-Lock, NI |
| 4 | 322-10 | 1 | Screw-HH |
| 5 | 1-403179 | 1 | Tube-Pivot |
| 6 | 32120-35 | 1 | Ring-Retaining, EXT |
| 7 | 3256-23 | 1 | Washer-Flat |
| 8 | 1-322235 | 1 | Arm-Assist |
| 9 | 3256-3 | 1 | Washer-Flat |
| 10 | 3296-29 | 1 | Nut-Lock, NI |
| 11 | 1-303238 | 1 | Eyebolt-Thread, RH |
| 12 | 32128-20 | 3 | Nut-HF |
| 13 | 1-303236 | 1 | Body-Turnbuckle |
| 14 | 1-303348 | 1 | Eyebolt-Thread, LH |
| 15 | 702809 | 1 | Screw-HH |
| 16 | 98-5975 | 1 | Washer-Belleville |
| 17 | 116-3626 | 1 | Pulley-Idler |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 18 | 1-303434 | 1 | Bushing-Engagement |
| 19 | 103-3600 | 1 | Idler Arm ASM |
| 19:2 | 1-323729 | 2 | Sleeve-Bearing |
| 20 | 32151-103 | 1 | Ring-Retaining, EXT |
| 21 | 116-3515 | 1 | Screw-HH, Special |
| 22 | 1-303352 | 1 | Washer-Spindle |
| 23 | 1-806003 | 1 | Pin-Cotter, Hair |
| 24 | 110-4932 | 1 | Rod-Brake |
| 25 | 1-323748 | 1 | Ring-Push On |
| 26 | 1-323747 | 1 | Spring-Compression |
| 27 | 1-323746 | 1 | Spacer-Flanged |
| 28 | 3296-56 | 1 | Nut-Lock, NI |
| 29 | 1-323071 | 1 | Spring-Extension |
| 30 | 1-303334 | 1 | Washer-Spring |
| 31 | 302-40 | 1 | Fitting-Grease |

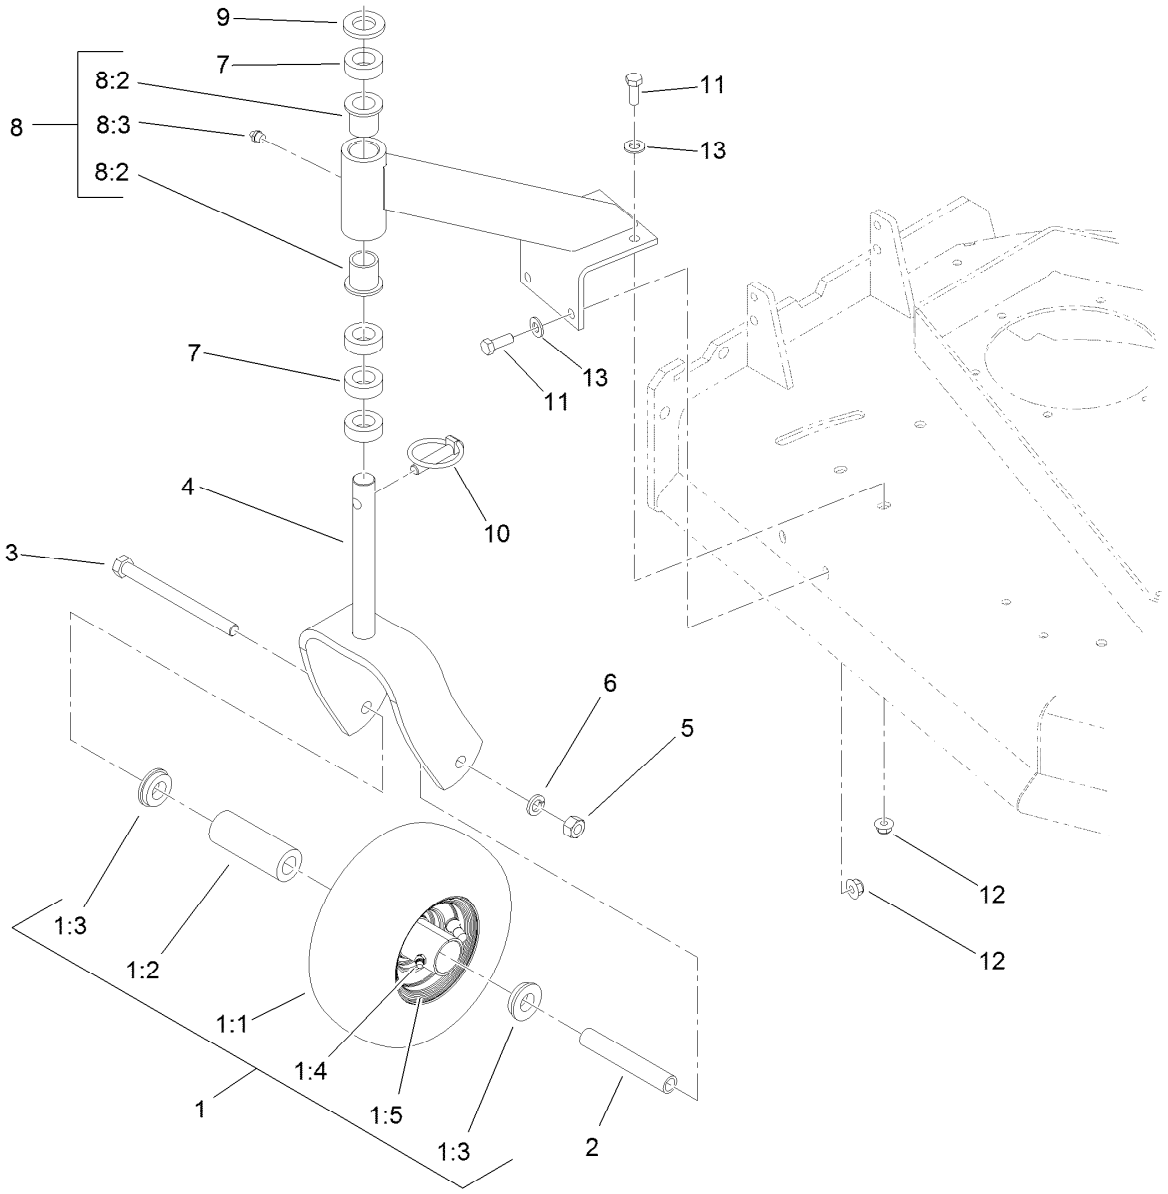


# Caster Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 110-5023 | 2 | Wheel And Tire ASM |
| 1:1 | | 1 | Tire ● |
| 1:2 | 1-513809 | 1 | Bearing |
| 1:3 | 1-513810 | 2 | Bushing |
| 1:4 | 302-61 | 1 | Fitting-Grease |
| 1:5 | | 1 | Wheel ● |
| 2 | 1-513547 | 2 | Spacer |
| 3 | 325-20 | 2 | Screw-HH |
| 4 | 1-322145-01 | 2 | Fork |
| 5 | 3217-9 | 2 | Nut-HH |
| 6 | 3253-7 | 2 | Washer-Lock |
| 7 | 1-303314 | 8 | Spacer-Caster |
| 8 | 110-2130 | 2 | Support ASM |
| 8:2 | 1-303514 | 2 | Bearing-Flanged |
| 8:3 | 302-52 | 1 | Fitting-Grease |
| 9 | 1-513338 | 2 | Washer-Flat |
| 10 | 1-809020 | 2 | Pin |
| 11 | 323-6 | 8 | Screw-HH |
| 12 | 104-8301 | 8 | Nut-Flange, NI |
| 13 | 3256-24 | 8 | Washer-Flat |

● Not serviced separately

# Attachments and Accessories

## For 39638 Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Gear Drive with 48in TURBO FORCE Cutting Unit

| Product Name | Model/Part |
|---|---|
| Blade-Low Flow, 16.5in | 107-3193-03 |
| Blade-Mid Flow, 16.5in | 107-3194-03 |
| Blade-Atomic, 16.5in | 107-3195-03 |
| Blade-Recycling, 16.5in | 107-3196-03 |
| Bagging Enhancement Kit | 108-4091 |
| Blade-Hi Flow, 16.5in (6 Pack) | 110-0414 |
| Blade-Lo Flow, 16.5in (6 Pack) | 110-0415 |
| Blade-Recycler, 16.5in (6 Pack) | 110-0416 |
| Blade-Atomic, 16.5in (6 Pack) | 110-0417 |
| Blade-Mid Flow, 16.5in (6 Pack) | 110-0418 |
| 48in Recycler Kit | 110-2060 |
| Weight Kit | 110-2085 |
| Operator Controlled Discharge Chute Kit | 115-4195 |
| Soft Bag (3 Bushel) | 30104 |
| Sulky | 30109 |




**Count on it.**