
FORM NO. 3318–430 REV. A

TORO®

MODEL NO. 26643B–6900001 & UP
MODEL NO. 26643–7900001 & UP

PARTS CATALOG

53cm REAR BAGGING MOWER

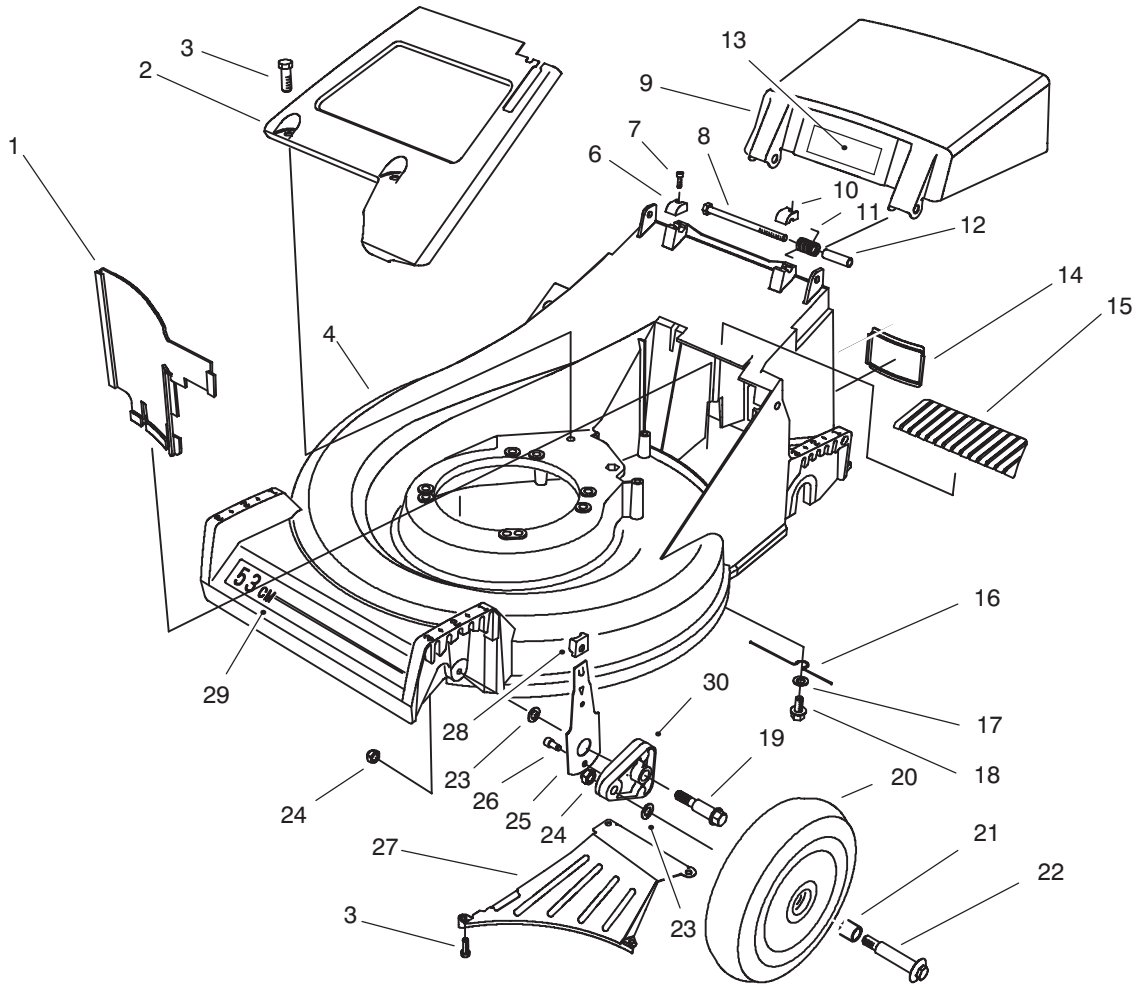


C–2301A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–0020	Panel – Vertical	1
2	65–5660	Panel – Screen	1
3	32144–70	Screw – Cap Hex. Hd.	6
4	16–1769	Housing – 53cm (Incl. Ref. #5 & 29)	1
6	71–7910	Cap – Hinge Bolt R.H.	1
7	65–5210	Screw – Thread Forming	2
8	322–29	Screw – Hex Hd. Cap	2
9	17–1569	Door – Discharge (Incl. Ref. #13)	1
10	71–7900	Cap – Hinge Bolt L.H.	1
11	71–9840	Spring – Door	2
12	71–8580	Spacer – Door	2
13	93–4105	Decal – Danger	1
14	71–9650	Access – Cover	1
15	71–9920	Cover – Top	1

Ref. No.	Part No.	Description	No. Used
16	66–0620	Retainer – Belt	1
17	3256–24	Washer – Flat	1
18	32144–15	Screw – Hex Flange Hd.	1
19	66–0560	Screw – Shoulder	2
20	14–9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27–6250	Bushing – Wheel	4
22	27–6231	Bolt – Wheel	2
23	40–1940	Washer – Wheel Bolt	4
24	3296–6	Nut – Lock	4
25	66–0540	Arm – Spring Front	2
26	65–5220	Screw – Cap Socket Hd.	2
27	71–9640	Ramp – Discharge	1
28	25–7740	Knob – Arm	2
29	71–9870	Decal – Deck 53cm	1
30	66–0580	Arm – Pivot Front	2

© The TORO Company –1995 Rev. 1996
All Rights Reserved

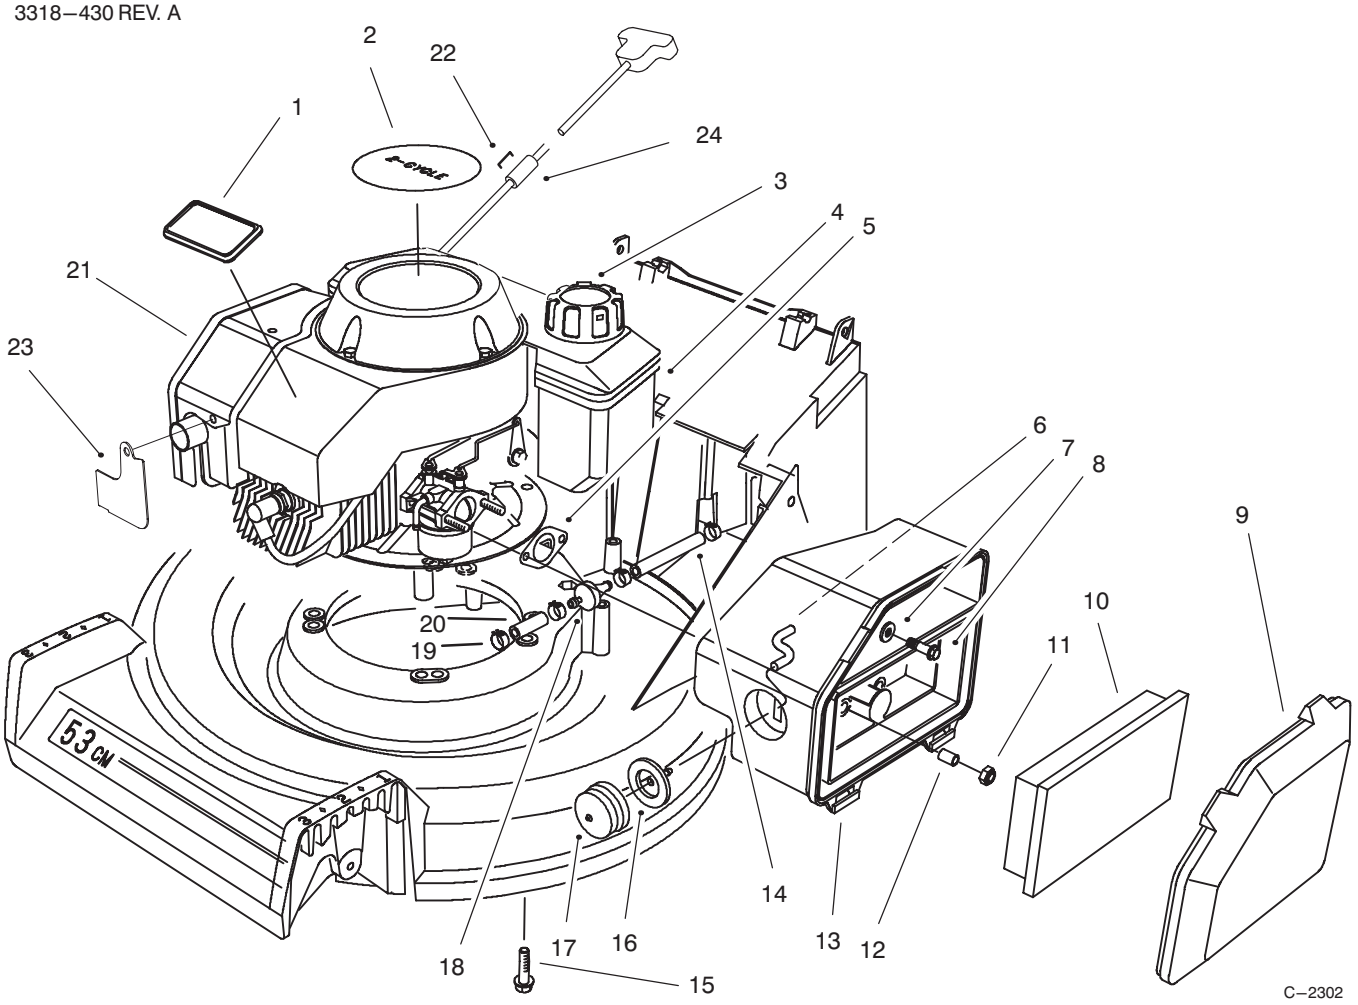


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46–8290	Plate – Logo Toro	1
2	57–3110	Decal – Recoil	1
3	93–7199	Gas Cap Assembly	1
4	81–0162	Fuel Tank Assembly	1
5	81–0090	Gasket – Air Cleaner	1
6	44–3172	Hose – Primer	1
7	3256–16	Washer – Flat	1
8	51–2690	Screw – Hex Washer Hd.	1
9	63–9340	Cover – Air Cleaner	1
10	63–9380	Foam Element – Air Cleaner	1
11	50–7180	Nut – Lock	2
12	62–3980	Spacer	2

Ref. No.	Part No.	Description	No. Used
13	63–9330	Body – Air Cleaner	1
14	51–3215	Hose – Fuel	1
15	66–9301	Screw – Engine Mount	3
16	44–2750	Body – Primer	1
17	66–7460	Bulb – Primer	1
18	71–9280	Filter – Fuel	1
19	2412–95	Clamp – Hose	4
20	51–3216	Hose – Fuel	1
21	51–0414	Engine Complete	1
†22		Staple	1
23	93–7661	Extension – Muffler Guard	1
24	81–3980	Stop – Rope	1

† Obtain Locally

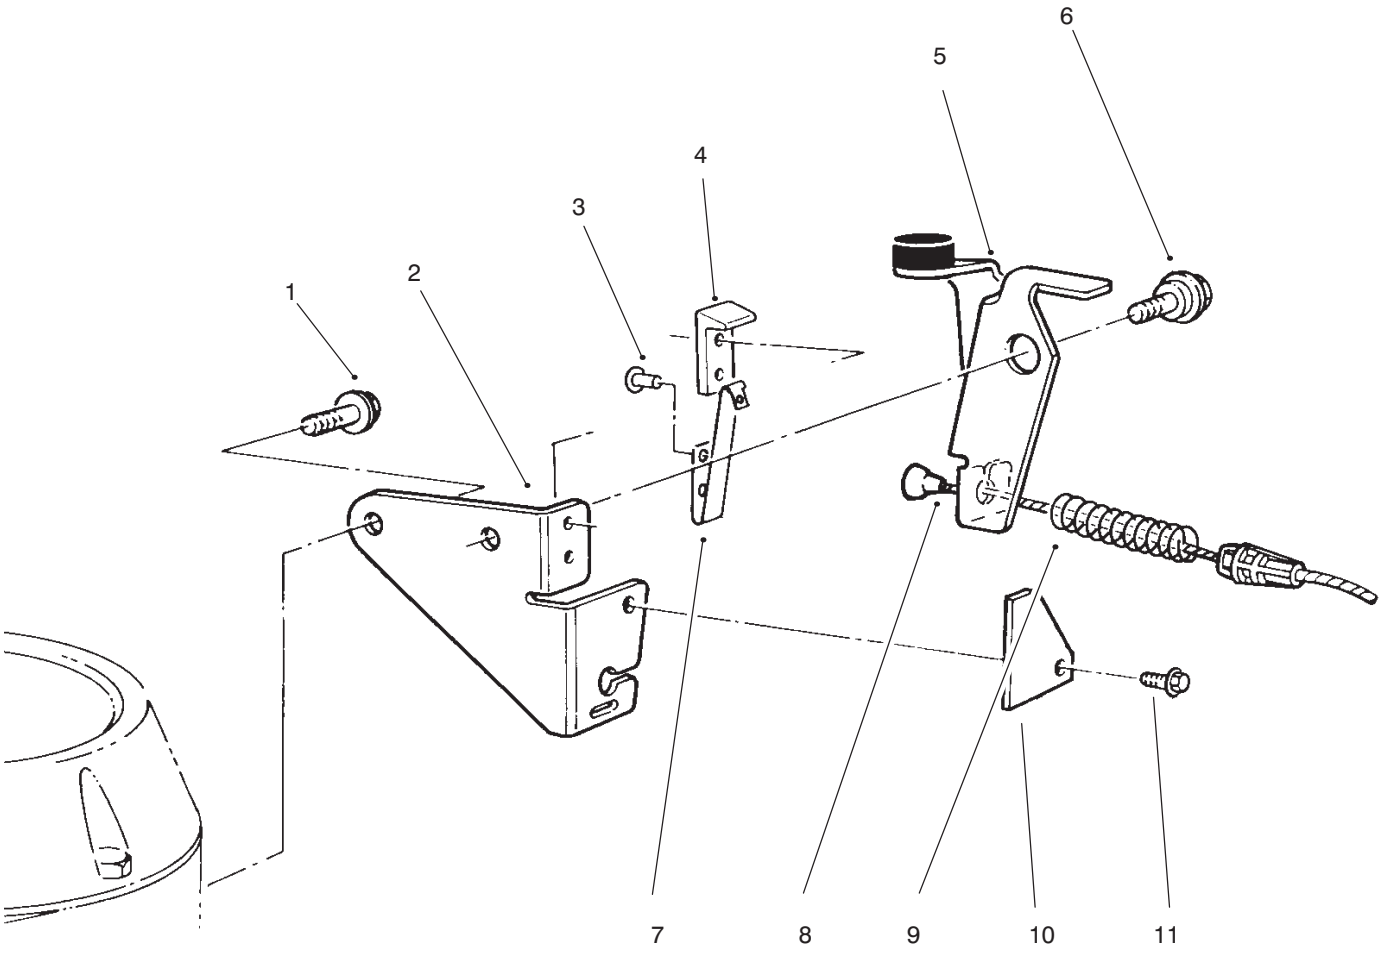


BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–10	Screw – Self Tapping	1
2	84–7820	Plate – Mounting	1
3	3290–459	Rivet	2
4	77–5260	Strap – Insulation	1
5	66–5380	Brake Plate Assembly	1
6	92–9698	Screw – Shoulder, Metric	1
7	60–9010	Strap – Ground	1

Ref. No.	Part No.	Description	No. Used
8	93–7027	Cable – Brake	1
9	66–5370	Spring – Compression	1
10	53–4690	Stop – Ground Strap	1
11	32144–112	Screw – Self Tapping	1
*	14–6009	Mounting Plate Assembly (Incl. Ref. #2–4 & 7)	1

*Not Illustrated

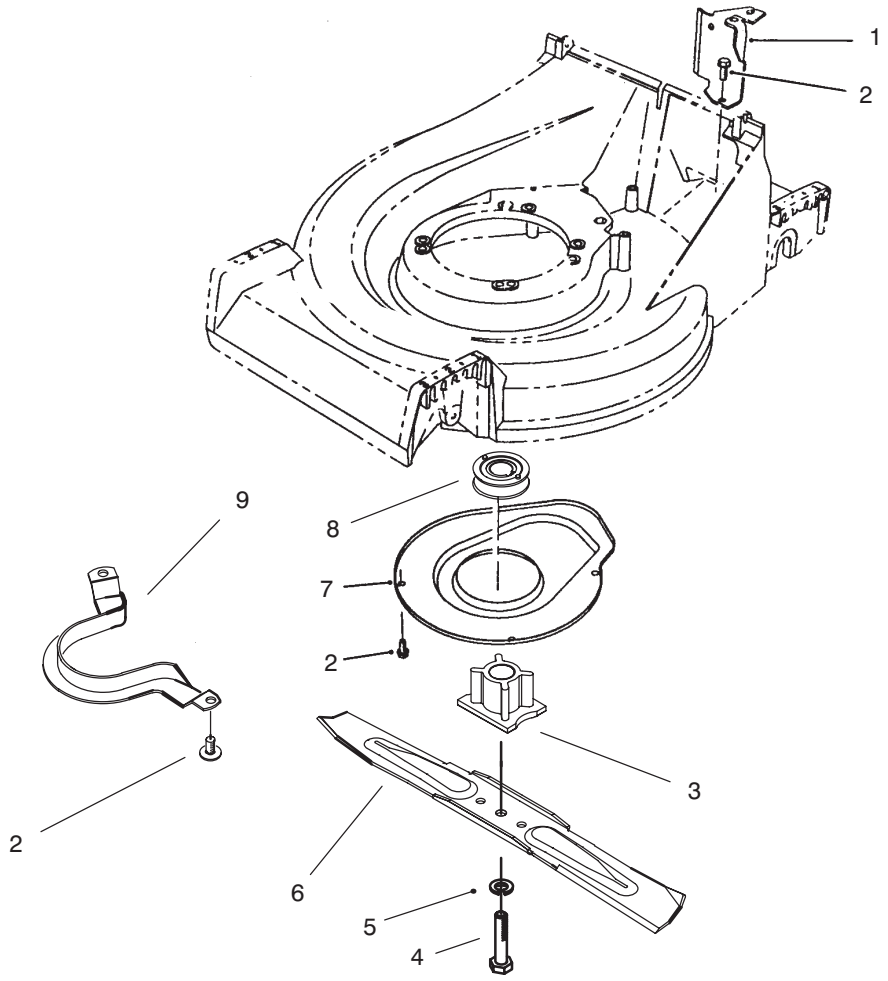


C–1591

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–0030	Bracket – Cable Support	1
2	32144–70	Screw – Taptite	7
3	62–7540	Retainer – Blade	1
4	26–0670	Screw – Blade	1
5	3253–22	Washer – Lock	1

Ref. No.	Part No.	Description	No. Used
6	62–7700	Blade – 21”	1
7	65–5200	Shield – BBC	1
8	62–7550	Pulley – Drive	1
9	66–0570	Bracket – Belt Guide	1

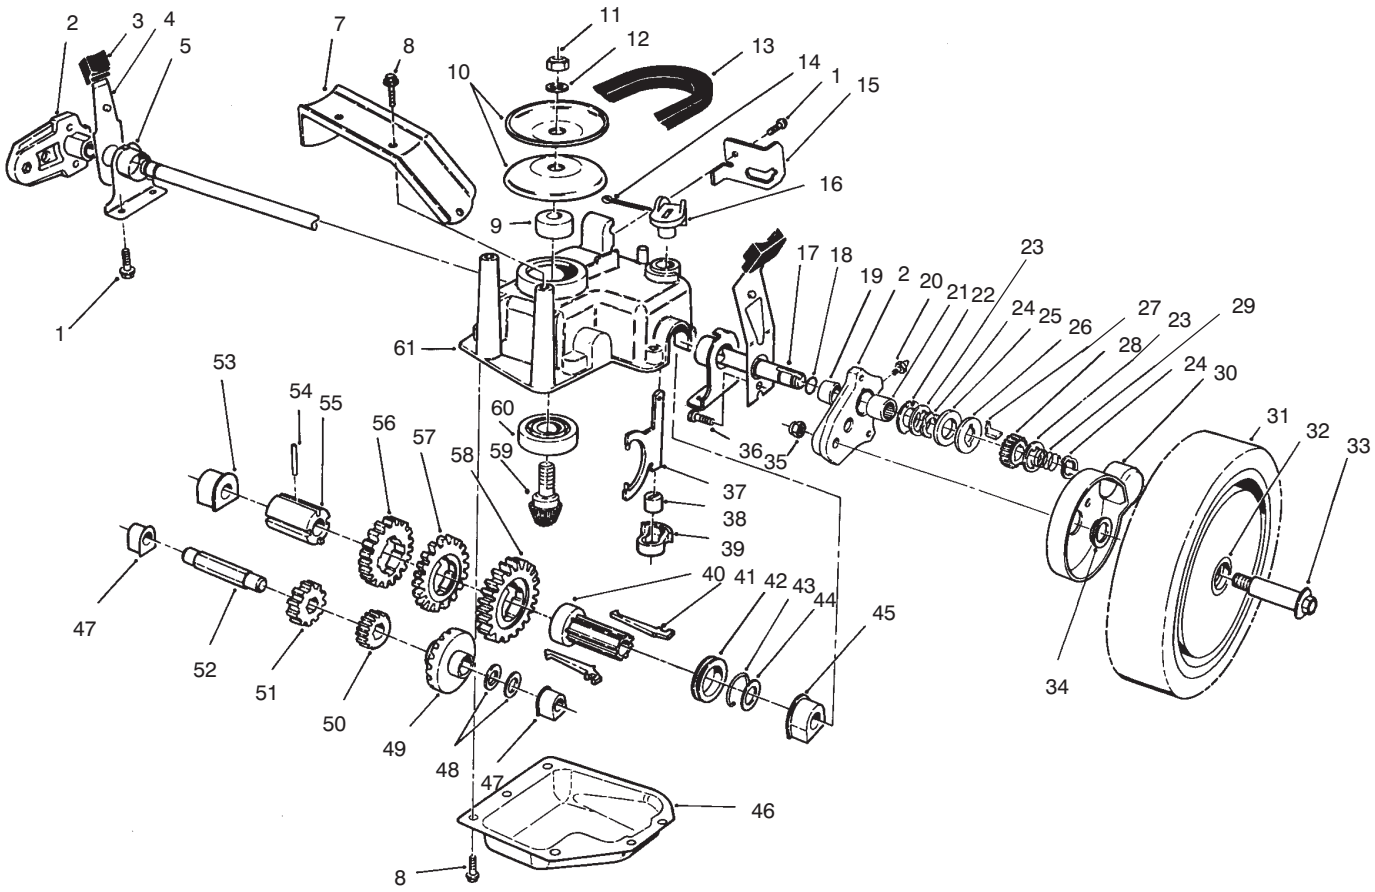


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144—70	Screw — Hex. Washer Hd.	5
2	65—5042	Pivot Arm Assembly (Incl. Ref. #19—21)	2
3	25—7740	Knob — Arm	2
4	65—5440	Spring Arm Assembly	2
5	66—0360	Cap — End	2
7	65—5190	Bracket — Belt Guide	1
8	49—2040	Screw — Self Tapping	8
9	62—6660	Spacer	1
10	60—8840	Pulley — Half	2
11	3296—5	Nut — Lock	1
12	3256—24	Washer — Flat	1
13	36—8070	V—Belt	1
14	3272—5	Pin — Cotter	1
15	76—2930	Retainer — Cable	1
16	76—0920	Lever — Shift	1
17	65—4770	Shaft — Output	1
18	237—153	Seal — "O"Ring	2
19	70—9760	Bushing — Sleeve	2
20	302—56	Fitting — Grease	2
21	48—2060	Bearing —Needle	2
22	65—4730	Washer — Thrust (Inner)	2
23	65—4740	Washer — Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65—2720	Ring — Retaining	4
25	65—4710	Ring — Friction	2
26	65—4760	Washer —Clutch	2
27	66—6050	Key — Rocking (L.H.)	1
*	66—6040	Key — Rocking (R.H.)	1
28	65—4750	Pinion	2
29	65—4720	Spring — Compression	2
30	74—1660	Cover — Wheel	2
31	14—9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27—6250	Bushing — Wheel	4
33	27—6231	Bolt — Wheel	2
34	74—1670	Spacer — Wheel Cover	2
35	3296—6	Nut — Lock	2
36	65—5220	Screw — Socket Hd. Cap	2
37	60—8870	Yoke — Shift	1
38	29—9570	Bushing — Yoke	1
39	60—8810	Retainer — Shift Fork	1
40	76—0780	Sleeve — Shift Key	1
41	76—0760	Key — Shift	2
42	76—0770	Collar — Shift	1
43	65—5250	Clip — Spring	1
44	36—4780	Washer — Thrust	1

*Not Illustrated

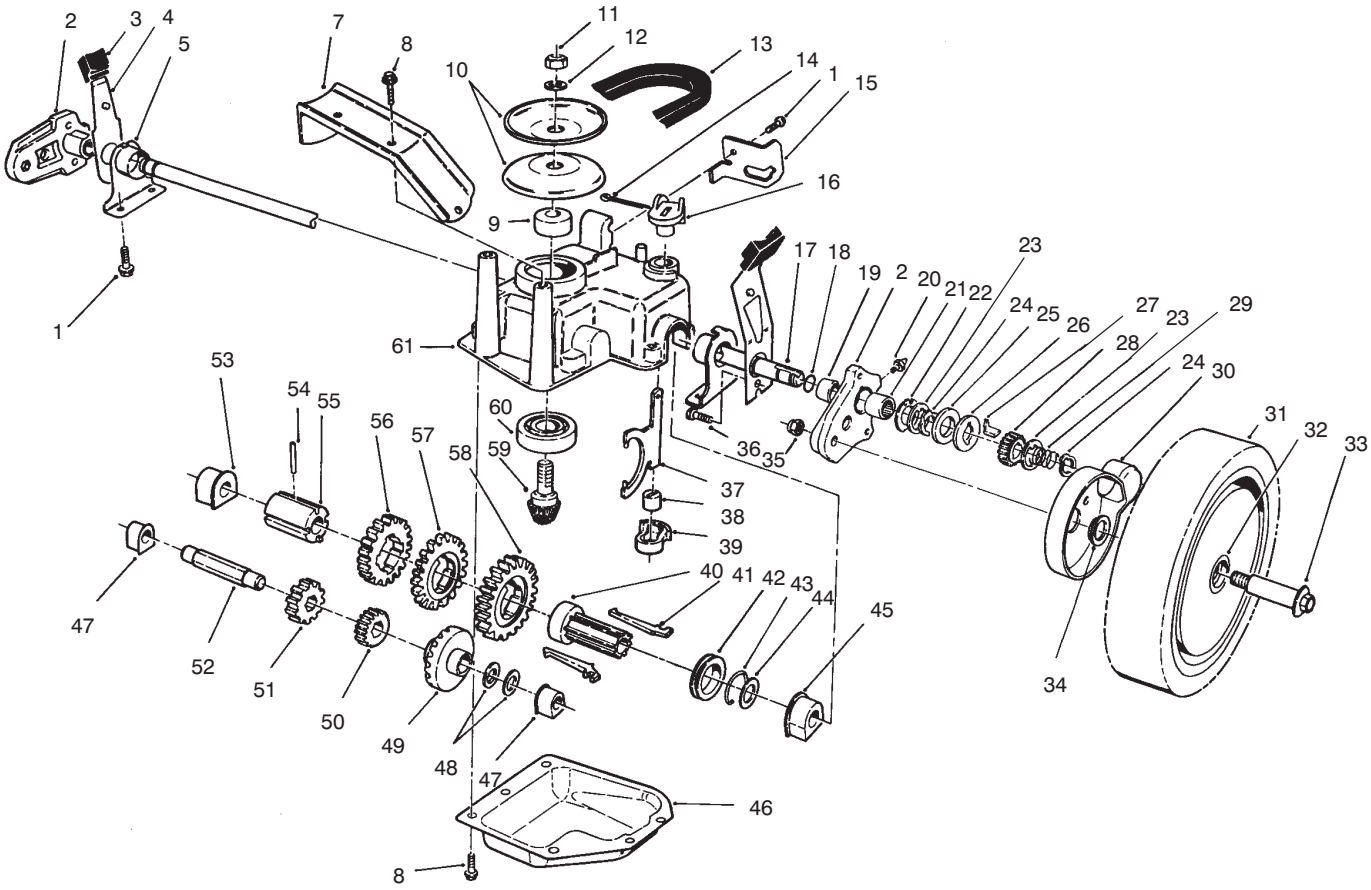


C–1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60–8770	Bushing – Output Shaft	1
46	60–8730	Cover – Gear Case	1
47	60–8750	Bushing – Intrmdt. Shaft	2
48	36–4791	Washer – Thrust	2
49	55–3760	Gear – Pinion 15T	1
50	55–3780	Gear – Pinion 20T	1
51	55–3800	Gear – Pinion 25T	1
52	60–8800	Shaft – Intermediate	1
53	60–8850	Bushing – Output Shaft	1

Ref. No.	Part No.	Description	No. Used
54	32121–120	Pin – Coil	1
55	60–8790	Sleeve – Gear	1
56	55–3810	Gear – 39T (3rd Gear)	1
57	55–3790	Gear – 44T (2nd Gear)	1
58	55–3770	Gear – 49T (1st Gear)	1
59	60–8890	Pinion – Bevel	1
60	38–7820	Bearing – Ball	1
61	60–8710	Case – Gear (Upper)	1
*	62–6673	Gear Case Assy. Complete	1

*Not Illustrated

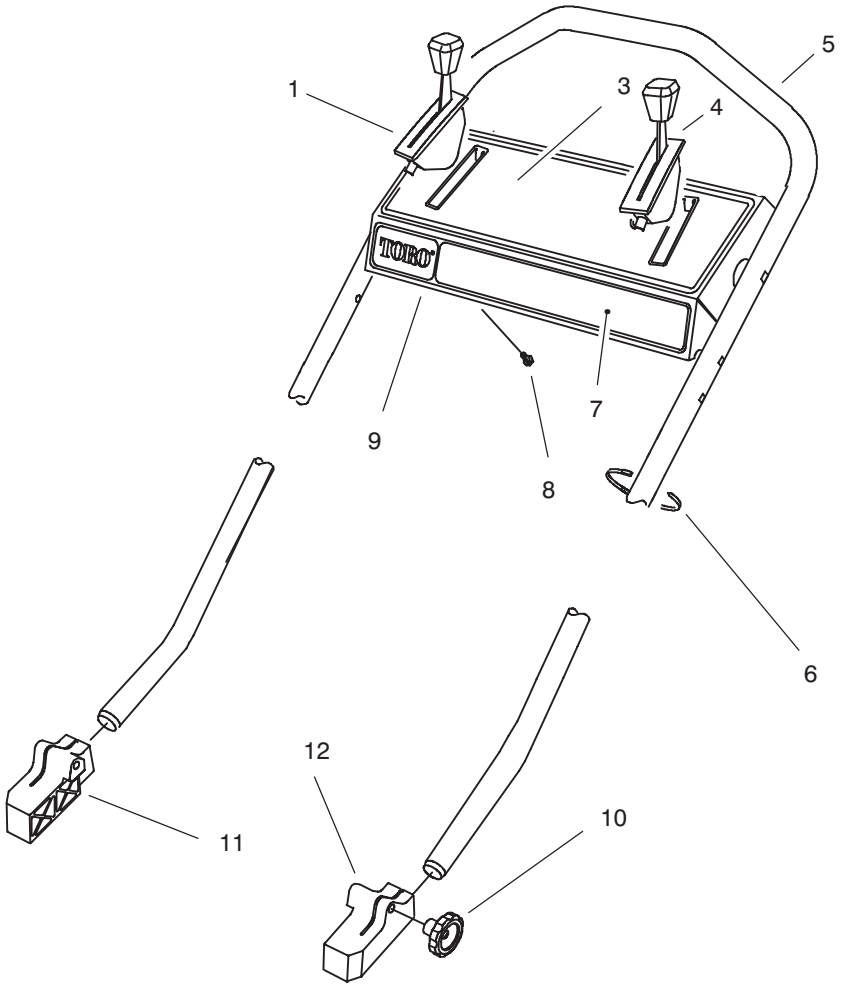


C–1569A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–6632	Control – Ground Speed	1
3	93–6662	Decal – Instruction	1
4	93–6635	Control – Throttle	1
5	94–4910	Handle	1
6	3290–378	Tie – Cable	5
7	71–9874	Decal – Panel	1


Ref. No.	Part No.	Description	No. Used
8	92–9665	Screw – Self Tapping	5
9	16–8729	Control Panel Assembly (Incl. Ref. #3)	1
10	19–4050	Knob – Handle Release	2
11	71–8100	Mount – Handle R.H.	1
12	71–8090	Mount – Handle L.H.	1

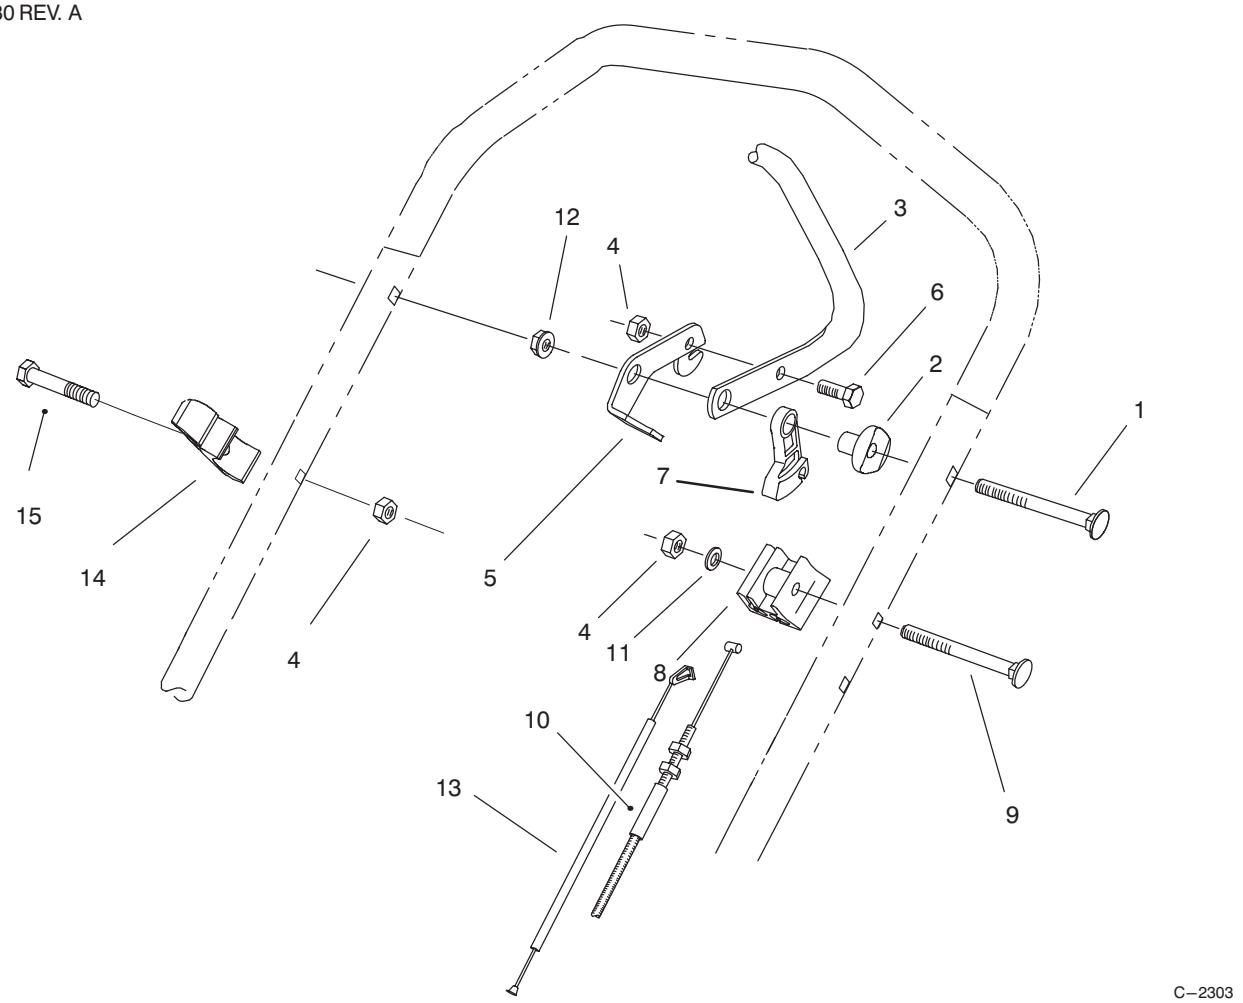

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17–9426	Screw – Handle	2
2	66–0330	Support – Spacer	2
3	52–7430	Control Bar Assembly	1
4	3296–42	Nut – Lock	3
5	66–5350	Lever – Control	1
6	321–3	Screw – Cap Hex. Hd.	1
7	46–5520	Lever – Traction	1
8	71–0960	Support – Cable	1
9	46–6432	Screw – Handle	1
10	93–6634	Cable – Traction	1


Ref. No.	Part No.	Description	No. Used
11	3256–22	Washer – Flat	1
12	3296–58	Nut – Lock	2
13	93–7027	Cable – Brake	1
14	93–3772	Rope – Guide (Model No. 26643B Only)	1
14	95–4478	Rope – Guide (Model No. 26643 Only)	1
15	321–52	Screw – Hex Hd. Cap (Model No. 26643B Only)	1

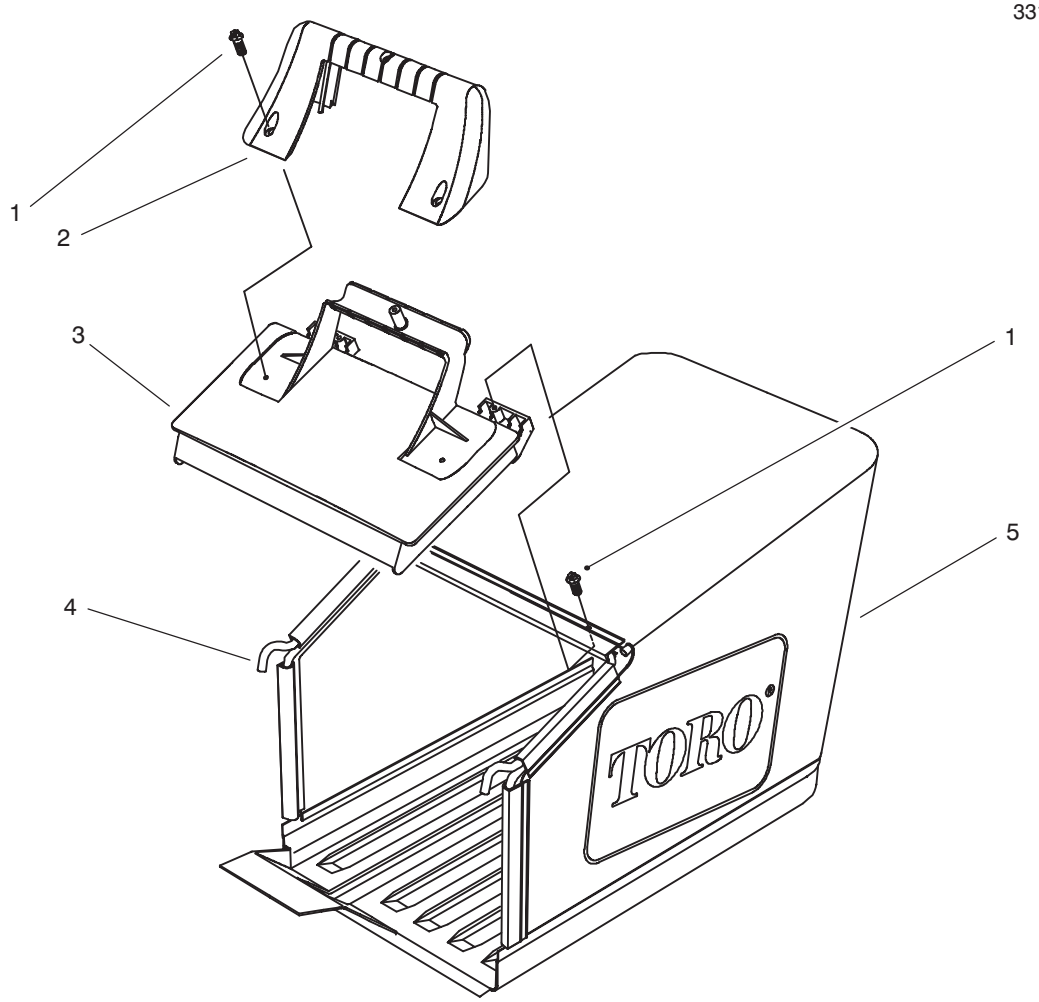

C–1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–111	Screw – Index Hex Washer Head	5
2	71–9480	Handle – Door	1
3	71–9470	Door – Bag	1
4	71–9930	Frame – Grass Bag	1
5	71–9680	Bag – Grass 53cm	1

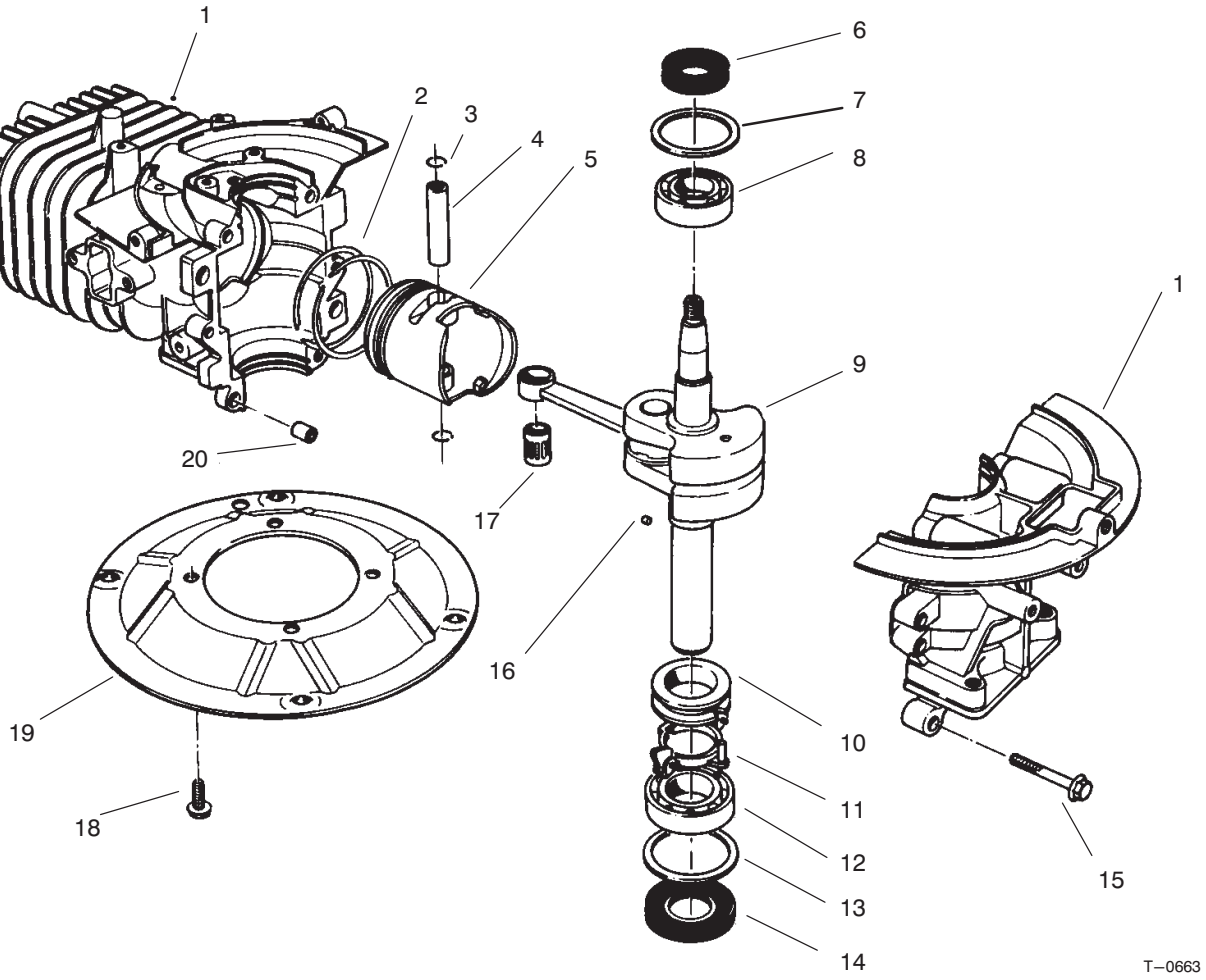


CRANKSHAFT ASSEMBLY
(Model No. 47PS5—6) (Model No. 26643B Only)
(Model No. 47PT6—6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81—2800	Crankcase/Cylinder Ass'y (Model No. 26643B Only)	1
1	94—1685	Crankcase/Cylinder Ass'y (Model No. 26643 Only)	1
2	81—0590	Ring Set	1
3	81—0620	Circlip	2
4	81—0600	Pin — Wrist	1
5	81—0580	Piston (58mm)	1
6	81—0720	Oil Seal — Upper	1
7	81—0710	Thrust Washer — Upper	1
8	81—0690	Bearing — Upper (20mm)	1
9	81—4600	Crankshaft/Connecting Rod Assembly	1

Ref. No.	Part No.	Description	No. Used
10	81—0770	Collar — Governor	1
11	81—0750	Bracket — Governor Arm	1
12	81—0700	Bearing — Lower (25mm)	1
13	81—0730	Thrust Washer — Lower	1
14	81—0740	Oil Seal — Lower	1
15	81—0540	Bolt (30mm Lg.)	5
16	81—0760	Pin — Crankshaft	1
17	81—0610	Bearing — Wrist Pin	1
18	81—0570	Bolt (20mm Lg.)	4
19	81—0560	Plate — Mounting	1
20	81—0520	Pin — Crankcase	2
*	12—7699	Short Block Assembly	1

*Not Illustrated

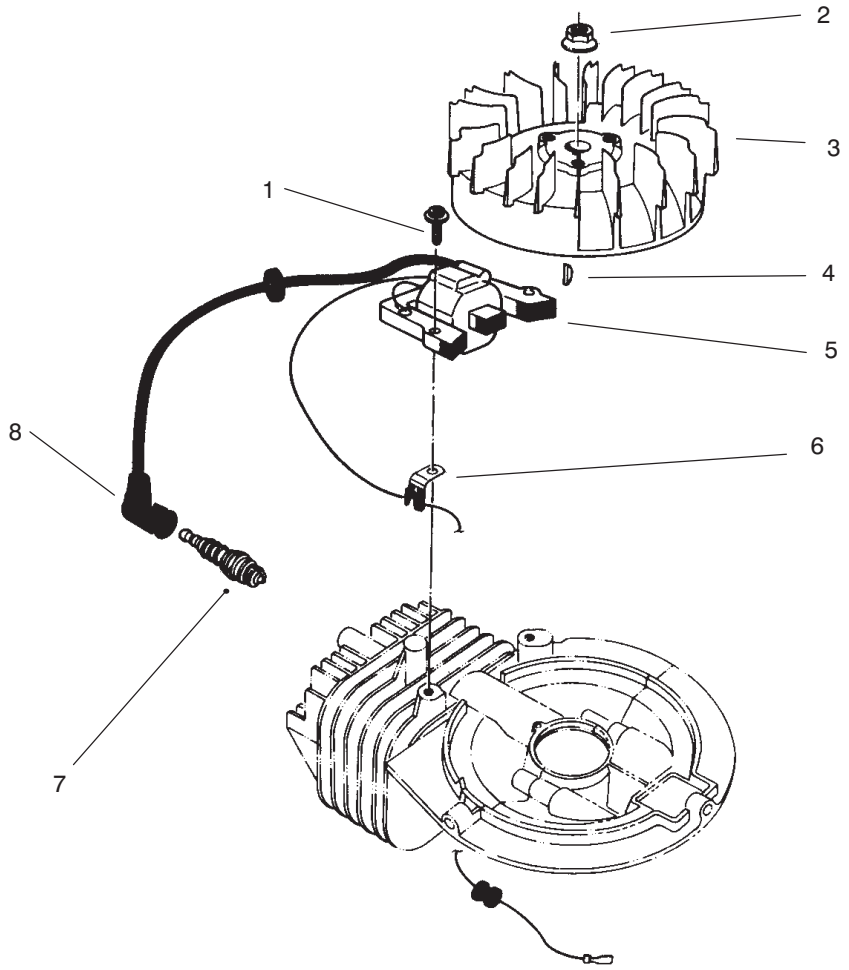


C—0176

IGNITION ASSEMBLY
(Model No. 47PS5—6) (Model No. 26643B Only)
(Model No. 47PT6—6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81—5680	Capscrew — Hex Hd.	1
2	81—1330	Nut	1
3	81—2810	Flywheel — Magneto	1
4	81—2370	Key — Flywheel	1
5	81—2820	Coil/Ignition Assembly	1

Ref. No.	Part No.	Description	No. Used
6	81—1480	Clamp	1
7	81—0181	Spark Plug	1
8	81—1500	Cover — Spark Plug	1
*	41—7650	Puller — Flywheel	1

*Not Illustrated

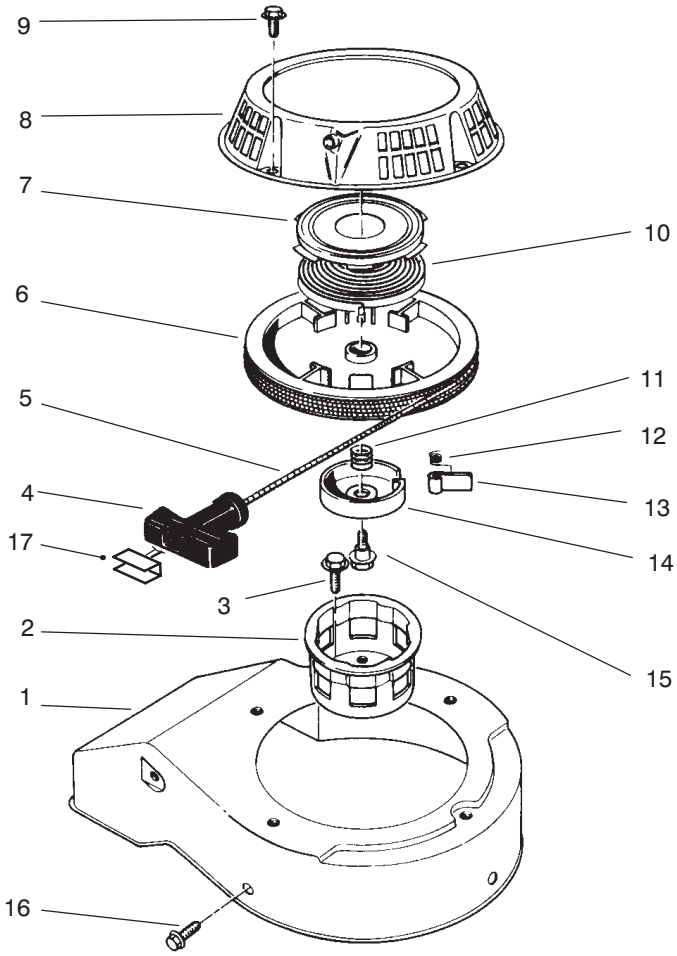


T–0668

RECOIL ASSEMBLY
(Model No. 47PS5–6) (Model No. 26643B Only)
(Model No. 47PT6–6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81–2070	Cover – Cooling Fan	1
2	81–1290	Pulley – Starter Cup	1
3	81–1300	Bolt (16mm Lg.)	3
4	81–1630	Handle – Recoil	1
5	81–1270	Rope	1
6	81–1210	Reel – Rope Pulley	1
7		Retainer Cup – Recoil Spring	1
8	81–2090	Case – Recoil	1
9	81–1280	Bolt	4
10		Spring – Recoil	1
11	81–1240	Spring – Compression	1

Ref. No.	Part No.	Description	No. Used
12	81–1220	Spring – Dog	1
13	81–1230	Dog	1
14	81–1250	Retainer – Dog	1
15	81–1260	Bolt – Shoulder	1
16	53–1340	Bolt – Self Tapping	3
17	81–5760	Insert – Recoil Handle	1
*	81–2300	Spring & Retainer (Incl. Ref. #7 & 10)	1
*	81–2040	Starter Assembly (Incl. Ref. #4–8, & 10–15)	1

*Not Illustrated

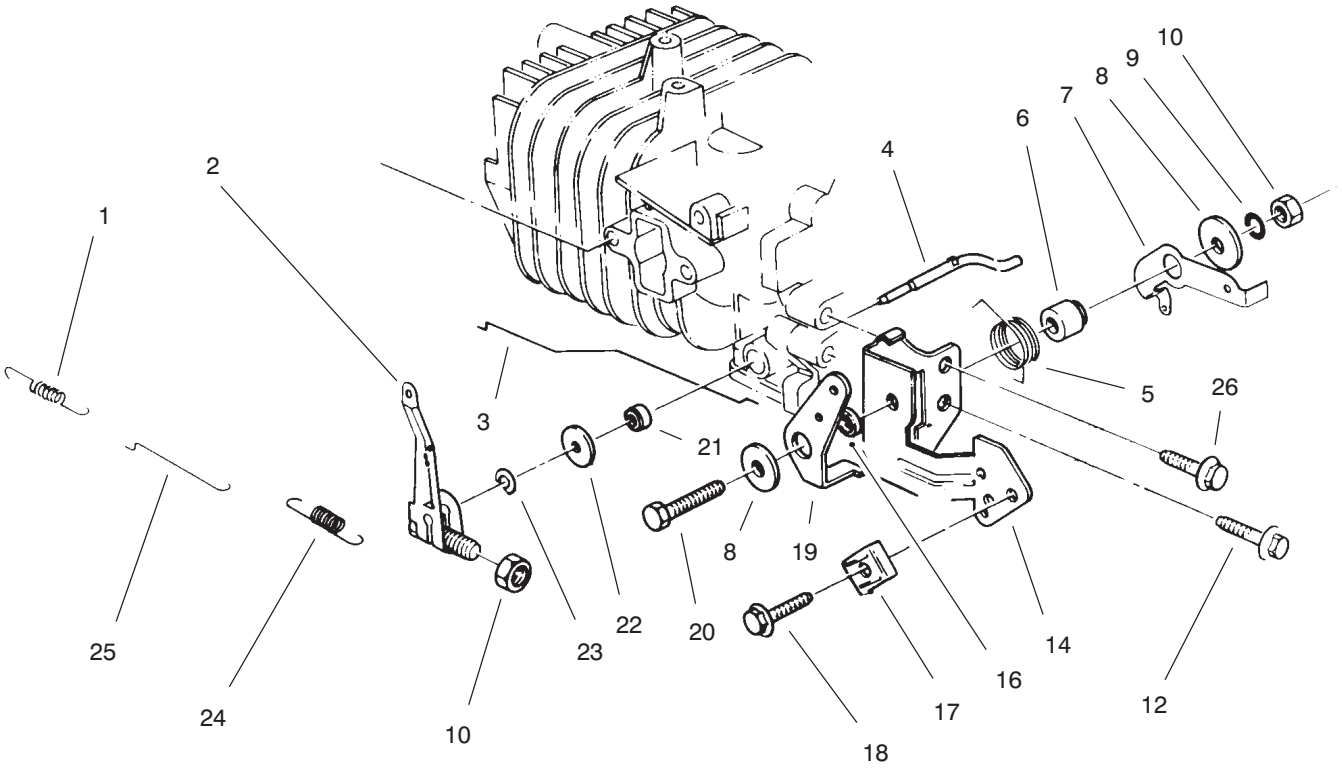


C—0177

GOVERNOR ASSEMBLY
(Model No. 47PS5—6) (Model No. 26643B Only)
(Model No. 47PT6—6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81—0920	Spring — Carburetor Rod	1
2	81—5420	Governor Arm/Bolt Ass'y	1
3	81—5410	Rod — Choke	1
4	81—0840	Shaft — Governor	1
5	81—2460	Spring — Choke Control Lever	1
6	81—1770	Spacer — Governor Spring Lever	1
7	81—2850	Lever — Governor Spring	1
8	81—1750	Washer — Choke Control Lever	2
9	81—1450	Washer — Lock	1
10	81—0900	Nut	2
12	81—0540	Bolt — Self Tapping	1

Ref. No.	Part No.	Description	No. Used
14	81—2420	Bracket — Throttle Control	1
16	81—2470	Spacer — Choke Control Lever	1
17	81—2430	Clamp — Cable	1
18	50—0130	Bolt — Cable Clamp	1
19	81—1710	Lever — Choke Control	1
20	81—1730	Bolt — Throttle Control Brkt.	1
21	81—0850	Oil Seal — Governor Shaft	1
22	81—0860	Washer	1
23	81—0870	E—Ring	1
24	81—2830	Spring — Governor	1
25	81—0910	Rod — Carburetor	1
26	81—1170	Bolt — Self Tapping	1

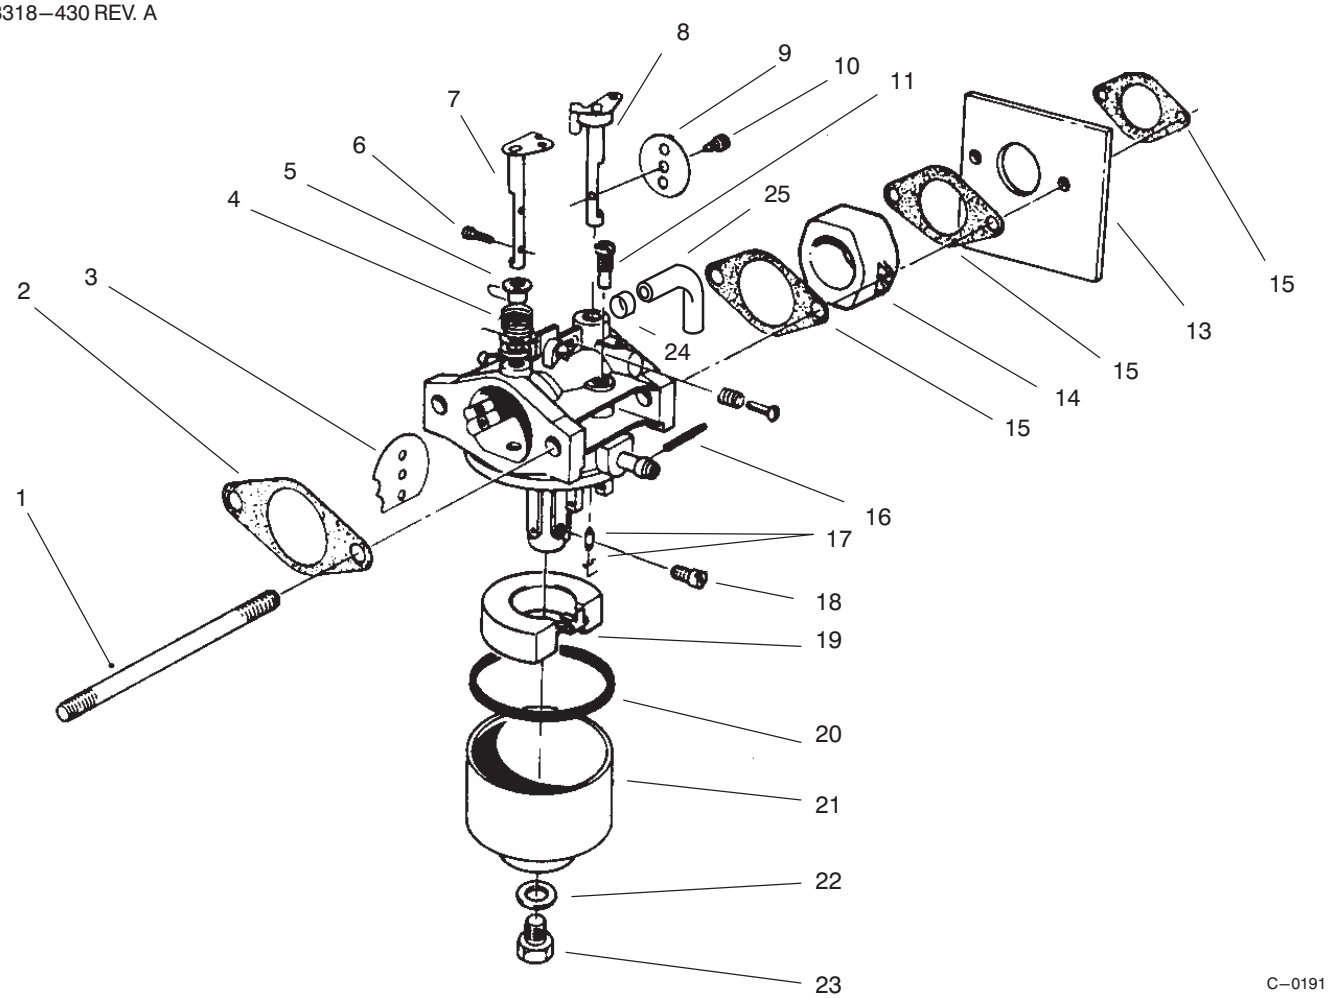


CARBURETOR ASSEMBLY
(Model No. 47PS5—6) (Model No. 26643B Only)
(Model No. 47PT6—6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81—5450	Stud Bolt — Carburetor	2
2	81—0090	Gasket	2
3	81—0240	Valve — Choke	1
4	81—0230	Spring — Choke	1
5	81—0220	Bushing — Choke Valve	1
6	81—2160	Screw	2
7	81—1950	Shaft — Choke	1
8	81—0250	Shaft — Throttle	1
9	81—0260	Valve — Throttle	1
10	81—0270	Screw — Throttle Valve	1
11	81—1030	Jet — Pilot (#40) (Model No. 26643B Only)	1
11	94—1684	Jet — Pilot (#42.5) (Model No. 26643 Only)	1
13	81—5490	Shield — Carburetor	1
14	81—5440	Insulator — Carburetor	1
15	81—0780	Gasket	3
16	81—5600	Pin	1

Ref. No.	Part No.	Description	No. Used
17	81—4910	Needle Valve/Spring Wire	1
18	81—1940	Jet — Main (#76.5)	1
*	81—2340	Jet — Main (#72.5) High Alt., Above 6000 (Optional)	1
19	81—0970	Float	1
20	81—1010	Gasket — Float Bowl	1
21	81—5660	Bowl — Float	1
22	81—1020	Gasket — Bowl Screw	1
23	81—5670	Screw — Bowl	1
24	81—5460	Clamp — Vent Tube	1
25	81—5470	Tube — Vent	1
*	12—6379	Carburetor Kit (Incl. Ref. #2, 15, 17, 20, & 22)	1
*	81—2520	Carburetor Ass'y Complete	1
*	81—5810	Needle Valve Seat Kit	1
*	94—1687	Carburetor Ass'y w/Primer (Model No. 26643 Only)	1

*Not Illustrated

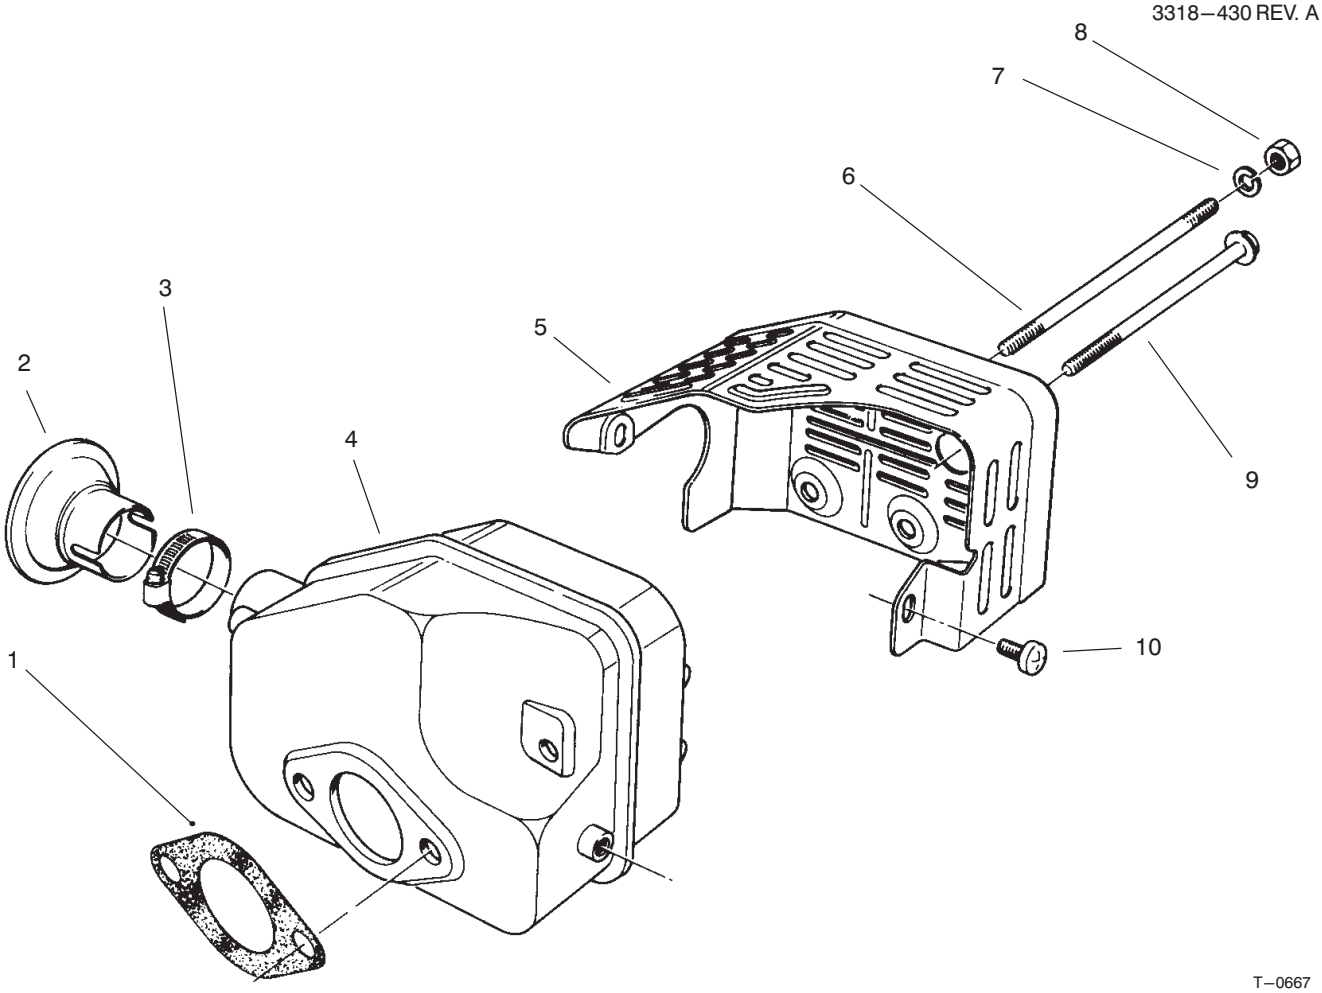

T—0667

MUFFLER ASSEMBLY
(Model No. 47PS5—6) (Model No. 26643B Only)
(Model No. 47PT6—6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81—1080	Gasket — Muffler	1
*2	81—0200	Spark Arrester	1
†3		Clamp	1
4	81—5690	Muffler	1
5	81—2450	Cover — Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81—1100	Bolt	2
7	81—1120	Washer — Lock	2
8	81—1110	Nut	2
9	81—1150	Bolt — Self Tapping	1
10	81—1140	Screw — Phillips Hd.	2

*Optional Equipment
†Obtain Locally

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
12–6379	Carburetor Kit	14	*	1
12–7699	Short Block Assembly	10	*	1
14–6009	Mounting Plate Assembly	3	*	1
14–9949	Wheel & Tire Assembly	1	20	2
14–9959	Wheel Tire & Gear Assy.	5	31	2
16–1769	Housing – 53cm	1	4	1
16–8729	Control Panel Assembly	7	9	1
17–1569	Door – Discharge	1	9	1
17–9426	Screw – Handle	8	1	2
19–4050	Knob – Handle Release	7	10	2
25–7740	Knob – Arm	5	3	2
25–7740	Knob – Arm	1	28	2
26–0670	Screw – Blade	4	4	1
27–6231	Bolt – Wheel	1	22	2
27–6231	Bolt – Wheel	5	33	2
27–6250	Bushing – Wheel	1	21	4
27–6250	Bushing – Wheel	5	32	4
29–9570	Bushing – Yoke	5	38	1
36–4780	Washer – Thrust	5	44	1
36–4791	Washer – Thrust	6	48	2
36–8070	V–Belt	5	13	1
38–7820	Bearing – Ball	6	60	1
40–1940	Washer – Wheel Bolt	1	23	4
41–7650	Puller – Flywheel	11	*	1
44–2750	Body – Primer	2	16	1
44–3172	Hose – Primer	2	6	1
46–5520	Lever – Traction	8	7	1
46–6432	Screw – Handle	8	9	1
46–8290	Plate – Logo Toro	2	1	1
48–2060	Bearing –Needle	5	21	2
49–2040	Screw – Self Tapping	5	8	8
50–0130	Bolt – Cable Clamp	13	18	1
50–7180	Nut – Lock	2	11	2
51–0414	Engine Complete	2	21	1
51–2690	Screw – Hex Washer Hd.	2	8	1
51–3215	Hose – Fuel	2	14	1
51–3216	Hose – Fuel	2	20	1
52–7430	Control Bar Assembly	8	3	1
53–1340	Bolt – Self Tapping	12	16	3
53–4690	Stop – Ground Strap	3	10	1
55–3760	Gear – Pinion 15T	6	49	1
55–3770	Gear – 49T (1st Gear)	6	58	1
55–3780	Gear – Pinion 20T	6	50	1
55–3790	Gear – 44T (2nd Gear)	6	57	1
55–3800	Gear – Pinion 25T	6	51	1
55–3810	Gear – 39T (3rd Gear)	6	56	1
57–3110	Decal – Recoil	2	2	1
60–8710	Case – Gear (Upper)	6	61	1
60–8730	Cover – Gear Case	6	46	1
60–8750	Bushing – Intrmdt. Shaft	6	47	2
60–8770	Bushing – Output Shaft	6	45	1
60–8790	Sleeve – Gear	6	55	1
60–8800	Shaft – Intermediate	6	52	1
60–8810	Retainer – Shift Fork	5	39	1
60–8840	Pulley – Half	5	10	2
60–8850	Bushing – Output Shaft	6	53	1
60–8870	Yoke – Shift	5	37	1
60–8890	Pinion – Bevel	6	59	1
60–9010	Strap – Ground	3	7	1
62–3980	Spacer	2	12	2
62–6660	Spacer	5	9	1
62–6673	Gear Case Assy. Complete	6	*	1
62–7540	Retainer – Blade	4	3	1
62–7550	Pulley – Drive	4	8	1
62–7700	Blade – 21	4	6	1
63–9330	Body – Air Cleaner	2	13	1
63–9340	Cover – Air Cleaner	2	9	1
63–9380	Foam Element – Air Cleaner	2	10	1
65–2720	Ring – Retaining	5	24	4
65–4710	Ring – Friction	5	25	2
65–4720	Spring – Compression	5	29	2
65–4730	Washer – Thrust (Inner)	5	22	2
65–4740	Washer – Thrust (Keyed)	5	23	4
65–4750	Pinion	5	28	2
65–4760	Washer –Clutch	5	26	2
65–4770	Shaft – Output	5	17	1
65–5042	Pivot Arm Assembly	5	2	2
65–5190	Bracket – Belt Guide	5	7	1
65–5200	Shield – BBC	4	7	1
65–5210	Screw – Thread Forming	1	7	2
65–5220	Screw – Cap Socket Hd.	1	26	2
65–5220	Screw – Socket Hd. Cap	5	36	2
65–5250	Clip – Spring	5	43	1
65–5440	Spring Arm Assembly	5	4	2
65–5660	Panel – Screen	1	2	1
66–0020	Panel – Vertical	1	1	1
66–0030	Bracket – Cable Support	4	1	1
66–0330	Support – Spacer	8	2	2
66–0360	Cap – End	5	5	2
66–0540	Arm – Spring Front	1	25	2
66–0560	Screw – Shoulder	1	19	2
66–0570	Bracket – Belt Guide	4	9	1
66–0580	Arm – Pivot Front	1	30	2
66–0620	Retainer – Belt	1	16	1
66–5350	Lever – Control	8	5	1
66–5370	Spring – Compression	3	9	1
66–5380	Brake Plate Assembly	3	5	1
66–6040	Key – Rocking (R.H.)	5	*	1
66–6050	Key – Rocking (L.H.)	5	27	1
66–7460	Bulb – Primer	2	17	1
66–9301	Screw – Engine Mount	2	15	3
70–9760	Bushing – Sleeve	5	19	2
71–0960	Support – Cable	8	8	1
71–7900	Cap – Hinge Bolt L.H.	1	10	1
71–7910	Cap – Hinge Bolt R.H.	1	6	1
71–8090	Mount – Handle L.H.	7	12	1
71–8100	Mount – Handle R.H.	7	11	1
71–8580	Spacer – Door	1	12	2
71–9280	Filter – Fuel	2	18	1
71–9470	Door – Bag	9	3	1
71–9480	Handle – Door	9	2	1
71–9640	Ramp – Discharge	1	27	1
71–9650	Access – Cover	1	14	1
71–9680	Bag – Grass 53cm	9	5	1
71–9840	Spring – Door	1	11	2
71–9870	Decal – Deck 53cm	1	29	1
71–9874	Decal – Panel	7	7	1
71–9920	Cover – Top	1	15	1
71–9930	Frame – Grass Bag	9	4	1
74–1660	Cover – Wheel	5	30	2
74–1670	Spacer – Wheel Cover	5	34	2
76–0760	Key – Shift	5	41	2
76–0770	Collar – Shift	5	42	1
76–0780	Sleeve – Shift Key	5	40	1
76–0920	Lever – Shift	5	16	1
76–2930	Retainer – Cable	5	15	1
77–5260	Strap – Insulation	3	4	1
81–0090	Gasket	14	2	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
81–0090	Gasket – Air Cleaner	2	5	1
81–0162	Fuel Tank Assembly	2	4	1
81–0181	Spark Plug	11	7	1
81–0200	Spark Arrester	15	*2	1
81–0220	Bushing – Choke Valve	14	5	1
81–0230	Spring – Choke	14	4	1
81–0240	Valve – Choke	14	3	1
81–0250	Shaft – Throttle	14	8	1
81–0260	Valve – Throttle	14	9	1
81–0270	Screw – Throttle Valve	14	10	1
81–0520	Pin – Crankcase	10	20	2
81–0540	Bolt (30mm Lg.)	10	15	5
81–0540	Bolt – Self Tapping	13	12	1
81–0560	Plate – Mounting	10	19	1
81–0570	Bolt (20mm Lg.)	10	18	4
81–0580	Piston (58mm)	10	5	1
81–0590	Ring Set	10	2	1
81–0600	Pin – Wrist	10	4	1
81–0610	Bearing – Wrist Pin	10	17	1
81–0620	Circlip	10	3	2
81–0690	Bearing – Upper (20mm)	10	8	1
81–0700	Bearing – Lower (25mm)	10	12	1
81–0710	Thrust Washer – Upper	10	7	1
81–0720	Oil Seal – Upper	10	6	1
81–0730	Thrust Washer – Lower	10	13	1
81–0740	Oil Seal – Lower	10	14	1
81–0750	Bracket – Governor Arm	10	11	1
81–0760	Pin – Crankshaft	10	16	1
81–0770	Collar – Governor	10	10	1
81–0780	Gasket	14	15	3
81–0840	Shaft – Governor	13	4	1
81–0850	Oil Seal – Governor Shaft	13	21	1
81–0860	Washer	13	22	1
81–0870	E–Ring	13	23	1
81–0900	Nut	13	10	2
81–0910	Rod – Carburetor	13	25	1
81–0920	Spring – Carburetor Rod	13	1	1
81–0970	Float	14	19	1
81–1010	Gasket – Float Bowl	14	20	1
81–1020	Gasket – Bowl Screw	14	22	1
81–1030	Jet – Pilot (#40)	14	11	1
81–1080	Gasket – Muffler	15	1	1
81–1100	Bolt	15	6	2
81–1110	Nut	15	8	2
81–1120	Washer – Lock	15	7	2
81–1140	Screw – Phillips Hd.	15	10	2
81–1150	Bolt – Self Tapping	15	9	1
81–1170	Bolt – Self Tapping	13	26	1
81–1210	Reel – Rope Pulley	12	6	1
81–1220	Spring – Dog	12	12	1
81–1230	Dog	12	13	1
81–1240	Spring – Compression	12	11	1
81–1250	Retainer – Dog	12	14	1
81–1260	Bolt – Shoulder	12	15	1
81–1270	Rope	12	5	1
81–1280	Bolt	12	9	4
81–1290	Pulley – Starter Cup	12	2	1
81–1300	Bolt (16mm Lg.)	12	3	3
81–1330	Nut	11	2	1
81–1450	Washer – Lock	13	9	1
81–1480	Clamp	11	6	1
81–1500	Cover – Spark Plug	11	8	1
81–1630	Handle – Recoil	12	4	1
81–1710	Lever – Choke Control	13	19	1
81–1730	Bolt – Throttle Control Brkt.	13	20	1
81–1750	Washer – Choke Control	13	8	2
81–1770	Spacer – Governor Spring	13	6	1
81–1940	Jet – Main (#76.5)	14	18	1
81–1950	Shaft – Choke	14	7	1
81–2040	Starter Assembly	12	*	1
81–2070	Cover – Cooling Fan	12	1	1
81–2090	Case – Recoil	12	8	1
81–2160	Screw	14	6	2
81–2300	Spring & Retainer	12	*	1
81–2340	Jet – Main (#72.5) High Alt.,	14	*	1
81–2370	Key – Flywheel	11	4	1
81–2420	Bracket – Throttle Control	13	14	1
81–2430	Clamp – Cable	13	17	1
81–2450	Cover – Muffler	15	5	1
81–2460	Spring – Choke Control	13	5	1
81–2470	Spacer – Choke Control	13	16	1
81–2520	Carburetor Ass'y Complete	14	*	1
81–2800	Crankcase/Cylinder Ass'y	10	1	1
81–2810	Flywheel – Magneto	11	3	1
81–2820	Coil/Ignition Assembly	11	5	1
81–2830	Spring – Governor	13	24	1
81–2850	Lever – Governor Spring	13	7	1
81–3980	Stop – Rope	2	24	1
81–4600	Crankshaft/Connecting Rod	10	9	1
81–4910	Needle Valve/Spring Wire	14	17	1
81–5410	Rod – Choke	13	3	1
81–5420	Governor Arm/Bolt Ass'y	13	2	1
81–5440	Insulator – Carburetor	14	14	1
81–5450	Stud Bolt – Carburetor	14	1	2
81–5460	Clamp – Vent Tube	14	24	1
81–5470	Tube – Vent	14	25	1
81–5490	Shield – Carburetor	14	13	1
81–5600	Pin	14	16	1
81–5660	Bowl – Float	14	21	1
81–5670	Screw – Bowl	14	23	1
81–5680	Capscrew – Hex Hd.	11	1	1
81–5690	Muffler	15	4	1
81–5760	Insert – Recoil Handle	12	17	1
81–5810	Needle Valve Seat Kit	14	*	1
84–7820	Plate – Mounting	3	2	1
92–9665	Screw – Self Tapping	7	8	5
92–9698	Screw – Shoulder, Metric	3	6	1
93–3772	Rope – Guide	8	14	1
93–4105	Decal – Danger	1	13	1
93–6632	Control – Ground Speed	7	1	1
93–6634	Cable – Traction	8	10	1
93–6635	Control – Throttle	7	4	1
93–6662	Decal – Instruction	7	3	1
93–7027	Cable – Brake	3	8	1
93–7027	Cable – Brake	8	13	1
93–7199	Gas Cap Assembly	2	3	1
93–7661	Extension – Muffler Guard	2	23	1
94–1684	Jet – Pilot (#42.5)	14	11	1
94–1685	Crankcase/Cylinder Ass'y	10	1	1
94–1687	Carburetor Ass'y w/Primer	14	*	1
94–4910	Handle	7	5	1
95–4478	Rope – Guide	8	14	1
237–153	Seal – ORing	5	18	2
2412–95	Clamp – Hose	2	19	4
302–56	Fitting – Grease	5	20	2
321–3	Screw – Cap Hex. Hd.	8	6	1
321–52	Screw – Hex Hd. Cap	8	15	1
322–29	Screw – Hex Hd. Cap	1	8	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3253–22	Washer – Lock	4	5	1
3256–16	Washer – Flat	2	7	1
3256–22	Washer – Flat	8	11	1
3256–24	Washer – Flat	5	12	1
3256–24	Washer – Flat	1	17	1
3272–5	Pin – Cotter	5	14	1
3290–378	Tie – Cable	7	6	5
3290–459	Rivet	3	3	2
3296–5	Nut – Lock	5	11	1
3296–6	Nut – Lock	1	24	4
3296–6	Nut – Lock	5	35	2
3296–42	Nut – Lock	8	4	3
3296–58	Nut – Lock	8	12	2
32121–120	Pin – Coil	6	54	1
32144–10	Screw – Self Tapping	3	1	1
32144–15	Screw – Hex Flange Hd.	1	18	1
32144–70	Screw – Cap Hex. Hd.	1	3	6
32144–70	Screw – Hex. Washer Hd.	5	1	5
32144–70	Screw – Taptite	4	2	7
32144–111	Screw – Index Hex Washer	9	1	5
32144–112	Screw – Self Tapping	3	11	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

Date								