FORM NO. 3318−757 REV B


TORO®

MODEL NO. 30387−60001 & UP

PARTS CATALOG

DEBRIS BLOWER

For Groundsmaster® 3000

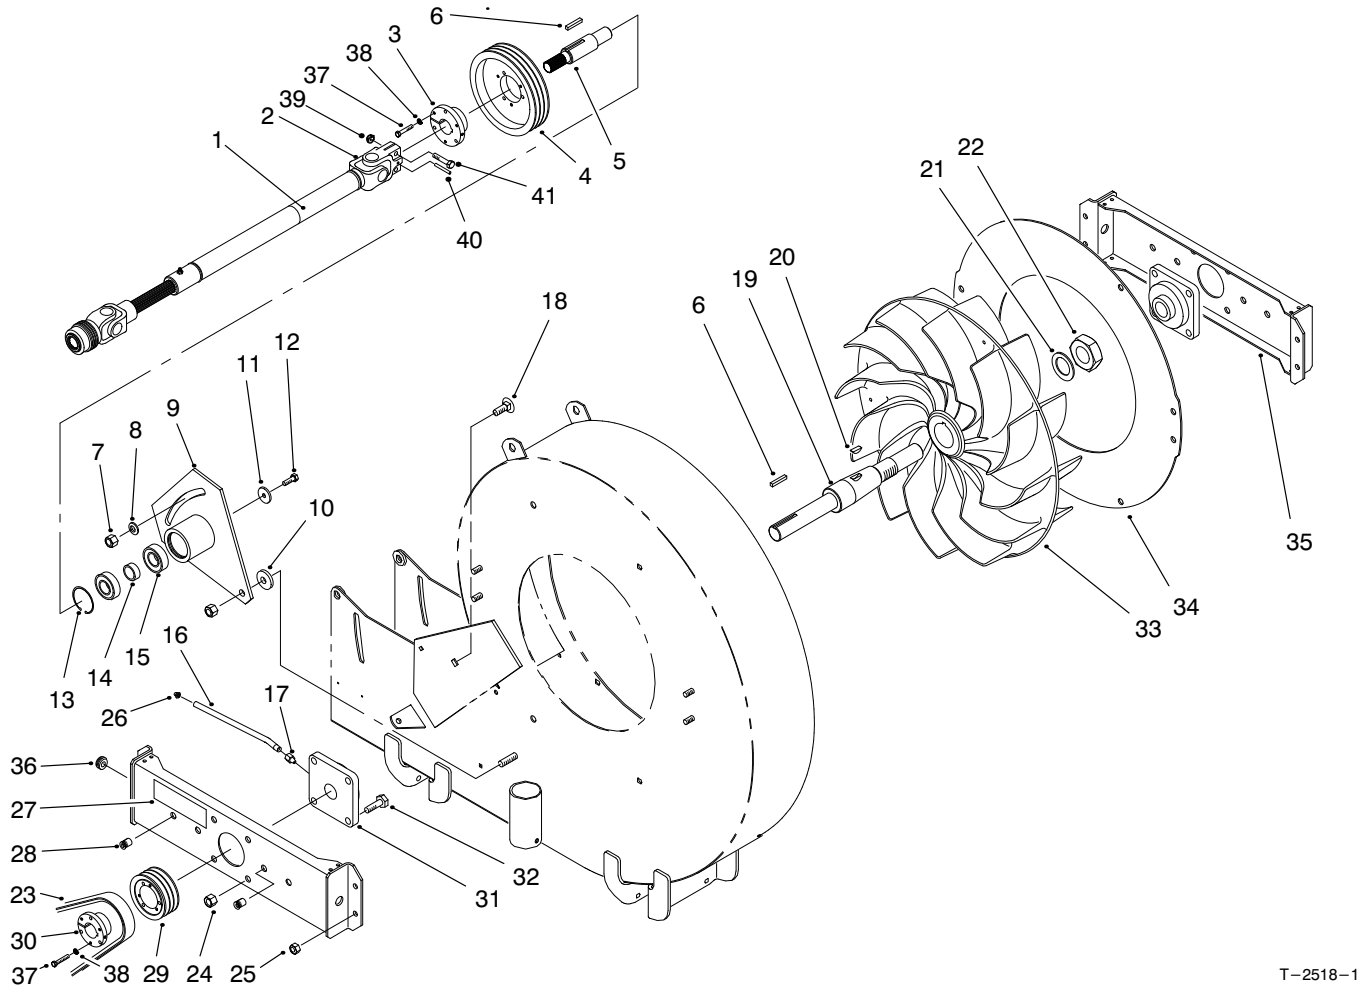


T−2518−1

FAN DRIVE ASM

Ref. No.	Part No.	Description	No. Used
1	95−0894	Decal−Rotation	1
2	95−0897	Shaft−Drive (Incl. Ref. #1)	1
3	95−0882	Hub (Incl. Ref. #37 & 38)	1
4	95−0881	Pulley	1
5	94−8973	Shaft	1
6	5−1718	Key−Square	2
7	33026−00	Nut−Lock	2
8	33096−00	Washer−Flat	1
9	94−8968	Asm−Tensioner	1
10	30−8770	Washer	1
11	71−5320	Washer−Support	1
12	48−7700	Screw−HH	1
13	32120−8	Ring−Snap	1
14	94−8972	Spacer−Bearing	1
15	94−8978	Asm−Bearing	2
16	95−0887	Pipe−Grease	2
17	95−0888	Adapter	2
18	33126−035	Screw−CARR	1
19	94−8952	Shaft−Fan	1
20	3257−42	Key−Woodruff	1
21	77−0950	Washer−Castor	1
22	3218−17	Nut−Jam	1
23	94−8976	Belt	1
24	32146−9	Nut−Lock	8
25	33025−00	Nut−Lock	8
26	302−5	Fitting−Grease	2
27	95−0892	Decal−Danger	2
28	93−5449	Nut−Clinch	4
29	95−0883	Hub	1
30	95−0884	Pulley	1
31	94−8987	Asm−Bearing (Incl. Ref. #26)	2

© The TORO Company − 1996, Rev. 1998
All Rights Reserved

TPS

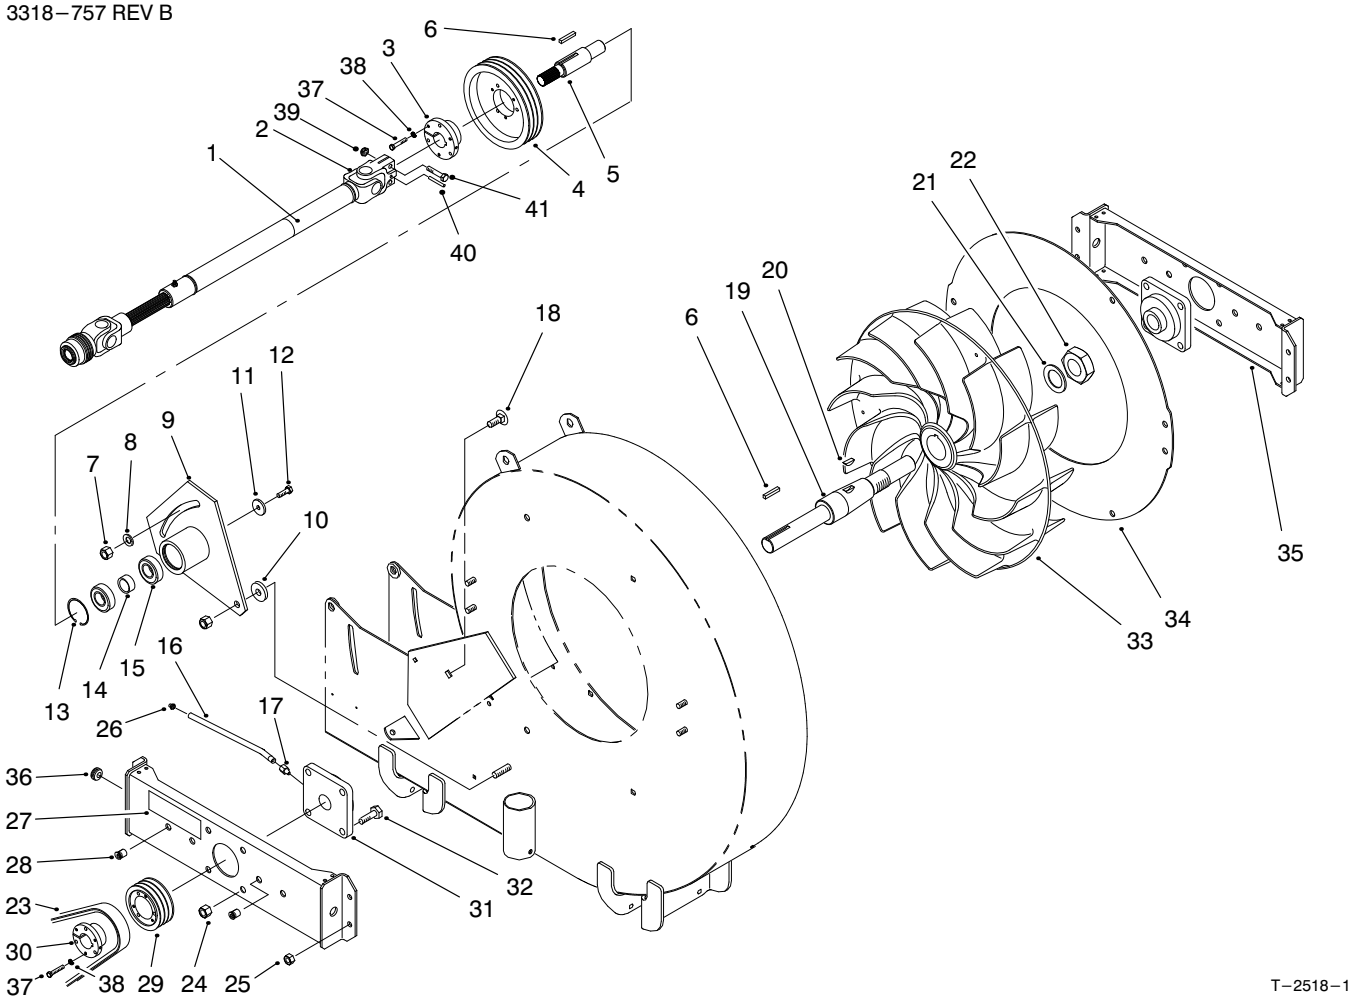


T−2518−1

FAN DRIVE ASM (Continued)

Ref. No.	Part No.	Description	No. Used
32	26−0671	Bolt−Blade	8
33	94−8950	Fan	1
34	94−8962	Panel−Access	1
35	95−0898	Asm−Bracket (Incl. Ref. #27 & 28)	2
36	95−3259	Grommet	2

Ref. No.	Part No.	Description	No. Used
37	32104−96	Screw−HH	6
38	3253−18	Washer−Spring Lock	6
39	33024−00	Nut	2
40	32121−34	Pin−Roll	1
41	33114−040	Screw	2

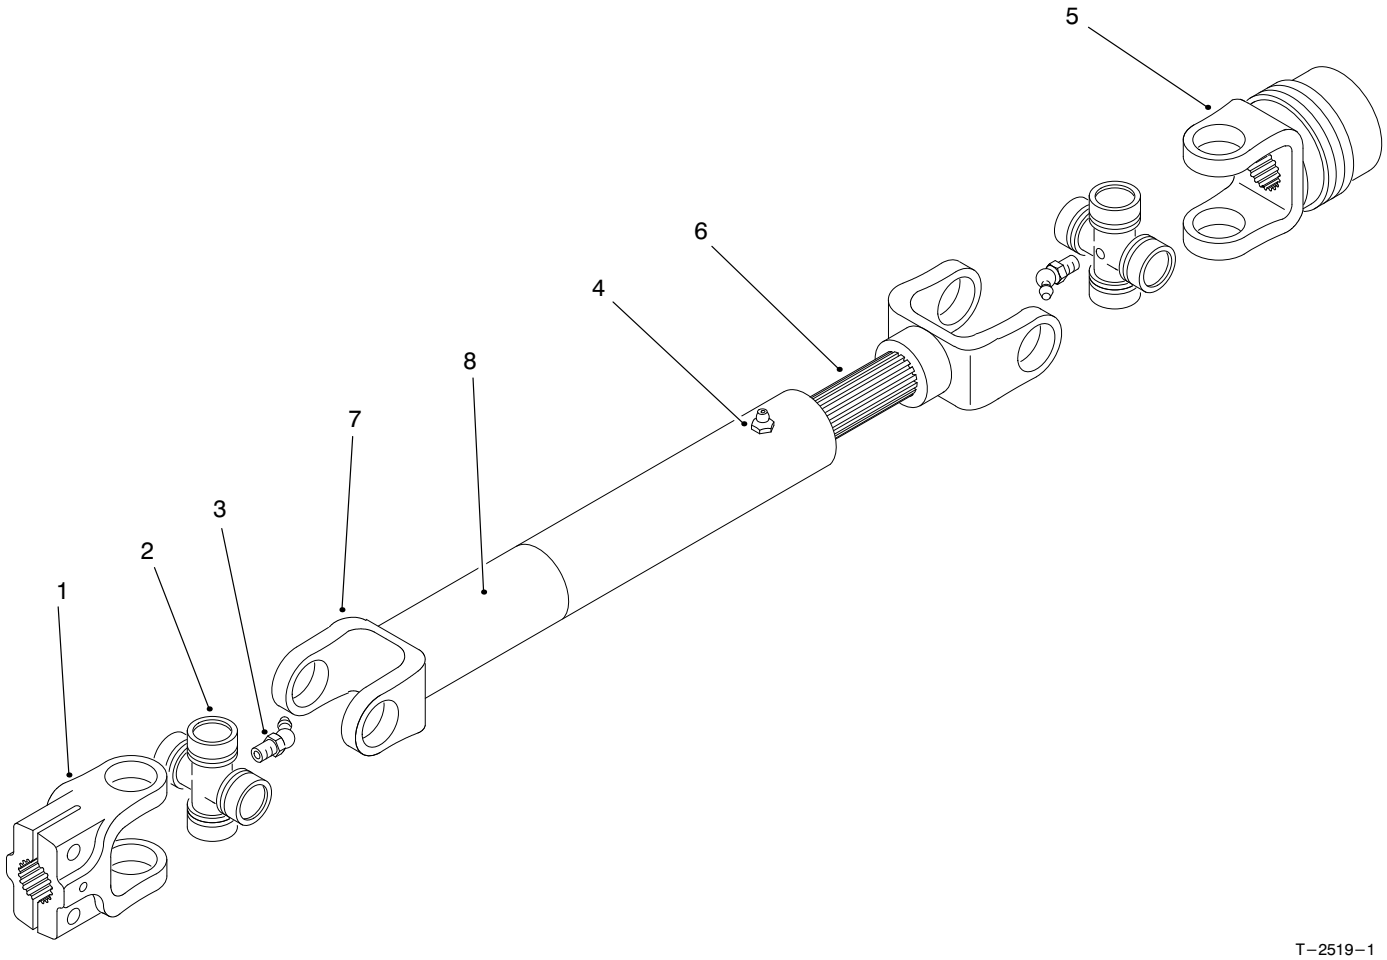


T−2519−1

DRIVESHAFT ASM NO. 95−0897

Ref. No.	Part No.	Description	No. Used
1	54−9040	End Yoke	1
2	54−9180	U−Joint Kit	2
3	62−3820	Fitting−Grease	2
4	302−58	Fitting−Grease	1
5	93−4633	Asm−Yoke, Auto Lock	1

Ref. No.	Part No.	Description	No. Used
6	93−4634	Shaft−Slip Yoke	1
7	95−3252	Tube−Slip Yoke (Incl Ref. #8)	1
8	95−0894	Decal−Rotation	1

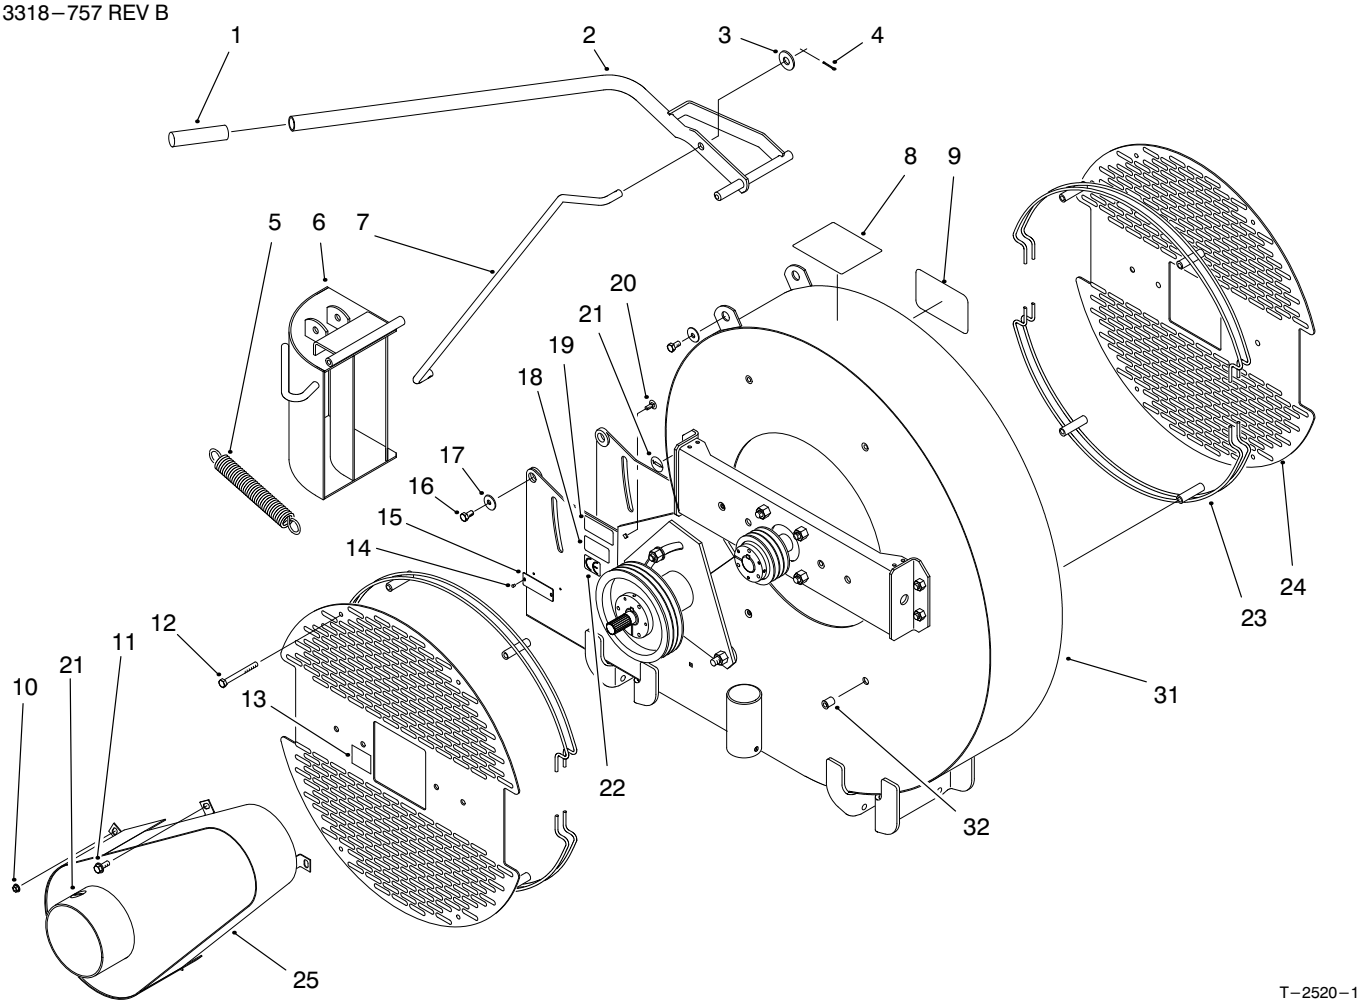


T−2520−1

HOUSING ASM

Ref. No.	Part No.	Description	No. Used
1	95−0886	Handle−Grip	1
2	95−0879	Asm−Handle	1
3	3256−6	Washer−Flat	2
4	3272−11	Pin−Cotter	2
5	95−0885	Spring	1
6	95−0852	Asm−Deflector	1
7	95−0880	Rod−Linkage	1
8	95−0893	Decal−Caution	1
9	67−1300	Decal−Toro	1
10	33003−00	Nut−HF	2
11	33104−020	Screw−HHF	4
12	33114−080	Screw−HH	8
13	88−8950	Decal−Warning	1
14	3290−271	Rivet−Pop	2
†15		Plate−Serial	1

Ref. No.	Part No.	Description	No. Used
16	48−7700	Screw−HH	4
17	3256−82	Washer−Flat	4
†18		Decal−Safety Std	1
19	55−4300	Decal−Warning	1
20	33123−016	Screw−Carriage	2
21	58−6520	Decal−Grease	3
22	93−7252	Decal−CE Mark	1
23	95−0871	Asm−Guard	4
24	95−3250	Guard−Fan (Incl. Ref. #13)	2
25	95−0866	Asm−Guard	1
31	95−0899	Asm−Housing (Incl. Ref. #8, 9, 19 & 32)	1
32	93−5449	Nut−Clinch	8

† Not Serviced Separately.

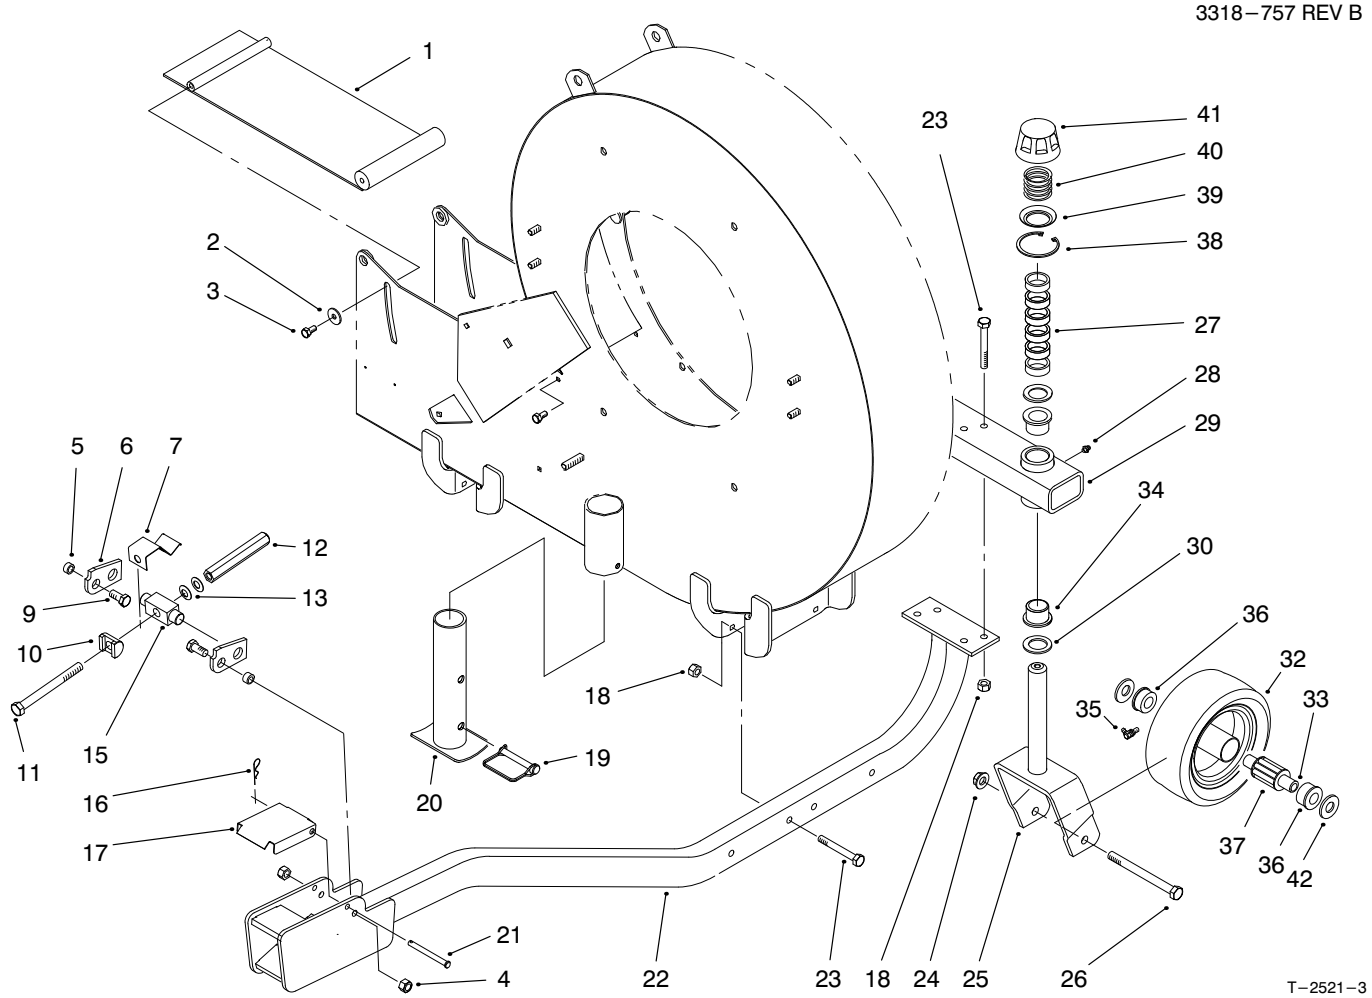

LIFT ARM ASM

Ref. No.	Part No.	Description	No. Used
1	95−0857	Asm−Deflector	1
2	3256−82	Washer−Flat	2
3	48−7700	Screw−HH	4
4	33025−00	Nut−Lock	4
5	93−4618	Spacer−Pivot	4
6	93−4675	Plate−Release	4
7	93−4818	Spring−Lever	2
9	33115−025	Screw−HH	4
10	93−4676	Shaft−Latch	2
11	3213−24	Screw−HH	2
12	93−4678	Lever−Release	2
13	3290−413	Washer−Spring	4
15	93−4677	Hub−Release	2
16	3290−467	Pin−Cotter	2
17	93−4819	Cover−Latch	2
18	33025−00	Nut−Lock	12
19	93−4696	Pin−Snapper	1
20	95−0859	Asm−Stand	1
21	283−88	Pin−Clevis	2
22	95−0867	Asm−Lift Arm LH	2
23	33115−080	Screw−HH	12
24	32128−23	Nut−Lock	2
25	98−7068	Asm−Front Castor Fork	2

Ref. No.	Part No.	Description	No. Used
26	325−22	Screw−HH	2
27	63−0070	Spacer	12
28	302−5	Fitting−Grease	2
29	95−3251	Asm−Bumper (Incl. Ref. #28 & 34)	1
30	3−6781	Washer−Thrust	4
32	85−5760	Wheel−Castor (Incl. Ref. #35−37)	2
33	62−4340	Spanner	2
34	94−1291	Bushing−Special	4
35	302−40	Fitting−Grease	2
36	62−5580	Bearing−Outer	4
37	83−4740	Bearing−Roller	2
38	92−5581	Ring−Retaining, Internal	2
39	92−5583	Washer−Cap	2
40	92−5584	Spring−Compression	2
41	92−8861	Cap−Height of Cut	2
42	3256−6	Washer−Flat	4
*	92−8862	Asm−Cap, Height of Cut (Incl. Ref. #38−41)	2
*	95−3083	Kit−Wheel, Castor (Incl. Ref. #24, 26, 32−33 & 42)	2

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3−6781	Washer−Thrust	5	30	4
5−1718	Key−Square	1	6	2
26−0671	Bolt−Blade	1	32	8
30−8770	Washer	1	10	1
48−7700	Screw−HH	5	3	4
48−7700	Screw−HH	1	12	1
48−7700	Screw−HH	4	16	4
54−9040	End Yoke	3	1	1
54−9180	U−Joint Kit	3	2	2
55−4300	Decal−Warning	4	19	1
58−6520	Decal−Grease	4	21	3
62−3820	Fitting−Grease	3	3	2
62−4340	Spanner	5	33	2
62−5580	Bearing−Outer	5	36	4
63−0070	Spacer	5	27	12
67−1300	Decal−Toro	4	9	1
71−5320	Washer−Support	1	11	1
77−0950	Washer−Castor	1	21	1
83−4740	Bearing−Roller	5	37	2
85−5760	Wheel−Castor	5	32	2
88−8950	Decal−Warning	4	13	1
92−5581	Ring−Retaining, Internal	5	38	2
92−5583	Washer−Cap	5	39	2
92−5584	Spring−Compression	5	40	2
92−8861	Cap−Height of Cut	5	41	2
92−8862	Asm−Cap, Height of Cut	5	*	2
93−4618	Spacer−Pivot	5	5	4
93−4633	Asm−Yoke, Auto Lock	3	5	1
93−4634	Shaft−Slip Yoke	3	6	1
93−4675	Plate−Release	5	6	4
93−4676	Shaft−Latch	5	10	2
93−4677	Hub−Release	5	15	2
93−4678	Lever−Release	5	12	2
93−4696	Pin−Snapper	5	19	1
93−4818	Spring−Lever	5	7	2
93−4819	Cover−Latch	5	17	2
93−5449	Nut−Clinch	1	28	4
93−5449	Nut−Clinch	4	32	8
93−7252	Decal−CE Mark	4	22	1
94−1291	Bushing−Special	5	34	4
94−8950	Fan	2	33	1
94−8952	Shaft−Fan	1	19	1
94−8962	Panel−Access	2	34	1
94−8968	Asm−Tensioner	1	9	1
94−8972	Spacer−Bearing	1	14	1
94−8973	Shaft	1	5	1
94−8976	Belt	1	23	1
94−8978	Asm−Bearing	1	15	2
94−8987	Asm−Bearing	1	31	2
95−0852	Asm−Deflector	4	6	1
95−0857	Asm−Deflector	5	1	1
95−0859	Asm−Stand	5	20	1
95−0866	Asm−Guard	4	25	1
95−0867	Asm−Lift Arm, LH	5	22	2
95−0871	Asm−Guard	4	23	4
95−0879	Asm−Handle	4	2	1
95−0880	Rod−Linkage	4	7	1
95−0881	Pulley	1	4	1
95−0882	Hub	1	3	1
95−0883	Hub	1	29	1
95−0884	Pulley	1	30	1
95−0885	Spring	4	5	1
95−0886	Handle−Grip	4	1	1
95−0887	Pipe−Grease	1	16	2
95−0888	Adapter	1	17	2
95−0892	Decal−Danger	1	27	2
95−0893	Decal−Caution	4	8	1
95−0894	Decal−Rotation	1	1	1
95−0894	Decal−Rotation	3	8	1
95−0897	Shaft−Drive	1	2	1
95−0898	Asm−Bracket	2	35	2
95−3083	Kit−Wheel, Castor	5	*	2
95−0899	Asm−Housing	4	31	1
95−3250	Guard−Fan	4	24	2
95−3251	Asm−Bumper	5	29	1
95−3252	Tube−Slip Yoke	3	7	1
95−3259	Grommet	2	36	2
98−7068	Asm−Front Castor Fork	5	25	2
283−88	Pin−Clevis	5	21	2
302−5	Fitting−Grease	1	26	2
302−5	Fitting−Grease	5	28	2
302−40	Fitting−Grease	5	35	2
302−58	Fitting−Grease	3	4	1
325−22	Screw−HH	5	26	2
3213−24	Screw−HH	5	11	2
3218−17	Nut−Jam	1	22	1
3253−18	Washer−Spring Lock	2	38	6
3256−6	Washer−Flat	5	42	4
3256−6	Washer−Flat	4	3	2
3256−82	Washer−Flat	5	2	2
3256−82	Washer−Flat	4	17	4
3257−42	Key−Woodruff	1	20	1
3272−11	Pin−Cotter	4	4	2
3290−271	Rivet−Pop	4	14	2
3290−413	Washer−Spring	5	13	4
3290−467	Pin−Cotter	5	16	2
32104−96	Screw−HH	2	37	6
32120−8	Ring−Snap	1	13	1
32121−34	Pin−Roll	2	40	1
32128−23	Nut−Lock	5	24	2
32146−9	Nut−Lock	1	24	8
33003−00	Nut−HF	4	10	2
33024−00	Nut	2	39	2
33025−00	Nut−Lock	5	4	4
33025−00	Nut−Lock	5	18	12
33025−00	Nut−Lock	1	25	8
33026−00	Nut−Lock	1	7	2
33096−00	Washer−Flat	1	8	1
33104−020	Screw−HHF	4	11	4
33114−040	Screw	2	41	2
33114−080	Screw−HH	4	12	8
33115−025	Screw−HH	5	9	4
33115−080	Screw−HH	5	23	12
33123−016	Screw−CARR	4	20	2
33126−035	Screw−CARR	1	18	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Debris Blower has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the front of the housing. In any correspondence concerning the Debris Blower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Debris Blower.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								