Form No. 3365-363 Rev B

TORO®

Count on it.

Parts Catalog

# Electric Hose Reel Kit

## Multi-Pro® 5600/5700 Turf Sprayer

**Model No. 41569—Serial No. 310000001 and Up**

CE

Register at www.Toro.com.

Original Instructions (EN)

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquid Propane

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Valve Box Assembly . . . . . 4
Hardi Ball Valve Assembly No. 106-1268 . . . . . 6
Rear Assembly . . . . . 7
Hose Reel Assembly . . . . . 8
Spray Gun Assembly No. 100-6733 . . . . . 9
Hose Reel Assembly No. 106-5083 . . . . . 10
Hose Reel Frame Assembly No. 104-8714 . . . . . 11

**© 2012—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**




**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

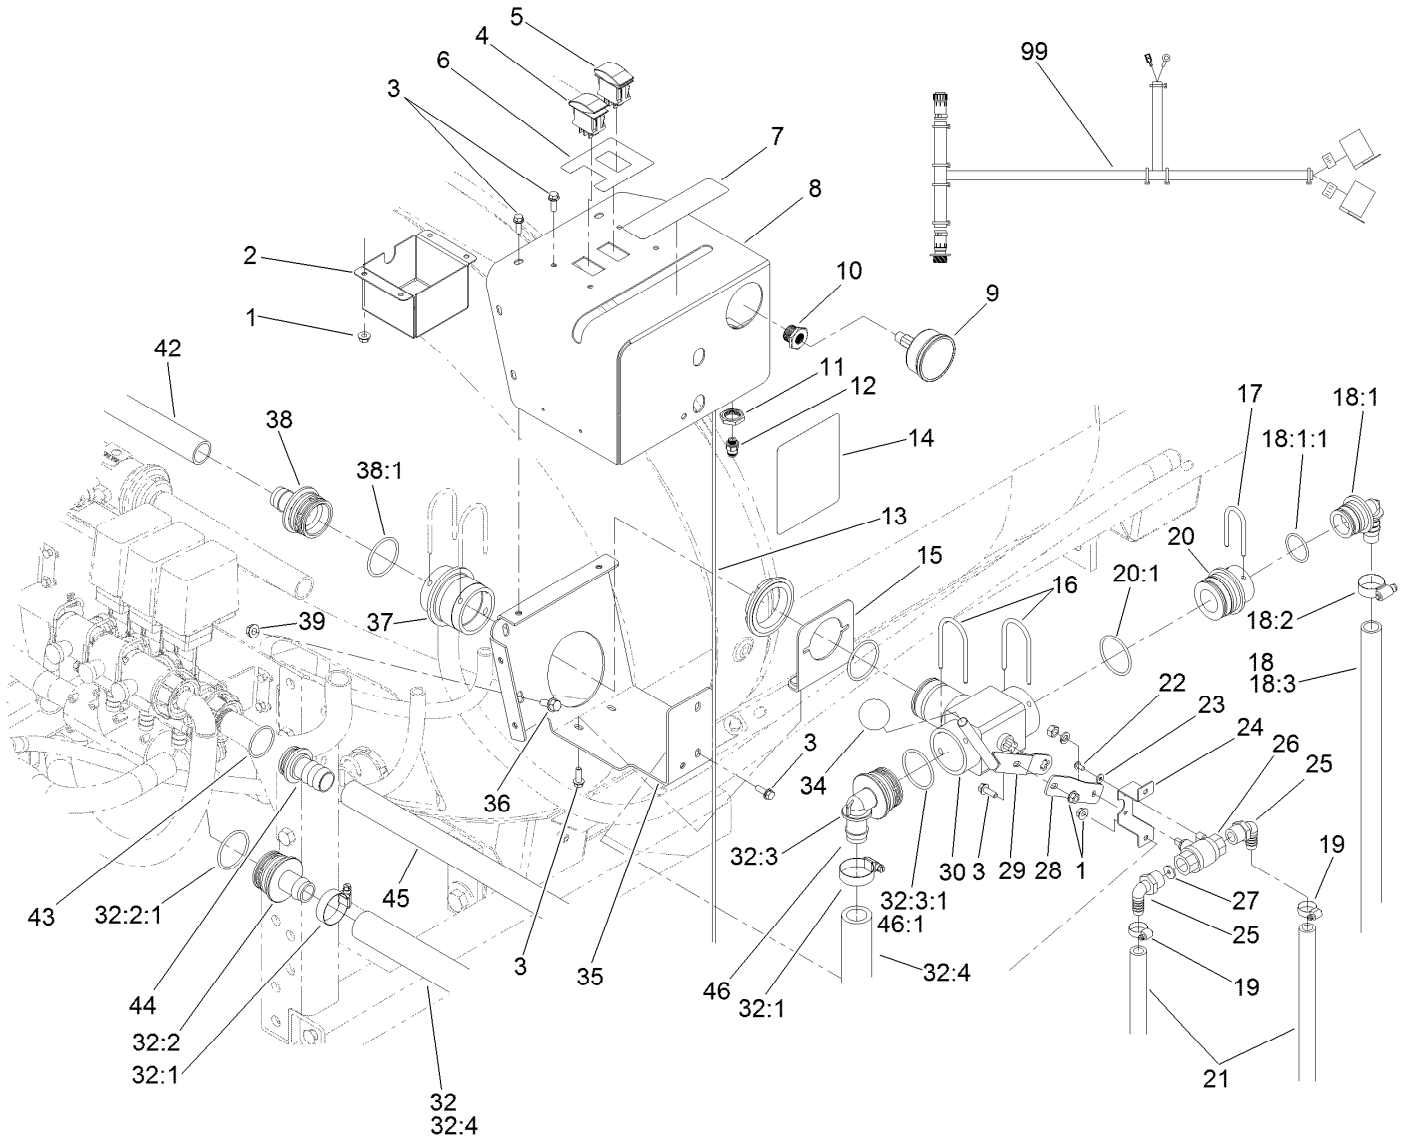


# Valve Box Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 32128-33 | 7 | Nut-HF |
| 2 | 106-1322-03 | 1 | Box-Switch |
| 3 | 3234-4 | 14 | Screw-HHF |
| 4 | 100-8589 | 1 | Switch-Rocker |
| 5 | 100-1535 | 1 | Switch |
| 6 | 106-1278 | 1 | Decal-Panel, Switch |
| 7 | 106-1277 | 1 | Decal-Control, Valve |
| 8 | 106-1258-03 | 1 | Cover Plate ASM |
| 9 | 120-8546 | 1 | Gauge-Pressure |
| 10 | 100-8665 | 1 | Reducer-Gauge, Pressure |
| 11 | 100-8666 | 1 | Nut-Reducer |
| 12 | 100-8667 | 1 | Coupler-Reducer |
| 13 | 106-1312 | 1 | Tube |
| 14 | 107-8764 | 1 | Decal |
| 15 | 106-1294-03 | 1 | Bracket-Valve |
| 16 | 100-8635 | 4 | Fork |
| 17 | 100-6708 | 1 | Fork |
| 18 | 110-5063 | 1 | Hose ASM |
| 18:1 | 106-4940 | 1 | Hosebarb-90 DEG |
| 18:1:1 | 100-6712 | 1 | O-Ring |
| 18:2 | 2412-129 | 1 | Clamp-Hose |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 18:3 | 110-5064 | 1 | Hose |
| 19 | 2412-36 | 2 | Clamp-Hose |
| 20 | 106-4938 | 1 | Reducer ASM |
| 20:1 | 100-8637 | 1 | O-Ring |
| 21 | 104-8859 | 2 | Hose |
| 22 | 3251-1 | 2 | Screw-PPH |
| 23 | 3256-21 | 2 | Washer-Flat |
| 24 | 106-1275-03 | 1 | Bracket-Valve |
| 25 | 42046 | 2 | Elbow-90 DEG |
| 26 | 106-1265 | 1 | Valve-Ball, Precision |
| 27 | 106-1293 | 1 | Washer-Flat |
| 28 | 106-1263-03 | 1 | Plate-Lever, Valve |
| 29 | 106-1262-03 | 1 | Valve Lever ASM |
| 30 | 106-1268 | 1 | Valve-Ball |
| 32 | 107-8781 | 1 | Hose ASM |
| 32:1 | 2412-3 | 2 | Clamp-Hose |
| 32:2 | 106-4932 | 1 | Hosebarb-Straight |
| 32:2:1 | 100-8637 | 1 | O-Ring |
| 32:3 | 106-4933 | 1 | Hosebarb ASM |
| 32:3:1 | 100-8637 | 1 | O-Ring |
| 32:4 | 107-8780 | 1 | Hose |

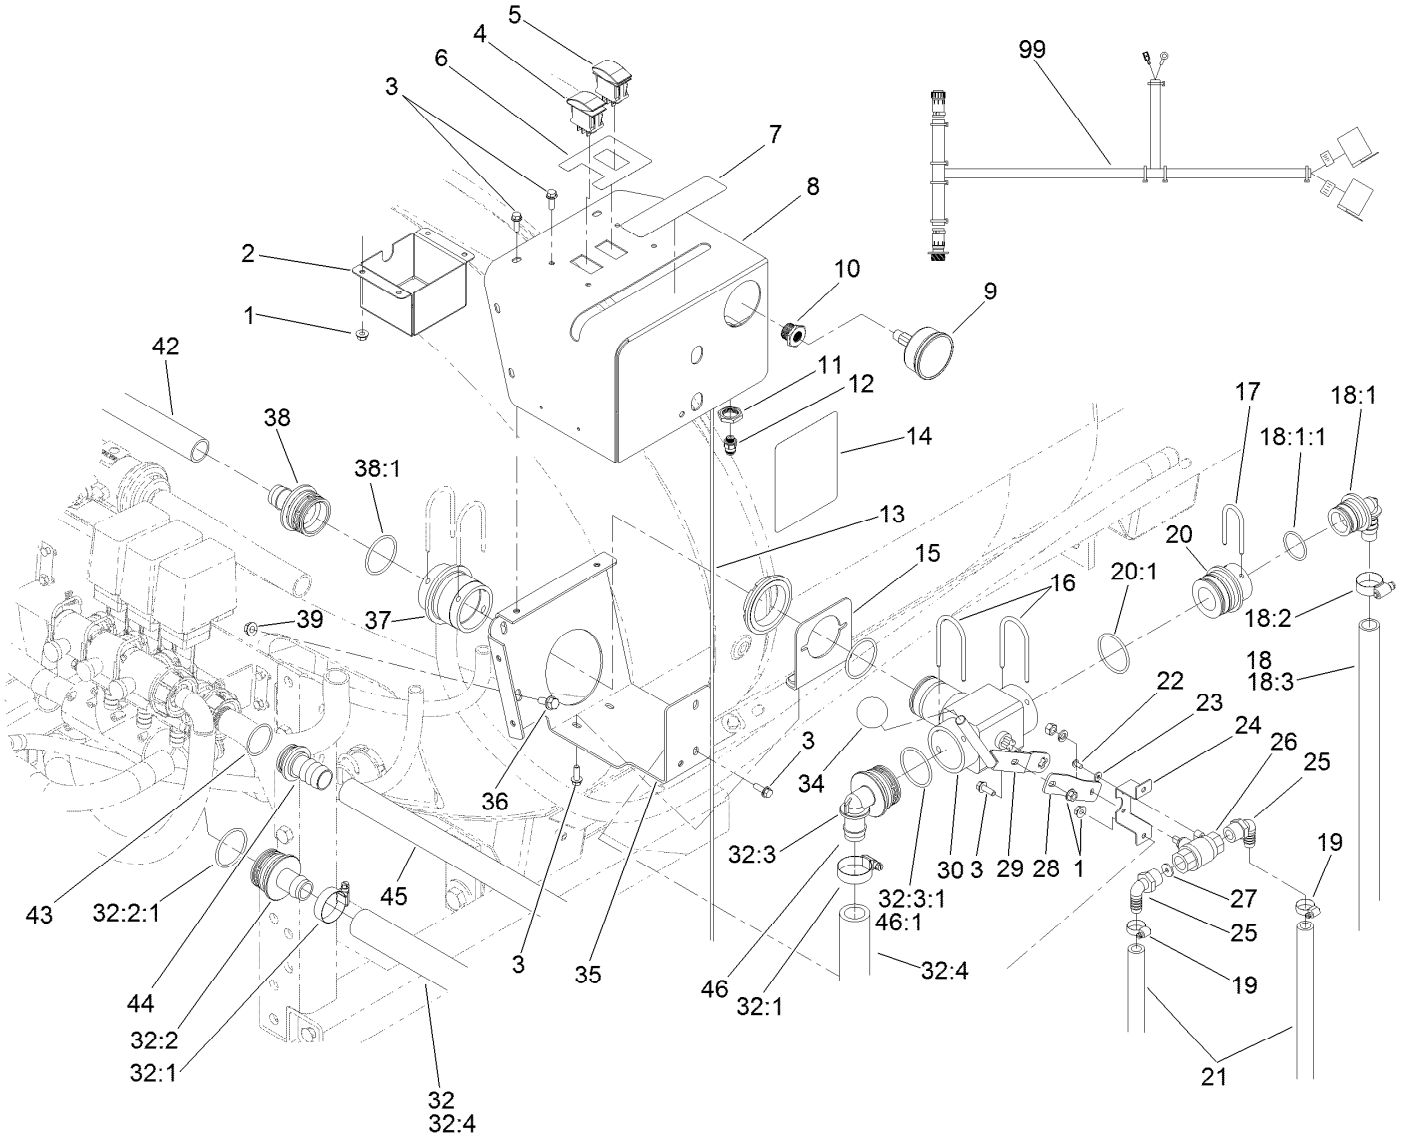


# Valve Box Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 34 | 92-8564 | 1 | Knob |
| 35 | 106-1256-03 | 1 | Plate-Mount, Valve |
| 36 | 3234-5 | 2 | Screw-HHF |
| 37 | 100-7050 | 1 | Bulkhead |
| 38 | 106-4932 | 1 | Hosebarb-Straight |
| 38:1 | 100-8637 | 1 | O-Ring |
| 39 | 32128-20 | 2 | Nut-HF |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 42 | 119-0446 | 1 | Hose-Agitation |
| 43 | 117-7922 | 1 | 0-Ring |
| 44 | 119-0499 | 1 | Hosebarb |
| 45 | 119-0516 | 3 | Hose-Drain Valve |
| 46 | 106-4933 | 1 | Hosebarb ASM |
| 46:1 | 100-8637 | 1 | O-Ring |
| 99 | 106-1307 | 1 | Harness-Reel, Hose |

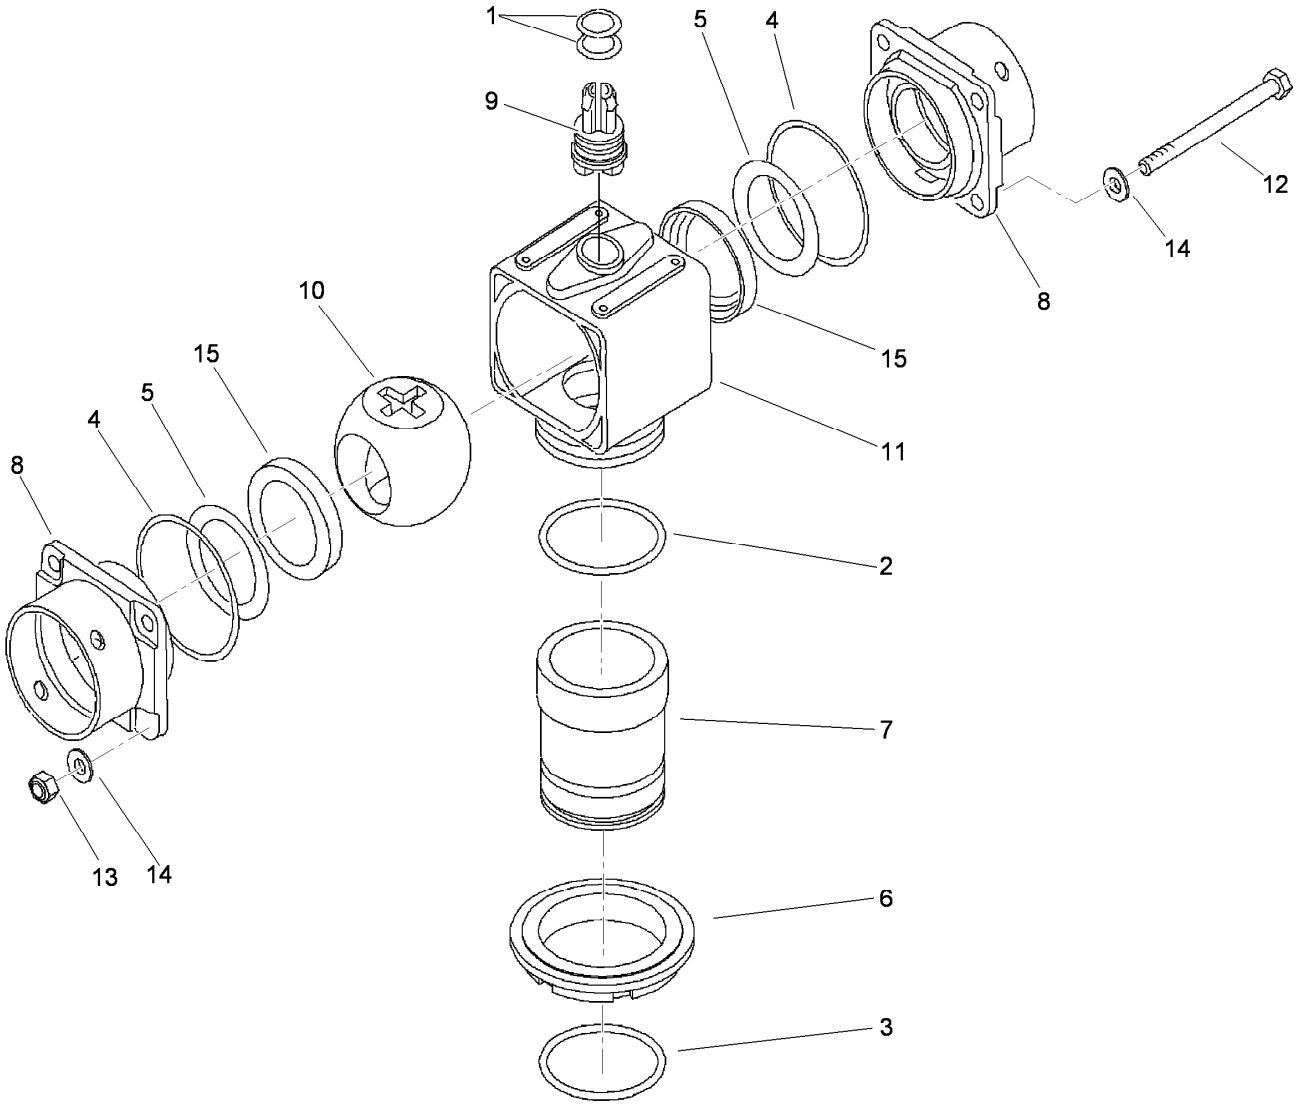


# Hardi Ball Valve Assembly No. 106-1268


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 100-6644 | 2 | O-Ring |
| 2 | 100-8671 | 1 | O-Ring |
| 3 | 100-8637 | 1 | O-Ring |
| 4 | 100-8693 | 2 | O-Ring |
| 5 | 100-8694 | 2 | O-Ring |
| 6 | 104-8857 | 1 | Nut |
| 7 | 104-8858 | 1 | Nipple |
| 8 | 100-8687 | 2 | Cover-End, 3-Way Valve |
| 9 | 100-8686 | 1 | Spindle-Valve, 3-Way |
| 10 | 100-8697 | 1 | Ball-3 Way Valve |
| 11 | 106-1323 | 1 | Housing |
| 12 | 33113-080 | 4 | Screw-HH |
| 13 | 33023-00 | 4 | Nut-Lock |
| 14 | 100-8692 | 8 | Washer |
| 15 | 100-8695 | 2 | Seat-Ball |

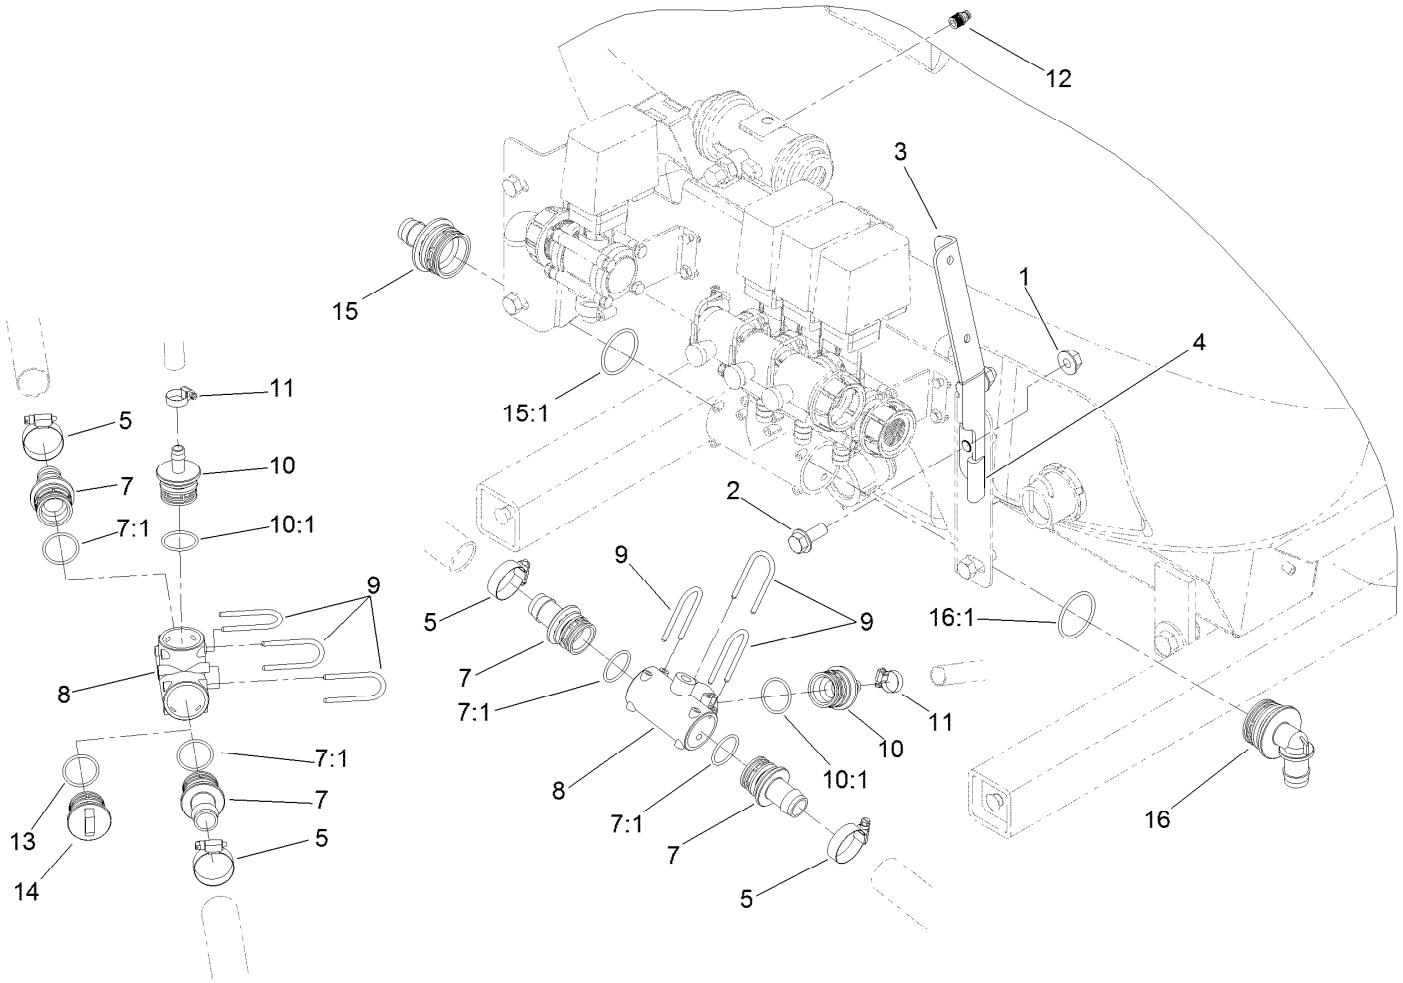


# Rear Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 32128-49 | 1 | Nut-HHF |
| 2 | 3234-32 | 1 | Screw-HHF |
| 3 | 108-3402-03 | 1 | Angle-Mount, Valve |
| 4 | 106-1320 | 1 | Trim |
| 5 | 2412-3 | 8 | Clamp-Hose |
| 7 | 106-4935 | 4 | Hosebarb ASM |
| 7:1 | 100-6712 | 1 | O-Ring |
| 8 | 104-9041 | 2 | Tee |
| 9 | 100-6708 | 6 | Fork |
| 10 | 106-4934 | 2 | Hosebarb ASM |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 10:1 | 100-6712 | 1 | O-Ring |
| 11 | 2412-36 | 2 | Clamp-Hose |
| 12 | 100-8674 | 1 | Coupler-Tube |
| 13 | 100-6712 | 1 | O-Ring |
| 14 | 104-9029 | 1 | Plug |
| 15 | 106-4932 | 1 | Hosebarb-Straight |
| 15:1 | 100-8637 | 1 | O-Ring |
| 16 | 106-4933 | 1 | Hosebarb ASM |
| 16:1 | 100-8637 | 1 | O-Ring |

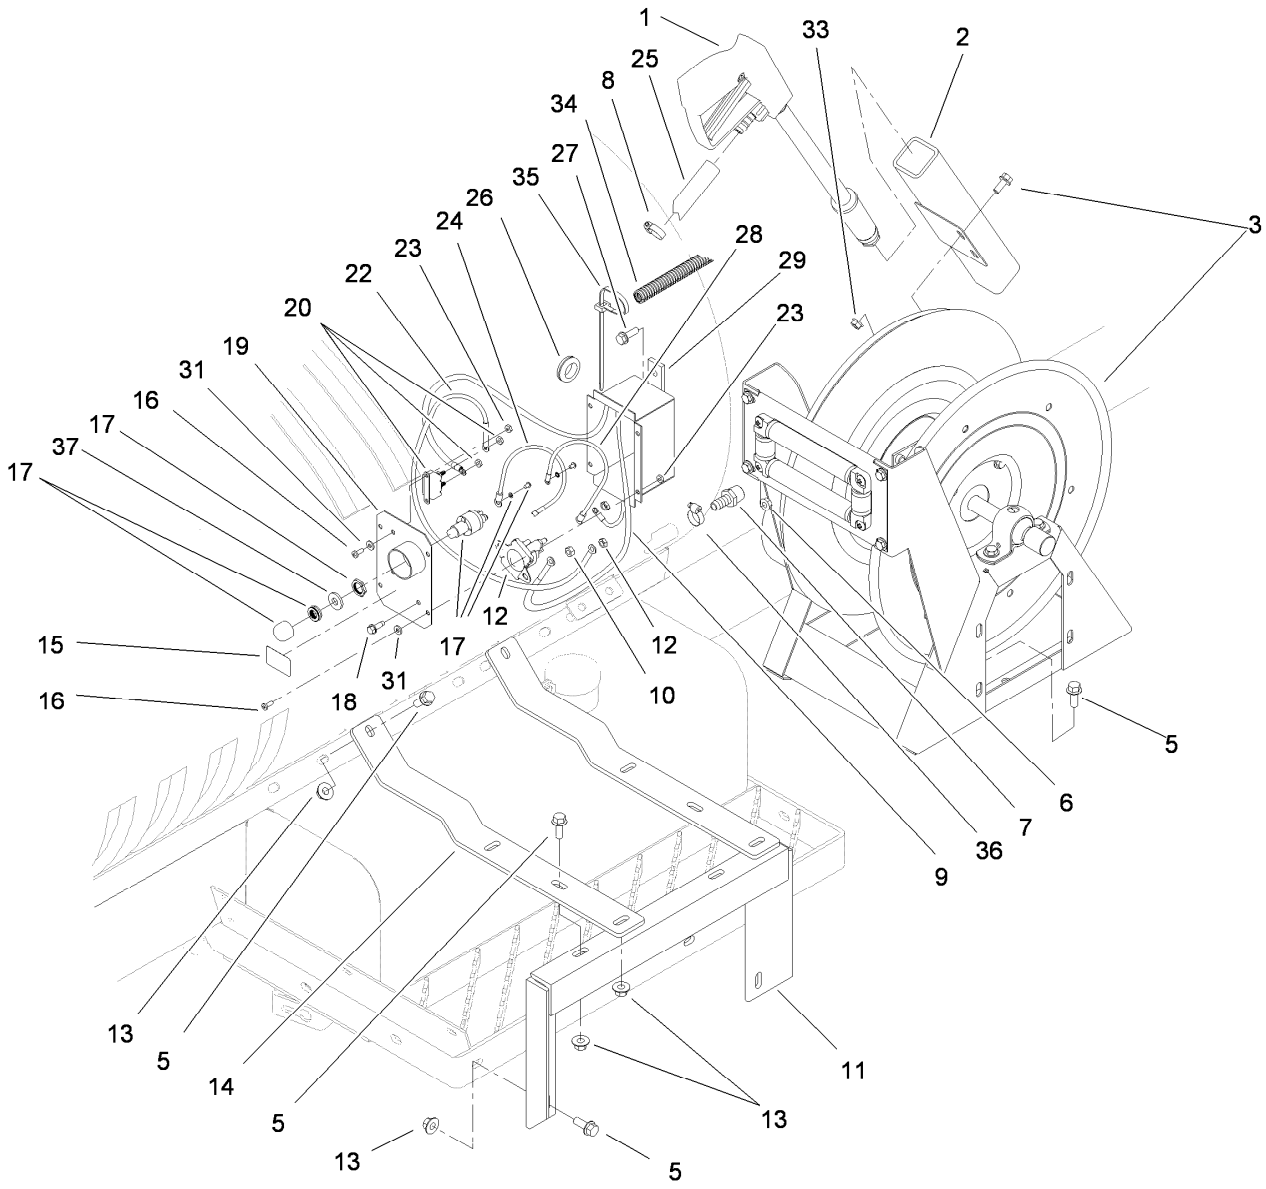


# Hose Reel Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 100-6733 | 1 | Sprayer-Handheld |
| 2 | 106-1233-03 | 1 | Hand Spray Mounting ASM |
| 3 | 106-5083 | 1 | Hose Reel ASM |
| 5 | 3234-11 | 10 | Screw-HHF |
| 6 | 32128-20 | 1 | Nut-HF |
| 7 | 110-5065 | 1 | Hosebarb |
| 8 | 2412-36 | 1 | Clamp-Hose |
| 9 | 106-5078 | 1 | Harness-Wire |
| 10 | 3217-5 | 2 | Nut-Hex |
| 11 | 106-1228-03 | 1 | Hose Reel Support ASM |
| 12 | 111674 | 1 | Solenoid-Starter |
| 13 | 32128-43 | 10 | Nut-Flange |
| 14 | 106-1227-03 | 2 | Strap-Hose Reel |
| 15 | 107-8757 | 1 | Decal-Reel, Hose |
| 16 | 3250-31 | 6 | Screw-PPH |
| 17 | 42202 | 1 | Switch-Momentary |
| 18 | 321-4 | 2 | Screw-HH |
| 19 | 95-2495-03 | 1 | Electrical Box Cover ASM |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 20 | 42201 | 1 | Breaker-Circuit |
| 22 | 42206 | 1 | Harness-Wire (Solenoid To Breaker) |
| 23 | 3219-14 | 6 | Nut-Hex |
| 24 | 42208 | 1 | Harness-Wire (Switch To Solenoid) |
| 25 | 107-8756 | 1 | Hose Hose Reel ASM |
| 26 | 100-3815 | 1 | Grommet-Rubber |
| 27 | 3234-17 | 1 | Screw-HHF |
| 28 | 42207 | 1 | Harness-Wire (Solenoid To Switch) |
| 29 | 42397-03 | 1 | Electrical Box ASM |
| 31 | 3256-14 | 6 | Washer-Flat |
| 33 | 32128-20 | 2 | Nut-HF |
| 34 | 106-5089 | 1 | Conduit-12 Inch |
| 35 | 3290-378 | 10 | Tie-Cable |
| 36 | 2412-129 | 1 | Clamp-Hose |
| 37 | 105-0842 | 1 | Spacer |

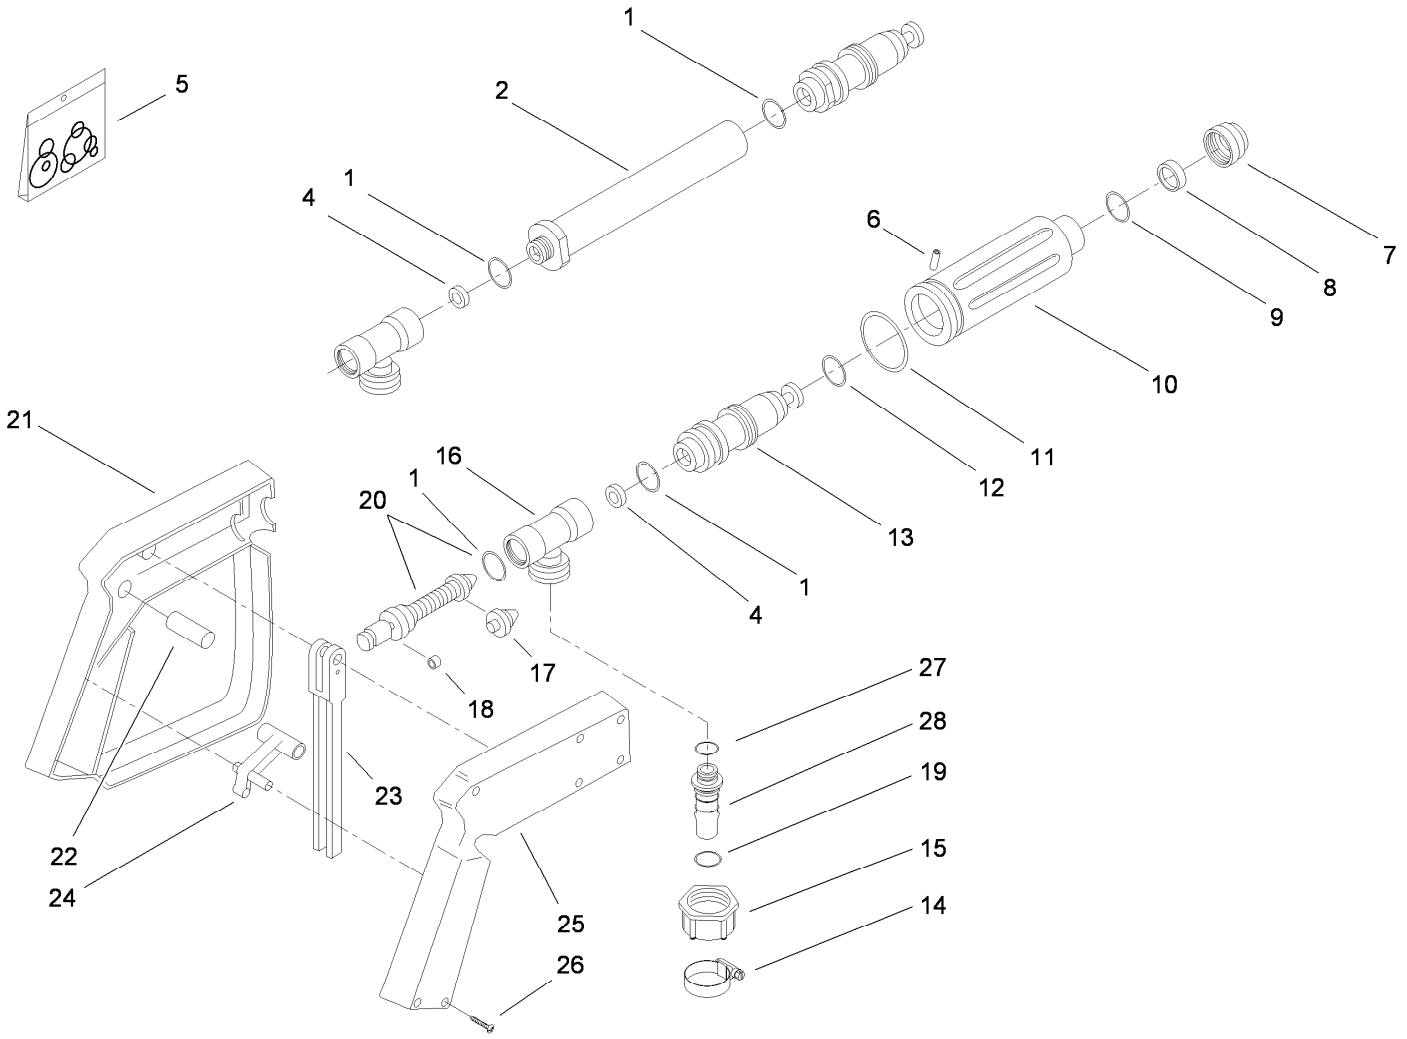


# Spray Gun Assembly No. 100-6733


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 100-6649 | 3 | O-Ring |
| 2 | 99-0885 | 1 | Extension-Lance |
| 4 | 99-0884 | 1 | Seal-Valve, On/Off |
| 5 | 99-0779 | 1 | Repair Kit |
| 6 | 99-0887 | 1 | Pin |
| 7 | 99-0890 | 1 | Housing-Nozzle |
| 8 | 99-0889 | 1 | Nozzle-Ceramic |
| 9 | 100-6650 | 1 | O-Ring |
| 10 | 99-0886 | 1 | Housing-Swirl |
| 11 | 100-6646 | 1 | O-Ring |
| 12 | 100-6644 | 1 | O-Ring |
| 13 | 99-0780 | 1 | Swirl |
| 14 | 99-0772 | 1 | Clamp-Hose |
| 15 | 107-8734 | 1 | Nut-Swivel |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16 | 99-0883 | 1 | Housing-Valve |
| 17 | 104-8860 | 1 | Cone |
| 18 | 104-8861 | 1 | Sleeve-Rubber |
| 19 | 100-6647 | 1 | O-Ring |
| 20 | 99-0882 | 1 | Valve ASM |
| 21 | 99-0877 | 1 | Handle-LH |
| 22 | 99-0878 | 1 | Stop-Trigger, Rubber |
| 23 | 99-0880 | 1 | Arm-Trigger |
| 24 | 99-0879 | 1 | Arm-Safety, Trigger |
| 25 | 99-0881 | 1 | Handle-RH |
| 26 | 100-6666 | 1 | Screw |
| 27 | 100-6648 | 1 | O-Ring |
| 28 | 106-5093 | 1 | Hosebarb-Brass |

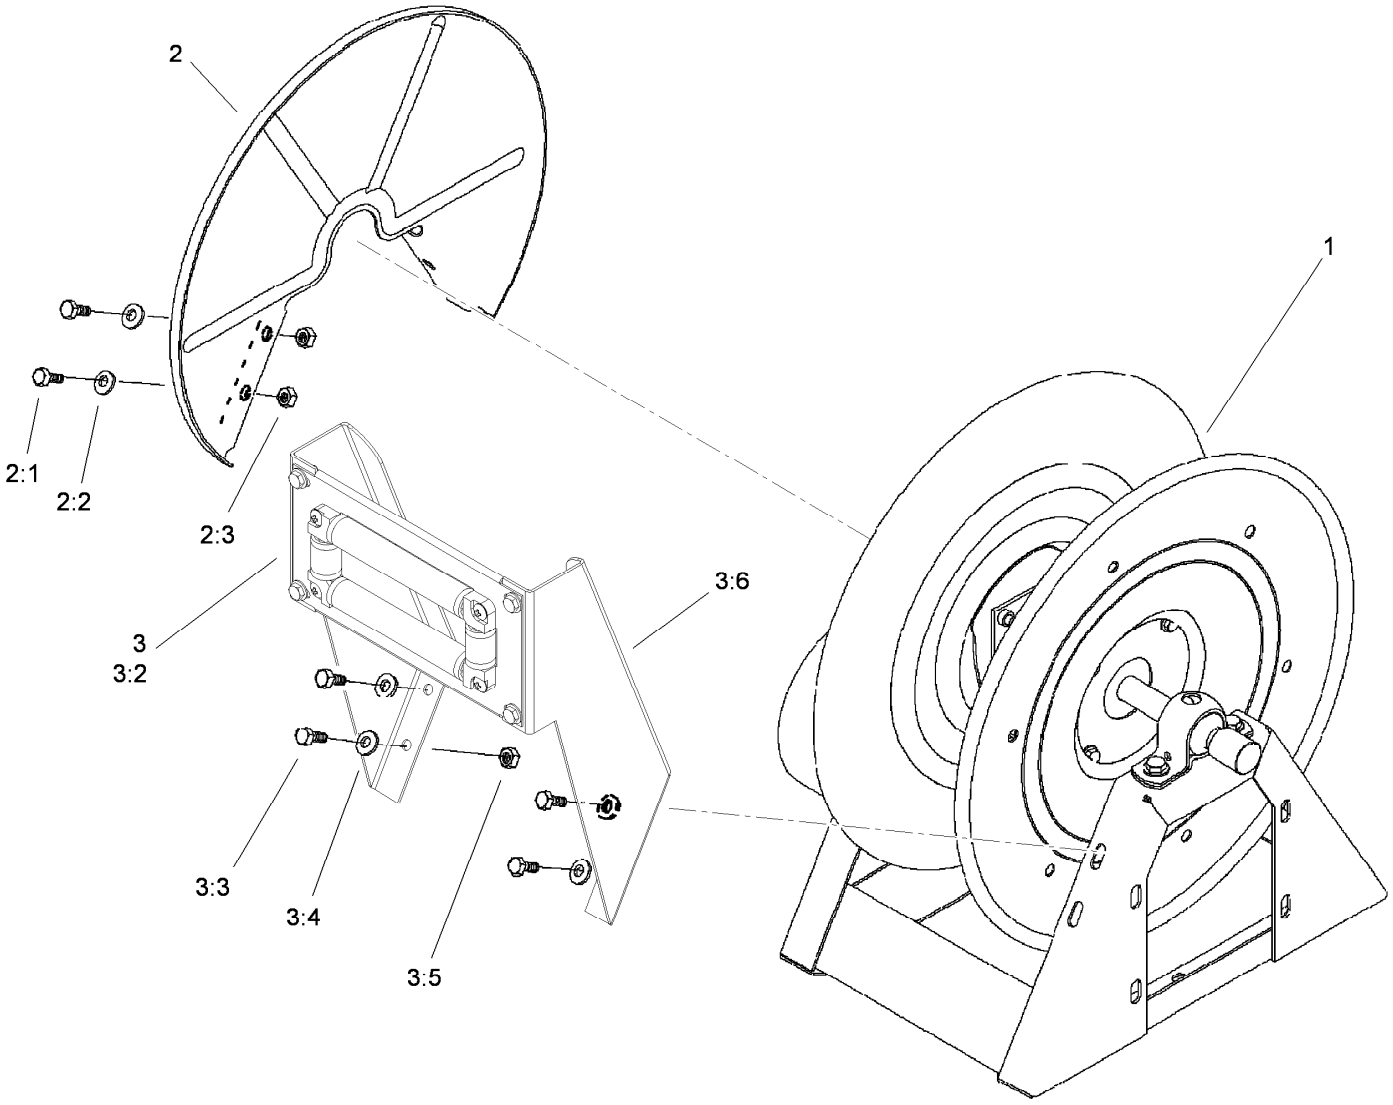


# Hose Reel Assembly No. 106-5083

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 104-8714 | 1 | Hose Reel Frame ASM |
| 2 | 104-8715 | 1 | Chainguard-Reel, Hose |
| 2:1 | 322-5 | 4 | Screw-HH |
| 2:2 | 3256-23 | 4 | Washer-Flat |
| 2:3 | 3296-29 | 4 | Nut-Lock, NI |
| 3 | 104-8799 | 1 | Guide-Reel, Hose |
| 3:2 | 104-8820 | 1 | Bracket-Roller Guide, Right |
| 3:3 | 322-5 | 8 | Screw-HH |
| 3:4 | 3256-23 | 8 | Washer-Flat |
| 3:5 | 3296-29 | 8 | Nut-Lock, NI |
| 3:6 | 104-8821 | 1 | Bracket-Roller Guide, Left |

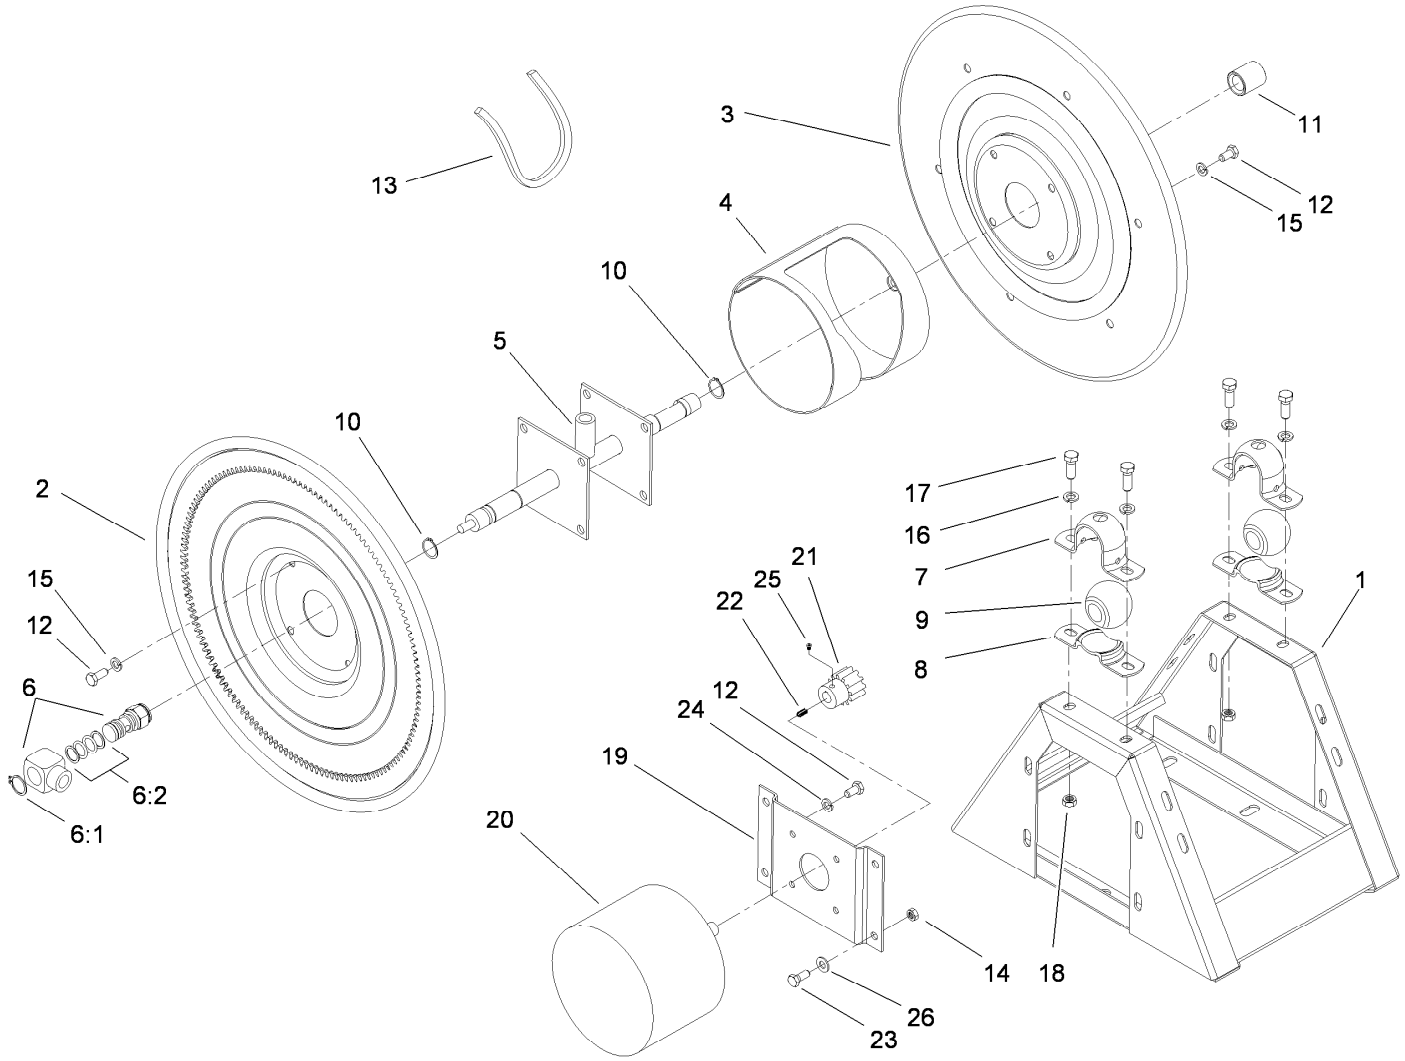


# Hose Reel Frame Assembly No. 104-8714

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8803 | 1 | Hose Reel Frame ASM |
| 2 | 104-8804 | 1 | Disc And Gear ASM |
| 3 | 104-8805 | 1 | Disc-Crank, Side |
| 4 | 104-8806 | 1 | Drum-Center |
| 5 | 104-8807 | 1 | Axle ASM |
| 6 | 104-8808 | 1 | Swivel ASM |
| 6:1 | 104-8812 | 1 | Ring-Retainer |
| 6:2 | 104-8864 | 1 | Swivel Seal Kit |
| 7 | 104-8809 | 2 | Block-Pillow, Top |
| 8 | 104-8810 | 2 | Block-Pillow, Bottom |
| 9 | 104-8811 | 2 | Bearing |
| 10 | 104-8812 | 2 | Ring-Retainer |
| 11 | 104-8813 | 1 | Cap-Pipe |
| 12 | 322-3 | 8 | Screw-HH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 104-8814 | 1 | Trim-Edge, Drum |
| 14 | 3296-29 | 4 | Nut-Lock, NI |
| 15 | 3256-23 | 8 | Washer-Flat |
| 16 | 3253-21 | 4 | Washer-Lock |
| 17 | 323-6 | 4 | Screw-HH |
| 18 | 32128-21 | 1 | Nut-HF |
| 19 | 104-8815 | 1 | Bracket-12V Dc |
| 20 | 104-8816 | 1 | Motor-12V Dc |
| 21 | 104-8817 | 1 | Pinion |
| 22 | 104-8818 | 4 | Key |
| 23 | 322-5 | 4 | Screw-HH |
| 24 | 3253-4 | 1 | Washer-Lock |
| 25 | 104-8819 | 4 | Screw-Set |
| 26 | 3256-23 | 4 | Washer-Flat |




**Count on it.**