Form No. 3365-365 Rev B

TORO®

Count on it.

Parts Catalog

Spray Gun Kit

Multi-Pro® 5600/5700 Turf Sprayer

Model No. 41580—Serial No. 310000001 and Up

CE

Register at www.Toro.com.

Original Instructions (EN)

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Spray Gun and Manifold Assembly 4
Spray Gun Assembly No. 100-6733 6
Manifold Assembly No. 106-5096 7
Ball Valve Assembly No. 106-5095 8

© 2012—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

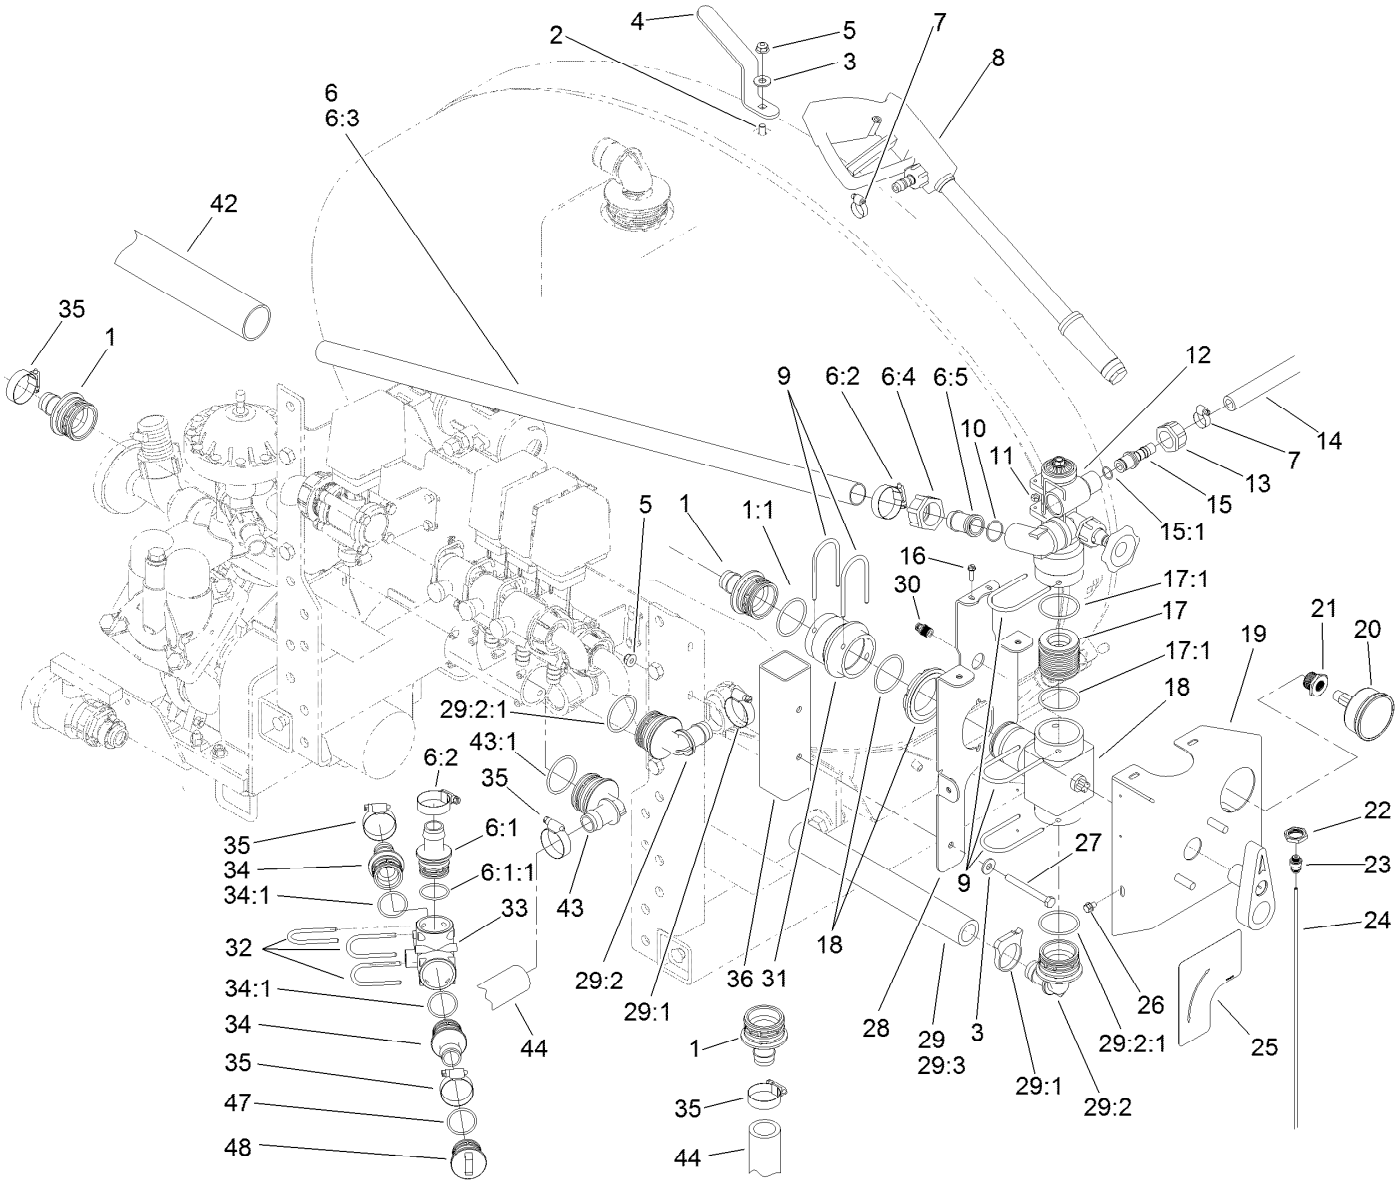


Spray Gun and Manifold Assembly

Ref.	Part Number	Qty.	Description
1	106-4932	3	Hosebarb-Straight
1:1	100-8637	1	O-Ring
2	3230-1	2	Bolt-CARR
3	3256-3	4	Washer-Flat
4	40153	2	Hook-Hose
5	104-8300	4	Nut-Flange, NI
6		1	Hose ASM ●
6:1	106-4935	1	Hosebarb ASM
6:1:1	100-6712	1	O-Ring
6:2	2412-3	2	Clamp-Hose
6:3	104-8710	1	Hose
6:4	99-0769	1	Nut
6:5	99-0781	1	Hosebarb
7	2412-36	2	Clamp-Hose
8	100-6733	1	Sprayer-Handheld
9	100-8635	5	Fork
10	100-6655	1	Gasket
11	3296-2	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
12	106-5096	1	Manifold ASM
13	99-0850	1	Nut
14	107-8751	1	Hose-Spray Gun
15	106-5205	1	Hosebarb ASM
15:1	100-6645	1	O-Ring
16	32105-13	2	Screw-HWH
17	106-4947	1	Connector
17:1	100-8637	2	O-Ring
18	106-5095	1	Valve-Ball
19	119-4969-03	1	Cover
20	120-8546	1	Gauge-Pressure
21	100-8665	1	Reducer-Gauge, Pressure
22	100-8666	1	Nut-Reducer
23	100-8667	1	Coupler-Reducer
24	106-5225	1	Tube-Pressure Gauge
25	106-5211	1	Decal-Spray Control
26	3234-26	3	Screw-HHF
27	322-14	2	Screw-HH

● Not serviced separately

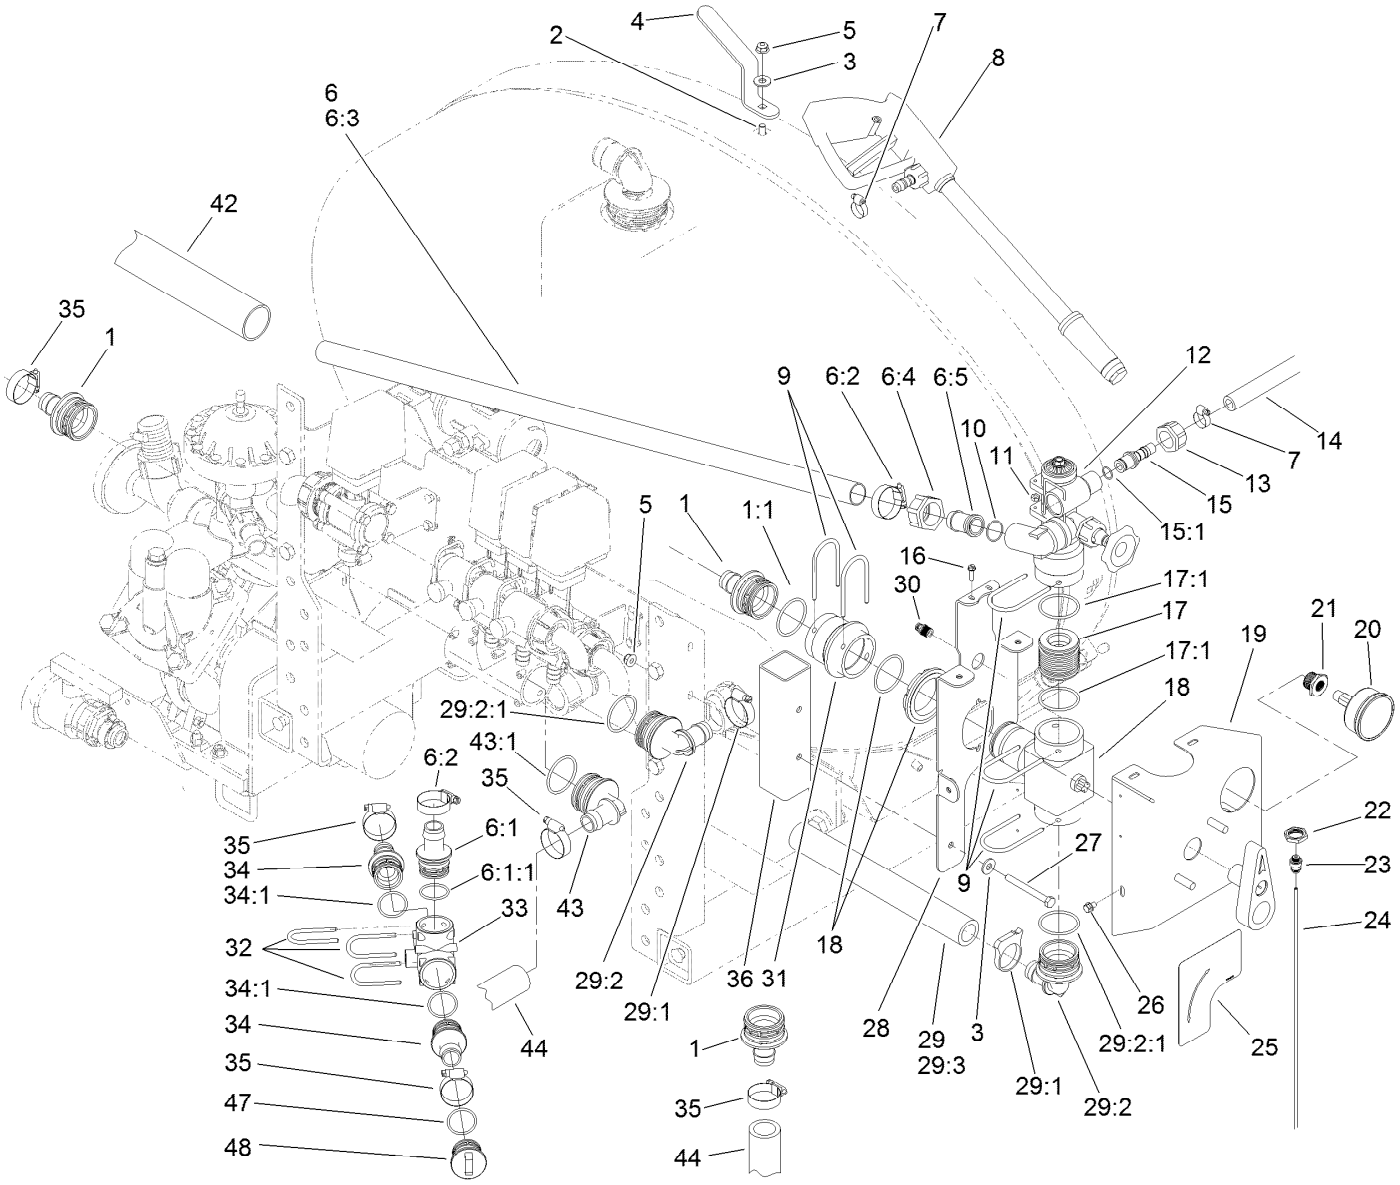


Spray Gun and Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
28	106-5201-03	1	Bracket ASM
29		1	Hose ASM ●
29:1	2412-3	2	Clamp-Hose
29:2	106-4933	2	Hosebarb ASM
29:2:1	100-8637	1	O-Ring
29:3	106-5224	1	Hose
30	100-8674	1	Coupler-Tube
31	100-7050	1	Bulkhead
32	100-6708	3	Fork
33	104-9041	1	Tee

Ref.	Part Number	Qty.	Description
34	106-4935	2	Hosebarb ASM
34:1	100-6712	1	O-Ring
35	2412-3	5	Clamp-Hose
36	106-5227-03	1	Tube-Valve Mount
42	119-0446	1	Hose-Agitation
43	106-4933	1	Hosebarb ASM
43:1	100-8637	1	O-Ring
44	119-0480	2	Hose-Valve, Agitation
47	100-6712	1	O-Ring
48	104-9029	1	Plug


● Not serviced separately

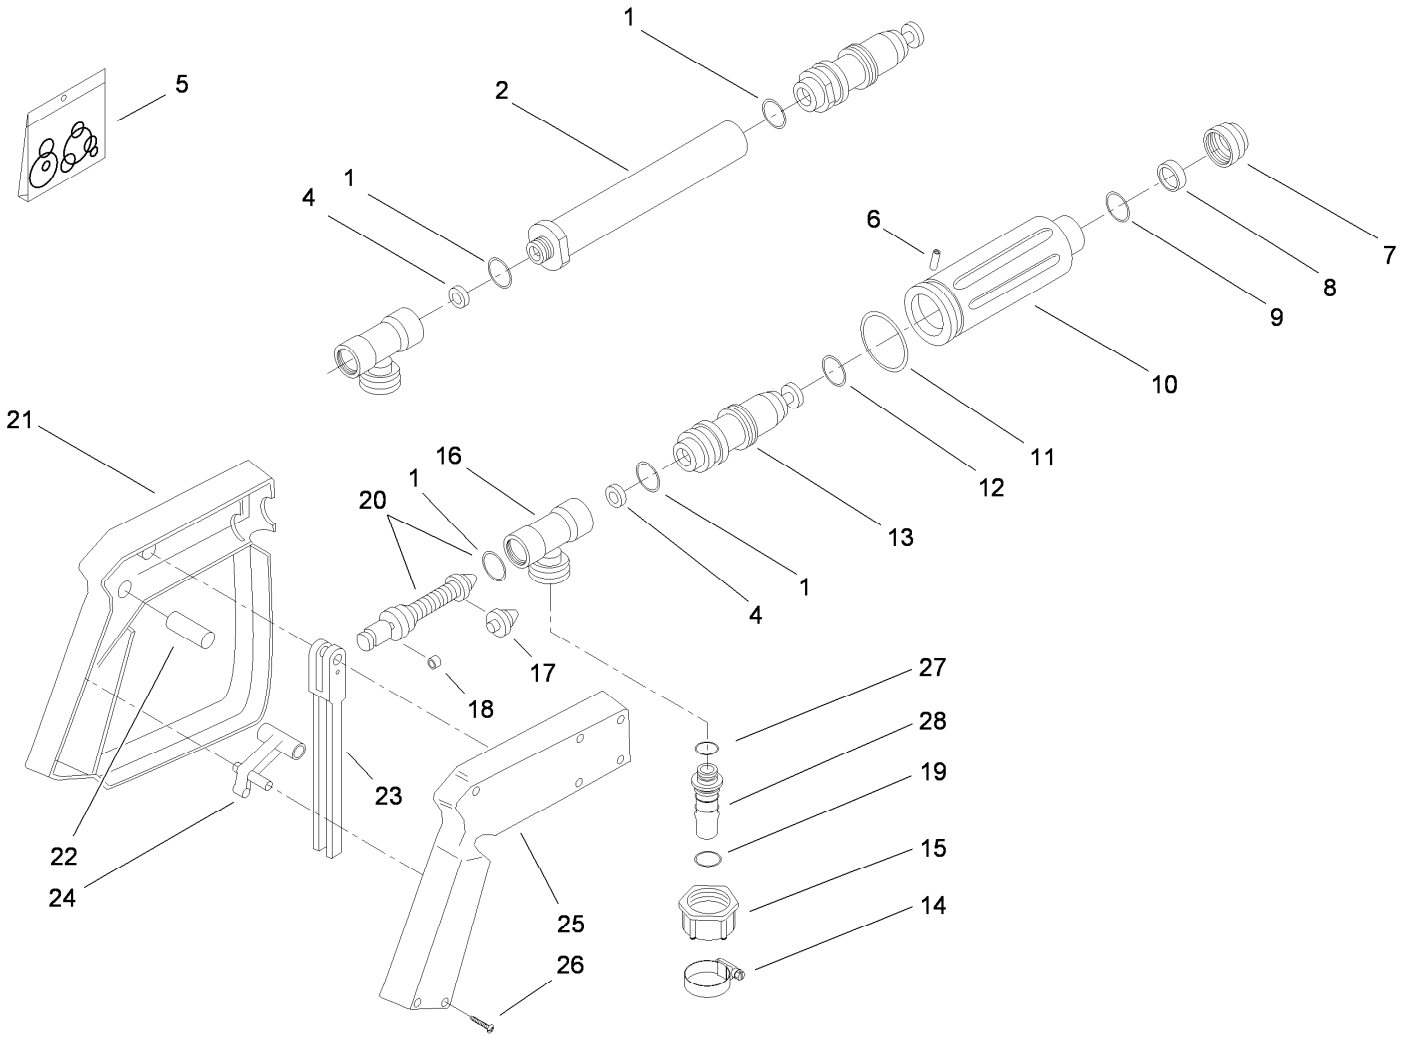

Spray Gun Assembly No. 100-6733


Ref.	Part Number	Qty.	Description
1	100-6649	3	O-Ring
2	99-0885	1	Extension-Lance
4	99-0884	1	Seal-Valve, On/Off
5	99-0779	1	Repair Kit
6	99-0887	1	Pin
7	99-0890	1	Housing-Nozzle
8	99-0889	1	Nozzle-Ceramic
9	100-6650	1	O-Ring
10	99-0886	1	Housing-Swirl
11	100-6646	1	O-Ring
12	100-6644	1	O-Ring
13	99-0780	1	Swirl
14	99-0772	1	Clamp-Hose
15	107-8734	1	Nut-Swivel

Ref.	Part Number	Qty.	Description
16	99-0883	1	Housing-Valve
17	104-8860	1	Cone
18	104-8861	1	Sleeve-Rubber
19	100-6647	1	O-Ring
20	99-0882	1	Valve ASM
21	99-0877	1	Handle-LH
22	99-0878	1	Stop-Trigger, Rubber
23	99-0880	1	Arm-Trigger
24	99-0879	1	Arm-Safety, Trigger
25	99-0881	1	Handle-RH
26	100-6666	1	Screw
27	100-6648	1	O-Ring
28	106-5093	1	Hosebarb-Brass

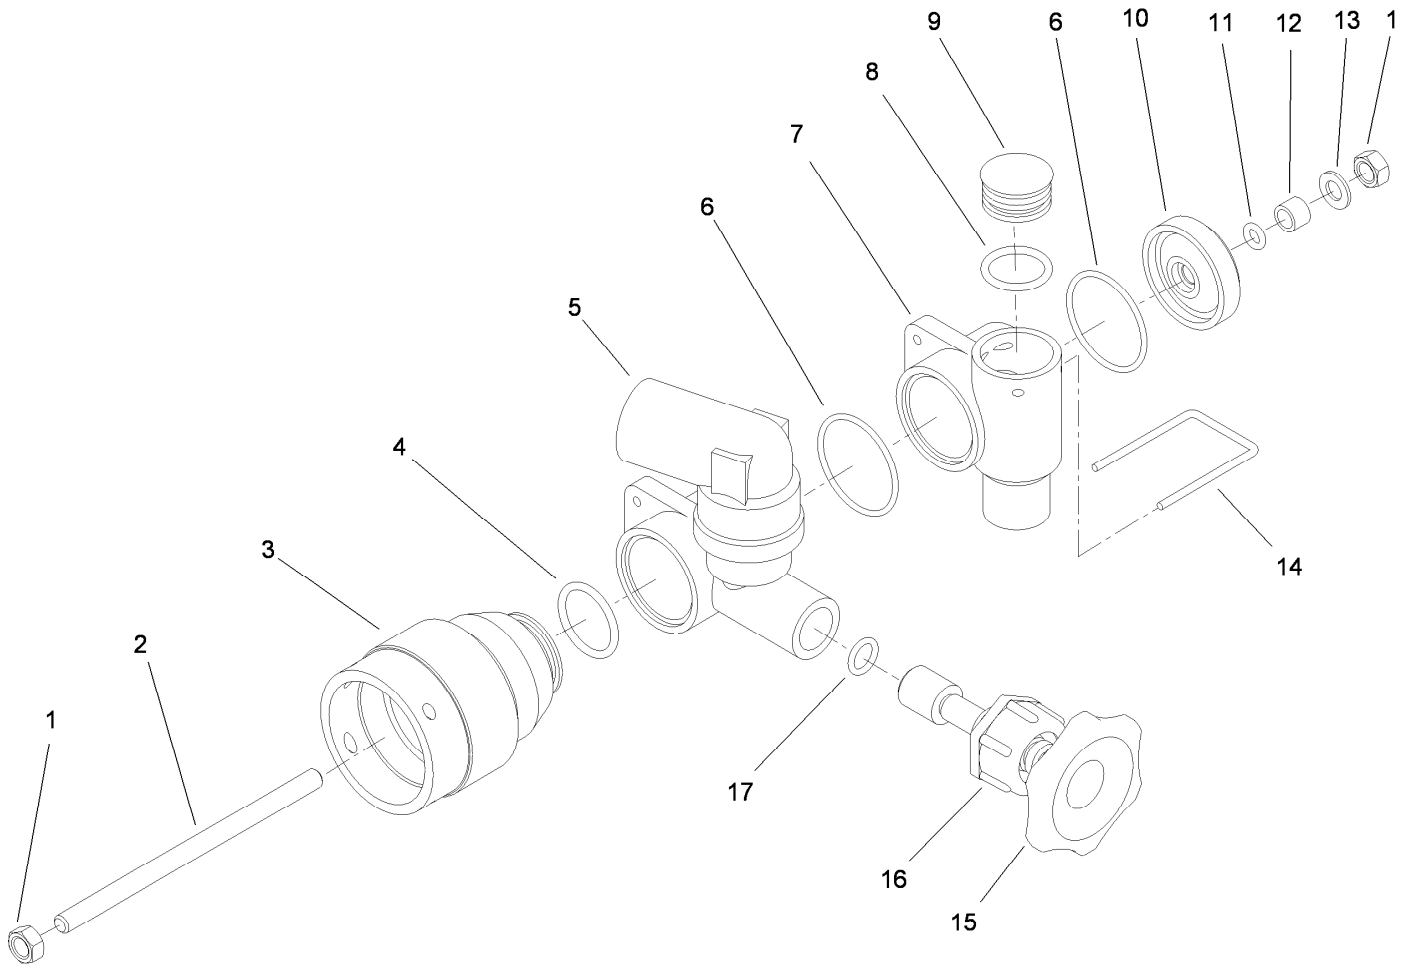

Manifold Assembly No. 106-5096

Ref.	Part Number	Qty.	Description
1	100-6894	2	Nut
2	104-8917	1	Rod-Valve, Pressure Control
3	106-1214	1	Connector-Control, Spray
4	100-6646	1	O-Ring
5	104-8919	1	Housing-Control, Pressure
6	100-6892	2	O-Ring
7	100-6759	1	Housing-Section Valve
8	100-6882	1	O-Ring
9	100-6891	1	Cap-End
10	100-6913	1	Cover
11	100-6887	1	O-Ring
12	100-6897	1	Bushing
13	100-6634	1	Washer
14	100-6885	1	Fork-Valve, Boom
15	100-6762	1	Regulator-Pressure, Manual
16	99-0850	1	Nut
17	100-6644	1	O-Ring

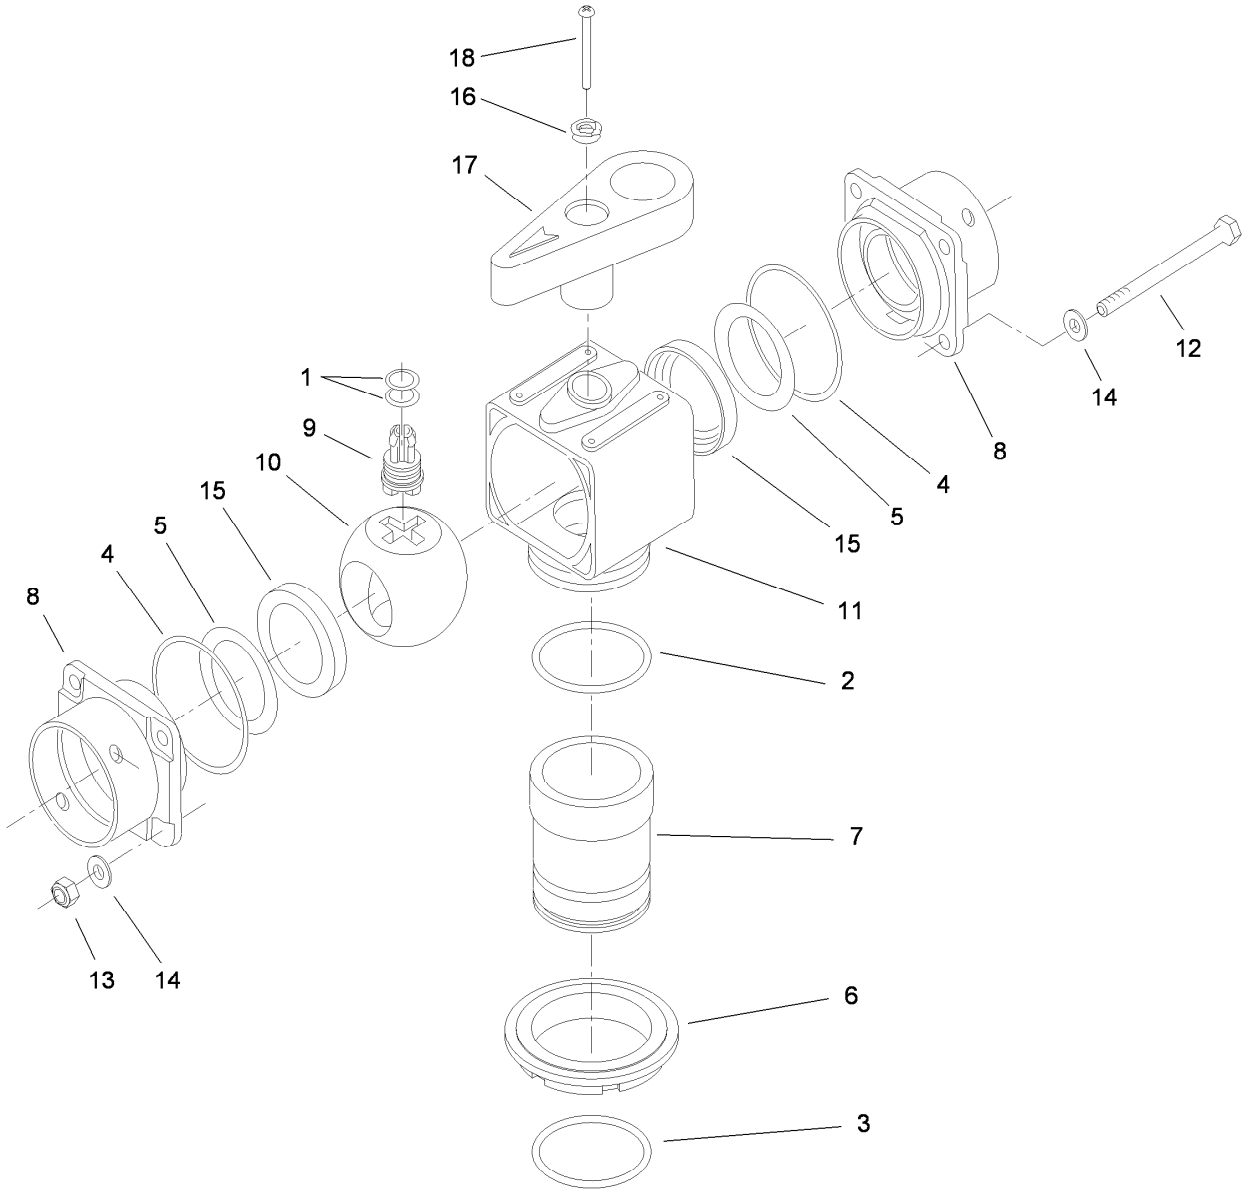

Ball Valve Assembly No. 106-5095

Ref.	*Part Number*	*Qty.*	*Description*
1	100-6644	2	O-Ring
2	100-8671	1	O-Ring
3	100-8637	1	O-Ring
4	100-8693	2	O-Ring
5	100-8694	2	O-Ring
6	104-8857	1	Nut
7	104-8858	1	Nipple
8	100-8687	2	Cover-End, 3-Way Valve
9	100-8686	1	Spindle-Valve, 3-Way
10	100-8697	1	Ball-3 Way Valve
11	106-1323	1	Housing
12	33113-080	4	Screw-HH
13	33023-00	4	Nut-Lock
14	100-8692	8	Washer
15	100-8695	2	Seat-Ball
16	100-8682	1	Button
17	106-5207	1	Handle
18	106-5208	1	Screw

Notes:

Notes:

Notes:



Count on it.