FORM NO. 3318–881


TORO®

MODEL NO. 22140–7900001 & UP

PARTS CATALOG

PROLINE 21”

Recycler® Mower

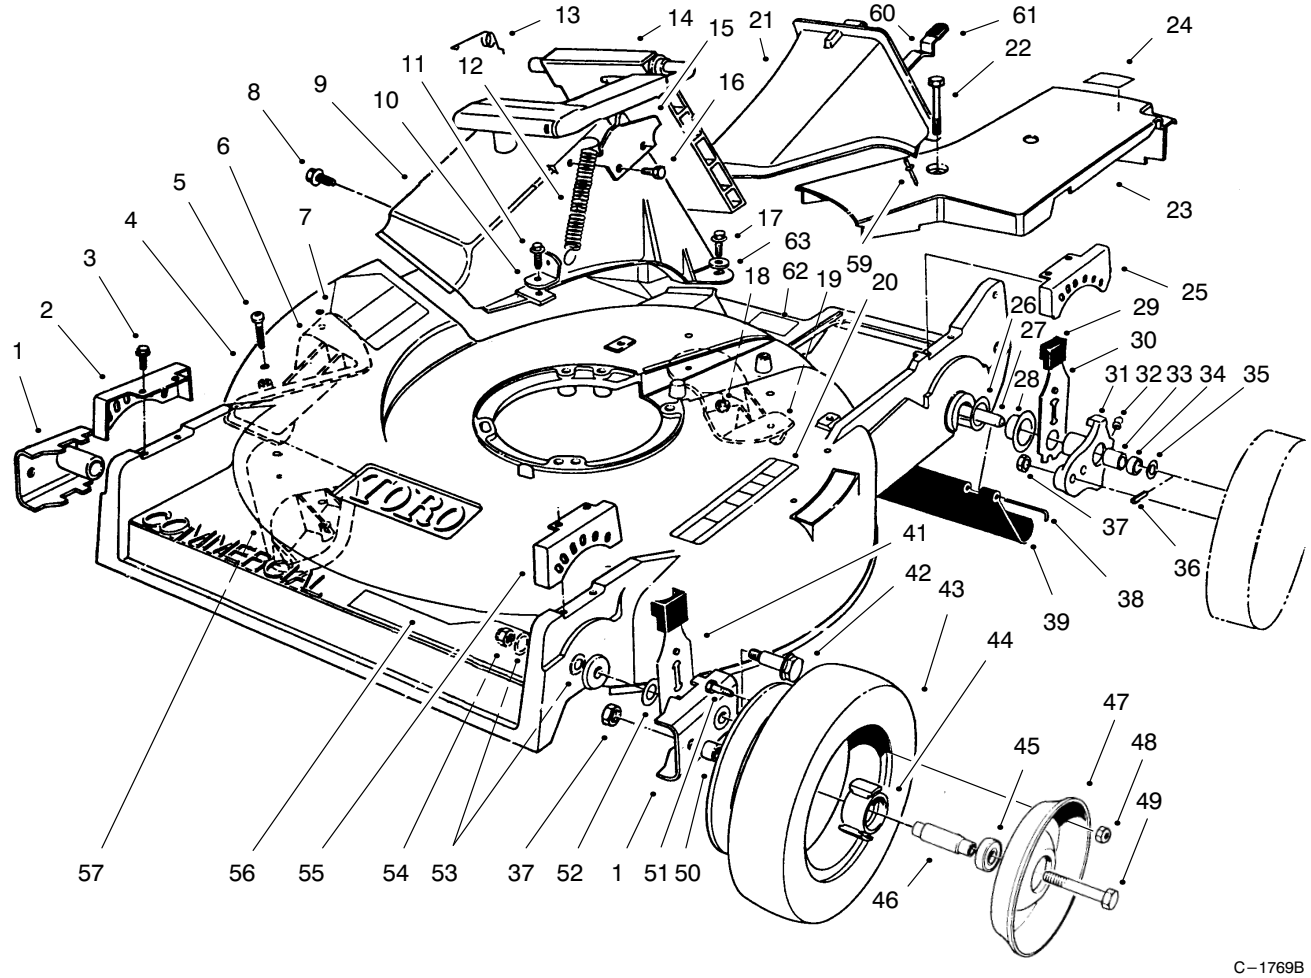

C–1769B

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	61–8300	Pivot Arm Assembly	2
2	49–8770	Quadrant – Front R.H.	1
3	49–2040	Screw – Thread Forming	8
4	14–9499	Housing Assembly (Incl. Ref. # 5–7,19, 20, 57, & 62)	1
5	32144–111	Screw – Pan Hd.	6
6	92–1730	Plate – Kicker	1
7	39–5770	Decal – Danger	1
8	46–6810	Screw – Thread Forming	1
9	82–9150	Chute – Discharge	1
10	71–9350	Bracket – Spring	1
11	46–6811	Screw – Hex Washer Hd. Thread Forming	1
12	76–4660	Spring	1
13	80–3770	Retainer – Door	1

Ref. No.	Part No.	Description	No. Used
14	77–0200	Door Assembly	1
15	76–4570	Plate – Latch	1
16	46–8090	Screw – Hex Washer Hd. Self Tapping	2
17	321–7	Screw – Hex. Hd.	2
18	3296–42	Nut – Lock	2
19	92–1750	Plate – Kicker	1
20	71–1280	Decal – Safety Instructions	1
21	77–0500	Plug Assembly	1
22	37–7260	Screw – Special	2
23	86–5232	Cover – Belt	1
24	52–2610	Label – Grease	1
25	49–8740	Quadrant – Rear L.H.	1
*	49–8750	Quadrant – Rear R.H.	1
26	74–1810	Washer – Thrust	2

*Not Illustrated

© The TORO Company –1996
All Rights Reserved

TPS

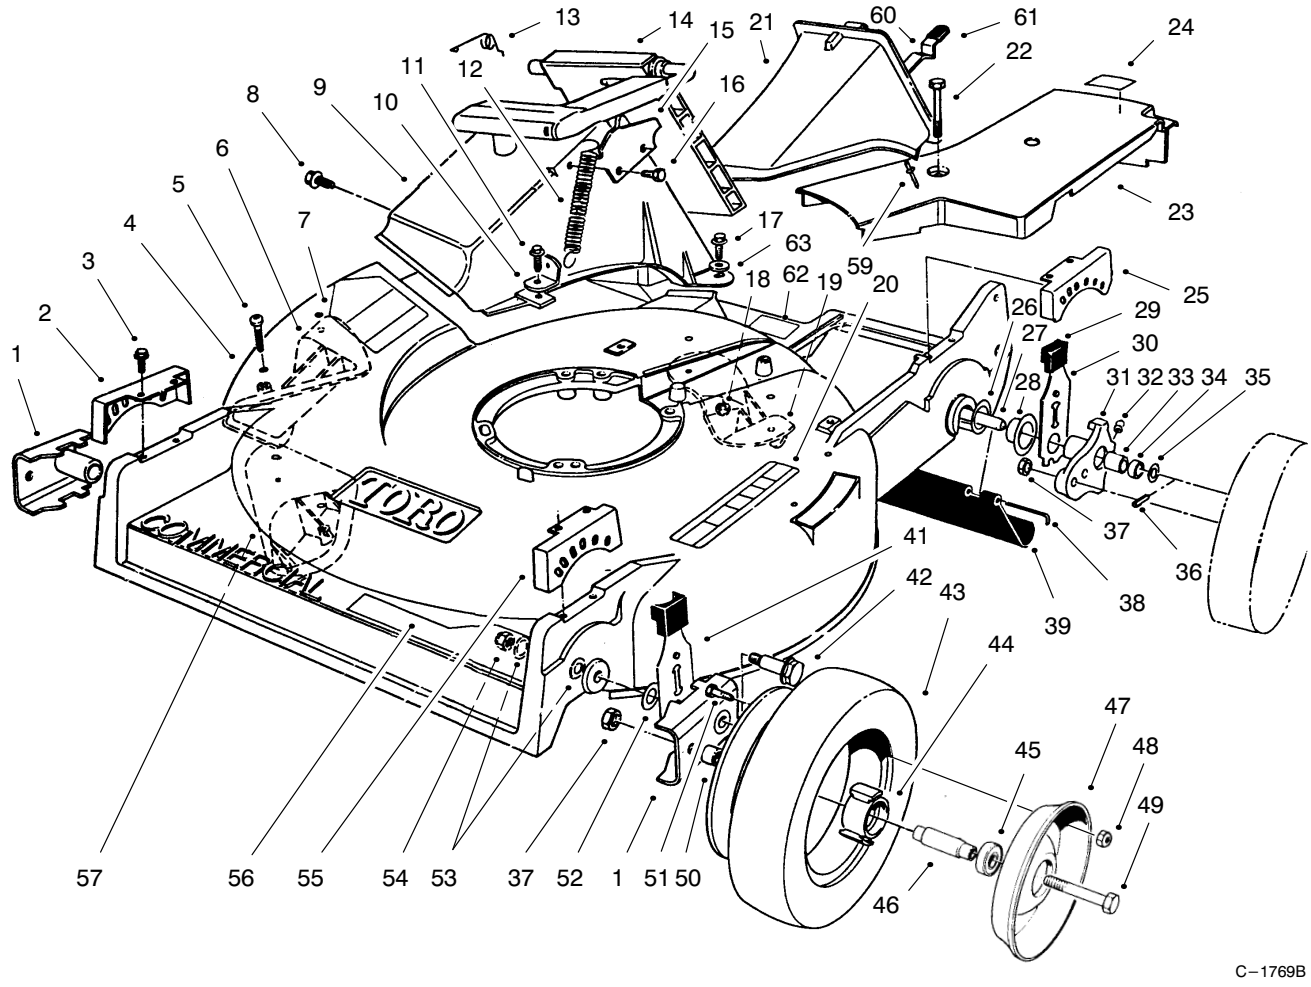


HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
27	49−8790	Shaft − Axle Rear	1
28	48−2170	Cap − End	2
29	25−7740	Knob − Arm	4
30	66−7561	Spring Arm Ass'y − Rear	2
31	42−3510	Arm − Pivot (Incl. Ref. #32−34)	2
32	302−56	Fitting − Grease	2
33	47−2900	Bushing	2
34	47−2890	Bushing	2
35	36−4780	Washer − Thrust	2
36	32121−108	Pin − Roll	2
37	32152−2	Nut − Lock	4
38	33−3208	Rod − Shield	1
39	44−0580	Shield − Rear Safety	1
41	66−7560	Spring Arm Ass'y − Front	2
42	27−6232	Screw − Pivot	2
43	53−7740	Tire	4
44	52−2410	Hub	4
45	52−2450	Bearing − Wheel	8

Ref. No.	Part No.	Description	No. Used
46	52−2440	Spacer − Bearing	4
47	53−7780	Plate − Wheel Half	8
48	3296−42	Nut − Lock	16
49	323−12	Screw − Hex. Hd.	4
50	52−2480	Spacer − Wheel	4
51	321−2	Screw − Hex. Hd.	16
52	257−3	Washer − Pivot	2
53	40−1940	Washer − Hardened	4
54	3296−6	Nut − Lock	2
55	49−8760	Quadrant − Front L.H.	1
56	92−1796	Decal − Recycler	1
57	92−1720	Plate − Kicker	1
59	3295−35	Rivet	1
60	76−4640	Plate − Latch	1
61	76−4650	Grip − Latch	1
62	92−1779	Decal − Warning	1
63	3256−22	Washer − Flat	2
*	53−7720	Wheel & Tire Assembly (Incl. Ref. #43−48, & 51)	4

*Not Illustrated

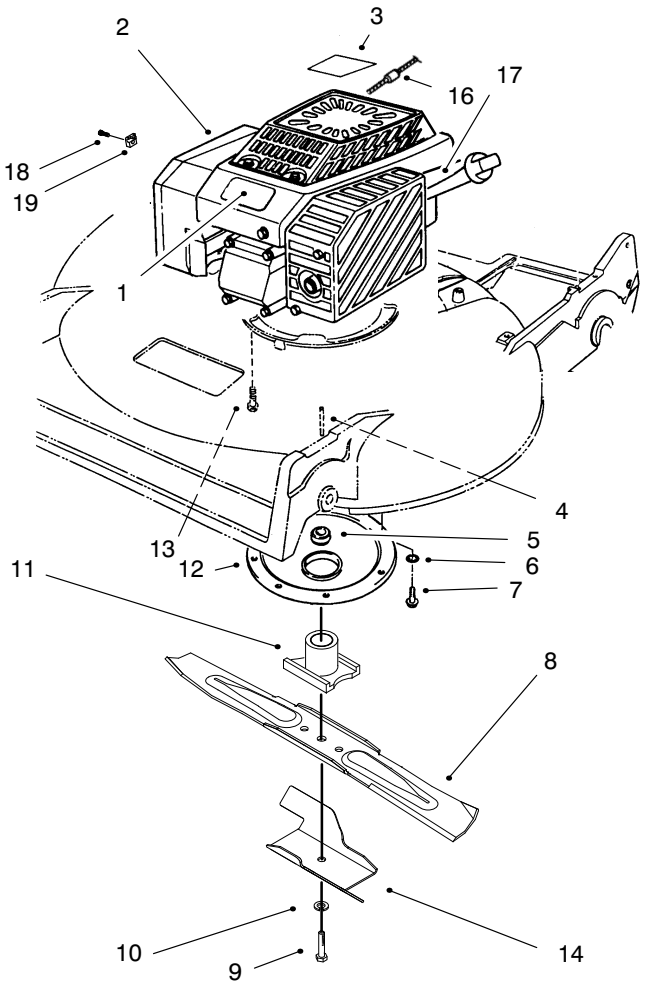


C−2341

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	84−4960	Decal − Pro Line	1
2	77−8971	Engine − Complete	1
3	94−8084	Decal − Recoil	1
4	27−8590	Key − Square	1
5	52−2190	Spacer − Retainer, Blade	1
6	3254−6	Washer − Internal Tooth	3
7	32144−70	Screw − Thread Forming	3
8	14−9419	Blade	1
9	26−0670	Screw − Blade	1
10	3253−22	Washer − Lock	1

Ref. No.	Part No.	Description	No. Used
11	52−2170	Retainer − Blade	1
12	48−2591	Protector − Crankshaft	1
13	32144−102	Screw − Hex. Flange Hd.	3
14	92−1599	Stiffener − Blade	1
16	2210−316	Stop − Recoil	1
17	77−9550	Cover − Brake	1
18	86−7990	Screw − Clamp	1
19	2210−249	Clamp − Casing	1
*	77−9020	Short Block	1

*Not Illustrated

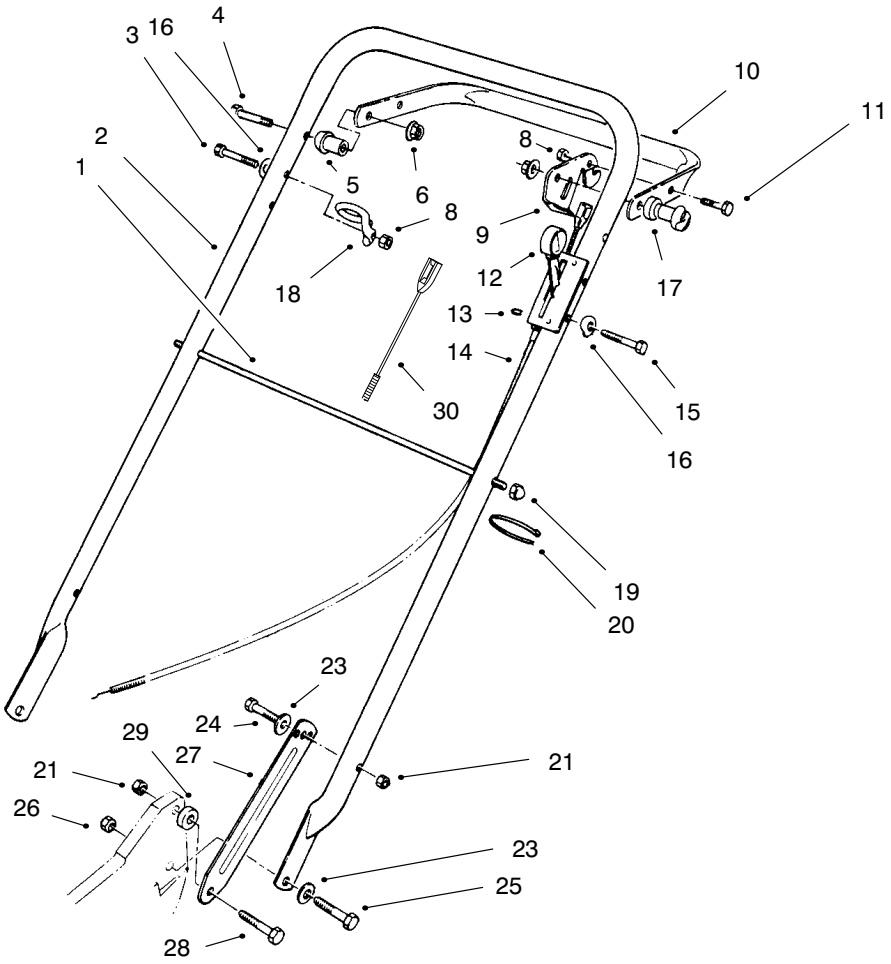


C−2342

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	48−2810	Rod − Support, Bag	1
2	92−1586	Handle Assembly	1
3	321−9	Screw − Hex. Hd.	1
4	322−10	Screw − Hex. Hd.	2
5	49−1630	Support − Spacer	2
6	3296−58	Nut − Lock	2
8	3296−42	Nut − Lock	2
9	66−5350	Lever − Control	1
10	61−8270	Bar − Control	1
11	321−4	Screw − Hex. Hd.	1
12	82−9950	Bracket − Throttle Control	1
13	32151−86	Ring − Retaining	2
14	70−1063	Cable − Throttle	1
15	321−13	Screw − Hex. Hd.	2
16	3−7501	Washer − Curved	3

Ref. No.	Part No.	Description	No. Used
17	256−276	Spacer	2
18	46−8081	Guide − Rope	1
19	32111−7	Nut − Acorn	2
20	3290−378	Tie − Cable	1
21	3296−29	Nut − Lock	4
23	3290−456	Washer	4
24	322−7	Screw − Hex. Hd.	2
25	322−6	Screw − Hex. Hd.	2
26	3296−47	Nut − Lock	2
27	84−8401	Latch − Handle R.H.	1
*	84−8361	Latch − Handle L.H.	1
28	27−7210	Screw − Shoulder	2
29	3−3287	Spacer − Handle Latch	2
30	93−3662	Cable − Brake	1

*Not Illustrated

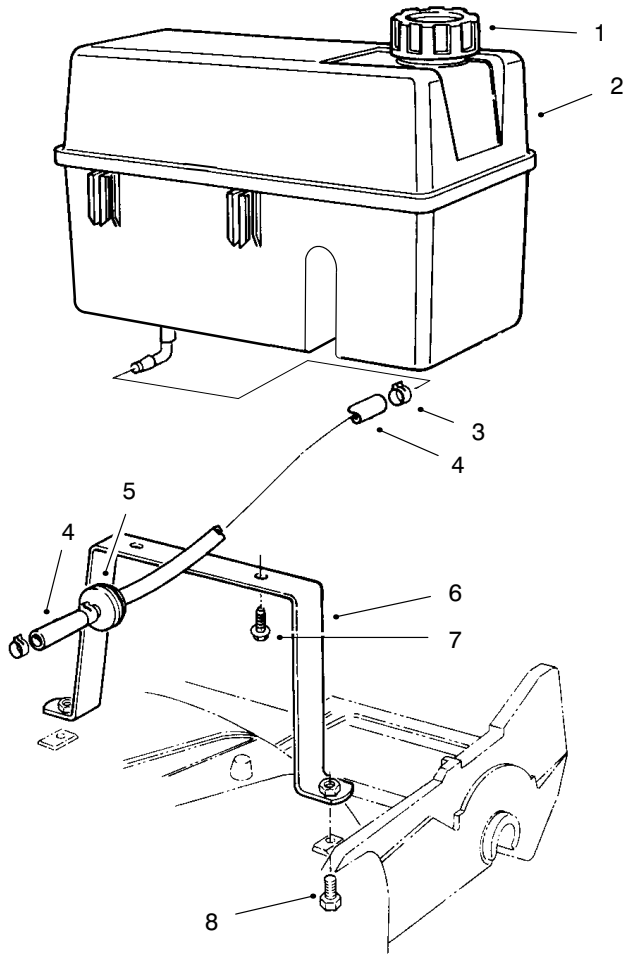


C−2343

GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55−3575	Cap − Fuel	1
2	93−3166	Tank − Fuel	1
3	2412−95	Clamp − Fuel Line	4
4	51−3210	Hose − Fuel	2

Ref. No.	Part No.	Description	No. Used
5	71−9280	Filter − Fuel	1
6	84−9170	Base − Tank	1
7	46−8091	Screw − Hex. Washer Hd.	2
8	323−6	Screw − Hex. Hd.	2

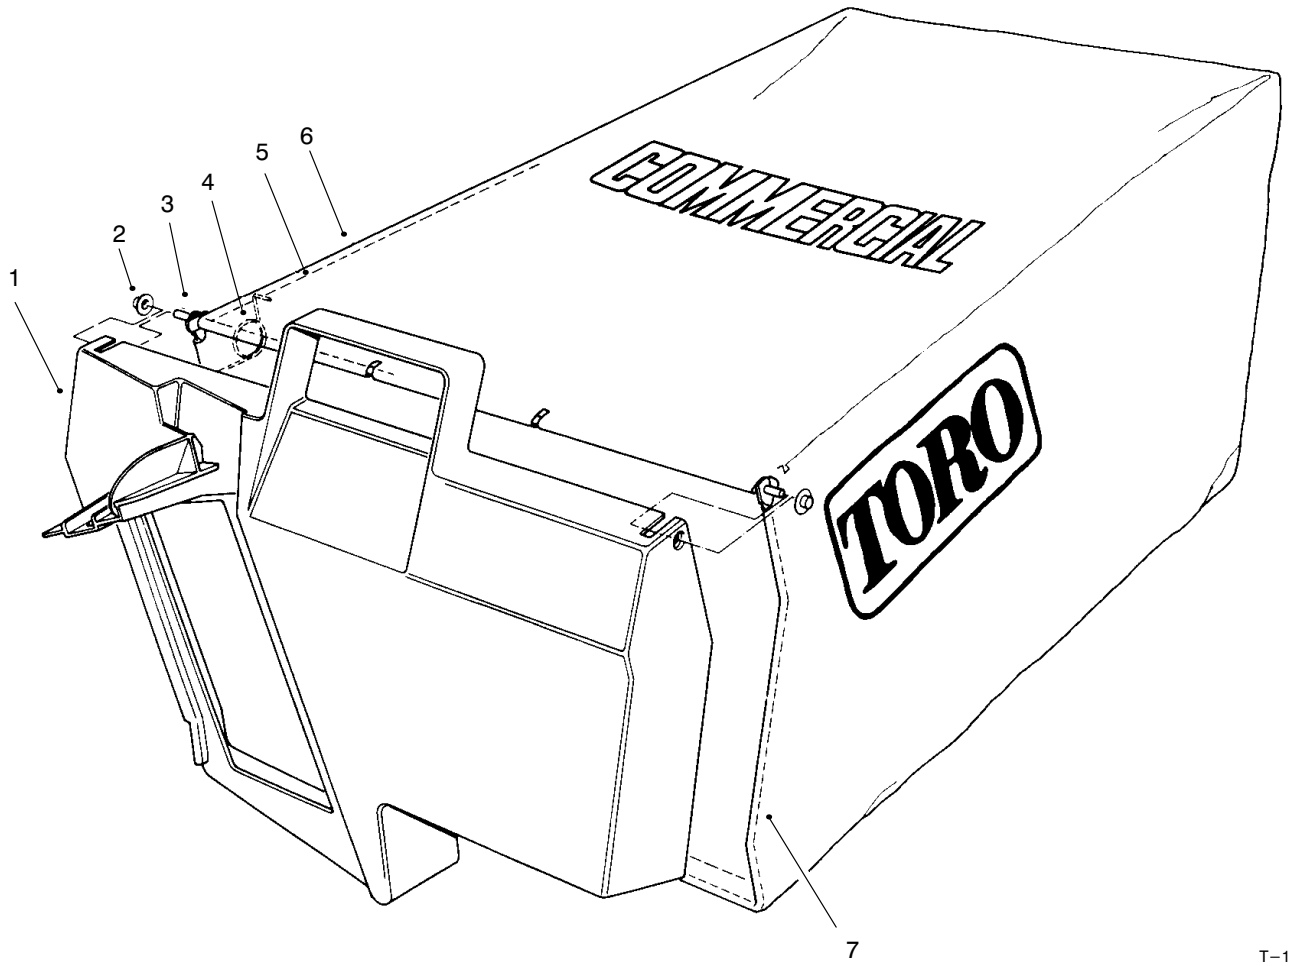


T−1100

GRASS BAG ASSEMBLY No. 11−5609

Ref. No.	Part No.	Description	No. Used
1	48−2840	Door − Bag, Grass	1
2	3290−422	Nut − Push	2
3	33−4820	Hinge − Door, Bag	1
4	36−6910	Spring	2

Ref. No.	Part No.	Description	No. Used
5	42−4030	Frame − Bag, Upper	1
6	8−2759	Bag − Grass	1
7	42−4020	Frame − Bag	1

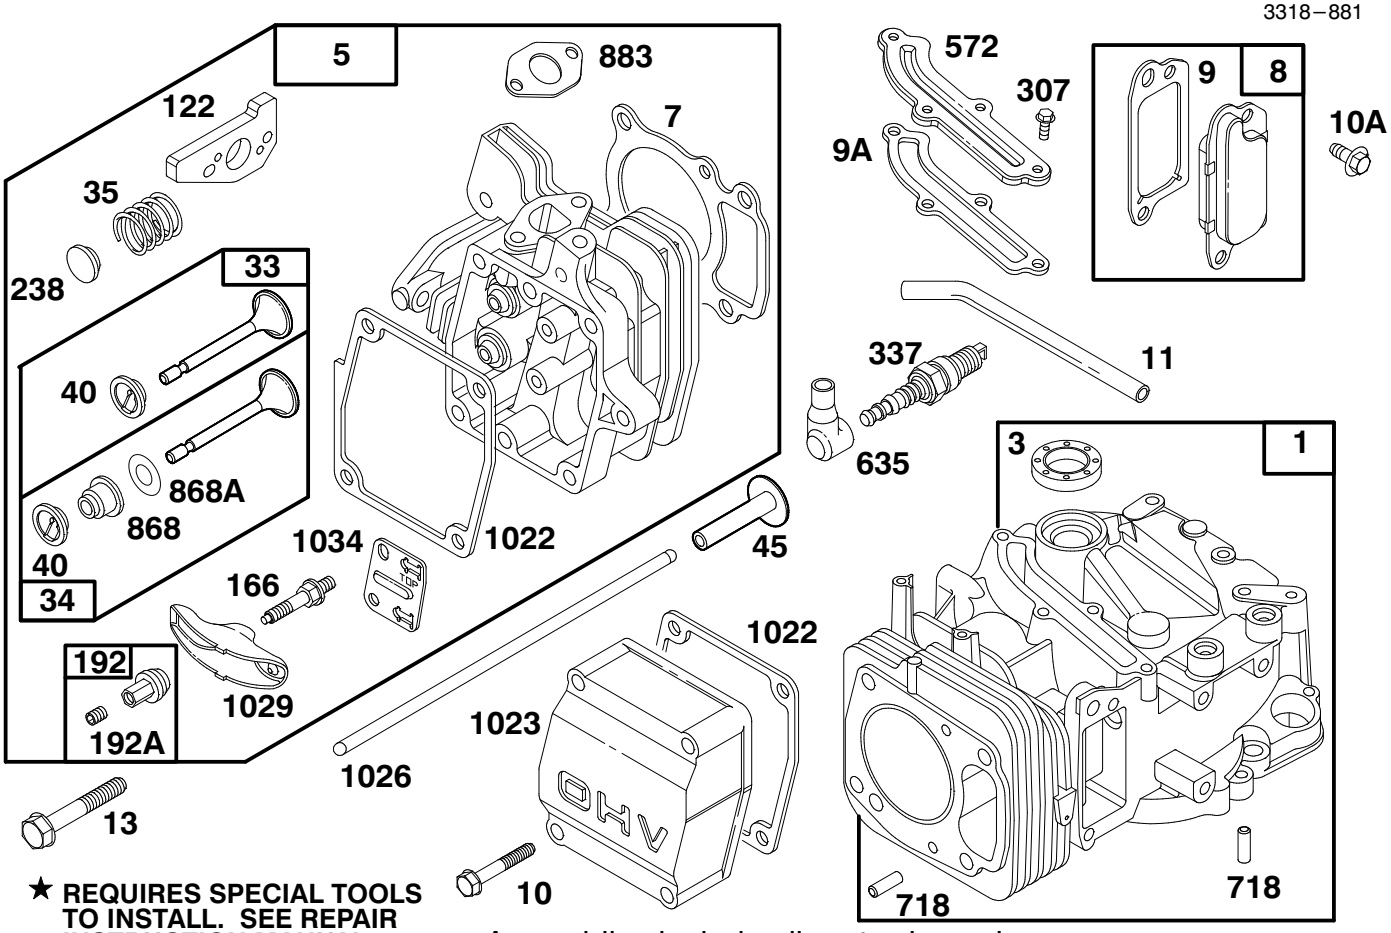

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
1	77−7590	Cylinder Assy.	1
★3	77−9060	Seal − Oil	1
5	77−7730	Head − Cylinder	1
★7	77−7740	Gasket − Cylinder Head	1
8	77−9260	Breather Assy.	1
★9	77−9250	Gasket − Breather	1
★9A	77−7410	Gasket − Breather	1
10	77−7360	Screw − Hex. Head (Valve Cover)	1
10A	77−9200	Screw − Hex. Head	1
11	77−9410	Tube − Breather	1
13	77−7630	Screw − Cylinder Head	1
33	77−7860	Valve − Exhaust	1
34	77−7880	Valve − Intake	1
35	77−7810	Spring − Valve	1
40	77−7870	Retainer − Spring	1
45	77−7610	Tappet − Valve	1
●122	77−7820	Adapter Assy.	1
166	77−7780	Stud − Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192	77−7910	Ball & Screw − Rocker Arm (Incl. Ref. #192A)	1
192A		Screw − Set	1
238	77−7800	Cap − Valve	1
307	77−7420	Screw − Breather Cover Mtg.	1
337	77−7330	Plug − Spark	1
572	77−7400	Cover − Breather	1
635	77−7340	Elbow − Spark Plug	1
718	77−7600	Pin − Cylinder	1
★868	77−7890	Seal Assy. − Valve	1
★868A	77−7900	Gasket − Valve	1
★883	77−7760	Gasket − Exhaust	1
★1022	77−7320	Gasket − Rocker Cover	1
1023	77−9320	Cover − Valve	1
1026	77−7620	Rod − Push	1
1029	77−7790	Arm − Rocker	1
1034	77−7770	Guide − Push Rod	1

★ Included in Gasket Set−Part No. 77−8900

● Included in Carburetor Overhaul Kit−Part No. 77−9580

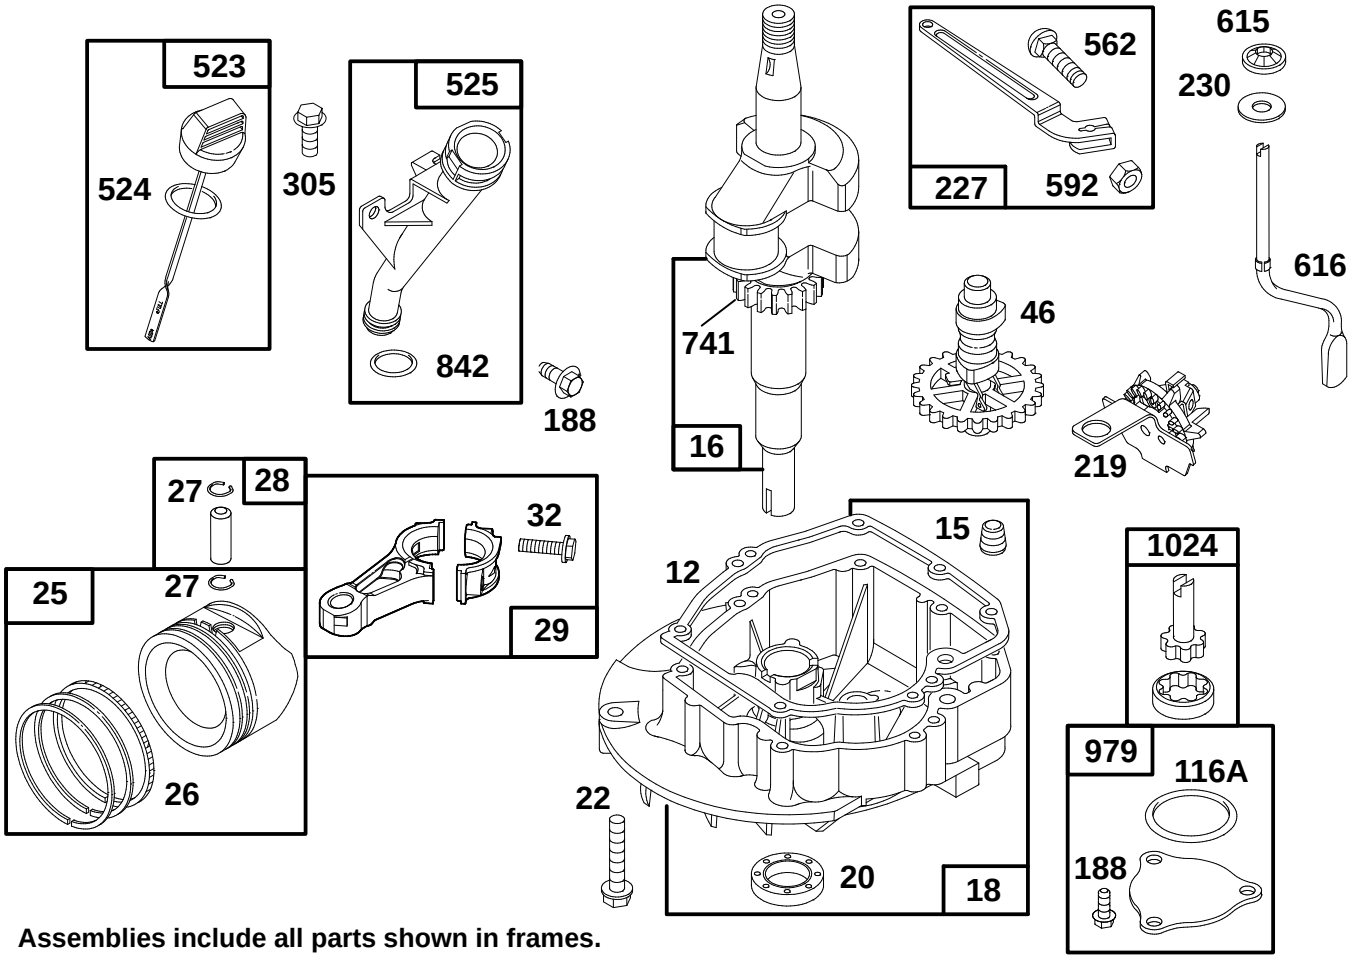


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★12	77−7550	Gasket − Engine Base	1
15	77−9590	Plug − Pipe	1
16	77−9330	Crankshaft	1
		Note: Order Part No. 77−7540 For Timing Gear Key.	1
18	77−7560	Base − Engine	1
★20	77−7570	Seal − Oil	1
22	77−9070	Screw − Engine Base	1
25	77−7690	Piston Assy. (Std.)	1
26	77−7700	Ring Set (Std.)	1
27	77−7710	Lock − Piston Pin	1
28	77−9340	Pin Assy. − Piston	1
29	77−7670	Rod − Connecting	1
32	77−9350	Screw − Connecting Rod	1
46	77−7490	Gear − Cam	1
★116A	77−7660	O-Ring	1

Ref. No.	Part No.	Description	No. Used
188	77−9360	Screw − Hex. Head	1
219	77−7500	Gear − Governor	1
227	77−7370	Lever Assy. − Governor	1
230	77−7470	Washer	1
305	77−8310	Screw − Hex. Head	1
523	77−7260	Dipstick − Oil	1
★524	77−7270	Seal − O-Ring	1
525	77−7280	Tube − Oil Filler	1
562	77−7380	Bolt − Governor Lever	1
592	77−7390	Nut − Hex.	1
615	77−7480	Pushnut	1
616	77−7460	Crank − Governor	1
741	77−7530	Gear − Timing	1
★842	77−7300	Seal − O-Ring	1
979	77−7650	Cover − Oil Pump	1
1024	77−7640	Pump − Oil	1

★ Included in Gasket Set−Part No. 77−8900

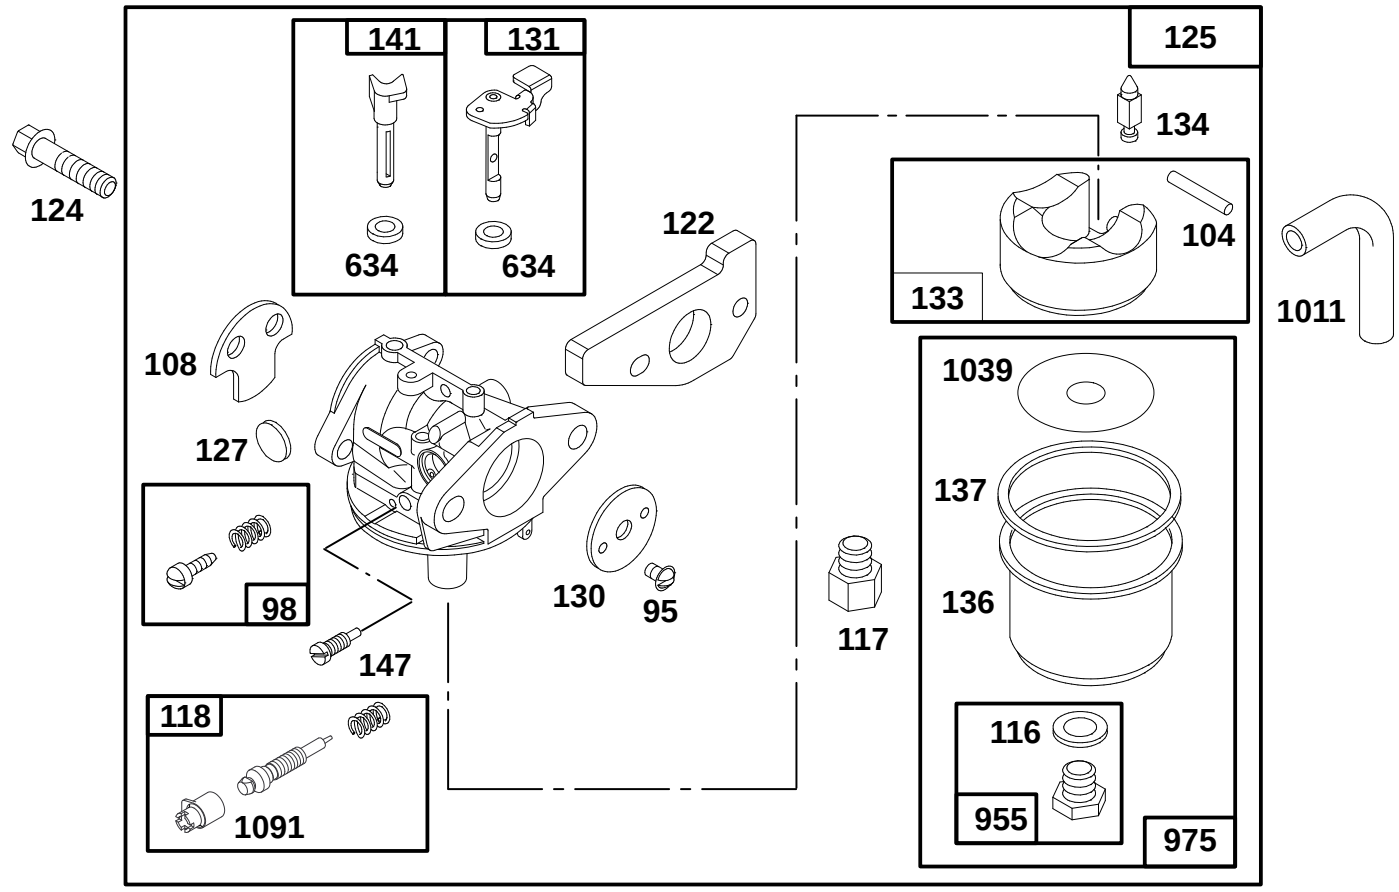

Assemblies include all parts shown in frames.


ENGINE GTS 150


Ref. No.	Part No.	Description	No. Used
95	77−8090	Screw − Valve Mtg.	1
98	77−8240	Screw − Idle Adj.	1
●104	77−8180	Pin − Float Hinge	1
108	77−9600	Valve − Choke	1
●◆116	77−8210	Sealing − Gasket	1
●117	77−9610	Jet − Main	1
		Note: For High Altitude Jet Order Part No. 94−1650	1
●118	77−9620	Valve & Spring − Needle	1
●122	77−7820	Adapter Assy.	1
124	77−7970	Screw − Hex. Head (carb. mtg.)	1
125	77−9630	Carburetor Assy.	1
●127	94−1651	Plug − Welch	1

Ref. No.	Part No.	Description	No. Used
130	77−8080	Valve − Throttle	1
131	77−8160	Shaft − Throttle	1
133	77−8170	Float − Carburetor	1
●134	77−8110	Valve − Inlet (Includes Seat)	1
136	77−7240	Bowl − Fuel	1
●◆137	77−8200	Gasket − Float Bowl	1
141	77−8130	Shaft − Choke	1
147	77−9640	Adapter − Jet	1
◆634	77−8150	Washer − Seal	1
955	77−8220	Screw − Hex. Head	1
975	77−8190	Bowl Assy. − Carburetor	1
1011	77−8040	Tube − Vent	1
●1039	77−7250	Limiter − Float	1
●1091	77−9650	Cap − Limiter	1

● Included in Carb. Overhaul Kit Part No. 77−9580

◆ Included in Carb. Gasket Set Part No. 77−8930

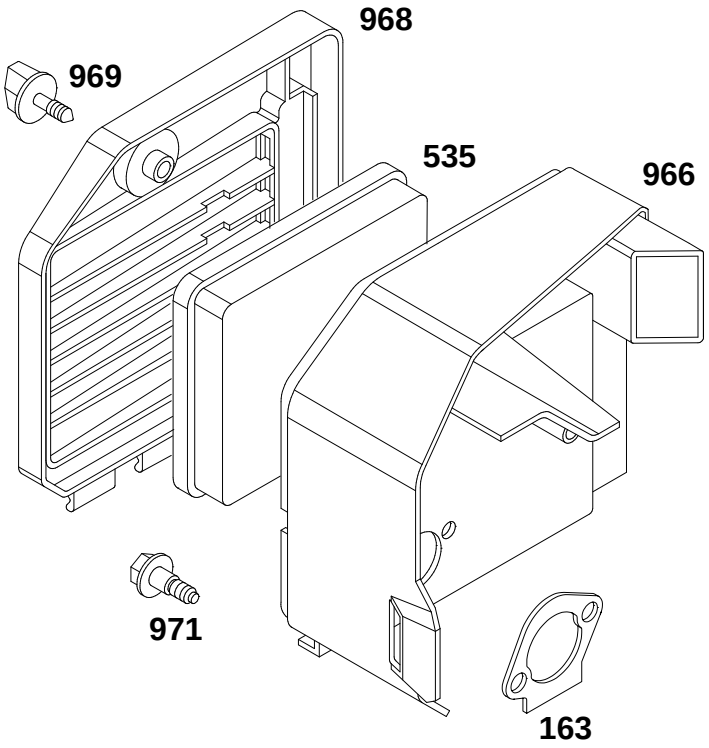

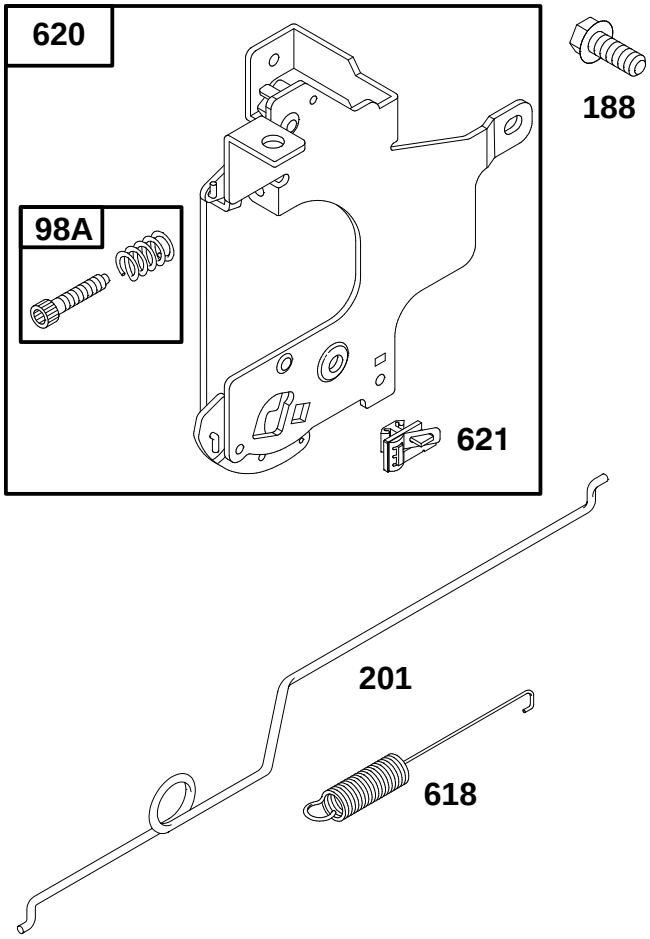


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77−8020	Screw Assy. − Speed Adj.	1
★163	77−7960	Gasket − Air Cleaner	1
188	77−9360	Screw − Hex. Head	1
201	77−7980	Link − Governor	1
535	77−7950	Element − Filter	1
618	77−8140	Spring − Choke	1

Ref. No.	Part No.	Description	No. Used
620	77−8000	Bracket − Carburetor	1
621	77−8010	Switch − Stop	1
966	77−7940	Base − Air Cleaner	1
968	77−7040	Cover − Air Cleaner	1
969	77−7920	Screw − Air Cleaner	1
971	77−7930	Screw − Air Cleaner	1

★ Included in Gasket Set−Part No. 77−8900

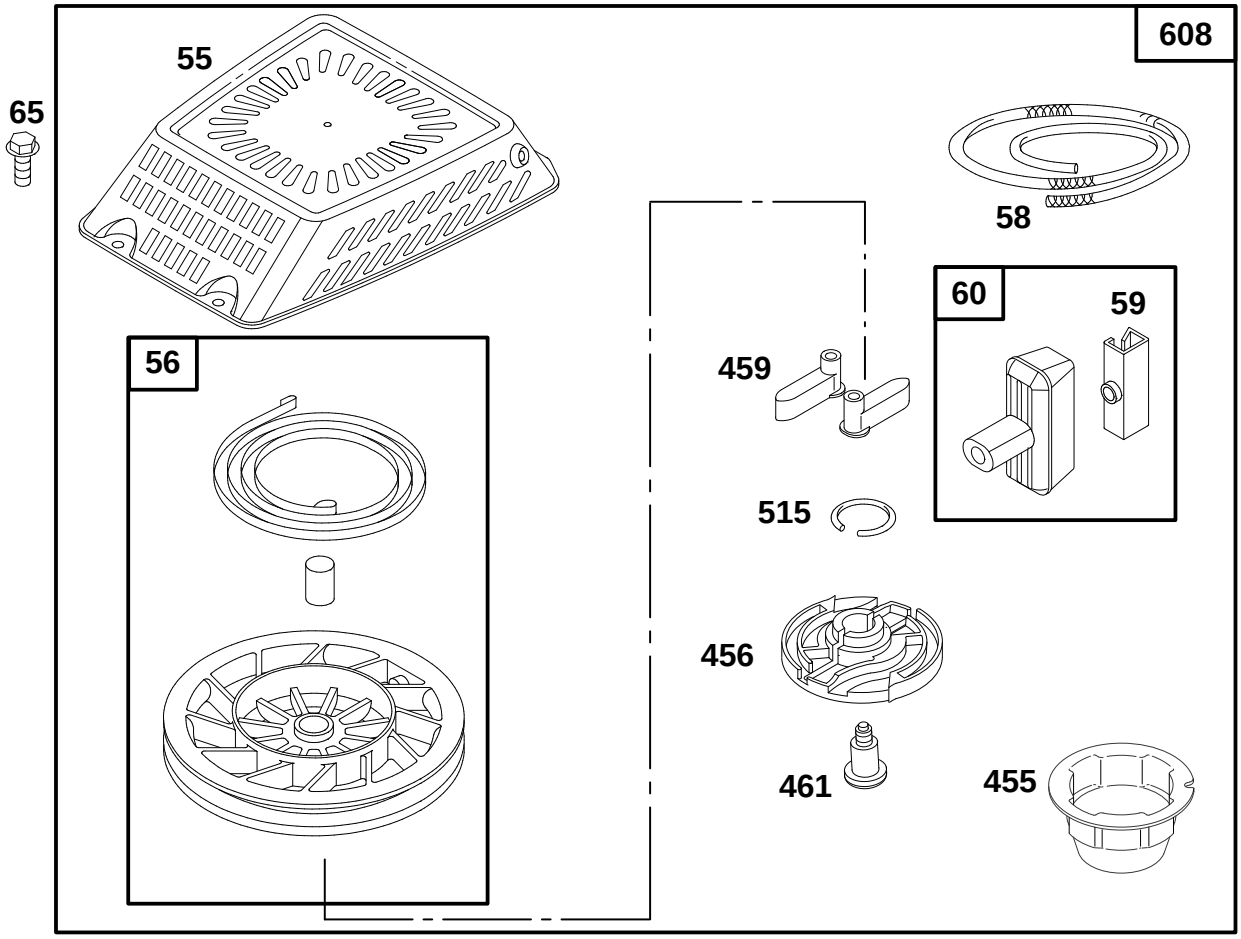


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	94–1656	Housing–Rewind Starter	1
56	94–1657	Pulley–Rewind Starter	1
58	94–1658	Rope–Starter (Cut To Suit)	1
59	77–7210	Insert–Rewind Handle	1
60	77–8520	Handle–Rewind Starter	1
65	77–8300	Screw–Hex. Head	1
455	94–1653	Cup–Starter	1

Ref. No.	Part No.	Description	No. Used
456	94–1659	Retainer–Rewind Starter	1
459	94–1654	Pawl–Starter	1
461	94–1660	Screw–Shoulder	1
515	94–1655	Spring–Torsion	1
608	94–1661	Starter Assembly–Rewind	1

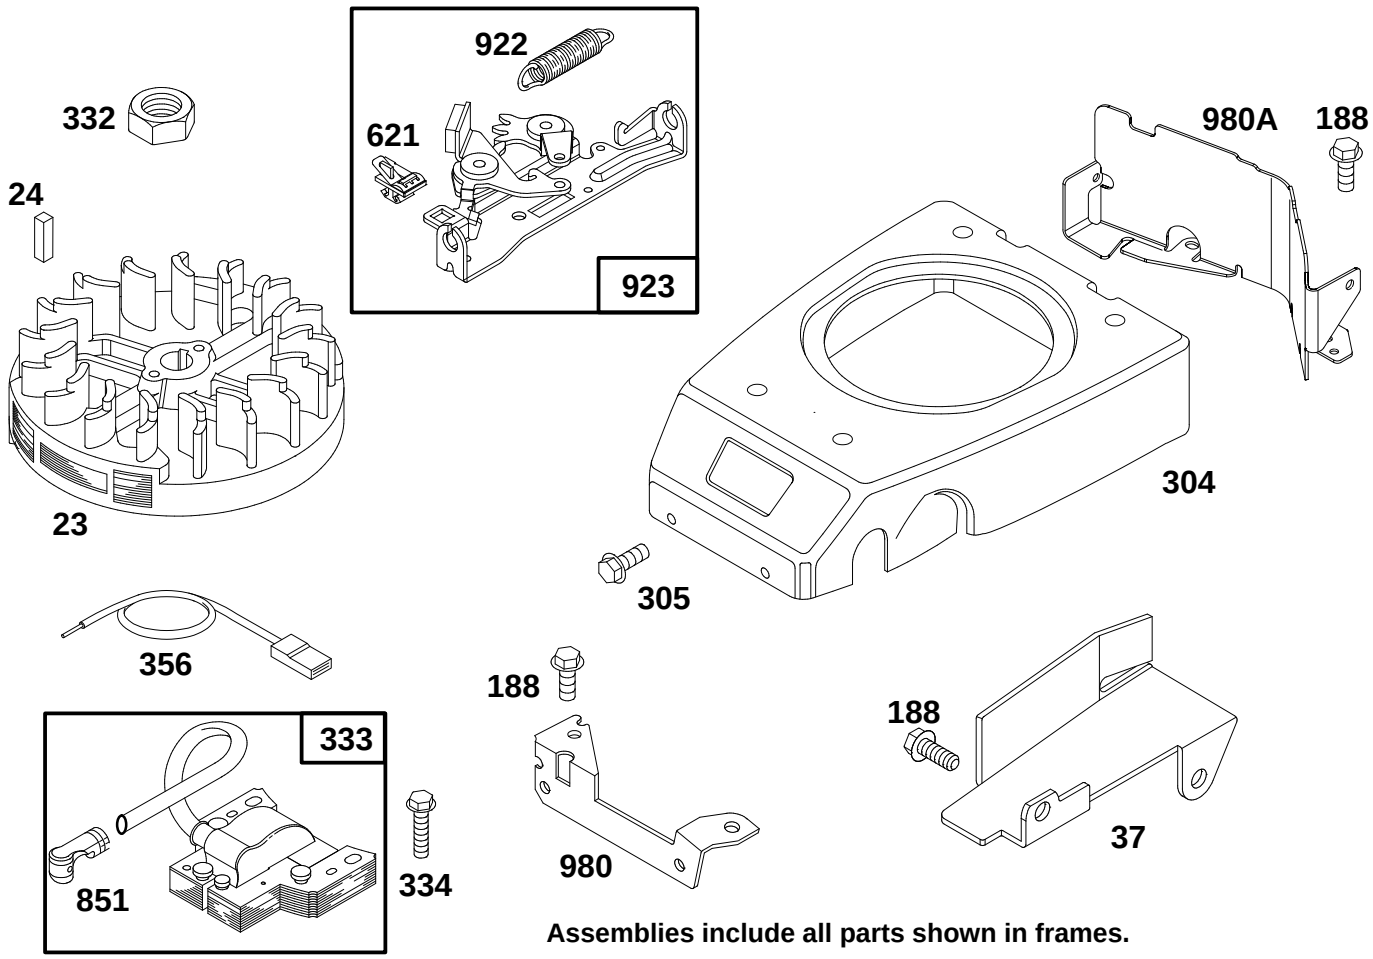



Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77–8330	Flywheel–Magneto	1
24	77–8340	Key–Flywheel	1
37	77–9170	Guard–Flywheel	1
188	77–9360	Screw–Hex. Head	1
304	77–9660	Housing–Blower	1
305	77–8310	Screw–Hex. Head	1
332	77–8360	Nut–Flywheel	1
333	77–8420	Armature–Magneto	1

Ref. No.	Part No.	Description	No. Used
334	77–8440	Screw–Hex. Head	1
356	77–8400	Wire–Ground	1
621	77–8010	Switch–Stop	1
851	77–8430	Terminal–Spark Plug	1
922	94–1663	Spring–Brake	1
923	77–9460	Brake Assembly	1
980	77–9140	Bracket–Blower Housing	1
980A	77–9180	Bracket–Blower Housing	1

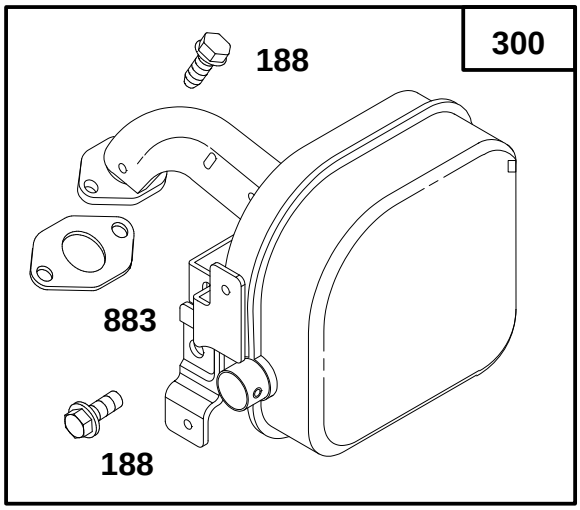

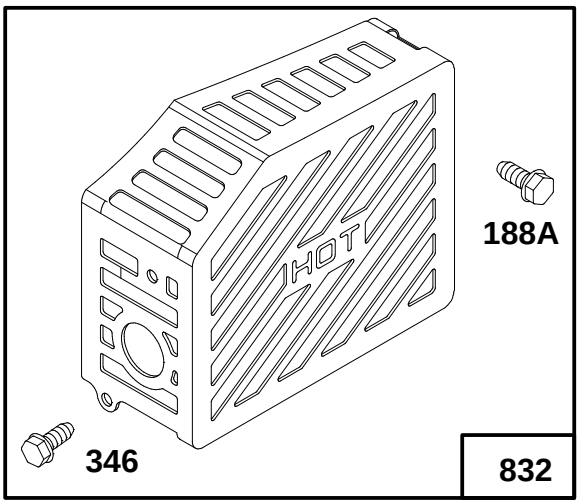


Assemblies include all parts shown in frames.


ENGINE GTS 150


Ref. No.	Part No.	Description	No. Used
188	77−9360	Screw − Hex. Head	1
188A	94−1662	Screw − Hex. Head	1
300	77−8640	Muffler − Exhaust	1
346	77−9430	Screw − Hex.	1

Ref. No.	Part No.	Description	No. Used
832	77−8660	Guard − Muffler	1
⋆883	77−7760	Gasket − Exhaust	1

⋆ Included in Gasket Set−Part No. 77−8900

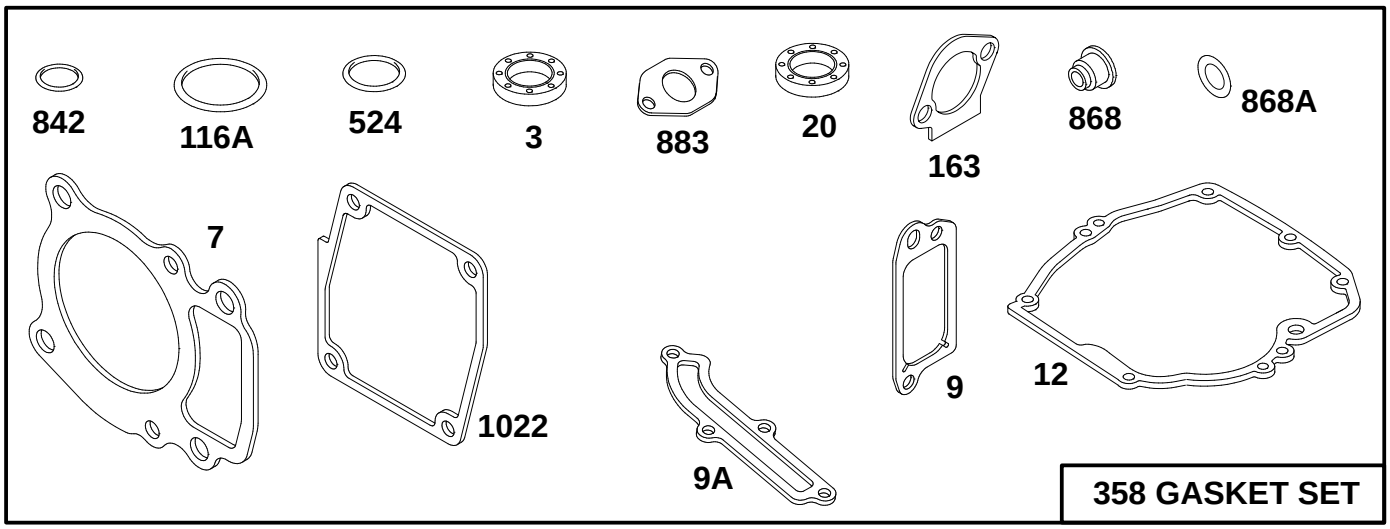

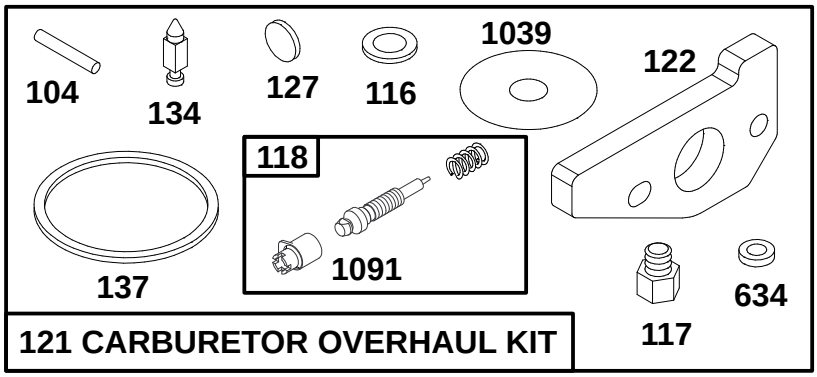

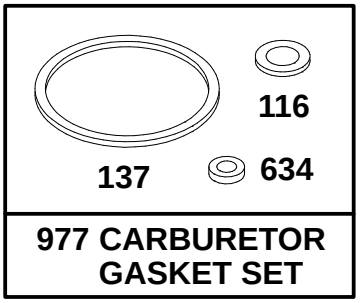

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★3	77−9060	Seal − Oil	1
★7	77−7740	Gasket − Cylinder Head	1
★9	77−9250	Gasket − Breather	1
★9A	77−7410	Gasket − Breather	1
★12	77−7550	Gasket − Engine Base	1
★20	77−7570	Seal − Oil	1
●104	77−8180	Pin − Float Hinge	1
●◆116	77−8210	Gasket − Sealing	1
★116A	77−7660	O-Ring	1
●117	77−9610	Jet− Main	1
●118	77−9620	Valve and Spring − Needle	1
121	77−9580	Carburetor Overhaul Kit	1
●122	77−7820	Adapter Assembly	1
●127	94−1651	Plug − Welch	1
●134	77−8110	Valve − Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77−8200	Gasket − Float Bowl	1
★163	77−7960	Gasket − Air Cleaner	1
358	77−8900	Gasket Set	1
★524	77−7270	Seal − O-Ring	1
◆634	77−8150	Washer − Seal	1
★842	77−7300	Seal − O-Ring	1
★868	77−7890	Seal Assy. − Valve	1
★868A	77−7900	Seal − Valve	1
★883	77−7760	Gasket − Exhaust	1
977	77−8930	Carburetor Gasket Set	1
★1022	77−7320	Gasket − Rocker Cover	1
●1039	77−7250	Limiter − Float	1
●1091	77−9650	Cap − Limiter	1

●Incl. in Carburetor Overhaul Kit−Part No. 77−9580
◆ Included in Carburetor Gasket Set−Part No. 77−8930
★ Included in Gasket Set−Part No. 77−8900

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–3287	Spacer – Handle Latch	4	29	2
3–7501	Washer – Curved	4	16	3
8–2759	Bag – Grass	6	6	1
14–9419	Blade	3	8	1
14–9499	Housing Assembly	1	4	1
25–7740	Knob – Arm	2	29	4
26–0670	Screw – Blade	3	9	1
27–6232	Screw – Pivot	2	42	2
27–7210	Screw – Shoulder	4	28	2
27–8590	Key – Square	3	4	1
33–3208	Rod – Shield	2	38	1
33–4820	Hinge – Door, Bag	6	3	1
36–4780	Washer – Thrust	2	35	2
36–6910	Spring	6	4	2
37–7260	Screw – Special	1	22	2
39–5770	Decal – Danger	1	7	1
40–1940	Washer – Hardened	2	53	4
42–3510	Arm – Pivot	2	31	2
42–4020	Frame – Bag	6	7	1
42–4030	Frame – Bag, Upper	6	5	1
44–0580	Shield – Rear Safety	2	39	1
46–6810	Screw – Thread Forming	1	8	1
46–6811	Screw – Hex Washer Hd.	1	11	1
46–8081	Guide – Rope	4	18	1
46–8090	Screw – Hex Washer Hd.	1	16	2
46–8091	Screw – Hex. Washer Hd.	5	7	2
47–2890	Bushing	2	34	2
47–2900	Bushing	2	33	2
48–2170	Cap – End	2	28	2
48–2591	Protector – Crankshaft	3	12	1
48–2810	Rod – Support, Bag	4	1	1
48–2840	Door – Bag, Grass	6	1	1
49–1630	Support – Spacer	4	5	2
49–2040	Screw – Thread Forming	1	3	8
49–8740	Quadrant – Rear L.H.	1	25	1
49–8750	Quadrant – Rear R.H.	1	*	1
49–8760	Quadrant – Front L.H.	2	55	1
49–8770	Quadrant – Front R.H.	1	2	1
49–8790	Shaft – Axle Rear	2	27	1
51–3210	Hose – Fuel	5	4	2
52–2170	Retainer – Blade	3	11	1
52–2190	Spacer – Retainer, Blade	3	5	1
52–2410	Hub	2	44	4
52–2440	Spacer – Bearing	2	46	4
52–2450	Bearing – Wheel	2	45	8
52–2480	Spacer – Wheel	2	50	4
52–2610	Label – Grease	1	24	1
53–7720	Wheel & Tire Assembly	2	*	4
53–7740	Tire	2	43	4
53–7780	Plate – Wheel Half	2	47	8
55–3575	Cap – Fuel	5	1	1
61–8270	Bar – Control	4	10	1
61–8300	Pivot Arm Assembly	1	1	2
66–5350	Lever – Control	4	9	1
66–7560	Spring Arm Ass'y – Front	2	41	2
66–7561	Spring Arm Ass'y – Rear	2	30	2
70–1063	Cable – Throttle	4	14	1
71–1280	Decal – Safety Instructions	1	20	1
71–9280	Filter – Fuel	5	5	1
71–9350	Bracket – Spring	1	10	1
74–1810	Washer – Thrust	1	26	2
76–4570	Plate – Latch	1	15	1
76–4640	Plate – Latch	2	60	1
76–4650	Grip – Latch	2	61	1
76–4660	Spring	1	12	1
77–0200	Door Assembly	1	14	1
77–0500	Plug Assembly	1	21	1
77–7040	Cover – Air Cleaner	10	968	1
77–7210	Insert–Rewind Handle	11	59	1
77–7240	Bowl – Fuel	9	136	1
77–7250	Limiter – Float	14	1039	1
77–7250	Limiter – Float	9	1039	1
77–7260	Dipstick – Oil	8	523	1
77–7270	Seal – O-Ring	14	524	1
77–7270	Seal – O-Ring	8	524	1
77–7280	Tube – Oil Filler	8	525	1
77–7300	Seal – O-Ring	14	842	1
77–7300	Seal – O-Ring	8	842	1
77–7320	Gasket – Rocker Cover	14	1022	1
77–7320	Gasket – Rocker Cover	7	1022	1
77–7330	Plug – Spark	7	337	1
77–7340	Elbow – Spark Plug	7	635	1
77–7360	Screw – Hex. Head	7	10	1
77–7370	Lever Assy. – Governor	8	227	1
77–7380	Bolt – Governor Lever	8	562	1
77–7390	Nut – Hex.	8	592	1
77–7400	Cover – Breather	7	572	1
77–7410	Gasket – Breather	7	9A	1
77–7410	Gasket – Breather	14	9A	1
77–7420	Screw – Breather Cover	7	307	1
77–7460	Crank – Governor	8	616	1
77–7470	Washer	8	230	1
77–7480	Pushnut	8	615	1
77–7490	Gear – Cam	8	46	1
77–7500	Gear – Governor	8	219	1
77–7530	Gear – Timing	8	741	1
77–7550	Gasket – Engine Base	14	12	1
77–7550	Gasket – Engine Base	8	12	1
77–7560	Base – Engine	8	18	1
77–7570	Seal – Oil	8	20	1
77–7570	Seal – Oil	14	20	1
77–7590	Cylinder Assy.	7	1	1
77–7600	Pin – Cylinder	7	718	1
77–7610	Tappet – Valve	7	45	1
77–7620	Rod – Push	7	1026	1
77–7630	Screw – Cylinder Head	7	13	1
77–7640	Pump – Oil	8	1024	1
77–7650	Cover – Oil Pump	8	979	1
77–7660	O-Ring	8	116A	1
77–7660	O-Ring	14	116A	1
77–7670	Rod – Connecting	8	29	1
77–7690	Piston Assy. (Std.)	8	25	1
77–7700	Ring Set (Std.)	8	26	1
77–7710	Lock – Piston Pin	8	27	1
77–7730	Head – Cylinder	7	5	1
77–7740	Gasket – Cylinder Head	14	7	1
77–7740	Gasket – Cylinder Head	7	7	1
77–7760	Gasket – Exhaust	13	883	1
77–7760	Gasket – Exhaust	14	883	1
77–7760	Gasket – Exhaust	7	883	1
77–7770	Guide – Push Rod	7	1034	1
77–7780	Stud – Rocker Arm	7	166	1
77–7790	Arm – Rocker	7	1029	1
77–7800	Cap – Valve	7	238	1
77–7810	Spring – Valve	7	35	1
77–7820	Adapter Assembly	9	122	1
77–7820	Adapter Assembly	14	122	1
77–7820	Adapter Assy.	7	122	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
77−7860	Valve − Exhaust	7	33	1
77−7870	Retainer − Spring	7	40	1
77−7880	Valve − Intake	7	34	1
77−7890	Seal Assy. − Valve	14	868	1
77−7890	Seal Assy. − Valve	7	868	1
77−7900	Gasket − Valve	7	868A	1
77−7900	Seal − Valve	14	868A	1
77−7910	Ball & Screw − Rocker	7	192	1
77−7920	Screw − Air Cleaner	10	969	1
77−7930	Screw − Air Cleaner	10	971	1
77−7940	Base − Air Cleaner	10	966	1
77−7950	Element − Filter	10	535	1
77−7960	Gasket − Air Cleaner	10	163	1
77−7960	Gasket − Air Cleaner	14	163	1
77−7970	Screw − Hex. Head	9	124	1
77−7980	Link − Governor	10	201	1
77−8000	Bracket − Carburetor	10	620	1
77−8010	Switch − Stop	10	621	1
77−8010	Switch−Stop	12	621	1
77−8020	Screw Assy. − Speed	10	98A	1
77−8040	Tube − Vent	9	1011	1
77−8080	Valve − Throttle	9	130	1
77−8090	Screw − Valve Mtg.	9	95	1
77−8110	Valve − Inlet	14	134	1
77−8110	Valve − Inlet	9	134	1
77−8130	Shaft − Choke	9	141	1
77−8140	Spring − Choke	10	618	1
77−8150	Washer − Seal	14	634	1
77−8150	Washer − Seal	9	634	1
77−8160	Shaft − Throttle	9	131	1
77−8170	Float − Carburetor	9	133	1
77−8180	Pin − Float Hinge	14	104	1
77−8180	Pin − Float Hinge	9	104	1
77−8190	Bowl Assy. − Carburetor	9	975	1
77−8200	Gasket − Float	14	137	
77−8200	Gasket − Float	9	137	
77−8210	Gasket − Sealing	14	116	1
77−8210	Sealing − Gasket	9	116	1
77−8220	Screw − Hex. Head	9	955	1
77−8240	Screw − Idle Adj.	9	98	1
77−8300	Screw−Hex. Head	11	65	1
77−8310	Screw − Hex. Head	8	305	1
77−8310	Screw−Hex. Head	12	305	1
77−8330	Flywheel−Magneto	12	23	1
77−8340	Key−Flywheel	12	24	1
77−8360	Nut−Flywheel	12	332	1
77−8400	Wire−Ground	12	356	1
77−8420	Armature−Magneto	12	333	1
77−8430	Terminal−Spark Plug	12	851	1
77−8440	Screw−Hex. Head	12	334	1
77−8520	Handle−Rewind Starter	11	60	1
77−8640	Muffler − Exhaust	13	300	1
77−8660	Guard − Muffler	13	832	1
77−8900	Gasket Set	14	358	1
77−8930	Carburetor Gasket Set	14	977	1
77−8971	Engine − Complete	3	2	1
77−9020	Short Block	3	*	1
77−9060	Seal − Oil	7	K3	1
77−9060	Seal − Oil	14	K3	1
77−9070	Screw − Engine Base	8	22	1
77−9140	Bracket−Blower Housing	12	980	1
77−9170	Guard−Flywheel	12	37	1
77−9180	Bracket−Blower Housing	12	980A	1
77−9200	Screw − Hex. Head	7	10A	1
77−9250	Gasket − Breather	7	9	1
77−9250	Gasket − Breather	14	9	1
77−9260	Breather Assy.	7	8	1
77−9320	Cover − Valve	7	1023	1
77−9330	Crankshaft	8	16	1
77−9340	Pin Assy. − Piston	8	28	1
77−9350	Screw − Connecting Rod	8	32	1
77−9360	Screw − Hex. Head	10	188	1
77−9360	Screw − Hex. Head	13	188	1
77−9360	Screw − Hex. Head	8	188	1
77−9360	Screw−Hex. Head	12	188	1
77−9410	Tube − Breather	7	11	1
77−9430	Screw − Hex.	13	346	1
77−9460	Brake Assembly	12	923	1
77−9550	Cover − Brake	3	17	1
77−9580	Carburetor Overhaul Kit	14	121	1
77−9590	Plug − Pipe	8	15	1
77−9600	Valve − Choke	9	108	1
77−9610	Jet − Main	9	117	1
77−9610	Jet − Main	14	117	1
77−9620	Valve & Spring −	9	118	1
77−9620	Valve and Spring −	14	118	1
77−9630	Carburetor Assy.	9	125	1
77−9640	Adapter − Jet	9	147	1
77−9650	Cap − Limiter	14	1091	1
77−9650	Cap − Limiter	9	1091	1
77−9660	Housing−Blower	12	304	1
80−3770	Retainer − Door	1	13	1
82−9150	Chute − Discharge	1	9	1
82−9950	Bracket − Throttle Control	4	12	1
84−4960	Decal − Pro Line	3	1	1
84−5691	Housing Assembly	1	4	1
84−8361	Latch − Handle L.H.	4	*	1
84−8401	Latch − Handle R.H.	4	27	1
84−9170	Base − Tank	5	6	1
86−5232	Cover − Belt	1	23	1
86−7990	Screw − Clamp	3	18	1
92−1586	Handle Assembly	4	2	1
92−1599	Stiffener − Blade	3	14	1
92−1720	Plate − Kicker	2	57	1
92−1730	Plate − Kicker	1	6	1
92−1750	Plate − Kicker	1	19	1
92−1779	Decal − Warning	2	62	1
92−1796	Decal − Recycler	2	56	1
93−3166	Tank − Fuel	5	2	1
93−3662	Cable − Brake	4	30	1
94−1651	Plug − Welch	14	127	1
94−1651	Plug − Welch	9	127	1
94−1653	Cup−Starter	11	455	1
94−1654	Pawl−Starter	11	459	1
94−1655	Spring−Torsion	11	515	1
94−1656	Housing−Rewind Starter	11	55	1
94−1657	Pulley−Rewind Starter	11	56	1
94−1658	Rope−Starter (Cut To Suit)	11	58	1
94−1659	Retainer−Rewind Starter	11	456	1
94−1660	Screw−Shoulder	11	461	1
94−1661	Starter Assembly−Rewind	11	608	1
94−1662	Screw − Hex. Head	13	188A	1
94−1663	Spring−Brake	12	922	1
94−8084	Decal − Recoil	3	3	1
2210−249	Clamp − Casing	3	19	1
2210−316	Stop − Recoil	3	16	1
2412−95	Clamp − Fuel Line	5	3	4
256−276	Spacer	4	17	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
257−3	Washer − Pivot	2	52	2
302−56	Fitting − Grease	2	32	2
321−2	Screw − Hex. Hd.	2	51	16
321−4	Screw − Hex. Hd.	4	11	1
321−7	Screw − Hex. Hd.	1	17	2
321−9	Screw − Hex. Hd.	4	3	1
321−13	Screw − Hex. Hd.	4	15	2
322−6	Screw − Hex. Hd.	4	25	2
322−7	Screw − Hex. Hd.	4	24	2
322−10	Screw − Hex. Hd.	4	4	2
323−6	Screw − Hex. Hd.	5	8	2
323−12	Screw − Hex. Hd.	2	49	4
3253−22	Washer − Lock	3	10	1
3254−6	Washer − Internal Tooth	3	6	3
3256−22	Washer − Flat	2	63	2
3290−378	Tie − Cable	4	20	1
3290−422	Nut − Push	6	2	2
3290−456	Washer	4	23	4
3295−35	Rivet	2	59	1
3296−6	Nut − Lock	2	54	2
3296−29	Nut − Lock	4	21	4
3296−42	Nut − Lock	4	8	2
3296−42	Nut − Lock	1	18	2
3296−42	Nut − Lock	2	48	16
3296−47	Nut − Lock	4	26	2
3296−58	Nut − Lock	4	6	2
32111−7	Nut − Acorn	4	19	2
32121−108	Pin − Roll	2	36	2
32144−70	Screw − Thread Forming	3	7	3
32144−102	Screw − Hex. Flange Hd.	3	13	3
32144−111	Screw − Pan Hd.	1	5	6
32151−86	Ring − Retaining	4	13	2
32152−2	Nut − Lock	2	37	4

OPTIONAL EQUIPMENT

Side Discharge Chute . . . . . Model No. 59168

Spark Arrestor Muffler . . . . . Part No. 81−0200

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								