FORM NO. 3318–661


TORO®

MODEL NO. 79402–690001 & UP

PARTS CATALOG

PROLINE 52” BAGGER

8 Cu. Ft. ZTR

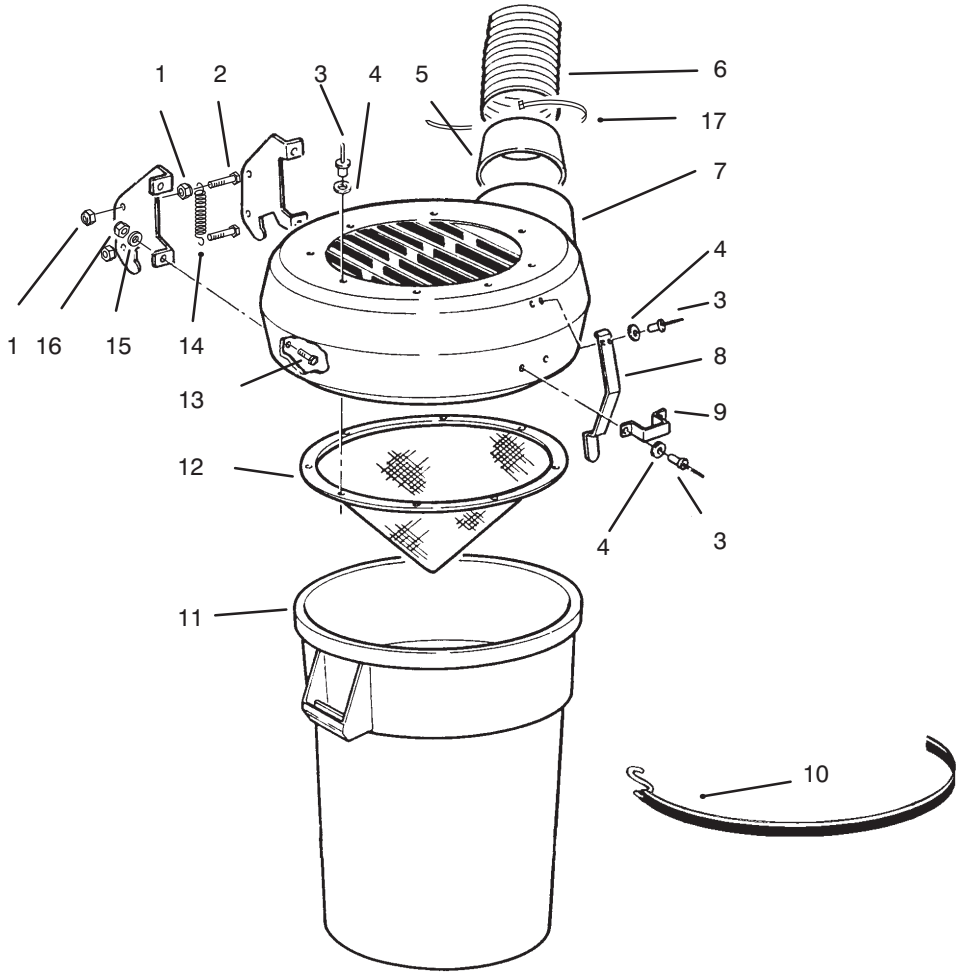

CANISTER ASSEMBLY


PROTOTYPE

Ref. No.	Part No.	Description	No. Used
1	3217–7	Nut – Hex.	4
2	323–9	Screw – HH	2
3	79–0470	Rivet – Pop	13
4	9202704	Washer – Flat	13
5	79–0410	Arm – Seal	1
6	79–0920	Hose – Flexible	1
7	78–0700	Cover – Top, Canister	1
8	78–6570	Latch – Top	1
9	78–9280	Bracket	1
*10		Strap – Bungie	1
11	79–0130	Canister	1
12	78–6580	Screen – Canister	1
13	322–3	Screw – HH	4
15	100071	Spring – Extension	2
16	3256–23	Washer – Flat	4
17	79–0100	Tie – Wire	1

*Obtain Locally

© The TORO Company –1996
All Rights Reserved

TPS

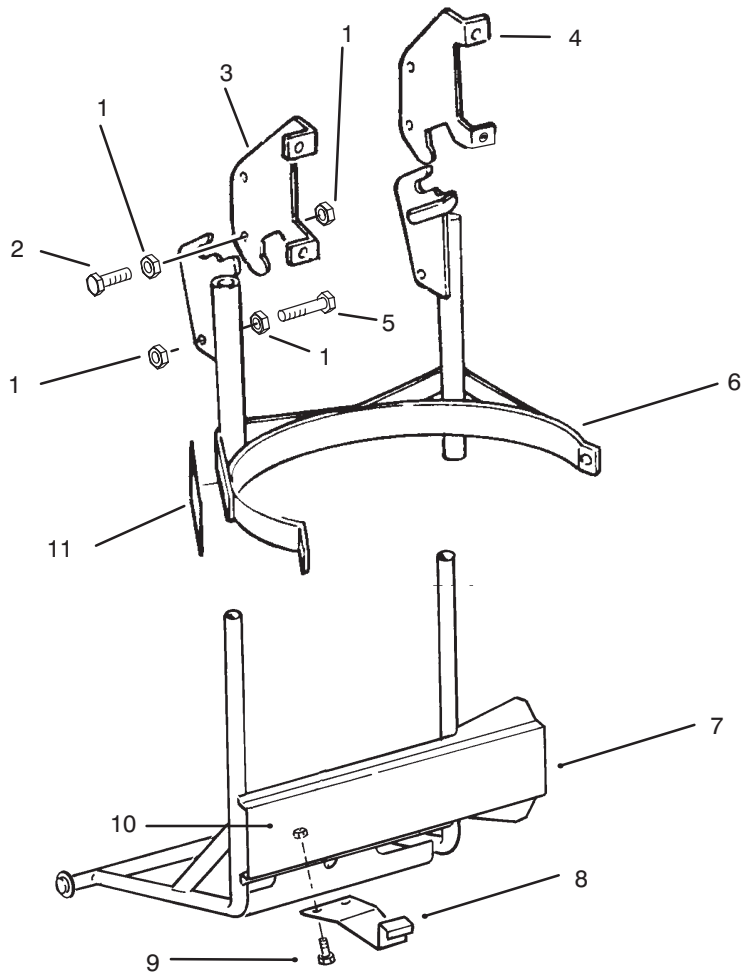

C–2222


CANISTER SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3217–7	Nut – Hex.	8
3	323–7	Screw – HH	2
3	78–0610	Bracket – Top, LH	1
4	78–0620	Bracket – Top, RH	1
5	323–11	Screw – HH	2
6	93–1638	Support – Canister (Incl. Ref.#11)	1

Ref. No.	Part No.	Description	No. Used
7	79–1860	Bracket Quick Attach Asm	1
8	79–1840	Bracket – Support, Canister	1
9	323–6	Screw – HH	2
10	3296–39	Nut – Lock	2
11	79–3970	Decal – Danger	1

PROTOTYPE

*Not Illustrated

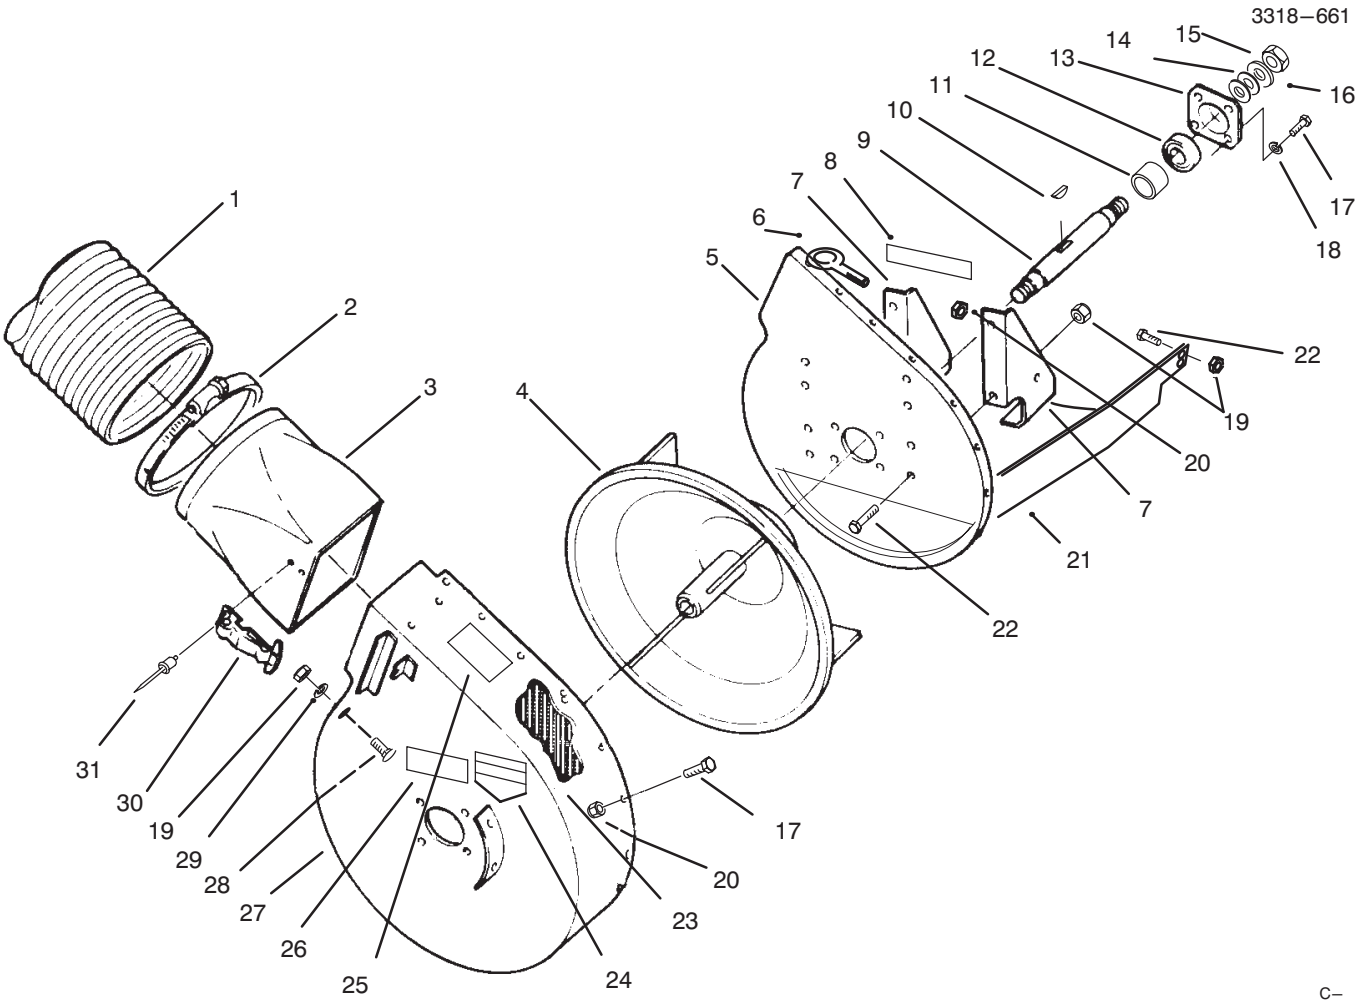

C–


BLOWER HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Hose – Flexible (Ref.)	
2	102528	Clamp	1
3	79–0900	Adapter	1
4	79–1961	Impeller	1
5	94–9699	Mount Plate Asm (Incl. Ref. #8)	1
6	102555	Bolt – Eye	1
7	78–5560	Bracket – Mounting	2
8	82–5510	Decal – Warning	1
9	78–5410	Shaft – Blower	1
10	3257–40	Key – Woodruff	1
12	38–7820	Bearing – Ball	1
13	37–6730	Cup – Bearing	1
11	7989	Spacer	1
14	9202154	Washer – Flat	2
15	3218–12	Nut – Jam	1
16	9202604	Washer	1

Ref. No.	Part No.	Description	No. Used
17	321–3	Screw – HH	13
18	3253–3	Washer – Lock	4
19	3296–29	Nut – Lock	19
20	3296–42	Nut – Lock	10
21	79–3520	Deflector	1
22	322–3	Screw – HH	13
23	79–1880	Strip – Wear	1
24	79–0350	Decal – Danger	1
25	79–0360	Decal – Danger	1
26	93–1122	Decal – Danger	1
27	94–9698	Blower Housing Asm (Incl. Ref.# 23, 25 &26)	1
28	3230–1	Bolt – Carriage	4
29	3256–23	Washer – Flat	3
30	117344	Handle – Latch	2
31	3269–13	Rivet – Pop	4

PROTOTYPE

*Not Illustrated

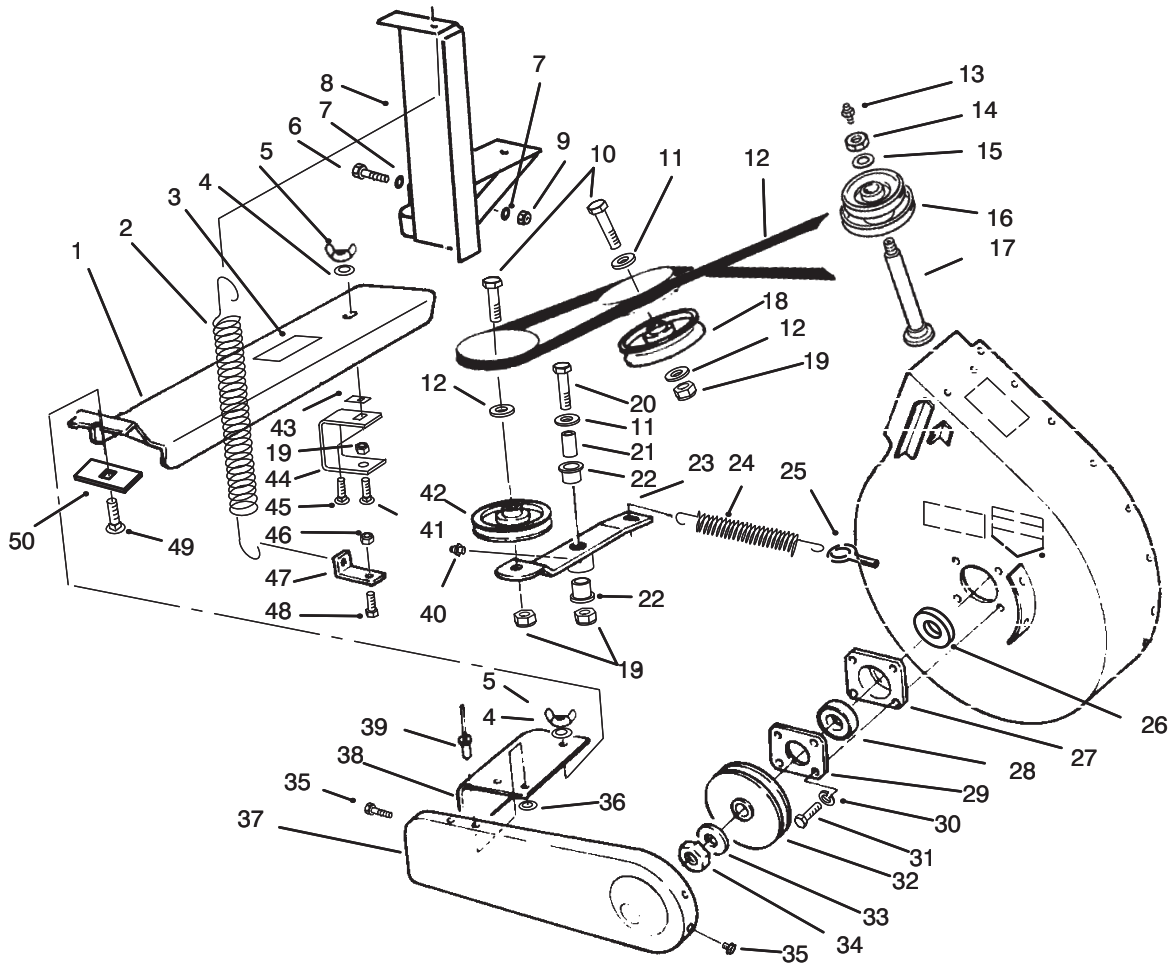

C–


BLOWER PULLEYS & IDLER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–9697	Belt Cover Asm (Incl. Ref.# 3)	1
2	79–0020	Spring – Extension	1
3	79–0350	Decal – Danger	1
4	3256–23	Washer – Flat	4
5	32103–23	Nut – Wing	2
6	321–31	Screw – HH	4
7	3256–22	Washer – Flat	8
8	79–1160	Support – Spring	1
9	3296–42	Nut – Lock	4
10	323–9	Screw – HH	2
11	3256–24	Washer – Flat	4
12	79–1830	Belt–V	1
13		Fitting – Grease	1

Ref. No.	Part No.	Description	No. Used
14		Nut	1
15		Washer – Lock	1
16	79–0660	Pulley – Blower	1
17	79–1910	Shaft – Spindle	1
18	92–7099	Pulley – Idler	1
19	3296–39	Nut – Lock	3
20	323–11	Screw – HH	1
21	114511	Spacer	1
22	109859	Bushing – Flange	2
23	78–0750	Arm – Idler	1
24	6533	Spring – Extension	1
25		Eyebolt (Ref.)	1
26	63–9710	Spacer	1

PROTOTYPE

*Not Illustrated

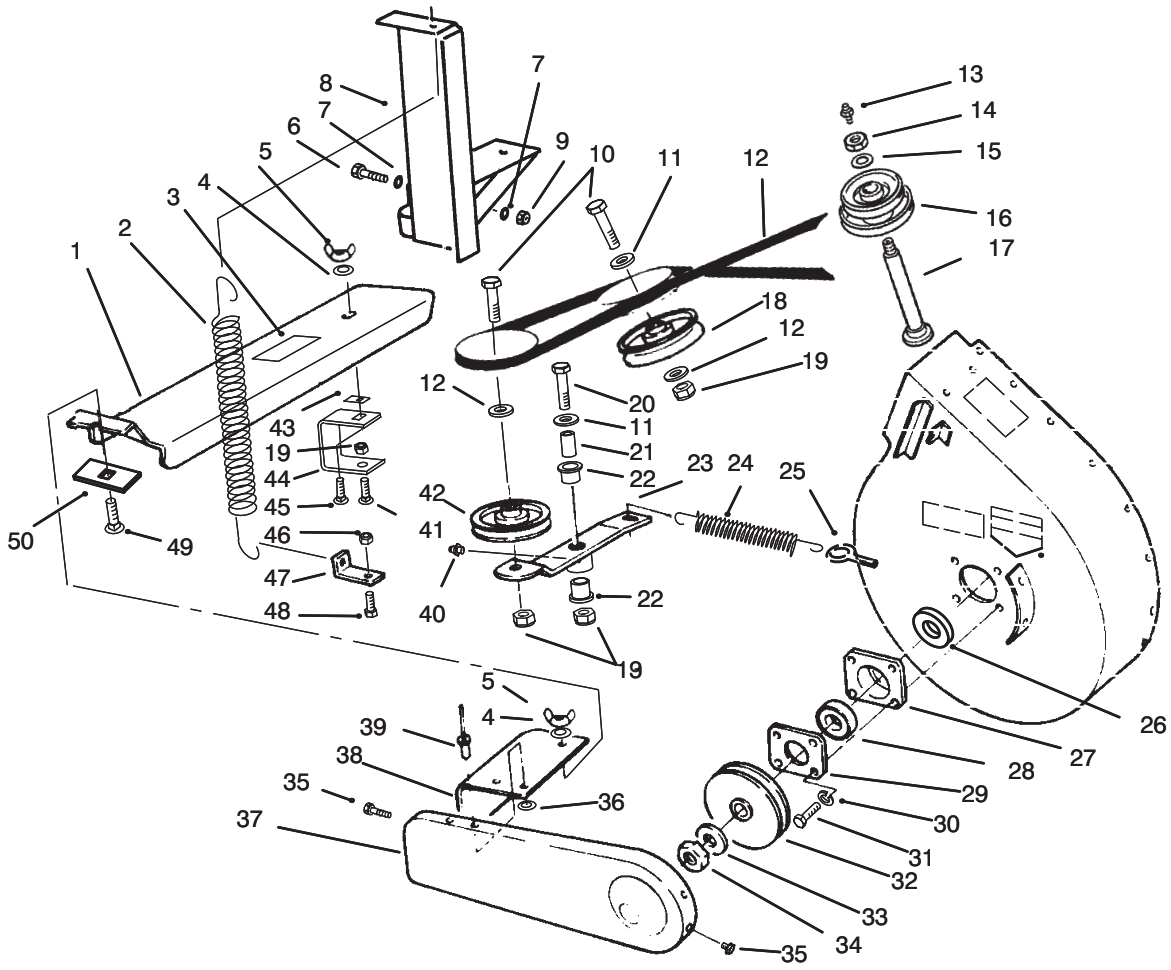

C–

BLOWER PULLEYS & IDLER ARM ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
27	37–6730	Cup – Bearing	1
28	38–7820	Bearing – Ball	1
29	63–9700	Plate – Cover	1
30	3253–3	Washer – Lock	4
31	321–3	Screw – HH	4
32	78–0730	Pulley – Blower	1
33	9202604	Washer	1
34	3218–12	Nut – Jam	1
35	9266934	Screw – Hex. Washer Hd.	4
36	9702704	Washer	3
37	78–5450	Shield	1
38	78–9120	Shield – Pulley	1

Ref. No.	Part No.	Description	No. Used
39	114439	Rivet – Pop	3
40	302–26	Fitting Grease	1
41	323–4	Screw – HH	1
42	92–7084	Pulley – Idler	1
43	79–2990	Nut	1
44	79–1220	Bracket – Shield	1
45	3230–1	Bolt – Carriage	1
46	3296–29	Nut	1
47	2534	Clip – Spring	1
48	322–3	Screw – HH	1
49	3230–23	Bolt – Carriage	1
50	78–7830	Nut	1

*Not Illustrated

PROTOTYPE

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
2534	Clip – Spring	5	47	1
6533	Spring – Extension	4	24	1
7989	Spacer	3	11	1
100071	Spring – Extension	1	15	2
102528	Clamp	3	2	1
102555	Bolt – Eye	3	6	1
109859	Bushing – Flange	4	22	2
114439	Rivet – Pop	5	39	3
114511	Spacer	4	21	1
117344	Handle – Latch	3	30	2
9202154	Washer – Flat	3	14	2
9202604	Washer	3	16	1
9202604	Washer	5	33	1
9202704	Washer – Flat	1	4	13
9266934	Screw – Hex. Washer Hd.	5	35	4
9702704	Washer	5	36	3
37–6730	Cup – Bearing	3	13	1
37–6730	Cup – Bearing	5	27	1
38–7820	Bearing – Ball	3	12	1
38–7820	Bearing – Ball	5	28	1
63–9700	Plate – Cover	5	29	1
63–9710	Spacer	4	26	1
78–0610	Bracket – Top, LH	2	3	1
78–0620	Bracket – Top, RH	2	4	1
78–0700	Cover – Top, Canister	1	7	1
78–0730	Pulley – Blower	5	32	1
78–0750	Arm – Idler	4	23	1
78–5410	Shaft – Blower	3	9	1
78–5450	Shield	5	37	1
78–5560	Bracket – Mounting	3	7	2
78–6570	Latch – Top	1	8	1
78–6580	Screen – Canister	1	12	1
78–7830	Nut	5	50	1
78–7830	Strap	1	10	1
78–9120	Shield – Pulley	5	38	1
78–9280	Bracket	1	9	1
79–0020	Spring – Extension	4	2	1
79–0100	Tie – Wire	1	19	1
79–0130	Canister	1	11	1
79–0350	Decal – Danger	4	3	1
79–0350	Decal – Danger	3	24	1
79–0360	Decal – Danger	3	25	1
79–0410	Arm – Seal	1	5	1
79–0470	Rivet – Pop	1	3	13
79–0660	Pulley – Blower	4	16	1
79–0900	Adapter	3	3	1
79–0920	Hose – Flexible	1	6	1
79–1160	Support – Spring	4	8	1
79–1220	Bracket – Shield	5	44	1
79–1830	Belt–V	4	12	1
79–1840	Bracket – Support, Canister	2	8	1
79–1860	Bracket Quick Attach Asm	2	7	1
79–1880	Strip – Wear	3	23	1
79–1910	Shaft – Spindle	4	17	1
79–1961	Impeller	3	4	1
79–2990	Nut	5	43	1
79–3520	Deflector	3	21	1
79–3970	Decal – Danger	2	11	1
82–5510	Decal – Warning	3	8	1
92–7084	Pulley – Idler	5	42	1
92–7099	Pulley – Idler	4	18	1
93–1122	Decal – Danger	3	26	1
93–1638	Support – Canister	2	6	1
94–9697	Belt Cover Asm	4	1	1
94–9698	Blower Housing Asm	3	27	1
94–9699	Mount Plate Asm	3	5	1
302–26	Fitting Grease	5	40	1
321–3	Screw – HH	3	17	13
321–3	Screw – HH	5	31	4
321–31	Screw – HH	4	6	4
322–3	Screw – HH	1	13	4
322–3	Screw – HH	5	48	1
322–3	Screw – HH	3	22	13
323–4	Screw – HH	5	41	1
323–6	Screw – HH	2	9	2
323–7	Screw – HH	2	3	2
323–9	Screw – HH	1	2	2
323–9	Screw – HH	4	10	2
323–11	Screw	1	14	2
323–11	Screw – HH	2	5	2
323–11	Screw – HH	4	20	1
3217–7	Nut – Hex	1	1	4
3217–7	Nut – Hex	2	1	8
3218–12	Nut – Jam	3	15	1
3218–12	Nut – Jam	5	34	1
3230–1	Bolt – Carriage	3	28	4
3230–1	Bolt – Carriage	5	45	1
3230–23	Bolt – Carriage	5	49	1
3253–3	Washer – Lock	3	18	4
3253–3	Washer – Lock	5	30	4
3256–22	Washer – Flat	4	7	8
3256–23	Washer – Flat	4	4	4
3256–23	Washer – Flat	1	16	4
3256–23	Washer – Flat	3	29	3
3256–24	Washer – Flat	4	11	4
3257–40	Key – Woodruff	3	10	1
3269–13	Rivet – Pop	3	31	4
3296–29	Nut	5	46	1
3296–29	Nut – Lock	1	17	4
3296–29	Nut – Lock	3	19	19
3296–39	Nut – Lock	2	10	2
3296–39	Nut – Lock	4	19	3
3296–42	Nut – Lock	4	9	4
3296–42	Nut – Lock	3	20	10
32103–23	Nut – Wing	4	5	2

PROTOTYPE

*Not Illustrated

MAINTENANCE RECORD

Date								

PROTOTYPE

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

PROTOTYPE

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.