FORM NO. 3319—205 REV. A

LAWN-BOY®

21” SILVER SERIES WALK—BEHIND MOWER

MODEL NO. 10313 — 7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN−BOY owners as quickly as possible, minor changes are incorporated into LAWN−BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN−BOY Distributor or his Authorized LAWN−BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS


Description	Page	Description	Page
Housing Assembly	3	Carburetor No. 632733	9
Rear Axle Assembly	4	Engine TVS120−66004A	10−12
Gear Case Assembly	5	Recoil Starter Assembly 590702	13
Engine Assembly	6	Recoil Starter Assembly 590739 (Optional)	14
Handle Assembly	7	Numeric Parts Index	15
Rear Catcher Assembly	8	Maintenance	16

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mow & Feed Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Copyright 1996 The Lawn−Boy Inc. Rev. 1997
All Rights Reserved

TPS

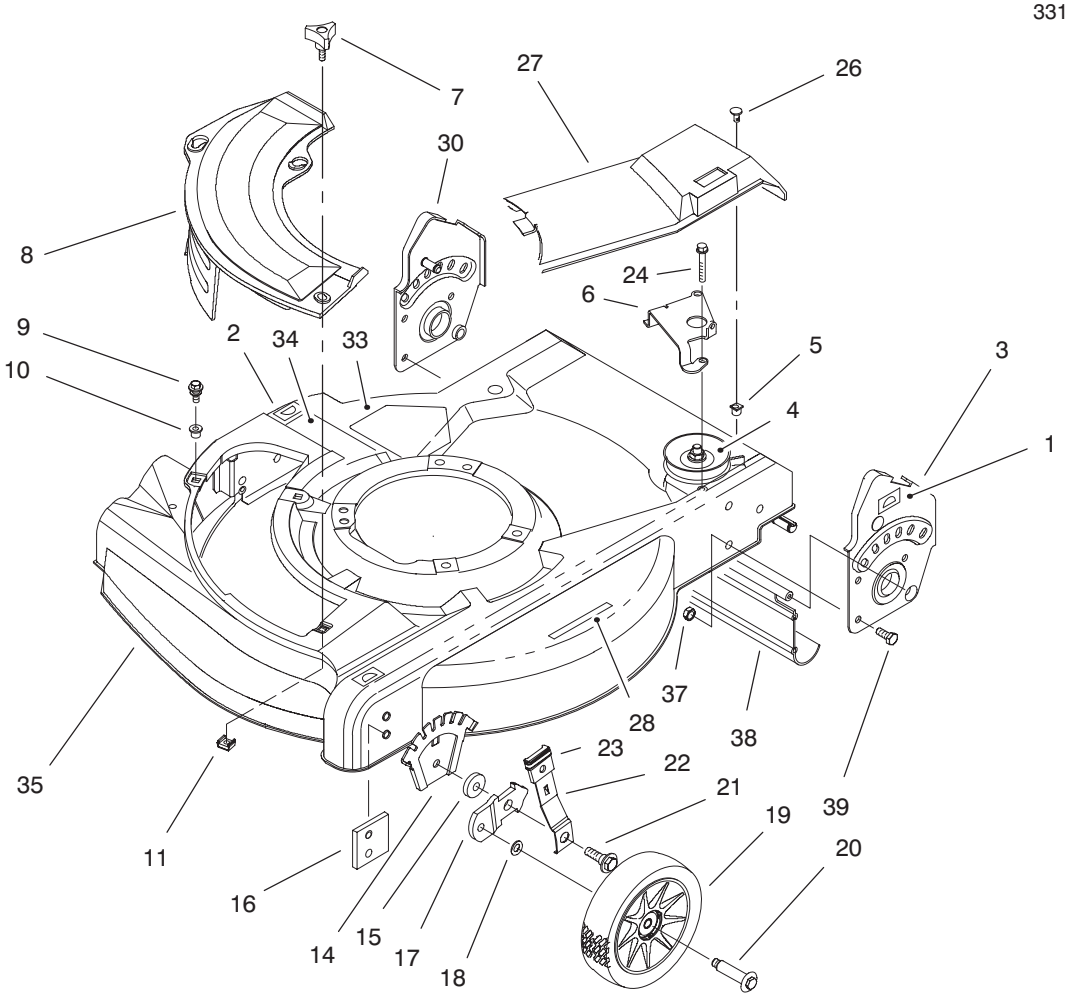


C–2237

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–2915	Decal – H.O.C.	2
2	92–2914	Decal – H.O.C.	2
3	92–7724	Bracket – Handle L.H.	1
4	92–7735	Gear Case Assembly	1
5	605120	Grommet	1
6	92–7728	Guide – Transmission	1
7	614682	Knob – Cover Plate	1
8	92–8630	Plate – Mulch 21”	1
9	614677	Screw – Sems Thr’d Form.	2
10	94–1610	Grommet – Plastic	2
11	613765	Nut – Cage	1
14	92–4881	Plate – Height Adjust	2
15	92–4890	Washer	2
16	92–7731	Plate – Baffle	2
17	614637	Bracket – Wheel Height Adj.	2
18	40–1940	Washer	2
19	684776	Wheel & Tire Assembly – 6”	2
20	92–1099	Bolt – Shoulder	2

Ref. No.	Part No.	Description	No. Used
21	614672	Bolt – Shoulder	2
22	614687	Spring Arm – Front	2
23	92–1008	Knob – Height Adjust	4
24	49–2040	Screw – Hex Hd. Cap	2
26	92–9665	Screw – Phillip Hd.	1
27	614671	Cover – Drive	1
28	93–7250	Decal – Warning	1
30	92–7723	Bracket – Handle R.H.	1
33	39–5770	Decal – Danger	1
34	92–1097	Decal – Discharge	1
35	16–4369	Housing Assembly (Incl. Ref. #5, 10, 11, 28, 33, & 34)	1
37	3296–29	Nut – Hex Lock	6
38	92–8647	Shield – Trailing	1
39	322–3	Screw – Hex Hd. Cap	6
*	607560	Plate – Cover	1


*Not Illustrated

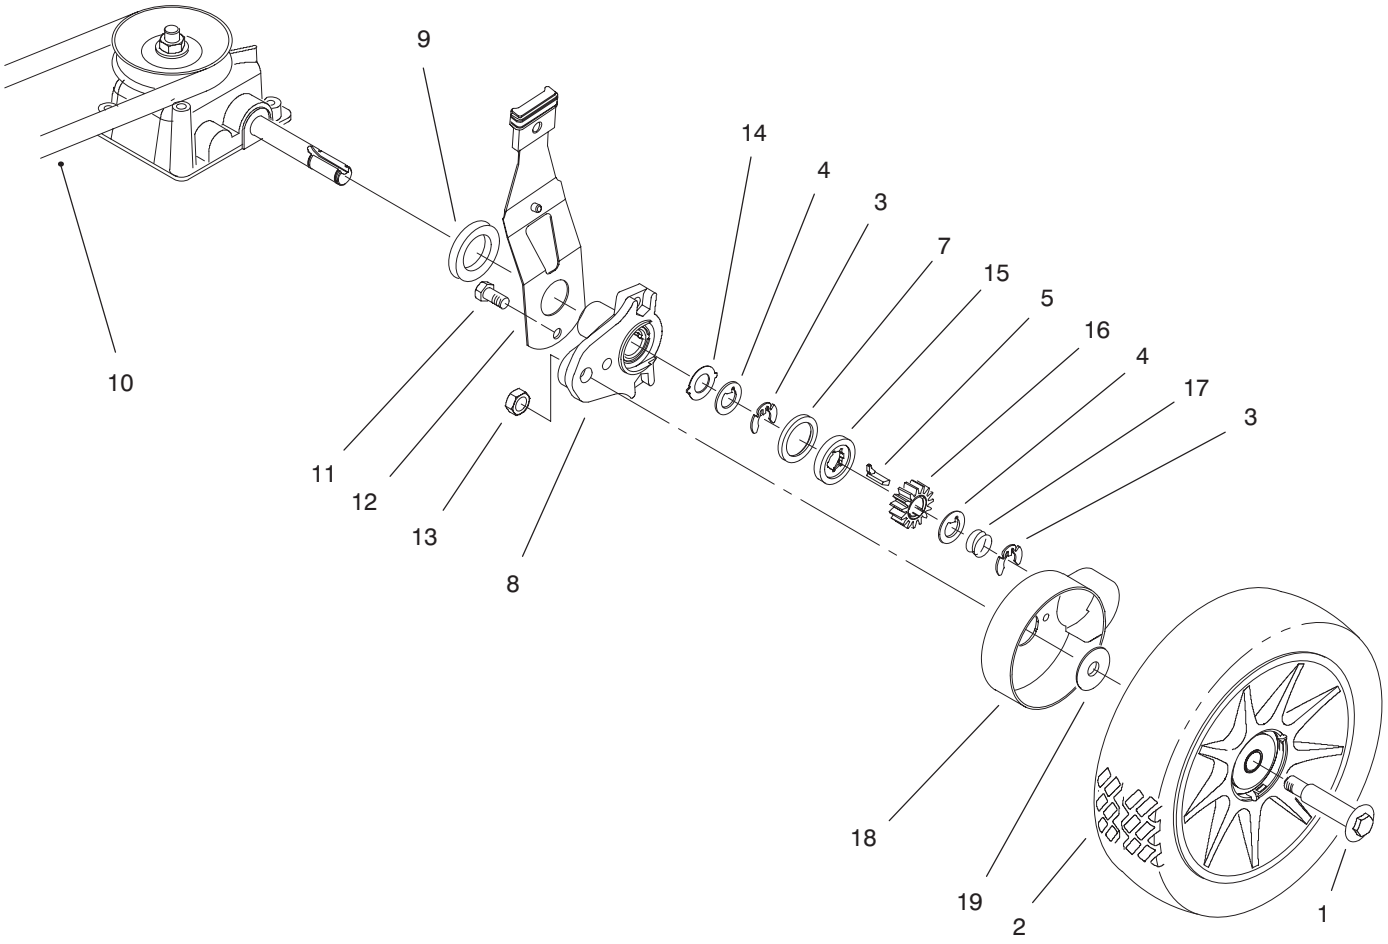

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–1057	Bolt – Shoulder	2
2	92–1042	Wheel & Tire Assembly 8”	2
3	65–2720	Ring – Retaining	4
4	65–4740	Washer – Thrust Keyed	4
5	66–6050	Key – Rocking L.H.	1
*	66–6040	Key – Rocking R.H.	1
7	65–4710	Ring – Friction	2
8	92–7746	Arm – Height Adj. Rear	2
9	614447	Spacer – Axle Shaft	2
10	93–7381	V–Belt	1

Ref. No.	Part No.	Description	No. Used
11	32144–85	Screw – Hex Hd.	2
12	92–1004	Spring Arm Assembly	2
13	610358	Nut – Lock	2
14	65–4730	Washer – Thrust	2
15	65–4760	Washer	2
16	65–4750	Gear – Pinion	2
17	65–4720	Spring – Compression	2
18	94–1609	Cover – Wheel	2
19	614426	Washer – Stepped	2

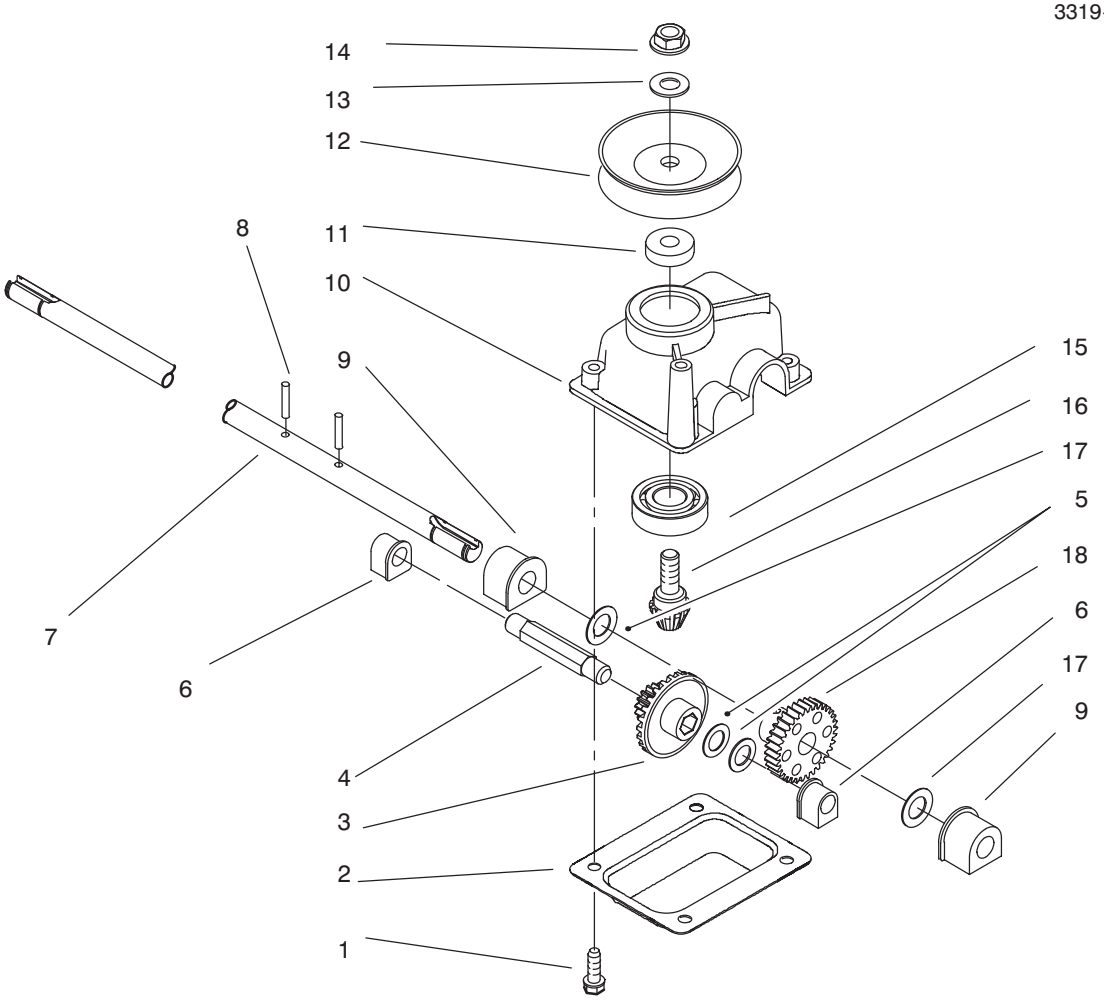


C–1292

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–4	Screw – Taptite	4
2	614668	Cover – Gear Case	1
3	55–3760	Pinion – 15 Tooth	1
4	614696	Shaft – Intermediate	1
5	36–4791	Washer	2
6	60–8750	Bushing	2
7	93–0239	Shaft – Output	1
8	3285–19	Pin – Groove	2
9	60–8850	Bushing – Output	2
10	92–7727	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62–6660	Spacer	1
12	614669	Pulley – Half	2
13	3256–24	Washer	1
14	3296–5	Nut	1
15	38–7820	Bearing – Ball	1
16	60–8890	Gear – Bevel Pinion	1
17	36–4780	Washer – Thrust	2
18	614596	Gear 34 Tooth	1
*	92–7735	Gear Case Complete	1

*Not Illustrated

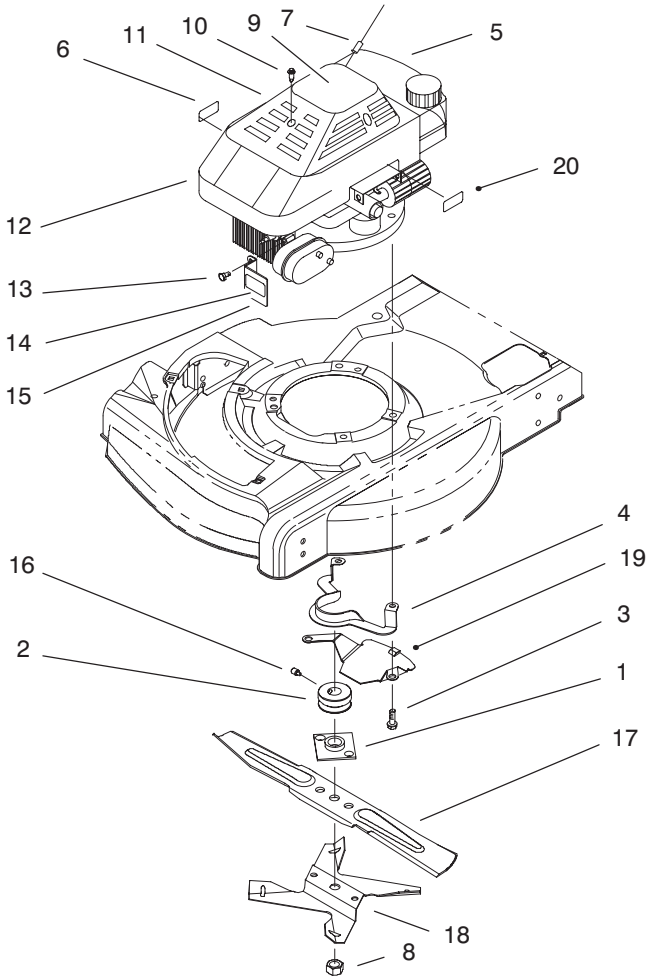


C–2239

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	677525	Plate & Collar Assembly	1
2	92–9575	Pulley – Engine	1
3	95–1726	Screw – Engine	3
4	92–1024	Guide – Belt	1
5		Engine	1
6	92–4851	Decal – Oil Instruction	1
7	92–1701	Rope – Stop	1
8	603164	Nut – Blade	1
9	95–1740	Decal – Recoil	1
10	92–4852	Screw – Recoil Cover	4
11	92–4854	Cover – Starter	1

Ref. No.	Part No.	Description	No. Used
12	94–6088	Shroud – Engine	1
13	3274–52	Screw – Hex Socket Hd.	2
14	65–2690	Decal – Warning	1
15	16–2139	Guard – Muffler (Incl. Ref. #14)	1
16	613227	Screw – Set	1
17	612543	Blade – 21” Whirl	1
18	92–1630	Fan – Mulching	1
19	93–4196	Shield – Grass	1
20	94–8083	Decal – Primer	1

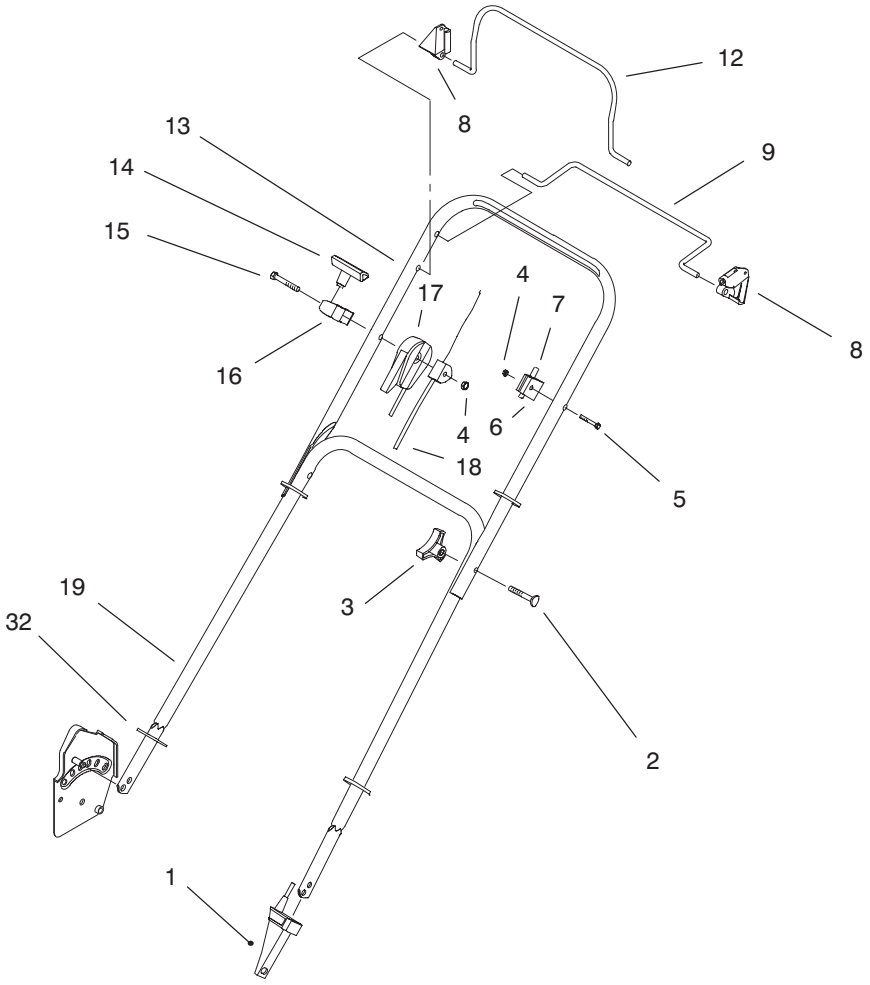


C–2240

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–7380	Anchor – Cable SP Lower	1
2	614697	Screw – Handle	2
3	614243	Knob	2
4	3296–73	Nut – Lock	2
5	92–2266	Screw – Handle	1
6	92–7729	Anchor – Cable SP Upper	1
7	92–7726	Cable – Traction	1
8	92–5412	Stop – Pivot	2
9	92–1001	Bail – SP Control	1
12	93–4184	Bail – Flywheel Brake	1

Ref. No.	Part No.	Description	No. Used
13	95–1713	Handle – Upper	1
14	92–4853	Handle – Starter	1
15	321–49	Screw – Hex Hd. Cap	1
16	93–7383	Guide – Rope	1
17	92–1045	Cable – Throttle	1
18	92–9589	Cable – Brake Assembly	1
19	614643	Handle – Lower	1
32	93–3653	Guard – Handle	1
*	92–5424	Staple	1

*Not Illustrated

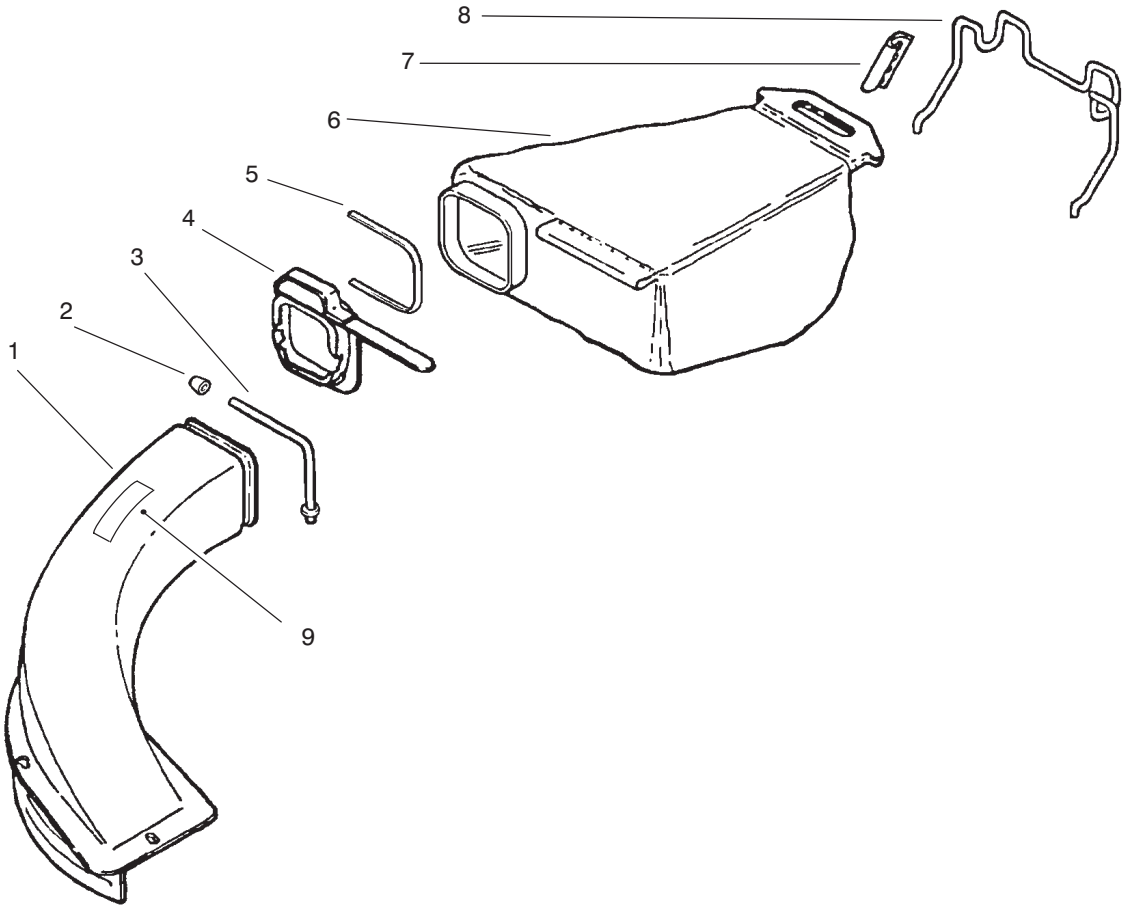


REAR CATCHER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1
5	614700	Tie Strap	1

Ref. No.	Part No.	Description	No. Used
6	*	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92–2919	Decal – Danger	1

*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89800.

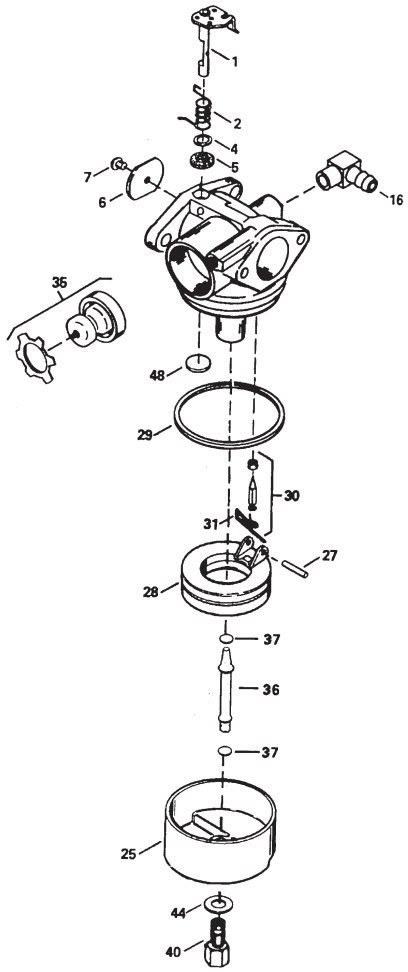


CARBURETOR No. 632733

Ref. No.	Part No.	Description	No. Used
1	631615	Throttle Shaft & Lever Assembly	1
2	631767	Throttle Return Spring	1
4	631184	Dust Seal Washer	1
5	631183	Dust Seal (Throttle)	1
6	632504	Throttle Shutter	1
7	650506	Shutter Screw	1
16	631775	Fuel Fitting	1
25	631867	Float Bowl	1
27	631024	Float Shaft	1
28	632019	Float	1

Ref. No.	Part No.	Description	No. Used
29	631028	Float Bowl ”O” Ring	1
30	631021	Inlet Needle, Seat, & Clip (Incl. 31)	1
31	631022	Spring Clip	1
35	36045	Primer Bulb/Retainer Ring	1
36	632735	Main Nozzle Tube	1
37	632547	O—Ring, Main Nozzle Tube	2
40	632736	High Speed Bowl Nut	1
44	27110	Bowl Nut Washer	1
48	631027	Welch Plug, Atmospheric Vent	1

ENGINE TVS120–66004A

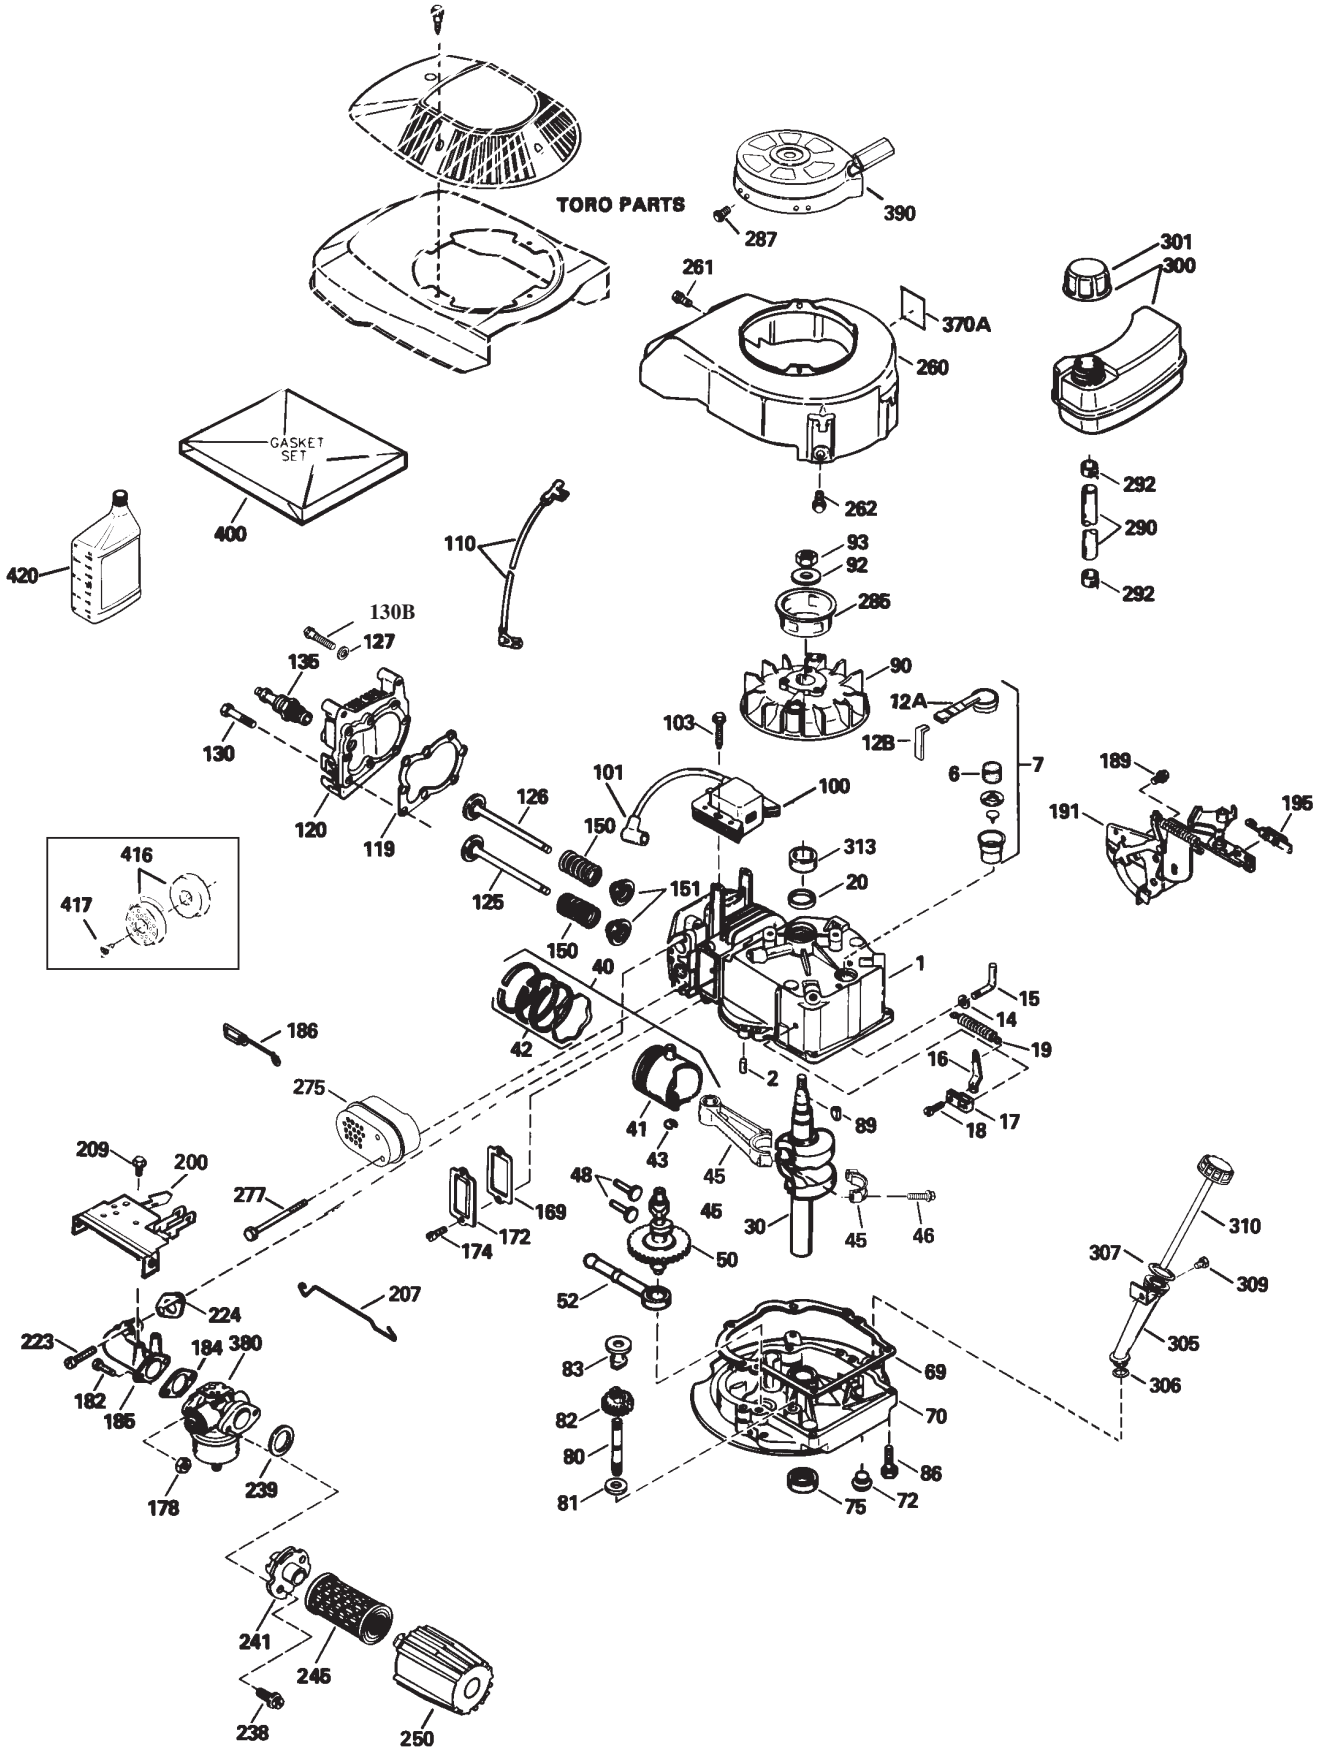


ENGINE TVS120–66004A

Ref. No.	Part No.	Description	No. Used
1	36478A	Cylinder (Incl. 2,7,20 & 125)	1
2	26727	Dowel Pin	2
6	33734	Breather Element	1
7	36557	Breather Body Ass'y. (Incl. 6 & 12A)	1
12A	36558	Breather Cover & Tube (Incl. 12B)	1
12B	34695	Breather Tube Elbow	1
14	28277	Washer	1
15	30589	Governor Rod (Incl. 14)	1
16	32651	Governor Lever	1
17	31335	Governor Lever Clamp	1
18	651018	Screw	1
19	35998	Extension Spring	1
20	32600	Oil Seal	1
30	36597	Crankshaft	1
40	36073	Piston, Pin & Ring Set (Std.)	1
40	36074	Piston, Pin & Ring Set (.010" OS)	1
40	36075	Piston, Pin & Ring Set (.020" OS)	1
41	36070	Piston & Pin Ass'y. (Std.) (Incl. 43)	1
41	36071	Piston & Pin Ass'y. (.010" OS) (Incl. 43)	1
41	36072	Piston & Pin Ass'y. (.020" OS) (Incl. 43)	1
42	36076	Ring Set (Std.)	1
42	36077	Ring Set (.010" OS)	1
42	36078	Ring Set (.020" OS)	1
43	20381	Piston Pin Retaining Ring	2
45	32875A	Connecting Rod Ass'y. (Incl. 46)	1
46	32610A	Connecting Rod Bolt	2
48	27241	Valve Lifter	2
50	35992	Camshaft (MCR)	1
52	29914	Oil Pump Ass'y.	1
69	35261	Mounting Flange Gasket	1
70	34311D	Mounting Flange (Incl. 72 thru 83)	1
72	36083	Oil Drain Plug	1
75	27897	Oil Seal	1
80	30574A	Governor Shaft	1
81	30590A	Washer	1
82	30591	Governor Gear Ass'y. (Incl. 81)	1
83	30588A	Governor Spool	1
86	650488	Screw	6
89	611004	Flywheel Key	1
90	611112	Flywheel	1
92	650815	Belleville Washer	1
93	650816	Flywheel Nut	1
100	34443A	Solid State Ignition	1
101	610118	Spark Plug Cover	1
103	651007	Screw, Torx T–15,	2
110	34961	Ground Wire	1
119	36477	Cylinder Head Gasket	1
120	36476	Cylinder Head	1
125	36471	Exhaust Valve (Std.) (Incl. 151)	1
125	36472	Exhaust Valve (1/32" OS) (Incl. 151)	1
126	29314B	Intake Valve (Std.) (Incl. 151)	1
126	29315C	Intake Valve (1/32" OS) (Incl. 151)	1
127	650691	Washer	2
130	6021A	Screw	6
130B	650818	Screw	2
135	35395	Resistor Spark Plug (RJ19LM)	1
150	35991	Valve Spring	2
151	31673	Valve Spring Cap	2
169	27234A	Valve Cover Gasket	1
172	32755	Valve Cover	1
174	30200	Screw	2
178	29752	Nut & Lock Washer	2
182	6201	Screw	2
184	26756	Carburetor To Intake Pipe Gasket	1
185	36544	Intake Pipe	1
186	36255	Governor Link	1
189	650839	Screw	2
191	36559	S.E. Brake Bracket (Incl. 195)	1
195	610973	Terminal	1
200	35999	Control Bracket	1
207	36200	Throttle Link	1
209	30200	Screw	2
223	650451	Screw	2
224	34690A	Intake Pipe Gasket	1
238	650932	Screw	2
239	34338	Air Cleaner Gasket	1
241	35797	Air Cleaner Collar	1
245	35066	Air Cleaner Filter	1
250	35986	Air Cleaner Cover	1
260	35826	Blower Housing	1
261	30200	Screw	2
262	650831	Screw	2
275	36473	Muffler (Incl. 277)	1
277	650988	Screw	2
285	35000A	Starter Cup	1
287	650926	Screw	2
290	34357	Fuel Line	1
292	26460	Fuel Line Clamp	2
300	35586	Fuel Tank (Incl. 292 & 301)	1
301	35355	Fuel Cap	1
305	35819A	Oil Fill Tube	1
306	36832	"O"–Ring	1
307	35499	"O"–Ring	1
309	651014	Screw	1
310	36259	Dipstick	1
313	34080	Spacer	1
370A	36261	Lubrication Decal	1
380	632733	Carburetor (Incl. 184)	1

ENGINE TVS120–66004A


Ref. No.	Part No.	Description	No. Used
390	590702	Rewind Starter (NOTE: This engine could have been built with 590739 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange. Refer to service bulletin 116.)	1
400	36481	Gasket Set (Incl. Items Marked PK in Notes) Incl. part #'s 26756 (1), 27234A (1), 33735 (1), 36832 (1), 34338 (1), 34690A (1), 35261 (1), 36477 (1)	1
416	36085	Spark Arrestor Kit (Incl. 417) (Optional)	1
417	650760	Screw (Optional)	1
420	730225	SAE 30 4–Cycle Engine Oil (Quart)	1

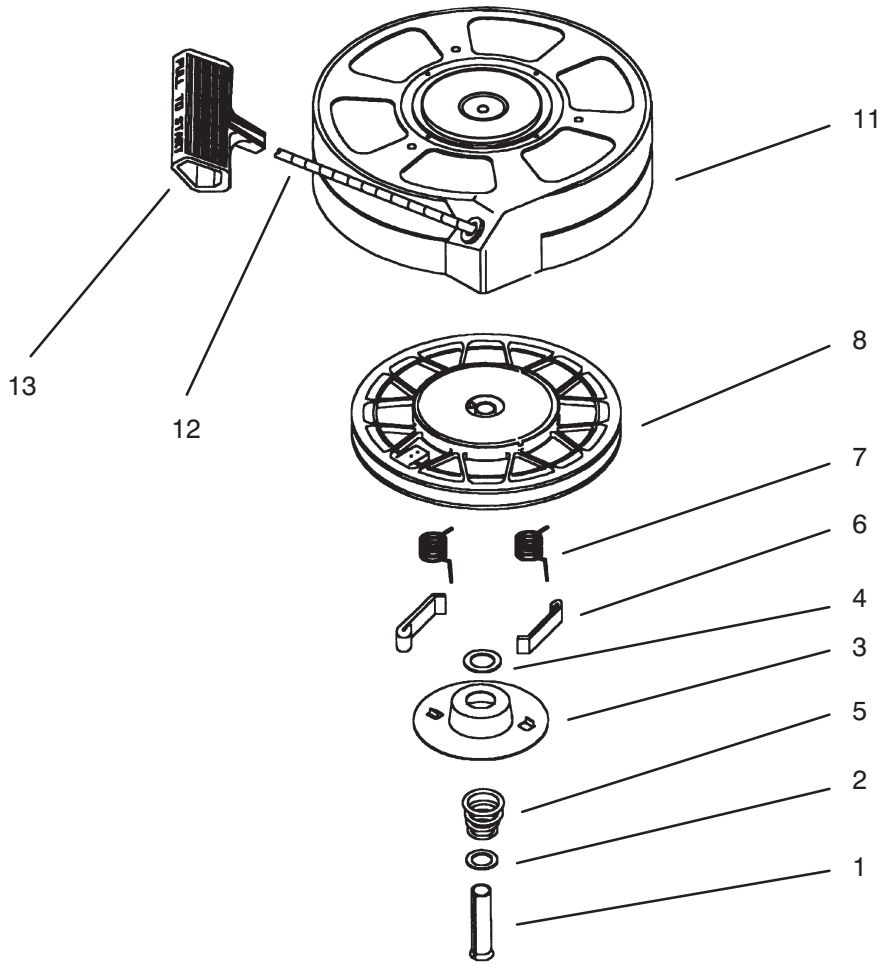

RECOIL STARTER ASSEMBLY 590702

Ref. No.	Part No.	Description	No. Used
0	590702	Recoil Starter	1
1	590599A	Spring Pin (Incl. 4)	1
2	590600	Washer	1
3	590696	Retainer	1
4	590601	Washer	2
5	590697	Brake Spring	1
6	590698	Starter Dog	2
7	590699	Dog Spring	2

Ref. No.	Part No.	Description	No. Used
8	590700	Pulley & Rewind Spring Ass'y.	1
11	590703	Starter Housing Ass'y (40 degree grommet)	1
12	590535	Starter Rope (98" X 9/64" dia.)	1
13	590701	Starter Handle	1

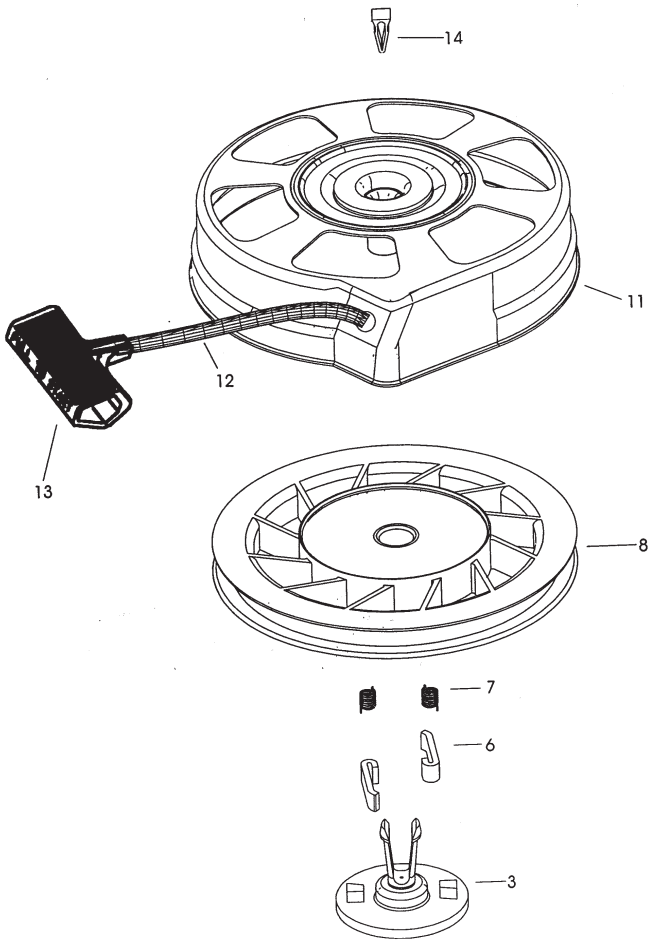

RECOIL STARTER ASSEMBLY 590739 (Optional)

Ref. No.	Part No.	Description	No. Used
0	590739	Rewind Starter	1
3	590740	Retainer	1
6	590616	Starter Dog	2
7	590617	Dog Spring	2
8	590618A	Pulley & Rewind Spring Ass'y	1

Ref. No.	Part No.	Description	No. Used
11	590638	Starter Housing Ass'y (40 degree grommet)	1
12	590535	Starter Rope (Length 98" x 9/64" dia.)	1
13	590701	Starter Handle	1
14	590741	Locking Tab	1

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
*	Bag Assembly	8	6	1
603164	Nut – Blade	6	8	1
605120	Grommet	3	5	1
607560	Plate – Cover	3	*	1
610358	Nut – Lock	4	13	2
612543	Blade – 21 Whirl	6	17	1
613227	Screw – Set	6	16	1
613455	Wide Hanger	8	8	1
613462	Hanger Clamp	8	7	2
613765	Nut – Cage	3	11	1
614243	Knob	7	3	2
614426	Washer – Stepped	4	19	2
614447	Spacer – Axle Shaft	4	9	2
614589	Nut – Cap	8	2	1
614591	Chute Support	8	3	1
614596	Gear 34 Tooth	5	18	1
614637	Bracket – Wheel Height Adj.	3	17	2
614643	Handle – Lower	7	19	1
614668	Cover – Gear Case	5	2	1
614669	Pulley – Half	5	12	2
614671	Cover – Drive	3	27	1
614672	Bolt – Shoulder	3	21	2
614677	Screw – Sems Thr'd Form.	3	9	2
614682	Knob – Cover Plate	3	7	1
614687	Spring Arm – Front	3	22	2
614696	Shaft – Intermediate	5	4	1
614697	Screw – Handle	7	2	2
614700	Tie Strap	8	5	1
677525	Plate & Collar Assembly	6	1	1
684727	Adaptor Assembly	8	4	1
684729	Chute & Support Assembly	8	1	1
684776	Wheel & Tire Assembly – 6	3	19	2
16–2139	Guard – Muffler	6	15	1
16–4369	Housing Assembly	3	35	1
36–4780	Washer – Thrust	5	17	2
36–4791	Washer	5	5	2
38–7820	Bearing – Ball	5	15	1
39–5770	Decal – Danger	3	33	1
40–1940	Washer	3	18	2
49–2040	Screw – Hex Hd. Cap	3	24	2
55–3760	Pinion – 15 Tooth	5	3	1
60–8750	Bushing	5	6	2
60–8850	Bushing – Output	5	9	2
60–8890	Gear – Bevel Pinion	5	16	1
62–6660	Spacer	5	11	1
65–2690	Decal – Warning	6	14	1
65–2720	Ring – Retaining	4	3	4
65–4710	Ring – Friction	4	7	2
65–4720	Spring – Compression	4	17	2
65–4730	Washer – Thrust	4	14	2
65–4740	Washer – Thrust Keyed	4	4	4
65–4750	Gear – Pinion	4	16	2
65–4760	Washer	4	15	2
66–6040	Key – Rocking R.H.	4	*	1
66–6050	Key – Rocking L.H.	4	5	1
92–1001	Bail – SP Control	7	9	1
92–1004	Spring Arm Assembly	4	12	2
92–1008	Knob – Height Adjust	3	23	4
92–1024	Guide – Belt	6	4	1
92–1042	Wheel & Tire Assembly 8	4	2	2
92–1045	Cable – Throttle	7	17	1
92–1057	Bolt – Shoulder	4	1	2
92–1097	Decal – Discharge	3	34	1
92–1099	Bolt – Shoulder	3	20	2
92–1630	Fan – Mulching	6	18	1
92–1701	Rope – Stop	6	7	1
92–2266	Screw – Handle	7	5	1
92–2914	Decal – H.O.C.	3	2	2
92–2915	Decal – H.O.C.	3	1	2
92–2919	Decal – Danger	8	9	1
92–4851	Decal – Oil Instruction	6	6	1
92–4852	Screw – Recoil Cover	6	10	4
92–4853	Handle – Starter	7	14	1
92–4854	Cover – Starter	6	11	1
92–4881	Plate – Height Adjust	3	14	2
92–4890	Washer	3	15	2
92–5412	Stop – Pivot	7	8	2
92–5424	Staple	7	*	1
92–7723	Bracket – Handle R.H.	3	30	1
92–7724	Bracket – Handle L.H.	3	3	1
92–7726	Cable – Traction	7	7	1
92–7727	Gearcase	5	10	1
92–7728	Guide – Transmission	3	6	1
92–7729	Anchor – Cable SP Upper	7	6	1
92–7731	Plate – Baffle	3	16	2
92–7735	Gear Case Assembly	3	4	1
92–7735	Gear Case Complete	5	*	1
92–7746	Arm – Height Adj. Rear	4	8	2
92–8630	Plate – Mulch 21	3	8	1
92–8647	Shield – Trailing	3	38	1
92–9575	Pulley – Engine	6	2	1
92–9589	Cable – Brake Assembly	7	18	1
92–9665	Screw – Phillip Hd.	3	26	1
93–0239	Shaft – Output	5	7	1
93–3653	Guard – Handle	7	32	1
93–4185	Bail – Flywheel Brake	7	12	1
93–4196	Shield – Grass	6	19	1
93–7250	Decal – Warning	3	28	1
93–7380	Anchor – Cable SP Lower	7	1	1
93–7381	V–Belt	4	10	1
93–7383	Guide – Rope	7	16	1
94–1609	Cover – Wheel	4	18	2
94–1610	Grommet – Plastic	3	10	2
94–6088	Shroud – Engine	6	12	1
94–8083	Decal – Primer	6	20	1
95–1713	Handle – Upper	7	13	1
95–1726	Screw – Engine	6	3	3
95–1740	Decal – Recoil	6	9	1
321–49	Screw – Hex Hd. Cap	7	15	1
322–3	Screw – Hex Hd. Cap	3	39	6
3256–24	Washer	5	13	1
3274–52	Screw – Hex Socket Hd.	6	13	2
3285–19	Pin – Groove	5	8	2
3296–5	Nut	5	14	1
3296–29	Nut – Hex Lock	3	37	6
3296–73	Nut – Lock	7	4	2
32144–4	Screw – Taptite	5	1	4
32144–85	Screw – Hex Hd.	4	11	2

*Not Illustrated

MAINTENANCE RECORD

Date								