FORM NO. 3319–137

LAWN-BOY®

SILVER SERIES 2 CYCLE WALK–BEHIND MOWER

MODEL NO.10320–7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	1	Engine Assembly	7–10
Cover Assembly	2	Recoil Starter Assembly	11
Gear Case Assembly	3	Carburetor Assembly	12
Rear Axle Assembly	4	Catcher Assembly	13
Engine Assembly	5	Lawn–Boy Part Number Index	14–15
Handle Assembly	6	Maintence	16–18

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Rear Bagging Kit	Model No. 89800	Leaf Bag Kit w/Chute	Model No. 89811
Leaf Bag	Model No. 89804	Mow & Feed Fertilizer Spreader	Model No. 52070
Leaf Shredder Kit	Model No. 89860		

Copyright 1996 The Lawn–Boy Inc.
All Rights Reserved

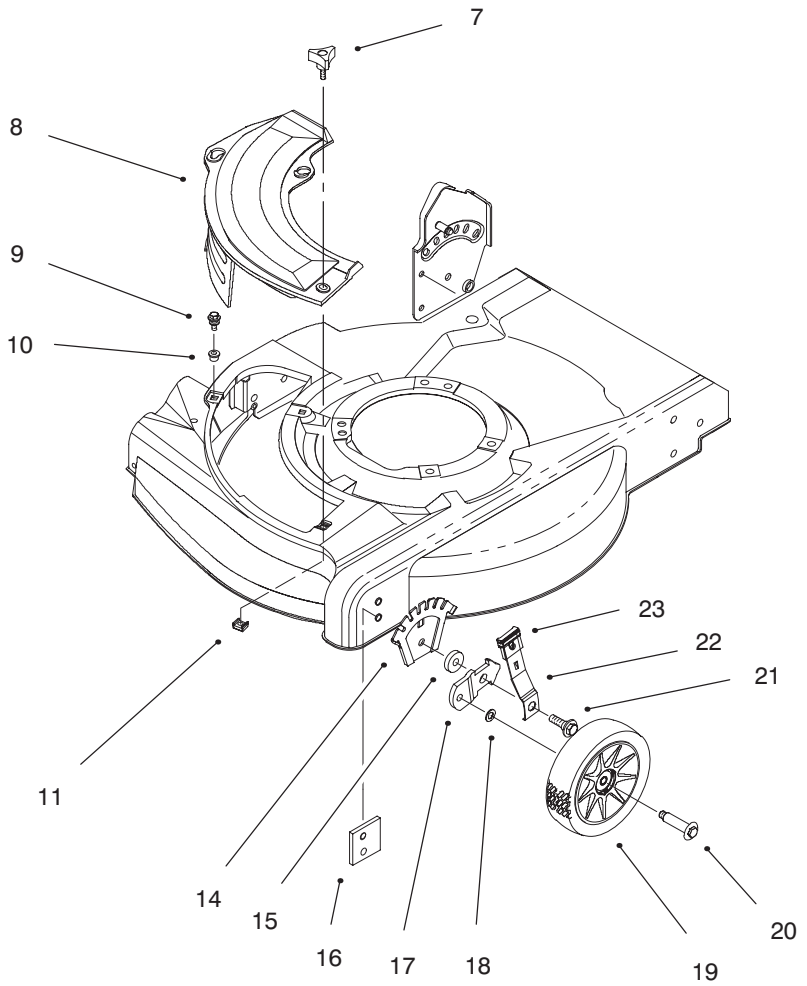


C−2494

Housing Assembly

Ref. No.	Part No.	Description	No. Used
7	614682	Knob − Cover Plate	1
8	92−8630	Plate − Mulch 21”	1
9	614677	Screw−Thread Forming	2
10	94−1610	Grommet − Plastic	2
11	613765	Nut − Cage	1
14	92−4881	Plate − Height Adjust	2
15	92−4890	Washer	2
16	92−7731	Plate − Baffle	2


Ref. No.	Part No.	Description	No. Used
17	614637	Bracket − Wheel Height Adj.	2
18	40−1940	Washer	2
19	684776	Wheel & Tire ASM	2
20	92−1099	Bolt − Shoulder	2
21	614672	Bolt − Shoulder Height Adj.	2
22	614687	Front Spring Arm ASM	2
23	92−1008	Knob − Height Adjust	4

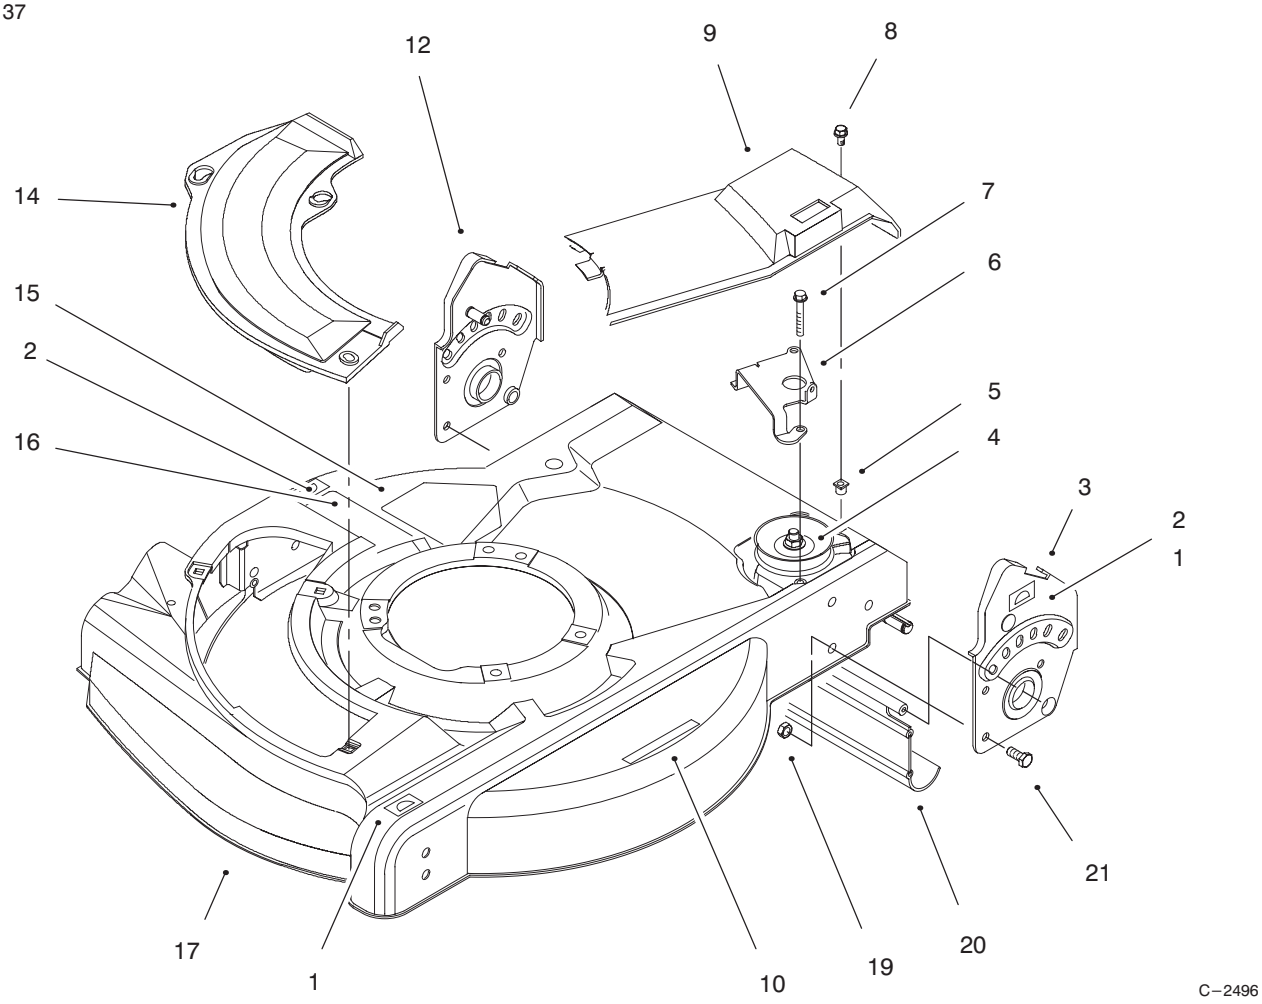

Cover Assembly

Ref. No.	Part No.	Description	No. Used
1	92−2915	Decal − H.O.C.	2
2	92−2914	Decal − H.O.C.	2
3	92−7724	Bracket − Handle L.H.	1
4	92−7735	Gear Case Assembly	1
5	605120	Grommet	1
6	92−7728	Guide − Transmission	1
7	49−2040	Screw − HH	2
8	92−9665	Screw − Phillips Hd.	1
9	614671	Cover − Drive	1

Ref. No.	Part No.	Description	No. Used
10	93−7250	Decal − Warning	1
12	92−7723	Bracket − Handle R.H.	1
14	607560	Plate − Cover	1
15	39−5770	Decal − Danger	1
16	92−1097	Decal − Discharge	1
17	16−4369	Housing Assembly	1
19	3296−29	Nut − Lock	6
20	92−8647	Shield − Trailing	1
21	322−3	Screw − HH	6

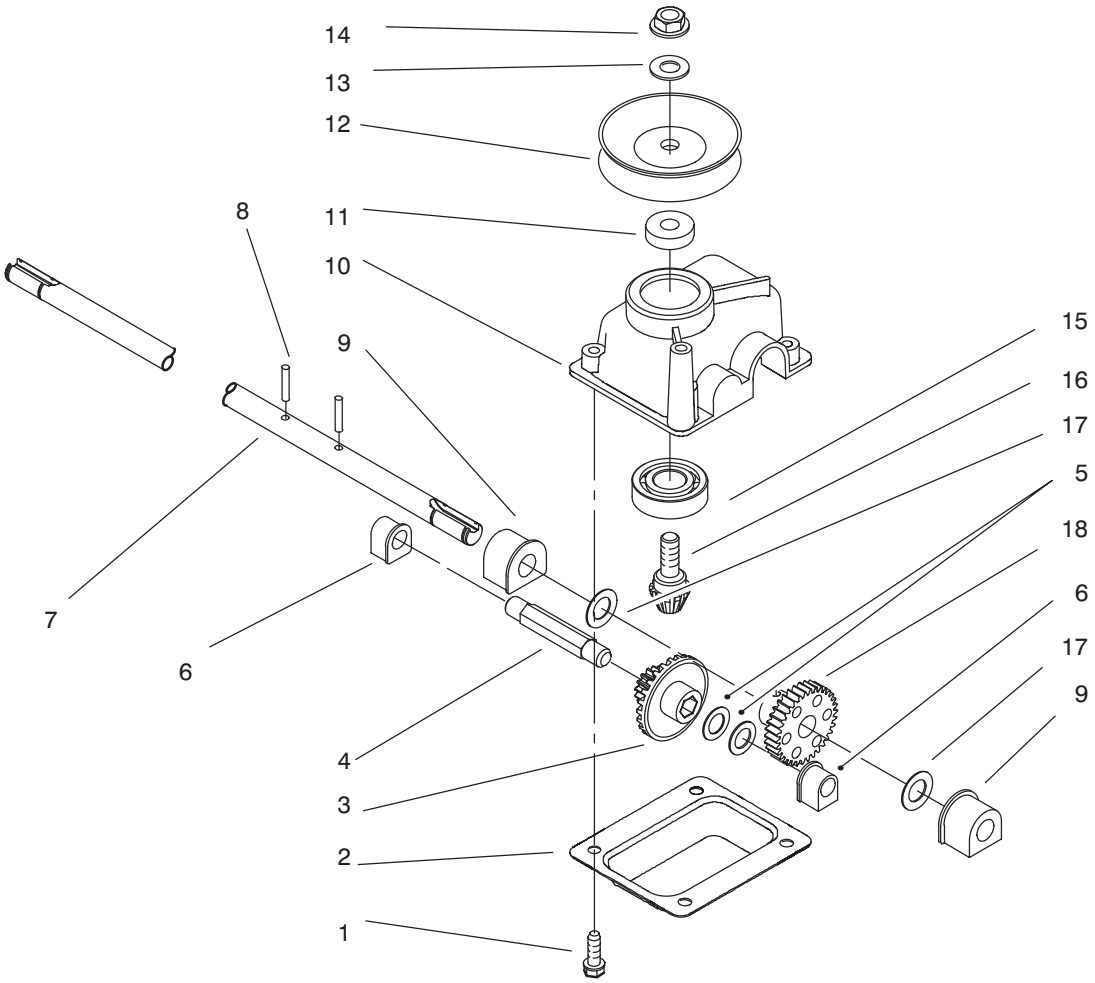


C−1292

Gear Case Assembly

Ref. No.	Part No.	Description	No. Used
1	32144−4	Screw − Taptite	4
2	614668	Cover − Gear Case	1
3	55−3760	Pinion − 15 Tooth	1
4	614696	Shaft − Intermediate	1
5	36−4791	Washer	2
6	60−8750	Bushing	2
7	93−0239	Shaft − Output	1
8	3285−19	Pin − Groove	2
9	60−8850	Bushing − Output	2

Ref. No.	Part No.	Description	No. Used
10	92−7727	Gearcase	1
11	62−6660	Spacer	1
12	614669	Pulley − Half	2
13	3256−24	Washer	1
14	3296−5	Nut	1
15	38−7820	Bearing − Ball	1
16	60−8890	Gear − Bevel Pinion	1
17	36−4780	Washer − Thrust	2
18	614596	Gear 34 Tooth	1

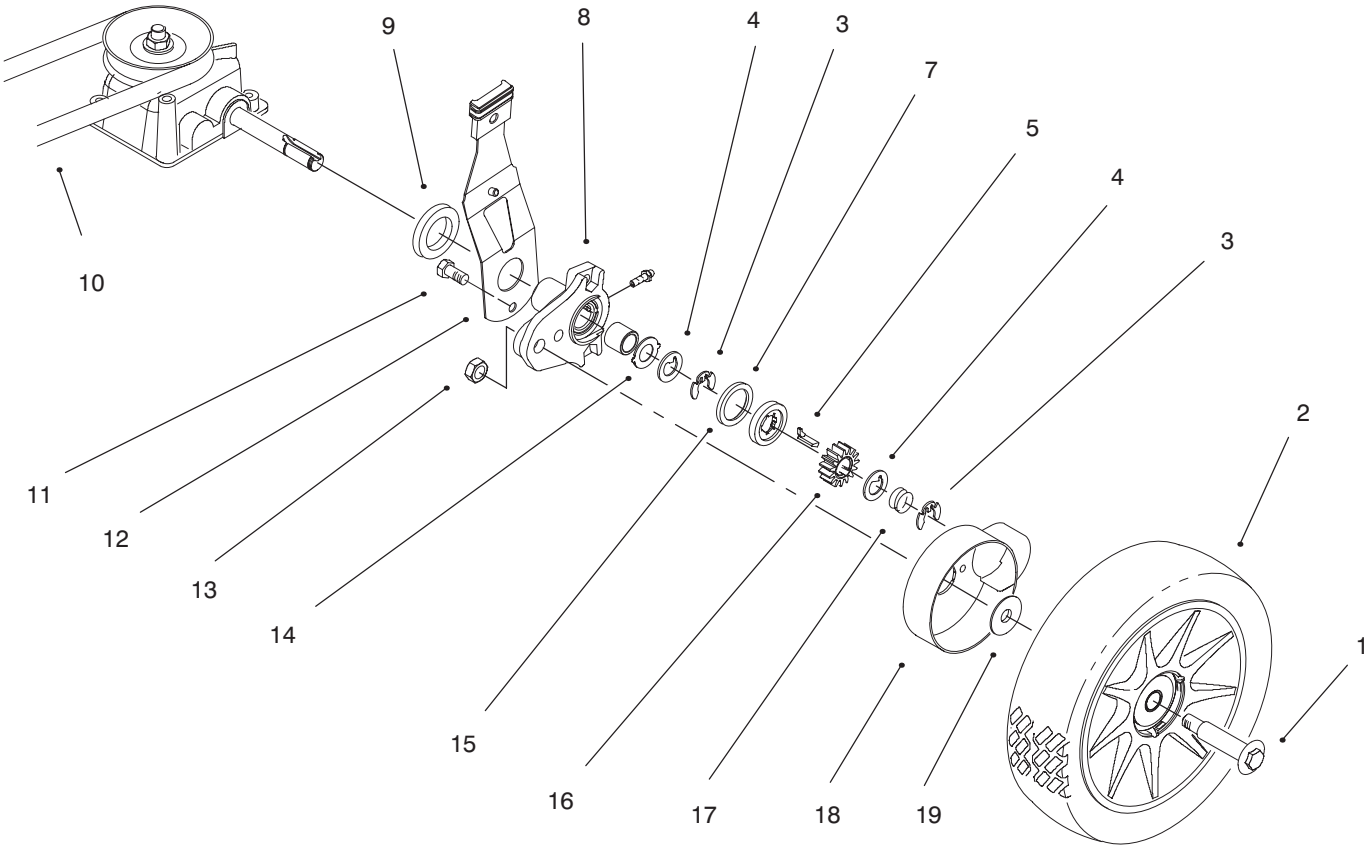


C−2497

Rear Axle Assembly

Ref. No.	Part No.	Description	No. Used
1	92−1057	Bolt − Shoulder	2
2	92−1042	Wheel & Tire ASM	2
3	65−2720	Ring − Retaining	4
4	65−4740	Washer − Thrust Keyed	4
5	66−6050	Key − Rocking L.H.	1
*	66−6040	Key − Rocking R.H.	1
7	65−4710	Ring − Friction	2
8	92−7746	Height Adj. Arm − Rear	2
9	614447	Spacer − Axle Shaft	2
10	93−7381	V−Belt	1

Ref. No.	Part No.	Description	No. Used
11	32144−85	Screw − HH	2
12	92−1004	Spring Arm ASM	2
13	610358	Nut − Lock	2
14	65−4730	Washer − Thrust	2
15	65−4760	Washer	2
16	65−4750	Gear − Pinion	2
17	65−4720	Spring − Compression	2
18	94−1609	Cover − Wheel	2
19	614426	Washer − Stepped	2

*Not Illustrated

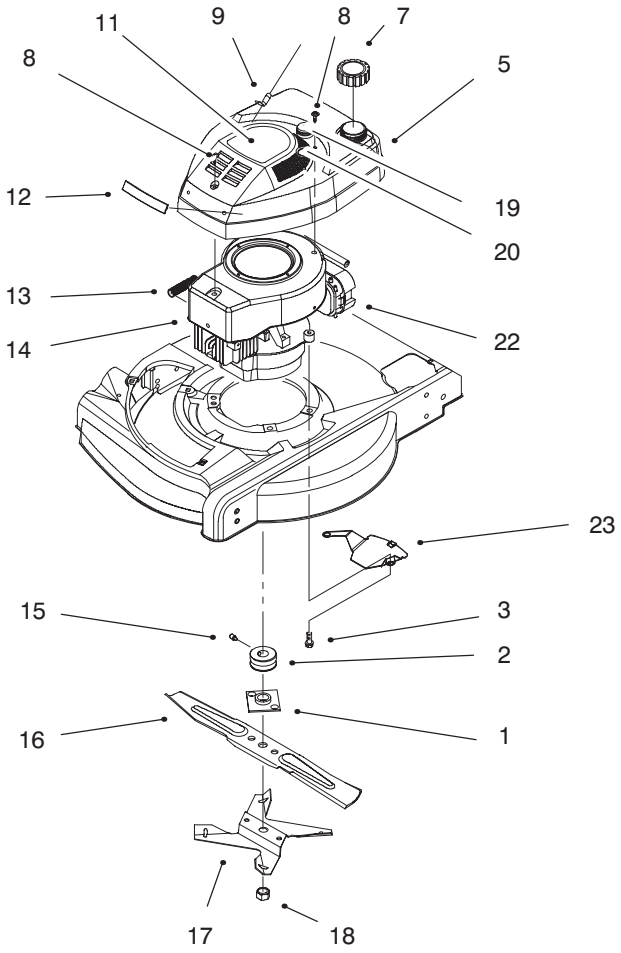


C−2606

Engine Assembly

Ref. No.	Part No.	Description	No. Used
1	677525	Plate & Collar Assembly	1
2	92−6542	Pulley − Engine	1
3	95−1726	Screw − Engine	3
5	92−6380	Tank & Shroud Assembly	1
7	93−3660	Fuel/Oil Cap Assembly	1
8	93−4302	Screw − Sems	3
9	92−1701	Rope − Stop	1
11	93−0294	Decal − Recoil	1
12	92−8615	Applique − Shroud	1
13	93−4306	Spring − Compression	1

Ref. No.	Part No.	Description	No. Used
☆14		Engine Assembly	1
15	613227	Screw − Set	1
16	612543	Blade − 21”	1
17	92−1630	Fan − Mulching	1
18	603164	Nut − Blade	1
19	66−7460	Bulb − Primer	1
20	44−2750	Body − Primer	1
22	612782	Line − Gas	1
23	93−4196	Shield − Grass	1


☆ Not Serviced

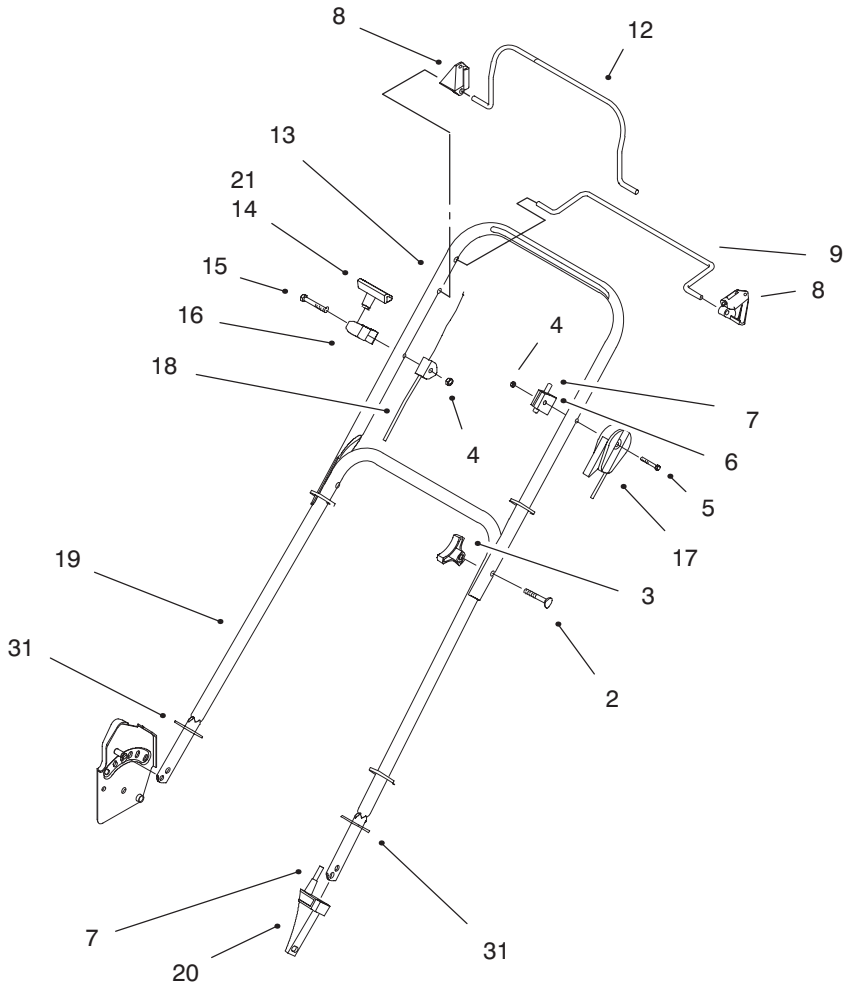

Handle Assembly

Ref. No.	Part No.	Description	No. Used
2	614697	Screw − Handle	2
3	614243	Knob	2
4	3296−73	Nut − Lock	2
5	321−49	Screw − HH	1
6	92−7729	Anchor − Cable Upper	1
7	92−7726	Cable − Traction	1
8	92−5412	Stop − Pivot	2
9	92−1001	Bail − SP Control	1
12	93−4184	Bail − Flywheel Brake	1
13	95−1713	Handle − Section Upper	1

Ref. No.	Part No.	Description	No. Used
14	612825	Handle − Starter	1
15	321−50	Screw − HH	1
16	93−7383	Guide − Rope	1
17	92−7734	Cable − Throttle 2 Cycle	1
18	92−7738	Cable − Flywheel Brake	1
19	614673	Handle Section − Lower	1
20	93−7380	Anchor − Cable SP Lower	1
21	612824	Clip − Rope Insert	1
31	93−3653	Handle − Guard	1

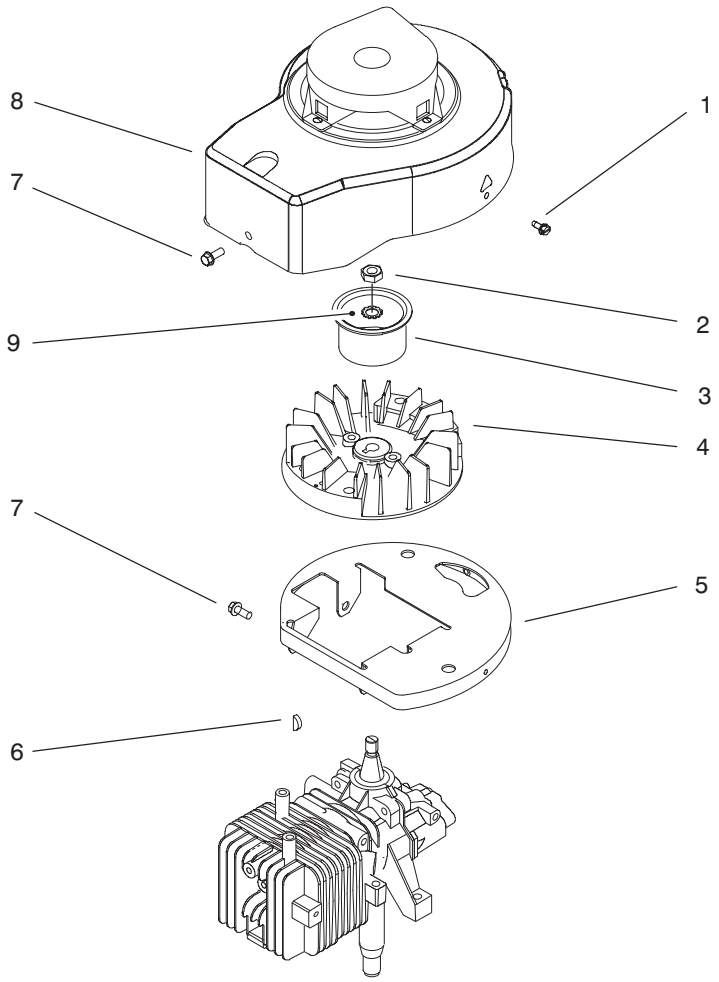


C−2128A

Engine Assembly

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	130743	Nut	1
3	614640	Hub − Starter	1
4	684743	Flywheel	1
5	93−1216	Base − Shroud	1


Ref. No.	Part No.	Description	No. Used
6	607199	Key	1
7	614702	Screw	4
8	93−4304	Shroud Assembly	1
9	316959	Washer − Lock	1

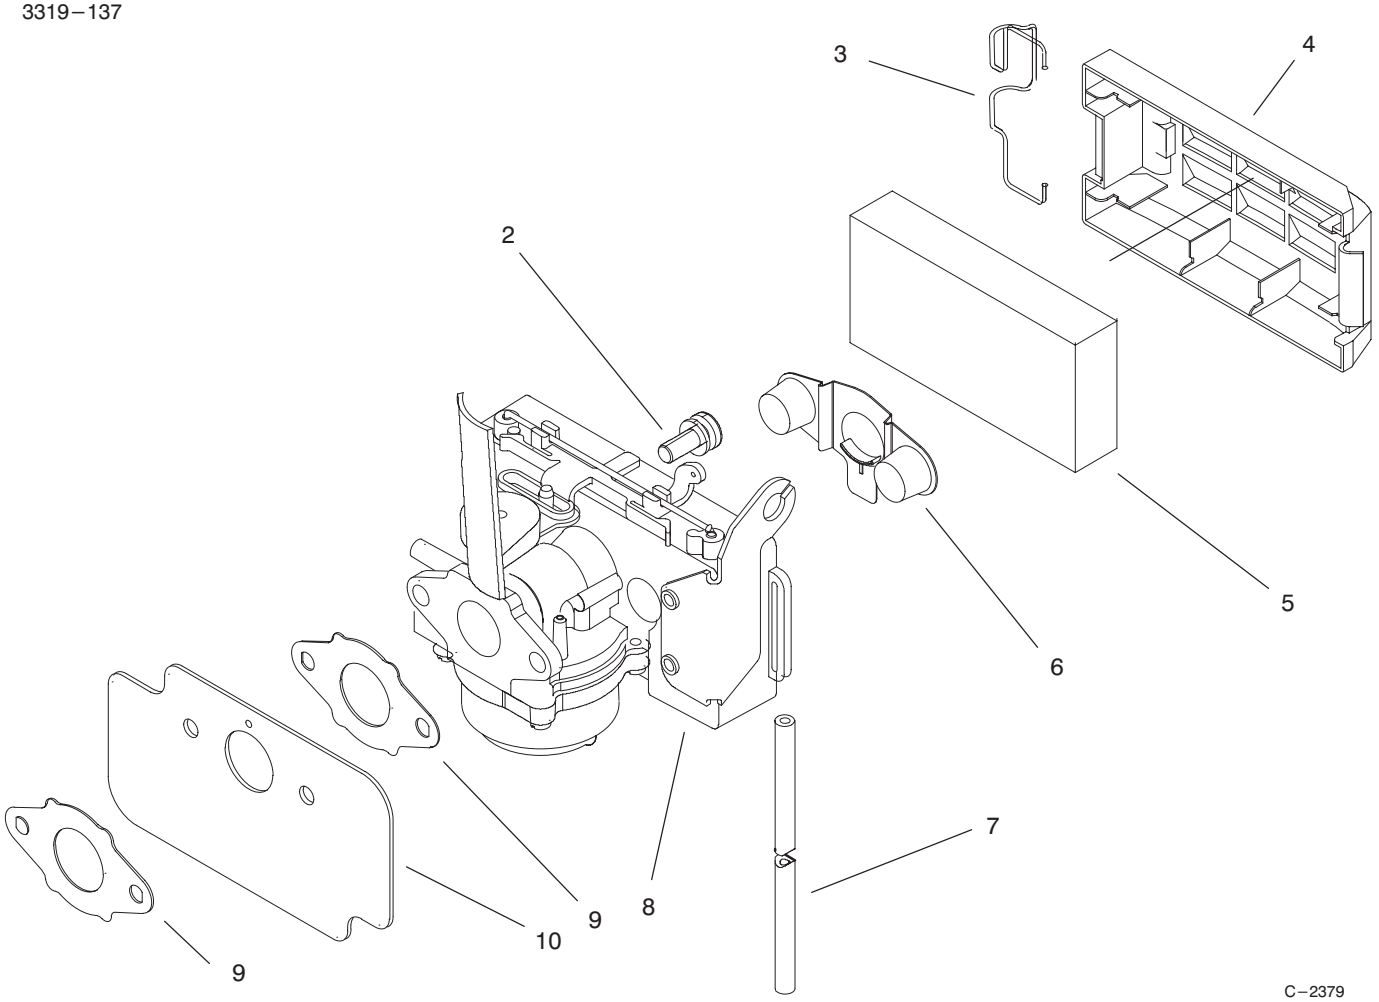

Engine Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2
3	610383	Retainer − Filter	1
4	93−1231	Cover − Air Cleaner	1
5	609493	Element − Filter Air	1
6	93−4320	Shield − Fuel	1

Ref. No.	Part No.	Description	No. Used
7	44−3174	Hose − Primer	1
8	93−4331	Carburetor Assembly (Incl. Ref. #9)	1
9	92−4948	Gasket − Carburetor	2
10	93−1221	Shield − Carburetor	1

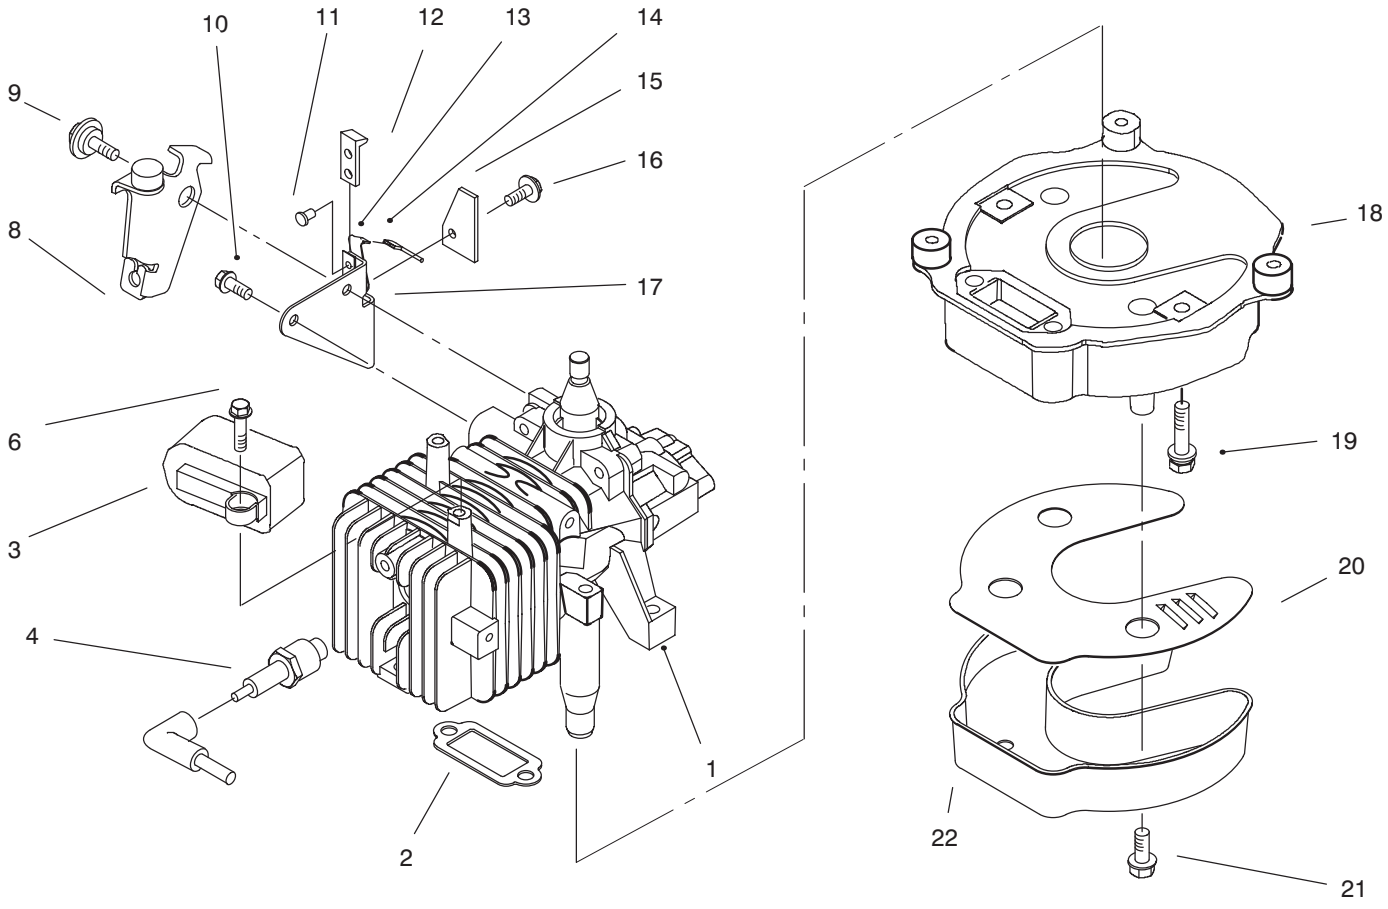

C−1296A


Engine Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
1	94−5737	Short Block	1
2	93−1233	Gasket − Exhaust	1
3	684049	CD Ignition	1
4	614009	Plug − Spark	1
6	613208	Screw − HWH	2
8	93−4312	Brake Plate Assembly	1
9	92−9698	Screw − Shoulder	1
10	614702	Screw	1
11	3290−459	Rivet − Plastic	2
12	92−2925	Strap − Insulation	1

Ref. No.	Part No.	Description	No. Used
13	60−9010	Strap − Ground	1
14	92−1156	Wire − Brake Switch Lead	1
15	53−4690	Stop − Ground Strap	1
16	12−5450	Screw − Thread Forming	1
17	84−7820	Mounting Plate	1
18	614654	Plate − Muffler	1
19	607601	Screw	4
20	93−4343	Baffle	1
21	609471	Screw	3
22	614674	Cover − Muffler	1

*Not Illustrated

3319−137

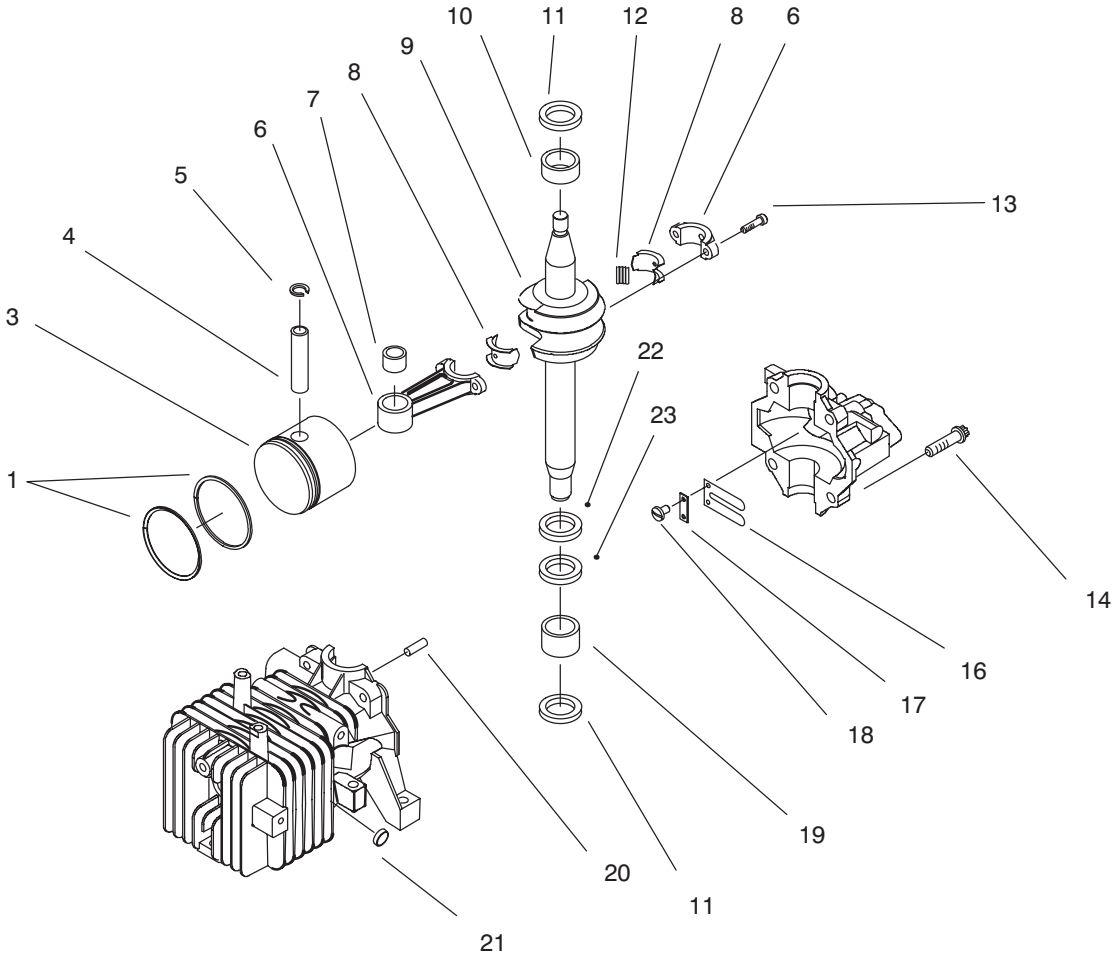


C−1295A

Engine Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
1	681737	Set − Ring	1
3	92−4923	Piston & Ring Set	1
*	92−4925	Piston & Connecting Rod (Incl. Ref. #1−8, 12, & 13)	1
4	606608	Pin − Wrist	1
5	303712	Ring − Retaining	2
6	92−4921	Connecting Rod Assembly (Incl. Ref. #6−8, 12, & 13)	1
7	92−4927	Bearing	1
8	677982	Liner − Split (Set of 2)	1
9	94−5713	Crankshaft	1
10	681830	Bearing − Upper Main	1
11	611396	Seal − Oil	2
12	683911	Bearing − Needle	1

Ref. No.	Part No.	Description	No. Used
13	611393	Screw − HH	2
14	614636	Screw − Torx. Washer Hd.	3
16	602588	Reed − Carburetor	1
17	602587	Reed − Backup Plate	1
18	612872	Screw	2
19	681831	Bearing − Needle	1
20	609629	Dowel	1
21	609123	Plug − Core	4
22	252−76	Bearing − Thrust	1
23	252−80	Washer − Thrust	1
*	684725	Cylinder & Crankcase ASM (Incl. Ref. #14, 16−18 & 20−21)	1
*	610372	Sealer	1


*Not Illustrated

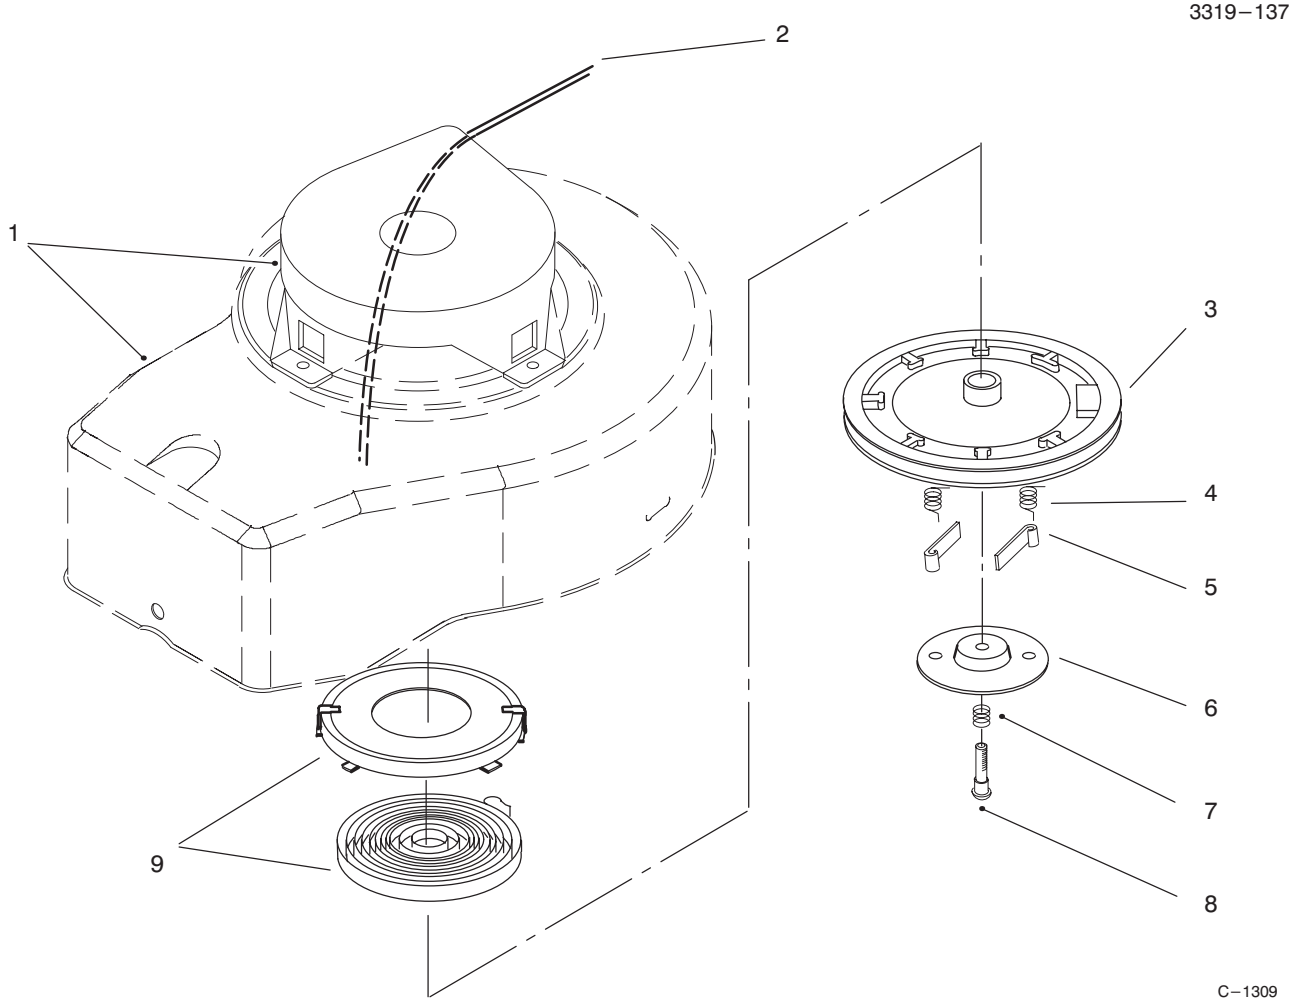

Recoil Starter Assembly

Ref. No.	Part No.	Description	No. Used
1	93−4304	Housing Assembly	1
2	93−4305	Rope −Starter	1
3	92−4929	Pulley Assembly	1
4	92−4930	Spring − Dog	2
5	92−4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92−9692	Retainer	1
7	92−4933	Screw	1
8	92−4934	Spring	1
9	92−4935	Spring Keeper Assembly	1

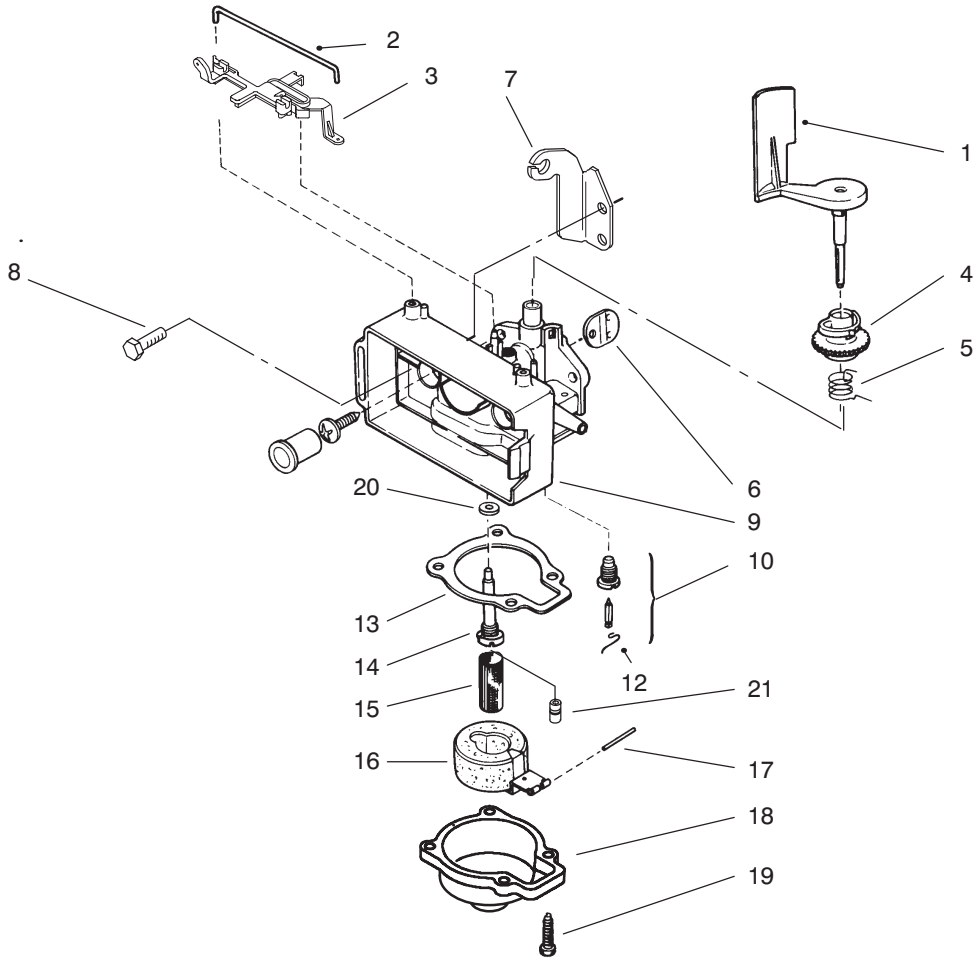


C−2130A

Carburetor Assembly

Ref. No.	Part No.	Description	No. Used
1	92−6376	Air Vane & Shaft	1
2	610165	Retainer − Speed Control	1
3	93−1225	Lever − Speed Adjust	1
4	610834	Collar − Air Vane	1
5	92−4944	Spring − Governor	1
6	92−6373	Disc − Throttle	1
7	92−4949	Bracket − Throttle Control	1
8	613269	Screw	2
9	93−4324	Carburetor Body	1
10	92−9697	Kit − Float Valve, Body & Seat (Incl. Ref. #12)	1

Ref. No.	Part No.	Description	No. Used
12	603145	Spring	1
13	602850	Gasket	1
14	92−6371	Nozzle	1
15	611071	Filter − Fuel	1
16	678113	Float & Arm Assembly	1
17	92−6389	Pin	1
18	92−9691	Float Chamber	1
19	608850	Screw	4
20	612383	Washer	1
21	92−6370	Main Jet	1
*	92−6385	Jet − High Altitude	1
*	93−4331	Carburetor Assembly	1

*Not Illustrated

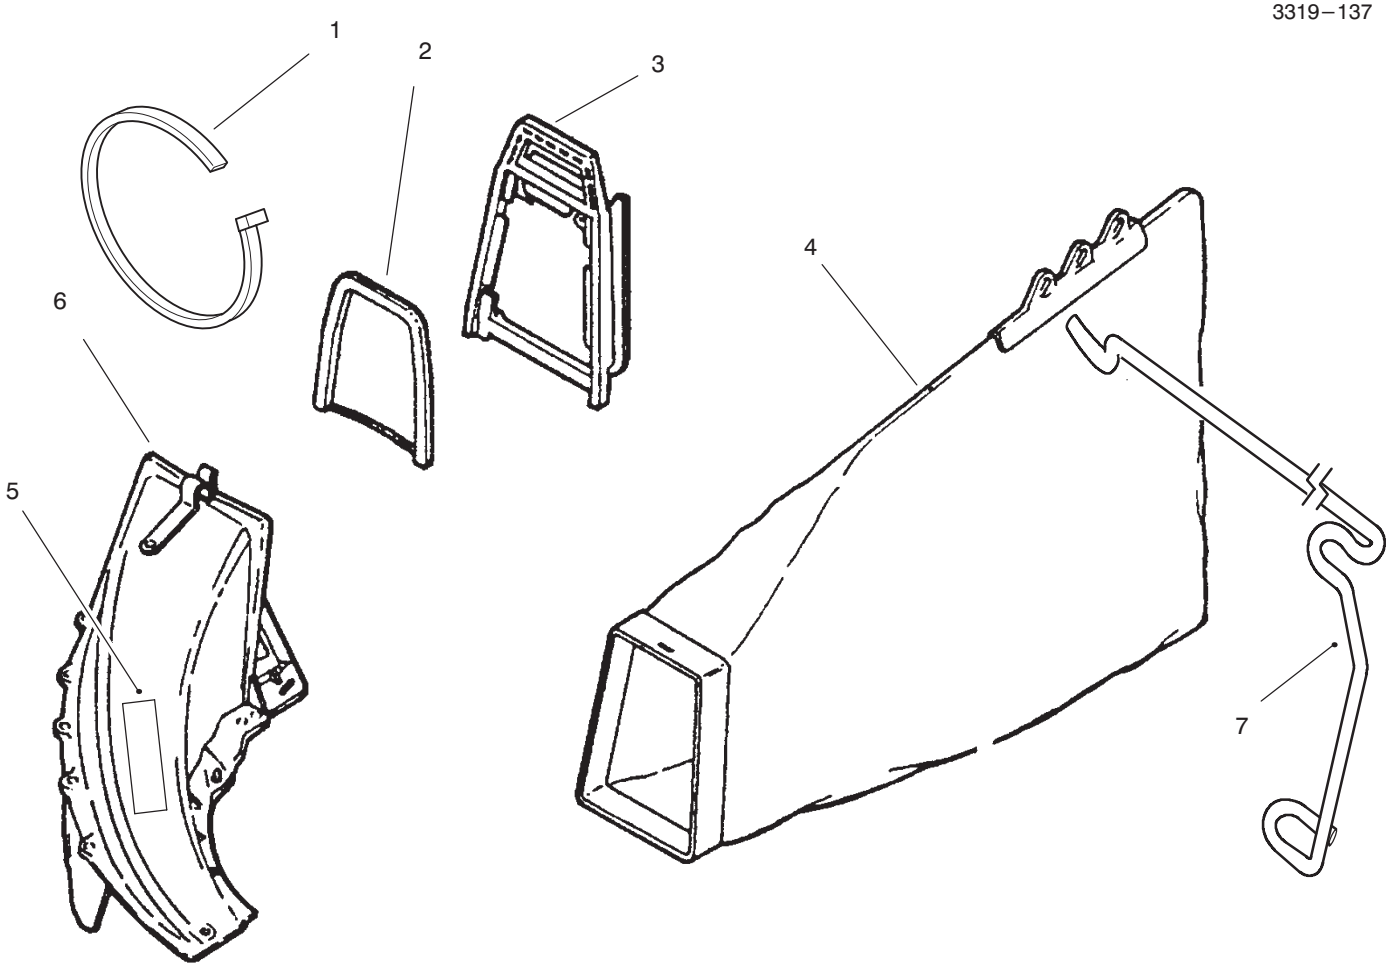

C–2608

Catcher Assembly

Ref. No.	Part No.	Description	No. Used
1	92–1039	Strap – Tie	1
2	612830	Brace – Chute	
3	612671	Adaptor – Chute	1
†4		Bag – Grass	1
5	92–2919	Decal – Danger	1
6	683743	Chute Assembly	1
7	93–3753	Rod – Grass Bag	1

† Obtain From Whole Goods Model No. 89816

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut	7	2	1
303712	Ring – Retaining	10	5	2
316959	Washer – Lock	7	9	1
602587	Reed – Backup Plate	10	17	1
602588	Reed – Carburetor	10	16	1
602850	Gasket	12	13	1
603145	Spring	12	12	1
603164	Nut – Blade	5	18	1
605120	Grommet	2	5	1
606608	Pin – Wrist	10	4	1
607199	Key	7	6	1
607560	Plate – Cover	2	14	1
607601	Screw	9	19	4
608850	Screw	12	19	4
609123	Plug – Core	10	21	4
609471	Screw	9	21	3
609482	Screw	8	2	2
609493	Element – Filter Air	8	5	1
609629	Dowel	10	20	1
610165	Retainer – Speed Control	12	2	1
610358	Nut – Lock	4	13	2
610372	Sealer	10	*	1
610383	Retainer – Filter	8	3	1
610834	Collar – Air Vane	12	4	1
611071	Filter – Fuel	12	15	1
611393	Screw – Hex. Hd.	10	13	2
611396	Seal – Oil	10	11	2
612383	Washer	12	20	1
612543	Blade – 21	5	16	1
612671	Adaptor – Chute	13	3	1
612782	Line – Gas	5	22	1
612824	Clip – Rope Insert	6	21	1
612825	Handle – Starter	6	14	1
612830	Brace – Chute	13	2	
612872	Screw	10	18	2
613208	Screw – Hex. Washer Hd.	9	6	2
613227	Screw – Set	5	15	1
613269	Screw	12	8	2
613765	Nut – Cage	1	11	1
614009	Plug – Spark	9	4	1
614243	Knob	6	3	2
614426	Washer – Stepped	4	19	2
614447	Spacer – Axle Shaft	4	9	2
614596	Gear 34 Tooth	3	18	1
614636	Screw – Torx. Washer Hd.	10	14	3
614637	Bracket – Wheel Height Adj.	1	17	2
614640	Hub – Starter	7	3	1
614654	Plate – Muffler	9	18	1
614668	Cover – Gear Case	3	2	1
614669	Pulley – Half	3	12	2
614671	Cover – Drive	2	9	1
614672	Bolt – Shoulder Height Adj.	1	21	2
614673	Handle Section – Lower	6	19	1
614674	Cover – Muffler	9	22	1
614677	Screw – Sem Thr'd Form	1	9	2
614682	Knob – Cover Plate	1	7	1
614687	Spring Arm Ass'y – Front	1	22	2
614696	Shaft – Intermediate	3	4	1
614697	Screw – Handle	6	2	2
614699	Screw	7	1	3
614702	Screw	7	7	4
614702	Screw	9	10	1
677525	Plate & Collar Assembly	5	1	1
677982	Liner – Split (Set of 2)	10	8	1
678113	Float & Arm Assembly	12	16	1
681737	Set – Ring	10	1	1
681830	Bearing – Upper Main	10	10	1
681831	Bearing – Needle	10	19	1
683743	Chute Assembly	13	6	1
683911	Bearing – Needle	10	12	1
684049	CD Ignition	9	3	1
684725	Cylinder & Crankcase Ass'y	10	*	1
684743	Flywheel	7	4	1
684776	Wheel & Tire Ass'y 6	1	19	2
12–5450	Screw – Thread Forming	9	16	1
16–4369	Housing Assembly	2	17	1
36–4780	Washer – Thrust	3	17	2
36–4791	Washer	3	5	2
38–7820	Bearing – Ball	3	15	1
39–5770	Decal – Danger	2	15	1
40–1940	Washer	1	18	2
44–2750	Body – Primer	5	20	1
44–3174	Hose – Primer	8	7	1
49–2040	Screw – Hex Hd.	2	7	2
53–4690	Stop – Ground Strap	9	15	1
55–3760	Pinion – 15 Tooth	3	3	1
60–8750	Bushing	3	6	2
60–8850	Bushing – Output	3	9	2
60–8890	Gear – Bevel Pinion	3	16	1
60–9010	Strap – Ground	9	13	1
62–6660	Spacer	3	11	1
65–2720	Ring – Retaining	4	3	4
65–4710	Ring – Friction	4	7	2
65–4720	Spring – Compression	4	17	2
65–4730	Washer – Thrust	4	14	2
65–4740	Washer – Thrust Keyed	4	4	4
65–4750	Gear – Pinion	4	16	2
65–4760	Washer	4	15	2
66–6040	Key – Rocking R.H.	4	*	1
66–6050	Key – Rocking L.H.	4	5	1
66–7460	Bulb – Primer	5	19	1
84–7820	Mounting Plate	9	17	1
92–1001	Bail – SP Control	6	9	1
92–1004	Spring Arm Ass'y	4	12	2
92–1008	Knob – Height Adjust	1	23	4
92–1039	Strap – Tie	13	1	1
92–1042	Wheel & Tire Ass'y 8	4	2	2
92–1057	Bolt – Shoulder	4	1	2
92–1097	Decal – Discharge	2	16	1
92–1099	Bolt – Shoulder	1	20	2
92–1156	Wire – Brake Switch Lead	9	14	1
92–1630	Fan – Mulching	5	17	1
92–1701	Rope – Stop	5	9	1
92–2914	Decal – H.O.C.	2	2	2
92–2915	Decal – H.O.C.	2	1	2
92–2919	Decal – Danger	13	5	1
92–2925	Strap – Insulation	9	12	1
92–4881	Plate – Height Adjust	1	14	2
92–4890	Washer	1	15	2
92–4921	Connecting Rod Assembly	10	6	1
92–4923	Piston & Ring Set	10	3	1
92–4925	Piston & Connecting Rod	10	*	1
92–4927	Bearing	10	7	1
92–4929	Pulley Assembly	11	3	1
92–4930	Spring – Dog	11	4	2
92–4931	Dog	11	5	2
92–4933	Screw	11	7	1
92–4934	Spring	11	8	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–4935	Spring Keeper Assembly	11	9	1
92–4944	Spring – Governor	12	5	1
92–4948	Gasket – Carburetor	8	9	2
92–4949	Bracket – Throttle Control	12	7	1
92–5412	Stop – Pivot	6	8	2
92–6370	Main Jet	12	21	1
92–6371	Nozzle	12	14	1
92–6373	Disc – Throttle	12	6	1
92–6376	Air Vane & Shaft	12	1	1
92–6380	Tank & Shroud Assembly	5	5	1
92–6385	Jet – High Altitude	12	*	1
92–6389	Pin	12	17	1
92–6542	Pulley – Engine	5	2	1
92–7723	Bracket – Handle R.H.	2	12	1
92–7724	Bracket – Handle L.H.	2	3	1
92–7726	Cable – Traction	6	7	1
92–7727	Gearcase	3	10	1
92–7728	Guide – Transmission	2	6	1
92–7729	Anchor – Cable Upper	6	6	1
92–7731	Plate – Baffle	1	16	2
92–7734	Cable – Throttle 2 Cycle	6	17	1
92–7735	Gear Case Assembly	2	4	1
92–7738	Cable – Flywheel Brake	6	18	1
92–7746	Height Adj. Arm – Rear	4	8	2
92–8615	Applique – Shroud	5	12	1
92–8630	Plate – Mulch 21	1	8	1
92–8647	Shield – Trailing	2	20	1
92–9665	Screw – Phillips Hd.	2	8	1
92–9691	Float Chamber	12	18	1
92–9692	Retainer	11	6	1
92–9697	Kit – Float Valve, Body	12	10	1
92–9698	Screw – Shoulder	9	9	1
93–0239	Shaft – Output	3	7	1
93–0294	Decal – Recoil	5	11	1
93–1216	Base – Shroud	7	5	1
93–1221	Shield – Carburetor	8	10	1
93–1225	Lever – Speed Adjust	12	3	1
93–1231	Cover – Air Cleaner	8	4	1
93–1233	Gasket – Exhaust	9	2	1
93–3653	Handle – Guard	6	31	1
93–3660	Fuel/Oil Cap Assembly	5	7	1
93–3753	Rod – Grass Bag	13	7	1
93–4184	Bail – Flywheel Brake	6	12	1
93–4196	Shield – Grass	5	23	1
93–4302	Screw – Sems	5	8	3
93–4304	Housing Assembly	11	1	1
93–4304	Shroud Assembly	7	8	1
93–4305	Rope – Starter	11	2	1
93–4306	Spring – Compression	5	13	1
93–4312	Brake Plate Assembly	9	8	1
93–4320	Shield – Fuel	8	6	1
93–4324	Carburetor Body	12	9	1
93–4331	Carburetor Assembly	12	*	1
93–4331	Carburetor Assembly	8	8	1
93–4343	Baffle	9	20	1
93–7250	Decal – Warning	2	10	1
93–7380	Anchor – Cable SP Lower	6	20	1
93–7381	V–Belt	4	10	1
93–7383	Guide – Rope	6	16	1
94–1609	Cover – Wheel	4	18	2
94–1610	Grommet – Plastic	1	10	2
94–5713	Crankshaft	10	9	1
94–5737	Short Block	9	1	1
95–1713	Handle – Section Upper	6	13	1
95–1726	Screw – Engine	5	3	3
252–76	Bearing – Thrust	10	22	1
252–80	Washer – Thrust	10	23	1
321–49	Screw – Hex Hd. Cap	6	5	1
321–50	Screw – Hex Hd. Cap	6	15	1
322–3	Screw – Hex Hd. Cap	2	21	6
3256–24	Washer	3	13	1
3285–19	Pin – Groove	3	8	2
3290–459	Rivet – Plastic	9	11	2
3296–5	Nut	3	14	1
3296–29	Nut – Lock	2	19	6
3296–73	Nut – Lock	6	4	2
32144–4	Screw – Taptite	3	1	4
32144–85	Screw – Hex Hd.	4	11	2

*Not Illustrated