FORM NO. 3319—292

LAWN-BOY®

21” GOLD SERIES WALK—BEHIND MOWER

HAND PUSH
MODEL NO.10422—7900001 & UP

SELF PROPELLED
MODEL NO.10518—7900001 & UP
MODEL NO.10523—7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the back side of the control panel. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page
Engine, Fuel Tank & Blade Assembly	1
Deck And Wheel Assembly (Model No. 10422)	2
Deck And Wheel Assembly (Model No. 10518 & 10523)	3
Rear Wheel Drive Ass'y (Model No..10518 & 10523)	4
Gear Case Ass'y (Model No. 10518 & 10523)	5
Handle Assembly	6
Rear Catcher Assembly (Model No. 10523 Only)	7
Engine Assembly	8–9
Starter Assembly	10
Carburetor Assembly	11
Air Filter Assembly	12
Lawn–Boy Part Number Index	13–15
Maintenance	16–18

Accessories

Description	Model / Parts No.
Rear Bagging Kit (Model No. 10422 & 10518)	89800
Side Bagging Kit	89814
Leaf Shredder Kit	89860
Leaf Bag	89804

©Lawn–Boy, Inc.–1996
All Rights Reserved

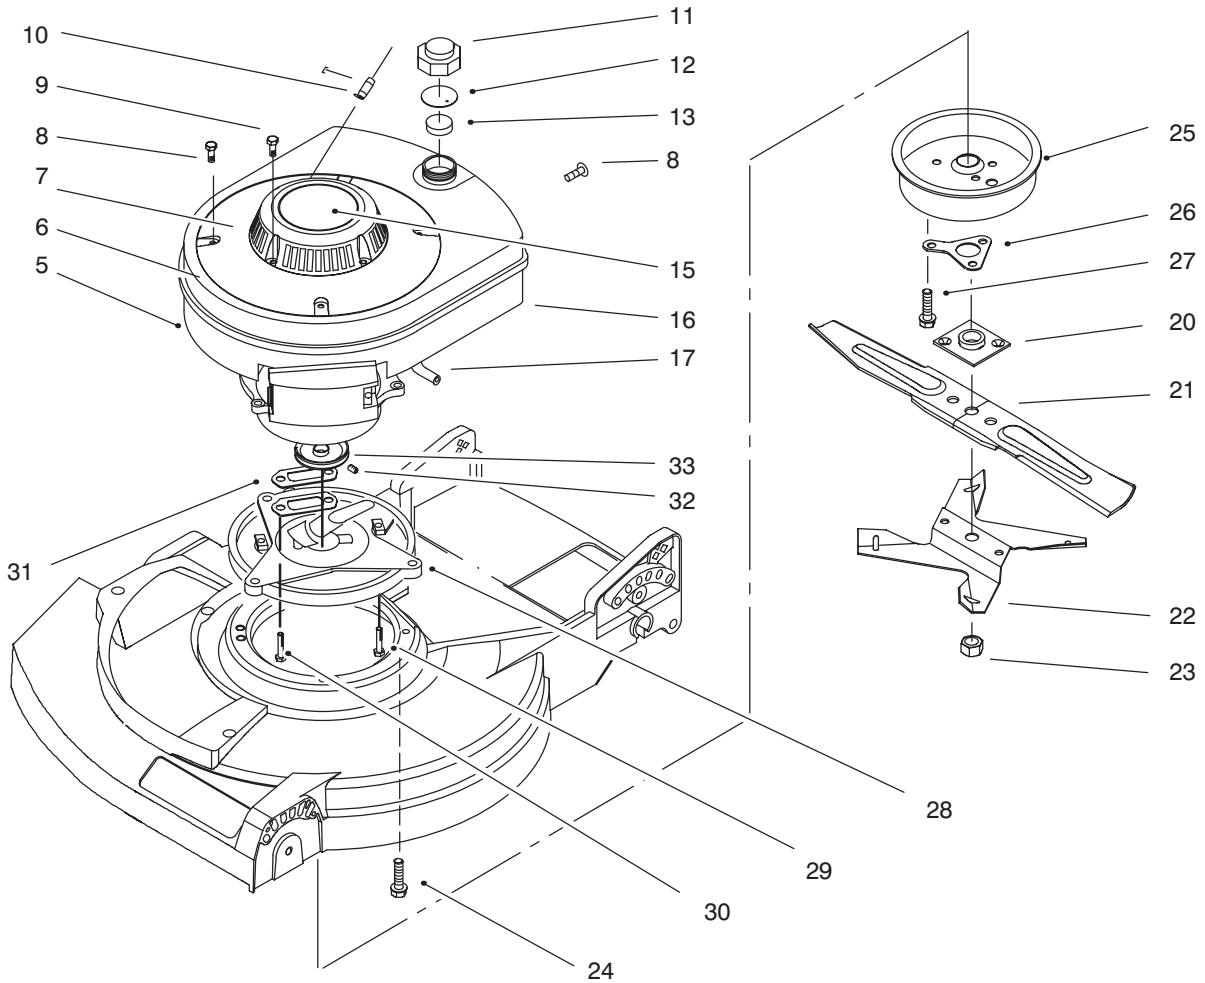


C–2176B

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	16–5539	Shroud & Tank Assembly	1
6	684301	Base – Starter	1
7	684622	Starter Assembly	1
8	32144–53	Screw – Self Tapping	5
9	612428	Screw	4
10	47–2480	Stop – Rope	1
11	611327	Cap – Fuel	1
12	607213	Gasket – Fuel Cap	1
13	609150	Baffle Fuel Cap	1
15	93–0293	Decal – Recoil	1
16		Engine Assembly	1
17	612783	Line – Fuel	1
20	677525	Plate & Collar Assembly	1
21	612543	Blade 21”	1

Ref. No.	Part No.	Description	No. Used
22	92–1630	Fan – Mulching	1
23	603164	Nut – Blade	1
24	95–1727	Screw – Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support – Crankshaft	1
27	609471	Screw	3
28	92–1054	Plate – Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93–1233	Gasket – Muffler	1
32	610345	Screw – Set (Model No. 10518 & 10523)	1
33	609976	Pulley (Model No. 10518 & 10523)	1

3319–292

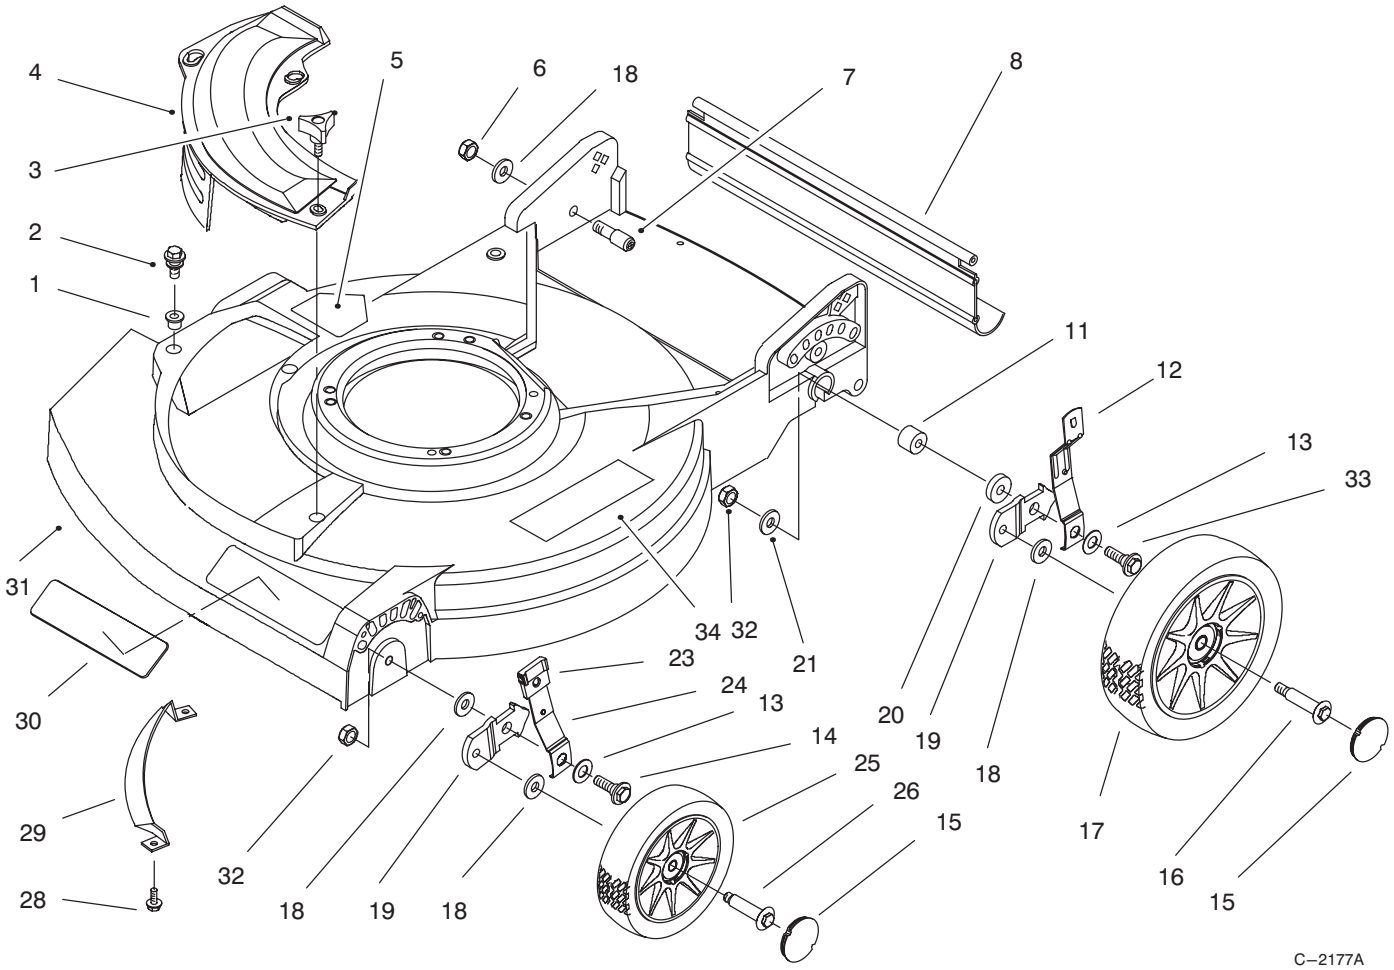


C–2177A

DECK AND WHEEL ASSEMBLY (Model No. 10422)

Ref. No.	Part No.	Description	No. Used
1	94–1610	Grommet	3
2	614677	Screw – Thread Forming	2
3	614682	Knob	1
4	92–8630	Cover– Plate, Mulch	1
*	607560	Cover – Side Discharge	1
5	39–5770	Decal – Danger (English)	1
6	610358	Nut	2
7	92–9673	Bolt – Shoulder	2
8	92–7736	Shield – Trailing	1
11	92–5791	Spacer	2
12	92–1005	Spring Arm Assembly	2
13	3290–413	Washer – Belleville	4
14	92–4856	Bolt – Shoulder	2
15	92–1604	Hub Cap	4
16	614650	Bolt – Wheel	2
17	684777	Wheel Assembly 8”	2

Ref. No.	Part No.	Description	No. Used
18	40–1940	Washer – Wheel Bolt	8
19	614637	Bracket – H. O. C.	4
20	29–8970	Washer	2
21	608834	Washer	2
23	92–1008	Knob – Spring Arm	4
24	92–1006	Spring Arm Assembly	2
25	684776	Wheel – 6”	2
26	92–1099	Bolt – Wheel	2
28	46–6811	Screw	2
29	608175	Bar – Toe	1
30	93–0289	Decal	1
31	16–5769	Housing – 21” (Incl. Ref.#5 & 34)	1
32	3296–39	Nut – Lock	4
33	92–7674	Bolt – Shoulder	2
34	93–7250	Decal – Warning	1

* Not Illustrated

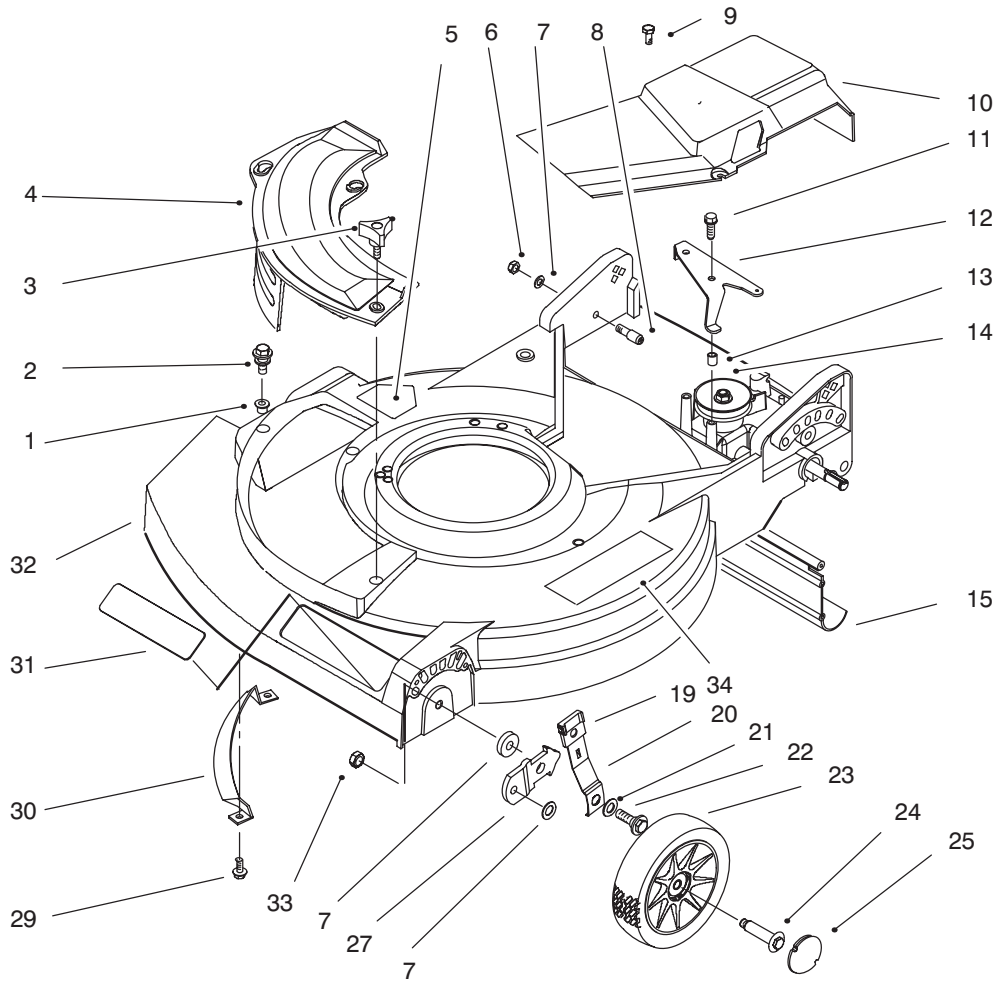

C–2178A


DECK AND WHEEL ASSEMBLY (Model No. 10518 & 10523)

Ref. No.	Part No.	Description	No. Used
1	94–1610	Grommet	3
2	614677	Screw – Thread Forming	2
3	614682	Knob	1
4	92–8630	Cover– Plate, Mulch	1
*	607560	Cover – Side Discharge	1
5	39–5770	Decal – Danger (English)	1
6	610358	Nut	2
7	40–1940	Washer – Wheel Bolt	6
8	92–9673	Bolt – Shoulder	2
9	12–5450	Screw	1
10	92–8852	Cover – Drive	1
11	92–7748	Screw	2
12	92–7699	Bracket – Actuator	1
13	46–5551	Bushing	2
14	92–7869	Gear Case Assembly	1
15	92–7736	Shield – Trailing	1

Ref. No.	Part No.	Description	No. Used
19	92–1008	Knob – Spring Arm	4
20	92–1006	Spring Arm Assembly	2
21	3290–413	Washer – Belleville	2
22	92–4856	Bolt – Shoulder	2
23	684776	Wheel – 6”	2
24	92–1099	Bolt – Wheel	2
25	92–1604	Hub Cap	4
27	614637	Bracket – H. O. C.	2
29	46–6811	Screw	2
30	608175	Bar – Toe	1
31	93–0290	Decal	1
32	16–5779	Housing – 21 (Incl. Ref. #5 & 34)	1
33	3296–39	Nut – Lock	2
34	93–7250	Decal – Warning	1

*Not Illustrated

3319–292

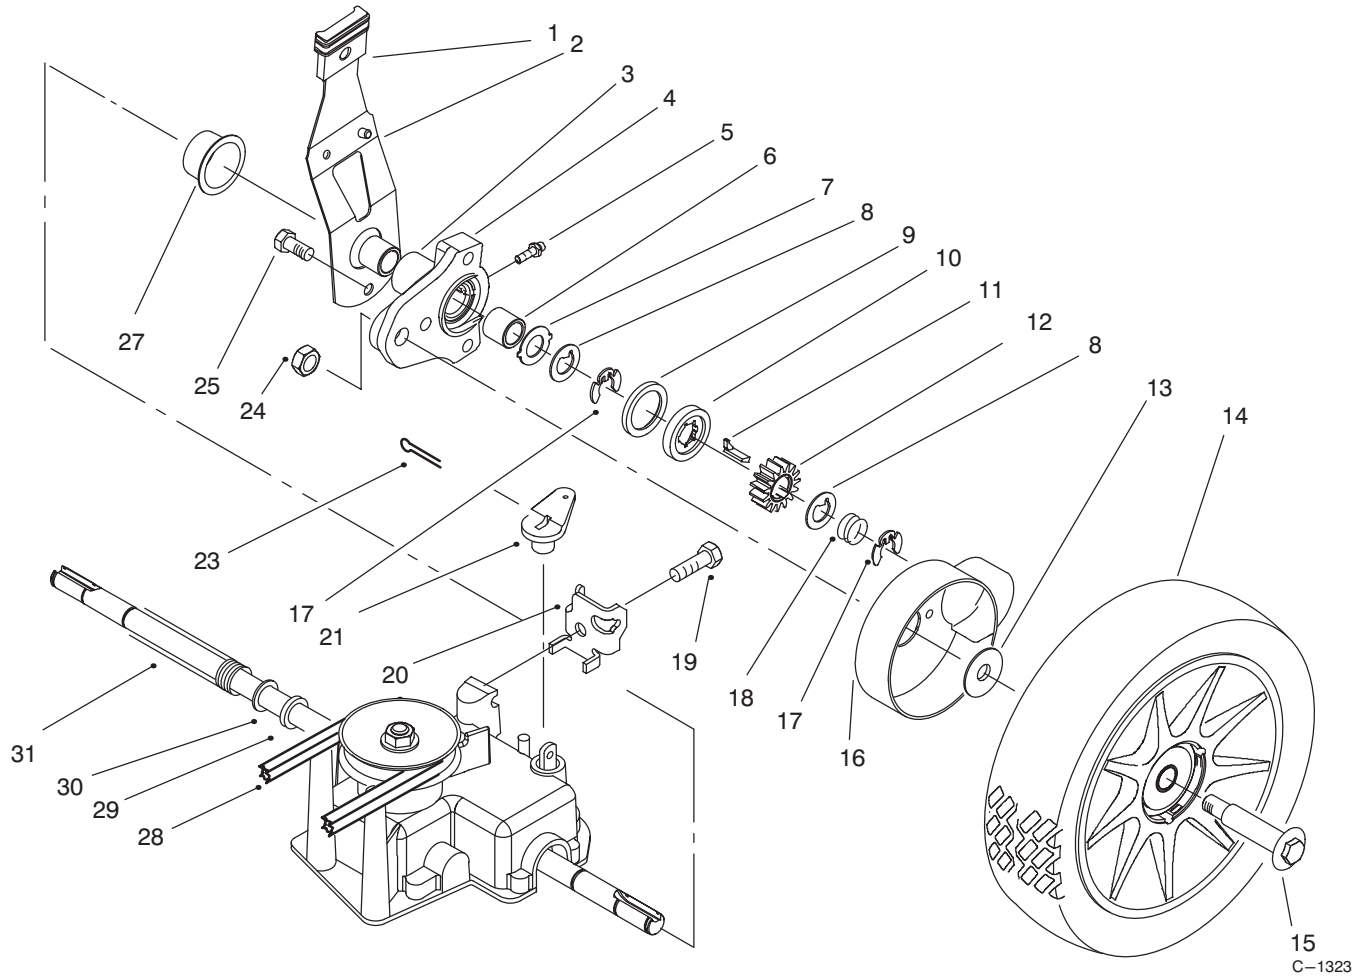


REAR WHEEL DRIVE ASS'Y (Model No. 10518 & 10523)

Ref. No.	Part No.	Description	No. Used
1	92–1008	Knob – Spring Arm (Ref.)	2
2	92–6540	Spring Arm Assembly L.H.	1
*	92–6539	Spring Arm Assembly R.H.	1
3	70–9760	Bushing	2
4	92–7746	Pivot Arm Assembly (Incl. Ref. #3, 5, & 6)	2
5	302–56	Fitting – Grease (Ref.)	2
6	47–2900	Bushing	2
7	65–4730	Washer – Thrust	2
8	65–4740	Washer – Thrust	4
9	65–4710	Ring – Friction	2
10	65–4760	Washer – Clutch	2
11	66–6050	Key – Rocking, L.H.	1
*	66–6040	Key – Rocking, R.H.	1
12	65–4750	Gear – Pinion	2
13	614426	Washer – Stepped	2

Ref. No.	Part No.	Description	No. Used
14	92–1042	Wheel – 8"	2
15	92–1057	Bolt – Wheel	2
16	94–1609	Cover – Wheel	2
17	65–2720	Ring – Retaining	4
18	65–4720	Spring – Compression	2
19	32144–70	Screw – Hex. Hd.	1
20	82–8780	Retainer – Cable	1
21	60–8821	Lever – Shift	1
23	3272–10	Pin – Cotter	1
24	610358	Nut	2
25	32144–85	Screw	2
27	92–6535	Cap – End	2
28	92–1043	"V"Belt	1
29	605255	Washer – Felt	1
30	303259	Washer – Flat	1
31	24–7920	Cover – Drive Shaft	1

*Not Illustrated

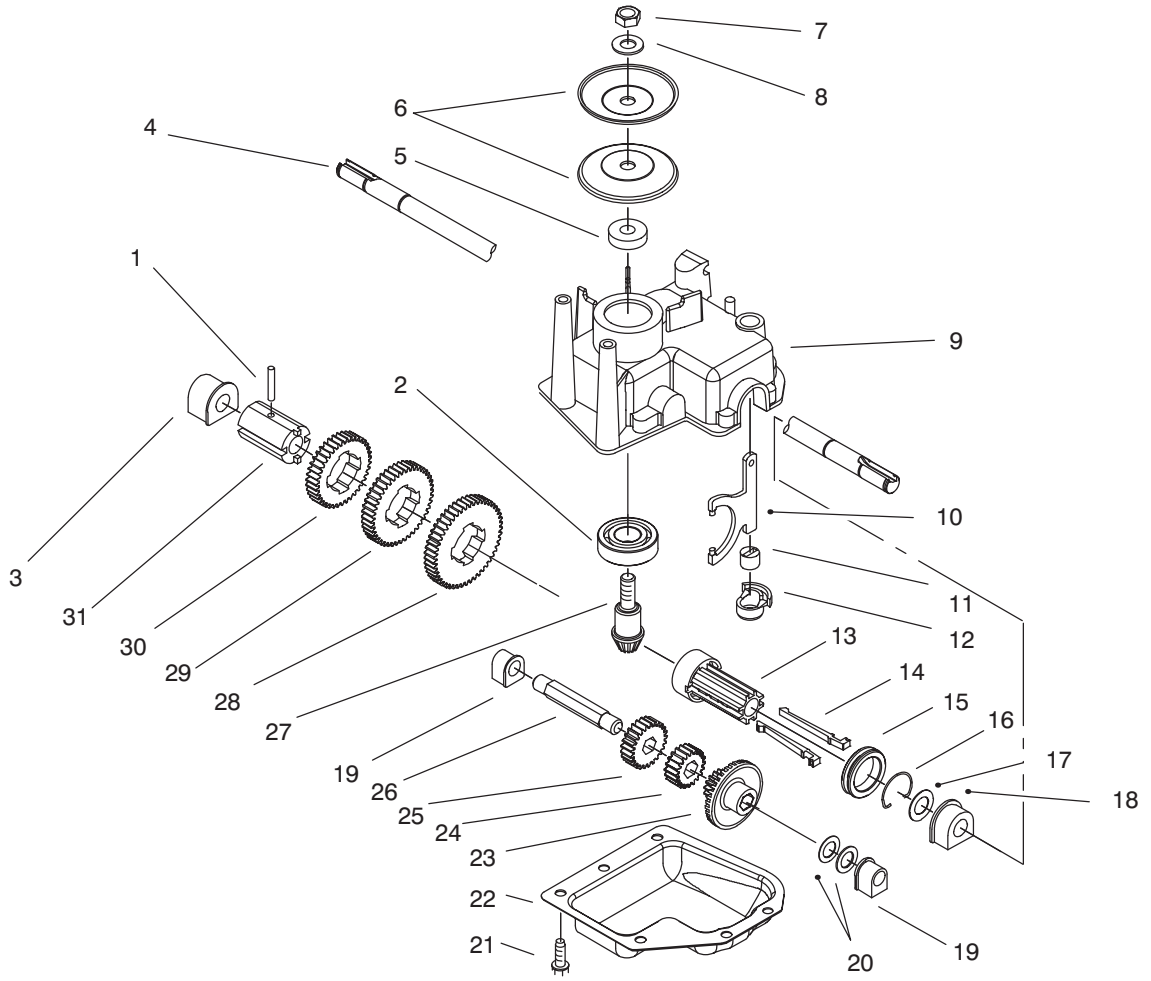

C–1322


GEAR CASE ASS'Y (Model No. 10518 & 10523)

Ref. No.	Part No.	Description	No. Used
1	3285–19	Pin – Groove	1
2	38–7820	Bearing – Ball	1
3	60–8850	Bushing – Output	1
4	65–4770	Shaft – Output	1
5	92–5791	Spacer	1
6	60–8840	Pulley – Half	2
7	3296–5	Nut	1
8	3256–24	Washer	1
9	60–8710	Gearcase – Upper	1
10	60–8870	Yoke – Shift	1
11	29–9570	Bushing – Yoke	1
12	60–8810	Retainer – Shift Fork	1
13	76–0780	Sleeve – Shift Key	1
14	76–0760	Key – Shift	2
15	76–0770	Collar – Shift	1
16	65–5250	Clip – Spring	1

Ref. No.	Part No.	Description	No. Used
17	36–4780	Washer	1
18	60–8770	Bushing – Output	1
19	60–8750	Bushing – Inter. Shaft	2
20	36–4791	Washer – Thrust	2
21	49–2040	Screw	6
22	60–8730	Gear Case Cover	1
23	55–3760	Pinion – 15 Tooth	1
24	55–3780	Pinion – 20 Tooth	1
25	55–3800	Pinion – 25 Tooth	1
26	60–8800	Shaft – Intermediate	1
27	92–5790	Pinion – Bevel	1
28	55–3770	Gear – 49 Tooth	1
29	55–3790	Gear – 44 Tooth	1
30	55–3810	Gear – 39 Tooth	1
31	60–8790	Sleeve – Gear	1
*	92–7869	Gear Case Complete	1

*Not Illustrated

3319–292

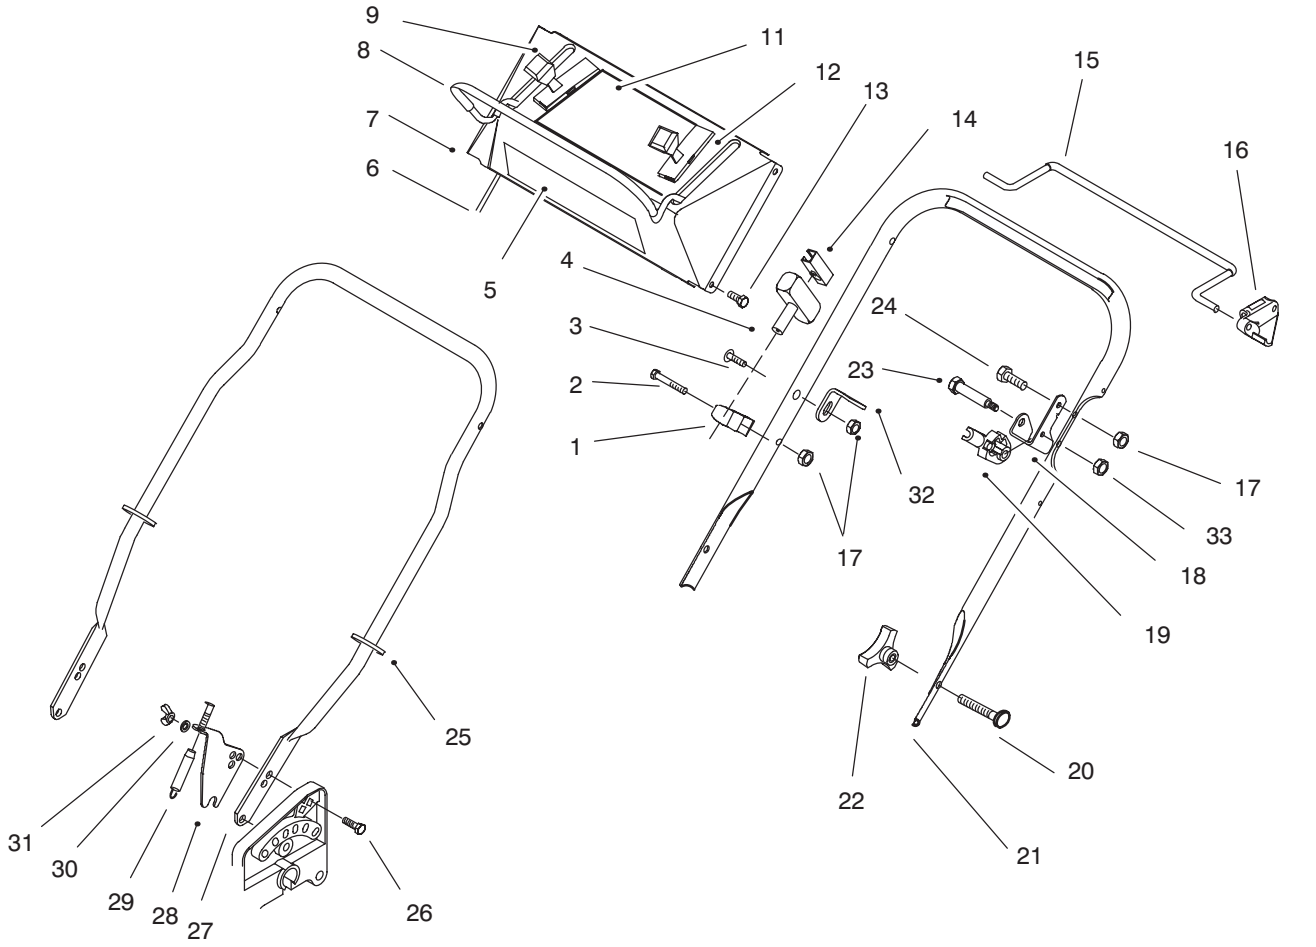


C–2179

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–7383	Guide – Rope	1
2	321–51	Bolt	1
3	92–2268	Screw	1
4	612825	Handle – Rope	1
5	92–2918	Decal – Control Panel	1
6	93–3248	Cable – Brake	1
7	95–5599	Panel – Control (Model No. 10422) Incl. Ref. #11)	1
*	95–5592	Panel – Control (Model No. 10518 & 10523) (Incl. Ref.#11)	1
8	92–1093	Bail – Brake	1
9	92–8926	Control Ground Speed (Model No. 10518 & 10523)	1
11	95–1700	Decal – Control Panel (Model No. 10422)	1
*	95–1701	Decal – Control Panel (Model No. 10518 & 10523)	1
12	93–3683	Control – Throttle	1
13	92–9665	Screw	4
14	612824	Insert – Handle	1
15	92–1617	Bail – Control (Model No. 10518 & 10523)	1

Ref. No.	Part No.	Description	No. Used
16	92–5412	Stop – Pivot (Model No. 10518 & 10523)	1
17	3296–73	Nut	3
18	92–1094	Bracket – Cam	1
19	92–1078	Brake – BBC Cam	1
20	614697	Screw – Handle	2
21	92–1092	Handle – Upper	1
22	614243	Knob – Handle	2
23	613050	Bolt – Shoulder	1
24	321–4	Screw – Hex. Hd.	1
25	614249	Tie – Cable	2
26	3230–29	Bolt – Carriage	2
27	92–6537	Handle – Lower	1
28	92–7899	Bracket –Traction Cable (Model No. 10518 & 10523)	1
29	92–6518	Cable – Traction (Model No. 10518 & 10523)	1
30	3253–33	Washer	2
31	32103–29	Nut – Wing	2
32	92–2928	Bracket – Cable	1
33	3296–56	Nut – Lock	1

*Not Illustrated

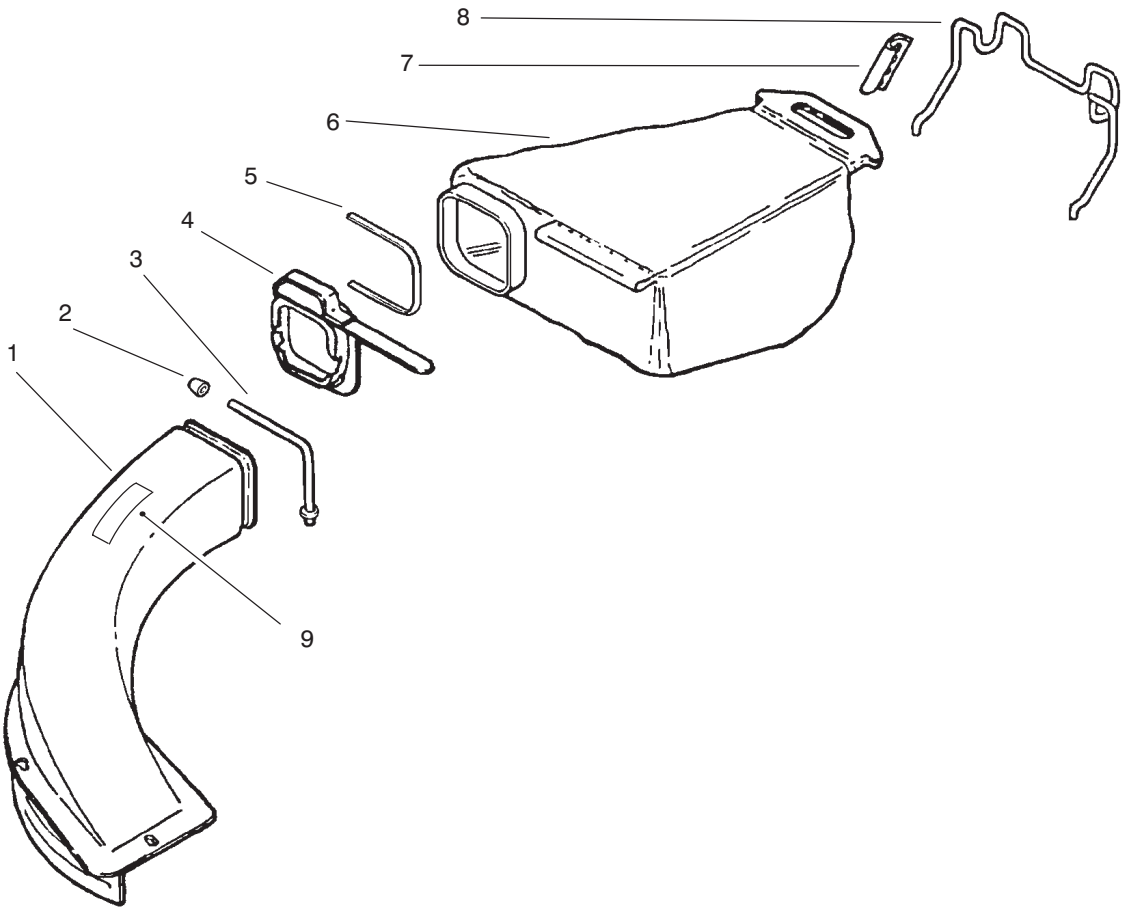


REAR CATCHER ASSEMBLY (Model No. 10523 Only)

Ref. No.	Part No.	Description	No. Used
1	684729	Chute & Support Assembly (Incl. Ref.# 2,3 & 9)	1
2	614589	Nut – Cap	1
3	614591	Chute Support	1
4	684727	Adaptor Assembly	1
5	614700	Tie Strap	1

Ref. No.	Part No.	Description	No. Used
6	*	Bag Assembly	1
7	613462	Hanger Clamp	2
8	613455	Wide Hanger	1
9	92–2919	Decal – Danger	1

*Includes Ref.#5 and instruction sheet for installing bag to adapter assembly. Order via model #89800.

ENGINE ASSEMBLY

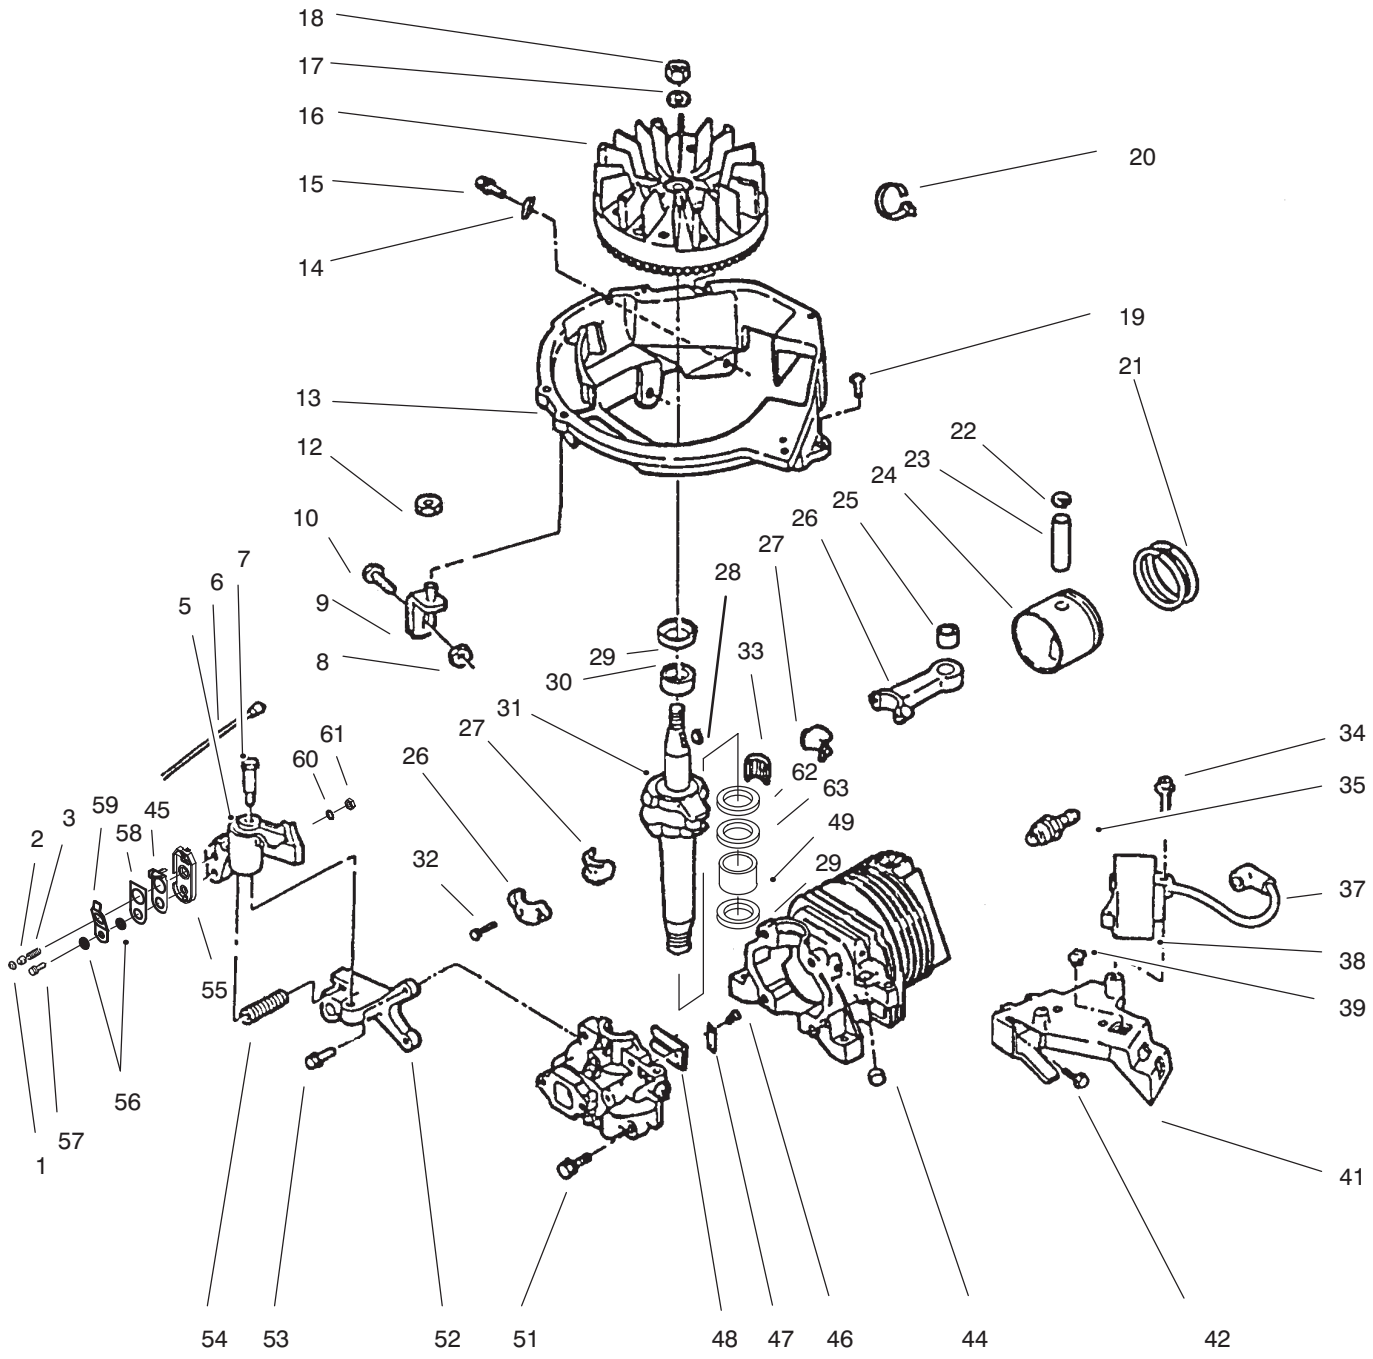


C–2180B

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator – Brake Lever	1
3	611214	Spring – Cable, Return	1
5	682683	Brake Assembly	1
6	683821	Wire Lead	1
7	613529	Bolt – Shoulder	1
8	608311	Nut	1
9	683581	Brace Assembly	1
10	603014	Bolt	1
12	602315	Nut	1
13	612427	Shroud – Base	1
14	611191	"J"Clip	1
15	609947	Screw	3
16	683580	Flywheel Assembly	1
17	316959	Washer – Lock	1
18	130743	Nut – Flywheel	1
19	609808	Screw	1
20	317893	Tie Strap	1
21	681737	Set – Ring	1
22	303712	Ring – Retaining	2
23	606608	Pin – Wrist	1
24	92–4925	Piston & Connecting Rod Assembly (Incl. Ref. #21–23, 25, 27, 32, & 33)	1
25	92–4927	Bearing Assembly	1
26	92–4921	Connecting Rod Assembly (Incl. Ref. #25, 27,32 & 33)	1
27	677982	Liner – Pair	1
28	607199	Key – Flywheel	1
29	611396	Seal – Oil	2
30	681830	Bearing – Main	1

Ref. No.	Part No.	Description	No. Used
31	94–5713	Crankshaft	1
32	611393	Screw	2
33	609754	Set – Needle Bearing	1
34	607526	Screw	2
35	614009	Spark Plug	1
37	681678	Wire Lead & Cover Assy	1
38	683215	C. D. Ignition Module (Incl. Ref. #37)	1
39	605120	Grommet	2
41	613072	Bracket – C. D.	1
42	614343	Screw	2
44	609123	Plug	4
45	612841	Plate – Contact	1
46	612872	Screw	2
47	602587	Plate – Reed	1
48	602588	Reed	1
49	681831	Bearing – Main	1
51	613110	Screw	1
52	611192	Bracket – Brake	1
53	613233	Screw	2
54	611211	Spring – Brake	1
55	93–1240	Case Assembly	1
56	306407	Washer	2
57	321–6	Screw	1
58	612842	Shield	1
59	93–1239	Spring – Contact	1
60	3255–7	Washer – Ext. Tooth Lock	1
61	146254	Nut	1
62	252–76	Bearing – Thrust	1
63	252–80	Washer – Thrust	1
*	94–5734	Short Block	1

*Not Illustrated

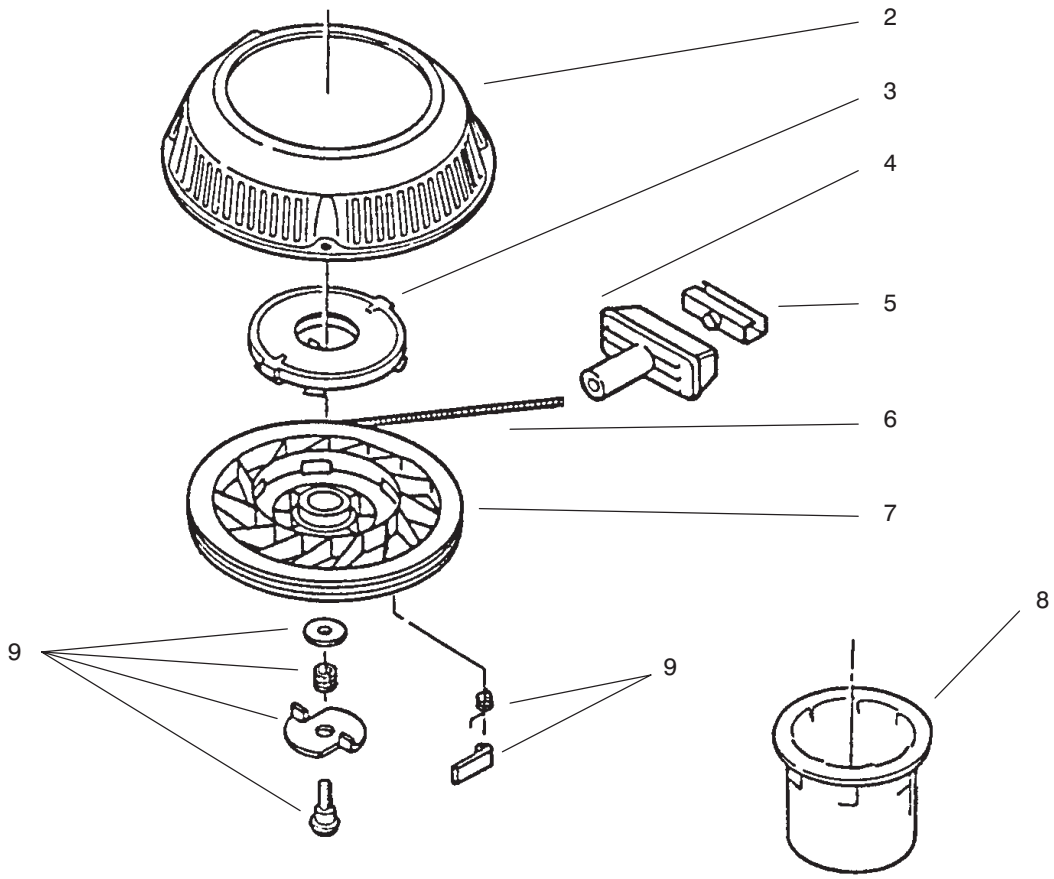


C–2181

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
*	684622	Starter Assembly (Incl. Ref. #2, 3, 6, 7, & 9)	1
2	684567	Starter Housing & Shaft	1
3	92–4935	Spring & Keeper	1
4	612825	Handle – Starter	1

Ref. No.	Part No.	Description	No. Used
5	612824	Clip – Rope	1
6	612432	Rope	1
7	612950	Pulley	1
8	612949	Hub – Starter	1
9	683899	Kit – Dog	1

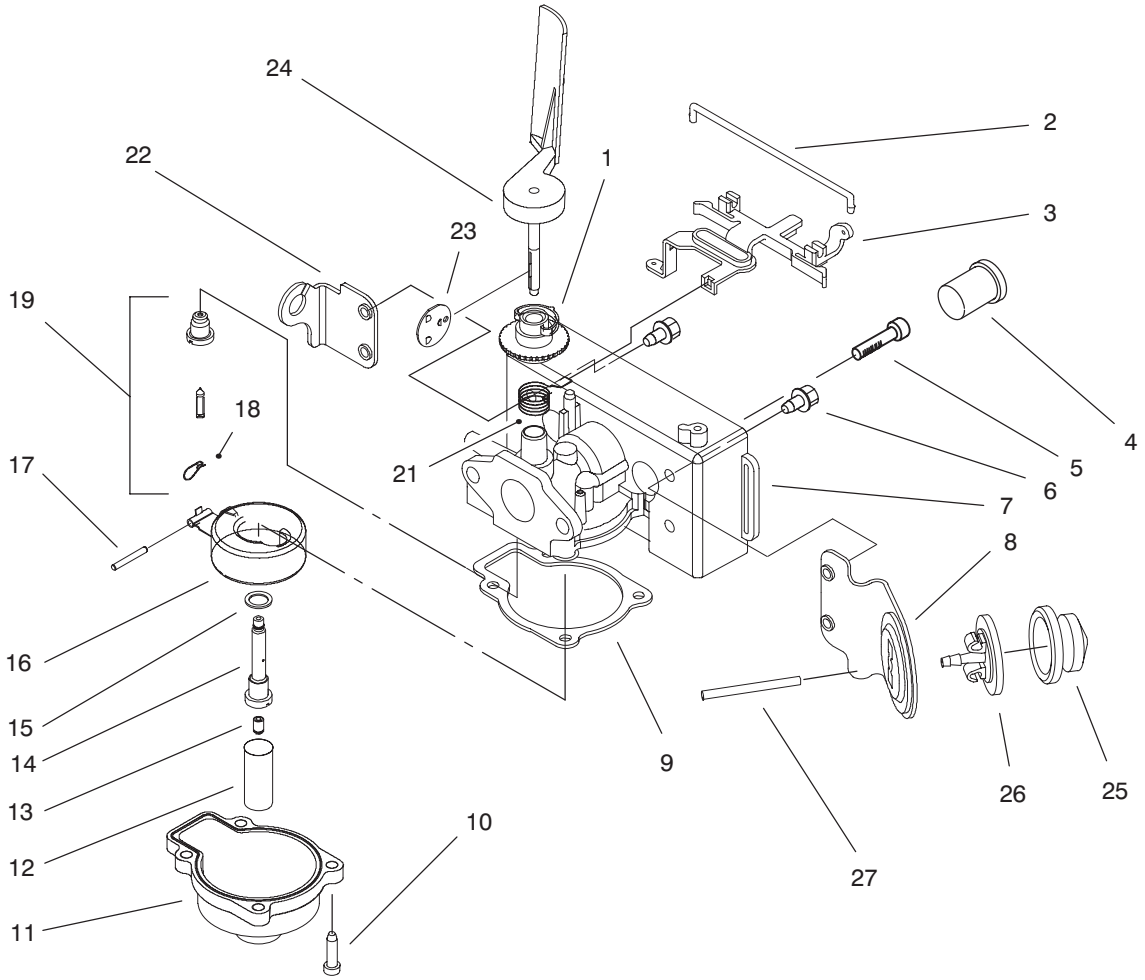


C–2182A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93–1225	Lever – Speed Adjust	1
4	611545	Plug	2
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93–4341	Body – Carburetor	1
8	93–1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92–9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	94–5710	Main Jet	1
14	92–6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	603145	Clip	1
19	678278	Float, Valve, & Body Ass'y	1
21	92–4944	Spring – Governor	1
22	93–1226	Bracket – Throttle Control	1
23	94–5704	Disc – Throttle	1
24	92–6376	Air Vane & Shaft	1
25	66–7460	Bulb – Primer	1
26	44–2750	Body – Primer	1
27	44–3172	Hose – Primer	1
*	94–5738	Carburetor Complete	1

*Not Illustrated

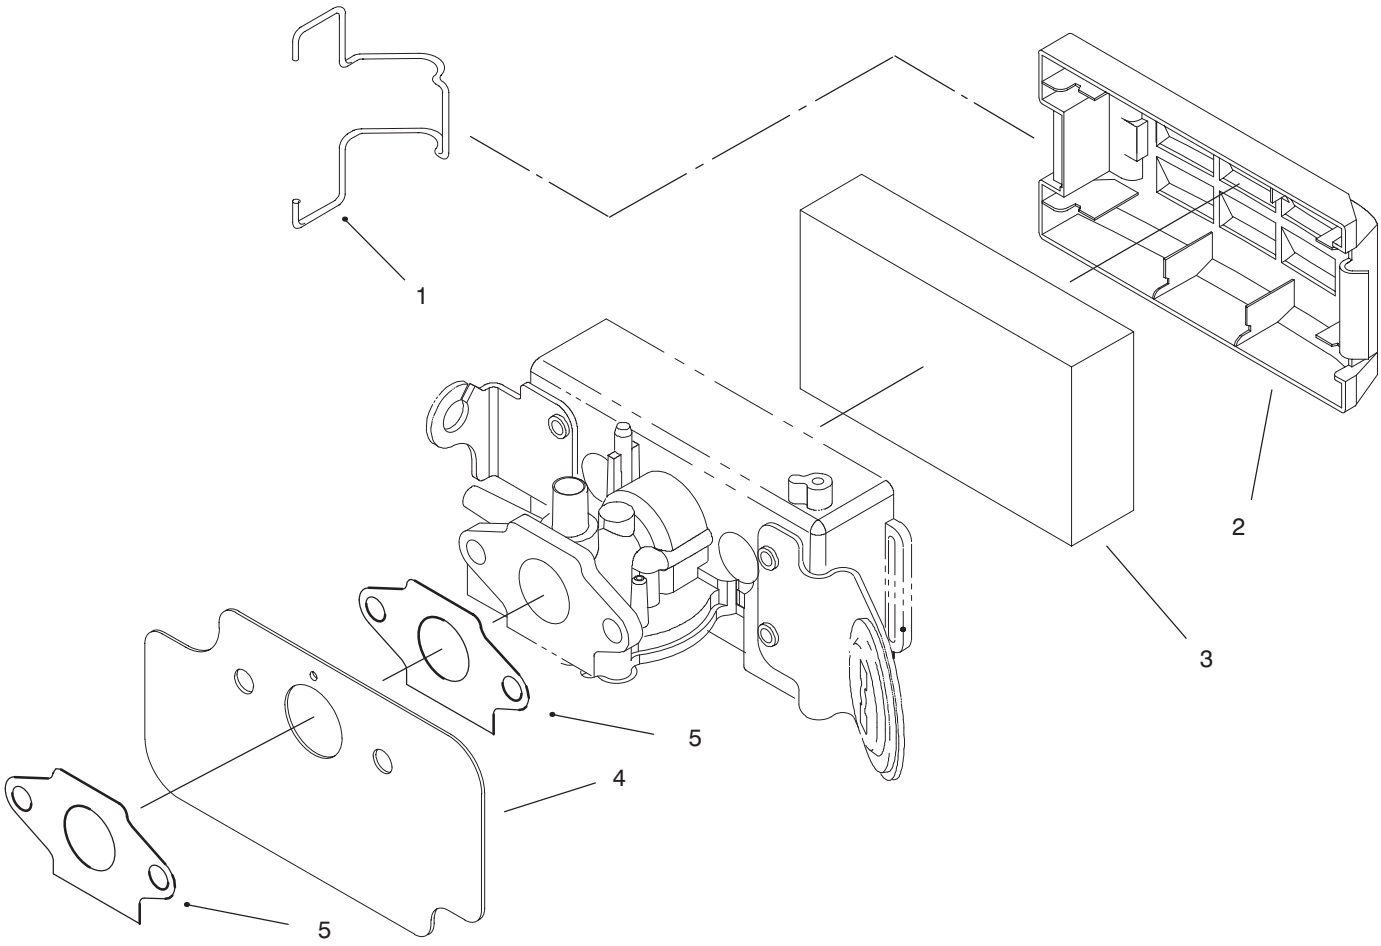

C–2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93–1221	Shield – Heat	1
5	92–4948	Gasket – Carb.	2

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
*	Bag Assembly	7	6	1
130743	Nut – Flywheel	9	18	1
146254	Nut	9	61	1
303259	Washer – Flat	4	30	1
303712	Ring – Retaining	9	22	2
306407	Washer	9	56	2
316959	Washer – Lock	9	17	1
317893	Tie Strap	9	20	1
602315	Nut	9	12	1
602587	Plate – Reed	9	47	1
602588	Reed	9	48	1
602850	Gasket – Float Chamber	11	9	1
603014	Bolt	9	10	1
603145	Clip	11	18	1
603164	Nut – Blade	1	23	1
605120	Grommet	9	39	2
605255	Washer – Felt	4	29	1
606608	Pin – Wrist	9	23	1
607199	Key – Flywheel	9	28	1
607213	Gasket – Fuel Cap	1	12	1
607526	Screw	9	34	2
607560	Cover – Side Discharge	2	*	1
607560	Cover – Side Discharge	3	*	1
607601	Screw	1	30	3
608175	Bar – Toe	2	29	1
608175	Bar – Toe	3	30	1
608311	Nut	9	8	1
608834	Washer	2	21	2
608850	Screw	11	10	4
609123	Plug	9	44	4
609150	Baffle Fuel Cap	1	13	1
609471	Screw	1	27	3
609482	Screw – Pan Hd. Sems	11	5	2
609493	Element – Air Filter	12	3	1
609754	Set – Needle Bearing	9	33	1
609786	Support – Crankshaft	1	26	1
609808	Screw	9	19	1
609947	Screw	9	15	3
609976	Pulley	1	33	1
610165	Retainer	11	2	1
610345	Screw – Set	1	32	1
610358	Nut	2	6	2
610358	Nut	3	6	2
610358	Nut	4	24	2
610383	Retainer – Cover	12	1	1
610834	Collar – Adjustment	11	1	1
611071	Filter – Fuel	11	12	1
611191	JClip	9	14	1
611192	Bracket – Brake	9	52	1
611211	Spring – Brake	9	54	1
611213	Retainer	9	1	1
611214	Spring – Cable, Return	9	3	1
611327	Cap – Fuel	1	11	1
611393	Screw	9	32	2
611396	Seal – Oil	9	29	2
611509	Actuator – Brake Lever	9	2	1
611545	Plug	11	4	2
612383	Washer	11	15	1
612427	Shroud – Base	9	13	1
612428	Screw	1	9	4
612432	Rope	10	6	1
612543	Blade 21	1	21	1
612783	Line – Fuel	1	17	1
612824	Clip – Rope	10	5	1
612824	Insert – Handle	6	14	1
612825	Handle – Rope	6	4	1
612825	Handle – Starter	10	4	1
612841	Plate – Contact	9	45	1
612842	Shield	9	58	1
612872	Screw	9	46	2
612949	Hub – Starter	10	8	1
612950	Pulley	10	7	1
613050	Bolt – Shoulder	6	23	1
613072	Bracket – C. D.	9	41	1
613110	Screw	9	51	1
613233	Screw	9	53	2
613269	Screw	11	6	4
613455	Wide Hanger	7	8	1
613462	Hanger Clamp	7	7	2
613500	Screw	1	29	1
613529	Bolt – Shoulder	9	7	1
614009	Spark Plug	9	35	1
614243	Knob – Handle	6	22	2
614249	Tie – Cable	6	25	2
614343	Screw	9	42	2
614426	Washer – Stepped	4	13	2
614589	Nut – Cap	7	2	1
614591	Chute Support	7	3	1
614637	Bracket – H. O. C.	2	19	4
614637	Bracket – H. O. C.	3	27	2
614650	Bolt – Wheel	2	16	2
614677	Screw – Thread Forming	2	2	2
614677	Screw – Thread Forming	3	2	2
614682	Knob	2	3	1
614682	Knob	3	3	1
614697	Screw – Handle	6	20	2
614700	Tie Strap	7	5	1
677525	Plate & Collar Assembly	1	20	1
677982	Liner – Pair	9	27	1
678113	Float & Arm Assembly	11	16	1
678278	Float, Valve, & Body Ass'y	11	19	1
681678	Wire Lead & Cover Assy	9	37	1
681737	Set – Ring	9	21	1
681830	Bearing – Main	9	30	1
681831	Bearing – Main	9	49	1
682683	Brake Assembly	9	5	1
682876	Muffler Cover Assembly	1	25	1
683215	C. D. Ignition Module	9	38	1
683580	Flywheel Assembly	9	16	1
683581	Brace Assembly	9	9	1
683821	Wire Lead	9	6	1
683899	Kit – Dog	10	9	1
684301	Base – Starter	1	6	1
684567	Starter Housing & Shaft	10	2	1
684622	Starter Assembly	10	*	1
684622	Starter Assembly	1	7	1
684727	Adaptor Assembly	7	4	1
684729	Chute & Support Assembly	7	1	1
684776	Wheel – 6	3	23	2
684776	Wheel – 6	2	25	2
684777	Wheel Assembly 8	2	17	2
12–5450	Screw	3	9	1
16–5539	Shroud & Tank Assembly	1	5	1
16–5769	Housing – 21	2	31	1
16–5779	Housing – 21	3	32	1
24–7920	Cover – Drive Shaft	4	31	1
29–8970	Washer	2	20	2
29–9570	Bushing – Yoke	5	11	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
36–4780	Washer	5	17	1
36–4791	Washer – Thrust	5	20	2
38–7820	Bearing – Ball	5	2	1
39–5770	Decal – Danger (English)	2	5	1
39–5770	Decal – Danger (English)	3	5	1
40–1940	Washer – Wheel Bolt	3	7	6
40–1940	Washer – Wheel Bolt	2	18	8
44–2750	Body – Primer	11	26	1
44–3172	Hose – Primer	11	27	1
46–5551	Bushing	3	13	2
46–6811	Screw	2	28	2
46–6811	Screw	3	29	2
47–2480	Stop – Rope	1	10	1
47–2900	Bushing	4	6	2
49–2040	Screw	5	21	6
55–3760	Pinion – 15 Tooth	5	23	1
55–3770	Gear – 49 Tooth	5	28	1
55–3780	Pinion – 20 Tooth	5	24	1
55–3790	Gear – 44 Tooth	5	29	1
55–3800	Pinion – 25 Tooth	5	25	1
55–3810	Gear – 39 Tooth	5	30	1
60–8710	Gearcase – Upper	5	9	1
60–8730	Gear Case Cover	5	22	1
60–8750	Bushing – Inter. Shaft	5	19	2
60–8770	Bushing – Output	5	18	1
60–8790	Sleeve – Gear	5	31	1
60–8800	Shaft – Intermediate	5	26	1
60–8810	Retainer – Shift Fork	5	12	1
60–8821	Lever – Shift	4	21	1
60–8840	Pulley – Half	5	6	2
60–8850	Bushing – Output	5	3	1
60–8870	Yoke – Shift	5	10	1
65–2720	Ring – Retaining	4	17	4
65–4710	Ring – Friction	4	9	2
65–4720	Spring – Compression	4	18	2
65–4730	Washer – Thrust	4	7	2
65–4740	Washer – Thrust	4	8	4
65–4750	Gear – Pinion	4	12	2
65–4760	Washer – Clutch	4	10	2
65–4770	Shaft – Output	5	4	1
65–5250	Clip – Spring	5	16	1
66–6040	Key – Rocking, R.H.	4	*	1
66–6050	Key – Rocking, L.H.	4	11	1
66–7460	Bulb – Primer	11	25	1
70–9760	Bushing	4	3	2
76–0760	Key – Shift	5	14	2
76–0770	Collar – Shift	5	15	1
76–0780	Sleeve – Shift Key	5	13	1
82–8780	Retainer – Cable	4	20	1
92–1005	Spring Arm Assembly	2	12	2
92–1006	Spring Arm Assembly	3	20	2
92–1006	Spring Arm Assembly	2	24	2
92–1008	Knob – Spring Arm	3	19	4
92–1008	Knob – Spring Arm	2	23	4
92–1008	Knob – Spring Arm	4	1	2
92–1042	Wheel – 8	4	14	2
92–1043	VBelt	4	28	1
92–1054	Plate – Muffler	1	28	1
92–1057	Bolt – Wheel	4	15	2
92–1078	Brake – BBC Cam	6	19	1
92–1092	Handle – Upper	6	21	1
92–1093	Bail – Brake	6	8	1
92–1094	Bracket – Cam	6	18	1
92–1099	Bolt – Wheel	3	24	2
92–1099	Bolt – Wheel	2	26	2
92–1604	Hub Cap	2	15	4
92–1604	Hub Cap	3	25	4
92–1617	Bail – Control	6	15	1
92–1630	Fan – Mulching	1	22	1
92–2268	Screw	6	3	1
92–2918	Decal – Control Panel	6	5	1
92–2919	Decal – Danger	7	9	1
92–2928	Bracket – Cable	6	32	1
92–4856	Bolt – Shoulder	2	14	2
92–4856	Bolt – Shoulder	3	22	2
92–4921	Connecting Rod Assembly	9	26	1
92–4925	Piston & Connecting Rod	9	24	1
92–4927	Bearing Assembly	9	25	1
92–4935	Spring & Keeper	10	3	1
92–4944	Spring – Governor	11	21	1
92–4948	Gasket – Carb.	12	5	2
92–5412	Stop – Pivot	6	16	1
92–5790	Pinion – Bevel	5	27	1
92–5791	Spacer	5	5	1
92–5791	Spacer	2	11	2
92–6371	Nozzle	11	14	1
92–6376	Air Vane & Shaft	11	24	1
92–6389	Pin	11	17	1
92–6518	Cable – Traction	6	29	1
92–6535	Cap – End	4	27	2
92–6537	Handle – Lower	6	27	1
92–6539	Spring Arm Assembly R.H.	4	*	1
92–6540	Spring Arm Assembly L.H.	4	2	1
92–7674	Bolt – Shoulder	2	33	2
92–7699	Bracket – Actuator	3	12	1
92–7736	Shield – Trailing	2	8	1
92–7736	Shield – Trailing	3	15	1
92–7746	Pivot Arm Assembly	4	4	2
92–7748	Screw	3	11	2
92–7869	Gear Case Assembly	3	14	1
92–7869	Gear Case Complete	5	*	1
92–7899	Bracket –Traction Cable	6	28	1
92–8630	Cover– Plate, Mulch	2	4	1
92–8630	Cover– Plate, Mulch	3	4	1
92–8852	Cover – Drive	3	10	1
92–8926	Control Ground Speed	6	9	1
92–9665	Screw	6	13	4
92–9673	Bolt – Shoulder	2	7	2
92–9673	Bolt – Shoulder	3	8	2
92–9691	Float Chamber	11	11	1
93–0289	Decal	2	30	1
93–0290	Decal	3	31	1
93–0293	Decal – Recoil	1	15	1
93–1221	Shield – Heat	12	4	1
93–1225	Lever – Speed Adjust	11	3	1
93–1226	Bracket – Throttle Control	11	22	1
93–1231	Cover – Air Filter	12	2	1
93–1232	Bracket – Primer	11	8	1
93–1233	Gasket – Muffler	1	31	1
93–1239	Spring – Contact	9	59	1
93–1240	Case Assembly	9	55	1
93–3248	Cable – Brake	6	6	1
93–3683	Control – Throttle	6	12	1
93–4341	Body – Carburetor	11	7	1
93–7250	Decal – Warning	2	34	1
93–7250	Decal – Warning	3	34	1
93–7383	Guide – Rope	6	1	1
94–1609	Cover – Wheel	4	16	2

*Not Illustrated

LAWN—BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94—1610	Grommet	2	1	3
94—1610	Grommet	3	1	3
94—5704	Disc — Throttle	11	23	1
94—5710	Main Jet	11	13	1
94—5713	Crankshaft	9	31	1
94—5734	Short Block	9	*	1
94—5738	Carburetor Complete	11	*	1
95—1700	Decal — Control Panel	6	11	1
95—1701	Decal — Control Panel	6	*	1
95—1727	Screw — Engine	1	24	3
95—5592	Panel — Control	6	*	1
95—5599	Panel — Control	6	7	1
252—76	Bearing — Thrust	9	62	1
252—80	Washer — Thrust	9	63	1
302—56	Fitting — Grease (Ref.)	4	5	2
321—4	Screw — Hex. Hd.	6	24	1
321—6	Screw	9	57	1
321—51	Bolt	6	2	1
3230—29	Bolt — Carriage	6	26	2
3253—33	Washer	6	30	2
3255—7	Washer — Ext. Tooth Lock	9	60	1
3256—24	Washer	5	8	1
3272—10	Pin — Cotter	4	23	1
3285—19	Pin — Groove	5	1	1
3290—413	Washer — Belleville	2	13	4
3290—413	Washer — Belleville	3	21	2
3296—5	Nut	5	7	1
3296—39	Nut — Lock	2	32	4
3296—39	Nut — Lock	3	33	2
3296—56	Nut — Lock	6	33	1
3296—73	Nut	6	17	3
32103—29	Nut — Wing	6	31	2
32144—53	Screw — Self Tapping	1	8	5
32144—70	Screw — Hex. Hd.	4	19	1
32144—85	Screw	4	25	2

*Not Illustrated

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								