FORM NO. 3319–299

LAWN-BOY®

21” GOLD SERIES WALK–BEHIND MOWER

MODEL NO. 10546–7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN−BOY owners as quickly as possible, minor changes are incorporated into LAWN−BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN−BOY Distributor or his Authorized LAWN−BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	3	Carburetor Assembly	12
Housing Assembly	4	Air Filter Assembly	13
Gear Case & Wheel Assembly	5	Electric Motor Assembly	14
Engine, Fuel Tank & Blade Assembly	6	Gear Case Assembly	15
Starter Assembly	7	Lower Handle Assembly	16
Flywheel & Wire Harness Assembly	8	Upper Handle Assembly	17
Wiring Schematic Electric Start	9	Numeric Parts Index	18−20
Crankshaft & Cylinder Assembly	10−11		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

Copyright 1996 The Lawn−Boy Inc.
All Rights Reserved

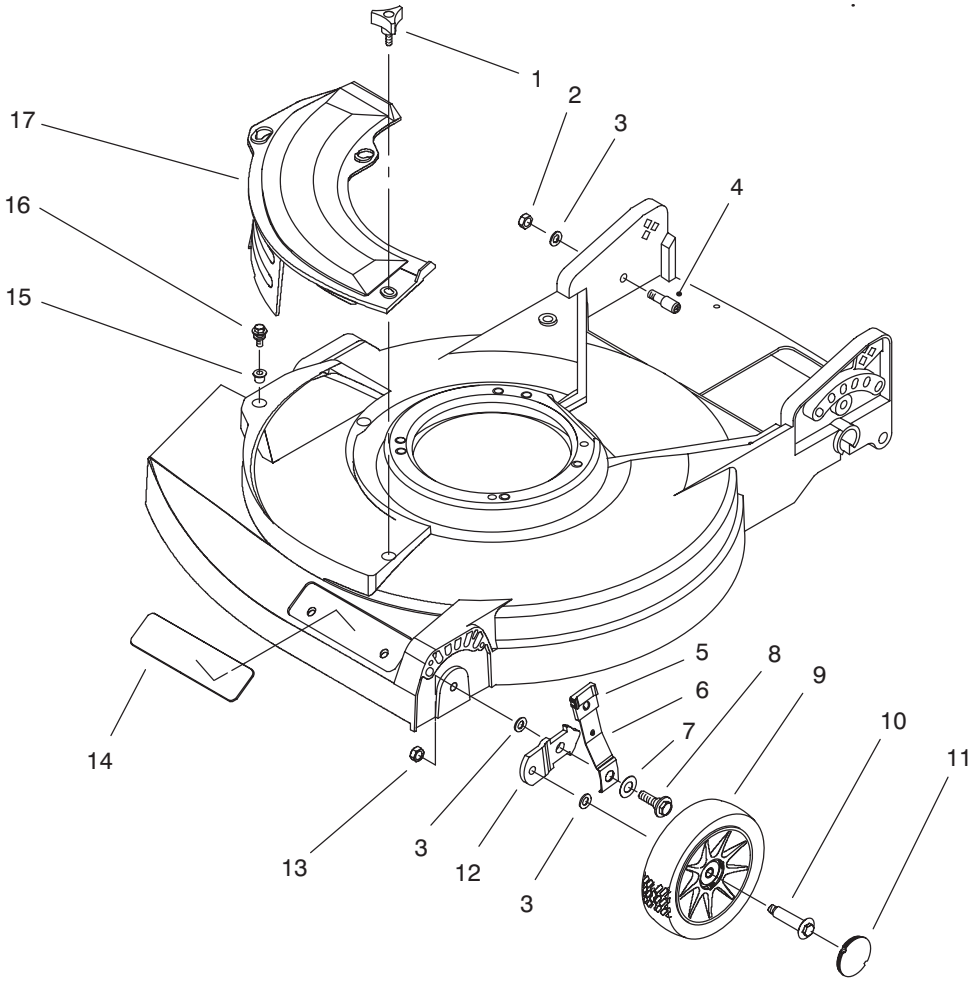


C–1917

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614682	Knob – Cover Plate	1
2	610358	Nut – Lock	2
3	40–1940	Washer	6
4	92–9673	Bolt – Shoulder	2
5	92–1008	Knob – Height Adjust	4
6	92–1006	Spring Arm Ass'y – Front	2
7	3290–413	Washer – Belleville	2
8	92–4856	Bolt – Shoulder	2
9	684776	Wheel & Tire Assembly 6"	2

Ref. No.	Part No.	Description	No. Used
10	92–1099	Bolt – Shoulder	2
11	92–1604	Cap – Hub	4
12	614637	Bracket – Wheel Height Adj.	2
13	3296–39	Nut – Lock	2
14	93–0290	Decal – Deck	1
15	94–1610	Grommet	3
16	614677	Screw – Sems Thr'd Form.	2
17	92–8630	Plate – Mulch	1

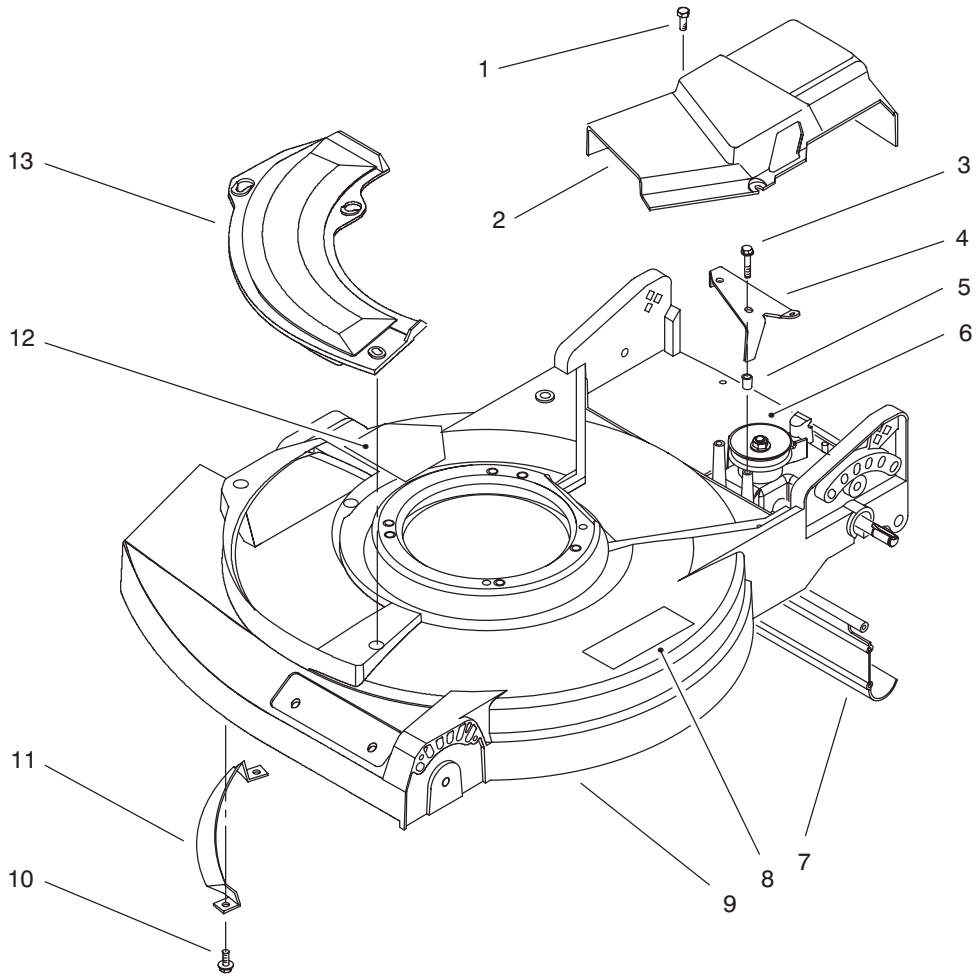


C–2183A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	12–5450	Screw – Hex Washer Hd. Thread Forming	2
2	92–8853	Cover – Transmission	1
3	92–7748	Screw	2
4	92–7699	Bracket – Actuator	1
5	46–5551	Bushing – Spacer	2
6	92–7869	Gear Case Assembly	1
7	92–7736	Shield – Trailing	1

Ref. No.	Part No.	Description	No. Used
8	93–7250	Decal – Warning	1
9	17–1219	Housing – 21” (Incl. Ref. #8 & 12)	1
10	46–6811	Screw – Hex Washer Hd.	2
11	608175	Bar – Toe	1
12	39–5770	Decal – Danger	1
13	607560	Plate – Cover	1

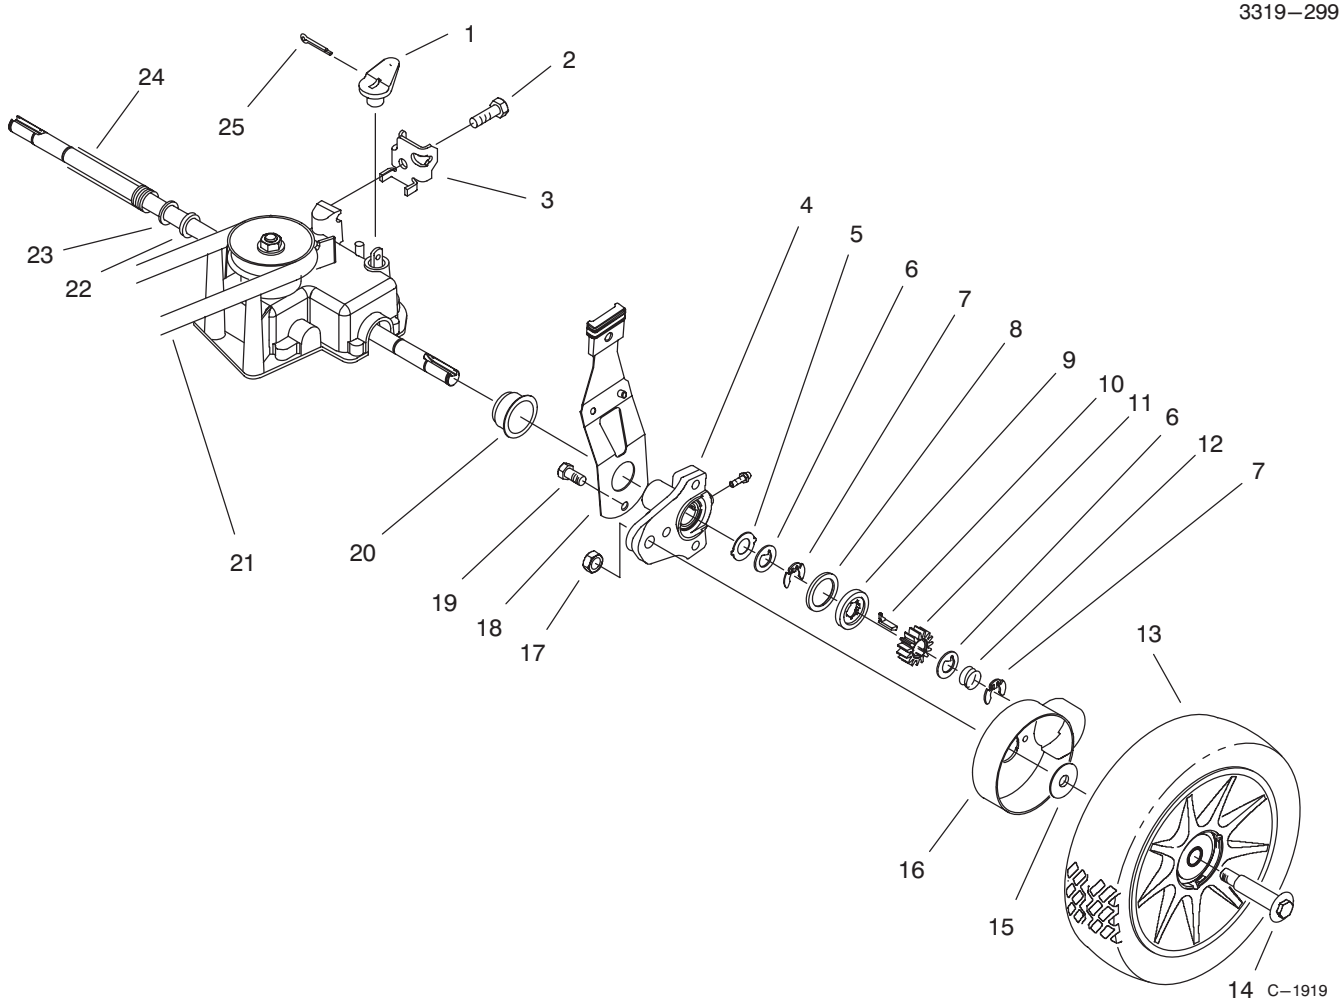


GEAR CASE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	60–8821	Lever – Shift	1
2	32144–70	Screw – Tapping	1
3	82–8780	Retainer – Cable	1
4	92–7746	Arm – Rear Height Adjust.	2
5	65–4730	Washer – Thrust	2
6	65–4740	Washer – Thrust Keyed	4
7	65–2720	Ring – Retaining	4
8	65–4710	Ring – Friction	2
9	65–4760	Washer	2
10	66–6050	Key – Rocking L.H.	1
*	66–6040	Key – Rocking R.H.	1
11	65–4750	Gear – Pinion	2
12	65–4720	Spring – Compression	2
13	92–1042	Wheel & Tire Assembly	2

Ref. No.	Part No.	Description	No. Used
14	92–1057	Bolt – Shoulder	2
15	614426	Washer – Stepped	2
16	94–1609	Cover – Wheel	2
17	610358	Nut – Lock	2
18	92–6540	Spring Arm Assembly– L.H.	1
*	92–6539	Spring Arm Assembly – R.H.	1
19	32144–85	Screw – Hex Hd Tapping	2
20	92–6535	Cap – End	2
21	92–1043	V–Belt	1
22	605255	Washer – Flat	1
23	303259	Washer	1
24	24–7920	Cover – Drive Shaft	1
25	3272–10	Pin – Cotter	1

*Not Illustrated

3319–299

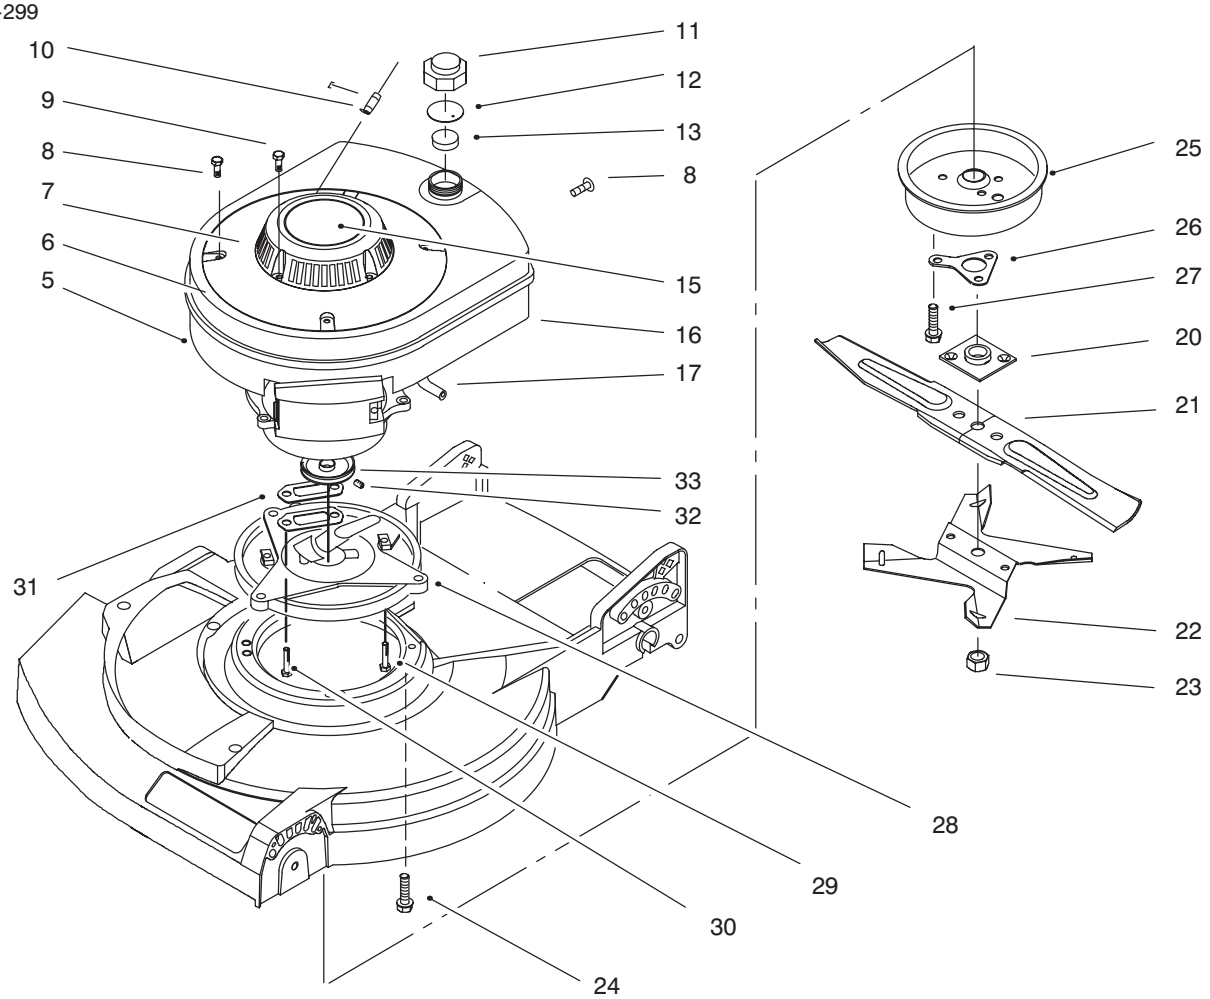


C–2176B

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	16–5539	Shroud & Tank Assembly	1
6	684301	Base – Starter	1
7	684622	Starter Assembly	1
8	32144–53	Screw – Self Tapping	5
9	612428	Screw	4
10	47–2480	Stop – Rope	1
11	611327	Cap – Fuel	1
12	607213	Gasket – Fuel Cap	1
13	609150	Baffle Fuel Cap	1
15	93–0293	Decal – Recoil	1
16		Engine Assembly	1
17	612783	Line – Fuel	1
20	677525	Plate & Collar Assembly	1

Ref. No.	Part No.	Description	No. Used
21	612543	Blade 21”	1
22	92–1630	Fan – Mulching	1
23	603164	Nut – Blade	1
24	95–1727	Screw – Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support – Crankshaft	1
27	609471	Screw	3
28	92–6388	Plate – Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93–1233	Gasket – Muffler	1
32	610345	Screw – Set	1
33	609976	Pulley	1

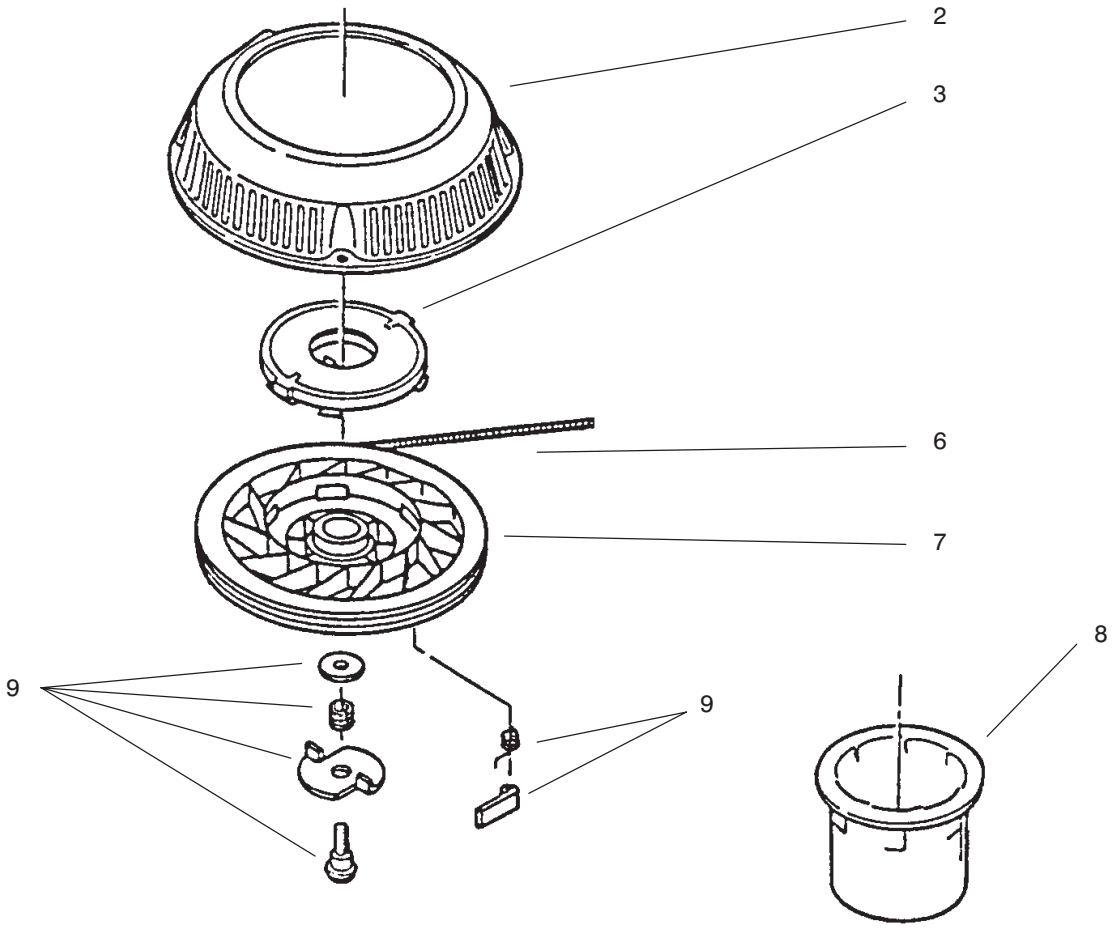


C–2187

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	684567	Starter Housing & Shaft	1
3	92–4935	Spring & Keeper	1
6	612432	Rope	1
7	612950	Pulley	1
8	612949	Hub – Starter	1
9	683899	Kit – Dog	1
*	684622	Starter Assembly (Incl. Ref. #2, 3, 6, 7, & 9)	1

*Not Illustrated

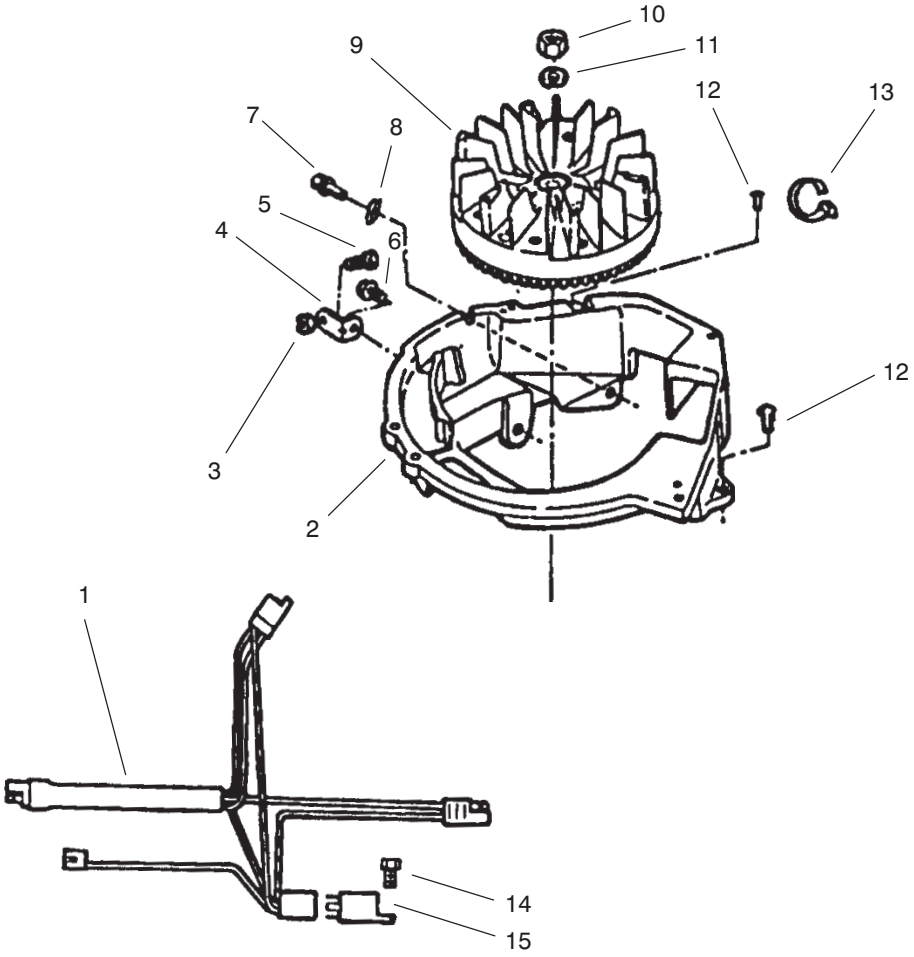


C–1925

FLYWHEEL & WIRE HARNESS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–4300	Harness – Wire	1
2	611215	Base – Shroud	1
3	608311	Nut	1
4	611512	Brace – Alternator	1
5	603014	Bolt	1
6	614343	Screw	1
7	609947	Screw	3
8	611191	Clip – J	1

Ref. No.	Part No.	Description	No. Used
9	683580	Flywheel	1
10	130743	Nut – Flywheel	1
11	316959	Washer – Lock	1
12	609808	Screw	1
13	317893	Strap – Tie	1
14	606537	Screw	1
15	682776	Relay	1

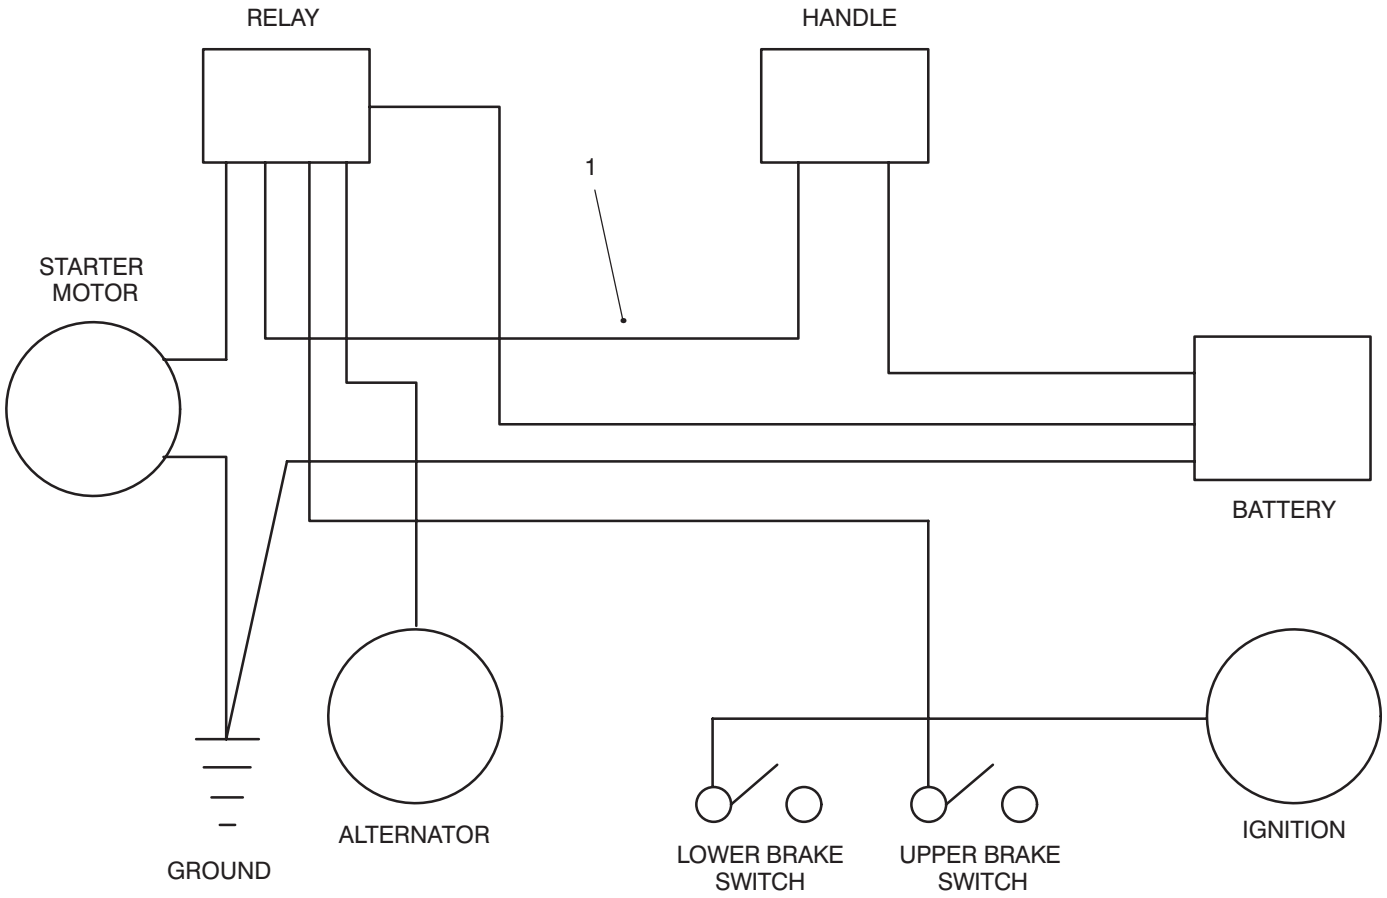


C–2674

WIRING SCHEMATIC ELECTRIC START

Ref. No.	Part No.	Description	No. Used
1	93–4300	Wire Harness – Lower	1

Ref. No.	Part No.	Description	No. Used

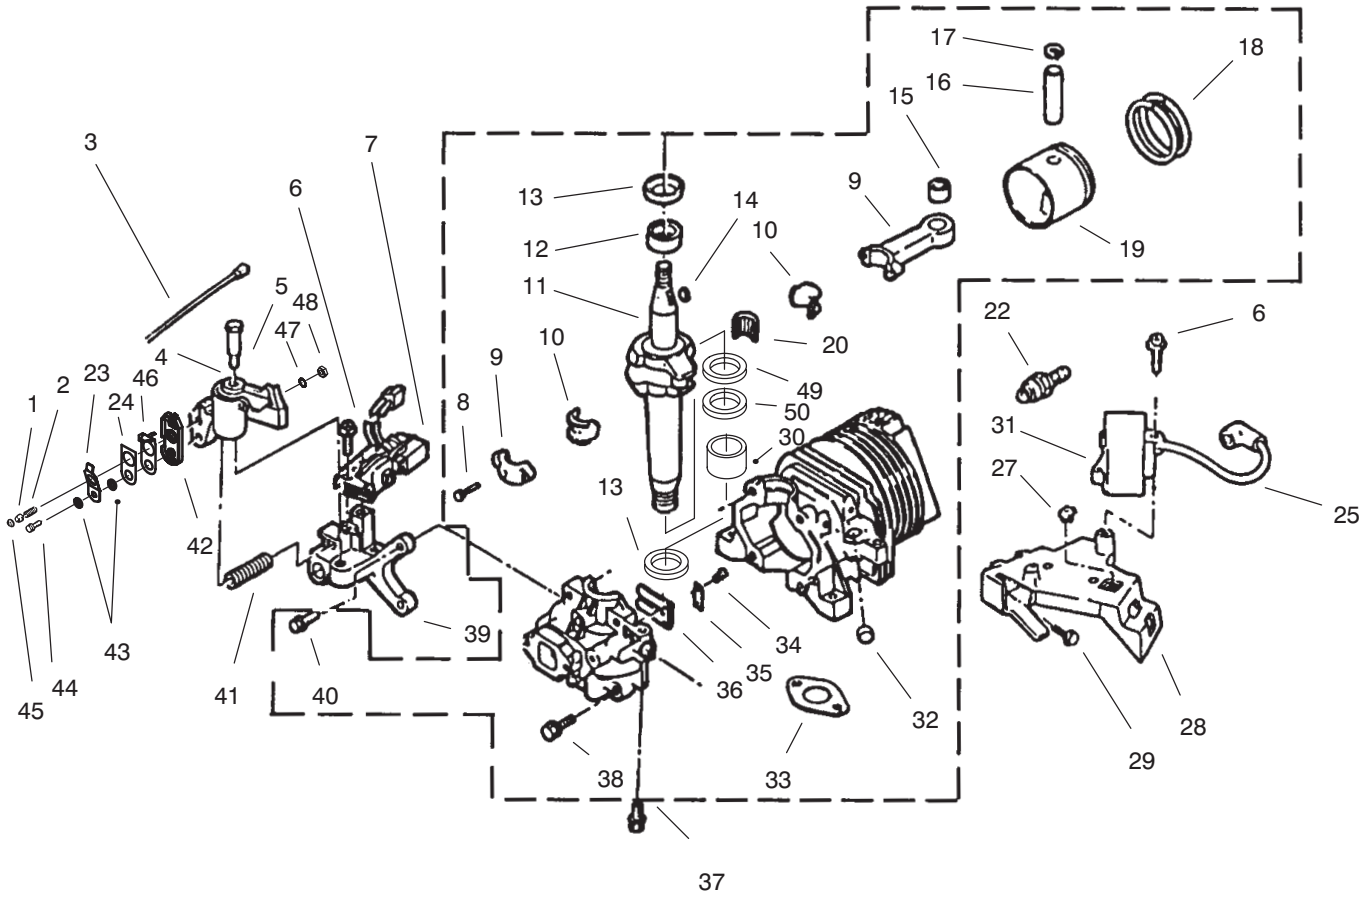


C–2172B

CRANKSHAFT & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611509	Actuator – Brake Lever	1
2	611214	Spring – Cable Return	1
3	683821	Lead	1
4	682683	Brake Assembly	1
5	613529	Bolt – Shoulder	1
6	607526	Screw – C.D. Mounting	4
7	683964	Alternator Assembly	1
8	611393	Screw – Cap	2
9	92–4921	Connecting Rod Assembly (Incl. Ref. #8, 10, & 20)	1
10	677982	Liner – Split (1 pair)	1
11	94–5713	Crankshaft	1
12	681830	Bearing – Upper Main	1
13	611396	Seal – Upper Oil	2
14	607199	Key – Flywheel	1
15	92–4927	Bearing Assembly	1
16	606608	Pin – Wrist	1
17	303712	Ring – Retaining	2
18	681737	Ring Set	1
19	92–4925	Piston & Ring Set (Incl. Ref. #16–18)	1
20	609754	Strip – Roller	1

Ref. No.	Part No.	Description	No. Used
22	614009	Plug – Spark	1
23	93–1239	Spring – Contact	1
24	612842	Shield	1
25	681678	Lead – High Tension	1
27	605120	Grommet	1
28	613073	Bracket – C.D. Mounting	1
29	614343	Screw	2
30	681831	Bearing	1
31	683215	Module – C.D. Ignition & Lead	1
32	609123	Plug	4
33	93–1233	Gasket – Exhaust	1
34	612872	Screw – Reed To Cover	2
35	602587	Plate – Reed Hold Down	1
36	602588	Reed	1
37	611073	Screw – Set	1
38	613110	Screw – Cover to Crankcase	1
39	611337	Bracket	1
40	613233	Screw – Brake Mtg. Brkt.	2
41	611211	Spring – Brake	1
42	93–4301	Case Assembly	1

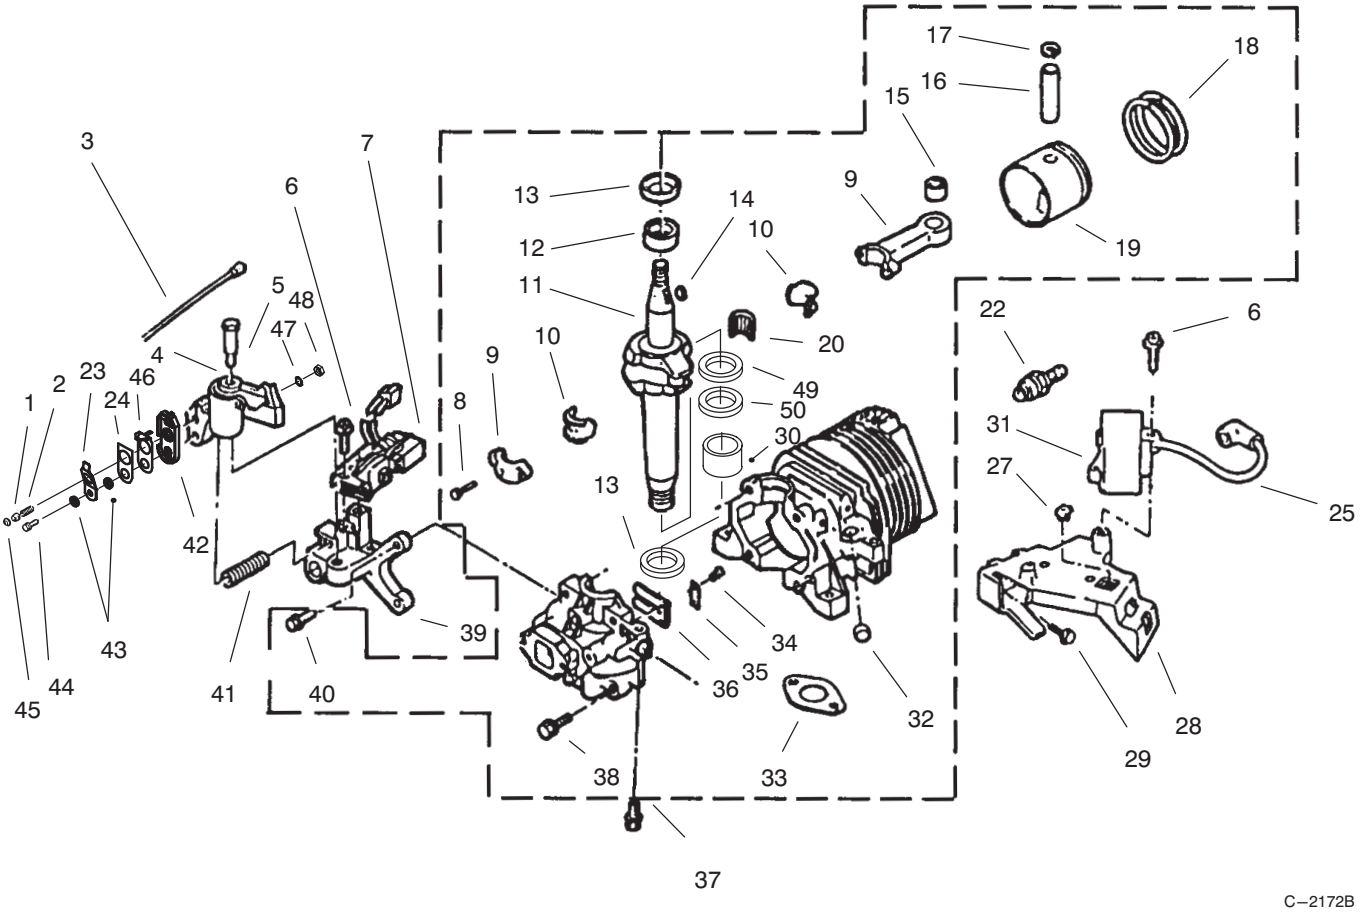


C–2172B

CRANKSHAFT & CYLINDER ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
43	306407	Washer	2
44	321–6	Screw – Hex Hd. Cap	1
45	611213	Retainer	1
46	612841	Plate – Contact	1
47	3255–7	Washer – Ext. Tooth Lock	1

Ref. No.	Part No.	Description	No. Used
48	146254	Nut	2
49	252–76	Bearing – Thrust	1
50	252–80	Washer – Thrust	1
*	94–5734	Short Block	1

*Not Illustrated

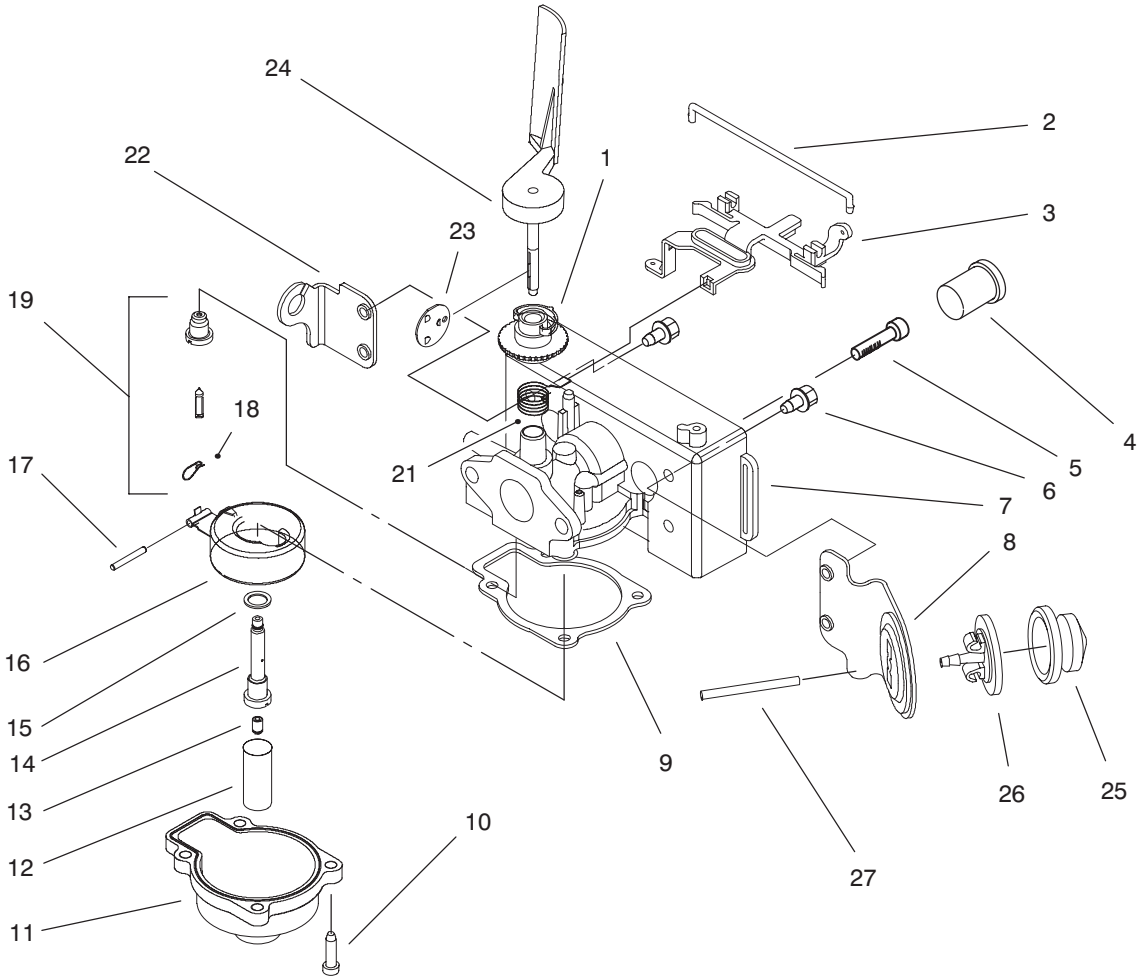


C–2182A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93–1225	Lever – Speed Adjust	1
4	93–4320	Plug	2
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93–4341	Body – Carburetor	1
8	93–1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92–9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	94–5710	Main Jet	1
14	92–6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	603145	Clip	1
19	678278	Float, Valve, & Body Ass'y	1
21	92–4944	Spring – Governor	1
22	93–1226	Bracket – Throttle Control	1
23	94–5704	Disc – Throttle	1
24	92–6376	Air Vane & Shaft	1
25	66–7460	Bulb – Primer	1
26	44–2750	Body – Primer	1
27	44–3172	Hose – Primer	1
*	94–5738	Carburetor Complete	1

*Not Illustrated

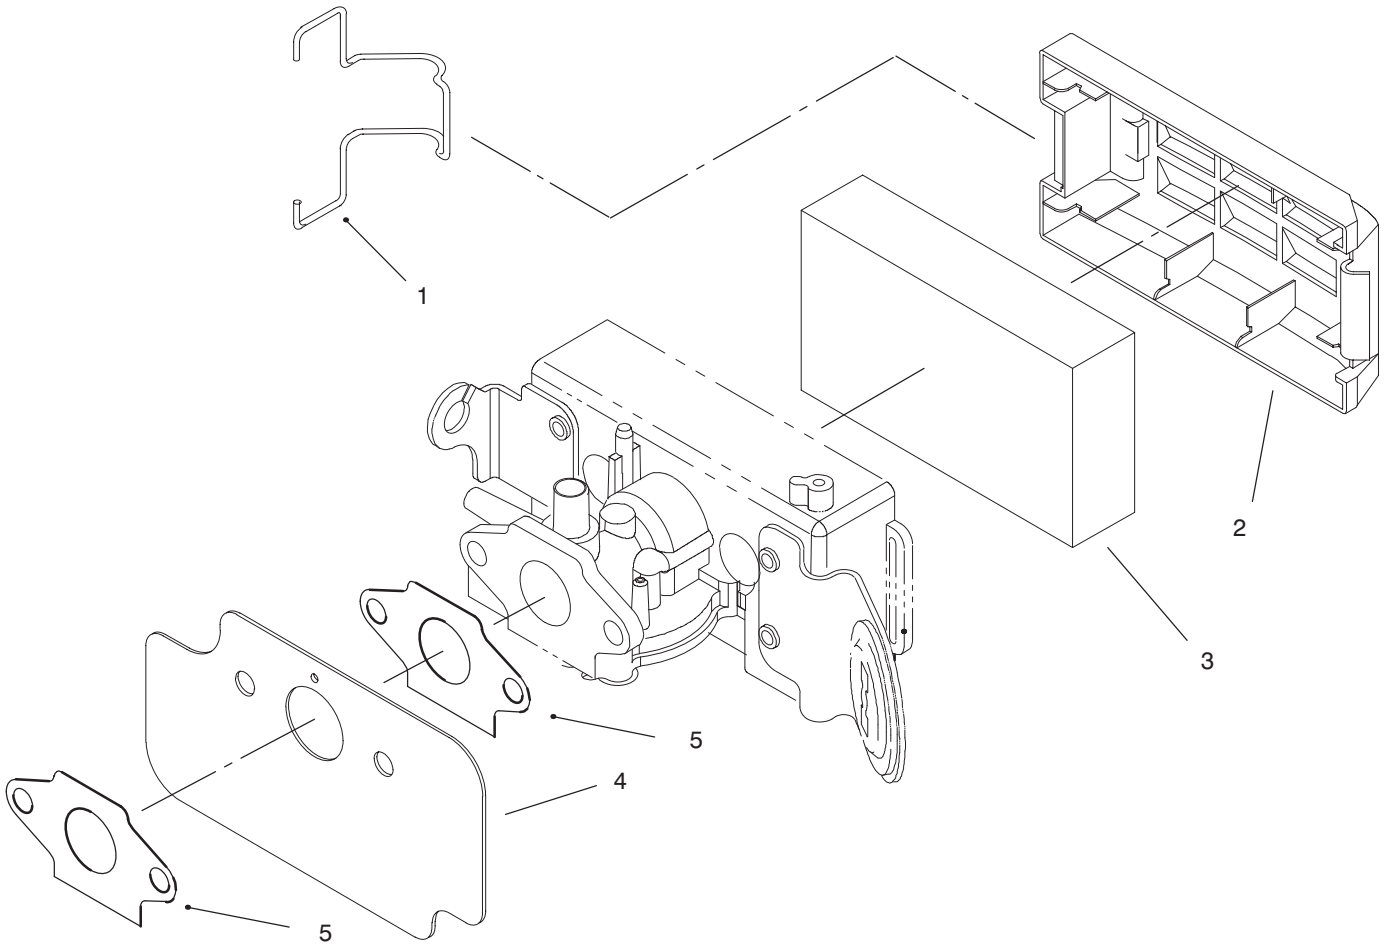


C–2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93–1221	Shield – Heat	1
5	92–4948	Gasket	2

3319–299

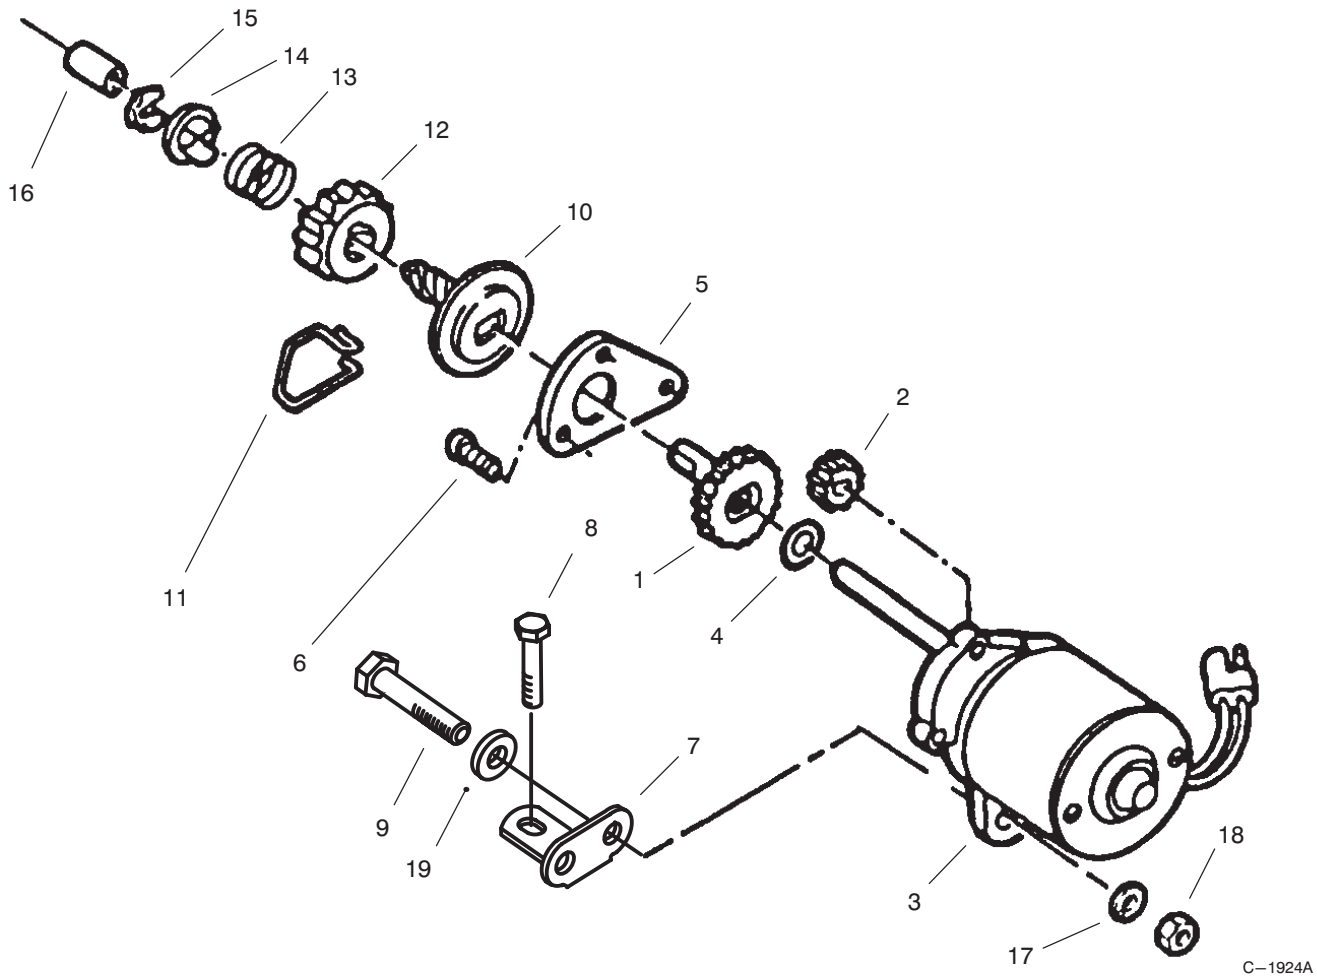


ELECTRIC MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611386	Gear – Driven	1
2	611385	Pinion – Motor shaft	1
3	682807	Motor Housing & Pin Ass'y	1
4	252–98	Washer	1
5	613517	Plate – Gear Cover	1
6	609130	Screw	3
7	612661	Bracket – Starter Mounting	1
8	609471	Screw	1
9	613075	Screw	2
10	682809	Pinion – Spring & Clutch Ass'y (Incl. Ref. #11–15)	1

Ref. No.	Part No.	Description	No. Used
11	609229	Spring – Drag	1
12	610258	Pinion	1
13	610257	Spring – Pinion Return	1
14	613451	Washer – Pinion Stop	1
15	608622	Ring – Retaining	1
16	609572	Sleeve	1
17	306992	Washer – Lock	1
18	328712	Nut	1
19	306407	Washer	2
*	682806	Electric Starter Assembly (Incl. Ref. #1–6)	1

*Not Illustrated

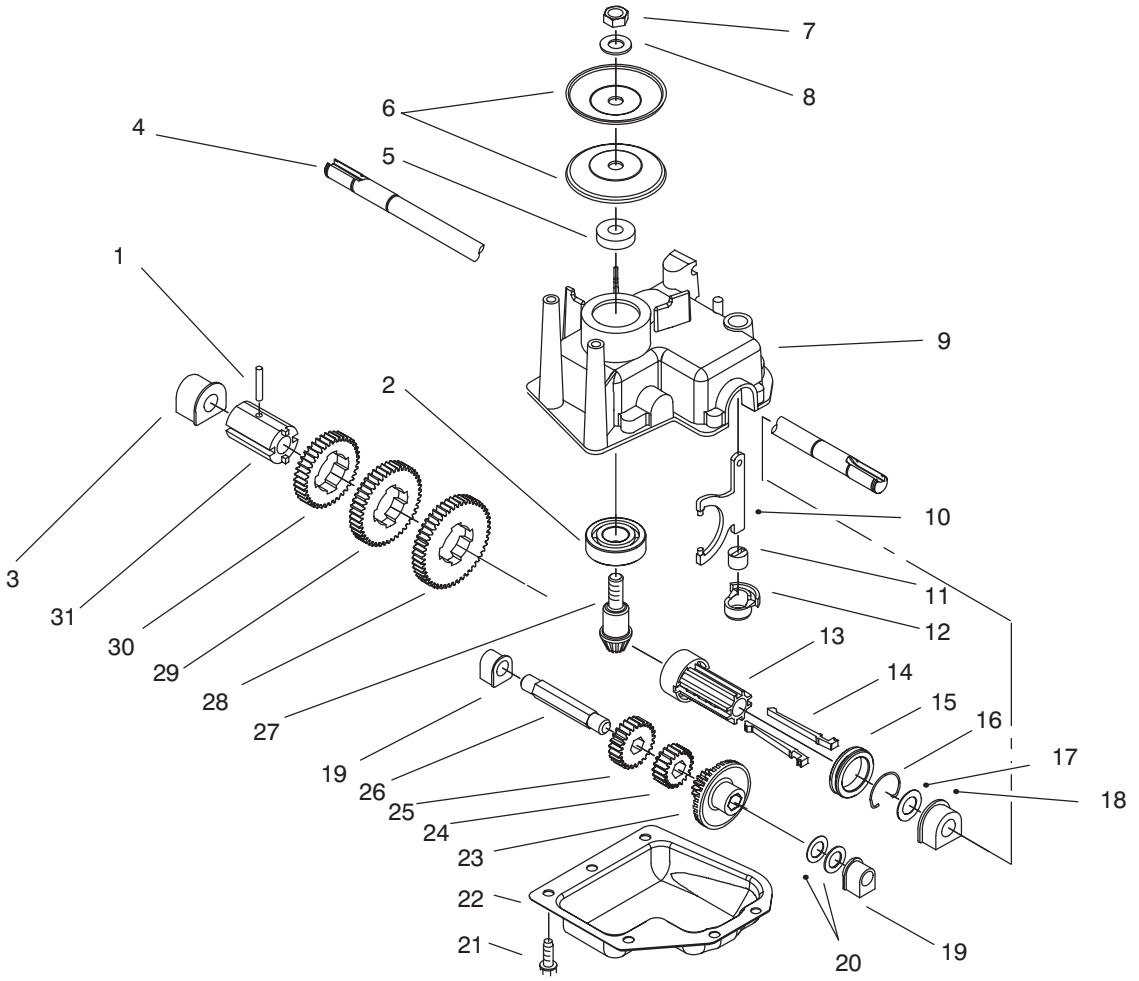


C–1322

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3285–19	Pin – Groove	1
2	38–7820	Bearing – Ball	1
3	60–8850	Bushing – Output	1
4	65–4770	Shaft – Output	1
5	92–5791	Spacer	1
6	60–8840	Pulley – Half	2
7	3296–5	Nut	1
8	3256–24	Washer	1
9	60–8710	Gearcase – Upper	1
10	60–8870	Yoke – Shift	1
11	29–9570	Bushing – Yoke	1
12	60–8810	Retainer – Shift Fork	1
13	76–0780	Sleeve – Shift Key	1
14	76–0760	Key – Shift	2
15	76–0770	Collar – Shift	1
16	65–5250	Clip – Spring	1
17	36–4780	Washer	1

Ref. No.	Part No.	Description	No. Used
18	60–8770	Bushing – Output	1
19	60–8750	Bushing – Inter. Shaft	2
20	36–4791	Washer – Thrust	2
21	49–2040	Screw	6
22	60–8730	Gear Case Cover	1
23	55–3760	Pinion – 15 Tooth	1
24	55–3780	Pinion – 20 Tooth	1
25	55–3800	Pinion – 25 Tooth	1
26	60–8800	Shaft – Intermediate	1
27	92–5790	Pinion – Bevel	1
28	55–3770	Gear – 49 Tooth	1
29	55–3790	Gear – 44 Tooth	1
30	55–3810	Gear – 39 Tooth	1
31	60–8790	Sleeve – Gear	1
*	92–7869	Gear Case Assembly Complete	1

*Not Illustrated

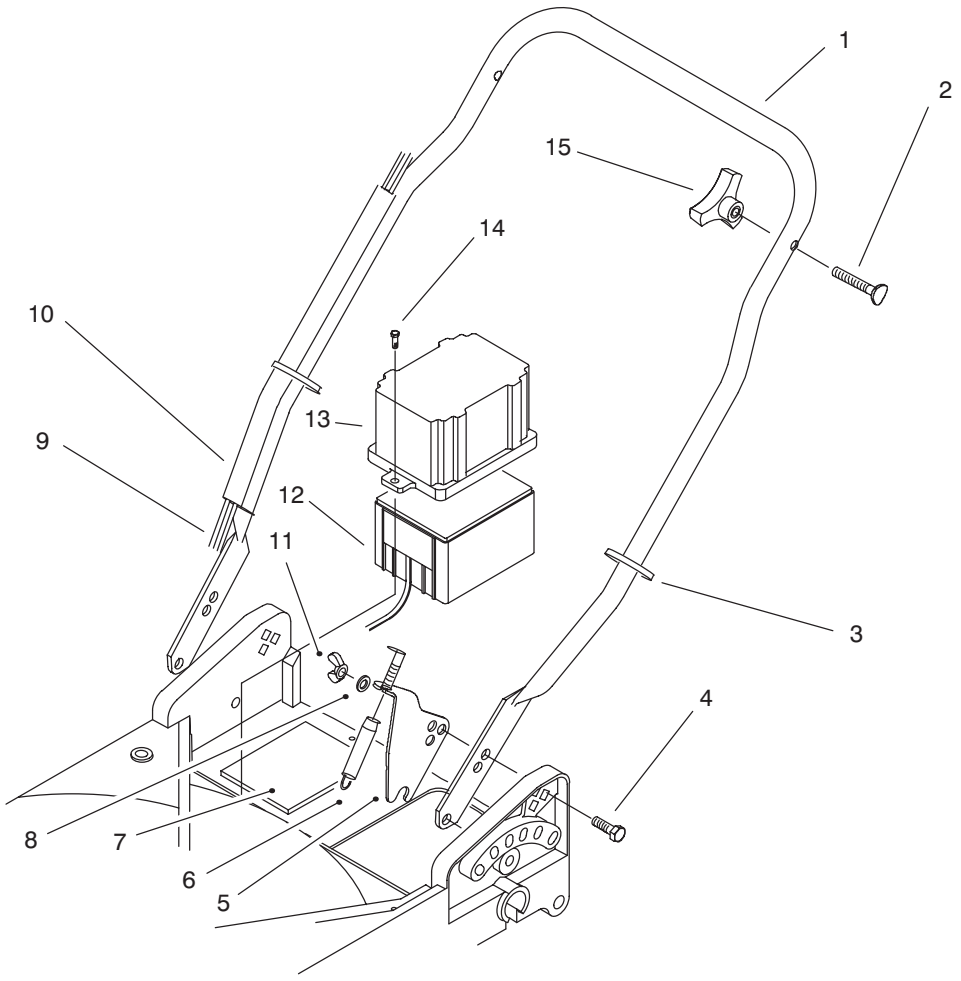


C–1921

LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–6537	Handle – Lower	1
2	614697	Screw – Handle	2
3	614249	Tie – Strap	2
4	3230–29	Bolt – Carriage	2
5	92–7899	Bracket – Traction Cable	1
6	92–6518	Cable – Traction	1
7	612510	Pad – Battery	1
8	3253–33	Washer – Lock	2
9	94–6059	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
10	92–8917	Cover – Controls	1
11	32103–29	Nut – Wing	2
12	55–7520	Pack – Battery	1
13	612690	Case – Battery	1
14	12–5450	Screw – Hex Washer Hd. Thread Forming	2
15	614243	Knob	2
*	94–9164	Charger – Battery	1

*Not Illustrated

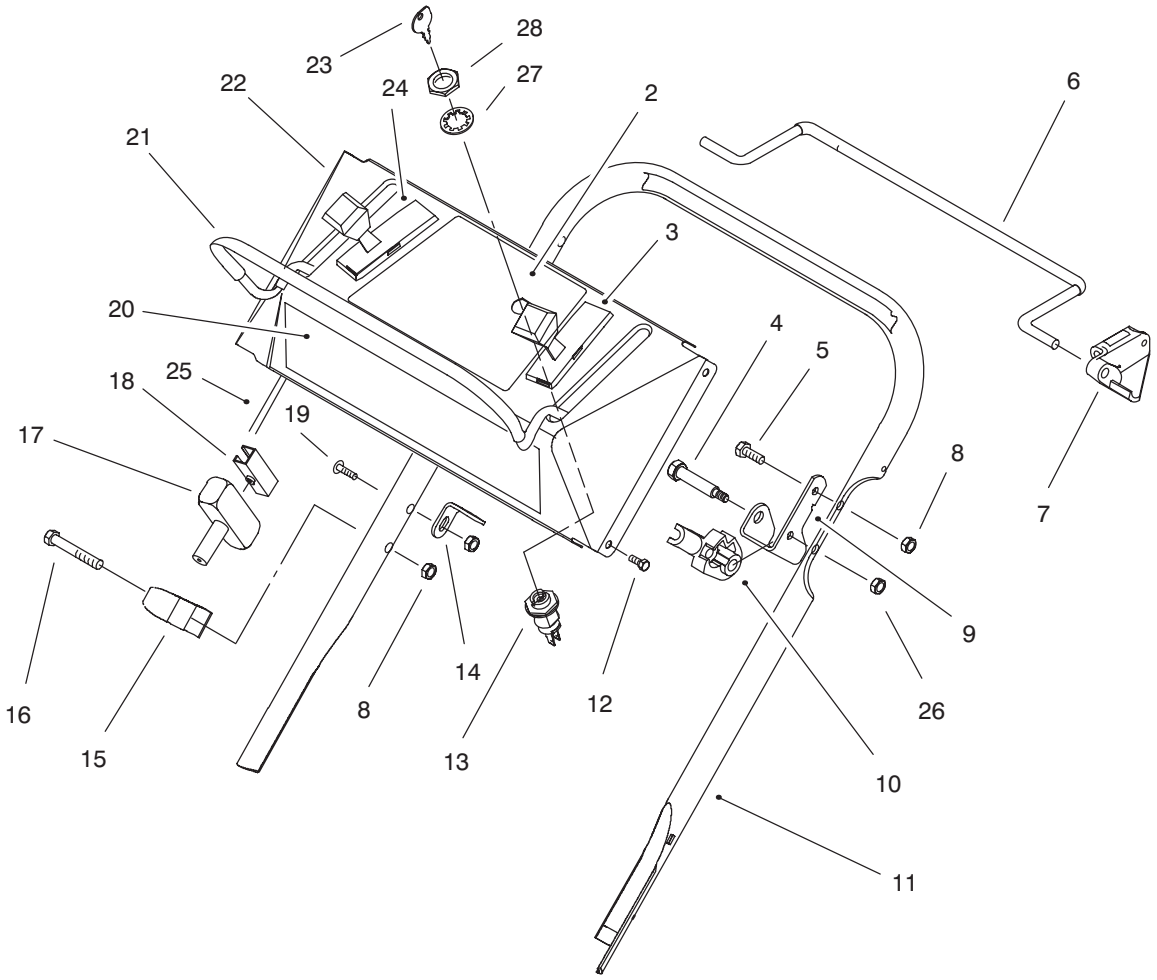

C–1922B

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	94–1615	Decal – Warning	1
3	93–3683	Cable – Throttle	1
4	613050	Bolt	1
5	321–4	Screw – Hex Hd. Cap	1
6	92–1617	Bail – Control S.P.	1
7	92–5412	Stop – Pivot	1
8	3296–73	Nut – Lock	3
9	92–1094	Bail – Stop Bracket	1
10	92–1078	Cam – Brake	1
11	92–1092	Handle – Upper	1
12	92–9665	Screw – Phillips Hd.	4
13	46–5780	Switch – Starter	1
14	92–2928	Bracket – Cable Anchor	1
15	93–7383	Guide – Rope	1

Ref. No.	Part No.	Description	No. Used
16	321–51	Screw – Hex Hd. Cap	1
17	612825	Handle – Starter	1
18	612824	Clip – Rope Insert	1
19	92–2268	Screw – Handle	1
20	92–9561	Decal – Console Front	1
21	92–1093	Bail – Engine Control	1
22	17–4539	Panel – Control (Incl. Ref. #2, & 20)	1
23	700918	Key	1
24	92–8926	Control – Ground Speed	1
25	93–3248	Cable – Control	1
26	3296–56	Nut – Lock	1
27	3254–5	Washer – Star	1
28	218–461	Nut	1

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut – Flywheel	8	10	1
146254	Nut	11	48	2
303259	Washer	5	23	1
303712	Ring – Retaining	10	17	2
306407	Washer	14	19	2
306407	Washer	11	43	2
306992	Washer – Lock	14	17	1
316959	Washer – Lock	8	11	1
317893	Strap – Tie	8	13	1
328712	Nut	14	18	1
602587	Plate – Reed Hold Down	10	35	1
602588	Reed	10	36	1
602850	Gasket – Float Chamber	12	9	1
603014	Bolt	8	5	1
603145	Clip	12	18	1
603164	Nut – Blade	6	23	1
605120	Grommet	10	27	1
605255	Washer – Flat	5	22	1
606537	Screw	8	14	1
606608	Pin – Wrist	10	16	1
607199	Key – Flywheel	10	14	1
607213	Gasket – Fuel Cap	6	12	1
607526	Screw – C.D. Mounting	10	6	4
607560	Plate – Cover	4	13	1
607601	Screw	6	30	3
608175	Bar – Toe	4	11	1
608311	Nut	8	3	1
608622	Ring – Retaining	14	15	1
608850	Screw	12	10	4
609123	Plug	10	32	4
609130	Screw	14	6	3
609150	Baffle Fuel Cap	6	13	1
609229	Spring – Drag	14	11	1
609471	Screw	14	8	1
609471	Screw	6	27	3
609482	Screw – Pan Hd. Sems	12	5	2
609493	Element – Air Filter	13	3	1
609572	Sleeve	14	16	1
609754	Strip – Roller	10	20	1
609786	Support – Crankshaft	6	26	1
609808	Screw	8	12	1
609947	Screw	8	7	3
609976	Pulley	6	33	1
610165	Retainer	12	2	1
610257	Spring – Pinion Return	14	13	1
610258	Pinion	14	12	1
610345	Screw – Set	6	32	1
610358	Nut – Lock	3	2	2
610358	Nut – Lock	5	17	2
610383	Retainer – Cover	13	1	1
610834	Collar – Adjustment	12	1	1
611071	Filter – Fuel	12	12	1
611073	Screw – Set	10	37	1
611191	Clip – J	8	8	1
611211	Spring – Brake	10	41	1
611213	Retainer	11	45	1
611214	Spring – Cable Return	10	2	1
611215	Base – Shroud	8	2	1
611327	Cap – Fuel	6	11	1
611337	Bracket	10	39	1
611385	Pinion – Motor shaft	14	2	1
611386	Gear – Driven	14	1	1
611393	Screw – Cap	10	8	2
611396	Seal – Upper Oil	10	13	2
611509	Actuator – Brake Lever	10	1	1
611512	Brace – Alternator	8	4	1
612383	Washer	12	15	1
612428	Screw	6	9	4
612432	Rope	7	6	1
612510	Pad – Battery	16	7	1
612543	Blade 21	6	21	1
612661	Bracket – Starter Mounting	14	7	1
612690	Case – Battery	16	13	1
612783	Line – Fuel	6	17	1
612824	Clip – Rope Insert	17	18	1
612825	Handle – Starter	17	17	1
612841	Plate – Contact	11	46	1
612842	Shield	10	24	1
612872	Screw – Reed To Cover	10	34	2
612949	Hub – Starter	7	8	1
612950	Pulley	7	7	1
613050	Bolt	17	4	1
613073	Bracket – C.D. Mounting	10	28	1
613075	Screw	14	9	2
613110	Screw – Cover to	10	38	1
613233	Screw – Brake Mtg. Brkt.	10	40	2
613269	Screw	12	6	4
613451	Washer – Pinion Stop	14	14	1
613500	Screw	6	29	1
613517	Plate – Gear Cover	14	5	1
613529	Bolt – Shoulder	10	5	1
614009	Plug – Spark	10	22	1
614243	Knob	16	15	2
614249	Tie – Strap	16	3	2
614343	Screw	8	6	1
614343	Screw	10	29	2
614426	Washer – Stepped	5	15	2
614637	Bracket – Wheel Height Adj.	3	12	2
614677	Screw – Sems Thr'd Form.	3	16	2
614682	Knob – Cover Plate	3	1	1
614697	Screw – Handle	16	2	2
677525	Plate & Collar Assembly	6	20	1
677982	Liner – Split (1 pair)	10	10	1
678113	Float & Arm Assembly	12	16	1
678278	Float, Valve, & Body Ass'y	12	19	1
681678	Lead – High Tension	10	25	1
681737	Ring Set	10	18	1
681830	Bearing – Upper Main	10	12	1
681831	Bearing	10	30	1
682683	Brake Assembly	10	4	1
682776	Relay	8	15	1
682806	Electric Starter Assembly	14	*	1
682807	Motor Housing & Pin Ass'y	14	3	1
682809	Pinion – Spring & Clutch	14	10	1
682876	Muffler Cover Assembly	6	25	1
683215	Module – C.D. Ignition	10	31	1
683580	Flywheel	8	9	1
683821	Lead	10	3	1
683899	Kit – Dog	7	9	1
683964	Alternator Assembly	10	7	1
684301	Base – Starter	6	6	1
684567	Starter Housing & Shaft	7	2	1
684622	Starter Assembly	7	*	1
684622	Starter Assembly	6	7	1
684776	Wheel & Tire Assembly 6	3	9	2
700918	Key	17	23	1
12–5450	Screw – Hex Washer Hd.	4	1	2
12–5450	Screw – Hex Washer Hd.	16	14	2

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
16–5539	Shroud & Tank Assembly	6	5	1
17–1219	Housing – 21	4	9	1
17–4539	Panel – Control	17	22	1
24–7920	Cover – Drive Shaft	5	24	1
29–9570	Bushing – Yoke	15	11	1
36–4780	Washer	15	17	1
36–4791	Washer – Thrust	15	20	2
38–7820	Bearing – Ball	15	2	1
39–5770	Decal – Danger	4	12	1
40–1940	Washer	3	3	6
44–2750	Body – Primer	12	26	1
44–3172	Hose – Primer	12	27	1
46–5551	Bushing – Spacer	4	5	2
46–5780	Switch – Starter	17	13	1
46–6811	Screw – Hex Washer Hd.	4	10	2
47–2480	Stop – Rope	6	10	1
49–2040	Screw	15	21	6
55–3760	Pinion – 15 Tooth	15	23	1
55–3770	Gear – 49 Tooth	15	28	1
55–3780	Pinion – 20 Tooth	15	24	1
55–3790	Gear – 44 Tooth	15	29	1
55–3800	Pinion – 25 Tooth	15	25	1
55–3810	Gear – 39 Tooth	15	30	1
55–7520	Pack – Battery	16	12	1
60–8710	Gearcase – Upper	15	9	1
60–8730	Gear Case Cover	15	22	1
60–8750	Bushing – Inter. Shaft	15	19	2
60–8770	Bushing – Output	15	18	1
60–8790	Sleeve – Gear	15	31	1
60–8800	Shaft – Intermediate	15	26	1
60–8810	Retainer – Shift Fork	15	12	1
60–8821	Lever – Shift	5	1	1
60–8840	Pulley – Half	15	6	2
60–8850	Bushing – Output	15	3	1
60–8870	Yoke – Shift	15	10	1
65–2720	Ring – Retaining	5	7	4
65–4710	Ring – Friction	5	8	2
65–4720	Spring – Compression	5	12	2
65–4730	Washer – Thrust	5	5	2
65–4740	Washer – Thrust Keyed	5	6	4
65–4750	Gear – Pinion	5	11	2
65–4760	Washer	5	9	2
65–4770	Shaft – Output	15	4	1
65–5250	Clip – Spring	15	16	1
66–6040	Key – Rocking R.H.	5	*	1
66–6050	Key – Rocking L.H.	5	10	1
66–7460	Bulb – Primer	12	25	1
76–0760	Key – Shift	15	14	2
76–0770	Collar – Shift	15	15	1
76–0780	Sleeve – Shift Key	15	13	1
82–8780	Retainer – Cable	5	3	1
92–1006	Spring Arm Ass'y – Front	3	6	2
92–1008	Knob – Height Adjust	3	5	4
92–1042	Wheel & Tire Assembly	5	13	2
92–1043	V–Belt	5	21	1
92–1057	Bolt – Shoulder	5	14	2
92–1078	Cam – Brake	17	10	1
92–1092	Handle – Upper	17	11	1
92–1093	Bail – Engine Control	17	21	1
92–1094	Bail – Stop Bracket	17	9	1
92–1099	Bolt – Shoulder	3	10	2
92–1604	Cap – Hub	3	11	4
92–1617	Bail – Control S.P.	17	6	1
92–1630	Fan – Mulching	6	22	1
92–2268	Screw – Handle	17	19	1
92–2928	Bracket – Cable Anchor	17	14	1
92–4856	Bolt – Shoulder	3	8	2
92–4921	Connecting Rod Assembly	10	9	1
92–4925	Piston & Ring Set	10	19	1
92–4927	Bearing Assembly	10	15	1
92–4935	Spring & Keeper	7	3	1
92–4944	Spring – Governor	12	21	1
92–4948	Gasket	13	5	2
92–5412	Stop – Pivot	17	7	1
92–5790	Pinion – Bevel	15	27	1
92–5791	Spacer	15	5	1
92–6371	Nozzle	12	14	1
92–6376	Air Vane & Shaft	12	24	1
92–6388	Plate – Muffler	6	28	1
92–6389	Pin	12	17	1
92–6518	Cable – Traction	16	6	1
92–6535	Cap – End	5	20	2
92–6537	Handle – Lower	16	1	1
92–6539	Spring Arm Assembly – R.H.	5	*	1
92–6540	Spring Arm Assembly– L.H.	5	18	1
92–7699	Bracket – Actuator	4	4	1
92–7736	Shield – Trailing	4	7	1
92–7746	Arm – Rear Height Adjust.	5	4	2
92–7748	Screw	4	3	2
92–7869	Gear Case Assembly	15	*	1
92–7869	Gear Case Assembly	4	6	1
92–7899	Bracket – Traction Cable	16	5	1
92–8630	Plate – Mulch	3	17	1
92–8853	Cover – Transmission	4	2	1
92–8917	Cover – Controls	16	10	1
92–8926	Control – Ground Speed	17	24	1
92–9561	Decal – Console Front	17	20	1
92–9665	Screw – Phillips Hd.	17	12	4
92–9673	Bolt – Shoulder	3	4	2
92–9691	Float Chamber	12	11	1
93–0290	Decal – Deck	3	14	1
93–0293	Decal – Recoil	6	15	1
93–1221	Shield – Heat	13	4	1
93–1225	Lever – Speed Adjust	12	3	1
93–1226	Bracket – Throttle Control	12	22	1
93–1231	Cover – Air Filter	13	2	1
93–1232	Bracket – Primer	12	8	1
93–1233	Gasket – Exhaust	10	33	1
93–1233	Gasket – Muffler	6	31	1
93–1239	Spring – Contact	10	23	1
93–3248	Cable – Control	17	25	1
93–3683	Cable – Throttle	17	3	1
93–4300	Harness – Wire	8	1	1
93–4300	Wire Harness – Lower	9	1	1
93–4301	Case Assembly	10	42	1
93–4320	Plug	12	4	2
93–4341	Body – Carburetor	12	7	1
93–7250	Decal – Warning	4	8	1
93–7383	Guide – Rope	17	15	1
94–1609	Cover – Wheel	5	16	2
94–1610	Grommet	3	15	3
94–1615	Decal – Warning	17	2	1
94–5704	Disc – Throttle	12	23	1
94–5710	Main Jet	12	13	1
94–5713	Crankshaft	10	11	1
94–5734	Short Block	11	*	1
94–5738	Carburetor Complete	12	*	1
94–6059	Wire Assembly	16	9	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
94–9164	Charger – Battery	16	*	1
95–1727	Screw – Engine	6	24	3
218–461	Nut	17	28	1
252–76	Bearing – Thrust	11	49	1
252–80	Washer – Thrust	11	50	1
252–98	Washer	14	4	1
321–4	Screw – Hex Hd. Cap	17	5	1
321–6	Screw – Hex Hd. Cap	11	44	1
321–51	Screw – Hex Hd. Cap	17	16	1
3230–29	Bolt – Carriage	16	4	2
3253–33	Washer – Lock	16	8	2
3254–5	Washer – Star	17	27	1
3255–7	Washer – Ext. Tooth Lock	11	47	1
3256–24	Washer	15	8	1
3272–10	Pin – Cotter	5	25	1
3285–19	Pin – Groove	15	1	1
3290–413	Washer – Belleville	3	7	2
3296–5	Nut	15	7	1
3296–39	Nut – Lock	3	13	2
3296–56	Nut – Lock	17	26	1
3296–73	Nut – Lock	17	8	3
32103–29	Nut – Wing	16	11	2
32144–53	Screw – Self Tapping	6	8	5
32144–70	Screw – Tapping	5	2	1
32144–85	Screw – Hex Hd Tapping	5	19	2

*Not Illustrated