FORM NO. 3319—210

LAWN-BOY®

COMMERCIAL SERIES SIDE DISCHARGE MOWER

MODEL NO. 11000—7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page
Housing Assembly	1
Engine Assembly	2
Handle Assembly	3
Engine Assembly	4–5
Starter Assembly	6
Carburetor Assembly	7
Air Filter Assembly	8
Numeric Parts Index	9–10

Accessories

Description	Model / Parts No.
Side Bagging Kit	Model No. 89814
Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800
Mulching Plate	Model No. 89864
Leaf Bag w/Chute	Model No. 89811

Copyright 1996 The Lawn–Boy Inc.
All Rights Reserved

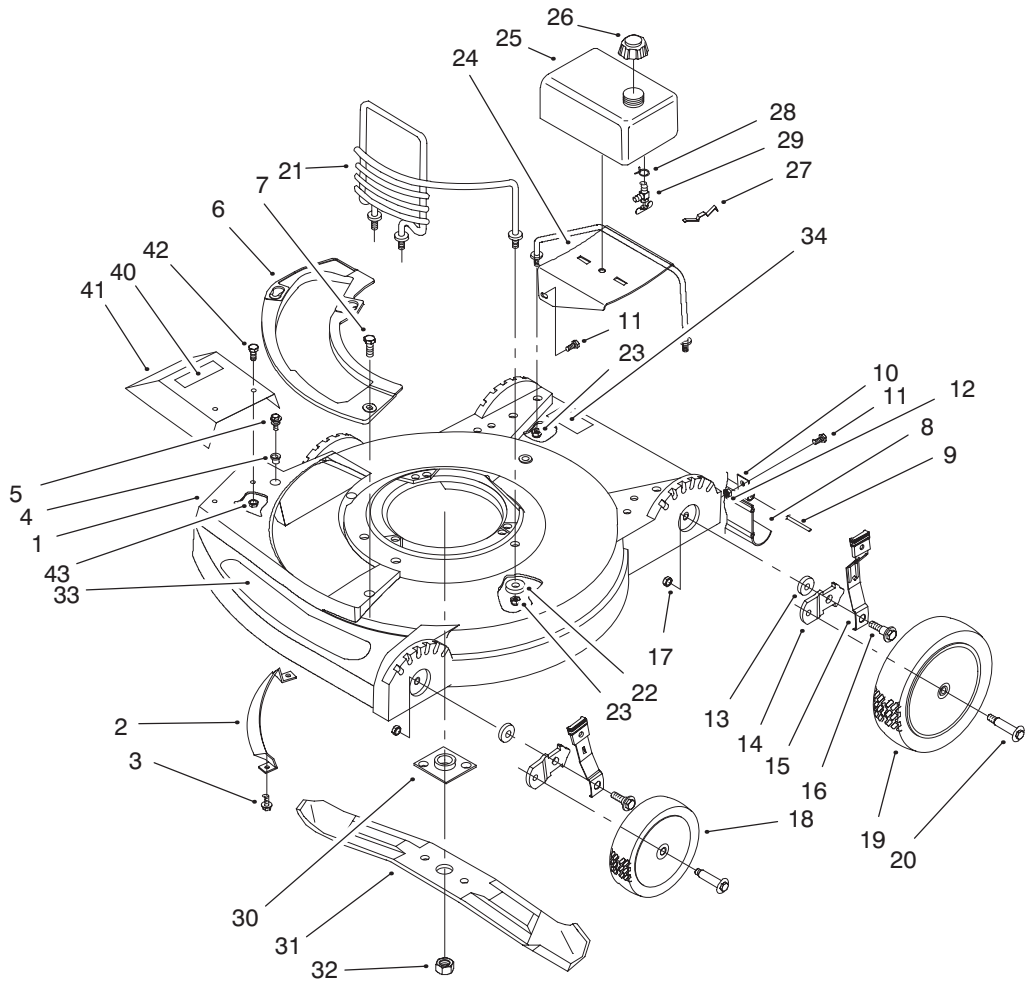


T–0XXX

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	16–9619	Housing Assembly (Incl. Ref. #34, & 40)	1
2	608175	Bar – Toe 21”	1
3	46–6811	Screw – Hex Washer Hd.	2
4	604604	Grommet – Plastic	3
5	614677	Screw – Sems Thr’d Form.	2
6	607560	Plate – Cover	1
7	49–2040	Screw – Hex Hd. Cap	1
8	611016	Shield – Trailing	1
9	608174	Rod – 21”	1
10	608161	Clamp – Rod	2
11	321–3	Screw – Hex Hd. Cap	3
12	3296–42	Nut – Hex Lock	2
13	608834	Washer	4
14	608833	Bracket – Height Wheel	4
15	153444	Knob & Spring Arm	4
16	610646	Bolt – Adjustment Height	4
17	3296–39	Nut – Lock	4
18	684159	Wheel & Tire	2
19	683464	Wheel & Tire Assembly	2

Ref. No.	Part No.	Description	No. Used
20	603567	Bolt – Wheel	4
21	93–7164	Guard – Engine Assembly	1
22	145875	Washer	1
23	3296–29	Nut – Lock	5
24	684583	Bracket – Tank	1
25	609829	Tank – Fuel	1
26	682755	Cap – Gas	1
27	609830	Spring	2
28	312387	Clamp – Hose	1
29	677052	Valve & Screen	1
30	677525	Plate & Collar Assembly	1
31	612543	Blade – 53cm	1
32	603164	Nut – Blade	1
33	92–8838	Decal – Deck 550C	1
34	93–6657	Decal – Danger	1
40	93–6667	Decal – Danger	2
41	93–7415	Guard – Plate	1
42	32105–15	Screw – Hex Hd. Cap	2
43	3296–42	Nut – lock	2

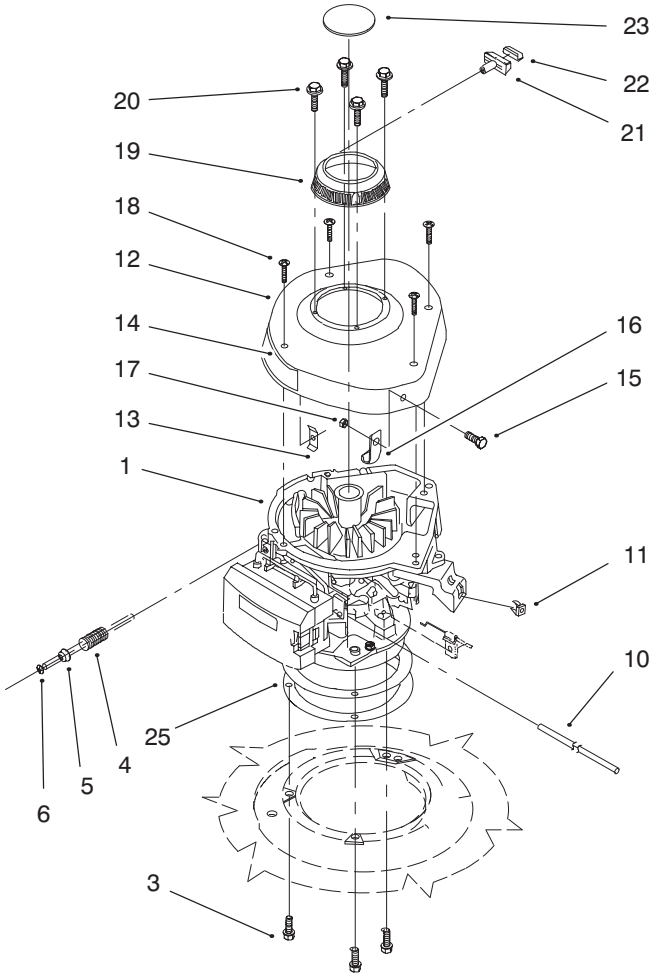


T–0XXX

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine Assembly	1
3	95–1727	Screw – Engine Mount	3
4	611214	Spring	1
5	611509	Actuator – Brake Lever	1
6	611213	Retainer	1
10	612784	Line – Gas	1
11	609900	Nut – Speed	1
12	683638	Shroud Assembly	1
13	145945	Retainer – Applique	3
14	612754	Applique	1
15	46–6811	Screw – Hex Washer Hd.	1

Ref. No.	Part No.	Description	No. Used
16	611504	Clamp	1
17	3296–42	Nut – Lock	1
18	611395	Screw	4
19	684622	Recoil Assembly	1
20	612428	Screw – Sems	4
21	612825	Handle – Starter	1
22	612824	Clip – Rope Insert	1
23	92–8830	Decal – Recoil	1
25	93–7153	Plate – Engine	2

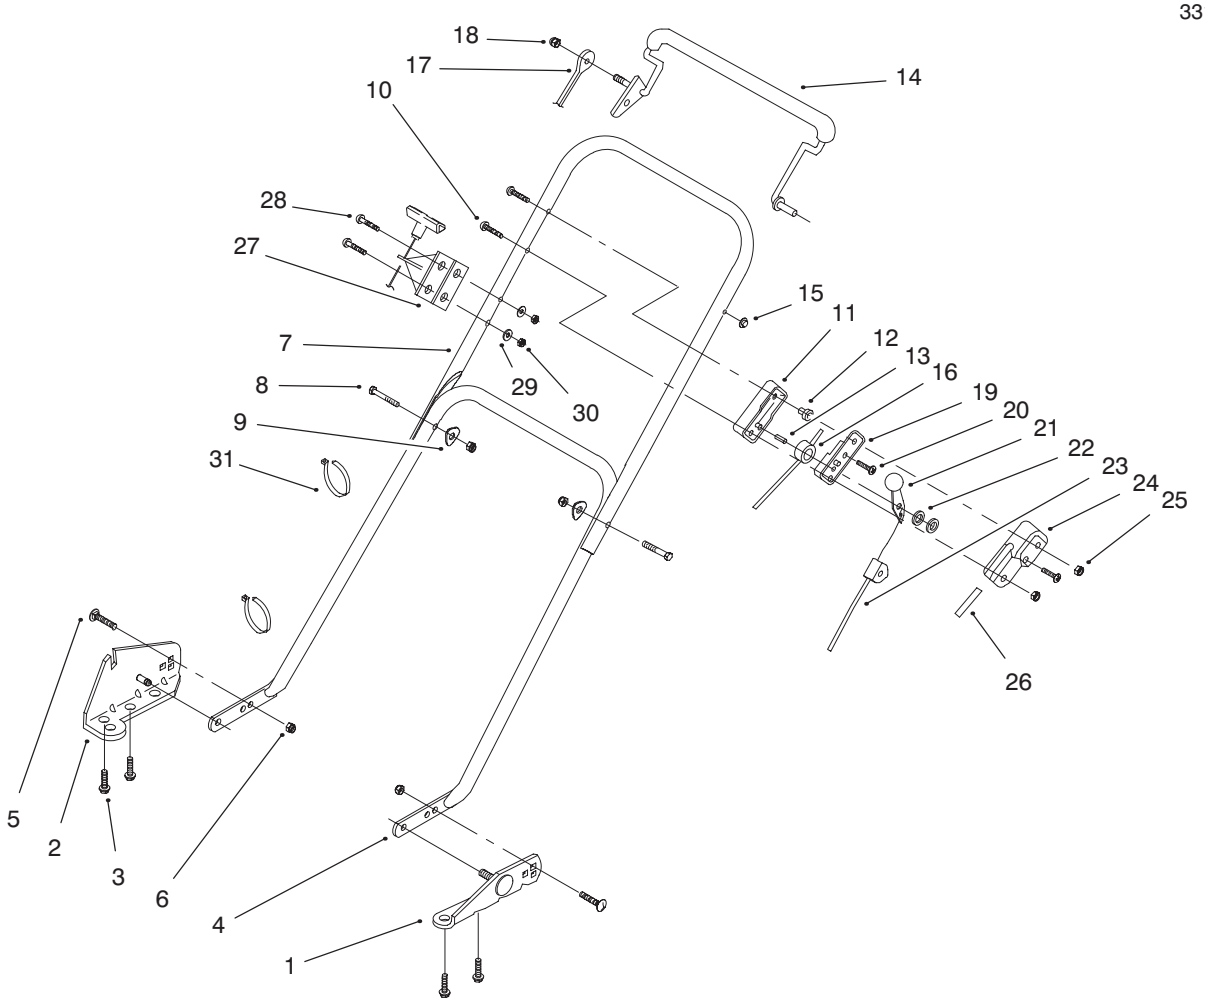


T–0XXX

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	684057	Bracket & Pin Assembly	1
2	684058	Bracket & Pin Assembly	1
3	607188	Screw	4
4	613048	Handle – Lower Section	1
5	800358	Bolt – Carriage	2
6	3296–29	Nut – Lock	4
7	614515	Handle – Top Section	1
8	322–9	Screw – Hex Hd. Cap	2
9	609739	Washer	2
10	611799	Screw	2
11	611777	Case – Control	1
12	611541	Column	1
13	611542	Pin	1
14	683478	Lever – Control	1
15	605546	Nut – Pal	1
16	612564	Pulley	1

Ref. No.	Part No.	Description	No. Used
17	93–3694	Cable – Control	1
18	612168	Nut – Acorn	1
19	612633	Case – Control	1
20	611543	Screw	2
21	93–4135	Lever & Knob Assembly	1
22	612586	Washer – Spring	2
23	93–3778	Cable – Throttle	1
24	612634	Case – Throttle	1
25	3296–12	Nut – Lock	2
26	92–8893	Decal – Throttle Control	1
27	153254	Guide – Rope	1
28	611233	Screw	2
29	602945	Washer – Plain	2
30	3296–42	Nut – Lock	2
31	614249	Strap – Tie	2


ENGINE ASSEMBLY

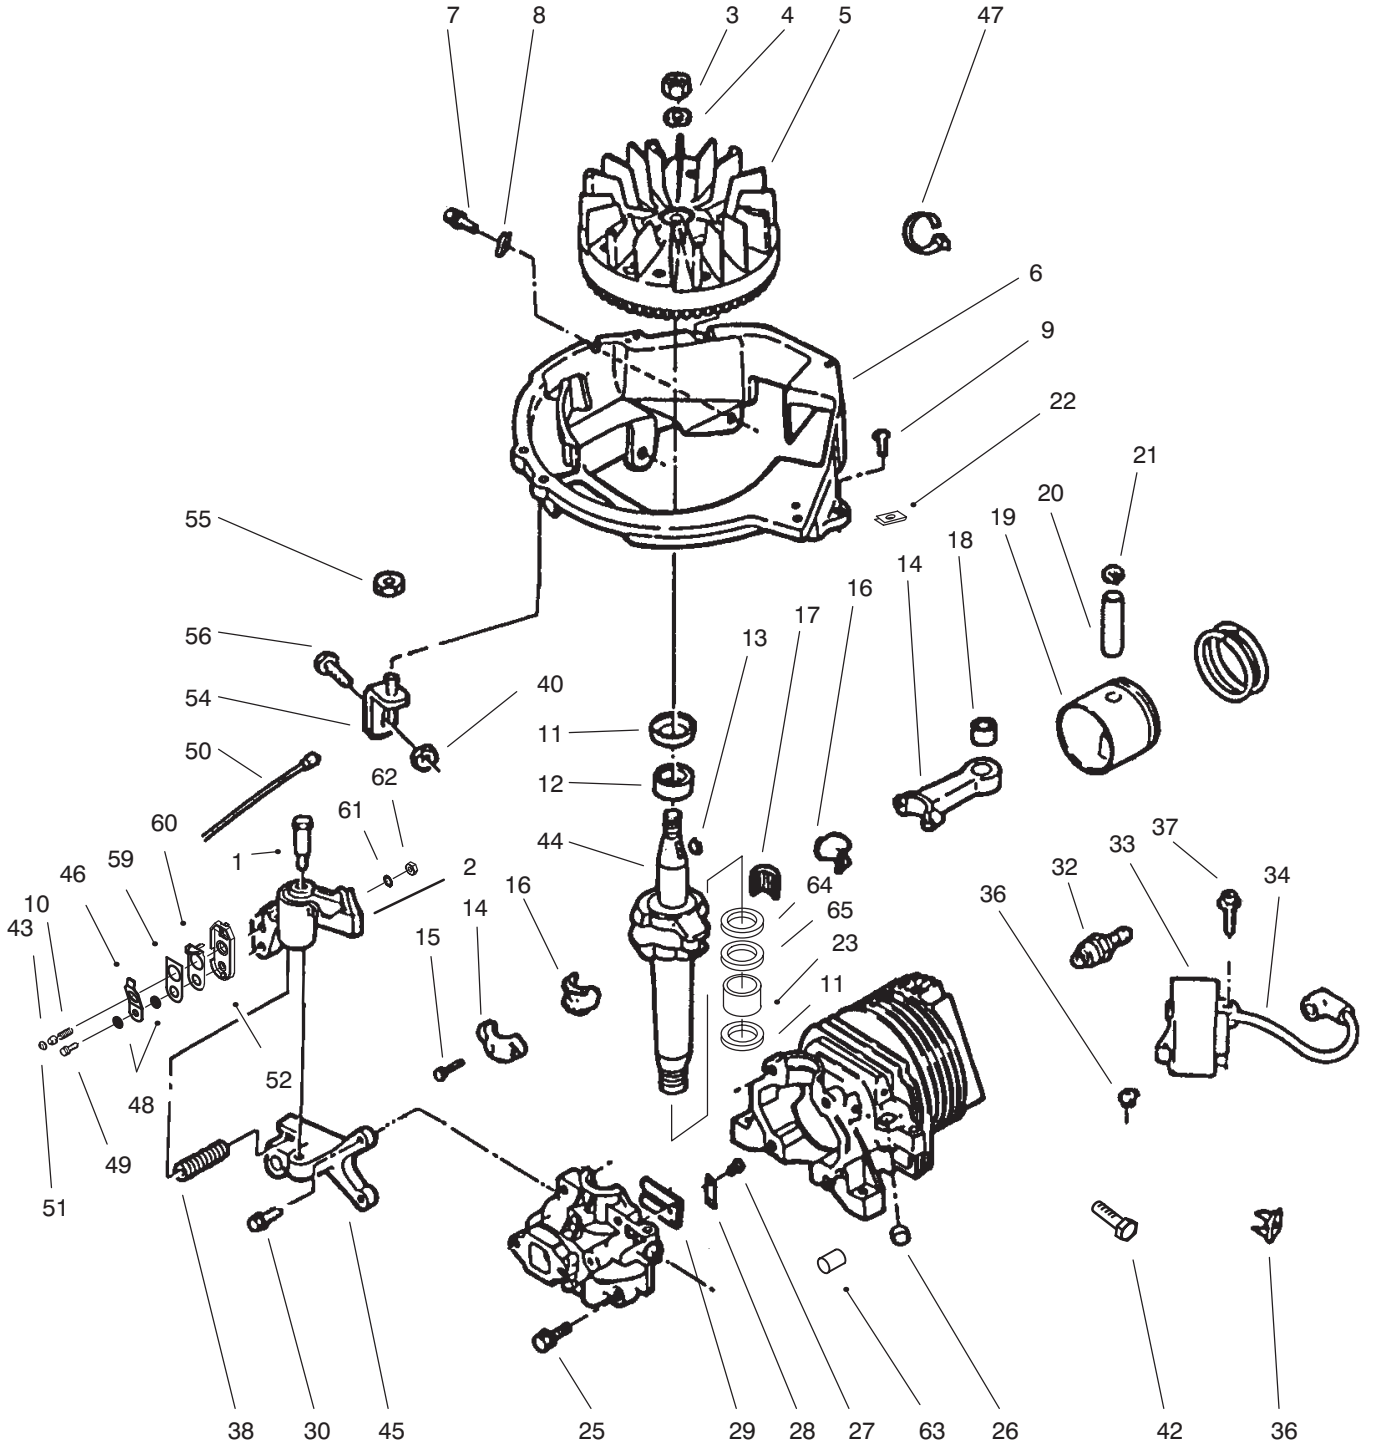

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	613529	Bolt– Shoulder	1
2	682683	Brake Assembly	1
3	130743	Nut – Flywheel	1
4	316959	Lockwasher	1
5	683580	Flywheel Assembly	1
6	612427	Base – Shroud	1
7	609947	Screw	3
8	611191	Clip – "J"	1
9	609808	Screw	1
10	611214	Spring – Cable Return	1
11	611396	Oil Seal	2
12	681830	Bearing – Main – Upper	1
13	607199	Key – Flywheel	1
*	92–4925	Piston & Connecting Rod Assembly (Inc. 14–22)	1
14	92–4921	Connecting Rod Assy. (Inc 15–18)	1
15	611393	Screw – Cap	2
16	677982	Liner – Pair	1
17	609754	Strip – Roller	1
18	92–4927	Bearing Assembly	1
19	92–4923	Piston & Ring Set (Inc 20–22)	1
20	606608	Wrist Pin	1
21	303712	Retaining Ring	2
22	609900	Nut – Speed	1
23	681831	Bearing – Main – Lower	1
25	613110	Screw – Cover to Crankcase	1
26	609123	Plug	4
27	612872	Screw – Reed to Crankcase Cover	2
28	602587	Plate – Reed Hold Down	1
29	602588	Reed	1
30	613233	Screw – Brake Mounting Bracket	2
32	614009	Spark Plug	1
33	683215	C. D. Ignition Module & Lead Assy (Incl. Ref. #34)	1
34	681678	High Tension Lead & Cover	1
36	605120	Grommet	2
37	607526	Screw – C. D. Mounting	2
38	611211	Spring – Brake	1
40	608311	Nut	1
42	614343	Screw	2
43	611509	Actuator – Brake Lever	1
44	94–5713	Crankshaft	1
45	611192	Bracket – Brake	1
46	93–1239	Spring	1
47	317893	Tie Strap	1
48	306407	Washer	2
49	321–6	Screw – Hex Hd. Cap	1
50	683821	Lead Assembly	1
51	611213	Retainer	1
52	93–1240	Case – Switch	1
54	683581	Brace Assembly	1
55	602315	Nut	1
56	603014	Bolt	1
59	612842	Shield	1
60	612841	Plate – Contact	1
61	3255–7	Washer – Lock	1
62	146254	Nut	1
63	609629	Dowel	1
64	252–76	Bearing – Thrust	1
65	252–80	Washer – Thrust	1
*	94–5734	Short Block Assembly	1

*Not Illustrated

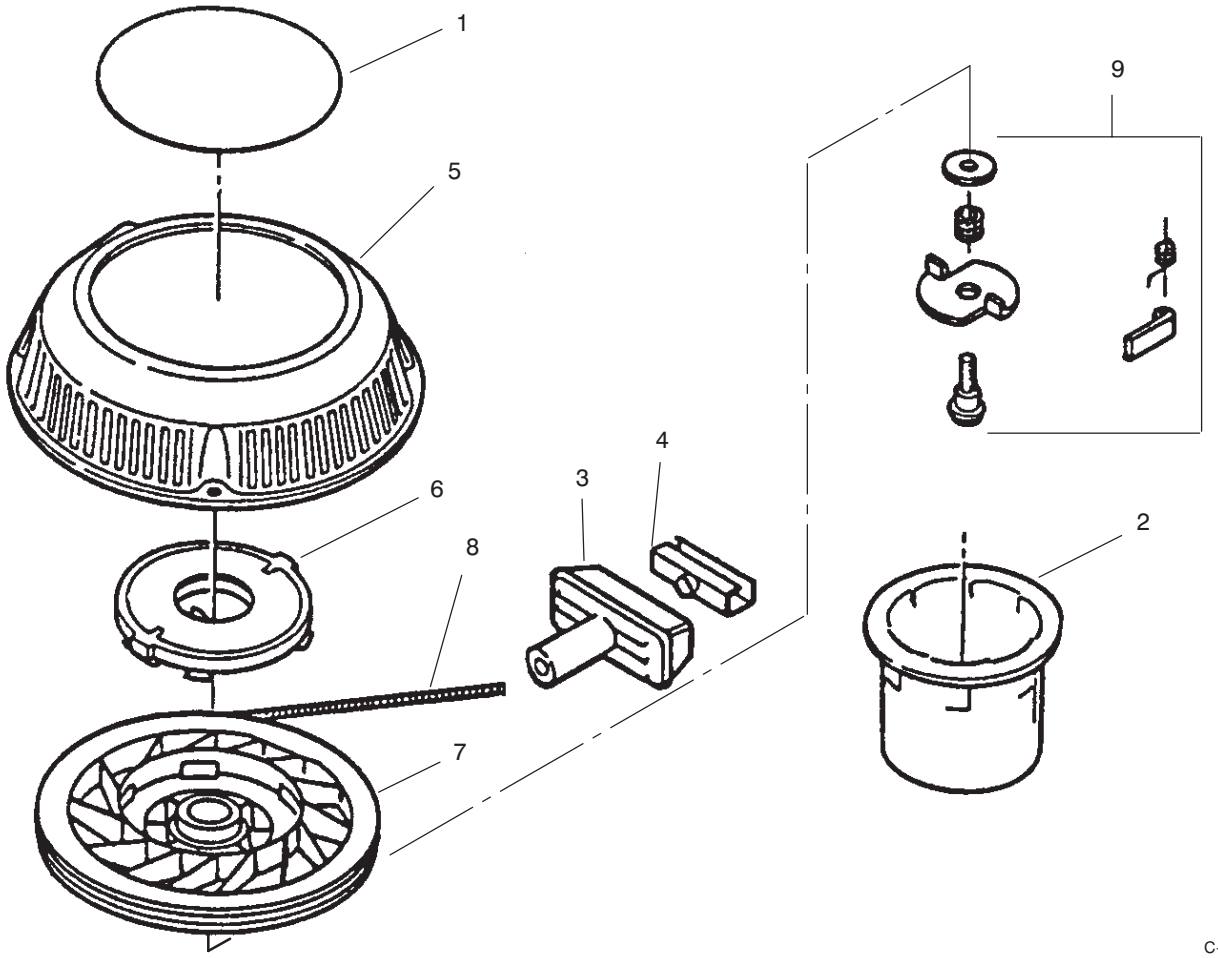


C–1406

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–8830	Decal	1
2	612949	Hub – Starter	1
3	612825	Handle – Starter	1
4	612824	Insert – Clip, Rope	1
5	684567	Housing – Starter	1
6	92–4935	Recoil Spring & Keeper	1

Ref. No.	Part No.	Description	No. Used
7	612950	Pulley	1
8	612432	Rope	1
9	683899	Assembly – Dog Kit	1
*	612428	Screw–Sems	4
*	684622	Assembly – Starter (Inc. Ref. No. 5–9)	1

*Not Illustrated

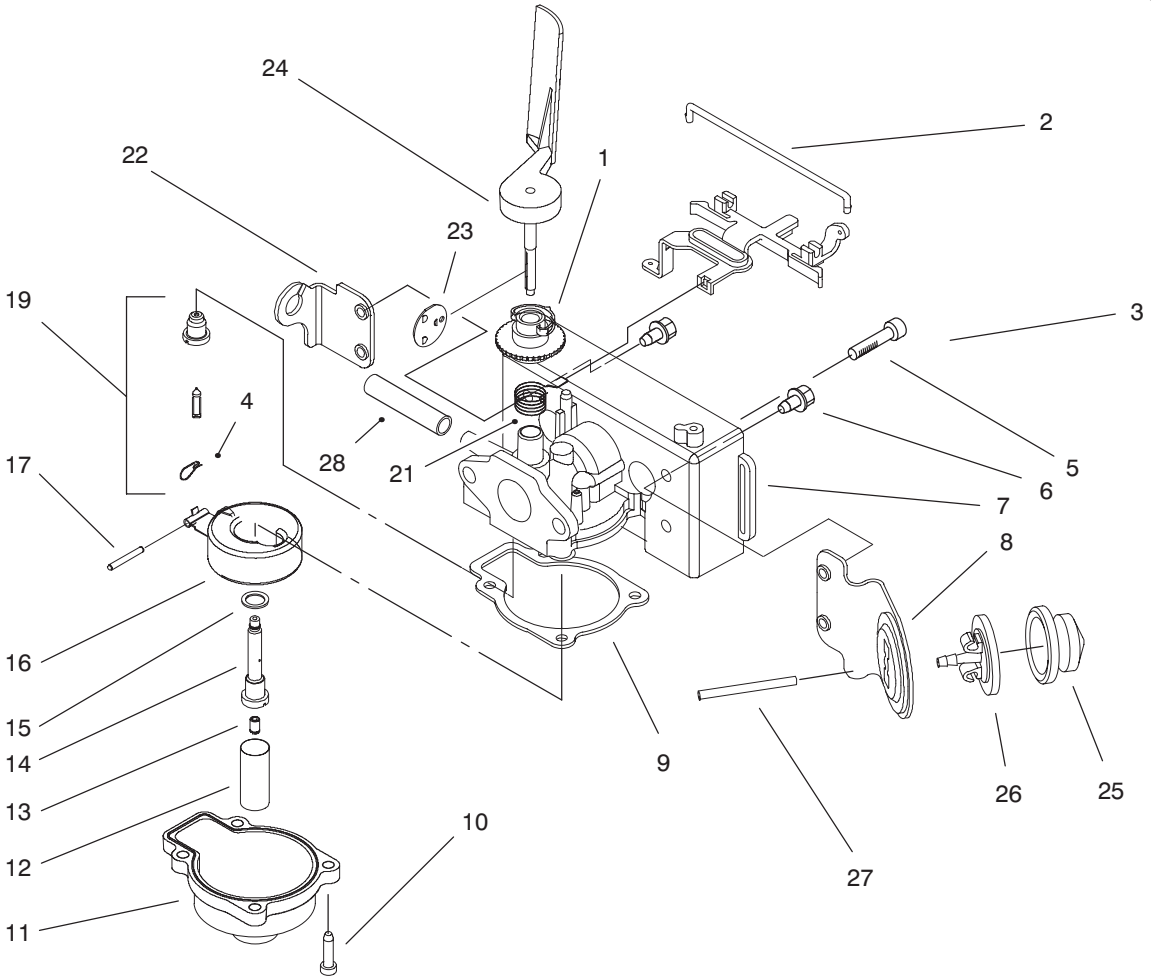

C–2295A


CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93–1225	Lever – Speed Adjust	1
4	603145	Spring	1
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93–4341	Body – Carburetor	1
8	93–1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92–9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	94–5710	Main Jet	1
14	92–6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
19	678278	Float, Valve, & Body Ass'y (Incl. Ref. #4)	1
21	92–4944	Spring – Governor	1
22	93–1226	Bracket – Throttle Control	1
23	94–5704	Disc – Throttle	1
24	92–6376	Air Vane & Shaft	1
25	66–7460	Bulb – Primer	1
26	44–2750	Body – Primer	1
27	44–3172	Hose – Primer	1
*	94–5738	Carburetor Complete	1
28	612784	Line – Gas	1

*Not Illustrated

3319–210

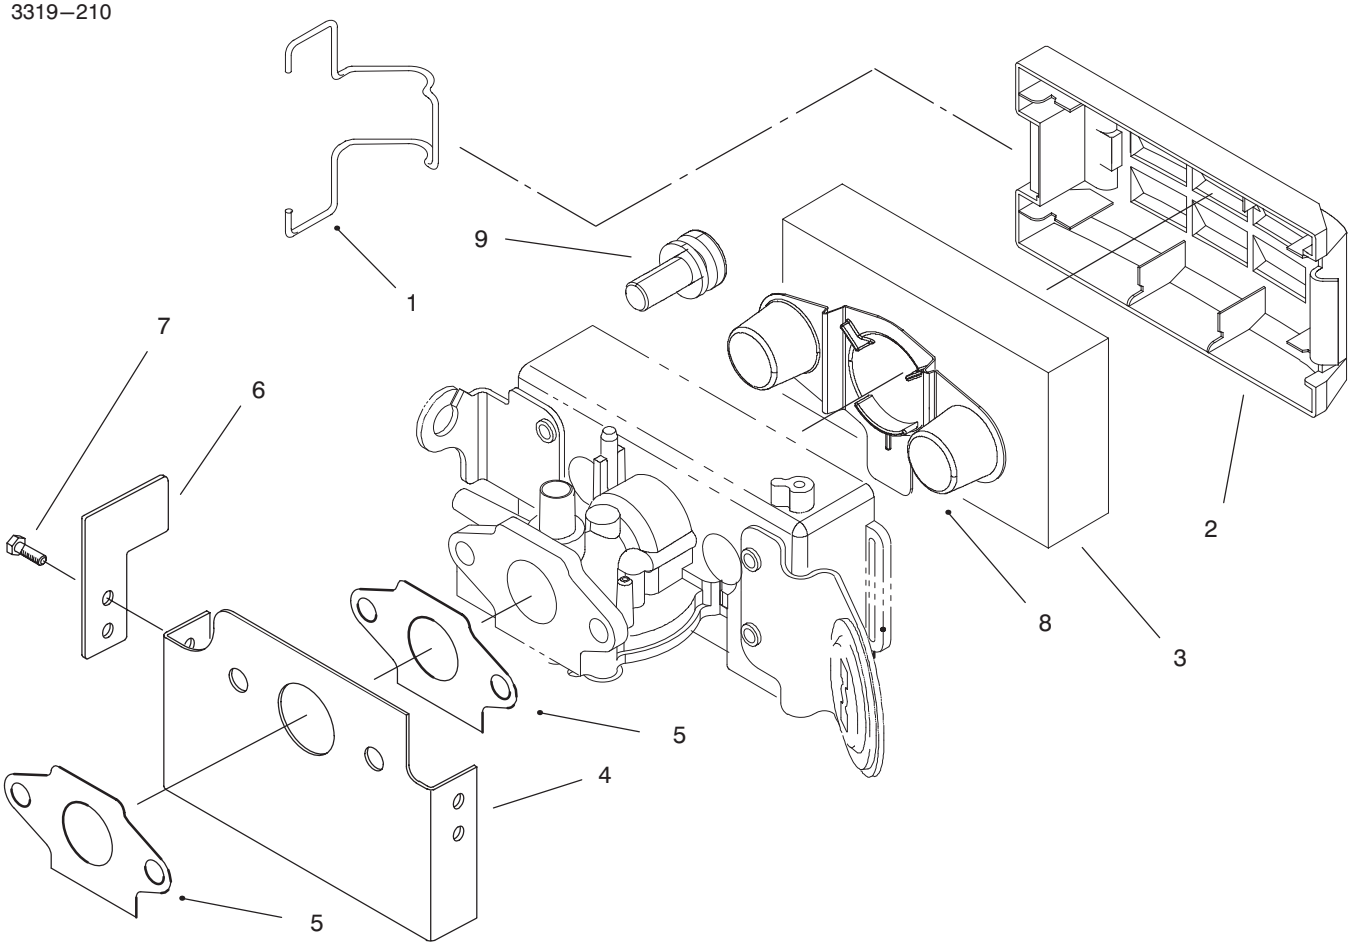

C–2296A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1
4	93–4315	Shield – Carburetor (Int'l)	1
5	92–4948	Gasket – Carb.	2

Ref. No.	Part No.	Description	No. Used
6	93–4317	Shield – Governor F (Int'l)	1
7	613269	Screw	2
8	93–4320	Shield – Fuel	1
9	609482	Screw	2

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut – Flywheel	5	3	1
145875	Washer	1	22	1
145945	Retainer – Applique	2	13	3
146254	Nut	5	62	1
153254	Guide – Rope	3	27	1
153444	Knob & Spring Arm	1	15	4
303712	Retaining Ring	5	21	2
306407	Washer	5	48	2
312387	Clamp – Hose	1	28	1
316959	Lockwasher	5	4	1
317893	Tie Strap	5	47	1
602315	Nut	5	55	1
602587	Plate – Reed Hold Down	5	28	1
602588	Reed	5	29	1
602850	Gasket – Float Chamber	7	9	1
602945	Washer – Plain	3	29	2
603014	Bolt	5	56	1
603145	Spring	7	4	1
603164	Nut – Blade	1	32	1
603567	Bolt – Wheel	1	20	4
604604	Grommet – Plastic	1	4	3
605120	Grommet	5	36	2
605546	Nut – Pal	3	15	1
606608	Wrist Pin	5	20	1
607188	Screw	3	3	4
607199	Key – Flywheel	5	13	1
607526	Screw – C. D. Mounting	5	37	2
607560	Plate – Cover	1	6	1
608161	Clamp – Rod	1	10	2
608174	Rod – 21	1	9	1
608175	Bar – Toe 21	1	2	1
608311	Nut	5	40	1
608833	Bracket – Height Wheel	1	14	4
608834	Washer	1	13	4
608850	Screw	7	10	4
609123	Plug	5	26	4
609482	Screw	8	9	2
609482	Screw – Pan Hd. Sems	7	5	2
609493	Element – Air Filter	8	3	1
609629	Dowel	5	63	1
609739	Washer	3	9	2
609754	Strip – Roller	5	17	1
609808	Screw	5	9	1
609829	Tank – Fuel	1	25	1
609830	Spring	1	27	2
609900	Nut – Speed	2	11	1
609900	Nut – Speed	5	22	1
609947	Screw	5	7	3
610165	Retainer	7	2	1
610383	Retainer – Cover	8	1	1
610646	Bolt – Adjustment Height	1	16	4
610834	Collar – Adjustment	7	1	1
611016	Shield – Trailing	1	8	1
611071	Filter – Fuel	7	12	1
611191	Clip – J	5	8	1
611192	Bracket – Brake	5	45	1
611211	Spring – Brake	5	38	1
611213	Retainer	2	6	1
611213	Retainer	5	51	1
611214	Spring	2	4	1
611214	Spring – Cable Return	5	10	1
611233	Screw	3	28	2
611393	Screw – Cap	5	15	2
611395	Screw	2	18	4
611396	Oil Seal	5	11	2
611504	Clamp	2	16	1
611509	Actuator – Brake Lever	2	5	1
611509	Actuator – Brake Lever	5	43	1
611541	Column	3	12	1
611542	Pin	3	13	1
611543	Screw	3	20	2
611777	Case – Control	3	11	1
611799	Screw	3	10	2
612168	Nut – Acorn	3	18	1
612383	Washer	7	15	1
612427	Base – Shroud	5	6	1
612428	Screw – Sems	2	20	4
612428	Screw–Sems	6	*	4
612432	Rope	6	8	1
612543	Blade – 53cm	1	31	1
612564	Pulley	3	16	1
612586	Washer – Spring	3	22	2
612633	Case – Control	3	19	1
612634	Case – Throttle	3	24	1
612754	Applique	2	14	1
612784	Line – Gas	2	10	1
612784	Line – Gas	7	28	1
612824	Clip – Rope Insert	2	22	1
612824	Insert – Clip, Rope	6	4	1
612825	Handle – Starter	2	21	1
612825	Handle – Starter	6	3	1
612841	Plate – Contact	5	60	1
612842	Shield	5	59	1
612872	Screw – Reed to Crankcase	5	27	2
612949	Hub – Starter	6	2	1
612950	Pulley	6	7	1
613048	Handle – Lower Section	3	4	1
613110	Screw – Cover to	5	25	1
613233	Screw – Brake Mounting	5	30	2
613269	Screw	7	6	4
613269	Screw	8	7	2
613529	Bolt– Shoulder	5	1	1
614009	Spark Plug	5	32	1
614249	Strap – Tie	3	31	2
614343	Screw	5	42	2
614515	Handle – Top Section	3	7	1
614677	Screw – Sems Thr'd Form.	1	5	2
677052	Valve & Screen	1	29	1
677525	Plate & Collar Assembly	1	30	1
677982	Liner – Pair	5	16	1
678113	Float & Arm Assembly	7	16	1
678278	Float, Valve, & Body Ass'y	7	19	1
681678	High Tension Lead & Cover	5	34	1
681830	Bearing – Main – Upper	5	12	1
681831	Bearing – Main – Lower	5	23	1
682683	Brake Assembly	5	2	1
682755	Cap – Gas	1	26	1
683215	C. D. Ignition Module &	5	33	1
683464	Wheel & Tire Assembly	1	19	2
683478	Lever – Control	3	14	1
683580	Flywheel Assembly	5	5	1
683581	Brace Assembly	5	54	1
683638	Shroud Assembly	2	12	1
683821	Lead Assembly	5	50	1
683899	Assembly – Dog Kit	6	9	1
684057	Bracket & Pin Assembly	3	1	1
684058	Bracket & Pin Assembly	3	2	1
684159	Wheel & Tire	1	18	2

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
684567	Housing – Starter	6	5	1
684583	Bracket – Tank	1	24	1
684622	Assembly – Starter	6	*	1
684622	Recoil Assembly	2	19	1
800358	Bolt – Carriage	3	5	2
16–9619	Housing Assembly	1	1	1
44–2750	Body – Primer	7	26	1
44–3172	Hose – Primer	7	27	1
46–6811	Screw – Hex Washer Hd.	1	3	2
46–6811	Screw – Hex Washer Hd.	2	15	1
49–2040	Screw – Hex Hd. Cap	1	7	1
66–7460	Bulb – Primer	7	25	1
92–4921	Connecting Rod Assy.	5	14	1
92–4923	Piston & Ring Set	5	19	1
92–4925	Piston & Connecting Rod	5	*	1
92–4927	Bearing Assembly	5	18	1
92–4935	Recoil Spring & Keeper	6	6	1
92–4944	Spring – Governor	7	21	1
92–4948	Gasket – Carb.	8	5	2
92–6371	Nozzle	7	14	1
92–6376	Air Vane & Shaft	7	24	1
92–6389	Pin	7	17	1
92–8830	Decal	6	1	1
92–8830	Decal – Recoil	2	23	1
92–8838	Decal – Deck 550C	1	33	1
92–8893	Decal – Throttle Control	3	26	1
92–9691	Float Chamber	7	11	1
93–1225	Lever – Speed Adjust	7	3	1
93–1226	Bracket – Throttle Control	7	22	1
93–1231	Cover – Air Filter	8	2	1
93–1232	Bracket – Primer	7	8	1
93–1239	Spring	5	46	1
93–1240	Case – Switch	5	52	1
93–3694	Cable – Control	3	17	1
93–3778	Cable – Throttle	3	23	1
93–4135	Lever & Knob Assembly	3	21	1
93–4315	Shield – Carburetor (Int'l)	8	4	1
93–4317	Shield – Governor F (Int'l)	8	6	1
93–4320	Shield – Fuel	8	8	1
93–4341	Body – Carburetor	7	7	1
93–6657	Decal – Danger	1	34	1
93–6667	Decal – Danger	1	40	2
93–7153	Plate – Engine	2	25	2
93–7164	Guard – Engine Assembly	1	21	1
93–7415	Guard – Plate	1	41	1
94–5704	Disc – Throttle	7	23	1
94–5710	Main Jet	7	13	1
94–5713	Crankshaft	5	44	1
94–5734	Short Block Assembly	5	*	1
94–5738	Carburetor Complete	7	*	1
95–1727	Screw – Engine Mount	2	3	3
252–76	Bearing – Thrust	5	64	1
252–80	Washer – Thrust	5	65	1
321–3	Screw – Hex Hd. Cap	1	11	3
321–6	Screw – Hex Hd. Cap	5	49	1
322–9	Screw – Hex Hd. Cap	3	8	2
3255–7	Washer – Lock	5	61	1
3296–12	Nut – Lock	3	25	2
3296–29	Nut – Lock	3	6	4
3296–29	Nut – Lock	1	23	5
3296–39	Nut – Lock	1	17	4
3296–42	Nut – Hex Lock	1	12	2
3296–42	Nut – Lock	2	17	1
3296–42	Nut – Lock	3	30	2
3296–42	Nut – lock	1	43	2
32105–15	Screw – Hex Hd. Cap	1	42	2

*Not Illustrated