FORM NO. 3319—206

LAWN-BOY®

53cm SIDE DISCHARGE WALK—BEHIND MOWER

MODEL NO. 11001—7900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	1	Engine Assembly	7–8
Gearcase & Wheel Assembly	2	Carburetor Assembly	9
Gear Case Assembly	3	Air Filter Assembly	10
Engine Assembly	4	Numeric Parts Index	11–13
Handle Assembly	5	Maintenance	14
Starter Assembly	6		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Mulch Plate	Model No. 89864

Copyright 1996 The Lawn–Boy Inc.
All Rights Reserved

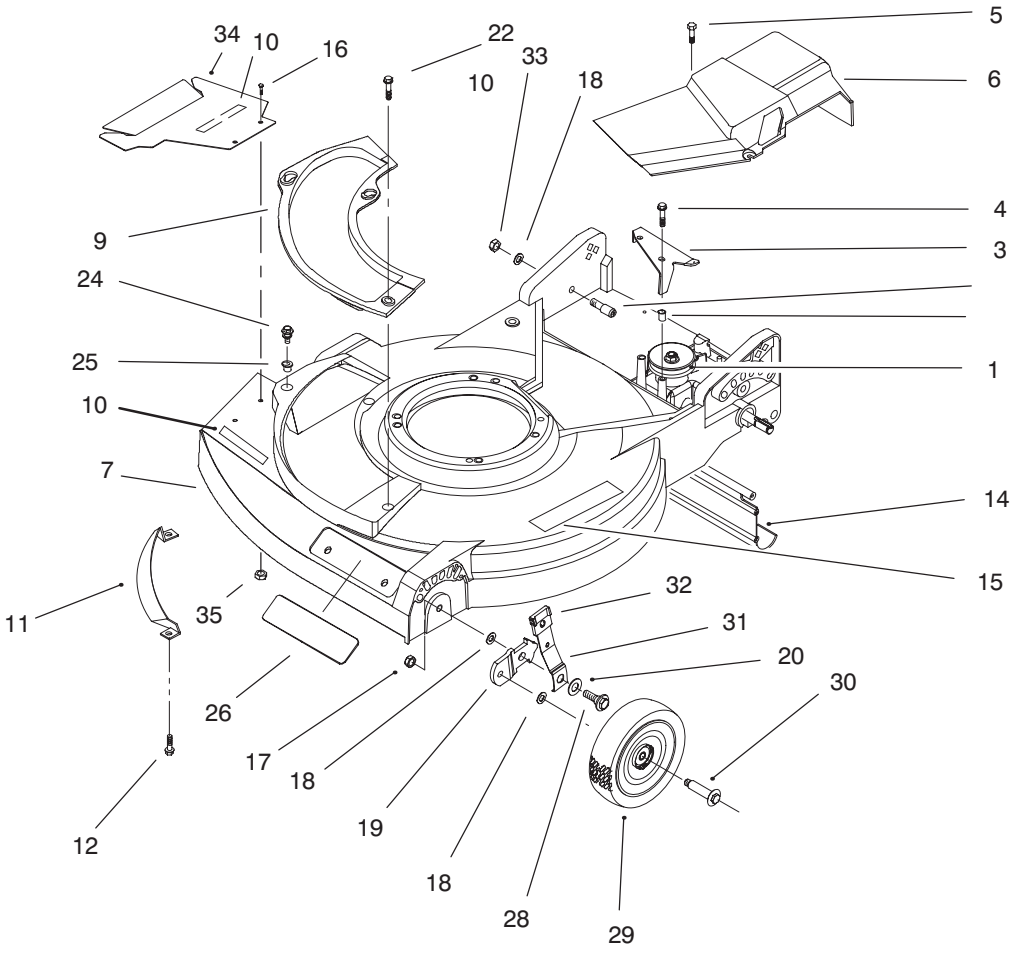


C–2512

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–7869	Gear Case Assembly	1
2	256–251	Bushing – Spacer	2
3	92–7699	Bracket – Actuator	1
4	92–7748	Screw	2
5	12–5450	Screw – Thr'd Form	2
6	92–8852	Cover – Drive	1
7	94–9438	Housing (Incl. Ref. #10, & 15)	1
9	607560	Plate – Cover	1
10	93–7009	Decal – Danger	2
11	608175	Toe Bar	1
12	46–6811	Screw – Hex Washer Hd.	2
14	92–7736	Shield – Trailing	1
15	93–4105	Decal – Warning	1
16	32105–15	Screw – Hex Hd. Cap	2
17	3296–39	Nut – Lock	2
18	40–1940	Washer	2

Ref. No.	Part No.	Description	No. Used
19	614637	Bracket – Wheel Height Adj.	2
20	3290–413	Washer – Belleville	2
21	92–9673	Bolt – Shoulder	2
22	49–2040	Screw – Hex Hd. Cap	1
24	614677	Screw – Sems Thr'd Form	2
25	94–1610	Grommet	3
26	94–6302	Decal	1
27	40–1940	Washer	2
28	92–4856	Bolt – Shoulder	2
29	684159	Wheel & Tire Assembly – 6"	2
30	603567	Bolt – Wheel	2
31	92–1006	Spring Arm Ass'y – Front	2
32	92–1008	Knob – Height Adjust	4
33	610358	Nut – Lock	2
34	93–7415	Guard – Plate	1
35	3296–42	Nut – Lock	2

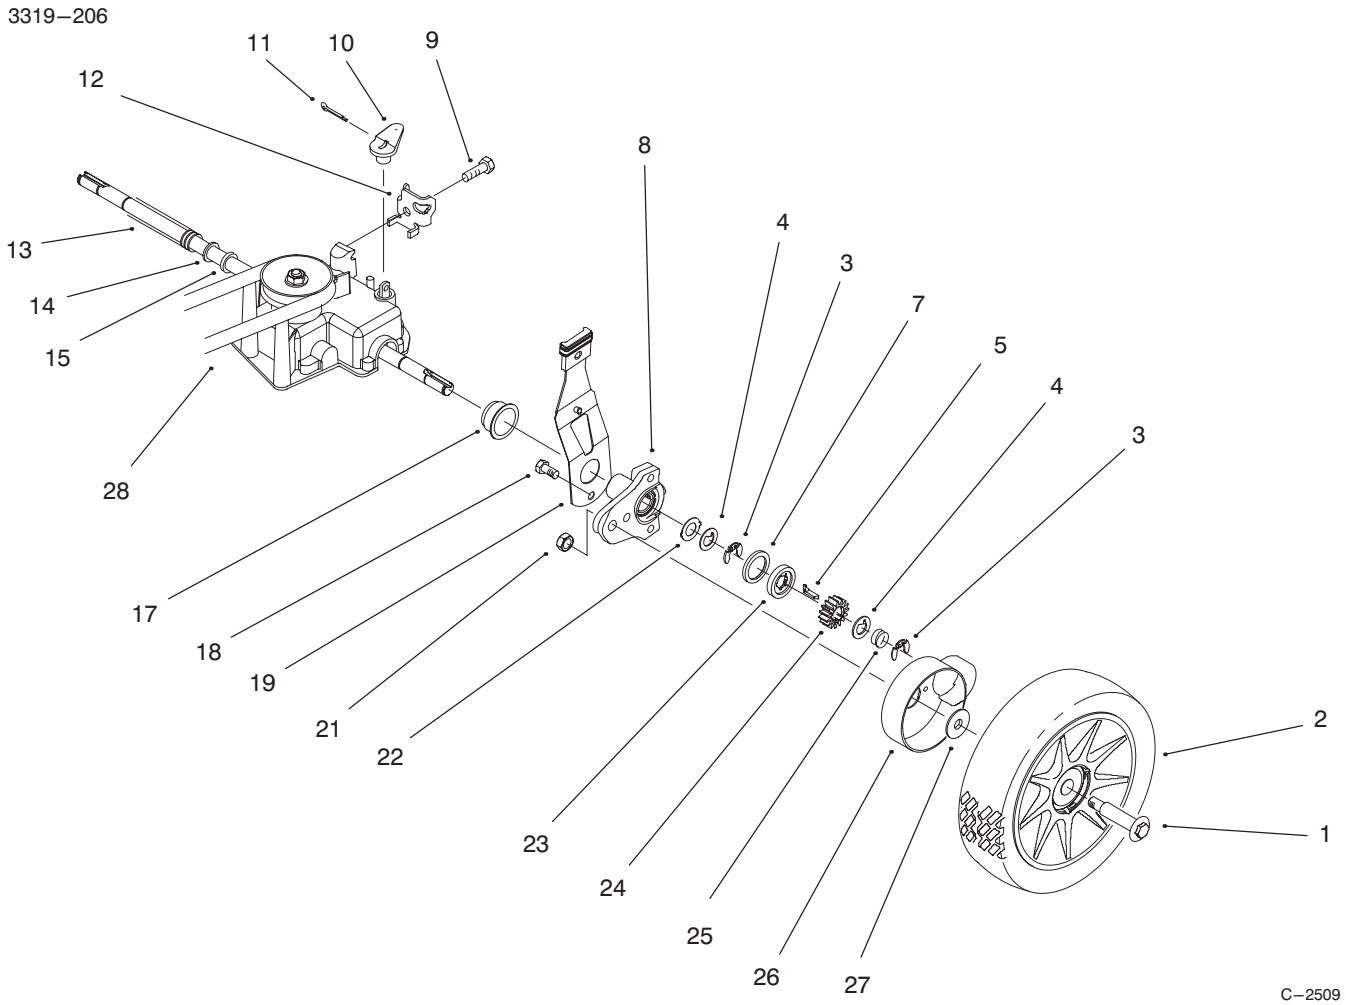


GEARCASE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–1057	Bolt – Shoulder	2
2	95–1714	Wheel & Tire Ass'y – 8"	2
3	65–2720	Ring – Retaining	4
4	65–4740	Washer – Thrust Keyed	4
5	66–6050	Key – Rocking L.H.	1
*	66–6040	Key – Rocking R.H.	1
7	65–4710	Ring – Friction	2
8	92–7746	Height Adj. Arm Ass'y – Rear	2
9	32144–70	Screw – Tapping	1
10	60–8821	Lever – Shift	1
11	3272–10	Pin – Cotter	1
12	82–8780	Retainer – Cable	1
13	24–7920	Cover – Drive Shaft	1
14	303259	Washer	1

Ref. No.	Part No.	Description	No. Used
15	605255	Washer – Flat	1
17	92–6535	Cap – End	2
18	32144–85	Screw – Hex Hd. Cap	2
19	92–6540	Spring Arm Ass'y – Rear L.H.	1
*	92–6539	Spring Arm Ass'y – Rear R.H.	1
21	610358	Nut – Lock	2
22	65–4730	Washer – Thrust	2
23	65–4760	Washer	2
24	65–4750	Gear – Pinion	2
25	65–4720	Spring – Compression	2
26	94–1609	Cover – Wheel	2
27	614426	Washer – Stepped	2
28	92–1043	V–Belt	1

*Not Illustrated

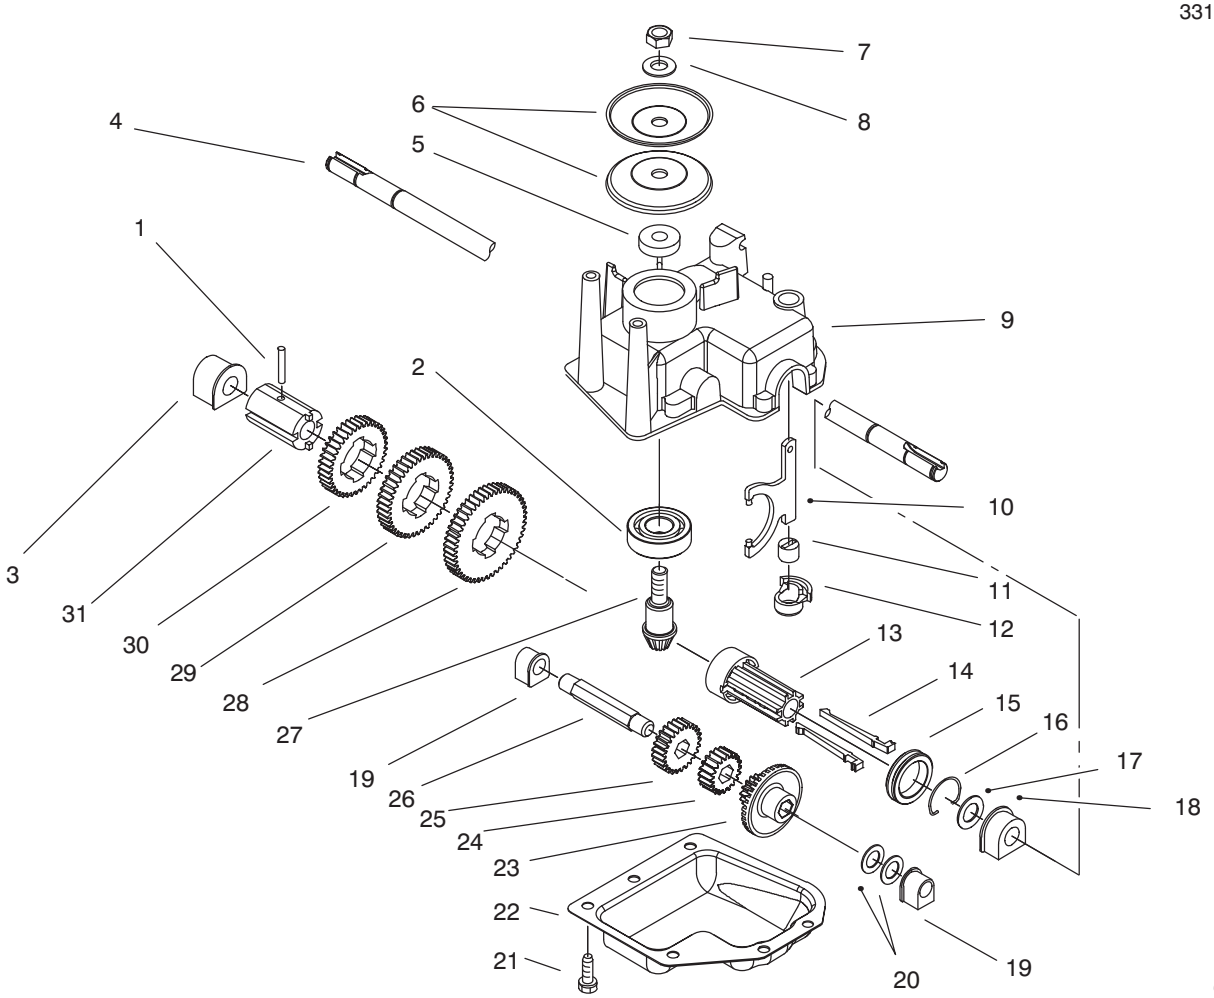


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3285–19	Pin – Groove	1
2	38–7820	Bearing – Ball	1
3	60–8850	Bushing – Output	1
4	65–4770	Shaft – Output	1
5	92–5791	Spacer	1
6	60–8840	Pulley – Half	2
7	3296–5	Nut	1
8	3256–24	Washer	1
9	60–8710	Gearcase – Upper	1
10	60–8870	Yoke – Shift	1
11	29–9570	Bushing – Yoke	1
12	60–8810	Retainer – Shift Fork	1
13	76–0780	Sleeve – Shift Key	1
14	76–0760	Key – Shift	2
15	76–0770	Collar – Shift	1
16	65–5250	Clip – Spring	1

Ref. No.	Part No.	Description	No. Used
17	36–4780	Washer	1
18	60–8770	Bushing – Output	1
19	60–8750	Bushing – Inter. Shaft	2
20	36–4791	Washer – Thrust	2
21	49–2040	Screw	6
22	60–8730	Gear Case Cover	1
23	55–3760	Pinion – 15 Tooth	1
24	55–3780	Pinion – 20 Tooth	1
25	55–3800	Pinion – 25 Tooth	1
26	60–8800	Shaft – Intermediate	1
27	92–5790	Pinion – Bevel	1
28	55–3770	Gear – 49 Tooth	1
29	55–3790	Gear – 44 Tooth	1
30	55–3810	Gear – 39 Tooth	1
31	60–8790	Sleeve – Gear	1
*	92–7869	Gear Case Complete	1

*Not Illustrated

3319–206

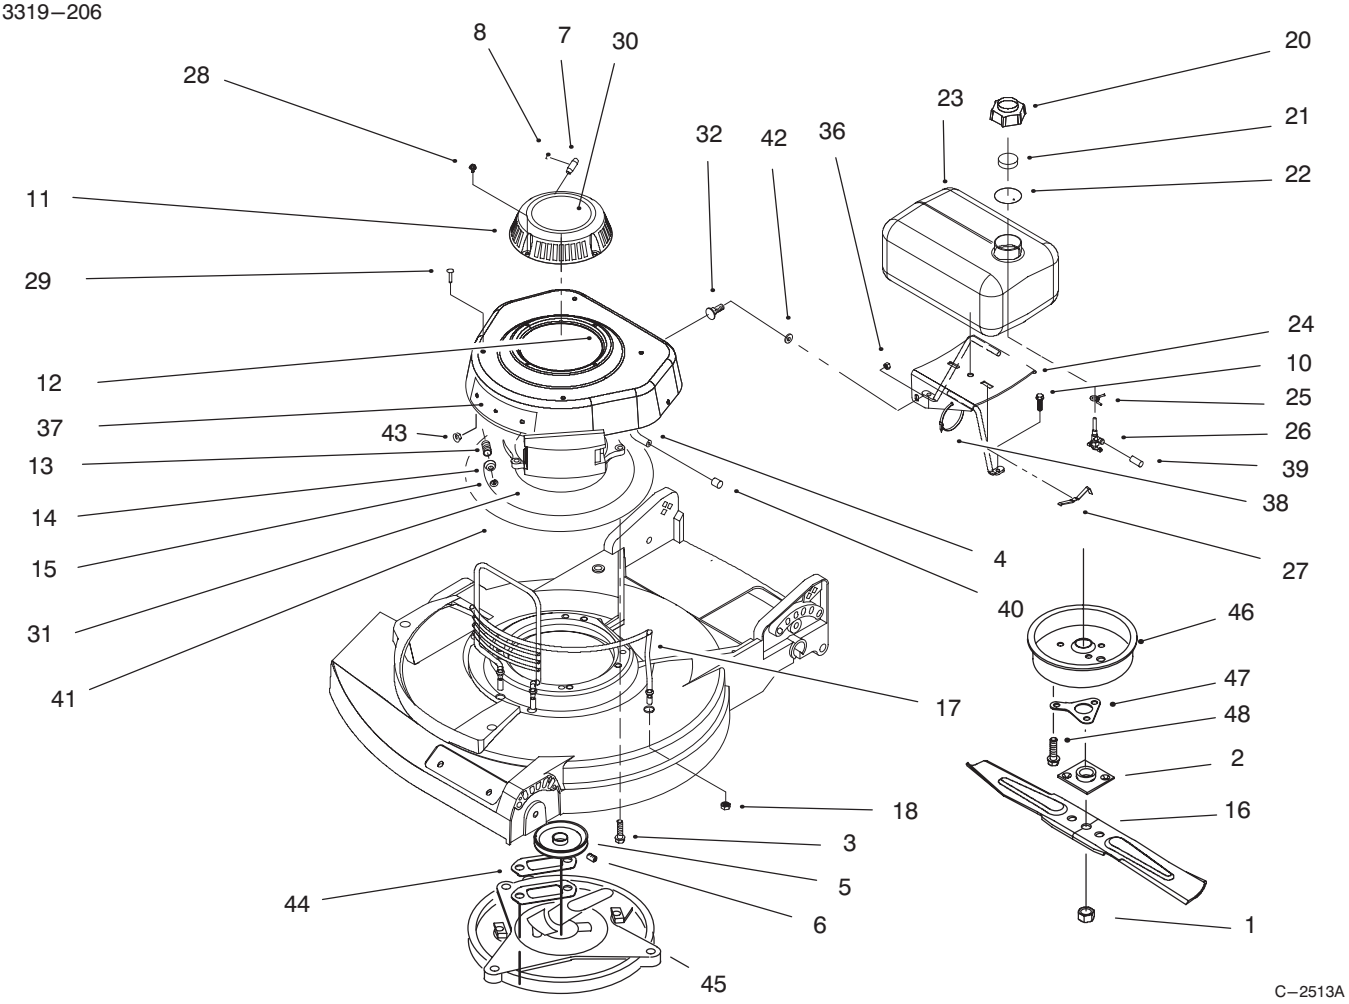


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	603164	Nut – Blade	1
2	677525	Plate & Collar Assembly	1
3	95–1727	Screw – Engine Mount	3
4	612784	Hose – Gas	1
5	609976	Pulley	1
6	610345	Screw – Set	1
7	47–2480	Rope – Stop	1
†8		Staple	1
10	32144–3	Screw – Hex Washer Hd.	2
11	684622	Housing – Starter	1
12	683638	Shroud Assembly	1
13	611214	Spring	1
14	611509	Actuator – Brake Lever	1
15	611213	Retainer	1
16	612543	Blade – 53cm	1
17	94–1618	Guard – Engine	1
18	3296–29	Nut – Lock	3
20	611327	Cap – Fuel	1
21	609150	Foam – Baffle	1
22	607213	Gasket	1
23	145476	Tank – Fuel	1
24	94–4252	Leg & Saddle Assembly	1

Ref. No.	Part No.	Description	No. Used
25	312387	Clamp – Hose	1
26	677052	Valve & Screen	1
27	609830	Spring	2
28	612428	Screw – Sems	4
29	32144–53	Screw – Thr'd Form	4
30	92–8830	Decal – Recoil	1
31		Engine – 2 Cycle	1
32	3229–22	Screw – Carriage	1
36	602315	Nut – Lock	1
37	612754	Applique	1
38	614249	Tie – Strap	1
39	2410–77	Plug – Fuel Valve	1
40	2410–76	Plug – Fuel Line	1
41	93–7153	Plate – Engine	1
42	3256–1	Washer – Flat	1
43	145945	Retainer – Applique	3
44	93–1233	Gasket – Muffler	1
45	92–1054	Plate – Muffler	1
46	682876	Muffler Cover Assembly	1
47	609786	Support – Crankshaft	1
48	609471	Screw	3

† Obtain Locally

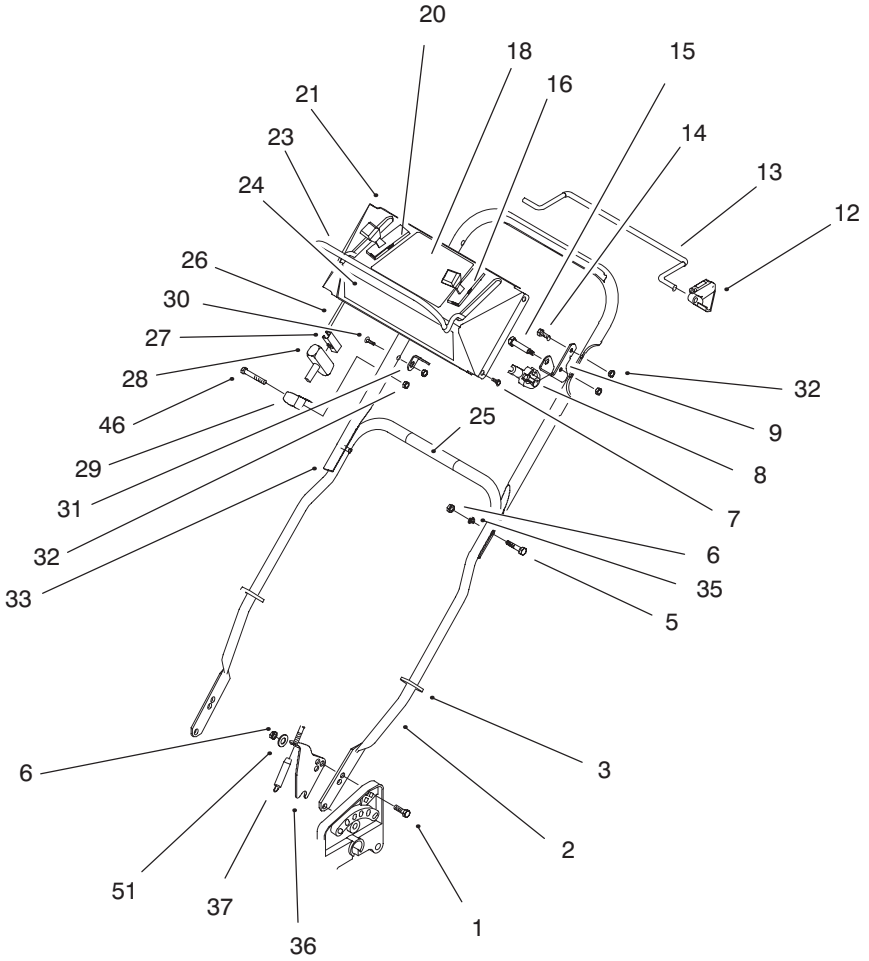


C–2514

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3230–29	Bolt – Carriage	2
2	94–9440	Handle – Section Lower (Incl. Ref. #25)	1
3	614249	Tie Strap	2
5	322–9	Screw – Hex Hd.	2
6	3296–29	Nut – Lock	4
7	92–9665	Screw – Phillips Hd.	4
8	92–1078	Cam – Brake	1
9	92–1094	Bracket – Bail Stop	1
12	92–5412	Stop – Pivot	1
13	92–1617	Bail – SP Control	1
14	321–4	Screw – Hex Hd. Cap	1
15	613050	Bolt	1
16	93–3683	Cable – Throttle	1
18	94–6301	Decal – Control Panel	1
20	92–8926	Control – Speed Ground	1
21	94–9439	Panel – Control (Incl. Ref. #18, & 24)	1

Ref. No.	Part No.	Description	No. Used
23	92–1093	Bail – Engine Control	1
24	94–6300	Decal – Console Front	1
25	93–7266	Decal – Operation	1
26	93–3248	Cable – Control	1
27	612824	Clip – Rope Insert	1
28	612825	Handle – Starter	1
29	93–7383	Guide – Rope	1
30	92–2268	Screw – Handle	1
31	92–2928	Bracket – Cable Anchor	1
32	3296–73	Nut – Lock	4
33	92–1092	Handle – Upper	1
35	609739	Washer	2
36	92–7899	Bracket – Traction Cable	1
37	92–6518	Cable – Traction	1
46	321–51	Screw – Hex Hd. Cap	1
49	3296–56	Nut – Lock	1
51	3256–23	Washer – Flat	1

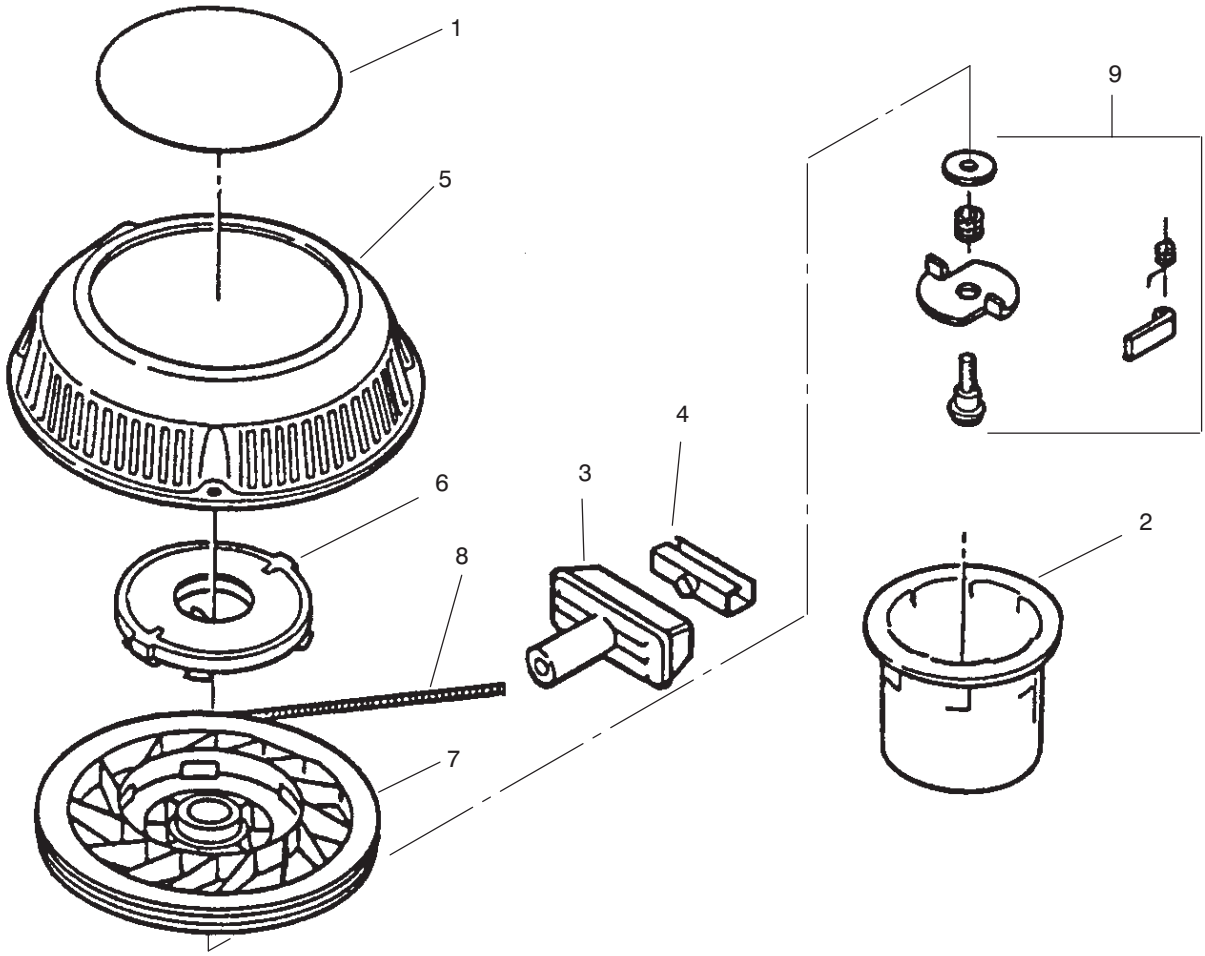


STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–8830	Decal	1
2	612949	Hub – Starter	1
3	612825	Handle – Starter	1
4	612824	Insert – Clip, Rope	1
5	684567	Housing – Starter	1
6	92–4935	Recoil Spring & Keeper	1

Ref. No.	Part No.	Description	No. Used
7	612950	Pulley	1
8	612432	Rope	1
9	683899	Assembly – Dog Kit	1
*	612428	Screw–Sems	4
*	684622	Assembly – Starter (Inc. Ref. No. 5–9)	1

*Not Illustrated

ENGINE ASSEMBLY

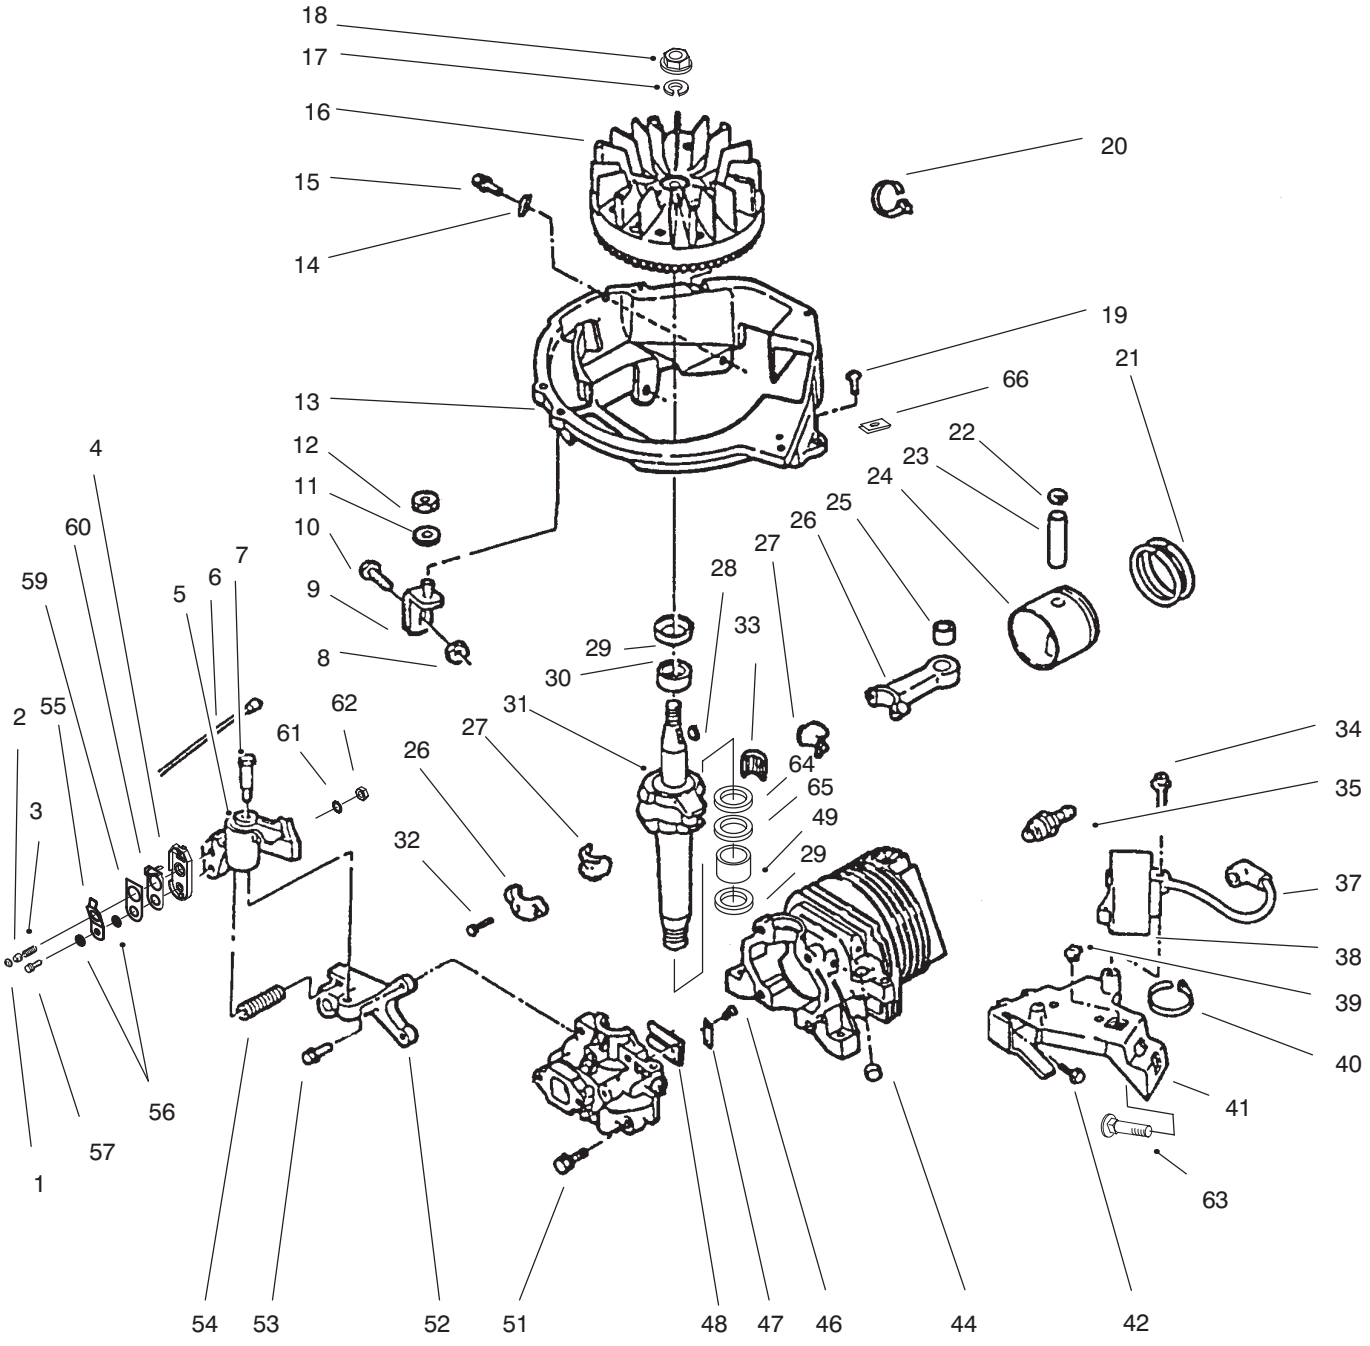


C–2192B

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator – Brake Lever	1
3	611214	Spring – Cable, Return	1
4	93–1240	Case – Switch	1
5	682683	Assembly – Brake	1
6	683821	Wire Lead	1
7	613529	Bolt – Shoulder	1
8	608311	Nut	1
9	683581	Assembly – Brace	1
10	603014	Bolt	1
11	306407	Washer	1
12	602315	Nut	1
13	612427	Shroud – Base	1
14	611191	Clip – "J"	1
15	609947	Screw	3
16	683580	Assembly – Flywheel	1
17	316959	Washer – Lock	1
18	130743	Nut – Flywheel	1
19	609808	Screw	1
20	317893	Tie Strap	1
21	681737	Set – Ring	1
22	303712	Ring – Retaining	2
23	606608	Pin – Wrist	1
24	92–4925	Set – Piston & Ring (Incl. Ref.# 21–23)	1
25	92–4927	Assembly – Bearing	1
26	92–4921	Assembly – Conn. Rod (Incl. Ref. #25, 27, 32, & 33)	1
27	677982	Liner – Pair	1
28	607199	Key – Flywheel	1
29	611396	Seal – Oil	2
30	681830	Bearing – Main	1
31	94–5713	Crankshaft	1
32	611393	Screw	2
33	609754	Strip – Roller	1
34	607526	Screw	2
35	614009	Spark Plug	1
37	681678	Wire Lead	1
38	683215	C. D. Ignition Module (Incl. Ref. #37)	1
39	605120	Grommet	2
40	614249	Tie Strap	1
41	613072	Bracket – C. D.	1
42	614343	Screw	2
44	609123	Plug	4
46	612872	Screw	2
47	602587	Plate – Reed	1
48	602588	Reed	1
49	681831	Bearing – Main	1
51	613110	Screw	2
52	611192	Bracket – Brake	1
53	613233	Screw	2
54	611211	Spring – Brake	1
55	93–1239	Spring	1
56	306407	Washer	2
57	321–6	Screw – Hex Hd. Cap	1
59	612842	Shield	1
60	612841	Plate – Contact	1
61	3255–7	Washer – Lock	1
62	146254	Nut	1
*	94–5734	Assembly – Short Block (Incl. Ref. No.21–27, 29–33, & 43–51)	1
63	3229–11	Bolt – Carriage	1
64	252–76	Bearing – Thrust	1
65	252–80	Washer – Thrust	1
66	609900	Nut – Speed	1
*	93–4307	Switch Kit (Incl. Ref. #1, 4, 6, 55, 57, & 59–62)	1

*Not Illustrated

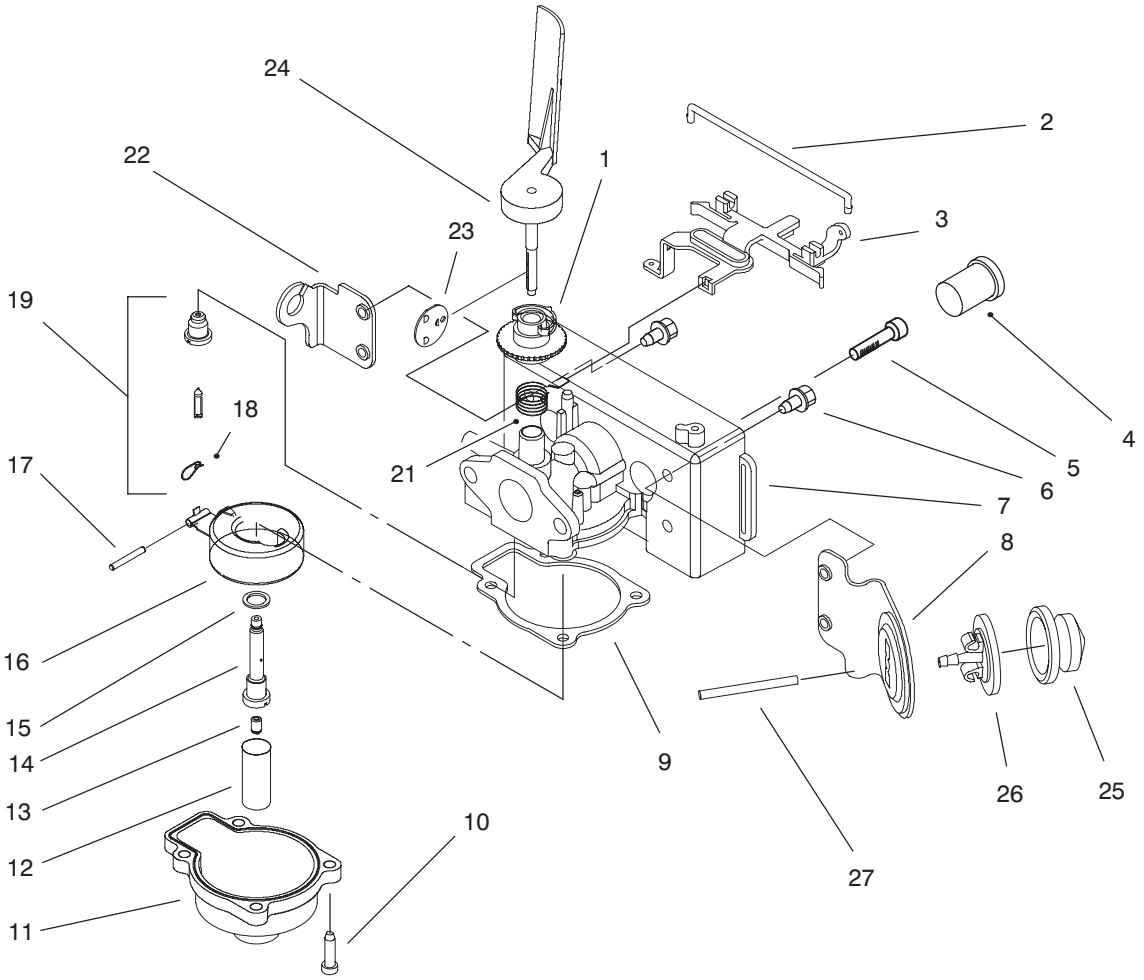


C–2182C

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar – Adjustment	1
2	610165	Retainer	1
3	93–1225	Lever – Speed Adjust	1
4	93–4320	Plug	2
5	609482	Screw – Pan Hd. Sems	2
6	613269	Screw	4
7	93–4341	Body – Carburetor	1
8	93–1232	Bracket – Primer	1
9	602850	Gasket – Float Chamber	1
10	608850	Screw	4
11	92–9691	Float Chamber	1
12	611071	Filter – Fuel	1
13	94–5710	Main Jet	1
14	92–6371	Nozzle	1

Ref. No.	Part No.	Description	No. Used
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92–6389	Pin	1
18	603145	Clip	1
19	92–9697	Float, Valve, & Body Ass'y	1
21	92–4944	Spring – Governor	1
22	93–1226	Bracket – Throttle Control	1
23	94–5704	Disc – Throttle	1
24	92–6376	Air Vane & Shaft	1
25	66–7460	Bulb – Primer	1
26	44–2750	Body – Primer	1
27	44–3172	Hose – Primer	1
*	94–5738	Carburetor Complete	1

*Not Illustrated

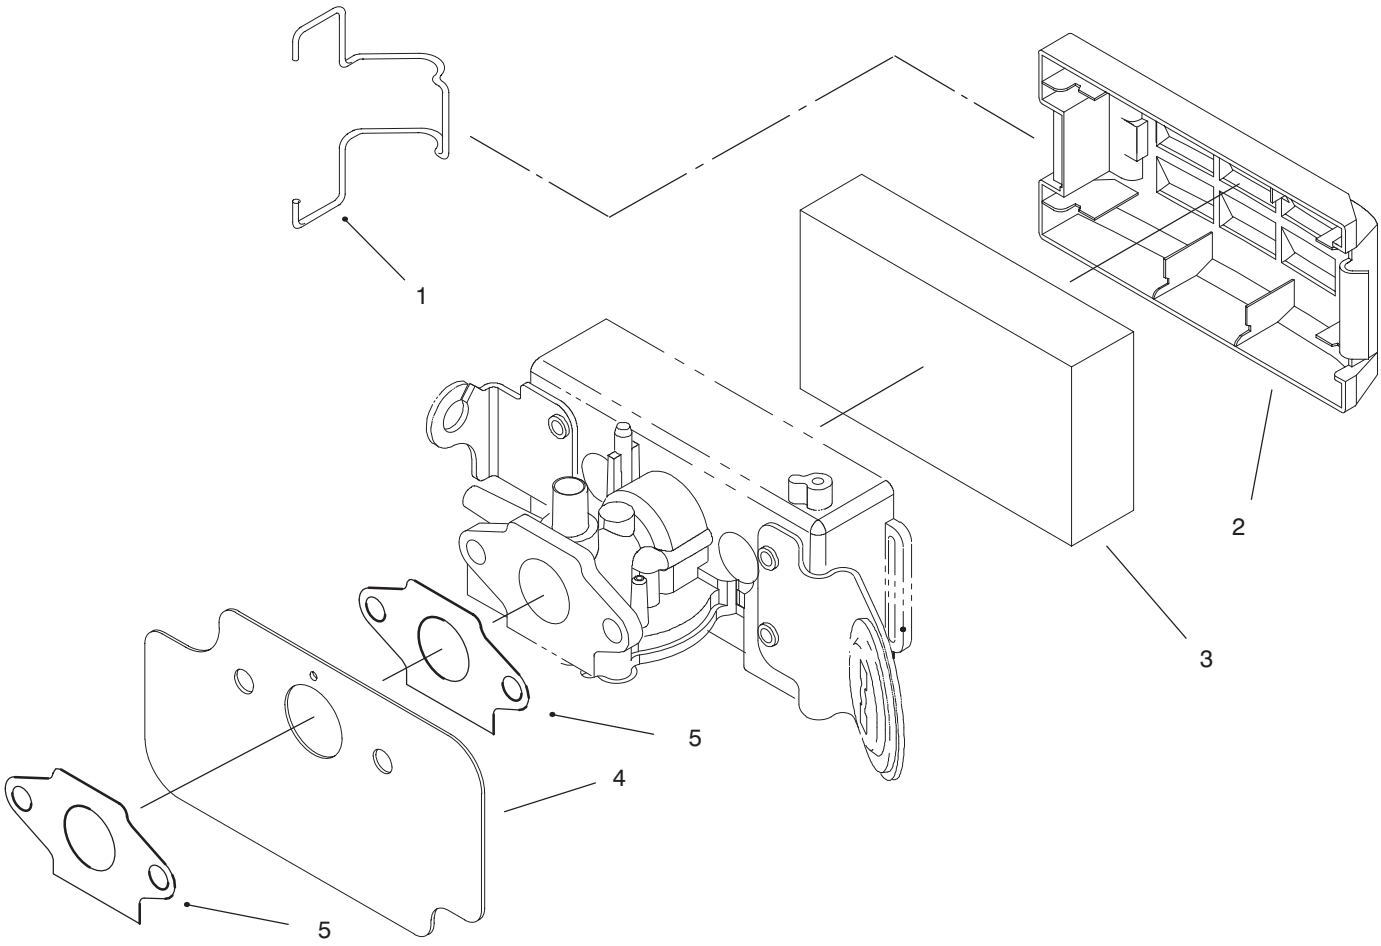

C–2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93–1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93–1221	Shield – Heat	1
5	92–4948	Gasket – Carb.	2

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut – Flywheel	8	18	1
145476	Tank – Fuel	4	23	1
145945	Retainer – Applique	4	43	3
146254	Nut	8	62	1
303259	Washer	2	14	1
303712	Ring – Retaining	8	22	2
306407	Washer	8	11	1
306407	Washer	8	56	2
312387	Clamp – Hose	4	25	1
316959	Washer – Lock	8	17	1
317893	Tie Strap	8	20	1
602315	Nut	8	12	1
602315	Nut – Lock	4	36	1
602587	Plate – Reed	8	47	1
602588	Reed	8	48	1
602850	Gasket – Float Chamber	9	9	1
603014	Bolt	8	10	1
603145	Clip	9	18	1
603164	Nut – Blade	4	1	1
603567	Bolt – Wheel	1	30	2
605120	Grommet	8	39	2
605255	Washer – Flat	2	15	1
606608	Pin – Wrist	8	23	1
607199	Key – Flywheel	8	28	1
607213	Gasket	4	22	1
607526	Screw	8	34	2
607560	Plate – Cover	1	9	1
608175	Toe Bar	1	11	1
608311	Nut	8	8	1
608850	Screw	9	10	4
609123	Plug	8	44	4
609150	Foam – Baffle	4	21	1
609471	Screw	4	48	3
609482	Screw – Pan Hd. Sems	9	5	2
609493	Element – Air Filter	10	3	1
609739	Washer	5	35	2
609754	Strip – Roller	8	33	1
609786	Support – Crankshaft	4	47	1
609808	Screw	8	19	1
609830	Spring	4	27	2
609900	Nut – Speed	8	66	1
609947	Screw	8	15	3
609976	Pulley	4	5	1
610165	Retainer	9	2	1
610345	Screw – Set	4	6	1
610358	Nut – Lock	2	21	2
610358	Nut – Lock	1	33	2
610383	Retainer – Cover	10	1	1
610834	Collar – Adjustment	9	1	1
611071	Filter – Fuel	9	12	1
611191	Clip – J	8	14	1
611192	Bracket – Brake	8	52	1
611211	Spring – Brake	8	54	1
611213	Retainer	8	1	1
611213	Retainer	4	15	1
611214	Spring	4	13	1
611214	Spring – Cable, Return	8	3	1
611327	Cap – Fuel	4	20	1
611393	Screw	8	32	2
611396	Seal – Oil	8	29	2
611509	Actuator – Brake Lever	8	2	1
611509	Actuator – Brake Lever	4	14	1
612383	Washer	9	15	1
612427	Shroud – Base	8	13	1
612428	Screw – Sems	4	28	4
612428	Screw–Sems	6	*	4
612432	Rope	6	8	1
612543	Blade – 53cm	4	16	1
612754	Applique	4	37	1
612784	Hose – Gas	4	4	1
612824	Clip – Rope Insert	5	27	1
612824	Insert – Clip, Rope	6	4	1
612825	Handle – Starter	5	28	1
612825	Handle – Starter	6	3	1
612841	Plate – Contact	8	60	1
612842	Shield	8	59	1
612872	Screw	8	46	2
612949	Hub – Starter	6	2	1
612950	Pulley	6	7	1
613050	Bolt	5	15	1
613072	Bracket – C. D.	8	41	1
613110	Screw	8	51	2
613233	Screw	8	53	2
613269	Screw	9	6	4
613529	Bolt – Shoulder	8	7	1
614009	Spark Plug	8	35	1
614249	Tie – Strap	4	38	1
614249	Tie Strap	5	3	2
614249	Tie Strap	8	40	1
614343	Screw	8	42	2
614426	Washer – Stepped	2	27	2
614637	Bracket – Wheel Height Adj.	1	19	2
614677	Screw – Sems Thr'd Form	1	24	2
677052	Valve & Screen	4	26	1
677525	Plate & Collar Assembly	4	2	1
677982	Liner – Pair	8	27	1
678113	Float & Arm Assembly	9	16	1
681678	Wire Lead	8	37	1
681737	Set – Ring	8	21	1
681830	Bearing – Main	8	30	1
681831	Bearing – Main	8	49	1
682683	Assembly – Brake	8	5	1
682876	Muffler Cover Assembly	4	46	1
683215	C. D. Ignition Module	8	38	1
683580	Assembly – Flywheel	8	16	1
683581	Assembly – Brace	8	9	1
683638	Shroud Assembly	4	12	1
683821	Wire Lead	8	6	1
683899	Assembly – Dog Kit	6	9	1
684159	Wheel & Tire Assembly – 6	1	29	2
684567	Housing – Starter	6	5	1
684622	Assembly – Starter	6	*	1
684622	Housing – Starter	4	11	1
12–5450	Screw – Thr'd Form	1	5	2
24–7920	Cover – Drive Shaft	2	13	1
29–9570	Bushing – Yoke	3	11	1
36–4780	Washer	3	17	1
36–4791	Washer – Thrust	3	20	2
38–7820	Bearing – Ball	3	2	1
40–1940	Washer	1	18	2
40–1940	Washer	1	27	2
44–2750	Body – Primer	9	26	1
44–3172	Hose – Primer	9	27	1
46–6811	Screw – Hex Washer Hd.	1	12	2
47–2480	Rope – Stop	4	7	1
49–2040	Screw	3	21	6
49–2040	Screw – Hex Hd. Cap	1	22	1
55–3760	Pinion – 15 Tooth	3	23	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
55–3770	Gear – 49 Tooth	3	28	1
55–3780	Pinion – 20 Tooth	3	24	1
55–3790	Gear – 44 Tooth	3	29	1
55–3800	Pinion – 25 Tooth	3	25	1
55–3810	Gear – 39 Tooth	3	30	1
60–8710	Gearcase – Upper	3	9	1
60–8730	Gear Case Cover	3	22	1
60–8750	Bushing – Inter. Shaft	3	19	2
60–8770	Bushing – Output	3	18	1
60–8790	Sleeve – Gear	3	31	1
60–8800	Shaft – Intermediate	3	26	1
60–8810	Retainer – Shift Fork	3	12	1
60–8821	Lever – Shift	2	10	1
60–8840	Pulley – Half	3	6	2
60–8850	Bushing – Output	3	3	1
60–8870	Yoke – Shift	3	10	1
65–2720	Ring – Retaining	2	3	4
65–4710	Ring – Friction	2	7	2
65–4720	Spring – Compression	2	25	2
65–4730	Washer – Thrust	2	22	2
65–4740	Washer – Thrust Keyed	2	4	4
65–4750	Gear – Pinion	2	24	2
65–4760	Washer	2	23	2
65–4770	Shaft – Output	3	4	1
65–5250	Clip – Spring	3	16	1
66–6040	Key – Rocking R.H.	2	*	1
66–6050	Key – Rocking L.H.	2	5	1
66–7460	Bulb – Primer	9	25	1
76–0760	Key – Shift	3	14	2
76–0770	Collar – Shift	3	15	1
76–0780	Sleeve – Shift Key	3	13	1
82–8780	Retainer – Cable	2	12	1
92–1006	Spring Arm Ass'y – Front	1	31	2
92–1008	Knob – Height Adjust	1	32	4
92–1043	V–Belt	2	28	1
92–1054	Plate – Muffler	4	45	1
92–1057	Bolt – Shoulder	2	1	2
92–1078	Cam – Brake	5	8	1
92–1092	Handle – Upper	5	33	1
92–1093	Bail – Engine Control	5	23	1
92–1094	Bracket – Bail Stop	5	9	1
92–1617	Bail – SP Control	5	13	1
92–2268	Screw – Handle	5	30	1
92–2928	Bracket – Cable Anchor	5	31	1
92–4856	Bolt – Shoulder	1	28	2
92–4921	Assembly – Conn. Rod	8	26	1
92–4925	Set – Piston & Ring	8	24	1
92–4927	Assembly – Bearing	8	25	1
92–4935	Recoil Spring & Keeper	6	6	1
92–4944	Spring – Governor	9	21	1
92–4948	Gasket – Carb.	10	5	2
92–5412	Stop – Pivot	5	12	1
92–5790	Pinion – Bevel	3	27	1
92–5791	Spacer	3	5	1
92–6371	Nozzle	9	14	1
92–6376	Air Vane & Shaft	9	24	1
92–6389	Pin	9	17	1
92–6518	Cable – Traction	5	37	1
92–6535	Cap – End	2	17	2
92–6539	Spring Arm Ass'y –	2	*	1
92–6540	Spring Arm Ass'y –	2	19	1
92–7699	Bracket – Actuator	1	3	1
92–7736	Shield – Trailing	1	14	1
92–7746	Height Adj. Arm Ass'y –	2	8	2
92–7748	Screw	1	4	2
92–7869	Gear Case Assembly	1	1	1
92–7869	Gear Case Complete	3	*	1
92–7899	Bracket – Traction Cable	5	36	1
92–8830	Decal	6	1	1
92–8830	Decal – Recoil	4	30	1
92–8852	Cover – Drive	1	6	1
92–8926	Control – Speed Ground	5	20	1
92–9665	Screw – Phillips Hd.	5	7	4
92–9673	Bolt – Shoulder	1	21	2
92–9691	Float Chamber	9	11	1
92–9697	Float, Valve, & Body Ass'y	9	19	1
93–1221	Shield – Heat	10	4	1
93–1225	Lever – Speed Adjust	9	3	1
93–1226	Bracket – Throttle Control	9	22	1
93–1231	Cover – Air Filter	10	2	1
93–1232	Bracket – Primer	9	8	1
93–1233	Gasket – Muffler	4	44	1
93–1239	Spring	8	55	1
93–1240	Case – Switch	8	4	1
93–3248	Cable – Control	5	26	1
93–3683	Cable – Throttle	5	16	1
93–4105	Decal – Warning	1	15	1
93–4307	Switch Kit	8	*	1
93–4320	Plug	9	4	2
93–4341	Body – Carburetor	9	7	1
93–7009	Decal – Danger	1	10	2
93–7153	Plate – Engine	4	41	1
93–7266	Decal – Operation	5	25	1
93–7383	Guide – Rope	5	29	1
93–7415	Guard – Plate	1	34	1
94–1609	Cover – Wheel	2	26	2
94–1610	Grommet	1	25	3
94–1618	Guard – Engine	4	17	1
94–4252	Leg & Saddle Assembly	4	24	1
94–5704	Disc – Throttle	9	23	1
94–5710	Main Jet	9	13	1
94–5713	Crankshaft	8	31	1
94–5734	Assembly – Short Block	8	*	1
94–5738	Carburetor Complete	9	*	1
94–6300	Decal – Console Front	5	24	1
94–6301	Decal – Control Panel	5	18	1
94–6302	Decal	1	26	1
94–9438	Housing	1	7	1
94–9439	Panel – Control	5	21	1
94–9440	Handle – Section Lower	5	2	1
95–1714	Wheel & Tire Ass'y – 8	2	2	2
95–1727	Screw – Engine Mount	4	3	3
2410–76	Plug – Fuel Line	4	40	1
2410–77	Plug – Fuel Valve	4	39	1
252–76	Bearing – Thrust	8	64	1
252–80	Washer – Thrust	8	65	1
256–251	Bushing – Spacer	1	2	2
321–4	Screw – Hex Hd. Cap	5	14	1
321–6	Screw – Hex Hd. Cap	8	57	1
321–51	Screw – Hex Hd. Cap	5	46	1
322–9	Screw – Hex Hd.	5	5	2
3229–11	Bolt – Carriage	8	63	1
3229–22	Screw – Carriage	4	32	1
3230–29	Bolt – Carriage	5	1	2
3255–7	Washer – Lock	8	61	1
3256–1	Washer – Flat	4	42	1
3256–23	Washer – Flat	5	51	1
3256–24	Washer	3	8	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3272–10	Pin – Cotter	2	11	1
3285–19	Pin – Groove	3	1	1
3290–413	Washer – Belleville	1	20	2
3296–5	Nut	3	7	1
3296–29	Nut – Lock	5	6	4
3296–29	Nut – Lock	4	18	3
3296–39	Nut – Lock	1	17	2
3296–42	Nut – Lock	1	35	2
3296–56	Nut – Lock	5	49	1
3296–73	Nut – Lock	5	32	4
32105–15	Screw – Hex Hd. Cap	1	16	2
32144–3	Screw – Hex Washer Hd.	4	10	2
32144–53	Screw – Thr'd Form	4	29	4
32144–70	Screw – Tapping	2	9	1
32144–85	Screw – Hex Hd. Cap	2	18	2

*Not Illustrated

MAINTENANCE RECORD

Date								