
FORM NO. 3319–195

TORO®

MODEL NO. 26636–7900001 & UP

PARTS CATALOG

53cm KEY–LECTRIC®
Rear Bagging Mower

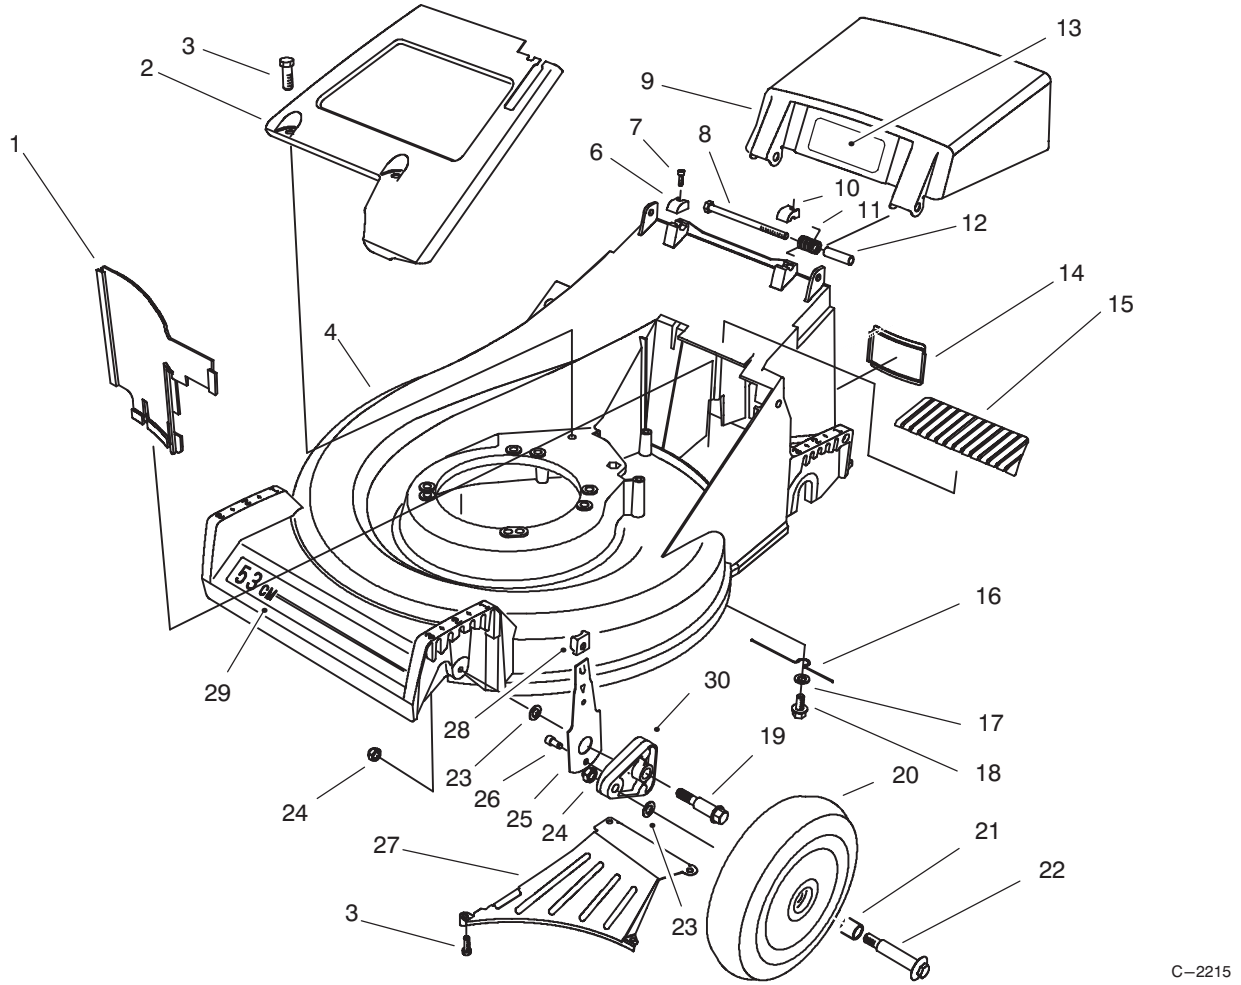


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–0020	Panel – Vertical	1
2	65–5660	Panel – Screen	1
3	32144–70	Screw – Cap Hex. Hd.	6
4	16–1769	Housing – 53cm (Incl. Ref. #29)	1
6	71–7910	Cap – Hinge Bolt R.H.	1
7	65–5210	Screw – Thread Forming	2
8	322–29	Screw – Hex Hd. Cap	2
9	17–1569	Door – Discharge (Incl. Ref. #13)	1
10	71–7900	Cap – Hinge Bolt L.H.	1
11	71–9840	Spring – Door	2
12	71–8580	Spacer – Door	2
13	93–4105	Decal – Danger	1
14	71–9650	Access – Cover	1

Ref. No.	Part No.	Description	No. Used
15	71–9920	Cover – Top	1
16	66–0620	Retainer – Belt	1
17	3256–24	Washer – Flat	1
18	32144–15	Screw – Hex Flange Hd.	1
19	66–0560	Screw – Shoulder	2
20	14–9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27–6250	Bushing – Wheel	4
22	27–6231	Bolt – Wheel	2
23	40–1940	Washer – Wheel Bolt	4
24	3296–6	Nut – Lock	4
25	66–0540	Arm – Spring Front	2
26	65–5220	Screw – Cap Socket Hd.	2
27	71–9640	Ramp – Discharge	1
28	25–7740	Knob – Arm	2

© The TORO Company – 1996
All Rights Reserved

3319–195

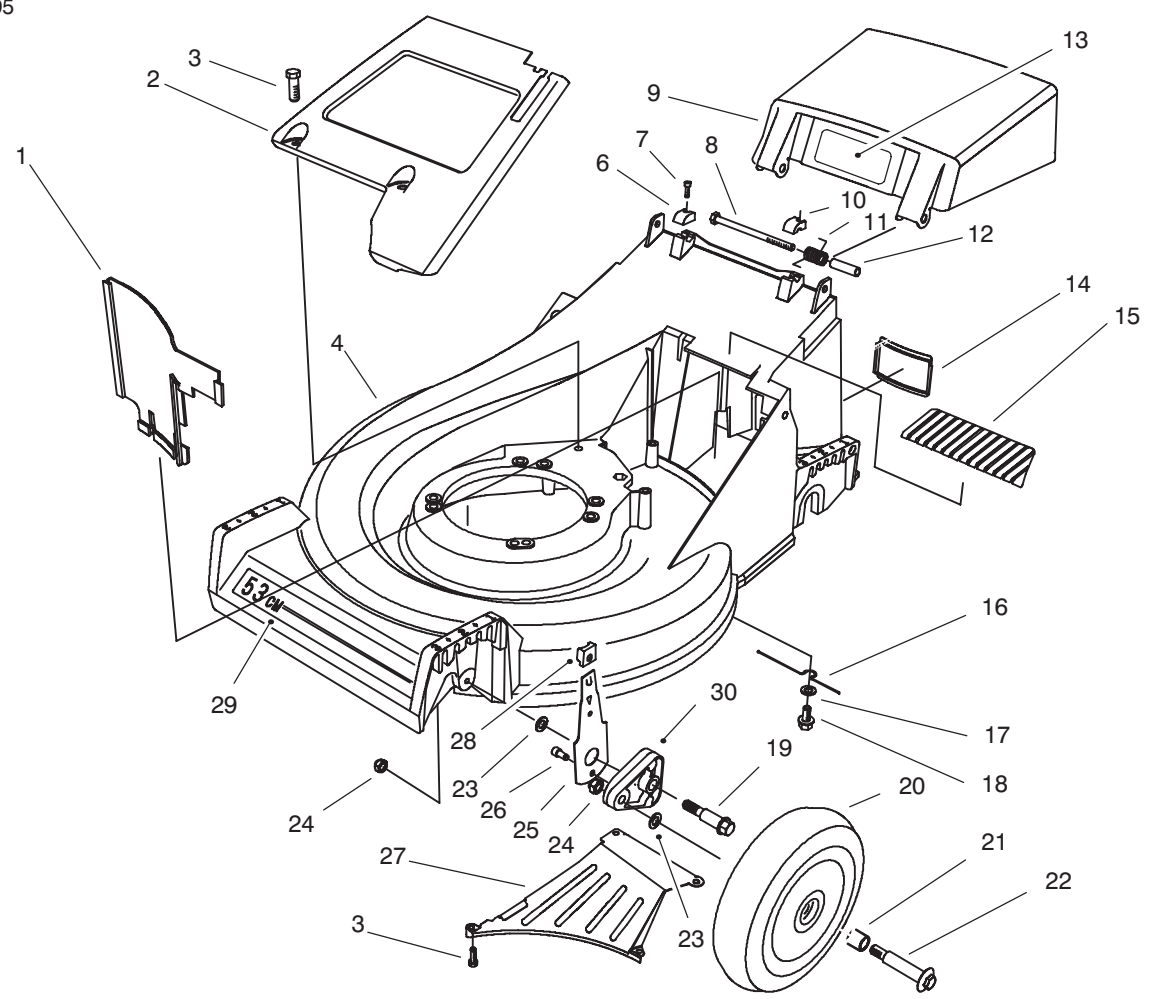


C–2215

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	71–9870	Decal – Deck 53cm	1
30	66–0580	Arm – Pivot	2

Ref. No.	Part No.	Description	No. Used

*Not Illustrated

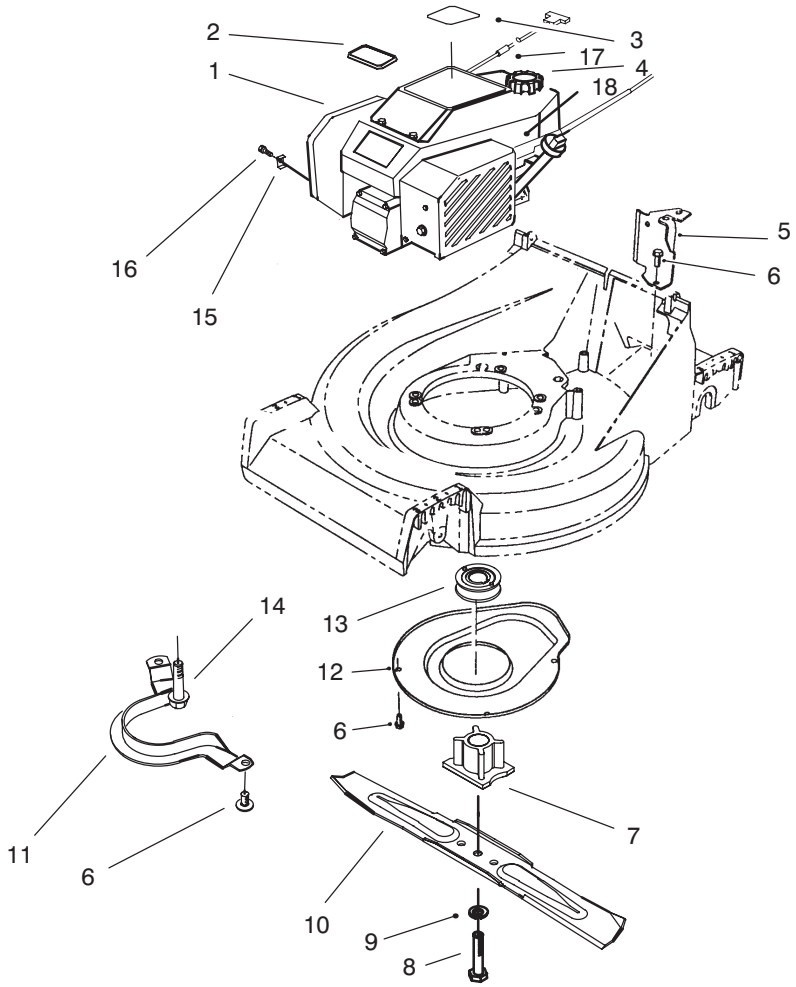


C–2084

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77–8953	Engine	1
2	92–2289	Plate – TORO Logo	1
3	93–4355	Decal – Recoil	1
4	93–7198	Gas Cap Assembly	1
5	66–0030	Bracket – Cable Support	1
6	32144–70	Screw – Hex Hd. Cap	7
7	62–7540	Retainer – Blade	1
8	26–0670	Bolt – Blade	1
9	3253–22	Washer – Blade	1

Ref. No.	Part No.	Description	No. Used
10	62–7700	Blade – 53cm	1
11	66–0570	Guide – Belt	1
12	65–5200	Cover	1
13	62–7550	Pulley – Engine	1
14	32144–102	Screw – Thread Forming	3
15	2210–249	Clamp – Throttle	1
16	86–7990	Screw – Clamp	1
17	2210–316	Stop – Rope	1
18	77–9550	Cover – Brake	1

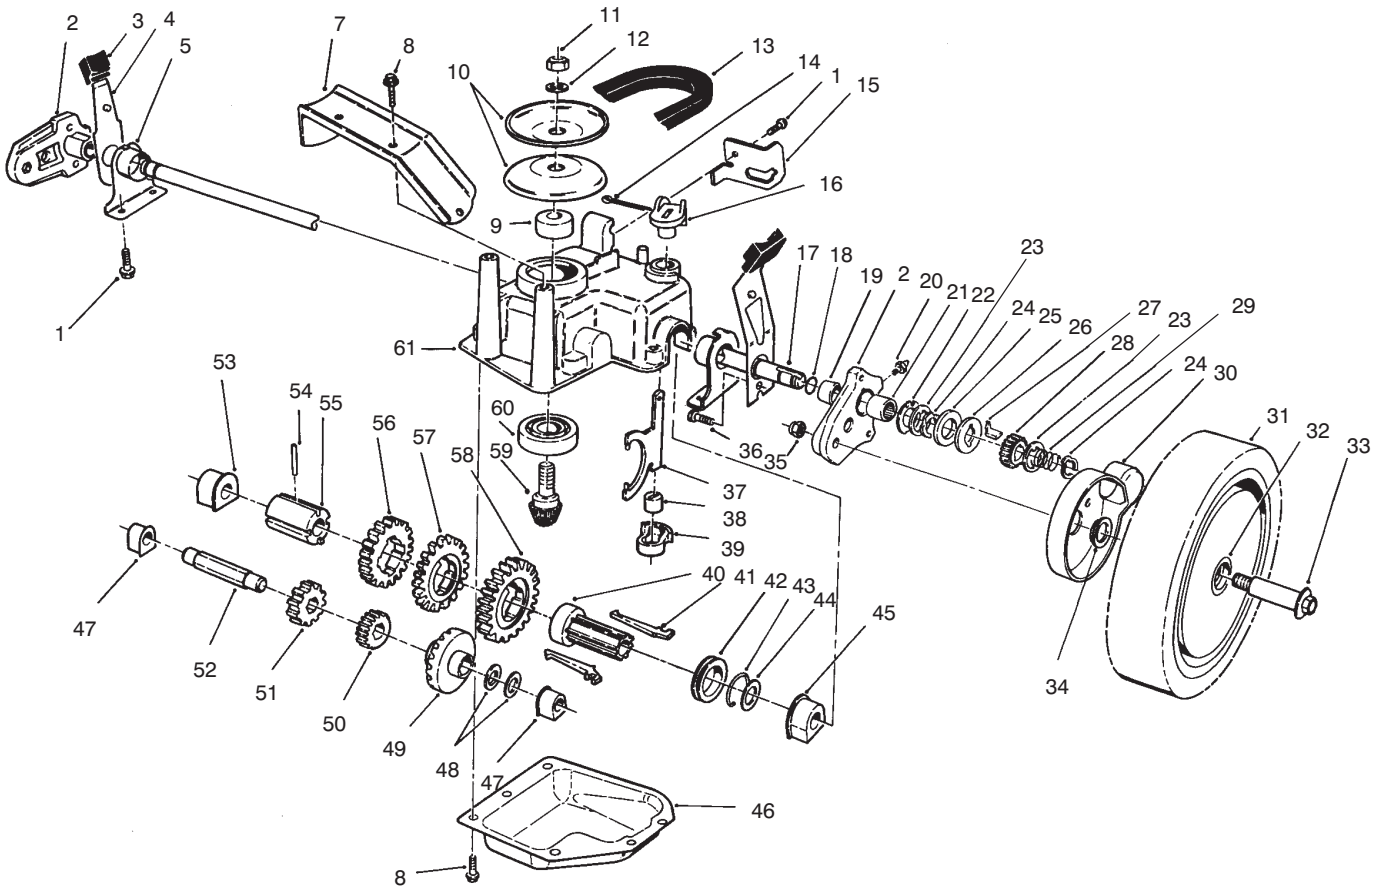


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–70	Screw – Hex. Washer Hd.	5
2	65–5042	Pivot Arm Assembly (Incl. Ref. #19–21)	2
3	25–7740	Knob – Arm	2
4	65–5440	Spring Arm Assembly	2
5	66–0360	Cap – End	2
7	65–5190	Bracket – Belt Guide	1
8	49–2040	Screw – Self Tapping	8
9	62–6660	Spacer	1
10	60–8840	Pulley – Half	2
11	3296–5	Nut – Lock	1
12	3256–24	Washer – Flat	1
13	36–8070	V–Belt	1
14	3272–5	Pin – Cotter	1
15	76–2930	Retainer – Cable	1
16	76–0920	Lever – Shift	1
17	65–4770	Shaft – Output	1
18	237–153	Seal – "O"Ring	2
19	70–9760	Bushing – Sleeve	2
20	302–56	Fitting – Grease	2
21	48–2060	Bearing –Needle	2
22	65–4730	Washer – Thrust (Inner)	2
23	65–4740	Washer – Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65–2720	Ring – Retaining	4
25	65–4710	Ring – Friction	2
26	65–4760	Washer –Clutch	2
27	66–6050	Key – Rocking (L.H.)	1
*	66–6040	Key – Rocking (R.H.)	1
28	65–4750	Pinion	2
29	65–4720	Spring – Compression	2
30	74–1660	Cover – Wheel	2
31	14–9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27–6250	Bushing – Wheel	4
33	27–6231	Bolt – Wheel	2
34	74–1670	Spacer – Wheel Cover	2
35	3296–6	Nut – Lock	2
36	65–5220	Screw – Socket Hd. Cap	2
37	60–8870	Yoke – Shift	1
38	29–9570	Bushing – Yoke	1
39	60–8810	Retainer – Shift Fork	1
40	76–0780	Sleeve – Shift Key	1
41	76–0760	Key – Shift	2
42	76–0770	Collar – Shift	1
43	65–5250	Clip – Spring	1
44	36–4780	Washer – Thrust	1

*Not Illustrated

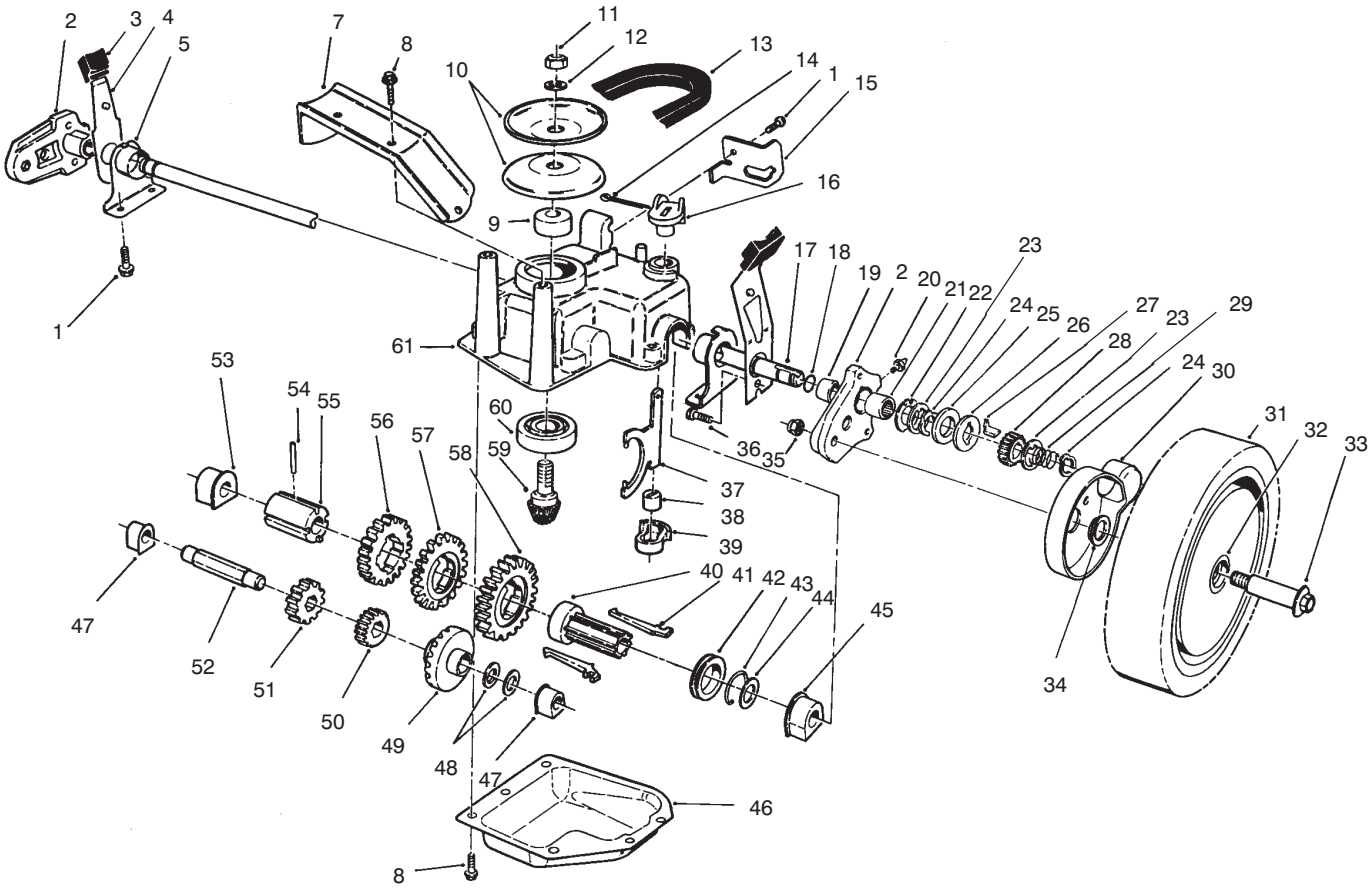


C–1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60–8770	Bushing – Output Shaft	1
46	60–8730	Cover – Gear Case	1
47	60–8750	Bushing – Intrmdt. Shaft	2
48	36–4791	Washer – Thrust	2
49	55–3760	Gear – Pinion 15T	1
50	55–3780	Gear – Pinion 20T	1
51	55–3800	Gear – Pinion 25T	1
52	60–8800	Shaft – Intermediate	1
53	60–8850	Bushing – Output Shaft	1

Ref. No.	Part No.	Description	No. Used
54	32121–120	Pin – Coil	1
55	60–8790	Sleeve – Gear	1
56	55–3810	Gear – 39T (3rd Gear)	1
57	55–3790	Gear – 44T (2nd Gear)	1
58	55–3770	Gear – 49T (1st Gear)	1
59	60–8890	Pinion – Bevel	1
60	38–7820	Bearing – Ball	1
61	60–8710	Case – Gear (Upper)	1
*	62–6673	Gear Case Assy. Complete	1


*Not Illustrated

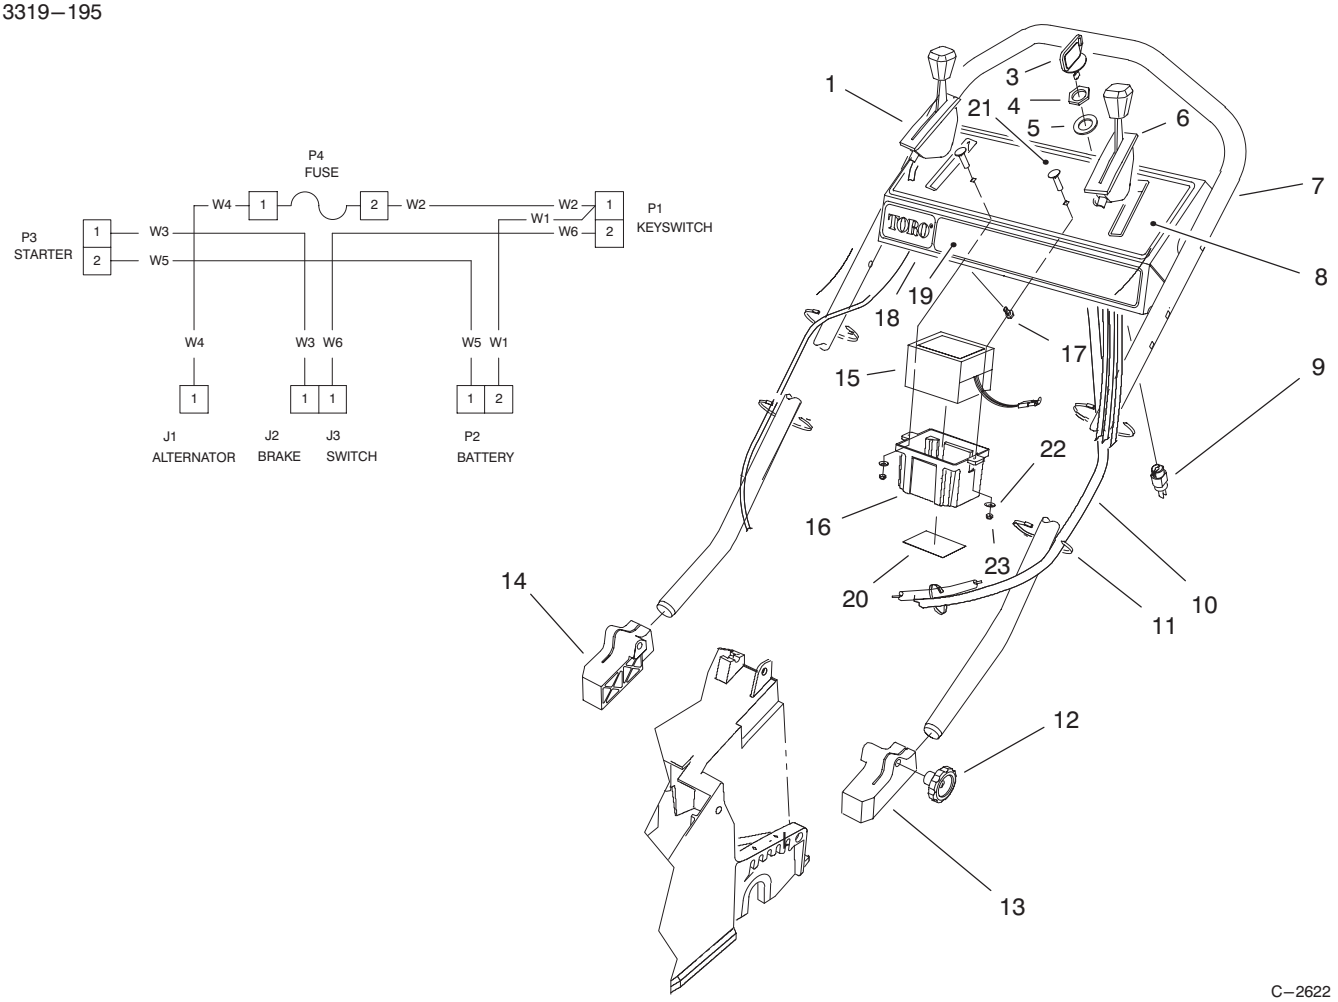

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–6632	Control – Ground Speed	1
3	63–8360	Key – Ignition	1
4	218–461	Nut – Lock	1
5	3254–5	Washer – Lock	1
6	93–6631	Control – Throttle	1
7	94–4910	Handle	1
8	95–3014	Decal – Instruction	1
9	46–5780	Switch – Starter (Incl. Ref. #4 & 5)	1
10	80–4795	Harness – Wire	1
11	3290–378	Tie – Cable	5
12	19–4050	Knob – Handle Release	2
13	71–8090	Mount – Handle L.H.	1
14	71–8100	Mount – Handle R.H.	1
15	55–7520	Battery	1
16	95–3017	Cover – Battery	1
17	92–9665	Screw – Self Tapping	5
18	95–6133	Panel – Control (Incl. Ref. #8 & 19)	1
19	71–9871	Decal – TORO	1
20	93–6668	Decal – Battery	1
21	3229–34	Bolt – Carriage	2
22	3256–14	Washer – Flat	2
23	3296–2	Nut – Lock	2
*	22–4710	Charger – Battery (220V)	1
*	94–1682	Fuse – 5 Amp	1

*Not Illustrated

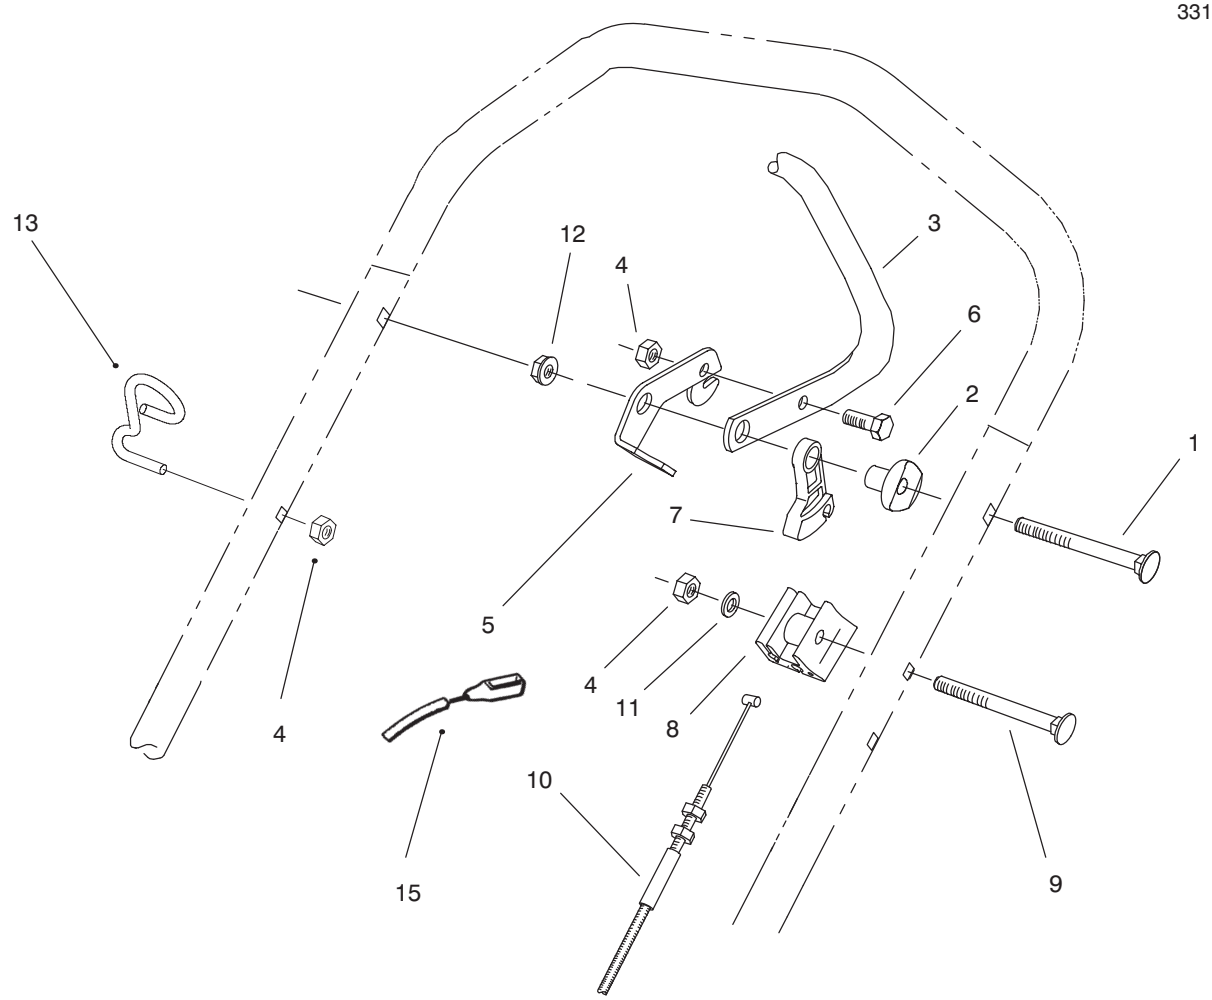


C–2217A

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17–9426	Screw – Handle	2
2	66–0330	Support – Spacer	2
3	52–7430	Control Bar Assembly	1
4	3296–42	Nut – Lock	3
5	66–5350	Lever – Control	1
6	321–3	Screw – Cap Hex. Hd.	1
7	46–5520	Lever – Traction	1

Ref. No.	Part No.	Description	No. Used
8	71–0960	Support – Cable	1
9	46–6432	Screw – Handle	1
10	93–6634	Cable – Traction	1
11	3256–22	Washer – Flat	1
12	3296–58	Nut – Lock	2
13	95–4478	Guide – Rope	1
15	93–6628	Cable – Brake	1


3319–195

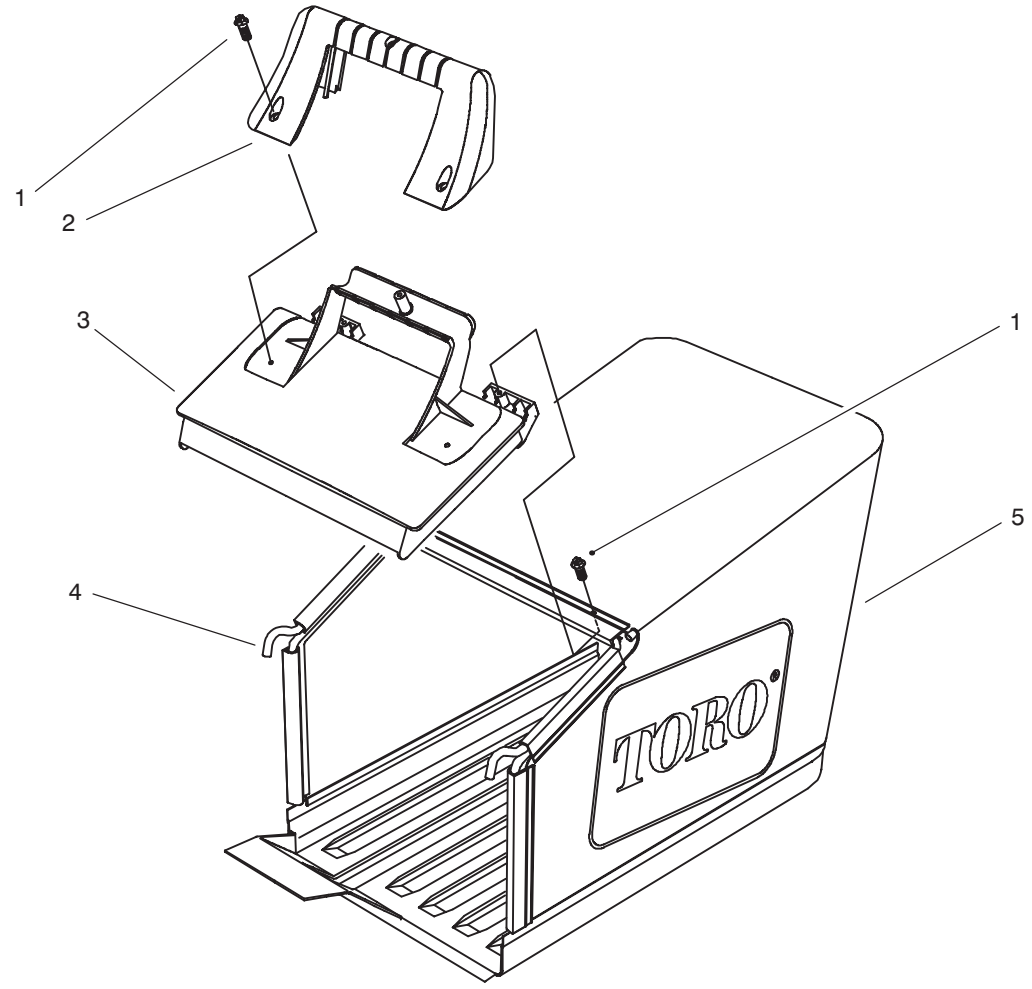

C–1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144–111	Screw – Index Hex Washer Head	5
2	71–9480	Handle – Door	1
3	71–9470	Door – Bag	1
4	71–9930	Frame – Grass Bag	1
5	71–9680	Bag – Grass 53cm	1

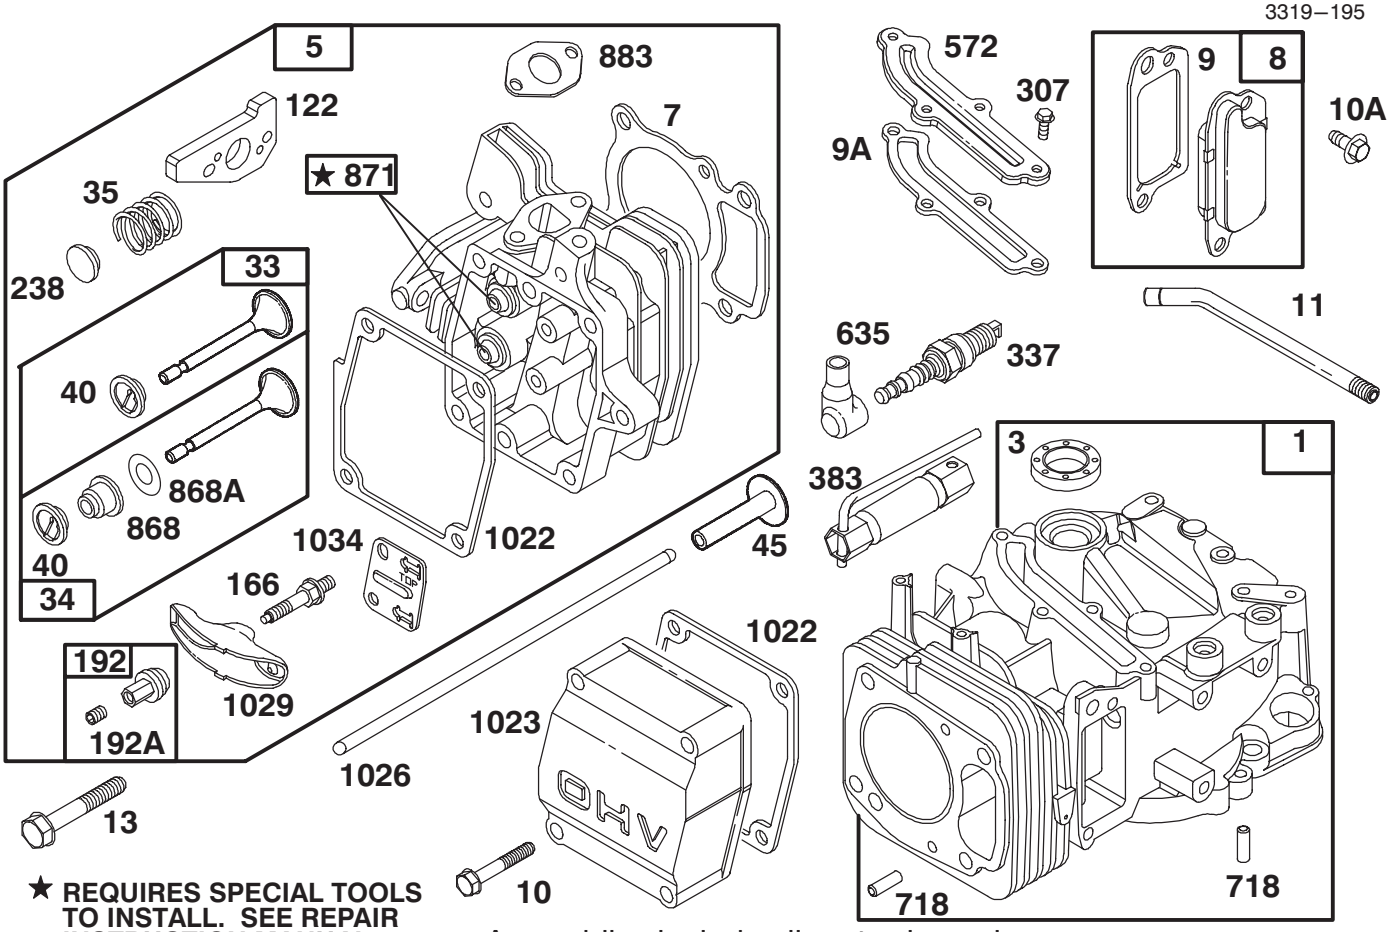

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
1	77–7590	Cylinder Ass'y	1
★3	77–9060	Seal – Oil	1
5	77–7730	Head – Cylinder	1
★7	77–7740	Gasket – Cylinder Head	1
8	77–9300	Breather Ass'y	1
★9	77–9250	Gasket – Breather	1
★9A	77–7410	Gasket – Breather	1
10	77–7360	Screw – Hex Head (Valve Cover)	1
10A	77–9200	Screw – Hex Head	1
11	77–9410	Tube – Breather	1
13	77–7630	Screw – Cylinder Head	1
33	77–7860	Valve – Exhaust	1
34	77–7880	Valve – Intake	1
35	77–7810	Spring – Valve	1
40	77–7870	Retainer – Spring	1
45	77–7610	Tappet – Valve	1
●122	77–7820	Adapter Ass'y	1
166	77–7780	Stud – Rocker Arm	1
192	77–7910	Ball & Screw – Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192A	77–9310	Screw – Set	1
238	77–7800	Cap – Valve	1
307	77–7420	Screw – Breather Cover Mtg.	1
337	77–7330	Plug – Spark	1
383	94–1664	Wrench – Spark Plug	1
572	77–7400	Cover – Breather	1
635	77–7340	Elbow – Spark Plug	1
718	77–7600	Pin – Cylinder	1
★868	77–7890	Seal Ass'y – Valve	1
★868A	77–7900	Gasket – Valve	1
★883	77–7760	Gasket – Exhaust	1
★1022	77–7320	Gasket – Rocker Cover	1
1023	77–9320	Cover – Valve	1
1026	77–7620	Rod – Push	1
1029	77–7790	Arm – Rocker	1
1034	77–7770	Guide – Push Rod	1
	77–9020	Short Block	1

★ Included in Gasket Set–Part No. 77–8900
● Included in Carburetor Overhaul Kit–Part No. 77–9580

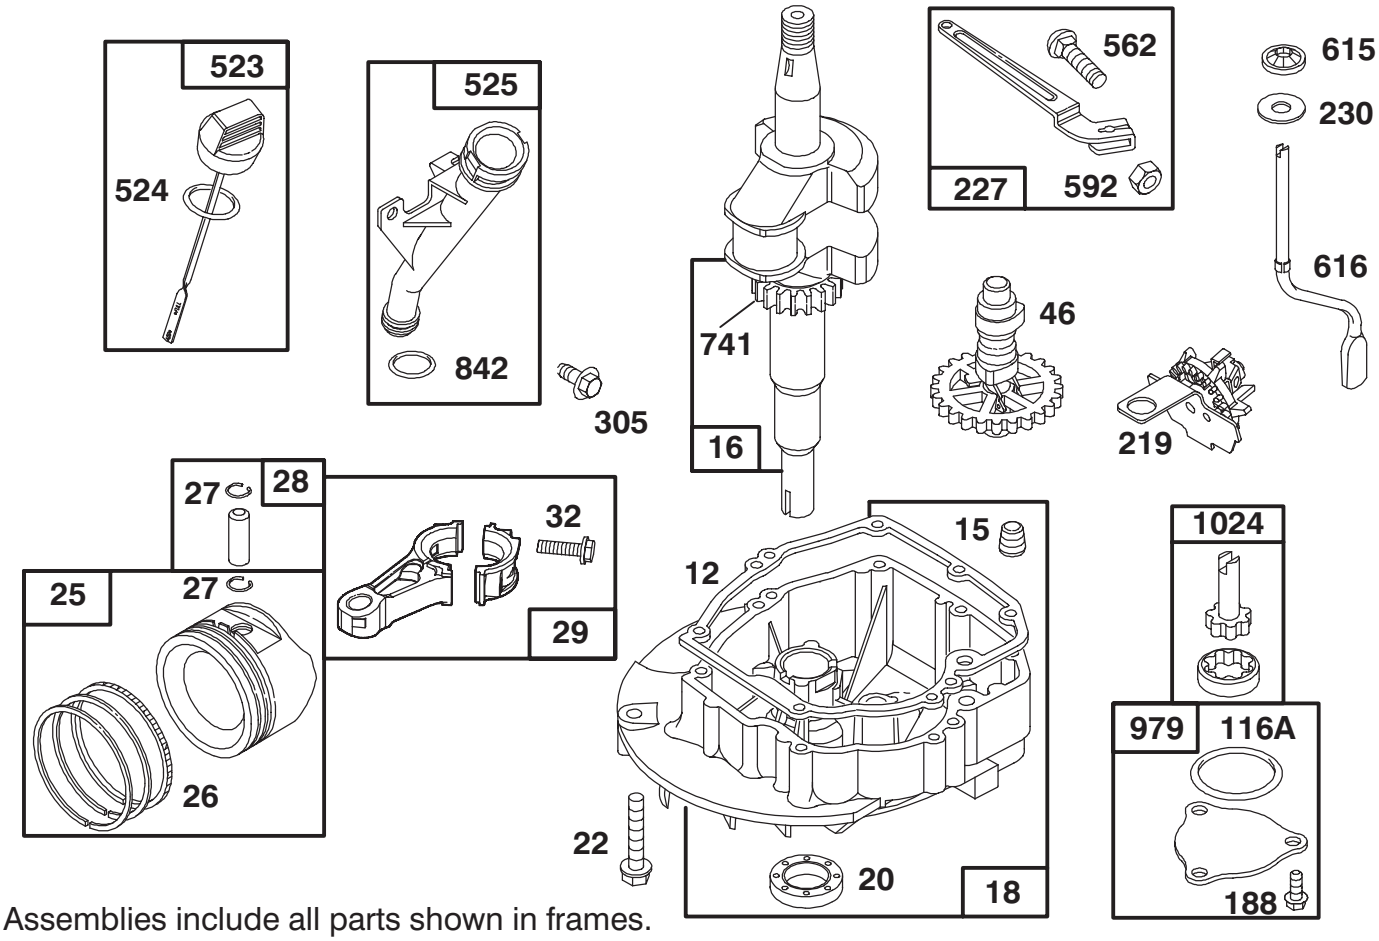


Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
★12	77–7550	Gasket – Engine Base	1
15	77–9240	Plug – Pipe	1
16	77–9330	Crankshaft	1
		Note: Order Part No. 77–7540 For Timing Gear Key	1
18	77–7560	Base – Engine	1
★20	77–7570	Seal – Oil	1
22	77–9070	Screw – Engine Base	1
		Note: 77–9080 Screw–Engine Base (Used in Hole Nearest Breather)	1
25	77–7690	Piston Ass'y (Std.)	1
26	77–7700	Ring Set (Std.)	1
27	77–7710	Lock – Piston Pin	1
28	77–9340	Pin Ass'y – Piston	1
29	77–7670	Rod – Connecting	1
32	77–9350	Screw – Conn. Rod	1
46	77–7490	Gear – Cam	1

Ref. No.	Part No.	Description	No. Used
★116A	77–7660	O-Ring	1
188	94–1665	Screw – Hex Head	1
219	77–7500	Gear – Governor	1
227	77–7370	Lever Ass'y – Governor	1
230	77–7470	Washer	1
305	77–8310	Screw – Hex Head	1
523	77–7260	Dipstick – Oil	1
★524	77–7270	Seal – O-Ring	1
525	77–7280	Tube – Oil Filler	1
562	77–7380	Bolt – Governor Lever	1
592	77–7390	Nut – Hex	1
615	77–7480	Pushnut	1
616	77–7460	Crank – Governor	1
741	77–7530	Gear – Timing	1
★842	77–7300	Seal – O-Ring	1
979	77–7650	Cover – Oil Pump	1
1024	77–7640	Pump – Oil	1

★ Included in Gasket Set–Part No. 77–8900

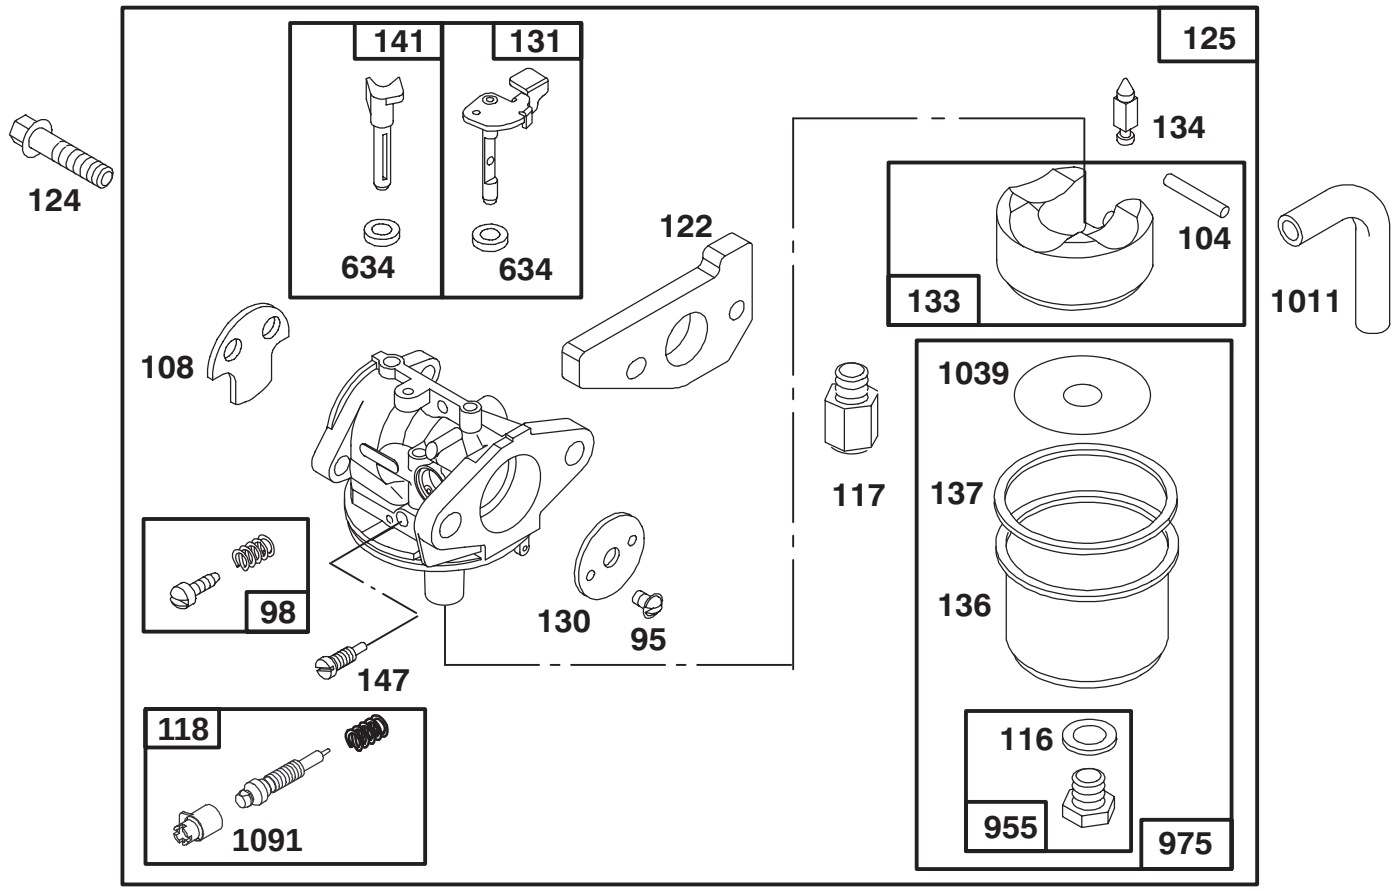


Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
95	77–8090	Screw – Valve Mtg.	1
98	77–8240	Screw – Idle Adj.	1
●104	77–8180	Pin – Float Hinge	1
108	77–9600	Valve – Choke	1
●◆116	77–8210	Sealing – Gasket	1
117	77–9610	Jet – Main	1
		Note: 94–1650 Jet – Main (High Altitude)	1
●118	77–9620	Valve & Spring – Needle	1
●122	77–7820	Adapter Ass'y	1
124	77–7970	Screw – Hex Head (Carb. Mtg.)	1
125	77–9630	Carburetor Ass'y	1
130	77–8080	Valve – Throttle	1
131	77–8160	Shaft – Throttle	1

Ref. No.	Part No.	Description	No. Used
133	77–8170	Float – Carburetor	1
●134	77–8110	Valve – Inlet (Includes Seat)	1
136	77–7240	Bowl – Fuel	1
●◆137	77–8200	Gasket – Float Bowl	1
141	77–8130	Shaft – Choke	1
147	77–9640	Adapter – Jet	1
◆634	77–8150	Washer – Seal	1
955	77–8220	Screw – Hex Head	1
975	77–8190	Bowl Ass'y – Carburetor	1
1011	77–8040	Tube – Vent	1
●1039	77–7250	Limiter – Float	1
●1091	77–9650	Cap – Limiter	1

●Incl. in Carburetor Overhaul Kit–Part No. 77–9580
◆Included in Carburetor Gasket Set–Part No. 77–8930

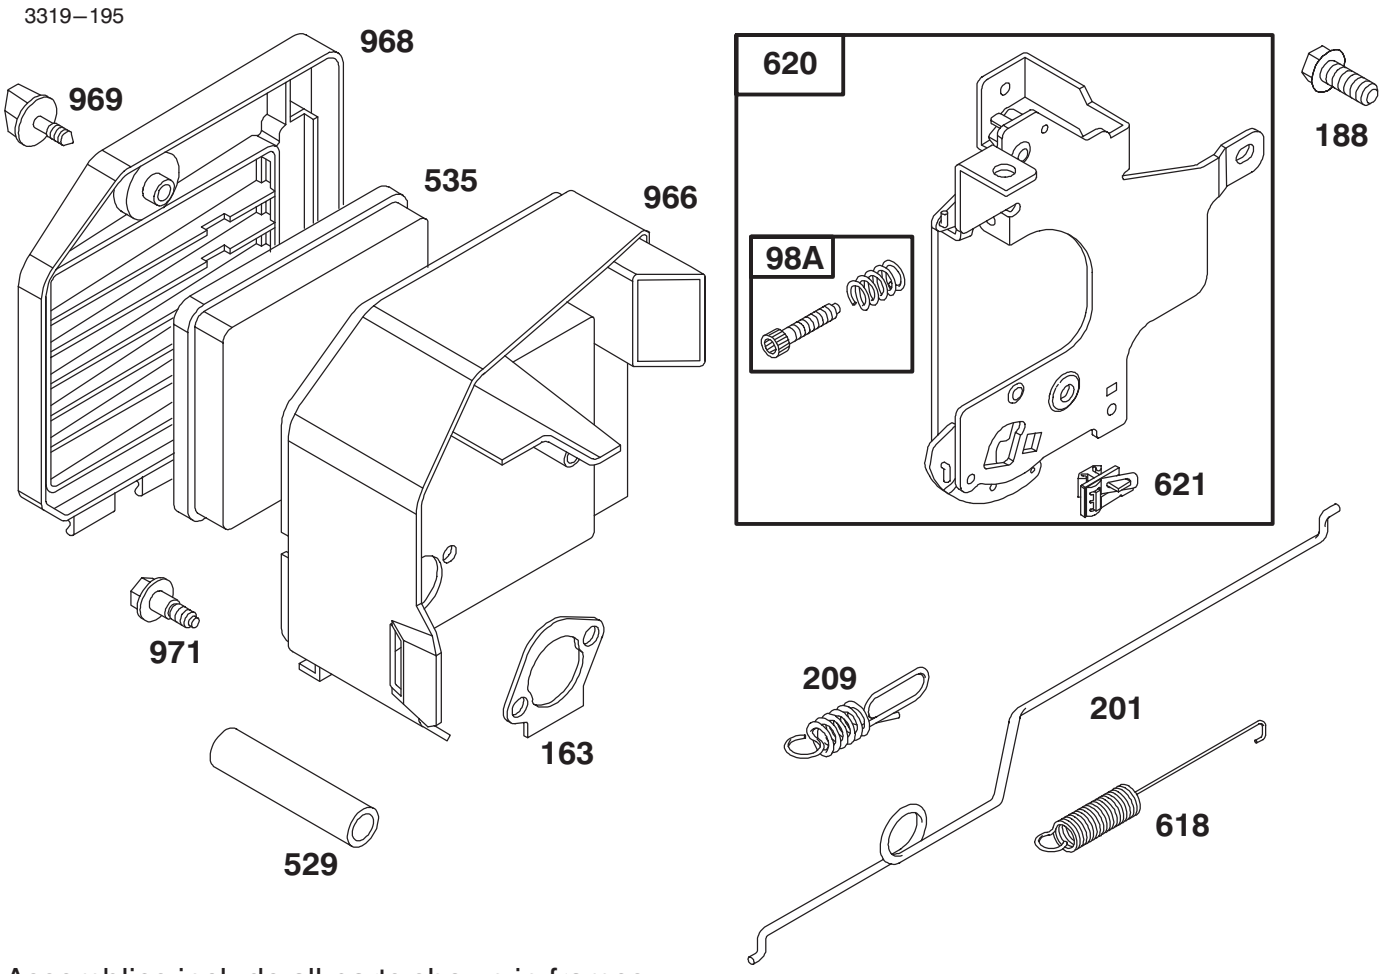


Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
98A	77–8020	Screw Ass'y – Speed Adj.	1
★163	77–7960	Gasket – Air Cleaner	1
188	94–1665	Screw – Hex. Head	1
201	77–7980	Link – Governor	1
209	77–7990	Spring – Governor	1
529	77–9470	Tube – Breather	1
535	77–7950	Element – Filter	1

Ref. No.	Part No.	Description	No. Used
618	77–8140	Spring – Choke	1
620	77–8000	Bracket – Carburetor	1
621	77–8010	Switch – Stop	1
966	77–7940	Base – Air Cleaner	1
968	77–7040	Cover – Air Cleaner	1
969	77–7920	Screw – Air Cleaner	1
971	77–7930	Screw – Air Cleaner	1

★ Included in Gasket Set–Part No. 77–8900

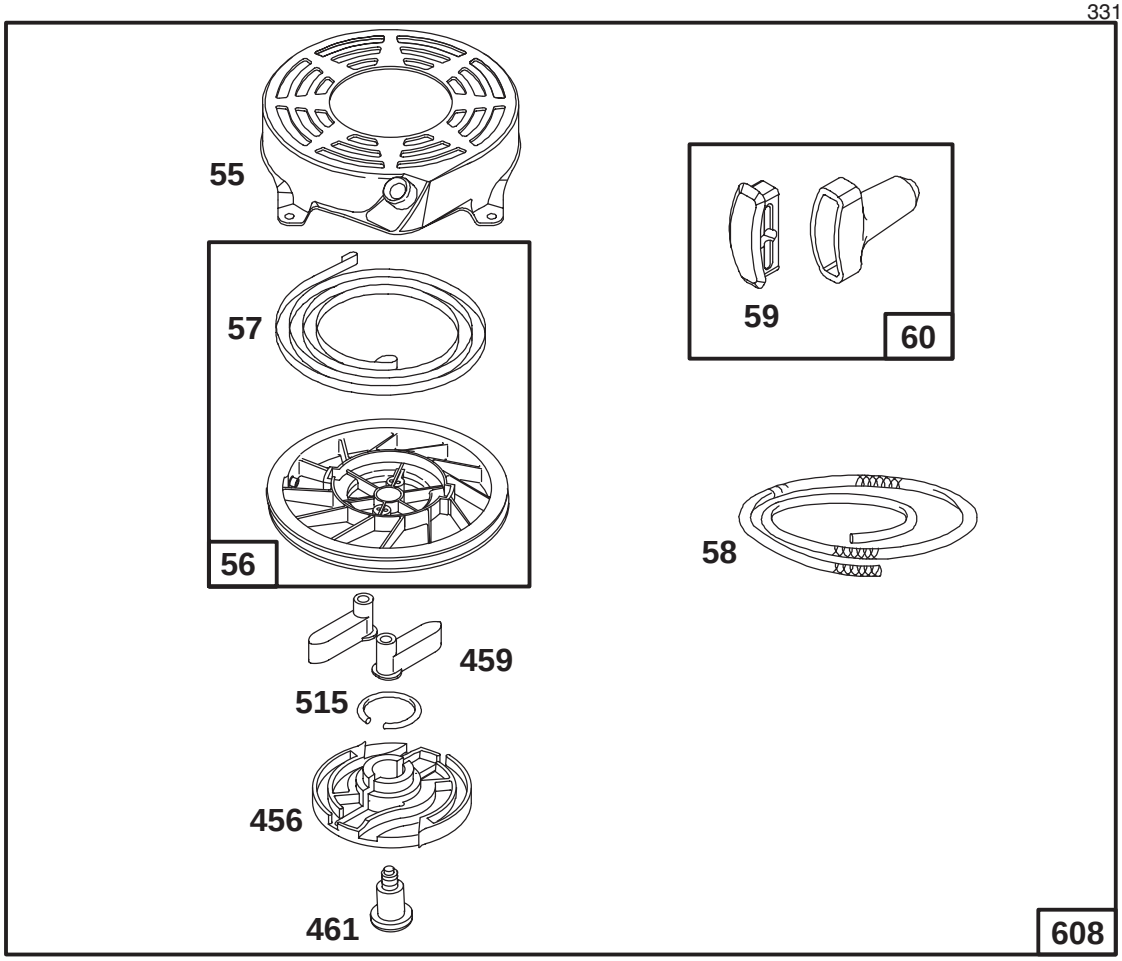


Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
55	94–1666	Housing – Rewind Starter	1
56	94–1657	Pulley – Rewind Starter	1
57	94–1667	Spring – Rewind	1
58	94–1658	Rope – Starter (Cut To Suit)	1
59	77–7210	Insert – Rewind Handle	1
60	77–8520	Handle – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
65	77–8300	Screw – Hex Head	1
456	94–1659	Retainer – Rewind Starter	1
459	94–1654	Pawl – Starter	1
461	94–1660	Screw – Rewind Starter	1
515	94–1655	Spring – Torsion	1
608	77–8450	Starter Ass'y – Rewind	1

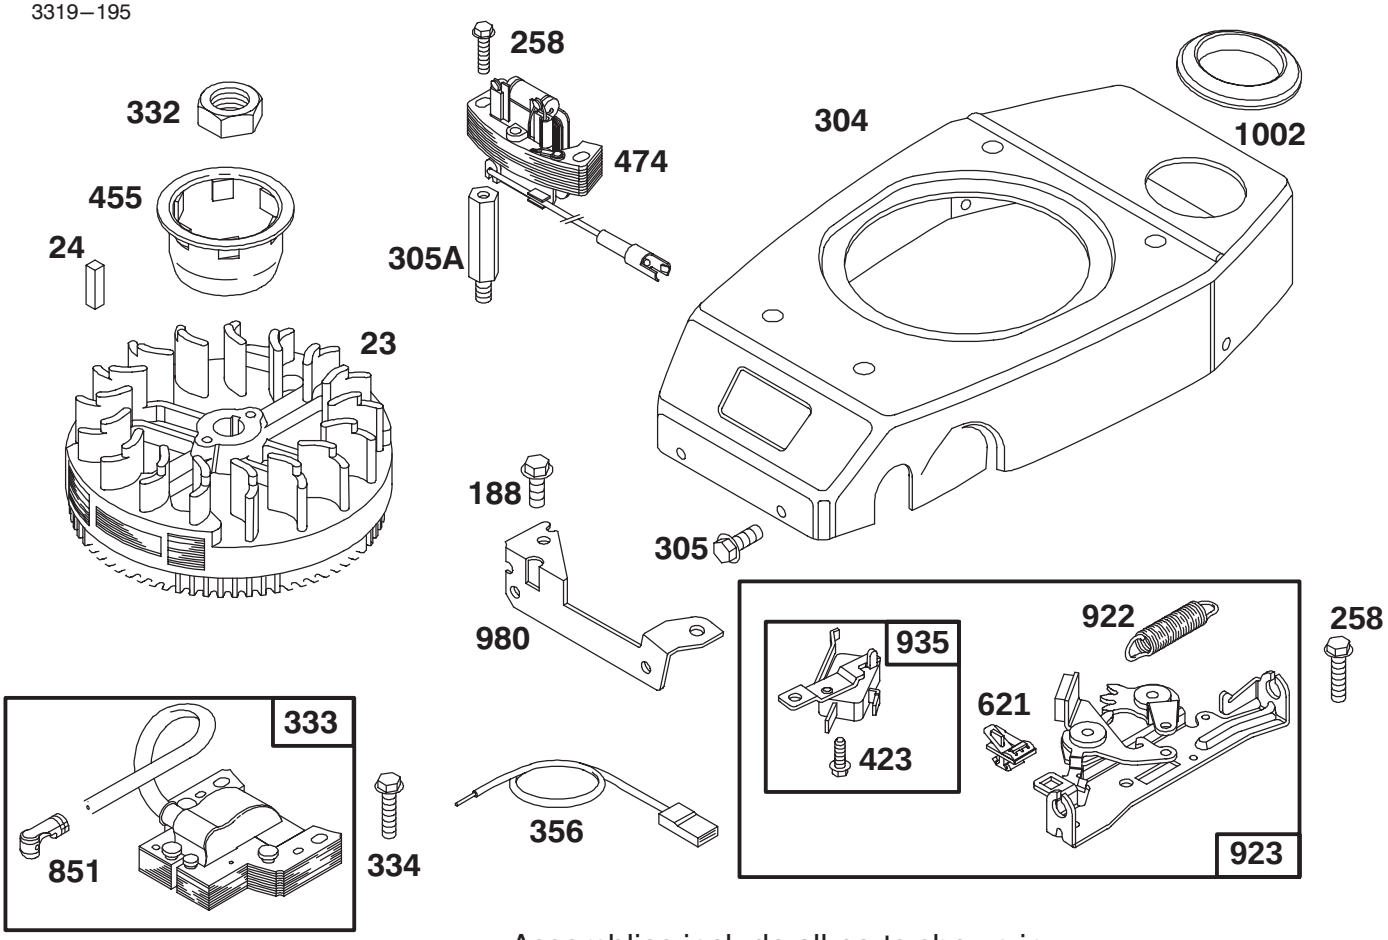


Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
23	77–8320	Flywheel	1
24	77–8340	Key – Flywheel	1
188	94–1665	Screw – Hex Head	1
258	77–8870	Screw – Hex Head	1
304	77–9480	Housing – Blower	1
305	77–8310	Screw – Hex Head	1
305A	77–8390	Stud	1
332	77–8360	Nut – Flywheel	1
333	77–8420	Armature – Magneto	1
334	77–7420	Screw – Armature Mtg.	1
356	77–8400	Wire – Ground	1

Ref. No.	Part No.	Description	No. Used
423	77–9520	Screw – Hex Head	1
455	94–1653	Cup – Starter	1
474	77–8370	Alternator	1
621	77–8010	Switch – Stop	1
851	77–9450	Terminal – Spark Plug	1
922	77–8860	Spring –Brake	1
923	77–9460	Brake Ass'y	1
935	77–9530	Switch – Starter	1
980	77–7140	Bracket – Blower Housing	1
1002	77–7180	Grommet	1

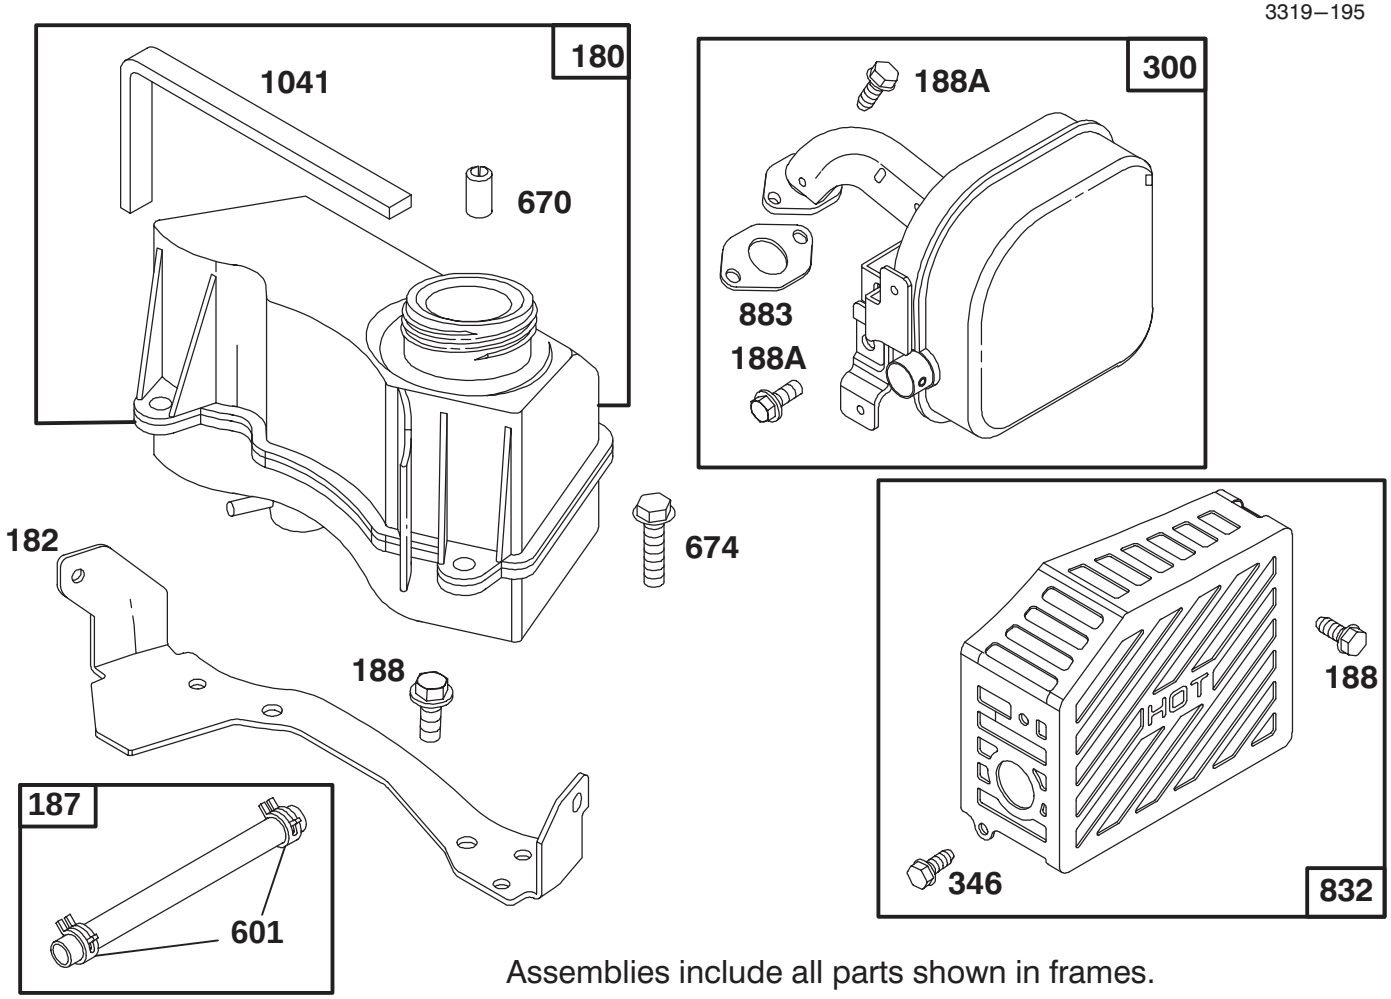

Assemblies include all parts shown in frames.


ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
180	77–7580	Tank Ass'y – Fuel	1
182	77–7170	Bracket – Fuel Tank	1
187	78–4100	Hose – Fuel (Cut To Suit)	1
188	94–1665	Screw – Hex Head	1
188A	94–1652	Screw – Hex.	1
300	77–8640	Muffler – Exhaust	1
346	77–8650	Screw – Hex	1

Ref. No.	Part No.	Description	No. Used
601	78–4690	Clamp – Fuel Hose	1
670	77–9030	Spacer – Fuel Tank (Includes 2)	1
674	77–8600	Screw – Tank Mtg.	1
832	77–9290	Guard – Muffler	1
★883	77–7760	Gasket – Exhaust	1
★1041	77–8590	Seal – Foam	1

★ Included in Gasket Set–Part No. 77–8900

3319–195

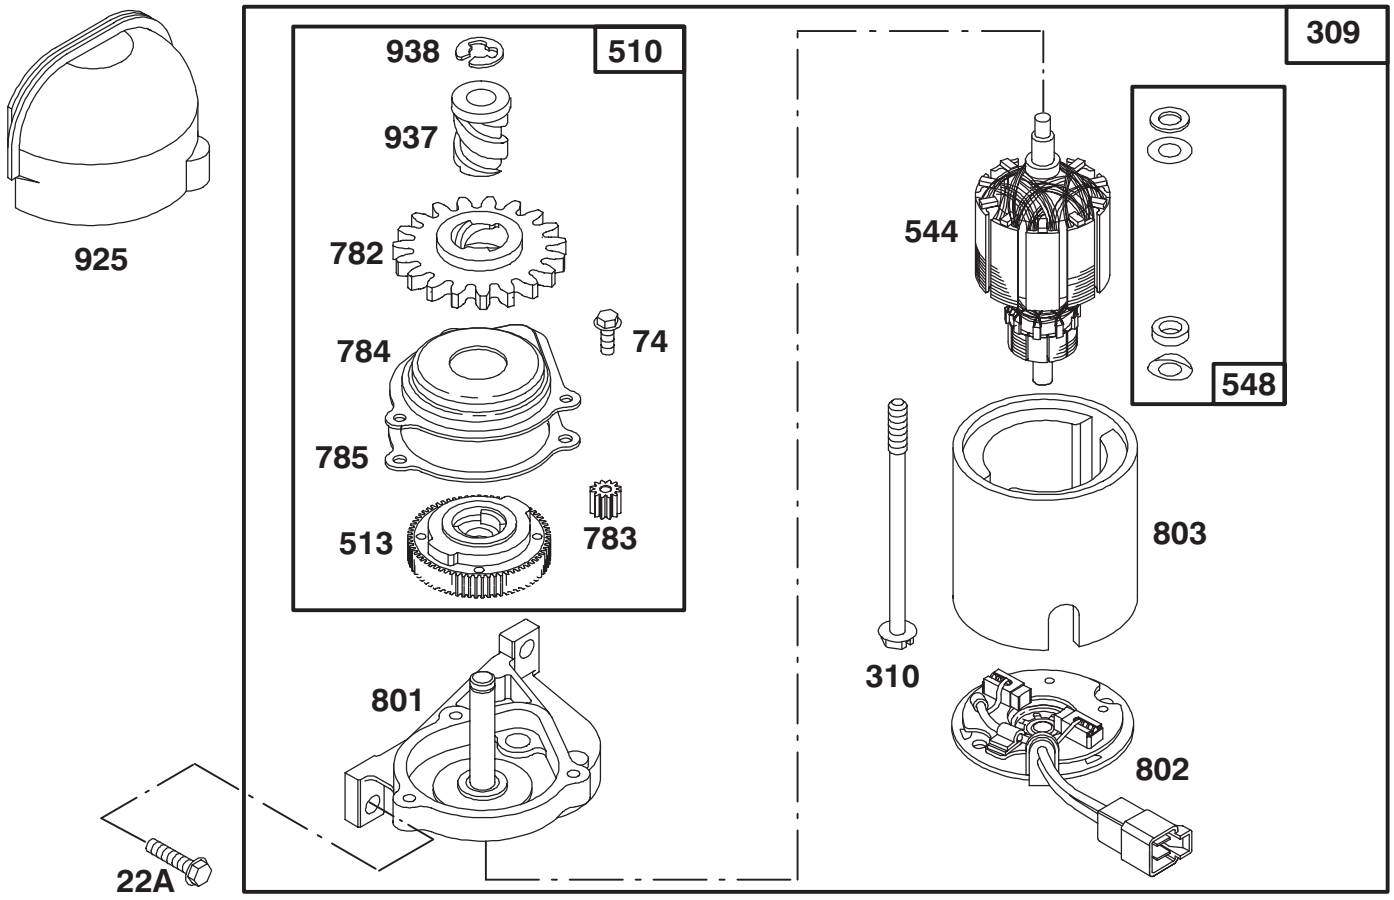


Assemblies include all parts shown in frames.


ENGINE GTS–150


Ref. No.	Part No.	Description	No. Used
22A	77–8720	Screw–Hex Head	1
74	77–8800	Screw–Hex Head	1
309	77–8670	Motor–Starter	1
310	77–8710	Screw–Hex Head	1
510	77–8910	Drive Kit	1
513	77–8770	Clutch Assembly	1
544	77–8730	Armature Assembly	1
548	77–8740	Washer Set	1
782	77–8810	Pinion–Starter	1

Ref. No.	Part No.	Description	No. Used
783	77–9540	Gear – Pinion	1
784	77–8780	Cover–Gear	1
785	77–8790	Gasket–Cover	1
801	77–8680	Bracket Assembly	1
802	77–8690	Head Assembly	1
803	77–8700	Shell and Magnet Ass'y	1
925	77–7200	Cover–Starter	1
937	77–8820	Spline–Starter	1
938	77–8830	Retainer–Lock	1

★ Included in Gasket Set–Part No. 77–8900

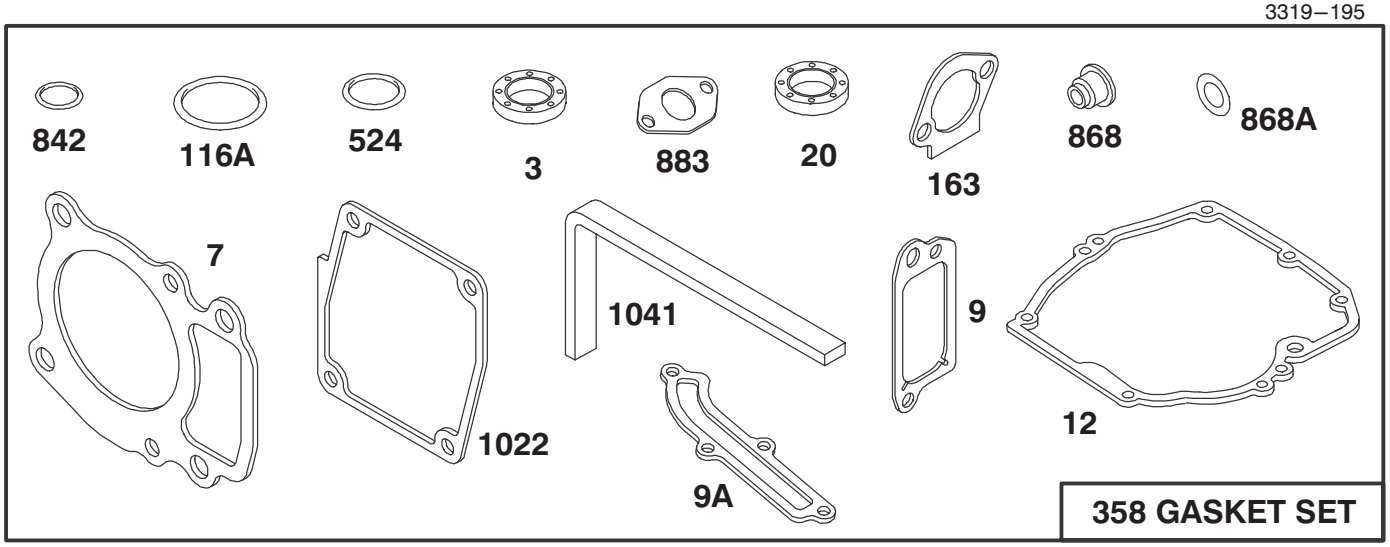

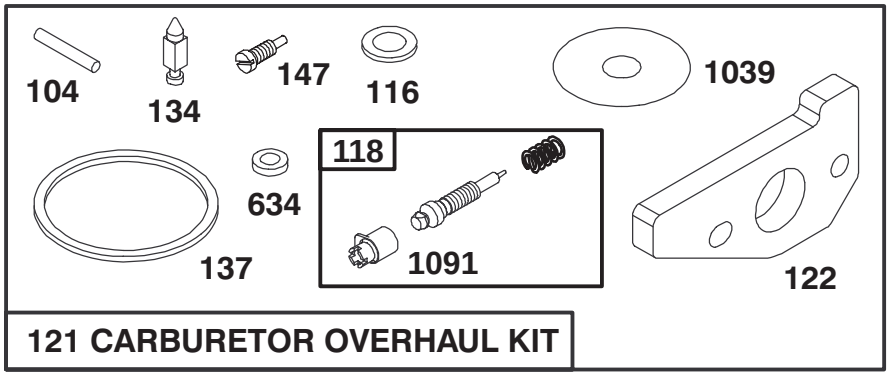

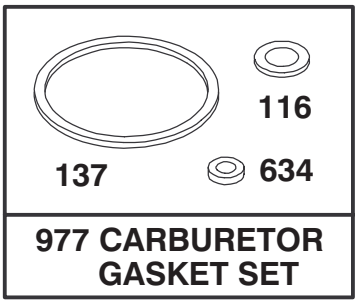

Assemblies include all parts shown in frames.

ENGINE GTS–150

Ref. No.	Part No.	Description	No. Used
★3	77–9060	Seal – Oil	1
★7	77–7740	Gasket – Cylinder Head	1
★9	77–9250	Gasket – Breather	1
★9A	77–7410	Gasket – Breather	1
★12	77–7550	Gasket – Engine Base	1
★20	77–7570	Seal – Oil	1
●104	77–8180	Pin – Float Hinge	1
●◆116	77–7660	Gasket – Sealing	1
★116A	77–8210	O-Ring	1
●118	77–9620	Valve and Spring – Needle	1
121	77–9580	Carburetor Kit	1
●122	77–7820	Adapter Assembly	1
●134	77–8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77–8200	Gasket – Float Bowl	1
●147	77–9640	Jet – Pilot	1
★163	77–7960	Gasket – Air Cleaner	1
358	77–8900	Gasket Set	1
★524	77–7270	Seal – O-Ring	1
◆634	77–8150	Washer – Seal	1
★842	77–7300	Seal – O-Ring	1
★868	77–7890	Seal Assy. – Valve	1
★868A	77–7900	Seal – Valve	1
★883	77–7760	Gasket – Exhaust	1
977	77–8930	Carburetor Gasket Set	1
★1022	77–7320	Gasket – Rocker Cover	1
●1039	77–7250	Limiter – Float	1
★1041	77–8590	Seal – Foam	1
●1091	77–9650	Cap – Limiter	1

●Included in Carburetor Kit–Part No. 77–9580
◆Incl. in Carburetor Gasket Set–Part No. 77–8930

★ Included in Gasket Set–Part No. 77–8900

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
14–9949	Wheel & Tire Assembly	1	20	2
14–9959	Wheel Tire & Gear Assy.	4	31	2
16–1769	Housing – 53cm	1	4	1
17–1569	Door – Discharge	1	9	1
17–9426	Screw – Handle	7	1	2
19–4050	Knob – Handle Release	6	12	2
22–4710	Charger – Battery (220V)	6	*	1
25–7740	Knob – Arm	4	3	2
25–7740	Knob – Arm	1	28	2
26–0670	Bolt – Blade	3	8	1
27–6231	Bolt – Wheel	1	22	2
27–6231	Bolt – Wheel	4	33	2
27–6250	Bushing – Wheel	1	21	4
27–6250	Bushing – Wheel	4	32	4
29–9570	Bushing – Yoke	4	38	1
36–4780	Washer – Thrust	4	44	1
36–4791	Washer – Thrust	5	48	2
36–8070	V–Belt	4	13	1
38–7820	Bearing – Ball	5	60	1
40–1940	Washer – Wheel Bolt	1	23	4
46–5520	Lever – Traction	7	7	1
46–5780	Switch – Starter	6	9	1
46–6432	Screw – Handle	7	9	1
48–2060	Bearing –Needle	4	21	2
49–2040	Screw – Self Tapping	4	8	8
52–7430	Control Bar Assembly	7	3	1
55–3760	Gear – Pinion 15T	5	49	1
55–3770	Gear – 49T (1st Gear)	5	58	1
55–3780	Gear – Pinion 20T	5	50	1
55–3790	Gear – 44T (2nd Gear)	5	57	1
55–3800	Gear – Pinion 25T	5	51	1
55–3810	Gear – 39T (3rd Gear)	5	56	1
55–7520	Battery	6	15	1
60–8710	Case – Gear (Upper)	5	61	1
60–8730	Cover – Gear Case	5	46	1
60–8750	Bushing – Intrmdt. Shaft	5	47	2
60–8770	Bushing – Output Shaft	5	45	1
60–8790	Sleeve – Gear	5	55	1
60–8800	Shaft – Intermediate	5	52	1
60–8810	Retainer – Shift Fork	4	39	1
60–8840	Pulley – Half	4	10	2
60–8850	Bushing – Output Shaft	5	53	1
60–8870	Yoke – Shift	4	37	1
60–8890	Pinion – Bevel	5	59	1
62–6660	Spacer	4	9	1
62–6673	Gear Case Assy. Complete	5	*	1
62–7540	Retainer – Blade	3	7	1
62–7550	Pulley – Engine	3	13	1
62–7700	Blade – 53cm	3	10	1
63–8360	Key – Ignition	6	3	1
65–2720	Ring – Retaining	4	24	4
65–4710	Ring – Friction	4	25	2
65–4720	Spring – Compression	4	29	2
65–4730	Washer – Thrust (Inner)	4	22	2
65–4740	Washer – Thrust (Keyed)	4	23	4
65–4750	Pinion	4	28	2
65–4760	Washer –Clutch	4	26	2
65–4770	Shaft – Output	4	17	1
65–5042	Pivot Arm Assembly	4	2	2
65–5190	Bracket – Belt Guide	4	7	1
65–5200	Cover	3	12	1
65–5210	Screw – Thread Forming	1	7	2
65–5220	Screw – Cap Socket Hd.	1	26	2
65–5220	Screw – Socket Hd. Cap	4	36	2
65–5250	Clip – Spring	4	43	1
65–5440	Spring Arm Assembly	4	4	2
65–5660	Panel – Screen	1	2	1
66–0020	Panel – Vertical	1	1	1
66–0030	Bracket – Cable Support	3	5	1
66–0330	Support – Spacer	7	2	2
66–0360	Cap – End	4	5	2
66–0540	Arm – Spring Front	1	25	2
66–0560	Screw – Shoulder	1	19	2
66–0570	Guide – Belt	3	11	1
66–0580	Arm – Pivot	2	30	2
66–0620	Retainer – Belt	1	16	1
66–5350	Lever – Control	7	5	1
66–6040	Key – Rocking (R.H.)	4	*	1
66–6050	Key – Rocking (L.H.)	4	27	1
70–9760	Bushing – Sleeve	4	19	2
71–0960	Support – Cable	7	8	1
71–7900	Cap – Hinge Bolt L.H.	1	10	1
71–7910	Cap – Hinge Bolt R.H.	1	6	1
71–8090	Mount – Handle L.H.	6	13	1
71–8100	Mount – Handle R.H.	6	14	1
71–8580	Spacer – Door	1	12	2
71–9470	Door – Bag	8	3	1
71–9480	Handle – Door	8	2	1
71–9640	Ramp – Discharge	1	27	1
71–9650	Access – Cover	1	14	1
71–9680	Bag – Grass 53cm	8	5	1
71–9840	Spring – Door	1	11	2
71–9870	Decal – Deck 53cm	2	29	1
71–9871	Decal – TORO	6	19	1
71–9920	Cover – Top	1	15	1
71–9930	Frame – Grass Bag	8	4	1
74–1660	Cover – Wheel	4	30	2
74–1670	Spacer – Wheel Cover	4	34	2
76–0760	Key – Shift	4	41	2
76–0770	Collar – Shift	4	42	1
76–0780	Sleeve – Shift Key	4	40	1
76–0920	Lever – Shift	4	16	1
76–2930	Retainer – Cable	4	15	1
77–7040	Cover – Air Cleaner	12	968	1
77–7140	Bracket – Blower Housing	14	980	1
77–7170	Bracket – Fuel Tank	15	182	1
77–7180	Grommet	14	1002	1
77–7200	Cover–Starter	16	925	1
77–7210	Insert – Rewind Handle	13	59	1
77–7240	Bowl – Fuel	11	136	1
77–7250	Limiter – Floater	11	1039	1
77–7250	Limiter – Floater	17	1039	1
77–7260	Dipstick – Oil	10	523	1
77–7270	Seal – O–Ring	10	524	1
77–7270	Seal – O–Ring	17	524	1
77–7280	Tube – Oil Filler	10	525	1
77–7300	Seal – O–Ring	10	842	1
77–7300	Seal – O–Ring	17	842	1
77–7320	Gasket – Rocker Cover	9	1022	1
77–7320	Gasket – Rocker Cover	17	1022	1
77–7330	Plug – Spark	9	337	1
77–7340	Elbow – Spark Plug	9	635	1
77–7360	Screw – Hex Head	9	10	1
77–7370	Lever Ass'y – Governor	10	227	1
77–7380	Bolt – Governor Lever	10	562	1
77–7390	Nut – Hex	10	592	1
77–7400	Cover – Breather	9	572	1
77–7410	Gasket – Breather	17	9A	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
77–7410	Gasket – Breather	9	9A	1
77–7420	Screw – Armature Mtg.	14	334	1
77–7420	Screw – Breather	9	307	1
77–7460	Crank – Governor	10	616	1
77–7470	Washer	10	230	1
77–7480	Pushnut	10	615	1
77–7490	Gear – Cam	10	46	1
77–7500	Gear – Governor	10	219	1
77–7530	Gear – Timing	10	741	1
77–7550	Gasket – Engine Base	10	12	1
77–7550	Gasket – Engine Base	17	12	1
77–7560	Base – Engine	10	18	1
77–7570	Seal – Oil	10	20	1
77–7570	Seal – Oil	17	20	1
77–7580	Tank Ass'y – Fuel	15	180	1
77–7590	Cylinder Ass'y	9	1	1
77–7600	Pin – Cylinder	9	718	1
77–7610	Tappet – Valve	9	45	1
77–7620	Rod – Push	9	1026	1
77–7630	Screw – Cylinder Head	9	13	1
77–7640	Pump – Oil	10	1024	1
77–7650	Cover – Oil Pump	10	979	1
77–7660	O-Ring	10	116A	1
77–7660	Gasket – Sealing	17	116	1
77–7670	Rod – Connecting	10	29	1
77–7690	Piston Ass'y (Std.)	10	25	1
77–7700	Ring Set (Std.)	10	26	1
77–7710	Lock – Piston Pin	10	27	1
77–7730	Head – Cylinder	9	5	1
77–7740	Gasket – Cylinder Head	17	7	1
77–7740	Gasket – Cylinder Head	9	7	1
77–7760	Gasket – Exhaust	9	883	1
77–7760	Gasket – Exhaust	15	883	1
77–7760	Gasket – Exhaust	17	883	1
77–7770	Guide – Push Rod	9	1034	1
77–7780	Stud – Rocker Arm	9	166	1
77–7790	Arm – Rocker	9	1029	1
77–7800	Cap – Valve	9	238	1
77–7810	Spring – Valve	9	35	1
77–7820	Adapter Ass'y	11	122	1
77–7820	Adapter Assembly	17	122	1
77–7820	Adapter Ass'y	9	122	1
77–7860	Valve – Exhaust	9	33	1
77–7870	Retainer – Spring	9	40	1
77–7880	Valve – Intake	9	34	1
77–7890	Seal Ass'y – Valve	9	868	1
77–7890	Seal Ass'y – Valve	17	868	1
77–7900	Gasket – Valve	9	868	1
77–7900	Seal – Valve	17	868	1
77–7910	Ball & Screw –	9	192	1
77–7920	Screw – Air Cleaner	12	969	1
77–7930	Screw – Air Cleaner	12	971	1
77–7940	Base – Air Cleaner	12	966	1
77–7950	Element – Filter	12	535	1
77–7960	Gasket – Air Cleaner	12	163	1
77–7960	Gasket – Air Cleaner	17	163	1
77–7970	Screw – Hex Head	11	124	1
77–7980	Link – Governor	12	201	1
77–7990	Spring – Governor	12	209	1
77–8000	Bracket – Carburetor	12	620	1
77–8010	Switch – Stop	12	621	1
77–8010	Switch – Stop	14	621	1
77–8020	Screw Ass'y –	12	98A	1
77–8040	Tube – Vent	11	1011	1
77–8080	Valve – Throttle	11	130	1
77–8090	Screw – Valve Mtg.	11	95	1
77–8110	Valve – Inlet	11	134	1
77–8110	Valve – Inlet	17	134	1
77–8130	Shaft – Choke	11	141	1
77–8140	Spring – Choke	12	618	1
77–8150	Washer – Seal	11	634	1
77–8150	Washer – Seal	17	634	1
77–8160	Shaft – Throttle	11	131	1
77–8170	Float – Carburetor	11	133	1
77–8180	Pin – Float Hinge	11	104	1
77–8180	Pin – Float Hinge	17	104	1
77–8190	Bowl Ass'y – Carburetor	11	975	1
77–8200	Gasket – Float Bowl	11	137	1
77–8200	Gasket – Float Bowl	17	137	1
77–8210	Sealing – Gasket	11	116	1
77–8210	O–Ring	17	116	1
77–8220	Screw – Hex Head	11	955	1
77–8230	Valve & Spring – Needle	11	118	1
77–8240	Screw – Idle Adj.	11	98	1
77–8300	Screw – Hex Head	13	65	1
77–8310	Screw – Hex Head	10	305	1
77–8310	Screw – Hex Head	14	305	1
77–8320	Flywheel	14	23	1
77–8340	Key – Flywheel	14	24	1
77–8360	Nut – Flywheel	14	332	1
77–8370	Alternator	14	474	1
77–8390	Stud	14	305A	1
77–8400	Wire – Ground	14	356	1
77–8420	Armature – Magneto	14	333	1
77–8450	Starter Ass'y – Rewind	13	608	1
77–8520	Handle – Rewind Starter	13	60	1
77–8590	Seal – Foam	15	1041	1
77–8590	Seal – Foam	17	1041	1
77–8600	Screw – Tank Mtg.	15	674	1
77–8640	Muffler – Exhaust	15	300	1
77–8650	Screw – Hex	15	346	1
77–8670	Motor–Starter	16	309	1
77–8680	Bracket Assembly	16	801	1
77–8690	Head Assembly	16	802	1
77–8700	Shell and Magnet Ass'y	16	803	1
77–8710	Screw–Hex Head	16	310	1
77–8720	Screw–Hex Head	16	22A	1
77–8730	Armature Assembly	16	544	1
77–8740	Washer Set	16	548	1
77–8770	Clutch Assembly	16	513	1
77–8780	Cover–Gear	16	784	1
77–8790	Gasket–Cover	16	785	1
77–8800	Screw–Hex Head	16	74	1
77–8810	Pinion–Starter	16	782	1
77–8820	Spline–Starter	16	937	1
77–8830	Retainer–Lock	16	938	1
77–8860	Spring –Brake	14	922	1
77–8870	Screw – Hex Head	14	258	1
77–8900	Gasket Set	17	358	1
77–8910	Drive Kit	16	510	1
77–8930	Carburetor Gasket Set	17	977	1
77–8953	Engine	3	1	1
77–9020	Short Block	9		1
77–9030	Spacer – Fuel Tank	15	670	1
77–9060	Seal – Oil	9	3	1
77–9060	Seal – Oil	17	3	1
77–9070	Screw – Engine Base	10	22	1
77–9200	Screw – Hex Head	9	10A	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
77–9240	Plug – Pipe	10	15	1
77–9250	Gasket – Breather	9	9	1
77–9250	Gasket – Breather	17	9	1
77–9290	Guard – Muffler	15	832	1
77–9300	Breather Ass'y	9	8	1
77–9310	Screw – Set	9	192A	1
77–9320	Cover – Valve	9	1023	1
77–9330	Crankshaft	10	16	1
77–9340	Pin Ass'y – Piston	10	28	1
77–9350	Screw – Conn. Rod	10	32	1
77–9410	Tube – Breather	9	11	1
77–9450	Terminal – Spark Plug	14	851	1
77–9460	Brake Ass'y	14	923	1
77–9470	Tube – Breather	12	529	1
77–9480	Housing – Blower	14	304	1
77–9520	Screw – Hex Head	14	423	1
77–9530	Switch – Starter	14	935	1
77–9540	Gear – Pinion	16	783	1
77–9550	Cover – Brake	3	18	1
77–9580	Carburetor Kit	17	121	1
77–9600	Valve – Choke	11	108	1
77–9610	Jet – Main	11	117	1
77–9620	Valve & Spring – Needle	17	118	1
77–9630	Carburetor Ass'y	11	125	1
77–9640	Jet – Pilot	17	147	1
77–9640	Adapter – Jet	11	147	1
77–9650	Cap – Limiter	11	1091	1
77–9650	Cap – Limiter	17	1091	1
78–4100	Hose – Fuel	15	187	1
78–4690	Clamp – Fuel Hose	15	601	1
80–4795	Harness – Wire	6	10	1
86–7990	Screw – Clamp	3	16	1
92–2289	Plate – TORO Logo	3	2	1
92–9665	Screw – Self Tapping	6	17	5
93–4105	Decal – Danger	1	13	1
93–4355	Decal – Recoil	3	3	1
93–6628	Cable – Brake	7	15	1
93–6631	Control – Throttle	6	6	1
93–6632	Control – Ground Speed	6	1	1
93–6634	Cable – Traction	7	10	1
93–6668	Decal – Battery	6	20	1
93–7198	Gas Cap Assembly	3	4	1
94–1652	Screw – Hex	15	187A	1
94–1653	Cup – Starter	14	455	1
94–1654	Pawl – Starter	13	459	1
94–1655	Spring – Torsion	13	515	1
94–1657	Pulley – Rewind Starter	13	56	1
94–1658	Rope – Starter	13	58	1
94–1659	Retainer – Rewind Starter	13	456	1
94–1660	Screw – Rewind Starter	13	461	1
94–1664	Wrench – Spark Plug	9	383	1
94–1665	Screw – Hex Hd.	10	188	1
94–1665	Screw – Hex Hd.	12	188	1
94–1665	Screw – Hex Hd.	14	188	1
94–1665	Screw – Hex Hd.	15	188	1
94–1666	Housing – Rewind Starter	13	55	1
94–1667	Spring – Rewind	13	57	1
94–1682	Fuse – 5 Amp	6	*	1
94–4910	Handle	6	7	1
95–3014	Decal – Instructions	6	8	1
95–3017	Cover – Battery	6	16	1
95–4478	Guide – Rope	7	13	1
95–6133	Panel Control	6	18	1
218–461	Nut – Lock	6	4	1
2210–249	Clamp – Throttle	3	15	1
2210–316	Stop – Rope	3	17	1
237–153	Seal – ORing	4	18	2
302–56	Fitting – Grease	4	20	2
321–3	Screw – Cap Hex. Hd.	7	6	1
322–29	Screw – Hex Hd. Cap	1	8	2
3229–34	Bolt – Carrigae	6	21	2
3253–22	Washer – Blade	3	9	1
3254–5	Washer – Lock	6	5	1
3256–14	Washer – Flat	6	22	2
3256–22	Washer – Flat	7	11	1
3256–24	Washer – Flat	4	12	1
3256–24	Washer – Flat	1	17	1
3272–5	Pin – Cotter	4	14	1
3290–378	Tie – Cable	6	11	5
3296–2	Nut – Lock	6	23	2
3296–5	Nut – Lock	4	11	1
3296–6	Nut – Lock	1	24	4
3296–6	Nut – Lock	4	35	2
3296–42	Nut – Lock	7	4	3
3296–58	Nut – Lock	7	12	2
32121–120	Pin – Coil	5	54	1
32144–15	Screw – Hex Flange Hd.	1	18	1
32144–70	Screw – Cap Hex. Hd.	1	3	6
32144–70	Screw – Hex Hd. Cap	3	6	7
32144–70	Screw – Hex. Washer Hd.	4	1	5
32144–102	Screw – Thread Forming	3	14	3
32144–111	Screw – Index Hex Washer	8	1	5

*Not Illustrated