
FORM NO. 3319–181 REV. A

TORO®

1338XL LAWN TRACTOR

Model No. 71208 – 7900001 & Up

Parts Catalog

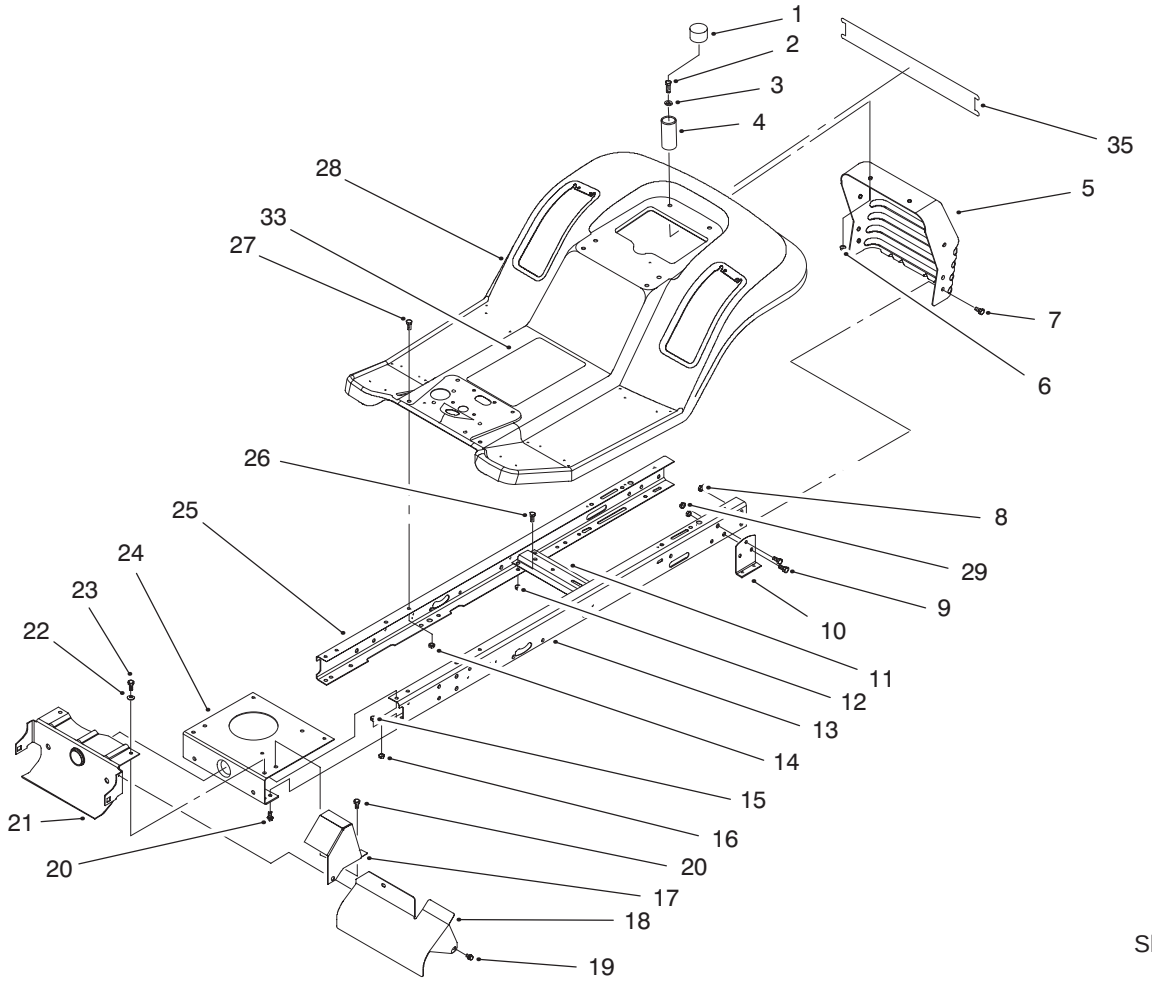


Sheet No.:2

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap–Protector
2	322–5	2	Screw–HH
3	3256–23	2	Washer–Flat
4	88–6220	2	Spring – Compression
5	88–3940–03	1	Panel – Rear
6	3296–29	2	Nut–Lock
7	322–3	4	Screw–HH
8	3296–29	4	Nut–Lock
9	322–3	4	Screw–HH
10	88–5260–03	2	Bracket–Transaxle Mounting
11	88–4620–03	1	Bracket – Idler Pivot
12	3296–29	4	Nut–Lock
13	94–1999–03	1	Frame Rail–LH
14	3296–29	2	Nut–Lock
15	3296–29	6	Nut–Lock
16	3296–29	2	Nut–Lock
17	88–4960–03	1	Shield – Exh. Pipe
18	88–6290–03	1	Shield – Muffler
19	32104–76	1	Screw–Self TAP
20	322–3	6	Screw–HH
21	88–5120–03	1	Support – Front Axle
22	3256–23	2	Washer–Flat
23	322–3	2	Screw–HH
24	88–4630–03	1	Plate – Engine Mounting

Ref. No.	Part No.	Qty.	Description
25	94–1998–03	1	Frame Rail–RH
26	322–3	4	Screw–HH
27	322–3	2	Screw–HH
28	88–3840	1	Body – Rear
29	3296–29	4	Nut–Lock
33	93–6675	1	Decal–Instruct
35	93–4144	1	Decal–Rear Body

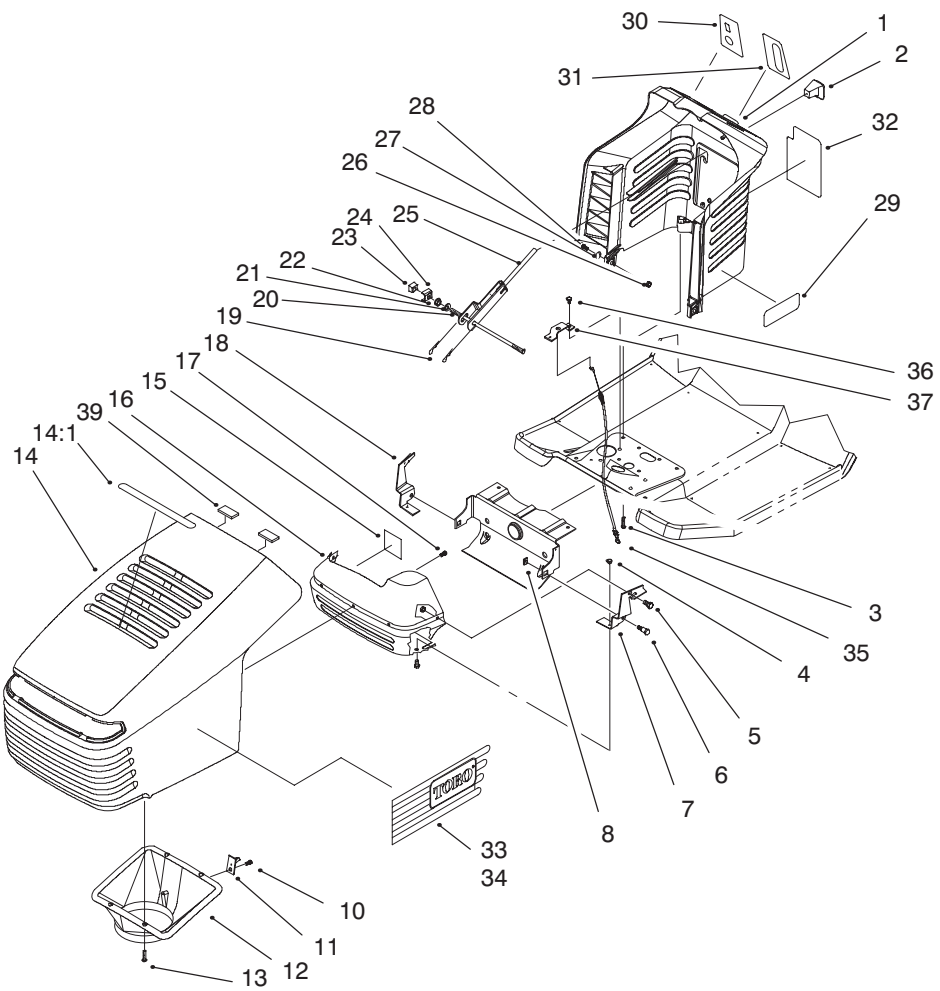


Sheet No.:3

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	93–0303	1	Tower–Steering Toro
2	94–5565	1	Knob – Control
3	46–8091	2	Screw–Tapping
4	3296–42	4	Nut–Lock
5	321–2	4	Screw–HH
6	28–0540	2	Bolt–Shoulder
7	88–6050–03	1	Bracket – Hinge
8	3290–496	2	Nut – Retained
10	46–8091	1	Screw–Tapping
11	94–1984	1	Pin–Latch
12	88–4050	1	Duct – Hood Air
13	46–8090	4	Screw–Tapping
14	92–8650	1	Hood–Toro
14:1	92–5748	1	Decal – Air Duct
15	92–5782	1	Patch – Heat Tape
16	88–3930–03	1	Shield – Heat
17	46–8090	3	Screw–Tapping
18	88–6040–03	1	Bracket – Hinge
19	3290–307	2	Pin–Cotter
20	88–4170	1	Rod – Pivot
21	3256–24	2	Washer–Flat
22	32128–43	2	Nut–Flange
23	88–4140	2	Nut – Wedge
24	88–4160	2	Clamp – Pivot Rod
25	88–5190–03	1	Lever W.a. – Deck Engage

Ref. No.	Part No.	Qty.	Description
26	3296–29	2	Nut–Lock
27	3256–23	2	Washer–Flat
28	322–3	2	Screw–HH
29	93–4145	2	Decal – Tower
30	92–5731	1	Decal–Ign/Lights
31	92–5730	1	Decal – Throttle
32	93–6673	1	Decal – Deck Engage
33	92–2468	1	Decal – Hood Left
34	92–2467	1	Decal – Hood Right
35	94–4293	1	Cable ASM–Deck Engage
36	9266714	2	Screw–HWHTF
37	93–3849	1	Brkt–Cable
39	94–1980	2	Foam–Hood

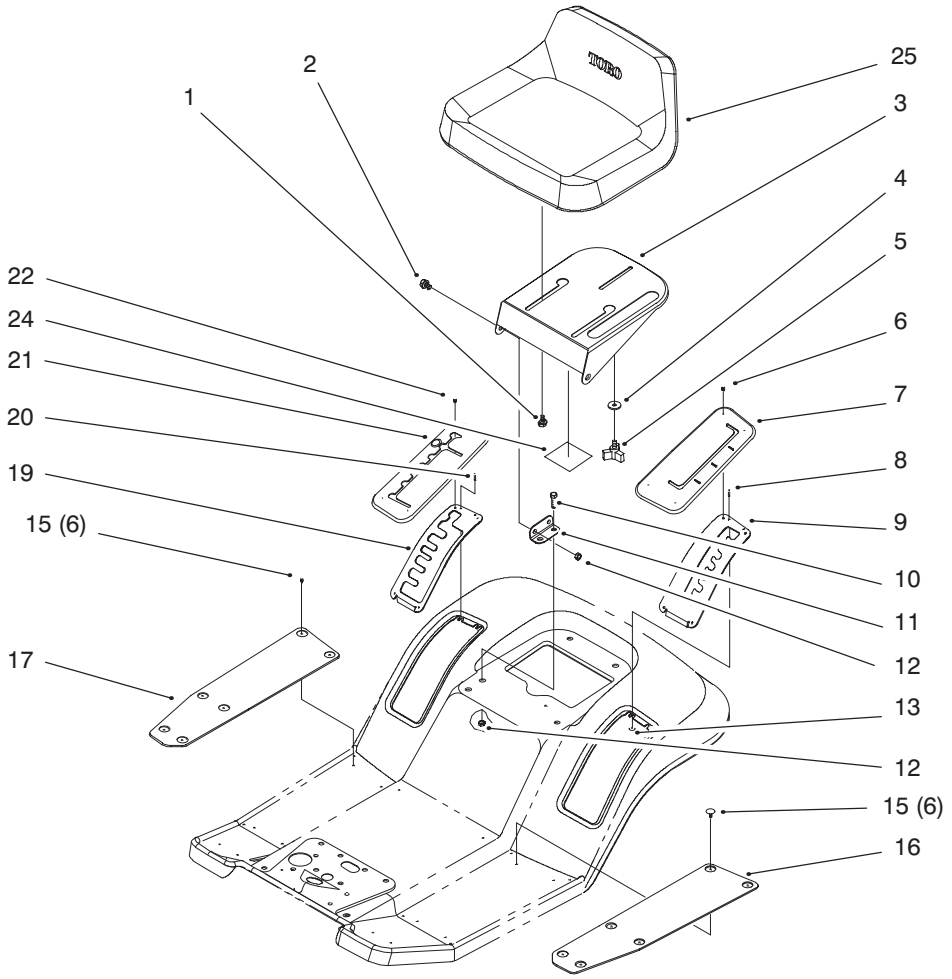


Sheet No.:4

Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	37–8770	2	Bolt–Shldr
2	37–8770	2	Bolt–Shldr
3	88–4910–03	1	Support – Seat
4	5–4460	1	Washer–Fender
5	92–9674	1	Knob–Studded
6	3290–479	4	Fastener–Panel
7	93–7657	1	Cover – HOC
8	3290–282	2	Pop Rivet
9	88–5030–03	1	Gate – HOC
10	322–3	4	Screw–HH
11	88–4820–03	2	Bracket – Seat Hinge
12	3296–29	6	Nut–Lock
15	3290–479	12	Fastener–Panel
16	88–5240	1	Foot Mat
17	88–5220	1	Foot Mat
19	88–5020–03	1	Plate – Shift Gate
20	3290–282	2	Pop Rivet
21	93–7656	1	Cover – Shift Gate
22	3290–479	4	Fastener–Panel
24	114621	1	Decal–Noise
25	88–3950	1	Seat

Ref. No.	Part No.	Qty.	Description

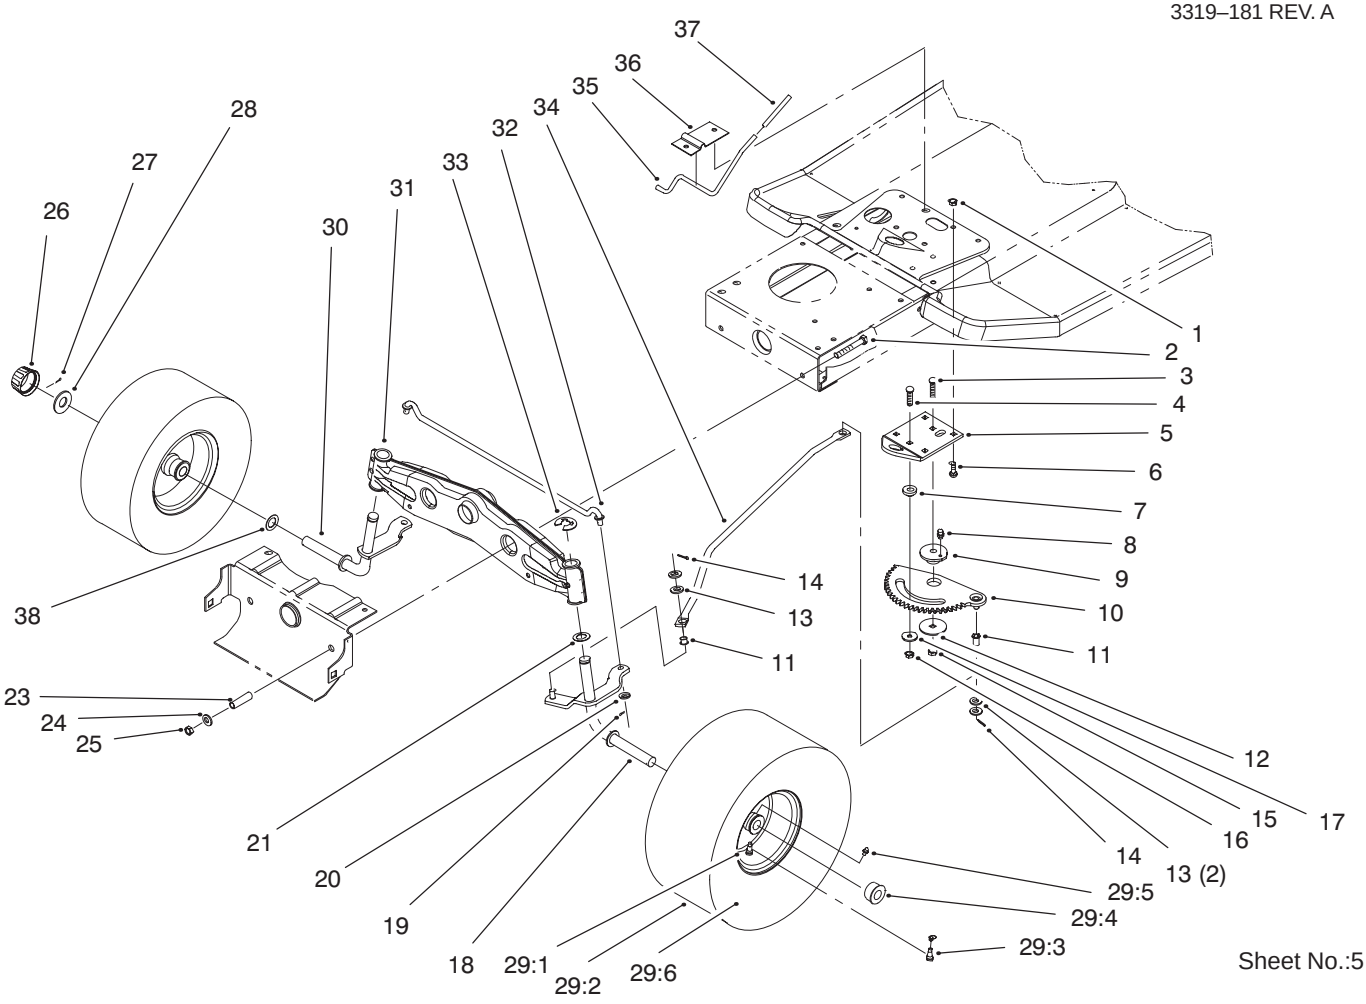


Sheet No.:5

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–29	4	Nut–Lock
2	323–13	2	Screw–HH
3	3231–4	1	Bolt–CARR
4	3230–3	1	Screw–CARR
5	88–5130–03	1	Bracket – Steering Rack
6	3230–1	4	Bolt–CARR
7	88–5010	1	Spacer – Steering Rack
8	302–26	1	Fitting–Grease
9	88–4670	1	Bushing – Eccentric
10	88–5200	1	Steering Rack W.a.
11	52–2891	2	Bushing – Steering Links
12	111419	1	Washer–Bearing
13	3256–25	4	Washer–Flat
14	3272–10	2	Pin–Cotter
15	3296–39	1	Nut–Lock
16	3296–29	1	Nut–Lock
17	5–4460	1	Washer–Fender
18	92–7890–03	1	Spindle Wa–LH
19	3272–10	2	Pin–Cotter
20	3256–24	2	Washer–Flat
21	3–6498	2	Washer–Thrust
23	88–5470	2	Spacer – Front Axle
24	3256–24	2	Washer–Flat

Ref. No.	Part No.	Qty.	Description
25	3296–39	2	Nut–Lock
26	61–9780	2	Hubcap
27	3272–12	2	Pin–Cotter
28	28–2480	2	Washer–Flat
29:1	88–4370	2	Rim ASM–15” Front
29:2	88–4070	2	Tire 15x6.00–6
29:3	232–27	2	Valve Stem & Cap Assemby
29:4	88–4400	2	Bearing–Wheel
29:5	302–5	2	Fitting–Grease
29:6	232–39	2	Tube–Inner 15x6–6
30	92–7889–03	1	Spindle Wa–RH
31	94–1962–03	1	Front Axle Wa
32	88–5380	1	Tie Rod – Steering
33	32151–48	2	Ring–Retaining
34	88–4830	1	Link – Drag
35	88–5510	1	Rod–Parking Brake
36	88–5520–03	1	Bracket–Parking Brake
37	88–0890	1	Grip – Parking Brake
38	3–6498	4	Washer–Thrust

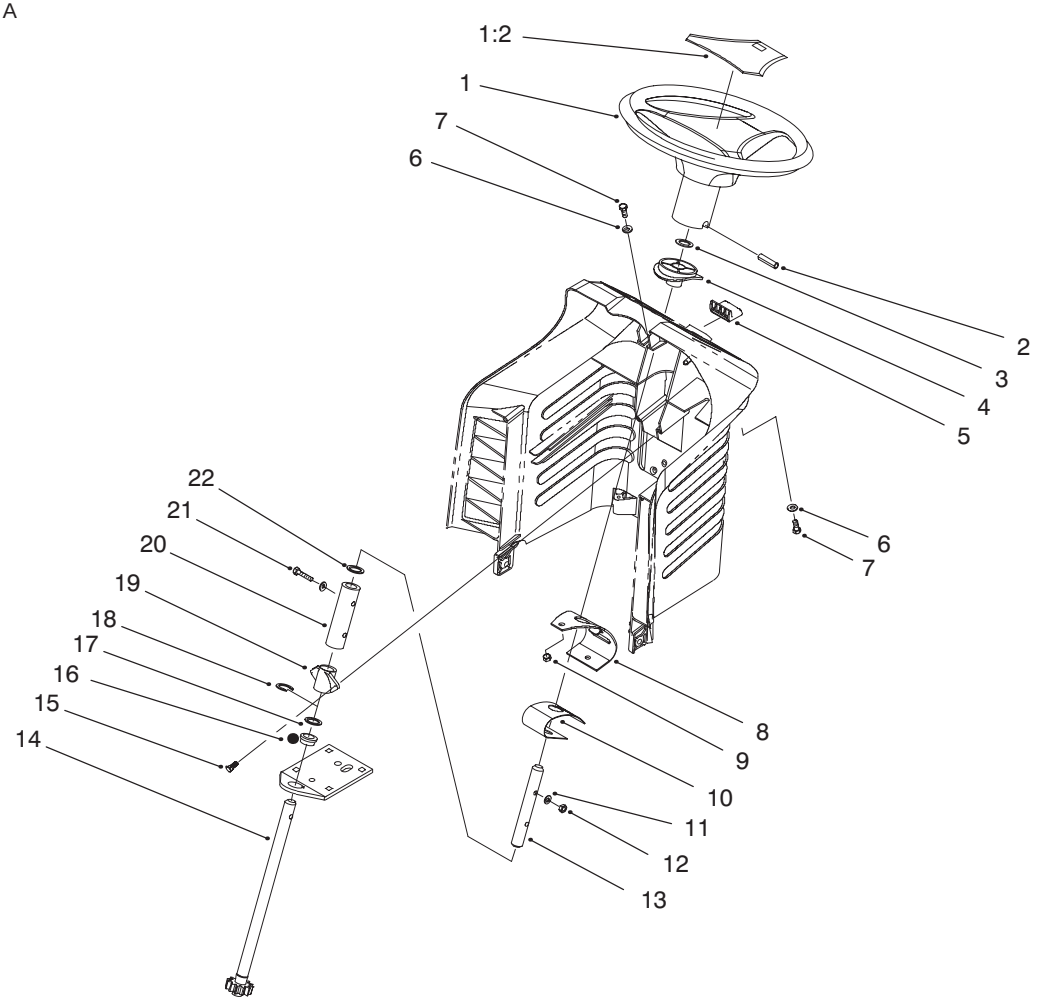


Sheet No.:6

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	88–3850	1	Steering Wheel
1:2	88–3870	1	Cover–Steering Wheel
2	32121–111	1	Pin–Spiral
3	32151–81	1	Retaining Ring Push–On
4	88–4190	1	Bushing – Sliding
5	88–4180	1	Button – Release
6	3256–22	2	Washer–Flat
7	321–4	2	Screw–HH
8	88–5180–01	1	Bracket – Backup
9	3296–42	2	Nut–Lock
10	88–4890	1	Spring – Leaf
11	3–7501	4	Washer–Curved
12	3296–42	2	Nut–Lock
13	88–6300	1	Shaft – Steering
14	88–6370	1	Shaft W.a. – Steering
15	27–0220	2	Screw–Special HWH
16	88–5150	1	Bushing – Flange
17	3–6498	1	Washer–Thrust
18	32151–48	1	Ring–Retaining
19	88–4210	1	Bushing – Stationary
20	88–6090	1	Coupling – Steering
21	321–9	2	Screw–HH
22	3–6498	1	Washer–Thrust

Ref. No.	Part No.	Qty.	Description

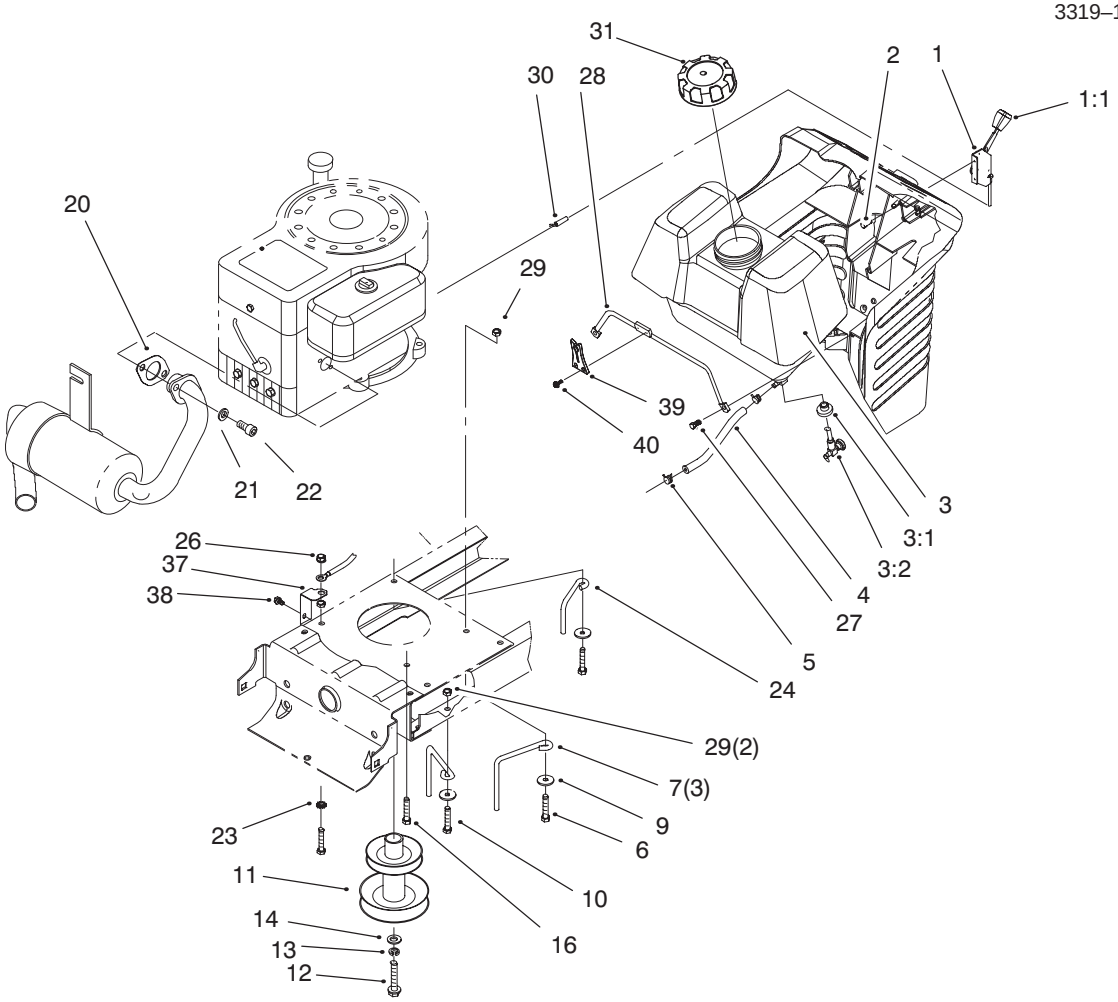


Sheet No.:8

Gas Tank & Engine Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	88–4340	1	Throttle Control ASM
1:	66–0120	1	Knob
2	27–0220	2	Screw–Special HWH
3	88–3880	1	Gas Tank Assembly
3:1	104047	1	Bushing
3:2	104048	1	Assembly–Valve
4	47–2963	1	Fuel Line
5	2412–98	2	Clamp–Hose
6	322–9	3	Screw–HH
7	93–3854	3	Belt Guide – Engine
9	5–4460	4	Washer–Fender
10	322–5	2	Screw–HH
11	94–1963	1	Pulley Assy–Engine
12	26–0671	1	Bolt–Blade
13	3253–22	1	Washer–Lock
14	3256–25	1	Washer–Flat
16	9267154	1	Screw
20	88–4410	1	Gasket – Muffler
21	3253–4	2	Washer–Lock
22	3274–10	2	Screw–Sckt Hd
23	3255–8	1	Washer–Lock
24	93–3855	1	Belt Guide – R.h.
26	32149–1	2	Nut–Keps
27	27–0220	2	Screw–Special HWH
28	94–1952	1	Rod–Gas Tank
29	3296–29	4	Nut–Lock

Ref. No.	Part No.	Qty.	Description
30	88–4350	1	Cable ASM–Throttle
31	88–3980	1	Gas Cap ASM
37	93–3809	1	Bracket–Ground
38	9266714	1	Screw–HWHTF
39	94–1951	1	Latch–Hood
40	32144–112	2	Screw–Thd Form

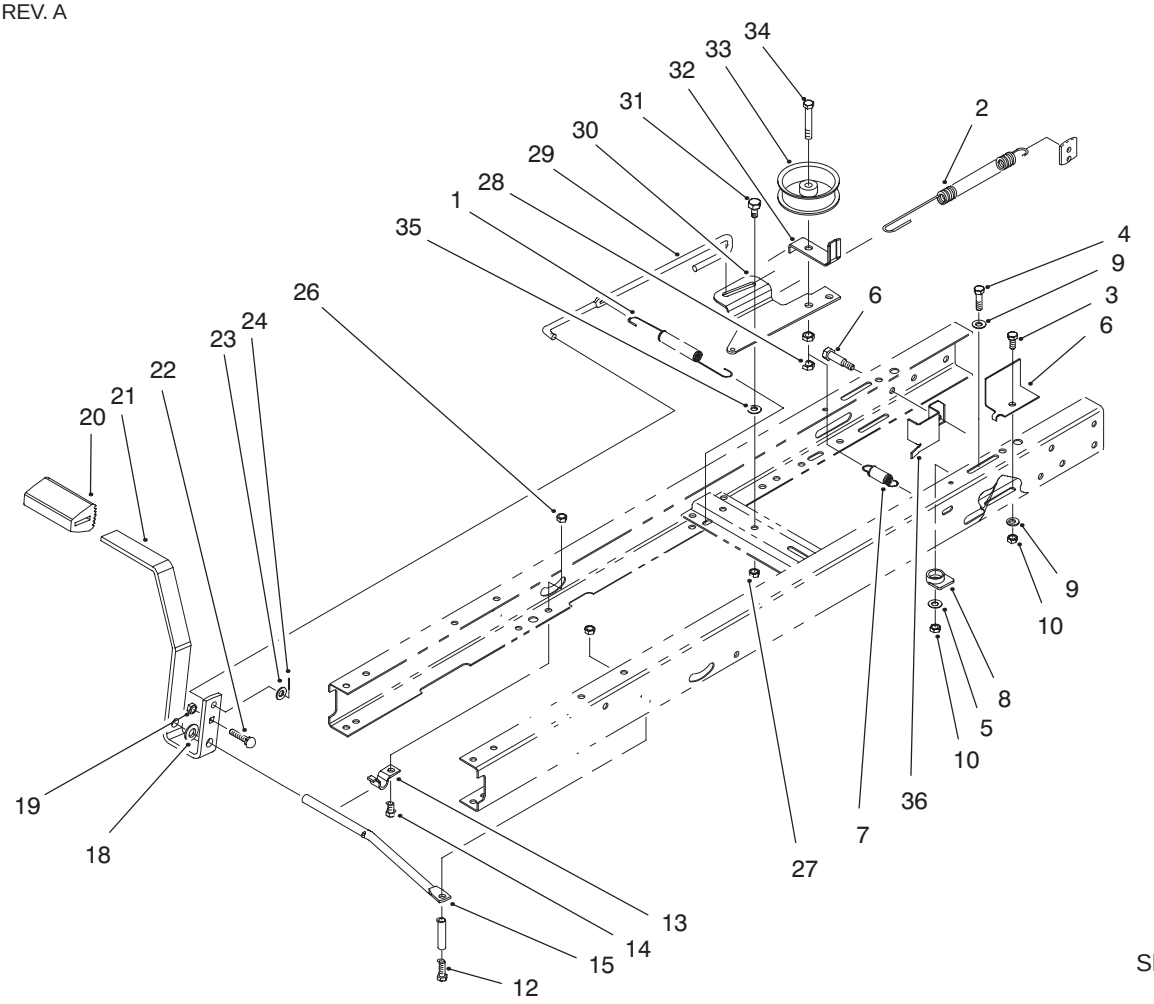


Sheet No.:9

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	27–8890	1	Spring – Pedal Return
2	94–4294	1	Spring–Brake
3	322–3	1	Screw–HH
4	322–6	1	Screw–HH
5	5–4460	1	Washer–Fender
6	94–5433	1	Bracket–Belt Guide
7	88–6330	1	Spring – Extension
8	84–5610	1	Guide–Cable
9	3256–23	2	Washer–Flat
10	3296–29	2	Nut–Lock
13	88–4810	1	Clamp – Shift Pivot
14	322–3	2	Screw–HH
15	88–5500	1	Rod – Pedal Pivot
18	3256–26	1	Washer–Flat
19	3296–29	1	Nut–Lock
20	65–2920	1	Pad–Pedal
21	88–5000–03	1	Pedal – Clutch/Brake
22	3230–3	1	Screw–CARR
23	3256–23	1	Washer–Flat
24	3272–10	1	Pin–Cotter
26	3296–29	2	Nut–Lock
27	3296–29	1	Nut–Lock
28	3296–59	2	Nut–Lock
29	88–5270	1	Rod – Clutch/Brake
30	88–6070	1	Arm –Idler
31	37–8770	1	Bolt–Shldr

Ref. No.	Part No.	Qty.	Description
32	88–5560	1	Belt Guide – Idler
33	88–5680	1	Idler Pulley
34	323–11	1	Screw
35	5–4460	1	Washer–Fender
36	94–4926	1	Bracket–Belt Guide

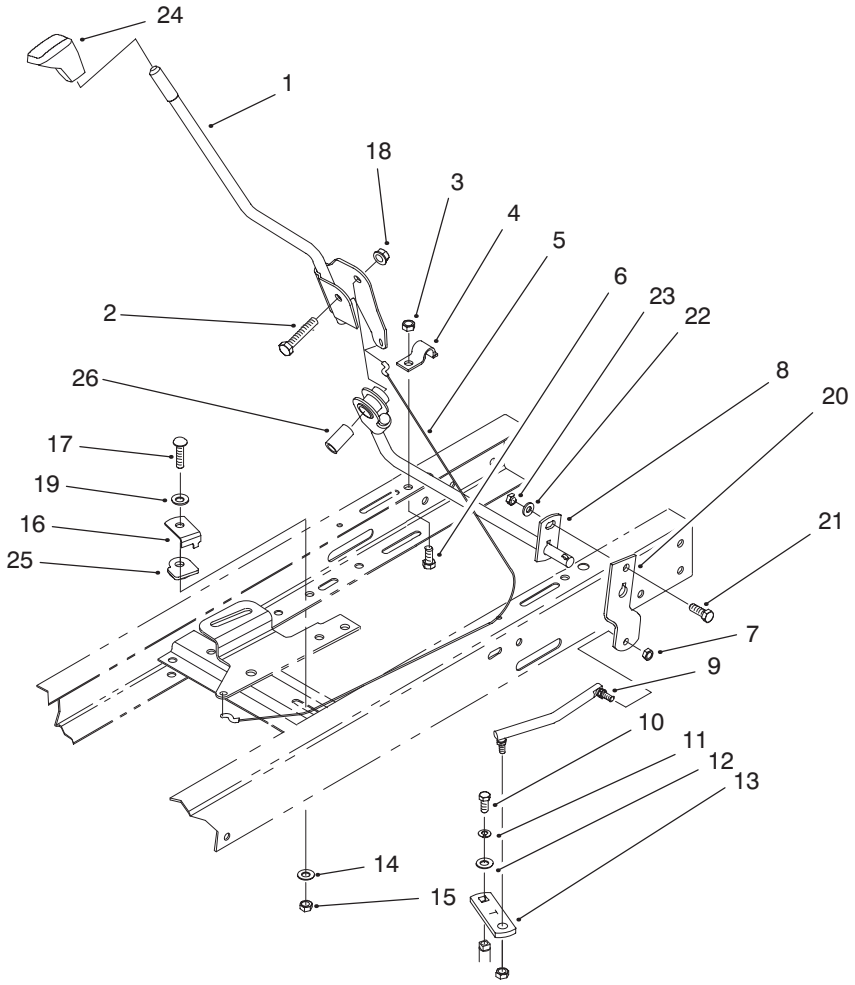


Sheet No.:10

Shift Assembly

Ref. No.	Part No.	Qty.	Description
1	94–1991–03	1	Shift Lever Wa
2	323–10	1	Screw–HH
3	3296–29	2	Nut–Lock
4	88–4810	2	Clamp – Shift Pivot
5	55–9321	1	Cable–Clutch
6	322–3	2	Screw–HH
7	3296–3	2	Nut–Lock
8	94–1993–03	1	Shift Pivot Wa
9	94–5431	1	Link–Shift
10	329–23	1	Screw
11	3253–3	1	Washer–Lock
12	7–5461	1	Spacer–Transmission
13	88–5340	1	Lever – Shift (Transaxle
14	3256–23	1	Washer–Flat
15	3296–29	1	Nut–Lock
16	88–5930	1	Keeper – Cable
17	3230–3	1	Screw–CARR
18	3296–39	1	Nut–Lock
19	3256–25	1	Washer–Flat
20	94–1968	1	Lever–Shift Pivot
21	322–3	1	Screw–HH
22	3256–23	1	Washer–Flat
23	3296–29	1	Nut–Lock
24	94–5565	1	Knob – Control

Ref. No.	Part No.	Qty.	Description
25	84–5610	1	Guide–Cable
26	94–1997	1	Bushing–Shift Lever

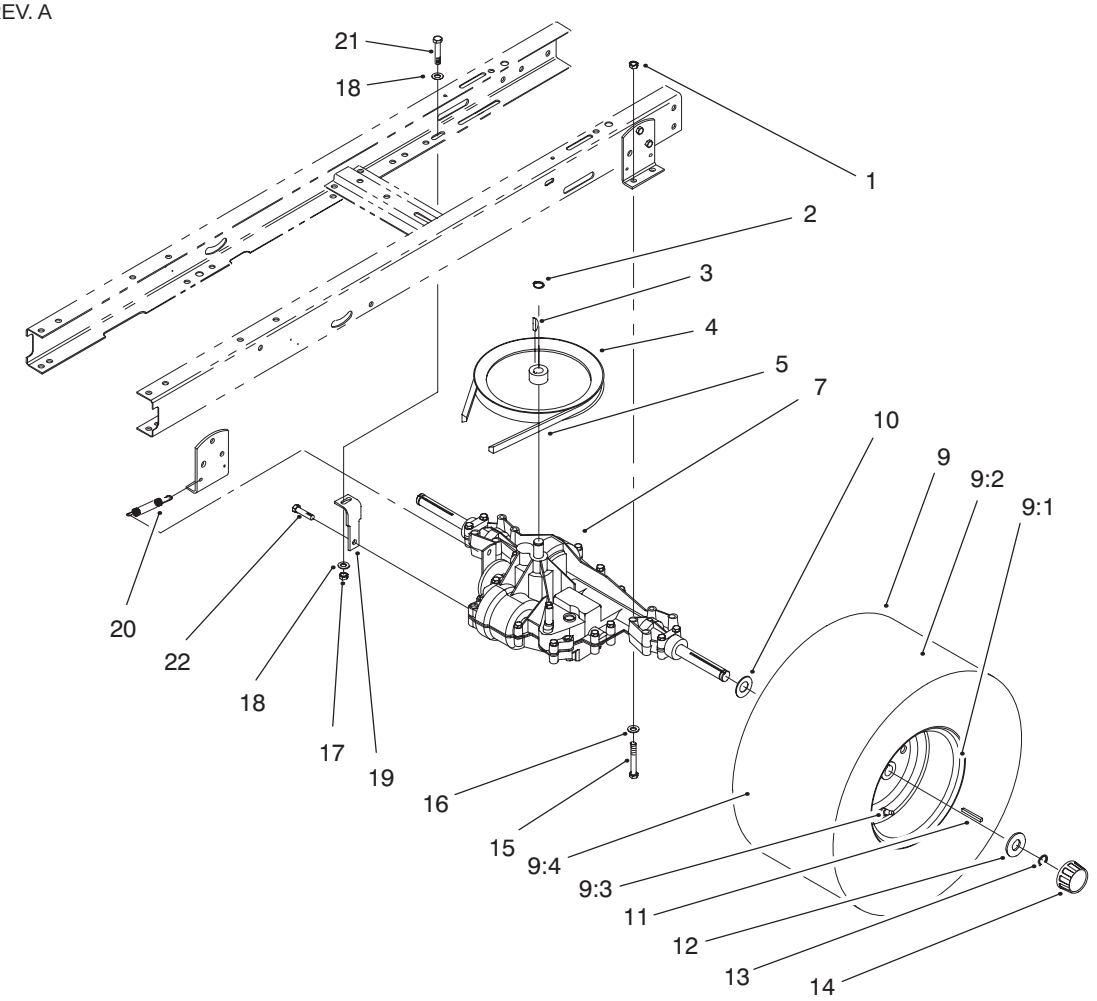


Sheet No.:11

Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296–29	4	Nut–Lock
2	32120–64	1	Ring–Retaining
3	3257–23	1	Key–Woodruff
4	88–4840	1	Pulley – Transmission
5	88–6270	1	V–Belt
7	94–6022	1	Transaxle – Peerless 931
9	88–4300	2	Rear Wheel & Tire ASM
9:1	88–4390	2	Rim ASM–18” Rear
9:2	88–4090	2	Tire 18x9.50–8
9:3	232–27	2	Valve Stem & Cap Assemby
9:4	232–41	2	Tube–Inner 18x9.50–8
10	3–6498	2	Washer–Thrust
11	7–0036	2	Key–Square
12	28–2480	2	Washer–Flat
13	32151–48	2	Ring–Retaining
14	61–9780	2	Hubcap
15	322–12	4	Screw HH
16	3256–23	4	Washer–Flat
17	3296–29	2	Nut–Lock
18	3256–23	4	Washer–Flat
19	94–1969	2	Strap–Torque
20	26–6701	1	Spring – Extension

Ref. No.	Part No.	Qty.	Description
21	322–3	2	Screw–HH
22	32144–14	2	Screw–HWH

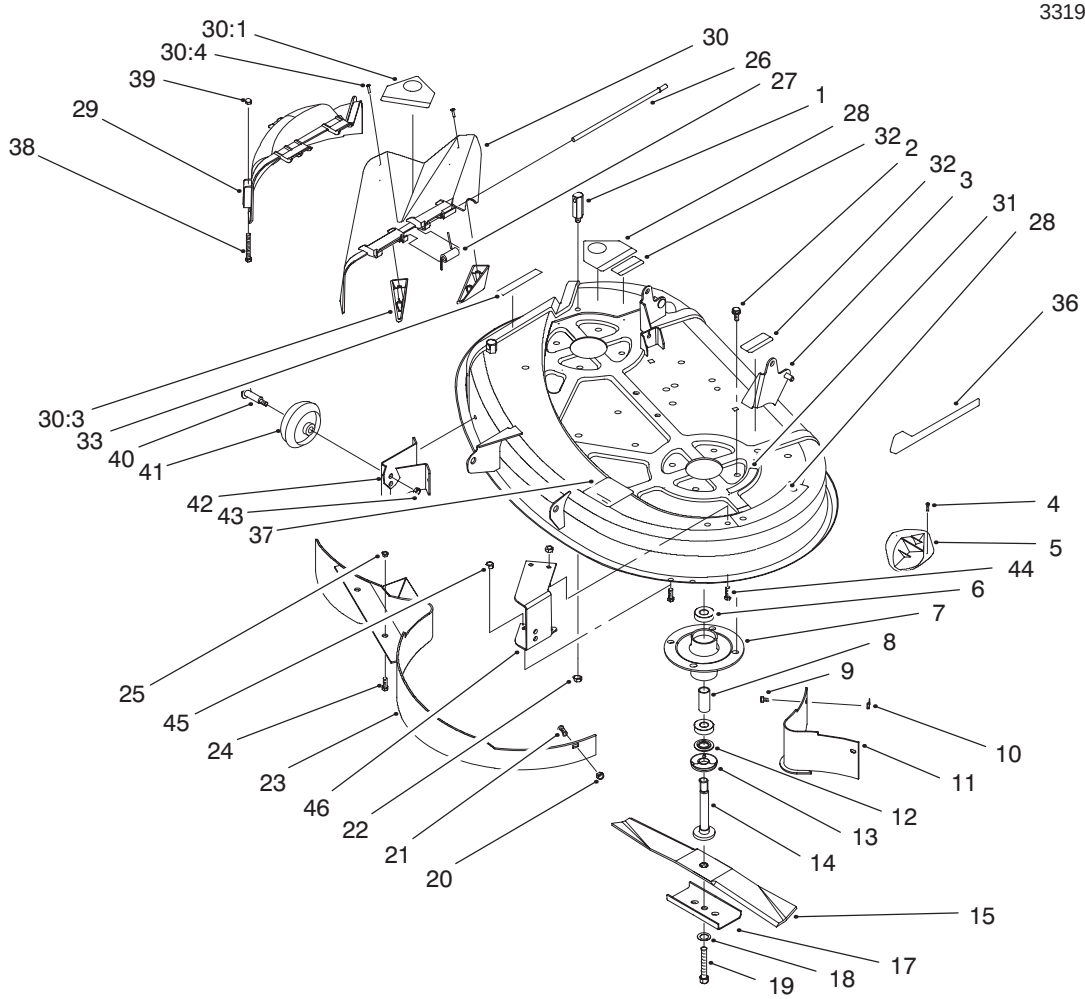


Sheet No.:16

Deck Assembly (38” Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	57–4360	1	Pivot Post – Rear
2	32144–41	8	Screw–HWHTF
3	94–1949–01	1	Deck Wa–38”
4	32144–111	8	Screw – PPH
5	76–2160	4	Plate–Kicker
6	38–7820	4	Bearing–Ball
7	88–4510	2	Spindle – Diecast Alum.
8	62–3661	2	Spacer – Bearing
9	321–4	2	Screw–HH
10	3296–42	2	Nut–Lock
11	79–1640–03	1	Wa–Baffle
12	80–4380	2	Spacer – Hardened
13	80–4360	2	Shield – Bearing
14	80–4341	2	Shaft – Spindle
15	79–3061	2	Blade–19.32 Recycler
17	80–0510	2	Stiffener – Blade
18	3290–465	2	Washer–Spring
19	26–0671	2	Bolt–Blade
20	3296–29	1	Nut–Lock
21	3230–1	1	Bolt–CARR
22	3296–39	1	Nut–Lock
23	79–1600–03	1	Wa–Baffle
24	323–5	2	Screw–HH
25	3296–39	2	Nut–Lock
26	57–4380	1	Rod– Hinge Deflector

Ref. No.	Part No.	Qty.	Description
27	57–6950	1	Spring–Torsion Deflector
28	93–7010	2	Decal–Danger
29	88–4430	1	Recycler Cover ASM
30	93–7695	1	ASM.–38” Deflector
30:1	93–7010	1	Decal–Danger
30:3	93–7696	2	Kicker – Ce
30:4	93–0231	4	Screw–Plastite
31	93–6677	1	Decal – Shield Danger
32	93–6674	2	Decal–Warninig
33	93–7009	1	Decal–Deflector Danger
36	92–9520	1	Decal–Deck
37	93–6679	1	Decal – Belt Routing
38	321–15	2	Screw–HH
39	32111–7	2	Nut–Cap
40	56–6591	2	Wheel Bolt
41	701756	2	Wheel – Deck
42	88–5740–03	1	Bracket–Deck Wheel RH
43	3296–39	2	Nut–Lock
44	322–3	6	Screw–HH
45	3296–29	6	Nut–Lock
46	93–3896–03	1	Bracket–Deck Wheel LH

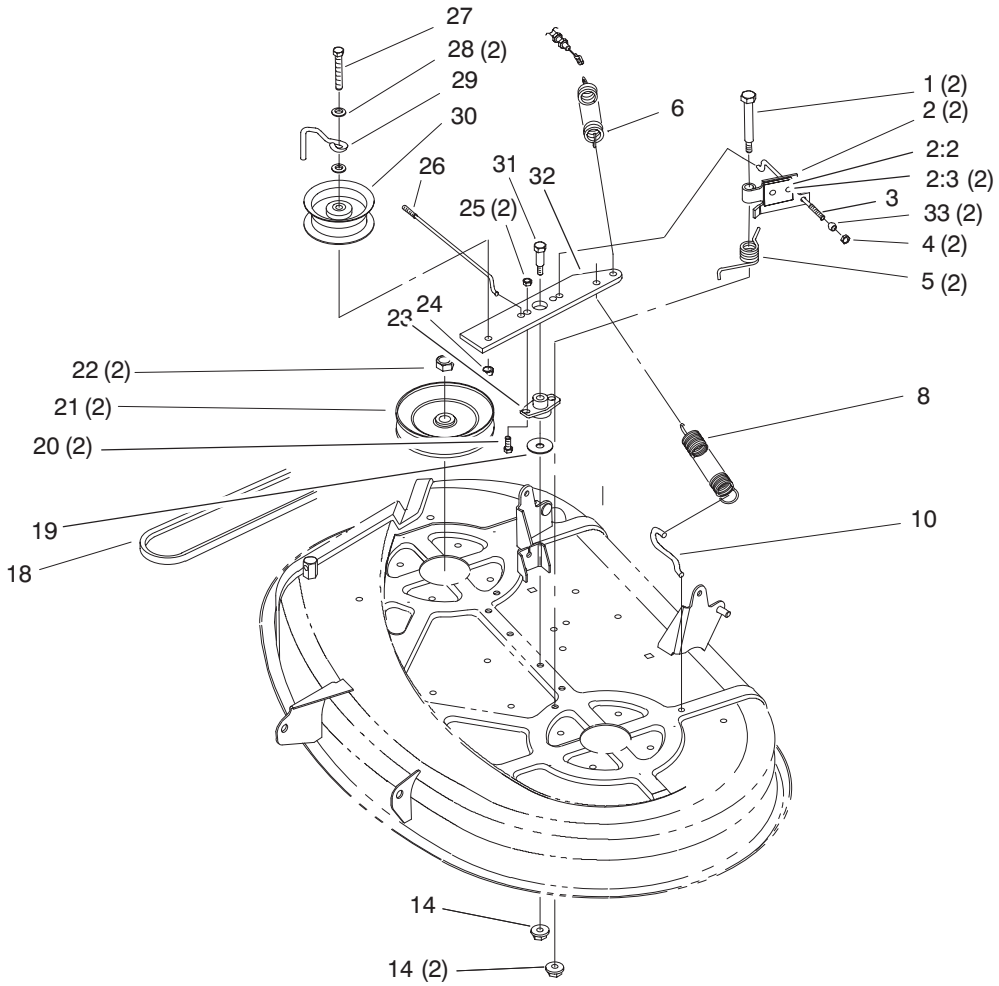


Sheet No.:17

Pulley & Belt Assembly (38” Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	88–4590	2	Bolt–Shoulder
2	88–6100	2	ASM. – Deck Brake
2:2	56–9830	2	Brake Pad
2:3	3290–282	4	Pop Rivet
3	88–5550	1	Rod –LH Deck Brake
4	3296–42	2	Nut–Lock
5	88–5910	2	Spring – Torsion
6	88–6130	1	Spring – Deck Engage
8	92–8934	1	Spring – Extension
10	88–5970	1	Hook – Return Spring
14	3296–58	3	Nut–Flange
18	88–6250	1	V–Belt
19	3256–68	1	Washer–Flt
20	322–5	2	Screw–HH
21	88–5330	2	Pulley – Deck
22	3219–6	2	Nut–Hex
23	88–4980	1	Bushing – Idler Arm
24	3296–39	1	Nut–Lock
25	3296–29	2	Nut–Lock
26	88–5540	1	Rod –RH Deck Brake
27	323–12	1	Screw
28	3256–24	2	Washer–Flat
29	88–5070	1	Belt Guide – Idler
30	88–5630	1	Pulley – Idler
31	7–0030	1	Shoulder Bolt

Ref. No.	Part No.	Qty.	Description
32	88–4870–03	1	Arm – Idler
33	67–0710	2	Ball – Swivel

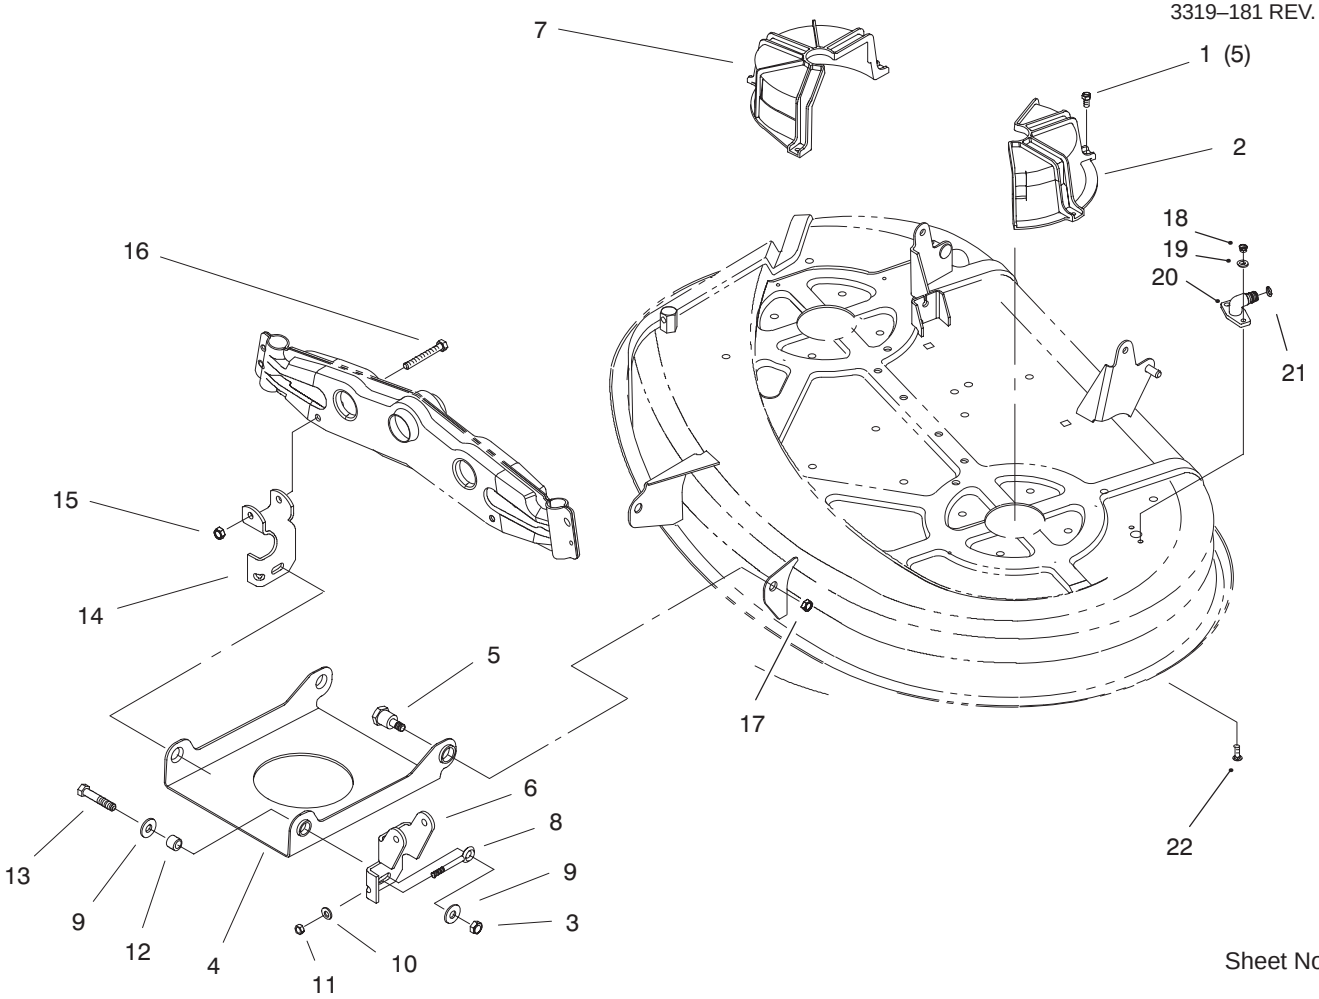


Sheet No.:18

Suspension Assembly (38” Cutting Unit)

Ref. No.	Part No.	Qty.	Description
1	32104–76	5	Screw–Self TAP
2	88–4030	1	Belt Guide – Deck
3	3296–39	2	Nut–Lock
4	93–3881–03	1	Pan – Front Deck Suspens
5	94–5823	2	Bolt–Shoulder
6	94–1971–03	1	Bracket–Deck Susp
7	88–4020	1	Belt Guide – Deck
8	61–9980	2	Screw–Adjusting
9	80–6990	4	Washer–Hardened
10	3256–22	2	Washer–Flat
11	3296–42	2	Nut–Lock
12	93–9847	2	Spacer
13	323–9	2	Screw–HH
14	94–1970–03	1	Bracket–Deck Susp
15	3296–29	2	Nut–Lock
16	322–12	2	Screw HH
17	3296–23	2	Nut–Lock
18	3296–16	2	Nut–Lock
19	3256–1	2	Washer–Flat
20	95–2747	1	Fitting–Washout
21	46–6290	1	0–Ring
22	3229–1	2	Bolt–CARR.

Ref. No.	Part No.	Qty.	Description

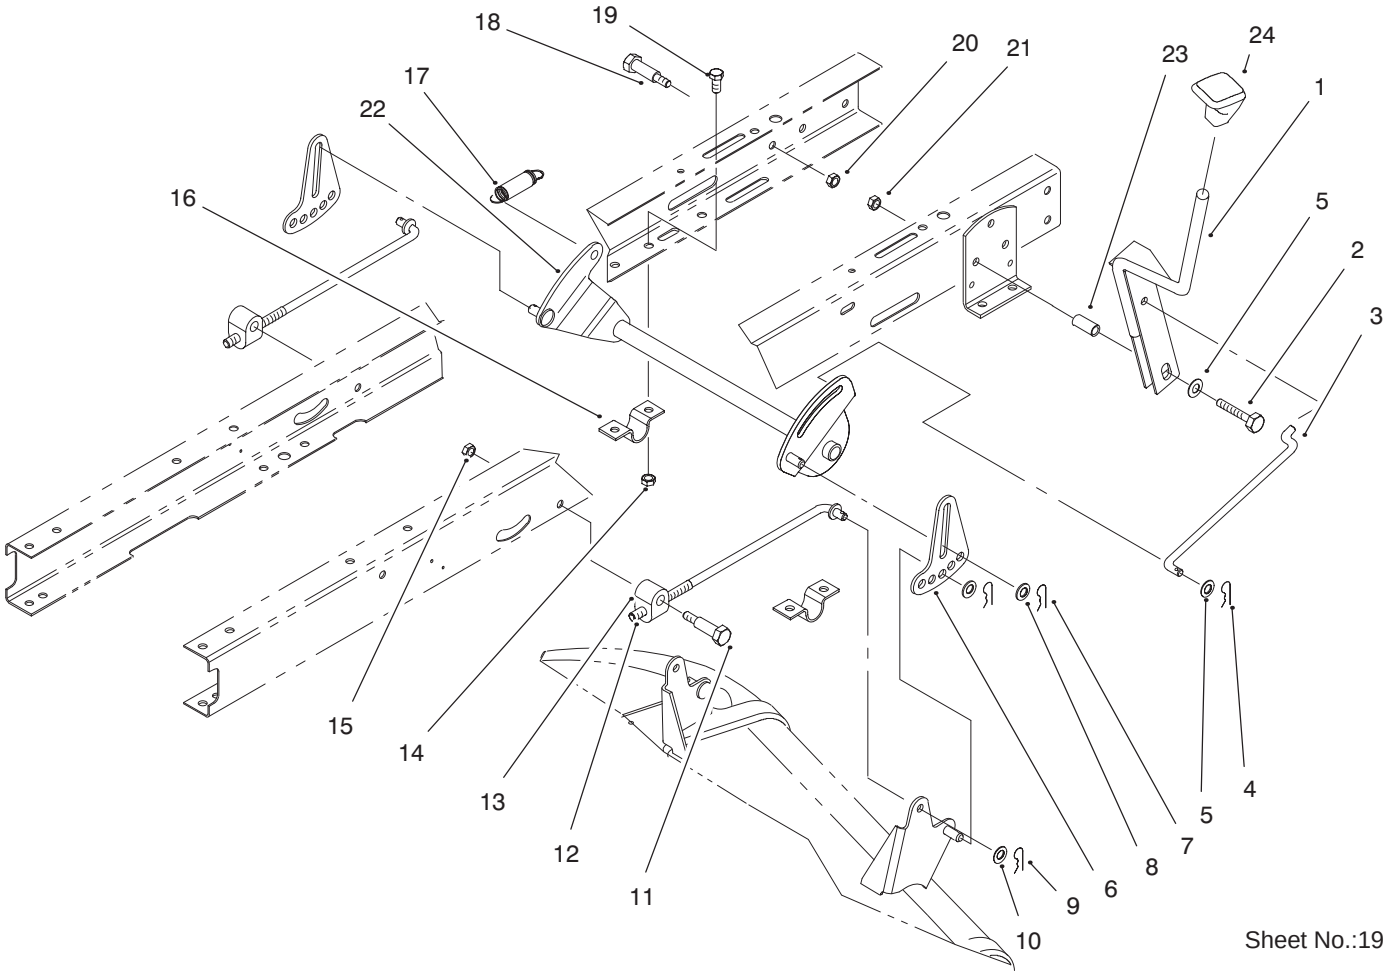


Sheet No.:19

Height of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	93–3822–03	1	Lever–HOC
2	322–9	1	Screw–HH
3	88–5900	1	Link – HOC
4	3290–307	1	Pin–Cotter
5	3256–24	2	Washer–Flat
6	88–5570–03	2	Link–Adjusting HOC
7	3290–307	4	Pin–Cotter
8	80–6990	4	Washer–Hardened
9	3290–307	2	Pin–Cotter
10	3256–24	2	Washer–Flat
11	7–0030	2	Shoulder Bolt
12	88–5450	2	Rod – Hanger
13	88–4230	2	Trunnion – HOC
14	3296–29	4	Nut–Lock
15	3296–29	2	Nut–Lock
16	88–4730	2	Clamp – HOC Pivot
17	88–6460	1	Spring – Extension
18	7–0030	1	Shoulder Bolt
19	322–3	4	Screw–HH
20	3296–29	1	Nut–Lock
21	3296–29	1	Nut–Lock
22	88–5110–03	1	Pivot W.a. (H.o.c.)
23	65–7210	1	Spacer
24	94–5565	1	Knob – Control

Ref. No.	Part No.	Qty.	Description

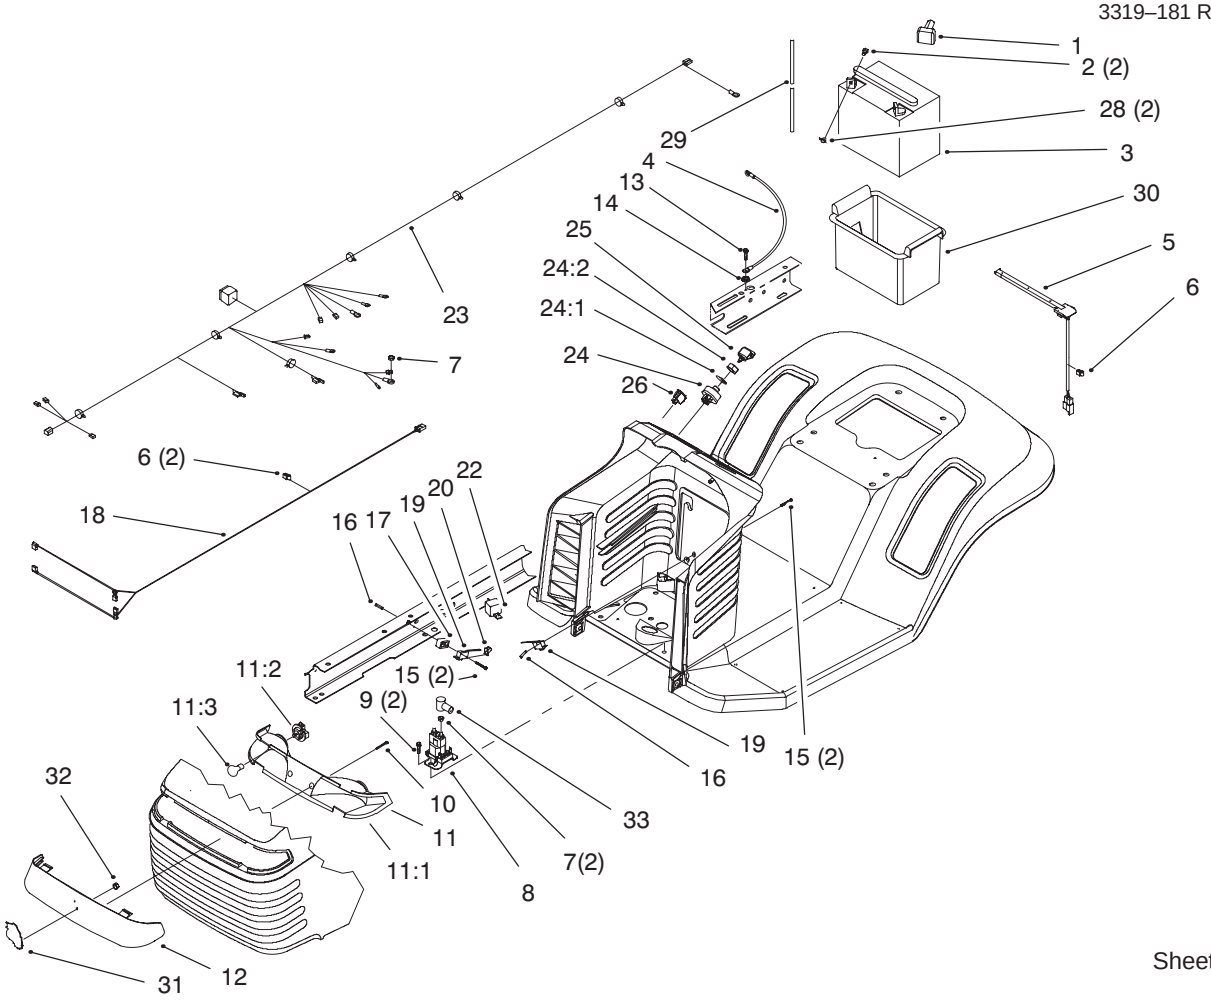


Sheet No.:20

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28–8080	1	Boot–Battery Terminal
2	321–4	2	Screw–HH
3	80–2600	1	Battery – 7 Plate
4	44–8110	1	Battery Cable –Neg
5	38–1420	1	Switch–Seat
6	702366	1	Clip–Wire Retainer
6	702366	2	Clip–Wire Retainer
7	32149–2	3	Nut–Hex Lock
8	92–9845	1	Solenoid
9	9266714	2	Screw–HWHTF
10	32144–32	2	Screw–Plastic
11	88–3970	1	Reflector–Lamp
11:1	93–8741	1	Reflector – Headlight
11:2	111686	2	Socket Assembly
11:3	7228	2	Bulb – Light
12	88–3960	1	Lense – Headlights
13	9266714	1	Screw–HWHTF
14	3255–7	1	Washer–Lock
15	93–0539	4	Screw–PPH
16	3290–354	2	Nut–Speed
17	88–4880	1	Spacer – Microswitch
18	88–4320	1	Harness–Wire
19	88–9932	2	Switch – Micro
20	93–3240	1	Seal–Plunger
22	116397	1	Relay
23	93–3810	1	Wire Harness

Ref. No.	Part No.	Qty.	Description
24	88–9830	1	Switch–Ignition
24:1	3254–5	1	Washer–Lock
24:2	218–461	1	Nut–HH (F/W Sw)
25	63–8360	1	Key–Ignition
26	92–8875	1	Switch–Rocker
28	32103–22	2	Nut–Wing
29	56–2540	1	Tube–Vent Use w/80–2600
30	88–4040	1	Battery Box
31	80–2240	1	Plate–Name Grille
32	3290–299	1	Nut – Tinnerman
33	94–5362	1	Boot–Terminal Insulator

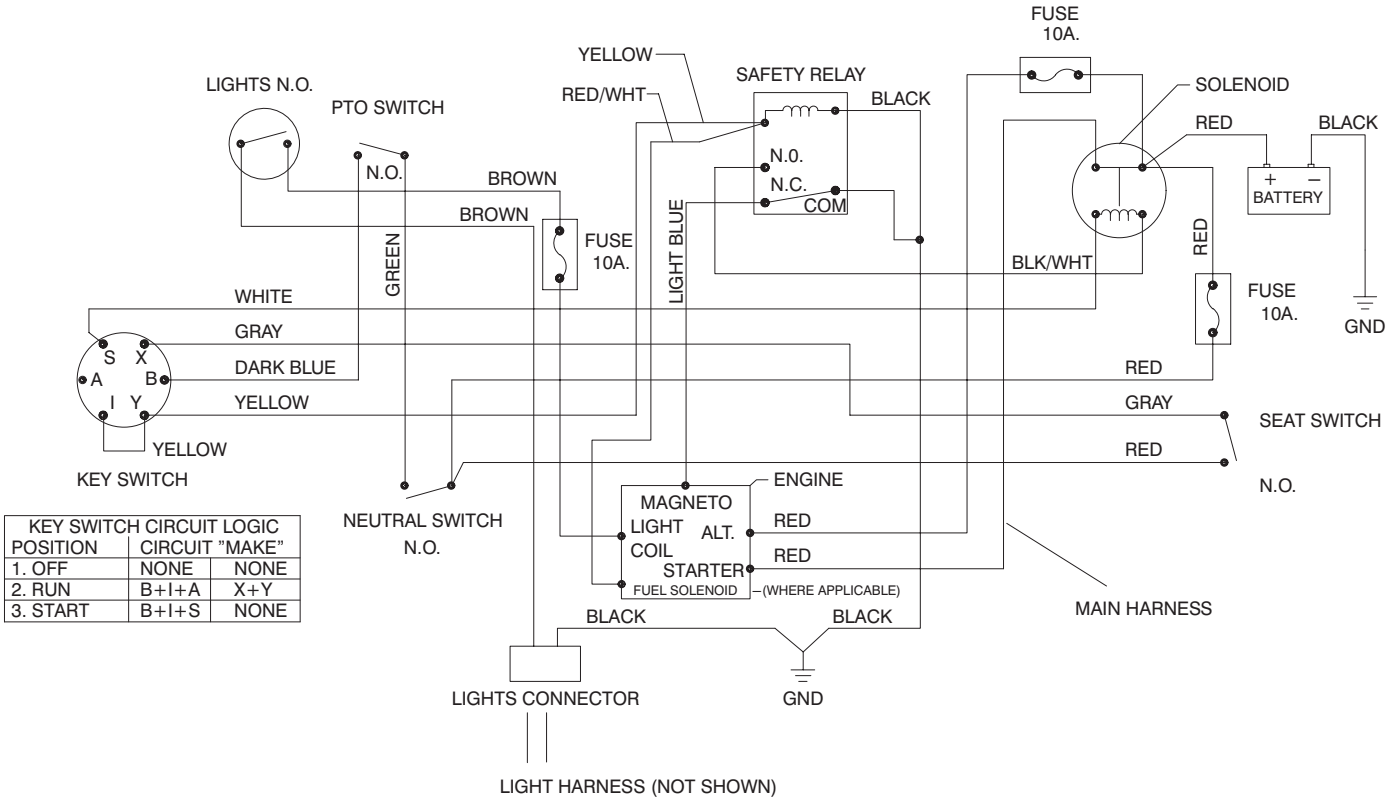

KEY SWITCH CIRCUIT LOGIC		
POSITION	CIRCUIT "MAKE"	
1. OFF	NONE	NONE
2. RUN	B+I+A	X+Y
3. START	B+I+S	NONE


Sheet No.:21

Electrical Schematic

Ref. No.	Part No.	Qty.	Description
*	218–578	3	Fuse – 10 Amp

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

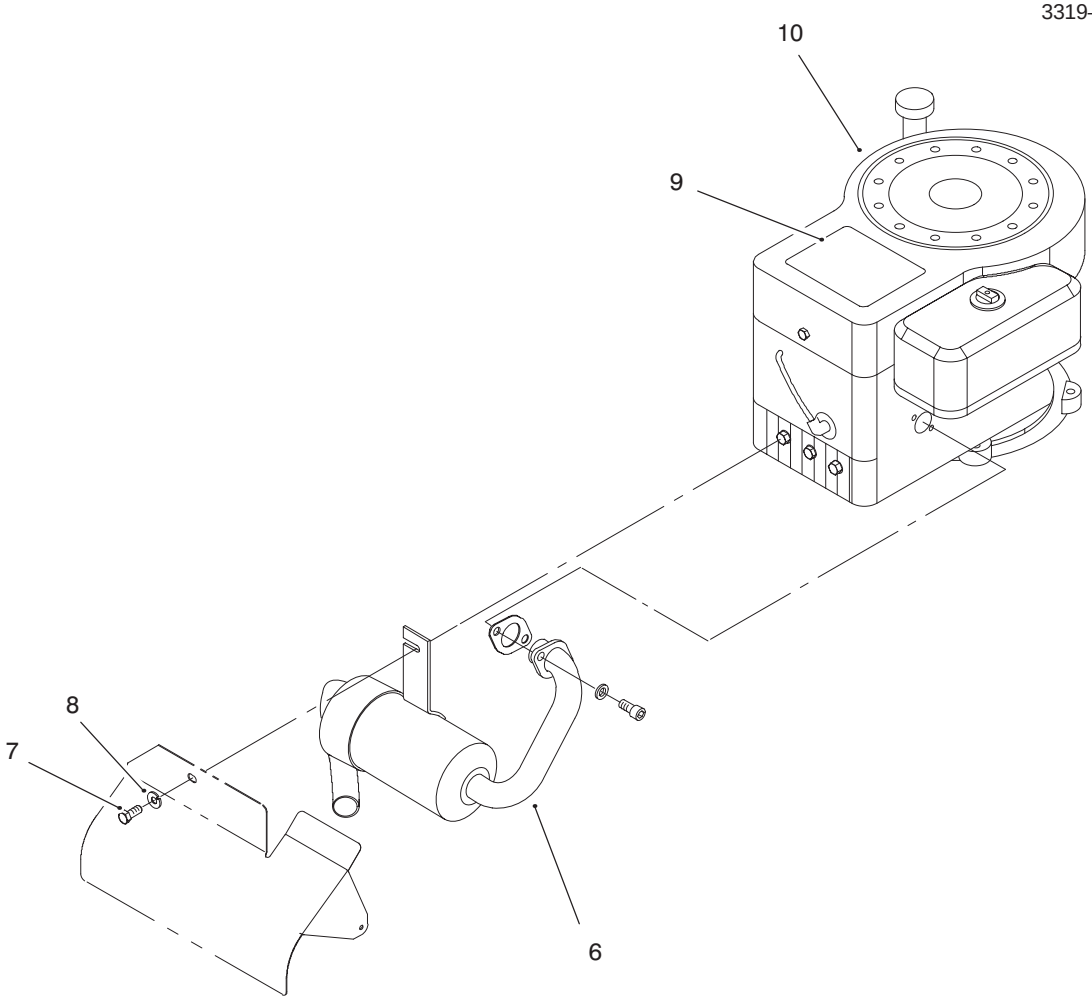


Sheet No.:25

Engine Assembly

Ref. No.	Part No.	Qty.	Description
6	88–6480	1	Muffler W.a.
7	321–4	1	Screw–HH
8	3253–3	1	Washer–Lock
9	92–8757	1	Decal – Engine
10		1	Engine – 13 Hp B&s I/C

Ref. No.	Part No.	Qty.	Description


PEERLESS TRANSAXLE MODEL MST 205–509A

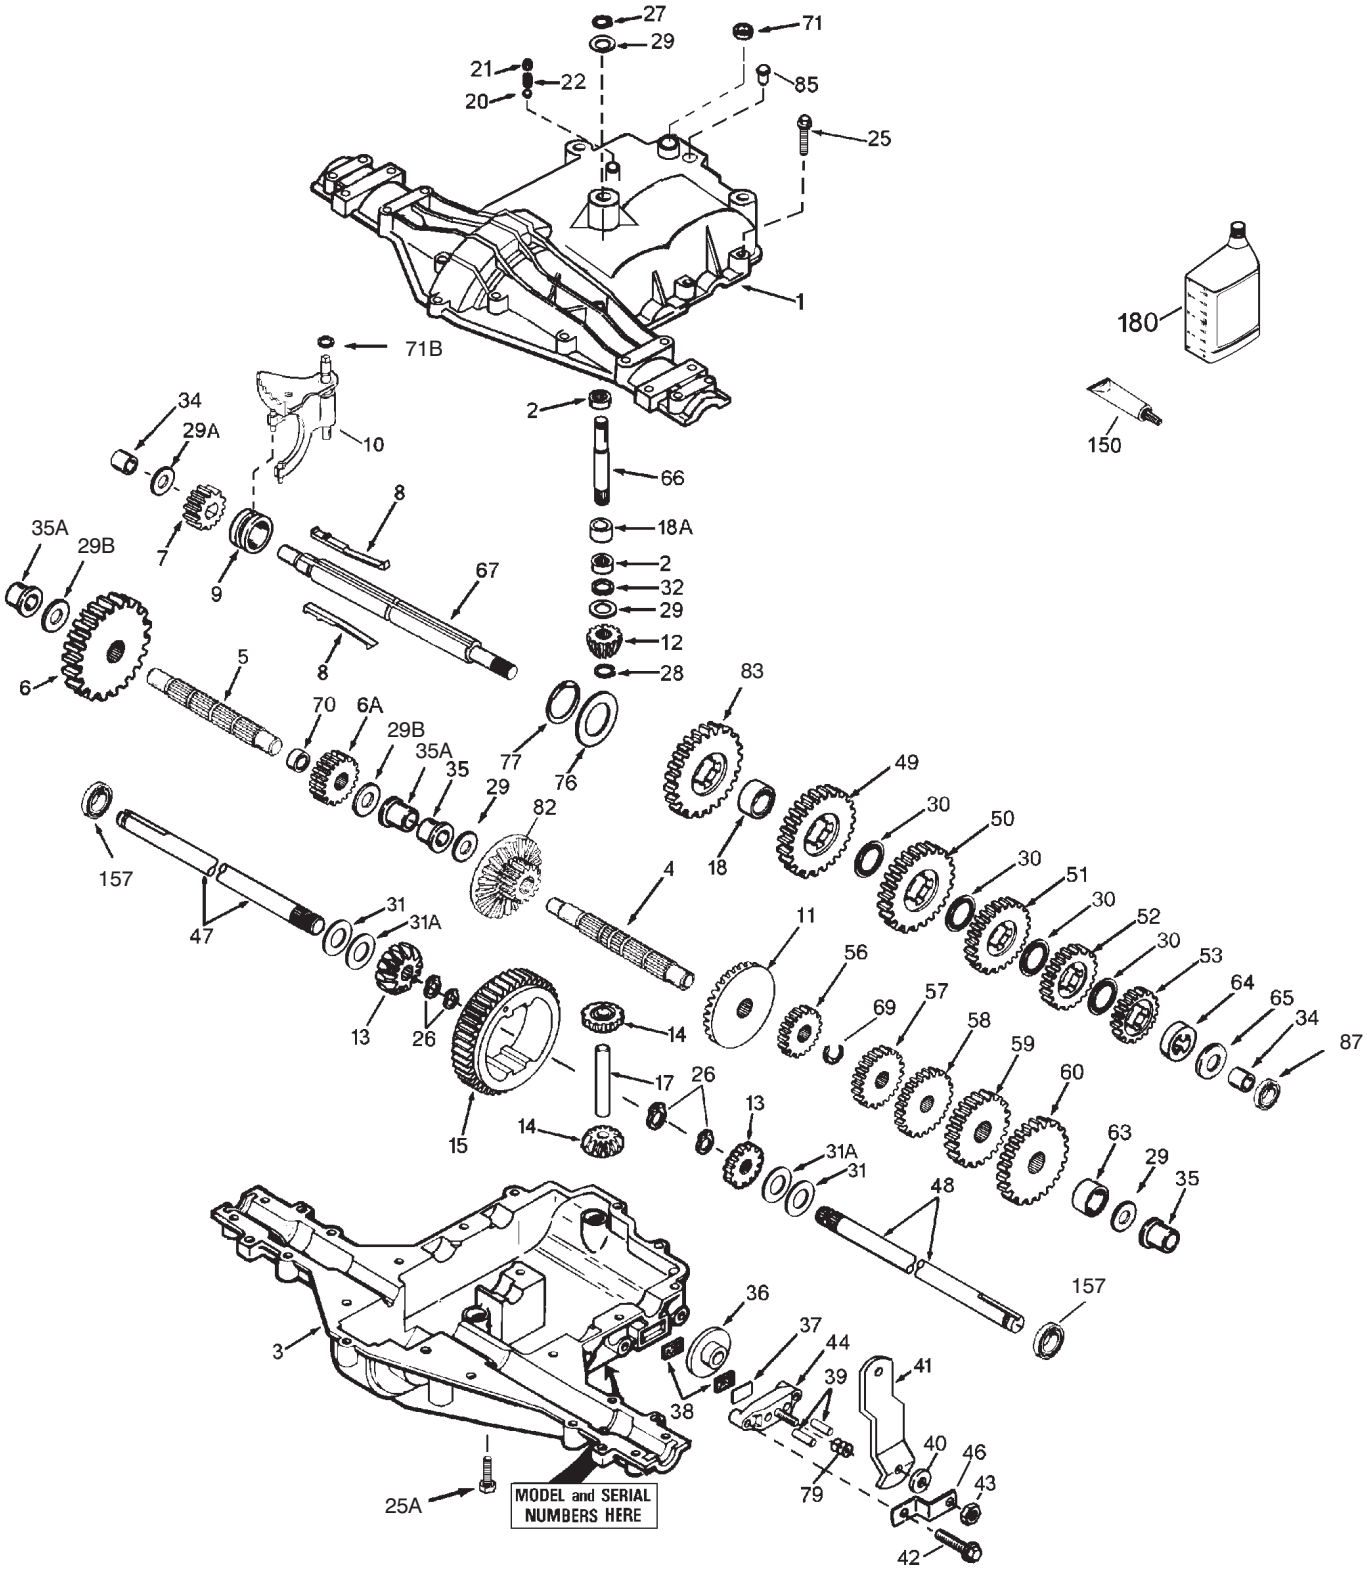

PEERLESS TRANSAXLE MODEL MST 205–509A

Ref. No.	Part No.	Description	No. Used
1	772144	Transaxle Cover	1
2	780086A	Needle Bearing	2
3	770128	Transaxle Case	1
4	776395	Countershaft	1
5	776409	Output Shaft	1
6	778364	Spur Gear (38 teeth)	1
6A	778365	Spur Gear (15 teeth–steel)	1
7	778330	Spur Gear (11 teeth–steel)	1
8	792136A	Shift Key	2
9	784352	Shift Collar	1
10	784378	Shift Rod & Fork	1
11	778334	Bevel Gear (30 teeth)	1
12	778309	Input Bevel Pinion (13 teeth)	1
13	778327	Bevel Gear (16 teeth–steel) (Incl. 14)	2
14	778327	Bevel Gear (16 teeth–steel) (Incl. 13)	2
15	778312A	Ring Gear (43 teeth)	1
17	786139	Drive Pin	1
18	786102	Spacer	1
18A	786175	Spacer	1
20	792077	Ball 5/16” dia	1
21	792078	Set Screw	1
22	792079	Spring	1
25	792073A	Screw	18
26	792125	Retaining Ring (pkg of 2)	4
27	792035	Retaining Ring	1
28	788040	Retaining Ring	1
29	780072	Washer	6
29A	780160	Washer	1
30	780108	Washer	4
31	780001	Washer (.056 wide) (USE AS NEEDED)	2
31A	780195	Flat Washer (.062 wide)	2
32	788083	Oil Seal	1
34	780194	Bushing	2
35	780193	Flanged Bushing	2
35A	780197	Flanged Bushing	2
36	790075	Brake Disk	1
37	790007	Brake Pad Plate	1

Ref. No.	Part No.	Description	No. Used
38	799021	Brake Pad (pkg of 2)	2
39	786026	Dowel Pin	2
40	792076A	Flat Washer	1
41	790080	Brake Lever	1
42	792073A	Screw	2
43	792075	Locknut	1
44	790025	Brake Pad Holder	1
46	786086	Brake Lever Bracket	1
47	774690	Axle (11–15/16” long)	1
48	774691	Axle (16–1/2” long)	1
49	778356	Spur Gear (29 teeth–steel)	1
50	778354	Spur Gear (23 teeth–steel)	1
51	778344	Spur Gear (20 teeth)	1
52	778350	Spur Gear (16 teeth–steel)	1
53	778346	Spur Gear (15 teeth–steel)	1
56	778355	Spur Gear (11 teeth–steel)	1
57	778353	Spur Gear (17 teeth–steel)	1
58	778343	Spur Gear (20 teeth)	1
59	778349	Spur Gear (24 teeth–steel)	1
60	778345	Spur Gear (25 teeth)	1
63	786071	Countershaft Spacer	1
64	786072	Brake Shaft Spacer	1
65	780189	Washer	1
66	776394	Input Shaft	1
67	776396	Shifter & Brake Shaft	1
69	792170	Retaining Ring	1
70	786178	Spacer	1
71	788069	Square Cut Ring	1
71A	788092	”O” Ring	1
76	780090	Washer	1
77	788078A	Inverted Retaining Ring	1
79	792144	Spring	1
82	778333	Bevel & Spur Gear (30 & 13 teeth)	1
83	778338	Spur Gear (27 Teeth)	1
85	792154	Pipe Plug	1
87	788089	Oil Seal	1
150	788093	Liquid Gasket RTV Silicone	1
157	778088	Oil Seal	2
180	730229A	Gear Oil 80W90	1

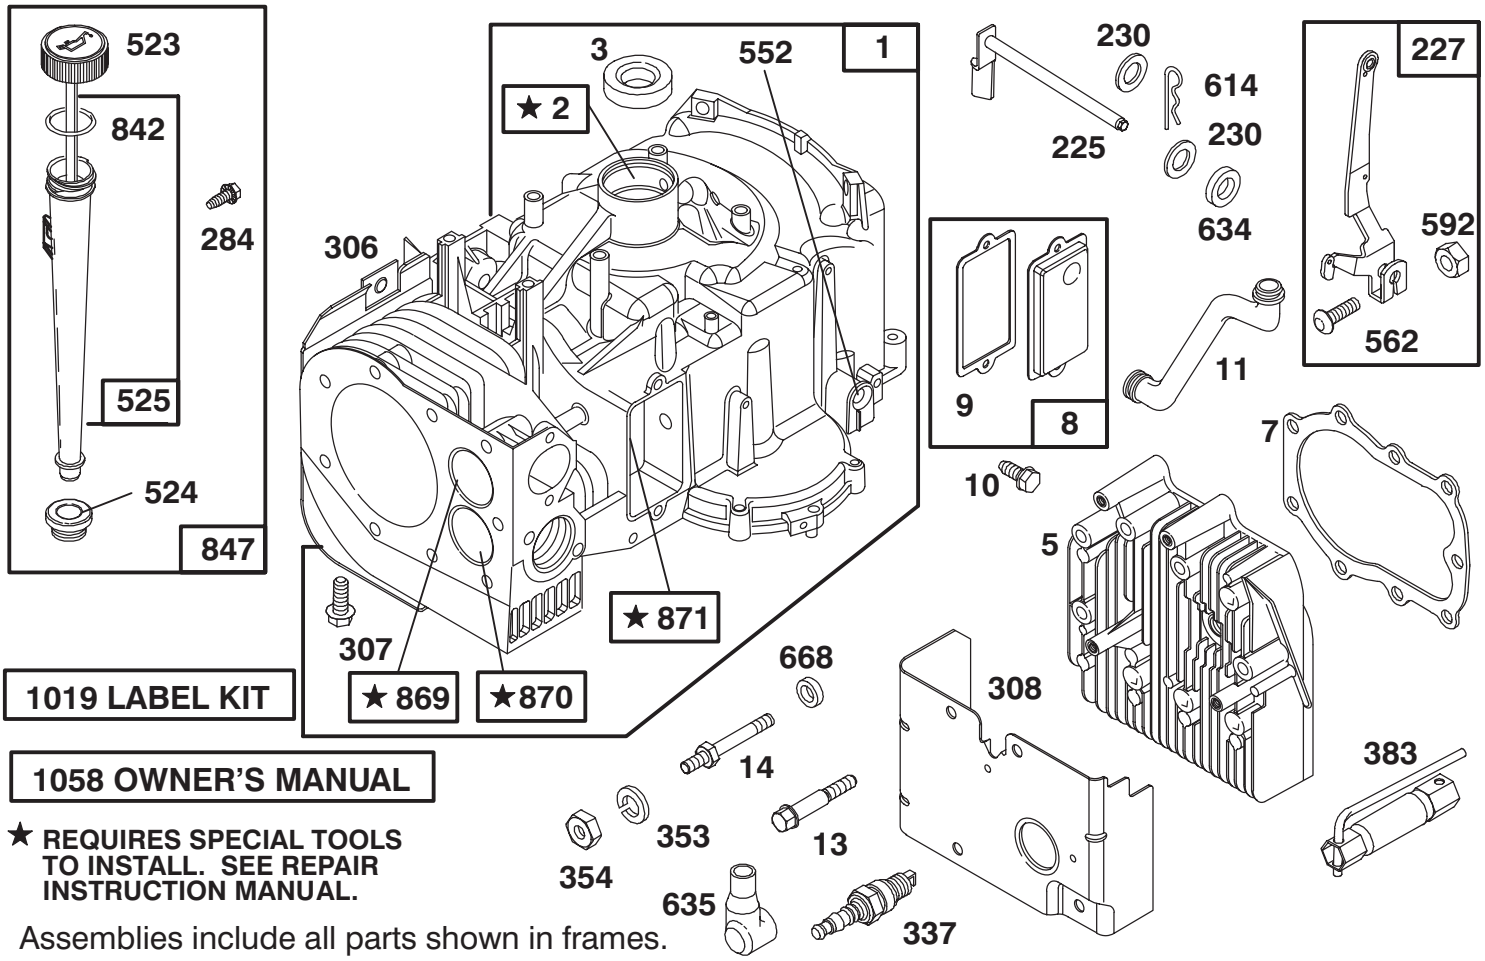

1019 LABEL KIT

1058 OWNER'S MANUAL

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
1	496413	Cylinder Assembly	1
2	399265	Bearing–Cylinder	1
★3	391086	Seal–Oil	1
5	494240	Head–Cylinder	1
★7	271866	Gasket–Cylinder Head	1
8	495735	Breather Assembly	1
★9	27803	Gasket–Valve Cover	1
10	94621	Screw–Sem	1
11	281246	Tube–Breather	1
13	94622	Screw–Cylinder Head	1
14	94776	Stud–Cyl. Head	1
225	495157	Crank–Governor	1
227	493935	Lever Assy.–Governor	1
230	94742	Washer–Gov. Crank	1
284	94073	Screw–Hex Head	1
306	224545	Shield–Cylinder	1
307	94623	Screw–Cyl. Shield Mtg.	1
308	491490	Cover–Cylinder Head	1
337	802592	Plug–Spark	1
353	94315	Washer–Lock	1
354	94314	Nut–Hex.	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench–Spark Plug	1
523	495230	Cap–Oil Fill	1
★524	281370	Seal–Fill Tube	1
525	496113	Tube–Oil Fill	1
552	231597	Bushing–Gov. Crank	1
562	92613	Bolt–Carriage	1
592	231082	Nut–Hex.	1
614	93306	Pin–Cotter	1
★634	491323	Seal–Governor	1
635	66538	Elbow–Spark Plug	1
668	231109	Spacer	1
★842	270920	Seal–Oil Fill Cap	1
847	496415	Fill Group–Oil	1
869	261463	Seat–Intake Valve	1
870	213316	Seat–Exhaust Valve	1
871	261961	Guide–Exhaust Valve	1
		Note: 231218 Guide–Intake Valve	1
1019	491255	Label Kit	1
1058	272697	Owner's Manual	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

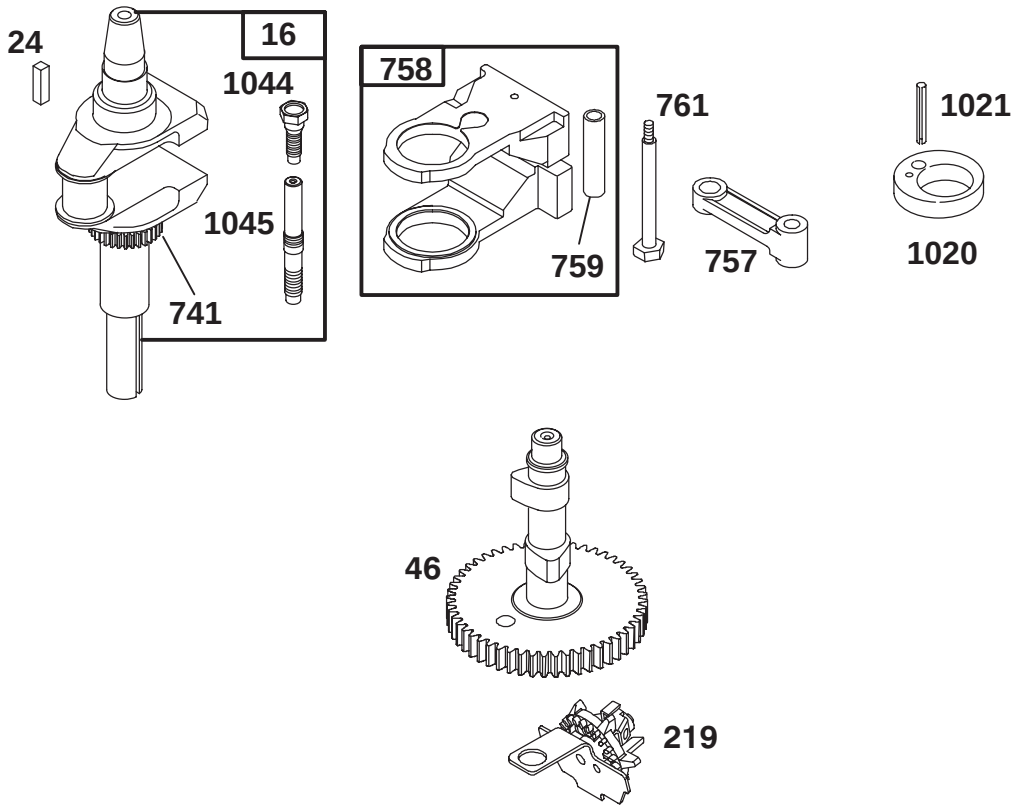


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
16	495162	Crankshaft	1
	94196	Key—Timing Gear	1
24	222698	Key—Flywheel	1
46	213720	Gear—Cam	1
219	490815	Oil Slinger, Gov. Gear Assy.	1
741	262932	Gear—Timing	1
757	213998	Link—Counterweight	1

Ref. No.	Part No.	Description	No. Used
758	399891	Counterweight Assy.	1
759	298909	Pin—Counterweight	1
761	94593	Screw—Counterweight	1
1020	262243	Eccentric	1
1021	94160	Pin—Eccentric	1
1044	94673	Screw—Shoulder	1
1045	231828	Extension—Crankshaft	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.
● Included in Carburetor Kit—Part No. 497535.

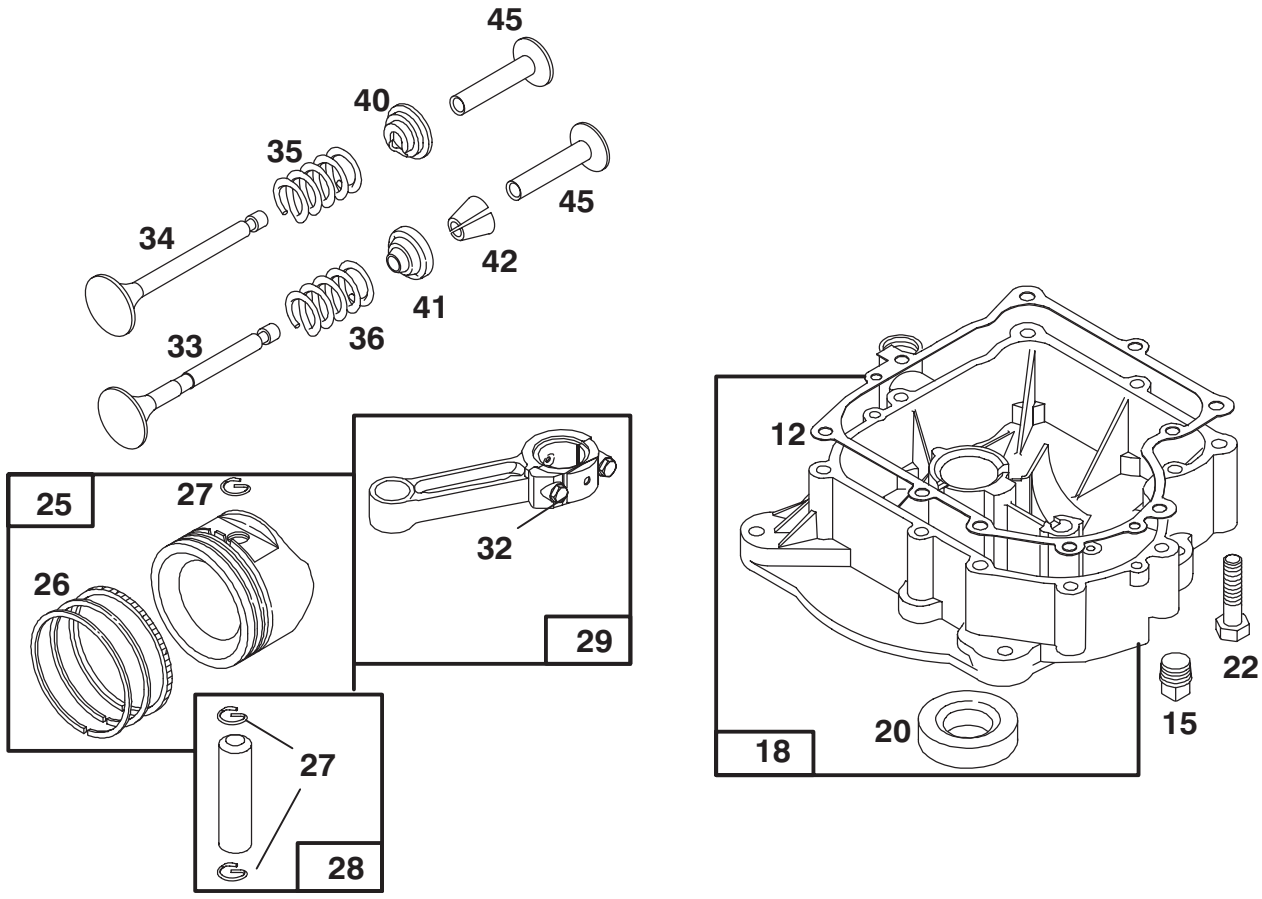


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
★12	271916	Gasket—Crankcase (.015" Thick)	1
★	271997	Gasket—Crankcase (.005" Thick)	1
★	271996	Gasket—Crankcase (.009" Thick)	1
15	94239	Plug—Oil Drain	1
18	494238	Base—Engine	1
★20	291675	Seal—Oil	1
22	94624	Screw—Base Mtg. Sem	1
25	497518	Piston Assy. (Std.)	1
	497519	Piston Assy. (.010" O.S.)	1
	497520	Piston Assy. (.020" O.S.)	1
	497521	Piston Assy. (.030" O.S.)	1
26	391780	Ring Set—Piston (Std.)	1
	391781	Ring Set—Piston (.010" O.S.)	1
	391782	Ring Set—Piston (.020" O.S.)	1
	391783	Ring Set—Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	260924	Lock—Piston Pin	1
28	299691	Pin Assy.—Piston (Standard)	1
	391286	Pin Assy.—Piston (.005" O.S.)	1
29	490348	Rod Assembly—Connecting	1
	490469	Rod—Connecting (020" U.S. Crankpin Bore)	1
32	94671	Screw—Connecting Rod	1
33	262246	Valve—Exhaust	1
34	262247	Valve—Intake	1
35	65906	Spring—Intake Valve	1
36	26828	Spring—Exhaust Valve	1
40	221596	Retainer—Intake Valve	1
41	292260	Rotocoil—Exhaust Valve	1
42	93630	Retainer—Ex. Valve Rotocoil	1
45	262248	Tappet—Valve	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.
● Included in Carburetor Kit—Part No. 497535.

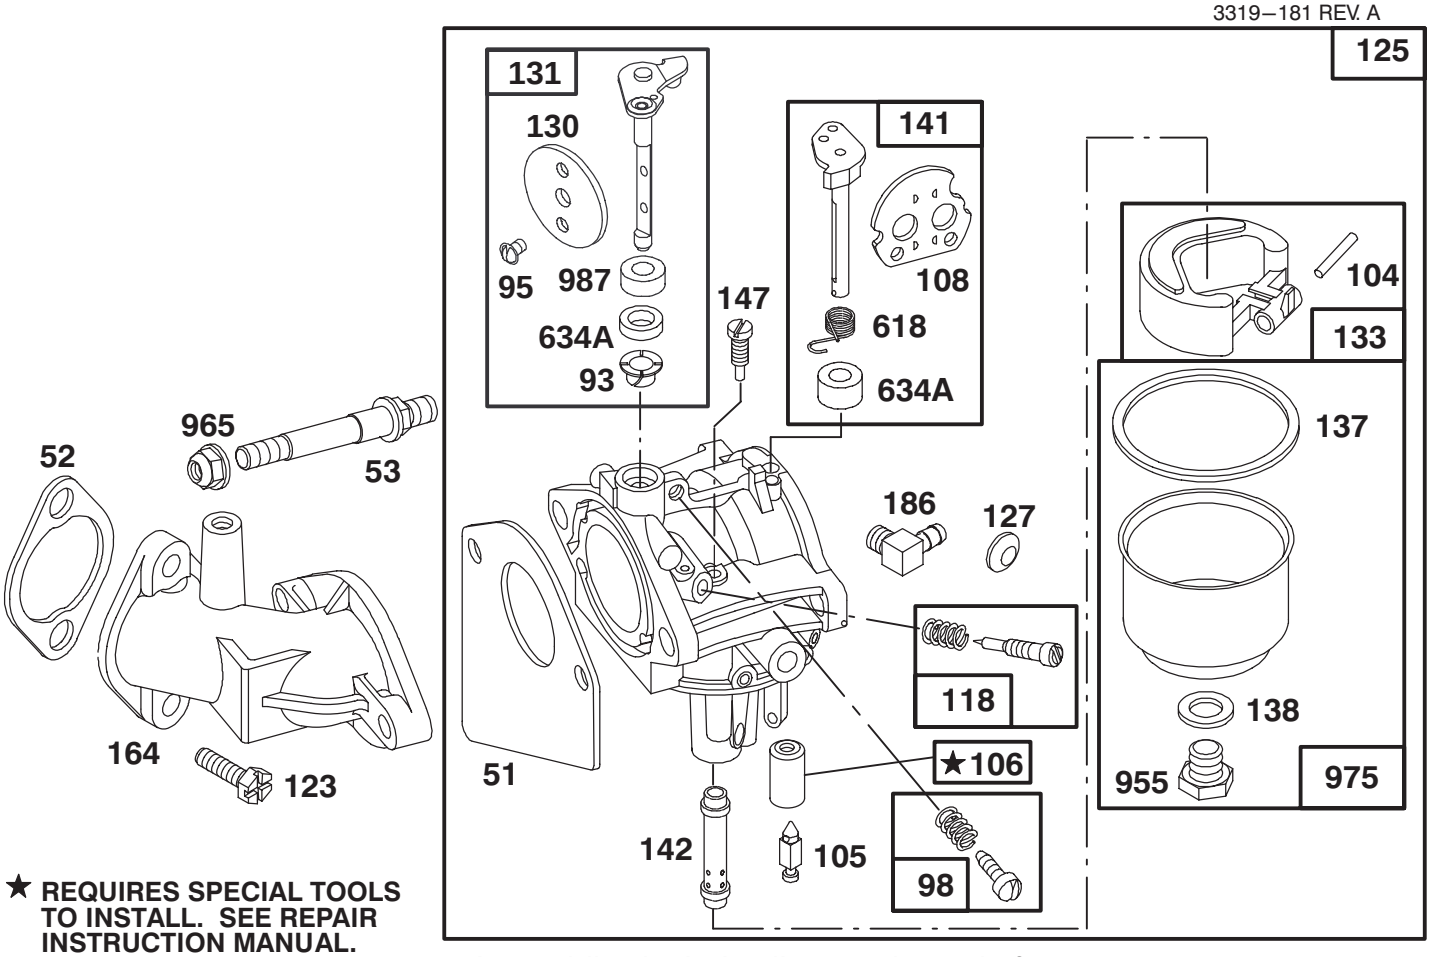

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
●◆51	272465	Gasket–Carburetor (Carb. to Manifold)	1
★52	272554	Gasket–Carburetor (Manifold to Cylinder)	1
53	94637	Stud–Carb. Mtg.	1
●93	281346	Bushing–Throttle Shaft	1
●95	94098	Screw–Throttle	1
98	495800	Screw–Idle Speed	1
●104	231789	Pin–Float Hinge	1
●105	231855	Valve Assy.–Inlet Needle	1
●106	231854	Inlet Valve Seat	1
108	224540	Valve–Choke	1
118	494383	Valve–Needle	1
121	495799	Carburetor Kit	1
123	94616	Screw–Elbow Mtg.	1
125	495706	Carburetor Assembly	1
●127		Plug–Welch (Sold in Kit Only)	1
130	224539	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	494379	Shaft– Throttle	1
133	494381	Float–Carburetor	1
●◆137	281165	Gasket–Float Bowl	1
●◆138	281164	Washer–Float Bowl Screw	1
141	495931	Shaft–Choke	1
●142	497566	Nozzle–Carburetor	1
●147	231984	Pilot–Jet	1
164	213819	Manifold–Intake	1
186	493496	Connector–Fuel	1
618	262803	Spring–Choke Return	1
●634A	281168	Seal–Choke Shaft	1
●634B	398970	Washer–Throttle Shaft	1
955	94642	Screw–Fuel Bowl	1
965	94010	Nut–Hex.	1
975	494378	Bowl Assy.–Carburetor	1
977	494385	Carburetor Gasket Kit	1
●987	281166	Seal–Throttle Shaft	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

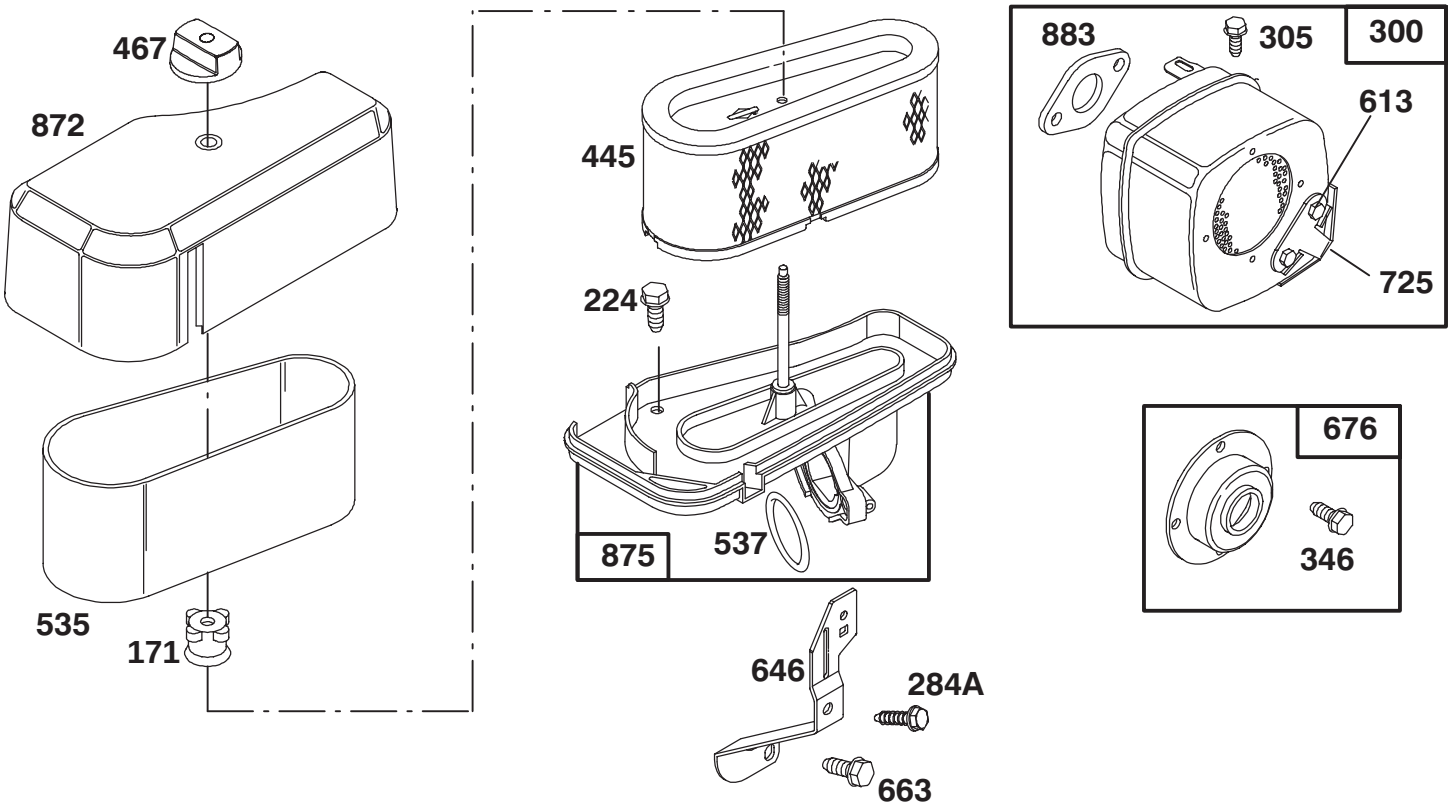


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01

Ref. No.	Part No.	Description	No. Used
171	281051	Nut–Air Cleaner Mtg.	1
224	94729	Screw–Air Cleaner Sem	1
284A	94704	Screw Hex. Head	1
300	491413	Muffler–Exhaust	1
305	94786	Screw–Hex. Head	1
346	93705	Screw–Hex. Head	1
445	496894	Cartridge–Air Cleaner	1
467	493903	Knob–Air Cleaner	1
535	272403	Element–Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
★537	281106	O-Ring–Air Cleaner	1
613	93927	Screw–Hex. Head	1
646	224546	Brace–Air Cleaner	1
663	94620	Screw–Hex. Hd.	1
676	396903	Deflector–Muffler	1
725	223023	Shield–Muffler	1
872	281361	Cover–Air Cleaner	1
875	494237	Body–Air Cleaner	1
★883	272293	Gasket–Exhaust	1

★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

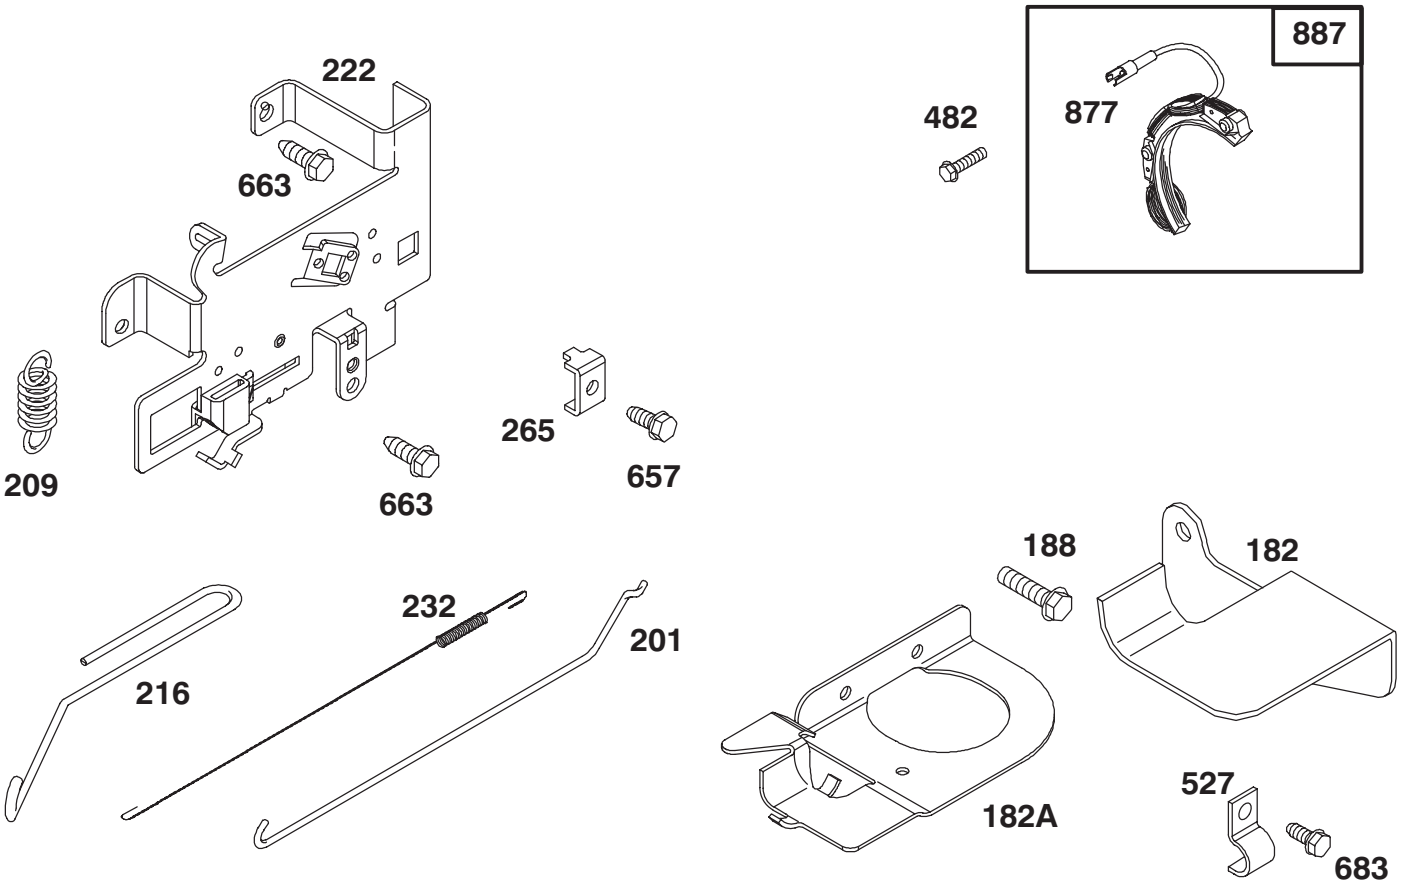

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 28M707−0127−01

Ref. No.	Part No.	Description	No. Used
182	223925	Bracket−Fuel Tank	1
182A	223866	Bracket−Fuel Tank	1
188	94480	Screw−Sem	1
201	262767	Link−Governor	1
209	260871	Spring−Governor	1
216	262766	Link−Choke	1
222	495611	Plate−Governor Control	1
232	262785	Spring−Governor Link	1

Ref. No.	Part No.	Description	No. Used
265	221535	Clamp−Casing	1
482	93621	Screw−Sem	1
527	221428	Clamp	1
657	93496	Screw−Sem	1
663	94620	Screw−Hex. Head	1
683	94602	Screw−Hex. Head	1
877	393814	Diode and Connector Assy.	1
887	391529	Alternator	1

★ Included in Gasket Set−Part No. 494241.
◆ Included in Carburetor Gasket Set−Part No. 494385.

● Included in Carburetor Kit−Part No. 497535.

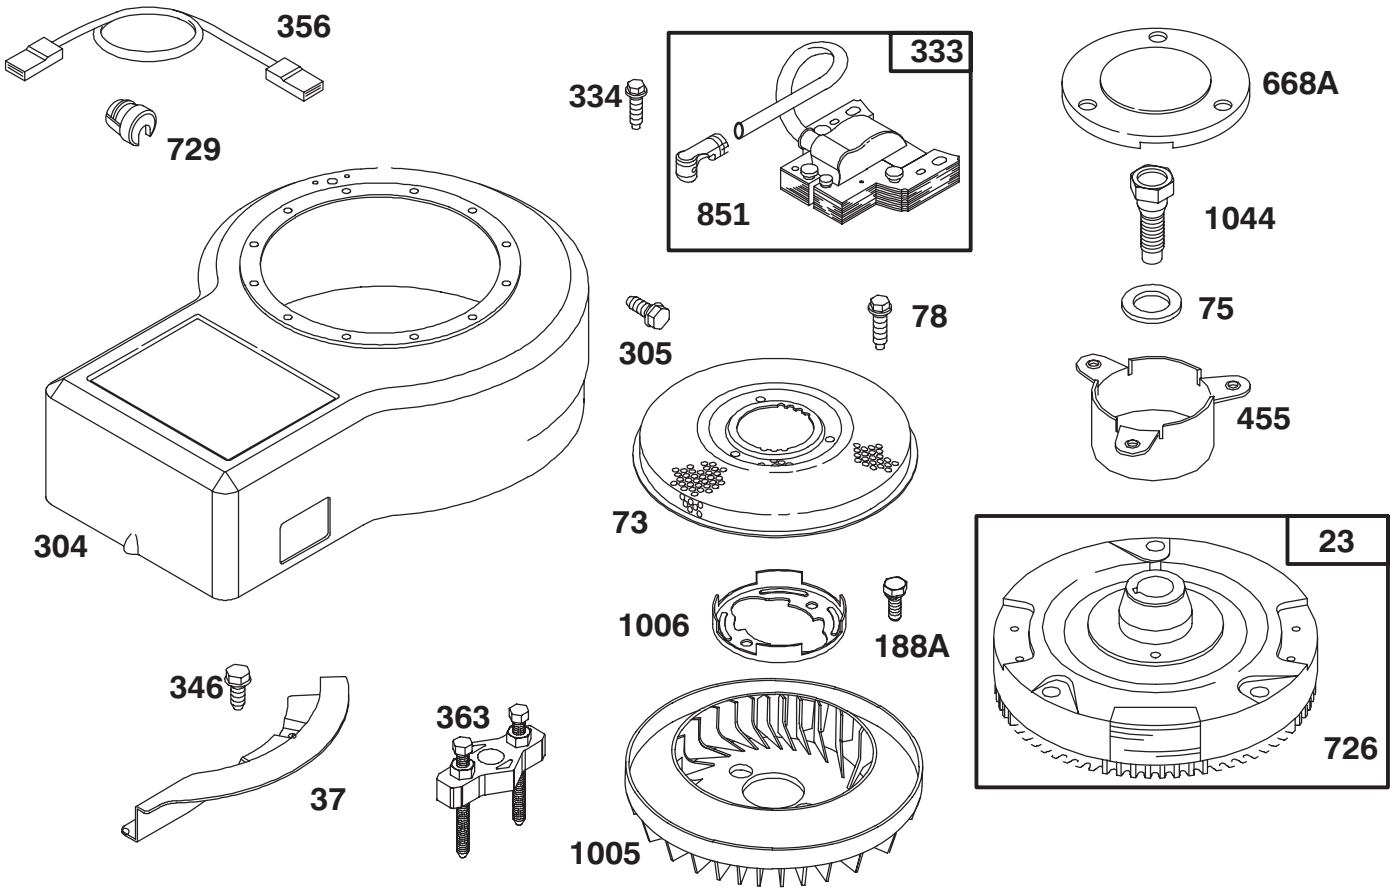


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
23	492326	Flywheel	1
37	224502	Guard—Flywheel	1
73	224948	Screen—Rotating	1
75	224061	Washer—Spring	1
78	94626	Screw—Sem	1
188A	94627	Screw—Sem	1
304	496431	Housing—Blower	1
305	94786	Screw—Hex.	1
333	492341	Armature—Magneto	1
334	93381	Screw—Hex.	1
346	93705	Screw—Hex. Head	1

Ref. No.	Part No.	Description	No. Used
356	494328	Wire Assembly	1
363	19203	Puller—Flywheel	1
455	222561	Cup—Screen Mounting	1
668A	280848	Spacer	1
726	392134	Gear—Ring (Includes Mtg Hardware)	1
729	281159	Clip—Lead Wire	1
851	493880	Terminal—Ignition Cable	1
1005	281355	Fan—Flywheel	1
1006	224413	Retainer—Fan	1
1044	94673	Screw—Shoulder	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.
● Included in Carburetor Kit—Part No. 497535.

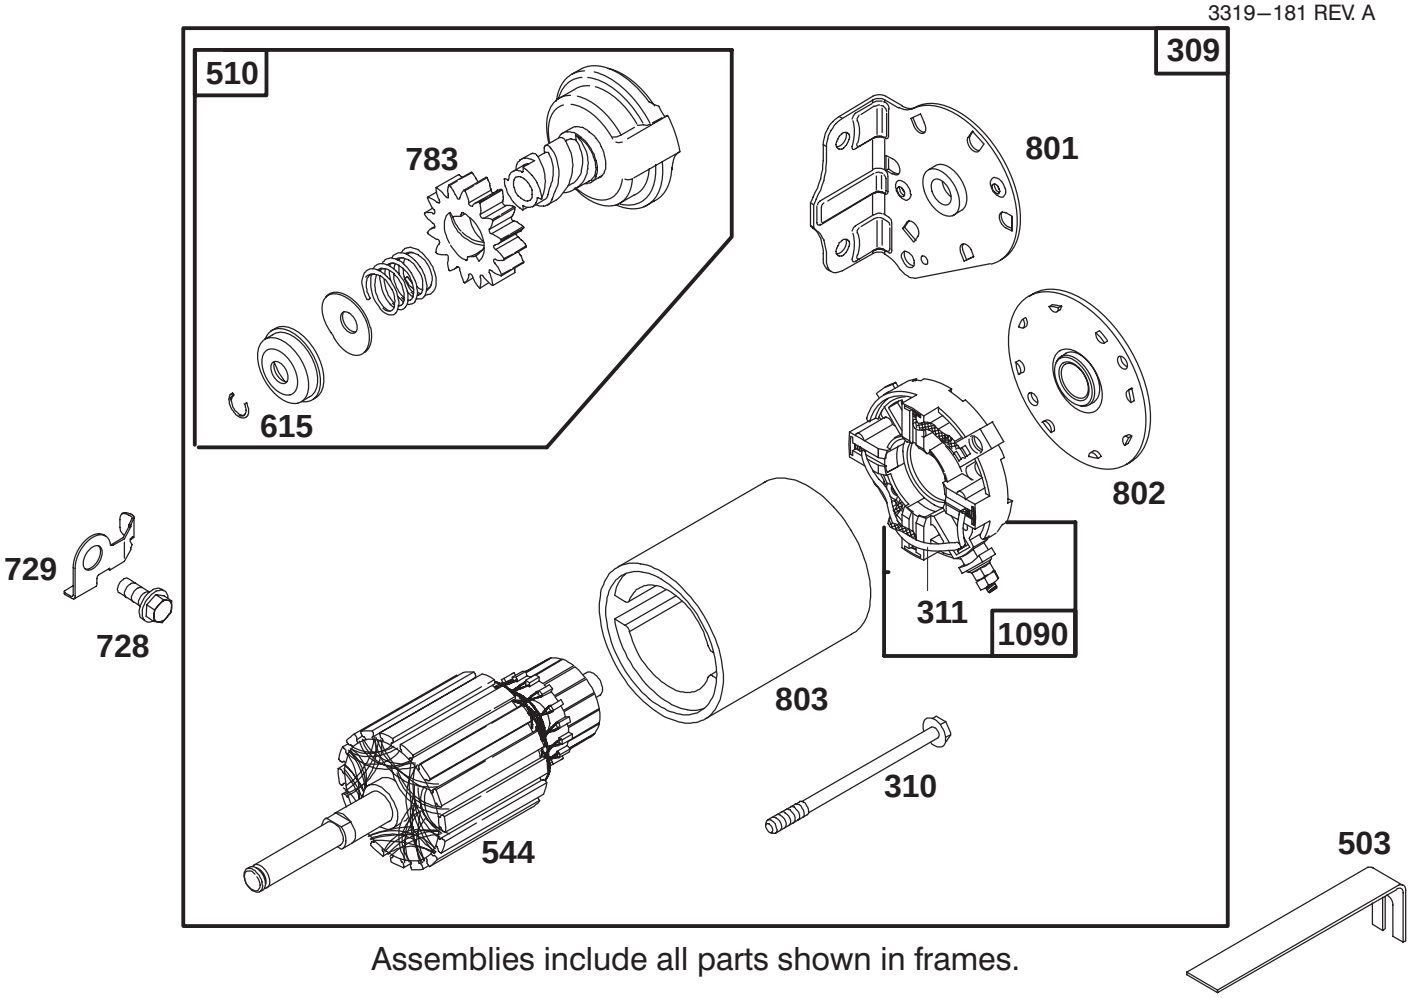


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707–0127–01


Ref. No.	Part No.	Description	No. Used
309	497595	Motor–Starter	1
310	94003	Bolt–Thru	1
311	497608	Brush Set	1
503	806000	Strap–Starter	1
510	497606	Drive–Starter	1
544	497603	Armature–Starter	1
615	263080	Retainer	1

Ref. No.	Part No.	Description	No. Used
728	94627	Screw–Hex. Head	1
729	225170	Clip–Wire	1
783	280104	Gear–Starter	1
801	394856	Cap–Drive	1
802	497607	Plate–Cover	1
803	497604	Housing–Starter	1
1090	497605	Cap–End	1


★ Included in Gasket Set–Part No. 494241.
◆ Included in Carburetor Gasket Set–Part No. 494385.
● Included in Carburetor Kit–Part No. 497535.

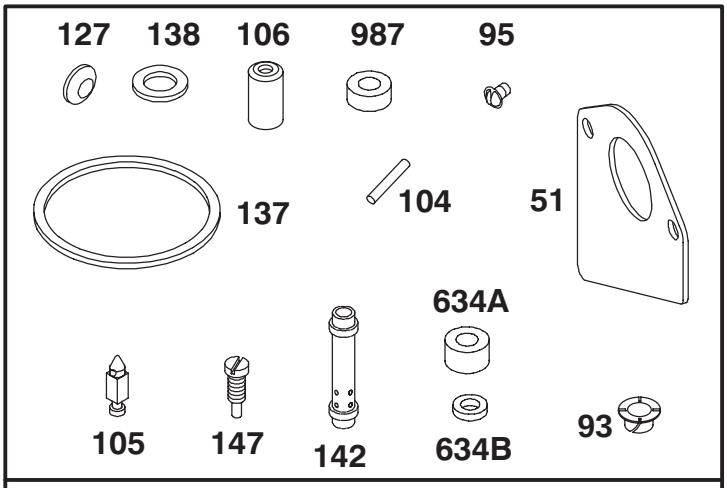

121 CARBURETOR KIT

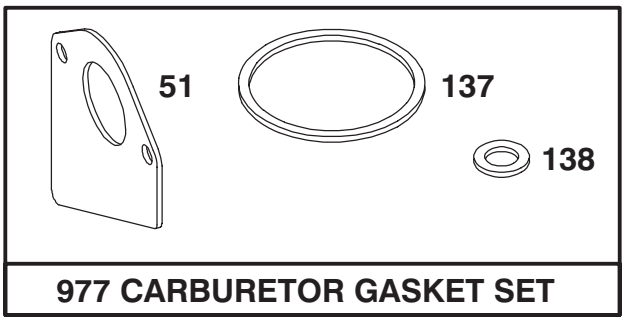

977 CARBURETOR GASKET SET

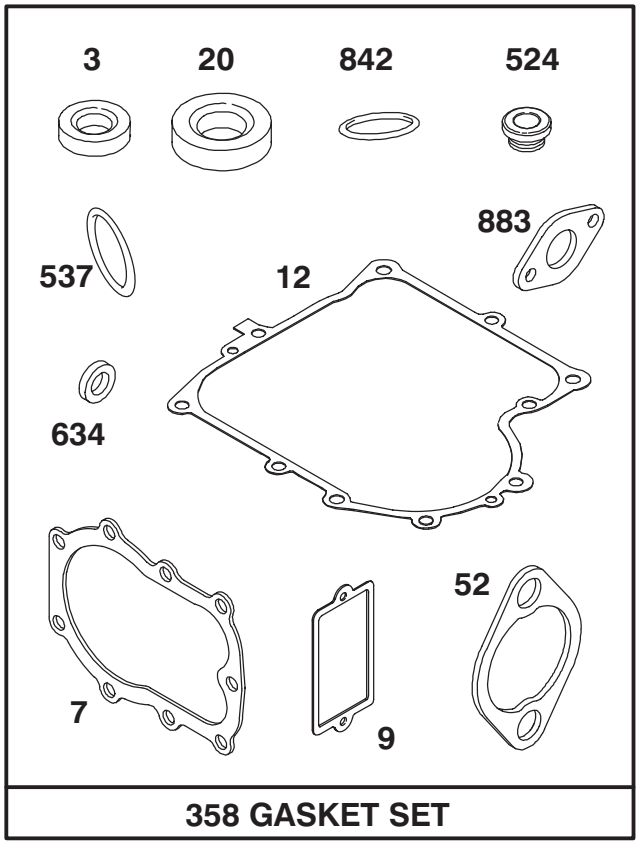

358 GASKET SET

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 28M707—0127—01

Ref. No.	Part No.	Description	No. Used
★3	391086	Seal—Oil	1
★7	271866	Gasket—Cylinder Head	1
★9	27803	Gasket—Valve Cover	1
★12	271916	Gasket—Crankcase (.015” Thick)	1
★	271997	Gasket—Crankcase (.005” Thick)	1
★	271996	Gasket—Crankcase (.009” Thick)	1
★20	291675	Seal—Oil	1
◆●51	272465	Gasket—Carburetor (Carb. to Manifold)	1
★52	272554	Gasket—Carburetor (Manifold to Cylinder)	1
●93	281346	Bushing—Throttle Shaft	1
●95	94098	Screw—Throttle	1
●104	231789	Pin—Float Hinge	1
●105	231855	Valve Assy.—Inlet Needle	1
●106	231854	Inlet Valve Seat	1

Ref. No.	Part No.	Description	No. Used
121	497535	Carburetor Kit	1
●127		Plug—Welch (Sold in Kit Only)	1
◆●137	281165	Gasket—Float Bowl	1
◆●138	281164	Washer—Float Bowl Screw	1
●142	494566	Nozzle—Carburetor	1
●147	231984	Pilot—Jet	1
358	494241	Gasket Set	1
★524	281370	Seal—Fill Tube	1
★537	281106	O-Ring—Air Cleaner	1
★634	491323	Seal—Governor	1
●634A	281168	Seal—Choke Shaft	1
●634B	398970	Washer—Throttle Shaft	1
★842	270920	Seal—Oil Fill Cap	1
★883	272293	Gasket—Exhaust	1
977	494385	Carburetor Gasket Set	1
●987	281166	Seal—Throttle Shaft	1

★ Included in Gasket Set—Part No. 494241.
◆ Included in Carburetor Gasket Set—Part No. 494385.
● Included in Carburetor Kit—Part No. 497535.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
7228	14	11:3	2	Bulb – Light
104047	6	3:1	1	Bushing
104048	6	3:2	1	Assembly–Valve
111419	4	12	1	Washer–Bearing
111686	14	11:2	2	Socket Assembly
114621	3	24	1	Decal–Noise
116397	14	22	1	Relay
701178	1	1	2	Cap–Protector
701756	10	41	2	Wheel – Deck
702366	14	6	1	Clip–Wire Retainer
702366	14	6	2	Clip–Wire Retainer
9266714	2	36	2	Screw–HWHTF
9266714	6	38	1	Screw–HWHTF
9266714	14	9	2	Screw–HWHTF
9266714	14	13	1	Screw–HWHTF
9267154	6	16	1	Screw
3–6498	4	21	2	Washer–Thrust
3–6498	4	38	4	Washer–Thrust
3–6498	5	17	1	Washer–Thrust
3–6498	5	22	1	Washer–Thrust
3–6498	9	10	2	Washer–Thrust
3–7501	5	11	4	Washer–Curved
5–4460	3	4	1	Washer–Fender
5–4460	4	17	1	Washer–Fender
5–4460	6	9	4	Washer–Fender
5–4460	7	5	1	Washer–Fender
5–4460	7	35	1	Washer–Fender
7–0030	11	31	1	Shoulder Bolt
7–0030	13	11	2	Shoulder Bolt
7–0030	13	18	1	Shoulder Bolt
7–0036	9	11	2	Key–Square
7–5461	8	12	1	Spacer–Transmission
26–0671	6	12	1	Bolt–Blade
26–0671	10	19	2	Bolt–Blade
26–6701	9	20	1	Spring – Extension
27–0220	5	15	2	Screw–Special HWH
27–0220	6	2	2	Screw–Special HWH
27–0220	6	27	2	Screw–Special HWH
27–8890	7	1	1	Spring – Pedal Return
28–0540	2	6	2	Bolt–Shoulder
28–2480	4	28	2	Washer–Flat
28–2480	9	12	2	Washer–Flat
28–8080	14	1	1	Boot–Battery Terminal
37–8770	3	1	2	Bolt–Shldr
37–8770	3	2	2	Bolt–Shldr
37–8770	7	31	1	Bolt–Shldr
38–1420	14	5	1	Switch–Seat
38–7820	10	6	4	Bearing–Ball
44–8110	14	4	1	Battery Cable –Neg
46–6290	12	21	1	0–Ring
46–8090	2	13	4	Screw–Tapping
46–8090	2	17	3	Screw–Tapping
46–8091	2	3	2	Screw–Tapping
46–8091	2	10	1	Screw–Tapping
47–2963	6	4	1	Fuel Line
52–2891	4	11	2	Bushing – Steering Links
55–9321	8	5	1	Cable–Clutch
56–2540	14	29	1	Tube–Vent Use w/80–2600
56–6591	10	40	2	Wheel Bolt
56–9830	11	2:2	2	Brake Pad
57–4360	10	1	1	Pivot Post – Rear
57–4380	10	26	1	Rod– Hinge Deflector

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
57–6950	10	27	1	Spring–Torsion Deflector
61–9780	4	26	2	Hubcap
61–9780	9	14	2	Hubcap
61–9980	12	8	2	Screw–Adjusting
62–3661	10	8	2	Spacer – Bearing
63–8360	14	25	1	Key–Ignition
65–2920	7	20	1	Pad–Pedal
65–7210	13	23	1	Spacer
66–0120	6	1:	1	Knob
67–0710	11	33	2	Ball – Swivel
76–2160	10	5	4	Plate–Kicker
79–1600–03	10	23	1	Wa–Baffle
79–1640–03	10	11	1	Wa–Baffle
79–3061	10	15	2	Blade–19.32 Recycler
80–0510	10	17	2	Stiffener – Blade
80–2240	14	31	1	Plate–Name Grille
80–2600	14	3	1	Battery – 7 Plate
80–4341	10	14	2	Shaft – Spindle
80–4360	10	13	2	Shield – Bearing
80–4380	10	12	2	Spacer – Hardened
80–6990	12	9	4	Washer–Hardened
80–6990	13	8	4	Washer–Hardened
84–5610	7	8	1	Guide–Cable
84–5610	8	25	1	Guide–Cable
88–0890	4	37	1	Grip – Parking Brake
88–3840	1	28	1	Body – Rear
88–3850	5	1	1	Steering Wheel
88–3870	5	1:2	1	Cover–Steering Wheel
88–3880	6	3	1	Gas Tank Assembly
88–3930–03	2	16	1	Shield – Heat
88–3940–03	1	5	1	Panel – Rear
88–3950	3	25	1	Seat
88–3960	14	12	1	Lense – Headlights
88–3970	14	11	1	Reflector–Lamp
88–3980	6	31	1	Gas Cap ASM
88–4020	12	7	1	Belt Guide – Deck
88–4030	12	2	1	Belt Guide – Deck
88–4040	14	30	1	Battery Box
88–4050	2	12	1	Duct – Hood Air
88–4070	4	29:2	2	Tire 15x6.00–6
88–4090	9	9:2	2	Tire 18x9.50–8
88–4140	2	23	2	Nut – Wedge
88–4160	2	24	2	Clamp – Pivot Rod
88–4170	2	20	1	Rod – Pivot
88–4180	5	5	1	Button – Release
88–4190	5	4	1	Bushing – Sliding
88–4210	5	19	1	Bushing – Stationary
88–4230	13	13	2	Trunnion – HOC
88–4300	9	9	2	Rear Wheel & Tire ASM
88–4320	14	18	1	Harness–Wire
88–4340	6	1	1	Throttle Control ASM
88–4350	6	30	1	Cable ASM–Throttle
88–4370	4	29:1	2	Rim ASM–15” Front
88–4390	9	9:1	2	Rim ASM–18” Rear
88–4400	4	29:4	2	Bearing–Wheel
88–4410	6	20	1	Gasket – Muffler
88–4430	10	29	1	Recycler Cover ASM
88–4510	10	7	2	Spindle – Diecast Alum.
88–4590	11	1	2	Bolt–Shoulder
88–4620–03	1	11	1	Bracket – Idler Pivot
88–4630–03	1	24	1	Plate – Engine Mounting
88–4670	4	9	1	Bushing – Eccentric

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88–4730	13	16	2	Clamp – HOC Pivot
88–4810	7	13	1	Clamp – Shift Pivot
88–4810	8	4	2	Clamp – Shift Pivot
88–4820–03	3	11	2	Bracket – Seat Hinge
88–4830	4	34	1	Link – Drag
88–4840	9	4	1	Pulley – Transmission
88–4870–03	11	32	1	Arm – Idler
88–4880	14	17	1	Spacer – Microswitch
88–4890	5	10	1	Spring – Leaf
88–4910–03	3	3	1	Support – Seat
88–4960–03	1	17	1	Shield – Exh. Pipe
88–4980	11	23	1	Bushing – Idler Arm
88–5000–03	7	21	1	Pedal – Clutch/Brake
88–5010	4	7	1	Spacer – Steering Rack
88–5020–03	3	19	1	Plate – Shift Gate
88–5030–03	3	9	1	Gate – HOC
88–5070	11	29	1	Belt Guide – Idler
88–5110–03	13	22	1	Pivot W.a. (H.o.c.)
88–5120–03	1	21	1	Support – Front Axle
88–5130–03	4	5	1	Bracket – Steering Rack
88–5150	5	16	1	Bushing – Flange
88–5180–01	5	8	1	Bracket – Backup
88–5190–03	2	25	1	Lever W.a. – Deck Engage
88–5200	4	10	1	Steering Rack W.a.
88–5220	3	17	1	Foot Mat
88–5240	3	16	1	Foot Mat
88–5260–03	1	10	2	Bracket–Transaxle Mounti
88–5270	7	29	1	Rod – Clutch/Brake
88–5330	11	21	2	Pulley – Deck
88–5340	8	13	1	Lever – Shift (Transaxle
88–5380	4	32	1	Tie Rod – Steering
88–5450	13	12	2	Rod – Hanger
88–5470	4	23	2	Spacer – Front Axle
88–5500	7	15	1	Rod – Pedal Pivot
88–5510	4	35	1	Rod–Parking Brake
88–5520–03	4	36	1	Bracket–Parking Brake
88–5540	11	26	1	Rod –RH Deck Brake
88–5550	11	3	1	Rod –LH Deck Brake
88–5560	7	32	1	Belt Guide – Idler
88–5570–03	13	6	2	Link–Adjusting HOC
88–5630	11	30	1	Pulley – Idler
88–5680	7	33	1	Idler Pulley
88–5740–03	10	42	1	Bracket–Deck Wheel RH
88–5900	13	3	1	Link – HOC
88–5910	11	5	2	Spring – Torsion
88–5930	8	16	1	Keeper – Cable
88–5970	11	10	1	Hook – Return Spring
88–6040–03	2	18	1	Bracket – Hinge
88–6050–03	2	7	1	Bracket – Hinge
88–6070	7	30	1	Arm –Idler
88–6090	5	20	1	Coupling – Steering
88–6100	11	2	2	ASM. – Deck Brake
88–6130	11	6	1	Spring – Deck Engage
88–6220	1	4	2	Spring – Compression
88–6250	11	18	1	V–Belt
88–6270	9	5	1	V–Belt
88–6290–03	1	18	1	Shield – Muffler
88–6300	5	13	1	Shaft – Steering
88–6330	7	7	1	Spring – Extension
88–6370	5	14	1	Shaft W.a. – Steering
88–6460	13	17	1	Spring – Extension
88–6480	16	6	1	Muffler W.a.

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88–9830	14	24	1	Switch–Ignition
88–9932	14	19	2	Switch – Micro
92–2467	2	34	1	Decal – Hood Right
92–2468	2	33	1	Decal – Hood Left
92–5730	2	31	1	Decal – Throttle
92–5731	2	30	1	Decal–Ign/Lights
92–5748	2	14:1	1	Decal – Air Duct
92–5782	2	15	1	Patch – Heat Tape
92–7889–03	4	30	1	Spindle Wa–RH
92–7890–03	4	18	1	Spindle Wa–LH
92–8650	2	14	1	Hood–Toro
92–8757	16	9	1	Decal – Engine
92–8875	14	26	1	Switch–Rocker
92–8934	11	8	1	Spring – Extension
92–9520	10	36	1	Decal–Deck
92–9674	3	5	1	Knob–Studded
92–9845	14	8	1	Solenoid
93–0231	10	30:4	4	Screw–Plastite
93–0303	2	1	1	Tower–Steering Toro
93–0539	14	15	4	Screw–PPH
93–3240	14	20	1	Seal–Plunger
93–3809	6	37	1	Bracket–Ground
93–3810	14	23	1	Wire Harness
93–3822–03	13	1	1	Lever–HOC
93–3849	2	37	1	Brkt–Cable
93–3854	6	7	3	Belt Guide – Engine
93–3855	6	24	1	Belt Guide – R.h.
93–3881–03	12	4	1	Pan – Front Deck Suspens
93–3896–03	10	46	1	Bracket–Deck Wheel LH
93–4144	1	35	1	Decal–Rear Body
93–4145	2	29	2	Decal – Tower
93–6673	2	32	1	Decal – Deck Engage
93–6674	10	32	2	Decal–Warninig
93–6675	1	33	1	Decal–Instruct
93–6677	10	31	1	Decal – Shield Danger
93–6679	10	37	1	Decal – Belt Routing
93–7009	10	33	1	Decal–Deflector Danger
93–7010	10	28	2	Decal–Danger
93–7010	10	30:1	1	Decal–Danger
93–7656	3	21	1	Cover – Shift Gate
93–7657	3	7	1	Cover – HOC
93–7695	10	30	1	ASM.–38” Deflector
93–7696	10	30:3	2	Kicker – Ce
93–8741	14	11:1	1	Reflector – Headlight
93–9847	12	12	2	Spacer
94–1949–01	10	3	1	Deck Wa–38”
94–1951	6	39	1	Latch–Hood
94–1952	6	28	1	Rod–Gas Tank
94–1962–03	4	31	1	Front Axle Wa
94–1963	6	11	1	Pulley Assy–Engine
94–1968	8	20	1	Lever–Shift Pivot
94–1969	9	19	2	Strap–Torque
94–1970–03	12	14	1	Bracket–Deck Susp
94–1971–03	12	6	1	Bracket–Deck Susp
94–1980	2	39	2	Foam–Hood
94–1984	2	11	1	Pin–Latch
94–1991–03	8	1	1	Shift Lever Wa
94–1993–03	8	8	1	Shift Pivot Wa
94–1997	8	26	1	Bushing–Shift Lever
94–1998–03	1	25	1	Frame Rail–RH
94–1999–03	1	13	1	Frame Rail–LH
94–4293	2	35	1	Cable ASM–Deck Engage

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94–4294	7	2	1	Spring–Brake
94–4926	7	36	1	Bracket–Belt Guide
94–5362	14	33	1	Boot–Terminal Insulator
94–5431	8	9	1	Link–Shift
94–5433	7	6	1	Bracket–Belt Guide
94–5565	2	2	1	Knob – Control
94–5565	8	24	1	Knob – Control
94–5565	13	24	1	Knob – Control
94–5823	12	5	2	Bolt–Shoulder
94–6022	9	7	1	Transaxle – Peerless 931
95–2747	12	20	1	Fitting–Washout
218–578	15	*	3	Fuse – 10 Amp
218–461	14	24:2	1	Nut–HH (F/W Sw)
232–27	4	29:3	2	Valve Stem & Cap Assemby
232–27	9	9:3	2	Valve Stem & Cap Assemby
232–39	4	29:6	2	Tube–Inner 15x6–6
232–41	9	9:4	2	Tube–Inner 18x9.50–8
2412–98	6	5	2	Clamp–Hose
302–5	4	29:5	2	Fitting–Grease
302–26	4	8	1	Fitting–Grease
321–2	2	5	4	Screw–HH
321–4	5	7	2	Screw–HH
321–4	10	9	2	Screw–HH
321–4	14	2	2	Screw–HH
321–4	16	7	1	Screw–HH
321–9	5	21	2	Screw–HH
321–15	10	38	2	Screw–HH
322–3	1	7	4	Screw–HH
322–3	1	9	4	Screw–HH
322–3	1	20	6	Screw–HH
322–3	1	23	2	Screw–HH
322–3	1	26	4	Screw–HH
322–3	1	27	2	Screw–HH
322–3	2	28	2	Screw–HH
322–3	3	10	4	Screw–HH
322–3	7	3	1	Screw–HH
322–3	7	14	2	Screw–HH
322–3	8	6	2	Screw–HH
322–3	8	21	1	Screw–HH
322–3	9	21	2	Screw–HH
322–3	10	44	6	Screw–HH
322–3	13	19	4	Screw–HH
322–5	1	2	2	Screw–HH
322–5	6	10	2	Screw–HH
322–5	11	20	2	Screw–HH
322–6	7	4	1	Screw–HH
322–9	6	6	3	Screw–HH
322–9	13	2	1	Screw–HH
322–12	9	15	4	Screw HH
322–12	12	16	2	Screw HH
323–5	10	24	2	Screw–HH
323–9	12	13	2	Screw–HH
323–10	8	2	1	Screw–HH
323–11	7	34	1	Screw
323–12	11	27	1	Screw
323–13	4	2	2	Screw–HH
329–23	8	10	1	Screw
3219–6	11	22	2	Nut–Hex
3229–1	12	22	2	Bolt–CARR.
3230–1	4	6	4	Bolt–CARR
3230–1	10	21	1	Bolt–CARR
3230–3	4	4	1	Screw–CARR

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3230−3	7	22	1	Screw−CARR
3230−3	8	17	1	Screw−CARR
3231−4	4	3	1	Bolt−CARR
3253−3	8	11	1	Washer−Lock
3253−3	16	8	1	Washer−Lock
3253−4	6	21	2	Washer−Lock
3253−22	6	13	1	Washer−Lock
3254−5	14	24:1	1	Washer−Lock
3255−7	14	14	1	Washer−Lock
3255−8	6	23	1	Washer−Lock
3256−1	12	19	2	Washer−Flat
3256−22	5	6	2	Washer−Flat
3256−22	12	10	2	Washer−Flat
3256−23	1	3	2	Washer−Flat
3256−23	1	22	2	Washer−Flat
3256−23	2	27	2	Washer−Flat
3256−23	7	9	2	Washer−Flat
3256−23	7	23	1	Washer−Flat
3256−23	8	14	1	Washer−Flat
3256−23	8	22	1	Washer−Flat
3256−23	9	16	4	Washer−Flat
3256−23	9	18	4	Washer−Flat
3256−24	2	21	2	Washer−Flat
3256−24	4	20	2	Washer−Flat
3256−24	4	24	2	Washer−Flat
3256−24	11	28	2	Washer−Flat
3256−24	13	5	2	Washer−Flat
3256−24	13	10	2	Washer−Flat
3256−25	4	13	4	Washer−Flat
3256−25	6	14	1	Washer−Flat
3256−25	8	19	1	Washer−Flat
3256−26	7	18	1	Washer−Flat
3256−68	11	19	1	Washer−Flt
3257−23	9	3	1	Key−Woodruff
3272−10	4	14	2	Pin−Cotter
3272−10	4	19	2	Pin−Cotter
3272−10	7	24	1	Pin−Cotter
3272−12	4	27	2	Pin−Cotter
3274−10	6	22	2	Screw−Sckt Hd
3290−282	3	8	2	Pop Rivet
3290−282	3	20	2	Pop Rivet
3290−282	11	2:3	4	Pop Rivet
3290−299	14	32	1	Nut − Tinnerman
3290−307	2	19	2	Pin−Cotter
3290−307	13	4	1	Pin−Cotter
3290−307	13	7	4	Pin−Cotter
3290−307	13	9	2	Pin−Cotter
3290−354	14	16	2	Nut−Speed
3290−465	10	18	2	Washer−Spring
3290−479	3	6	4	Fastener−Panel
3290−479	3	15	12	Fastener−Panel
3290−479	3	22	4	Fastener−Panel
3290−496	2	8	2	Nut − Retained
3296−3	8	7	2	Nut−Lock 1/4−28 Unf
3296−16	12	18	2	Nut−Lock
3296−23	12	17	2	Nut−Lock
3296−29	1	6	2	Nut−Lock
3296−29	1	8	4	Nut−Lock
3296−29	1	12	4	Nut−Lock
3296−29	1	14	2	Nut−Lock
3296−29	1	15	6	Nut−Lock
3296−29	1	16	2	Nut−Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296–29	1	29	4	Nut–Lock
3296–29	2	26	2	Nut–Lock
3296–29	3	12	6	Nut–Lock
3296–29	4	1	4	Nut–Lock
3296–29	4	16	1	Nut–Lock
3296–29	6	29	4	Nut–Lock
3296–29	7	10	2	Nut–Lock
3296–29	7	19	1	Nut–Lock
3296–29	7	26	2	Nut–Lock
3296–29	7	27	1	Nut–Lock
3296–29	8	3	2	Nut–Lock
3296–29	8	15	1	Nut–Lock
3296–29	8	23	1	Nut–Lock
3296–29	9	1	4	Nut–Lock
3296–29	9	17	2	Nut–Lock
3296–29	10	20	1	Nut–Lock
3296–29	10	45	6	Nut–Lock
3296–29	11	25	2	Nut–Lock
3296–29	12	15	2	Nut–Lock
3296–29	13	14	4	Nut–Lock
3296–29	13	15	2	Nut–Lock
3296–29	13	20	1	Nut–Lock
3296–29	13	21	1	Nut–Lock
3296–39	4	15	1	Nut–Lock
3296–39	4	25	2	Nut–Lock
3296–39	8	18	1	Nut–Lock
3296–39	10	22	1	Nut–Lock
3296–39	10	25	2	Nut–Lock
3296–39	10	43	2	Nut–Lock
3296–39	11	24	1	Nut–Lock
3296–39	12	3	2	Nut–Lock
3296–42	2	4	4	Nut–Lock
3296–42	5	9	2	Nut–Lock
3296–42	5	12	2	Nut–Lock
3296–42	10	10	2	Nut–Lock
3296–42	11	4	2	Nut–Lock
3296–42	12	11	2	Nut–Lock
3296–58	11	14	3	Nut–Flange
3296–59	7	28	2	Nut–Lock
32103–22	14	28	2	Nut–Wing
32104–76	1	19	1	Screw–Self TAP
32104–76	12	1	5	Screw–Self TAP
32111–7	10	39	2	Nut–Cap
32120–64	9	2	1	Ring–Retaining
32121–111	5	2	1	Pin–Spiral
32128–43	2	22	2	Nut–Flange
32144–14	9	22	2	Screw–HWH
32144–32	14	10	2	Screw–Plastic
32144–41	10	2	8	Screw–HWHTF
32144–111	10	4	8	Screw – PPH
32144–112	6	40	2	Screw–Thd Form
32149–1	6	26	2	Nut–Keps
32149–2	14	7	3	Nut–Hex Lock
32151–48	4	33	2	Ring–Retaining
32151–48	5	18	1	Ring–Retaining
32151–48	9	13	2	Ring–Retaining
32151–81	5	3	1	Retaining Ring Push–On

*Not Illustrated

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								