
FORM NO.3319−403

TORO®

MODEL NO. 22026−7900001 & UP

PARTS CATALOG

PROLINE 21”
Side Discharge Mower

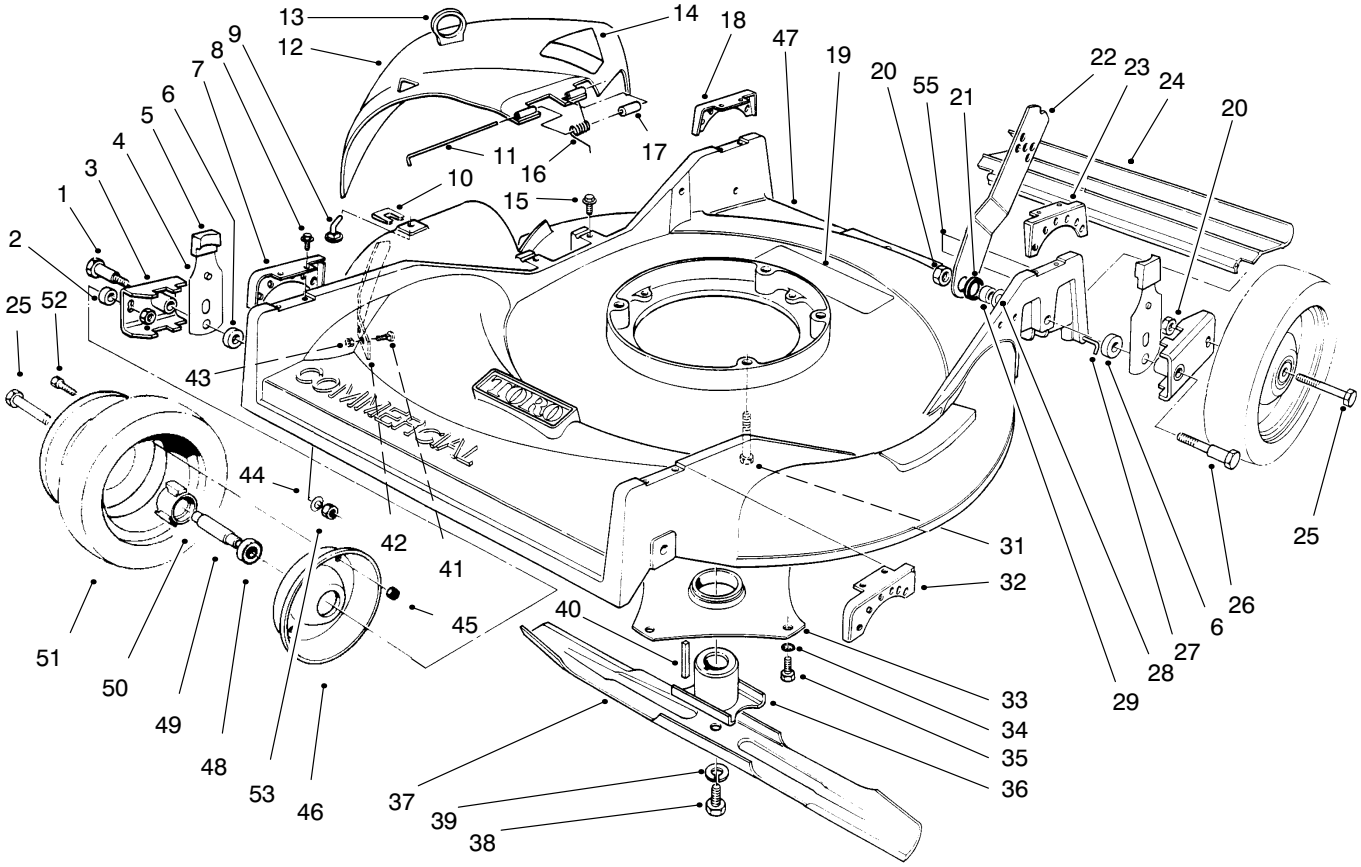

C−1012C


HOUSING & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49−9180	Screw − Pivot	2
2	52−2480	Spacer − Wheel	4
3	49−9160	Pivot Arm Assembly	4
4	49−8800	Spring Arm Assembly	4
5	25−7740	Knob − Arm	4
6	53−7930	Spacer − Pivot Arm	4
7	52−2510	Quadrant − Front R.H.	1
8	49−2040	Screw − Thread Forming	8
9	28−3260	Pin − Chute	1
10	28−3250	Clip − Pin	1
11	52−2570	Pin − Deflector Hinge	1
12	12−4739	Deflector (Incl. Ref. #14)	1
13	28−1430	Loop − Lift	1
14	39−5770	Decal − Danger	1
15	46−6811	Screw/Washer Assembly	2
16	52−2560	Spring − Deflector	1
17	28−3270	Sleeve − Spring	1

Ref. No.	Part No.	Description	No. Used
18	52−2530	Quadrant − Rear R.H.	1
19	71−1280	Decal − Safety Instructions	1
20	3296−39	Nut − Lock	6
21	27−6510	Spacer − Latch, Handle	2
22	27−7071	Latch − Handle	2
23	52−2540	Quadrant − Rear L.H.	1
24	52−2640	Shield − Rear, Safety	1
25	323−12	Screw − Cap, Hex Hd.	4
26	52−2260	Screw − Pivot, Rear	2
27	33−3201	Rod − Shield	1
28	3290−340	Washer − Belleville	2
29	52−2360	Spacer − Handle, Brace	2
30	68−7410	Decal − Blade Warning	1
31	66−9303	Screw − Hex. Washer Hd.	4
32	52−2520	Quadrant − Front L.H.	1
33	52−2500	Crankshaft Protector	1
34	3254−6	Washer − Lock, Int. Tooth	4

© The TORO Company −1997
All Rights Reserved

TPS

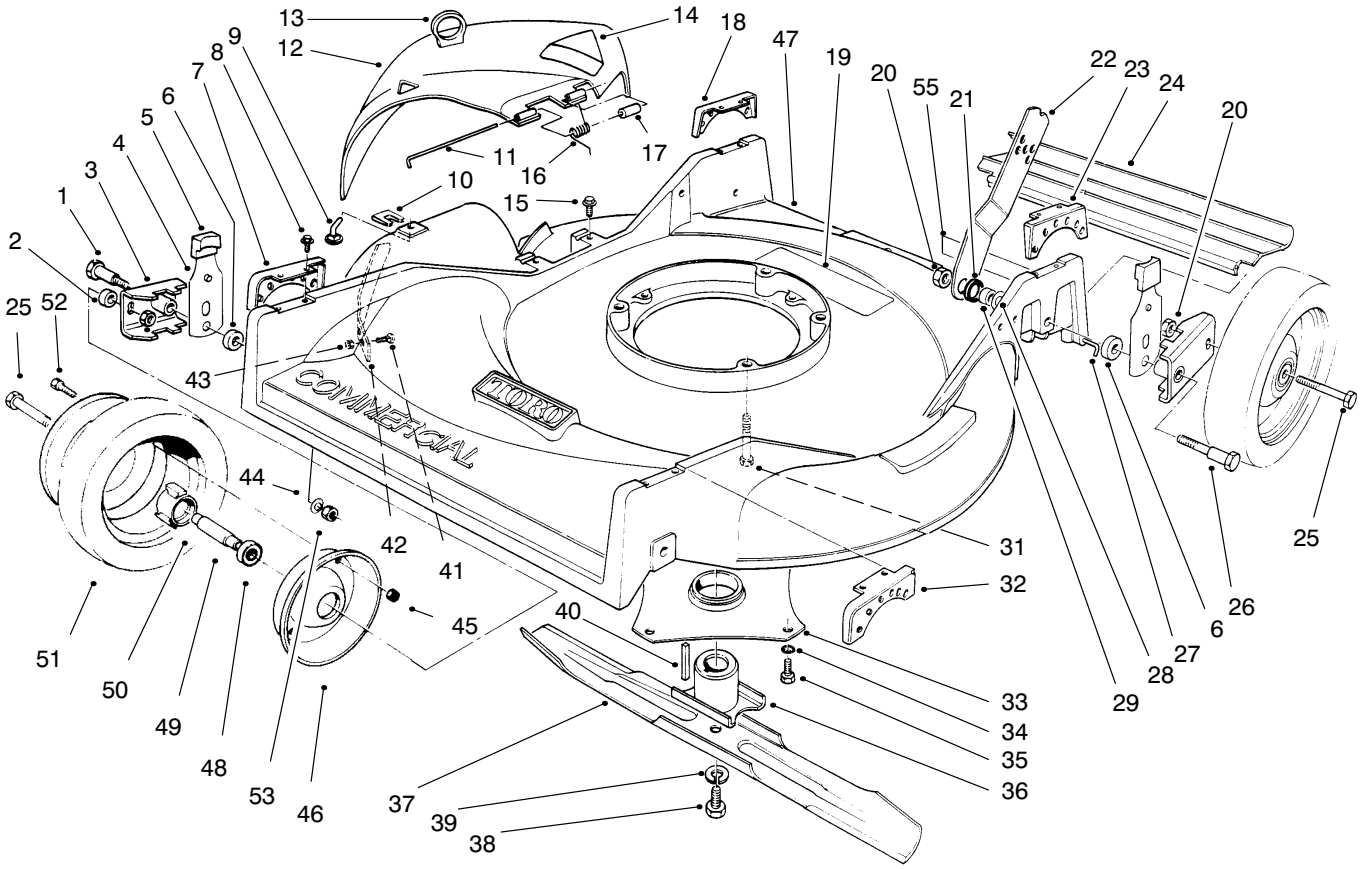


C−1012C

HOUSING & WHEEL ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
35	32144−70	Screw − Thread Forming	4
36	52−2170	Retainer, Blade	1
37	8−5230	Blade 21”	1
38	26−0671	Screw − Blade	1
39	3253−22	Washer − Lock	1
40	27−8590	Key − Square	1
41	3230−16	Bolt − Carriage	2
42	52−2650	Bar − Safety	1
43	3296−29	Nut − Lock	2
44	3290−455	Washer − Belleville	2
45	3296−42	Nut − Lock	16
46	53−7780	Plate − Wheel Half	8

Ref. No.	Part No.	Description	No. Used
47	12−4729	Housing (Incl. Ref. #19, & 55)	1
48	52−2450	Bearing − Wheel	8
49	52−2440	Spacer − Bearing	4
50	52−2410	Hub	4
51	53−7740	Tire	4
52	321−2	Screw − Cap, Hex. Hd.	16
53	32152−2	Nut −Lock	2
54	71−8650	Decal − Danger	1
55	92−1779	Decal − Warning	1
*	53−7720	Tire & Wheel Assembly (Incl. Ref. #45, 46 & 48−52)	4

*Not Illustrated

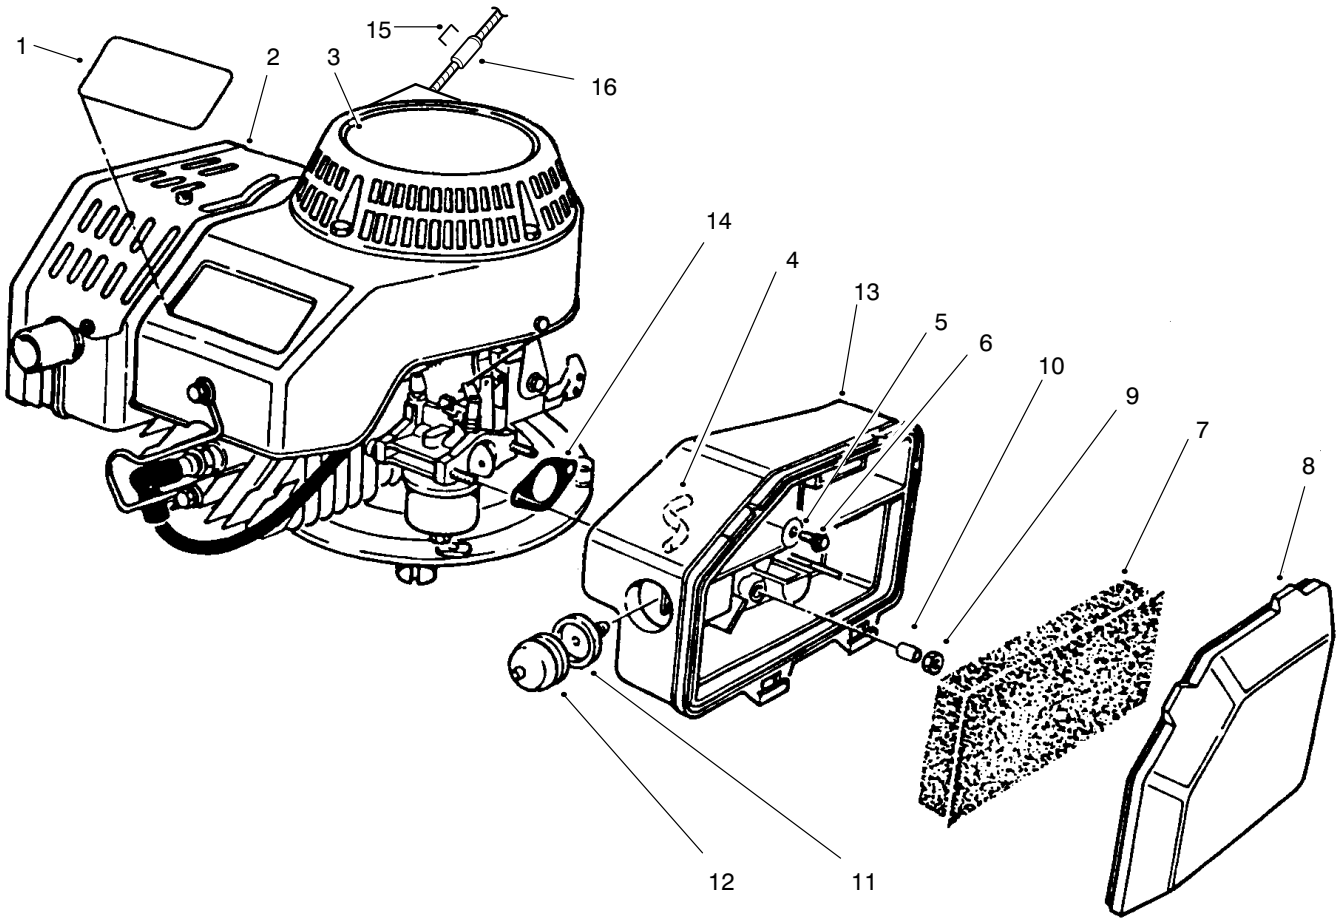


C−1013

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71−1260	Decal − Pro Line	1
2	61−8062	Engine − Complete	1
3	77−0040	Decal − Recoil	1
4	44−3172	Hose − Primer	1
5	3256−16	Washer	1
6	51−2690	Screw − Hex. Flange Hd.	1
7	63−9380	Filter − Foam	1
8	63−9340	Cover − Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
9	50−7180	Nut	2
10	62−3980	Sleeve	2
11	44−2750	Body − Primer	1
12	66−7460	Bulb − Primer	1
13	63−9330	Body − Air Cleaner	1
14	81−0090	Gasket − Air Cleaner	1
†15		Staple	1
16	47−2480	Stop − Recoil	1

† Obtain Locally

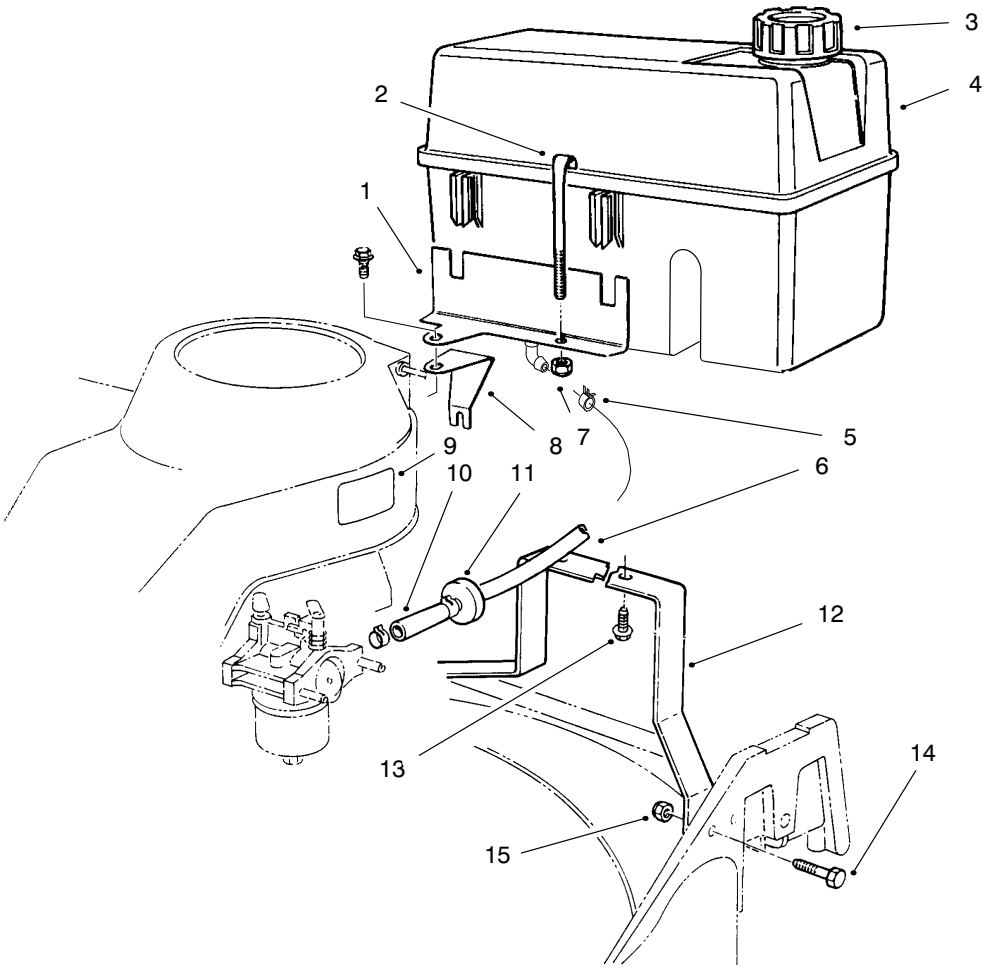


C−2421

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74−2110	Bracket − Tank	1
2	77−2840	Retainer − Fuel Tank	1
3	55−3545	Gas Cap Assembly	1
4	94−5827	Fuel Tank Assembly	1
5	2412−95	Clamp − Fuel Line	4
6	68−3633	Hose − Fuel	1
7	3296−42	Nut − Lock	1
8	77−0520	Support − Bracket	1

Ref. No.	Part No.	Description	No. Used
9	62−7600	Decal − Fuel Mix	1
10	51−3211	Hose − Fuel	1
11	71−9280	Filter − Fuel	1
12	74−2020	Base − Tank, Fuel	1
13	46−8091	Screw − Hex. Washer Hd.	2
14	322−6	Screw − Cap, Hex. Hd.	2
15	3296−29	Nut − Lock	2

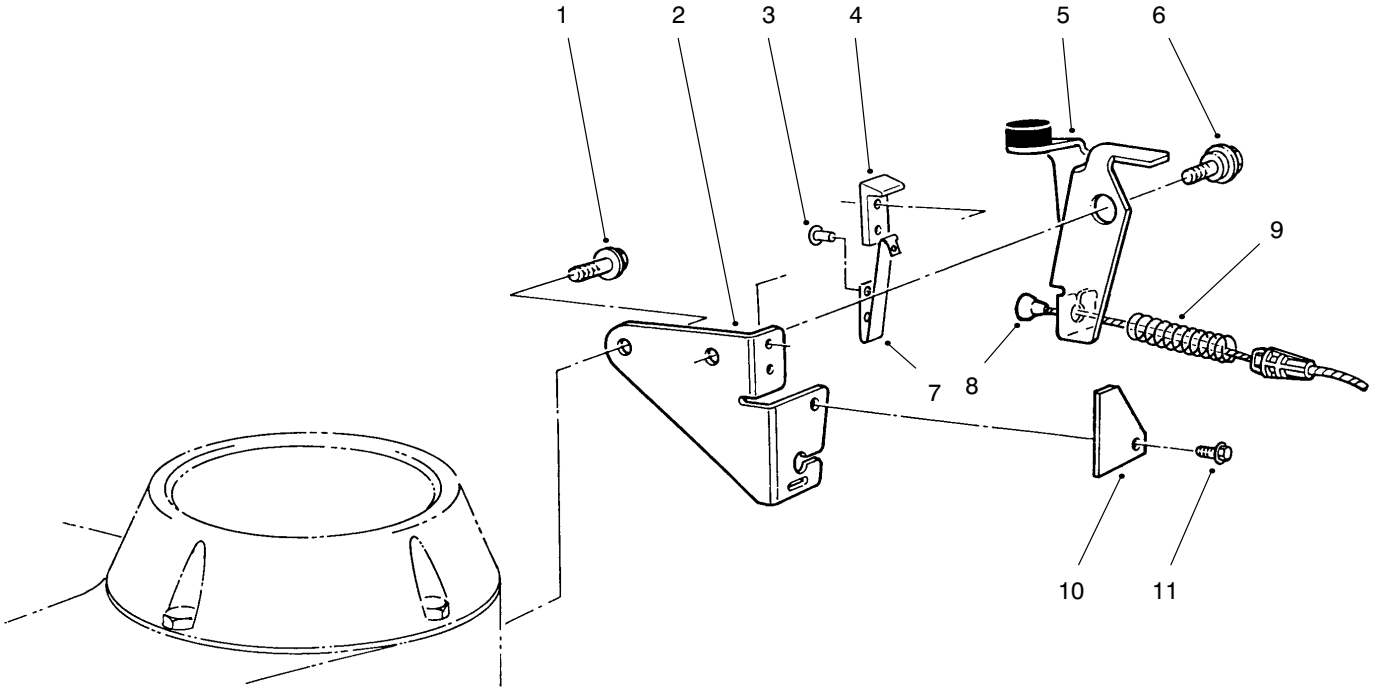


C−0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144−10	Screw − Self Tapping	1
2	84−7820	Plate − Mounting	1
3	3290−459	Rivet	2
4	77−5260	Strap − Insulation	1
5	66−5380	Brake Plate Assembly	1
6	92−9698	Screw − Shoulder, Metric	1
7	60−9010	Strap − Ground	1

Ref. No.	Part No.	Description	No. Used
8	85−6870	Cable − Brake	1
9	66−5370	Spring − Compression	1
10	53−4690	Stop − Ground Strap	1
11	32144−112	Screw − Self Tapping	1
*	14−6009	Mounting Plate Assembly (Incl. Ref. #2−4, & 7)	1

* Not Illustrated

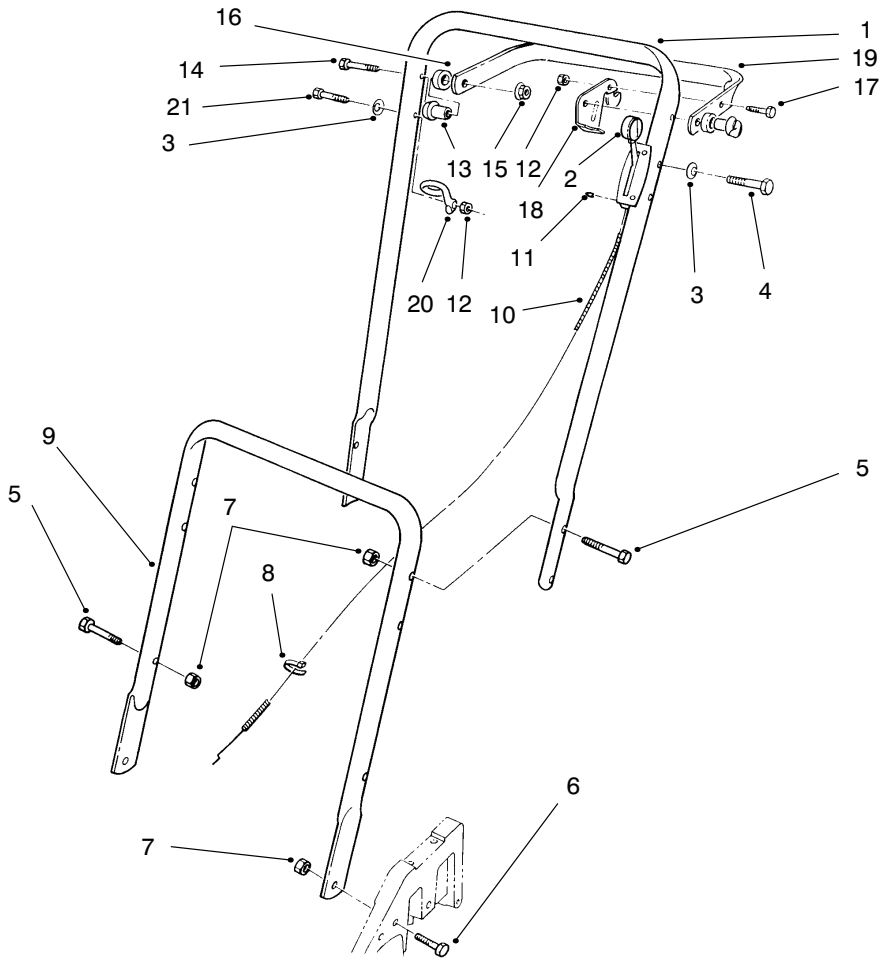


C−1015

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74−2150	Handle − Upper	1
2	82−9950	Bracket − Throttle	1
3	3−7501	Washer − Curved	3
4	321−13	Screw − Cap, Hex. Hd.	2
5	322−7	Screw − Cap, Hex. Hd.	6
6	322−6	Screw − Cap, Hex. Hd.	2
7	3296−29	Nut − Lock	8
8	3290−378	Tie − Cable	1
9	52−2370	Handle − Lower	1
10	70−1062	Cable − Throttle	1
11	32151−86	Clip − Throttle	2

Ref. No.	Part No.	Description	No. Used
12	3296−42	Nut − Lock	2
13	49−1630	Support − Spacer	2
14	322−10	Screw − Hex Hd. Cap	2
15	3296−58	Nut − Lock	2
16	256−276	Spacer	1
17	321−4	Screw − Hex Hd. Cap	1
18	66−5350	Lever − Control	1
19	61−8270	Bar − Control	1
20	46−8081	Guide − Rope	1
21	321−9	Screw − Hex Hd. Cap	1

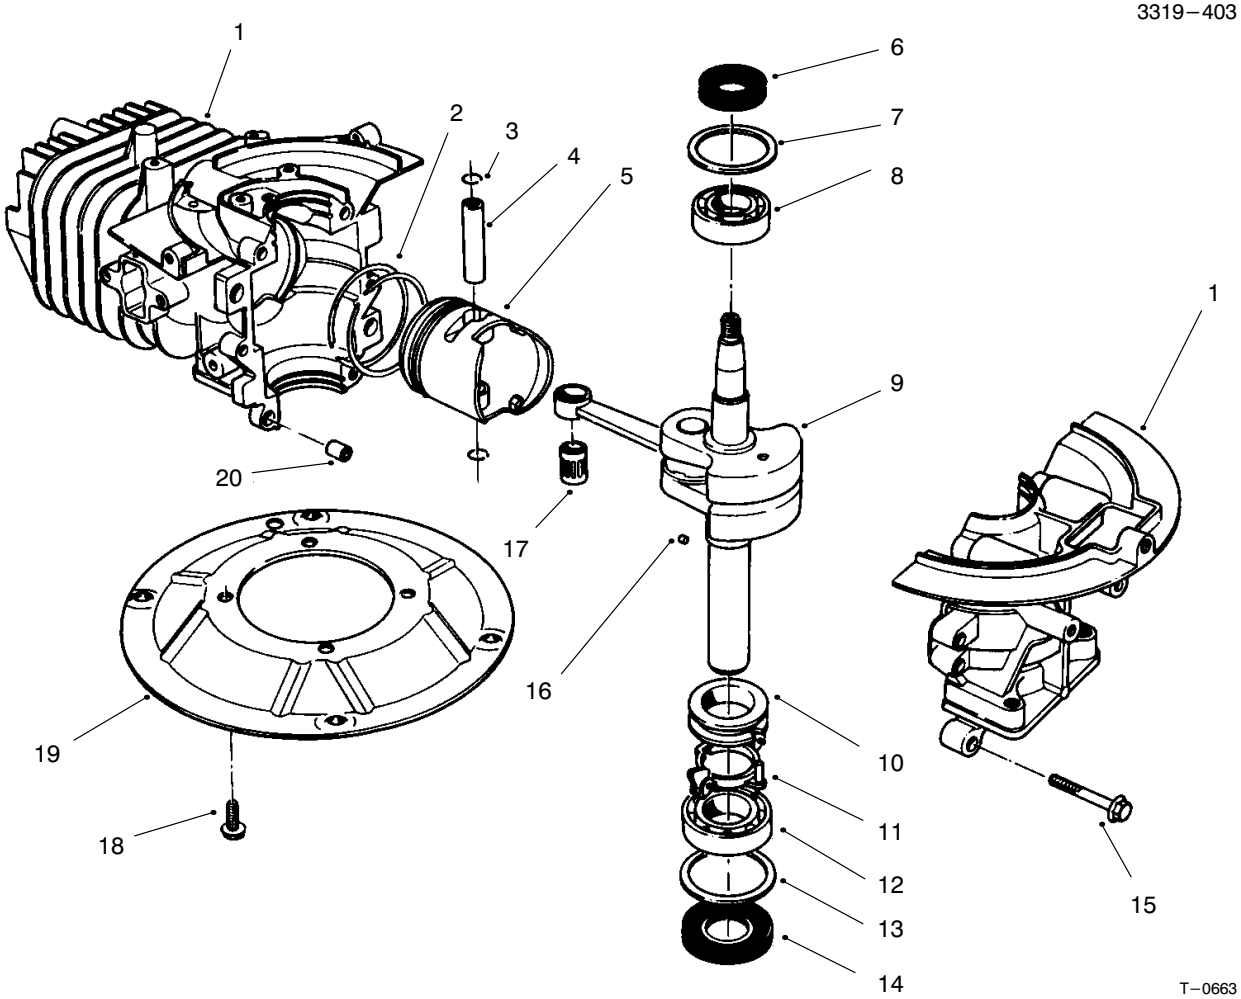


CRANKSHAFT ASSEMBLY (Model No. 47PT6−3)

Ref. No.	Part No.	Description	No. Used
1	94−1685	Crankcase/Cylinder Assy.	1
2	81−0590	Piston Ring Set	1
3	81−0620	Circlip	2
4	81−0600	Pin − Wrist	1
5	81−2140	Piston − 58mm	1
6	81−0720	Seal − Oil, Upper	1
7	81−0710	Washer − Thrust, Upper	1
8	81−0690	Bearing − Upper 20mm	1
9	81−4680	Crankshaft/Connecting Rod Assembly	1
10	81−0770	Spacer − Governor	1

Ref. No.	Part No.	Description	No. Used
11	81−0750	Bracket − Arm, Governor	1
12	81−0700	Bearing − Lower 25mm	1
13	81−0730	Washer − Thrust, Lower	1
14	81−0740	Seal − Oil, Lower	1
15	81−0540	Bolt 30mm Lg.	5
16	81−0760	Pin − Crankshaft	1
17	81−0610	Bearing − Wrist Pin	1
18	81−0570	Bolt	4
19	81−0560	Plate − Mounting	1
20	81−0520	Pin − Crankcase	2
*	12−8099	Short Block	1

*Not Illustrated

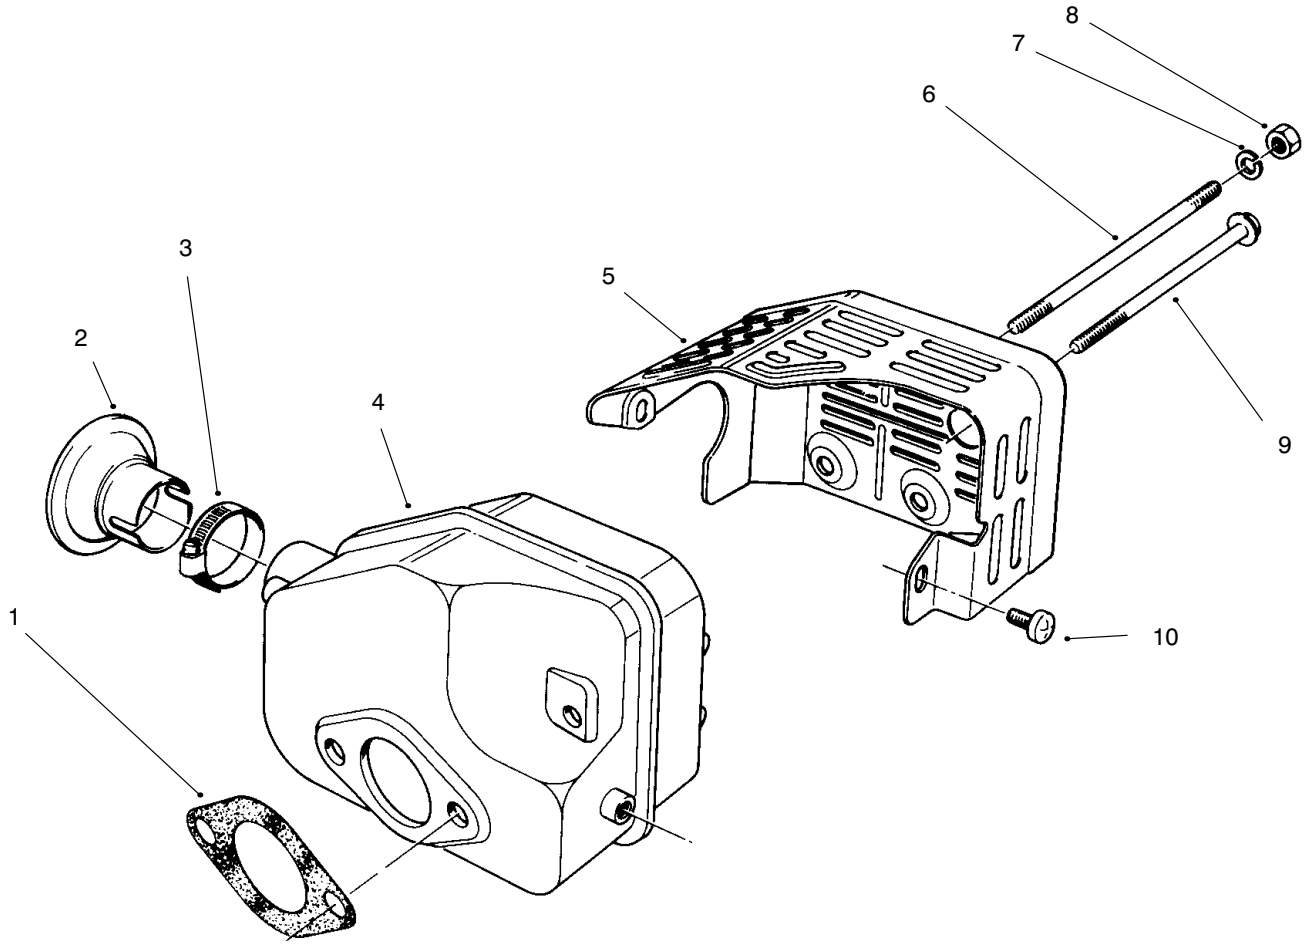


T−0667

MUFFLER ASSEMBLY (Model No. 47PT6−3)

Ref. No.	Part No.	Description	No. Used
1	81−1080	Gasket − Muffler	1
2	81−0200	Spark Arrester (Optional)	1
†3		Clamp	1
4	81−5690	Muffler	1
5	81−2450	Cover − Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81−1100	Bolt	2
7	81−1120	Washer − Lock	2
8	81−1110	Nut	2
9	81−1150	Bolt − Self Tapping	1
10	81−1140	Screw − Phillips Hd.	2

†Obtain Locally

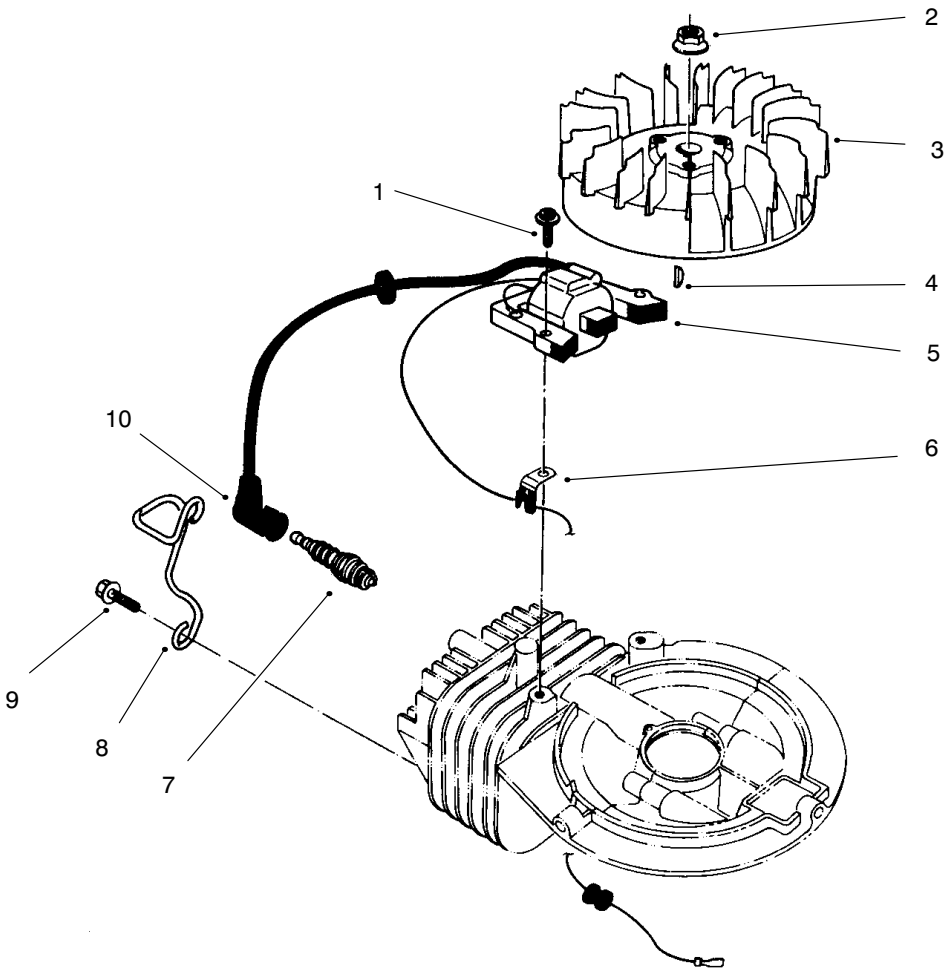


T−0664

IGNITION ASSEMBLY (Model No. 47PT6−3)

Ref. No.	Part No.	Description	No. Used
1	81−5680	Screw − Cap, Hex Hd.	2
2	81−1330	Nut	1
3	81−2810	Flywheel − Magneto	1
4	81−2370	Key − Flywheel	1
5	81−2820	Coil/Ignition Assembly	1
6	81−1480	Clamp	1

Ref. No.	Part No.	Description	No. Used
7	81−0181	Spark Plug	1
8	81−2120	Guard − Spark Plug	1
9	81−2350	Bolt − Self Tapping (20mm Lg.)	2
10	81−1500	Cap Assembly − Spark Plug	1
*	41−7650	Puller − Flywheel	1


*Not Illustrated

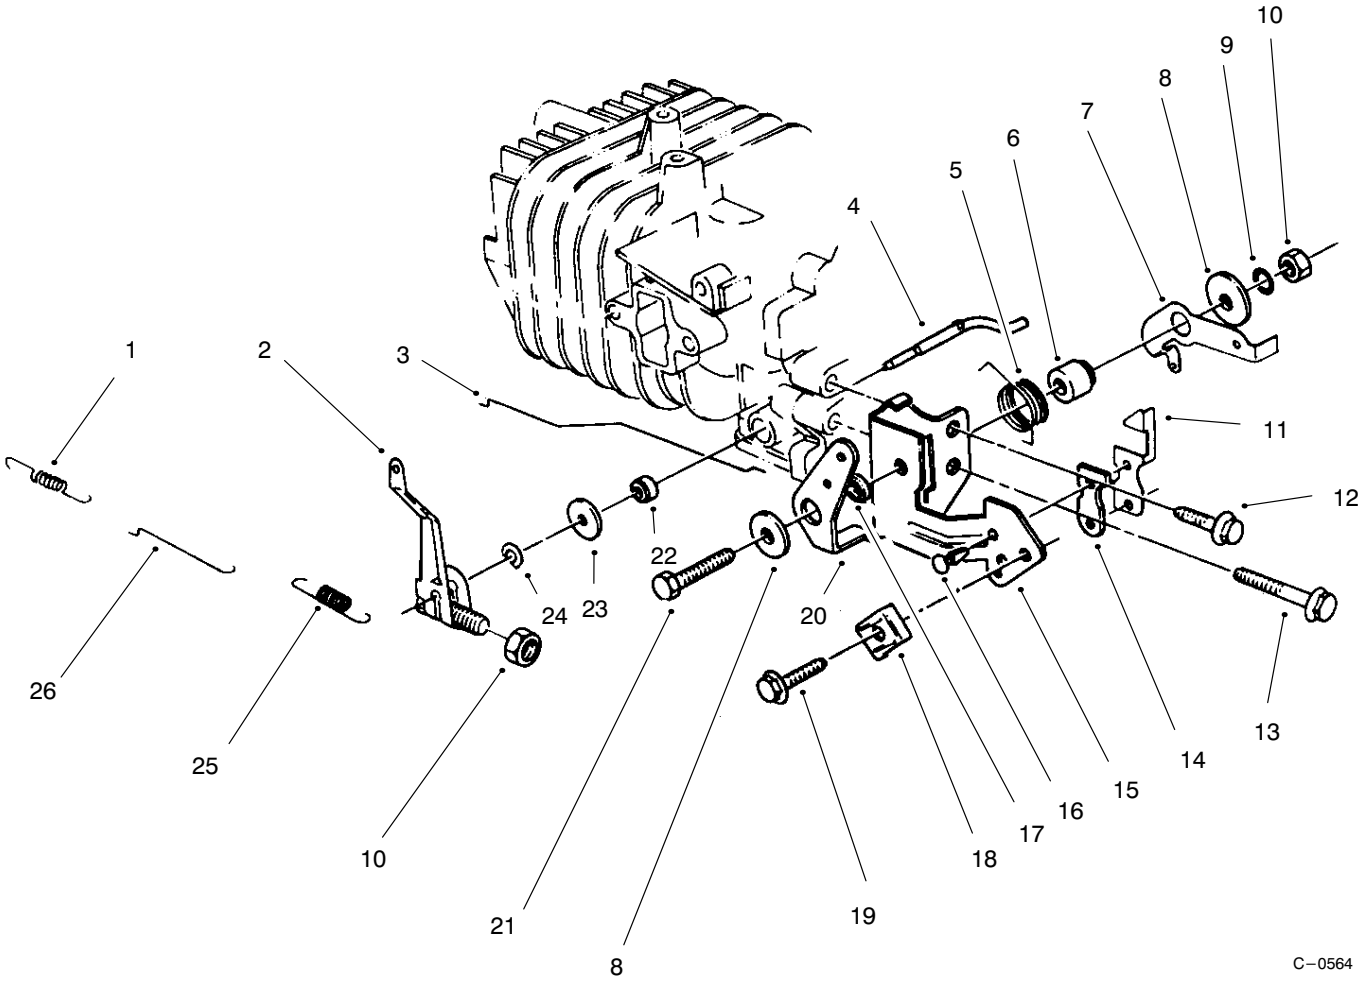

GOVERNOR ASSEMBLY
(Model No. 47PT6−3)

Ref. No.	Part No.	Description	No. Used
1	81−0920	Spring − Carburetor Rod	1
2	81−5420	Governor Arm/Bolt Assy.	1
3	81−5410	Rod − Choke	1
4	81−2880	Shaft − Governor	1
5	81−2460	Spring − Lever, Choke	1
6	81−1770	Spacer − Lever, Governor	1
7	81−2850	Lever − Governor	1
8	81−1750	Washer − Lever, Choke	2
9	81−1450	Washer − Lock	1
10	81−0900	Nut	2
11	81−1840	Terminal − Kill Switch	1
12	81−1170	Bolt − Self Tapping	1
13	81−0540	Bolt	1

Ref. No.	Part No.	Description	No. Used
14	81−1830	Insulator − Kill Switch	1
15	81−2420	Bracket − Throttle	1
16	81−4530	Rivet − Kill Switch	2
17	81−2470	Spacer − Lever, Choke	1
18	81−2430	Clamp − Cable	1
19	50−0130	Bolt − Clamp, Cable	1
20	81−1710	Lever − Choke	1
21	81−1730	Bolt − Bracket, Throttle	1
22	81−0850	Seal − Shaft, Governor	1
23	81−0860	Washer	1
24	81−0870	Ring − Retaining	1
25	81−2830	Spring − Governor	1
26	81−0910	Rod − Carburetor	1

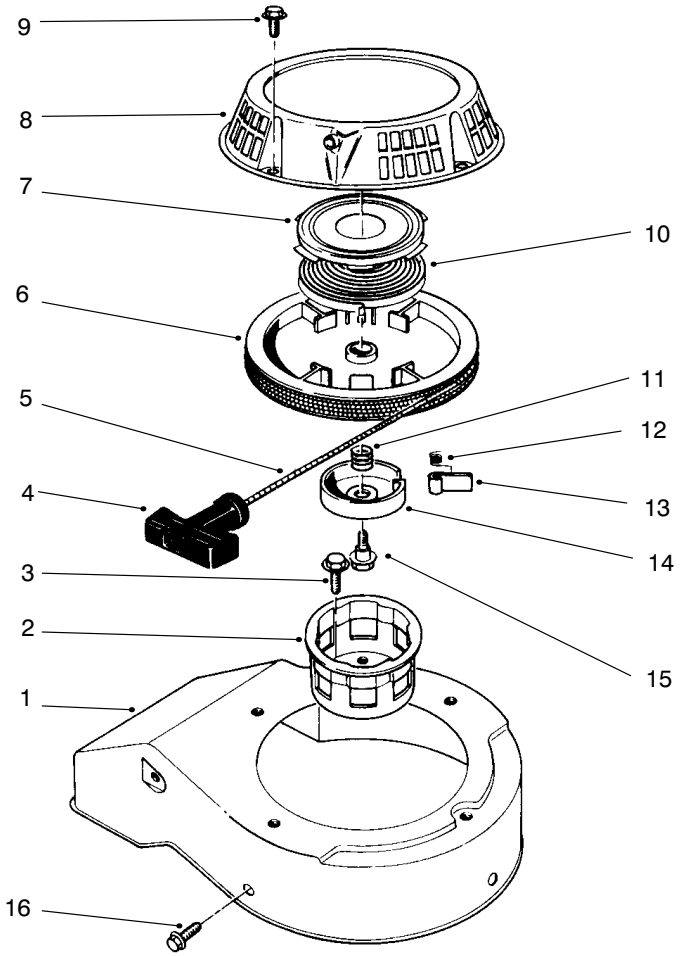


T−1102

RECOIL ASSEMBLY
(Model No. 47PT6−3)

Ref. No.	Part No.	Description	No. Used
1	81−2080	Cover − Fan, Cooling	1
2	81−2170	Cup − Pulley, Starter	1
3	81−1300	Bolt	3
4	81−1630	Handle − Recoil	1
5	81−1270	Rope	1
6	81−1210	Pulley − Rope	1
7		Retainer − Spring, Recoil	1
8	81−2100	Case − Starter	1
9	81−1280	Bolt	4
10		Spring − Recoil	1
11	81−1240	Spring − Compression	1

Ref. No.	Part No.	Description	No. Used
12	81−1220	Spring − Dog	1
13	81−1230	Dog − Starter	1
14	81−1250	Retainer − Dog	1
15	81−1260	Bolt − Shoulder	1
16	53−1340	Bolt − Self Tapping (15mm Lg.)	3
*	81−5940	Starter Assembly (Incl. Ref. #4−15)	1
*	81−2300	Spring & Retainer Assembly (Incl. Ref. #7 & 10)	1

*Not Illustrated

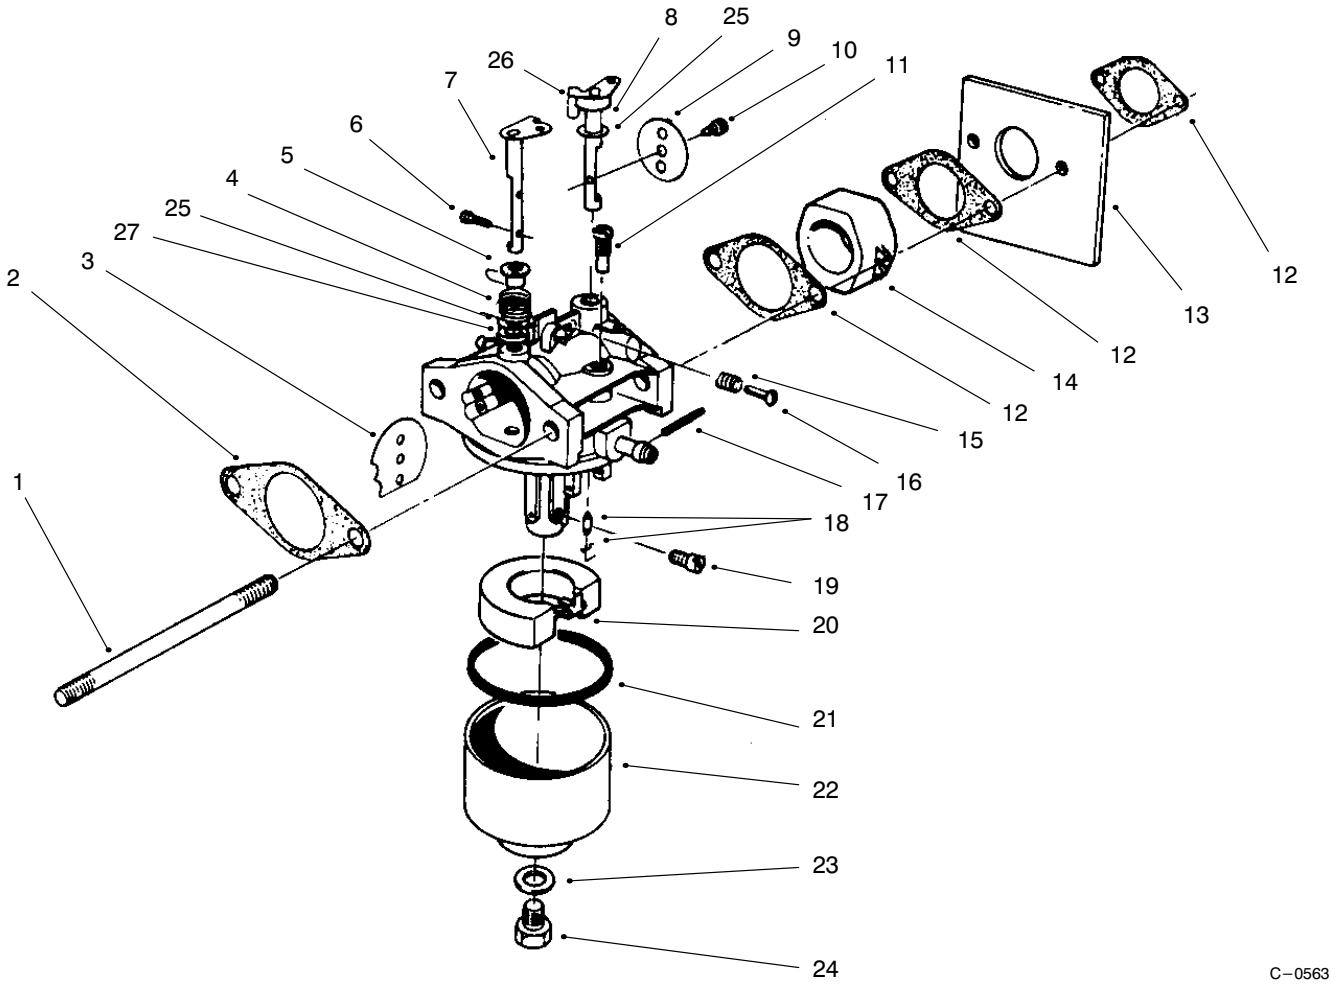

CARBURETOR ASSEMBLY (Model No. 47PT6−3)

Ref. No.	Part No.	Description	No. Used
1	81−5450	Stud Bolt, Carburetor	2
2	81−0090	Gasket	1
3	81−0240	Valve − Choke	1
4	81−0230	Spring − Choke	1
5	81−0220	Bushing − Choke	1
6	81−2160	Screw − Choke Plate	2
7	81−1950	Shaft − Choke	1
8	81−0250	Shaft − Throttle	1
9	81−0260	Valve − Throttle	1
10	81−0270	Screw − Throttle	1
11	94−1684	Jet − Pilot #42.5	1
12	81−0780	Gasket − Carburetor	3
13	81−5490	Shield − Carburetor	1
14	81−5440	Insulator − Carburetor	1
15	81−2580	Spring − Idle Stop	1
16	50−0250	Screw − Idle Stop	1
17	81−2600	Pin − Float	1
18	81−4910	Needle Valve	1

Ref. No.	Part No.	Description	No. Used
19	81−1060	Jet − Main #75	1
*	81−2340	Jet − Main #72.5 High Alt. Above 6,000 Ft. (Optional)	A/R
20	81−0970	Float	1
21	81−1010	Gasket − Bowl, Float	1
22	81−5660	Bowl − Float	1
23	81−1020	Gasket − Capscrew, Bowl	1
24	81−5670	Capscrew − Bowl	1
25	81−2530	Seal	2
26	81−2540	Ring	1
27	81−2550	Packing	1
*	12−6379	Carburetor Kit (Incl. Ref. #2, 12, 18, 21 & 23)	1
*	81−2520	Carburetor Assy. Complete	1
*	81−5810	Seat Kit (Incl. Valve Seat & Ref. #18)	1
*	94−1687	Carburetor Ass'y w/Primer	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3−7501	Washer − Curved	6	3	3
8−5230	Blade 21	2	37	1
12−4729	Housing	2	47	1
12−4739	Deflector	1	12	1
12−6379	Carburetor Kit	12	*	1
12−8099	Short Block	7	*	1
14−6009	Mounting Plate Assembly	5	*	1
25−7740	Knob − Arm	1	5	4
26−0671	Screw − Blade	2	38	1
27−6510	Spacer − Latch, Handle	1	21	2
27−7071	Latch − Handle	1	22	2
27−8590	Key − Square	2	40	1
28−1430	Loop − Lift	1	13	1
28−3250	Clip − Pin	1	10	1
28−3260	Pin − Chute	1	9	1
28−3270	Sleeve − Spring	1	17	1
33−3201	Rod − Shield	1	27	1
39−5770	Decal − Danger	1	14	1
41−7650	Puller − Flywheel	9	*	1
44−2750	Body − Primer	3	11	1
44−3172	Hose − Primer	3	4	1
46−6811	Screw/Washer Assembly	1	15	2
46−8081	Guide − Rope	6	20	1
46−8091	Screw − Hex. Washer Hd.	4	13	2
47−2480	Stop − Recoil	3	16	1
49−1630	Support − Spacer	6	13	2
49−2040	Screw − Thread Forming	1	8	8
49−8800	Spring Arm Assembly	1	4	4
49−9160	Pivot Arm Assembly	1	3	4
49−9180	Screw − Pivot	1	1	2
50−0130	Bolt − Clamp, Cable	10	19	1
50−0250	Screw − Idle Stop	12	16	1
50−7180	Nut	3	9	2
51−2690	Screw − Hex. Flange Hd.	3	6	1
51−3211	Hose − Fuel	4	10	1
52−2170	Retainer, Blade	2	36	1
52−2260	Screw − Pivot, Rear	1	26	2
52−2360	Spacer − Handle, Brace	1	29	2
52−2370	Handle − Lower	6	9	1
52−2410	Hub	2	50	4
52−2440	Spacer − Bearing	2	49	4
52−2450	Bearing − Wheel	2	48	8
52−2480	Spacer − Wheel	1	2	4
52−2500	Crankshaft Protector	1	33	1
52−2510	Quadrant − Front R.H.	1	7	1
52−2520	Quadrant − Front L.H.	1	32	1
52−2530	Quadrant − Rear R.H.	1	18	1
52−2540	Quadrant − Rear L.H.	1	23	1
52−2560	Spring − Deflector	1	16	1
52−2570	Pin − Deflector Hinge	1	11	1
52−2640	Shield − Rear, Safety	1	24	1
52−2650	Bar − Safety	2	42	1
53−1340	Bolt − Self Tapping	11	16	3
53−4690	Stop − Ground Strap	5	10	1
53−7720	Tire & Wheel Assembly	2	*	4
53−7740	Tire	2	51	4
53−7780	Plate − Wheel Half	2	46	8
53−7930	Spacer − Pivot Arm	1	6	4
55−3545	Gas Cap Assembly	4	3	1
60−9010	Strap − Ground	5	7	1
61−8062	Engine − Complete	3	2	1
61−8270	Bar − Control	6	19	1
62−3980	Sleeve	3	10	2
62−7600	Decal − Fuel Mix	4	9	1
63−9330	Body − Air Cleaner	3	13	1
63−9340	Cover − Air Cleaner	3	8	1
63−9380	Filter − Foam	3	7	1
66−5350	Lever − Control	6	18	1
66−5370	Spring − Compression	5	9	1
66−5380	Brake Plate Assembly	5	5	1
66−7460	Bulb − Primer	3	12	1
66−9303	Screw − Hex. Washer Hd.	1	31	4
68−3633	Hose − Fuel	4	6	1
68−7410	Decal − Blade Warning	1	30	1
70−1062	Cable − Throttle	6	10	1
71−1260	Decal − Pro Line	3	1	1
71−1280	Decal − Safety Instructions	1	19	1
71−8650	Decal − Danger	2	54	1
71−9280	Filter − Fuel	4	11	1
74−2020	Base − Tank, Fuel	4	12	1
74−2110	Bracket − Tank	4	1	1
74−2150	Handle − Upper	6	1	1
77−0040	Decal − Recoil	3	3	1
77−0520	Support − Bracket	4	8	1
77−2840	Retainer − Fuel Tank	4	2	1
77−5260	Strap − Insulation	5	4	1
81−0090	Gasket	12	2	1
81−0090	Gasket − Air Cleaner	3	14	1
81−0181	Spark Plug	9	7	1
81−0200	Spark Arrester (Optional)	8	2	1
81−0220	Bushing − Choke	12	5	1
81−0230	Spring − Choke	12	4	1
81−0240	Valve − Choke	12	3	1
81−0250	Shaft − Throttle	12	8	1
81−0260	Valve − Throttle	12	9	1
81−0270	Screw − Throttle	12	10	1
81−0520	Pin − Crankcase	7	20	2
81−0540	Bolt	10	13	1
81−0540	Bolt 30mm Lg.	7	15	5
81−0560	Plate − Mounting	7	19	1
81−0570	Bolt	7	18	4
81−0590	Piston Ring Set	7	2	1
81−0600	Pin − Wrist	7	4	1
81−0610	Bearing − Wrist Pin	7	17	1
81−0620	Circlip	7	3	2
81−0690	Bearing − Upper 20mm	7	8	1
81−0700	Bearing − Lower 25mm	7	12	1
81−0710	Washer − Thrust, Upper	7	7	1
81−0720	Seal − Oil, Upper	7	6	1
81−0730	Washer − Thrust, Lower	7	13	1
81−0740	Seal − Oil, Lower	7	14	1
81−0750	Bracket − Arm, Governor	7	11	1
81−0760	Pin − Crankshaft	7	16	1
81−0770	Spacer − Governor	7	10	1
81−0780	Gasket − Carburetor	12	12	3
81−0850	Seal − Shaft, Governor	10	22	1
81−0860	Washer	10	23	1
81−0870	Ring − Retaining	10	24	1
81−0900	Nut	10	10	2
81−0910	Rod − Carburetor	10	26	1
81−0920	Spring − Carburetor Rod	10	1	1
81−0970	Float	12	20	1
81−1010	Gasket − Bowl, Float	12	21	1
81−1020	Gasket − Capscrew, Bowl	12	23	1
81−1060	Jet − Main #75	12	19	1
81−1080	Gasket − Muffler	8	1	1
81−1100	Bolt	8	6	2
81−1110	Nut	8	8	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
81−1120	Washer − Lock	8	7	2
81−1140	Screw − Phillips Hd.	8	10	2
81−1150	Bolt − Self Tapping	8	9	1
81−1170	Bolt − Self Tapping	10	12	1
81−1210	Pulley − Rope	11	6	1
81−1220	Spring − Dog	11	12	1
81−1230	Dog − Starter	11	13	1
81−1240	Spring − Compression	11	11	1
81−1250	Retainer − Dog	11	14	1
81−1260	Bolt − Shoulder	11	15	1
81−1270	Rope	11	5	1
81−1280	Bolt	11	9	4
81−1300	Bolt	11	3	3
81−1330	Nut	9	2	1
81−1450	Washer − Lock	10	9	1
81−1480	Clamp	9	6	1
81−1500	Cap Assembly − Spark Plug	9	10	1
81−1630	Handle − Recoil	11	4	1
81−1710	Lever − Choke	10	20	1
81−1730	Bolt − Bracket, Throttle	10	21	1
81−1750	Washer − Lever, Choke	10	8	2
81−1770	Spacer − Lever, Governor	10	6	1
81−1830	Insulator − Kill Switch	10	14	1
81−1840	Terminal − Kill Switch	10	11	1
81−1950	Shaft − Choke	12	7	1
81−2080	Cover − Fan, Cooling	11	1	1
81−2100	Case − Starter	11	8	1
81−2120	Guard − Spark Plug	9	8	1
81−2140	Piston − 58mm	7	5	1
81−2160	Screw − Choke Plate	12	6	2
81−2170	Cup − Pulley, Starter	11	2	1
81−2300	Spring & Retainer Assembly	11	*	1
81−2340	Jet − Main #72.5 High Alt.	12	*	A/R
81−2350	Bolt − Self Tapping	9	9	2
81−2370	Key − Flywheel	9	4	1
81−2420	Bracket − Throttle	10	15	1
81−2430	Clamp − Cable	10	18	1
81−2450	Cover − Muffler	8	5	1
81−2460	Spring − Lever, Choke	10	5	1
81−2470	Spacer − Lever, Choke	10	17	1
81−2520	Carburetor Assy. Complete	12	*	1
81−2530	Seal	12	25	2
81−2540	Ring	12	26	1
81−2550	Packing	12	27	1
81−2580	Spring − Idle Stop	12	15	1
81−2600	Pin − Float	12	17	1
81−2810	Flywheel − Magneto	9	3	1
81−2820	Coil/Ignition Assembly	9	5	1
81−2830	Spring − Governor	10	25	1
81−2850	Lever − Governor	10	7	1
81−2880	Shaft − Governor	10	4	1
81−4530	Rivet − Kill Switch	10	16	2
81−4680	Crankshaft/Connecting Rod	7	9	1
81−4910	Needle Valve	12	18	1
81−5410	Rod − Choke	10	3	1
81−5420	Governor Arm/Bolt Assy.	10	2	1
81−5440	Insulator − Carburetor	12	14	1
81−5450	Stud Bolt, Carburetor	12	1	2
81−5490	Shield − Carburetor	12	13	1
81−5660	Bowl − Float	12	22	1
81−5670	Capscrew − Bowl	12	24	1
81−5680	Screw − Cap, Hex Hd.	9	1	2
81−5690	Muffler	8	4	1
81−5810	Seat Kit	12	*	1
81−5940	Starter Assembly	11	*	1
82−9950	Bracket − Throttle	6	2	1
84−7820	Plate − Mounting	5	2	1
85−6870	Cable − Brake	5	8	1
92−1779	Decal − Warning	2	55	1
92−9698	Screw − Shoulder, Metric	5	6	1
94−1684	Jet − Pilot #42.5	12	11	1
94−1685	Crankcase/Cylinder Assy.	7	1	1
94−1687	Carburetor Ass'y w/Primer	12	*	1
94−5827	Fuel Tank Assembly	4	4	1
2412−95	Clamp − Fuel Line	4	5	4
256−276	Spacer	6	16	1
321−2	Screw − Cap, Hex. Hd.	2	52	16
321−4	Screw − Hex Hd. Cap	6	17	1
321−9	Screw − Hex Hd. Cap	6	21	1
321−13	Screw − Cap, Hex. Hd.	6	4	2
322−6	Screw − Cap, Hex. Hd.	6	6	2
322−6	Screw − Cap, Hex. Hd.	4	14	2
322−7	Screw − Cap, Hex. Hd.	6	5	6
322−10	Screw − Hex Hd. Cap	6	14	2
323−12	Screw − Cap, Hex Hd.	1	25	4
3230−16	Bolt − Carriage	2	41	2
3253−22	Washer − Lock	2	39	1
3254−6	Washer − Lock, Int. Tooth	1	34	4
3256−16	Washer	3	5	1
3290−340	Washer − Belleville	1	28	2
3290−378	Tie − Cable	6	8	1
3290−455	Washer − Belleville	2	44	2
3290−459	Rivet	5	3	2
3296−29	Nut − Lock	6	7	8
3296−29	Nut − Lock	4	15	2
3296−29	Nut − Lock	2	43	2
3296−39	Nut − Lock	1	20	6
3296−42	Nut − Lock	4	7	1
3296−42	Nut − Lock	6	12	2
3296−42	Nut − Lock	2	45	16
3296−58	Nut − Lock	6	15	2
32144−10	Screw − Self Tapping	5	1	1
32144−70	Screw − Thread Forming	2	35	4
32144−112	Screw − Self Tapping	5	11	1
32151−86	Clip − Throttle	6	11	2
32152−2	Nut −Lock	2	53	2

OPTIONAL EQUIPMENT

Bagging Kit . . . . . Part No. 38−0050
Spark Arrestor Muffler . . . . . Part No. 81−0200

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

Date								

MAINTENANCE RECORD

Date								