Harrier
48

CODE 486V


OWNER'S HANDBOOK

(English Version)
FROM SERIAL NO: 486V001001 **HANDBOOK: 486038 (Rev.1.)**
Issue : 20.10.00

MAIN FEATURES /SPECIFICATIONS

Main Features

1 Spark Plug Lead
2 Primer Bulb
3 Engine Cover
4 Air Cleaner
5 Fuel Cap
6 Serial Number Label
7 Oil Filler Cap & Dipstick
8 Handlebar Fixing Knob
9 Rear Deflector
10 Engine Stop Lever
11 Throttle Control
12 Engine Stop Lever
13 Handlebar
14 Ground Speed Clutch Lever
15 Grass Bag Assembly
16 Rear Roller
17 Handlebar Height Adjuster
18 Height of Cut Lever
19 Exhaust Guard
20 Front Roller

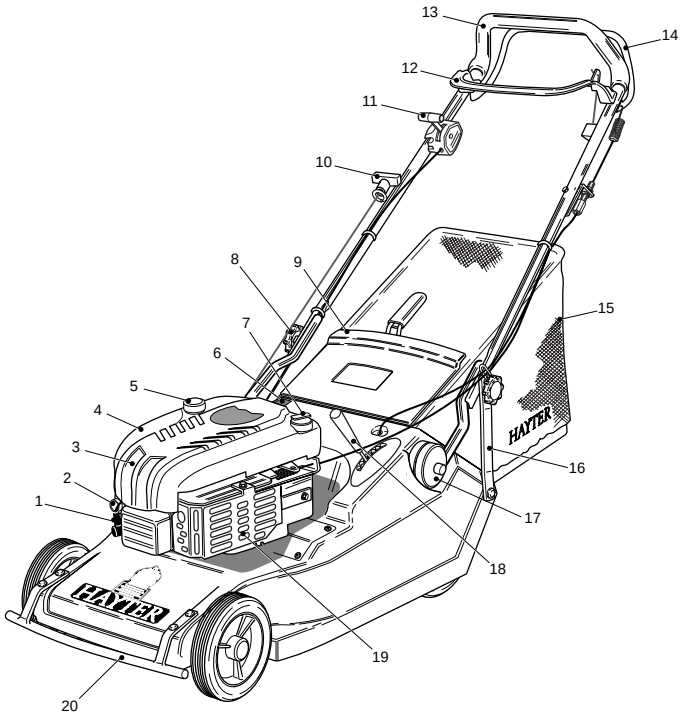

Specifications

MODEL	**CODE 486V**
Engine	Briggs & Stratton Intek Edge 60
Engine Type	1P65E1
Engine / Cutterblade Speed	3600 rpm
Fuel Type	Unleaded Petrol
Fuel Capacity	1.5 litres
Oil Type	SAE 30 Engine oil
Oil Sump Capacity	0.6 litres
Spark Plug	491055S (Briggs & Stratton)
Spark Plug Gap	0.76mm
Width of Cut	486mm
Height of Cut	12-65mm
Overall Dimensions	1040 x 540 x 1000mm
Dry Weight	49Kg

CONTENTS

1.2 Main Features/Specifications

1.3 Contents

1.4 Introduction

1.5 Warranty

1.6 - 1.9 Safety Precautions

1.9 Safety Symbols
1.9 Decal Symbols

1.10 Assembling the Mower
1.10 - Delivery Checklist
1.10 - Handlebar
1.10 - Adjust Handlebar Height
1.10 - Grassbag Attachment

1.11 Before Starting the Mower
1.11 - Prevent Engine Damage
1.11 - Oil Type
1.11 - Check Oil Level
1.11 - Fuel Type

1.12 - 1.15 Operating The Mower
1.12 - Controls
1.12 - Starting Step 1
1.12 - Step 2
1.12 - Step 3
1.13 - Forward Travel
1.13 - Turning
1.13 - Stopping
1.13 - Slopes
1.14 - Height of Cut
1.14 - Before Mowing
1.14 - Grassbag
1.14 - Without Grass Collection
1.15 - Heavy Growth
1.15 - Friction Disc
1.15 - Non-Grassed Areas

1.16 Maintenance Schedule

1.17 - 1.23 Mower Maintenance
1.17 - Engine
1.17 - Throttle Cable Adjustment
1.17 - Carburettor Adjustments
1.18 - Oil Service
1.18 - Air Cleaner Service
1.19 - Spark Plug Service
1.19 - Keeping Engine Clean
1.19 - Grassbag
1.20 - Deck Housing
1.20 - Securing Nuts and Bolts
1.20 - Clutch Cable Adjustment
1.21 - Lubrication
1.21 - Cutterblade Removal
1.22 - Cutterblade Assembly
1.22 - Cutterblade Sharpening
1.23 - Storage

1.24 - 1.25 Trouble Shooting

1.26 Declaration of Conformity

1.27 - 1.28 Parts List

1.30 Parts list Diagram

1.31 Customer Info/Notes

INTRODUCTION

Thank you for purchasing a **Hayter** mower. The following pages are designed to help you gain safe and efficient service from your mower.

IMPORTANT: This 'Owners Handbook' should be regarded as part of the mower as it gives essential information regarding mower safety, operation, maintenance and specifications. Read and understand this handbook prior to operating your mower for the first time. Make sure you are familiar with all the controls and points of regular maintenance. If you have any doubts, consult your local **Hayter** authorised dealer who will be pleased to give you assistance.

IMPORTANT: This mower is designed solely for use in a domestic grass cutting environment. Use in any other way is considered as contrary to the intended use. Compliance with and strict adherence to the conditions of operation, service and repair as specified in this handbook also constitute essential items of the intended use.
This mower should be operated, serviced and repaired only by persons who are familiar with its particular characteristics and who are acquainted with the relevant safety procedures.

The safety precautions laid in this handbook and all other generally recognised regulations on safety must be observed at all times.
Any abuse, any modifications carried out to this machine may relieve Hayter Ltd of liability for any resulting damage or injury.

Hayter mowers are robustly constructed and designed for efficient economical performance under normal mowing conditions. Correct operation and maintenance will ensure a long and satisfactory service life. Prior to despatch from our factory every effort is made to ensure that your mower is delivered in perfect condition.

Throughout this handbook all references to **left** and **right** are as viewed from behind the handlebar, in the direction of forward travel.

This handbook is based on information available at the time of publication.

HAYTER LIMITED reserve the right to amend product specifications without prior notification.

WARRANTY

LIMITED WARRANTY

Hayter Limited warrants to the original user/purchaser that this unit shall be free from defects in material and workmanship under normal use and service for a period of **one year** from the date of purchase. This one year Warranty is extended to a two year Warranty for aluminum decks only. The manufacturers of the engine furnish their own warranty and services are provided through their authorised network (Refer to "Engine Warranty Statement"). To qualify for the full benefit of the warranty, the warranty registration card must be returned within 60 days of purchase. Subject to the conditions and exclusions noted in this limited warranty, we shall at our option, repair or replace any warranted part during the applicable period. If you are in doubt or experience any difficulty, please consult a Hayter Authorised Service Dealer for clarification.

A 90 day warranty period applies to those items which are subject to normal wear and tear e.g. wheels, cutterbars, cables, grassbags and other consumable wearing parts.

All machines which are fitted with a **genuine** Hayter friction disc or crankshaft support bearing as original equipment before use, are covered by a **Lifetime Warranty** against the engine crankshaft bending. **Note:** friction washers, blade brake units and other such devices are not applicable. Only machines fitted with a **genuine** Hayter friction disc or crankshaft support bearing, which are used in accordance with the recommended operating and maintenance procedures, are covered.

This warranty does not apply to any unit that has been tampered with, altered, misused, abused or used for hire, and will become invalid if non genuine Hayter parts are fitted. This warranty does not cover for minor mechanical adjustments unless they are due to defective material or workmanship. Consult the Owner's Handbook or a Hayter Authorised Service Dealer for assistance when making these adjustments.

To make a warranty claim, return the unit to a Hayter Authorised Service Dealer along with proof of purchase stating the machine serial number and date of purchase. Subject to the conditions and exclusions in this limited warranty, the authorised dealer will, at our option, repair or replace any warranted part within the duration of the warranty period.

This limited warranty gives you specific legal rights and is in addition to any statutory rights to which you may be entitled and your statutory rights are not affected by this warranty. If you need additional information concerning this written warranty, or assistance in obtaining services, please write to : **HAYTER LIMITED, Service Department, Spellbrook, Bishop's Stortford, Hertfordshire CM23 4BU**

UK ONLY: Details of your local **Hayter** authorised dealer are contained in Yellow Pages or contact:- Freephone 0800 616298.

SAFETY PRECAUTIONS

Safety Alert Symbol



This safety alert symbol indicates important safety messages. When you see this symbol be alert to the possibility of injury. Carefully read the following and inform others.

Your mower is perfectly safe if used correctly. Failure to observe the following precautions may result in serious injury.

Training



Before using the mower read the owner's handbook carefully. Pay particular attention to the safety precautions. Ensure that you are familiar with the controls and the proper use of the equipment. Learn how to stop the mower quickly in an emergency.

Never allow children or people unfamiliar with these instructions to use the mower.

Never mow while people, especially children, or pets are nearby.

Keep in mind that the user is responsible for accidents or hazards occuring to other people or their property.

Preparation



While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing sandals.

Thoroughly inspect the area where the mower is to be used and remove all objects which may be thrown by the machine.

WARNING: Petrol is highly flammable
- Store fuel in containers specifically designed for this purpose.

- Add fuel before starting the engine. Never remove the cap from the fuel tank or add petrol while the engine is running or when the engine is hot. Allow the engine to cool for at least two minutes before refilling.

- Do not attempt to start the engine if petrol is spilled or a strong smell of petrol is present. Move the mower away from the area of spillage and avoid creating any source of ignition until petrol vapours have dispersed.

SAFETY PRECAUTIONS

Preparation



- Always use fresh fuel. Stale fuel can block the carburetor and cause leakage.

- Replace fuel tank and oil tank caps securely.

A damaged cutter blade or loose fixing bolts are major hazards. Before use, always visually inspect the cutting mechanism to ensure that it is in good condition. A damaged cutter blade must be replaced immediately with a genuine Hayter replacement part.

Operation



Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect. Refuel outdoors only and do not smoke while refuelling.

Always pull the starter cord slowly until resistance is felt. Then pull the cord rapidly to avoid kickback and prevent hand or arm injury.

Mow only in daylight or good artificial light.

Avoid using the mower on wet grass, wherever possible.

Always be sure of your footing on slopes.

Walk, never run.

Mow across the face of slopes, never up and down.

Exercise extra caution when changing direction on slopes.

Do not mow excessively steep slopes of more than 20 degrees.

Use extra caution when reversing or pulling the mower towards you.

Stop the engine before removing the mower across surfaces other than grass.

Never operate the mower unless the guards are securely in position and in good condition.

Do not change the engine governor settings or overspeed the engine.

Disengage the rear roller drive clutch before starting the engine.

Start the engine carefully, with feet well away from the cutterblade.

SAFETY PRECAUTIONS

Operation



Do not tilt the mower when starting the engine.

Do not put hands or feet near or under rotating parts.

Never pick up or carry the mower while the engine is running.

Never lift the rear deflector while the engine is running.

Never touch the exhaust/exhaust guard or cooling fins when the engine is hot.

Stop the engine and disconnect the spark plug lead:

- Before clearing blockages or unclogging the discharge chute.
- Before cleaning/checking or working on the mower.
- After striking a foreign object. Inspect the mower for damage and ensure necessary repairs are made before re-starting.
- If the mower starts to vibrate abnormally (check immediately).

Stop the engine:

- Whenever you leave the mower.
- Before refuelling.

Maintenance & Storage



Keep all nuts, bolts and screws tight to ensure that the equipment is in safe operating condition.

Frequently check fuel lines and fittings for cracks or leaks and replace if necessary.

Never check for a spark when the spark plug is removed. (Use approved tester)

Inspect the exhaust periodically and replace if worn or leaking.

Never crank the engine with the spark plug removed.

Never start the engine with the air-cleaner or air-cleaner cover removed.

Never store the mower with petrol in the tank within an enclosed area where fumes may reach an open flame or spark.

Maintenance & Storage



Allow the engine to cool before storing in any enclosure. To reduce the fire hazard, keep the engine and the surrounding deck area free of grass, leaves, or excessive grease.

Check the rear deflector and grassbag frequently for wear or deterioration. Replace worn or damaged parts for safety.

If the fuel tank has to be drained, this should be done outdoors and when the engine is cool.

Wear strong work gloves when removing and reassembling the cutterblade.


Always replace worn or faulty parts with genuine Hayter parts.

Safety Symbols

Safety Alert - Be aware of the possibility of injury.




Danger of severing toes or fingers in cutting mechanism

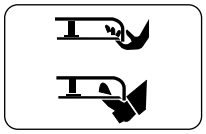


Danger of being hit by thrown objects




Carefully read the Owners Handbook before using the machine

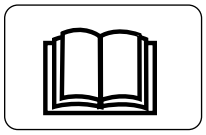

Stop engine and remove spark plug lead before working on the mower

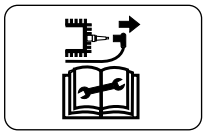


Keep bystanders at a safe distance from the mower

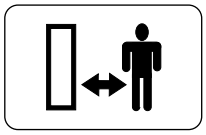


Decal Symbols


Engine Stop (Symbol)

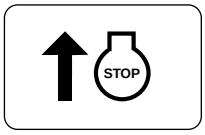

Height of Cut Adjustment (Symbol)

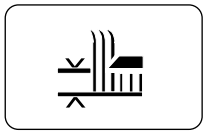


Throttle Control (Symbol)

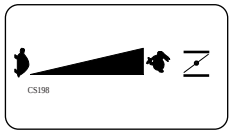

ASSEMBLING THE MOWER

Delivery Checklist

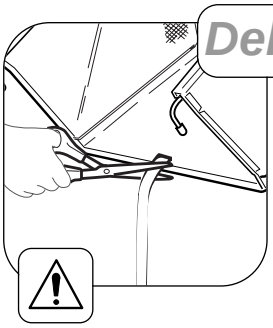


Remove the mower from the packaging and check that the following items have been supplied correctly. If any items are missing contact your local Hayter dealer.

1. Engine Handbook.
2. Warranty Reg. Card.
3. Grass bag.

To prevent accidents cut off the long ribbon attached to the grass-bag and discard.


Handlebar

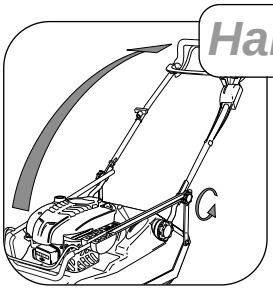

Unscrew the handlebar securing knobs sufficiently to allow the handle bar to pivot. Move the engine stop lever away from the engine to avoid damage and unfold the handlebar to the operating position. Tighten both handlebar knobs to secure the handlebar in position.


Take care to ensure that the control cables do not become snagged at the pivot point.

Adjust Handlebar Height

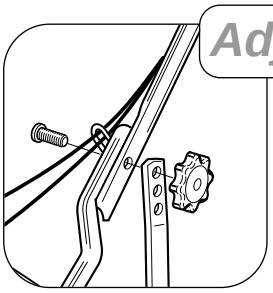


Unscrew the two handlebar securing Knobs to release the handlebar brace then loosen the two nyloc nuts at the base of the handlebars sufficiently to allow it to be moved to the upper, middle or lower position. Re-attach the handlebar brace in the relevant hole for the position and comfort. Ensure that both sides are set to the same height. Tighten both the nyloc nuts and knobs to secure the handlebar in place.

Grassbag Attachment

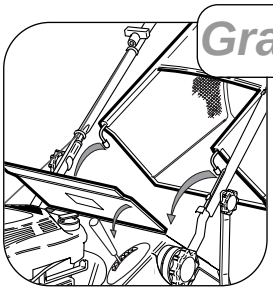


Raise the rear deflector, lower the grass bag through the handlebar and hook in position. Lower the deflector to retain the grass bag.

Prevent Engine Damage

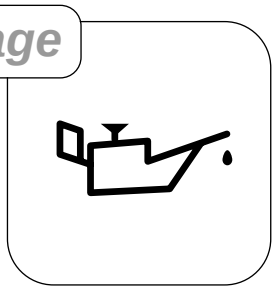


To prevent engine damage the engine is shipped without oil or petrol. The engine must be filled with the correct grade of oil and petrol before starting the engine.

Oil Type

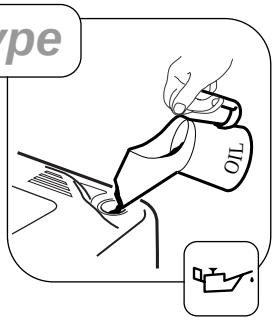

Always use high quality detergent oil classified "For service SE, SF, SG" SAE 30 oil. Never use additives with recommended oils. SAE 10W-30 multigrade oil may be used, but this will result in higher engine operating temperatures with consequential high oil consumption. It is important that the oil level is checked more frequently if this grade of oil is used in order to guard against serious engine damage. To prolong the life of your engine it is important that the oil is changed after the first 5 hours of use. Refer to 'Maintenance Schedule'.


Check Oil Level

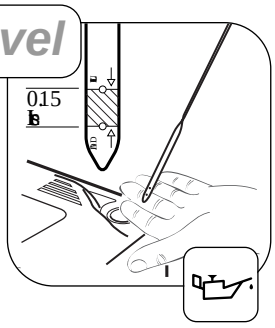

Clean around the oil filler cap before removing. With the mower on a level surface, unscrew and remove the oil filler-dipstick. Wipe oil from with a clean cloth. Screw the oil filler-dipstick back in place, then unscrew and remove to check the oil level.

The oil level is correct when it is at the **full** mark on the dipstick. **DO NOT OVERFILL.**

Fuel Type

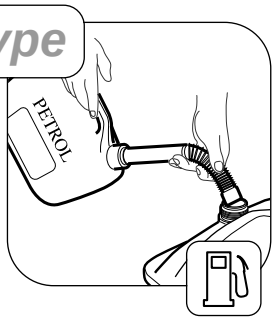


Always use clean, fresh unleaded petrol. Purchase fuel in quantities that can be used within 30 days. Never mix oil with petrol. Treated engine protection Briggs & Stratton recommend the use of their fuel additive which is available from an authorised Briggs & Stratton service dealer.

Fill to base of neck to allow for fuel expansion. Do not overfill the fuel tank.


OPERATING THE MOWER

Controls

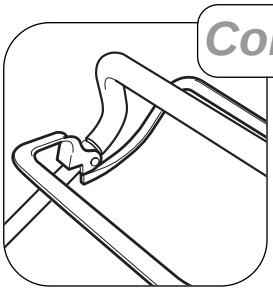


Operate all control levers several times and ensure that the cables move freely. Check that the engine stop and ground drive clutch levers return freely to their position when released.
Whilst operating the engine throttle mechanism slight resistance should be felt when moving the lever to the '**choke**' position.

Starting - Step 1

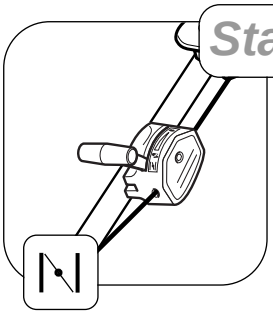

Move the throttle control lever to the '**choke**' position before starting a cold engine. Move the throttle control lever to the **'fast'** position before starting a warm engine.


Step 2

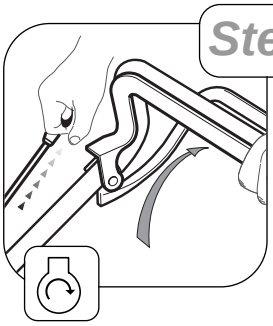

Stand behind the mower and hold the handlebar together with the engine stop lever with your left hand. With your right hand hold the engine start-grip and pull slowly until resistance is felt, then pull rapidly to crank the engine. Carefully return the start grip to the storage position when the engine starts.
If the engine does not start after 5 attempts refer to "Trouble Shooting".

The engine stop lever must be held firmly against the handlebar to start and keep the engine running. If the engine stop lever is released the engine will stop.


Step 3

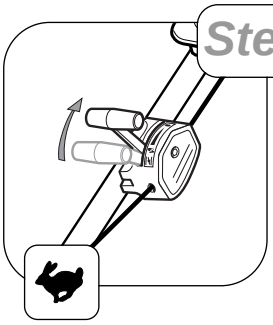

Allow the engine to warm up and move the throttle lever to the '**fast**' position after starting a cold engine.

To prevent damage never pull the engine start grip when the engine is running.

Forward Travel

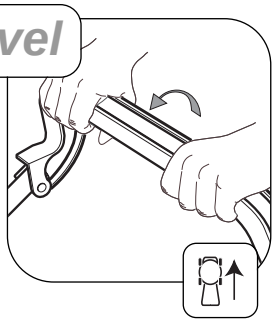

Hold the handlebar and operate the ground drive clutch lever to power the mower in a forward direction.

When the ground drive clutch lever is disengaged the mower may be pushed. This feature is useful when mowing in confined areas.

If the engine stop lever is released the engine will stop.


Turning



To make a wide turn release the mower with the handlebar in the direction required.
To make a tight turn release the ground drive clutch lever, apply downward pressure on the handlebar to raise the front wheels just above ground level and turn in the required direction.

To prevent accidents do not raise the front of the mower excessively when making a turn. Never raise the rear of the mower when the engine is running.

Stopping

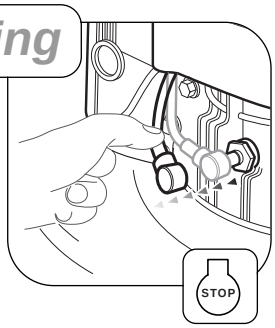


Release the ground drive clutch lever, reduce the throttle setting and release the engine stop lever.

Emergency stop: Release both ground drive clutch lever and engine stop lever together.

If the engine fails to stop, move the throttle lever to the 'slow' position and disconnect the spark plug lead.


Slopes

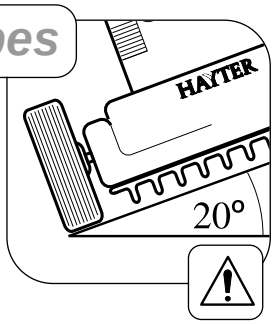

To prevent engine damage do not use the mower on slopes greater than 20 degrees.

OPERATING THE MOWER


Height of Cut

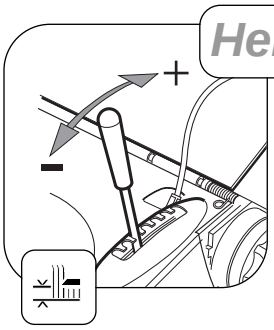

Move the height of cut lever sideways to disengage from the locking notch, then push forwards to lower or pull backwards to raise the height of cut. Release lever in the required position and ensure that it locks firmly into one of the seven notch settings.


Always select a height of cut to suit operating conditions. Prevent engine overloading and blockages by avoiding low cuts in long grass conditions. Be prepared to make two cuts when the grass is long.

Before Mowing

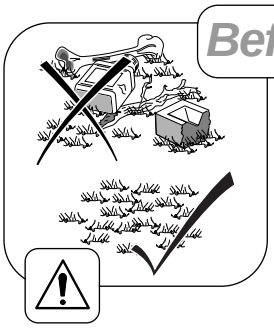

To prevent accidents thoroughly inspect the area and remove all objects which when contacted by the mower cutterblade could become dangerous projectiles. Inspect the area for hidden obstructions which when contacted by the cutterblade could risk health and safety. Remember the location of these obstructions and ensure that you mow around them.


Grassbag

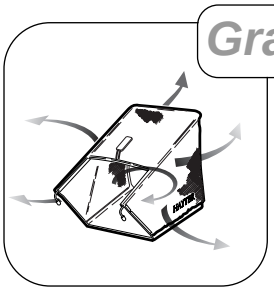

Raise the rear deflector and lift the grassbag through the handle bar and lower the rear deflector to rest against the rear of the mower.


To empty the grassbag, pour out the grass clippings and shake the grassbag vigorously to clean the air ways. Good grass collection depends on good airflow through the grassbag. When collecting grass clippings it is important that the grassbag is emptied regularly to prevent blockages and engine overloading.

Without Grass Collection

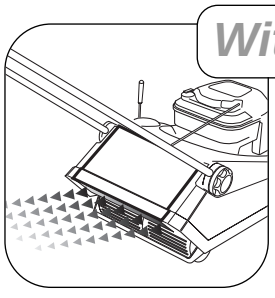

Remove the grassbag and operate the mower with the rear deflector in the closed position.


Heavy Growth

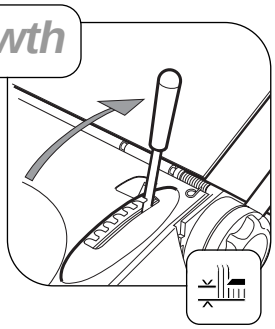

As of heavy growth should be mown without collecting the clippings. If collection is required, first mow the area without the grass bag at the maximum height of cutting. Allow the grass clippings to dry out and then mow the area at the maximum height of cutting with the grass bag fitted. Reduce the height of cut and mow the area again as necessary until the required finish is obtained.

To prevent grass damage do not remove more than one third of grass height in one cut.


Friction Disc

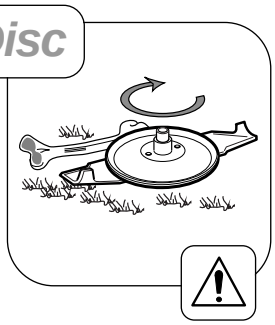

The cutting blade is driven by the engine via a friction disc to help prevent damage occurring to the engine crankshaft and cutting mechanism when a hidden obstruction or overload is encountered.

Always stop the engine when a hidden obstruction or excessive vibration is encountered. Disconnect the spark plug lead and examine the cutting mechanism. WHEN replacing a damaged cutting blade refer to "Maintenance".

Non-Grassed Areas

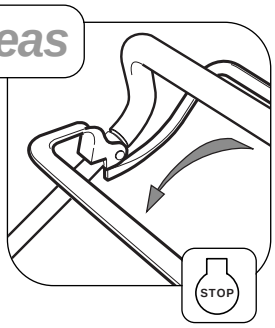

When moving the mower across non-grassed areas, stop the engine and adjust the mower to the maximum height of cut to protect the cutting mechanism.

MAINTENANCE SCHEDULE

Follow the hourly or calendar intervals, whichever occurs first. More frequent service will be required if working for prolonged periods under dusty, dry conditions, or when a bone dry is present or after extensive operation cutting tall, dry grass.

First 5Hrs

- After very first five hours change the engine oil

Daily

- Check the oil level
- Remove grass debris from around the engine, exhaust, exhaust guard and airways in the top cowl and underside of the deck housing.
- Remove grass debris from the grass bag and check for signs of damage
- Check the condition of guards and safety devices and the cut blade

25Hrs or Every Season

- Change the engine oil if continuously operating under heavy load or high ambient temperature
- Service the air cleaner
- Lubricate wheels, pivot points and linkages and grease the inner control cable at point of entry and exit from the outer casing.
- Check the clutch cable adjustment
- Sharpen the cut blade

50Hrs or Every Season

- Change the engine oil.

100Hrs or Every Season

- Clean the engine cooling system. Clean more often under dusty conditions or when a bone dry is present or after prolonged operation whilst cutting tall, dry grass
- Replace the spark plug.
- Check valve clearances


MOWER MAINTENANCE

To prevent accidents stop the engine disconnect the spark plug lead before attempting to carry out maintenance procedures on the mower.




Engine

1. Engine Cowl
2. Spark Plug Lead
3. Carburettor
4. Exhaust Guard
5. Exhaust
6. Oil fill Dipstick
7. Starter Grip
8. Fuel Cap
9. Engine Guard
10. Air Cleaner

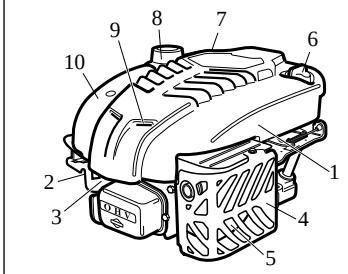

Throttle Cable Adjustment

Loosen cable clamp screw (1) and move the governor lever (2) in the direction of screw (1) as far as possible. Move the throttle control to the choke position. Tighten cable clamp screw.

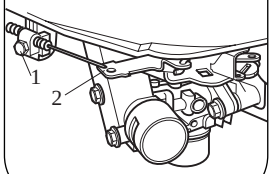


Carburettor Adjustments

Should only be adjusted by an authorised Briggs & Stratton dealer. Under no circumstances should the engine be adjusted to run at a speed in excess of that shown on the Declaration of Conformity.

MOWER MAINTENANCE

Oil Service

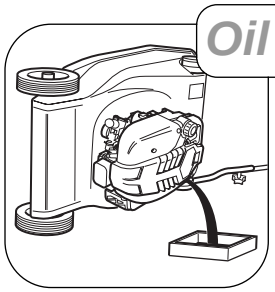


Check the oil level daily before starting the engine and ensure that the correct oil level is maintained. Refer to- 'Before Starting the Mower' for oil checking and filling instructions.

Change the engine oil after the first 5 hours of operation and thereafter according to the 'Maintenance Schedule':-

1. Drain fuel by running the engine until the fuel tank is empty.
2. Remove the spark plug lead.
3. Allow the engine to cool.
4. Drain the oil while the engine is warm (Not hot).
5. Tip the mower over on to its left hand side housing that the air cleaner is kept uppermost **to prevent engine damage.**
6. Remove the oil filled dipstick and drain the oil into a suitable container.
7. Refill with new oil of the recommended SAE viscosity grade (Refer to- 'Before Starting the Mower').

Air Cleaner Service

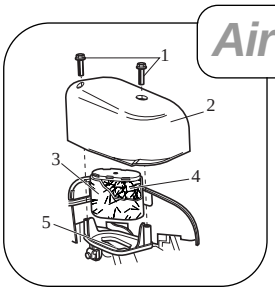


To service the air cleaner, loosen the two screws (1) and remove cover (2). Carefully remove pre-cleaner (3) and cartridge (4) wash in a solution of liquid detergent and water. Allow to air dry thoroughly before fitting.

If very dirty, replace.

- Do not use petroleum solvents.
- Do not use pressurised air.
- Do not oil the cartridge.

After servicing, install the pre-cleaner and cartridge in the assembly base (5). Replace the cover and securely tighten the screw to the base.

Spark Plug Service

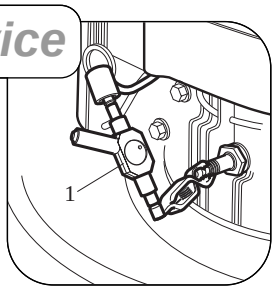


Use only Briggs & Stratton spark tester (1) to check for a spark as shown in the diagram.

Replace the spark plug every 100 hours or every season, whichever occurs first. A spark plug which is available from any authorised Briggs & Stratton service dealer.



Check the spark plug gap with a feeler gauge and set at 0.76mm.

Keeping Engine Clean

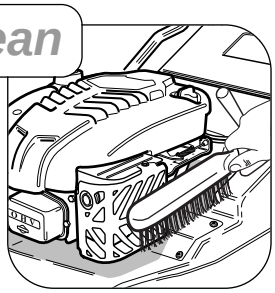

Remove all grass and debris from the engine including the exhaust, exhaust guard, the airways in the top cowl and the surrounding deck area on a daily basis after use. Never spray the engine with water during cleaning. Water can contaminate the fuel. Always clean with a brush or compressed air.

Grass and debris may clog the engine 's air cooling system, especially after prolonged operation while cutting tall, dry grass. The metal cooling fins and surfaces may require cleaning to prevent overheating and engine damage. We recommend that this service be carried out by an authorised Briggs and Stratton dealer.

Grassbag



Remove grass debris from the grassbag immediately after use and check its condition for signs of damage.

To prevent accidents replace a damaged grassbag immediately.

MOWER MAINTENANCE

Deck Housing



Remove grass debris from the top and underside of the deck housing immediately after use.


To prevent damage fertilisers and top dressings are particularly corrosive. Thoroughly clean the mower deck immediately after use on treated grass and store well away from corrosive materials.

Securing Nuts & Bolts




Regularly check that all securing nuts and bolts are tight. Replace missing or damaged items immediately.

Clutch Cable Adjustment

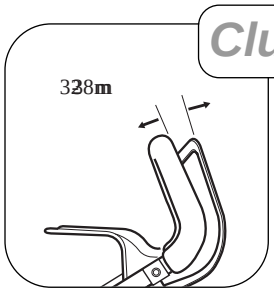


Check the clutch cable operation every 25 operating hours and adjust if necessary. The clutch cable is adjusted correctly when the belt drive just engages with the clutch lever positioned 3-8mm from the handlebar.

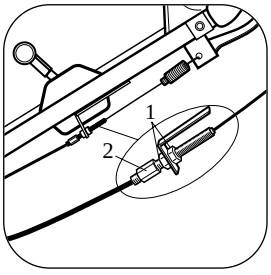

Unscrew the lock nuts (1) and screw the adjusters (2) in or out as necessary. Tighten the locknuts (1) when correctly adjusted.

MOWER MAINTENANCE


Lubrication

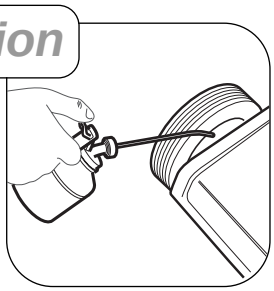

Lubricate the wheels, pivot points and linkages with engine oil every 25 operating hours.

Apply a good quality lithium grease to the inner control cable at the point of entry and exit from the outer casing.

Cutterblade Removal

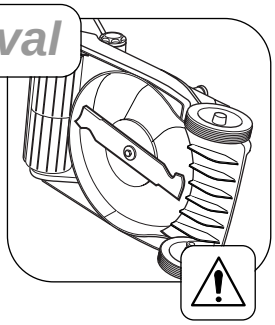

Drain the fuel by running the engine until the fuel tank is empty and the engine stops. **Remove the spark plug lead** and allow the engine to cool. Turn the mower on its left hand side and ensure that the air cleaner side of the engine is uppermost.
Firmly grip the head of the cutter blade with the gloved hand and remove the bolt, spring washer and distance piece securing the cutter blade with a 9/16" A/F spanner.

To prevent accidents never work on the cutterblade unless the spark plug lead has been removed. The cutterblade has sharp edges. ALWAYS wear strong gloves to protect your hands when working on the cutterblade. DO NOT rotate tools towards the cutting edges to avoid the risk of injury should the tool slip. ALWAYS use genuine Hayter replacement parts.

The condition of the cutter blade and its mounting arrangements should be checked regularly for signs of wear or damage. Ensure that the cutter blade is not bent or cracked.


A damaged cutter blade that is out of balance will vibrate excessively and may break. DO NOT use an unbalanced cutter blade.

Regularly check that the bolt securing the cutter blade is tightened to the specified torque of 54Nm.

Replace the cutter blade every 2 years or sooner if excessively worn or damaged.


To prevent injury it is wise to take a balance when turning the mower on its side.

Cutterblade Assembly

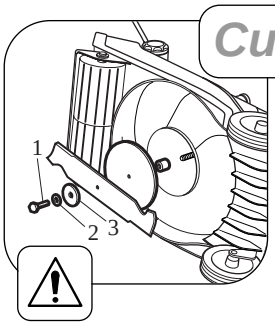


Assemble the cutterblade with the turned up edge facing towards the engine. Secure the cutterblade using the bolt (1), spring washer (2), and distance piece (3) and tighten to a torque of 54Nm


Cutterblade Sharpening

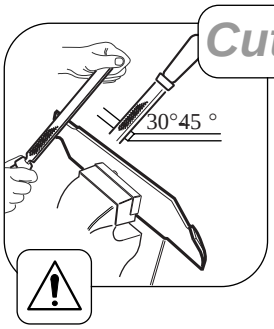

A slightly worn cutterblade may be sharpened. Both blade edges must be sharpened equally to ensure balance. Sharpen the cutterblade every 25 mowing hours or more frequently if conditions require. Remove the cutterblade from the mower and clean using a brush and water. Inspect the cutterblade for signs of damage.
Sharpen both cutting edges with a flat file to ensure performance.

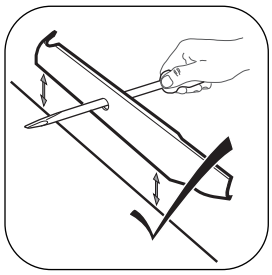


Ensure that the cutterblade is balanced. Use a screwdriver with a round shaft to support the cutterblade through its centre hole. Hold the cutterblade horizontal and then release. A balanced cutterblade will remain horizontal.

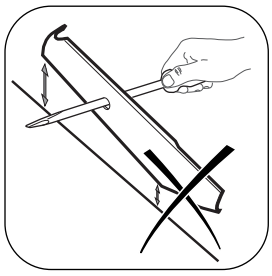

If the cutterblade is not balanced the heavy end will rotate downwards. Sharpen the heavy end until the cutterblade is correctly balanced.

Storage

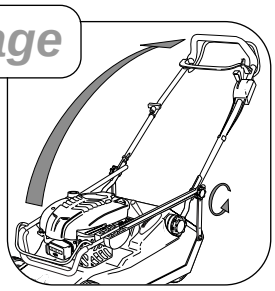

To store the handle bar unscrew the 2 all e uring knobs sufficiently to allow it to be pivoted forwards to rest against the mower. Take care to ensure that the control cables do not become snagged at the pivot point and depress the engine stop lever to prevent it being damaged through contact with the engine spark plug.

Engines stored in excess of 30 days need to be protected with Briggs & Stratton fuel additive or drained of fuel to prevent gum forming in the fuel system or on metal carburetor parts. To ensure your mower is maintained in good working order it is important that the following procedure is adopted. Refer to the Maintenance section as necessary.

Drain fuel from the engine by operating the engine until it stops.

Disconnect the spark plug lead.

Change the engine oil.

Remove the engine spark plug and pour 15ml of engine oil into the engine cylinder and replace the spark plug. Do not exceed the stated volume of oil as engine damage may occur on starting. **Do not replace the spark plug lead**. Slowly pull the engine start-grip once to crank the engine. This will distribute the oil and help prevent engine corrosion.

Clean grass and debris from the engine cylinder, cylinder head cooling fins, under top cowl, and around and behind exhaust exhaust guard.

Clean all other areas of the mower and ensure that the grass bag is clean.

Lubricate the mower.

Treat all parts with a water repellent anti corrosion product.

Cover the mower with a protective sheet and store in a dry, well ventilated area.

TROUBLE SHOOTING

PROBLEM	POSSIBLE FAULT	REMEDY
Engine will not turn over	Engine stop lever released.	Operate engine stop lever
	Incorrect oil level.	Check oil level.
	Obstruction under deck.	Remove obstruction.
Engine stalls	Excess oil level.	Check oil level.
	Air cleaner cartridge oil soaked or blocked.	Service air cleaner
Engine runs then stops	Elevation.	Fill fuel tank.
	Fuel cap vent blocked.	Clean fuel cap vent
Engine will not start	Engine under load.	Raise height of cut
	Elevation.	Fill fuel tank.
	Engine cold.	See note to 'choke' position.
	Incorrect contaminated fuel.	Drain fuel tank and fill with correct fuel.
	Spark plug lead disconnected.	Connect spark plug lead.
	Throttle not in correct	See note to 'fast' position.
	Engine brake not released.	Operate engine brake lever
	Faulty spark plug.	Clean and adjust gap or replace
	Wiring fault	Check wiring.
Engine runs rough	Spark plug lead becoming disconnected in use.	Connect spark plug lead.
	Faulty spark plug.	Clean and adjust gap or replace
	Air cleaner blocked.	Service air cleaner
	Incorrect contaminated fuel.	Drain tank and fill with correct fuel.

TROUBLE SHOOTING

PROBLEM	POSSIBLE FAULT	REMEDY
Engine vibrates excessively	Mounting bolts loose	Tighten bolts
	Cut blade bolt loose	Tighten bolt
	Cut blade out of balance	Balance cut blade
	Bent crankshaft	Consult your dealer
Uneven cut	Undulating ground conditions	Change direction of travel
	Cut blade worn	Sharpen the cut blade
	Cut blade out of balance	Balance the cut blade
	Wheels rolled damaged	Inspect and replace as necessary
Discharge chute blocks	Grass wet	Mow dry grass
	Cut height too low	Increase cut height
	Grass bag full	Empty grass bag
	Allow through the grass bag is restricted	Clean the grass bag
	Engine speed too low	Set throttle to fast position
Mower is hard to push	Cut height too low	Increase cut height
	Wheels rolled damaged	Inspect and replace as necessary
Mower will not self propel	Clutch out of adjustment	Adjust clutch cable
	Drive belt damaged	Replace drive belt
Poor grass collection	Allow through the grass bag is restricted	Clean the grass bag
	Discharge chute blocked	Remove blockage
	Wet grass	Mow dry grass
	Grass bag full	Empty grass bag
	Engine speed too low	Set throttle to fast position

DECLARATION OF CONFORMITY

EC DECLARATION OF CONFORMITY

I, the undersigned M.A. Wright, of: HAYTER LIMITED,
Spellbrook, Bishop's Stortford, Herts CM23 4BU ENGLAND

certify that the lawnmowers:

Model:	Harrier 48
Machine Type No:	CODE 486V
Category:	Combustion Engine
Make	Hayter
Type	Rotary
Engine - Manufacturer	Briggs & Stratton
- Type	12 1688 27-E1
- Speed of rotation during use	2 870 rpm
Type of cutting device	Cut blade
Width of cutting device	48 cm
Speed of rotation of the cutting device	2 870 rpm

Guaranteed maximum sound power level. 96 dB(A)

NOISE TEST CARRIED OUT AT SIBBEY, STOKE, ENGLAND 2001/99

Device complied with:
98/37/EC Essential Health & Safety Requirements Relating to the Design & Construction of Machinery and Safety Components
84/538/EEC amended by 87/252/EEC and 88/180/EEC Part Two Sound Power Levels of Lawn Mowers
89/336/EEC amended by 92/31/EEC Electromagnetic Compatibility

Standards Ref: EN292-2 EN836 and EN ISO 14982

I declare on behalf of Hayter Ltd that the machine conforms to the EC Essential Health & Safety Requirements

Signed Date: 19/10/00

M A Wright
(Technical Director)

VIBRATION INFORMATION

Lawnmower vibration information. RMS acceleration measured in 3 -axes at operators contact position on the handlebars **CODE 486V = 5 ms^{-2}**


NO.	DESCRIPTION	PART NO.	QTY	ITEM NOTE
1	Mainframe Casting	486015V	1	
2	Plate-Location RH	480083V	1	
3	Clamp-Bosshine	480084W	2	
4	Clamp-Boss Outer	480085W	2	
5	Nut-Nyloc Hex ‘T’ Type	09441	4	
6	Key -Woodruff	1662	1	
7	Throttle Control	486031	1	
8	Engine-B&S Intek Edge 55 OHV	340212	1	
9	Decal -Engine	486005	1	
10	Knob -Handlebar	480088	2	
11	Handlebar-Lower	480168W	2	
12	Bolt-Handlebar	09785	2	
13	Nut-Nylon Hex	09544	1	
14	Washer-Plain	09472	1	
15	Cable Guide Rope	305093	1	
16	Pin -Pivot	340182	2	
17	Decal -Engine Stop	331046	1	
18	Lever-Engine	340179	1	
19	Washer-Nylon	09688	2	
20	Handlebar	341029	1	
21	Lever-Clutch	306094W	1	
22	Screw	09687	2	
23	Cable Guide	480123	1	
24	Bracket-Cable Clutch	306108	1	
25	Screw	09704	1	
26	Cable-Clutch	480094	1	
27	Grass Bag -Assy	486021	1	Includes 28, 36 & 101
28	Frame Grass Bag	486018W	1	
29	Deflector-Rear	480140	1	
30	Pin -Roll	03997	1	
31	Spring -Deflector RH	480131	1	
32	Rod -Deflector	480062	1	
33	Screw -Pozi Pan Taptite	09758	2	
34	Bolt-Coach	09549	2	
35	Knob -HOC	480134	1	
36	Grass Bag -Fabric	486019	1	
37	Spring -Deflector LH	480130	1	
38	Plate-Location LH	480082V	1	
39	Plate-Handlebar Retainer	480055	2	
40	Cover-PTO	480014	1	
41	Bearing -PTO	480050	1	
42	Screw -Washer Hd Taptite	09575	3	
43	Bush	340154	2	
44	Screw -Taptite	09349	3	
45	Foam Strip	480119	1	
46	Lever-HOC	480128	1	
47	Ratchet HOC Moulding	480147	1	

486V PARTS LIST

NO.	DESCRIPTION	PART NO.	QTY	ITEM NOTE
48	Throwplate-Main Body	480011	1	
49	Screw -Tapte	09545	4	
50	Bearing -Roller Housing	219102	2	
51	Roller-Rear WA	486023W	1	
52	Spring Torsion -Rear Axle	480133	2	
53	Washer	09232	2	
54	Screw -Tapte	09365	2	
55	Bolt-Coach	09666	2	
56	Nut	09657	1	
57	Washer	09658	1	
58	Rope-Stop	M42189	1	
59	Handle	486016	1	
60	Washer-Spring	03469	2	
61	Sprocket-27 Tooth	480039	1	
62	Idler-Rear Roller WA	480159W		Includes 103
63	Key -woodruff	53212	1	
64	Circlip	14283	1	
65	Washer	480097	4	
66	Cover-Tansion	480043	1	
67	Chain	486037	1	
68	Rod -Connecting	480045	1	
69	Plate-Securing	219037	2	
70	Idler-Throwplate	480017W	1	
71	Pulley -Sprocket Fixed Sped	486030	1	
72	Belt-V PTO	486035	1	
73	Washer	05375	1	
74	Circlip	03096	1	
75	Pulley -Jockey	219156	1	
76	Washer-Shock	02101086	2	
77	Bracket-Idler Axle	480115	1	
78	Belt Guide	480116	1	
79	Pulley -Drive PTO	486034	1	
80	Spring -Torsion Idler	480066	1	
81	Bush	44552	1	
82	Washer-M12 HD.	09280	1	
83	Washer-Spring	09273	1	
84	Bolt-UNF	09121	1	
85	Distance Piece-Cutebar	44014	1	
86	Cutebar-19 ”	480149	1	
87	Cover-Throwplate Drive	480012	1	
88	Disc -Friction	480070W	1	
89	Spacer	480072	1	
90	Cap -Hub	219143	2	
91	Nut-UNF Nyloc	44486	2	
92	Wheel	52128	2	
93	Axle-Front WA	219031	1	

NO.	DESCRIPTION	PART NO.	QTY	ITEM NOTE
94	Moulding - Front Axle Bearing 2	19036	2	
95	Hub - Front	480013	1	
96	Decal - Hayter & Royal Warrant 2	19186	1	
97	Nut-M8 Shoulder	480086	2	
98	Cap	24051	2	
99	Plug - Tube	300160	2	
100	Tie-Cable	3966	4	
101	Handle-Grip	480106	1	
102	Brace-Support	486039W	2	
103	Bracket-HOC	480157W	1	
104	Torsion Spring HOC	480132	1	
105	Rivet	-	2	
106	Screw	09634	2	
107	Ratchet	480156	1	
108	Cable-Engine Brake	486007	1	
109	Rail - Front	486008W	1	
110	Screw	09358	2	
111	Screw	09368	2	
112	Washer	09475	6	
113	Bolt-Coach	09668	4	
114	Nut	09438	4	
115	Washer-Nylon	4017	2	
116	Guard - Transmission	480164	1	

486V PARTS LIST

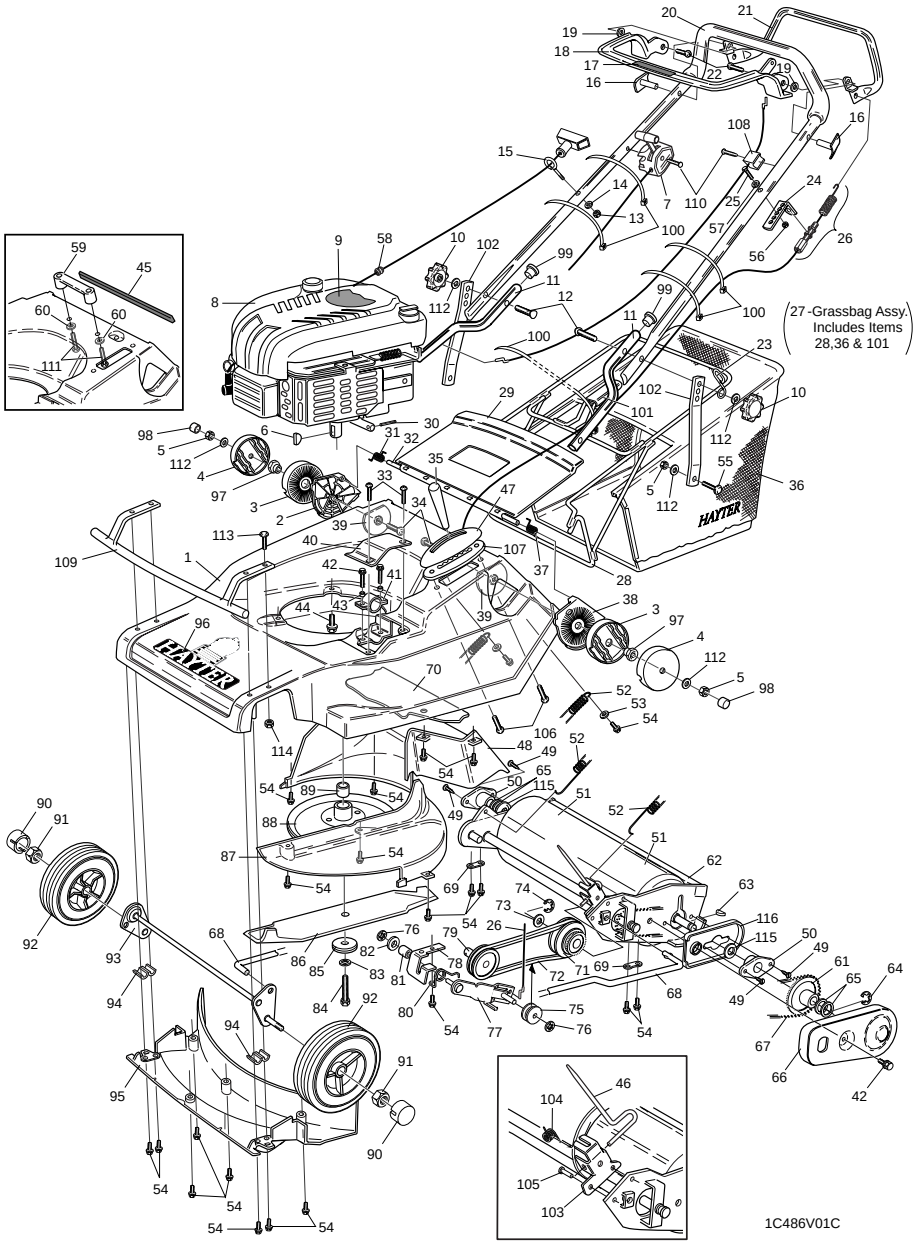

CUSTOMER INFORMATION /NOTES

Mower Serial No: _____

Engine Model: _____ Type _____ Code _____

Notes