
FORM NO. 3318–963

TORO®

MODEL NO. 07205–70001 & UP
MODEL NO. 07205TC–70001 & UP

PARTS CATALOG

WORKMAN® 3300D

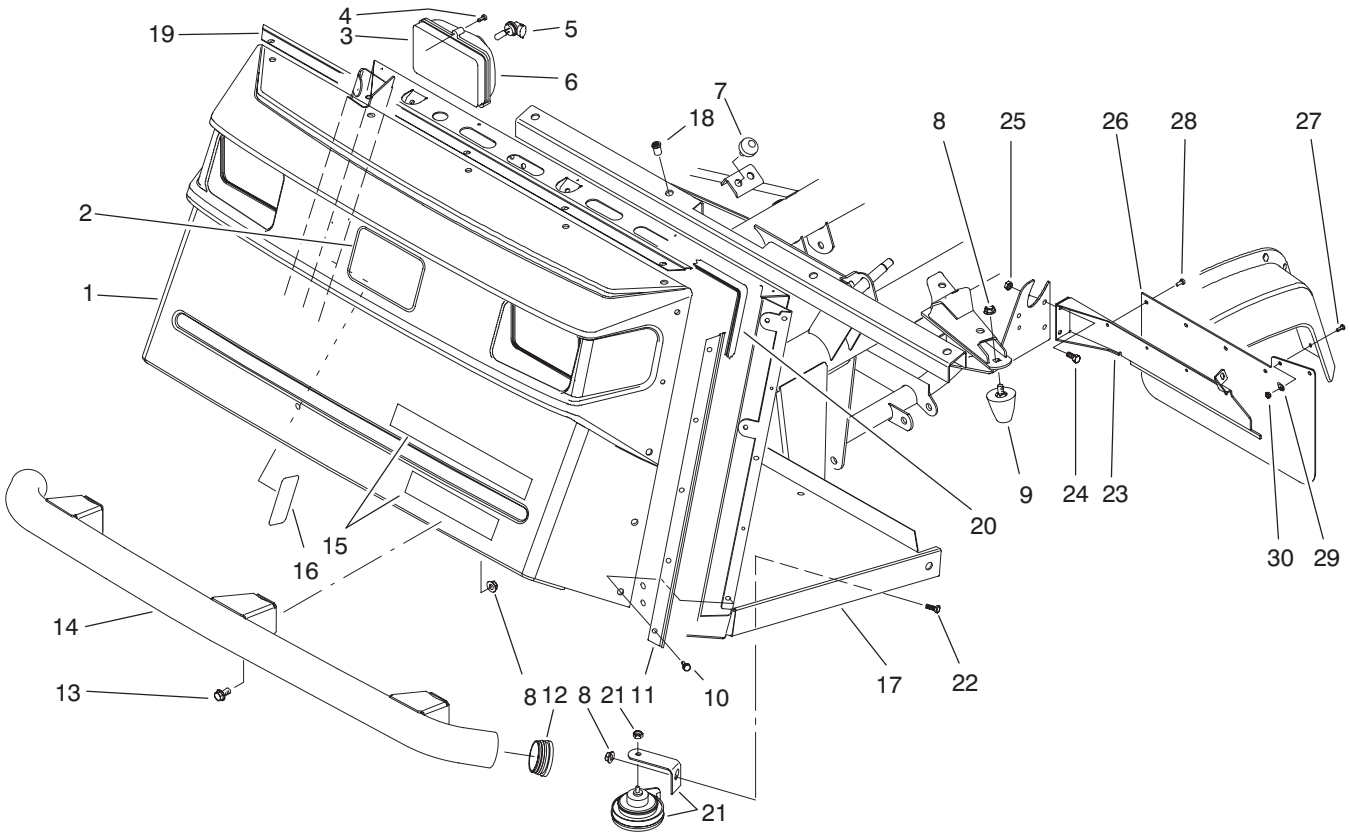

T–1581–1

FRONT BUMPER & HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87–0710	Hood	1
2	62–5550	Decal – TORO	1
3	87–2120	Headlight Assembly (Incl. Ref. #5–6)	2
4	32104–88	Screw	6
5	87–6320	Bulb – Headlight	2
6	87–6330	Lens – Headlight	2
7	87–2440	Bumper	2
8	3290–357	Nut – Flange Lock	9
9	26–0071	Bumper	2
10	87–6620	Screw	15
11	87–8120	Bracket – Trim Side	2
12	2410–42	Cap – Front Bumper	2
13	3234–1	Screw – Hex. Flange Hd.	6
14	87–4070	Bumper – Front	1
15	87–6070	Decal – Workman 3300D	1
16	87–9500	Decal – Load	1
16	94–1224	Decal – Load (Europe)	1


Ref. No.	Part No.	Description	No. Used
16	92–5395	Decal – Load (Japan)	1
17	94–5240	Operators Platform Assy. (Incl. Ref. #18)	1
18	32148–7	Nut – Clinch	8
19	87–8130	Bracket – Trim Top	1
20	87–8160	Trim	1
21	116749	Horn Assembly	1
22	323–4	Screw – Cap Hex. Hd.	1
23	94–3838	Bracket – Mudflap LH	1
*	94–3839	Bracket – Mudflap RH	1
24	321–4	Screw – Cap Hex. Hd.	4
25	32128–33	Nut – Lock	4
26	94–3841	Mudflap	2
27	3250–13	Screw – Pan Hd.	4
28	146489	Rivet – Pop	8
29	3256–61	Washer – Flat	4
30	3296–2	Nut – Lock	4

*Not Illustrated

© The TORO Company – 1996
All Rights Reserved

TPS

3318−963

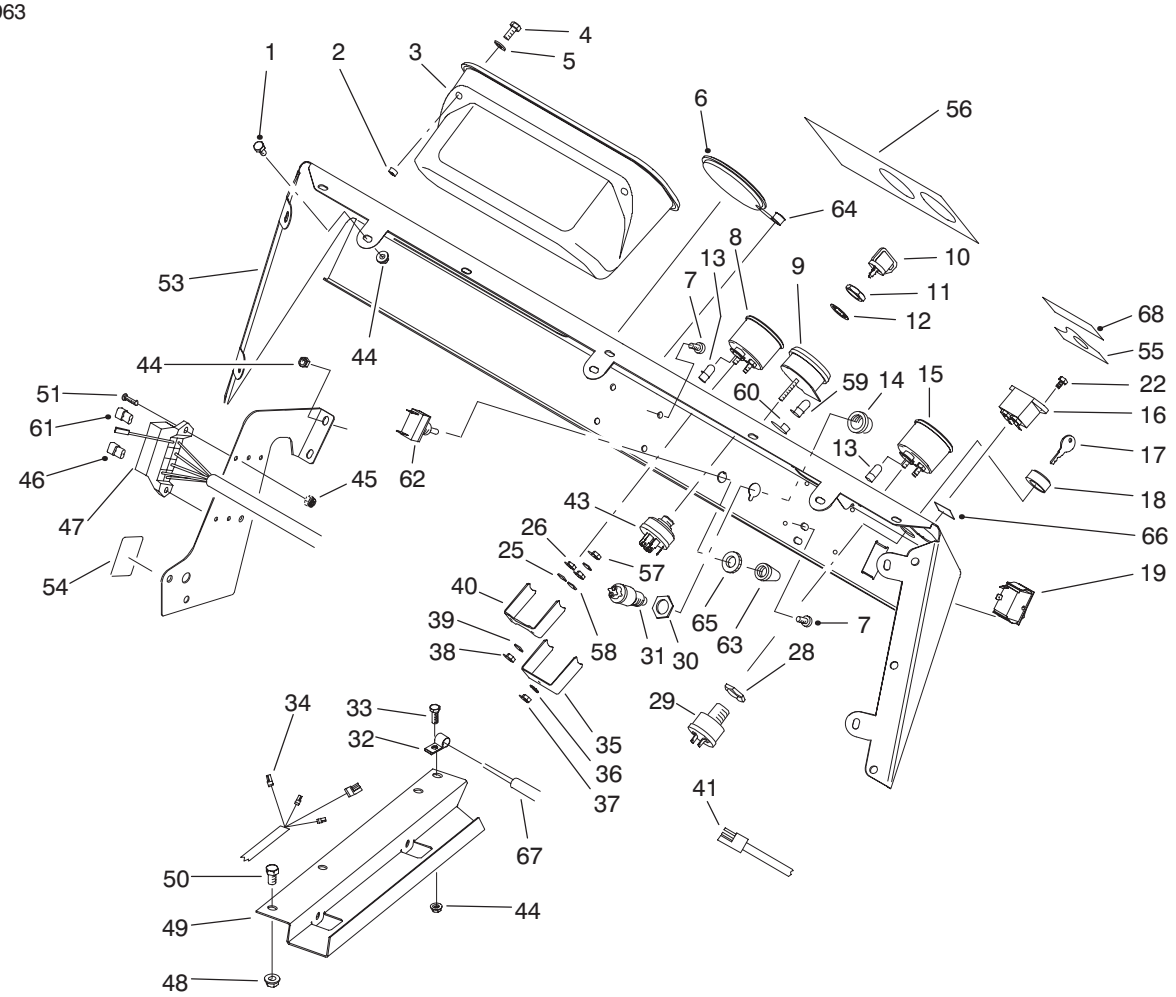


T−1706−1

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321−2	Screw − Cap Hex. Hd.	7
2	32148−6	Insert − Threaded	2
3	87−3780	Box − Glove	1
4	321−3	Screw − Cap Hex. Hd.	2
5	3256−22	Washer − Flat	2
6	2410−35	Plug	1
7	3274−31	Screw − Button Hd.	4
8	87−5590	Temperature Gauge Assy. (Incl. Ref. #38−40, 57 & 58)	1
9	93−7053	Warning Light Assembly (Incl. Ref. #35−37, 59 & 60)	1
10	63−8360	Key − Ignition	1
11	218−446	Nut − Hex.	1
12	218−447	Washer − Lock	1
13	218−600	Bulb	2
14		Button − Horn	1
15	87−5580	Fuel Gauge Assembly (Incl. Ref. #38−40, 57 & 58)	1
16	75−6820	Hourmeter	1
17	87−0740	Key − Supervisor Switch	1
18	87−1720	Nut − Supervisor Switch	1
19	87−3790	Switch − Light	1
22	32144−18	Screw − Cap Hex. Hd.	2
28		Nut − Hex.	1
29	94−5245	Supervisor Switch Assembly (Incl. Ref. #17, 18 & 28)	1

Ref. No.	Part No.	Description	No. Used
30		Nut − Hex.	1
31	18−2830	Horn Switch Assembly (Incl. Ref. #14 & 30)	1
32	2412−89	Clamp − R	1
33	321−4	Screw − Cap Hex. Hd.	1
34	93−7130	Harness − Wire Rear	1
35		Clamp − Light	1
36	3254−1	Washer − Lock	1
37	3217−26	Hut − Hex.	1
38	3217−25	Nut − Hex.	4
39	3253−15	Washer − Lock	4
40		Clamp − Temp. Gauge	1
41	87−4230	Harness − Wire Front LH	1
43	27−2360	Ignition Switch Assembly (Incl. Ref. #11 & 12)	1
44	32128−33	Nut − Flange	12
45	3296−2	Nut − Lock	2
46	218−574	Fuse − 7.5 Amp	2
47	87−8500	Front Wire Harness Assy. (Incl. Ref. #13)	1
48	32128−20	Nut − Flange	3
49	93−7094	Cover − Wire Harness	1
50	322−2	Screw − Cap Hex. Hd.	3
51	3250−13	Screw	2
53	87−8550	Control Panel Assembly (Incl. Ref. #55−56 & 68)	1

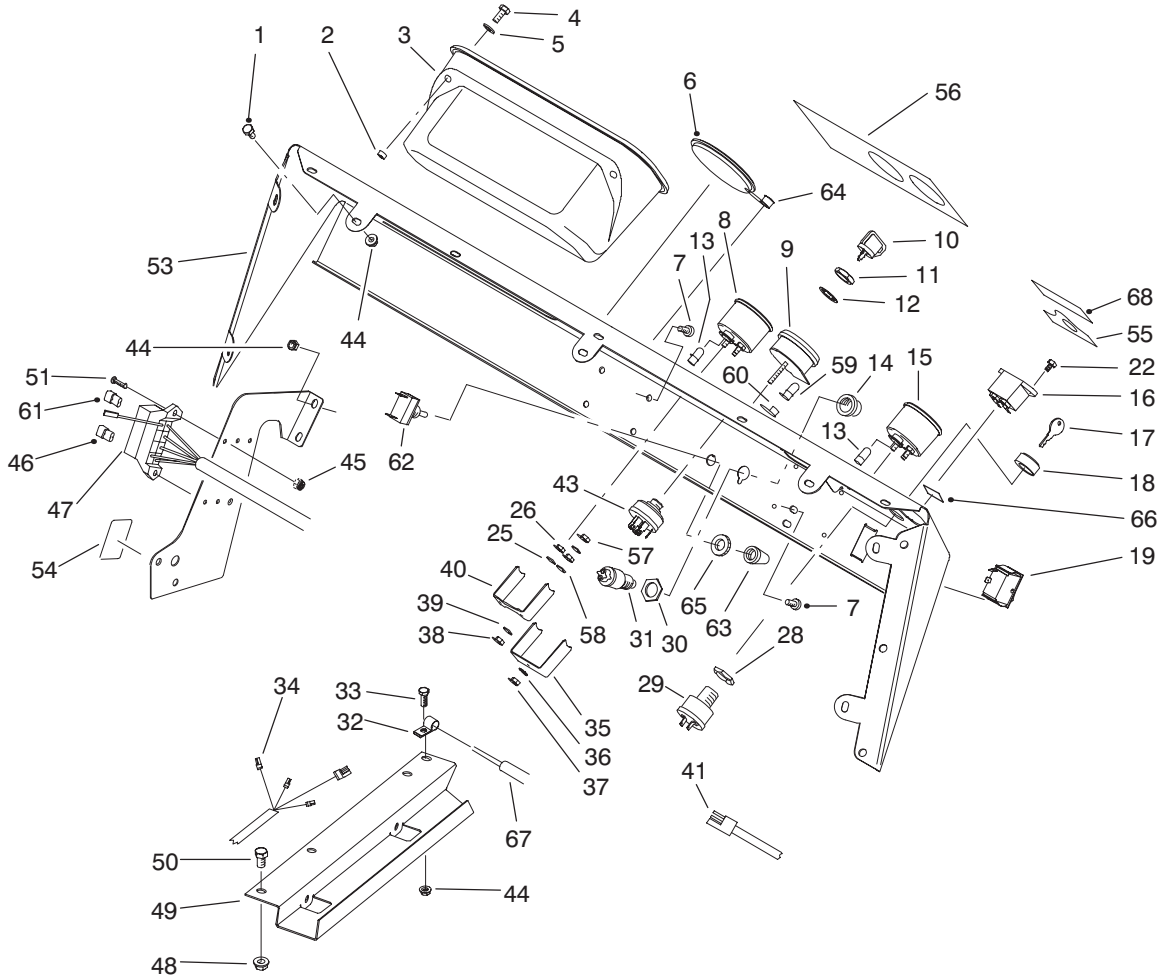


T–1706–1

CONTROL PANEL ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used
54	87–6670	Decal – Fuse	1
54	93–9851	Decal – Fuse (Europe)	1
54	92–5374	Decal – Fuse (Japan)	1
55	87–5910	Decal – Supervisor	1
55	93–9856	Decal – Supervisor (Europe)	1
55	92–5332	Decal – Supervisor (Japan)	1
56	87–8530	Decal – Dash	1
56	93–9445	Decal – Dash (Europe)	1
56	92–6429	Decal – Dash (Japan)	1
57	3217–29	Nut – Jam	3
58	3253–19	Washer – Lock	3
59	219–17	Bulb – Warning Light	4

Ref. No.	Part No.	Description	No. Used
60	87–6270	Socket & Bulb Assembly (Incl. Ref. #59)	4
61	218–578	Fuse – 10 Amp	1
62	20–7150	Toggle Switch Assembly (Incl. Ref. #65)	1
63	218–473	Boot – Switch	1
64	2410–64	Plug – Hole	1
65		Nut – Lock	1
66	93–7252	Decal – CE (Europe)	1
67	94–3837	Cable – Clutch	1
68	94–5272	Decal – Warning	1


ELECTRICAL SCHEMATIC (Model 07205)

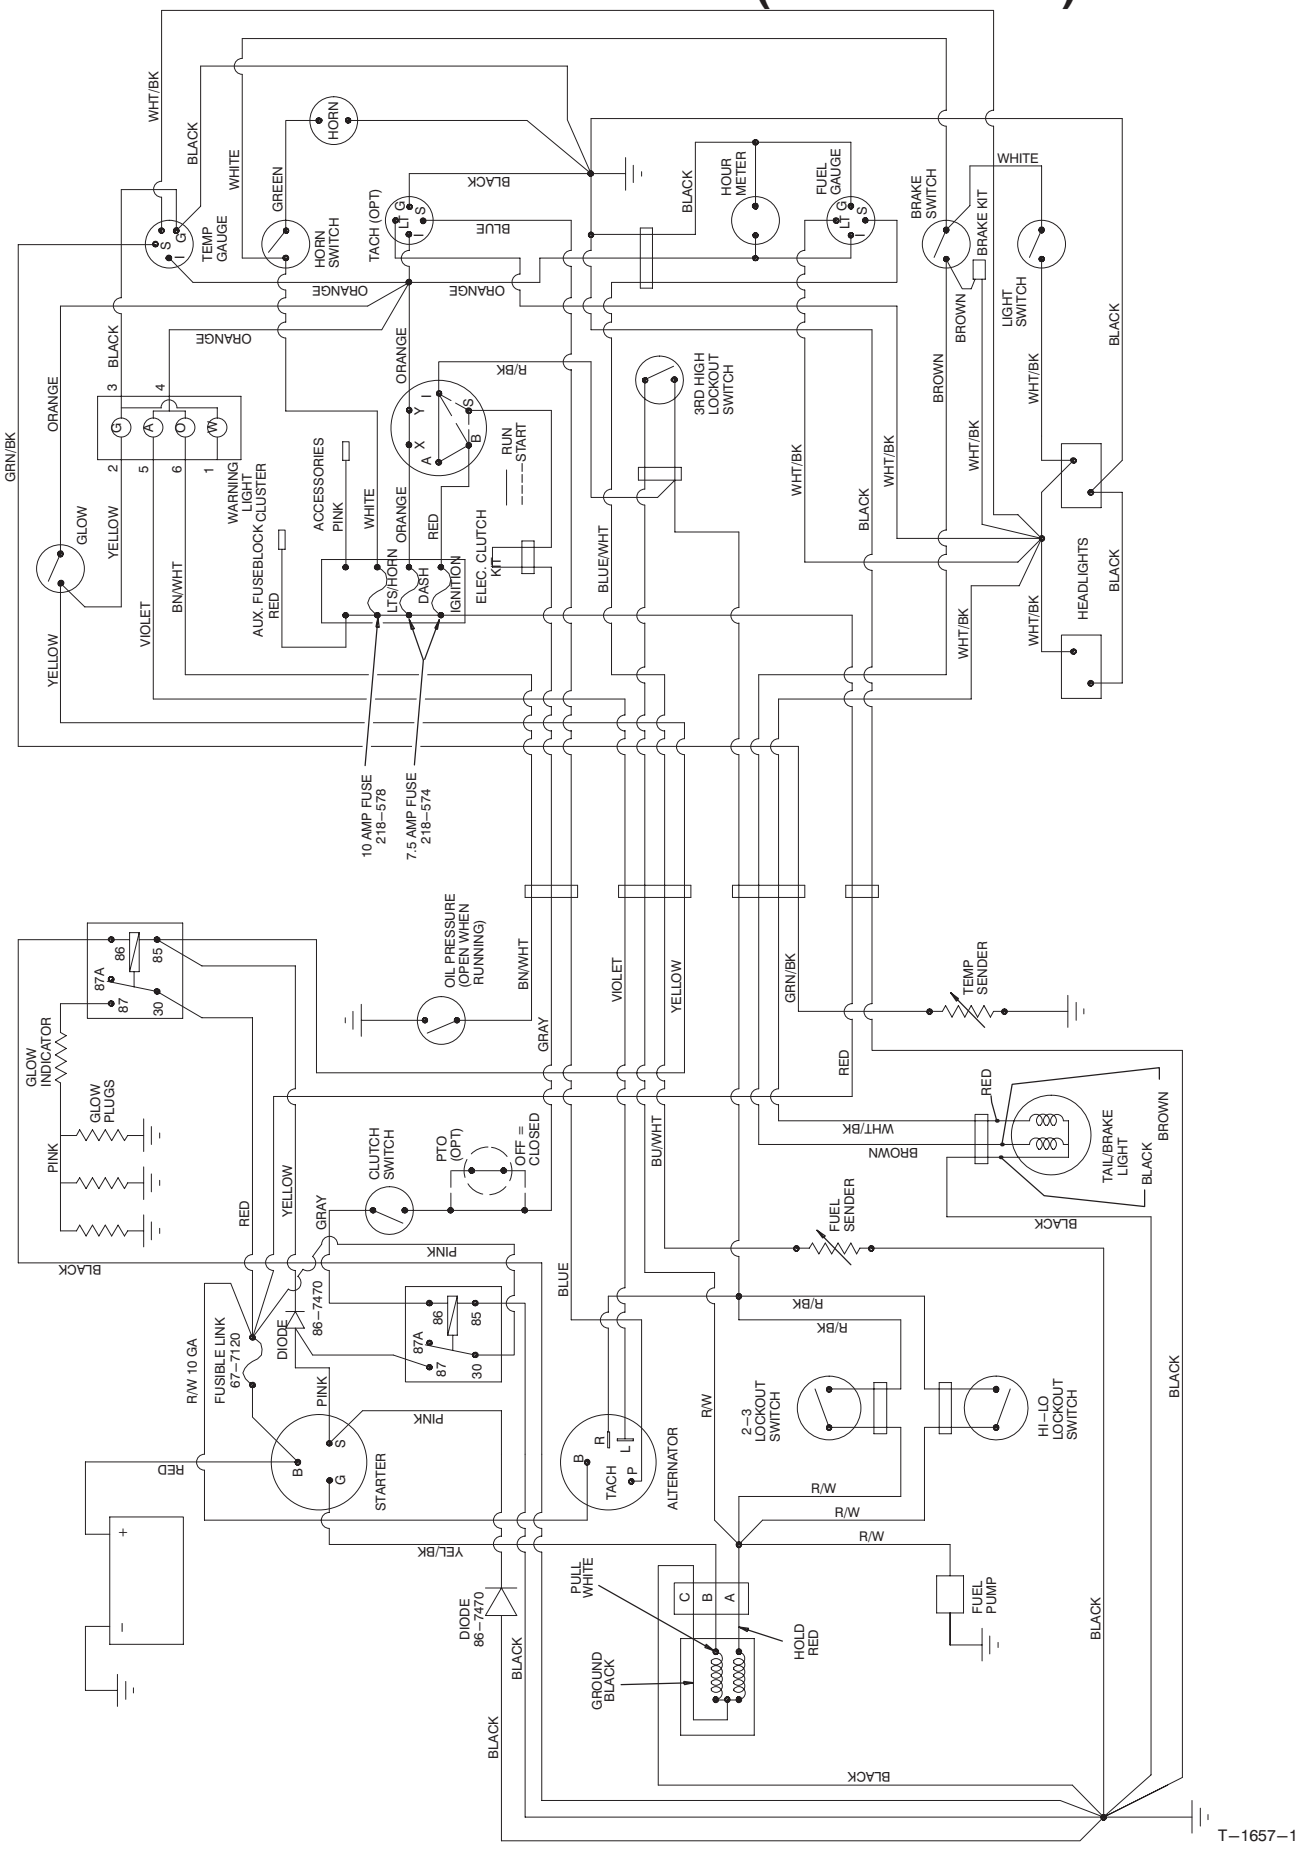

ELECTRICAL SCHEMATIC (Model 07205TC)

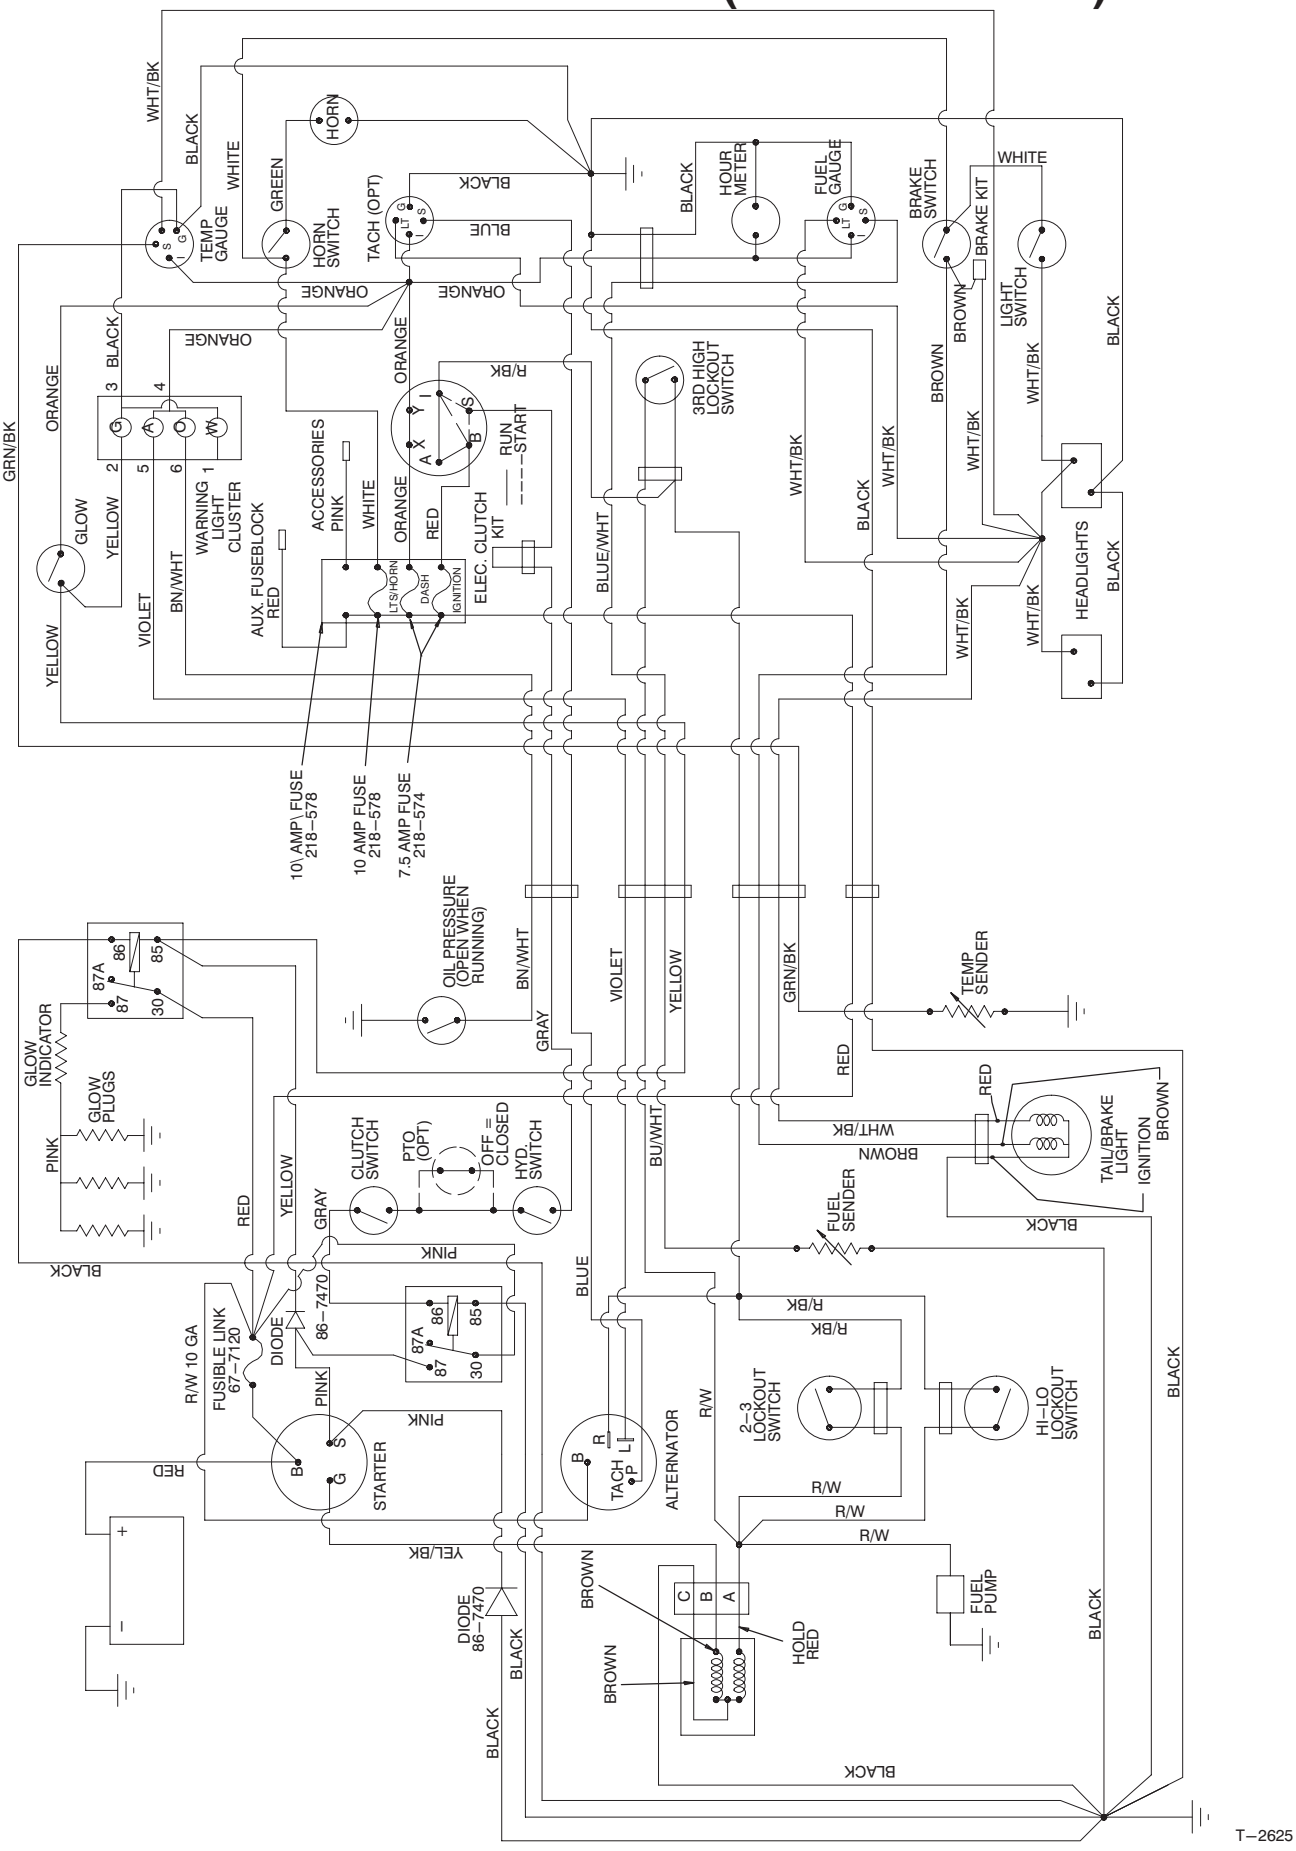

T–2625

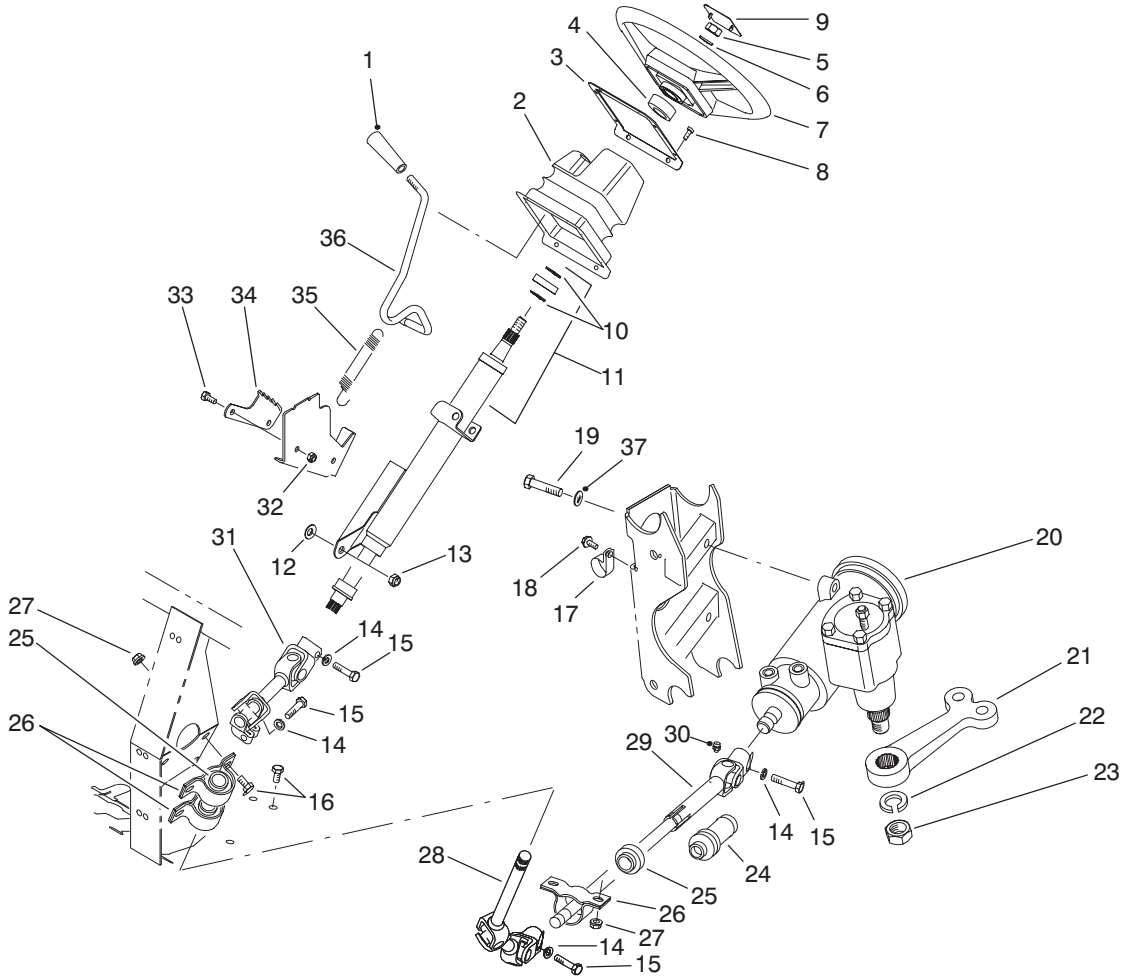


T–1584–1

STEERING LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233–39	Knob	1
2	87–3460	Boot – Tilt Steering	1
3	87–4720	Plate – Steering Boot	1
4	21–9260	Spacer	1
5	3277–1	Nut – Hex.	1
6	48–8070	Washer – Flat	1
7	87–3820	Wheel – Steering	1
8	32144–116	Screw – Pan Head	8
9	87–3750	Cover – Steering Wheel	1
10	43–6550	Ring – Retaining	2
11	92–4153	Assembly –Steering Column (Incl. Ref. #10)	1
12	3290–455	Washer	1
13	3296–59	Nut – Lock	1
14	3253–4	Washer – Lock	4
15	48–7740	Screw – Cap Hex. Hd.	4
16	322–2	Screw – Cap Hex. Hd.	6
17	2412–105	Clamp – R	2
18	32144–10	Screw – Self Tapping	2
19	93–7145	Screw – Cap Hex. Hd.	3
20	87–1500	Steering Gear Assembly (Incl. Ref. #22 & 23)	1

Ref. No.	Part No.	Description	No. Used
21	87–0370	Arm – Pitman	1
22	39–7420	Washer – Lock	1
23	39–7440	Nut – Lock	1
24	92–4157	Boot – Steering Shaft	1
25	87–2280	Bearing	3
26	87–3250	Mount – Bearing	3
27	32128–20	Nut – Flange	6
28	92–4155	Slip Joint Assembly – Upper	1
29	92–4156	Slip Joint Assembly – Lower (Incl. Ref. #24 & 30)	1
30	302–5	Fitting – Grease	1
31	92–4154	Universal Joint Assembly	1
32	3296–42	Nut – Lock	2
33	321–3	Screw – Cap Hex. Hd.	2
34	87–3610	Bracket – Detent	1
35	65–5360	Spring – Extension	1
36	87–3130	Lever – Tilt Steering	1
37	87–7480	Washer – Flat	3
*	87–3100	Lower Shaft Assembly (Incl. Ref. #24 & 28–30)	1
*	87–3120	Steering Column & Shaft (Incl. Ref. #10, 11 & 31)	1

*Not Illustrated

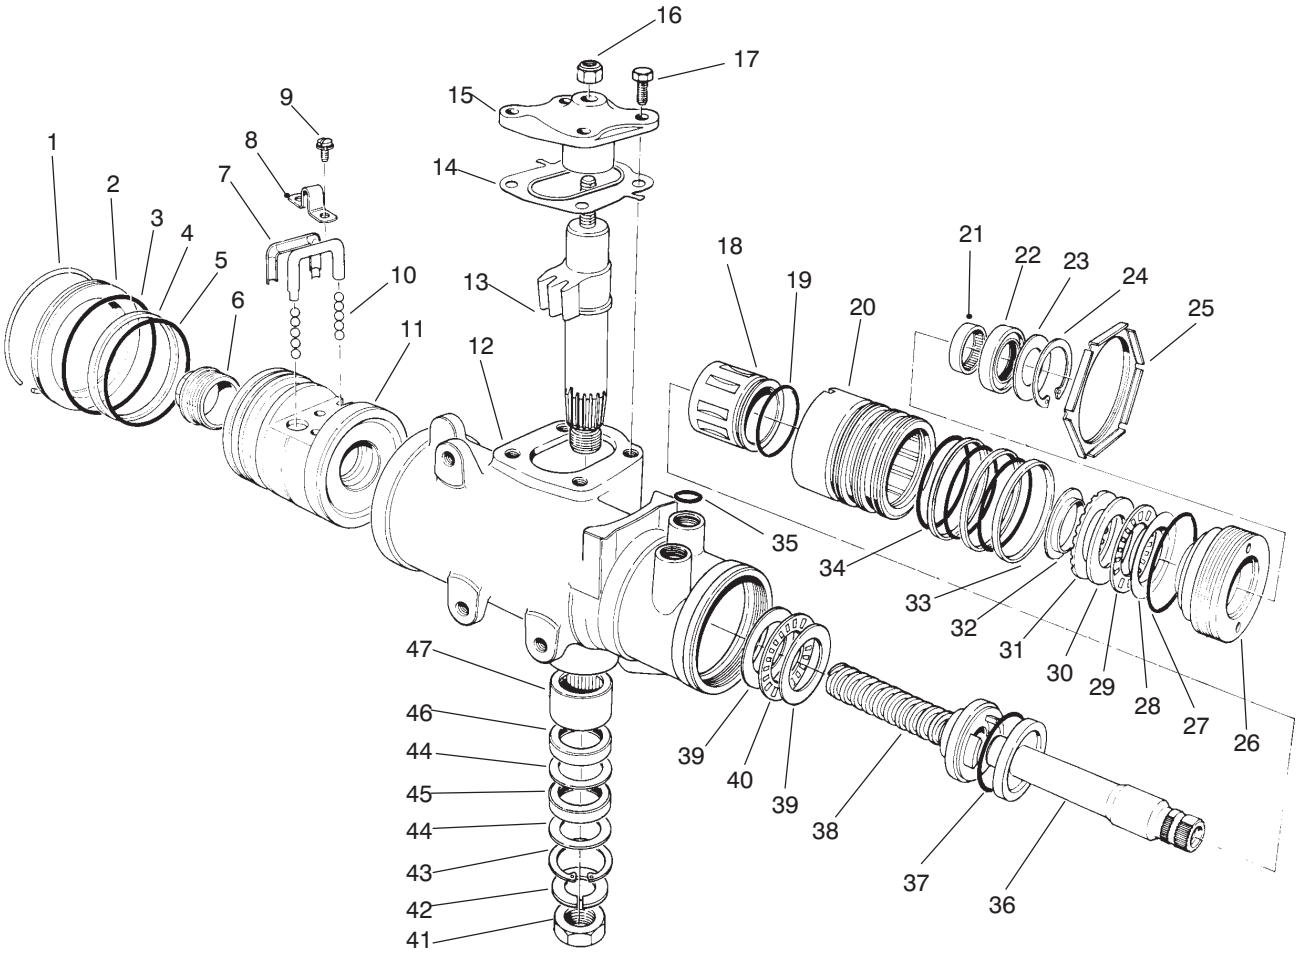


T–1580–1

STEERING GEAR ASSEMBLY NO. 87–1500

Ref. No.	Part No.	Description	No. Used
1		Ring – Retaining	1
2	92–4165	Plug – Housing End	1
3		Seal – Housing End Plug	1
4		Ring – Rack Piston	1
5		O–Ring, Rack Piston	1
6	18–4340	Plug – Rack Piston End	1
7	92–4168	Return – Guide Ball	2
8	18–4270	Clamp – Ball Return Guide	1
9	18–4260	Assy. – Screw/Lockwasher	2
10	18–5190	Ball – Chrome Alloy	11
11		Nut – Rack Piston	1
12		Housing – Steering Gear	1
13		Gear – Pitman Shaft	1
14	28–8280	Seal Kit – Side Cover (Incl. Ref. #17)	1
15		Cover – Housing Side	1
16	28–8220	Nut – Lash Adjuster	1
17	28–8210	Bolt – Flange Hex. Hd.	4
18		Spool Valve	1
19		O–Ring, Spool Valve	1
20		Valve Body	1
21	92–4169	Bearing – Needle	1
22		Seal – Stub Shaft	1
23		Seal – Stub Shaft Dust	1
24		Ring – Retaining	1
25	92–4159	Nut – Adjuster Plug Lock	1

Ref. No.	Part No.	Description	No. Used
26		Plug – Adjuster	1
27	28–8200	O–Ring	1
28		Race – Upper Bearing	1
29		Bearing – Roller, Thrust	1
30		Race – Thrust Bearing	1
31		Spacer – Thrust Bearing	1
32		Retainer – Bearing	1
33		Ring – Valve Body	3
34		O–Ring	3
35	39–7310	O–Ring	3
36		Shaft – Stub	1
37		O–Ring	1
38		Worm – Steering	1
39		Race – Thrust Bearing	2
40		Bearing – Roller, Thrust	1
41	39–7440	Nut – Pitman Arm	1
42	39–7420	Washer – Lock	1
43		Ring – Retaining	1
44		Washer – Seal, Backup	2
45		Seal – Pitman Shaft	1
46		Seal – Pitman Shaft	1
47	92–4170	Bearing – Pitman Shaft	1
*	92–4161	Assembly – Cover Service Housing Side (Incl. Ref. #14–17)	1

*Not Illustrated

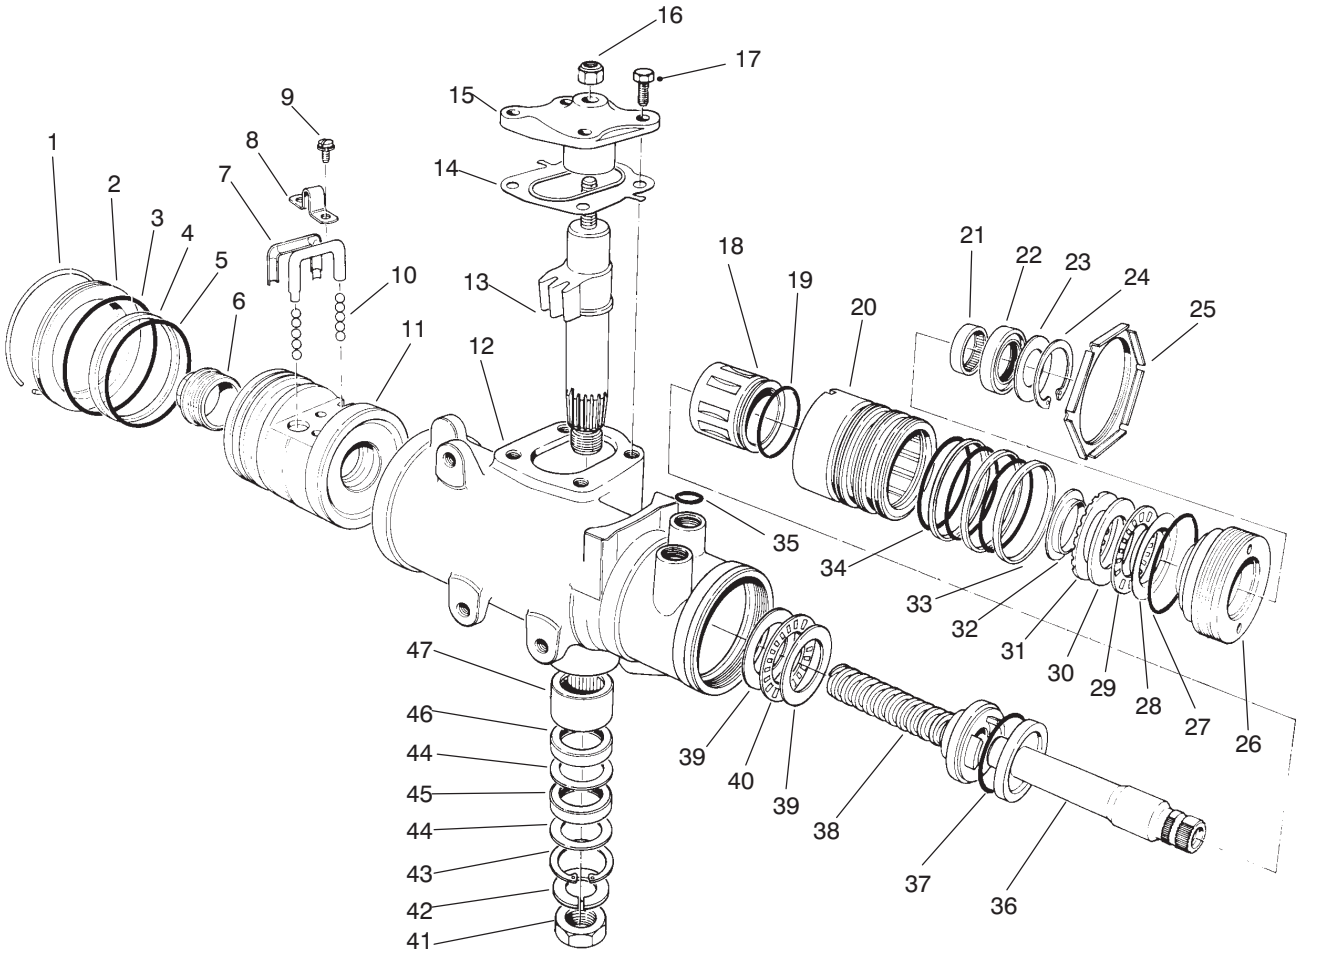


T–1580–1

STEERING GEAR ASSEMBLY NO. 87–1500 (Continued)

Ref. No.	Part No.	Description	No. Used
*	28–8270	Seal Service Kit – End Plug (Incl. Ref. #1 & 3)	1
*	28–8290	Seal Service Kit Rack/Piston (Incl. Ref. #4 & 5)	1
*	18–5180	Bearing Kit – Lower Thrust (Incl. Ref. #39–40)	1
*	18–5160	Seal Kit – Pitman Shaft (Incl. Ref. #43–46	1
*	18–5170	Seal Kit – Valve Ring (Incl. Ref. #19, 33, 34 & 37)	1
*	92–4163	Assy. – Steering Housing (Incl. Ref. #12 & 43–47)	1
*	92–4167	Assembly – Plug Service (Incl. Ref. #22–24 & 27)	1

Ref. No.	Part No.	Description	No. Used
*	92–4162	Pitman Shaft – Gear Service (Incl. Ref. #13–15 & 17)	1
*	92–4158	Valve Assy. – Hyd. Gear (Incl. Ref. #18–20, 33, 34, 36 & 37)	1
*	92–4160	Bearing Service Kit – Upper (Incl. Ref. #28–32)	1
*	92–4166	Rack/Piston/Nut Assembly (Incl. Ref. #1–11 & 38)	1
*	92–4164	Plug Assy. – Service Adjust. (Incl. Ref. #21–24 & 26–32)	1
*	87–1500	Steering Gear (Complete)	1

*Not Illustrated

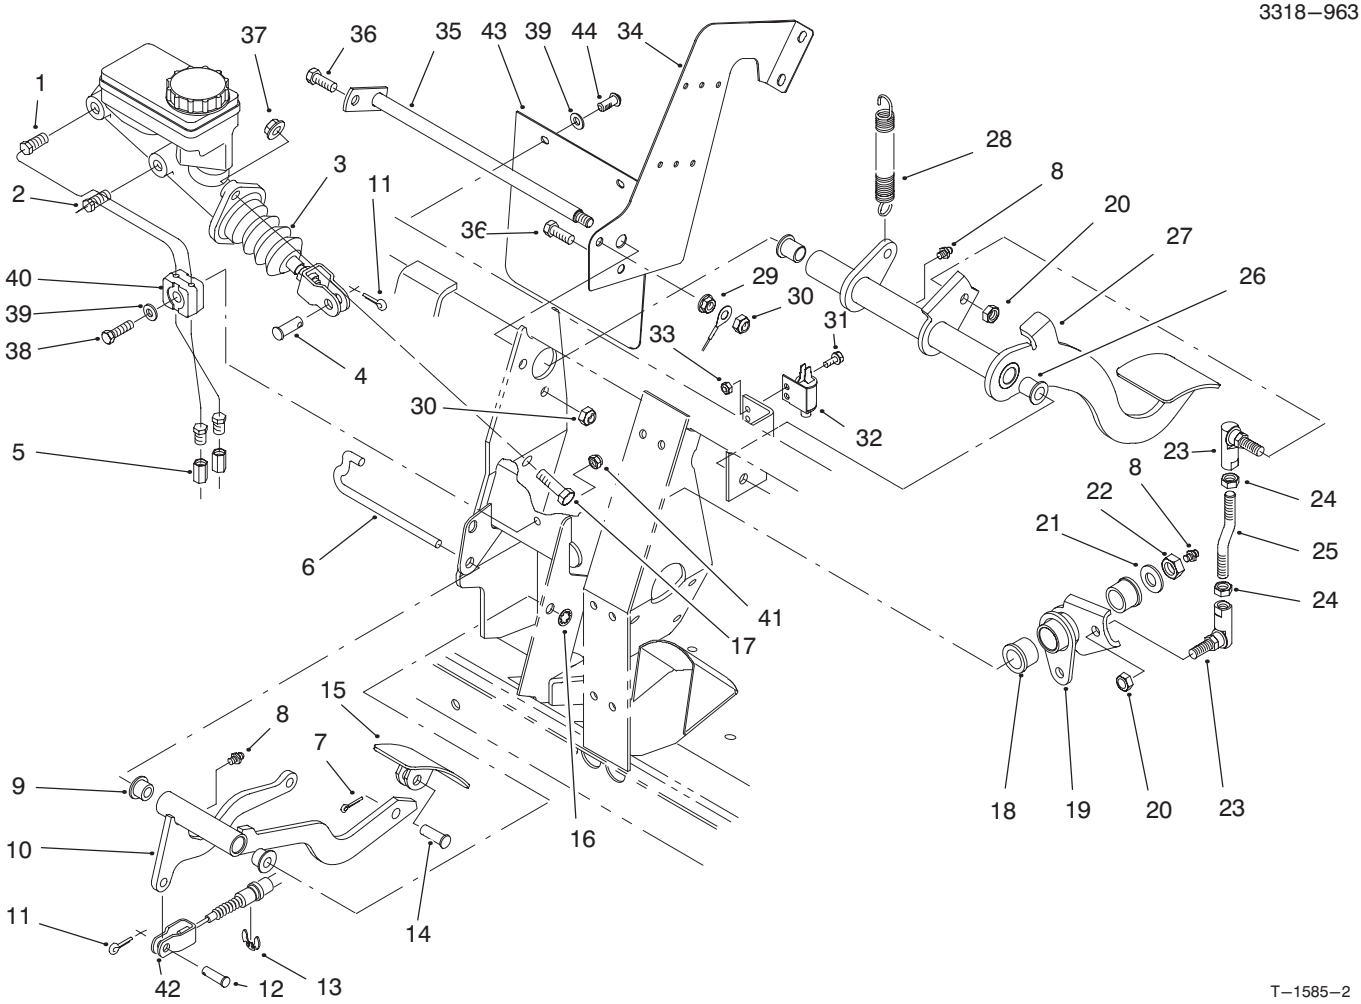


T–1585–2

BRAKE & ACCELERATOR PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–3814	Tube – Hydraulic	1
2	94–3815	Tube – Hydraulic	1
3	94–3800	Master Cylinder Assembly	1
4	283–2	Pin – Clevis	1
5	87–3570	Union – Brake Line	2
6	87–2880	Shaft – Accelerator Pedal	1
7	3272–6	Pin – Cotter	1
8	302–5	Fitting – Grease	3
9	256–259	Bushing – Flange	2
10	93–8961	Arm – Accelerator Pedal	1
11	3272–10	Pin – Cotter	2
12	283–30	Pin – Clevis	1
13	32120–47	Ring – E	1
14	283–85	Pin – Clevis	1
15	93–8969	Pedal – Accelerator	1
16	32151–56	Ring – Retaining	1
17	323–7	Screw – Cap Hex. Hd.	2
18	256–247	Bushing – Flange	2
19	94–3823	Bell Crank	1
20	3296–6	Nut – Lock	2
21	3256–26	Washer – Flat	1
22	3296–23	Nut – Lock	1

Ref. No.	Part No.	Description	No. Used
23	68–3840	Ball Joint	2
24	3219–20	Nut – Hex. LH	2
25	94–3810	Rod – Link	1
26	256–155	Bushing – Flange	2
27	93–8965	Pedal – Brake	1
28	21–1830	Spring – Tension	1
29	32128–20	Nut – Flange Lock	1
30	3296–29	Nut – Lock	2
31	3290–321	Screw – Hex. Flange Hd.	2
32	55–7120	Switch – Brake Light	1
33	3296–2	Nut – Lock	2
34	94–3821	Plate – Center, Frame	1
35	87–2590	Shaft – Brake	1
36	322–5	Screw – Cap Hex. Hd.	2
37	3290–357	Nut – Flange	2
38	321–9	Screw – Cap Hex. Hd.	1
39	3256–22	Washer – Flat	3
40	87–7550	Clamp – Tube	2
41	3296–42	Nut – Lock	1
42	94–3836	Cable – Accelerator	1
43	94–5221	Flap – Cylinder, Master	1
44	87–6620	Screw – Torx, Pan Hd.	2

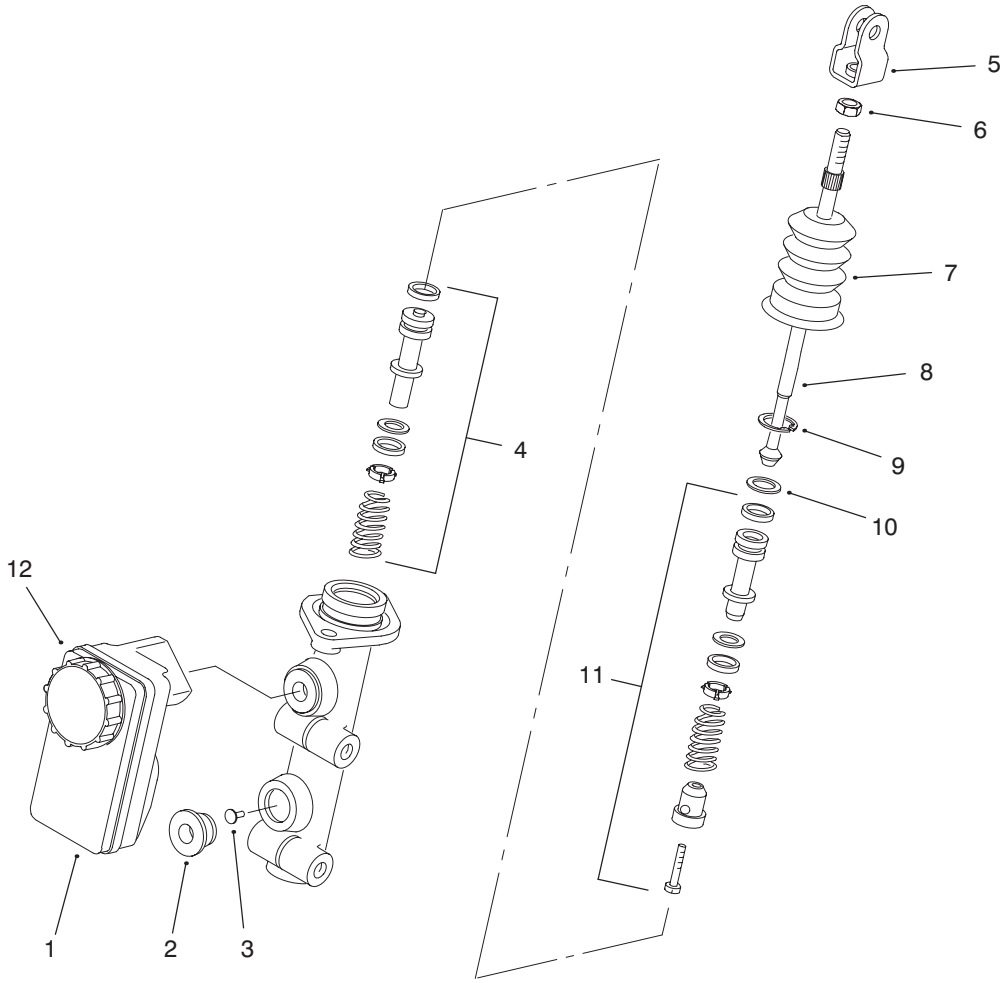


T–2339–1

MASTER BRAKE CYLINDER NO. 94–3800

Ref. No.	Part No.	Description	No. Used
1	87–3040	Reservoir – Master Cylinder (Incl. Ref. #12)	1
2	93–8971	Seal – Port, Flange	2
3	92–4103	Pin – Stop	1
4	92–4102	Secondary Piston Assembly	1
5	92–4110	Clevis	1
6	21–0360	Nut – Hex.	1

Ref. No.	Part No.	Description	No. Used
7	94–5209	Cover – Dust	1
8	94–5210	Rod – Push	1
9	92–4109	Circlip	1
10	92–4108	Washer – Retainer	1
11	92–4101	Primary Piston Assembly	1
12	92–4112	Cap Assembly	1

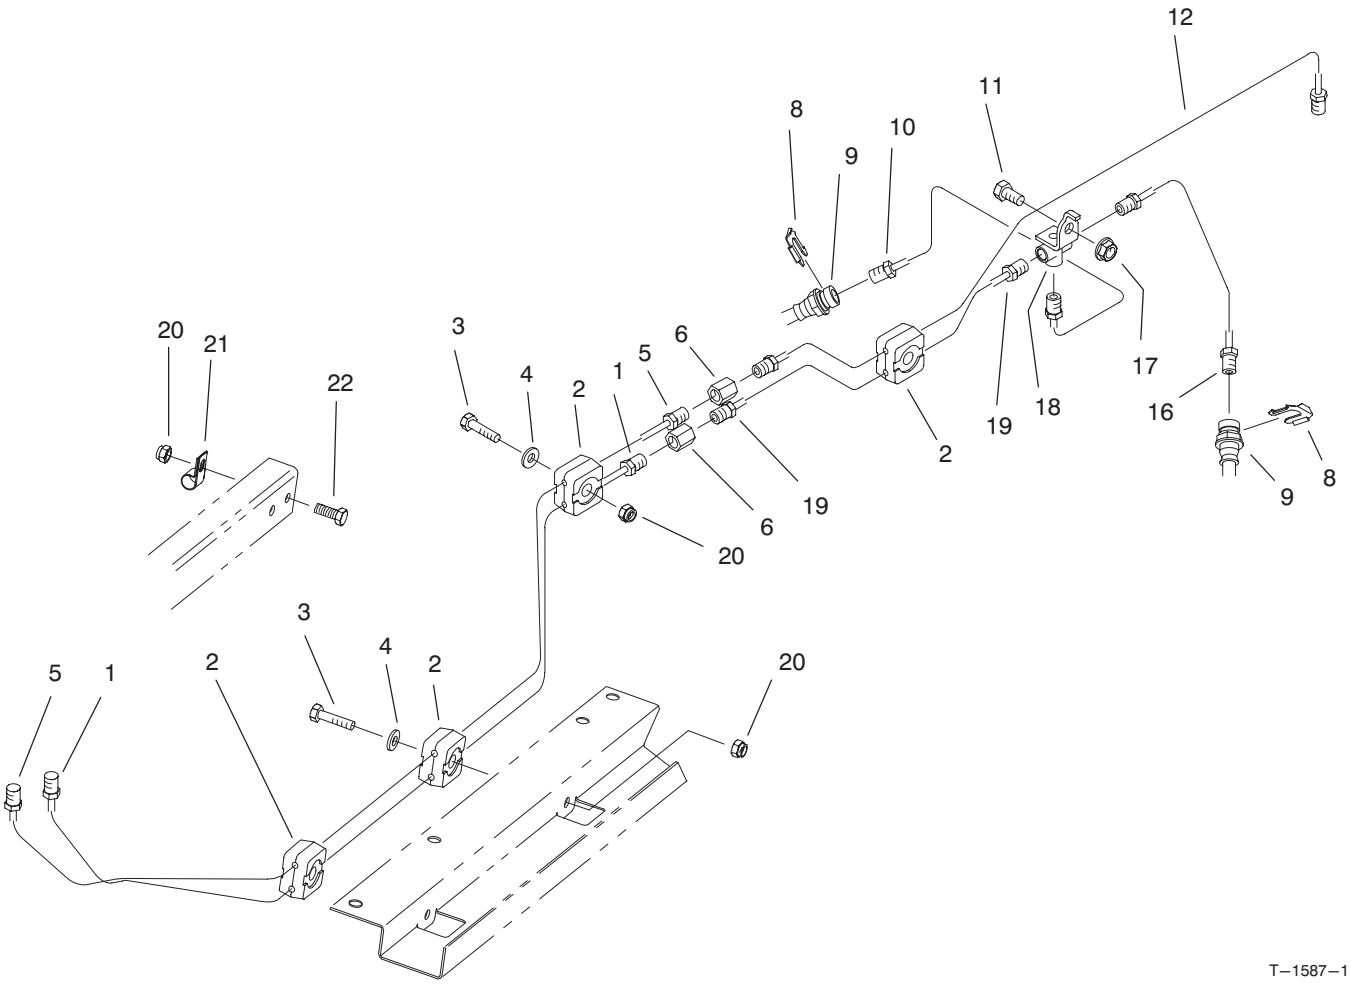


T–1587–1

HYDRAULIC BRAKE LINE ROUTING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–3820	Tube – Brake Front	1
2	87–7660	Clamp – Brake Line	8
3	321–9	Screw – Cap Hex. Hd.	4
4	3256–22	Washer – Flat	4
5	94–3819	Tube – Brake Rear	1
6	87–3570	Fitting – Union	2
8	87–3580	Retainer – Brake Hose	2
9	93–7059	Hose – Brake Front	2
10	93–7081	Tube – Brake Front RH	1


Ref. No.	Part No.	Description	No. Used
11	322–2	Screw – Cap Hex. Hd.	1
12	94–3842	Tube – Brake Rear	1
16	93–7082	Tube – Brake Front LH	1
17	32128–20	Nut – Flange	1
18	87–3560	Tee – Brake Line	1
19	93–7085	Tube – Brake Front	1
20	3296–42	Nut – Lock	5
21	2412–89	Clamp – R	1
22	321–4	Screw – Cap Hex. Hd.	1

HYDRAULIC SCHEMATIC

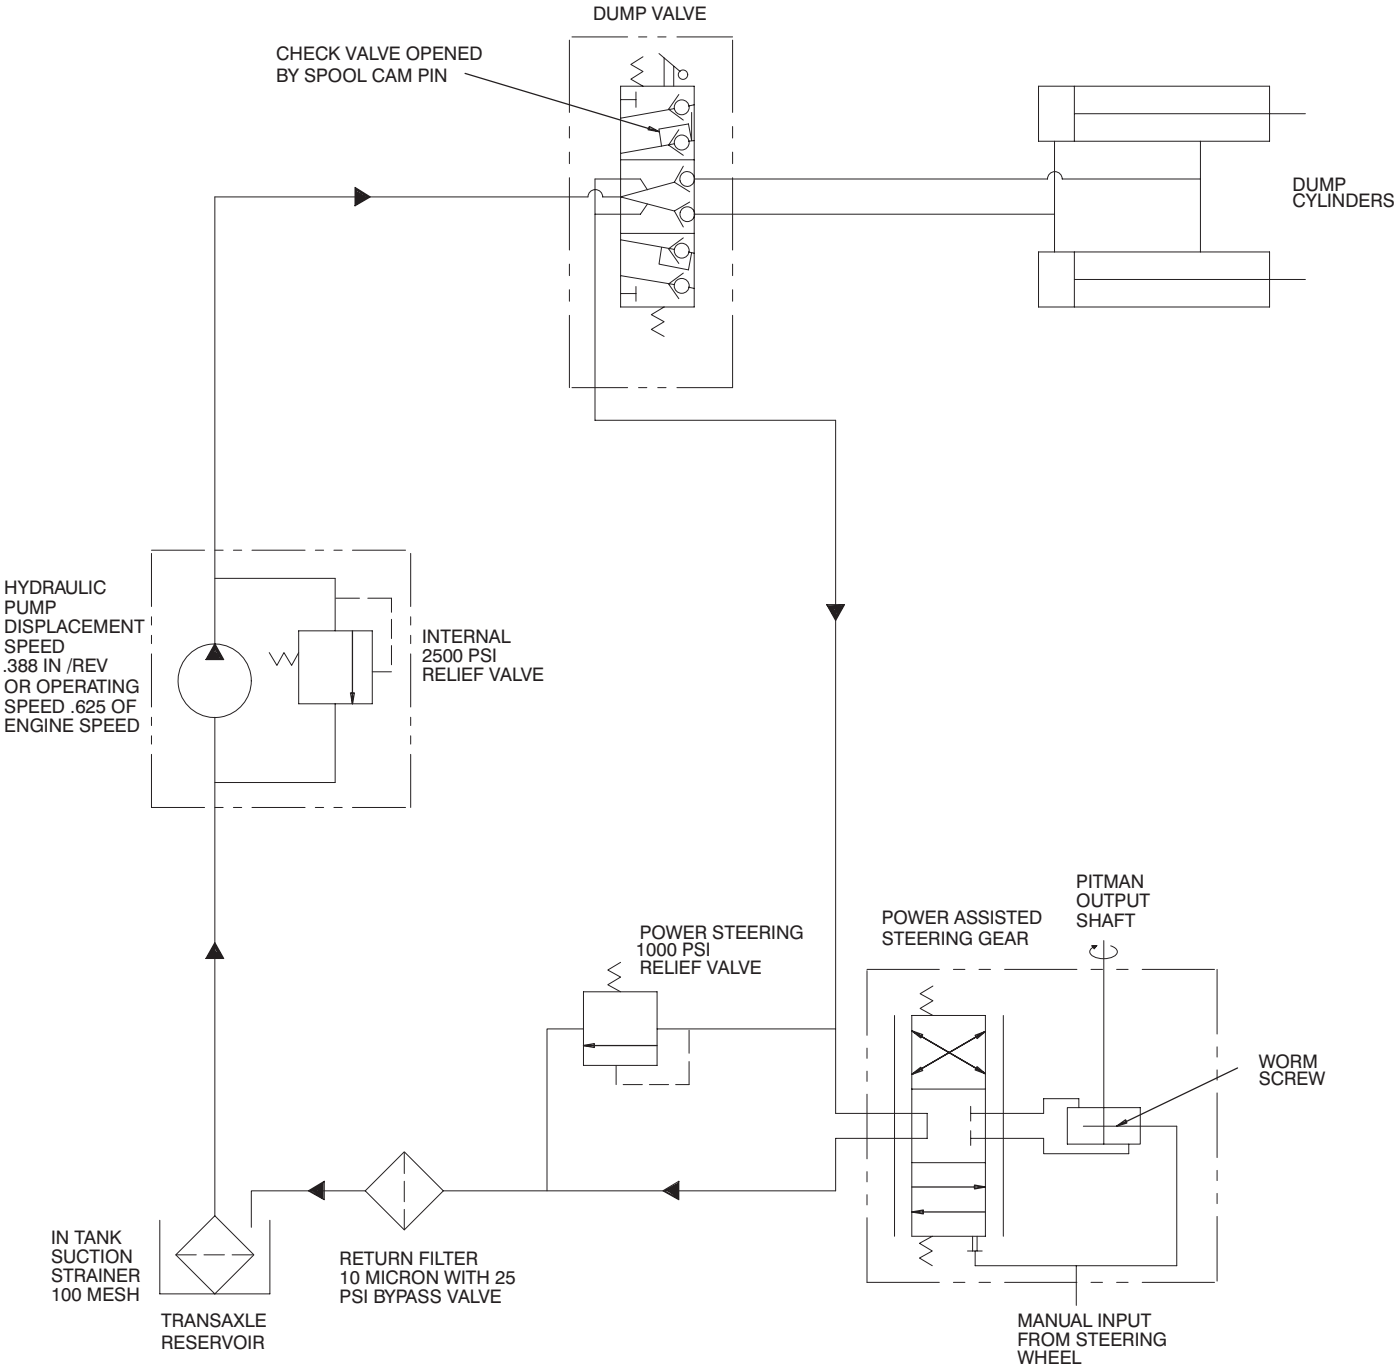


T–1626–1

HYDRAULIC SCHEMATIC (Models 07205TC)

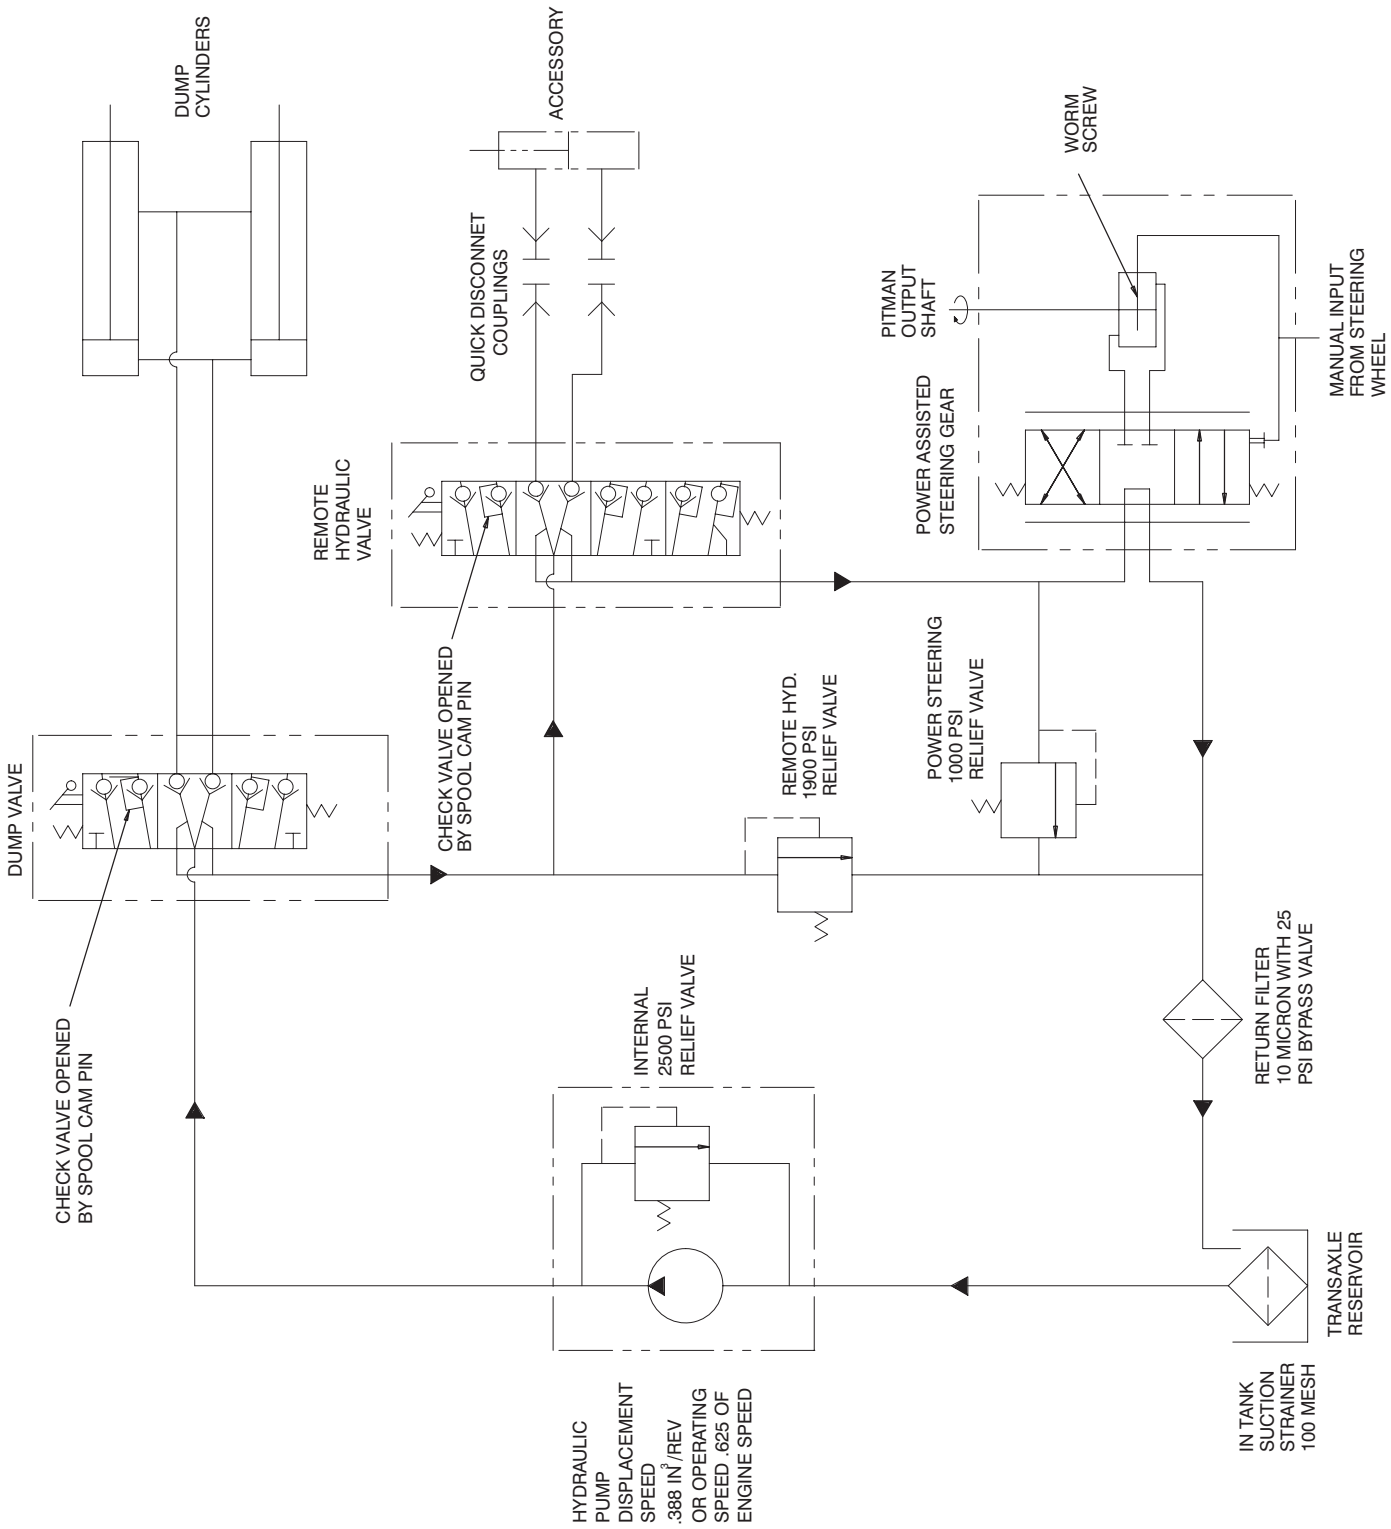

T–2620

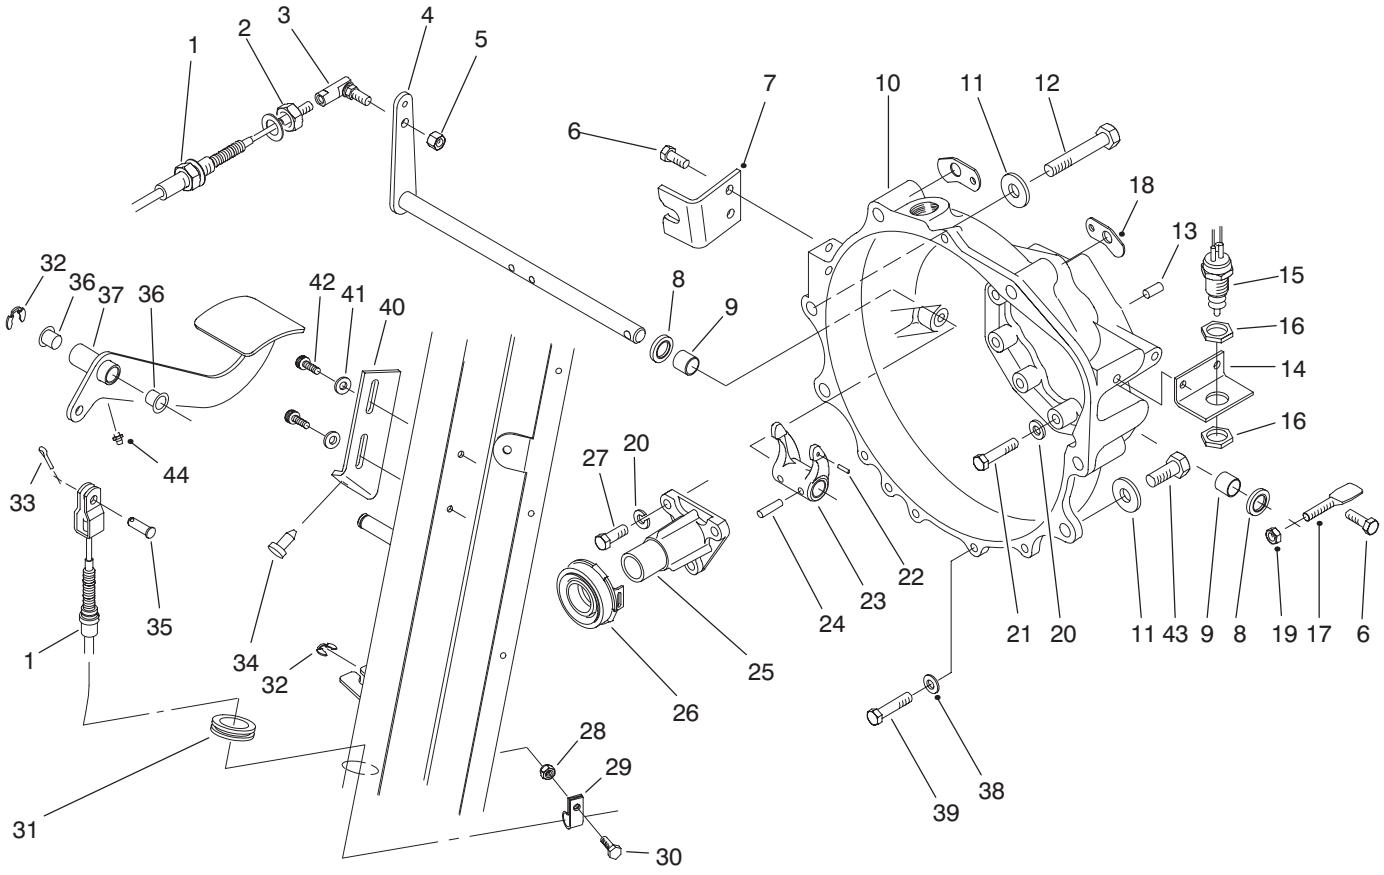


T–1658–1

CLUTCH LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–3837	Clutch Cable Assembly (Incl. Ref. #2)	1
2	3220–2	Nut – Jam	1
3	2411–33	Joint – Ball	1
4	87–5280	Shaft – Release	1
5	3296–4	Nut – Lock	1
6	66–3160	Screw – Cap Hex. Hd.	4
7	87–8471	Bracket – Clutch	1
8	87–1920	Seal – Shaft	2
9	87–3770	Bushing – Sleeve	2
10	93–7120	Housing – Bell	1
11	3256–26	Washer – Flat	4
12	3215–2	Screw – Cap Hex. Hd.	5
13	87–1910	Pin – Alignment	2
14	87–5350	Bracket – Switch	1
15	87–5490	Switch – Neutral	1
16	3218–20	Nut – Jam	2
17	87–5360	Lever	1
18	87–6410	Bracket – Harness	2
19	3296–29	Nut – Lock	1
20	42–9850	Washer – Lock	12
21	42–9530	Screw – Cap Hex. Hd.	9
22	32121–7	Pin – Roll	1

Ref. No.	Part No.	Description	No. Used
23	87–5300	Fork – Clutch	1
24	32121–24	Pin – Roll	2
25	87–5320	Guide – Release	1
26	87–2100	Bearing – Release	1
27	57–6380	Screw – Cap Hex. Hd.	3
28	32128–33	Nut – Flange Lock	1
29	2412–89	Clamp – R	1
30	321–4	Screw – Cap Hex. Hd.	1
31	240–5	Grommet	1
32	32120–47	Ring – E	2
33	3272–10	Pin – Cotter	1
34	87–8460	Bumper	1
35	283–30	Pin – Clevis	1
36	256–156	Bushing – Flange	2
37	93–8958	Pedal – Clutch	1
38	3256–23	Washer – Lock	4
39	66–3160	Screw – Cap Hex. Hd.	4
40	87–8710	Tab – Clutch	1
41	3256–22	Washer – Flat	2
42	87–6620	Screw – Torx Hd.	2
43	42–9250	Screw – Cap Hex. Hd.	1
44	302–5	Fitting – Grease	1

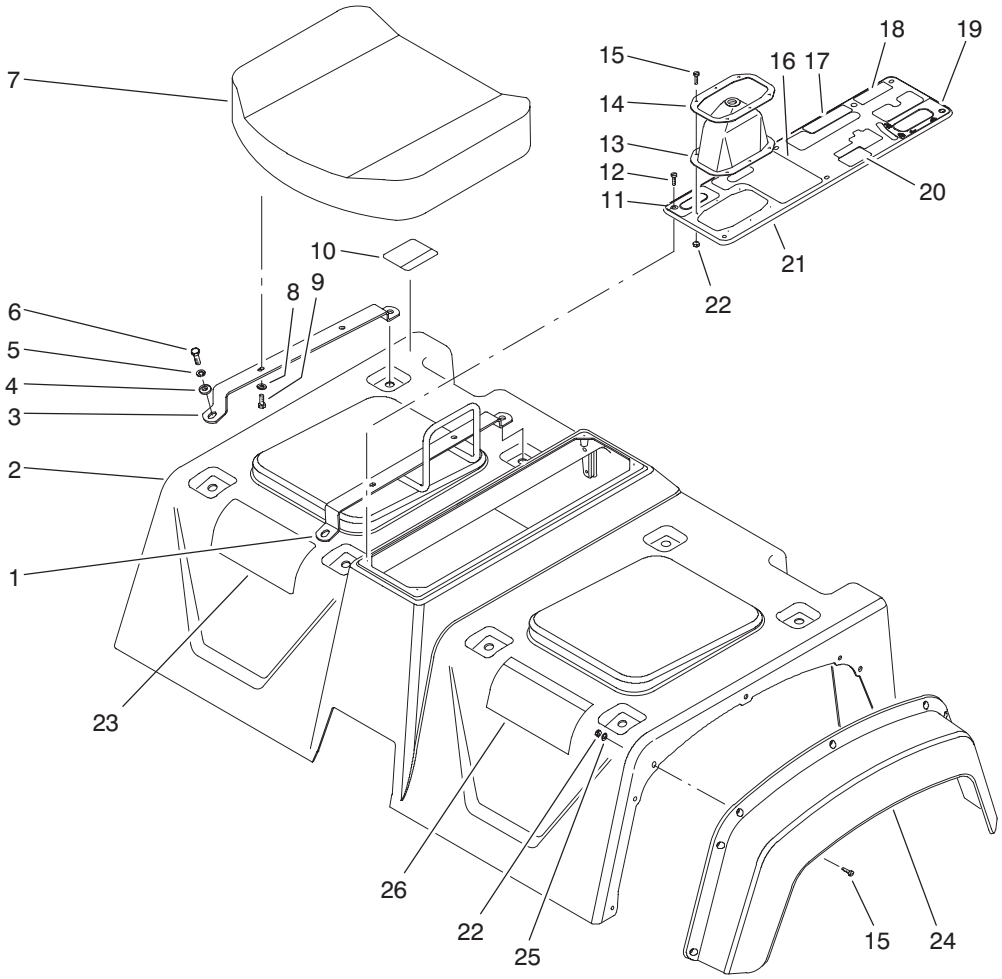


T–1589

SEAT BASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87–6890	Hold – Hand	1
2	87–7070	Skirt Assembly (Incl. Ref. #10 & 26)	1
3	87–3800	Bracket – Seat Bottom	3
4	3256–23	Washer – Flat	8
5	3253–4	Washer – Lock	8
6	322–5	Screw – Cap Hex. Hd.	8
7	87–5060	Cushion – Seat Bottom	2
8	3256–22	Washer – Flat	8
9	321–4	Screw – Cap Hex. Hd.	8
10	87–5930	Decal – Caution	1
10	93–9448	Decal – Caution (Europe)	1
10	92–5325	Decal – Caution (Japan)	1
11	87–5960	Decal – Axle	1
11	93–9857	Decal – Axle (Europe)	1
11	92–5318	Decal – Axle (Japan)	1
12	32144–52	Screw – Hex. Hd.	6
13	87–8620	Boot – Shift	1
14	87–3760	Plate – Shift Boot	1
15	3250–13	Screw – Hex. Hd.	20
16	87–5970	Decal – PTO	1
16	93–9861	Decal – PTO (Europe)	1
16	92–5360	Decal – PTO (Japan)	1
17	87–6000	Decal – Differential	1
17	93–9430	Decal – Differential (Europe)	1
17	92–5311	Decal – Differential (Japan)	1

Ref. No.	Part No.	Description	No. Used
18	92–2609	Decal – Remote Hyd.	1
18	93–9866	Decal – Remote Hyd. (Europe)	1
18	92–5346	Decal – Remote Hyd. (Japan)	1
19	87–6010	Decal – Dump Hyd.	1
19	93–9444	Decal – Dump Hyd. (Europe)	1
19	92–5353	Decal – Dump Hyd. (Japan)	1
20	87–6020	Decal – Brake	1
20	93–9443	Decal – Brake (Europe)	1
20	92–5304	Decal – Brake (Japan)	1
21	87–8080	Console Plate Assembly (Incl. Ref. #11 &16–20)	1
22	3296–2	Nut – Lock	20
23	87–9070	Decal – Quick Ref.	1
23	92–5497	Decal – Quick Ref. (DU)	1
23	92–5498	Decal – Quick Ref. (FR)	1
23	92–5499	Decal – Quick Ref. (GR)	1
23	92–6400	Decal – Quick Ref. (IT)	1
23	92–6402	Decal – Quick Ref. (SP)	1
23	92–6403	Decal – Quick Ref. (SW)	1
23	93–9431	Decal – Quick Ref. (DN)	1
23	93–9432	Decal – Quick Ref. (FN)	1
23	93–9433	Decal – Quick Ref. (NO)	1
23	93–9434	Decal – Quick Ref. (PO)	1

3318−963

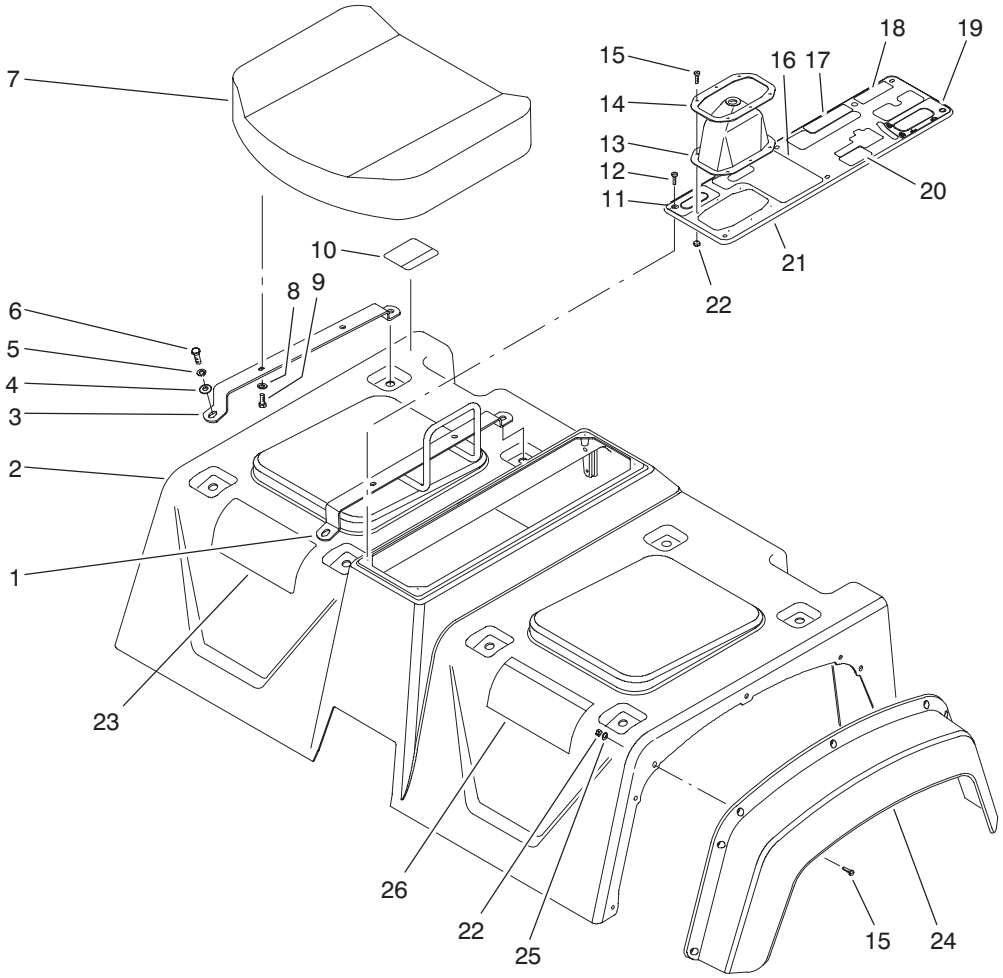


T−1589

SEAT BASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
23	92−6401	Decal − Quick Ref. (Japan)	1
24	87−9480	Fender − Front	2
25	3256−61	Washer − Flat	14

Ref. No.	Part No.	Description	No. Used
26	87−5920	Decal − Danger	1
26	93−9860	Decal − Danger (Europe)	1
26	92−6408	Decal − Danger (Japan)	1

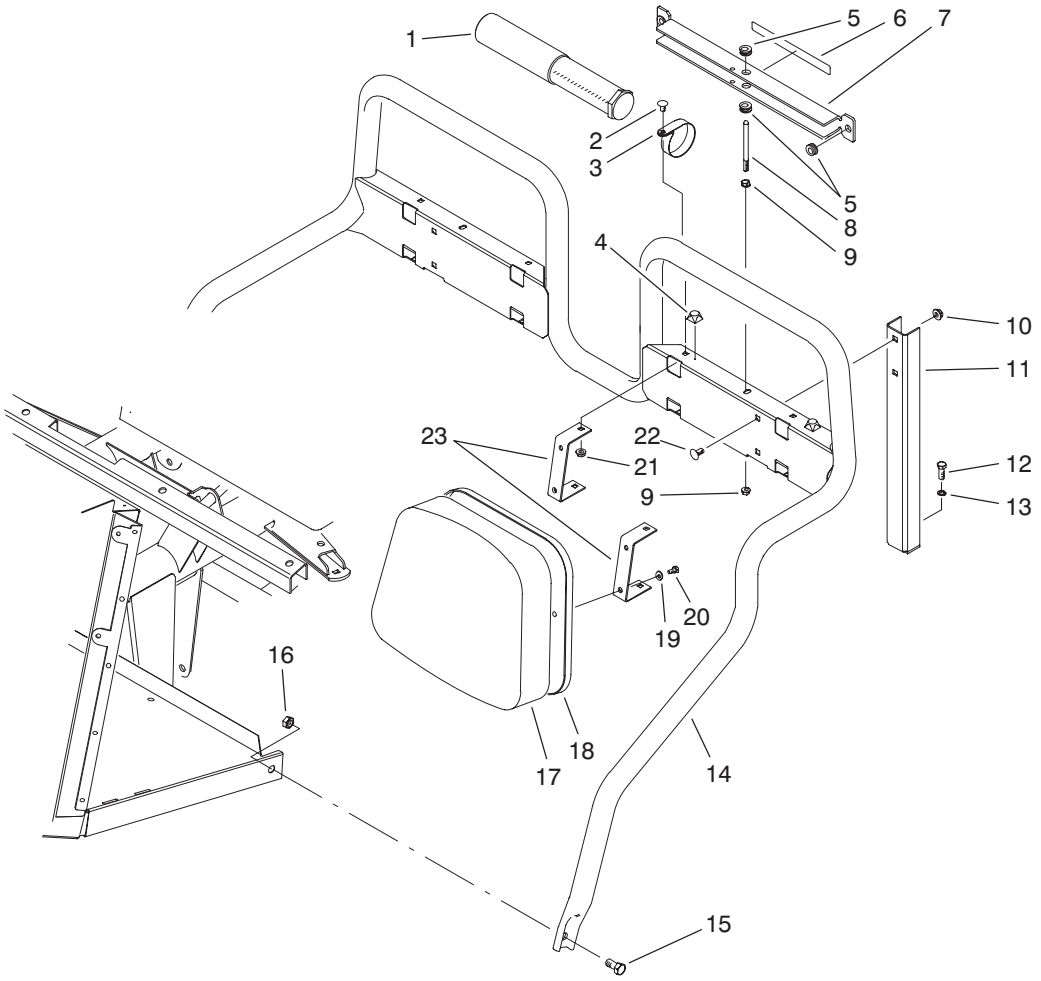


T–1779–1

SEAT BACK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74–0720	Tube – Manual	1
2	3230–18	Bolt – Carriage	8
3	2412–133	Clamp – R	2
4	111071	Bumper	2
5	92–5972	Grommet	4
6	87–7930	Decal – Danger	1
6	93–9852	Decal – Danger (Europe)	1
6	92–6415	Decal – Danger (Japan)	1
7	87–7950	Bed Support Assembly (Incl. Ref. #5 & 6)	1
8	87–7940	Stud	1
9	32128–44	Nut – Flange Lock	2
10	3290–357	Nut – Flange Lock	4

Ref. No.	Part No.	Description	No. Used
11	87–2510	Bracket – Seat Frame	2
12	323–6	Screw – Cap Hex. Hd.	2
13	3253–21	Washer – Lock	2
14	87–6170	Frame – Seat	1
15	325–4	Screw – Cap Hex. Hd.	2
16	3296–23	Nut – Lock	2
17	87–6290	Cushion – Seat Back	2
18	87–6280	Plate – Seat Back	2
19	3256–22	Washer – Flat	8
20	321–4	Screw – Cap Hex. Hd.	8
21	32128–20	Nut – Flange Lock	8
22	3231–21	Bolt – Carriage	4
23	87–6240	Bracket – Seat Back	4

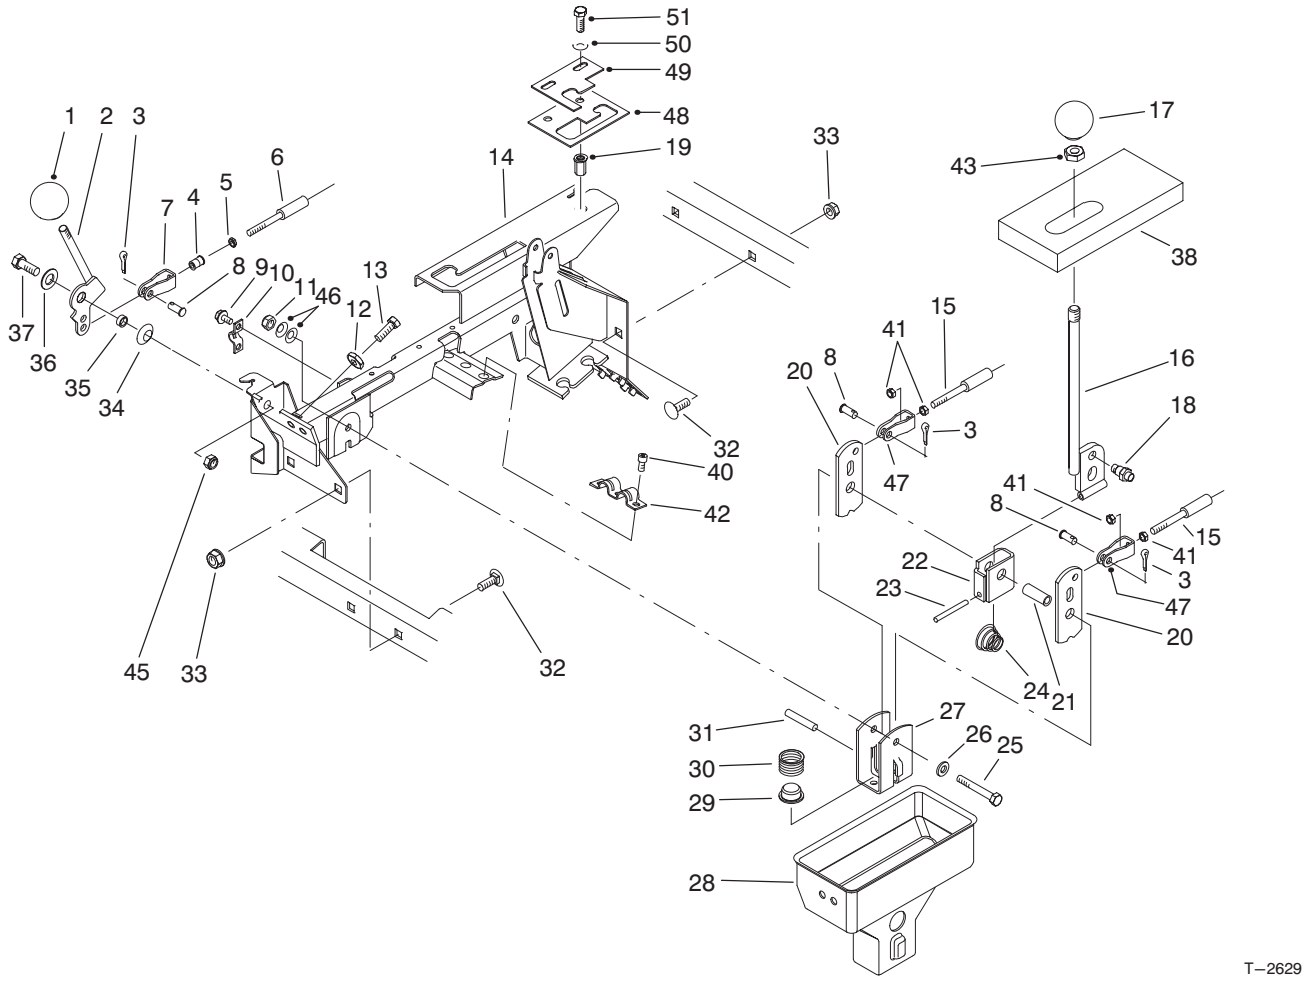


T–2629

HI–LO & SHIFT LEVER ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	233–37	Knob	1
2	87–4350	Lever – Hi–Lo	1
3	3272–6	Pin – Cotter	3
4	32148–15	Insert – Threaded	1
5	3219–14	Nut	1
6	87–4420	Hi–Lo Cable Assembly (Incl. Ref. #5)	1
7	87–7160	Assembly – Clevis, Cable (Incl. Ref. #4)	1
8	283–62	Pin – Clevis	3
9	32144–4	Screw – Hex. Washer Hd.	2
10	87–4340	Clamp – Cable	1
11	3296–58	Nut – Lock	1
12	3220–3	Nut – Jam	2
13	3211–8	Screw – Cap Hex. Hd.	2
14	94–5202	Lever Support Assembly (Incl. Ref. #19)	1
15	87–4260	Cable Assembly (Incl. Ref. #41)	2
16	87–2040	Lever – Shift	1
17	87–6720	Knob	1
18	87–3650	Pin – Shift	1
19	32148–7	Nut – Clinch	2
20	87–3540	Link – Shift	2
21	87–2520	Tube – Pivot	1
22	87–6040	Bracket – Shifter	1
23	32121–48	Pin – Roll	1
24	87–2900	Spring – Compression	1


Ref. No.	Part No.	Description	No. Used
25	322–12	Screw – Cap Hex. Hd.	1
26	87–8640	Washer – Flat	1
27	87–3520	Clevis	1
28	87–2260	Boot – Shift Lower	1
29	87–3530	Button – Shifter	1
30	87–3660	Spring – Compression	1
31	3290–507	Pin – Dowel	1
32	3231–21	Bolt – Carriage	4
33	3290–357	Nut – Flange Lock	4
34	3290–221	Washer – Spring	1
35	76–9100	Spacer – Hi–Lo Lever	1
36	49–9150	Washer – Flat	1
37	323–6	Screw – Cap Hex. Hd.	1
38	87–6570	Foam – Seal	1
40	65–5220	Screw – Hex. Socket Hd.	3
41	3220–1	Nut – Jam	4
42	87–4960	Clamp – Cable	1
43	3218–18	Nut – Jam	1
45	3296–39	Nut – Lock	1
46	3290–456	Washer – Belleville	2
47	87–2310	Clevis – Cable	2
48	87–4670	Plate – Detent Lower (Model 07205TC)	1
49	87–4680	Plate – Detent Upper (Model 07205TC)	1
50	3256–23	Washer – Flat	2
51	322–5	Screw – Cap Hex. Hd.	2

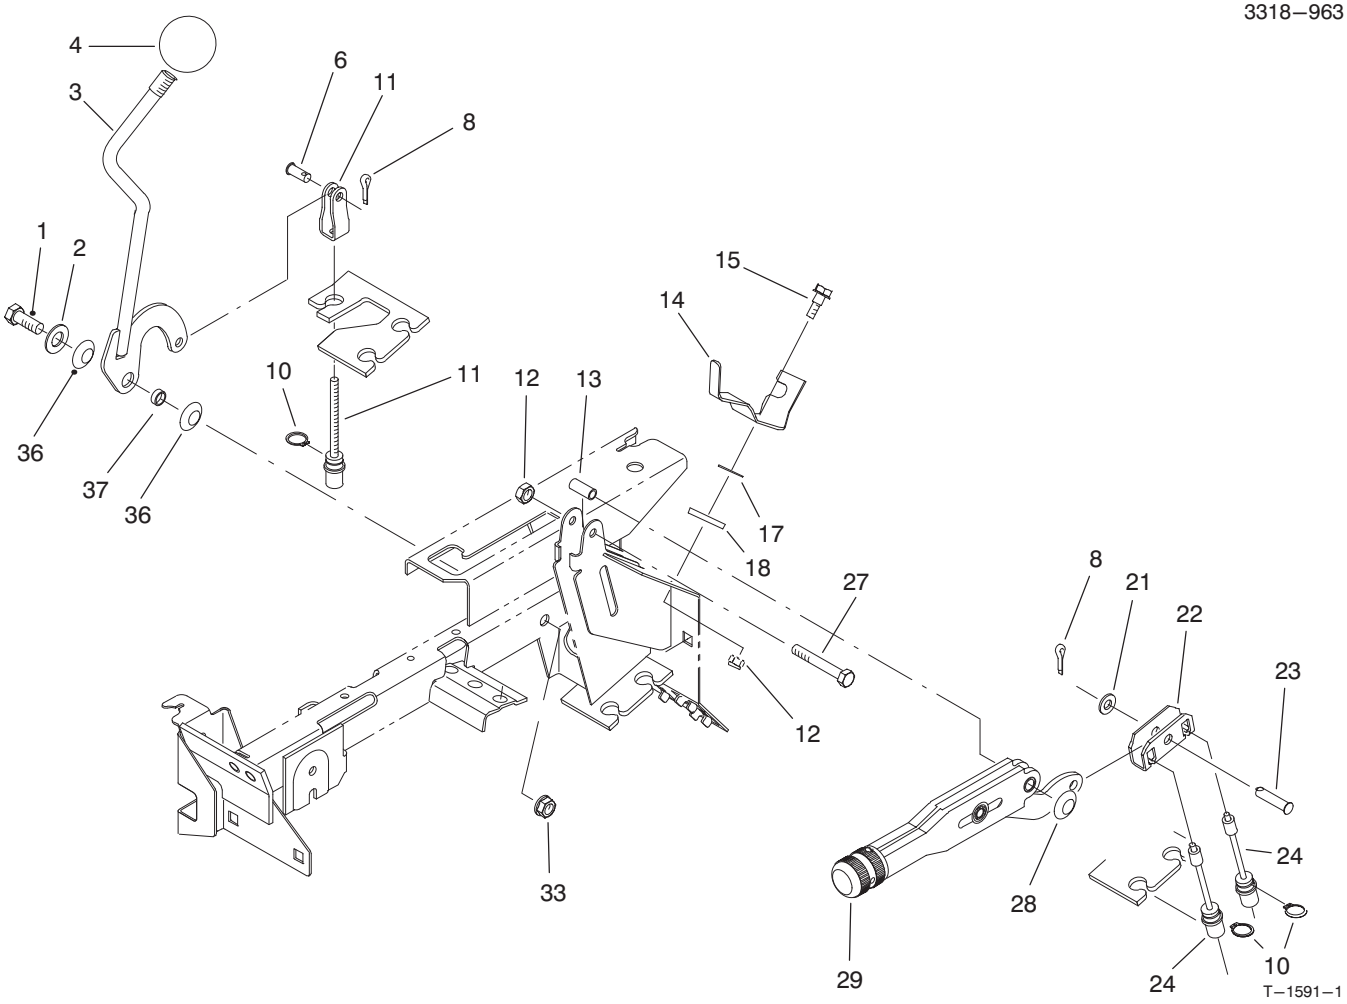

DIFFERENTIAL LOCK & PARKING BRAKE ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	323–6	Screw – Cap Hex. Hd.	1
2	49–9150	Washer – Flat	1
3	87–5030	Lever – Differential Lock	1
4	233–48	Knob	1
6	283–62	Pin – Clevis	1
8	3272–6	Pin – Cotter	2
10	32120–47	Ring – Retaining	3
11	87–4460	Differential Lock Cable	1
12	3296–42	Nut – Lock	2
13	87–4710	Spacer – Barking Brake	1
14	87–6640	Lever – Dump Stop	1
15	42–3560	Screw – Shoulder	1

Ref. No.	Part No.	Description	No. Used
17	3290–478	Washer – Belleville	1
18	71–5320	Washer – Flat	1
21	3256–23	Washer – Flat	1
22	87–3480	Plate – Brake Equalizer	1
23	94–3829	Pin – Clevis	1
24	87–8240	Cable – Parking Brake	2
27	321–9	Screw – Cap Hex. Hd.	1
28	3290–477	Washer – Curved	1
29	87–2710	Lever – Parking Brake	1
33	3296–39	Nut – Lock	1
36	3290–221	Washer – Spring	2
37	76–2290	Spacer	1

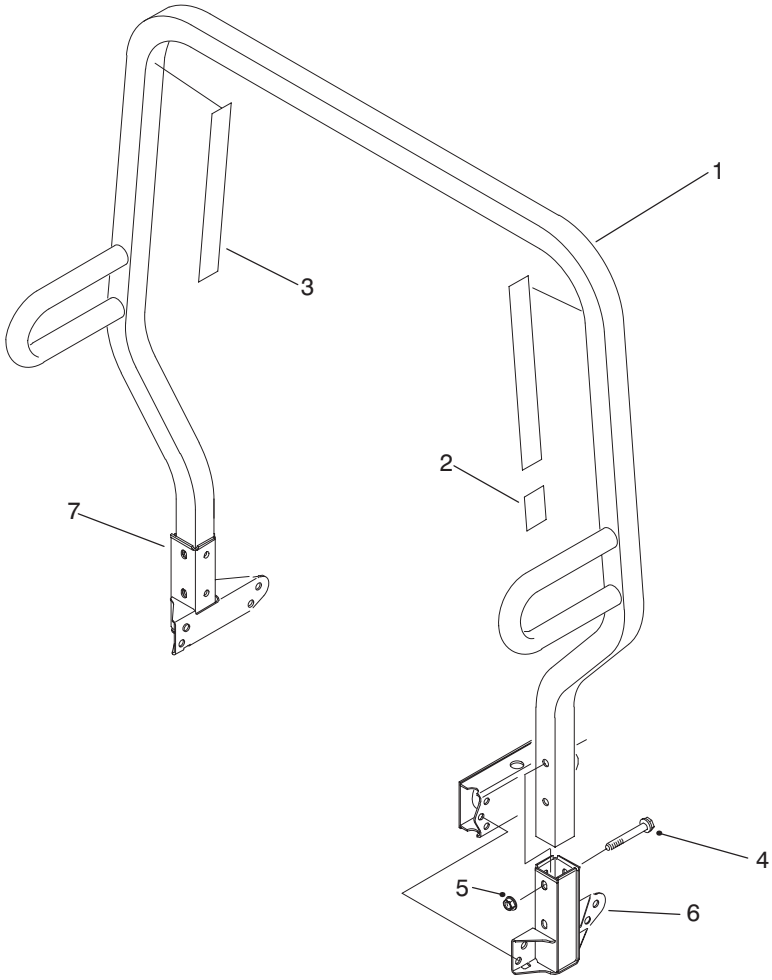


T–1592–1

ROLL OVER PROTECTION SYSTEM (R.O.P.S.) ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87–7090	Assembly – Frame, R.O.P.S. (Incl. Ref. #2 & 3)	1
2	87–5940	Decal – Rollover	1
2	93–9850	Decal – Rollover (Europe)	1
2	92–5388	Decal – Rollover (Japan)	1

Ref. No.	Part No.	Description	No. Used
3	87–5980	Decal – ROPS	2
3	93–9859	Decal – ROPS (Europe)	2
3	92–5381	Decal – ROPS (Japan)	2
4	3234–40	Screw – Hex. Flange Hd.	4
5	32128–23	Nut – Flange Lock	4
6	87–6950	Receiver – LH	1
7	87–6960	Receiver – RH	1

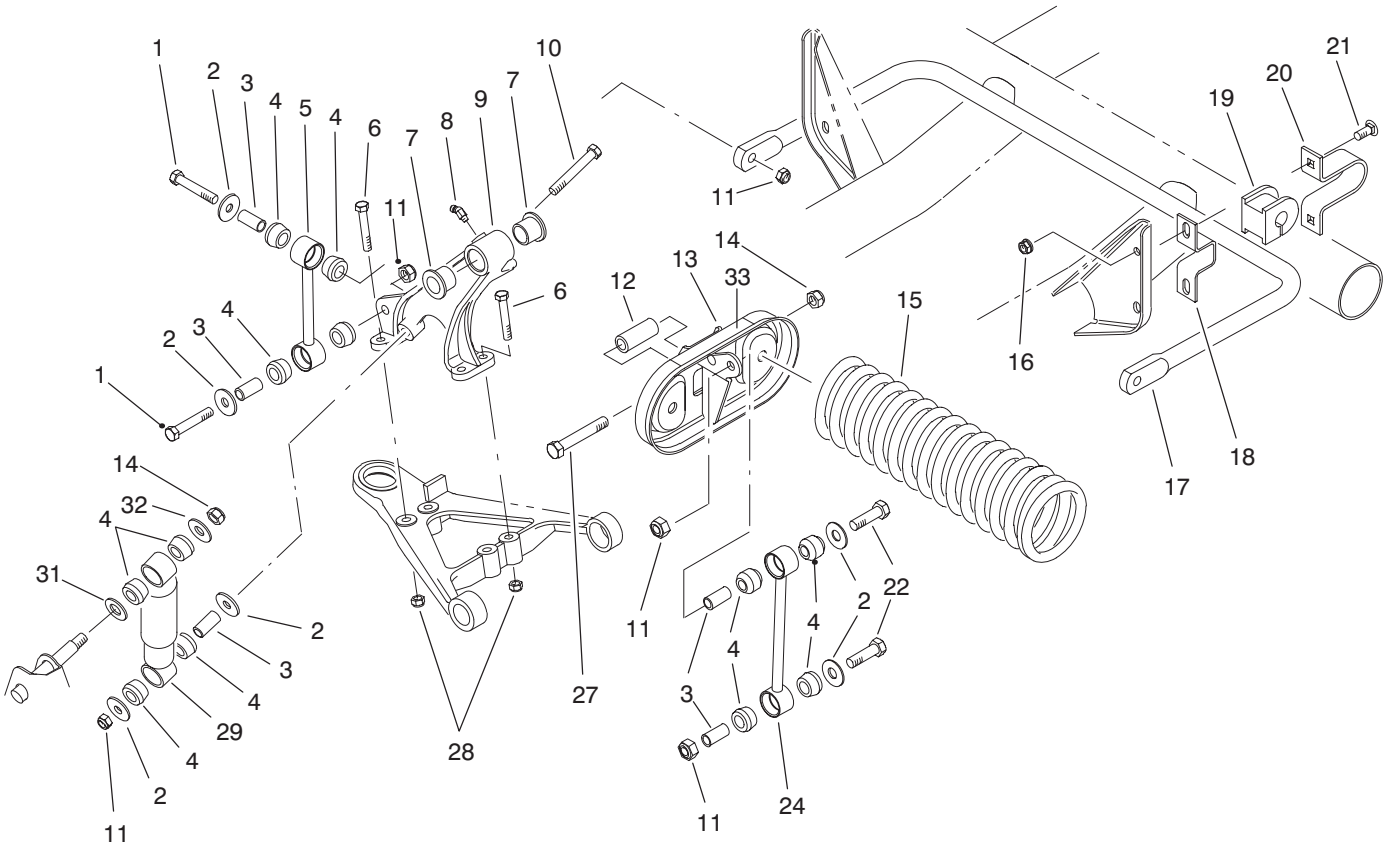

T–1593–1


FRONT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	324–10	Screw – Cap Hex. Hd.	4
2	87–5330	Washer	12
3	87–3600	Spacer	10
4	87–3920	Bushing – Rubber	24
5	87–3860	Link – Anti–Sway Bar	2
6	323–12	Screw – Cap Hex. Hd.	8
7	33–3090	Bushing – Flange	4
8	302–11	Fitting – Grease	1
9	87–0150	Tower – Control Arm RH	1
*	87–0160	Tower – Control Arm LH	1
10	324–13	Screw – Cap Hex. Hd.	2
11	3296–48	Nut – Lock	10
12	87–2500	Sleeve –Spring Pivot	2
13	87–7150	Assembly – Cradle, Spring (Incl. Ref. #33)	2
14	3296–23	Nut – Lock	4
15	87–0690	Spring – Compression	2

Ref. No.	Part No.	Description	No. Used
16	3290–357	Nut – Flange Lock	4
17	87–3850	Bar – Anti–Sway	1
18	87–3890	Bracket – Anti–Sway Bar	2
19	87–3910	Bushing – Anti–Sway Bar	2
20	87–4010	Clamp – Anti–Sway Bar	2
21	3231–3	Bolt – Carriage	4
22	324–9	Screw – Cap Hex. Hd.	4
24	87–2480	Link – Stabilizer	2
27	325–13	Screw – Cap Hex. Hd.	4
28	3296–39	Nut – Lock	8
29	87–3110	Absorber – Shock	2
31	3256–27	Washer – Flat	2
32	3256–6	Washer – Flat	2
33	44–0760	Decal – Warning	2
33	93–9879	Decal – Warning (Europe)	2
33	92–6493	Decal – Warning (Japan)	2

*Not Illustrated

3318–963

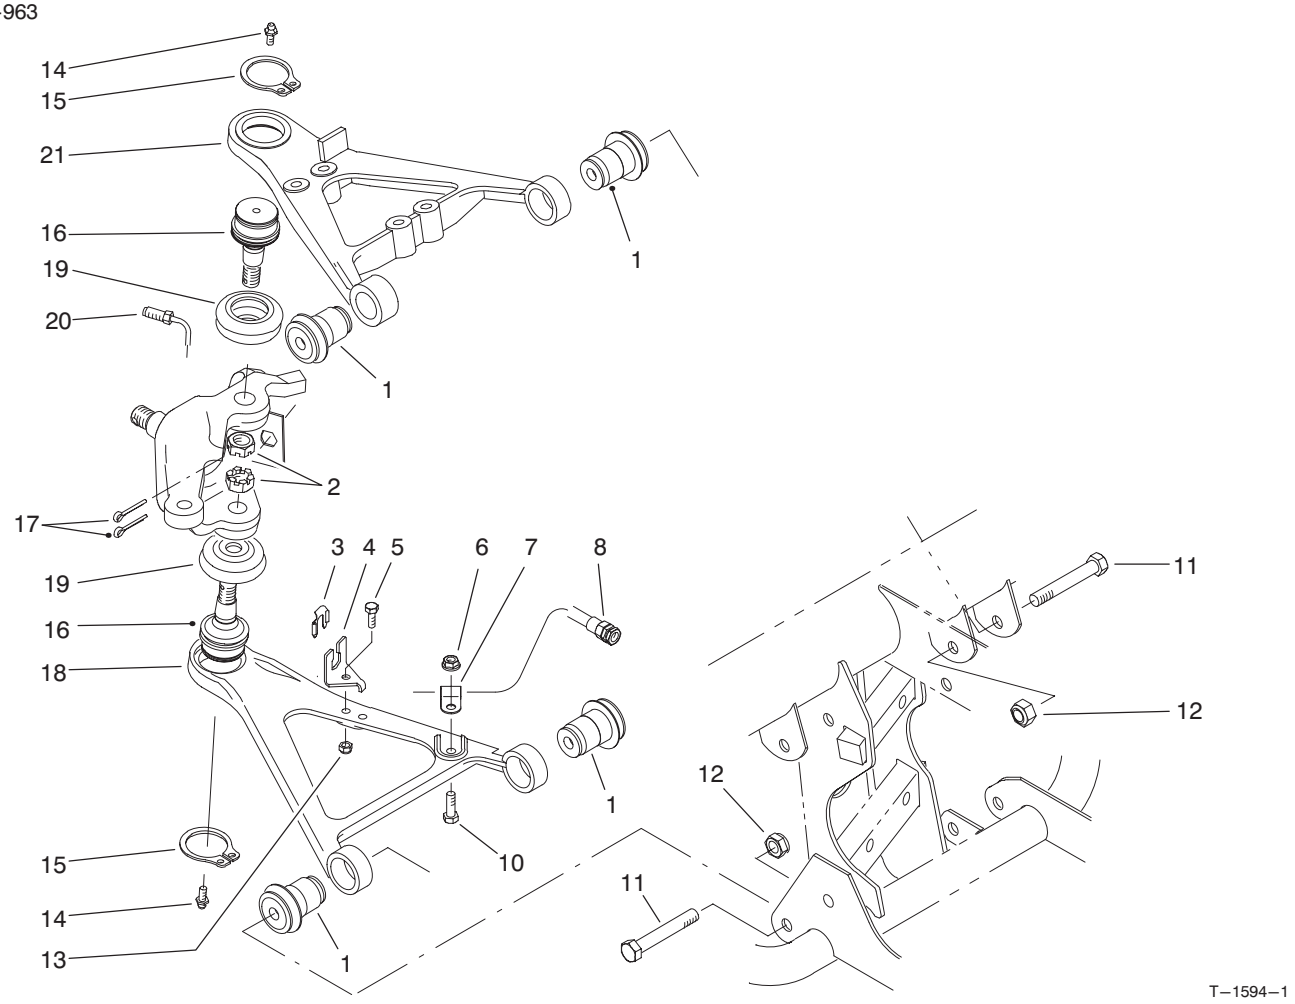


T–1594–1

FRONT SUSPENSION CONTROL ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87–1450	Bushing – Rubber	8
2	32136–2	Nut – Slotted	2
3	87–3580	Retainer – Brake Hose	2
4	87–2870	Bracket – Brake Hose	2
5	321–6	Screw – Cap Hex. Hd.	2
6	32128–20	Nut – Flange Lock	2
7	2412–10	Clamp – R	2
8	93–7123	Hose – Brake Front	2
10	322–5	Screw – Cap Hex. Hd.	2
11	325–13	Screw – Cap Hex. Hd	8
12	3296–23	Nut – Flange Lock	8
13	3296–42	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
14	302–5	Fitting – Grease	4
15	32151–104	Ring – Snap	4
16	87–1430	Joint – Ball	4
17	3272–12	Pin – Cotter	4
18	87–0210	Arm – Control Lower RH	1
*	87–0220	Arm – Control Lower LH	1
19	87–2420	Boot	4
20	87–2800	Tube – Brake RH	1
*	87–2790	Tube – Brake LH	1
21	93–7135	Arm – Control Upper RH	1
*	93–7133	Arm – Control Upper LH	1

*Not Illustrated

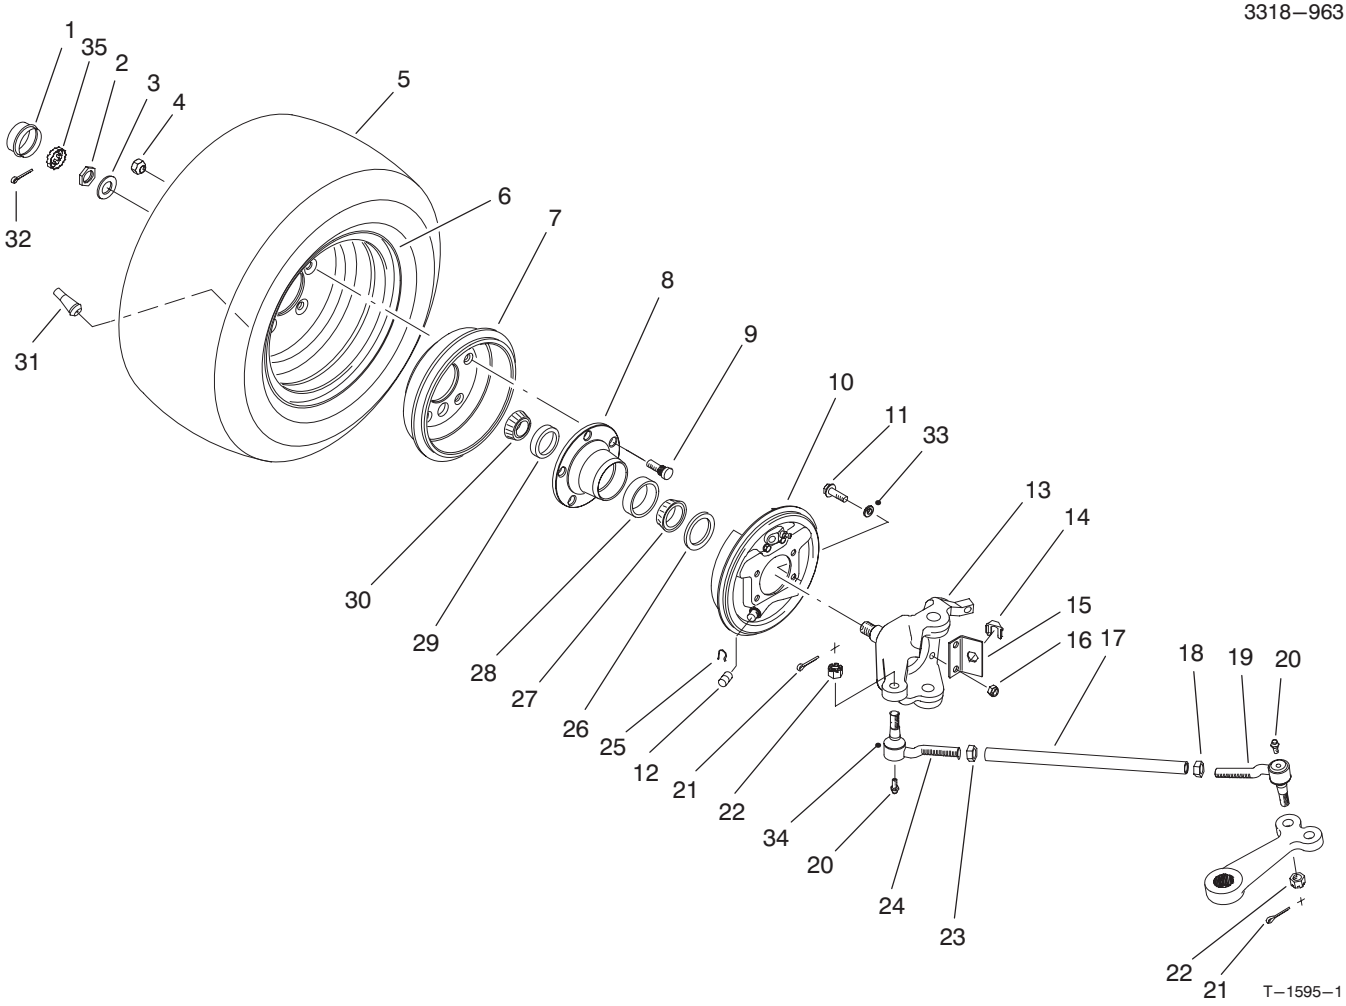


FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	241–119	Cap Dust	2
2	3220–7	Nut – Jam	2
3	93–0309	Washer – Tab	2
4	23–7270	Nut – Lug	10
5	94–5261	Tire	2
*	94–3809	Tire – Hard Surface (Optional)	2
6	87–5720	Rim	2
7	87–0270	Drum – Brake	2
8	87–5560	Hub – Wheel	2
9	87–8730	Stud – Drive	10
10	87–3010	Brake Assembly – RH	1
*	87–3020	Brake Assembly – LH	1
11	323–8	Screw – Hex. Flange Hd.	8
12	87–3450	Plug	2
13	87–9430	Spindle – RH	1
*	87–9440	Spindle – LH	1
14	87–3580	Retainer	2
15	87–2820	Bracket – Hose	2
16	3296–39	Nut – Lock	8
17	87–2410	Rod – Tie	2
18	3218–21	Nut – Jam	2
19	87–1470	Rod End Assy. – LH Thread (Incl. Ref. # 20–22 & 34)	2

Ref. No.	Part No.	Description	No. Used
*19	94–3804	Rod End Assy. LH Thread (Incl. Ref. #21, 22 & 34) Heavy Duty (Optional)	2
20	302–5	Fitting – Grease	4
21	3272–12	Pin – Cotter	4
22	32136–3	Nut – Slotted	4
23	3220–11	Nut – Jam	2
24	87–1480	Rod End Assy. – RH Thread (Incl. Ref. #20–22 & 34)	2
*	94–3807	Rod End Assy. RH Thread (Incl. Ref. #21, 22 & 34) Heavy Duty (Optional)	2
25	87–3310	Clip – Brake Cable	2
26	87–3590	Seal – Bearing	2
27	254–106	Cone – Bearing	2
28	254–107	Cup – Bearing	2
29	254–72	Cup – Bearing	2
30	254–94	Cone – Bearing	2
31	232–27	Stem – Valve	2
32	3272–12	Pin – Cotter	2
33	3253–21	Washer – Lock	8
34		Seal – Rod End	4
35	93–0307	Nut – Retainer	2
*	87–5340	Seal Kit – Tie Rod End (Incl. Ref. #20–22 & 34)	4

*Not Illustrated

3318–963

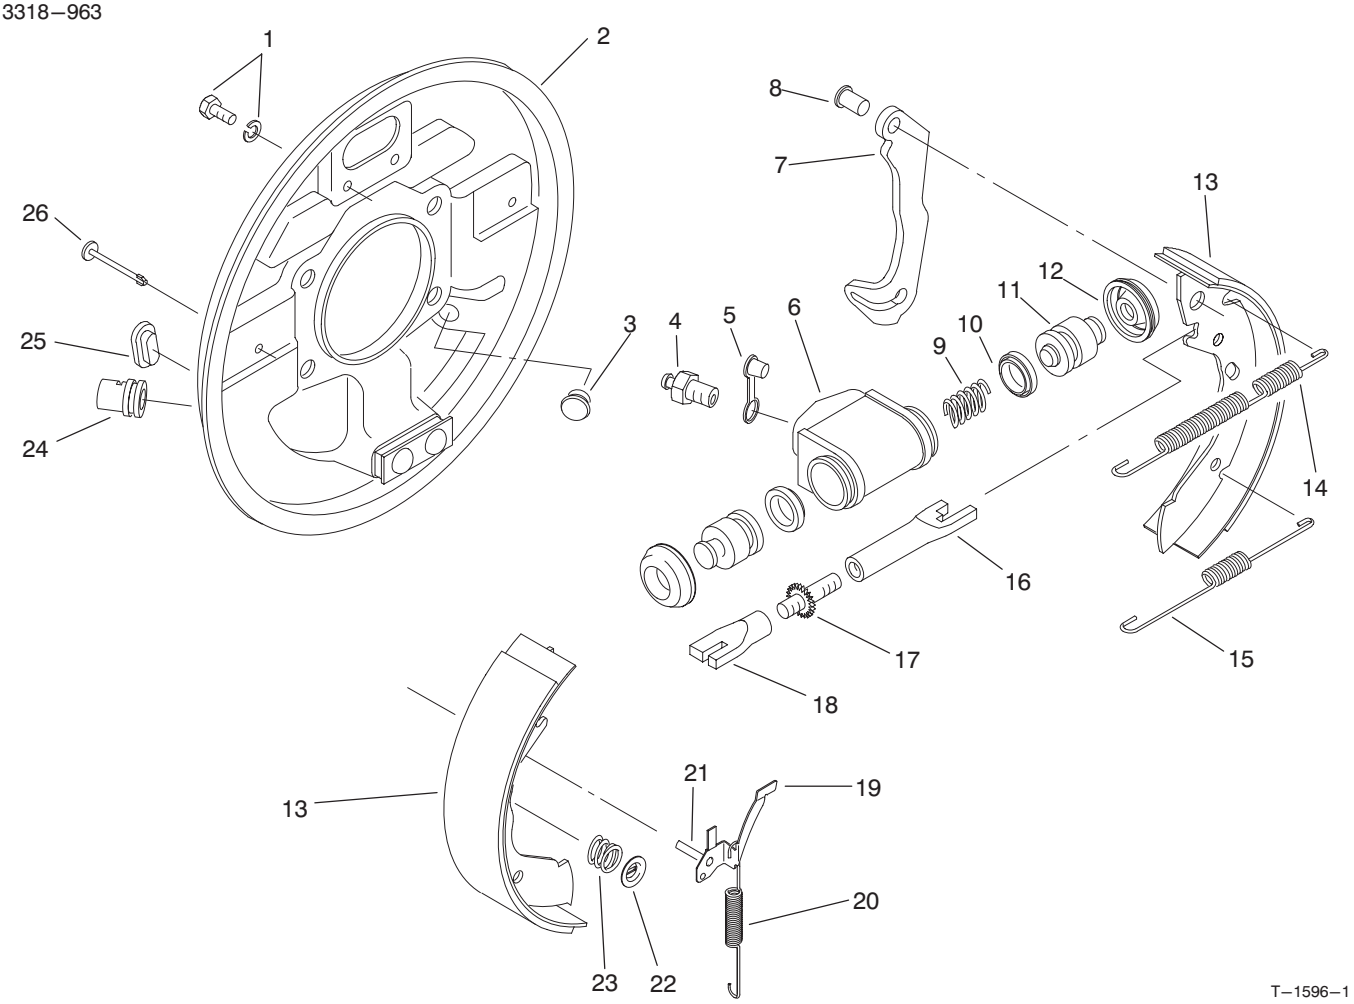


T–1596–1

FRONT BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–4135	Set Bolt	2
2	92–4115	Backplate Assembly LH (Incl. Ref. #24)	1
*	92–4116	Backplate Assembly RH (Incl. Ref. #24)	1
3	92–4125	Plug	1
4	92–4113	Screw – Bleed	1
5	92–4114	Cap – Bleed Screw	1
6		Body	1
7		Lever – Operating LH/RH	1
8		Pin	1
9		Spring	1
10		Seal – 'L' Type	2
11		Piston	2
12		Cover – Dust	2
13	92–4120	Shoe & Lining Set (Incl. Ref. #7 & 8)	1
14	92–4126	Spring – Shoe, Upper LH	1
*	92–4127	Spring – Shoe, Upper RH	1
15	92–4128	Spring – Shoe, Lower	1
16		Pushrod – Female LH	1
*		Pushrod – Female RH	1
17		Bolt – Adjuster	1
18		Sleeve – Adjuster	1

Ref. No.	Part No.	Description	No. Used
19	92–4123	Assembly – Pawl LH (Incl. Ref. #21)	1
*	92–4124	Assembly – Pawl RH (Incl. Ref. #21)	1
20	92–4129	Spring – Adjuster, LH	1
*	92–4130	Spring – Adjuster, RH	1
21		Pin – Pawl	1
22	92–4131	Washer – Hold Down	2
23	92–4132	Spring – Hold Down	2
24		Guide – Pipe	1
25	92–4134	Plug – Inspection	1
26	92–4133	Pin – Hold Down	2
*	92–4121	Assembly – Adjuster LH (Inc. Ref. #16–18)	1
*	92–4122	Assembly – Adjuster RH (Incl. Ref. #16–18)	1
*	92–4117	Assy. – Wheel Cylinder LH (Incl. Ref. #4–6 & 9–12)	1
*	92–4118	Assy. – Wheel Cylinder RH (Incl. Ref. #4–6 & 9–12)	1
*	92–4119	Kit – Seal (Incl. Ref. #10 & 12)	1
*	87–3010	Front Brake Assembly – RH (Complete)	1
*	87–3020	Front Brake Assembly – LH (Complete)	1

*Not Illustrated

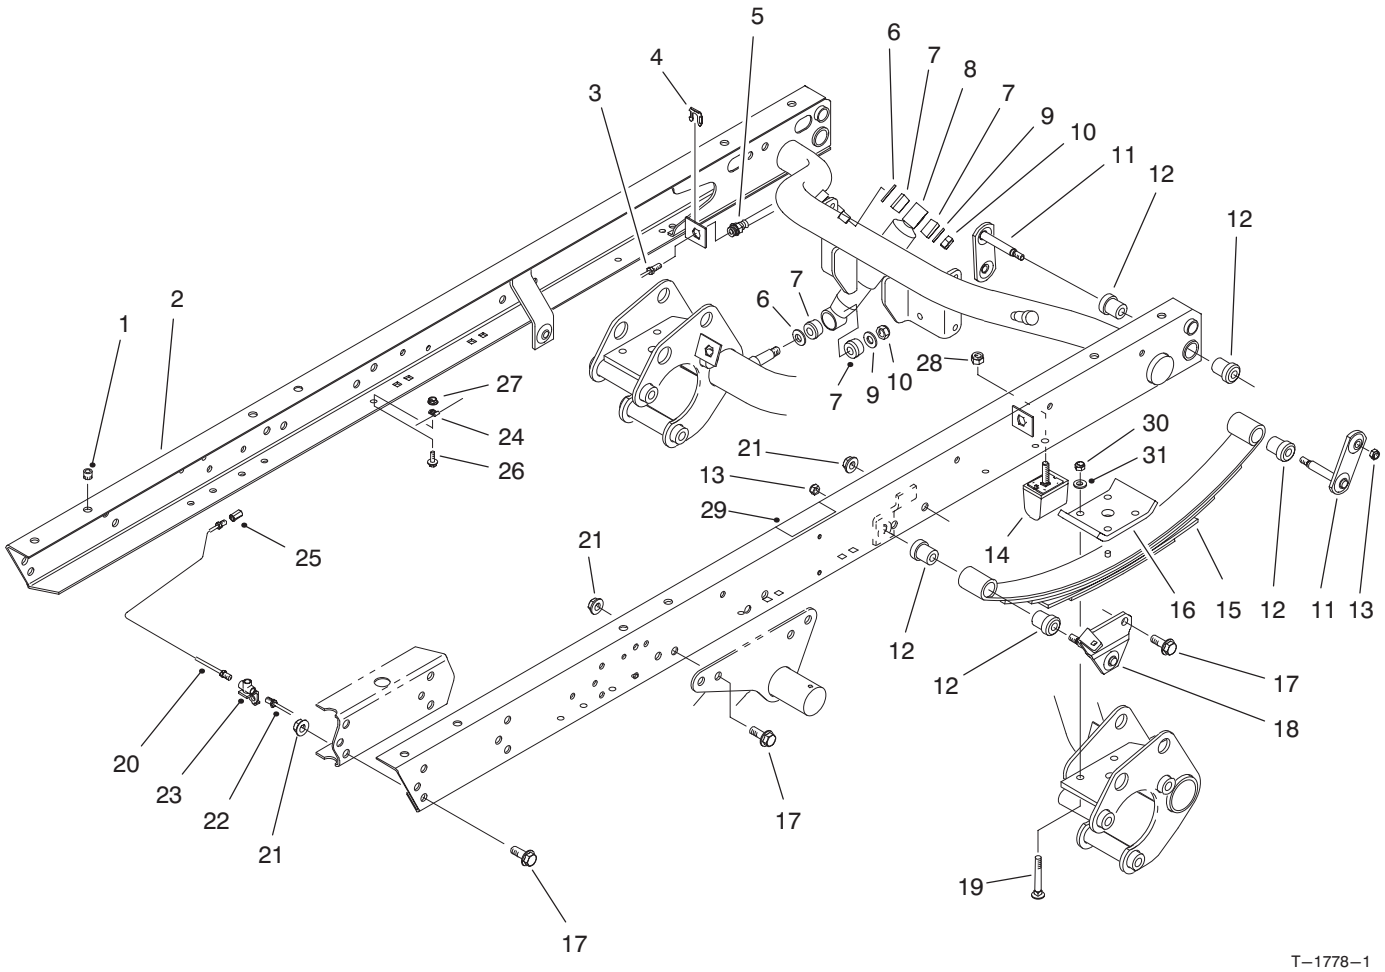


T–1778–1

REAR FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32148–9	Insert – Threaded	8
2	87–8440	Assembly – Rear Frame (Incl. Ref. #1 & 32)	1
3	94–3846	Tube – Brake RH	1
*	94–3844	Tube – Brake LH	1
4	87–3580	Retainer	2
5	87–4100	Hose – Brake	2
6	3256–27	Washer – Flat	4
7	87–3920	Bushing – Rubber	8
8	87–3110	Shock Absorber	2
9	3256–6	Washer – Flat	4
10	3296–23	Nut – Lock	4
11	87–3980	Shackle – Spring	4
12	87–4760	Bushing	12
13	3296–39	Nut – Lock	6
14	87–3470	Bumper – Spring	2
15	87–1490	Spring – Leaf	2
16	87–7470	Plate – Clamp	2

Ref. No.	Part No.	Description	No. Used
17	3234–38	Screw – Hex. Flange Hd.	24
18	87–3960	Mount – Spring LH	1
*	87–3940	Mount – Spring RH	1
19	3232–17	Bolt – Carriage	8
20	94–3845	Tube – Brake RH	1
21	32128–23	Nut – Flange Lock	24
22	94–3843	Tube – Brake LH	1
23	87–3560	Tee – Brake Tube	1
24	2412–149	Clamp – Tube	4
25	87–3570	Union – Brake Line	2
26	321–4	Screw – Hex. Flange Hd.	4
27	32128–33	Nut – Flange Lock	4
28	48–9520	Nut – Lock	2
29	66–6840	Decal – Caution	2
29	93–8071	Decal – Caution (Europe)	2
29	92–6479	Decal – Caution (Japan)	2
30	3296–76	Nut – Lock	8
31	87–7480	Washer – Flat	8

*Not Illustrated

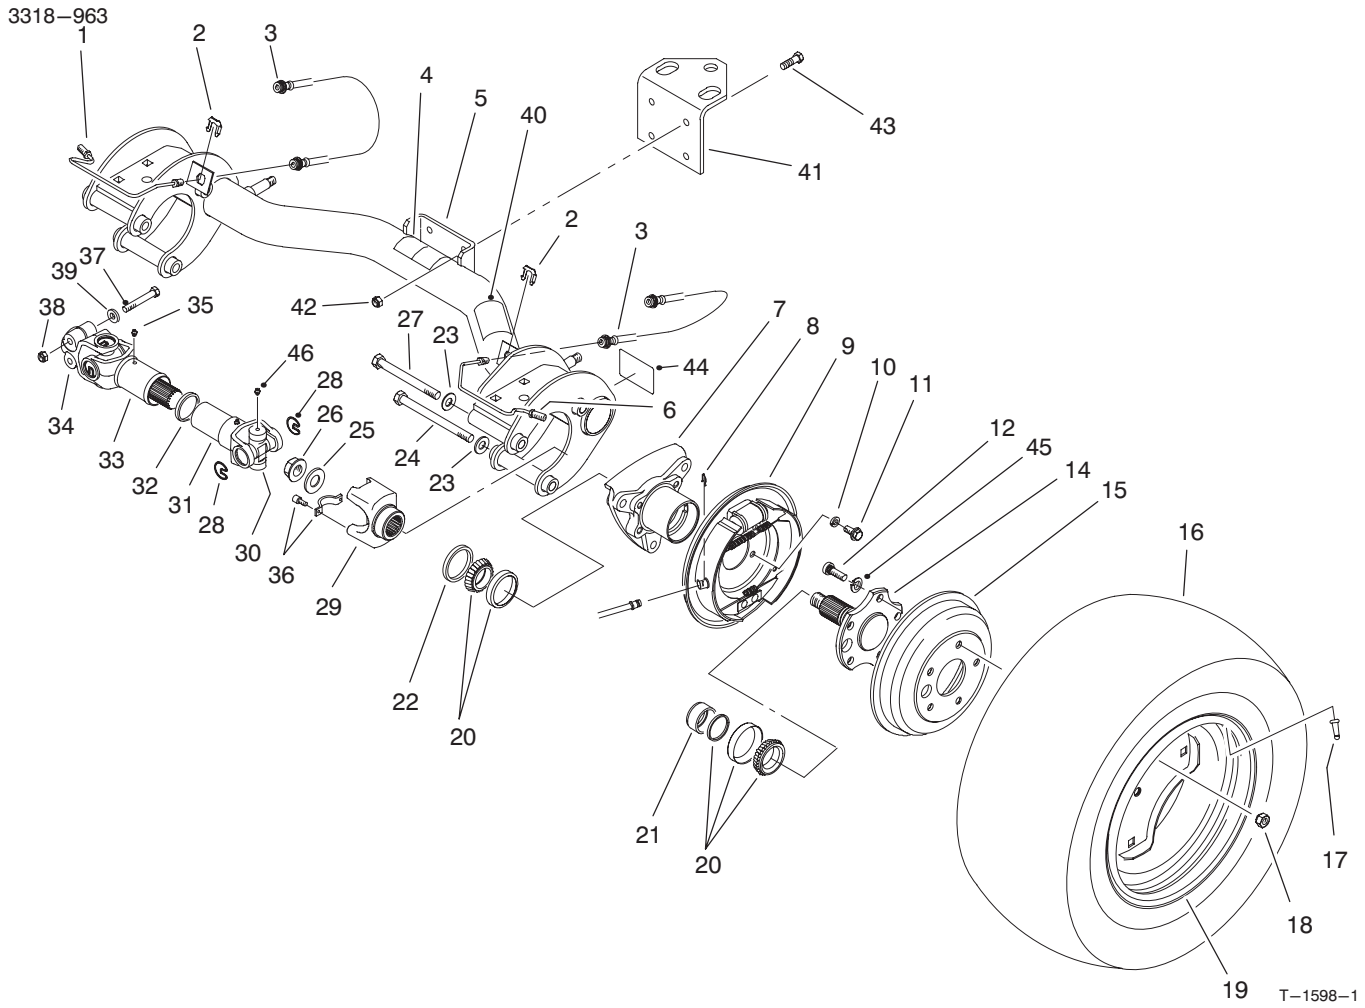


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	87–4090	Tube – Brake RH	1
2	87–3580	Retainer – Brake Hose	2
3	87–4100	Hose – Brake	2
4	87–6060	Decal – ATF	1
4	93–9442	Decal – ATF (Europe)	1
4	92–5473	Decal – ATF (Japan)	1
5	87–7110	Assembly – Axle, Rear (Incl. Ref. #4, 40 & 44)	1
6	87–4080	Tube – Brake LH	1
7	87–2240	Housing – Axle	2
8	87–3310	Clip – Brake Cable	2
9	93–7126	Brake Assembly LH	1
*	93–7125	Brake Assembly RH	1
10	3253–21	Washer – Lock	8
11	323–6	Screw – Cap Hex. Hd.	8
12	87–2080	Stud – Drive	10
14	93–7090	Stub – Axle	2
15	93–7128	Drum – Brake	2
16	87–6740	Tire – Rear 24”	2
*	87–3290	Tire – Rear 23” (Optional)	2
17	232–27	Valve – Stem	2
18	23–7270	Nut – Lug	10
19	87–6750	Rim – Rear 24”	2
*	87–3000	Rim – Rear 23” (Optional)	2

Ref. No.	Part No.	Description	No. Used
20	87–1970	Bearing Matched Set	2
21	87–4060	Spacer – Bearing	2
22	87–3590	Seal – Bearing	2
23	87–7270	Washer – Flat	6
24	325–20	Screw – Cap Hex. Hd.	5
25	87–3060	Washer – Flat	2
26	32128–53	Nut – Flange Lock	2
27	325–19	Screw – Cap Hex. Hd.	1
28	92–4188	Ring – Snap	12
29	92–4190	Yoke – End	2
30	92–4187	Cross & Bearing Kit	4
31	92–4182	Yoke & Hub	2
32	92–4180	Seal	2
33	92–4179	Yoke, Shaft & Seal Tube	2
34	92–4177	Yoke – Double Clamp	2
35	302–5	Fitting – Grease	4
36	92–4189	Strap & Bolt Kit	2
37	87–8700	Screw – Cap Hex. Hd.	4
38	32128–36	Nut – Lock	4
39	80–6990	Washer	4
40	87–5990	Decal – PTO	1
40	93–9862	Decal – PTO (Europe)	1
40	92–5367	Decal – PTO (Japan)	1
41	92–5951	Angle – Hitch	1
42	3296–39	Nut – Lock	4
43	323–7	Screw – Cap Hex. Hd.	4

*Not Illustrated

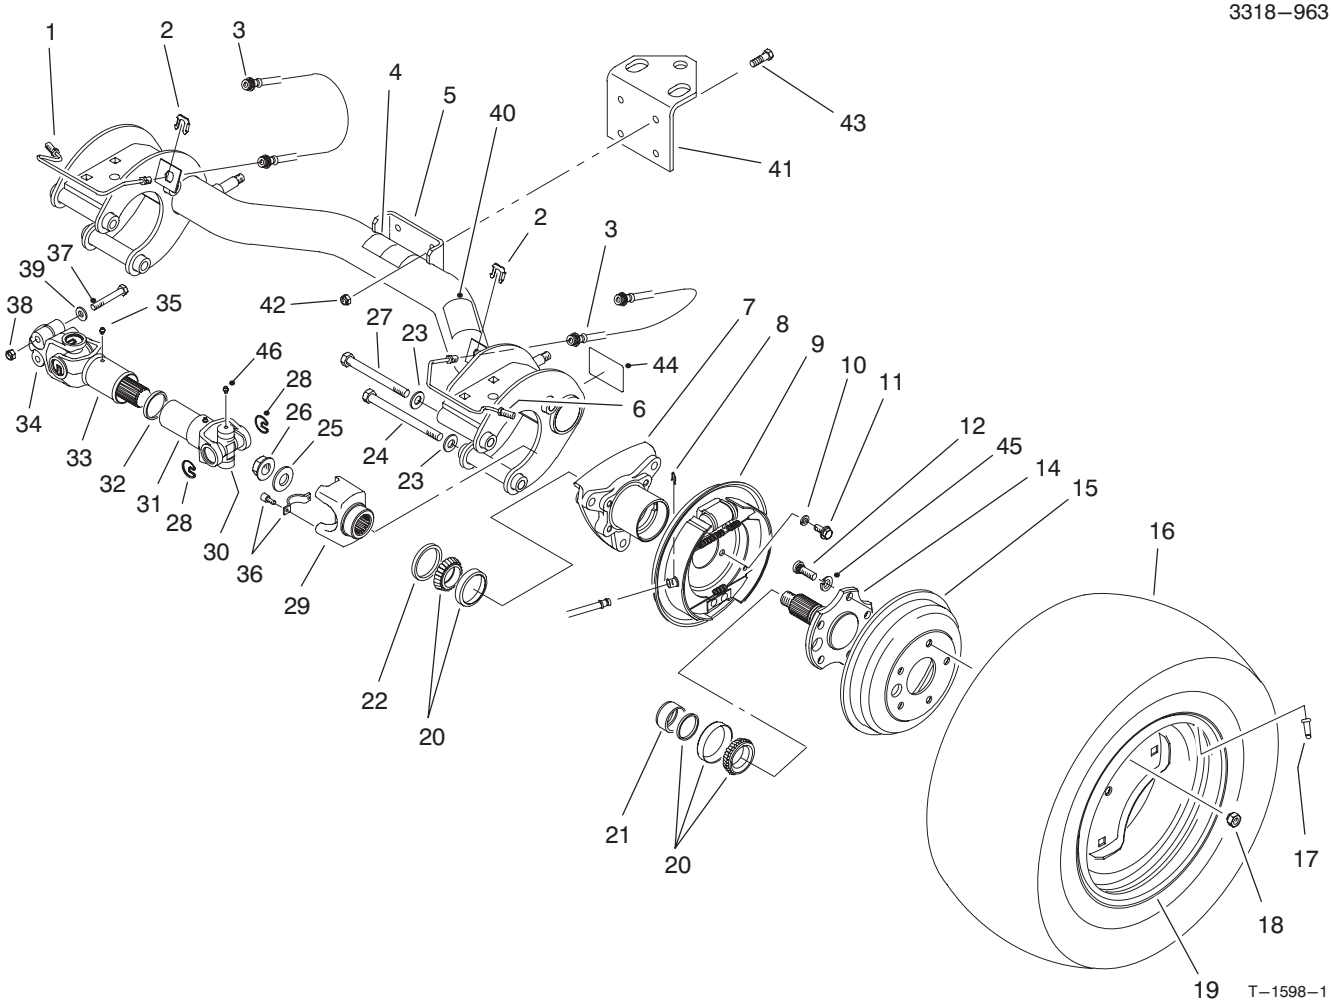


REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
44	87–9080	Decal – Grease	2
44	93–9449	Decal – Grease (Europe)	2
44	92–6444	Decal – Grease (Japan)	2
45	3253–6	Washer – Lock	10
46	302–58	Fitting – Grease	16

Ref. No.	Part No.	Description	No. Used
*	94–5224	Driveshaft Assembly (Incl. Ref. #28, 30–35 & 46)	2
*	87–5370	Rear Tire & Wheel Assembly (24”)	2
*	87–6370	Rear Tire & Wheel Assembly (Optional 23”)	2

*Not Illustrated

3318–963

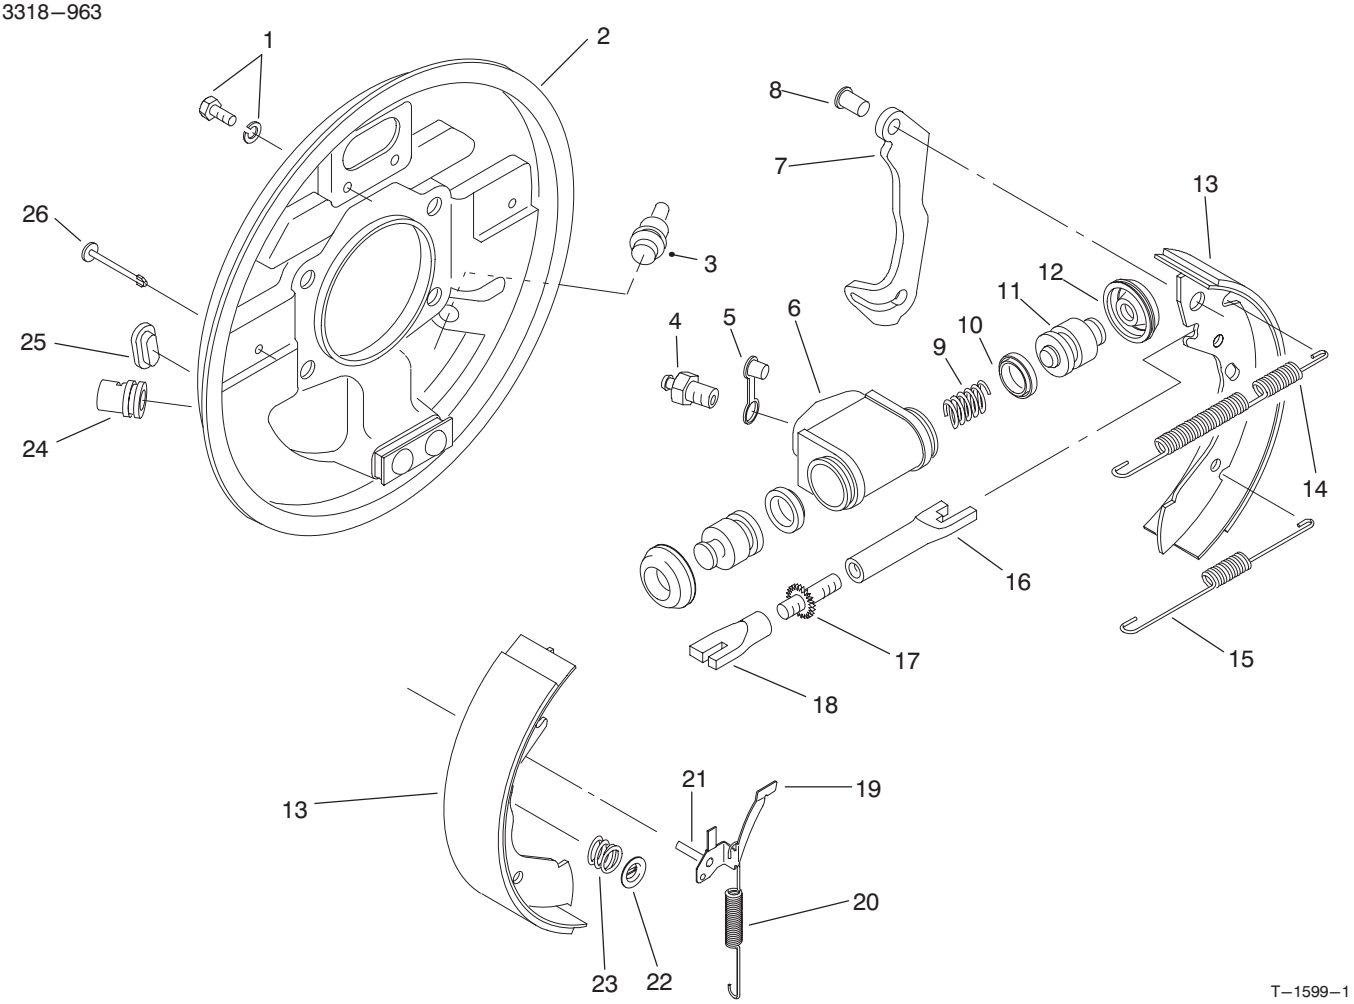


T–1599–1

REAR BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–4135	Set Bolt	2
2	92–4136	Backplate Assembly LH (Incl. Ref. #24)	1
*	92–4100	Backplate Assembly RH (Incl. Ref. #24)	1
3	92–4146	Plug	1
4	92–4137	Screw – Bleed	1
5	92–4114	Cap – Bleed Screw	1
6		Body	1
7		Lever – Operating LH/RH	1
8		Pin	1
9		Spring	1
10		Seal – 'L' Type	2
11		Piston	2
12		Cover – Dust	2
13	92–4143	Shoe & Lining Set (Incl. Ref. #7 & 8)	1
14	92–4147	Spring – Shoe, Upper LH	1
*	92–4148	Spring – Shoe, Upper RH	1
15	92–4149	Spring – Shoe, Lower	1
16		Pushrod – Female LH	1
*		Pushrod – Female RH	1
17		Bolt – Adjuster	1
18		Sleeve – Adjuster	1

Ref. No.	Part No.	Description	No. Used
19	92–4123	Assembly – Pawl LH (Incl. Ref. #21)	1
*	92–4124	Assembly – Pawl RH (Incl. Ref. #21)	1
20	92–4150	Spring – Adjuster, LH	1
*	92–4151	Spring – Adjuster, RH	1
21		Pin – Pawl	1
22	92–4131	Washer – Hold Down	2
23	92–4152	Spring – Hold Down	2
24		Guide – Pipe	1
25	92–4134	Plug – Inspection	1
26	92–4133	Pin – Hold Down	2
*	92–4144	Assembly – Adjuster LH (Inc. Ref. #16–18)	1
*	92–4145	Assembly – Adjuster RH (Incl. Ref. #16–18)	1
*	92–4140	Assy. – Wheel Cylinder LH (Incl. Ref. #4–6 & 9–12)	1
*	92–4141	Assy. – Wheel Cylinder RH (Incl. Ref. #4–6 & 9–12)	1
*	92–4142	Seal Kit (Incl. Ref. #10 & 12)	1
*	93–7125	Rear Brake Assembly – RH (Complete)	1
*	93–7126	Rear Brake Assembly – LH (Complete)	1

*Not Illustrated

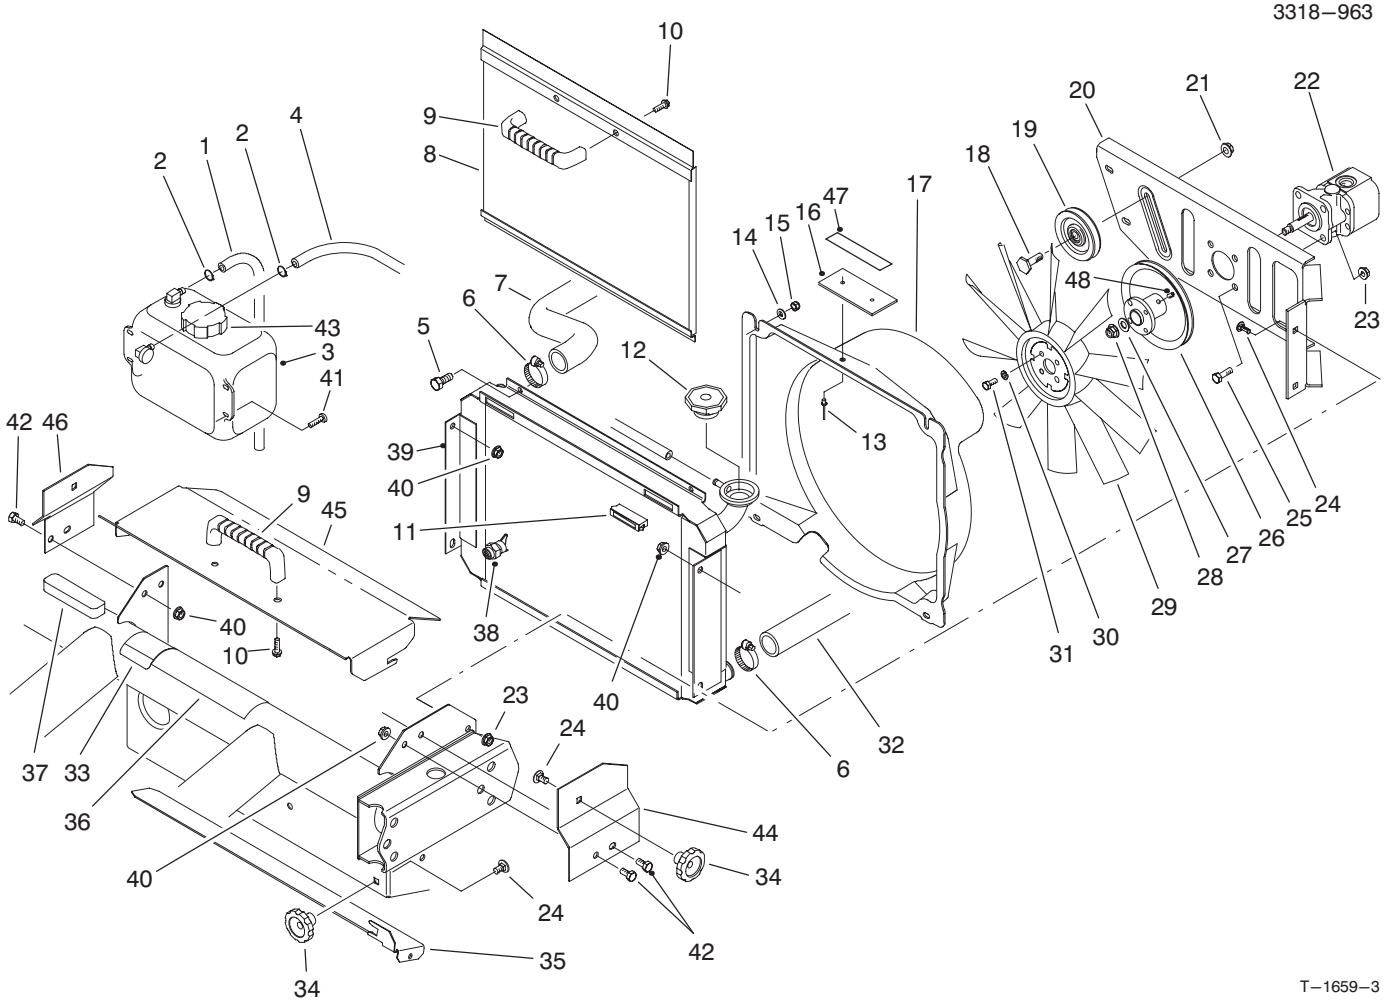


T–1659–3

RADIATOR & HYDRAULIC PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–3381	Tube – Overflow	2
2	92–2379	Clamp – Hose	2
3	87–3710	Overflow Reservoir Assembly (Incl. Ref. #43)	1
4	71–3383	Hose – Overflow	1
5	321–4	Screw – Cap Hex. Hd.	4
6	2412–34	Clamp – Hose	2
7	87–7330	Hose – Radiator Upper	1
8	93–7103	Screen – Radiator	1
9	65–5100	Handle	2
10	46–8091	Screw – Hex. Flange Hd.	4
11	58–4250	Magnet	2
12	66–3240	Cap – Radiator	1
13	3290–271	Rivet – Pop	2
14	3256–22	Washer – Flat	4
15	3296–42	Nut – Lock	4
16	76–8750	Plate – Warning	1
17	92–4198	Fan Shroud Assembly (Incl. Ref. #13 & 16)	1
18	32141–86	Screw – Leveler	1
19	63–8140	Pulley	1
20	93–7088	Support – Fan	1
21	3290–357	Nut – Flange Lock	1
22	87–5700	Hydraulic Pump Assembly	1
23	3296–29	Nut – Flange Lock	8
24	3230–23	Bolt – Carriage	7
25	322–5	Screw – Cap Hex. Hd.	4
26	94–5227	Pulley	1

Ref. No.	Part No.	Description	No. Used
27	3256–45	Washer – Flat	1
28	3296–5	Nut – Flange Lock	1
29	84–1880	Fan	1
30	3253–3	Washer – Lock	4
31	321–3	Screw – Cap Hex. Hd.	4
32	87–4150	Hose – Radiator Lower	1
33	83–9150	Decal – Fluid	1
33	93–7275	Decal – Fluid (Europe)	1
33	84–6660	Decal – Fluid (Japan)	1
34	19–4050	Knob	3
35	87–9300	Door – Clean Out	1
36	87–9420	Decal – Caution	1
36	93–9447	Decal – Caution (Europe)	1
36	93–3766	Decal – Caution (Japan)	1
37	87–9810	Foam – Overflow Tank	1
38	92–4111	Petcock – Radiator	1
39	93–7051	Radiator Assembly (Incl. Ref. #38)	1
40	32128–20	Nut – Lock	6
41	3250–20	Screw – Round Hd.	4
42	322–2	Screw – Cap Hex. Hd.	6
43	87–7050	Cap – Reservoir	1
44	93–8938	Bracket – Cover Mount LH	1
45	93–8940	Cover – Radiator	1
46	93–8939	Bracket – Cover Mount RH	1
47	93–6681	Decal – Warning (Europe)	1
47	92–7240	Decal – Warning (Japan)	1
48	3245–31	Screw – Set	1

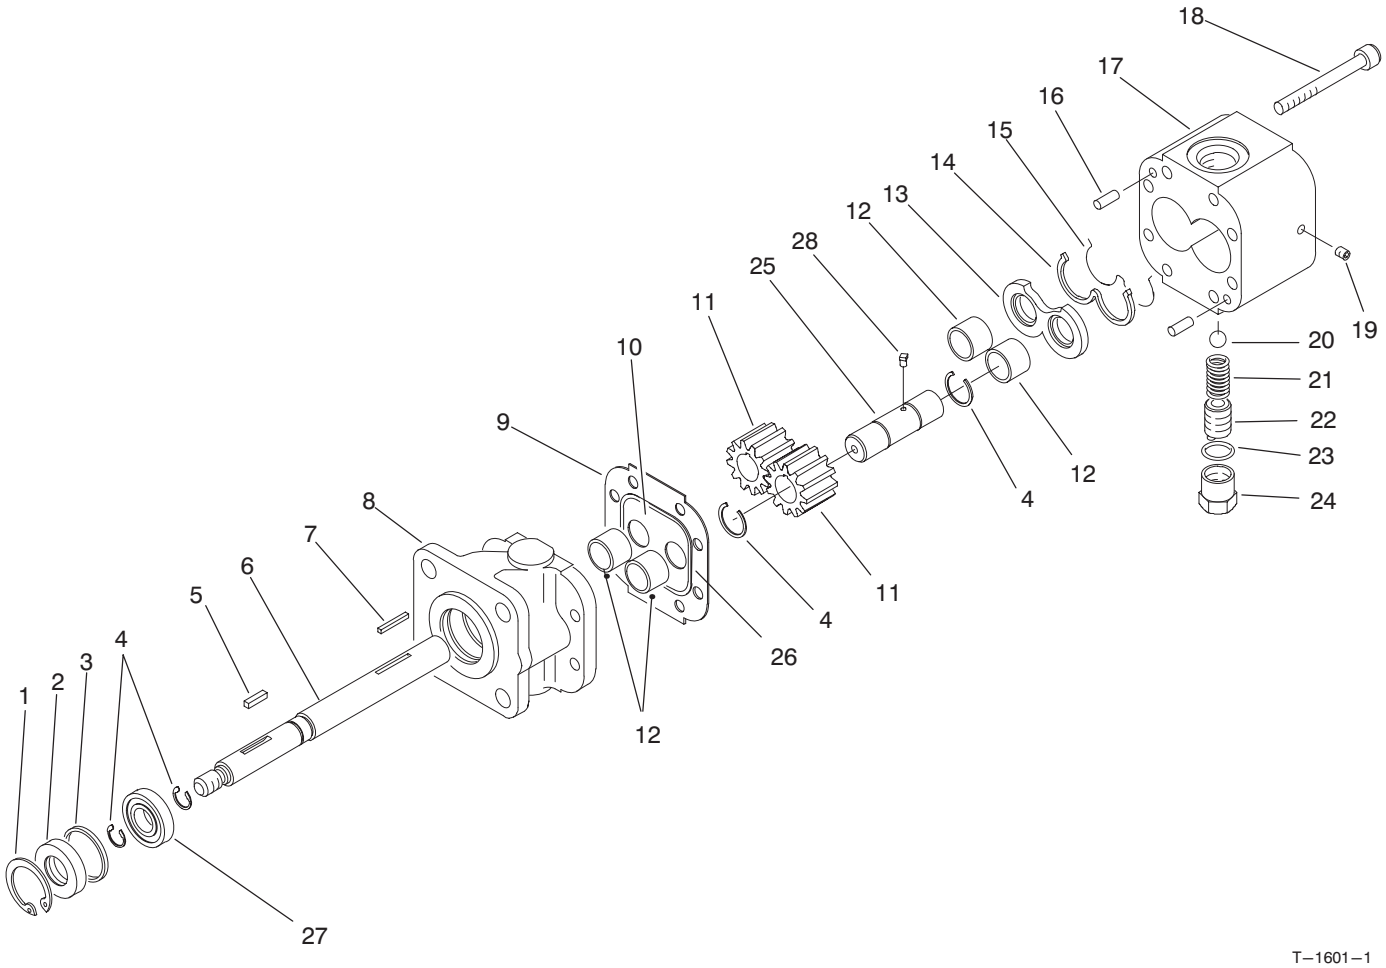


T–1601–1

HYDRAULIC PUMP ASSEMBLY NO. 87–5700

Ref. No.	Part No.	Description	No. Used
1	32151–41	Ring – Retaining	1
2	92–2195	Seal – Oil	1
3	92–2186	Spacer	1
4	92–2178	Ring – Crescent	4
5	92–2179	Key – Square	1
6	92–2189	Shaft – Drive	1
7	92–2177	Pin – Shear	1
†8		Stator	1
9	92–2182	Plate – Seal	1
10	92–2183	Plate – Wear	1
11	92–2175	Gear	2
12	92–2192	Bearing	4
13	92–2181	Plate – Pressure	1
14	92–2197	Seal – Back Up	1

Ref. No.	Part No.	Description	No. Used
15	92–2196	Seal – Pressure Plate	1
16	92–2176	Pin – Dowel	2
17	92–2187	Housing – Gear, End	1
18	92–2173	Screw – Cap Socket Head	8
19	92–2185	Plug	1
20	92–2193	Ball	1
21	92–2194	Spring	1
22	92–2174	Screw – Adjusting	1
23	92–2180	Gasket – Copper	1
24	92–2184	Cap – Relief Valve	1
25	92–2190	Shaft – Idler	1
26	92–2198	Seal	1
27	92–2191	Bearing	1
28	92–2199	Key – Ball	1

† Not Serviced Separately.

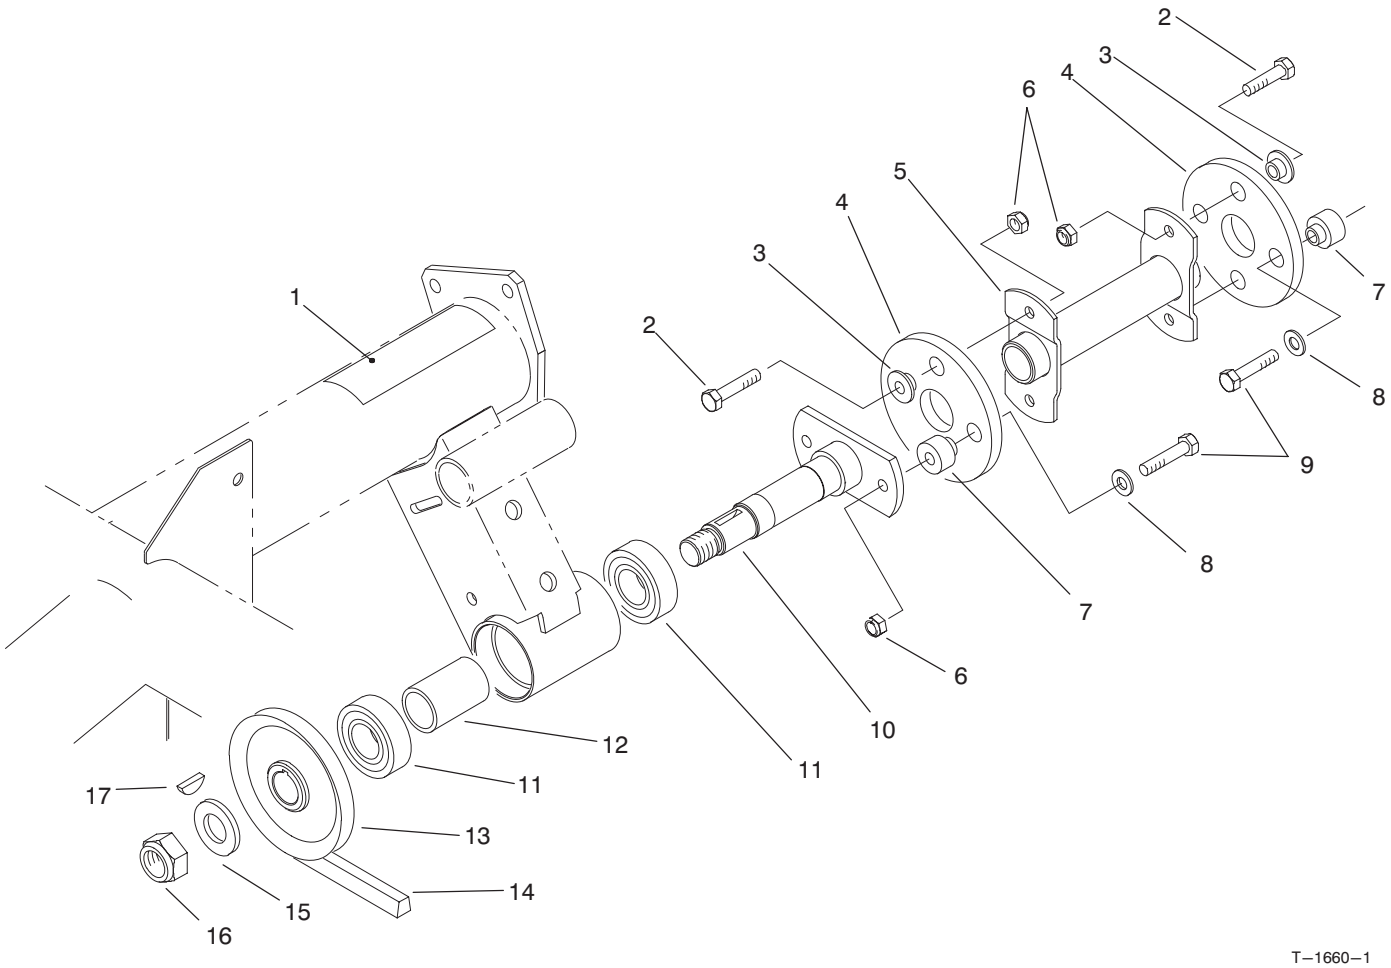


T–1660–1

HYDRAULIC PUMP DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	80–8040	Decal – Caution	1
1	93–7814	Decal – Caution (Europe)	1
1	83–6030	Decal – Caution (Japan)	1
2	322–5	Screw – Cap Hex. Hd.	4
3	27–6600	Spacer – Thin	4
4	44–2230	Disc – Rubber	2
5	87–4120	Driveshaft	1
6	3296–29	Nut – Lock	6
7	27–6590	Spacer – Thick	4
8	3256–3	Washer – Flat	4


Ref. No.	Part No.	Description	No. Used
9	322–7	Screw – Cap Hex. Hd.	4
10	87–2720	Driveshaft	1
11	251–82	Bearing – Ball	2
12	87–2750	Spacer – Bearing	1
13	87–3370	Pulley	1
14	87–3210	Belt – V	1
15	3256–28	Washer – Flat	1
16	3296–15	Nut – Lock	1
17	3257–7	Key – Woodruff	1

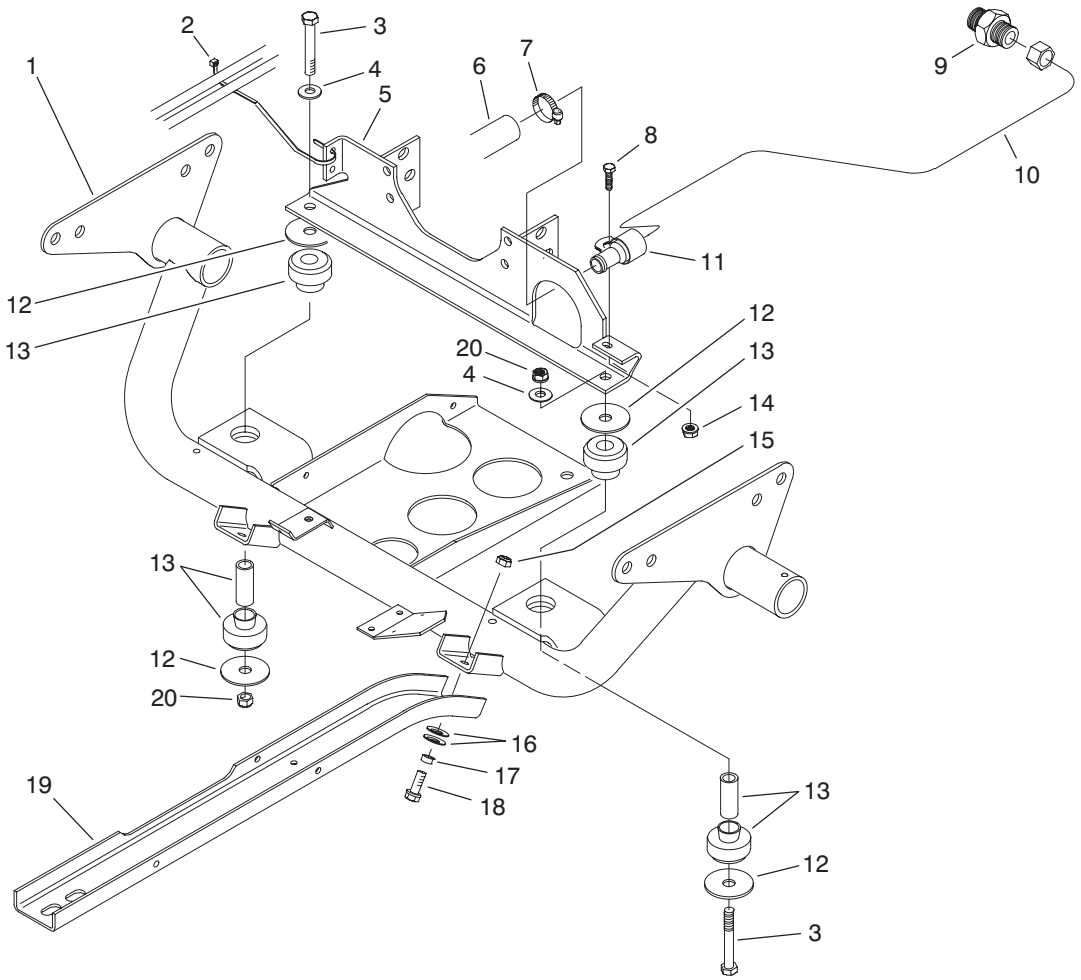

ENGINE FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–7099	Frame – Engine	1
2	3290–378	Tie – Cable	1
3	324–12	Screw – Cap Hex. Hd.	2
4	3256–25	Washer – Flat	2
5	93–7100	Mount – Engine	1
6	87–7350	Hose – Suction	1
7	2412–34	Clamp – Hose	1
8	321–4	Screw – Cap Hex. Hd.	1
9	87–7290	Fitting – Hydraulic	1
10	87–6900	Tube – Hydraulic	1


Ref. No.	Part No.	Description	No. Used
11	2412–106	Clamp – R	1
12	87–5100	Washer – Flat	4
13	87–4970	Engine Mount Assembly	2
14	32128–33	Nut – Flange	1
15	3296–39	Nut – Lock	6
16	3290–413	Washer – Belleville	12
17	76–9100	Spacer	6
18	3234–11	Screw – Cap Hex. Hd.	6
19	87–4730	Guard – Belly	2
20	3296–48	Nut – Lock	2

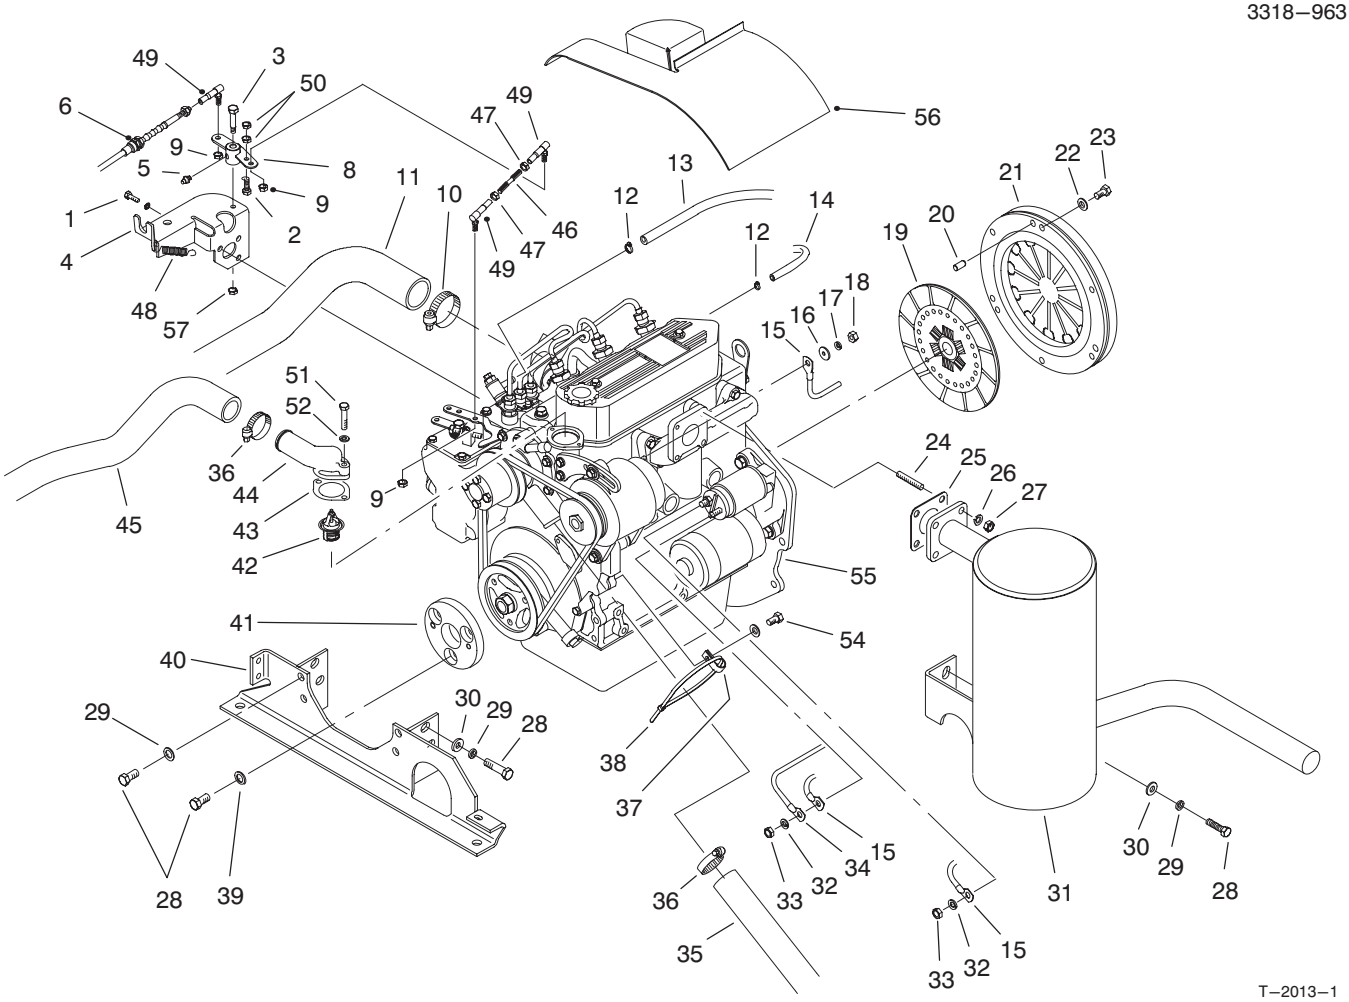

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	42–9440	Screw – Cap Hex. Hd.	3
2	321–5	Screw – Cap Hex. Hd.	1
3	7–0030	Bolt – Shoulder	1
4	94–5259	Bracket – Accelerator	1
5	302–5	Fitting – Grease	1
6	94–3836	Cable – Accelerator	1
8	94–5256	Bell Crank	1
9	3296–3	Nut – Lock	3
10	2412–92	Clamp – Hose	1
11	94–5238	Hose – Air Intake	1
12	2412–108	Clamp – Hose	2
13	27–5360	Hose – Fuel	1
14	75–4706	Hose	1
15	93–7130	Harness – Wire	1
16	5–3637	Washer – Flat	1
17	43–5920	Washer – Lock	1
18	48–7880	Nut – Lock	1
19	87–4700	Disc – Clutch	1
20	51–5610	Pin – Alignment	3
21	87–4690	Cover – Clutch	1
22	3253–4	Washer – Lock	6
23	48–7700	Screw – Cap Hex. Hd.	6
24	42–9570	Stud – Muffler	4
25	42–9110	Gasket – Muffler	1
26	42–9850	Washer – Lock	4
27	48–7930	Nut	4
28	63–7790	Screw – Cap Hex. Hd.	12
29	48–9590	Washer – Lock	10

Ref. No.	Part No.	Description	No. Used
30	3256–25	Washer	6
31	94–5213	Muffler	1
32	3254–2	Washer – Lock	2
33	42–9580	Nut – Lock	2
34	87–3070	Cable – Battery Pos.	1
35	87–4150	Hose – Radiator Lower	1
36	2412–34	Clamp	2
37	2412–149	Clamp – R	1
38	3290–379	Tie – Cable	1
39	36–4790	Washer – Thrust	3
40	93–7100	Mount – Engine	1
41	87–4110	Puck – Engine Adapter	1
42	93–8974	Thermostat	1
43	67–4430	Gasket – Thermostat	1
44	87–3410	Housing – Thermostat	1
45	87–7330	Hose – Radiator Upper	1
46	93–8995	Rod – Threaded	1
47	3220–1	Nut – Jam	2
48	86–4760	Spring	3
49	18–1720	Joint – Ball	3
50	3296–56	Nut – Lock	2
51	33113–045	Screw – Cap Hex. Hd.	2
52	48–8010	Washer – Lock	2
54	42–9440	Bolt & Washer	1
55	94–5229	Engine	1
56	92–5964	Cover – Engine (Model 07205TC)	1
57	3296–29	Nut – Lock	1

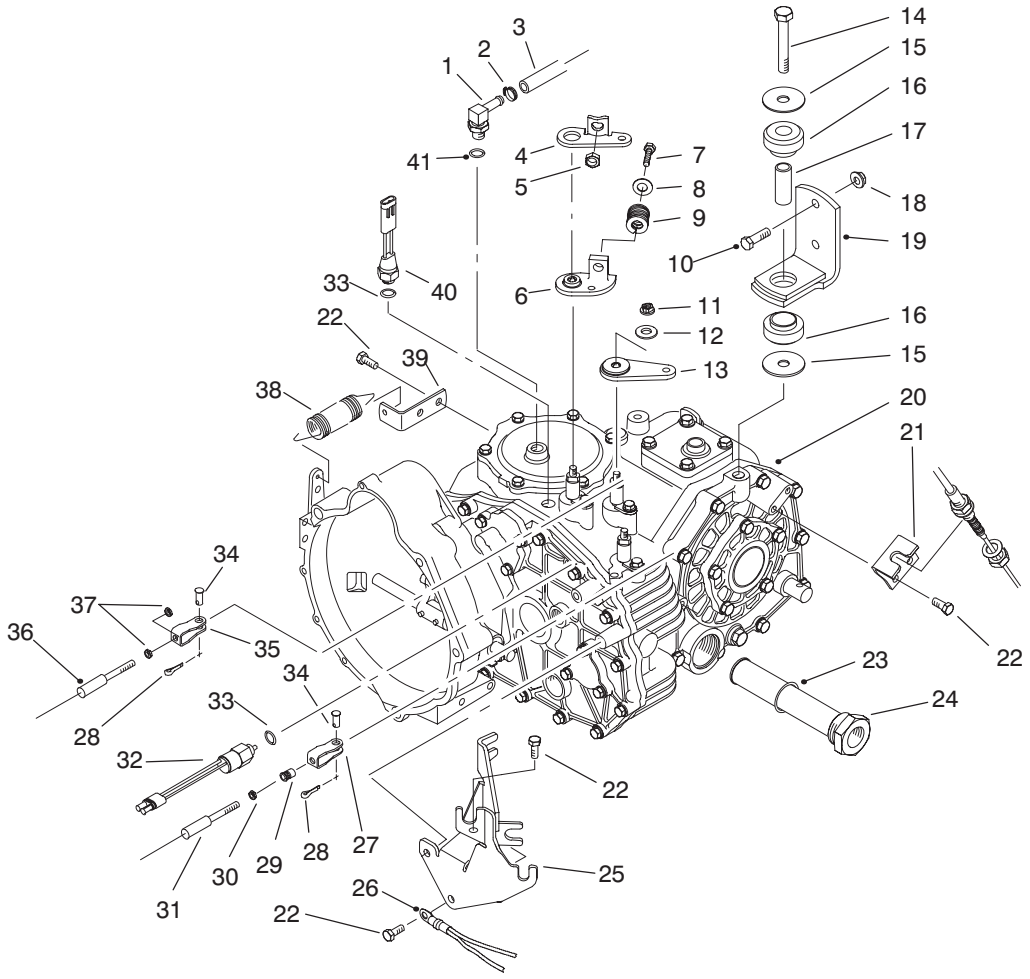


T–1707–1

TRANSAXLE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	354–135	Fitting – Hydraulic 90° (Incl. Ref. #41)	1
2	2412–36	Clamp – Hose	1
3	87–5730	Hose – Hydraulic	1
4	87–8250	Plate – Shift Arm	1
5	32128–21	Nut – Lock	1
6	87–7970	Arm – Shift	1
7	323–10	Screw – Cap Hex. Hd.	1
8	3256–4	Washer – Flat	1
9	87–6910	Spring – Compression	1
10	323–7	Screw – Cap Hex. Hd.	4
11	48–9520	Nut – Lock	3
12	80–6990	Washer – Flat	3
13	87–7960	Lever – Shift Arm	2
14	3215–1	Screw – Cap Hex. Hd.	2
15	87–5100	Washer	4
16	87–4970	Transaxle Mount Assembly (Incl. Ref. #17)	2
17		Spacer – Mount	2
18	3296–39	Nut – Flange Lock	4
19	87–5800	Bracket – Mount	2
20	87–9250	Transaxle Assembly	1
21	87–4470	Bracket	1
22	66–3160	Screw – Cap Hex. Hd.	7

Ref. No.	Part No.	Description	No. Used
23	237–123	Seal – O–Ring	1
24	87–3990	Oil Strainer Assembly (Incl. Ref. #23)	1
25	87–4820	Bracket – Cable	1
26	87–3080	Cable – Battery Neg.	1
27	87–7160	Cable Clevis Assembly (Incl. Ref. #29)	1
28	3272–6	Pin – Cotter	3
29	32148–15	Nut – Clinch	1
30	3219–14	Nut – Hex.	1
31	87–4420	Hi–Lo Cable Assembly (Incl. Ref. #30)	1
32	87–6710	Switch – Supervisor	1
33	237–30	Seal – O–Ring	2
34	283–62	Pin – Clevis	3
35	87–2310	Clevis – Cable	2
36	87–4260	Shift Cable Assembly (Incl. Ref. #37)	2
37	3220–1	Nut – Jam	4
38	68–9950	Spring – Extension	1
39	87–7170	Bracket – Clutch Spring	1
40	72–4310	Switch – Ball N.C.	1
41	237–42	Seal – O–Ring	1

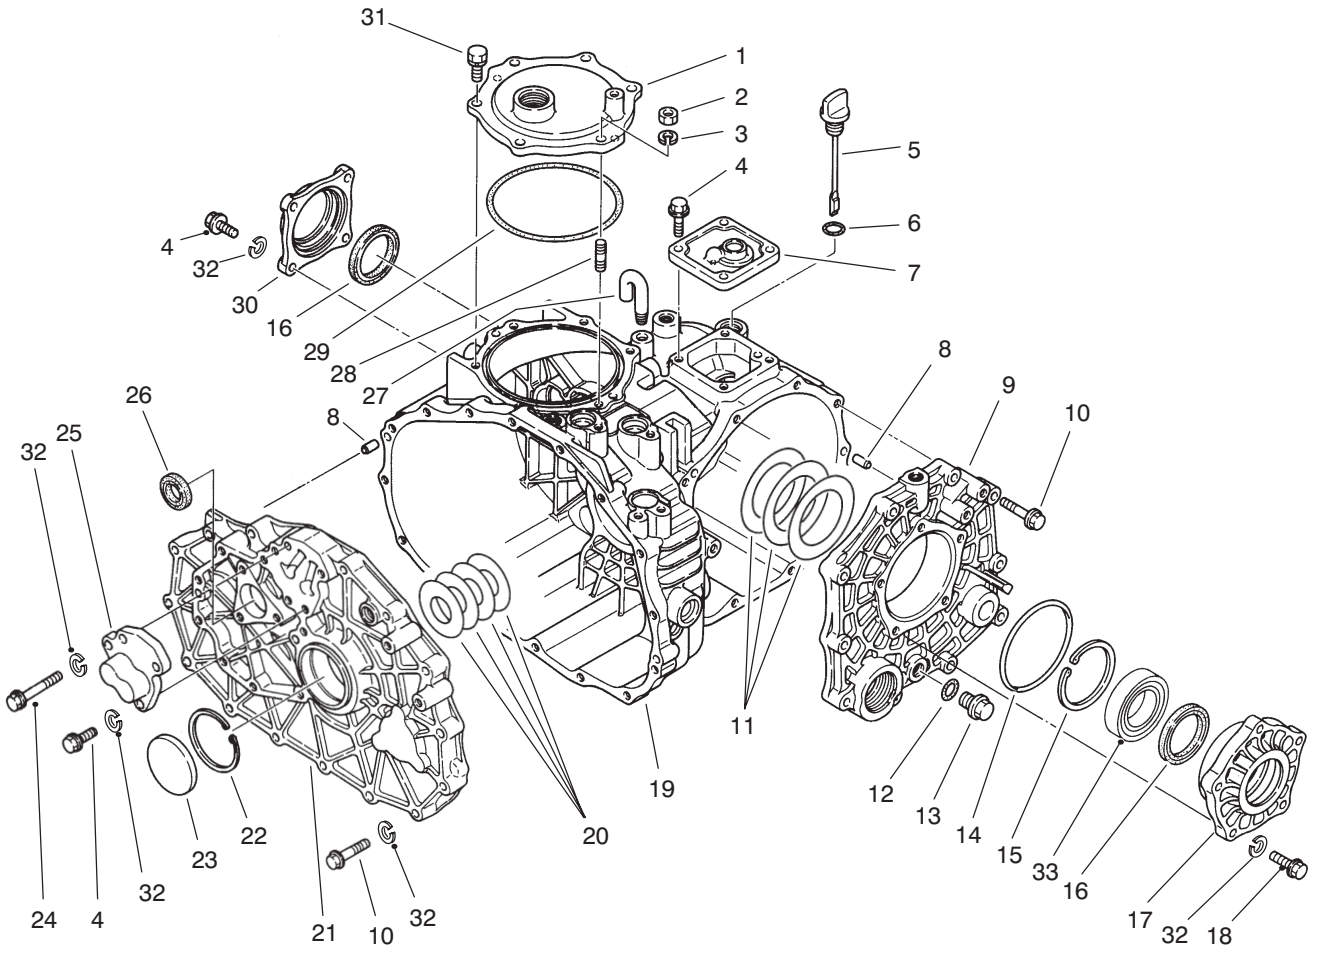


T–1535

TRANSAXLE CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0656	Cover – P.T.O.	1
2	48–7930	Nut – Hex.	1
3	92–0762	Washer – Lock	1
4	60–6750	Screw – Cap Hex. Hd.	11
5	92–0662	Cap – Oil	1
6	92–0788	O–Ring	1
7	92–0652	Cover – Upper	1
8	92–0765	Pin – Alignment	4
9	92–0653	Cover – Side	1
10	42–9530	Screw – Cap Hex. Hd.	25
11	92–0809	Shim Set	1
12	92–0787	O–Ring	1
13	92–0773	Drain Plug Assembly (Incl. Ref. #12)	1
14	92–0789	O–Ring	1
15	92–0760	Ring – Retaining	1
16	92–0793	Seal – Oil	2

Ref. No.	Part No.	Description	No. Used
17	92–0654	Carrier – Differential	1
18	48–7730	Screw – Cap Hex. Hd.	5
19	92–0651	Case – Transaxle	1
20	92–0808	Shim Set	1
21	92–0657	Plate – Center	1
22	92–0759	Ring – Retaining	1
23	92–0807	Cap – Sealing	1
24	48–7560	Screw – Cap Hex. Hd.	1
25	92–0706	Cap – Fork Shaft	1
26	92–0791	Seal – Oil	1
27	92–0743	Breather – Air	1
28	92–0804	Stud	1
29	92–0790	O–Ring	1
30	92–0655	Cover – Seal	1
31	92–0796	Screw – Cap Hex. Hd.	5
32	42–9850	Washer – Lock	42
33	92–0775	Bearing – Ball	2

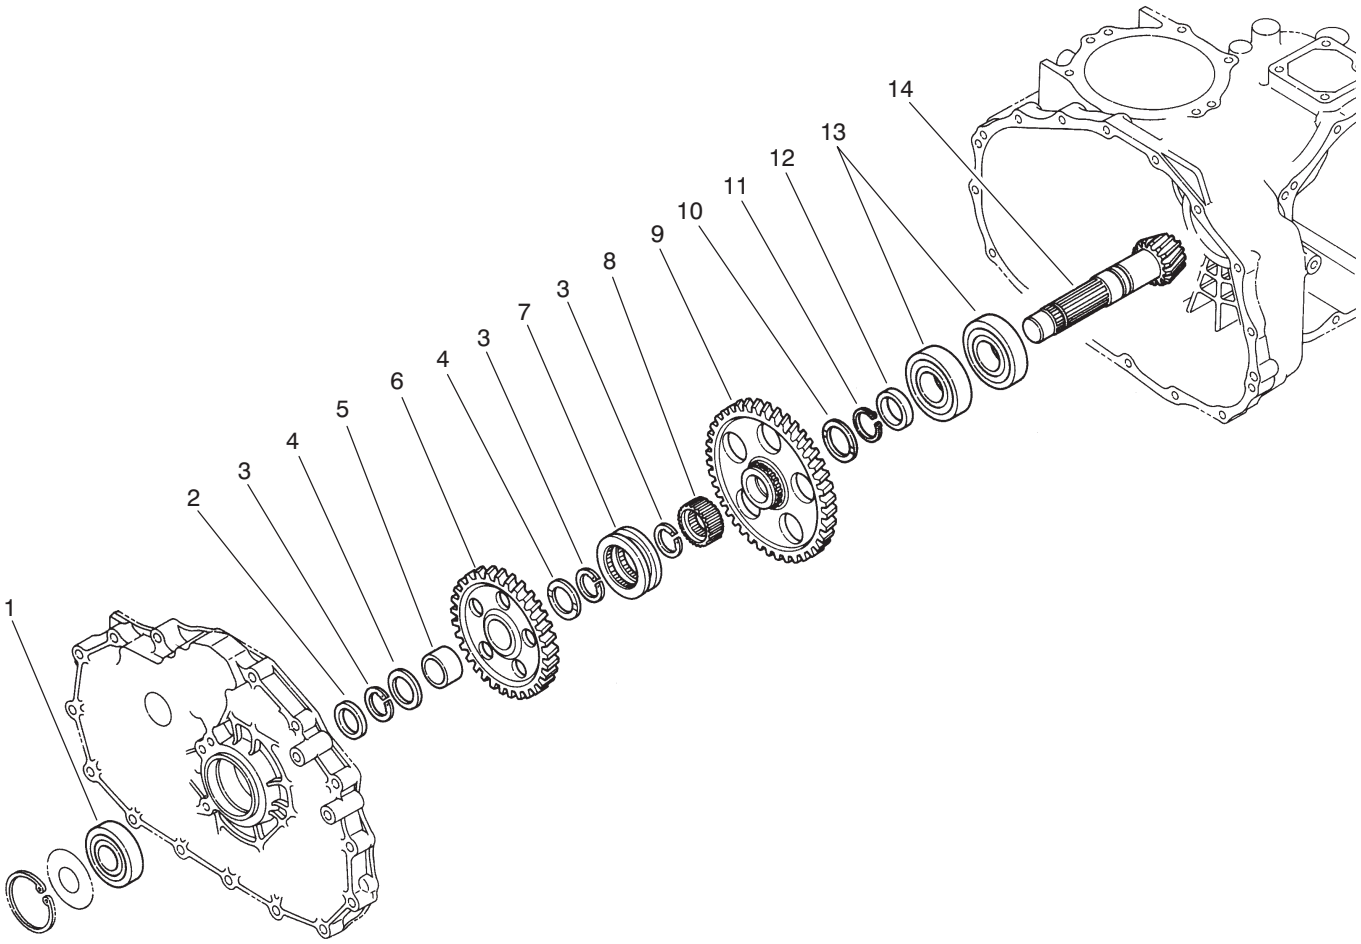


T–1536

COUNTERSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0712	Bearing – Ball	1
2	92–0716	Collar	1
3	92–0764	Ring – Retaining	3
4	92–0711	Washer – Thrust	2
5	92–0783	Sleeve – Inner	1
6	92–0715	Gear – 49T	1
7	92–0718	Shifter – Hi–Lo	1
8	92–0719	Collar – Spline	1

Ref. No.	Part No.	Description	No. Used
9	92–0717	Gear – 71T	1
10	92–0741	Washer – Thrust	1
11	92–0755	Ring – Retaining	1
12	92–0713	Collar	1
13	92–0714	Bearing – Ball	2
14	92–0710	Counter Shaft Assembly (Incl. Ring Gear)	1

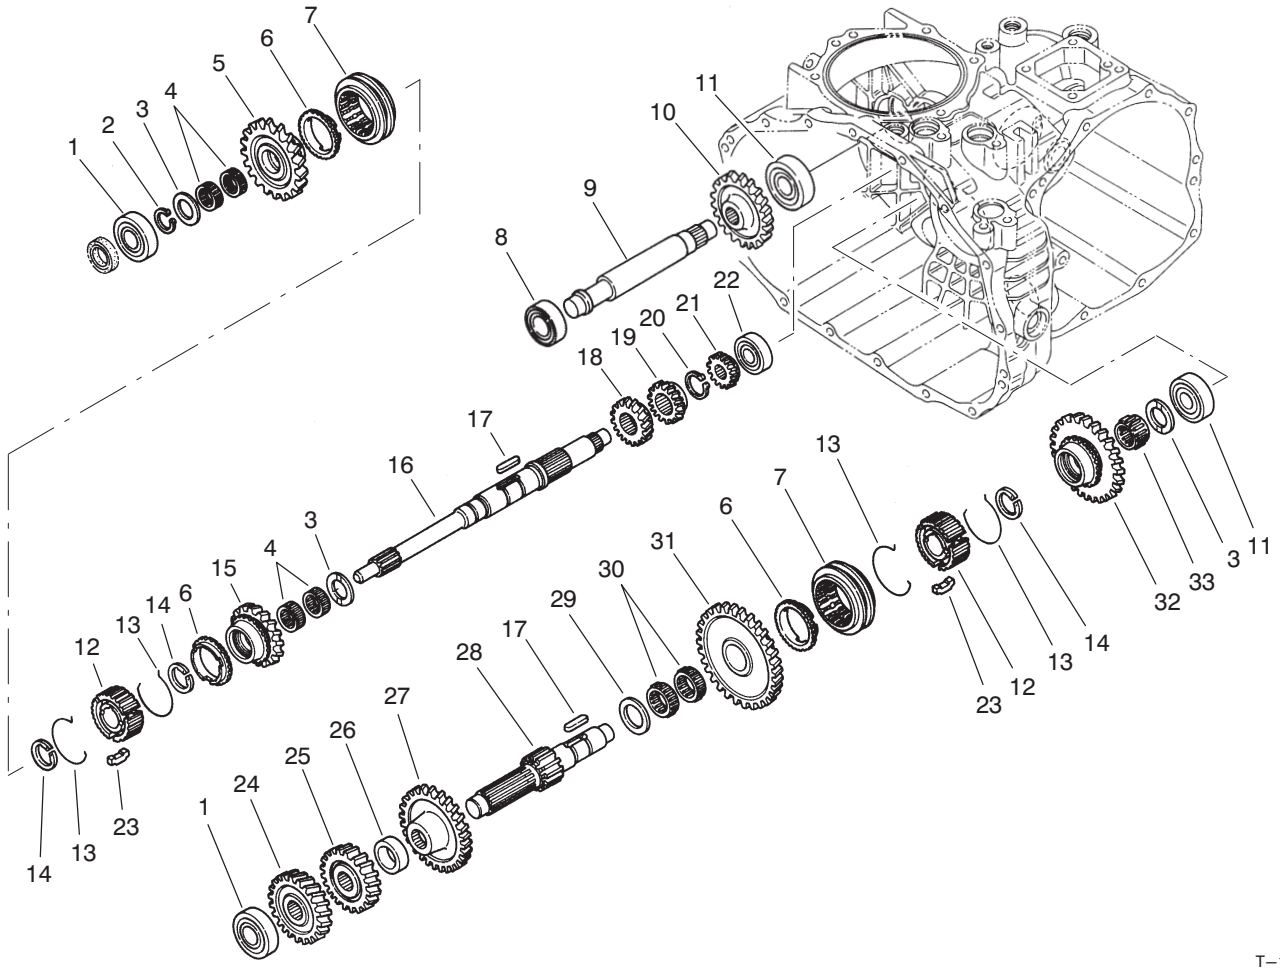


T–1533

TRANSAXLE GEAR SHAFTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	251–8	Bearing – Ball	2
2	92–0753	Ring – Retaining	1
3	92–0740	Washer – Thrust	3
4	92–0781	Bearing – Needle	4
5	92–0820	Gear – 27T	1
6	92–0667	Ring – Synchro	3
7	92–0668	Shifter – Synchro	2
8	251–346	Bearing – Ball	1
9	92–0824	Shaft – Reverse Idler	1
10	92–0684	Gear – 33T	1
11	92–0778	Bearing – Ball	2
12	92–0664	Hub – Synchro	2
13	92–0666	Spring – Synchro	4
14	92–0763	Ring – Retaining	3
15	92–0821	Gear – 24T	1
16	92–0663	Shaft – Main	1
17	92–0772	Key	2

Ref. No.	Part No.	Description	No. Used
18	92–0687	Gear – 16T	1
19	92–0672	Gear – 18T	1
20	92–0754	Ring – Retaining	1
21	92–0673	Gear – 14T	1
22	92–0650	Bearing – Ball	1
23	92–0665	Key – Synchro	6
24	92–0822	Gear – 28T	1
25	92–0679	Gear – 23T	1
26	92–0680	Collar	1
27	92–0823	Gear – 43T	1
28	92–0674	Shaft – Reduction	1
29	92–0682	Washer – Thrust	1
30	92–0681	Bearing – Needle	2
31	92–0677	Gear – 49T	1
32	92–0819	Gear – 40T	1
33	92–0782	Bearing – Needle	1

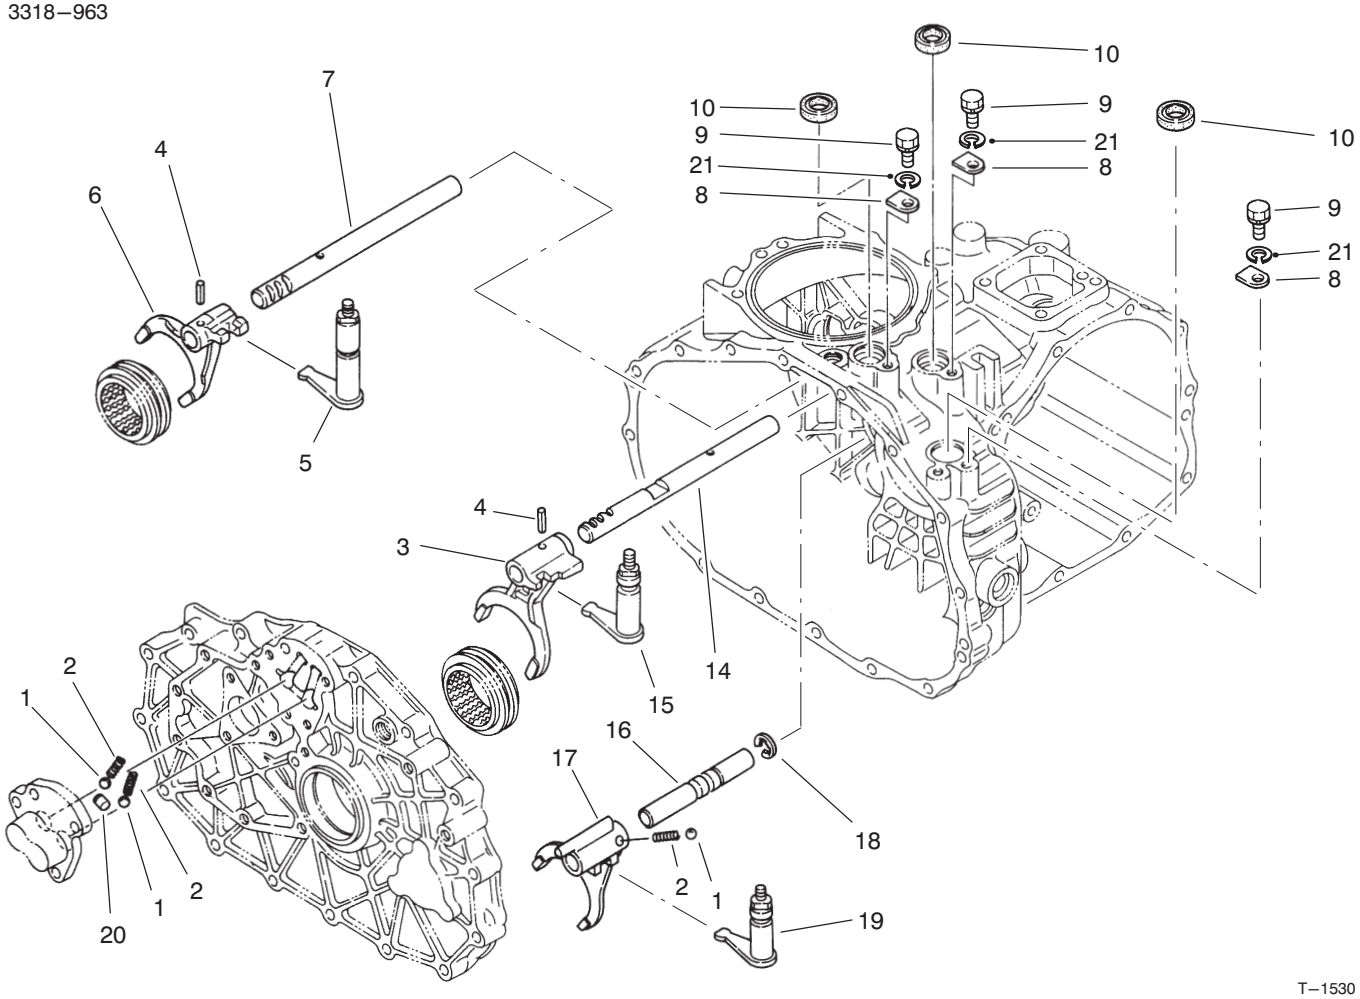


T–1530

SHIFT FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0785	Ball	3
2	92–0731	Spring – Compression	3
3	92–0700	Fork – Shift R–1	1
4	92–0769	Pin – Spring	2
5	92–0817	Arm – Shift Fork 2–3	1
6	92–0701	Fork – Shift 2–3	1
7	92–0699	Shaft – Fork 2–3	1
8	92–0732	Plate – Keeper	3
9	48–7700	Screw – Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
10	92–0729	Seal – Oil	3
14	92–0698	Shaft – Fork R–1	1
15	92–0816	Arm – Shift Fork R–1	1
16	92–0708	Shaft – Fork Hi–Lo	1
17	92–0709	Fork – Shift Hi–Lo	1
18	92–0761	Ring – Retaining	1
19	92–0818	Arm – Shift Fork Hi–Lo	1
20	92–0705	Lock – Spindle	1
21	42–9850	Washer – Lock	3

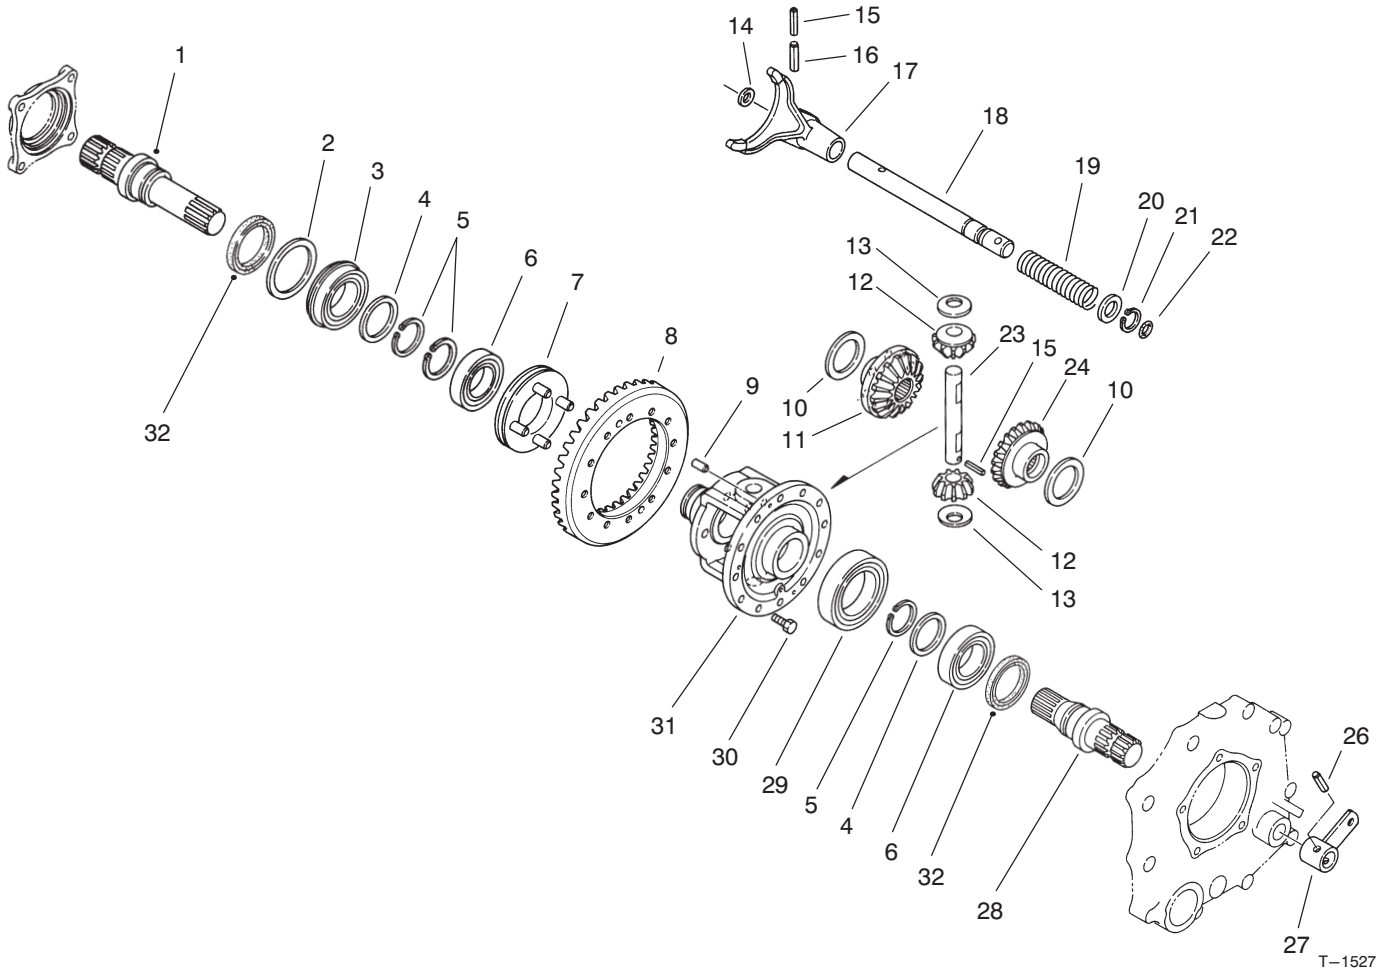


DIFFERENTIAL GEAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–0726	Shaft – Axle R.H.	1
2	92–0728	Washer	1
3	92–0780	Bearing – Ball	1
4	92–0727	Washer	2
5	92–0756	Ring – Retaining	3
6	92–0775	Bearing – Ball	2
7	92–0730	Slider – Differential Lock	1
8	92–0710	Ring Gear Assembly (Incl. Counter Shaft)	1
9	92–0765	Pin – Alignment	2
10	92–0747	Washer – Thrust	2
11	92–0746	Gear – Side R.H.	1
12	92–0748	Gear – Pinion	2
13	92–0750	Washer	2
14	92–0744	Washer	1
15	92–0768	Pin – Spring	2

Ref. No.	Part No.	Description	No. Used
16	92–0771	Pin – Spring	1
17	92–0721	Fork – Differential Lock	1
18	92–0722	Shaft – Lock Fork	1
19	92–0723	Spring – Compression	1
20	92–0733	Washer	1
21	92–0753	Ring – Retaining	1
22	92–0787	O–Ring	1
23	92–0749	Shaft – Pinion	1
24	92–0745	Gear – Side L.H.	1
26	92–0770	Pin – Spring	1
27	92–0724	Arm – Differential Lock	1
28	92–0725	Shaft – Axle L.H.	1
29	92–0776	Bearing – Ball	1
30	92–0803	Screw – Hex. Flange Hd.	12
31	92–0720	Case – Differential	1
32	92–0793	Seal – Oil	2


3318–963

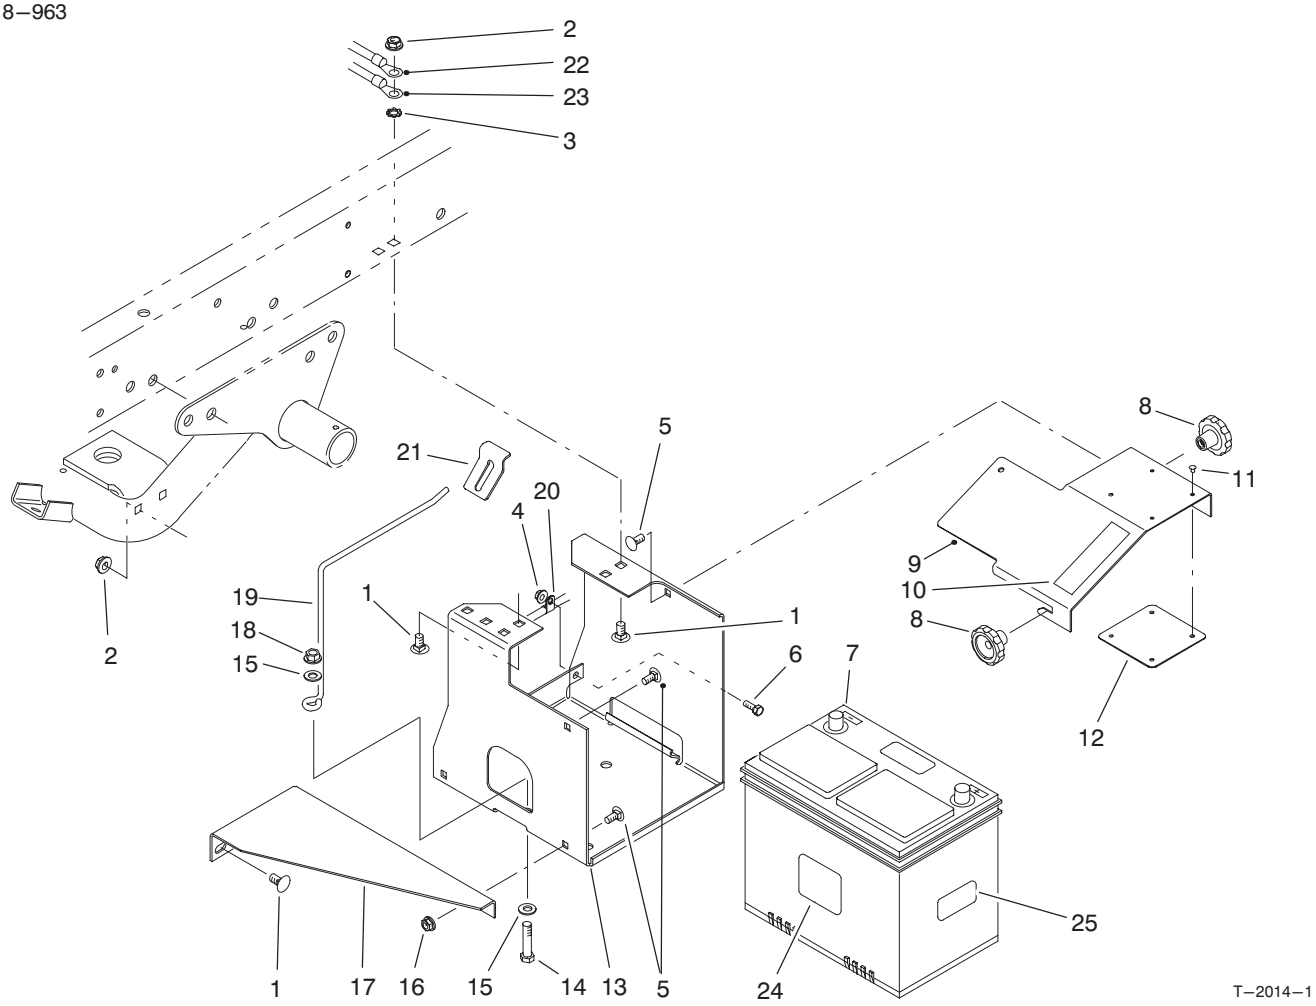

BATTERY MOUNT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3231–21	Bolt – Carriage	6
2	3290–357	Nut – Flange Lock	6
3	3255–9	Washer – Lock ETLW	1
4	32128–33	Nut – Flange Lock	1
5	3230–23	Bolt – Carriage	4
6	321–4	Screw – Cap Hex. Hd.	1
7	63–9230	Battery	1
8	19–4050	Knob	2
9	87–5130	Cover – Battery Base	1
10	36–3400	Decal – No Step	1
10	93–6687	Decal – No Step (Europe)	1
10	84–2780	Decal – No Step (Japan)	1
11	3296–27	Rivet – Plastic	4
12	87–7620	Shield – Plastic	1


Ref. No.	Part No.	Description	No. Used
13	87–5120	Bracket – Battery Base	1
14	323–9	Screw – Cap Hex. Hd.	1
15	3256–24	Washer – Flat	2
16	32128–20	Nut – Flange Lock	2
17	87–5110	Support – Lower	1
18	3296–39	Nut – Flange Lock	1
19	87–7600	Rod – Battery Support	1
20	2412–89	Clamp – R	1
21	87–7610	Tab – Battery Support	1
22	93–7130	Harness – Wire Rear	1
23	87–3080	Cable – Battery Neg.	1
24	93–6668	Decal – Charging (Europe)	1
25	93–7276	Decal – Danger (Europe)	1

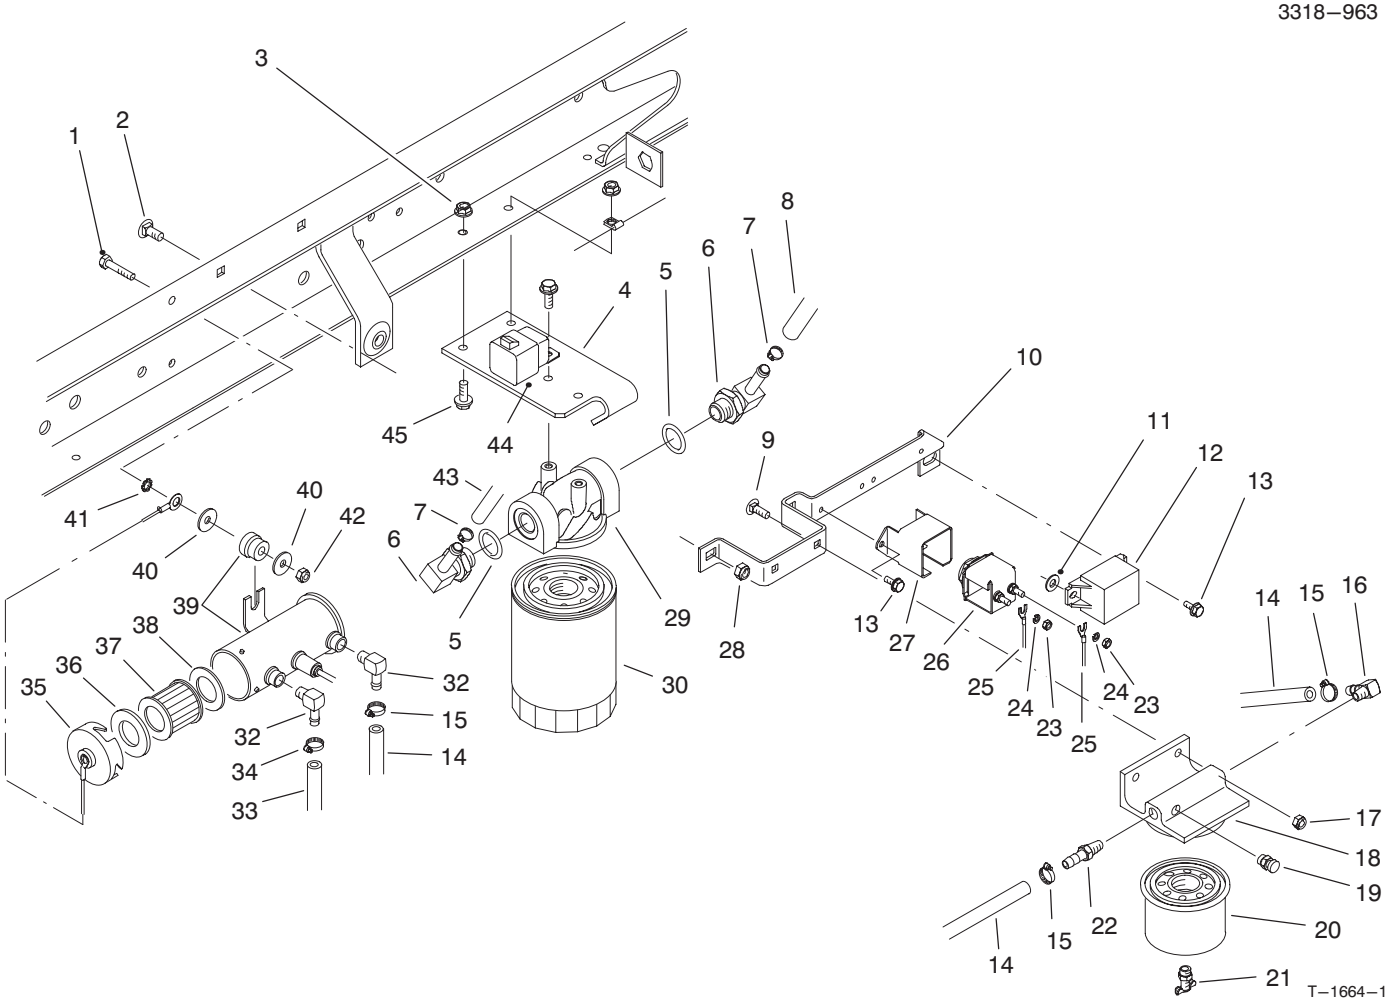

FUEL FILTER, FUEL PUMP & RELAY MOUNTING

Ref. No.	Part No.	Description	No. Used
1	48–7650	Screw – Cap Hex. Hd.	2
2	3230–23	Bolt – Carriage	2
3	32128–33	Nut – Flange Lock	1
4	87–7040	Bracket – Oil Filter	1
5	237–79	Seal – O–Ring	2
6	354–134	Fitting – Hydraulic 90˚ (Incl. Ref. #5)	2
7	2412–36	Clamp – Hose	2
8	87–5730	Hose – Hydraulic	1
9	3229–25	Nut – Lock	2
10	87–7380	Bracket – Relay/Indicator	1
11	3256–22	Washer – Flat	1
12	66–8800	Relay	1
13	12–5450	Screw – Hex. Hd.	4
14	27–5360	Hose – Fuel	2
15	2412–108	Clamp – Hose	3
16	353–707	Fitting – 90˚ Barb	1
17	3296–42	Nut – Lock	2
18	63–8280	Head – Filter	1
19	63–8290	Vent – Air	1
20	63–8300	Element – Filter	1
21	63–8310	Drain – Filter	1
22	353–783	Fitting – Straight	1
23	43–5970	Nut	2
24	48–8000	Washer – Lock	2

Ref. No.	Part No.	Description	No. Used
25	93–7130	Harness – Wire	1
26	66–8700	Glow Plug Indicator Assy. (Incl. Ref. #34–35)	1
27	70–8560	Retainer – Indicator	1
28	3296–29	Nut – Lock	2
29	87–8780	Head – Oil Filter	1
30	54–0110	Element – Oil Filter	1
32	46–3710	Fitting – 90˚	2
33	63–9640	Hose – Fuel Tank to Pump	1
34	92–2379	Clamp – Hose	1
35	43–2580	Magnet	1
36	43–2560	Gasket	1
37	43–2550	Filter	1
38	43–2570	Gasket	1
39	53–8150	Fuel Pump Assembly (Incl. Ref. #24–27)	1
40	3256–67	Washer – Flat	3
41	3255–7	Washer – ETLW	1
42	49–7810	Nut – Lock	2
43	87–4920	Hose – Hydraulic (Model 07205)	1
43	94–5255	Hose – Hydraulic (Model 07205TC)	1
44	70–1480	Relay – S.P.D.T.	1
45	3234–4	Screw – Hex. Flange Hd.	4

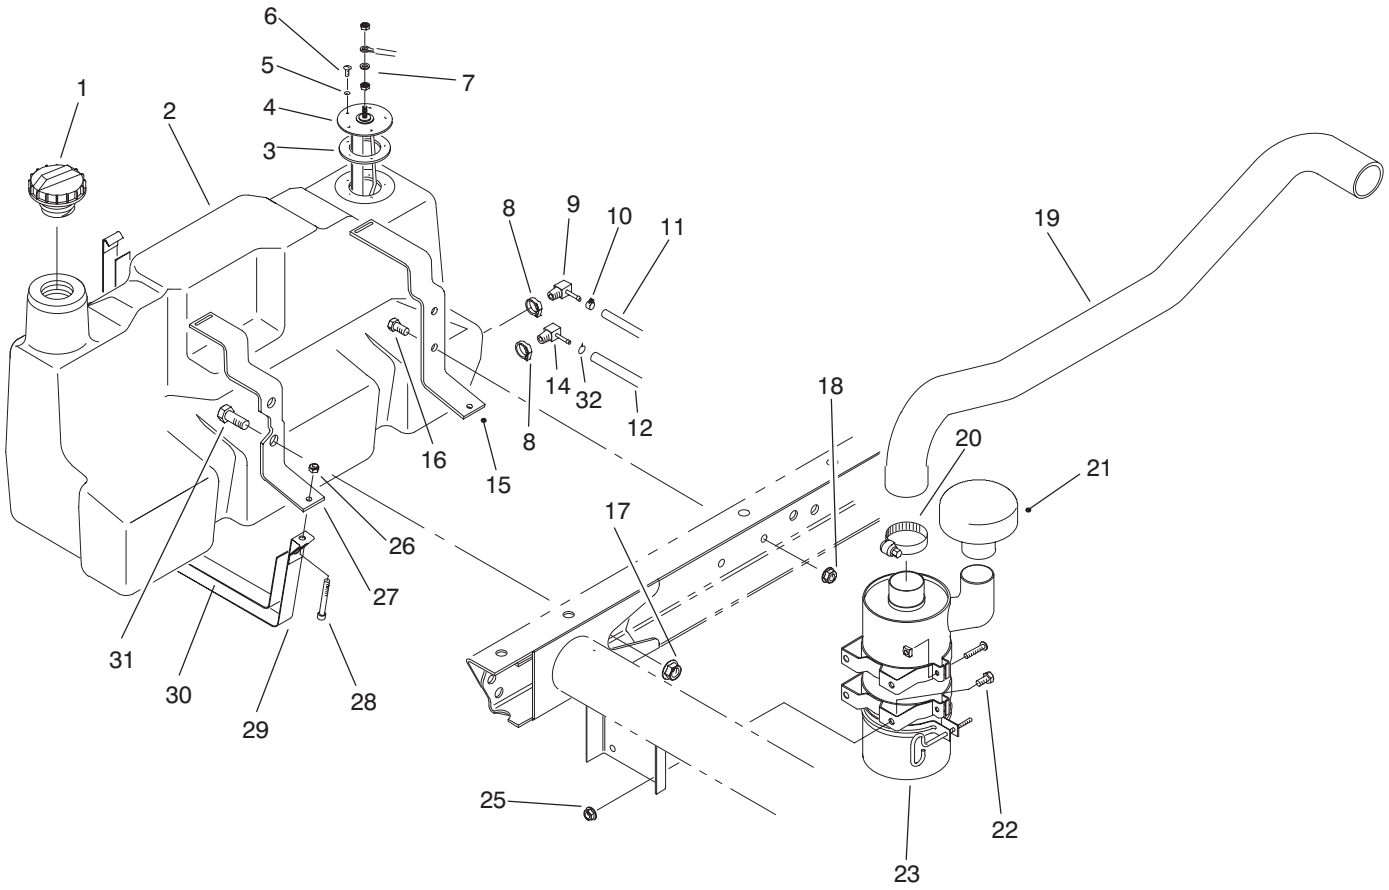


T–1665–3

FUEL TANK & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93–3102	Cap – Fuel	1
2	94–3801	Fuel Tank Assembly (Incl. Ref. #8, 9 & 14)	1
3	62–7650	Gasket – Sending Unit	1
4	63–7640	Unit – Sending	1
5	3253–15	Washer – Lock	5
6	32122–24	Screw – Round Hd.	5
7	5–3637	Washer – Flat	1
8	2412–36	Clamp	1
9	76–4430	Fitting – Fuel 90˚	1
10	2412–108	Clamp – Hose	1
11	75–4706	Hose – Fuel	1
12	63–9640	Hose – Fuel	1
14	353–781	Fitting – Fuel 90˚	1
15	87–3140	Support – Rear	1
16	323–4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
17	32128–23	Nut – Flange	2
18	3290–357	Nut – Flange	2
19	94–5238	Hose – Air Cleaner	1
20	2412–92	Clamp – Hose	1
21	46–7510	Hood – Inlet, Air	1
22	322–2	Screw – Cap Hex. Hd.	4
23	94–5235	Air Cleaner Assembly	1
25	32128–20	Nut – Flange Lock	4
26	3296–42	Nut – Lock	2
27	87–3150	Support – Front	1
28	3274–54	Screw – Hex. Socket Hd.	2
29	87–3160	Strap – Tank Support	2
30	87–3170	Pad – Tank Support Strap	2
31	3234–38	Screw – Cap Hex. Hd.	2
32	92–2379	Clamp – Hose	1

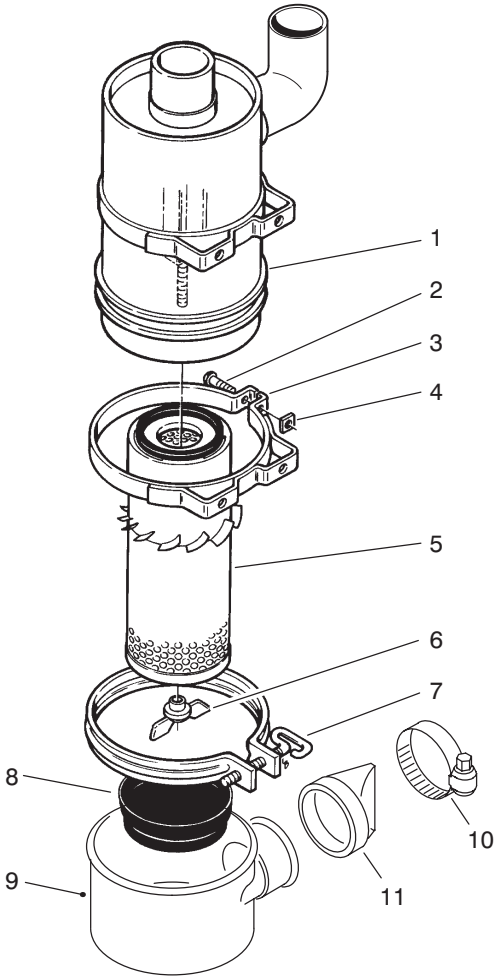


T–2507

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Body	1
2	3258–19	Screw – Round Head	2
3	33–1350	Band Assembly (Incl. Ref. #2 & 4)	2
4	32107–11	Nut – Square	2
5	33–1300	Assembly – Element	1
6	33–1330	Assembly – Nut	1
7	33–1340	Clamp Assembly	1
8	33–1310	Baffle	1
9	87–9390	Cup	1
10	2412–130	Clamp – Hose	1
11	87–9400	Valve	1
*	94–5235	Air Cleaner (Complete) (Incl. Ref. #1 & 5–11)	1

*Not Illustrated

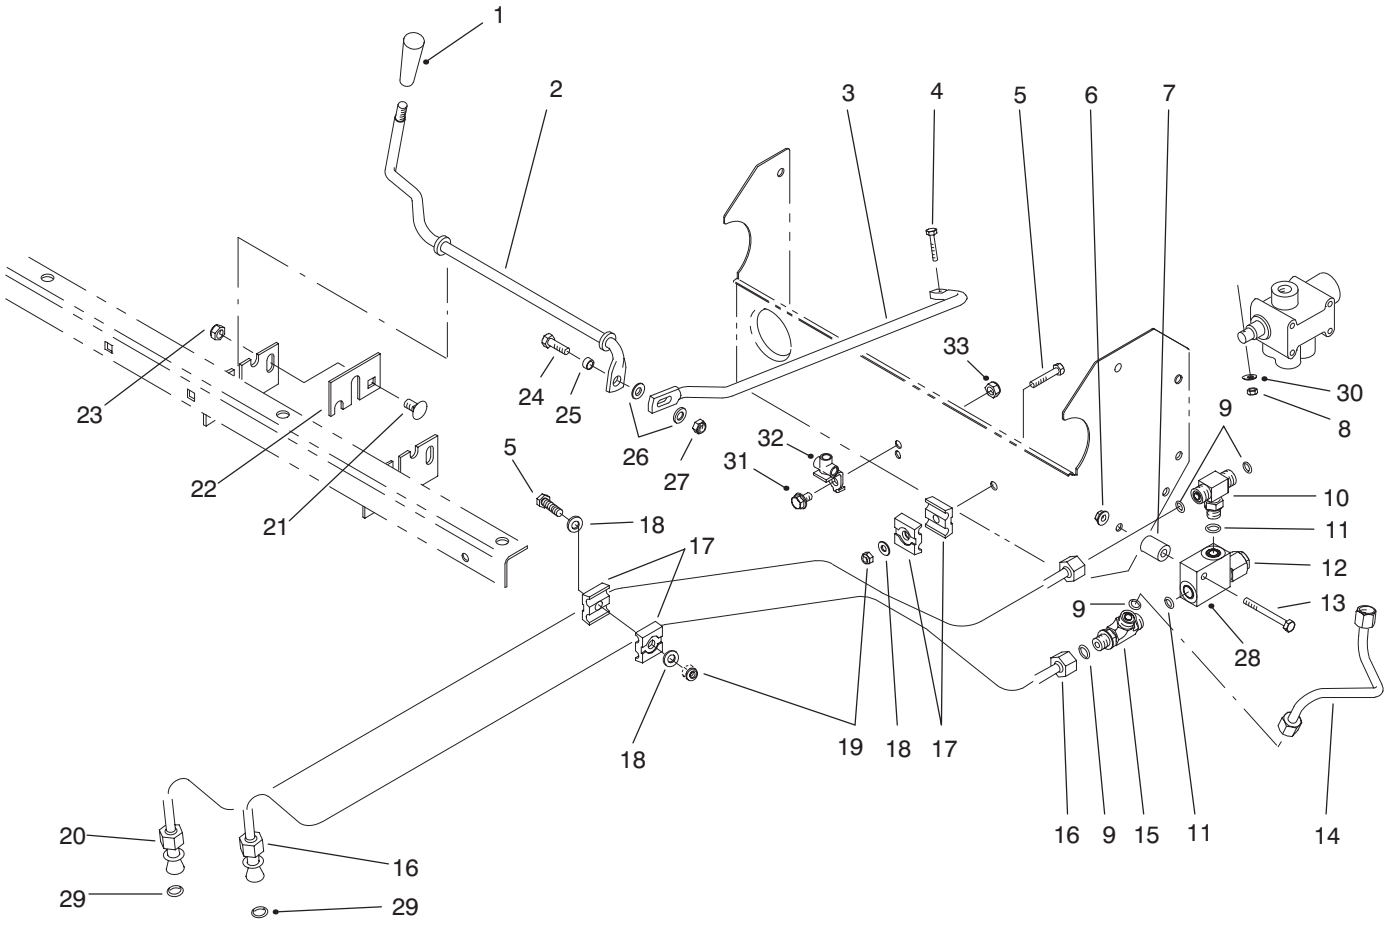


T–1610–1

LIFT VALVE LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233–39	Knob	1
2	87–4500	Rod – Pivot	1
3	87–4510	Rod – Connecting	1
4	87–5150	Screw – Cap Hex. Hd.	1
5	321–9	Screw – Cap Hex. Hd.	2
6	32128–33	Nut – Flange Lock	1
7	75–9610	Spacer	1
8	87–5140	Nut – Lock	1
9	237–22	Seal – O–Ring	4
10	340–94	Fitting – Hydraulic Tee (Incl. Ref. #9 & 11)	1
11	237–42	Seal – O–Ring	2
12	92–2160	Cartridge – Relief Valve	1
13	321–15	Screw – Cap Hex. Hd.	1
14	87–4560	Tube – Hydraulic	1
15	340–86	Fitting – Hydraulic Tee (Incl. Ref. #9 & 11)	1
16	87–9350	Hydraulic Tube Assembly (Incl. Ref. #29)	1

Ref. No.	Part No.	Description	No. Used
17	56–7973	Clamp – Hydraulic Tube	4
18	3256–22	Washer – Flat	3
19	3296–42	Nut – Lock	2
20	87–4540	Hydraulic Tube Assembly (Incl. Ref. #29)	1
21	3231–21	Bolt – Carriage	1
22	87–4490	Bracket – Hold–Down	1
23	3296–39	Nut – Lock	1
24	322–5	Screw – Cap Hex. Hd.	1
25	87–5080	Spacer – Connecting	1
26	3256–23	Washer – Flat	2
27	3296–29	Nut – Lock	1
28	92–2161	Body – Relief Valve	1
29	39–7310	Seal – O–Ring	2
30	3256–14	Washer – Flat	1
*	87–3680	Assembly – Relief Valve (Incl. Ref. #12 & 28)	1


*Not Illustrated

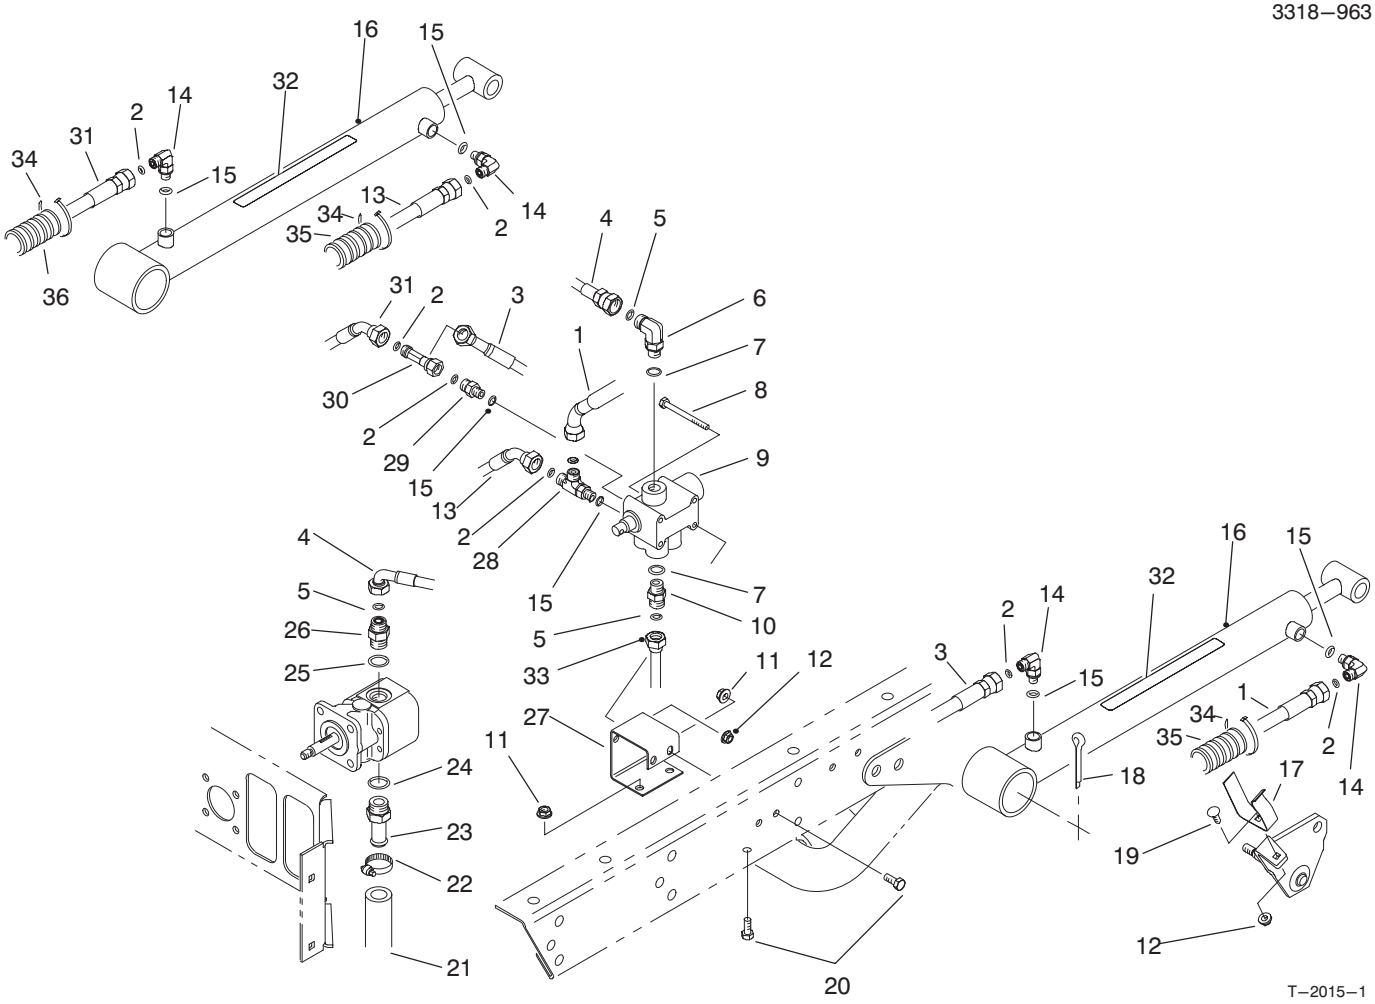

LIFT VALVE & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–2697	Hose – Hydraulic LH	1
2	237–21	Seal – O–Ring	6
3	87–4880	Hose – Hydraulic LH	1
4	87–4870	Hose – Hydraulic (Model 07205)	1
4	93–9552	Hose – Hydraulic (Model 07205TC)	1
5	237–22	Seal – O–Ring	3
6	340–77	Fitting – Hydraulic 90° (Incl. Ref. #5 & 7)	1
7	237–42	Seal – O–Ring	2
8	321–14	Screw – Cap Hex. Hd.	2
9	43–1950	Valve	1
10	340–2	Fitting – Straight (Incl. Ref. #5 & 7) (Model 07205)	1
10	340–77	Fitting – 90° (Incl. Ref. #5 & 7) (Model 07205TC)	1
11	32128–20	Nut – Flange Head	4
12	32128–33	Nut – Flange Head	4
13	87–4910	Hose – Hydraulic RH	1
14	340–132	Fitting – Hydraulic 90° (Incl. Ref. #2 & 15)	4
15	237–78	Seal – O–Ring	4
16	94–5203	Hydraulic Cylinder Assy. (Incl. Ref. #32)	2

Ref. No.	Part No.	Description	No. Used
17	87–3720	Retainer – Cylinder	2
18	3272–37	PIn – Cotter	2
19	3229–25	Screw – Carriage	2
20	322–3	Screw – Cap Hex. Hd.	4
21	87–3670	Hose – Hydraulic	1
22	2412–34	Clamp	1
23	354–136	Fitting – Hydraulic Straight (Incl. Ref. #24)	1
24	237–80	Seal – O–Ring	1
25	237–79	Seal – O–Ring	1
26	340–3	Fitting – Hydraulic Straight (Incl. Ref. #5 & 25)	1
27	87–4520	Bracket – Dump Valve	1
28	340–140	Fitting – Hydraulic Tee (Incl. Ref. #2 & 15)	1
29	340–92	Fitting – Hydraulic Straight (Incl. Ref. #2 & 15)	1
30	340–151	Fitting – Hydraulic Tee (Incl. Ref. #2)	1
31	87–4900	Hose – Hydraulic RH	1
32	87–7930	Decal – Warning	2
32	93–9852	Decal – Warning (Europe)	2
32	92–6415	Decal – Warning (Japan)	2
33	87–4560	Tube – Hydraulic	1
34	3290–378	Tie – Cable (Europe)	6
35	24–7923	Conduit – Hose (Europe)	2
36	24–7922	Conduit – Hose (Europe)	1

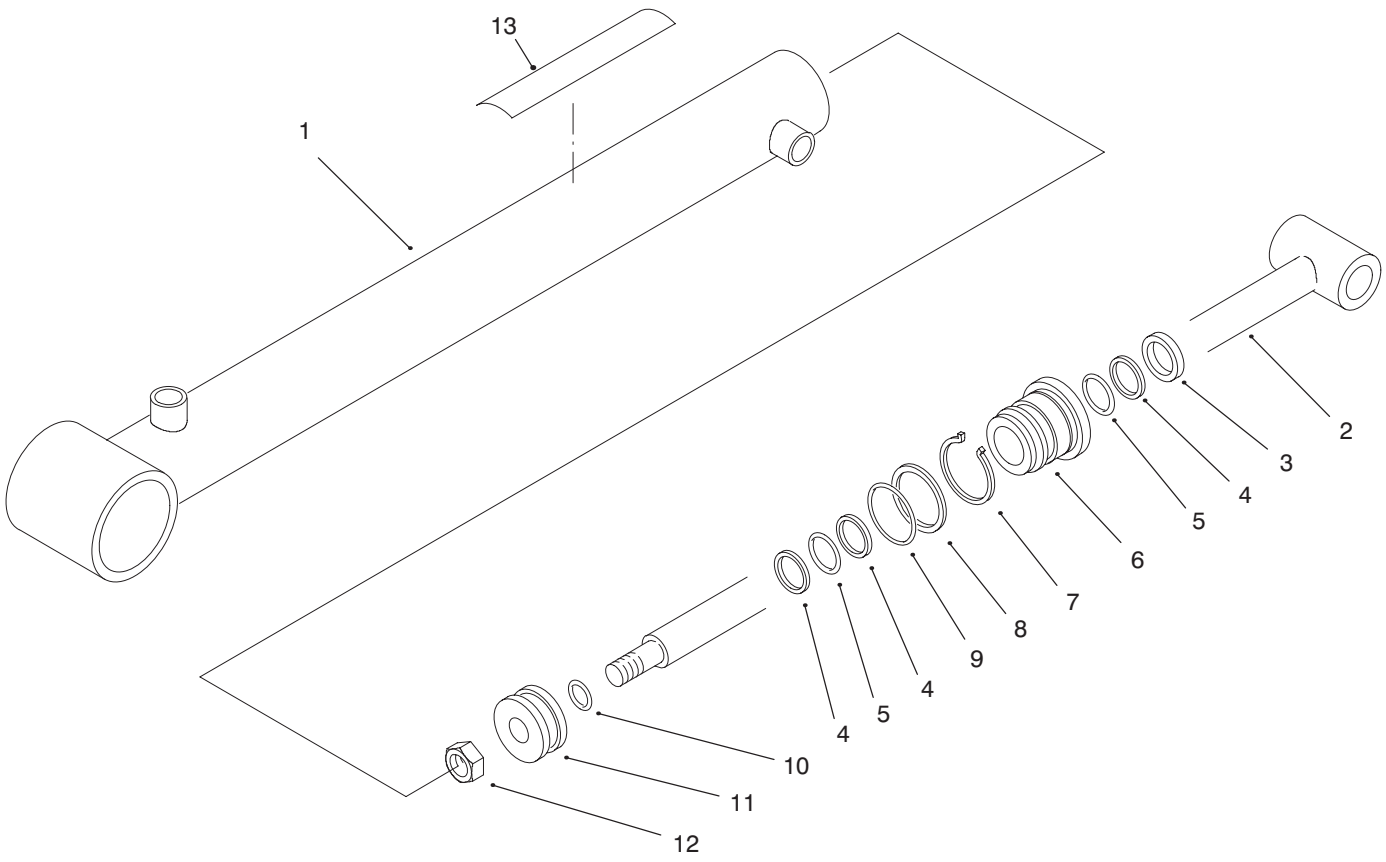


T–2342–1

LIFT CYLINDER NO. 94–5203

Ref. No.	Part No.	Description	No. Used
1	94–5206	Barrel Assembly	1
2	94–5207	Shaft	1
3		Seal – Dust	1
4		Backup	3
5		Seal – O–Ring	2
6	92–2162	Head	1
7	84–1680	Ring – Retaining	1
8		Backup	1

Ref. No.	Part No.	Description	No. Used
9		Seal – O–Ring	1
10		Seal – O–Ring	1
11	43–5150	Piston	1
12	32152–10	Nut	1
13	87–7930	Decal – Warning	1
*	92–2165	Kit – Repair (Incl. Ref. #3–5 & 8–10)	1

*Not Illustrated

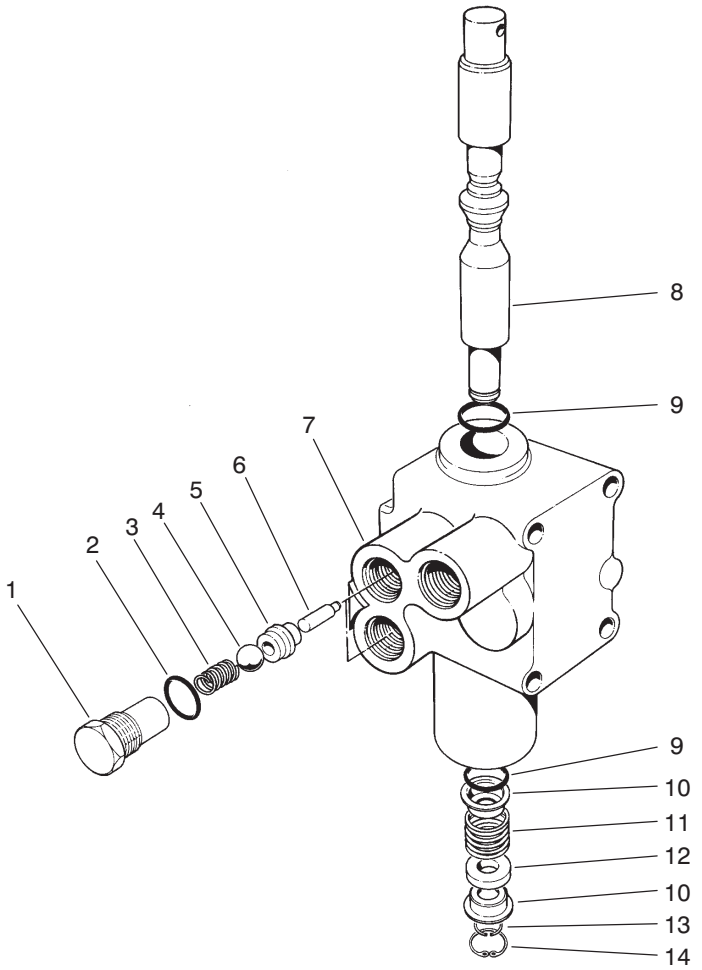


T–0280–1

CONTROL VALVE ASSEMBLY NO. 43–1950

Ref. No.	Part No.	Description	No. Used
1	22–8330	Plug	2
2	237–42	O–Ring	2
3	22–8340	Spring	2
4	22–8350	Ball	2
5	22–8370	Seat–Check Valve	2
6	22–8360	Pin – Cam	2
7		Body	1

Ref. No.	Part No.	Description	No. Used
8	22–8420	Spool	1
9	22–8500	O–Ring	2
10	22–8380	Retainer – Spring	2
11	22–8410	Spring	1
12	23–3030	Spacer	1
13	22–8480	Ring – Retaining, Spool	1
14	22–8490	Ring – Retaining	1

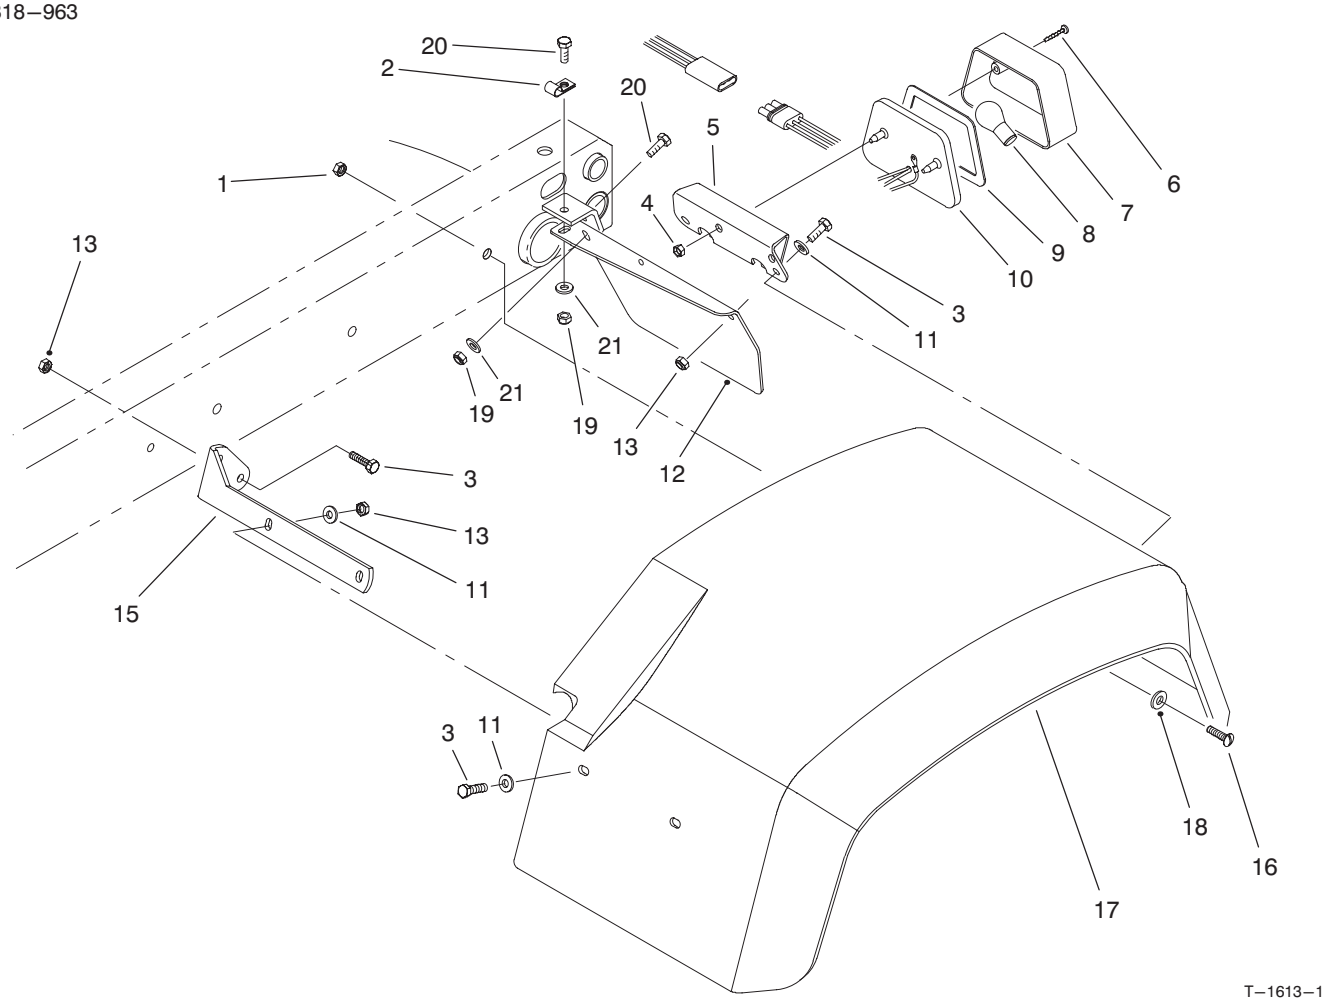


T–1613–1

REAR FENDER & TAIL LIGHT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–39	Nut – Lock	6
2	2412–93	Clamp – R	1
3	321–6	Screw – Cap Hex. Hd.	12
4	3290–506	Palnut	2
5	87–5770	U–Bracket – Tail Light	1
6	32144–93	Screw – Self Tapping	2
7	87–6300	Lens	1
8		Bulb (#1157 Std. 12 Volt)	1
9	87–6310	Gasket	1
10	87–2110	Tail Light Assembly (Incl. Ref. #6–9)	1

Ref. No.	Part No.	Description	No. Used
11	3256–22	Washer – Flat	12
12	93–8943	Plate – Tail Light LH	1
*	93–8944	Plate – Tail Light RH	1
13	3296–42	Nut – Lock	16
15	93–8941	Bracket – Front LH	1
*	93–8942	Bracket – Front RH	1
16	3274–94	Screw – Socket Button Hd.	6
17	87–6660	Fender – Rear 24”	2
18	3256–24	Washer – Flat	6
19	3296–29	Nut – Lock	4
20	322–5	Screw – Cap Hex. Hd.	4
21	3256–23	Washer – Flat	4

*Not Illustrated

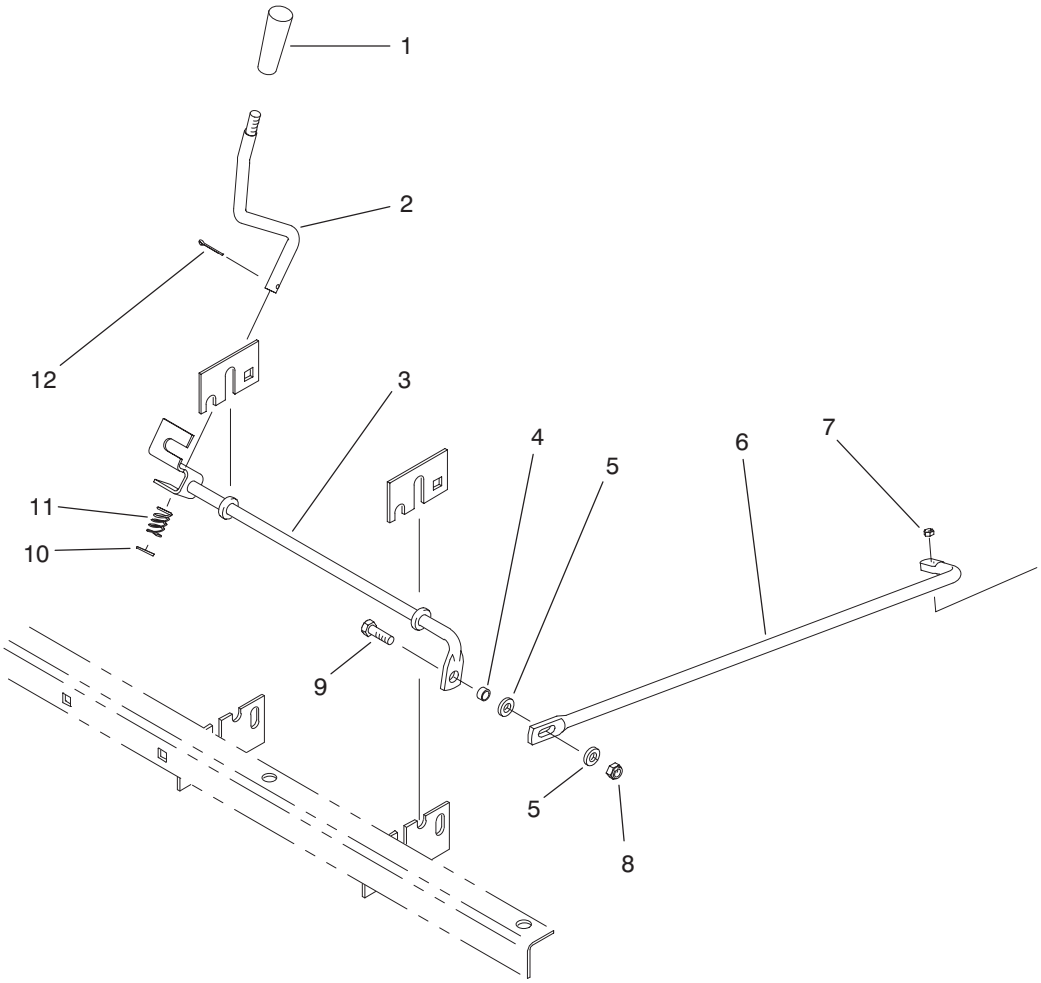


T–2623

REMOTE HYDRAULICS CONTROL LEVER & LINKAGE (Model 07205TC)

Ref. No.	Part No.	Description	No. Used
1	233–39	Knob	1
2	87–4580	Rod – Auxiliary Lever	1
3	87–4610	Rod – Auxiliary	1
4	87–5080	Spacer – Connecting Rod	1
5	3256–23	Washer – Flat	2
6	93–9536	Rod – Connecting	1


Ref. No.	Part No.	Description	No. Used
7	3296–2	Nut – Hex.	1
8	3296–29	Nut – Lock	1
9	322–5	Screw – Cap Hex. Hd.	1
10	3256–25	Washer – Flat	1
11	66–4850	Spring – Compression	1
12	3272–7	Pin – Cotter	1

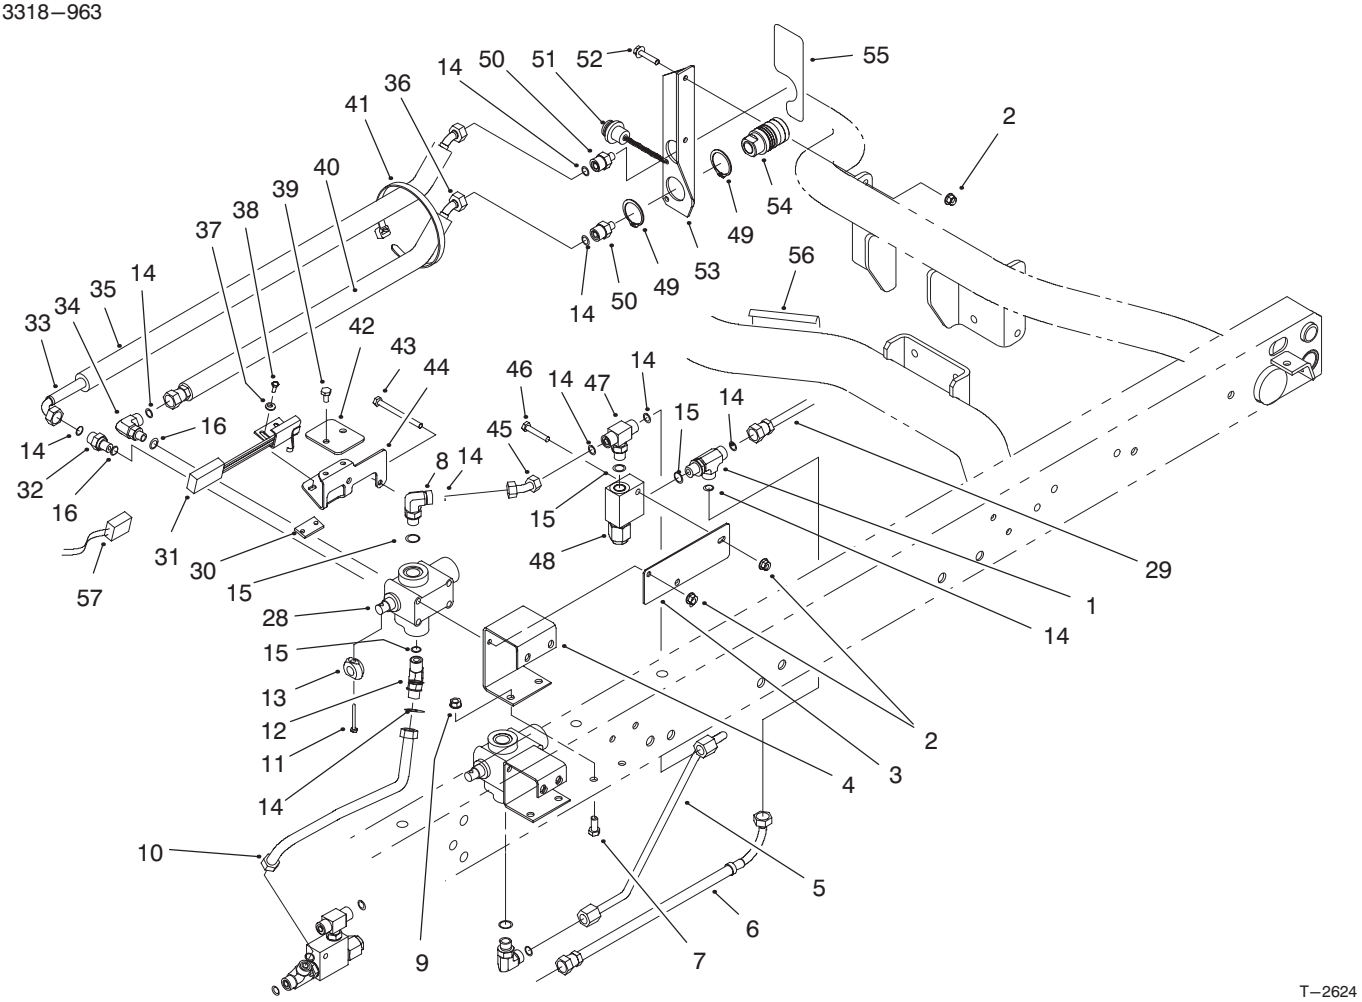

T–2624

REMOTE HYDRAULICS PLUMBING ASSEMBLY (Model 07205TC)

Ref. No.	Part No.	Description	No. Used
1	340–86	Fitting – Hydraulic Tee (Incl. Ref. #14 & 15)	1
2	32128–33	Nut – Flange Lock	5
3	92–2623	Plate – Valve Mount	1
4	87–4620	Bracket – Auxiliary Valve	1
5	93–9535	Hydraulic Tube Assembly	1
6	92–2624	Hydraulic Hose Assembly	1
7	322–3	Screw – Cap Hex. Hd.	4
8	340–77	Fitting – Hydraulic 90° (Incl. Ref. #14 & 15)	2
9	32128–20	Nut – Lock	4
10	92–2622	Hydraulic Tube Assembly	1
11	32105–5	Screw	1
12	340–87	Fitting – Hydraulic 45° (Incl. Ref. #14 & 15)	1
13	93–9542	Cam – Switch	1
14	237–22	Seal – O–Ring	10
15	237–42	Seal – O–Ring	5
16	237–78	Seal – O–Ring	3
28	43–1710	Rod – Auxiliary Lever	1
29	94–5255	Hydraulic Hose Assembly	1
30	93–9539	Strip – Tapped	1
31	92–7905	Switch & Bracket Assembly	1
32	340–88	Fitting – Hydraulic Straight (Incl. Ref. #14 & 16)	1
33	92–2606	Hydraulic Hose Assembly	1
34	340–97	Fitting – Hydraulic 90° (Incl. Ref. #14 & 16)	1
35	93–9540	Sleeve – Protective	1
36	92–2605	Hydraulic Hose Assembly	1
37	3256–14	Washer – Flat	2
38	32105–8	Screw	2
39	321–2	Screw – Hex. Hd.	2
40	93–9551	Sleeve – Protective	1
41	3290–378	Tie – Cable	6
42	93–9538	Cover – Switch	1
43	321–23	Screw – Hex. Hd.	2
44	93–9537	Bracket – Switch Mounting	1
45	92–2620	Hydraulic Tube Assembly	1
46	321–9	Screw – Hex. Hd.	1
47	340–94	Fitting – Hydraulic Tee (Incl. Ref. #14 & 15)	1
48	92–2625	Relief Valve Assembly (1900 psi)	1
49	92–2601	Ring – Retaining	4
50	340–12	Fitting – Hydraulic Straight (Incl. Ref. #14)	2
51	92–2603	Plug – Dust	2
52	3234–21	Screw – Hex. Hd.	2

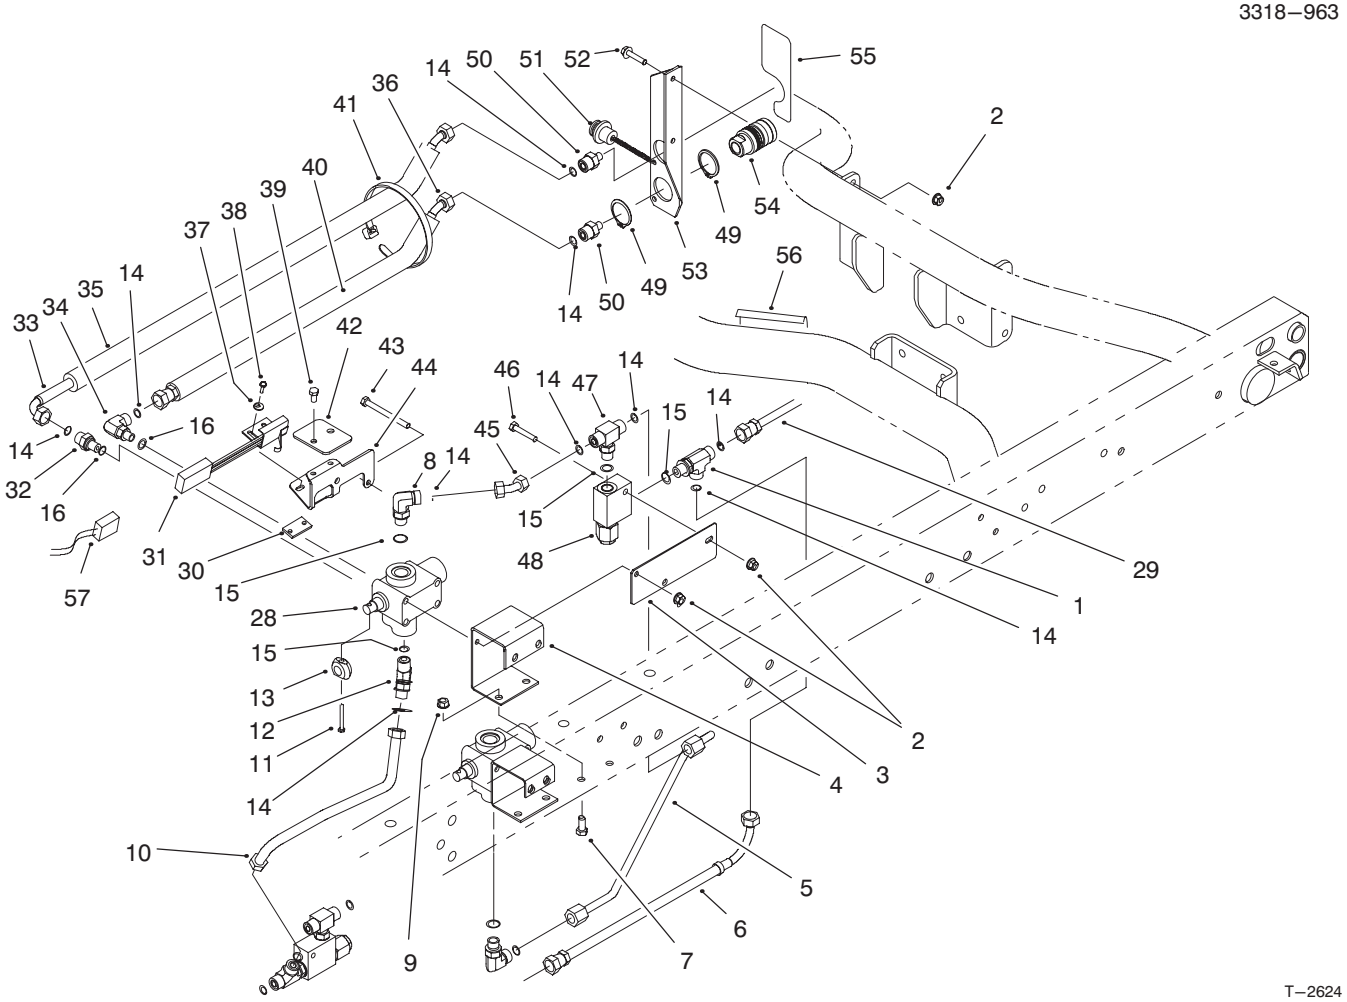


T–2624

REMOTE HYDRAULICS PLUMBING ASSEMBLY (Model 07205TC) (Continued)

Ref. No.	Part No.	Description	No. Used
53	92–2771	Rear Coupler Bracket Assy. (Incl. Ref. #55)	1
54	92–2602	Coupling – Hyd. Female	2
55	92–2610	Decal – Coupler (US)	1
*	93–9089	Decal – Coupler (CE)	1
*	92–5339	Decal – Coupler (JAP)	1

Ref. No.	Part No.	Description	No. Used
56	92–2611	Decal – Caution (US)	1
*	93–9090	Decal – Caution (CE)	1
*	92–5466	Decal – Caution (JAP)	1
57	93–9541	Harness – Wire	1

*Not Illustrated

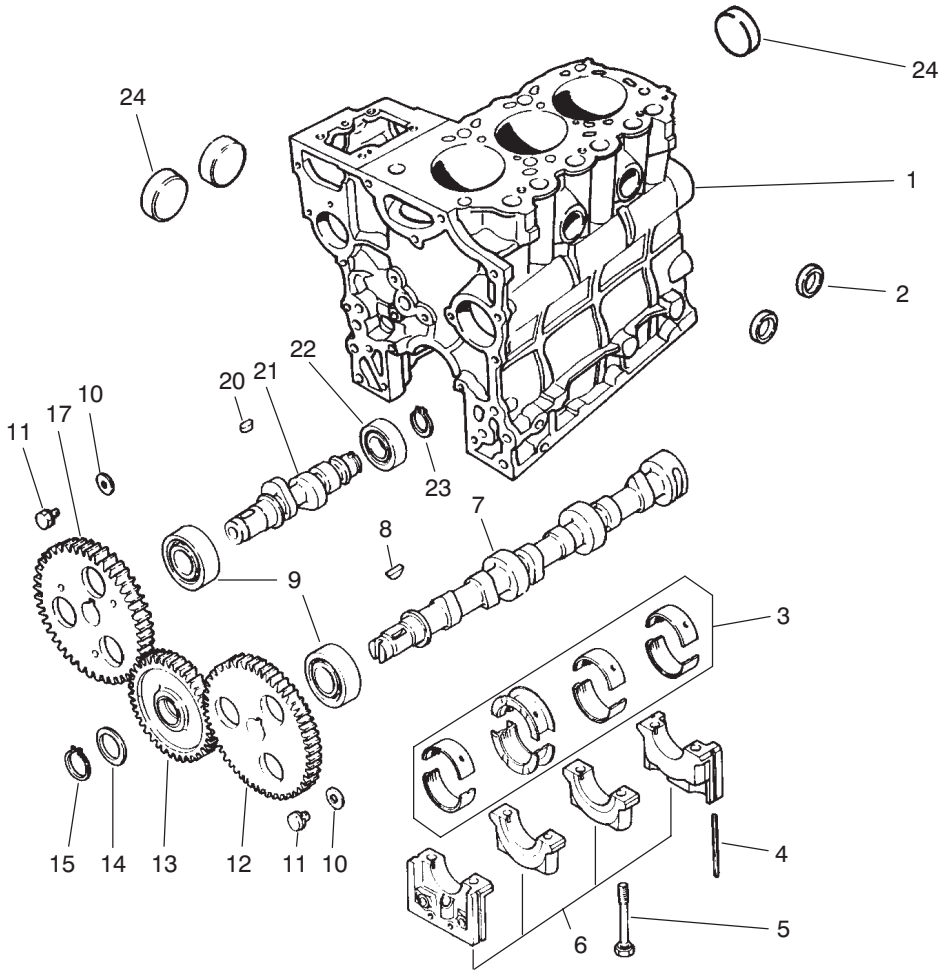


T–0564–1

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–2240	Block Sub–Assembly (Incl. Ref. #2, 5, 6 & 24)	1
2	42–7080	Cap	2
3	75–4900	Bearing Set STD	1
	67–2410	Bearing Set 0.25	1
	67–2420	Bearing Set 0.50	1
4	67–2200	Seal	4
5	67–2250	Bolt	8
6		Cap Assembly	1
7	67–3010	Cam Shaft	1
8	56–0480	Key – Woodruff	1
9	67–3030	Bearing	2

Ref. No.	Part No.	Description	No. Used
10	67–3000	Washer	2
11	42–9490	Bolt w/Washer	2
12	92–0827	Gear	1
13	92–0842	Gear Assembly	1
14	92–0839	Plate	1
15	92–0841	Ring – Retaining	1
17	92–0840	Gear	1
20	42–7840	Key	1
21	67–3060	Shaft	1
22	67–3050	Bearing	1
23	67–3080	Ring – Retaining	1
24	56–0020	Plug	3

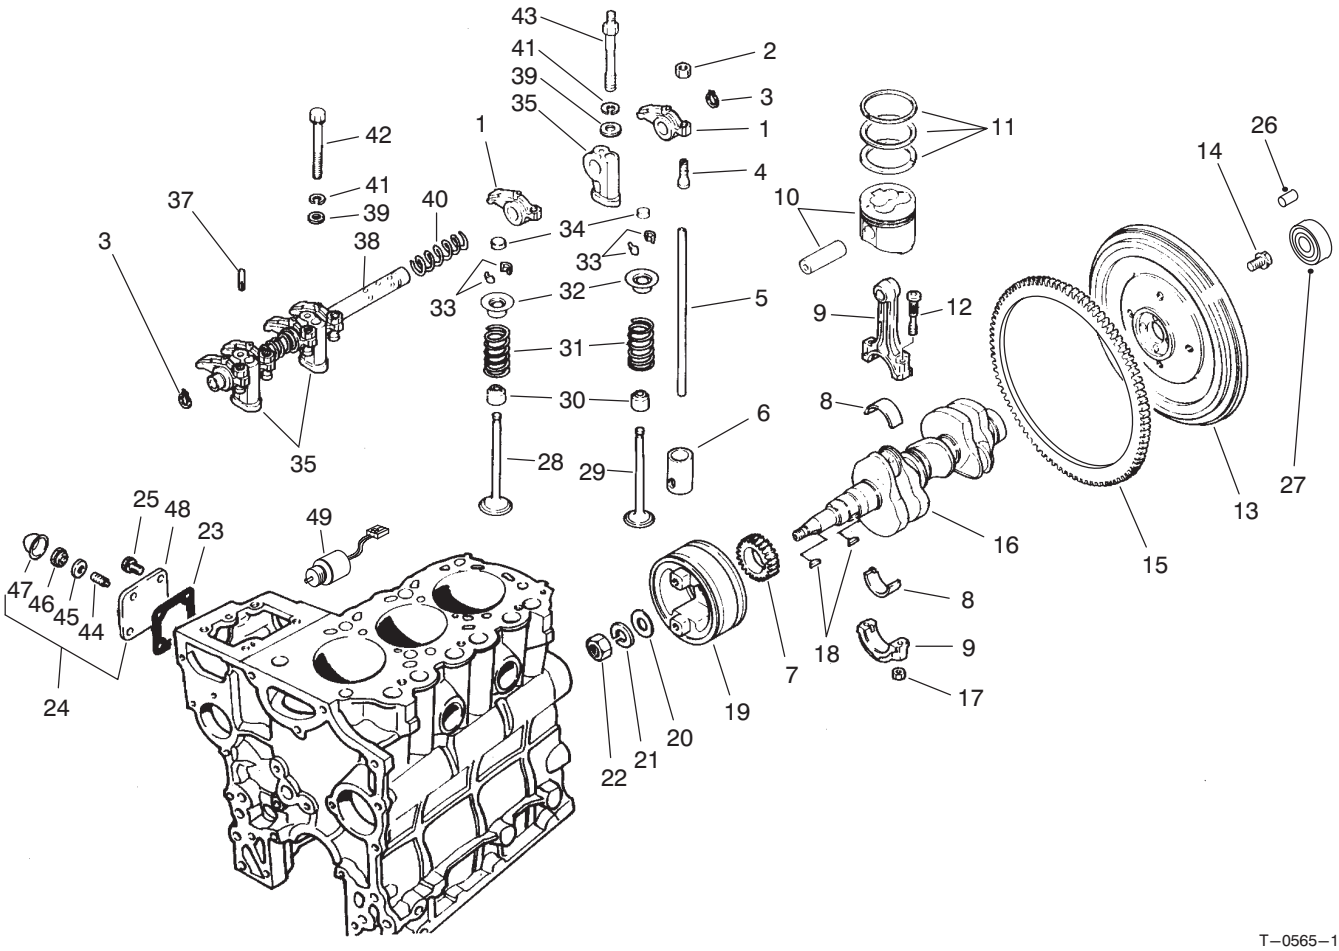


T–0565–1

VALVES AND CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3160	Arm – Rocker	6
2	67–3230	Nut – Jam	6
3	67–3240	Ring – Retaining	2
4	67–3210	Screw – Adjusting	6
5	67–3150	Rod – Push	6
6	67–3120	Tappet	6
7	92–0835	Gear	1
8	75–5010	Bearing Set STD	3
*	67–2890	Bearing Set 0.25 US	3
*	67–2900	Bearing Set 0.50 US	3
9	67–2850	Connecting Rod Assembly (Incl. Ref. #12 & 17)	3
10	92–0832	Piston & Pin Set STD	3
*	92–0833	Piston & Pin Set 0.25 OS	3
*	92–0834	Piston & Pin Set 0.50 OS	3
11	67–2790	Ring Set STD	3
*	67–2800	Ring Set 0.25 OS	3
*	67–2810	Ring Set 0.5005	3
12	67–2860	Bolt	6
13	92–0836	Flywheel Assembly (Incl. Ref. #15)	1
14	67–2990	Bolt	4
15	67–2980	Gear – Ring	1
16	92–0845	Crankshaft	1
17	42–9590	Nut	6
18	56–0480	Key – Woodruff	2

Ref. No.	Part No.	Description	No. Used
19	70–8680	Pulley – Crankshaft	1
20	67–2950	Washer	1
21	67–2960	Washer – Lock	1
22	67–2940	Nut – Jam	1
23	67–4310	Gasket	1
24	67–4250	Cover Assembly (Incl. Ref. #44–47)	1
25	42–9440	Bolt W/Washer	4
26	51–5610	Pin – Dowel	3
27	92–1914	Bearing – Ball	1
28	67–3130	Valve – Intake	3
29	67–3140	Valve – Exhaust	3
30	42–7870	Seal	6
31	67–3110	Spring	6
32	67–3100	Retainer	6
33	42–7860	Lock	12
34	67–3180	Cap	6
35	67–3200	Stay – Rocker	3
37	67–3220	Pin	1
38	67–3190	Rocker Shaft Assembly	1
39	42–9660	Washer	4
40	67–3170	Spring	2
41	67–3260	Washer	6
42	42–9510	Bolt	1
43	67–3250	Bolt – Rockers Stay	2
44	43–3160	Screw – Adjusting	1

*Not Illustrated

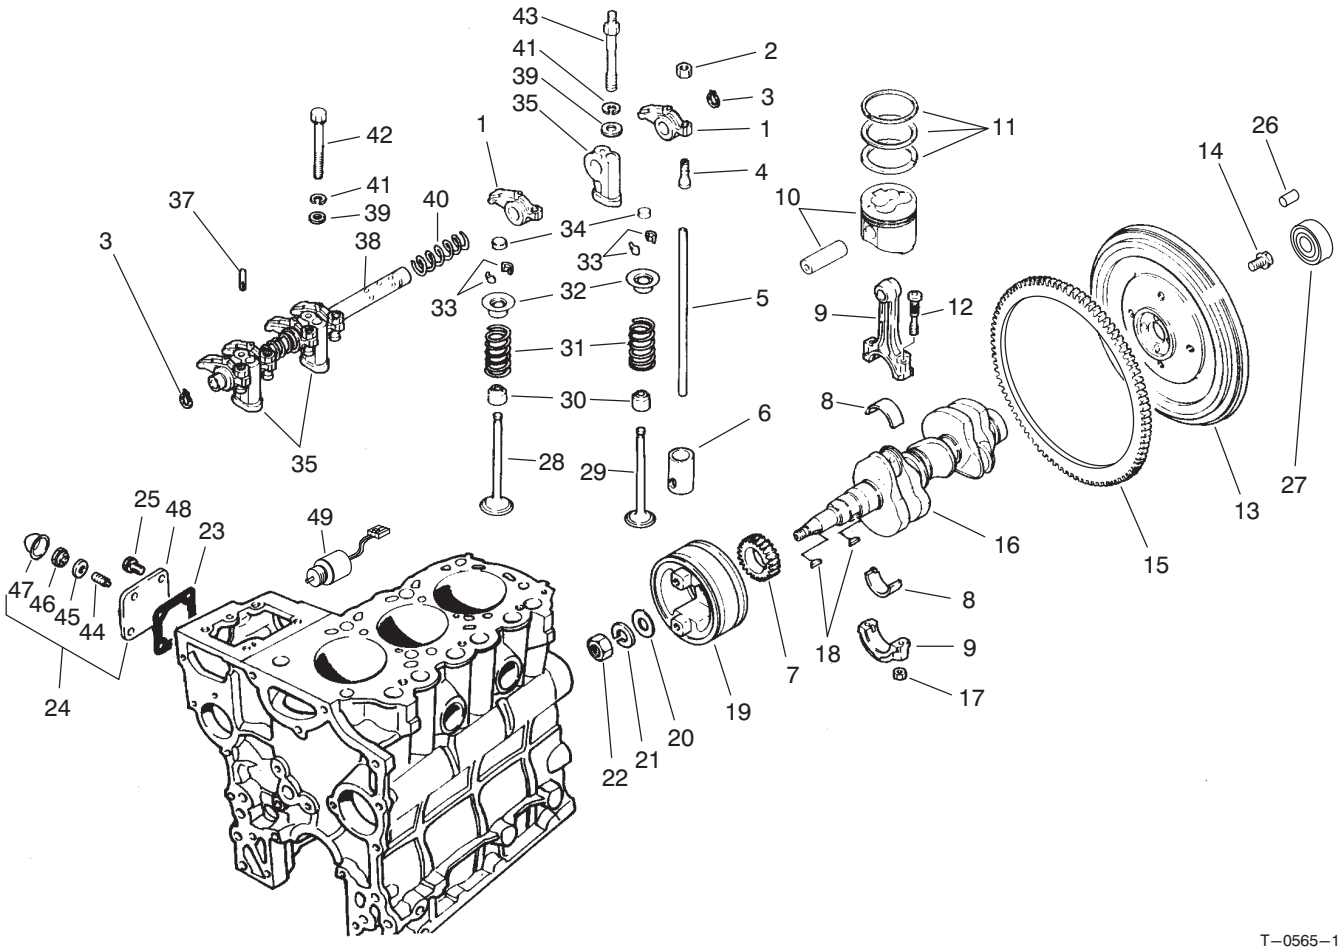


T–0565–1

VALVES AND CRANKSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	75–5120	Gasket	1
46	43–5960	Nut – Special	1
47	43–2820	Cap – Sealing	1

Ref. No.	Part No.	Description	No. Used
48	67–4250	Cover	1
49	63–7440	Solenoid – Shutoff	1


*Not Illustrated

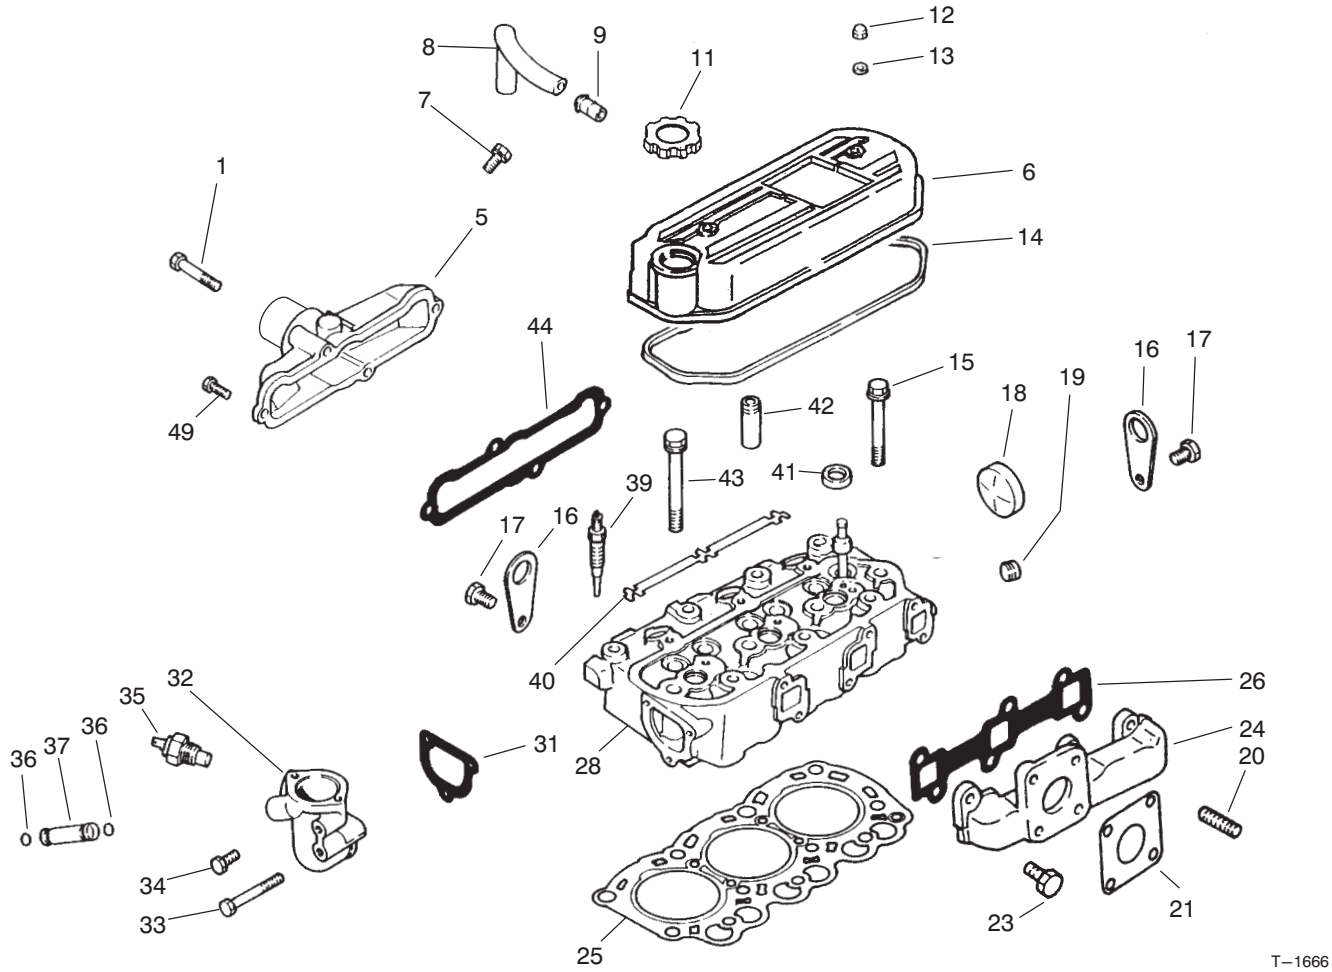

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–4400	Bolt	2
5	94–3533	Cover (Intake)	1
6	92–0846	Cover Assembly (Incl. Ref. #9)	1
7	42–9430	Bolt w/Washer	1
8	67–2670	Hose – Breather	1
9	42–7510	Pipe	1
11	92–0847	Oil Filler Cap Assembly	1
12	67–2770	Nut – Cap	2
13	67–2780	Washer	2
14	67–2760	Gasket	1
15	67–2740	Bolt – Flange	3
16	67–2680	Hanger – Engine	2
17	67–2340	Bolt w/Washer	2
18	56–0020	Plug – Expansion	1
19	67–2570	Plug – Taper	1
20	42–9570	Stud	4
21	42–9110	Gasket	1
23	67–4590	Bolt	6

Ref. No.	Part No.	Description	No. Used
24	70–8750	Manifold – Exhaust	1
25	94–1258	Gasket – Cylinder Head	1
26	67–4570	Gasket – Exhaust Manifold	1
28	93–8970	Cylinder Head Assembly (Incl. Ref. #18, 41 & 42)	1
31	67–4460	Gasket (Thermostat Fitting)	1
32	92–0837	Fitting – Thermostat	1
33	67–4470	Bolt	1
34	67–2330	Bolt	4
35	67–4510	Gauge Nut – Water Temp.	1
36	43–2710	O–Ring	2
37	67–4480	Pipe – By–Pass	1
39	92–0844	Plug – Glow	3
40	67–4690	Plate – Glow Plug	1
41	67–2710	Cap – Sealing	3
42	67–2700	Guide – Valve	6
43	67–2730	Bolt	8
44	67–4550	Gasket – Intake Manifold	1

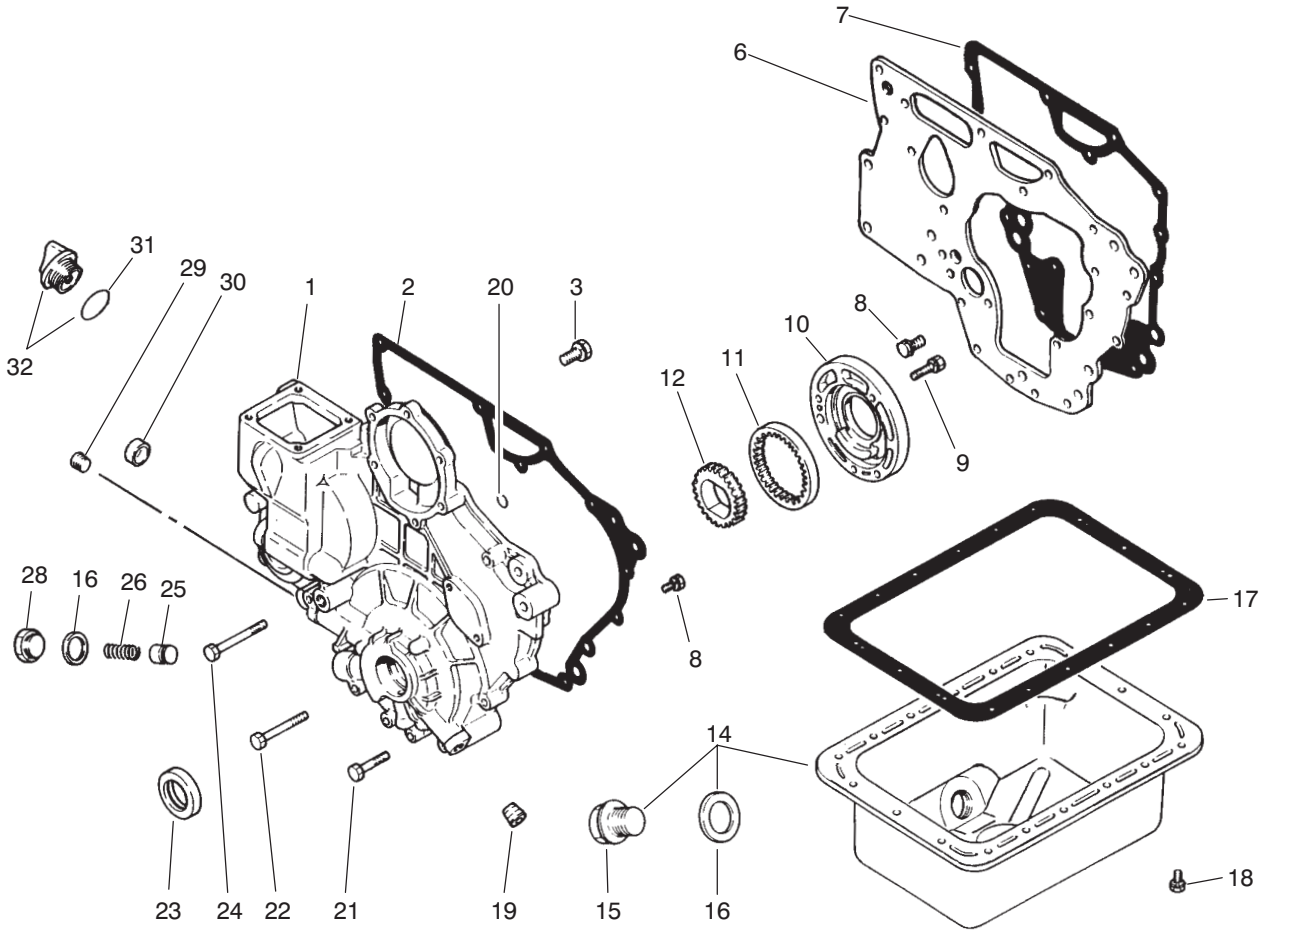


T–0567–1

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–4920	Case Sub–Assembly	1
2	67–2580	Gasket – Case	1
3	67–2340	Bolt w/Washer	3
6	67–2310	Plate	1
7	67–2320	Gasket – Plate	1
8	42–9440	Bolt w/Washer	11
9	67–2560	Bolt w/Washer	3
10	67–2550	Housing – Oil Pump	1
11	67–2540	Gear – Outer	1
12	67–2530	Gear – Inner	1
14	75–4910	Oil Pan Assembly (Incl. Ref. #15–16)	1
15	42–9260	Plug	1
16	42–7290	Gasket – Oil Drain	2
17	67–2480	Gasket – Oil Pan	1
18	42–9490	Bolt w/Washer	18

Ref. No.	Part No.	Description	No. Used
19	42–7210	Plug	1
20	67–2630	O–Ring	2
21	67–2600	Bolt	3
22	67–2610	Bolt	4
23	67–2590	Oil Seal	1
24	67–2620	Bolt	1
25	67–2500	Plunger	1
26	67–2510	Spring	1
28	67–2520	Plug	1
29	67–2570	Plug	1
30	67–2640	Cap	1
31	67–2660	O–Ring	1
32	67–2650	Oil Fill Cap Assembly (Inc. Ref. #31)	1
*	75–5040	Gasket Kit	1

*Not Illustrated

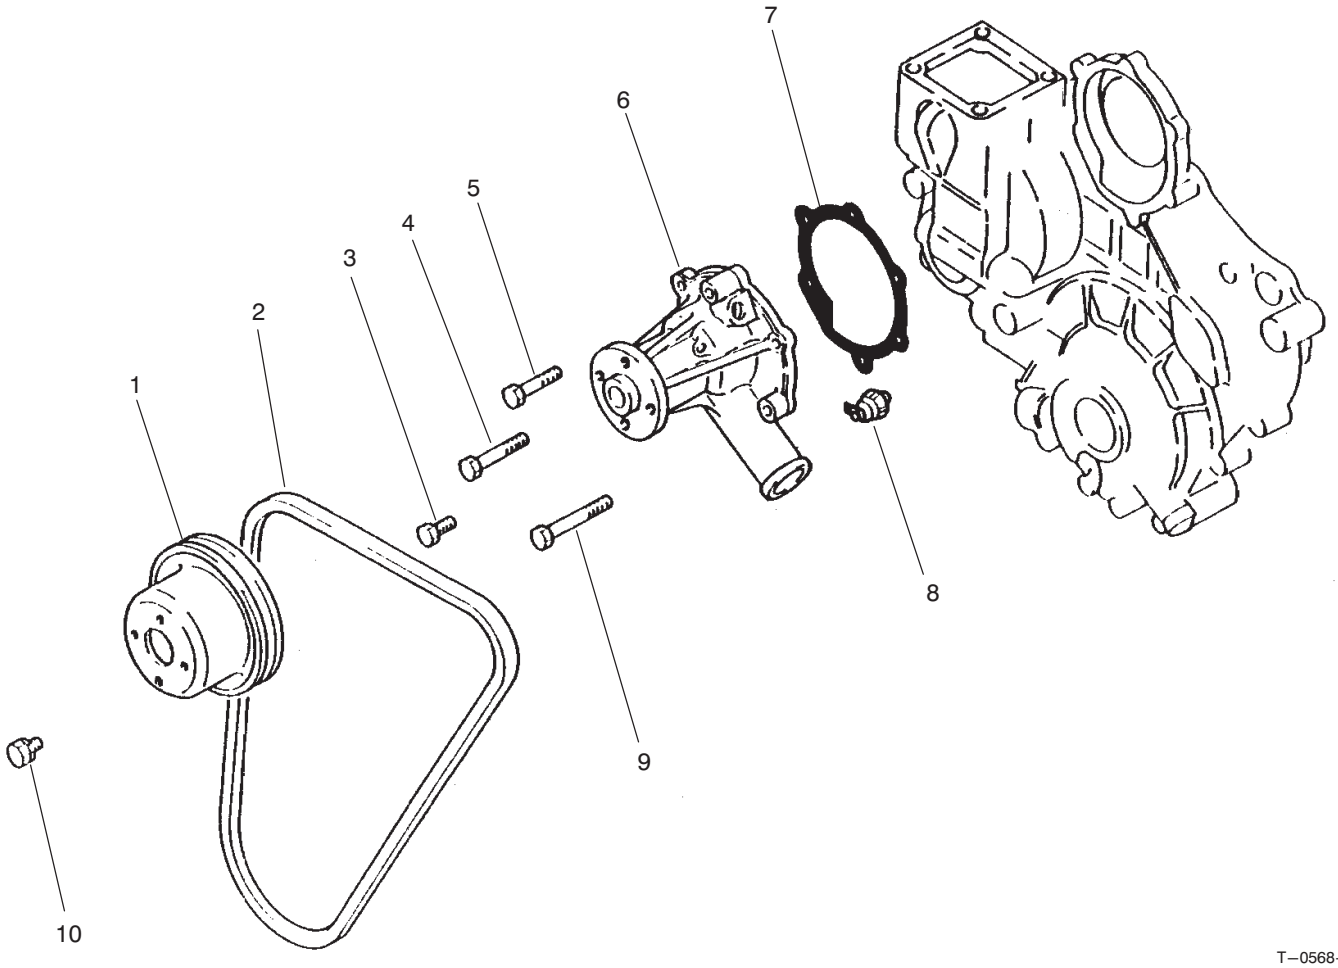


T–0568–1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–4360	Pulley	1
2	67–4410	V–Belt	1
3	67–2330	Bolt	2
4	67–4400	Bolt	1
5	67–2600	Bolt	1

Ref. No.	Part No.	Description	No. Used
6	67–4380	Pump Assembly	1
7	67–4390	Gasket	1
8	67–4350	Oil Pressure Switch	1
9	67–2610	Bolt	2
10	42–9490	Bolt w/Washer	4

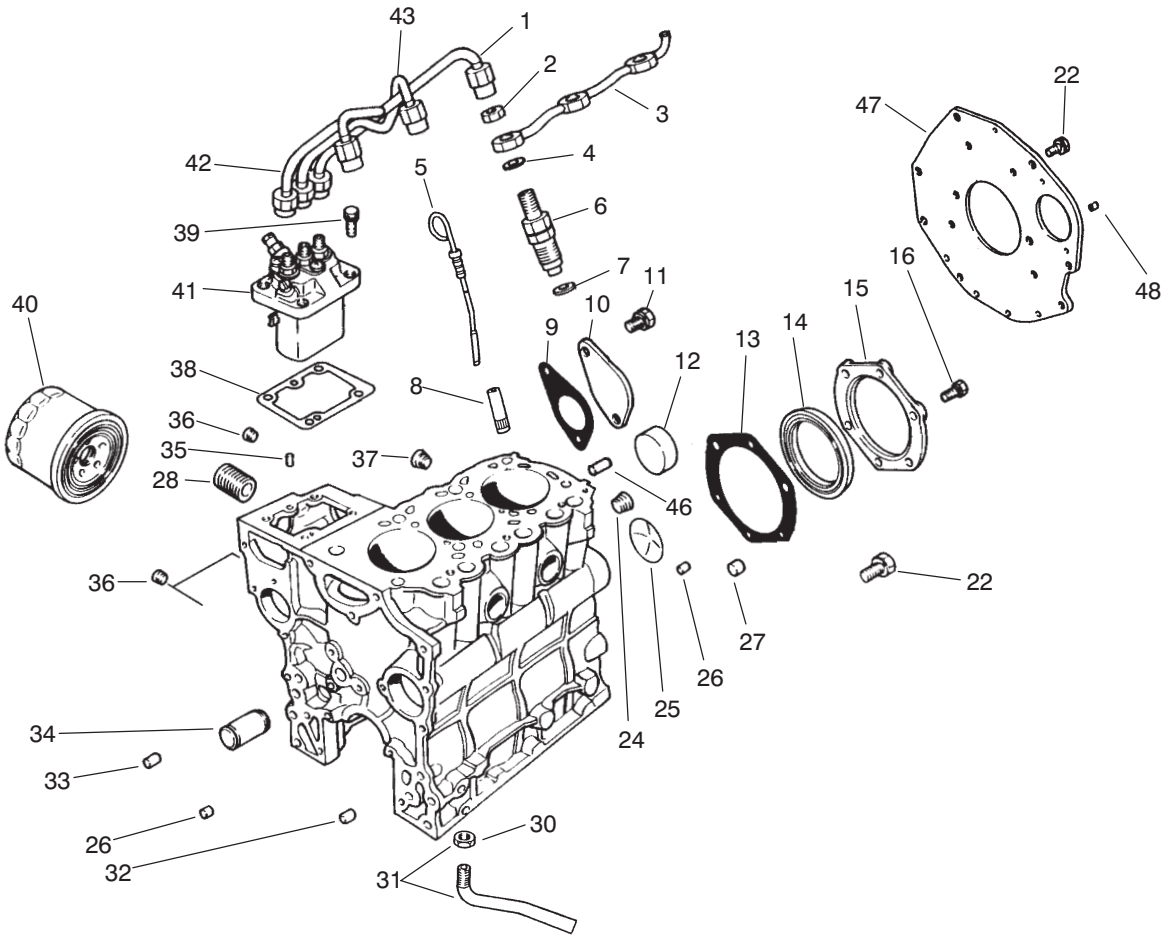


T–1667

FUEL SUPPLY & ENGINE BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3420	Assy. – Pipe No. 3	1
2	67–3430	Nut	3
3	67–3450	Pipe – Fuel Return	1
4	67–3440	Gasket	3
5	67–2450	Dipstick	1
6	67–3380	Nozzle & Holder Assembly	1
7	67–3390	Gasket	3
8	67–2220	Guide	1
9	67–2300	Gasket	1
10	67–2290	Cover	1
11	67–2340	Bolt w/Washer	2
12	56–0020	Plug	3
13	67–2280	Gasket	1
14	67–2230	Oil Seal	1
15	67–2270	Case	1
16	67–2330	Bolt	6
22	67–2440	Bolt w/Washer	6
24	67–2390	Plug	1
25	67–2350	Plug	1
26	67–2360	Bushing	2
27	67–2380	Bushing	3
28	56–1230	Shaft – Oil Filter	1
30	42–9650	Nut – Jam	1
31	67–4340	Screen Assembly (Incl. Ref. #30)	1

Ref. No.	Part No.	Description	No. Used
32	67–2370	Bushing	1
33	42–7190	Bushing	2
34	93–8972	Shaft – Idler	1
35	56–0220	Pin	2
36	67–2210	Plug	3
37	56–0100	Plug	1
38	67–3280	Shim 0.2	1
*	67–3290	Shim 0.3	1
*	67–3300	Shim 0.5	1
*	67–3310	Shim 0.4	1
*	67–3320	Shim 0.6	1
*	67–3330	Shim 0.7	1
*	67–3340	Shim 0.8	1
*	67–3350	Shim 0.9	1
*	67–3360	Shim 1.0	1
39	67–3370	Bolt w/Washer	4
40	67–4330	Oil Filter Assembly	1
41	67–3270	Pump Assembly	1
42	67–3400	Pipe No. 1 Assembly	1
43	67–3410	Pipe No. 2 Assembly	1
46	42–7160	Pin – Dowel	1
47	92–0830	Plate – Rear	1
48	92–0831	Pin – Knock	1

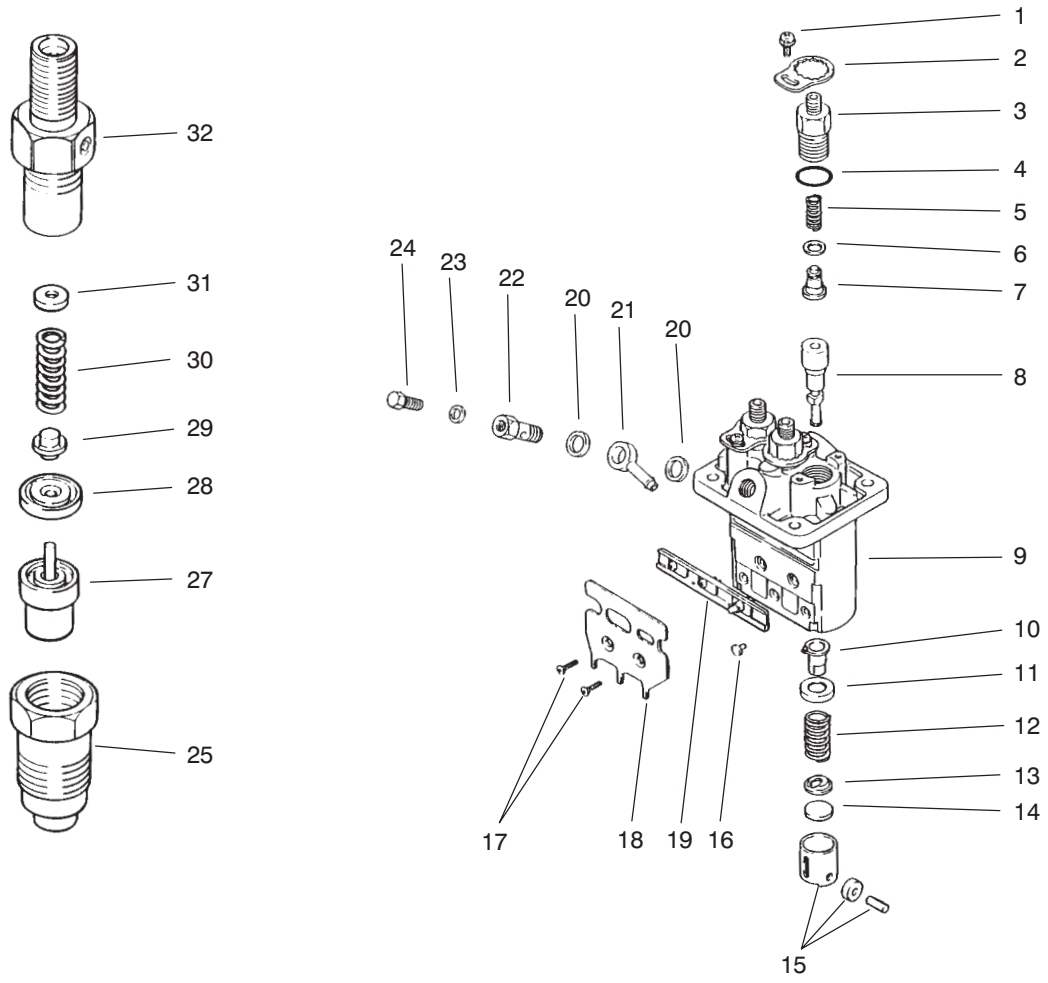


T–0570–2

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3770	Screw w/Washer	3
2	67–3760	Plate – Lock	3
3	67–3470	Holder – Delivery Valve	3
4	67–3480	O–Ring	3
5	67–3490	Spring	3
6	42–8240	Gasket	3
7	67–3500	Sub–Assy. – Valve	3
8	67–3510	Sub–Assy. – Element	3
9	67–3460	Sub–Assy. – Housing	1
10	67–3520	Sub–Assy. – Sleeve	3
11	67–3530	Seat	3
12	67–3540	Spring	3
13	67–3550	Seat	3
14	67–3560	Plate – Shim 1.85	1
*	67–3570	Plate – Shim 1.9	1
*	67–3580	Plate – Shim 1.95	1
*	67–3590	Plate – Shim 2.0	1
*	67–3600	Plate – Shim 2.05	1
*	67–3610	Plate – Shim 2.1	1
*	67–3620	Plate – Shim 2.15	1
*	67–3630	Plate – Shim 2.2	1

Ref. No.	Part No.	Description	No. Used
*	67–3640	Plate – Shim 2.25	1
*14	67–3650	Plate – Shim 2.3	1
*	67–3660	Plate – Shim 2.35	1
*	67–3670	Plate – Shim 2.4	1
*	67–3680	Plate – Shim 2.45	1
*	67–3690	Plate – Shim 2.5	1
15	67–3700	Tappet Assembly	3
16	67–3810	Pin	3
17	67–3790	Screw	2
18	67–3800	Bracket	1
19	67–3780	Rack Assembly	1
20	67–3750	Washer	2
21	67–3740	Nipple	1
22	67–3730	Screw	1
23	67–3720	Washer	1
24	67–3710	Screw – Air Bleed	1
25	67–3970	Nut	3
27	67–3960	Nozzle Assembly	3
28	67–3950	Piece	3
29	67–3940	Pin	3
30	67–3930	Spring	3

*Not Illustrated

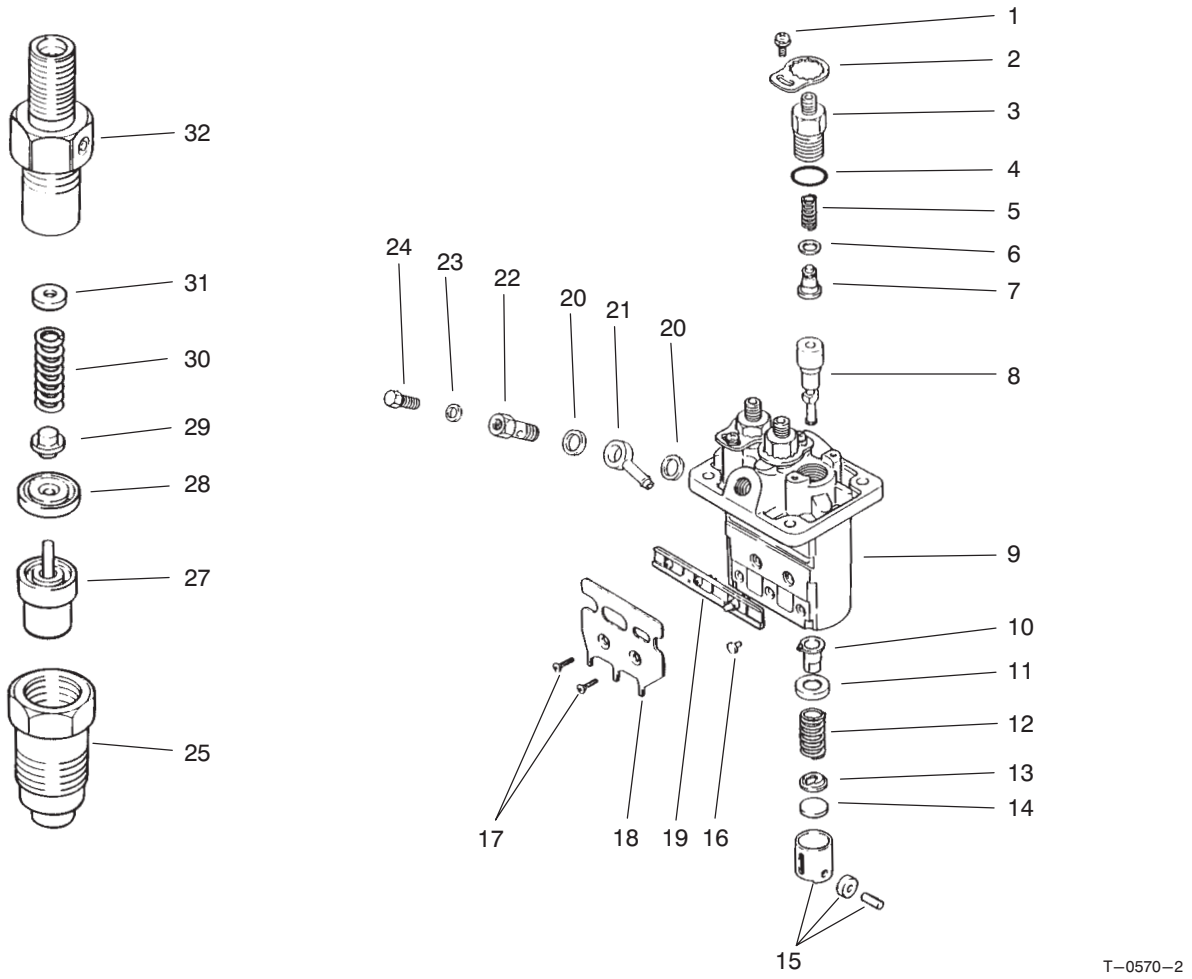


FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	67–3830	Washer 1.25	1
*	67–3840	Washer 1.3	1
*	67–3850	Washer 1.35	1
*	67–3860	Washer 1.4	1
*	67–3870	Washer 1.45	1
*	67–3880	Washer 1.5	1
*	67–3890	Washer 1.55	1
*	67–3900	Washer 1.6	1
*	67–3910	Washer 1.65	1
*	67–3920	Washer 1.7	1

Ref. No.	Part No.	Description	No. Used
32	75–5000	Body Sub–Assy.	3
*	53–8150	Pump Assembly (Incl. Ref. #1–24)	1
*	67–3380	Nozzle & Holder Assembly (Incl. Ref. #25–32)	3

*Not Illustrated

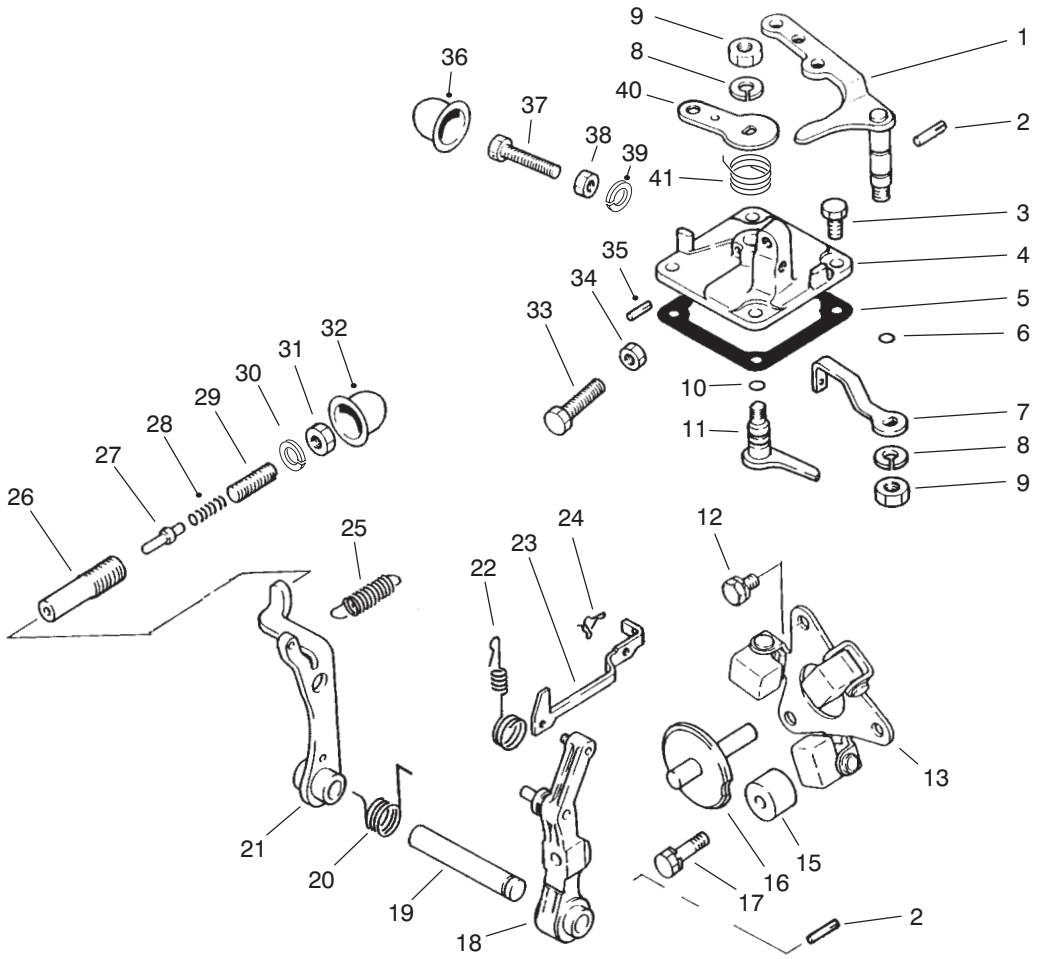

T–0571–2


GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3990	Lever – Speed Control	1
2	67–4000	Pin	2
3	67–4270	Bolt	4
†4		Cover – Governor	1
5	67–4160	Gasket	1
6	42–8830	Seal – O–Ring	1
7	75–4980	Lever – Governor Spring	1
8	67–3260	Washer	2
9	42–9640	Nut – Jam	2
10	42–8830	Seal – O–Ring	1
11	67–4140	Lever – Stop	1
12	42–9430	Bolt W/Washer	2
13	67–4040	Weight Assembly	1
15	67–4010	Stopper	1
16	67–4070	Shaft – Sliding	1
17	67–4280	Bolt W/Washer	1
18	67–4060	Lever – Governor	1
19	67–4050	Shaft – Governor	1
20	67–5040	Spring	1
21	67–4090	Lever – Tension	1
22	70–8720	Spring – Tie Rod	1

Ref. No.	Part No.	Description	No. Used
23	67–4030	Rod – Tie	1
24	67–4080	Clip	1
25	75–4990	Spring – Governor	1
†26		Case – Torque Set	1
†27		Stopper – Torque Set	1
†28		Spring – Torque Set	1
†29		Screw – Adjusting	1
†30		C–Ring – Torque Set	1
†31		Nut – Torque Set	1
†32		Cover – Torque Set	1
33	42–9420	Bolt – Speed Set	1
34	67–4290	Nut	1
35	67–4120	Pin – Grooved	1
†36		Cover – High Speed Set	1
†37		Bolt – High Speed Set	1
†38		Nut – High Speed Set	1
†39		C–Ring – High Speed Set	1
40	67–4150	Lever – Stop	1
41	94–3827	Spring – Return	1
*†		Torque Spring Set (Incl. Ref. #26–31)	1

*Not Illustrated


†Item must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

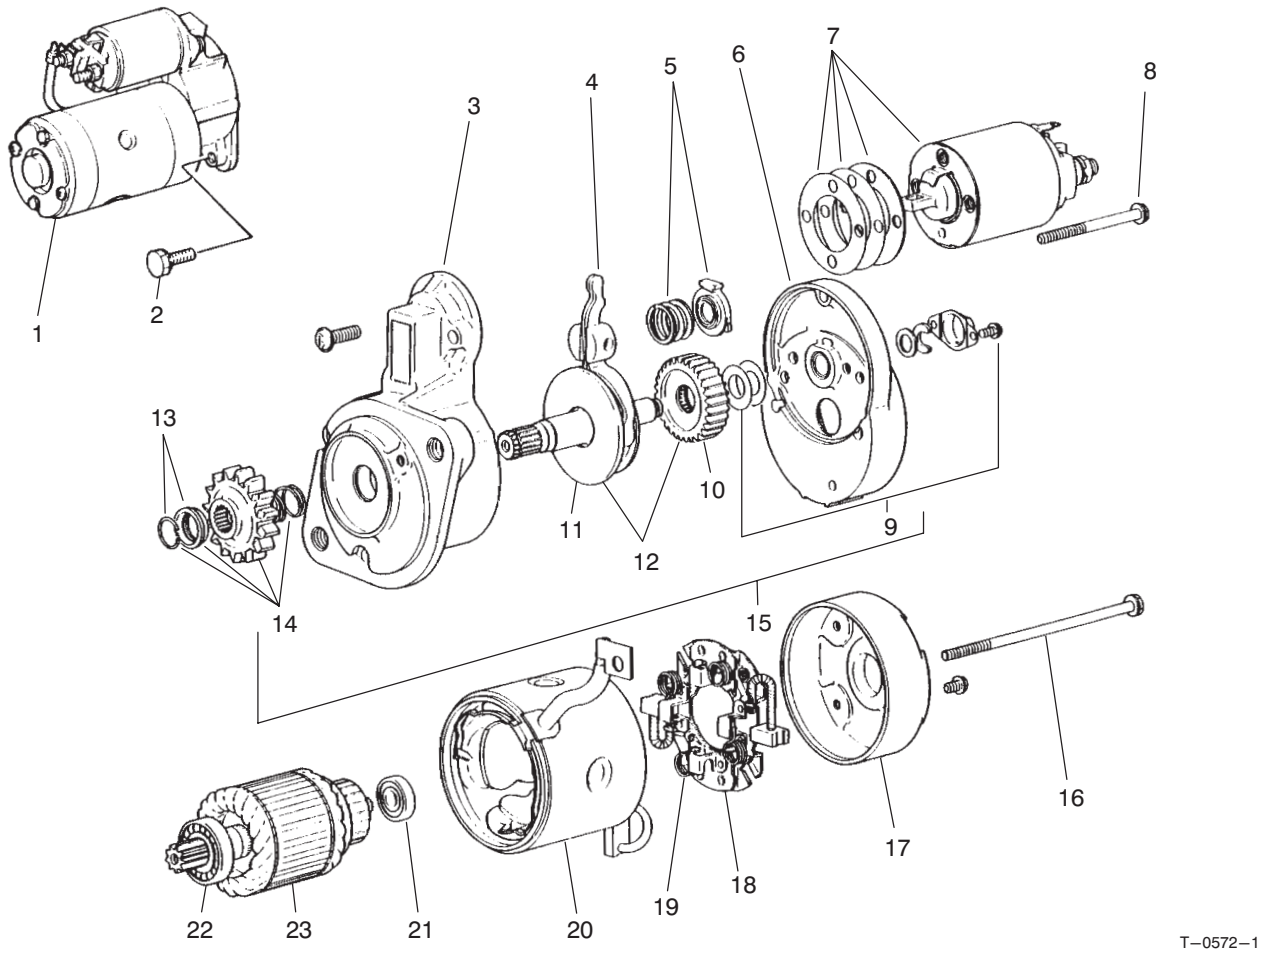

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–4600	Starter Assembly (Incl. Ref. #3–23)	1
2	92–0843	Bolt w/Washer	2
3	67–4710	Front Bracket Assembly	1
4	67–4720	Lever Assembly	1
5	67–4730	Spring Set	1
6	67–4740	Center Bracket Assembly	1
7	67–4750	Switch Assembly	1
8	52–1570	Bolt Set	1
9	56–1680	Cover Set	1
10	56–1670	Gear	1
11	67–4790	Shaft Assembly	1
12	67–4780	Gear Set (Incl. Ref. #10 & 11)	1
13	56–1640	Stopper Set	1

Ref. No.	Part No.	Description	No. Used
14	67–4770	Pinion Set (Incl. Ref. #13)	1
15	67–4760	Shaft Assembly (Incl. Ref. #9 – 12 & 14)	1
16	56–1610	Bolt	1
17	56–1720	Assy. – Bracket (Rear)	1
18	56–1700	Brush Holder Assembly (Incl. Ref. #19)	1
19	56–1710	Spring – Brush	4
20	67–4800	Yoke Assembly	1
21	56–1600	Bearing – Rear	1
22	56–1590	Bearing – Front	1
23	56–1580	Armature Set (Incl. Ref. #21 & 22)	1

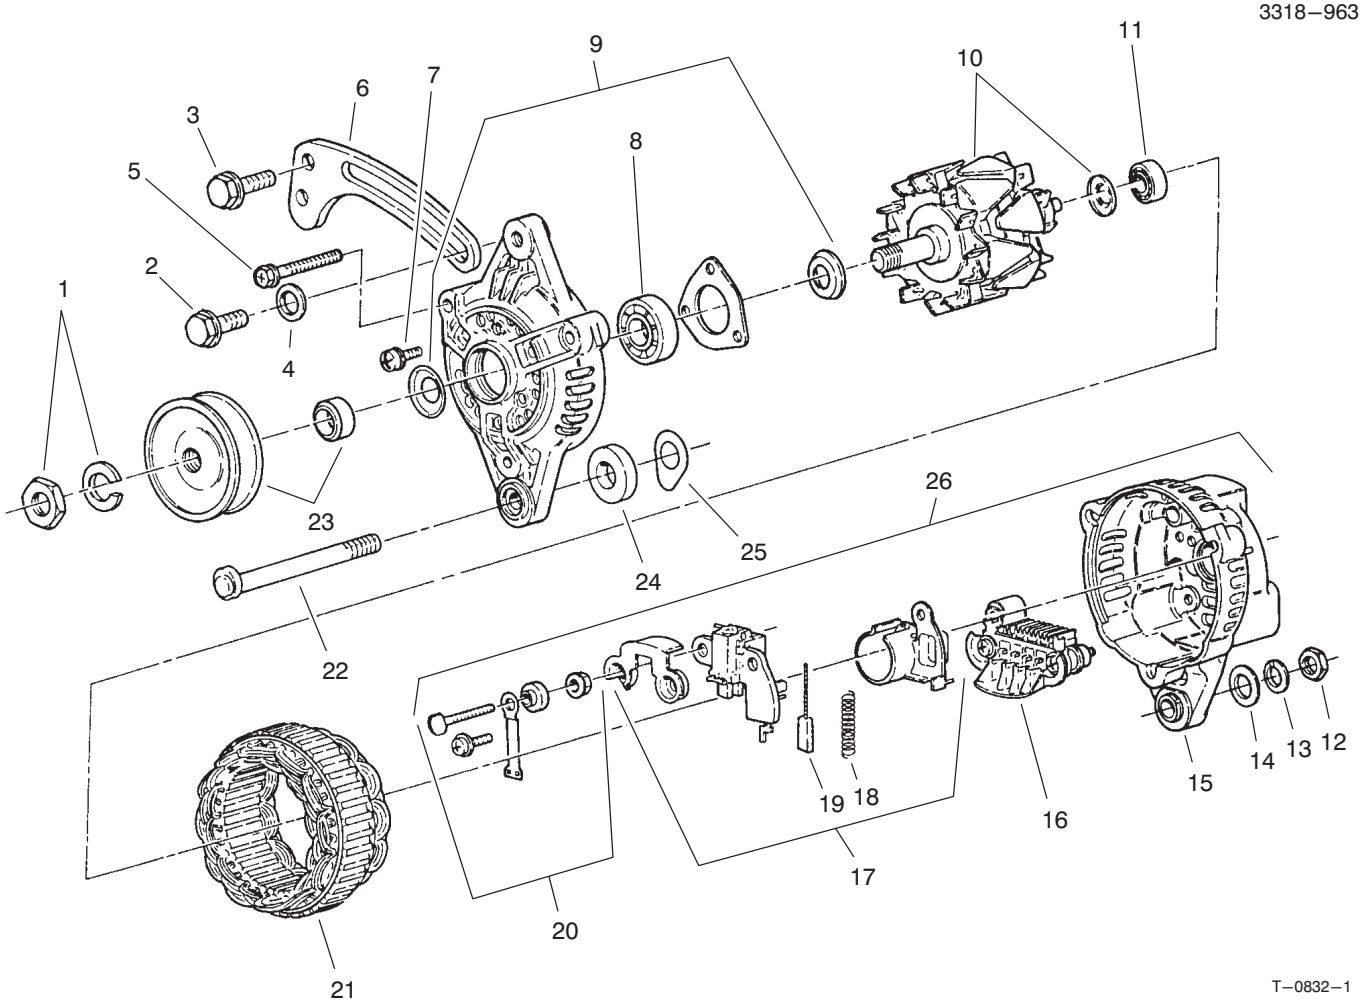

T–0832–1

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43–1920	Nut – Set	1
2	67–4660	Bolt – Flange	1
3	42–9440	Bolt w/Washer	1
4	54–8660	Washer – Flat	1
5	67–4820	Bolt Set	1
6	75–4940	Brace – Generator	1
7	67–4840	Screw – Set	1
8	67–4850	Bearing – Front	1
9	67–4830	Front Bracket Assembly (Incl. Ref. #7 & 8)	1
10	67–4860	Rotor Assembly (Incl. Ref. #11)	1
11	67–4870	Bearing – Rear	1
12	67–4670	Nut	1
13	67–3260	Washer – Lock	1
14	42–9660	Washer – Flat	1

Ref. No.	Part No.	Description	No. Used
15	67–4890	Rear Bracket Assembly (Incl. Ref. #16–20)	1
16	67–4930	Rectifier Assembly	1
17	67–4910	Regulator Assembly (Incl. Ref. #18 & 19)	1
18	43–0510	Spring – Brush	2
19	67–4920	Brush	2
20	67–4900	Terminal Set	1
21	67–4880	Stator Assembly	1
22	67–4640	Bolt	1
23	67–4810	Pulley Set	1
24	67–4620	Spacer	1
25	43–0370	Shim	5
*	67–4630	Alternator Assembly (Incl. Ref. #1–25)	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
111071	Bumper	17	4	2
116749	Horn Assembly	1	21	1
146489	Rivet – Pop	1	28	8
5–3637	Washer – Flat	42	7	1
5–3637	Washer – Flat	33	16	1
7–0030	Bolt – Shoulder	33	3	1
12–5450	Screw – Hex. Hd.	41	13	4
18–1720	Joint – Ball	33	49	3
18–2830	Horn Switch Assembly	2	31	1
18–4260	Assy. – Screw/Lockwasher	7	9	2
18–4270	Clamp – Ball Return Guide	7	8	1
18–4340	Plug – Rack Piston End	7	6	1
18–5160	Seal Kit – Pitman Shaft	8	*	1
18–5170	Seal Kit – Valve Ring	8	*	1
18–5180	Bearing Kit – Lower Thrust	8	*	1
18–5190	Ball – Chrome Alloy	7	10	11
19–4050	Knob	40	8	2
19–4050	Knob	29	34	3
20–7150	Toggle Switch Assembly	3	62	1
21–0360	Nut – Hex.	10	6	1
21–1830	Spring – Tension	9	28	1
21–9260	Spacer	6	4	1
22–8330	Plug	47	1	2
22–8340	Spring	47	3	2
22–8350	Ball	47	4	2
22–8360	Pin – Cam	47	6	2
22–8370	Seat–Check Valve	47	5	2
22–8380	Retainer – Spring	47	10	2
22–8410	Spring	47	11	1
22–8420	Spool	47	8	1
22–8480	Ring – Retaining, Spool	47	13	1
22–8490	Ring – Retaining	47	14	1
22–8500	O–Ring	47	9	2
23–3030	Spacer	47	12	1
23–7270	Nut – Lug	23	4	10
23–7270	Nut – Lug	26	18	10
24–7922	Conduit – Hose (Europe)	45	36	1
24–7923	Conduit – Hose (Europe)	45	35	2
26–0071	Bumper	1	9	2
27–2360	Ignition Switch Assembly	2	43	1
27–5360	Hose – Fuel	33	13	1
27–5360	Hose – Fuel	41	14	2
27–6590	Spacer – Thick	31	7	4
27–6600	Spacer – Thin	31	3	4
28–8200	O–Ring	7	27	1
28–8210	Bolt – Flange Hex. Hd.	7	17	4
28–8220	Nut – Lash Adjuster	7	16	1
28–8270	Seal Service Kit – End Plug	8	*	1
28–8280	Seal Kit – Side Cover	7	14	1
28–8290	Seal Service Kit	8	*	1
33–1300	Assembly – Element	43	5	1
33–1310	Baffle	43	8	1
33–1330	Assembly – Nut	43	6	1
33–1340	Clamp Assembly	43	7	1
33–1350	Band Assembly	43	3	2
33–3090	Bushing – Flange	21	7	4
36–3400	Decal – No Step	40	10	1
36–4790	Washer – Thrust	33	39	3
39–7310	O–Ring	7	35	3
39–7310	Seal – O–Ring	44	29	2
39–7420	Washer – Lock	6	22	1
39–7420	Washer – Lock	7	42	1
39–7440	Nut – Lock	6	23	1
39–7440	Nut – Pitman Arm	7	41	1
42–3560	Screw – Shoulder	19	15	1
42–7080	Cap	52	2	2
42–7160	Pin – Dowel	58	46	1
42–7190	Bushing	58	33	2
42–7210	Plug	56	19	1
42–7290	Gasket – Oil Drain	56	16	2
42–7510	Pipe	55	9	1
42–7840	Key	52	20	1
42–7860	Lock	53	33	12
42–7870	Seal	53	30	6
42–8240	Gasket	59	6	3
42–8830	Seal – O–Ring	61	6	1
42–8830	Seal – O–Ring	61	10	1
42–9110	Gasket	55	21	1
42–9110	Gasket – Muffler	33	25	1
42–9250	Screw – Cap Hex. Hd.	14	43	1
42–9260	Plug	56	15	1
42–9420	Bolt – Speed Set	61	33	1
42–9430	Bolt W/Washer	61	12	2
42–9430	Bolt w/Washer	55	7	1
42–9440	Bolt & Washer	33	54	1
42–9440	Bolt W/Washer	53	25	4
42–9440	Bolt w/Washer	63	3	1
42–9440	Bolt w/Washer	56	8	11
42–9440	Screw – Cap Hex. Hd.	33	1	3
42–9490	Bolt w/Washer	57	10	4
42–9490	Bolt w/Washer	52	11	2
42–9490	Bolt w/Washer	56	18	18
42–9510	Bolt	53	42	1
42–9530	Screw – Cap Hex. Hd.	35	10	25
42–9530	Screw – Cap Hex. Hd.	14	21	9
42–9570	Stud	55	20	4
42–9570	Stud – Muffler	33	24	4
42–9580	Nut – Lock	33	33	2
42–9590	Nut	53	17	6
42–9640	Nut – Jam	61	9	2
42–9650	Nut – Jam	58	30	1
42–9660	Washer	53	39	4
42–9660	Washer – Flat	63	14	1
42–9850	Washer – Lock	14	20	12
42–9850	Washer – Lock	38	21	3
42–9850	Washer – Lock	33	26	4
42–9850	Washer – Lock	35	32	42
43–0370	Shim	63	25	5
43–0510	Spring – Brush	63	18	2
43–1710	Rod – Auxiliary Lever	50	28	1
43–1920	Nut – Set	63	1	1
43–1950	Valve	45	9	1
43–2550	Filter	41	37	1
43–2560	Gasket	41	36	1
43–2570	Gasket	41	38	1
43–2580	Magnet	41	35	1
43–2710	O–Ring	55	36	2
43–2820	Cap – Sealing	54	47	1
43–3160	Screw – Adjusting	53	44	1
43–5150	Piston	46	11	1
43–5920	Washer – Lock	33	17	1
43–5960	Nut – Special	54	46	1
43–5970	Nut	41	23	2
43–6550	Ring – Retaining	6	10	2
44–0760	Decal – Warning	21	33	2
44–2230	Disc – Rubber	31	4	2
46–3710	Fitting – 90˚	41	32	2
46–7510	Hood – Inlet, Air	42	21	1
46–8091	Screw – Hex. Flange Hd.	29	10	4
48–7560	Screw – Cap Hex. Hd.	35	24	1
48–7650	Screw – Cap Hex. Hd.	41	1	2
48–7700	Screw – Cap Hex. Hd.	38	9	3
48–7700	Screw – Cap Hex. Hd.	33	23	6
48–7730	Screw – Cap Hex. Hd.	35	18	5
48–7740	Screw – Cap Hex. Hd.	6	15	4
48–7880	Nut – Lock	33	18	1
48–7930	Nut	33	27	4
48–7930	Nut – Hex.	35	2	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
48–8000	Washer – Lock	41	24	2
48–8010	Washer – Lock	33	52	2
48–8070	Washer – Flat	6	6	1
48–9520	Nut – Lock	34	11	3
48–9520	Nut – Lock	25	28	2
48–9590	Washer – Lock	33	29	10
49–7810	Nut – Lock	41	42	2
49–9150	Washer – Flat	19	2	1
49–9150	Washer – Flat	18	36	1
51–5610	Pin – Alignment	33	20	3
51–5610	Pin – Dowel	53	26	3
52–1570	Bolt Set	62	8	1
53–8150	Fuel Pump Assembly	41	39	1
53–8150	Pump Assembly	60	*	1
54–0110	Element – Oil Filter	41	30	1
54–8660	Washer – Flat	63	4	1
55–7120	Switch – Brake Light	9	32	1
56–0020	Plug	58	12	3
56–0020	Plug	52	24	3
56–0020	Plug – Expansion	55	18	1
56–0100	Plug	58	37	1
56–0220	Pin	58	35	2
56–0480	Key – Woodruff	52	8	1
56–0480	Key – Woodruff	53	18	2
56–1230	Shaft – Oil Filter	58	28	1
56–1580	Armature Set	62	23	1
56–1590	Bearing – Front	62	22	1
56–1600	Bearing – Rear	62	21	1
56–1610	Bolt	62	16	1
56–1640	Stopper Set	62	13	1
56–1670	Gear	62	10	1
56–1680	Cover Set	62	9	1
56–1700	Brush Holder Assembly	62	18	1
56–1710	Spring – Brush	62	19	4
56–1720	Assy. – Bracket (Rear)	62	17	1
56–7973	Clamp – Hydraulic Tube	44	17	4
57–6380	Screw – Cap Hex. Hd.	14	27	3
58–4250	Magnet	29	11	2
60–6750	Screw – Cap Hex. Hd.	35	4	11
62–5550	Decal – TORO	1	2	1
62–7650	Gasket – Sending Unit	42	3	1
63–7440	Solenoid – Shutoff	54	49	1
63–7640	Unit – Sending	42	4	1
63–7790	Screw – Cap Hex. Hd.	33	28	12
63–8140	Pulley	29	19	1
63–8280	Head – Filter	41	18	1
63–8290	Vent – Air	41	19	1
63–8300	Element – Filter	41	20	1
63–8310	Drain – Filter	41	21	1
63–8360	Key – Ignition	2	10	1
63–9230	Battery	40	7	1
63–9640	Hose – Fuel	42	12	1
63–9640	Hose – Fuel Tank to Pump	41	33	1
65–5100	Handle	29	9	2
65–5220	Screw – Hex. Socket Hd.	18	40	3
65–5360	Spring – Extension	6	35	1
66–3160	Screw – Cap Hex. Hd.	14	6	4
66–3160	Screw – Cap Hex. Hd.	34	22	7
66–3160	Screw – Cap Hex. Hd.	14	39	4
66–3240	Cap – Radiator	29	12	1
66–4850	Spring – Compression	49	11	1
66–6840	Decal – Caution	25	29	2
66–8700	Glow Plug Indicator Assy.	41	26	1
66–8800	Relay	41	12	1
67–2200	Seal	52	4	4
67–2210	Plug	58	36	3
67–2220	Guide	58	8	1
67–2230	Oil Seal	58	14	1
67–2240	Block Sub–Assembly	52	1	1
67–2250	Bolt	52	5	8
67–2270	Case	58	15	1
67–2280	Gasket	58	13	1
67–2290	Cover	58	10	1
67–2300	Gasket	58	9	1
67–2310	Plate	56	6	1
67–2320	Gasket – Plate	56	7	1
67–2330	Bolt	57	3	2
67–2330	Bolt	58	16	6
67–2330	Bolt	55	34	4
67–2340	Bolt w/Washer	56	3	3
67–2340	Bolt w/Washer	58	11	2
67–2340	Bolt w/Washer	55	17	2
67–2350	Plug	58	25	1
67–2360	Bushing	58	26	2
67–2370	Bushing	58	32	1
67–2380	Bushing	58	27	3
67–2390	Plug	58	24	1
67–2410	Bearing Set 0.25	52		1
67–2420	Bearing Set 0.50	52		1
67–2440	Bolt w/Washer	58	22	6
67–2450	Dipstick	58	5	1
67–2480	Gasket – Oil Pan	56	17	1
67–2500	Plunger	56	25	1
67–2510	Spring	56	26	1
67–2520	Plug	56	28	1
67–2530	Gear – Inner	56	12	1
67–2540	Gear – Outer	56	11	1
67–2550	Housing – Oil Pump	56	10	1
67–2560	Bolt w/Washer	56	9	3
67–2570	Plug	56	29	1
67–2570	Plug – Taper	55	19	1
67–2580	Gasket – Case	56	2	1
67–2590	Oil Seal	56	23	1
67–2600	Bolt	57	5	1
67–2600	Bolt	56	21	3
67–2610	Bolt	57	9	2
67–2610	Bolt	56	22	4
67–2620	Bolt	56	24	1
67–2630	O–Ring	56	20	2
67–2640	Cap	56	30	1
67–2650	Oil Fill Cap Assembly	56	32	1
67–2660	O–Ring	56	31	1
67–2670	Hose – Breather	55	8	1
67–2680	Hanger – Engine	55	16	2
67–2700	Guide – Valve	55	42	6
67–2710	Cap – Sealing	55	41	3
67–2730	Bolt	55	43	8
67–2740	Bolt – Flange	55	15	3
67–2760	Gasket	55	14	1
67–2770	Nut – Cap	55	12	2
67–2780	Washer	55	13	2
67–2790	Ring Set STD	53	11	3
67–2800	Ring Set 0.25 OS	53	*	3
67–2810	Ring Set 0.5005	53	*	3
67–2850	Connecting Rod Assembly	53	9	3
67–2860	Bolt	53	12	6
67–2890	Bearing Set 0.25 US	53	*	3
67–2900	Bearing Set 0.50 US	53	*	3
67–2940	Nut – Jam	53	22	1
67–2950	Washer	53	20	1
67–2960	Washer – Lock	53	21	1
67–2980	Gear – Ring	53	15	1
67–2990	Bolt	53	14	4
67–3000	Washer	52	10	2
67–3010	Cam Shaft	52	7	1
67–3030	Bearing	52	9	2
67–3050	Bearing	52	22	1
67–3060	Shaft	52	21	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
67–3080	Ring – Retaining	52	23	1
67–3100	Retainer	53	32	6
67–3110	Spring	53	31	6
67–3120	Tappet	53	6	6
67–3130	Valve – Intake	53	28	3
67–3140	Valve – Exhaust	53	29	3
67–3150	Rod – Push	53	5	6
67–3160	Arm – Rocker	53	1	6
67–3170	Spring	53	40	2
67–3180	Cap	53	34	6
67–3190	Rocker Shaft Assembly	53	38	1
67–3200	Stay – Rocker	53	35	3
67–3210	Screw – Adjusting	53	4	6
67–3220	Pin	53	37	1
67–3230	Nut – Jam	53	2	6
67–3240	Ring – Retaining	53	3	2
67–3250	Bolt – Rockers Stay	53	43	2
67–3260	Washer	61	8	2
67–3260	Washer	53	41	6
67–3260	Washer – Lock	63	13	1
67–3270	Pump Assembly	58	41	1
67–3280	Shim 0.2	58	38	1
67–3290	Shim 0.3	58	*	1
67–3300	Shim 0.5	58	*	1
67–3310	Shim 0.4	58	*	1
67–3320	Shim 0.6	58	*	1
67–3330	Shim 0.7	58	*	1
67–3340	Shim 0.8	58	*	1
67–3350	Shim 0.9	58	*	1
67–3360	Shim 1.0	58	*	1
67–3370	Bolt w/Washer	58	39	4
67–3380	Nozzle & Holder Assembly	60	*	3
67–3380	Nozzle & Holder Assembly	58	6	1
67–3390	Gasket	58	7	3
67–3400	Pipe No. 1 Assembly	58	42	1
67–3410	Pipe No. 2 Assembly	58	43	1
67–3420	Assy. – Pipe No. 3	58	1	1
67–3430	Nut	58	2	3
67–3440	Gasket	58	4	3
67–3450	Pipe – Fuel Return	58	3	1
67–3460	Sub–Assy. – Housing	59	9	1
67–3470	Holder – Delivery Valve	59	3	3
67–3480	O–Ring	59	4	3
67–3490	Spring	59	5	3
67–3500	Sub–Assy. – Valve	59	7	3
67–3510	Sub–Assy. – Element	59	8	3
67–3520	Sub–Assy. – Sleeve	59	10	3
67–3530	Seat	59	11	3
67–3540	Spring	59	12	3
67–3550	Seat	59	13	3
67–3560	Plate – Shim 1.85	59	14	1
67–3570	Plate – Shim 1.9	59	*	1
67–3580	Plate – Shim 1.95	59	*	1
67–3590	Plate – Shim 2.0	59	*	1
67–3600	Plate – Shim 2.05	59	*	1
67–3610	Plate – Shim 2.1	59	*	1
67–3620	Plate – Shim 2.15	59	*	1
67–3630	Plate – Shim 2.2	59	*	1
67–3640	Plate – Shim 2.25	59	*	1
67–3650	Plate – Shim 2.3	59	*14	1
67–3660	Plate – Shim 2.35	59	*	1
67–3670	Plate – Shim 2.4	59	*	1
67–3680	Plate – Shim 2.45	59	*	1
67–3690	Plate – Shim 2.5	59	*	1
67–3700	Tappet Assembly	59	15	3
67–3710	Screw – Air Bleed	59	24	1
67–3720	Washer	59	23	1
67–3730	Screw	59	22	1
67–3740	Nipple	59	21	1
67–3750	Washer	59	20	2
67–3760	Plate – Lock	59	2	3
67–3770	Screw w/Washer	59	1	3
67–3780	Rack Assembly	59	19	1
67–3790	Screw	59	17	2
67–3800	Bracket	59	18	1
67–3810	Pin	59	16	3
67–3830	Washer 1.25	60	31	1
67–3840	Washer 1.3	60	*	1
67–3850	Washer 1.35	60	*	1
67–3860	Washer 1.4	60	*	1
67–3870	Washer 1.45	60	*	1
67–3880	Washer 1.5	60	*	1
67–3890	Washer 1.55	60	*	1
67–3900	Washer 1.6	60	*	1
67–3910	Washer 1.65	60	*	1
67–3920	Washer 1.7	60	*	1
67–3930	Spring	59	30	3
67–3940	Pin	59	29	3
67–3950	Piece	59	28	3
67–3960	Nozzle Assembly	59	27	3
67–3970	Nut	59	25	3
67–3990	Lever – Speed Control	61	1	1
67–4000	Pin	61	2	2
67–4010	Stopper	61	15	1
67–4030	Rod – Tie	61	23	1
67–4040	Weight Assembly	61	13	1
67–4050	Shaft – Governor	61	19	1
67–4060	Lever – Governor	61	18	1
67–4070	Shaft – Sliding	61	16	1
67–4080	Clip	61	24	1
67–4090	Lever – Tension	61	21	1
67–4120	Pin – Grooved	61	35	1
67–4140	Lever – Stop	61	11	1
67–4150	Lever – Stop	61	40	1
67–4160	Gasket	61	5	1
67–4250	Cover	54	48	1
67–4250	Cover Assembly	53	24	1
67–4270	Bolt	61	3	4
67–4280	Bolt W/Washer	61	17	1
67–4290	Nut	61	34	1
67–4310	Gasket	53	23	1
67–4330	Oil Filter Assembly	58	40	1
67–4340	Screen Assembly	58	31	1
67–4350	Oil Pressure Switch	57	8	1
67–4360	Pulley	57	1	1
67–4380	Pump Assembly	57	6	1
67–4390	Gasket	57	7	1
67–4400	Bolt	55	1	2
67–4400	Bolt	57	4	1
67–4410	V–Belt	57	2	1
67–4430	Gasket – Thermostat	33	43	1
67–4460	Gasket (Thermostat Fitting)	55	31	1
67–4470	Bolt	55	33	1
67–4480	Pipe – By–Pass	55	37	1
67–4510	Gauge Nut – Water Temp.	55	35	1
67–4550	Gasket – Intake Manifold	55	44	1
67–4570	Gasket – Exhaust Manifold	55	26	1
67–4590	Bolt	55	23	6
67–4600	Starter Assembly	62	1	1
67–4620	Spacer	63	24	1
67–4630	Alternator Assembly	63	*	1
67–4640	Bolt	63	22	1
67–4660	Bolt – Flange	63	2	1
67–4670	Nut	63	12	1
67–4690	Plate – Glow Plug	55	40	1
67–4710	Front Bracket Assembly	62	3	1
67–4720	Lever Assembly	62	4	1
67–4730	Spring Set	62	5	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
67–4740	Center Bracket Assembly	62	6	1
67–4750	Switch Assembly	62	7	1
67–4760	Shaft Assembly	62	15	1
67–4770	Pinion Set	62	14	1
67–4780	Gear Set	62	12	1
67–4790	Shaft Assembly	62	11	1
67–4800	Yoke Assembly	62	20	1
67–4810	Pulley Set	63	23	1
67–4820	Bolt Set	63	5	1
67–4830	Front Bracket Assembly	63	9	1
67–4840	Screw – Set	63	7	1
67–4850	Bearing – Front	63	8	1
67–4860	Rotor Assembly	63	10	1
67–4870	Bearing – Rear	63	11	1
67–4880	Stator Assembly	63	21	1
67–4890	Rear Bracket Assembly	63	15	1
67–4900	Terminal Set	63	20	1
67–4910	Regulator Assembly	63	17	1
67–4920	Brush	63	19	2
67–4930	Rectifier Assembly	63	16	1
67–5040	Spring	61	20	1
68–3840	Ball Joint	9	23	2
68–9950	Spring – Extension	34	38	1
70–1480	Relay – S.P.D.T.	41	44	1
70–8560	Retainer – Indicator	41	27	1
70–8680	Pulley – Crankshaft	53	19	1
70–8720	Spring – Tie Rod	61	22	1
70–8750	Manifold – Exhaust	55	24	1
71–3381	Tube – Overflow	29	1	2
71–3383	Hose – Overflow	29	4	1
71–5320	Washer – Flat	19	18	1
72–4310	Switch – Ball N.C.	34	40	1
74–0720	Tube – Manual	17	1	1
75–4706	Hose	33	14	1
75–4706	Hose – Fuel	42	11	1
75–4900	Bearing Set STD	52	3	1
75–4910	Oil Pan Assembly	56	14	1
75–4920	Case Sub–Assembly	56	1	1
75–4940	Brace – Generator	63	6	1
75–4980	Lever – Governor Spring	61	7	1
75–4990	Spring – Governor	61	25	1
75–5000	Body Sub–Assy.	60	32	3
75–5010	Bearing Set STD	53	8	3
75–5040	Gasket Kit	56	*	1
75–5120	Gasket	54	45	1
75–6820	Hourmeter	2	16	1
75–9610	Spacer	44	7	1
76–2290	Spacer	19	37	1
76–4430	Fitting – Fuel 90°	42	9	1
76–8750	Plate – Warning	29	16	1
76–9100	Spacer	32	17	6
76–9100	Spacer – Hi–Lo Lever	18	35	1
80–6990	Washer	26	39	4
80–6990	Washer – Flat	34	12	3
80–8040	Decal – Caution	31	1	1
83–6030	Decal – Caution (Japan)	31	1	1
83–9150	Decal – Fluid	29	33	1
84–1680	Ring – Retaining	46	7	1
84–1880	Fan	29	29	1
84–2780	Decal – No Step (Japan)	40	10	1
84–6660	Decal – Fluid (Japan)	29	33	1
86–4760	Spring	33	48	3
87–0150	Tower – Control Arm RH	21	9	1
87–0160	Tower – Control Arm LH	21	*	1
87–0210	Arm – Control Lower RH	22	18	1
87–0220	Arm – Control Lower LH	22	*	1
87–0270	Drum – Brake	23	7	2
87–0370	Arm – Pitman	6	21	1
87–0690	Spring – Compression	21	15	2
87–0710	Hood	1	1	1
87–0740	Key – Supervisor Switch	2	17	1
87–1430	Joint – Ball	22	16	4
87–1450	Bushing – Rubber	22	1	8
87–1470	Rod End Assy. – LH Thread	23	19	2
87–1480	Rod End Assy. – RH Thread	23	24	2
87–1490	Spring – Leaf	25	15	2
87–1500	Steering Gear (Complete)	8	*	1
87–1500	Steering Gear Assembly	6	20	1
87–1720	Nut – Supervisor Switch	2	18	1
87–1910	Pin – Alignment	14	13	2
87–1920	Seal – Shaft	14	8	2
87–1970	Bearing Matched Set	26	20	2
87–2040	Lever – Shift	18	16	1
87–2080	Stud – Drive	26	12	10
87–2100	Bearing – Release	14	26	1
87–2110	Tail Light Assembly	48	10	1
87–2120	Headlight Assembly	1	3	2
87–2240	Housing – Axle	26	7	2
87–2260	Boot – Shift Lower	18	28	1
87–2280	Bearing	6	25	3
87–2310	Clevis – Cable	34	35	2
87–2310	Clevis – Cable	18	47	2
87–2410	Rod – Tie	23	17	2
87–2420	Boot	22	19	4
87–2440	Bumper	1	7	2
87–2480	Link – Stabilizer	21	24	2
87–2500	Sleeve –Spring Pivot	21	12	2
87–2510	Bracket – Seat Frame	17	11	2
87–2520	Tube – Pivot	18	21	1
87–2590	Shaft – Brake	9	35	1
87–2710	Lever – Parking Brake	19	29	1
87–2720	Driveshaft	31	10	1
87–2750	Spacer – Bearing	31	12	1
87–2790	Tube – Brake LH	22	*	1
87–2800	Tube – Brake RH	22	20	1
87–2820	Bracket – Hose	23	15	2
87–2870	Bracket – Brake Hose	22	4	2
87–2880	Shaft – Accelerator Pedal	9	6	1
87–2900	Spring – Compression	18	24	1
87–3000	Rim – Rear 23	26	*	2
87–3010	Brake Assembly – RH	23	10	1
87–3010	Front Brake Assembly – RH	24	*	1
87–3020	Brake Assembly – LH	23	*	1
87–3020	Front Brake Assembly – LH	24	*	1
87–3040	Reservoir – Master Cylinder	10	1	1
87–3060	Washer – Flat	26	25	2
87–3070	Cable – Battery Pos.	33	34	1
87–3080	Cable – Battery Neg.	40	23	1
87–3080	Cable – Battery Neg.	34	26	1
87–3100	Lower Shaft Assembly	6	*	1
87–3110	Absorber – Shock	21	29	2
87–3110	Shock Absorber	25	8	2
87–3120	Steering Column & Shaft	6	*	1
87–3130	Lever – Tilt Steering	6	36	1
87–3140	Support – Rear	42	15	1
87–3150	Support – Front	42	27	1
87–3160	Strap – Tank Support	42	29	2
87–3170	Pad – Tank Support Strap	42	30	2
87–3210	Belt – V	31	14	1
87–3250	Mount – Bearing	6	26	3
87–3290	Tire – Rear 23	26	*	2
87–3310	Clip – Brake Cable	26	8	2
87–3310	Clip – Brake Cable	23	25	2
87–3370	Pulley	31	13	1
87–3410	Housing – Thermostat	33	44	1
87–3450	Plug	23	12	2
87–3460	Boot – Tilt Steering	6	2	1
87–3470	Bumper – Spring	25	14	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
87–3480	Plate – Brake Equalizer	19	22	1
87–3520	Clevis	18	27	1
87–3530	Button – Shifter	18	29	1
87–3540	Link – Shift	18	20	2
87–3560	Tee – Brake Line	11	18	1
87–3560	Tee – Brake Tube	25	23	1
87–3570	Fitting – Union	11	6	2
87–3570	Union – Brake Line	9	5	2
87–3570	Union – Brake Line	25	25	2
87–3580	Retainer	25	4	2
87–3580	Retainer	23	14	2
87–3580	Retainer – Brake Hose	26	2	2
87–3580	Retainer – Brake Hose	22	3	2
87–3580	Retainer – Brake Hose	11	8	2
87–3590	Seal – Bearing	26	22	2
87–3590	Seal – Bearing	23	26	2
87–3600	Spacer	21	3	10
87–3610	Bracket – Detent	6	34	1
87–3650	Pin – Shift	18	18	1
87–3660	Spring – Compression	18	30	1
87–3670	Hose – Hydraulic	45	21	1
87–3680	Assembly – Relief Valve	44	*	1
87–3710	Overflow Reservoir Assembly	29	3	1
87–3720	Retainer – Cylinder	45	17	2
87–3750	Cover – Steering Wheel	6	9	1
87–3760	Plate – Shift Boot	15	14	1
87–3770	Bushing – Sleeve	14	9	2
87–3780	Box – Glove	2	3	1
87–3790	Switch – Light	2	19	1
87–3800	Bracket – Seat Bottom	15	3	3
87–3820	Wheel – Steering	6	7	1
87–3850	Bar – Anti–Sway	21	17	1
87–3860	Link – Anti–Sway Bar	21	5	2
87–3890	Bracket – Anti–Sway Bar	21	18	2
87–3910	Bushing – Anti–Sway Bar	21	19	2
87–3920	Bushing – Rubber	21	4	24
87–3920	Bushing – Rubber	25	7	8
87–3940	Mount – Spring RH	25	*	1
87–3960	Mount – Spring LH	25	18	1
87–3980	Shackle – Spring	25	11	4
87–3990	Oil Strainer Assembly	34	24	1
87–4010	Clamp – Anti–Sway Bar	21	20	2
87–4060	Spacer – Bearing	26	21	2
87–4070	Bumper – Front	1	14	1
87–4080	Tube – Brake LH	26	6	1
87–4090	Tube – Brake RH	26	1	1
87–4100	Hose – Brake	26	3	2
87–4100	Hose – Brake	25	5	2
87–4110	Puck – Engine Adapter	33	41	1
87–4120	Driveshaft	31	5	1
87–4150	Hose – Radiator Lower	29	32	1
87–4150	Hose – Radiator Lower	33	35	1
87–4230	Harness – Wire Front LH	2	41	1
87–4260	Cable Assembly	18	15	2
87–4260	Shift Cable Assembly	34	36	2
87–4340	Clamp – Cable	18	10	1
87–4350	Lever – Hi–Lo	18	2	1
87–4420	Hi–Lo Cable Assembly	18	6	1
87–4420	Hi–Lo Cable Assembly	34	31	1
87–4460	Differential Lock Cable	19	11	1
87–4470	Bracket	34	21	1
87–4490	Bracket – Hold–Down	44	22	1
87–4500	Rod – Pivot	44	2	1
87–4510	Rod – Connecting	44	3	1
87–4520	Bracket – Dump Valve	45	27	1
87–4540	Hydraulic Tube Assembly	44	20	1
87–4560	Tube – Hydraulic	44	14	1
87–4560	Tube – Hydraulic	45	33	1
87–4580	Rod – Auxiliary Lever	49	2	1
87–4610	Rod – Auxiliary	49	3	1
87–4620	Bracket – Auxiliary Valve	50	4	1
87–4670	Plate – Detent Lower	18	48	1
87–4680	Plate – Detent Upper	18	49	1
87–4690	Cover – Clutch	33	21	1
87–4700	Disc – Clutch	33	19	1
87–4710	Spacer – Barking Brake	19	13	1
87–4720	Plate – Steering Boot	6	3	1
87–4730	Guard – Belly	32	19	2
87–4760	Bushing	25	12	12
87–4820	Bracket – Cable	34	25	1
87–4870	Hose – Hydraulic	45	4	1
87–4880	Hose – Hydraulic LH	45	3	1
87–4900	Hose – Hydraulic RH	45	31	1
87–4910	Hose – Hydraulic RH	45	13	1
87–4920	Hose – Hydraulic	41	43	1
87–4960	Clamp – Cable	18	42	1
87–4970	Engine Mount Assembly	32	13	2
87–4970	Transaxle Mount Assembly	34	16	2
87–5030	Lever – Differential Lock	19	3	1
87–5060	Cushion – Seat Bottom	15	7	2
87–5080	Spacer – Connecting	44	25	1
87–5080	Spacer – Connecting Rod	49	4	1
87–5100	Washer	34	15	4
87–5100	Washer – Flat	32	12	4
87–5110	Support – Lower	40	17	1
87–5120	Bracket – Battery Base	40	13	1
87–5130	Cover – Battery Base	40	9	1
87–5140	Nut – Lock	44	8	1
87–5150	Screw – Cap Hex. Hd.	44	4	1
87–5280	Shaft – Release	14	4	1
87–5300	Fork – Clutch	14	23	1
87–5320	Guide – Release	14	25	1
87–5330	Washer	21	2	12
87–5340	Seal Kit – Tie Rod End	23	*	4
87–5350	Bracket – Switch	14	14	1
87–5360	Lever	14	17	1
87–5370	Rear Tire & Wheel Assembly	27	*	2
87–5490	Switch – Neutral	14	15	1
87–5560	Hub – Wheel	23	8	2
87–5580	Fuel Gauge Assembly	2	15	1
87–5590	Temperature Gauge Assy.	2	8	1
87–5700	Hydraulic Pump Assembly	29	22	1
87–5720	Rim	23	6	2
87–5730	Hose – Hydraulic	34	3	1
87–5730	Hose – Hydraulic	41	8	1
87–5770	U–Bracket – Tail Light	48	5	1
87–5800	Bracket – Mount	34	19	2
87–5910	Decal – Supervisor	3	55	1
87–5920	Decal – Danger	16	26	1
87–5930	Decal – Caution	15	10	1
87–5940	Decal – Rollover	20	2	1
87–5960	Decal – Axle	15	11	1
87–5970	Decal – PTO	15	16	1
87–5980	Decal – ROPS	20	3	2
87–5990	Decal – PTO	26	40	1
87–6000	Decal – Differential	15	17	1
87–6010	Decal – Dump Hyd.	15	19	1
87–6020	Decal – Brake	15	20	1
87–6040	Bracket – Shifter	18	22	1
87–6060	Decal – ATF	26	4	1
87–6070	Decal – Workman 3300D	1	15	1
87–6170	Frame – Seat	17	14	1
87–6240	Bracket – Seat Back	17	23	4
87–6270	Socket & Bulb Assembly	3	60	4
87–6280	Plate – Seat Back	17	18	2
87–6290	Cushion – Seat Back	17	17	2
87–6300	Lens	48	7	1
87–6310	Gasket	48	9	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
87–6320	Bulb – Headlight	1	5	2
87–6330	Lens – Headlight	1	6	2
87–6370	Rear Tire & Wheel Assembly	27	*	2
87–6410	Bracket – Harness	14	18	2
87–6570	Foam – Seal	18	38	1
87–6620	Screw	1	10	15
87–6620	Screw – Torx Hd.	14	42	2
87–6620	Screw – Torx, Pan Hd.	9	44	2
87–6640	Lever – Dump Stop	19	14	1
87–6660	Fender – Rear 24	48	17	2
87–6670	Decal – Fuse	3	54	1
87–6710	Switch – Supervisor	34	32	1
87–6720	Knob	18	17	1
87–6740	Tire – Rear 24	26	16	2
87–6750	Rim – Rear 24	26	19	2
87–6890	Hold – Hand	15	1	1
87–6900	Tube – Hydraulic	32	10	1
87–6910	Spring – Compression	34	9	1
87–6950	Receiver – LH	20	6	1
87–6960	Receiver – RH	20	7	1
87–7040	Bracket – Oil Filter	41	4	1
87–7050	Cap – Reservoir	29	43	1
87–7070	Skirt Assembly	15	2	1
87–7090	Assembly – Frame, R.O.P.S.	20	1	1
87–7110	Assembly – Axle, Rear	26	5	1
87–7150	Assembly – Cradle, Spring	21	13	2
87–7160	Assembly – Clevis, Cable	18	7	1
87–7160	Cable Clevis Assembly	34	27	1
87–7170	Bracket – Clutch Spring	34	39	1
87–7270	Washer – Flat	26	23	6
87–7290	Fitting – Hydraulic	32	9	1
87–7330	Hose – Radiator Upper	29	7	1
87–7330	Hose – Radiator Upper	33	45	1
87–7350	Hose – Suction	32	6	1
87–7380	Bracket – Relay/Indicator	41	10	1
87–7470	Plate – Clamp	25	16	2
87–7480	Washer – Flat	25	31	8
87–7480	Washer – Flat	6	37	3
87–7550	Clamp – Tube	9	40	2
87–7600	Rod – Battery Support	40	19	1
87–7610	Tab – Battery Support	40	21	1
87–7620	Shield – Plastic	40	12	1
87–7660	Clamp – Brake Line	11	2	8
87–7930	Decal – Danger	17	6	1
87–7930	Decal – Warning	46	13	1
87–7930	Decal – Warning	45	32	2
87–7940	Stud	17	8	1
87–7950	Bed Support Assembly	17	7	1
87–7960	Lever – Shift Arm	34	13	2
87–7970	Arm – Shift	34	6	1
87–8080	Console Plate Assembly	15	21	1
87–8120	Bracket – Trim Side	1	11	2
87–8130	Bracket – Trim Top	1	19	1
87–8160	Trim	1	20	1
87–8240	Cable – Parking Brake	19	24	2
87–8250	Plate – Shift Arm	34	4	1
87–8440	Assembly – Rear Frame	25	2	1
87–8460	Bumper	14	34	1
87–8471	Bracket – Clutch	14	7	1
87–8500	Front Wire Harness Assy.	2	47	1
87–8530	Decal – Dash	3	56	1
87–8550	Control Panel Assembly	2	53	1
87–8620	Boot – Shift	15	13	1
87–8640	Washer – Flat	18	26	1
87–8700	Screw – Cap Hex. Hd.	26	37	4
87–8710	Tab – Clutch	14	40	1
87–8730	Stud – Drive	23	9	10
87–8780	Head – Oil Filter	41	29	1
87–9070	Decal – Quick Ref.	15	23	1
87–9080	Decal – Grease	27	44	2
87–9250	Transaxle Assembly	34	20	1
87–9300	Door – Clean Out	29	35	1
87–9350	Hydraulic Tube Assembly	44	16	1
87–9390	Cup	43	9	1
87–9400	Valve	43	11	1
87–9420	Decal – Caution	29	36	1
87–9430	Spindle – RH	23	13	1
87–9440	Spindle – LH	23	*	1
87–9480	Fender – Front	16	24	2
87–9500	Decal – Load	1	16	1
87–9810	Foam – Overflow Tank	29	37	1
92–0650	Bearing – Ball	37	22	1
92–0651	Case – Transaxle	35	19	1
92–0652	Cover – Upper	35	7	1
92–0653	Cover – Side	35	9	1
92–0654	Carrier – Differential	35	17	1
92–0655	Cover – Seal	35	30	1
92–0656	Cover – P.T.O.	35	1	1
92–0657	Plate – Center	35	21	1
92–0662	Cap – Oil	35	5	1
92–0663	Shaft – Main	37	16	1
92–0664	Hub – Synchro	37	12	2
92–0665	Key – Synchro	37	23	6
92–0666	Spring – Synchro	37	13	4
92–0667	Ring – Synchro	37	6	3
92–0668	Shifter – Synchro	37	7	2
92–0672	Gear – 18T	37	19	1
92–0673	Gear – 14T	37	21	1
92–0674	Shaft – Reduction	37	28	1
92–0677	Gear – 49T	37	31	1
92–0679	Gear – 23T	37	25	1
92–0680	Collar	37	26	1
92–0681	Bearing – Needle	37	30	2
92–0682	Washer – Thrust	37	29	1
92–0684	Gear – 33T	37	10	1
92–0687	Gear – 16T	37	18	1
92–0698	Shaft – Fork R–1	38	14	1
92–0699	Shaft – Fork 2–3	38	7	1
92–0700	Fork – Shift R–1	38	3	1
92–0701	Fork – Shift 2–3	38	6	1
92–0705	Lock – Spindle	38	20	1
92–0706	Cap – Fork Shaft	35	25	1
92–0708	Shaft – Fork Hi–Lo	38	16	1
92–0709	Fork – Shift Hi–Lo	38	17	1
92–0710	Counter Shaft Assembly	36	14	1
92–0710	Ring Gear Assembly	39	8	1
92–0711	Washer – Thrust	36	4	2
92–0712	Bearing – Ball	36	1	1
92–0713	Collar	36	12	1
92–0714	Bearing – Ball	36	13	2
92–0715	Gear – 49T	36	6	1
92–0716	Collar	36	2	1
92–0717	Gear – 71T	36	9	1
92–0718	Shifter – Hi–Lo	36	7	1
92–0719	Collar – Spline	36	8	1
92–0720	Case – Differential	39	31	1
92–0721	Fork – Differential Lock	39	17	1
92–0722	Shaft – Lock Fork	39	18	1
92–0723	Spring – Compression	39	19	1
92–0724	Arm – Differential Lock	39	27	1
92–0725	Shaft – Axle L.H.	39	28	1
92–0726	Shaft – Axle R.H.	39	1	1
92–0727	Washer	39	4	2
92–0728	Washer	39	2	1
92–0729	Seal – Oil	38	10	3
92–0730	Slider – Differential Lock	39	7	1
92–0731	Spring – Compression	38	2	3
92–0732	Plate – Keeper	38	8	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–0733	Washer	39	20	1
92–0740	Washer – Thrust	37	3	3
92–0741	Washer – Thrust	36	10	1
92–0743	Breather – Air	35	27	1
92–0744	Washer	39	14	1
92–0745	Gear – Side L.H.	39	24	1
92–0746	Gear – Side R.H.	39	11	1
92–0747	Washer – Thrust	39	10	2
92–0748	Gear – Pinion	39	12	2
92–0749	Shaft – Pinion	39	23	1
92–0750	Washer	39	13	2
92–0753	Ring – Retaining	37	2	1
92–0753	Ring – Retaining	39	21	1
92–0754	Ring – Retaining	37	20	1
92–0755	Ring – Retaining	36	11	1
92–0756	Ring – Retaining	39	5	3
92–0759	Ring – Retaining	35	22	1
92–0760	Ring – Retaining	35	15	1
92–0761	Ring – Retaining	38	18	1
92–0762	Washer – Lock	35	3	1
92–0763	Ring – Retaining	37	14	3
92–0764	Ring – Retaining	36	3	3
92–0765	Pin – Alignment	35	8	4
92–0765	Pin – Alignment	39	9	2
92–0768	Pin – Spring	39	15	2
92–0769	Pin – Spring	38	4	2
92–0770	Pin – Spring	39	26	1
92–0771	Pin – Spring	39	16	1
92–0772	Key	37	17	2
92–0773	Drain Plug Assembly	35	13	1
92–0775	Bearing – Ball	39	6	2
92–0775	Bearing – Ball	35	33	2
92–0776	Bearing – Ball	39	29	1
92–0778	Bearing – Ball	37	11	2
92–0780	Bearing – Ball	39	3	1
92–0781	Bearing – Needle	37	4	4
92–0782	Bearing – Needle	37	33	1
92–0783	Sleeve – Inner	36	5	1
92–0785	Ball	38	1	3
92–0787	O–Ring	35	12	1
92–0787	O–Ring	39	22	1
92–0788	O–Ring	35	6	1
92–0789	O–Ring	35	14	1
92–0790	O–Ring	35	29	1
92–0791	Seal – Oil	35	26	1
92–0793	Seal – Oil	35	16	2
92–0793	Seal – Oil	39	32	2
92–0796	Screw – Cap Hex. Hd.	35	31	5
92–0803	Screw – Hex. Flange Hd.	39	30	12
92–0804	Stud	35	28	1
92–0807	Cap – Sealing	35	23	1
92–0808	Shim Set	35	20	1
92–0809	Shim Set	35	11	1
92–0816	Arm – Shift Fork R–1	38	15	1
92–0817	Arm – Shift Fork 2–3	38	5	1
92–0818	Arm – Shift Fork Hi–Lo	38	19	1
92–0819	Gear – 40T	37	32	1
92–0820	Gear – 27T	37	5	1
92–0821	Gear – 24T	37	15	1
92–0822	Gear – 28T	37	24	1
92–0823	Gear – 43T	37	27	1
92–0824	Shaft – Reverse Idler	37	9	1
92–0827	Gear	52	12	1
92–0830	Plate – Rear	58	47	1
92–0831	Pin – Knock	58	48	1
92–0832	Piston & Pin Set STD	53	10	3
92–0833	Piston & Pin Set 0.25 OS	53	*	3
92–0834	Piston & Pin Set 0.50 OS	53	*	3
92–0835	Gear	53	7	1
92–0836	Flywheel Assembly	53	13	1
92–0837	Fitting – Thermostat	55	32	1
92–0839	Plate	52	14	1
92–0840	Gear	52	17	1
92–0841	Ring – Retaining	52	15	1
92–0842	Gear Assembly	52	13	1
92–0843	Bolt w/Washer	62	2	2
92–0844	Plug – Glow	55	39	3
92–0845	Crankshaft	53	16	1
92–0846	Cover Assembly	55	6	1
92–0847	Oil Filler Cap Assembly	55	11	1
92–1914	Bearing – Ball	53	27	1
92–2160	Cartridge – Relief Valve	44	12	1
92–2161	Body – Relief Valve	44	28	1
92–2162	Head	46	6	1
92–2165	Kit – Repair	46	*	1
92–2173	Screw – Cap Socket Head	30	18	8
92–2174	Screw – Adjusting	30	22	1
92–2175	Gear	30	11	2
92–2176	Pin – Dowel	30	16	2
92–2177	Pin – Shear	30	7	1
92–2178	Ring – Crescent	30	4	4
92–2179	Key – Square	30	5	1
92–2180	Gasket – Copper	30	23	1
92–2181	Plate – Pressure	30	13	1
92–2182	Plate – Seal	30	9	1
92–2183	Plate – Wear	30	10	1
92–2184	Cap – Relief Valve	30	24	1
92–2185	Plug	30	19	1
92–2186	Spacer	30	3	1
92–2187	Housing – Gear, End	30	17	1
92–2189	Shaft – Drive	30	6	1
92–2190	Shaft – Idler	30	25	1
92–2191	Bearing	30	27	1
92–2192	Bearing	30	12	4
92–2193	Ball	30	20	1
92–2194	Spring	30	21	1
92–2195	Seal – Oil	30	2	1
92–2196	Seal – Pressure Plate	30	15	1
92–2197	Seal – Back Up	30	14	1
92–2198	Seal	30	26	1
92–2199	Key – Ball	30	28	1
92–2379	Clamp – Hose	29	2	2
92–2379	Clamp – Hose	42	32	1
92–2379	Clamp – Hose	41	34	1
92–2601	Ring – Retaining	50	49	4
92–2602	Coupling – Hyd. Female	51	54	2
92–2603	Plug – Dust	50	51	2
92–2605	Hydraulic Hose Assembly	50	36	1
92–2606	Hydraulic Hose Assembly	50	33	1
92–2609	Decal – Remote Hyd.	15	18	1
92–2610	Decal – Coupler (US)	51	55	1
92–2611	Decal – Caution (US)	51	56	1
92–2620	Hydraulic Tube Assembly	50	45	1
92–2622	Hydraulic Tube Assembly	50	10	1
92–2623	Plate – Valve Mount	50	3	1
92–2624	Hydraulic Hose Assembly	50	6	1
92–2625	Relief Valve Assembly	50	48	1
92–2697	Hose – Hydraulic LH	45	1	1
92–2771	Rear Coupler Bracket Assy.	51	53	1
92–4100	Backplate Assembly RH	28	*	1
92–4101	Primary Piston Assembly	10	11	1
92–4102	Secondary Piston Assembly	10	4	1
92–4103	Pin – Stop	10	3	1
92–4108	Washer – Retainer	10	10	1
92–4109	Circlip	10	9	1
92–4110	Clevis	10	5	1
92–4111	Petcock – Radiator	29	38	1
92–4112	Cap Assembly	10	12	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–4113	Screw – Bleed	24	4	1
92–4114	Cap – Bleed Screw	24	5	1
92–4114	Cap – Bleed Screw	28	5	1
92–4115	Backplate Assembly LH	24	2	1
92–4116	Backplate Assembly RH	24	*	1
92–4117	Assy. – Wheel Cylinder LH	24	*	1
92–4118	Assy. – Wheel Cylinder RH	24	*	1
92–4119	Kit – Seal	24	*	1
92–4120	Shoe & Lining Set	24	13	1
92–4121	Assembly – Adjuster LH	24	*	1
92–4122	Assembly – Adjuster RH	24	*	1
92–4123	Assembly – Pawl LH	24	19	1
92–4123	Assembly – Pawl LH	28	19	1
92–4124	Assembly – Pawl RH	24	*	1
92–4124	Assembly – Pawl RH	28	*	1
92–4125	Plug	24	3	1
92–4126	Spring – Shoe, Upper LH	24	14	1
92–4127	Spring – Shoe, Upper RH	24	*	1
92–4128	Spring – Shoe, Lower	24	15	1
92–4129	Spring – Adjuster, LH	24	20	1
92–4130	Spring – Adjuster, RH	24	*	1
92–4131	Washer – Hold Down	24	22	2
92–4131	Washer – Hold Down	28	22	2
92–4132	Spring – Hold Down	24	23	2
92–4133	Pin – Hold Down	24	26	2
92–4133	Pin – Hold Down	28	26	2
92–4134	Plug – Inspection	24	25	1
92–4134	Plug – Inspection	28	25	1
92–4135	Set Bolt	24	1	2
92–4135	Set Bolt	28	1	2
92–4136	Backplate Assembly LH	28	2	1
92–4137	Screw – Bleed	28	4	1
92–4140	Assy. – Wheel Cylinder LH	28	*	1
92–4141	Assy. – Wheel Cylinder RH	28	*	1
92–4142	Seal Kit	28	*	1
92–4143	Shoe & Lining Set	28	13	1
92–4144	Assembly – Adjuster LH	28	*	1
92–4145	Assembly – Adjuster RH	28	*	1
92–4146	Plug	28	3	1
92–4147	Spring – Shoe, Upper LH	28	14	1
92–4148	Spring – Shoe, Upper RH	28	*	1
92–4149	Spring – Shoe, Lower	28	15	1
92–4150	Spring – Adjuster, LH	28	20	1
92–4151	Spring – Adjuster, RH	28	*	1
92–4152	Spring – Hold Down	28	23	2
92–4153	Assembly –Steering Column	6	11	1
92–4154	Universal Joint Assembly	6	31	1
92–4155	Slip Joint Assembly – Upper	6	28	1
92–4156	Slip Joint Assembly – Lower	6	29	1
92–4157	Boot – Steering Shaft	6	24	1
92–4158	Valve Assy. – Hyd. Gear	8	*	1
92–4159	Nut – Adjuster Plug Lock	7	25	1
92–4160	Bearing Service Kit – Upper	8	*	1
92–4161	Assembly – Cover Service	7	*	1
92–4162	Pitman Shaft – Gear Service	8	*	1
92–4163	Assy. – Steering Housing	8	*	1
92–4164	Plug Assy. – Service Adjust.	8	*	1
92–4165	Plug – Housing End	7	2	1
92–4166	Rack/Piston/Nut Assembly	8	*	1
92–4167	Assembly – Plug Service	8	*	1
92–4168	Return – Guide Ball	7	7	2
92–4169	Bearing – Needle	7	21	1
92–4170	Bearing – Pitman Shaft	7	47	1
92–4177	Yoke – Double Clamp	26	34	2
92–4179	Yoke, Shaft & Seal Tube	26	33	2
92–4180	Seal	26	32	2
92–4182	Yoke & Hub	26	31	2
92–4187	Cross & Bearing Kit	26	30	4
92–4188	Ring – Snap	26	28	12
92–4189	Strap & Bolt Kit	26	36	2
92–4190	Yoke – End	26	29	2
92–4198	Fan Shroud Assembly	29	17	1
92–5304	Decal – Brake (Japan)	15	20	1
92–5311	Decal – Differential (Japan)	15	17	1
92–5318	Decal – Axle (Japan)	15	11	1
92–5325	Decal – Caution (Japan)	15	10	1
92–5332	Decal – Supervisor (Japan)	3	55	1
92–5339	Decal – Coupler (JAP)	51	*	1
92–5346	Decal – Remote Hyd.	15	18	1
92–5353	Decal – Dump Hyd. (Japan)	15	19	1
92–5360	Decal – PTO (Japan)	15	16	1
92–5367	Decal – PTO (Japan)	26	40	1
92–5374	Decal – Fuse (Japan)	3	54	1
92–5381	Decal – ROPS (Japan)	20	3	2
92–5388	Decal – Rollover (Japan)	20	2	1
92–5395	Decal – Load (Japan)	1	16	1
92–5466	Decal – Caution (JAP)	51	*	1
92–5473	Decal – ATF (Japan)	26	4	1
92–5497	Decal – Quick Ref. (DU)	15	23	1
92–5498	Decal – Quick Ref. (FR)	15	23	1
92–5499	Decal – Quick Ref. (GR)	15	23	1
92–5951	Angle – Hitch	26	41	1
92–5964	Cover – Engine	33	56	1
92–5972	Grommet	17	5	4
92–6400	Decal – Quick Ref. (IT)	15	23	1
92–6401	Decal – Quick Ref. (Japan)	16	23	1
92–6402	Decal – Quick Ref. (SP)	15	23	1
92–6403	Decal – Quick Ref. (SW)	15	23	1
92–6408	Decal – Danger (Japan)	16	26	1
92–6415	Decal – Danger (Japan)	17	6	1
92–6415	Decal – Warning (Japan)	45	32	2
92–6429	Decal – Dash (Japan)	3	56	1
92–6444	Decal – Grease (Japan)	27	44	2
92–6479	Decal – Caution (Japan)	25	29	2
92–6493	Decal – Warning (Japan)	21	33	2
92–7240	Decal – Warning (Japan)	29	47	1
92–7905	Switch & Bracket Assembly	50	31	1
93–0307	Nut – Retainer	23	35	2
93–0309	Washer – Tab	23	3	2
93–3102	Cap – Fuel	42	1	1
93–3766	Decal – Caution (Japan)	29	36	1
93–6668	Decal – Charging (Europe)	40	24	1
93–6681	Decal – Warning (Europe)	29	47	1
93–6687	Decal – No Step (Europe)	40	10	1
93–7051	Radiator Assembly	29	39	1
93–7053	Warning Light Assembly	2	9	1
93–7059	Hose – Brake Front	11	9	2
93–7081	Tube – Brake Front RH	11	10	1
93–7082	Tube – Brake Front LH	11	16	1
93–7085	Tube – Brake Front	11	19	1
93–7088	Support – Fan	29	20	1
93–7090	Stub – Axle	26	14	2
93–7094	Cover – Wire Harness	2	49	1
93–7099	Frame – Engine	32	1	1
93–7100	Mount – Engine	32	5	1
93–7100	Mount – Engine	33	40	1
93–7103	Screen – Radiator	29	8	1
93–7120	Housing – Bell	14	10	1
93–7123	Hose – Brake Front	22	8	2
93–7125	Brake Assembly RH	26	*	1
93–7125	Rear Brake Assembly – RH	28	*	1
93–7126	Brake Assembly LH	26	9	1
93–7126	Rear Brake Assembly – LH	28	*	1
93–7128	Drum – Brake	26	15	2
93–7130	Harness – Wire	33	15	1
93–7130	Harness – Wire	41	25	1
93–7130	Harness – Wire Rear	40	22	1
93–7130	Harness – Wire Rear	2	34	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
93–7133	Arm – Control Upper LH	22	*	1
93–7135	Arm – Control Upper RH	22	21	1
93–7145	Screw – Cap Hex. Hd.	6	19	3
93–7252	Decal – CE (Europe)	3	66	1
93–7275	Decal – Fluid (Europe)	29	33	1
93–7276	Decal – Danger (Europe)	40	25	1
93–7814	Decal – Caution (Europe)	31	1	1
93–8071	Decal – Caution (Europe)	25	29	2
93–8938	Bracket – Cover Mount LH	29	44	1
93–8939	Bracket – Cover Mount RH	29	46	1
93–8940	Cover – Radiator	29	45	1
93–8941	Bracket – Front LH	48	15	1
93–8942	Bracket – Front RH	48	*	1
93–8943	Plate – Tail Light LH	48	12	1
93–8944	Plate – Tail Light RH	48	*	1
93–8958	Pedal – Clutch	14	37	1
93–8961	Arm – Accelerator Pedal	9	10	1
93–8965	Pedal – Brake	9	27	1
93–8969	Pedal – Accelerator	9	15	1
93–8970	Cylinder Head Assembly	55	28	1
93–8971	Seal – Port, Flange	10	2	2
93–8972	Shaft – Idler	58	34	1
93–8974	Thermostat	33	42	1
93–8995	Rod – Threaded	33	46	1
93–9089	Decal – Coupler (CE)	51	*	1
93–9090	Decal – Caution (CE)	51	*	1
93–9430	Decal – Differential (Europe)	15	17	1
93–9431	Decal – Quick Ref. (DN)	15	23	1
93–9432	Decal – Quick Ref. (FN)	15	23	1
93–9433	Decal – Quick Ref. (NO)	15	23	1
93–9434	Decal – Quick Ref. (PO)	15	23	1
93–9442	Decal – ATF (Europe)	26	4	1
93–9443	Decal – Brake (Europe)	15	20	1
93–9444	Decal – Dump Hyd.	15	19	1
93–9445	Decal – Dash (Europe)	3	56	1
93–9447	Decal – Caution (Europe)	29	36	1
93–9448	Decal – Caution (Europe)	15	10	1
93–9449	Decal – Grease (Europe)	27	44	2
93–9535	Hydraulic Tube Assembly	50	5	1
93–9536	Rod – Connecting	49	6	1
93–9537	Bracket – Switch Mounting	50	44	1
93–9538	Cover – Switch	50	42	1
93–9539	Strip – Tapped	50	30	1
93–9540	Sleeve – Protective	50	35	1
93–9541	Harness – Wire	51	57	1
93–9542	Cam – Switch	50	13	1
93–9551	Sleeve – Protective	50	40	1
93–9552	Hose – Hydraulic	45	4	1
93–9850	Decal – Rollover (Europe)	20	2	1
93–9851	Decal – Fuse (Europe)	3	54	1
93–9852	Decal – Danger (Europe)	17	6	1
93–9852	Decal – Warning (Europe)	45	32	2
93–9856	Decal – Supervisor (Europe)	3	55	1
93–9857	Decal – Axle (Europe)	15	11	1
93–9859	Decal – ROPS (Europe)	20	3	2
93–9860	Decal – Danger (Europe)	16	26	1
93–9861	Decal – PTO (Europe)	15	16	1
93–9862	Decal – PTO (Europe)	26	40	1
93–9866	Decal – Remote Hyd.	15	18	1
93–9879	Decal – Warning (Europe)	21	33	2
94–1224	Decal – Load (Europe)	1	16	1
94–1258	Gasket – Cylinder Head	55	25	1
94–3533	Cover (Intake)	55	5	1
94–3800	Master Cylinder Assembly	9	3	1
94–3801	Fuel Tank Assembly	42	2	1
94–3804	Rod End Assy. LH Thread	23	*19	2
94–3807	Rod End Assy. RH Thread	23	*	2
94–3809	Tire – Hard Surface	23	*	2
94–3810	Rod – Link	9	25	1
94–3814	Tube – Hydraulic	9	1	1
94–3815	Tube – Hydraulic	9	2	1
94–3819	Tube – Brake Rear	11	5	1
94–3820	Tube – Brake Front	11	1	1
94–3821	Plate – Center, Frame	9	34	1
94–3823	Bell Crank	9	19	1
94–3827	Spring – Return	61	41	1
94–3829	Pin – Clevis	19	23	1
94–3836	Cable – Accelerator	33	6	1
94–3836	Cable – Accelerator	9	42	1
94–3837	Cable – Clutch	3	67	1
94–3837	Clutch Cable Assembly	14	1	1
94–3838	Bracket – Mudflap LH	1	23	1
94–3839	Bracket – Mudflap RH	1	*	1
94–3841	Mudflap	1	26	2
94–3842	Tube – Brake Rear	11	12	1
94–3843	Tube – Brake LH	25	22	1
94–3844	Tube – Brake LH	25	*	1
94–3845	Tube – Brake RH	25	20	1
94–3846	Tube – Brake RH	25	3	1
94–5202	Lever Support Assembly	18	14	1
94–5203	Hydraulic Cylinder Assy.	45	16	2
94–5206	Barrel Assembly	46	1	1
94–5207	Shaft	46	2	1
94–5209	Cover – Dust	10	7	1
94–5210	Rod – Push	10	8	1
94–5213	Muffler	33	31	1
94–5221	Flap – Cylinder, Master	9	43	1
94–5224	Driveshaft Assembly	27	*	2
94–5227	Pulley	29	26	1
94–5229	Engine	33	55	1
94–5235	Air Cleaner (Complete)	43	*	1
94–5235	Air Cleaner Assembly	42	23	1
94–5238	Hose – Air Cleaner	42	19	1
94–5238	Hose – Air Intake	33	11	1
94–5240	Operators Platform Assy.	1	17	1
94–5245	Supervisor Switch Assembly	2	29	1
94–5255	Hose – Hydraulic	41	43	1
94–5255	Hydraulic Hose Assembly	50	29	1
94–5256	Bell Crank	33	8	1
94–5259	Bracket – Accelerator	33	4	1
94–5261	Tire	23	5	2
94–5272	Decal – Warning	3	68	1
218–446	Nut – Hex.	2	11	1
218–447	Washer – Lock	2	12	1
218–473	Boot – Switch	3	63	1
218–574	Fuse – 7.5 Amp	2	46	2
218–578	Fuse – 10 Amp	3	61	1
218–600	Bulb	2	13	2
219–17	Bulb – Warning Light	3	59	4
232–27	Stem – Valve	23	31	2
232–27	Valve – Stem	26	17	2
233–37	Knob	18	1	1
233–39	Knob	44	1	1
233–39	Knob	49	1	1
233–39	Knob	6	1	1
233–48	Knob	19	4	1
237–21	Seal – O–Ring	45	2	6
237–22	Seal – O–Ring	45	5	3
237–22	Seal – O–Ring	44	9	4
237–22	Seal – O–Ring	50	14	10
237–30	Seal – O–Ring	34	33	2
237–42	O–Ring	47	2	2
237–42	Seal – O–Ring	45	7	2
237–42	Seal – O–Ring	44	11	2
237–42	Seal – O–Ring	50	15	5
237–42	Seal – O–Ring	34	41	1
237–78	Seal – O–Ring	45	15	4
237–78	Seal – O–Ring	50	16	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
237−79	Seal − O−Ring	41	5	2
237−79	Seal − O−Ring	45	25	1
237−80	Seal − O−Ring	45	24	1
237−123	Seal − O−Ring	34	23	1
240−5	Grommet	14	31	1
241−119	Cap Dust	23	1	2
2410−35	Plug	2	6	1
2410−42	Cap − Front Bumper	1	12	2
2410−64	Plug − Hole	3	64	1
2411−33	Joint − Ball	14	3	1
2412−10	Clamp − R	22	7	2
2412−34	Clamp	45	22	1
2412−34	Clamp	33	36	2
2412−34	Clamp − Hose	29	6	2
2412−34	Clamp − Hose	32	7	1
2412−36	Clamp	42	8	1
2412−36	Clamp − Hose	34	2	1
2412−36	Clamp − Hose	41	7	2
2412−89	Clamp − R	40	20	1
2412−89	Clamp − R	11	21	1
2412−89	Clamp − R	14	29	1
2412−89	Clamp − R	2	32	1
2412−92	Clamp − Hose	33	10	1
2412−92	Clamp − Hose	42	20	1
2412−93	Clamp − R	48	2	1
2412−105	Clamp − R	6	17	2
2412−106	Clamp − R	32	11	1
2412−108	Clamp − Hose	42	10	1
2412−108	Clamp − Hose	33	12	2
2412−108	Clamp − Hose	41	15	3
2412−130	Clamp − Hose	43	10	1
2412−133	Clamp − R	17	3	2
2412−149	Clamp − R	33	37	1
2412−149	Clamp − Tube	25	24	4
251−8	Bearing − Ball	37	1	2
251−82	Bearing − Ball	31	11	2
251−346	Bearing − Ball	37	8	1
254−72	Cup − Bearing	23	29	2
254−94	Cone − Bearing	23	30	2
254−106	Cone − Bearing	23	27	2
254−107	Cup − Bearing	23	28	2
256−155	Bushing − Flange	9	26	2
256−156	Bushing − Flange	14	36	2
256−247	Bushing − Flange	9	18	2
256−259	Bushing − Flange	9	9	2
283−2	Pin − Clevis	9	4	1
283−30	Pin − Clevis	9	12	1
283−30	Pin − Clevis	14	35	1
283−62	Pin − Clevis	19	6	1
283−62	Pin − Clevis	18	8	3
283−62	Pin − Clevis	34	34	3
283−85	Pin − Clevis	9	14	1
302−5	Fitting − Grease	33	5	1
302−5	Fitting − Grease	9	8	3
302−5	Fitting − Grease	22	14	4
302−5	Fitting − Grease	23	20	4
302−5	Fitting − Grease	6	30	1
302−5	Fitting − Grease	26	35	4
302−5	Fitting − Grease	14	44	1
302−11	Fitting − Grease	21	8	1
302−58	Fitting − Grease	27	46	16
321−2	Screw − Cap Hex. Hd.	2	1	7
321−2	Screw − Hex. Hd.	50	39	2
321−3	Screw − Cap Hex. Hd.	2	4	2
321−3	Screw − Cap Hex. Hd.	29	31	4
321−3	Screw − Cap Hex. Hd.	6	33	2
321−4	Screw − Cap Hex. Hd.	29	5	4
321−4	Screw − Cap Hex. Hd.	40	6	1
321−4	Screw − Cap Hex. Hd.	32	8	1
321−4	Screw − Cap Hex. Hd.	15	9	8
321−4	Screw − Cap Hex. Hd.	17	20	8
321−4	Screw − Cap Hex. Hd.	11	22	1
321−4	Screw − Cap Hex. Hd.	1	24	4
321−4	Screw − Cap Hex. Hd.	14	30	1
321−4	Screw − Cap Hex. Hd.	2	33	1
321−4	Screw − Hex. Flange Hd.	25	26	4
321−5	Screw − Cap Hex. Hd.	33	2	1
321−6	Screw − Cap Hex. Hd.	48	3	12
321−6	Screw − Cap Hex. Hd.	22	5	2
321−9	Screw − Cap Hex. Hd.	11	3	4
321−9	Screw − Cap Hex. Hd.	44	5	2
321−9	Screw − Cap Hex. Hd.	19	27	1
321−9	Screw − Cap Hex. Hd.	9	38	1
321−9	Screw − Hex. Hd.	50	46	1
321−14	Screw − Cap Hex. Hd.	45	8	2
321−15	Screw − Cap Hex. Hd.	44	13	1
321−23	Screw − Hex. Hd.	50	43	2
322−2	Screw − Cap Hex. Hd.	11	11	1
322−2	Screw − Cap Hex. Hd.	6	16	6
322−2	Screw − Cap Hex. Hd.	42	22	4
322−2	Screw − Cap Hex. Hd.	29	42	6
322−2	Screw − Cap Hex. Hd.	2	50	3
322−3	Screw − Cap Hex. Hd.	50	7	4
322−3	Screw − Cap Hex. Hd.	45	20	4
322−5	Screw − Cap Hex. Hd.	31	2	4
322−5	Screw − Cap Hex. Hd.	15	6	8
322−5	Screw − Cap Hex. Hd.	49	9	1
322−5	Screw − Cap Hex. Hd.	22	10	2
322−5	Screw − Cap Hex. Hd.	48	20	4
322−5	Screw − Cap Hex. Hd.	44	24	1
322−5	Screw − Cap Hex. Hd.	29	25	4
322−5	Screw − Cap Hex. Hd.	9	36	2
322−5	Screw − Cap Hex. Hd.	18	51	2
322−7	Screw − Cap Hex. Hd.	31	9	4
322−12	Screw − Cap Hex. Hd.	18	25	1
323−4	Screw − Cap Hex. Hd.	42	16	2
323−4	Screw − Cap Hex. Hd.	1	22	1
323−6	Screw − Cap Hex. Hd.	19	1	1
323−6	Screw − Cap Hex. Hd.	26	11	8
323−6	Screw − Cap Hex. Hd.	17	12	2
323−6	Screw − Cap Hex. Hd.	18	37	1
323−7	Screw − Cap Hex. Hd.	34	10	4
323−7	Screw − Cap Hex. Hd.	9	17	2
323−7	Screw − Cap Hex. Hd.	26	43	4
323−8	Screw − Hex. Flange Hd.	23	11	8
323−9	Screw − Cap Hex. Hd.	40	14	1
323−10	Screw − Cap Hex. Hd.	34	7	1
323−12	Screw − Cap Hex. Hd.	21	6	8
324−9	Screw − Cap Hex. Hd.	21	22	4
324−10	Screw − Cap Hex. Hd.	21	1	4
324−12	Screw − Cap Hex. Hd.	32	3	2
324−13	Screw − Cap Hex. Hd.	21	10	2
325−4	Screw − Cap Hex. Hd.	17	15	2
325−13	Screw − Cap Hex. Hd	22	11	8
325−13	Screw − Cap Hex. Hd.	21	27	4
325−19	Screw − Cap Hex. Hd.	26	27	1
325−20	Screw − Cap Hex. Hd.	26	24	5
3211−8	Screw − Cap Hex. Hd.	18	13	2
3215−1	Screw − Cap Hex. Hd.	34	14	2
3215−2	Screw − Cap Hex. Hd.	14	12	5
3217−25	Nut − Hex.	2	38	4
3217−26	Hut − Hex.	2	37	1
3217−29	Nut − Jam	3	57	3
3218−18	Nut − Jam	18	43	1
3218−20	Nut − Jam	14	16	2
3218−21	Nut − Jam	23	18	2
3219−14	Nut	18	5	1
3219−14	Nut − Hex.	34	30	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3219–20	Nut – Hex. LH	9	24	2
3220–1	Nut – Jam	34	37	4
3220–1	Nut – Jam	18	41	4
3220–1	Nut – Jam	33	47	2
3220–2	Nut – Jam	14	2	1
3220–3	Nut – Jam	18	12	2
3220–7	Nut – Jam	23	2	2
3220–11	Nut – Jam	23	23	2
3229–25	Nut – Lock	41	9	2
3229–25	Screw – Carriage	45	19	2
3230–18	Bolt – Carriage	17	2	8
3230–23	Bolt – Carriage	41	2	2
3230–23	Bolt – Carriage	40	5	4
3230–23	Bolt – Carriage	29	24	7
3231–3	Bolt – Carriage	21	21	4
3231–21	Bolt – Carriage	40	1	6
3231–21	Bolt – Carriage	44	21	1
3231–21	Bolt – Carriage	17	22	4
3231–21	Bolt – Carriage	18	32	4
3232–17	Bolt – Carriage	25	19	8
3234–1	Screw – Hex. Flange Hd.	1	13	6
3234–4	Screw – Hex. Flange Hd.	41	45	4
3234–11	Screw – Cap Hex. Hd.	32	18	6
3234–21	Screw – Hex. Hd.	50	52	2
3234–38	Screw – Cap Hex. Hd.	42	31	2
3234–38	Screw – Hex. Flange Hd.	25	17	24
3234–40	Screw – Hex. Flange Hd.	20	4	4
3245–31	Screw – Set	29	48	1
3250–13	Screw	2	51	2
3250–13	Screw – Hex. Hd.	15	15	20
3250–13	Screw – Pan Hd.	1	27	4
3250–20	Screw – Round Hd.	29	41	4
3253–3	Washer – Lock	29	30	4
3253–4	Washer – Lock	15	5	8
3253–4	Washer – Lock	6	14	4
3253–4	Washer – Lock	33	22	6
3253–6	Washer – Lock	27	45	10
3253–15	Washer – Lock	42	5	5
3253–15	Washer – Lock	2	39	4
3253–19	Washer – Lock	3	58	3
3253–21	Washer – Lock	26	10	8
3253–21	Washer – Lock	17	13	2
3253–21	Washer – Lock	23	33	8
3254–1	Washer – Lock	2	36	1
3254–2	Washer – Lock	33	32	2
3255–7	Washer – ETLW	41	41	1
3255–9	Washer – Lock ETLW	40	3	1
3256–3	Washer – Flat	31	8	4
3256–4	Washer – Flat	34	8	1
3256–6	Washer – Flat	25	9	4
3256–6	Washer – Flat	21	32	2
3256–14	Washer – Flat	44	30	1
3256–14	Washer – Flat	50	37	2
3256–22	Washer – Flat	11	4	4
3256–22	Washer – Flat	2	5	2
3256–22	Washer – Flat	15	8	8
3256–22	Washer – Flat	41	11	1
3256–22	Washer – Flat	48	11	12
3256–22	Washer – Flat	29	14	4
3256–22	Washer – Flat	44	18	3
3256–22	Washer – Flat	17	19	8
3256–22	Washer – Flat	9	39	3
3256–22	Washer – Flat	14	41	2
3256–23	Washer – Flat	15	4	8
3256–23	Washer – Flat	49	5	2
3256–23	Washer – Flat	19	21	1
3256–23	Washer – Flat	48	21	4
3256–23	Washer – Flat	44	26	2
3256–23	Washer – Lock	14	38	4
3256–23	Washer – Flat	18	50	2
3256–24	Washer – Flat	40	15	2
3256–24	Washer – Flat	48	18	6
3256–25	Washer	33	30	6
3256–25	Washer – Flat	32	4	2
3256–25	Washer – Flat	49	10	1
3256–26	Washer – Flat	14	11	4
3256–26	Washer – Flat	9	21	1
3256–27	Washer – Flat	25	6	4
3256–27	Washer – Flat	21	31	2
3256–28	Washer – Flat	31	15	1
3256–45	Washer – Flat	29	27	1
3256–61	Washer – Flat	16	25	14
3256–61	Washer – Flat	1	29	4
3256–67	Washer – Flat	41	40	3
3257–7	Key – Woodruff	31	17	1
3258–19	Screw – Round Head	43	2	2
3272–6	Pin – Cotter	18	3	3
3272–6	Pin – Cotter	9	7	1
3272–6	Pin – Cotter	19	8	2
3272–6	Pin – Cotter	34	28	3
3272–7	Pin – Cotter	49	12	1
3272–10	Pin – Cotter	9	11	2
3272–10	Pin – Cotter	14	33	1
3272–12	Pin – Cotter	22	17	4
3272–12	Pin – Cotter	23	21	4
3272–12	Pin – Cotter	23	32	2
3272–37	PIn – Cotter	45	18	2
3274–31	Screw – Button Hd.	2	7	4
3274–54	Screw – Hex. Socket Hd.	42	28	2
3274–94	Screw – Socket Button Hd.	48	16	6
3277–1	Nut – Hex.	6	5	1
3290–221	Washer – Spring	18	34	1
3290–221	Washer – Spring	19	36	2
3290–271	Rivet – Pop	29	13	2
3290–321	Screw – Hex. Flange Hd.	9	31	2
3290–357	Nut – Flange	42	18	2
3290–357	Nut – Flange	9	37	2
3290–357	Nut – Flange Lock	40	2	6
3290–357	Nut – Flange Lock	1	8	9
3290–357	Nut – Flange Lock	17	10	4
3290–357	Nut – Flange Lock	21	16	4
3290–357	Nut – Flange Lock	29	21	1
3290–357	Nut – Flange Lock	18	33	4
3290–378	Tie – Cable	32	2	1
3290–378	Tie – Cable	50	41	6
3290–378	Tie – Cable (Europe)	45	34	6
3290–379	Tie – Cable	33	38	1
3290–413	Washer – Belleville	32	16	12
3290–455	Washer	6	12	1
3290–456	Washer – Belleville	18	46	2
3290–477	Washer – Curved	19	28	1
3290–478	Washer – Belleville	19	17	1
3290–506	Palnut	48	4	2
3290–507	Pin – Dowel	18	31	1
3296–2	Nut – Hex.	49	7	1
3296–2	Nut – Lock	15	22	20
3296–2	Nut – Lock	1	30	4
3296–2	Nut – Lock	9	33	2
3296–2	Nut – Lock	2	45	2
3296–3	Nut – Lock	33	9	3
3296–4	Nut – Lock	14	5	1
3296–5	Nut – Flange Lock	29	28	1
3296–6	Nut – Lock	9	20	2
3296–15	Nut – Lock	31	16	1
3296–23	Nut – Flange Lock	22	12	8
3296–23	Nut – Lock	25	10	4
3296–23	Nut – Lock	21	14	4
3296–23	Nut – Lock	17	16	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3296–23	Nut – Lock	9	22	1
3296–27	Rivet – Plastic	40	11	4
3296–29	Nut – Flange Lock	29	23	8
3296–29	Nut – Lock	31	6	6
3296–29	Nut – Lock	49	8	1
3296–29	Nut – Lock	14	19	1
3296–29	Nut – Lock	48	19	4
3296–29	Nut – Lock	44	27	1
3296–29	Nut – Lock	41	28	2
3296–29	Nut – Lock	9	30	2
3296–29	Nut – Lock	33	57	1
3296–39	Nut – Flange Lock	34	18	4
3296–39	Nut – Flange Lock	40	18	1
3296–39	Nut – Lock	48	1	6
3296–39	Nut – Lock	25	13	6
3296–39	Nut – Lock	32	15	6
3296–39	Nut – Lock	23	16	8
3296–39	Nut – Lock	44	23	1
3296–39	Nut – Lock	21	28	8
3296–39	Nut – Lock	19	33	1
3296–39	Nut – Lock	26	42	4
3296–39	Nut – Lock	18	45	1
3296–42	Nut – Lock	19	12	2
3296–42	Nut – Lock	22	13	2
3296–42	Nut – Lock	48	13	16
3296–42	Nut – Lock	29	15	4
3296–42	Nut – Lock	41	17	2
3296–42	Nut – Lock	44	19	2
3296–42	Nut – Lock	11	20	5
3296–42	Nut – Lock	42	26	2
3296–42	Nut – Lock	6	32	2
3296–42	Nut – Lock	9	41	1
3296–48	Nut – Lock	21	11	10
3296–48	Nut – Lock	32	20	2
3296–56	Nut – Lock	33	50	2
3296–58	Nut – Lock	18	11	1
3296–59	Nut – Lock	6	13	1
3296–76	Nut – Lock	25	30	8
32104–88	Screw	1	4	6
32105–5	Screw	50	11	1
32105–8	Screw	50	38	2
32107–11	Nut – Square	43	4	2
32120–47	Ring – E	9	13	1
32120–47	Ring – E	14	32	2
32120–47	Ring – Retaining	19	10	3
32121–7	Pin – Roll	14	22	1
32121–24	Pin – Roll	14	24	2
32121–48	Pin – Roll	18	23	1
32122–24	Screw – Round Hd.	42	6	5
32128–20	Nut – Flange	11	17	1
32128–20	Nut – Flange	6	27	6
32128–20	Nut – Flange	2	48	3
32128–20	Nut – Flange Head	45	11	4
32128–20	Nut – Flange Lock	22	6	2
32128–20	Nut – Flange Lock	40	16	2
32128–20	Nut – Flange Lock	17	21	8
32128–20	Nut – Flange Lock	42	25	4
32128–20	Nut – Flange Lock	9	29	1
32128–20	Nut – Lock	50	9	4
32128–20	Nut – Lock	29	40	6
32128–21	Nut – Lock	34	5	1
32128–23	Nut – Flange	42	17	2
32128–23	Nut – Flange Lock	20	5	4
32128–23	Nut – Flange Lock	25	21	24
32128–33	Nut – Flange	32	14	1
32128–33	Nut – Flange	2	44	12
32128–33	Nut – Flange Head	45	12	4
32128–33	Nut – Flange Lock	50	2	5
32128–33	Nut – Flange Lock	41	3	1
32128–33	Nut – Flange Lock	40	4	1
32128–33	Nut – Flange Lock	44	6	1
32128–33	Nut – Flange Lock	25	27	4
32128–33	Nut – Flange Lock	14	28	1
32128–33	Nut – Lock	1	25	4
32128–36	Nut – Lock	26	38	4
32128–44	Nut – Flange Lock	17	9	2
32128–53	Nut – Flange Lock	26	26	2
32136–2	Nut – Slotted	22	2	2
32136–3	Nut – Slotted	23	22	4
32141–86	Screw – Leveler	29	18	1
32144–4	Screw – Hex. Washer Hd.	18	9	2
32144–10	Screw – Self Tapping	6	18	2
32144–18	Screw – Cap Hex. Hd.	2	22	2
32144–52	Screw – Hex. Hd.	15	12	6
32144–93	Screw – Self Tapping	48	6	2
32144–116	Screw – Pan Head	6	8	8
32148–6	Insert – Threaded	2	2	2
32148–7	Nut – Clinch	1	18	8
32148–7	Nut – Clinch	18	19	2
32148–9	Insert – Threaded	25	1	8
32148–15	Insert – Threaded	18	4	1
32148–15	Nut – Clinch	34	29	1
32151–41	Ring – Retaining	30	1	1
32151–56	Ring – Retaining	9	16	1
32151–104	Ring – Snap	22	15	4
32152–10	Nut	46	12	1
33113–045	Screw – Cap Hex. Hd.	33	51	2
340–2	Fitting – Straight	45	10	1
340–3	Fitting – Hydraulic Straight	45	26	1
340–12	Fitting – Hydraulic Straight	50	50	2
340–77	Fitting – 90°	45	10	1
340–77	Fitting – Hydraulic 90°	45	6	1
340–77	Fitting – Hydraulic 90°	50	8	2
340–86	Fitting – Hydraulic Tee	50	1	1
340–86	Fitting – Hydraulic Tee	44	15	1
340–87	Fitting – Hydraulic 45°	50	12	1
340–88	Fitting – Hydraulic Straight	50	32	1
340–92	Fitting – Hydraulic Straight	45	29	1
340–94	Fitting – Hydraulic Tee	44	10	1
340–94	Fitting – Hydraulic Tee	50	47	1
340–97	Fitting – Hydraulic 90°	50	34	1
340–132	Fitting – Hydraulic 90°	45	14	4
340–140	Fitting – Hydraulic Tee	45	28	1
340–151	Fitting – Hydraulic Tee	45	30	1
353–707	Fitting – 90° Barb	41	16	1
353–781	Fitting – Fuel 90°	42	14	1
353–783	Fitting – Straight	41	22	1
354–134	Fitting – Hydraulic 90°	41	6	2
354–135	Fitting – Hydraulic 90°	34	1	1
354–136	Fitting – Hydraulic Straight	45	23	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Workman 3300D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Workman 3300D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Workman 3300D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Front Bumper & Hood Assembly	1
Control Panel Assembly	2–3
Electrical Schematic (Model 07205)	4
Electrical Schematic (Model 07205TC)	5
Steering Linkage Assembly	6
Steering Gear Assembly No. 87–1500	7–8
Brake & Accelerator Pedal Assembly	9
Master Brake Cylinder No. 94–3800	10
Hydraulic Brake Line Routing Assembly	11
Hydraulic Schematic (Model 07205)	12
Hydraulic Schematic (Model 07205TC)	13
Clutch Linkage Assembly	14
Seat Base Assembly	15–16
Seat Back Assembly	17
Hi–Lo Shift Levers Assemblies	18
Differential Lock & Parking Brake Assemblies	19
R.O.P.S. Assembly	20
Front Suspension Assembly	21
Front Suspension Control Arm Assembly	22
Front Wheel Assembly	23
Front Brake Assembly	24
Rear Frame Assembly	25
Rear Axle Assembly	26–27
Rear Brake Assembly	28
Radiator & Hydraulic Pump Assembly	29
Hydraulic Pump Assembly No. 87–5700	30
Hydraulic Pump Drive Assembly	31
Engine Frame Assembly	32
Engine Installation Assembly	33
Transaxle Installation Assembly	34
Transaxle Case Assembly	35
Countershaft Assembly	36
Transaxle Gear Shafts Assembly	37
Shift Fork Assembly	38
Differential Gear Assembly	39
Battery Mount Assembly	40
Fuel Filter, Pump & Relay Mounting	41
Fuel Tank & Air Cleaner Assembly	42
Air Cleaner Assembly	43
Lift Valve Linkage Assembly	44
Lift Valve & Cylinder Assembly	45
Lift Cylinder No. 94–5203	46
Control Valve Assembly No. 43–1950	47
Rear Fender & Tail Light Assembly	48
Remote Hydraulics Control Lever & Linkage (Model 07205TC)	49
Remote Hydraulics Plumbing Assembly (Model 07205TC)	50–51
Camshaft Assembly	52
Valves & Crankshaft Assembly	53–54
Cylinder Head Assembly	55
Crankcase Assembly	56
Water Pump Assembly	57
Fuel Supply & Engine Block Assembly	58
Fuel Injection Pump Assembly	59–60
Governor Assembly	61
Starter Assembly	62
Alternator Assembly	63
TORO Part Number Index	64–75

Japanese parts kit number 93–8951 contains all of the individual parts on the preceding pages designated as (Japan).

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.