Form No. 3374-286 Rev A

TORO®

Count on it.

Parts Catalog

41cm Electric Lawn Mower

Model No. 21190—Serial No. 312000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3374-286 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Upper Assembly 4
Lower Assembly 6

© 2012—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Upper Assembly

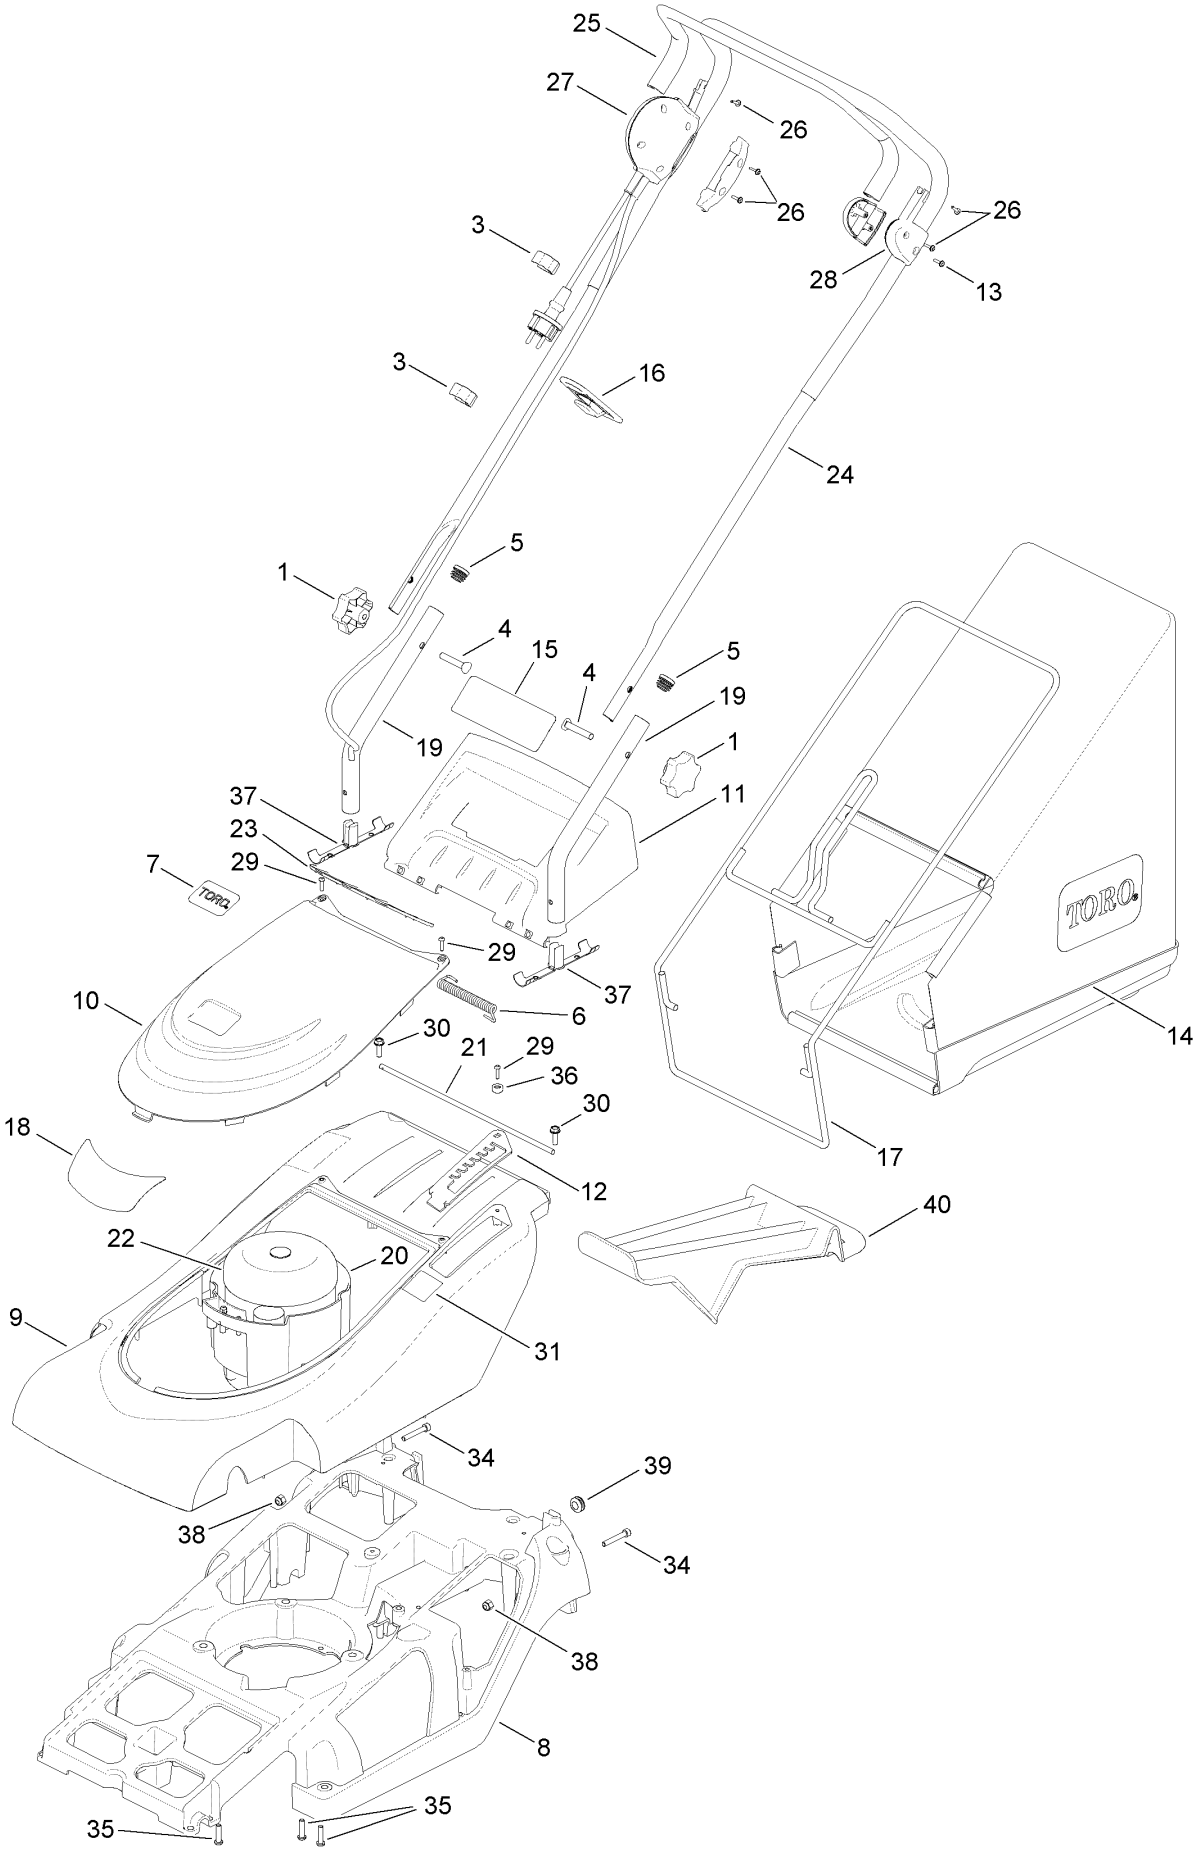

Upper Assembly (continued)

Ref.	Part Number	Qty.	Description
1	480088	2	Knob-Handlebar
3	410037	2	Guide-Cable
4	HY226024	2	Bolt-Handlebar
5	300160	2	Plug-Tube
6	410030	1	Spring-Deflector
7	111-4977	1	Decal-Toro
8	111-0031	1	Chassis
9	111-3978	1	Top-Cover
10	111-3977	1	Cover-Motor
11	111-1043	1	Moulding-Deflector, Rear
12	111-0040	1	Plate-HOC
13	HY100128	1	Screw-PPH, Thread Forming
14	111-4025	1	Grassbag
15	111-5173	1	Decal-Safety Electric
16	100105	1	Cleat-Cable
17	111-0045	1	Frame-Grassbag
18	111-4073	1	Decal
19	111-0051	2	Handlebars-Lower
20	111-0052	1	Moulding-Mount, Electric Motor
21	111-0056	1	Bar-Hinge
22	309052	1	Motor-Induction, 1.5Kw
23	111-0074	1	Vent Mesh ASM
24	111-0091	1	Handlebars-Electric
25	HY100017	1	Arm-Bail
26	HY100078	5	Screw
27	111-4070	1	Switch And Lead ASM
28	HY100510	1	Mount Bail Arm ASM
29	111-0094	3	Screw
30	09575	2	Screw-Taptite
31	111-4782	1	Decal-HOC
34	111-0118	2	Screw-Socket
35	111-0115	3	Screw
36	111-0107	1	Cup-Screw, Electric
37	111-0960	2	Plug-Handlebar
38	09438	2	Nut-Nyloc
39	111-2155	1	Grommet-Rubber
40	111-4382	1	Plug-Mulching

Lower Assembly

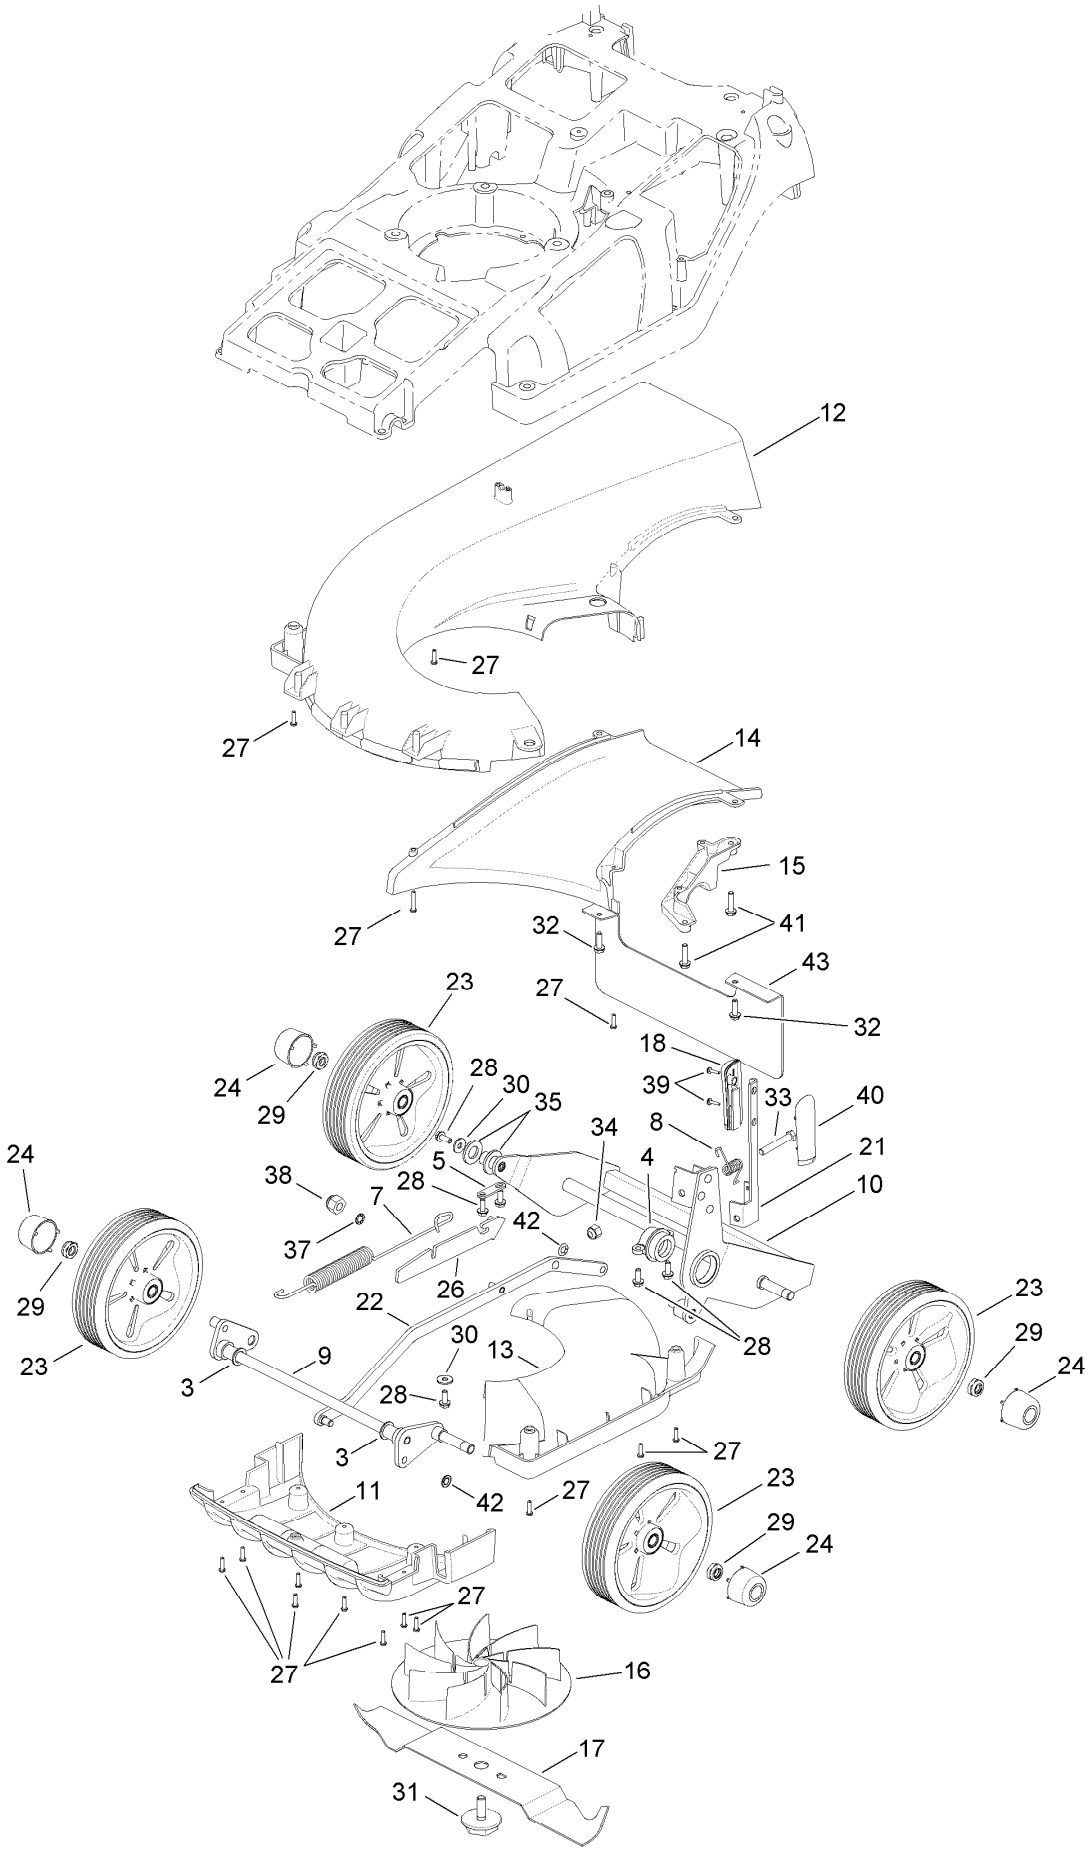

Lower Assembly (continued)

Ref.	Part Number	Qty.	Description
3	410069	2	Bearing-Axle, Front
4	410048	1	Housing-Pivot Bearing, LH
5	219037	1	Plate-Securing
7	410050	1	Spring-Counter Balance
8	111-0078	1	Spring-HOC
9	111-0027	1	Axle-Front
10	111-0068	1	Frame-Wheel
11	111-0034	1	Moulding-Fin
12	111-0037	1	Moulding-Snail Deck
13	111-0038	1	Moulding-Access, Snail Deck
14	111-0039	1	Moulding-Throw Plate
15	111-0050	1	Mount-Bearing
16	111-0053	1	Moulding-Mount, Electric Blade
17	111-0054	1	Cutterbar-Electric
18	111-0055	1	Knob-HOC, RH
21	111-0059	1	Lever-HOC
22	111-0063	1	Rod-Connecting Bar
23	111-4036	4	Wheel ASM
24	111-0066	4	Cap-Wheel, Centre
26	111-0073	1	Mount-Spring
27	111-0100	15	Screw
28	09365	6	Screw-Taptite
29	111-0119	4	Nut-Nyloc
30	09262	2	Washer
31	111-0099	1	Bolt-Fixing, Blade
32	09575	2	Screw-Taptite
33	09565	1	Screw-HH
34	09441	1	Nut-Hex, NI
35	09491	2	Washer-Plain
37	09476	1	Washer-Shakeproof
38	09438	1	Nut-Nyloc
39	HY100078	2	Screw
40	111-0105	1	Knob-HOC, LH
41	09364	2	Screw-HH
42	0201086	2	Washer-Starlock
43	111-4952	1	Guard-Rear



Count on it.