Form No. 3375-374 Rev A

TORO®

Count on it.

Parts Catalog

# FP-4000 Forward Plate Compactor

**Model No. 68027—Serial No. 313000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3375-374* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Handle and Base Assembly . . . . . 4
Base Assembly No. 125-6237 . . . . . 5
Engine Assembly . . . . . 6
Roll Cage and Water Assembly . . . . . 7

© 2012—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420




Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

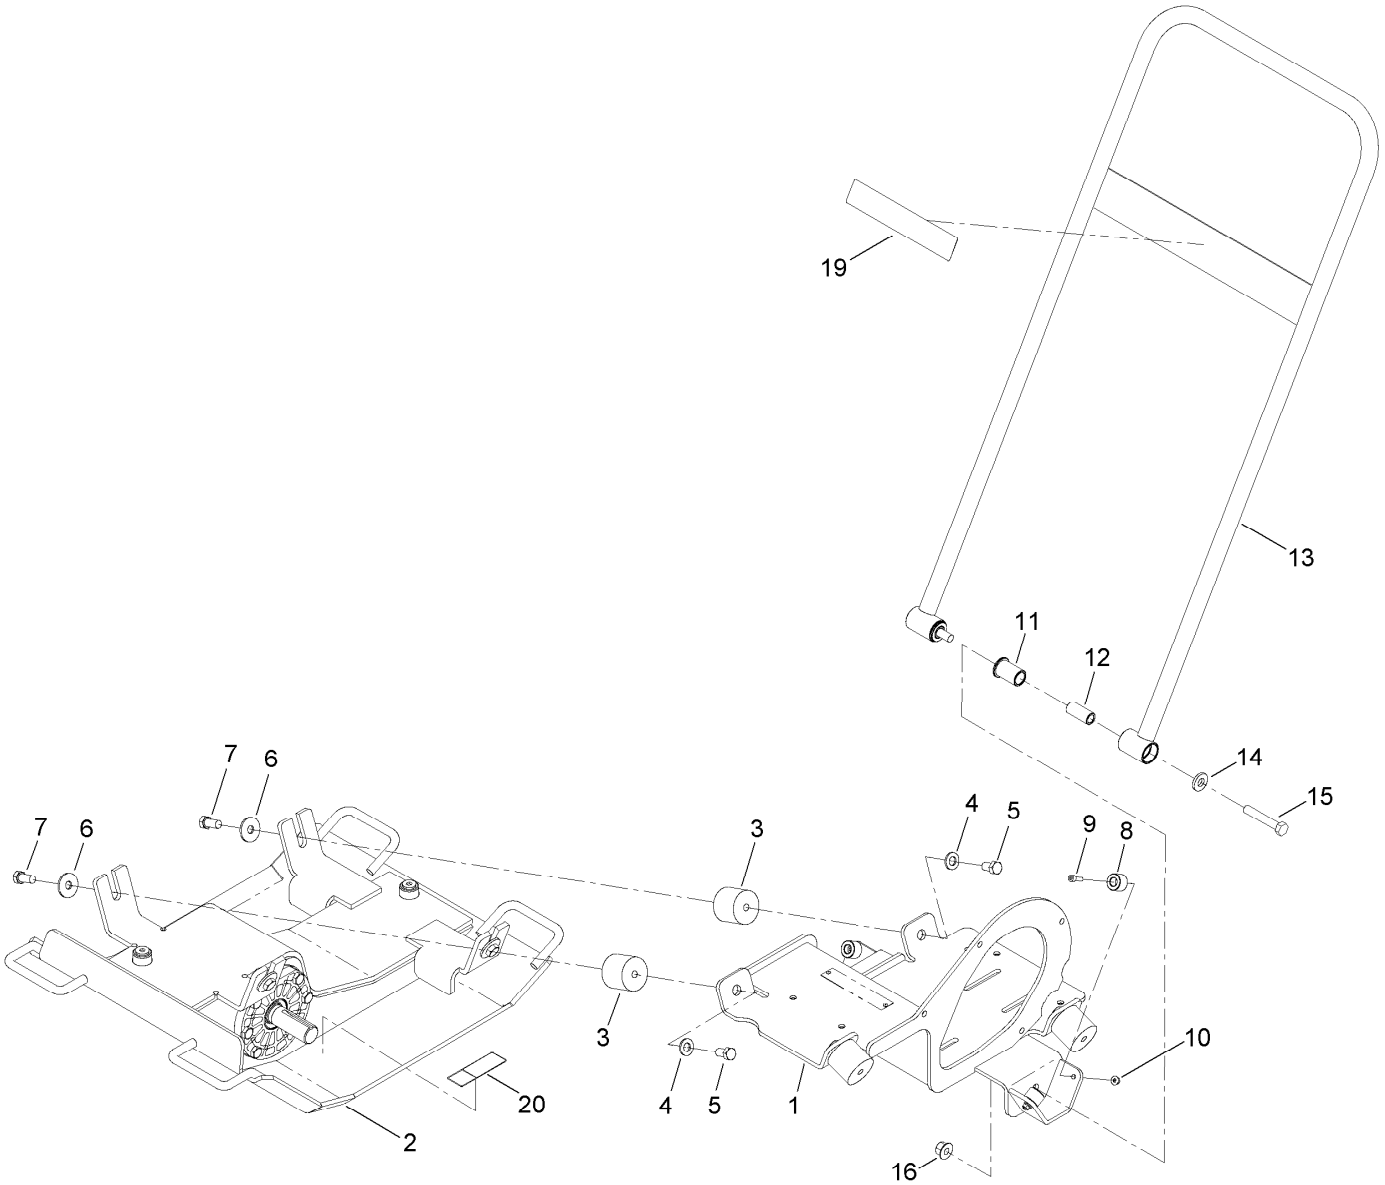


# Handle and Base Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-6249-03 | 1 | Deck-Engine |
| 2 | 125-6237 | 1 | Base ASM |
| 3 | ST65004 | 4 | Mount-Shock |
| 4 | 33096-00 | 4 | Washer-Flat |
| 5 | 33116-020 | 4 | Screw-HH |
| 6 | ST80835 | 4 | Washer-Flat |
| 7 | 33116-025 | 4 | Screw-HH |
| 8 | ST50265 | 4 | Spacer-Stop, Handle |
| 9 | ST81213 | 4 | Screw-HSH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 10 | 33003-00 | 4 | Nut-HF |
| 11 | ST50263 | 2 | Bushing-Handle, Main Plate |
| 12 | ST50264 | 2 | Spacer-Handle, Pivot |
| 13 | ST50260-03 | 1 | Handle-Main |
| 14 | ST80891 | 2 | Washer-Flat |
| 15 | 33116-070 | 2 | Screw-HH |
| 16 | 115-1115 | 2 | Nut-HHF, Lock |
| 19 | 125-4930 | 1 | Decal |
| 20 | 117-4979 | 1 | Decal-Warning, Shields (Ce) |

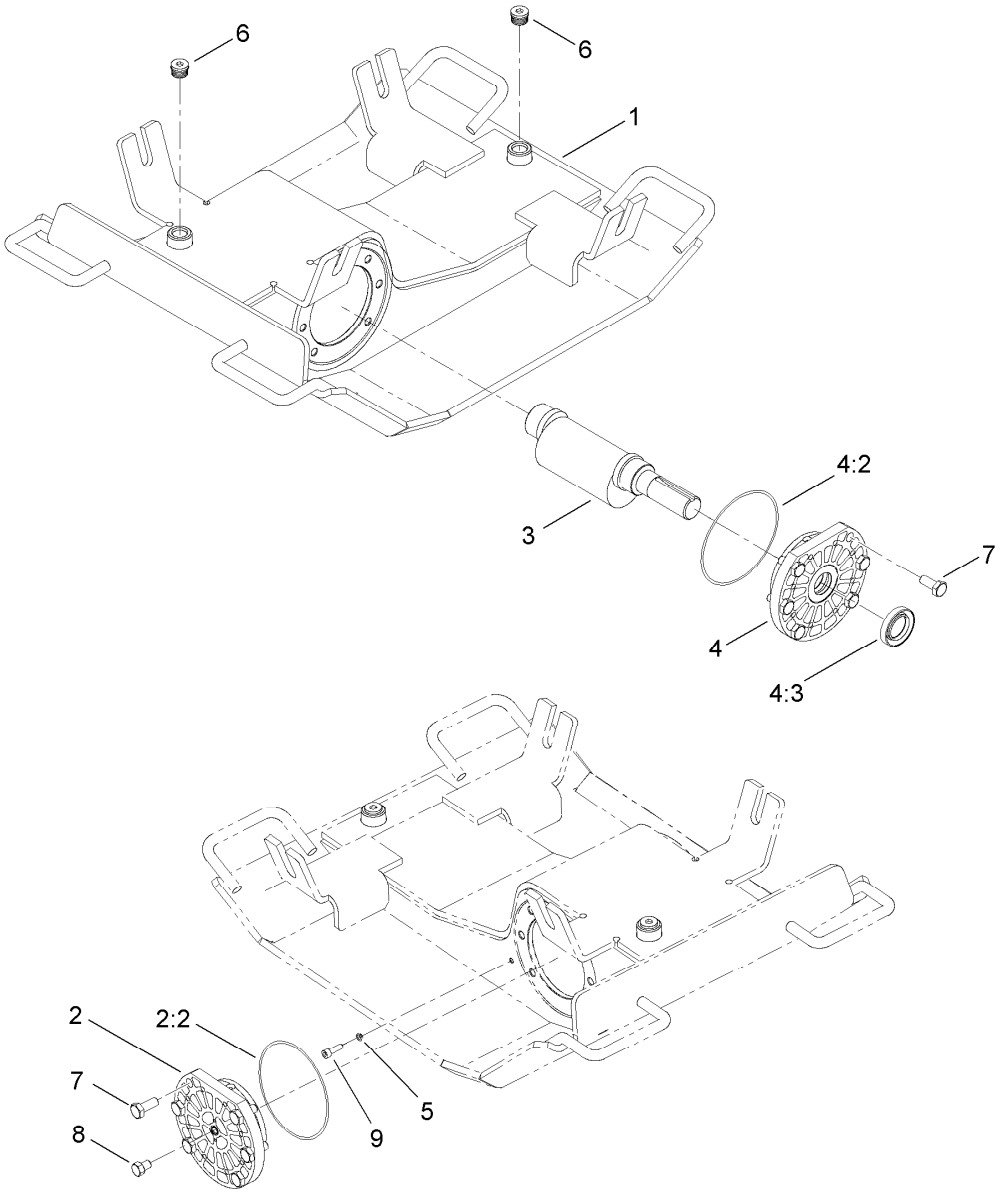


# Base Assembly No. 125-6237


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | ST50205-03 | 1 | Base |
| 2 | ST22063 | 1 | Plate Cap Bearing ASM (Blind End) |
| 2:2 | ST32033 | 1 | O-Ring |
| 3 | ST21543 | 1 | Shaft-Eccentric |
| 4 | ST22062 | 1 | Plate Cap Bearing ASM (Sheave End) |
| 4:2 | ST32033 | 1 | O-Ring |
| 4:3 | ST32047 | 2 | Seal-Shaft |
| 5 | ST81210 | 1 | Washer-Sealing, Nyltite |
| 6 | ST47647 | 2 | Fitting-HYD |
| 7 | 43-0090 | 12 | Screw-HH |
| 8 | ST80185 | 1 | Screw-HH |
| 9 | ST81213 | 1 | Screw-HSH |

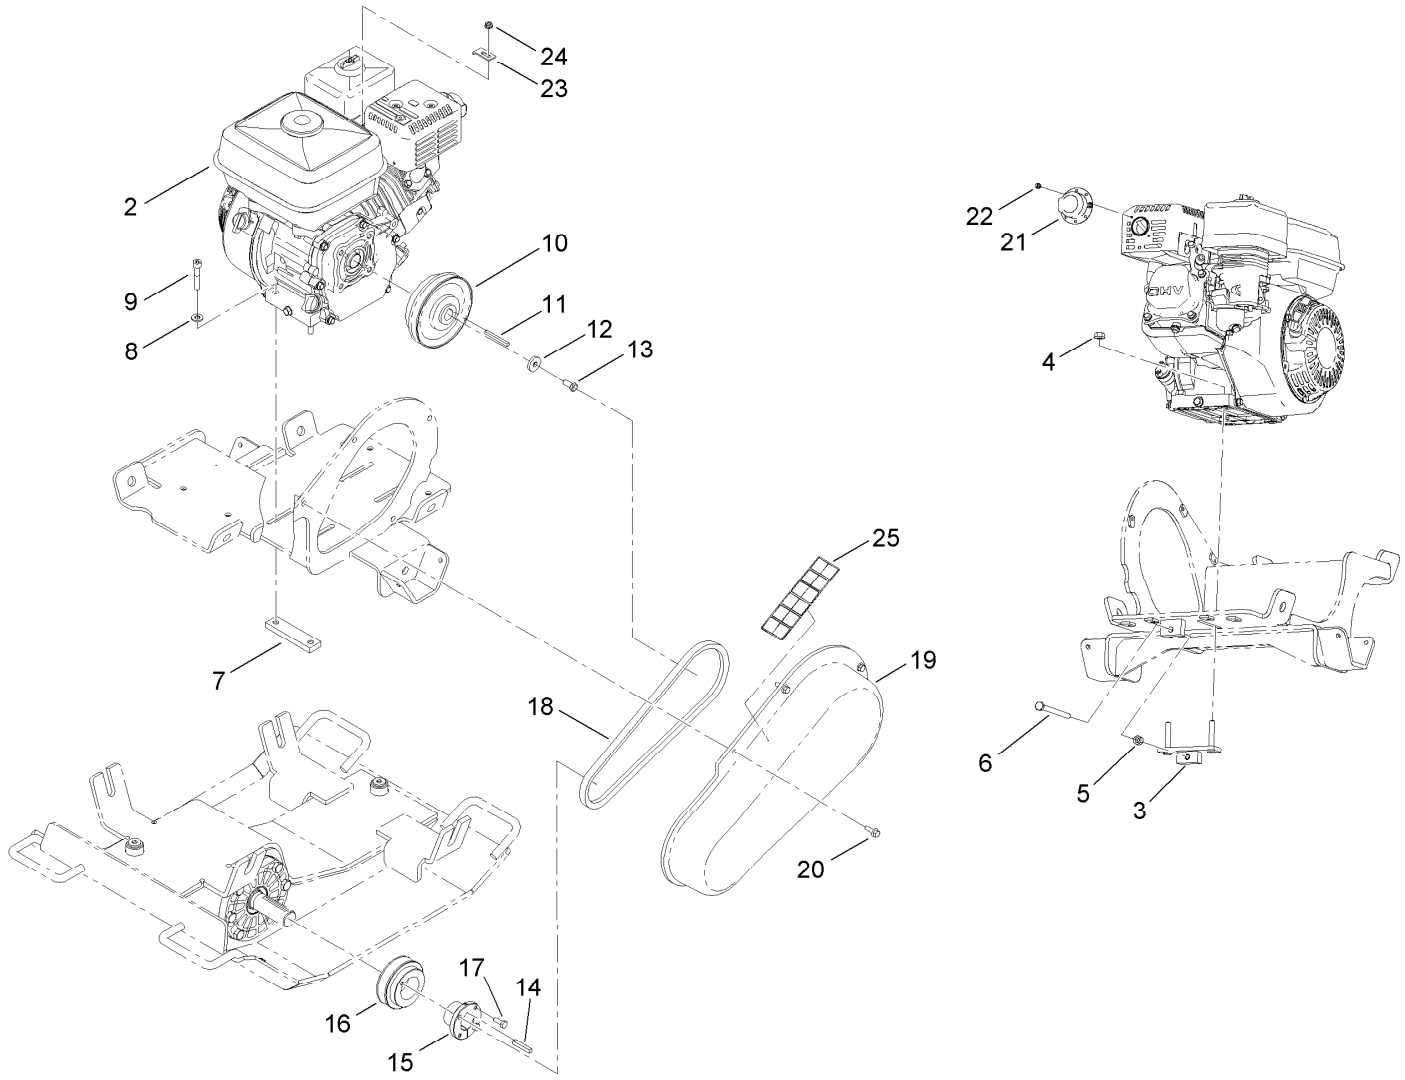


# Engine Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 125-4813 | 1 | Engine-Honda, Gx160 |
| 3 | ST50257 | 1 | Bracket-Adjuster, Engine |
| 4 | 33004-00 | 2 | Nut-HF |
| 5 | 33014-00 | 1 | Nut-Hex |
| 6 | ST81191 | 1 | Screw |
| 7 | ST50506 | 1 | Plate-Nut, Engine |
| 8 | 33094-00 | 2 | Washer-Plain |
| 9 | ST80966 | 2 | Screw-HSH |
| 10 | ST32347 | 1 | Clutch, S-Plate |
| 11 | ST80611 | 1 | Key-Square |
| 12 | ST39233 | 1 | Washer |
| 13 | 3235-6 | 1 | Screw-HH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 14 | ST80061 | 1 | Key-Square |
| 15 | ST32798 | 1 | Bushing |
| 16 | ST32797 | 1 | Sheave |
| 17 | 321-4 | 2 | Screw-HH |
| 18 | ST50500 | 1 | Belt-V |
| 19 | 125-4805 | 1 | Guard-Belt |
| 20 | 33103-020 | 4 | Screw-HHF |
| 21 | ST30166 | 1 | Deflector-Exhaust |
| 22 | ST80766 | 2 | Screw-HWH |
| 23 | ST42790 | 1 | Clip-Throttle |
| 24 | 32128-17 | 1 | Nut-Lock, Flange |
| 25 | 125-4943 | 1 | Decal-Warning, Plate |

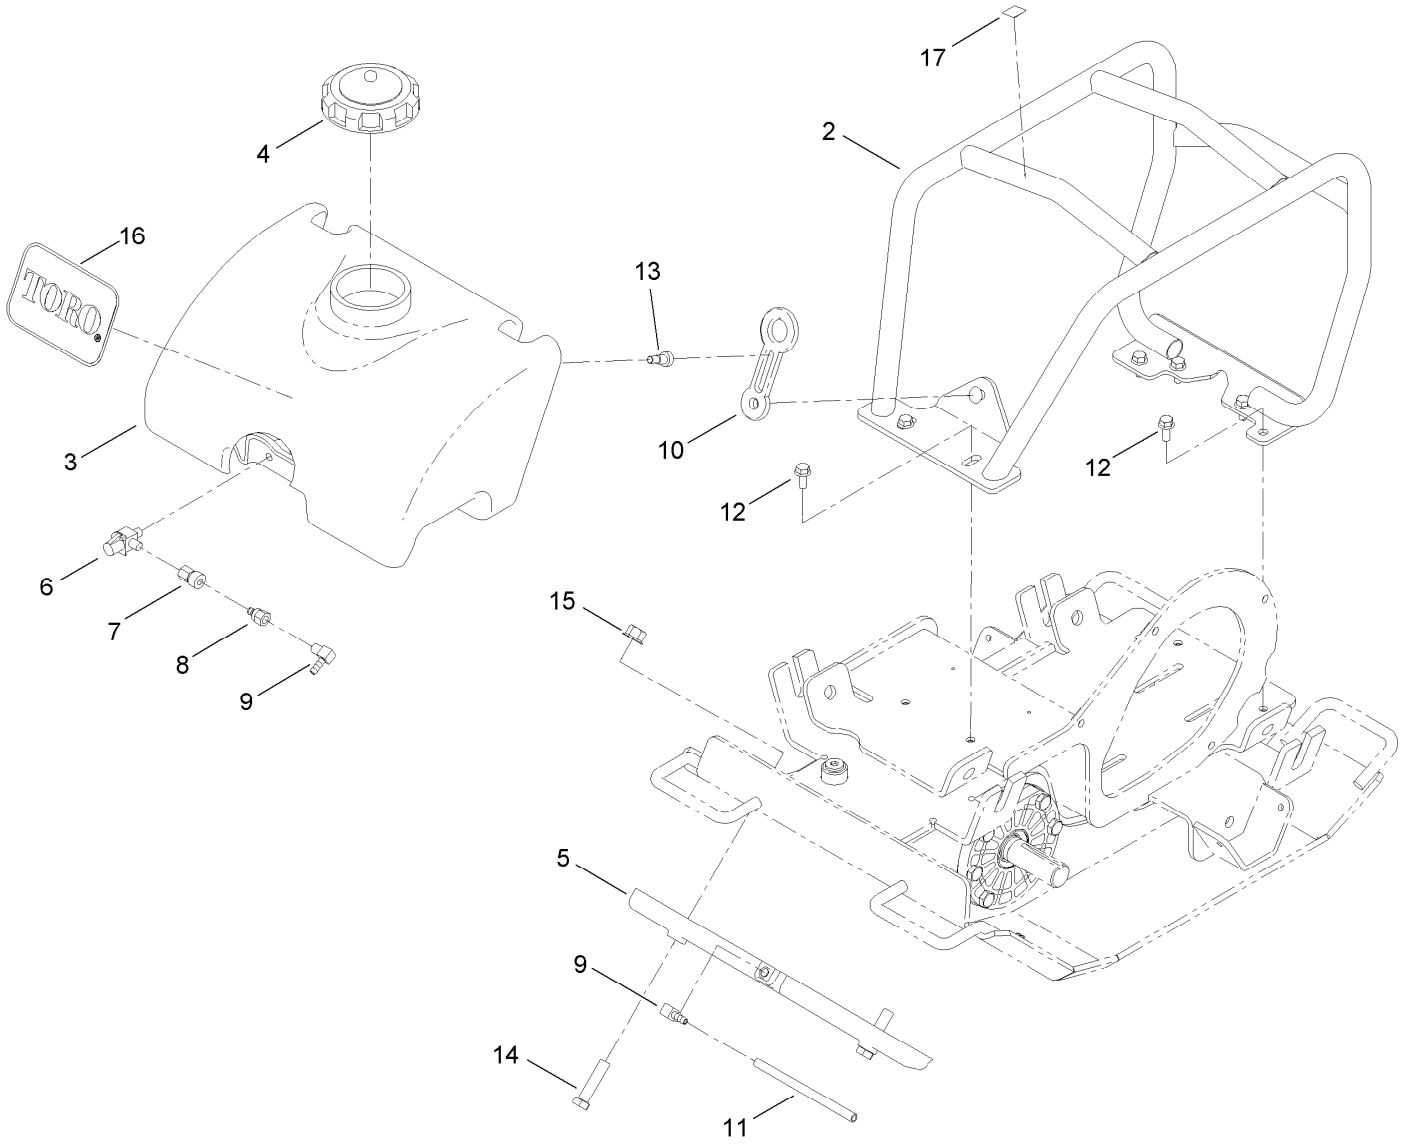


# Roll Cage and Water Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | ST50215-03 | 1 | Cage-Roll |
| 3 | 125-4810 | 1 | Tank-Water |
| 4 | ST47241 | 1 | Cap-Plastic |
| 5 | 125-8217 | 1 | Sprinkler |
| 6 | ST50497 | 1 | Valve-Ball |
| 7 | ST50498 | 1 | Fitting-Quick, Female |
| 8 | ST50499 | 1 | Fitting-Quick, Female, Nipple |
| 9 | ST34486 | 2 | Fitting-HYD, 90 DEG |
| 10 | ST47182 | 1 | Latch-Rubber |
| 11 | ST47250 | 1 | Hose-Water |
| 12 | 33104-020 | 6 | Screw-HHF |
| 13 | ST81130 | 1 | Screw-HSBH |
| 14 | 33116-050 | 2 | Screw-HH |
| 15 | 115-1115 | 2 | Nut-HHF, Lock |
| 16 | 68-3640 | 1 | Decal |
| 17 | 93-9084 | 1 | Decal-Point, Lift |




**Count on it.**