Form No. 3375-959 Rev A

TORO®

Count on it.

Parts Catalog

STX-38

Stump Grinder

Model No. 23212—Serial No. 313000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3375-959 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Frame Assembly 4
Track Assembly 5
Hydraulic Motor Assembly No. 121-1957 7
Engine, Gear Pump and Idler Arm Assembly 8
Traction Control Assembly 10
Parking Brake Assembly 12
Cutter Head Assembly 13
Tower Assembly 15
Control Valve Assembly No. 119-4585 17
Cooler Assembly 18
Hydraulic Routing Assembly 20
Electrical Assembly 22
Two-Button Handle Grip Assembly No. 119-4587 24

© 2013—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

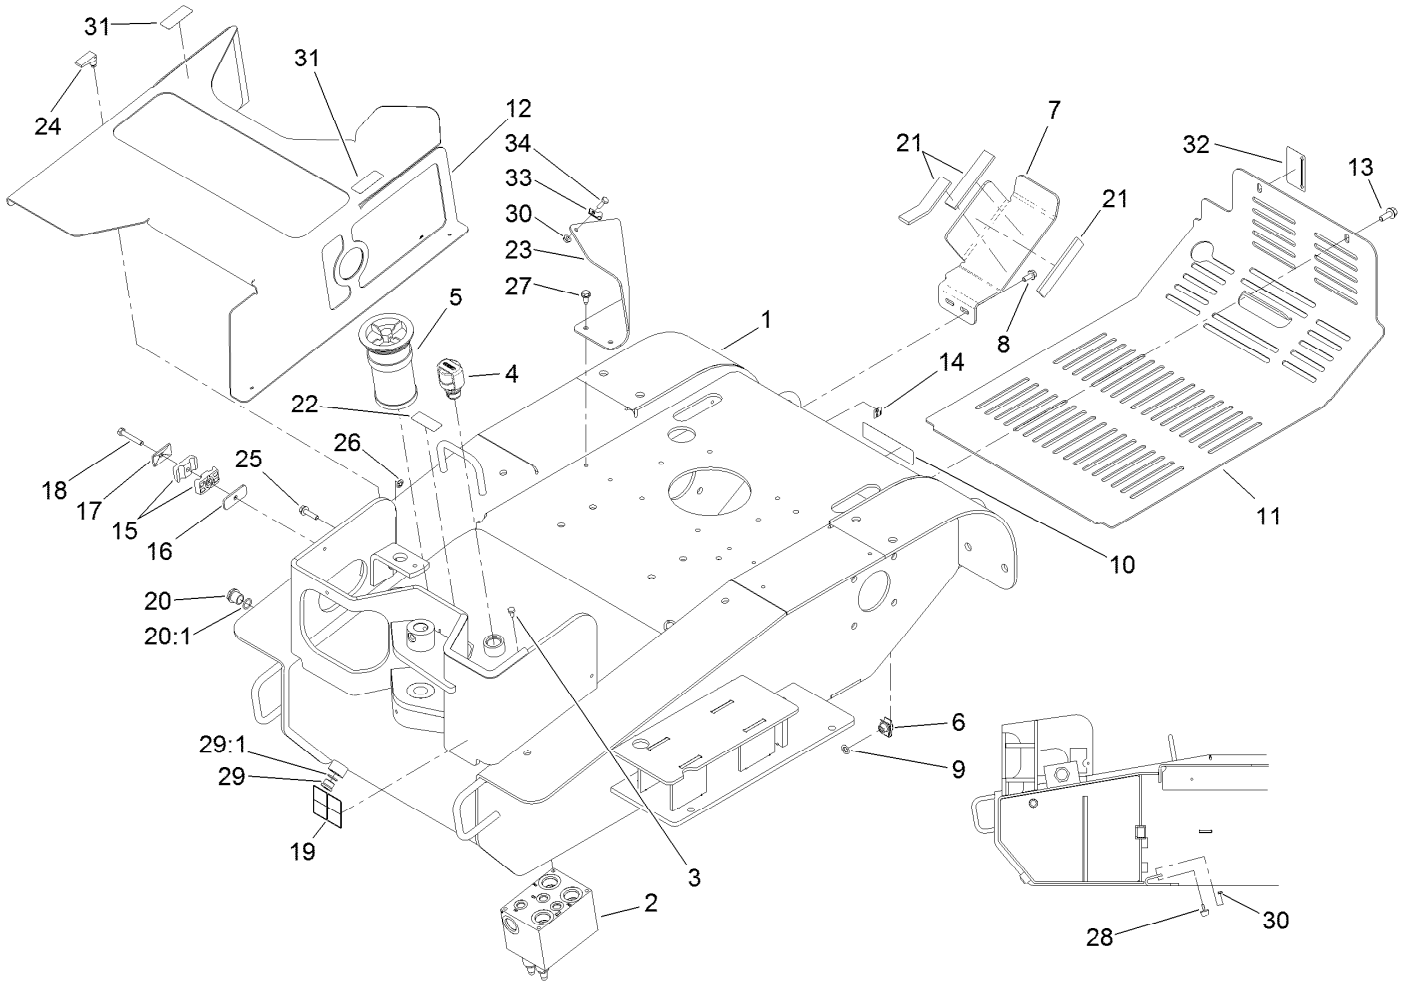

Frame Assembly

Ref.	Part Number	Qty.	Description
1	121-4535	1	Frame-Main
2	121-1022	1	Valve-Cutter
3	321-3	4	Screw-HH
4	115-9793	1	Breather
5	115-5745	1	Cartridge-Filter
6	112-4576	2	Nut-Clip, U
7	121-1141-01	1	Bracket-Tank
8	3234-47	2	Screw-HHF
9	107-3154	2	Nut-Push
10	93-7814	1	Decal-Danger
11	121-4532	1	Cover-Rear
12	121-4531	1	Cover-Front
13	3234-11	2	Screw-HHF
14	93-9084	4	Decal-Point, Lift
15	56-7976	2	Clamp-Tube
16	119-4636	1	Plate-Clamp
17	69-9760	1	Coverplate
18	322-10	1	Screw-HH


Ref.	Part Number	Qty.	Description
19	100-4650	1	Decal-Warning
20	114-3075	1	Sight Glass ASM
20:1	237-79	1	O-Ring
21	121-0894	3	Pad-Foam
22	93-6686	1	Decal-Oil, HYD
23	125-0310-01	1	Plate-Deflector, RH
24	74-5950	4	Latch-Swell
25	3234-36	1	Screw-HHF
26	117-2749	1	Nut-Push
27	32144-70	2	Screw-HWHTF
28	1-523420	2	Bumper
29	353-988	1	Plug-Hex
29:1	237-79	1	O-Ring
30	32128-33	3	Nut-HF
31	115-2047	2	Decal-Surface, Hot
32	93-9363	1	Decal-Brake, Parking
33	2412-72	1	Clip-Closed, Insulated
34	321-4	1	Screw-HH

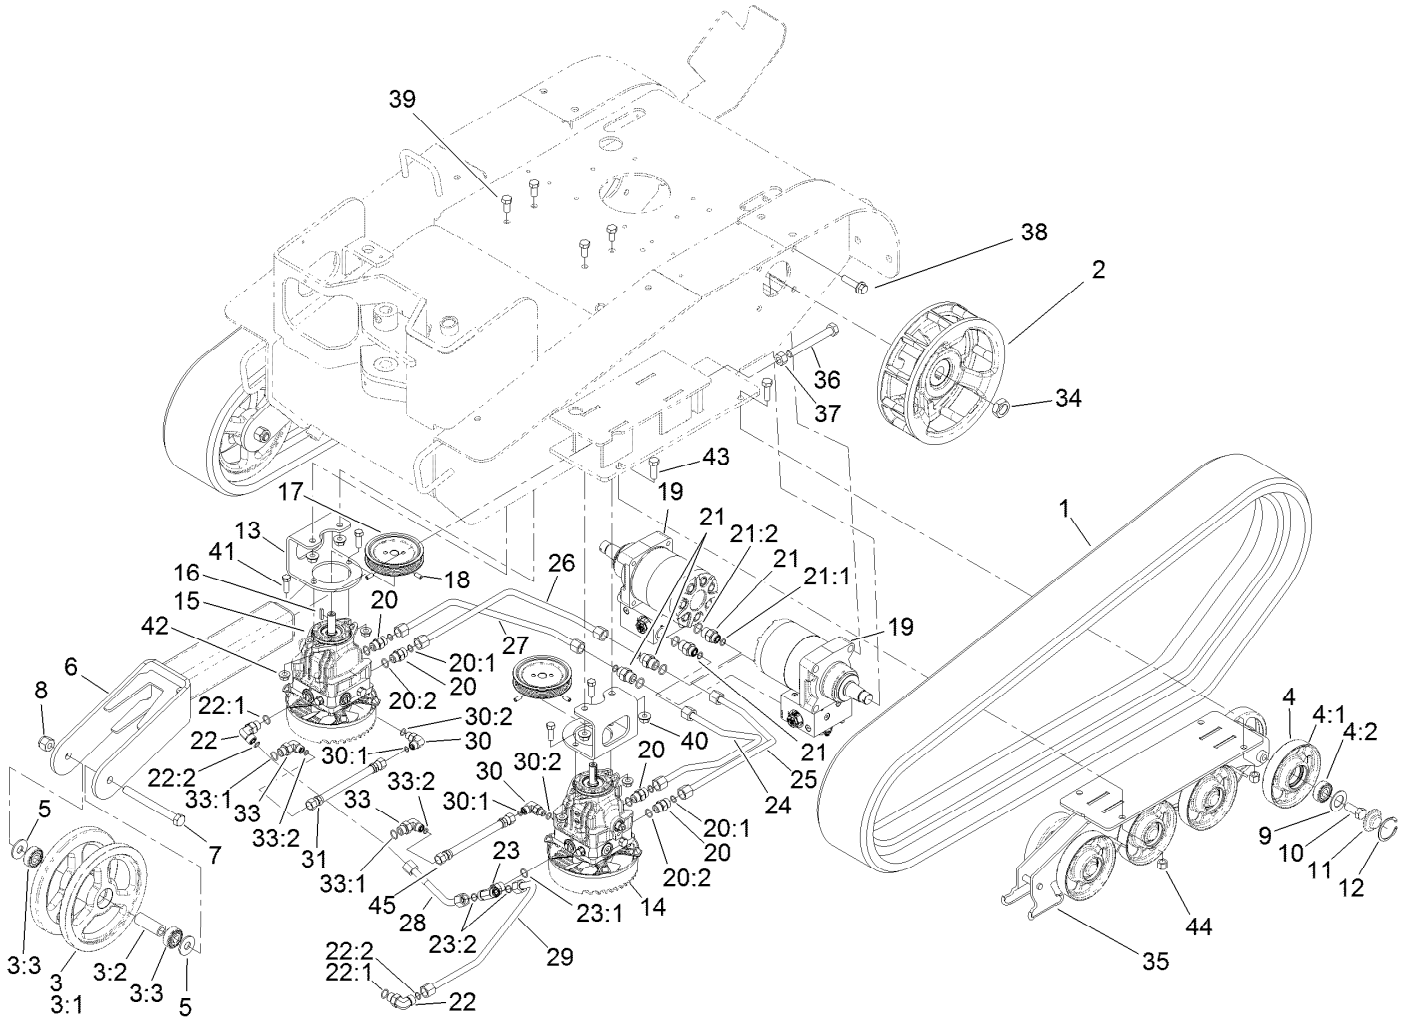

Track Assembly

Ref.	Part Number	Qty.	Description
1	121-1021	2	Track-Rubber
2	117-6426-03	2	Wheel-Drive
3	104-5745	2	Tensioner Wheel ASM
3:1	104-5747-03	1	Wheel-Tensioner
3:2	98-9835	1	Spacer-Wheel, Tensioner
3:3	120-5378	2	Bearing-Ball
4	112-4817	16	Wheel-Tensioner
4:1	114-3014-03	1	Wheel-Track
4:2	120-5378	1	Bearing-Ball
5	3256-7	4	Washer-Flat
6	121-1018-03	2	Arm-Tensioner
7	327-17	2	Screw-HH
8	3296-24	2	Nut-Lock, NI
9	106-7585	16	Gasket-Bogie
10	327-4	16	Screw-HH
11	106-7557	16	Cap-Wheel, Bearing
12	106-7595	16	Ring-Snap, Internal
13	115-1289-01	2	Bracket-Mount, Pump
14	121-1953	1	Pump-HYD, LH
15	121-1954	1	Pump-HYD, RH
16	80-6090	2	Key-Pump


Ref.	Part Number	Qty.	Description
17	109-2202	2	Sheave
18	3246-6	4	Screw-Set, HSH
19	121-1957	2	HYD Motor ASM
20	340-4	4	Fitting-HYD, Straight
20:1	237-30	1	O-Ring
20:2	237-79	1	O-Ring
21	340-6	4	Fitting-HYD, Straight
21:1	237-30	1	O-Ring
21:2	237-80	1	O-Ring
22	340-98	2	Fitting-HYD, 90 DEG
22:1	237-79	1	O-Ring
22:2	237-30	1	O-Ring
23	340-157	1	Fitting-HYD, Tee
23:1	237-79	1	O-Ring
23:2	237-30	2	O-Ring
24	121-1124	1	Tube-HYD
25	121-1125	1	Tube-HYD
26	121-1126	1	Tube-HYD
27	121-1127	1	Tube-HYD
28	121-1198	1	Tube-HYD
29	121-1130	1	Tube-HYD

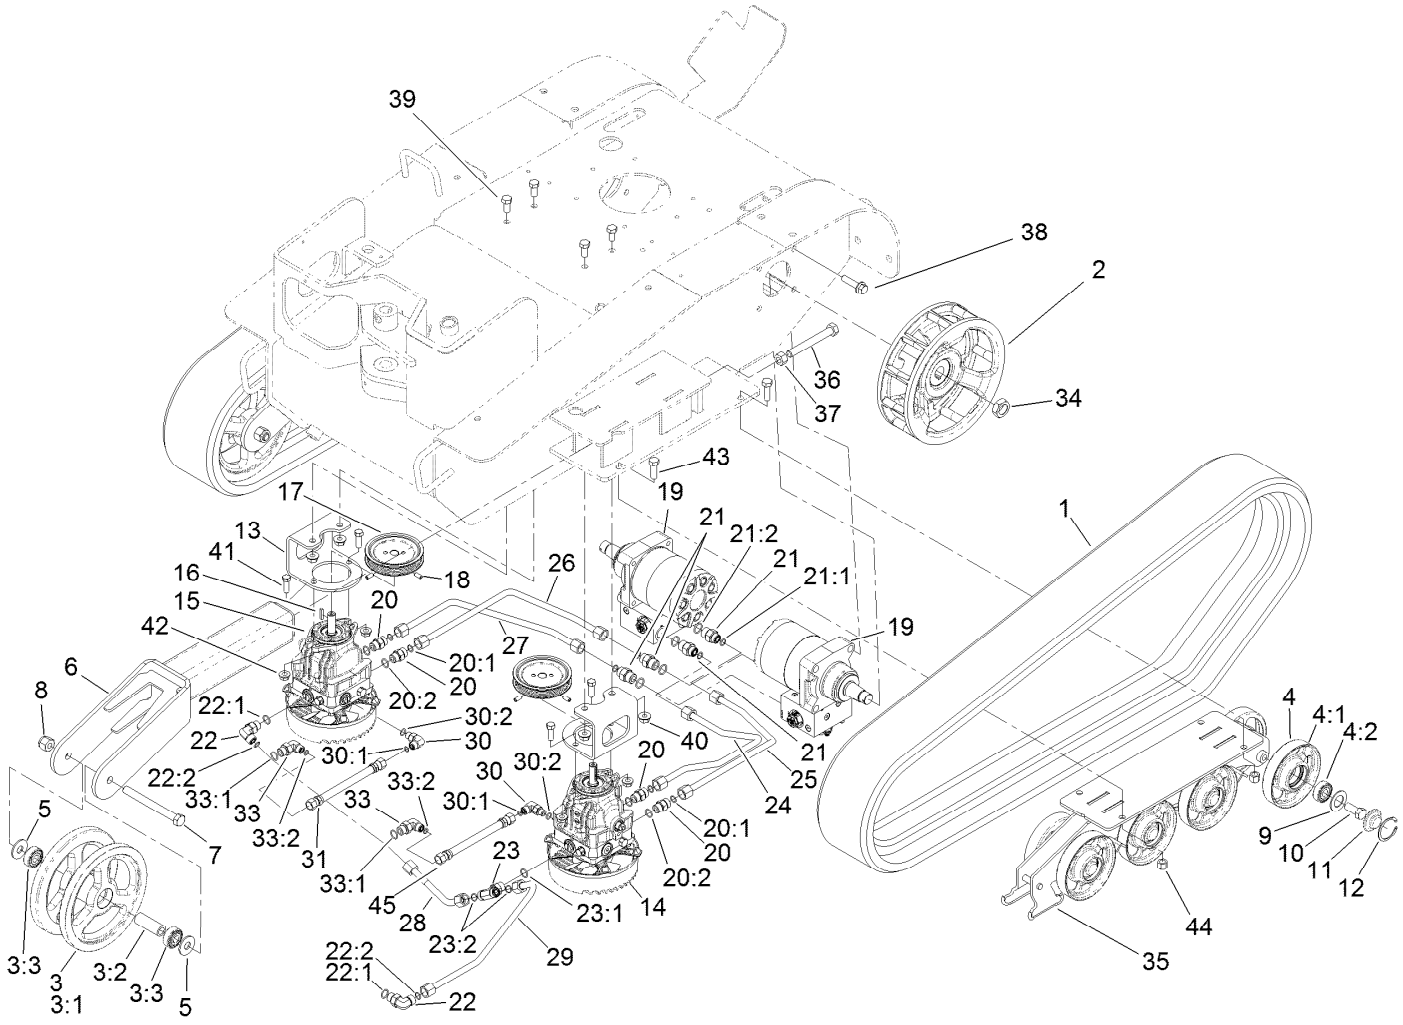

Track Assembly (continued)

Ref.	Part Number	Qty.	Description
30	340-77	2	Fitting-HYD, 90 DEG
30:1	237-22	1	O-Ring
30:2	237-42	1	O-Ring
31	94-4712	1	Hose-HYD
33	340-18	2	Fitting-HYD, 90 DEG
33:1	237-79	1	O-Ring
33:2	237-22	1	O-Ring
34	106-8159	2	Nut-Lock
35	121-0883-01	2	Mount-Wheel
36	125-0357	2	Screw-HH, TAP

Ref.	Part Number	Qty.	Description
37	3217-11	2	Nut-Hex
38	3234-27	8	Screw-HHF
39	325-4	4	Screw-HH
40	32128-49	4	Nut-HHF
41	324-5	4	Screw-HH
42	32128-42	4	Nut-HF
43	325-6	8	Screw-HH
44	3296-23	8	Nut-Lock, NI
45	76-9420	1	Hose-HYD

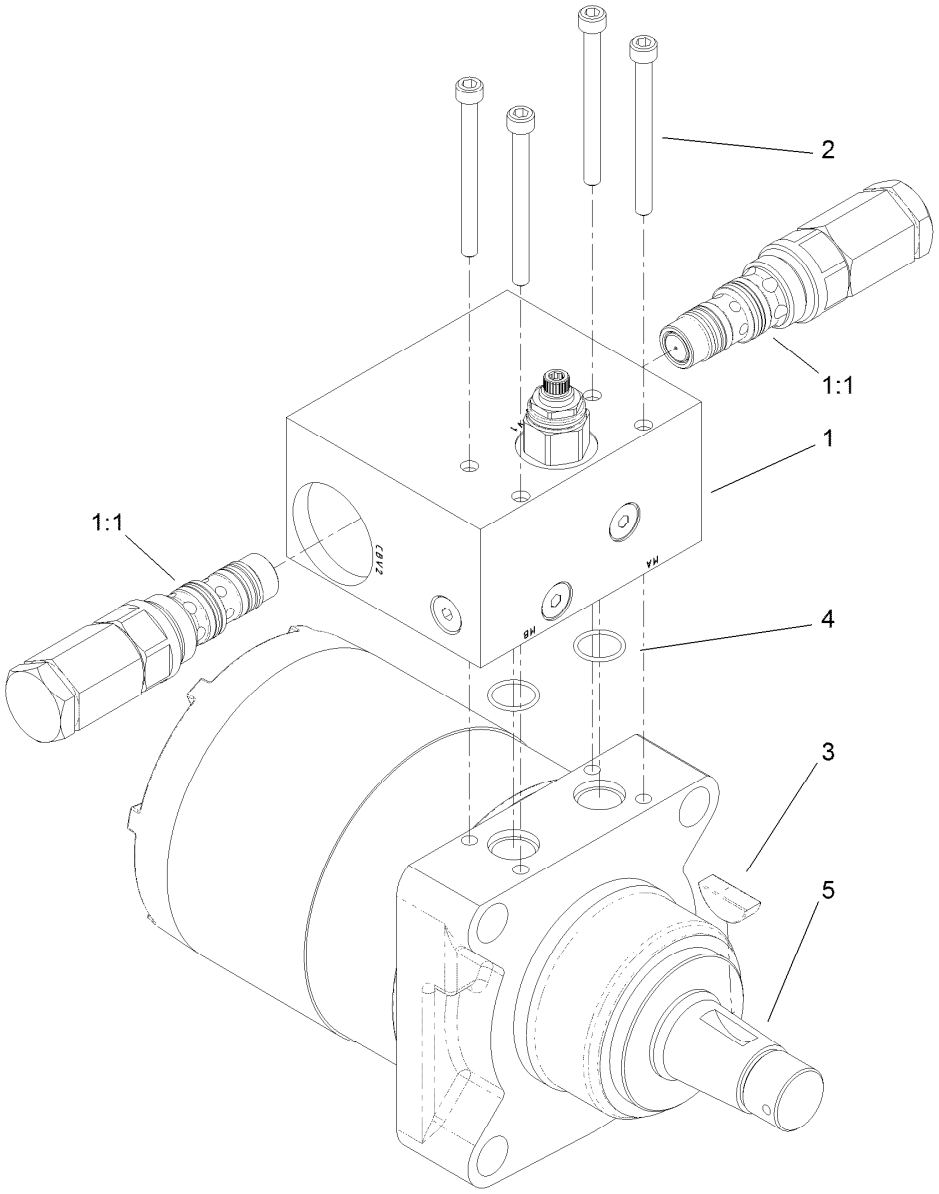


Hydraulic Motor Assembly No. 121-1957

Ref.	*Part Number*	*Qty.*	*Description*
1	121-4464	1	Counterbalance Valve ASM
1:1	121-4463	2	Cartridge-Cb
2	119-4611	4	Bolt-HSH
3	3257-42	1	Key-Woodruff
4	120-0691	2	O-Ring
5	76-0860	1	Shaft-Coupling
6	100-6131	1	Seal Kit (HYD Motor) ●

● Not illustrated

Engine, Gear Pump and Idler Arm Assembly

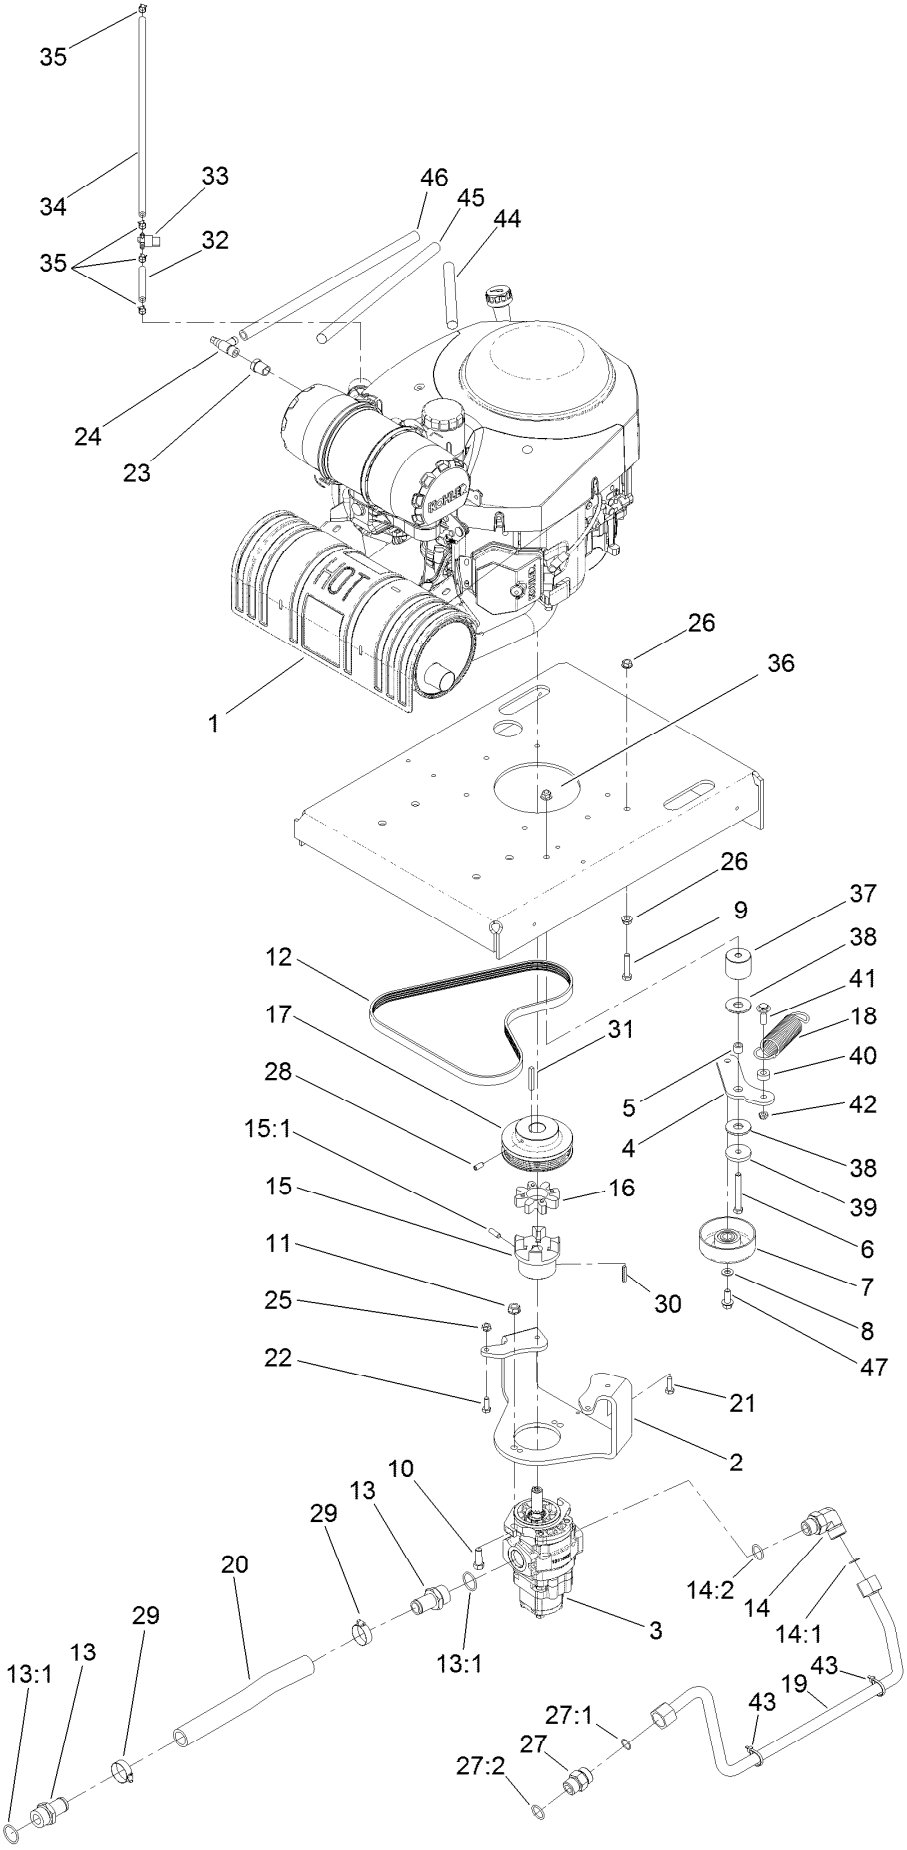


Engine, Gear Pump and Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kohler, Cv980 ●■
2	114-2912-01	1	Mount-Pump
3	121-1952	1	Gear Pump ASM
4	125-0252	1	Arm-Idler
5	1-413088	1	Bushing-Lever, Lift
6	323-14	1	Screw-HH
7	95-8802	1	Pulley-Idler
8	3256-24	1	Washer-Flat
9	323-9	1	Screw-HH
10	324-5	2	Screw-HH
11	32128-37	2	Nut-HF
12	121-4326	1	Belt-V
13	354-78	2	Connector-Hose
13:1	237-146	1	O-Ring
14	340-142	1	Fitting-HYD, 90 DEG
14:1	237-58	1	O-Ring
14:2	237-81	1	O-Ring
15	121-4330	1	Hub-Coupler
15:1	100-7594	1	Screw-Set
16	104-3542	1	Spider
17	121-1028	1	Pulley-Engine
18	105-6992	1	Spring-Extension
19	121-1128	1	Tube-HYD
20	121-4340	1	Hose-Suction
21	33114-025	4	Screw-HH
22	322-4	2	Screw-HH
23	103-1390	1	Bushing
24	103-1965	1	Valve-Drain, Oil
25	32128-20	2	Nut-HF
26	3290-357	2	Nut-HHF, Whiz
27	340-9	1	Fitting-HYD, Straight
27:1	237-58	1	O-Ring
27:2	237-81	1	O-Ring
28	3246-6	2	Screw-Set, HSH
29	2412-34	2	Clamp-Hose
30	27-8590	1	Key-Square
31	608006	1	Key-Square
32	109-0295	1	Hose-Fuel
33	1-603770	1	Valve-Fuel
34	110-1872	1	Hose-Fuel
35	2412-98	4	Clamp-Hose
36	104-8301	1	Nut-Flange, NI
37	125-0251	1	Spacer-Idler
38	114-0463	2	Washer-Friction, Composite
39	110-9981	1	Washer-Plain
40	104-8426	1	Spacer
41	614672	1	Bolt-Shoulder
42	3296-59	1	Nut-Lock, NI
43	3290-379	2	Tie-Cable
44	121-4403	1	Sleeve-Thermal,
45	121-4404	1	Sleeve-Thermal,
46	98-4667	1	Hose
47	3234-11	1	Screw-HHF

● Not serviced separately


■ Obtain parts from www.kohlerplus.com

Traction Control Assembly

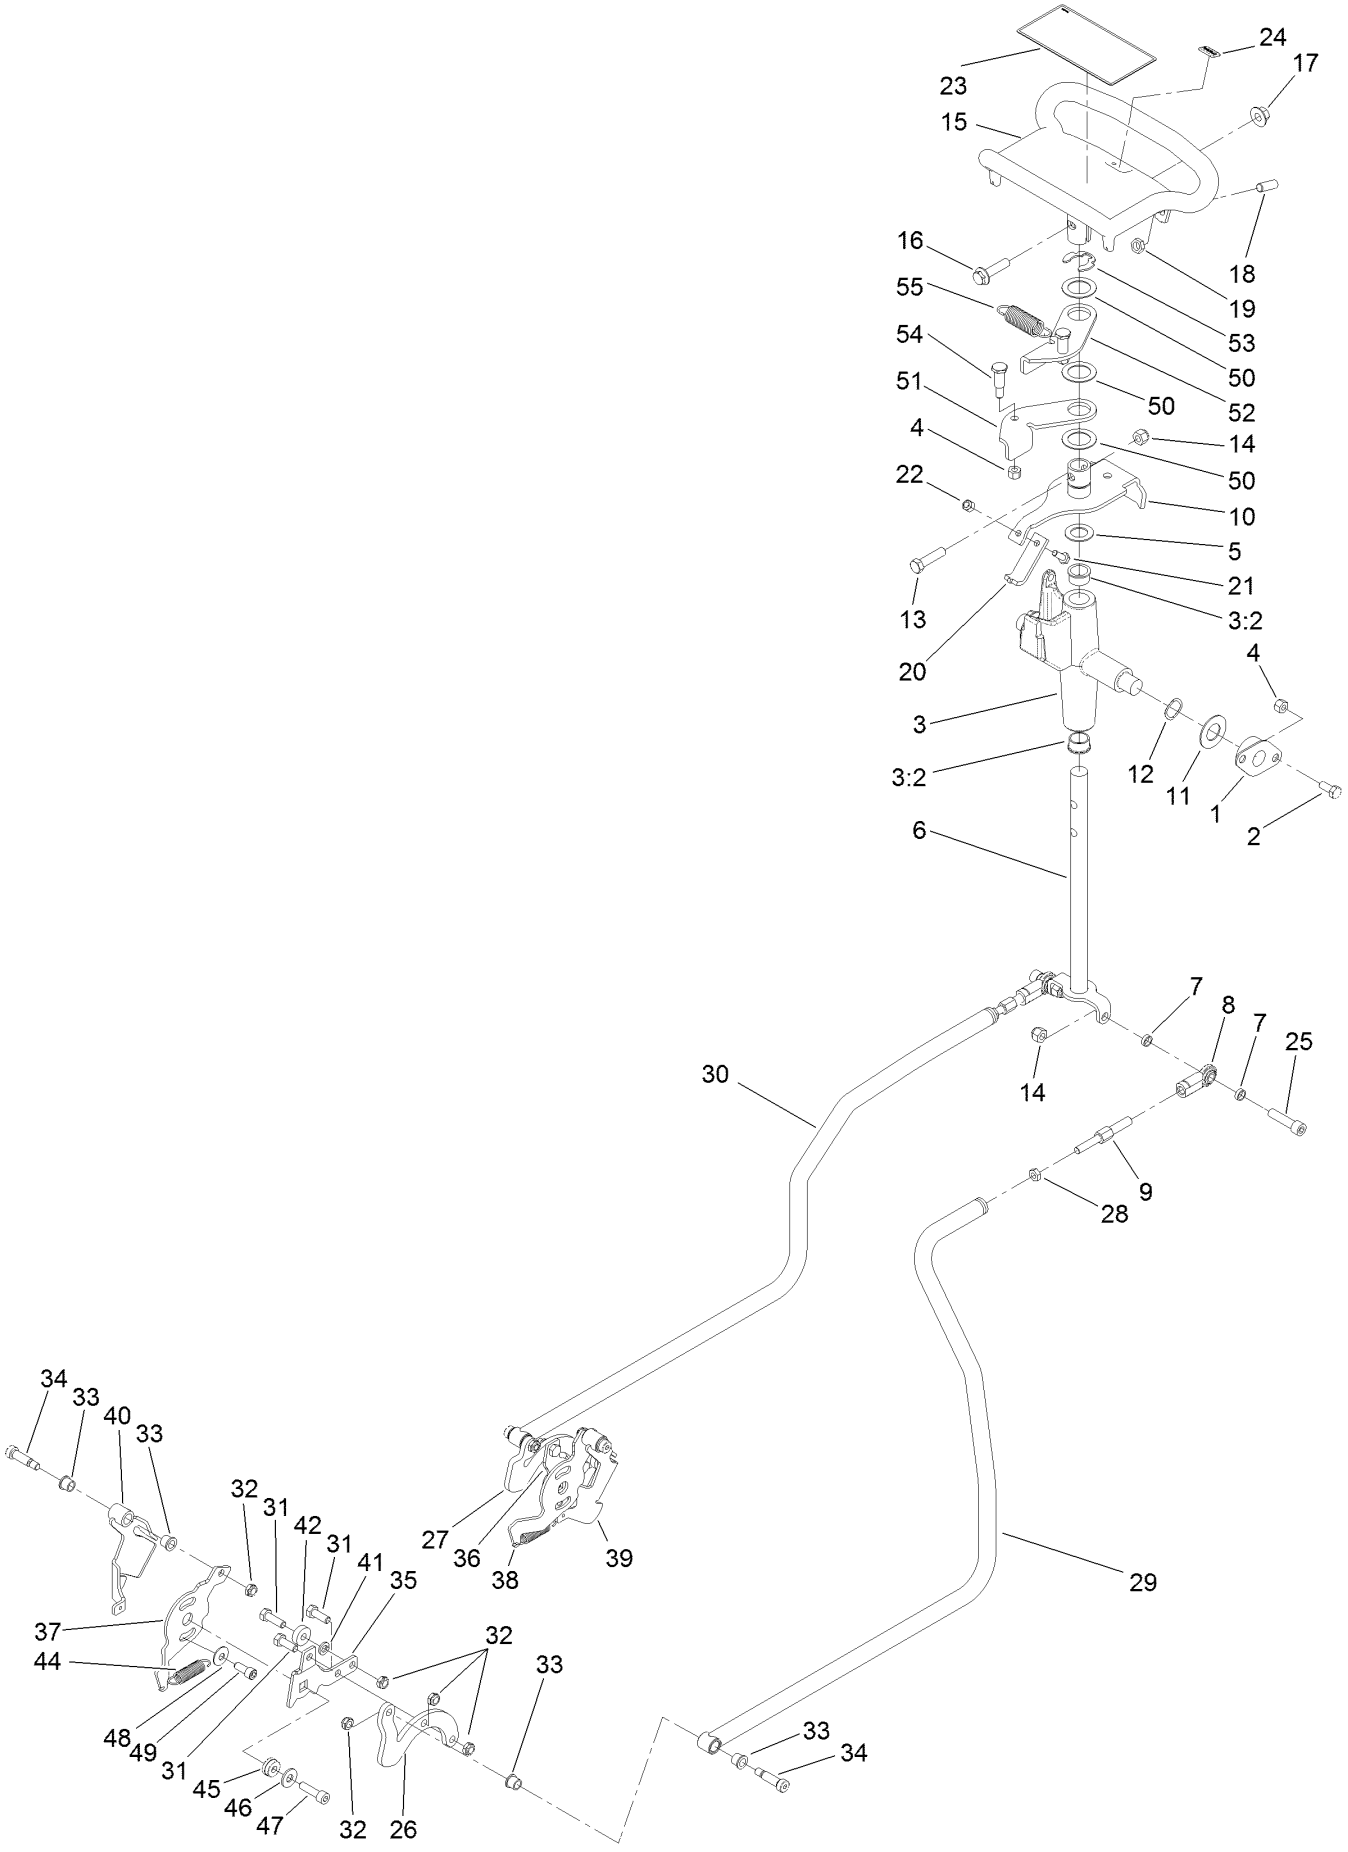


Traction Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	68-2970	2	Bushing
2	322-3	4	Screw-HH
3	106-5737	1	Control Support ASM
3:2	256-252	2	Bearing-Flange
4	3296-29	6	Nut-Lock, NI
5	257-8	1	Washer-Thrust
6	117-6335	1	Rod-Drive
7	108-0634	4	Spacer-Plate, Retaining
8	103-1167	2	Joint-Ball End, LH
9	117-6334	2	Link-Control, Adjustment
10	112-2783	1	Lever-Pivot
11	3256-39	2	Washer-Flat
12	95-3703	2	Washer-Spring, Wave
13	323-8	1	Screw-HH
14	3296-39	3	Nut-Lock, NI
15	106-7614-03	1	Handle-Control
16	3234-18	1	Screw-HHF
17	32128-43	1	Nut-Flange
18	3247-6	2	Screw-Set
19	3218-3	2	Nut-Jam
20	115-1204	1	Plate-Neutral
21	321-4	1	Screw-HH
22	3296-42	1	Nut-Lock, NI
23	115-4020	1	Decal-Traction
24	98-1459	1	Decal
25	3274-2	2	Screw-HSH
26	121-1123	1	Plate-Control, LH
27	121-1122	1	Plate-Control, RH
28	3220-2	2	Nut-Jam
29	121-1108	1	LH Control Rod ASM
30	121-1109	1	RH Control Rod ASM
31	322-4	6	Screw-HH
32	3296-47	10	Nut-Lock, NI
33	256-116	8	Bushing-Flange
34	114-8629	4	Bolt-Shoulder
35	115-6628	1	Plate-Arm, Return, LH
36	115-6536	1	Plate-Arm, Return
37	115-6549	1	Plate-Base, LH
38	115-6535	1	Plate-Base, RH
39	115-6636	1	Pivot-RH
40	115-6637	1	Pivot-LH
41	3253-4	2	Washer-Lock
42	251-259	2	Bearing-Ball
44	121-4409	2	Spring-Extension
45	117-6429	2	Lock-Trunion
46	3256-3	2	Washer-Flat
47	94-3559	2	Screw-HSH
48	3290-456	2	Washer-Belleville
49	3273-14	2	Screw-HSH
50	108-9743	3	Washer-Plain
51	98-8407	1	Lever-Return, RH
52	98-8408	1	Lever-Return, LH
53	32151-91	1	Ring-Retaining
54	63-2650	2	Screw-Shoulder
55	108-4724	1	Spring-Extension

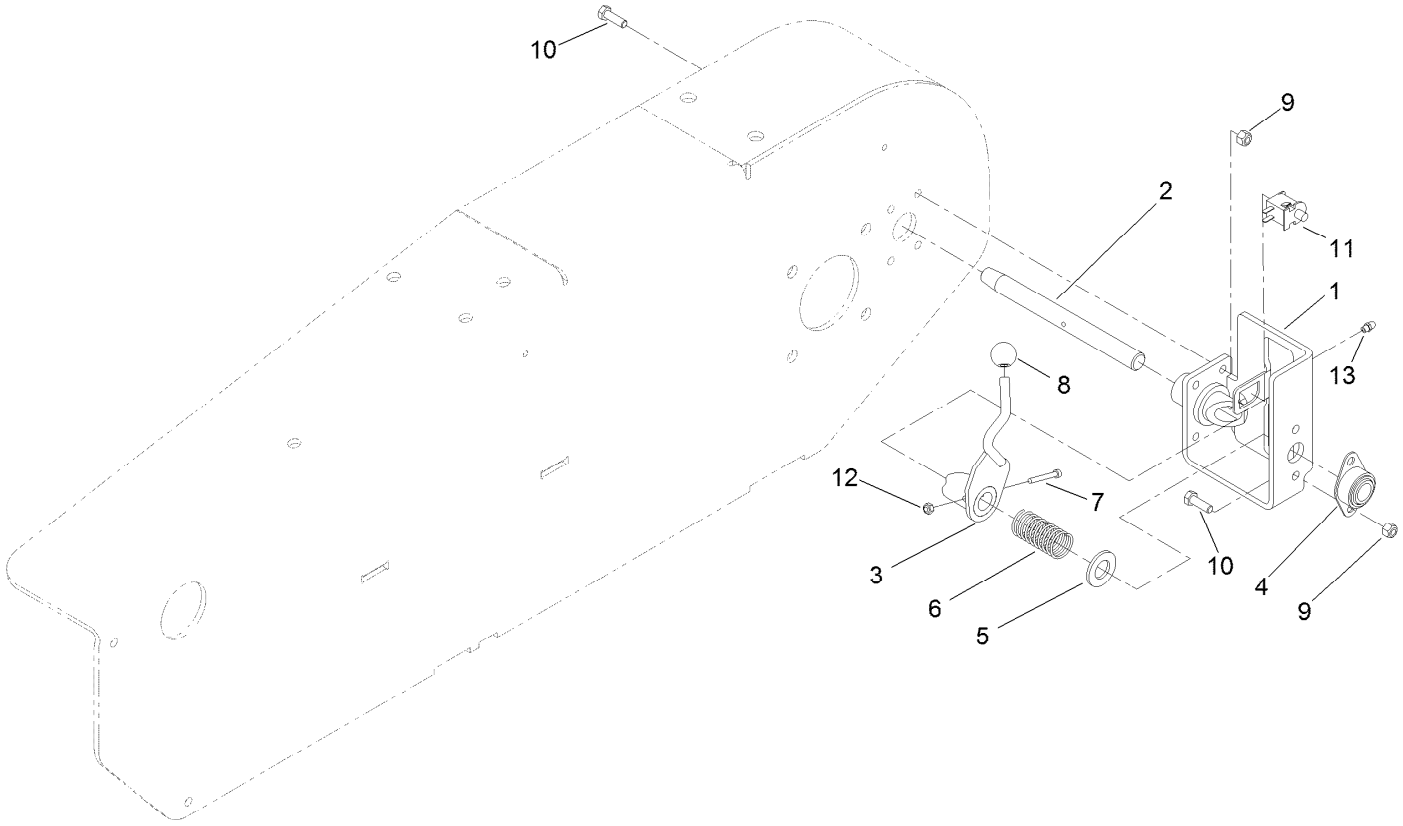

Parking Brake Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	125-0259-03	1	Bracket-Brake
2	121-4352	1	Shaft-Brake
3	121-4356-03	1	Handle-Brake
4	68-2970	1	Bushing
5	3256-28	1	Washer-Flat
6	125-0344	1	Spring-Comperssion
7	3274-59	1	Screw-HSH
8	233-69	1	Knob
9	3296-29	6	Nut-Lock, NI
10	322-5	6	Screw-HH
11	740275	1	Switch
12	3296-2	1	Nut-Lock, NI
13	302-5	1	Fitting-Grease

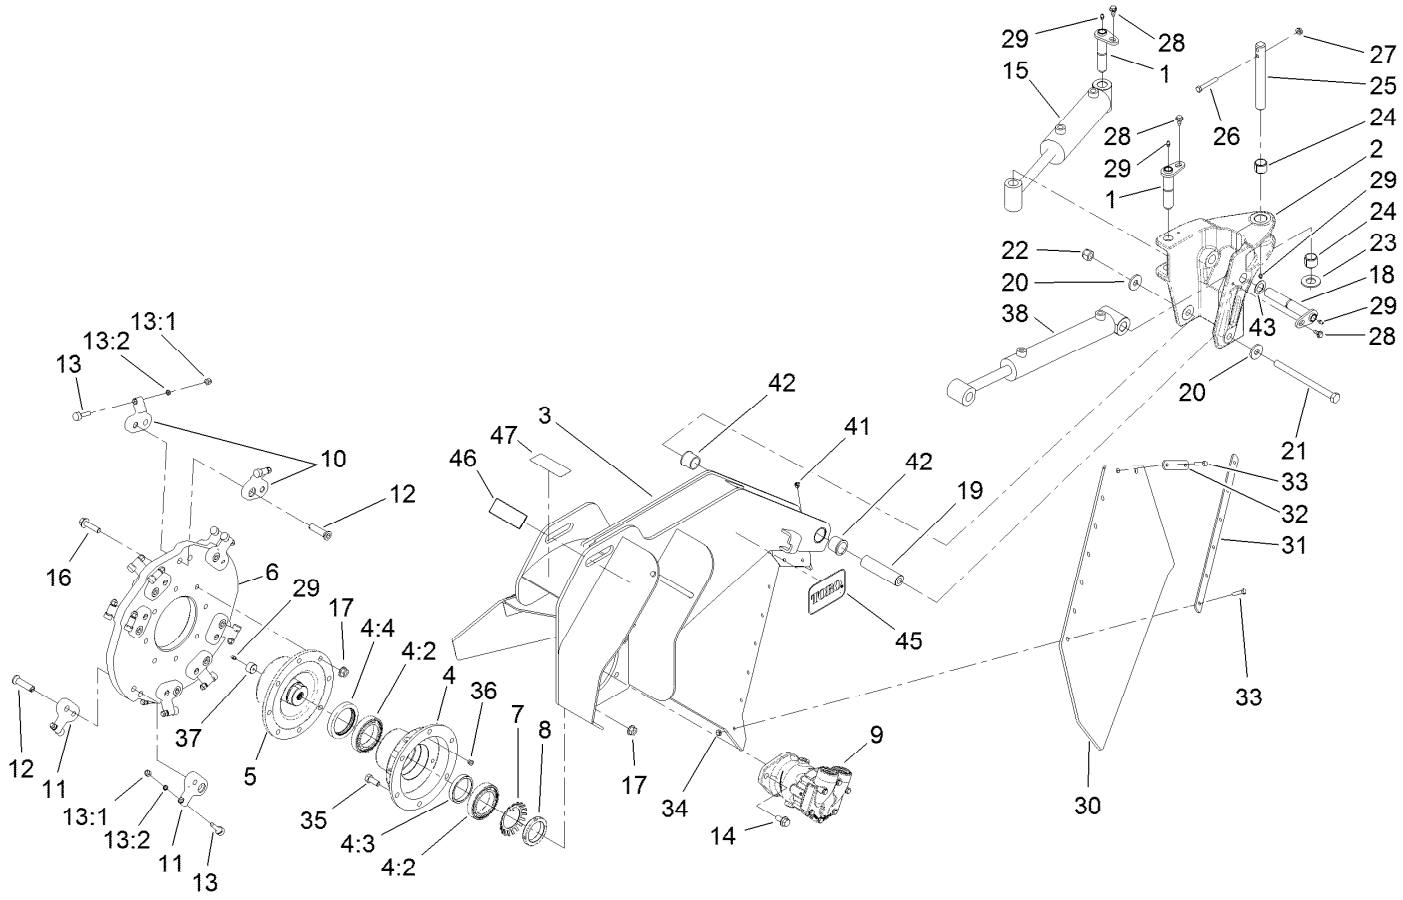

Cutter Head Assembly

Ref.	Part Number	Qty.	Description
1	121-1113	2	Pin-Pivot
2	121-0871-01	1	Head-Pivot
3	121-4440-01	1	Head-Grinder
3	121-4533	1	Head-Grinder
4	121-4458	1	Wheel Bearing Housing ASM
4:2	121-4378	2	Bearing-Ball
4:3	121-0872	1	Spacer-Bearing
4:4	121-4379	1	Seal-Grease
5	121-4337	1	Shaft-Cutter
6	121-1012-03	1	Plate-Wheel, Cutter
7	104-5915	1	Washer-Lock, Bearing
8	104-1973	1	Nut-Lock, Bearing
9	121-4325	1	HYD Motor ASM
10	115-9384	12	Pocket-Angled
11	115-9388	4	Pocket-Straight
12	121-4318	16	Bolt-HSH
13	115-9385	16	Grinder Tooth ASM
13:1	3296-39	1	Nut-Lock, NI
13:2	121-4365	1	Spacer-Tooth
14	3234-6	2	Screw-HHF


Ref.	Part Number	Qty.	Description
15	121-1956	1	HYD Cylinder ASM
16	3234-27	8	Screw-HHF
17	32128-49	14	Nut-HHF
18	121-0860	2	Pin-Pivot
19	121-1101	1	Spacer-Pivot
20	104-9216	2	Washer-Hardened
21	117-6327	1	Bolt-HH
22	3296-53	1	Nut-Lock, NI
23	256-121	1	Washer-Thrust
24	98-4871	2	Bushing-Tension
25	121-1112	1	Pin-Pivot, Grinder
26	323-47	1	Screw-HH
27	3290-357	1	Nut-HHF, Whiz
28	99-5105	4	Bolt-Shoulder
29	302-5	6	Fitting-Grease
30	121-4449	2	Shield-Rubber
31	121-4332-03	2	Strap-Retainer
32	121-4333-03	2	Strap-Retainer
33	322-6	16	Screw-HH
34	3296-29	16	Nut-Lock, NI
35	325-5	6	Screw-HH

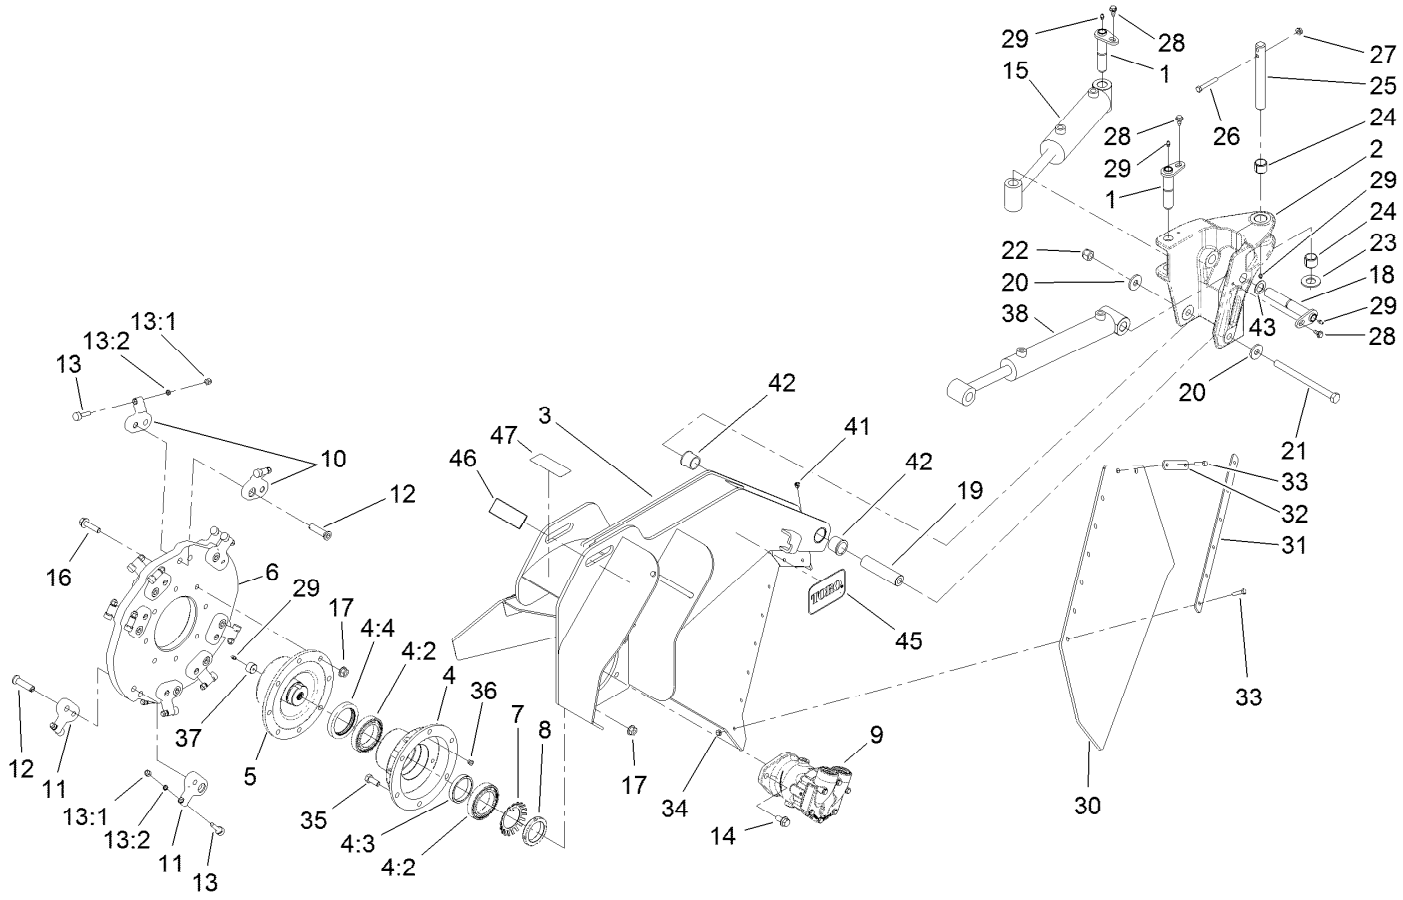

Cutter Head Assembly (continued)

Ref.	Part Number	Qty.	Description
36	302-34	1	Fitting-Lube
37	121-0875	1	Plug-Shaft, Cutter
38	121-1955	1	HYD Cylinder ASM
41	302-11	1	Fitting-Lube, 45 DEG
42	104-0015	2	Bushing-Flange


Ref.	Part Number	Qty.	Description
43	75-9180	1	Washer-Rubber
45	104-3989	2	Decal
46	93-7321	2	Decal-Danger
47	107-9366	1	Decal-Warning

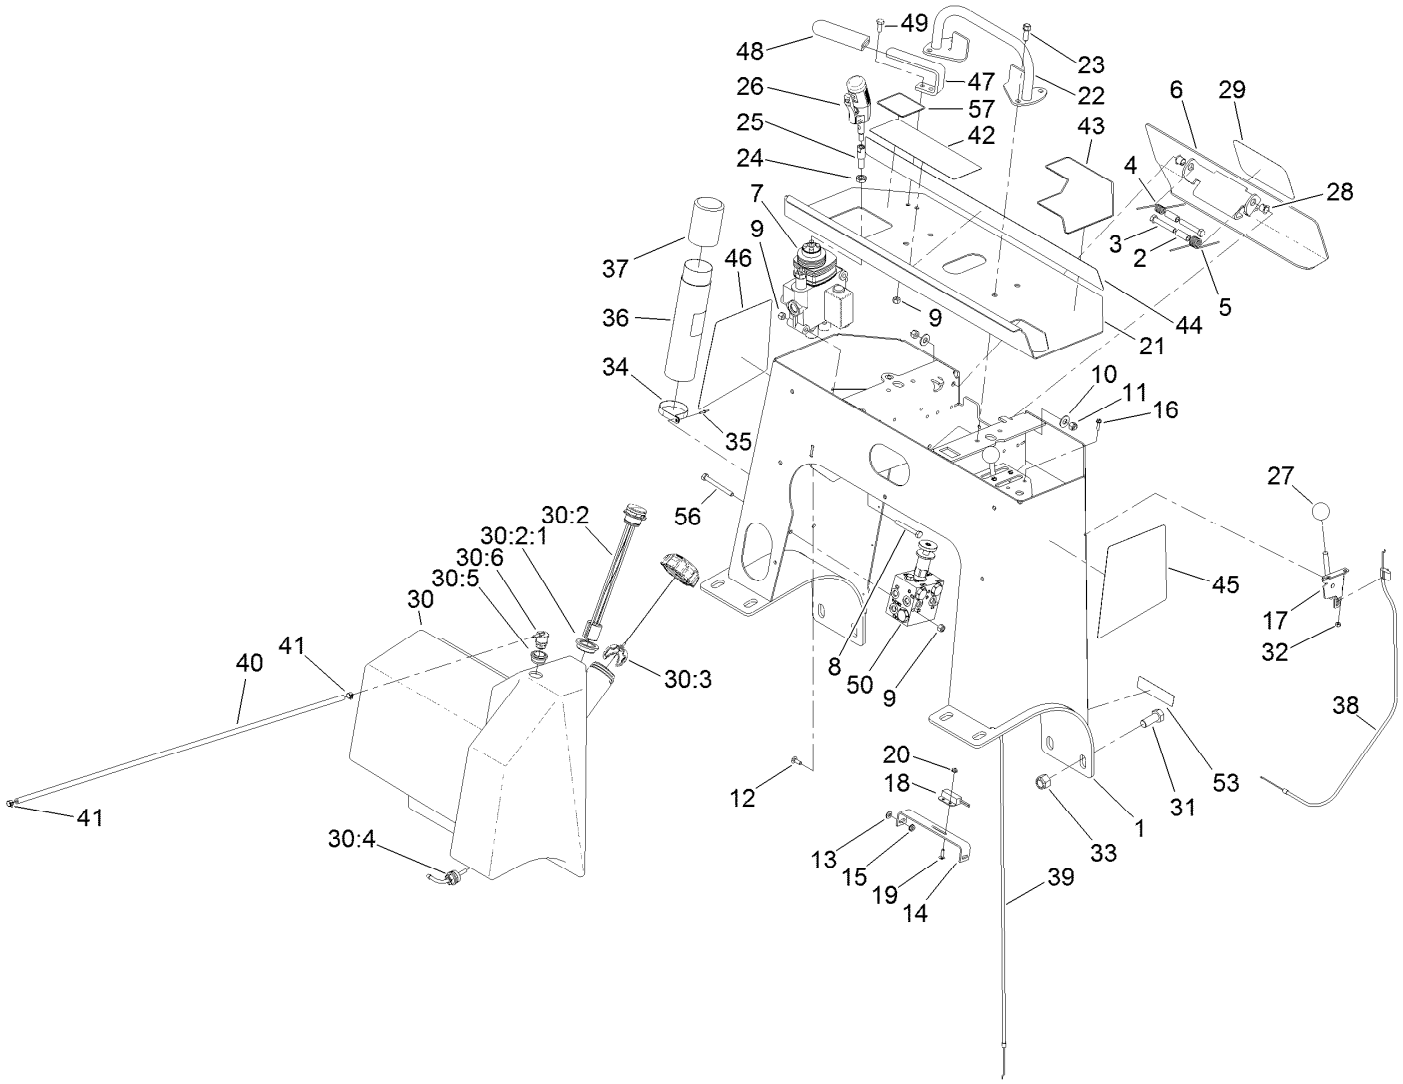

Tower Assembly

Ref.	Part Number	Qty.	Description
1	121-1150-01	1	Tower
2	114-1337	2	Spacer-Spring
3	323-11	2	Screw-HH
4	98-8425	1	Spring-Torsion, LH
5	98-8424	1	Spring-Torsion, RH
6	121-1110-03	1	Plate-Backup
7	119-4585	1	HYD Valve ASM
8	322-12	3	Screw-HH
9	3296-29	7	Nut-Lock, NI
10	3256-4	2	Washer-Flat
11	3296-39	2	Nut-Lock, NI
12	3229-1	2	Bolt-CARR
13	3256-22	2	Washer-Flat
14	100-1263	1	Plate-Switch
15	32149-2	2	Nut-Keps
16	32105-13	4	Screw-HWH
17	108-9730	2	Lever-Control
18	100-1270	1	Switch-Proximity
19	3229-20	2	Screw-CARR
20	32149-7	2	Nut-Keps
21	121-4534	1	Cover-Control


Ref.	Part Number	Qty.	Description
22	106-7715	1	Bar-Reference
23	95-1726	4	Screw-Taptite
24	51-2070	1	Nut
25	119-5103	1	Adapter-Handle
26	119-4587	1	Two Button Handle Grip ASM
27	233-42	2	Knob
28	256-257	2	Bushing-Nyliner
29	105-1217	1	Decal
30	121-4350	1	Fuel Tank ASM
30:2	117-8362	1	Guage-Fuel
30:2:1	117-8403	1	Seal
30:3	115-7788	1	Cap-Fuel
30:4	103-2605	1	Fitting-Fuel, Bulkhead
30:5	114-0284	1	Grommet
30:6	114-0285	1	Valve-Rollover
31	327-4	8	Screw-HH
32	3296-2	4	Nut-Lock, NI
33	3296-53	8	Nut-Lock, NI
34	2412-120	2	Clamp-R
35	3269-17	2	Rivet-Pop

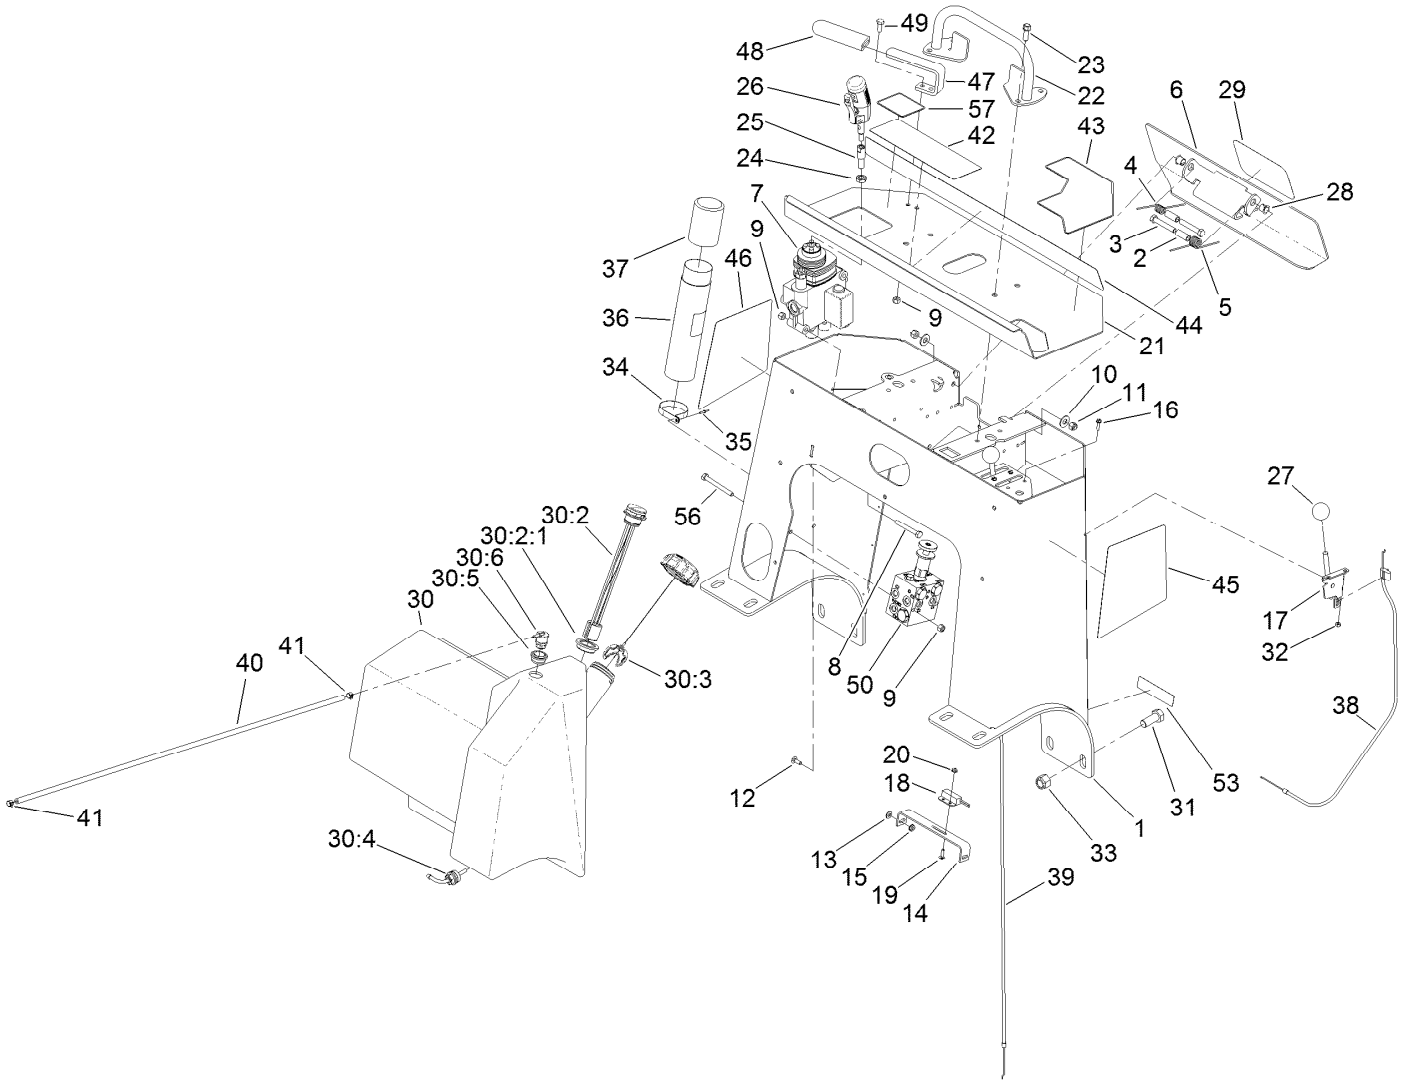

Tower Assembly (continued)

Ref.	Part Number	Qty.	Description
36	104-7050	1	Tube-Manual
37	104-7048	1	Cap-Housing
38	115-1211	1	Cable-Control
39	119-6654	1	Cable-Throttle
40	119-3517	1	Hose-Fuel
41	2412-146	2	Clamp-Hose
42	119-4606	1	Decal-Warning
43	121-4381	1	Decal-Console, LH
44	121-4382	1	Decal-Console, RH


Ref.	Part Number	Qty.	Description
45	121-4383	1	Decal-Logo, LH
46	121-4384	1	Decal-Logo, RH
47	125-3570-03	1	Bar-Arm Rest
48	1-633268	1	Grip-Lever
49	322-3	2	Screw-HH
50	121-4466	1	Sweep Manifold ASM
53	117-2718	1	Decal-Arrester, Spark
56	322-14	2	Screw-HH
57	121-4402	1	Decal-Joystick

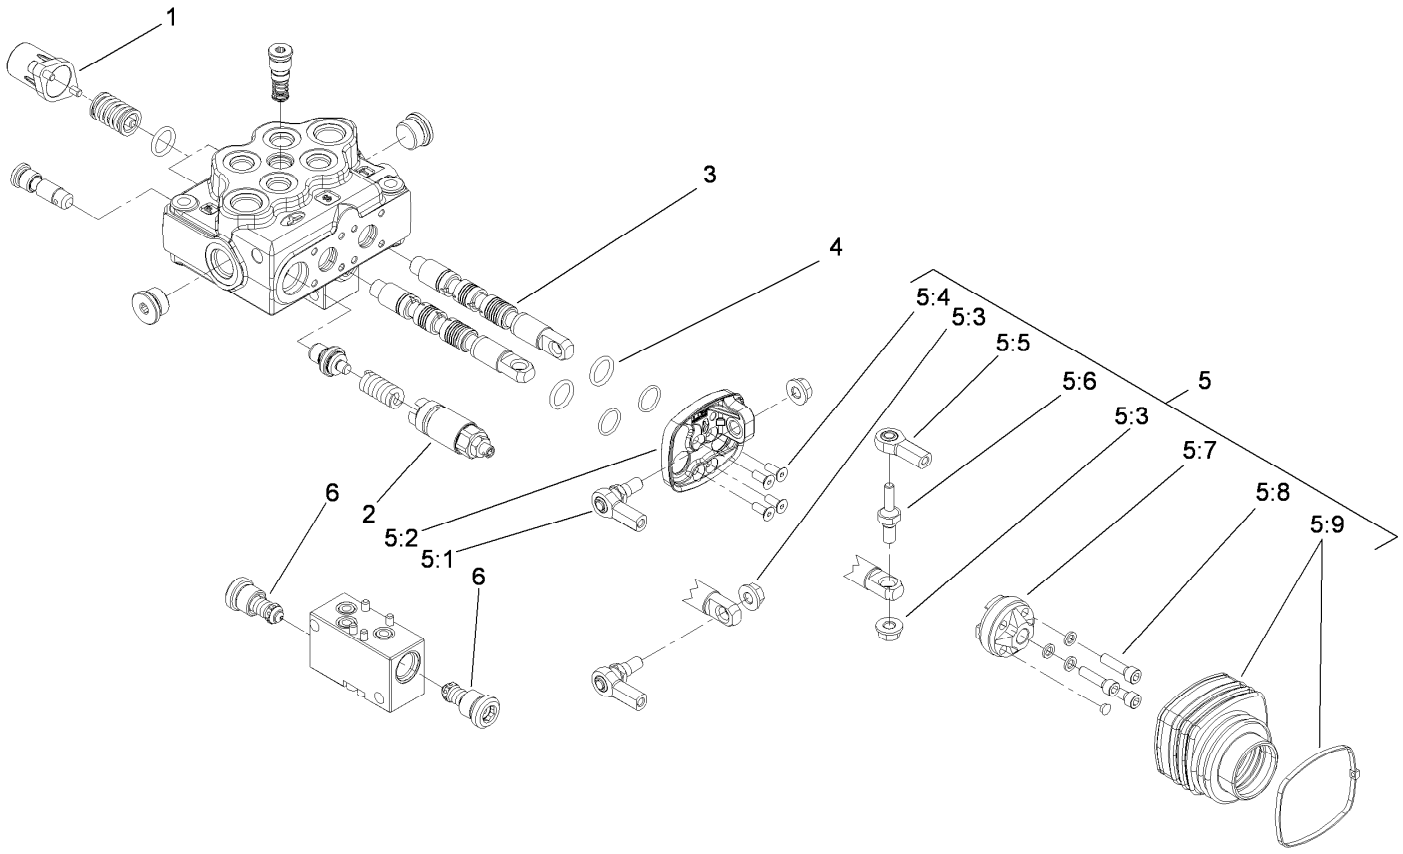

Control Valve Assembly No. 119-4585

Ref.	*Part Number*	*Qty.*	*Description*
1	100-8801	2	High Force Spring Kit
2	100-8805	1	Valve-Relief
3	114-8625	2	Valve-Spool
4	106-7719	4	Seal-Valve
5	119-4622	1	Joystick Kit
5:1	119-4623	2	Joint-Joystick
5:2	119-4624	1	Base-Joystick
5:3	117-1350	3	Nut-HF, Lock
5:4	119-4625	4	Screw-Joystick
5:5	119-4626	1	Joint-Joystick
5:6	119-4627	1	Pin-Spool
5:7	119-4628	1	Holder-Joystick
5:8	3273-42	3	Screw-HSH
5:9	119-4629	1	Boot-Joystick
6	119-4630	2	Valve Kit


Cooler Assembly

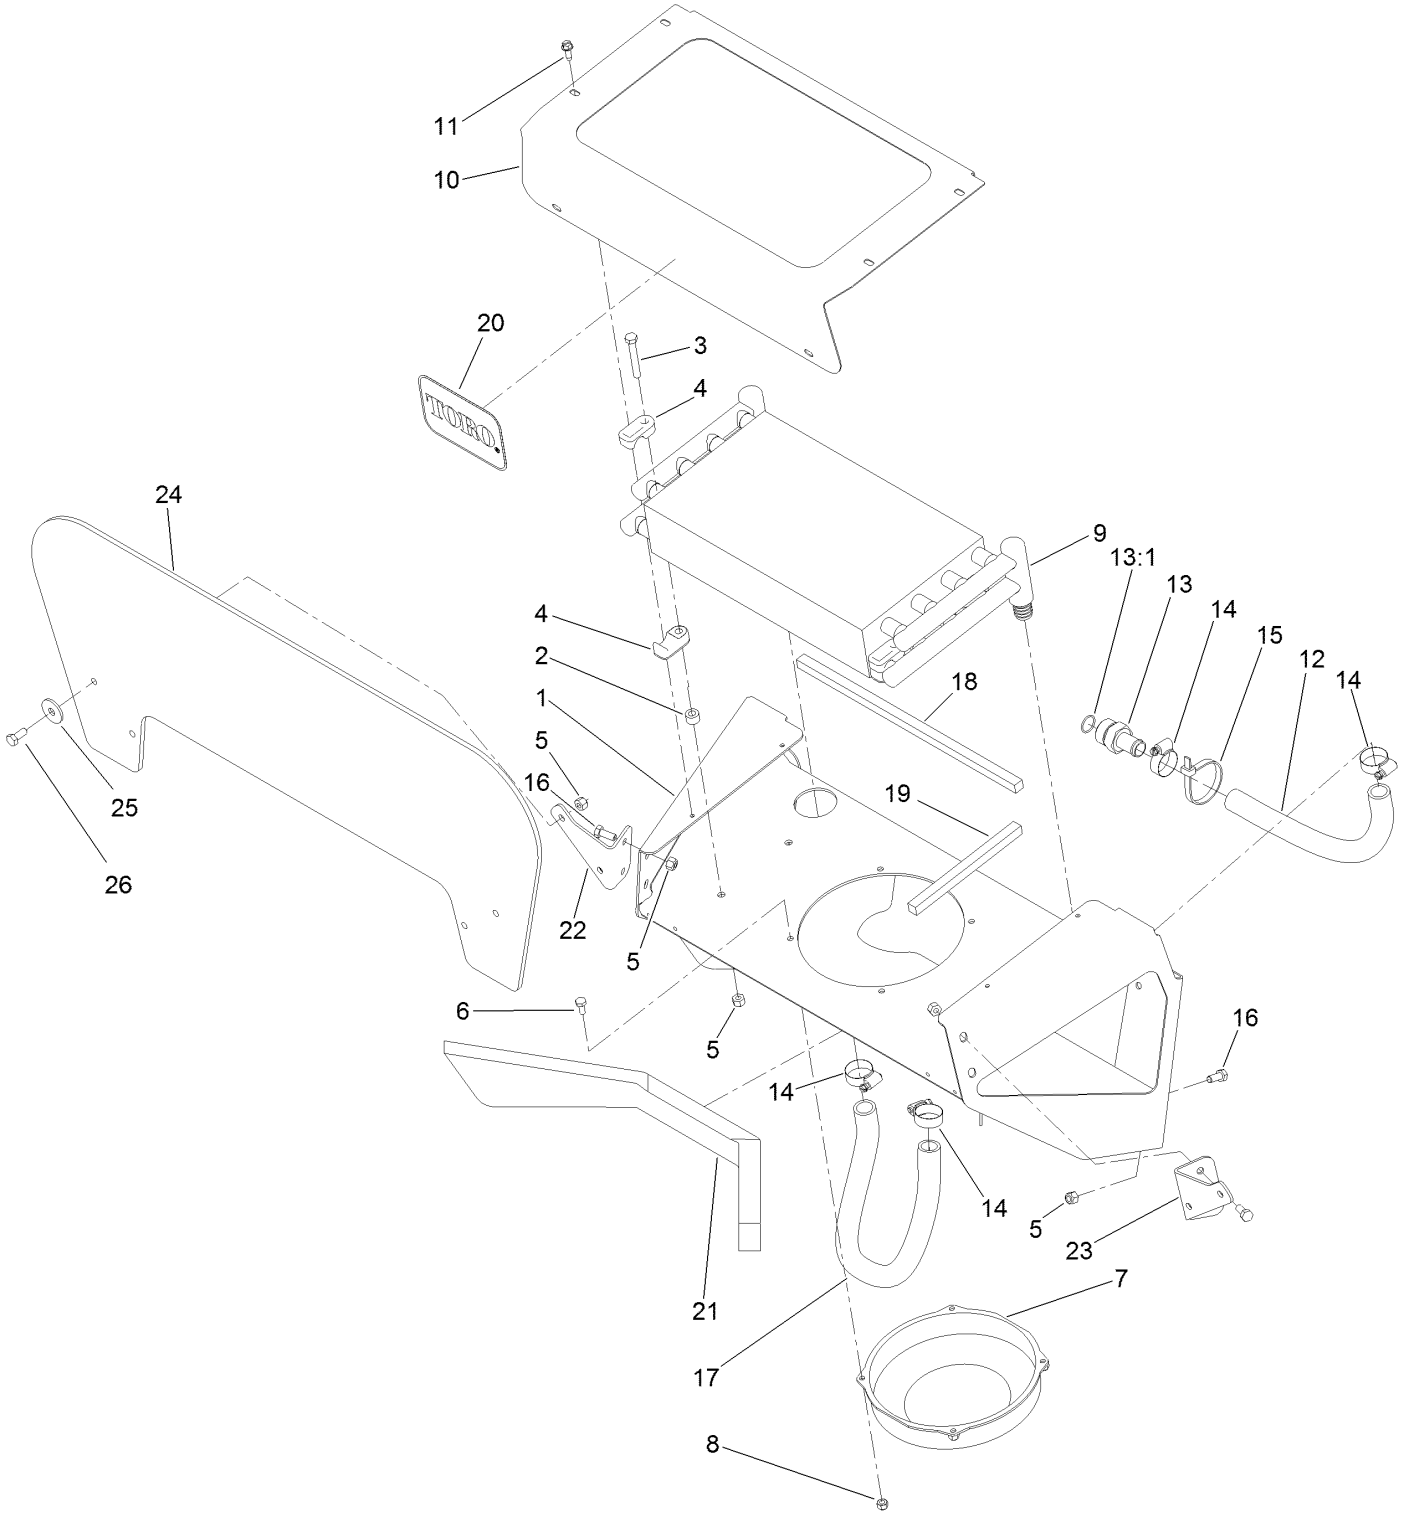

Cooler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-1180-01	1	Mount-Cooler
2	98-4695	4	Spacer
3	322-11	4	Screw-HH
4	105-3943	8	Clamp-Cooler, Oil
5	3296-29	16	Nut-Lock, NI
6	321-3	4	Screw-HH
7	120-7390	1	Fan
8	3296-42	4	Nut-Lock, NI
9	117-6320	1	Cooler-Oil
10	125-0308-01	1	Cover-Cooler
11	32104-95	6	Screw-HWH
12	121-4537	1	Hose-HYD
13	107-8652	1	Fitting-Straight
13:1	237-58	1	O-Ring
14	2412-129	4	Clamp-Hose
15	3334-945	1	Tie-Cable
16	322-3	8	Screw-HH
17	125-0266	1	Hose-Return
18	125-0319	2	Foam-Seal
19	125-0324	2	Foam-Seal
20	104-3989	1	Decal
21	125-0316	1	Foam-Seal
22	125-0350-01	1	Bracket-Shield, RH
23	125-0351-01	1	Bracket-Shield, LH
24	125-0340	1	Shield-Chip
25	63-8410	4	Washer
26	322-4	4	Screw-HH


Hydraulic Routing Assembly

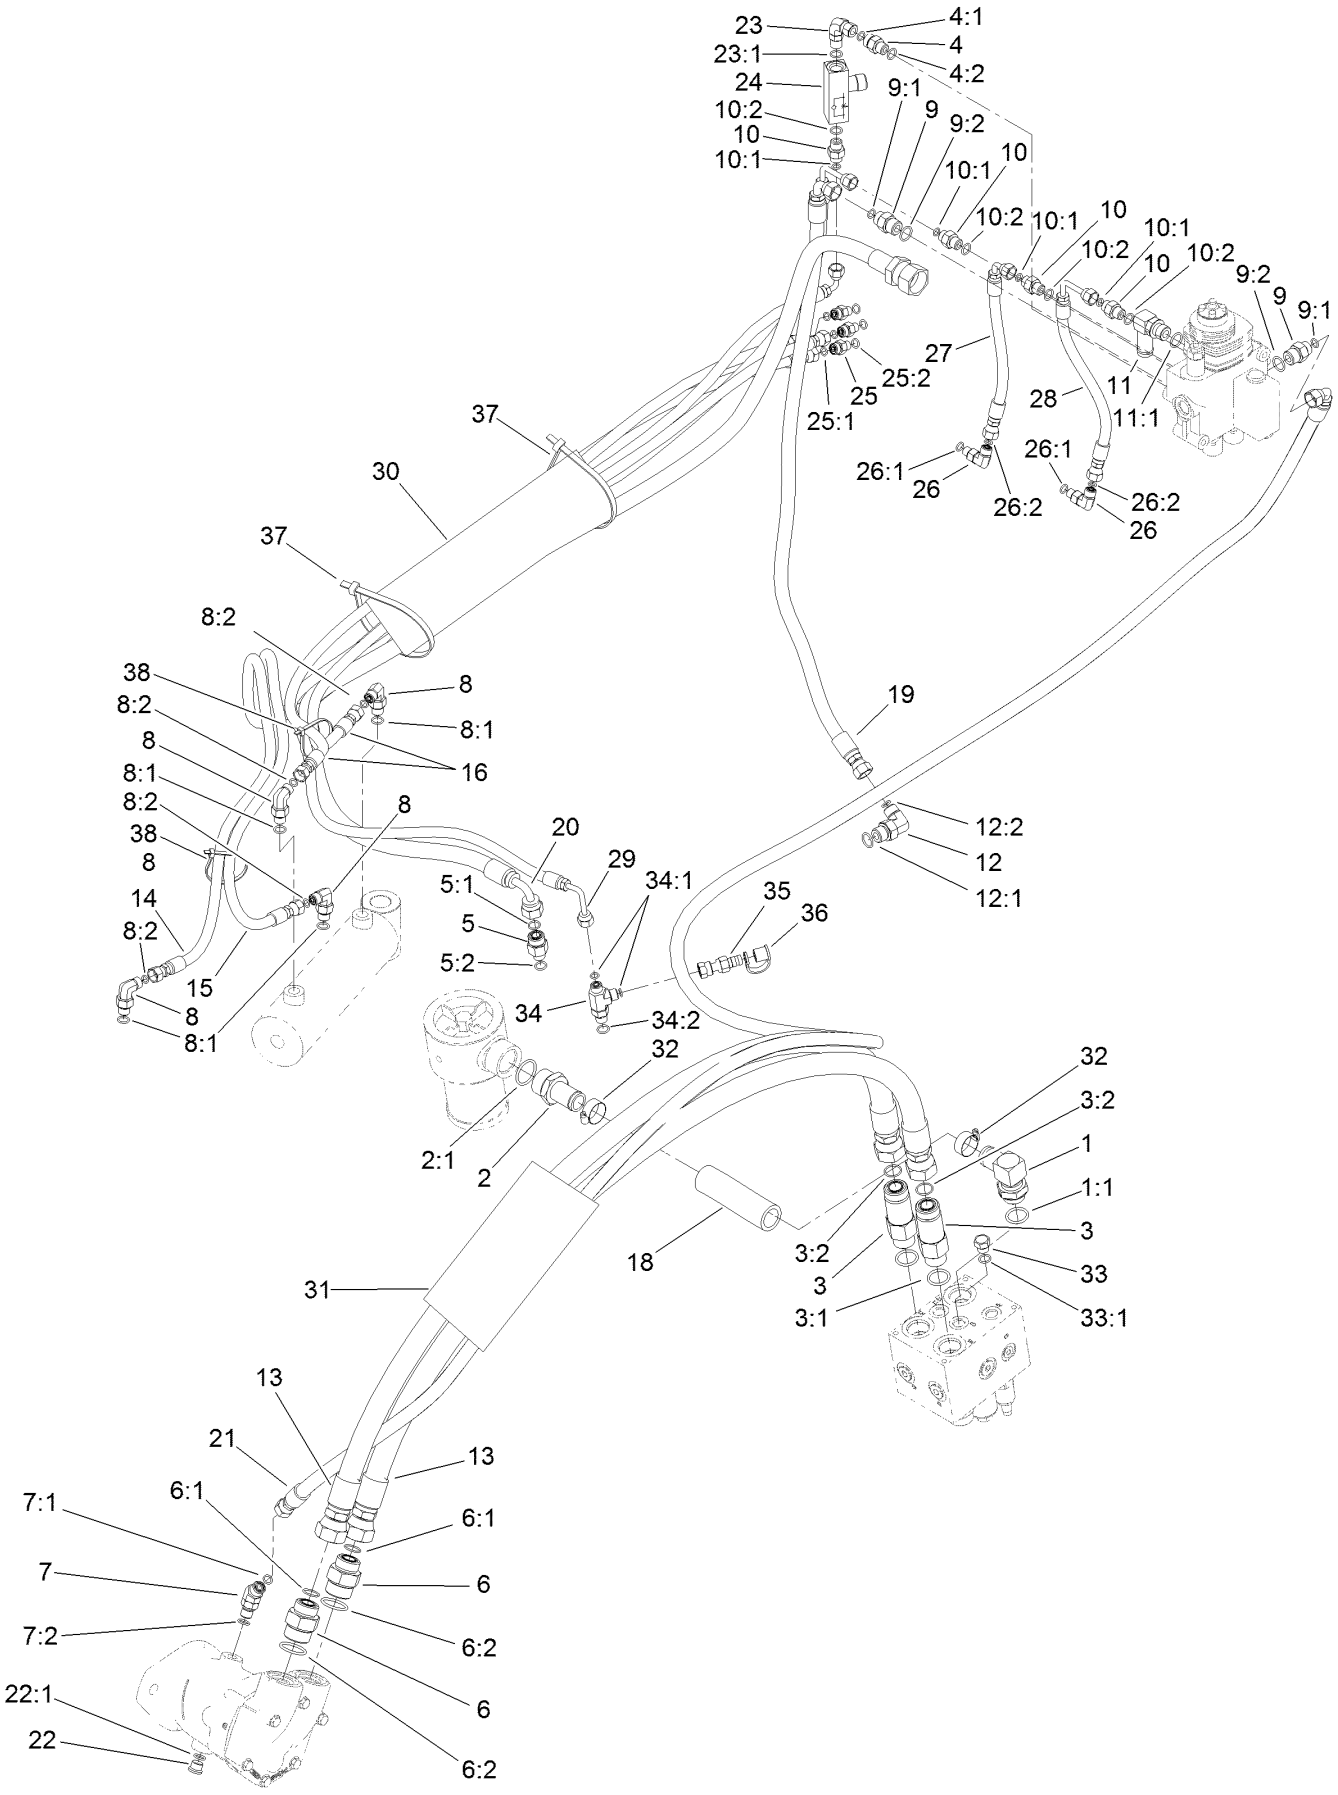

Hydraulic Routing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	100-4202	1	Fitting-HYD, 90 DEG
1:1	237-81	1	O-Ring
2	354-78	1	Connector-Hose
2:1	237-146	1	O-Ring
3	92-6058	2	Fitting-HYD
3:1	237-81	1	O-Ring
3:2	237-58	1	O-Ring
4	340-2	1	Fitting-HYD, Straight
4:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring
5	340-5	1	Fitting-Straight
5:1	237-42	1	O-Ring
5:2	237-30	1	O-Ring
6	340-91	2	Adapter
6:1	237-58	1	O-Ring
6:2	237-146	1	O-Ring
7	340-87	1	Fitting-HYD, 45 DEG
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
8	340-82	4	Adapter
8:1	237-42	1	O-Ring
8:2	237-21	1	O-Ring
9	340-3	2	Adapter
9:1	237-22	1	O-Ring
9:2	237-79	1	O-Ring
10	340-1	4	Fitting-HYD, Straight
10:1	237-21	1	O-Ring
10:2	237-42	1	O-Ring
11	353-954	1	Adapter
11:1	237-79	1	O-Ring
12	340-18	1	Fitting-HYD, 90 DEG
12:1	237-79	1	O-Ring
12:2	237-22	1	O-Ring
13	121-4342	2	Hose-HYD
14	121-4345	1	Hose-HYD
15	121-4346	1	Hose-HYD
16	121-4347	2	Hose-HYD
18	121-4341	1	Hose-Return
19	121-1199	1	Hose-HYD
20	121-4344	1	Hose-HYD
21	121-4343	1	Hose-HYD
22	353-989	1	Plug-Hex, Hollow
22:1	237-42	1	O-Ring
23	340-110	1	Fitting-Swivel, 90 DEG
23:1	237-42	1	O-Ring
24	98-9742	1	Valve-Control, Flow
25	340-92	3	Fitting-HYD, Straight
25:1	237-78	1	O-Ring
25:2	237-21	1	O-Ring
26	340-132	2	Fitting-HYD, 90 DEG
26:1	237-78	1	O-Ring
26:2	237-21	1	O-Ring
27	121-4455	1	Hose-HYD
28	121-4456	1	Hose-HYD
29	119-4601	1	Hose-HYD
30	121-4454	1	Sleeve-Protective
31	99-5648	1	Sleeve-Protective
32	2412-34	2	Clamp-Hose
33	353-508	1	Plug-HH
33:1	237-42	1	O-Ring
34	108-5688	1	Fitting-Tee
34:1	237-21	2	O-Ring
34:2	237-42	1	O-Ring
35	115-8886	1	Nipple-Test
36	354-79	1	Cap-Dust
37	3334-945	2	Tie-Cable
38	3290-379	2	Tie-Cable


Electrical Assembly

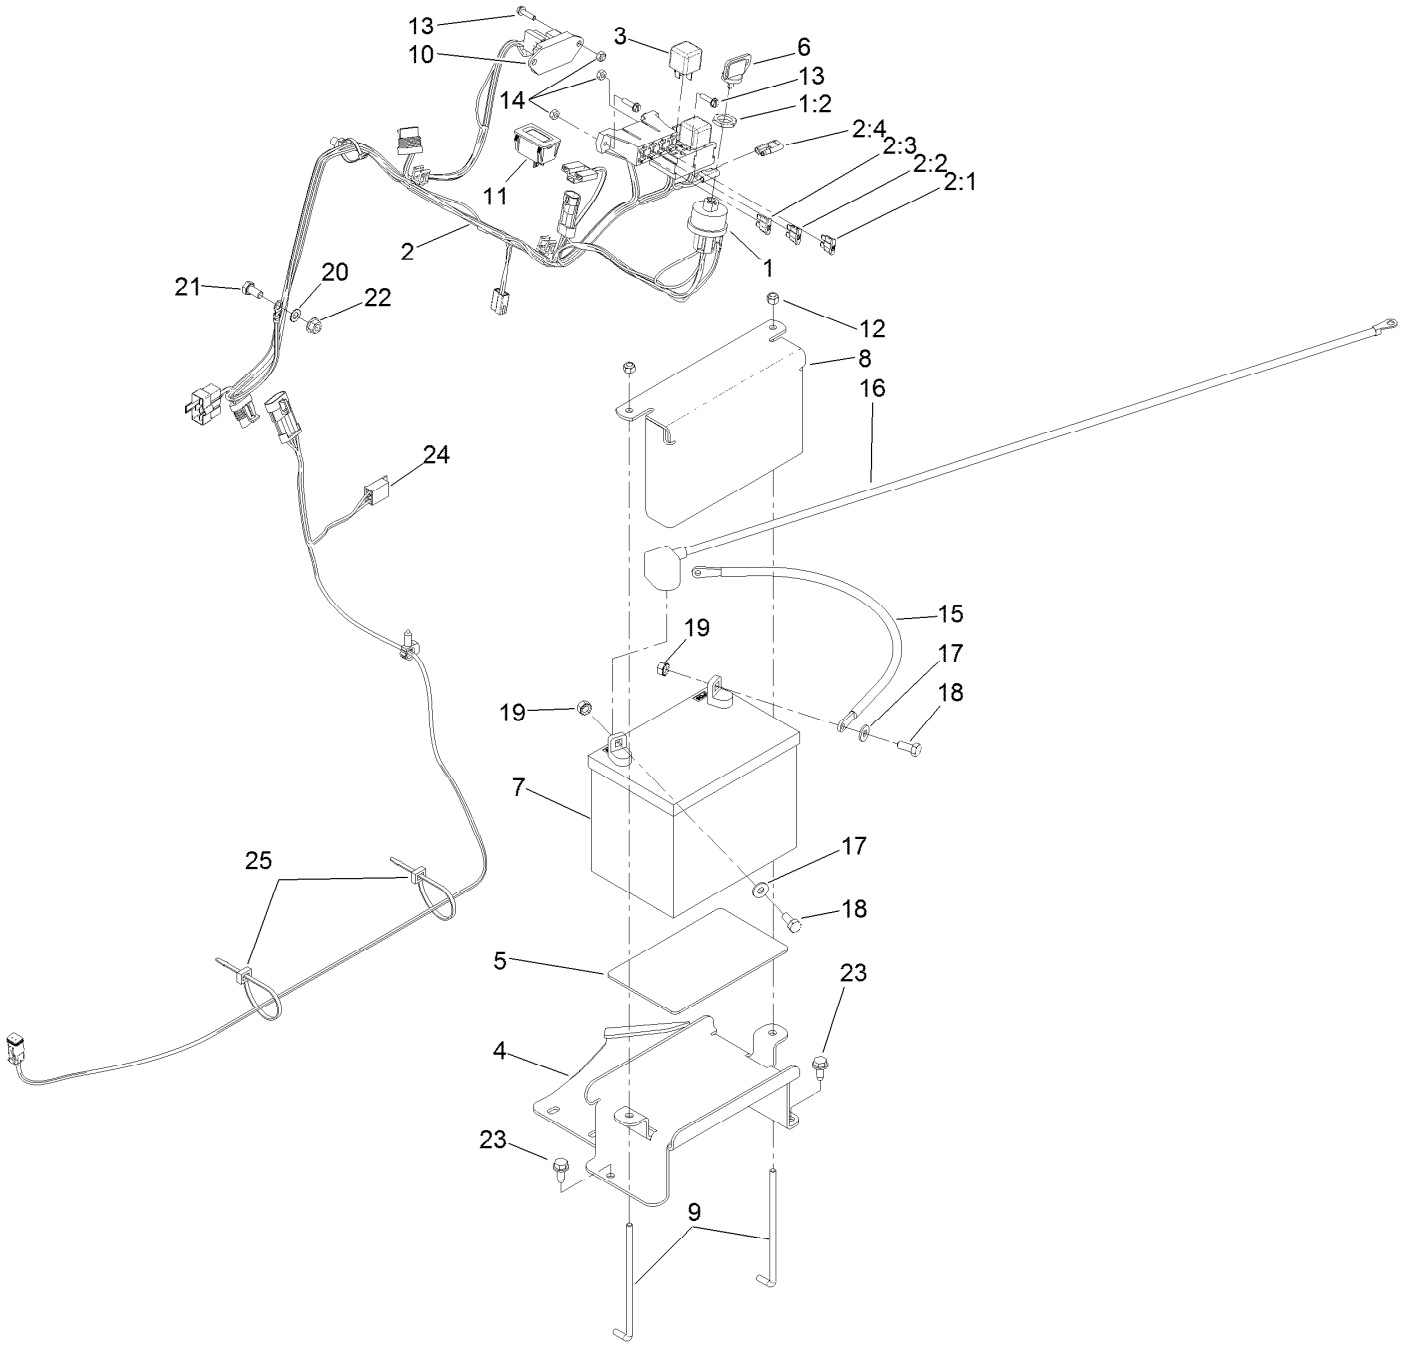

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	88-9830	1	Key Switch ASM
1:1	3254-5	1	Washer-Tooth, Internal (Not Used In This Application) ●
1:2	218-461	1	Nut-HH
2	121-4315	1	Harness-Wire
2:1	109103	1	Fuse-Blade, 30 Amp
2:2	109102	1	Fuse-Blade, 25 Amp
2:3	109101	1	Fuse-Blade, 20 Amp
2:4	116-0053	1	Cap-Plug
3	98-7249	2	Relay
4	125-0322-01	1	Tray-Battery
5	62-4300	1	Pad-Skid, Anti
6	63-8360	1	Key-Ignition (W/Shield)
7	104-4657	1	Battery
8	115-6621-03	1	Plate-Hold Down, Battery
9	104-8567	2	Holdown-Battery
10	100-6170	1	Module-Delay
11	120-2244	1	Hourmeter
12	3296-42	2	Nut-Lock, NI
13	32105-13	5	Screw-HWH
14	3296-2	5	Nut-Lock, NI
15	106-8945	1	Cable-Battery, Positive
16	121-4437	1	Cable-Battery, Negative
17	3256-2	2	Washer-Flat
18	322-3	2	Screw-HH
19	32149-1	2	Nut-Keps
20	3255-8	1	Washer-Lock
21	33114-016	1	Screw-HH
22	33004-00	1	Nut-HF
23	32144-70	2	Screw-HWHTF
24	121-4319	1	Harness-Wire
25	3290-378	2	Tie-Cable

● Not illustrated

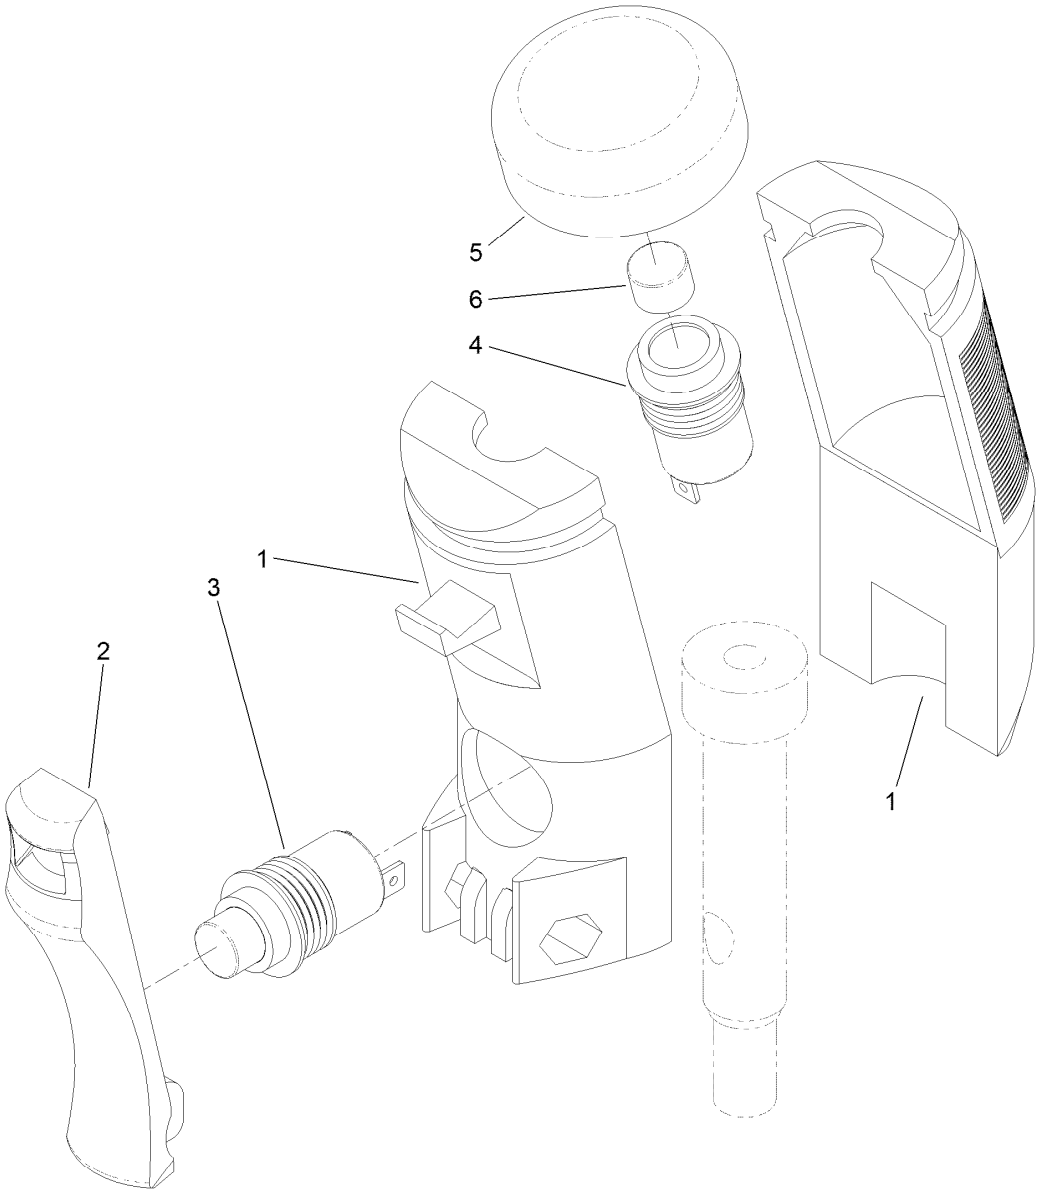

Two-Button Handle Grip Assembly No. 119-4587

Ref.	*Part Number*	*Qty.*	*Description*
1	119-4637	1	Halve-Handle
2	119-4638	1	Lever-Handle
3	119-4639	1	Button-Push, Lever
4	119-4640	1	Button-Push, Top
5	119-4641	1	Boot-Button
6	119-4642	1	Button-Actuator

Notes:

Notes:

Notes:



Count on it.