Form No. 3377-613 Rev A

TORO®

Count on it.

Parts Catalog

CM-958H-PED

Concrete Mixer

Model No. 68008C—Serial No. 313000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3377-613 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Main Frame Assembly 4
Axle Assembly 6
Hub Assembly No. 125-8171 8
Engine and Belt Assembly 10
Drum Assembly 12
Drum Assembly No. ST47332 14
Cowl Assembly 16
Trailer Light Assembly 18

© 2015—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Main Frame Assembly

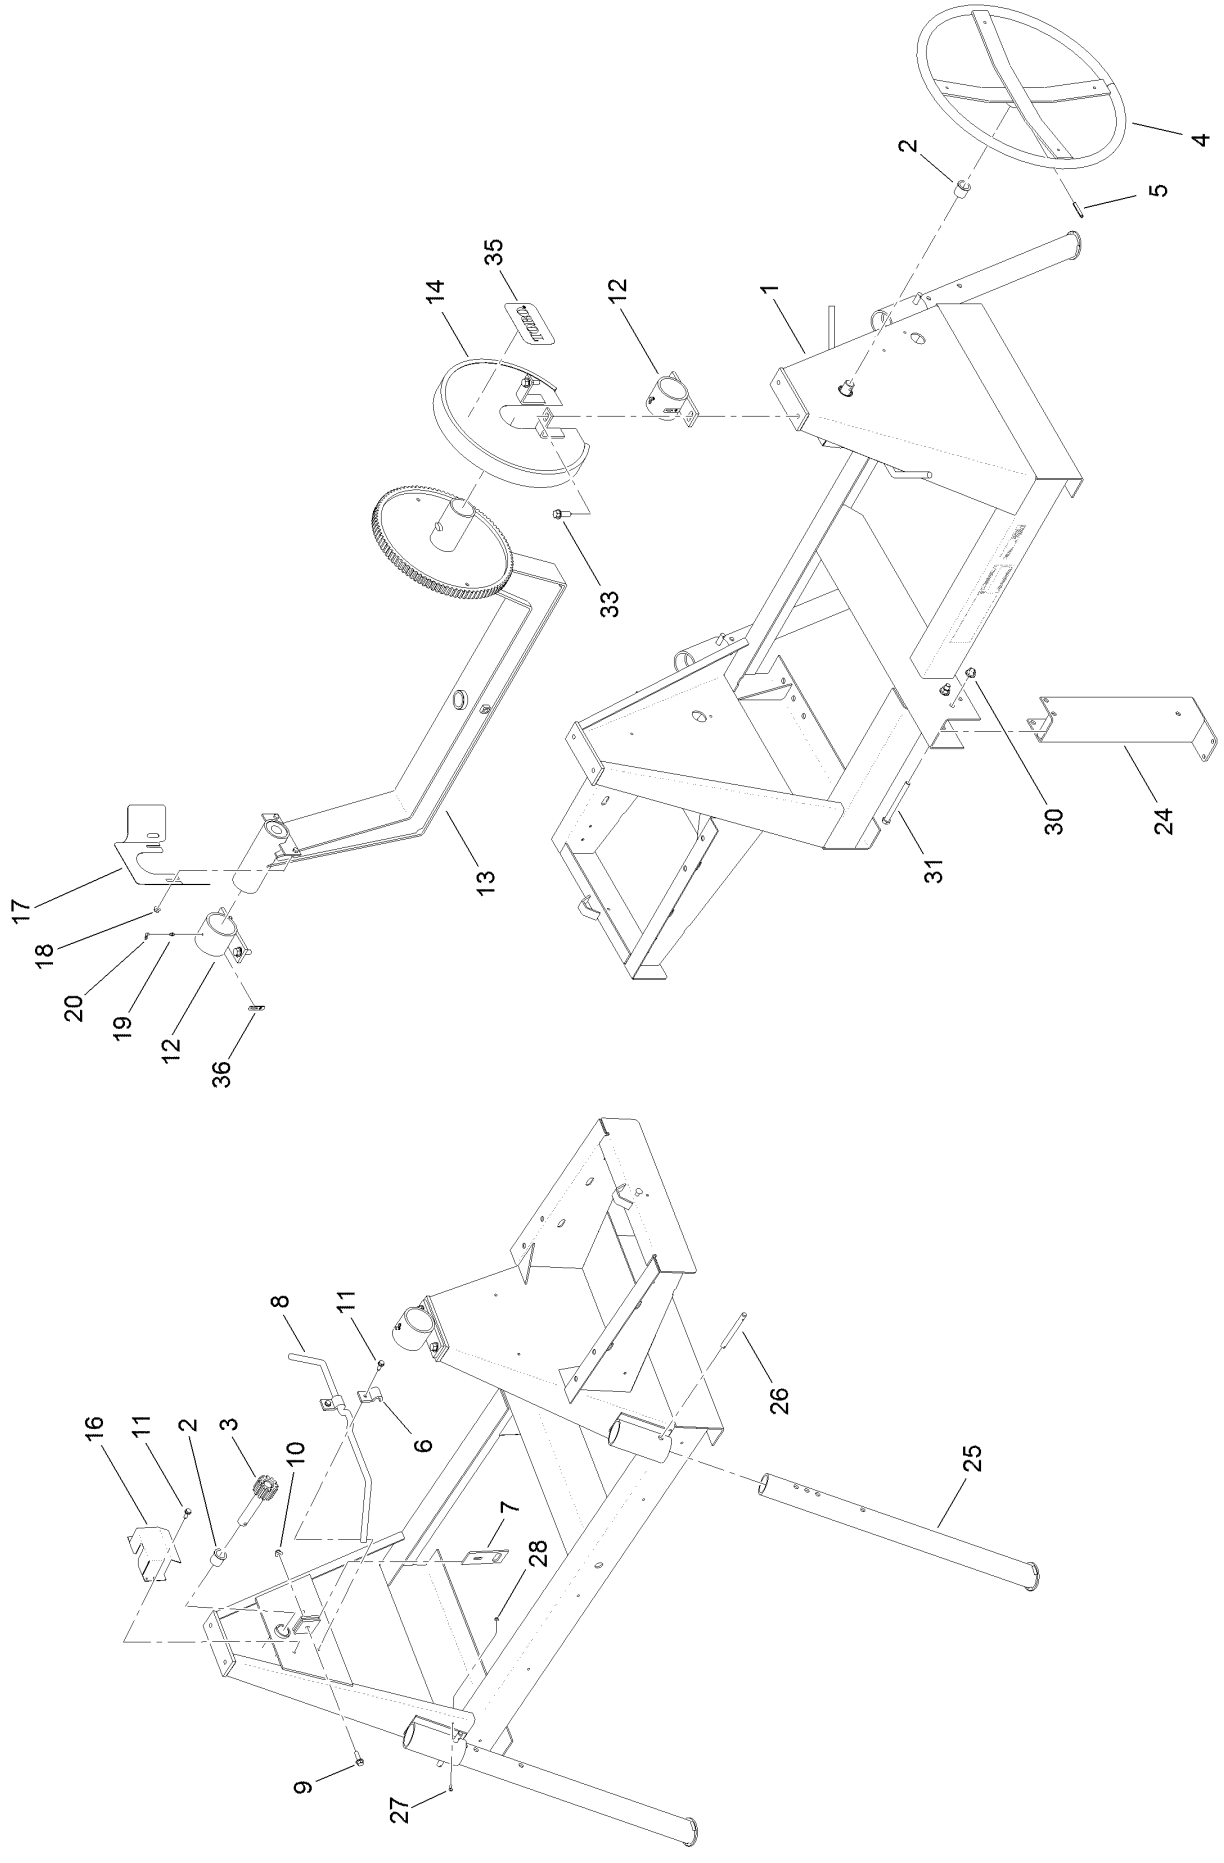

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-8685-03	1	Frame
2	ST32032	2	Bushing-Nylon
3	ST22029	1	Shaft-Tilt
4	ST22096-03	1	Handwheel
5	32121-27	1	Pin-Roll
6	ST27559-03	2	Bracket-Handle
7	ST27619-03	1	Dog-Brake
8	127-5593	1	Handle-Brake
9	3234-24	1	Screw-HHF
10	104-8301	1	Nut-Flange, NI
11	701243	4	Screw-HWHTF
12	ST24349-03	2	Trunnion
13	125-6308	1	Yoke ASM
14	ST27617-03	1	Guard-Brake, Upper
16	ST27618-03	1	Guard-Brake, Lower
17	130-2208-03	1	Guard-Pinion
18	104-8300	1	Nut-Flange, NI
19	ST46042	2	Fitting-Grease
20	ST47001	2	Cap-Plug
24	ST21875-03	1	Post-Foot
25	ST21874-03	2	Leg-Stabilizer
26	ST80039	2	Pin-Clevis, Lanyard
27	3290-500	2	Screw-PPH
28	3296-2	2	Nut-Lock, NI
30	99-5107	2	Nut-Lock
31	325-22	2	Screw-HH
33	ST80031	4	Screw-HWH
35	99-4693	1	Decal
36	125-8175	2	Decal-Grease


Axle Assembly

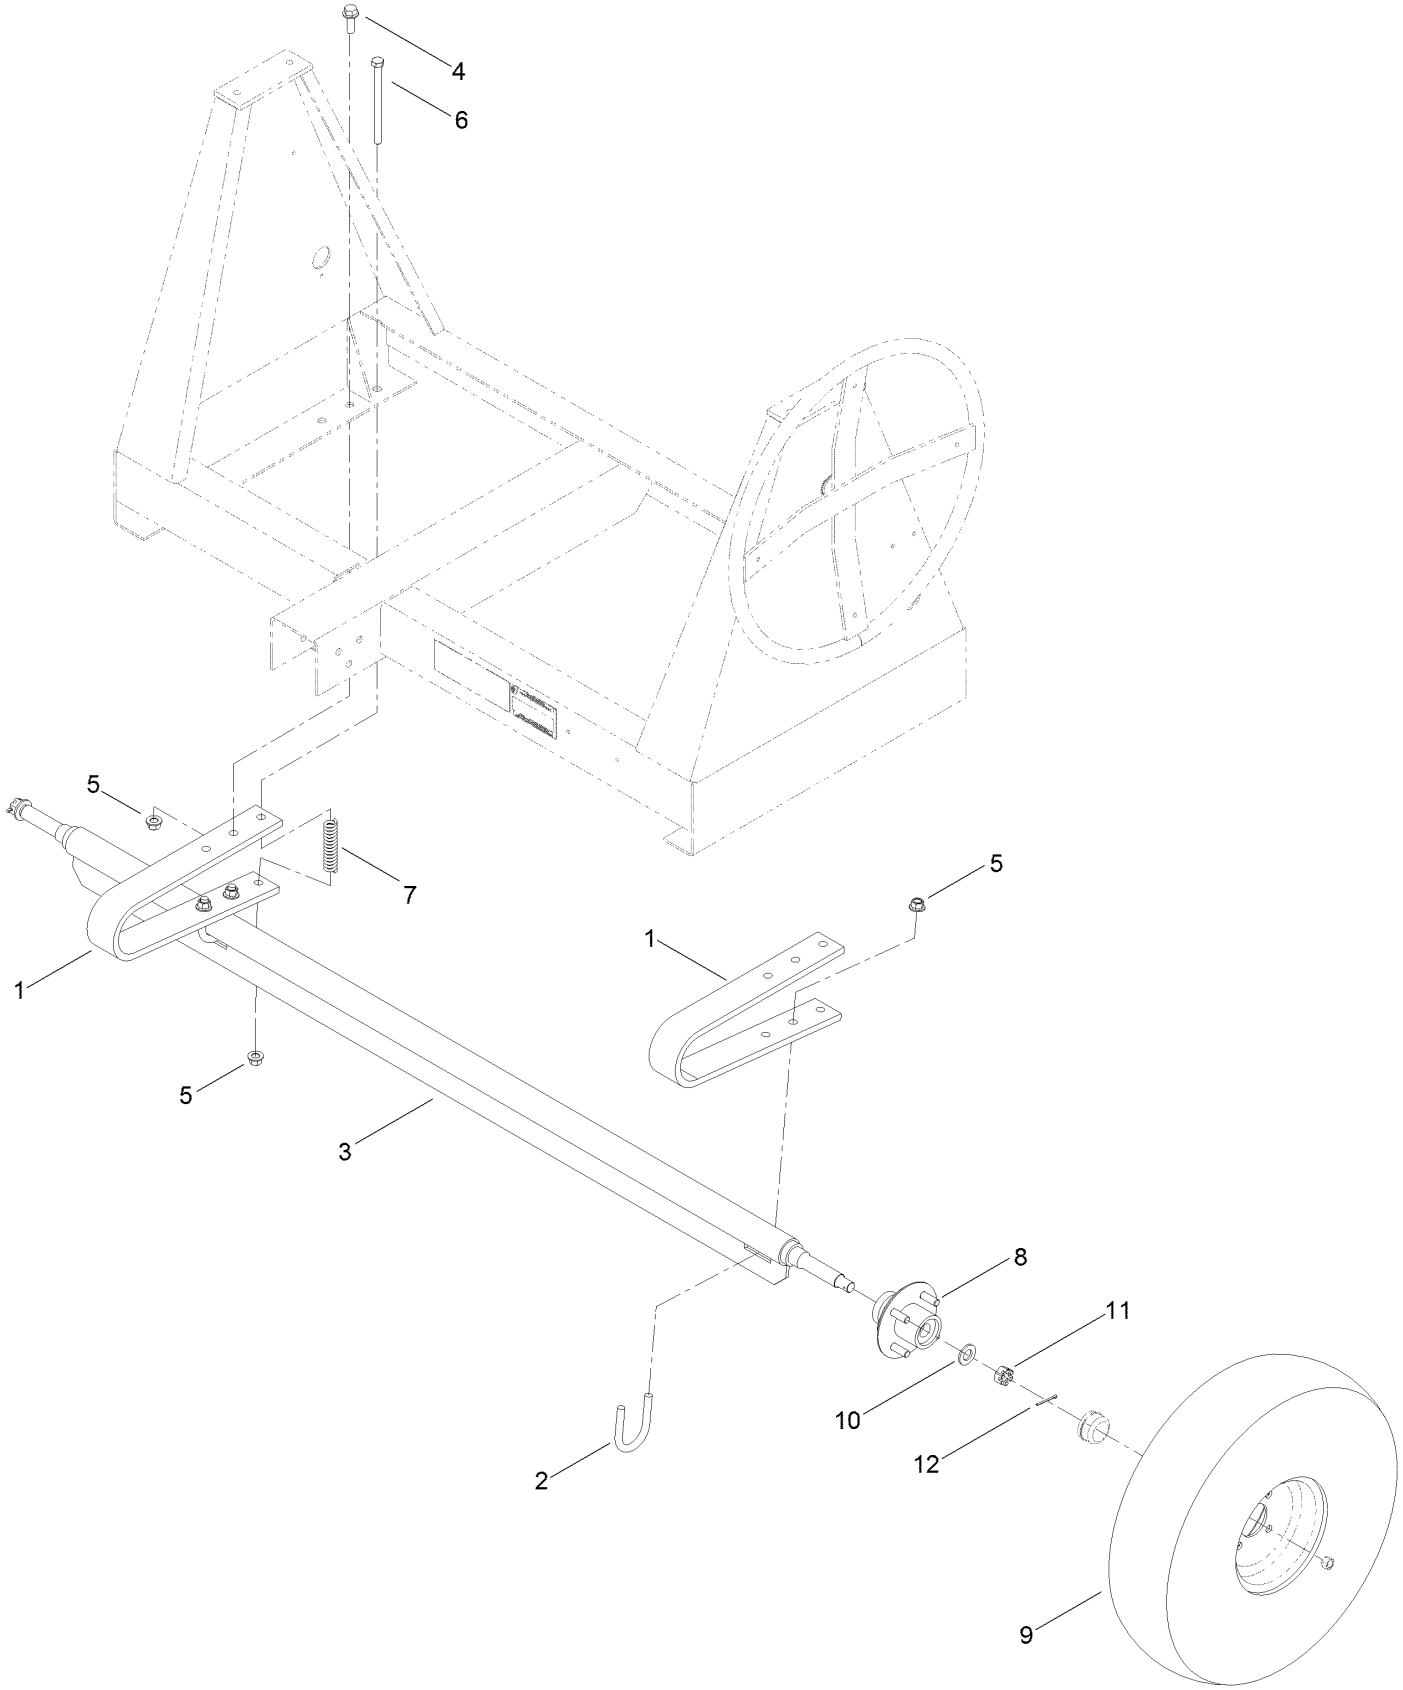

Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	ST26971	2	Spring-Leaf
2	ST26195	2	Bolt-U
3	ST21873-03	1	Axle-Spring
4	100-6116	4	Screw-HHF
5	99-5107	10	Nut-Lock
6	325-33	2	Screw-HH
7	ST34972	2	Spring-Coil
8	125-8171	2	Hub ASM
9	ST32307	2	Tire And Rim ASM
10	3256-28	2	Washer-Flat
11	ST80054	2	Nut
12	3272-13	2	Pin-Cotter


Hub Assembly No. 125-8171

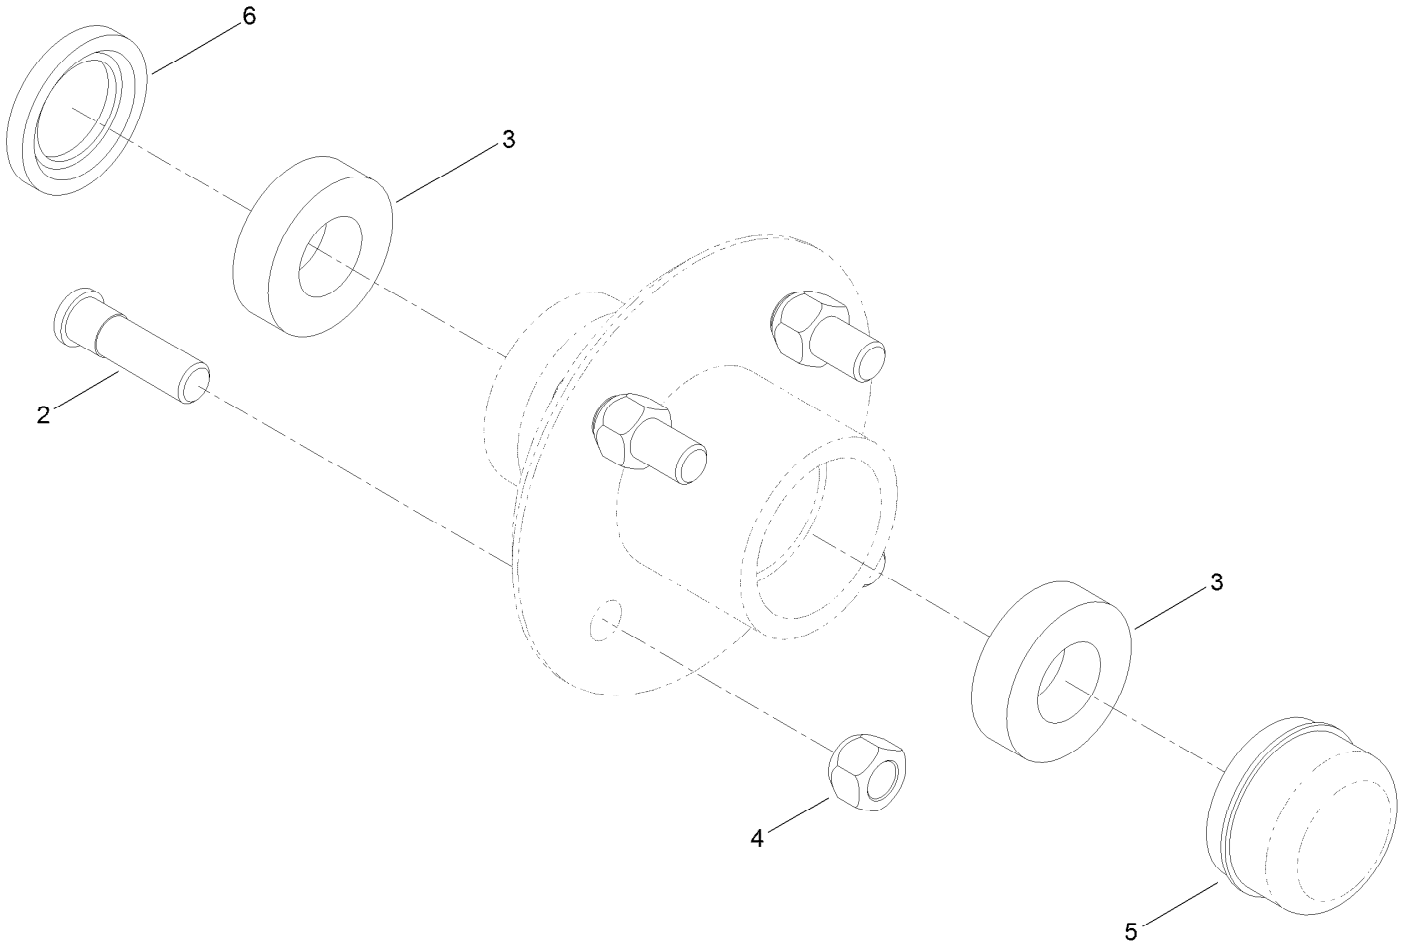

Hub Assembly No. 125-8171 (continued)

Ref.	Part Number	Qty.	Description
2	ST39190	4	Stud-Wheel
3	ST32233	2	Bearing-Roller
4	ST80045	4	Nut-Lug
5	ST34573	1	Cap-Dust
6	ST32052	1	Seal-Hub, Wheel

Engine and Belt Assembly

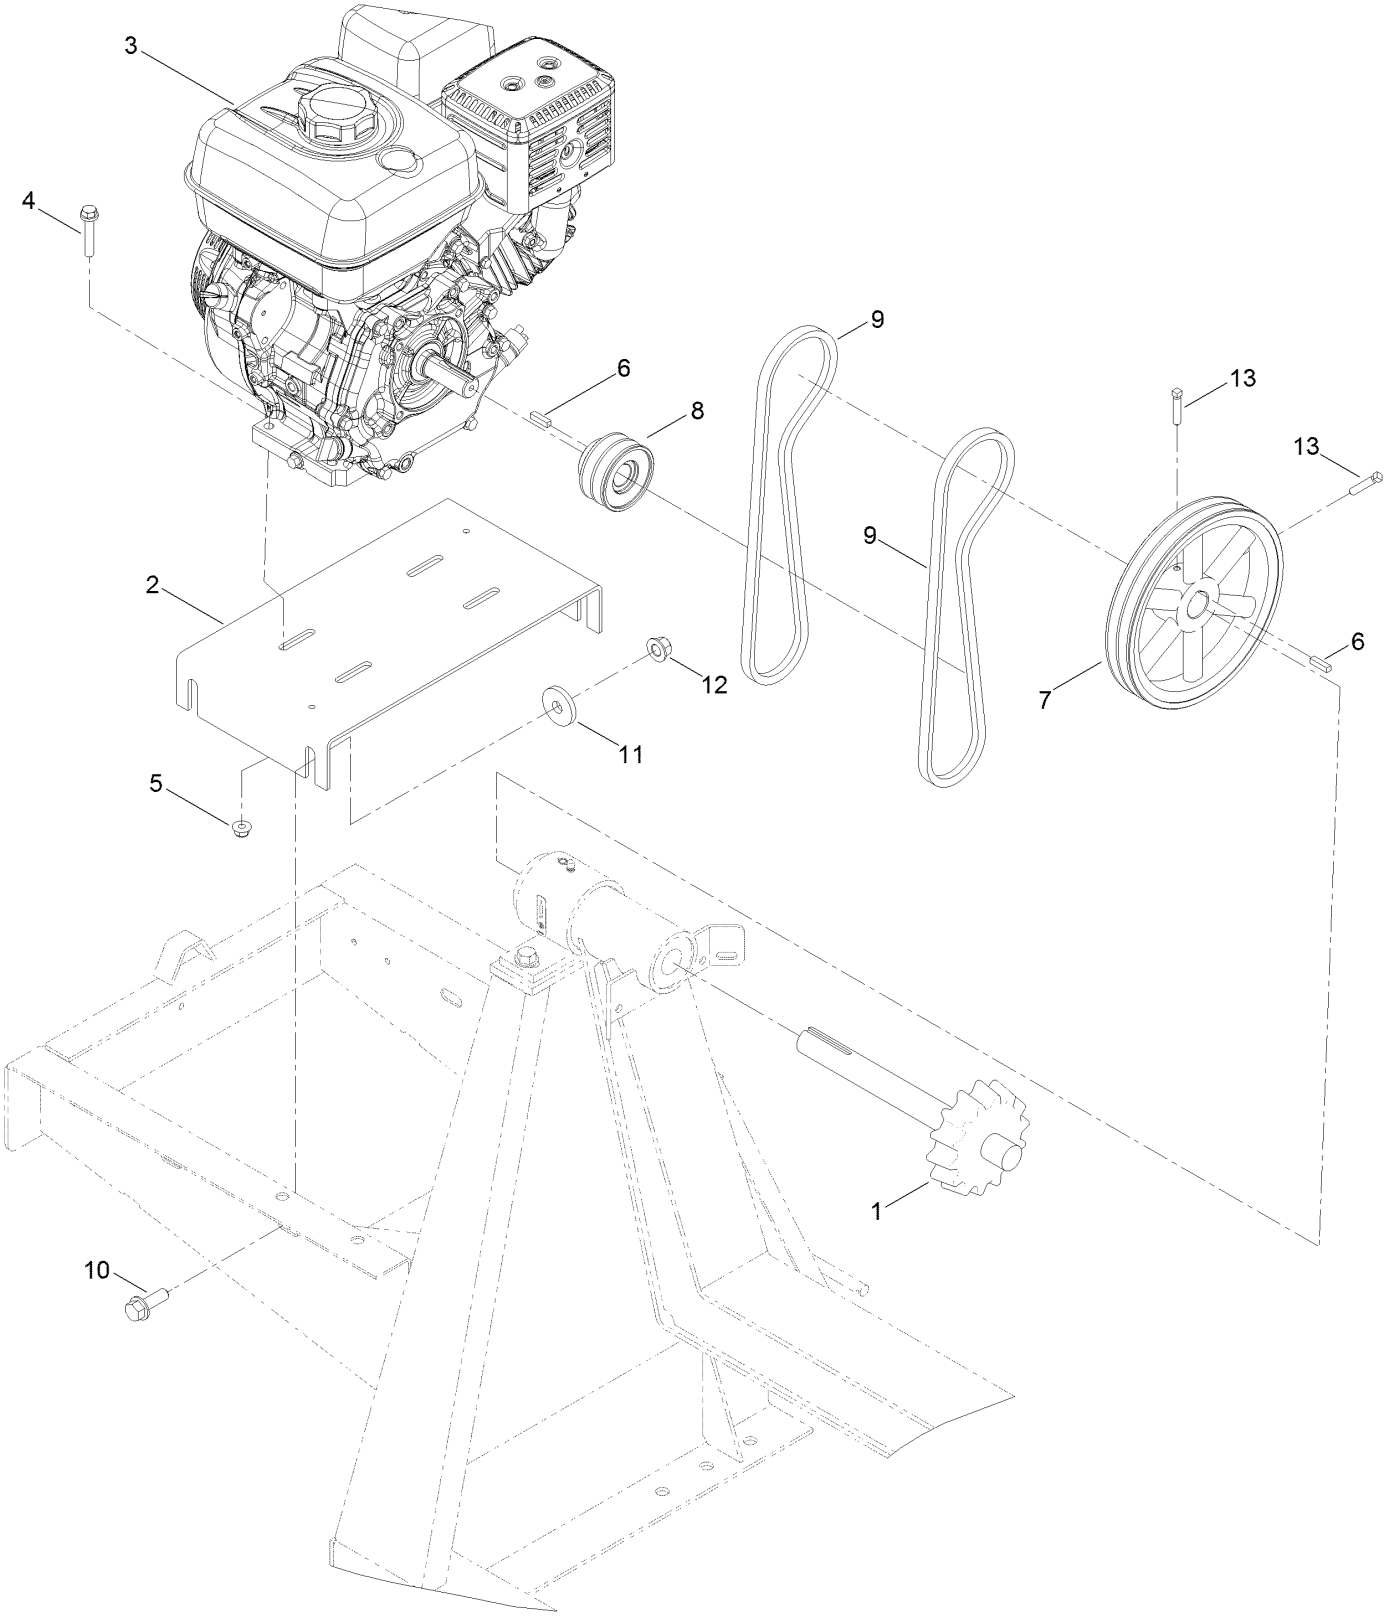


Engine and Belt Assembly (continued)

Ref.	Part Number	Qty.	Description
1	ST21487	1	Shaft-Drive
2	127-7579-03	1	Base-Engine, 95Cm
3	125-4812	1	Engine-Honda, Gx240 ●
4	108-3742	4	Screw-HHF
5	104-8301	4	Nut-Flange, NI
6	5-7280	2	Key
7	ST34986-03	1	Sheave
8	ST34984	1	Sheave
9	127-0075	2	Belt-V
10	100-6116	4	Screw-HHF
11	ST26326	4	Washer-Flat
12	99-5107	4	Nut-Lock
13	909546	2	Screw-Set

● Obtain parts from www.honda-engines.com


Drum Assembly

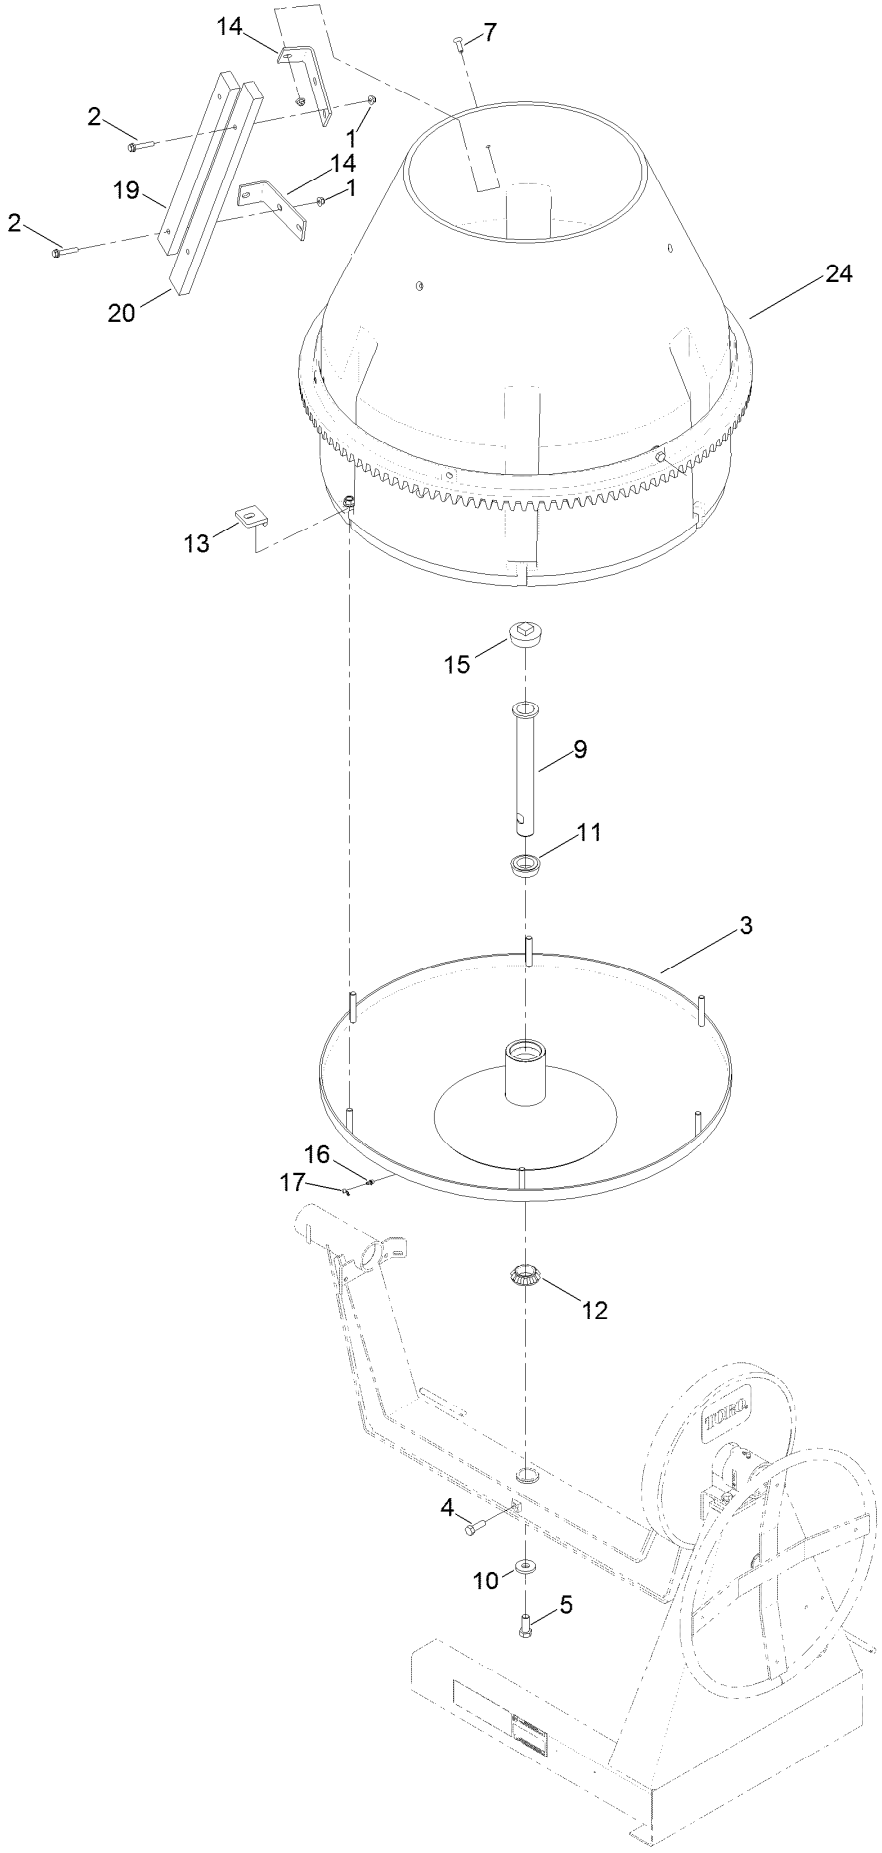

Drum Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	18	Nut-Flange, NI
2	108-3742	12	Screw-HHF
3	125-8170-01	1	Dish
4	325-6	1	Screw-HH
5	327-4	1	Screw-HH
7	99-8051	6	Screw-HSFH
9	ST27267	1	Spindle
10	ST27413	1	Washer-Flat
11	ST32086	1	Bearing
12	ST32161	1	Bearing-Roller
13	ST42781-01	6	Clamp-Drum
14	ST42810-01	6	Bracket-Paddle
15	ST46022	1	Plug
16	ST46057	1	Fitting
17	ST47001	1	Cap-Plug
19	ST47341	3	Paddle
20	ST47342	3	Paddle
24	ST47332	1	Drum ASM


Drum Assembly No. ST47332

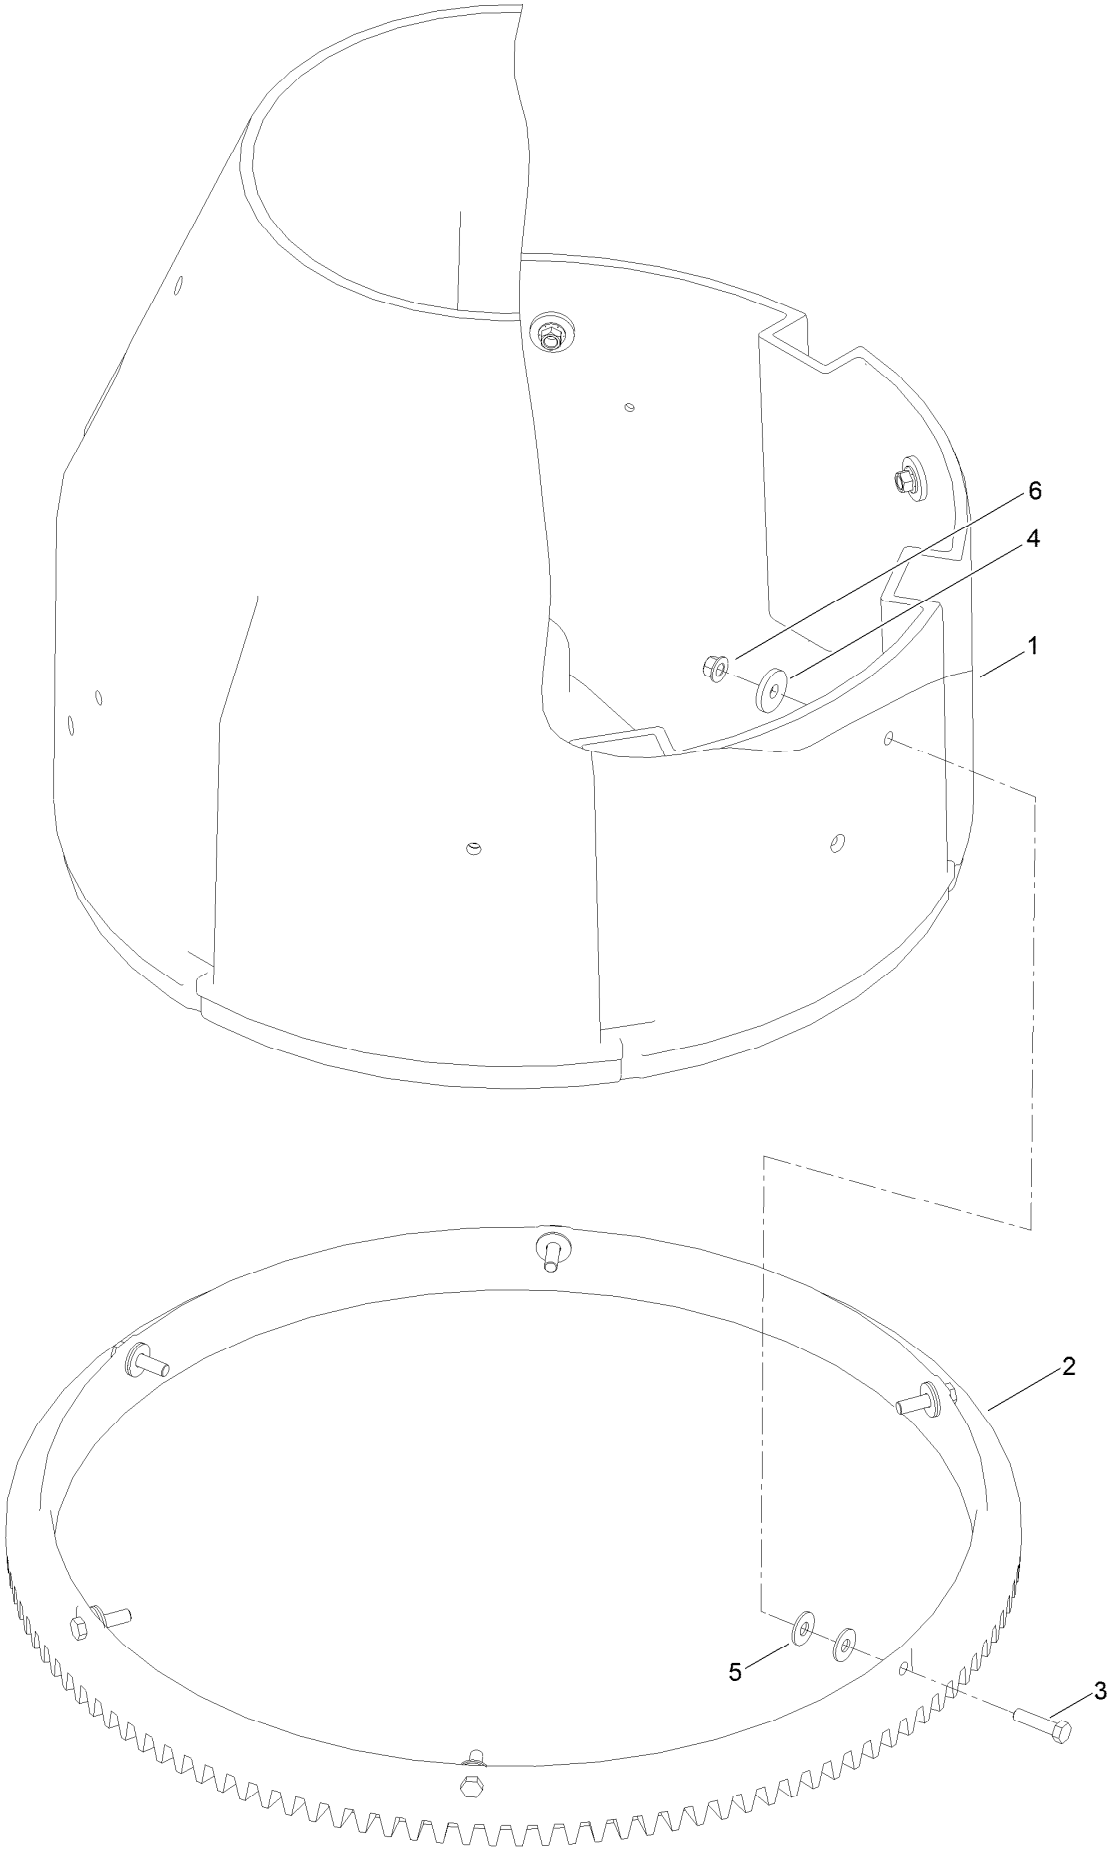

Drum Assembly No. ST47332 (continued)

Ref.	Part Number	Qty.	Description
1	131-2908	1	Drum
2	ST26317-01	1	Gear-Ring
3	325-8	6	Screw-HH
4	ST26326	6	Washer-Flat
5	3256-6	12	Washer-Flat
6	99-5107	6	Nut-Lock


Cowl Assembly

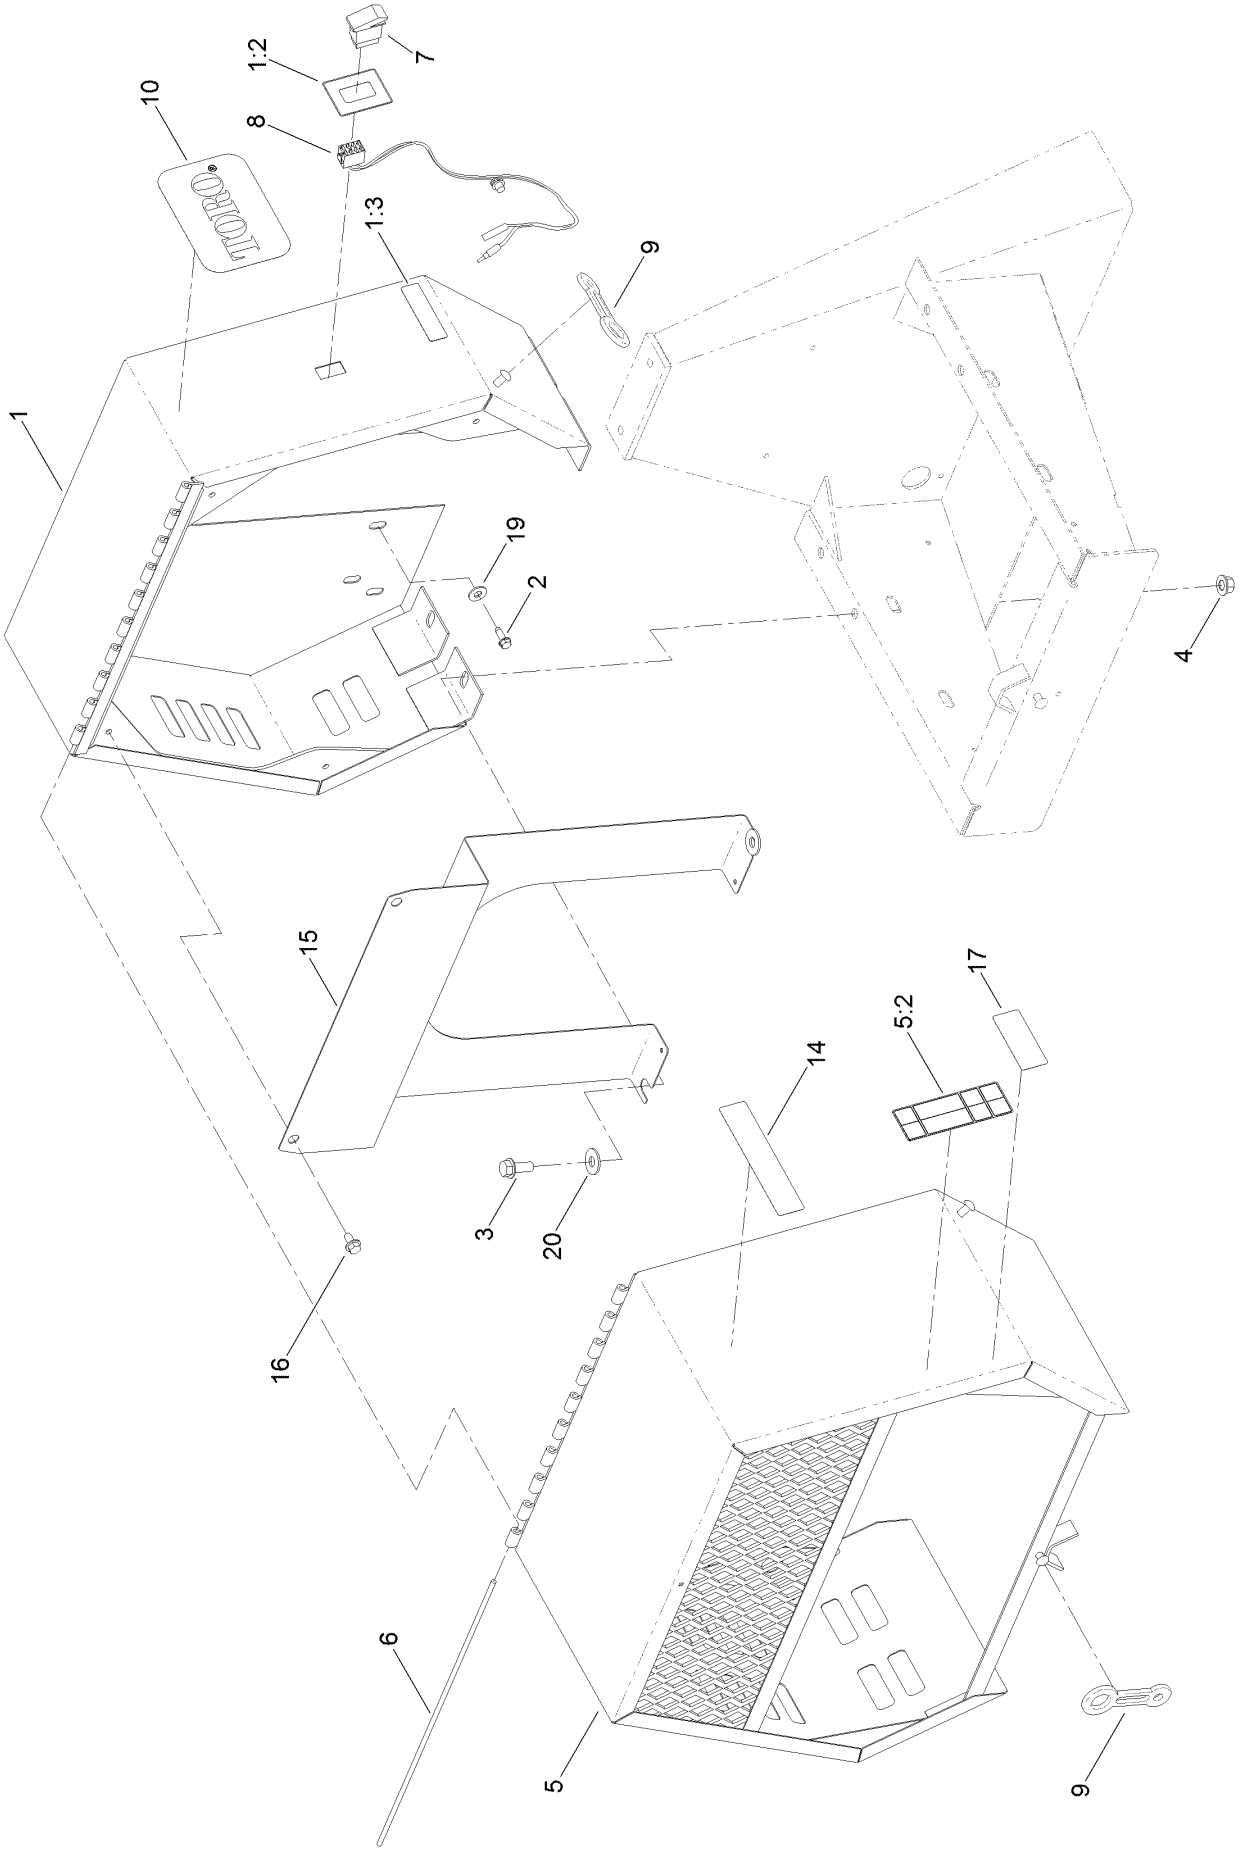

Cowl Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-2811	1	Stationary Cowl ASM
1:2	125-4940	1	Decal-Stop, Engine
1:3	117-2718	1	Decal-Arrester, Spark
2	701243	2	Screw-HWHTF
3	3234-38	4	Screw-HHF
4	99-5107	4	Nut-Lock
5	127-1685	1	Movable Cowl ASM
5:2	125-4939	1	Decal-Warning
6	ST44368	1	Pin
7	95-8999	1	Switch
8	125-4877	1	Harness-Wire, Mixer
9	ST47182	3	Latch-Rubber
10	67-7320	2	Decal
14	125-4937	2	Decal
15	125-8218-03	1	Plate-Engine
16	110-9380	2	Screw-HWH
17	125-4942	1	Decal
19	3256-4	2	Washer-Flat
20	3256-6	2	Washer-Flat

Trailer Light Assembly

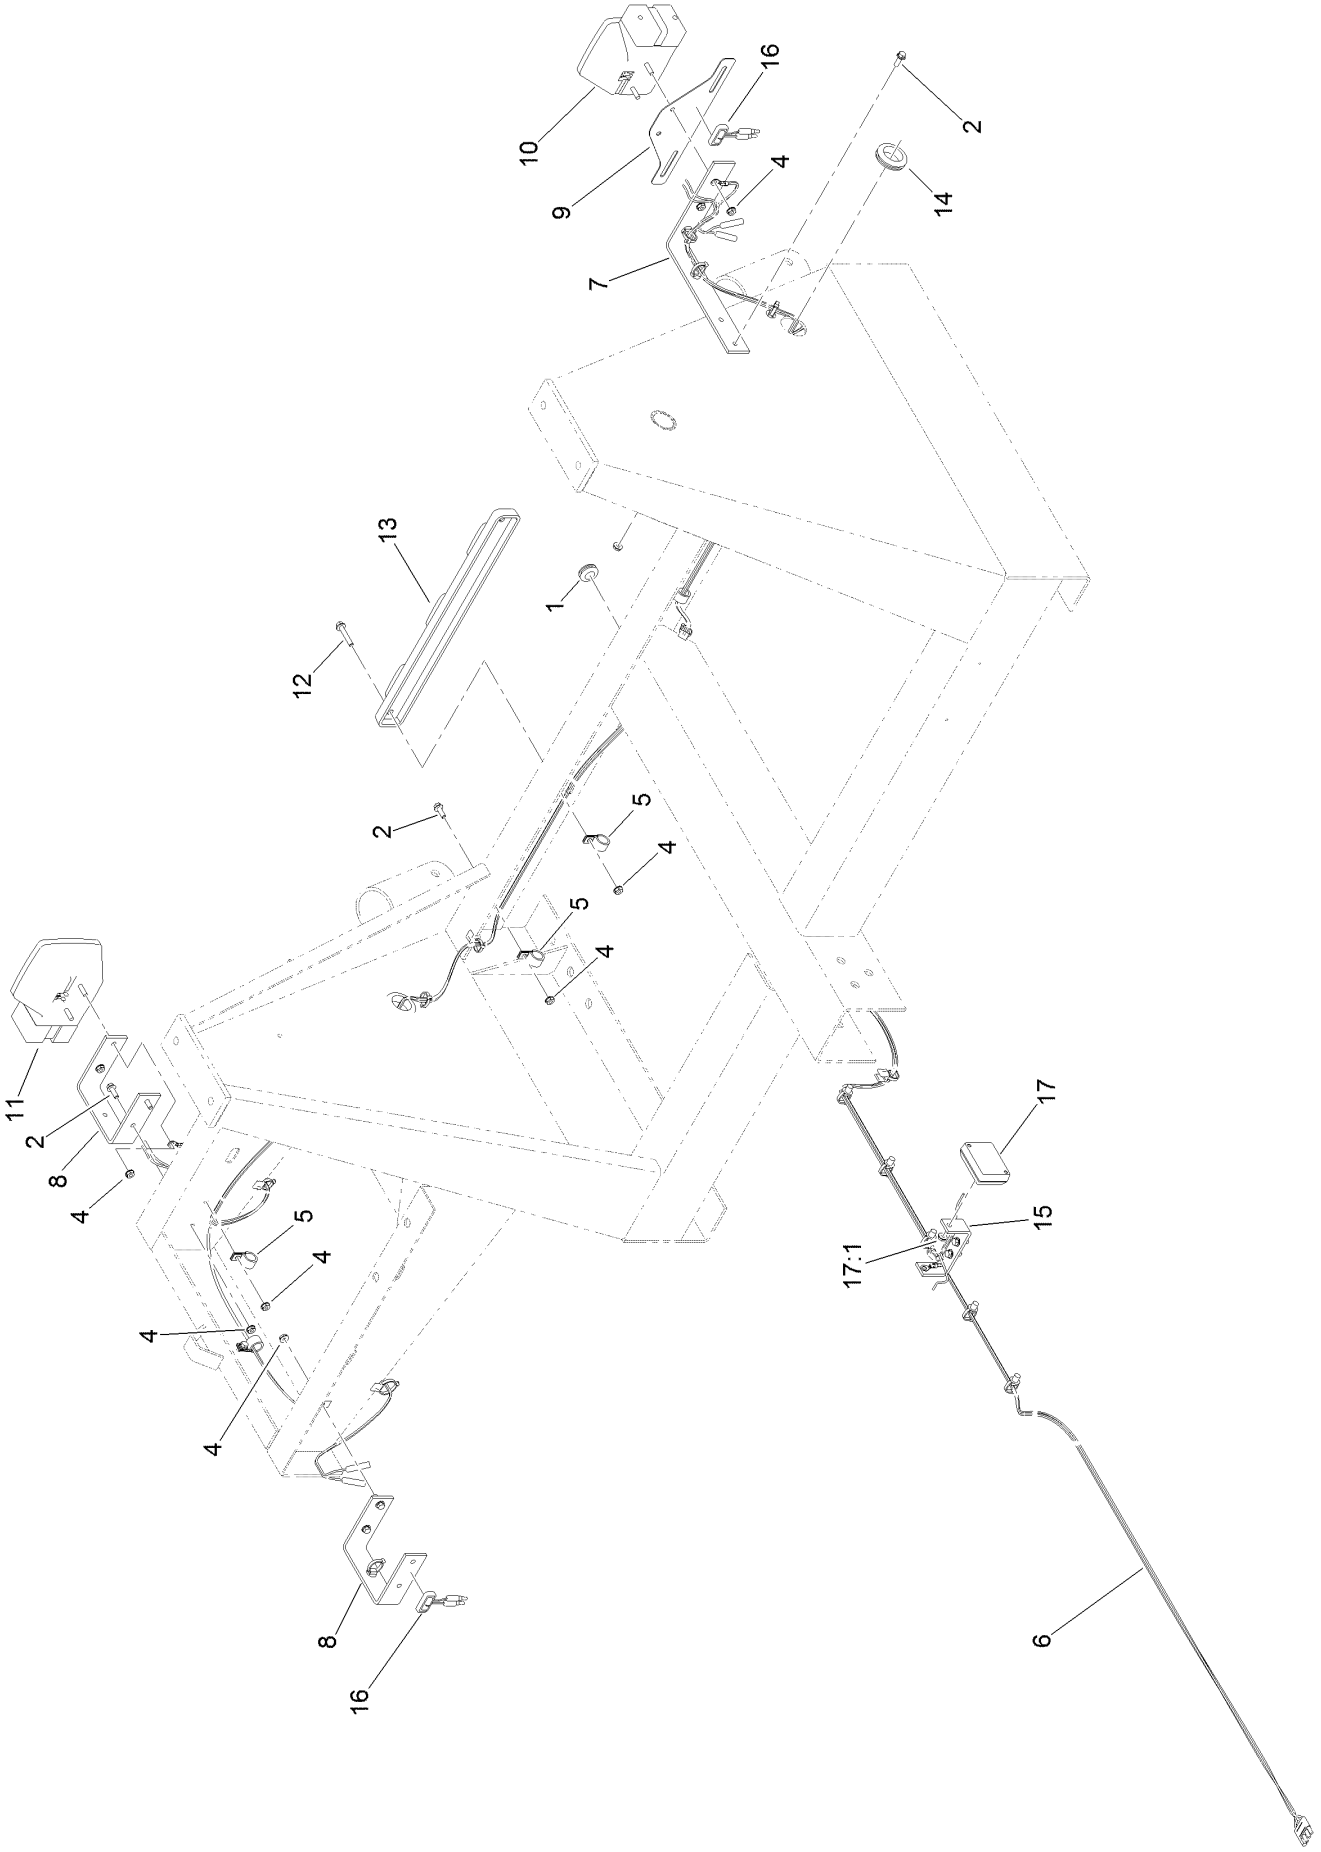

Trailer Light Assembly (continued)

Ref.	Part Number	Qty.	Description
1	112-7069	1	Grommet
2	115-5103	15	Screw-HHF
4	32149-2	21	Nut-Keps
5	2412-87	11	Clamp-Cable
6	127-7608	1	Harness-Wire
7	125-8689-03	1	Bracket-L
8	125-8690-03	2	Bracket-U
9	125-8659-03	1	Holder-Plate, License
10	131-5713	1	Light-Tail, LH
11	131-5712	1	Light-Tail, RH
12	94-5781	2	Screw-HHF
13	125-8698	1	Light-Identification, Trailer
14	120-4831	2	Grommet
15	127-7598-03	1	Bracket-Light
16	127-7630	2	Lamp-Amber
17	127-7562	2	Lamp-Marker, Front Side
17:1	32149-2	1	Nut-Keps



Count on it.