Form No. 3378-566 Rev A

TORO®

Count on it.

Parts Catalog

Nail Drag Kit

Sand Pro® 2040Z Traction Unit

Model No. 08717—Serial No. 314000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3378-566 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Drawbar and Frame Assembly 4
Groomer Assembly 6

© 2013—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Drawbar and Frame Assembly

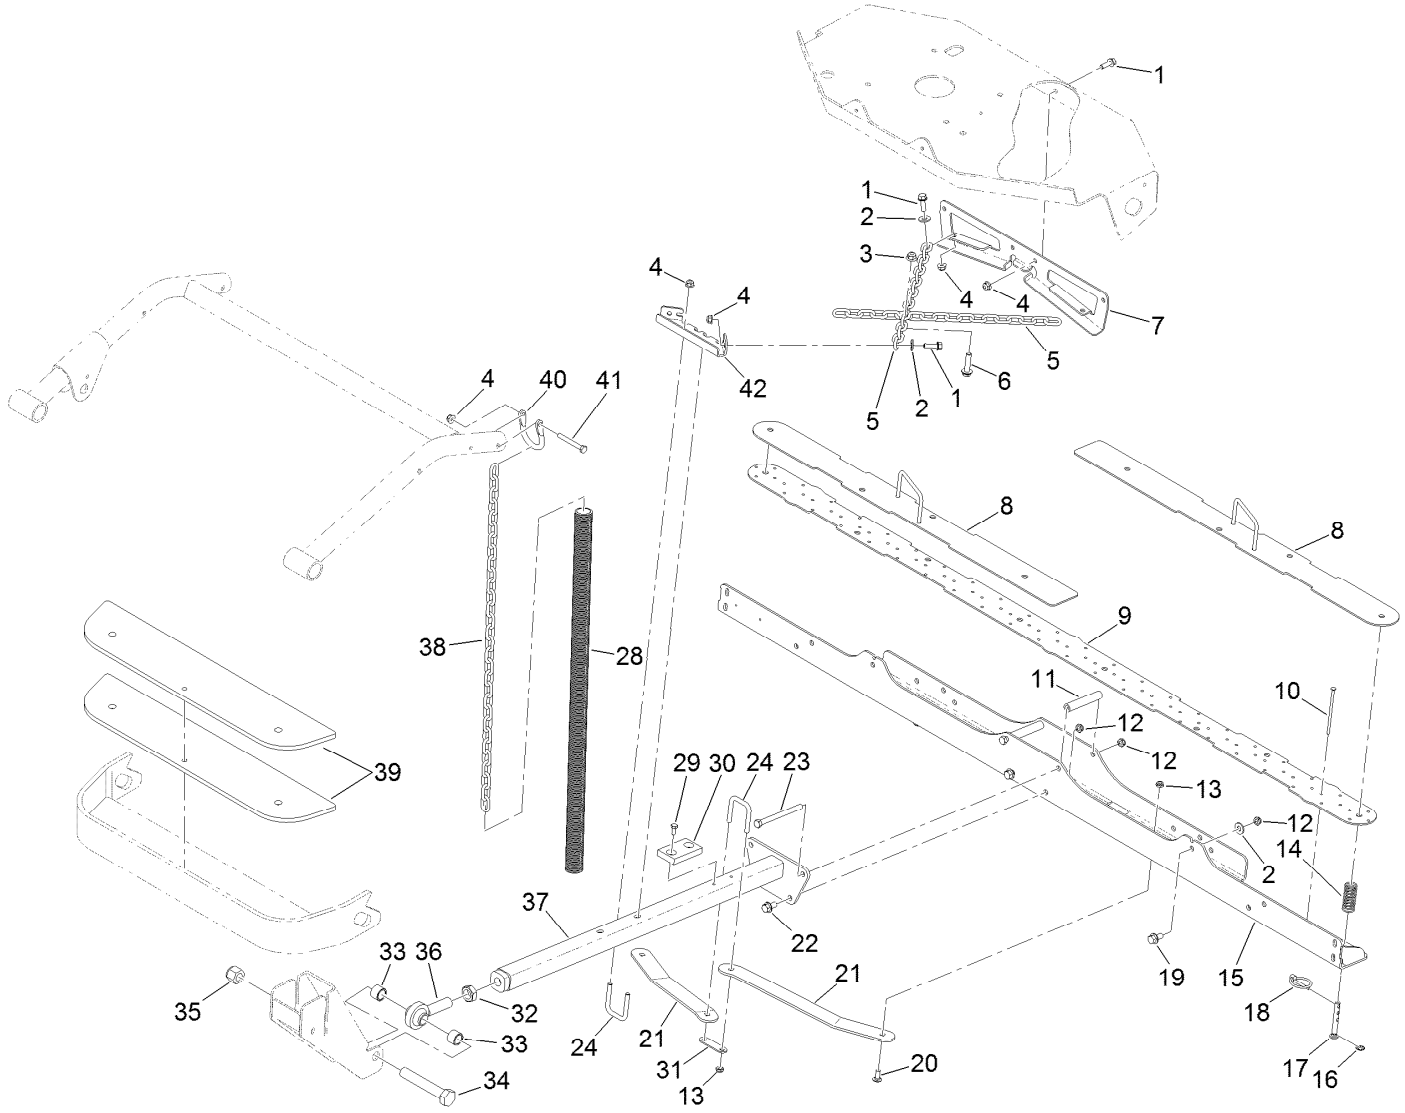

Drawbar and Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	3234-29	8	Screw-HHF
2	3256-3	6	Washer-Flat
3	104-8301	1	Nut-Flange, NI
4	104-8300	12	Nut-Flange, NI
5	125-5127	2	Chain-Proof, 18 Link
6	3234-18	1	Screw-HHF
7	125-6468-01	1	Bracket-Stop, Hitch
8	125-5176-03	2	Plate-Top, Nail Drag
9	125-5140-03	1	Plate-Nail
10	114-0676	88	Nail
11	27-3680	2	Spacer-Mounting
12	3296-59	6	Nut-Lock, NI
13	3296-47	4	Nut-Lock, NI
14	114-0677	8	Spring-Compression
15	125-6402-03	1	Plate-Bottom
16	32120-18	8	E-Ring
17	112-7696	8	Pin-Clevis
18	92-1298	8	Pin-Lynch
19	3234-1	2	Screw-HHF
20	3230-23	2	Screw-CARR
21	127-0394-03	2	Bracket-Support
22	110-1718	2	Screw-HHF
23	323-23	2	Screw-HH
24	301950	2	U-Bolt-Square
28	127-7853	2	Sleeve-Chain
29	114-9291	2	Screw-HH, Taptite
30	93-9719	1	Block-Wear
31	127-0396	1	Strap
32	3220-7	1	Nut-Jam
33	127-4138	2	Spacer
34	328-8	1	Screw-HH
35	3296-51	1	Nut-Lock, NI
36	127-4139	1	Bearing-End, Rod
37	125-5177-03	1	Drawbar
38	125-5122	2	Chain-Proof, 30 Link
39	125-5133-03	2	Bumper-Weight
40	125-2446	2	Shackle
41	322-12	2	Screw-HH
42	125-6476-03	1	Bracket-Stop, Tow

Groomer Assembly

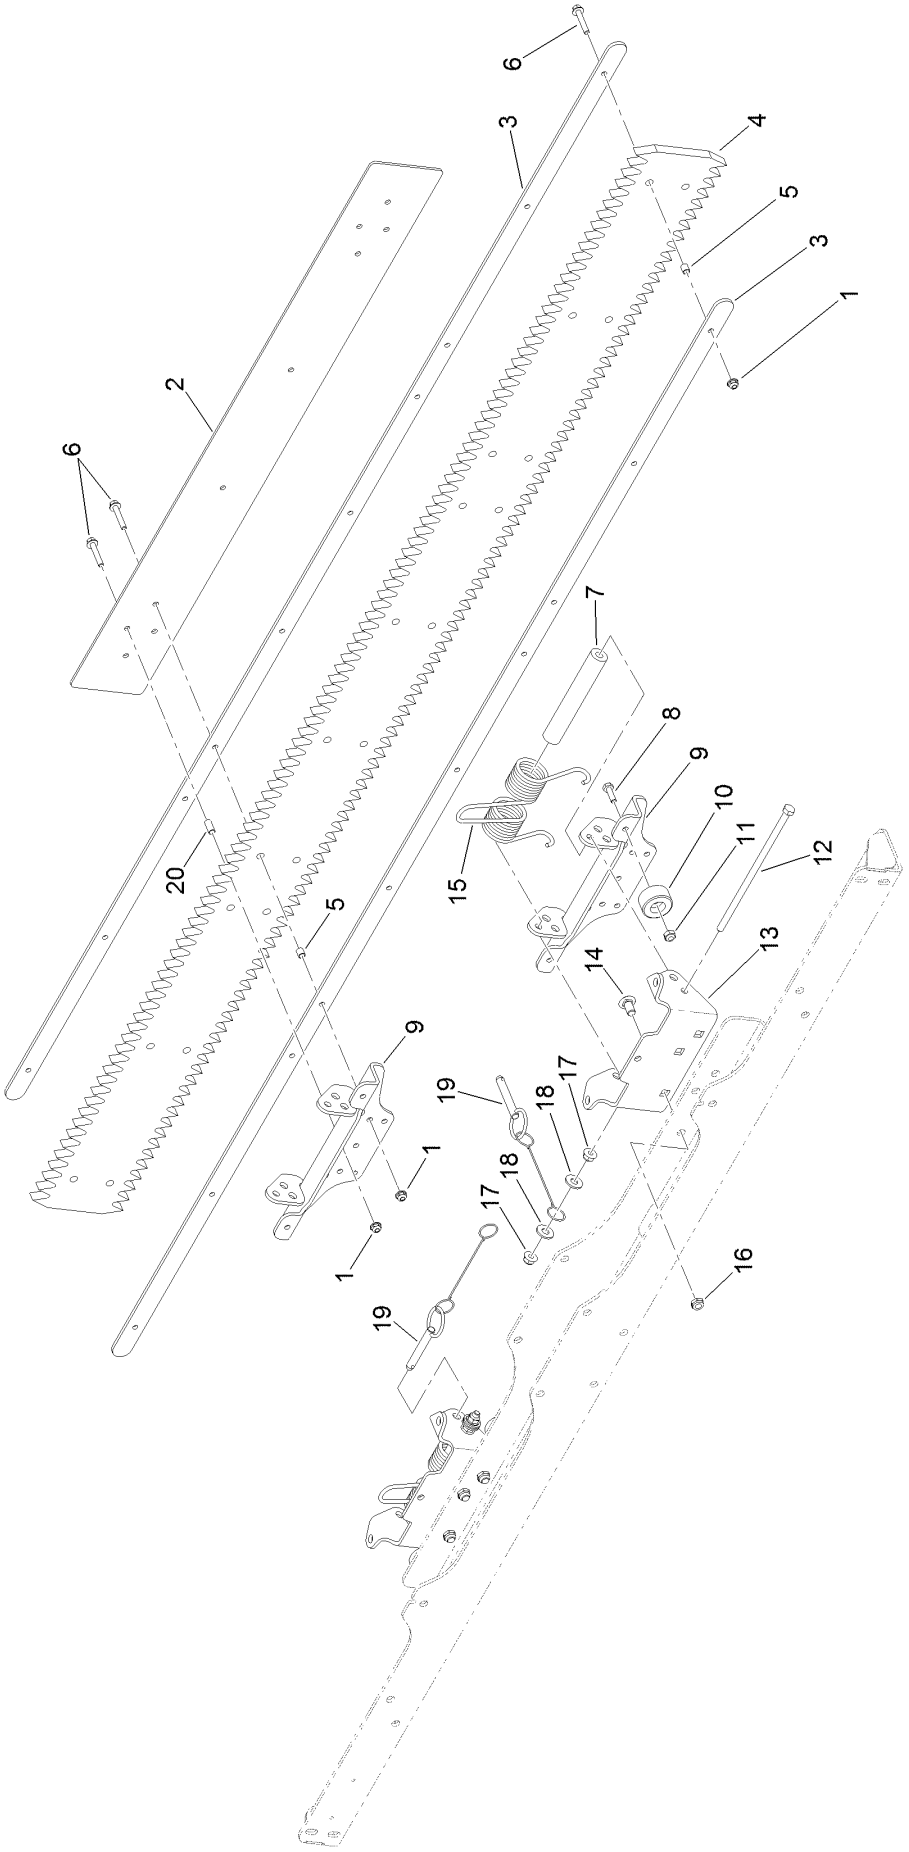

Groomer Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-7201	12	Nut-HF
2	125-5142-03	1	Blade-Push, Rear
3	125-5145-03	2	Strap-Support, Rubber
4	127-4123	1	Trowel-Rubber
5	612503	10	Spacer
6	94-5781	12	Screw-HHF
7	105-4622	2	Spacer
8	321-5	4	Screw-HH
9	127-4131-03	2	Bracket-Groomer
10	94-4548	4	Bumper-Recessed
11	3296-16	4	Nut-Lock, NI
12	112-9557	2	Screw-HH
13	125-6494-03	2	Bracket-Drag, Nail
14	3231-21	6	Screw-CARR
15	121-2368	2	Spring-Torsion
16	3296-59	6	Nut-Lock, NI
17	104-8300	4	Nut-Flange, NI
18	3256-3	4	Washer-Flat
19	119-7116	2	Pin-Quick
20	108-4705	2	Spacer



Count on it.