Form No. 3378-824 Rev A

TORO®

Count on it.

Parts Catalog

# Power Max Heavy Duty 1128 OXE Snowthrower

**Model No. 38828—Serial No. 314000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3378-824* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Housing and Bypass Assembly . . . . . 4
Traction Frame Assembly . . . . . 5
Idler and Linkage Assembly . . . . . 6
Auger and Impeller Assembly. . . . . 8
28 Inch Auger Gearcase Assembly No. 125-7926 . . . . . 9
Impeller Assembly . . . . . 10
Engine Assembly . . . . . 11
Chute Assembly . . . . . 12
Lever Chute Control Assembly. . . . . 13
Lower Handle and Headlamp Assembly. . . . . 14
Handle and Control Assembly . . . . . 15
Wheel Clutch Assembly . . . . . 16
Wheel Clutch Sprocket Assembly . . . . . 18
Attachments and Accessories . . . . . 19

© 2013—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420




Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

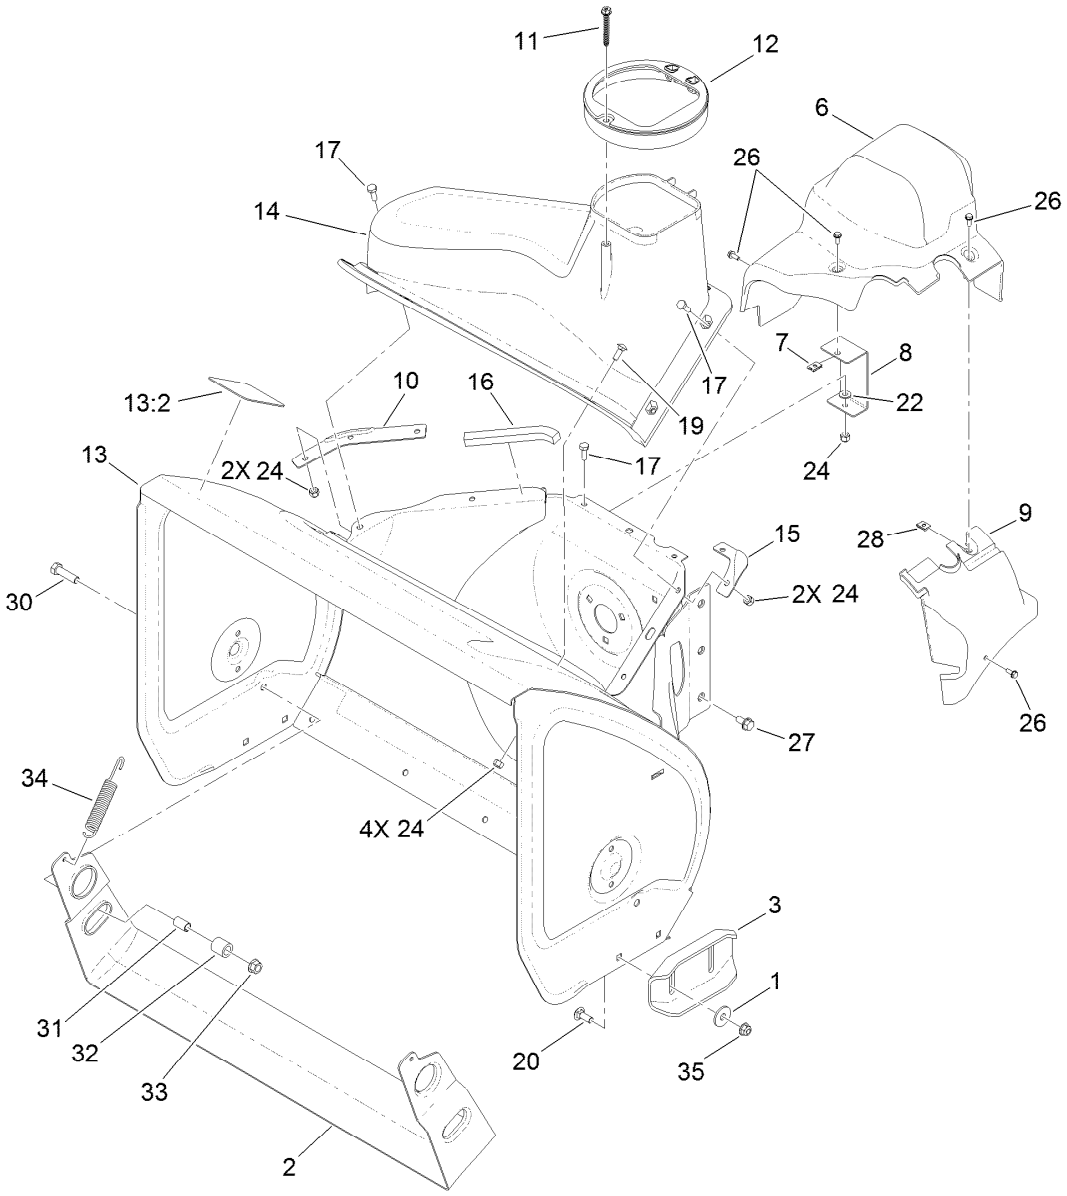


# Housing and Bypass Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 52-2861 | 4 | Washer |
| 2 | 106-4590-01 | 1 | Scraper-Pivoting, 28 Inch |
| 3 | 120-3098-03 | 2 | Skid |
| 6 | 119-1563 | 1 | Cover-Belt |
| 7 | 107-1013 | 1 | Nut-Speed, U-Type |
| 8 | 107-1014-03 | 1 | Bracket-Cover, Clip Nut |
| 9 | 107-1016 | 1 | Cover-Extension, Belt |
| 10 | 107-1017-03 | 1 | Seal-Flange, Cover |
| 11 | 114-3751 | 1 | Screw-HWH, Plastite |
| 12 | 107-3006 | 1 | Guide-Chute |
| 13 | 107-3824 | 1 | Housing-Auger, 28 Inch |
| 13:2 | 107-3040 | 1 | Decal-Danger, Auger |
| 14 | 108-0017 | 1 | Cover |
| 15 | 108-0039-03 | 1 | Seal |
| 16 | 120-0124 | 1 | Seal-Housing |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 321-4 | 7 | Screw-HH |
| 19 | 3229-1 | 4 | Bolt-CARR |
| 20 | 3230-16 | 4 | Screw-CARR |
| 22 | 3256-22 | 1 | Washer-Flat |
| 24 | 3296-42 | 11 | Nut-Lock, NI |
| 26 | 32144-112 | 4 | Screw-HWH |
| 27 | 32144-14 | 6 | Screw-HWHTF |
| 28 | 701493 | 1 | Nut-Speed |
| 30 | 323-29 | 2 | Screw-HH |
| 31 | 106-4501 | 2 | Spacer-Scraper, Stop |
| 32 | 106-7318 | 2 | Cushion-Scraper, Stop |
| 33 | 32128-21 | 2 | Nut-HF |
| 34 | 106-4502 | 2 | Spring-Scraper |
| 35 | 104-8300 | 4 | Nut-Flange, NI |

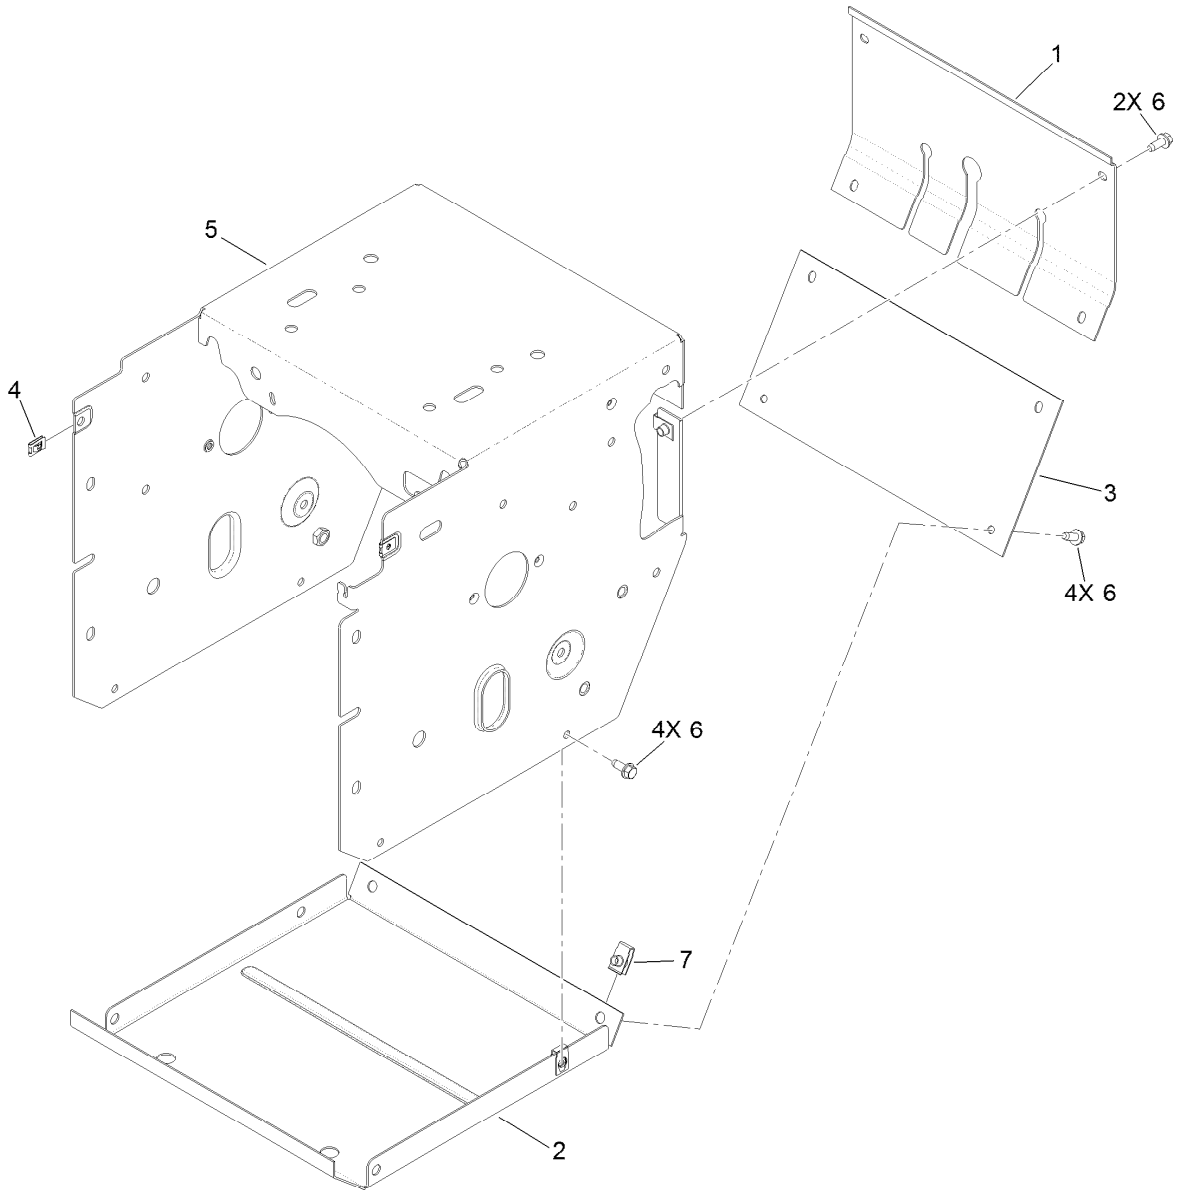



# Traction Frame Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 108-0022-01 | 1 | Cover-Upper |
| 2 | 106-7330-01 | 1 | Pan-Bottom |
| 3 | 106-7345-01 | 1 | Cover-Lower |
| 4 | 107-1013 | 2 | Nut-Speed, U-Type |
| 5 | 120-9832-01 | 1 | Traction Frame ASM |
| 6 | 32144-10 | 10 | Screw-HWH |
| 7 | 107069 | 7 | Clip |

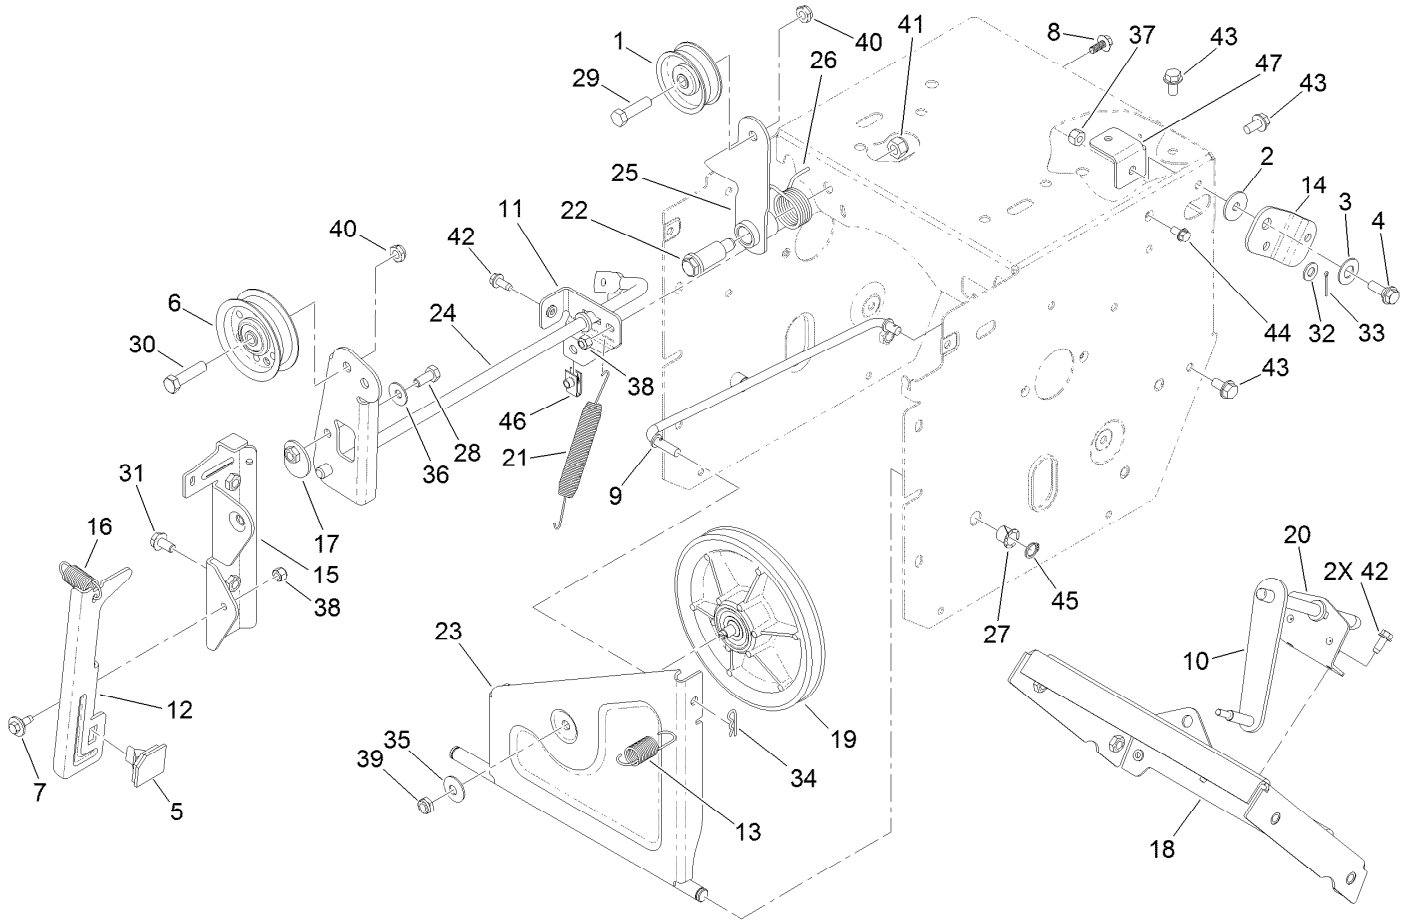



# Idler and Linkage Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 3-4244 | 1 | Pulley-Idler |
| 2 | 5-4460 | 1 | Washer-Pivot |
| 3 | 25-5640 | 1 | Washer |
| 4 | 27-0410 | 1 | Screw-Shoulder |
| 5 | 66-8060 | 1 | Pad-Brake |
| 6 | 92-7104 | 1 | Pulley-Idler |
| 7 | 92-9698 | 1 | Screw-Shoulder |
| 8 | 99-6810 | 1 | Screw-HH |
| 9 | 106-4467 | 1 | Link-Control, Speed |
| 10 | 106-7268 | 1 | Lever-Control, Traction |
| 11 | 120-9824 | 1 | Bracket-Clutch, Impeller |
| 12 | 107-1000 | 1 | Arm-Brake |
| 13 | 107-1003 | 1 | Spring-Extension |
| 14 | 107-1011 | 1 | Bellcrank-Drive |
| 15 | 107-1039 | 1 | Bracket-Idler, Impeller |
| 16 | 107-3829 | 1 | Spring-Extension |
| 17 | 107-1047 | 1 | Nut |
| 18 | 108-0026-01 | 1 | Shift Plate ASM |
| 19 | 108-0031 | 1 | Pulley-Traction |
| 20 | 108-0036 | 1 | Bracket-Rod, Shift |
| 21 | 108-2976 | 1 | Spring-Extension |
| 22 | 108-5056 | 1 | Bolt-Shoulder |
| 23 | 108-7307 | 1 | Bracket-Wheel, Friction |
| 24 | 107-3838-03 | 1 | Impeller Clutch ASM |
| 25 | 108-5058 | 1 | Arm-Idler, Traction |
| 26 | 120-3060 | 1 | Spring-Torsion |
| 27 | 256-257 | 2 | Bushing-Nyliner |
| 28 | 322-3 | 1 | Screw-HH |
| 29 | 323-29 | 1 | Screw-HH |
| 30 | 323-8 | 1 | Screw-HH |
| 31 | 3234-7 | 2 | Screw-HHF |
| 32 | 3256-23 | 1 | Washer-Flat |
| 33 | 3272-4 | 1 | Pin-Cotter |
| 34 | 3290-307 | 1 | Pin-Hair |
| 35 | 3290-340 | 1 | Washer-Belleville |
| 36 | 3290-456 | 1 | Washer-Belleville |
| 37 | 3296-29 | 1 | Nut-Lock, NI |
| 38 | 3296-42 | 2 | Nut-Lock, NI |
| 39 | 3296-5 | 1 | Nut-Lock |
| 40 | 3296-59 | 2 | Nut-Lock, NI |
| 41 | 3296-76 | 1 | Nut-Lock, NI |
| 42 | 32144-10 | 3 | Screw-HWH |

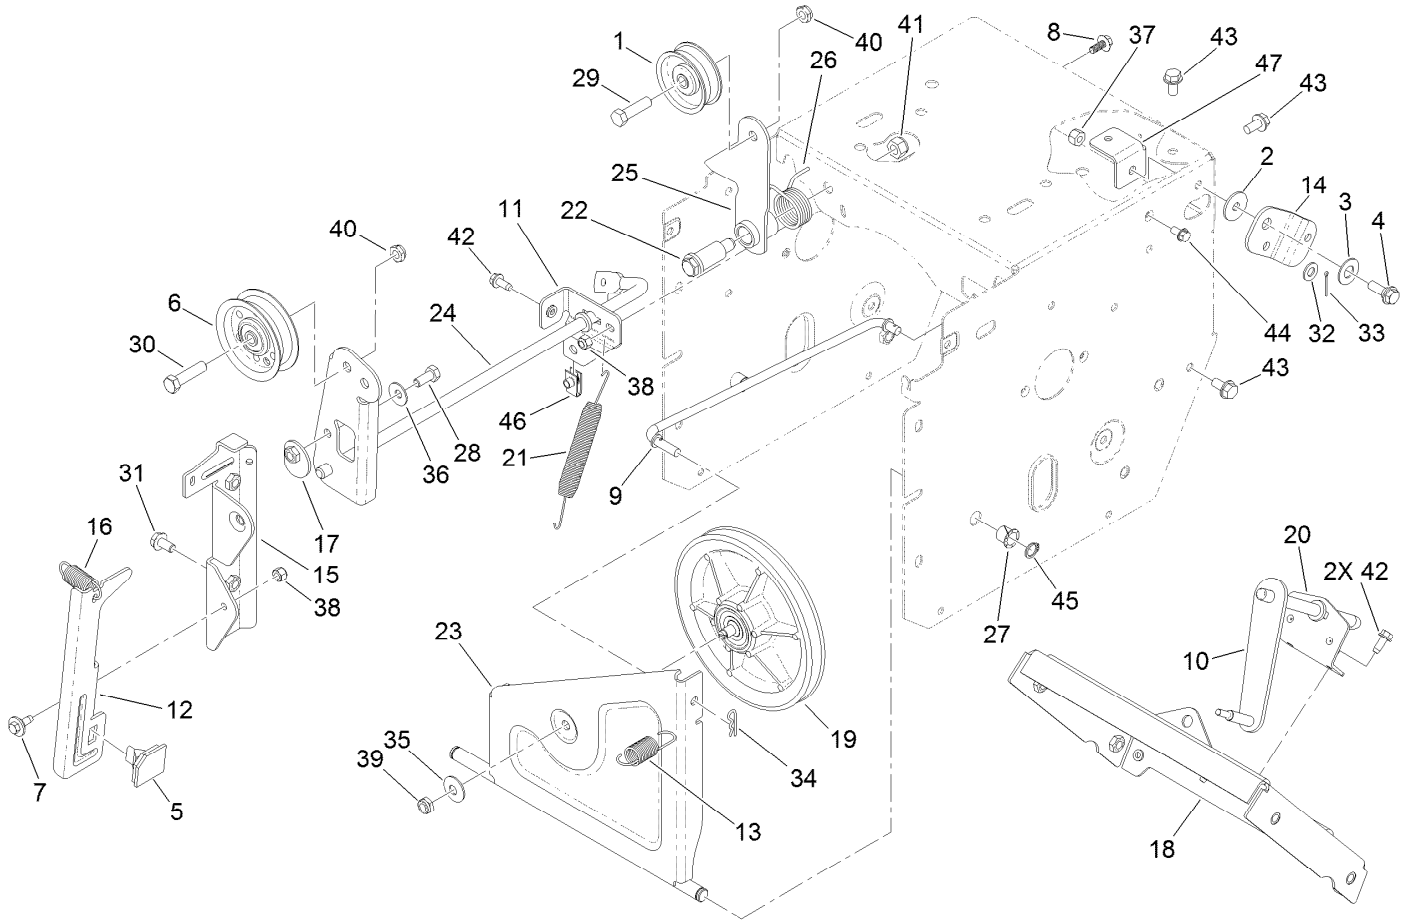



# Idler and Linkage Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 43 | 32144-14 | 6 | Screw-HWHTF |
| 44 | 32144-4 | 1 | Screw-HWH |
| 45 | 32151-61 | 2 | Ring-Retaining |
| 46 | 107069 | 1 | Clip |
| 47 | 125-1124 | 1 | Bracket-Frame, LH |

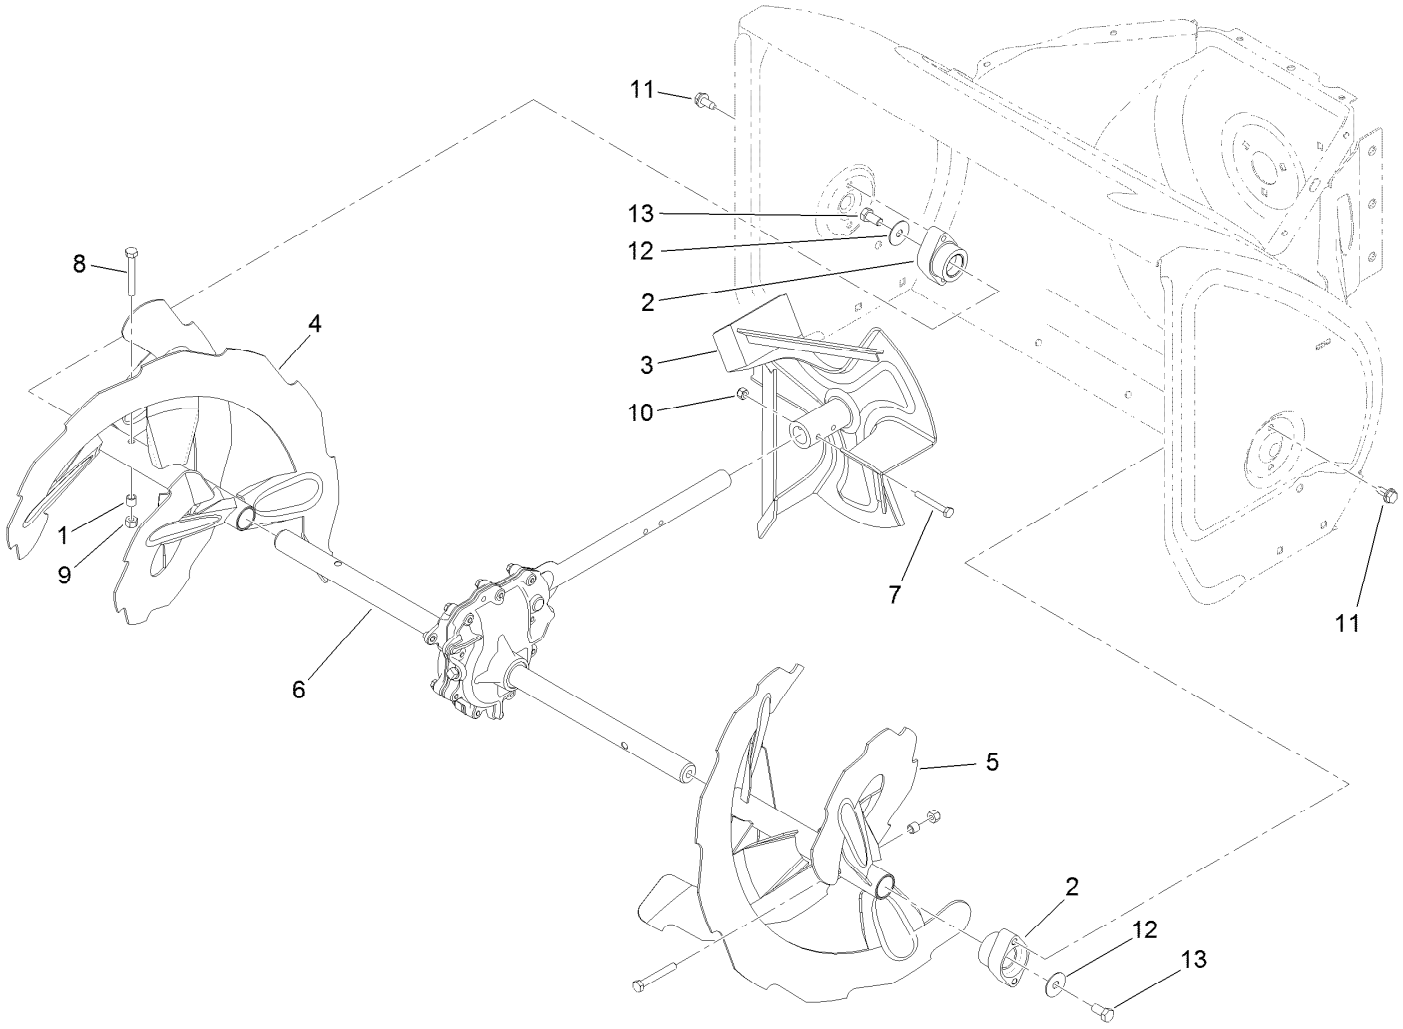


# Auger and Impeller Assembly


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 1-633545 | 2 | Spacer |
| 2 | 106-4570 | 2 | Bearing-Auger |
| 3 | 106-4576-03 | 1 | Impeller ASM |
| 4 | 106-7291-03 | 1 | RH Auger ASM |
| 5 | 106-7301-03 | 1 | LH Auger ASM |
| 6 | 125-7926 | 1 | 28 Inch Auger Gearcase ASM |
| 7 | 321-11 | 2 | Screw-HH |
| 8 | 322-11 | 2 | Screw-HH |
| 9 | 3296-29 | 2 | Nut-Lock, NI |
| 10 | 3296-42 | 2 | Nut-Lock, NI |
| 11 | 32144-70 | 4 | Screw-HWHTF |
| 12 | 3-0750 | 2 | Washer |
| 13 | 323-4 | 2 | Screw-HH |

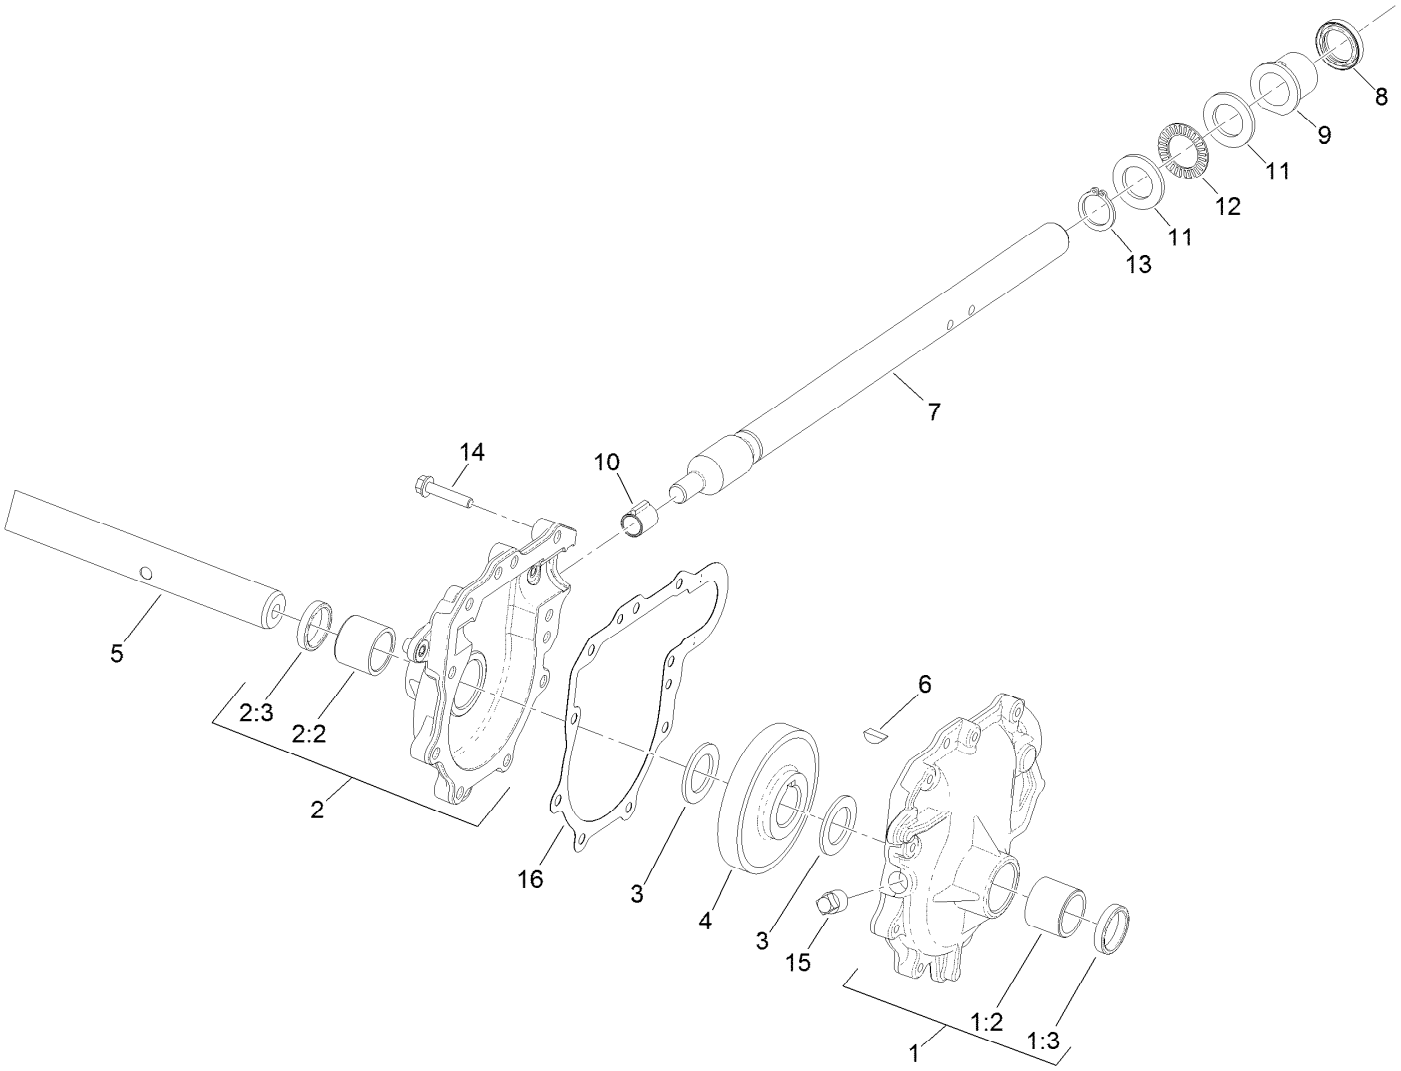


# 28 Inch Auger Gearcase Assembly No. 125-7926


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 108-7325 | 1 | LH Auger Gearcase ASM |
| 1:2 | 112-6635 | 1 | Bushing-Sleeve |
| 1:3 | 7-0045 | 1 | Seal-Oil |
| 2 | 108-7327 | 1 | RH Auger Gearcase ASM |
| 2:2 | 112-6635 | 1 | Bushing-Sleeve |
| 2:3 | 7-0045 | 1 | Seal-Oil |
| 3 | 252-71 | 2 | Washer-Thrust |
| 4 | 62-0120 | 1 | Gear-Helical |
| 5 | 106-4421 | 1 | Shaft-Auger |
| 6 | 3257-10 | 1 | Key-Woodruff |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 7 | 66-7811 | 1 | Shaft-Impeller |
| 8 | 253-149 | 1 | Seal-Oil |
| 9 | 37-6560 | 1 | Bushing-Input |
| 10 | 62-1150 | 1 | Bushing-Worm |
| 11 | 252-78 | 2 | Washer-Thrust |
| 12 | 252-76 | 1 | Bearing-Thrust |
| 13 | 32151-33 | 1 | Ring-Retaining, Ext |
| 14 | 108-4862 | 9 | Screw-HWHTF |
| 15 | 121-6832 | 1 | Plug-Pipe, SQH |
| 16 | 108-7330 | 1 | Gasket-Gearcase, Auger |

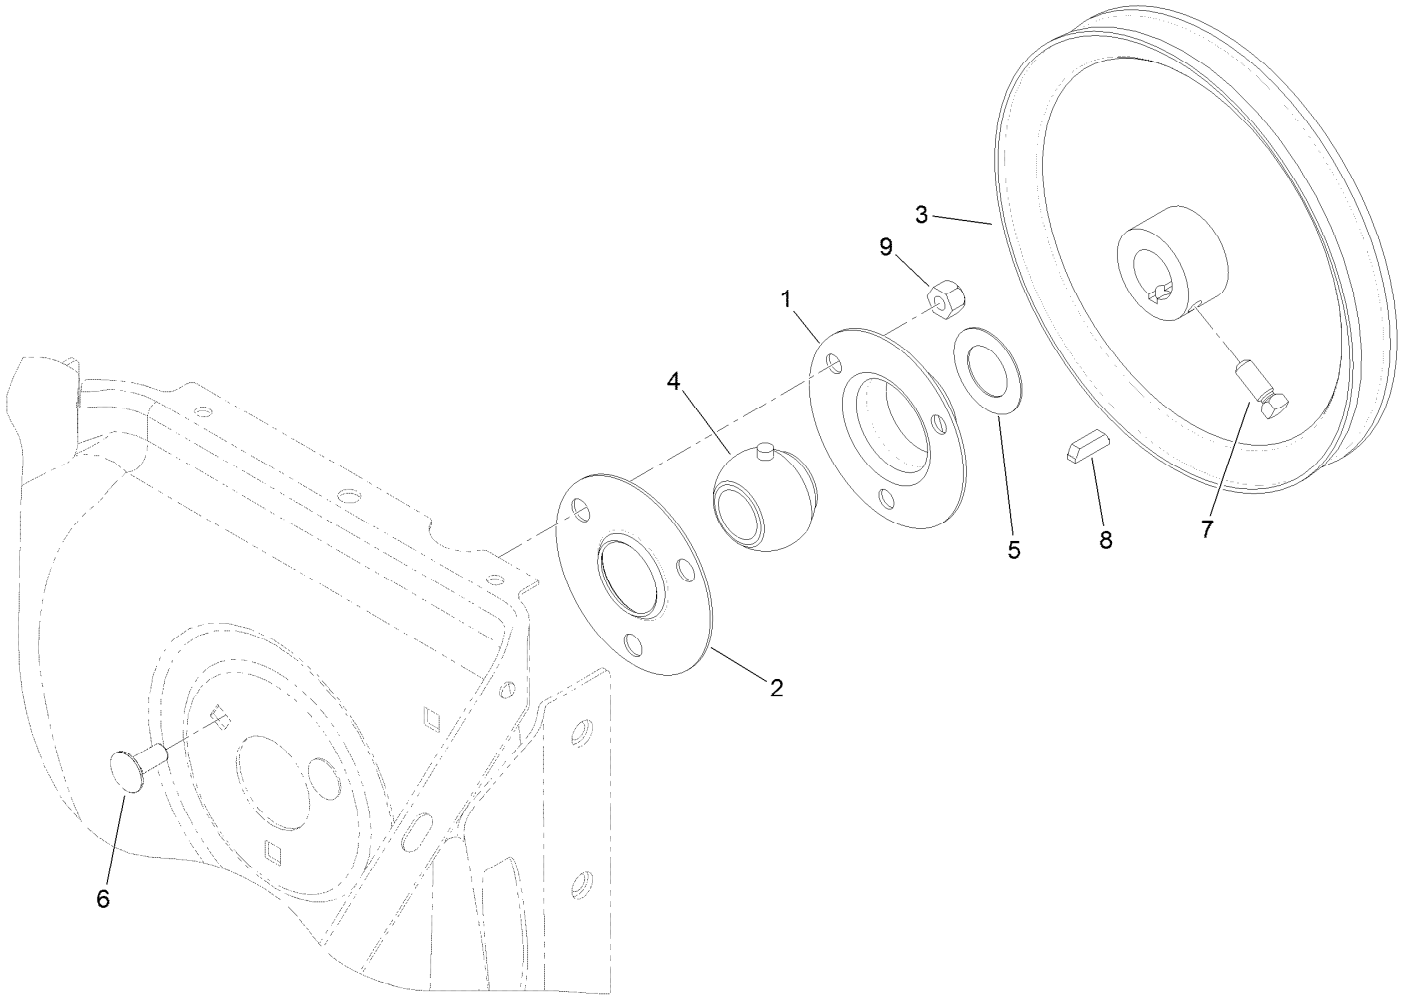


# Impeller Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 26-6110 | 1 | Flange-Cup, Bearing |
| 2 | 26-6120 | 1 | Flange-Cup, Bearing |
| 3 | 62-1300 | 1 | Pulley-Impeller |
| 4 | 63-3450 | 1 | Bearing-Ball |
| 5 | 110-6767 | 1 | Washer-Thrust |
| 6 | 3230-23 | 3 | Screw-CARR |
| 7 | 1-803050 | 2 | Screw-Set |
| 8 | 3257-23 | 1 | Key-Woodruff |
| 9 | 3296-29 | 3 | Nut-Lock, NI |

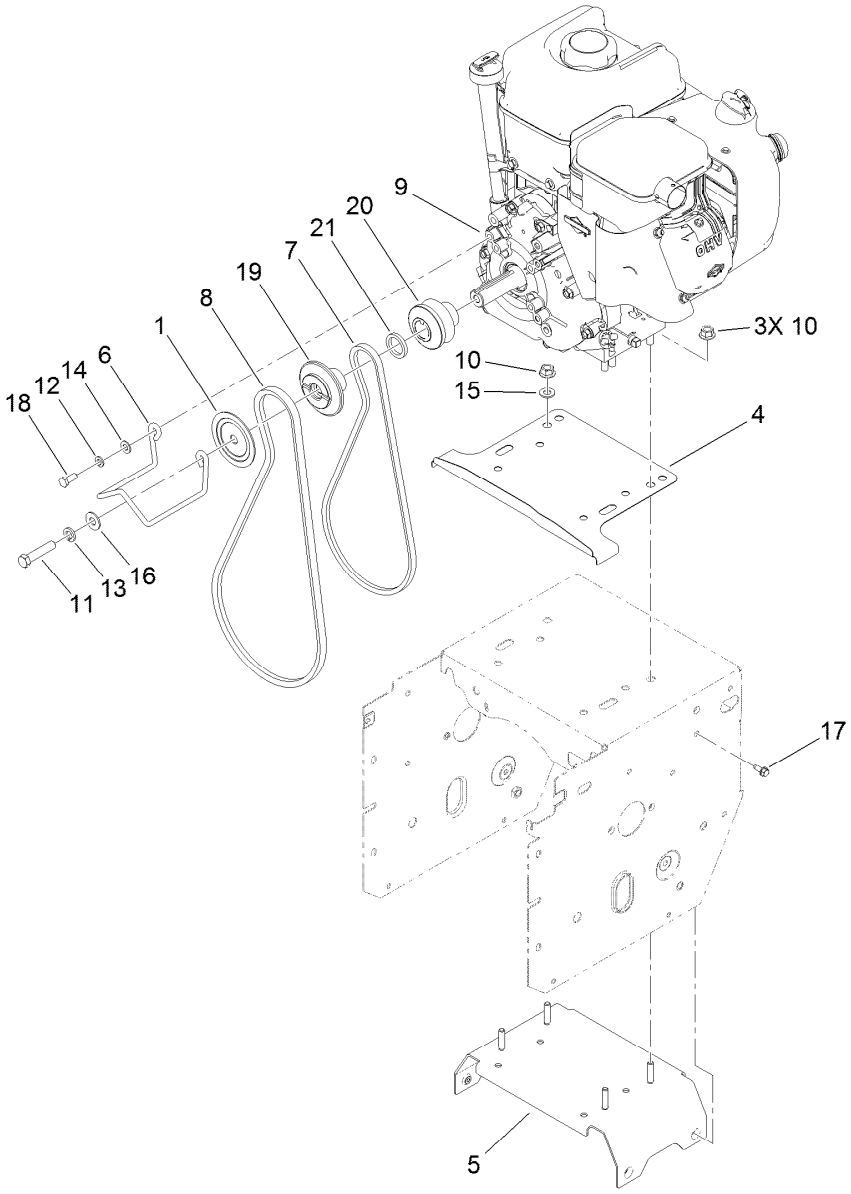



# Engine Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 62-0940 | 1 | Sheave-Half, Impeller |
| 4 | 117-6022-01 | 1 | Shield-Drive |
| 5 | 112-8127 | 1 | Frame Brace ASM |
| 6 | 107-3835 | 1 | Guide-Belt |
| 7 | 94-8812 | 1 | V Belt-Traction |
| 8 | 106-4498 | 1 | Belt-V |
| 9 | | 1 | Engine-Briggs, 21M3170130H1 ●■ |
| 10 | 32128-20 | 4 | Nut-HF |
| 11 | 3212-8 | 1 | Screw-HH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 3253-4 | 2 | Washer-Lock |
| 13 | 3253-6 | 1 | Washer-Lock |
| 14 | 3256-23 | 2 | Washer-Flat |
| 15 | 3256-2 | 1 | Washer-Flat |
| 16 | 3256-4 | 1 | Washer-Flat |
| 17 | 32144-10 | 4 | Screw-HWH |
| 18 | 3210-3 | 2 | Screw-HH |
| 19 | 121-6602 | 1 | Pulley-Engine, Impeller |
| 20 | 121-6617 | 1 | Pulley-Traction |
| 21 | 115-5666 | 1 | Spacer-Hardened |


● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

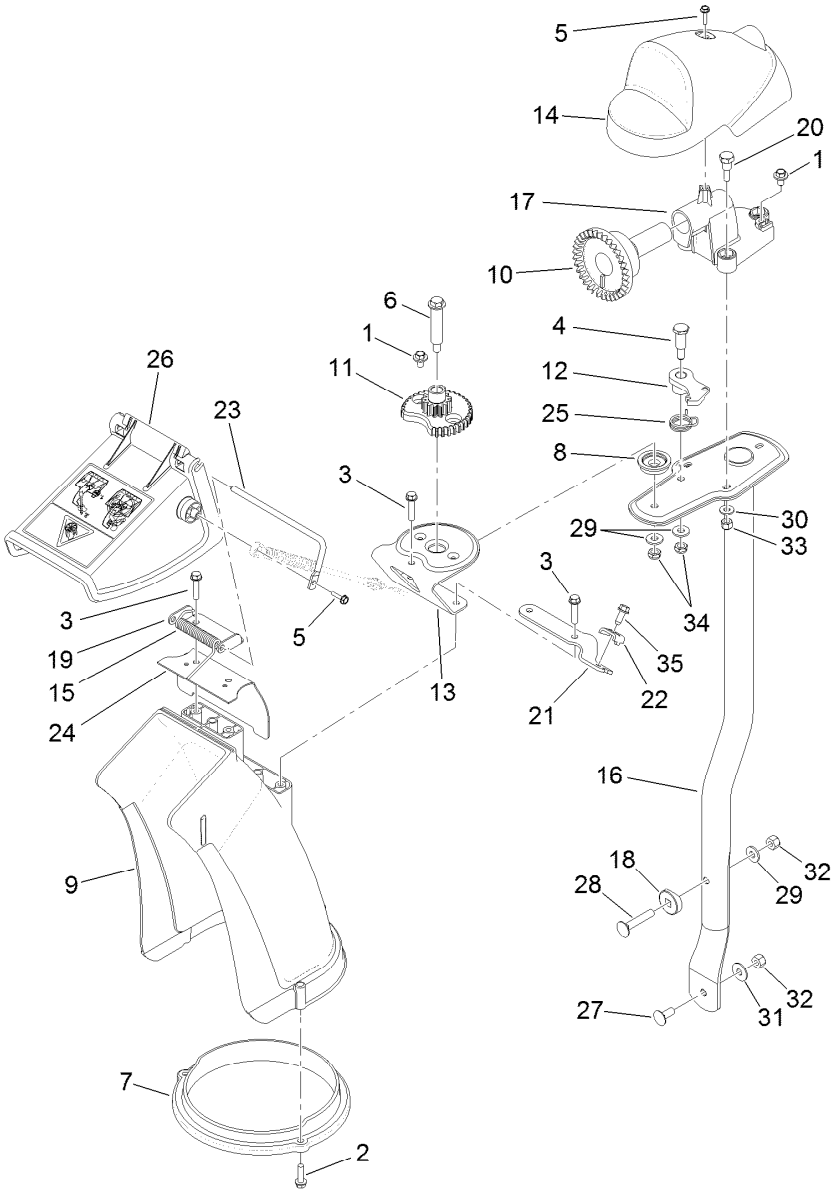


# Chute Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 46-6810 | 3 | Screw And Washer ASM |
| 2 | 46-8091 | 3 | Screw-HWH |
| 3 | 46-8092 | 5 | Screw-Plastite |
| 4 | 63-2650 | 1 | Screw-Shoulder |
| 5 | 98-1375 | 2 | Screw-HWH |
| 6 | 100-9880 | 1 | Bolt-Shoulder |
| 7 | 105-9991 | 1 | Ring-Chute |
| 8 | 106-4422 | 1 | Spacer-Chute |
| 9 | 106-4440 | 1 | Chute-Discharge |
| 10 | 106-4471 | 1 | Gear-Face |
| 11 | 106-4472 | 1 | Gear-Chute |
| 12 | 106-4476 | 1 | Latch-Chute |
| 13 | 106-4582-03 | 1 | Bracket-Support, Chute |
| 14 | 106-4585 | 1 | Cover-Gear, Chute |
| 15 | 106-4594 | 1 | Spring-Torsion |
| 16 | 106-7253-03 | 1 | Tube-Support |
| 17 | 106-7257 | 1 | Mount-Gear, Face |
| 18 | 106-7260 | 1 | Washer-Curved |
| 19 | 106-7266 | 1 | Bracket-Deflector |
| 20 | 106-7276 | 3 | Screw-Shoulder |
| 21 | 106-7296 | 1 | Bracket-Cable, Clamp |
| 22 | 106-7297 | 1 | Clamp-Cable |
| 23 | 107-1021 | 1 | Rod-Deflector |
| 24 | 108-5052 | 1 | Seal-Chute |
| 25 | 108-7315 | 1 | Spring-Torsion |
| 26 | 112-6629 | 1 | Deflector-Chute, Ce |
| 27 | 3230-23 | 1 | Screw-CARR |
| 28 | 3230-5 | 1 | Screw-CARR |
| 29 | 3256-2 | 3 | Washer-Flat |
| 30 | 3256-22 | 3 | Washer-Flat |
| 31 | 3290-456 | 1 | Washer-Belleville |
| 32 | 3296-29 | 2 | Nut-Lock, NI |
| 33 | 3296-42 | 3 | Nut-Lock, NI |
| 34 | 3296-47 | 2 | Nut-Lock, NI |
| 35 | 32144-10 | 1 | Screw-HWH |

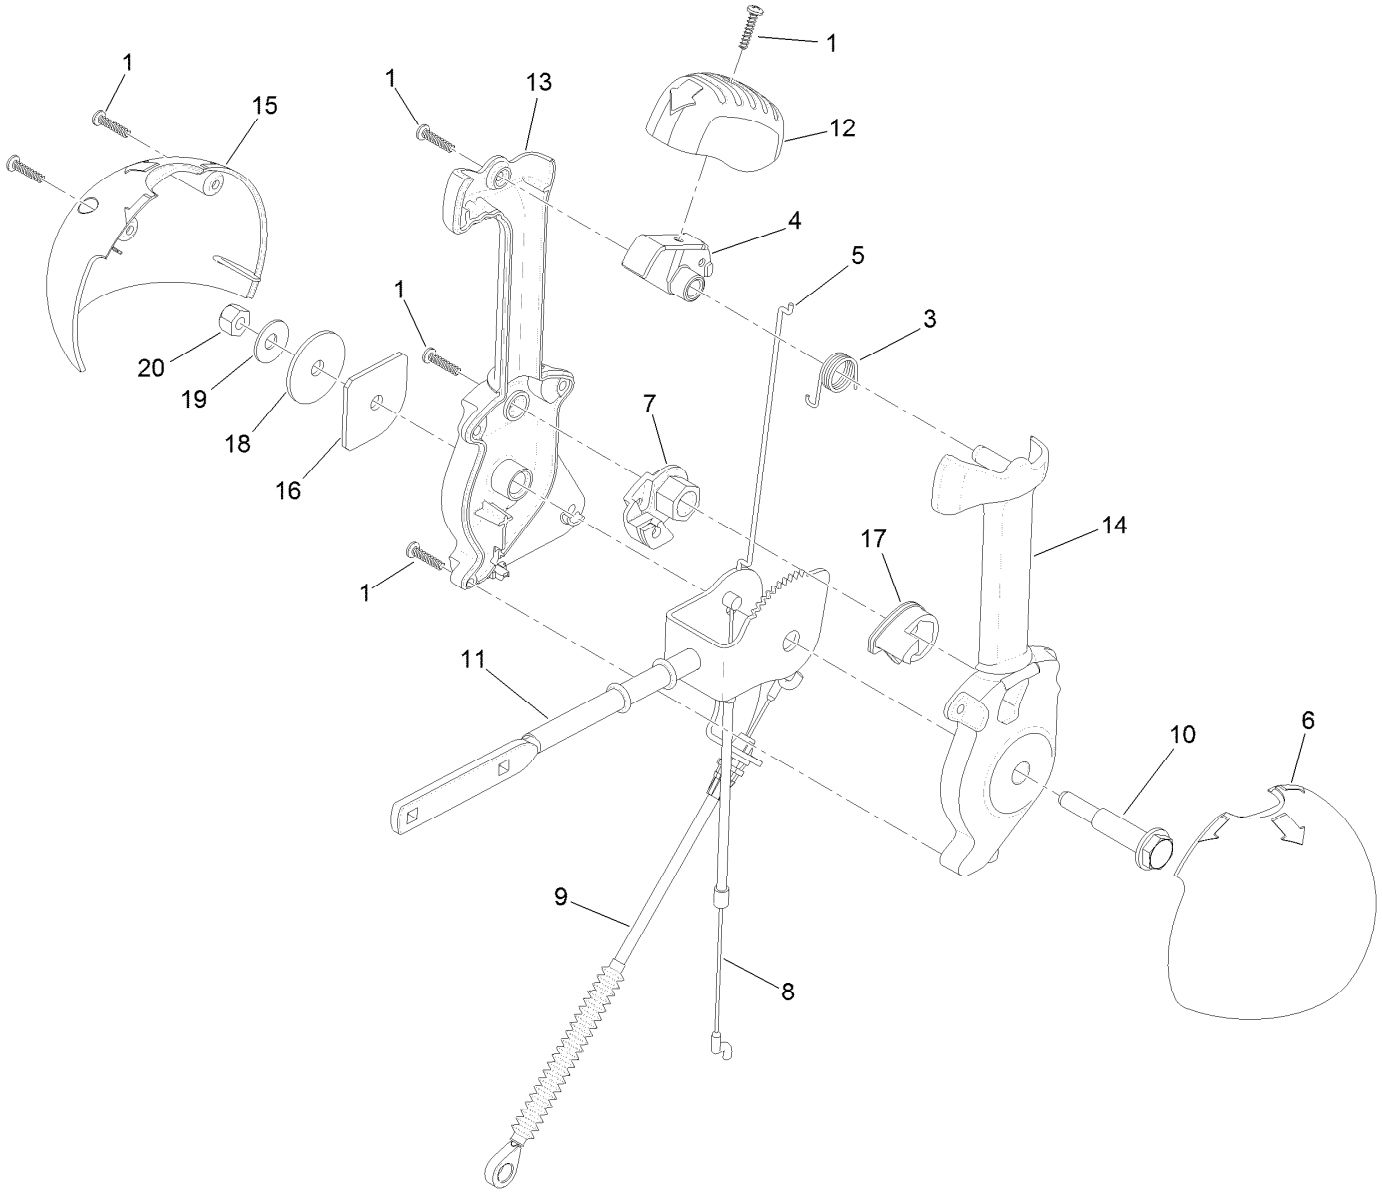


# Lever Chute Control Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 94-4496 | 6 | Screw-PPH |
| 3 | 105-9982 | 1 | Spring-Torsion |
| 4 | 105-9984 | 1 | Trigger-Latch |
| 5 | 105-9985 | 1 | Link-Latch |
| 6 | 105-9986 | 1 | Cover-Chute Lever, LH |
| 7 | 105-9988 | 1 | Lever-Cable, Deflector |
| 8 | 125-1113 | 1 | Cable-Release, Chute |
| 9 | 105-9990 | 1 | Cable-Control, Deflector |
| 10 | 105-9995 | 1 | Screw-Shoulder |
| 11 | 106-4479 | 1 | Rod-Control, Chute |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 106-7280 | 1 | Cap-Lever |
| 13 | 106-7281 | 1 | Lever-Chute Control, RH |
| 14 | 106-7282 | 1 | Lever-Chute Control, LH |
| 15 | 106-7292 | 1 | Cover-Chute Lever, RH |
| 16 | 106-7295 | 1 | Plate-Friction |
| 17 | 106-7310 | 1 | Pawl-Latch |
| 18 | 107-3002 | 1 | Washer-Nylon |
| 19 | 3290-456 | 1 | Washer-Belleville |
| 20 | 3296-29 | 1 | Nut-Lock, NI |

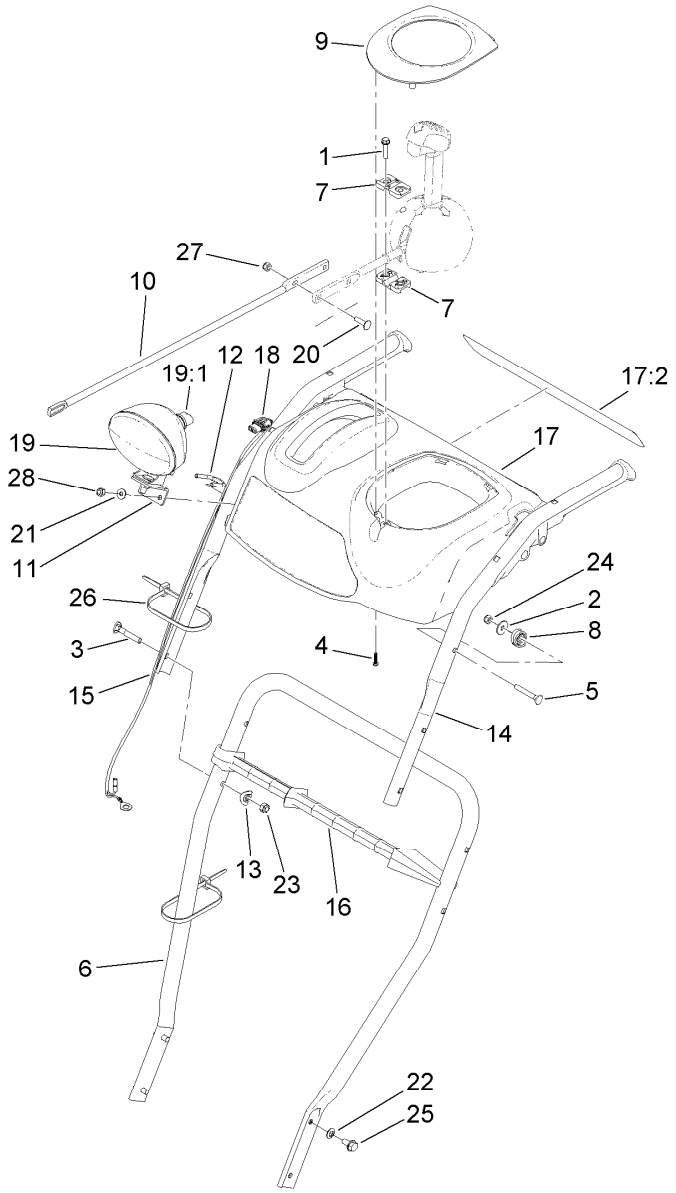


# Lower Handle and Headlamp Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 46-8092 | 2 | Screw-Plastite |
| 2 | 87-6630 | 2 | Washer-Plain |
| 3 | 92-2260 | 4 | Screw-Handle |
| 4 | 94-4496 | 2 | Screw-PPH |
| 5 | 95-4453 | 2 | Screw |
| 6 | 105-9981-03 | 1 | Handle-Lower |
| 7 | 105-9987 | 2 | Support-Rod |
| 8 | 106-4509 | 2 | Clamp-Cable |
| 9 | 106-4586 | 1 | Cover-Panel, Control |
| 10 | 106-7283 | 1 | Rod-Chute, Front |
| 11 | 107-1020-03 | 1 | Bracket-Light |
| 12 | 107-3024 | 1 | Clamp |
| 13 | 107-3844 | 4 | Washer |
| 14 | 108-0037-03 | 1 | Handle-Upper, LH |
| 15 | 108-0038-03 | 1 | Handle-Upper, RH |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16 | 110-3408 | 1 | Stick-Cleanout |
| 17 | 112-6633 | 1 | Panel-Control |
| 17:2 | 112-6627 | 1 | Decal-Back, Control Panel |
| 18 | 106-4511 | 1 | Harness-Wire |
| 19 | 106-4510 | 1 | Headlamp ASM |
| 19:1 | 108-0008 | 1 | Lamp-12 Volt |
| 20 | 3229-30 | 2 | Screw-CARR |
| 21 | 3256-1 | 2 | Washer-Flat |
| 22 | 3290-475 | 4 | Washer-Belleville |
| 23 | 3296-72 | 4 | Nut-Lock, NI |
| 24 | 3296-73 | 2 | Nut-Lock, NI |
| 25 | 32144-14 | 4 | Screw-HWHTF |
| 26 | 614249 | 2 | Tie-Cable |
| 27 | 3296-73 | 2 | Nut-Lock, NI |
| 28 | 3296-73 | 2 | Nut-Lock, NI |

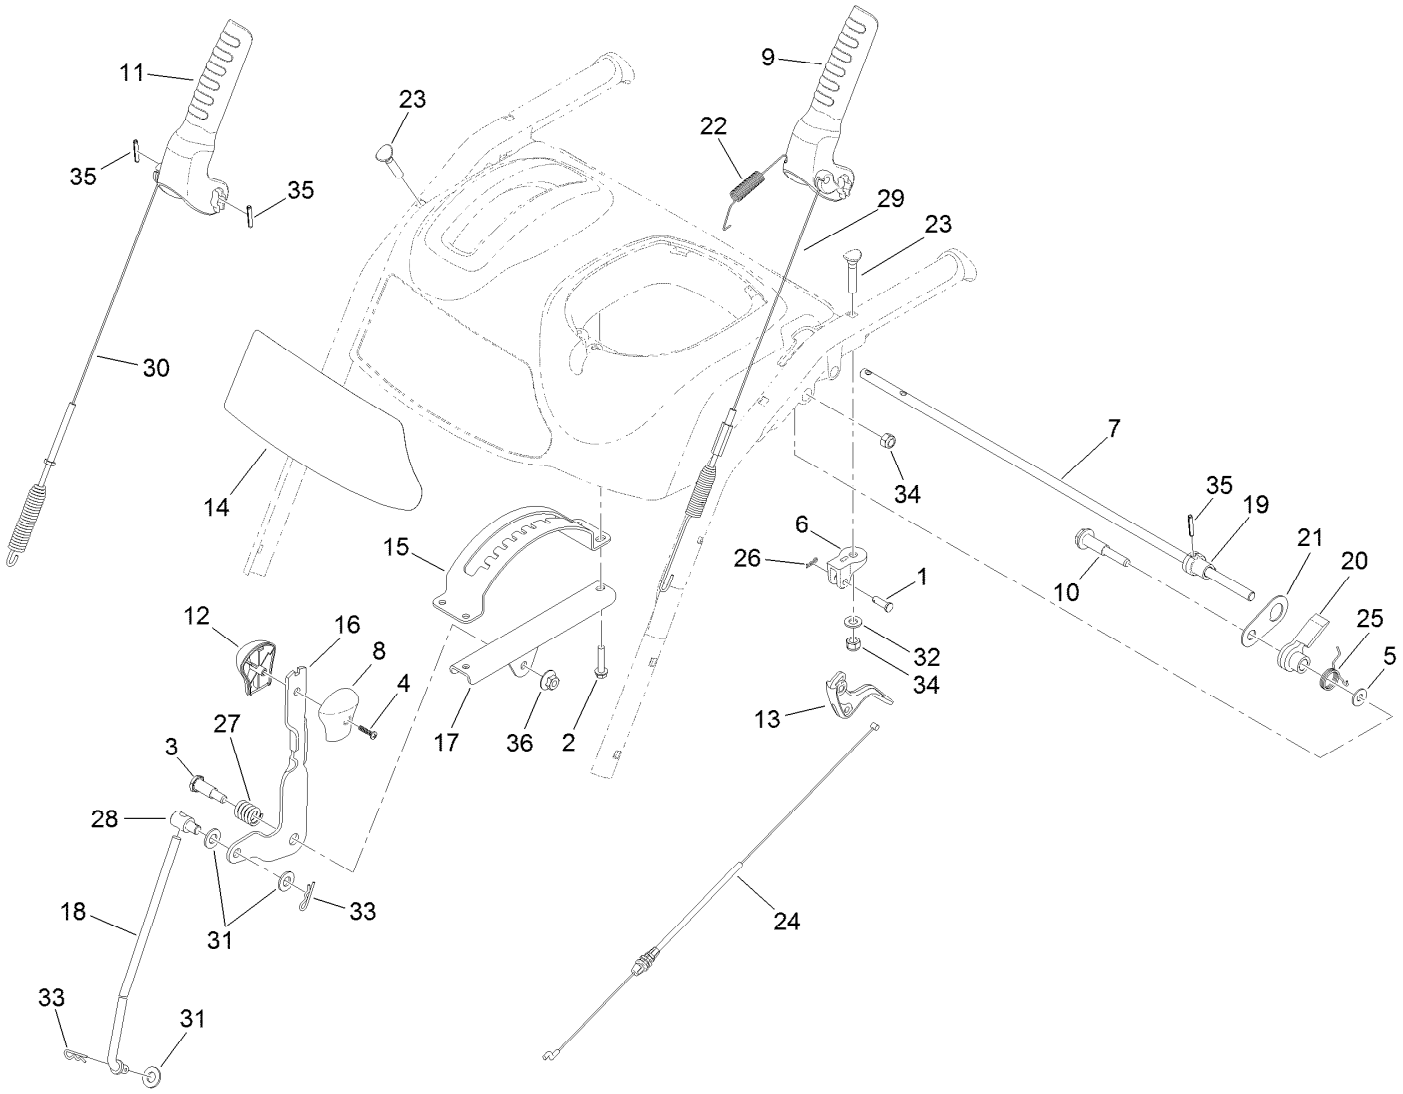


# Handle and Control Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-808265 | 2 | Pin-Clevis |
| 2 | 46-8092 | 4 | Screw-Plastite |
| 3 | 63-2650 | 1 | Screw-Shoulder |
| 4 | 94-4496 | 1 | Screw-PPH |
| 5 | 98-3499 | 1 | Washer-Flat |
| 6 | 105-9980 | 2 | Mount-Clutch, Lever |
| 7 | 105-9996 | 1 | Rod-Lockout |
| 8 | 105-9999 | 1 | Knob-Shift, LH |
| 9 | 106-4410 | 1 | Lever-Traction |
| 10 | 106-4412 | 1 | Screw-Shoulder |
| 11 | 106-4413 | 1 | Lever-Auger |
| 12 | 106-4423 | 1 | Knob-Shift, RH |
| 13 | 106-4505 | 2 | Lever-Clutch |
| 14 | 121-6645 | 1 | Decal-Control Panel |
| 15 | 106-7277-03 | 1 | Guide-Selector, Speed |
| 16 | 106-7278-03 | 1 | Selector-Speed |
| 17 | 106-7279-03 | 1 | Mount-Selector, Speed |
| 18 | 107-1005 | 1 | Rod-Shift |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 107-1043 | 1 | Cam-Lockout |
| 20 | 108-0023 | 1 | Latch-Lockout |
| 21 | 107-3000 | 1 | Link-Lockout |
| 22 | 107-3001 | 1 | Spring-Tension |
| 23 | 107-3018 | 4 | Screw-Handle |
| 24 | 107-8896 | 2 | Cable-Clutch |
| 25 | 108-0024 | 1 | Spring-Torsion |
| 26 | 108-2992 | 2 | Pin-Hair |
| 27 | 108-7313 | 1 | Spring-Compression |
| 28 | 110-3446 | 1 | Trunnion-Rod |
| 29 | 120-0132 | 1 | Cable-Traction |
| 30 | 115-5685 | 1 | Cable-Auger |
| 31 | 3256-24 | 3 | Washer-Flat |
| 32 | 3256-70 | 4 | Washer-Flat |
| 33 | 3290-307 | 2 | Pin-Hair |
| 34 | 3296-72 | 5 | Nut-Lock, NI |
| 35 | 32121-125 | 3 | Pin-Spring |
| 36 | 32128-13 | 1 | Nut-HHF |

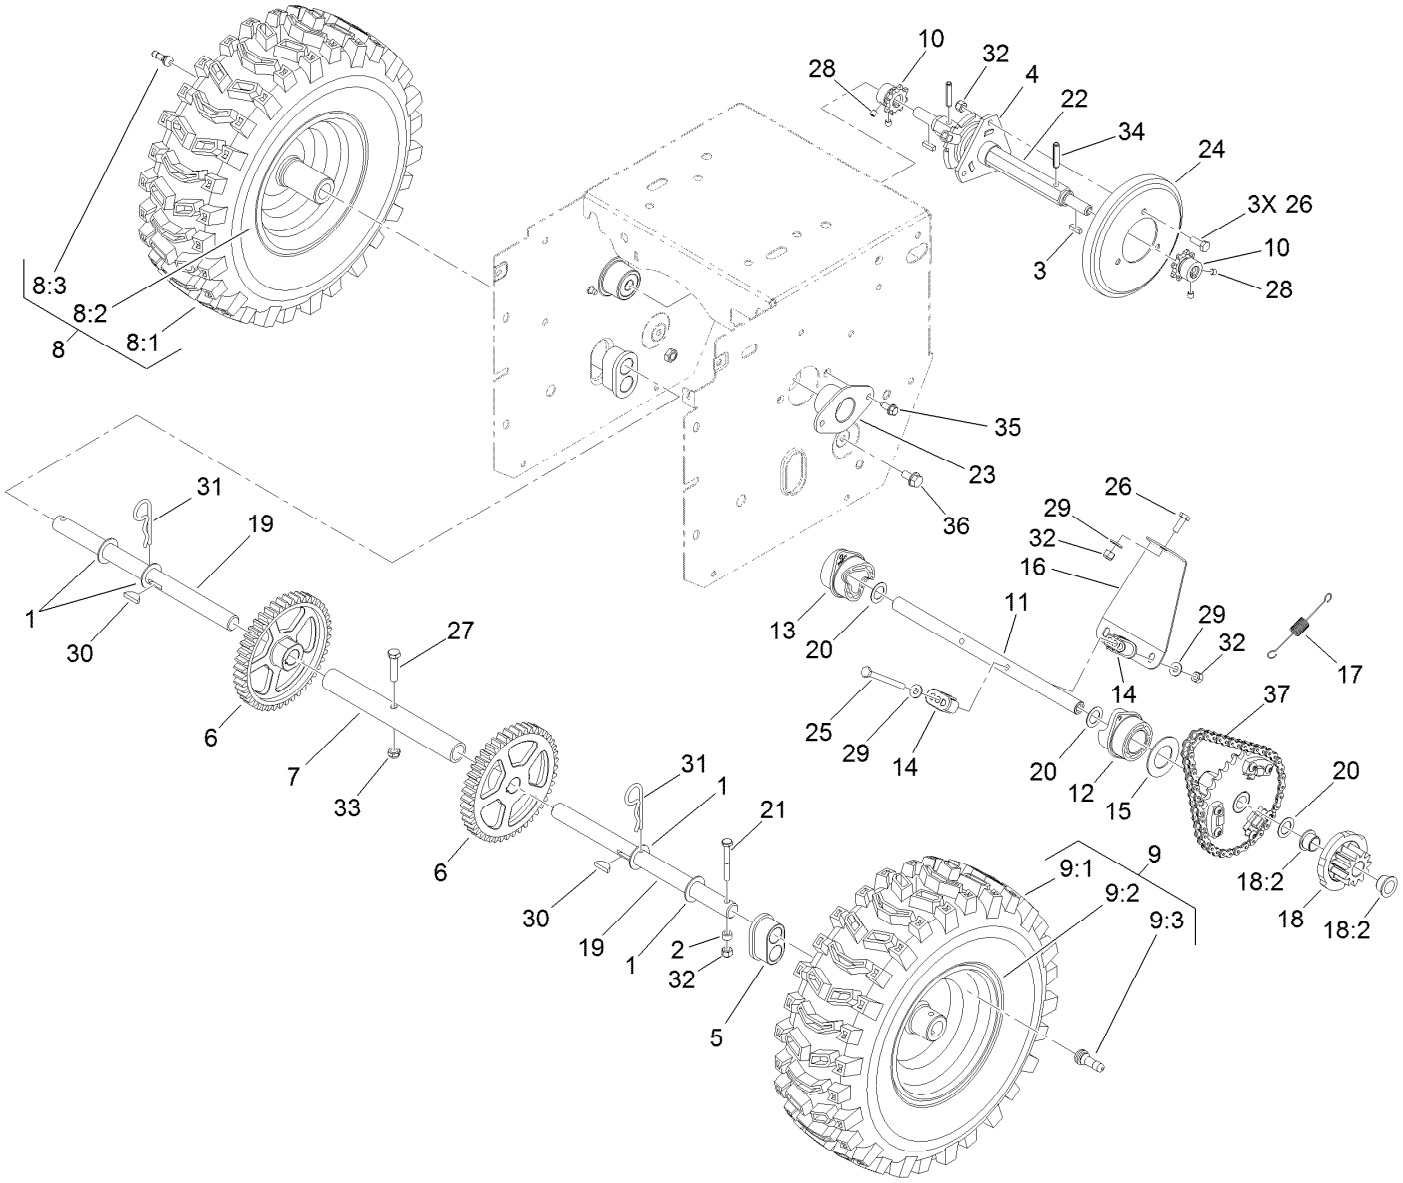



# Wheel Clutch Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 3-8664 | 4 | Washer-Thrust |
| 2 | 55-9370 | 2 | Spacer-Blade, Rotor |
| 3 | 94-8850 | 2 | Key-Square |
| 4 | 106-4434 | 1 | Trunnion-Hex |
| 5 | 106-4558 | 2 | Bearing-Axle |
| 6 | 106-4572 | 2 | Gear-Axle, 44 Tooth |
| 7 | 106-7259 | 1 | Tube-Axle |
| 8 | | 1 | RH Wheel And Tire ASM ● |
| 8:1 | 121-6610 | 1 | Rim-Tire |
| 8:2 | 121-6611 | 1 | Tire |
| 8:3 | 232-27 | 1 | Stem-Valve |
| 9 | | 1 | LH Wheel And Tire ASM ● |
| 9:1 | 121-6610 | 1 | Rim-Tire |
| 9:2 | 121-6611 | 1 | Tire |
| 9:3 | 232-27 | 1 | Stem-Valve |
| 10 | 106-7317 | 2 | Sprocket-8 Tooth |
| 11 | 107-8883 | 1 | Shaft-Intermediate |
| 12 | 107-8887 | 1 | Collar-Shift, LH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 107-8888 | 1 | Collar-Shift, RH |
| 14 | 107-8889 | 4 | Guide-Collar |
| 15 | 107-8891 | 2 | Washer-Thrust |
| 16 | 107-8892-03 | 1 | Brace-Collar, Shift |
| 17 | 107-8893 | 2 | Spring-Extension |
| 18 | 107-8894 | 2 | 11T Gear ASM |
| 18:2 | 108-2973 | 2 | Bushing-Flange |
| 19 | 107-8898 | 2 | Shaft-Axle |
| 20 | 108-0015 | 4 | Washer-Flat |
| 21 | 108-2975 | 2 | Screw-HH |
| 22 | 108-7314 | 1 | Shaft-Hex |
| 23 | 108-7319 | 2 | Retainer-Bearing |
| 24 | 119-1567 | 1 | Wheel-Friction |
| 25 | 321-23 | 2 | Screw-HH |
| 26 | 321-4 | 4 | Screw-HH |
| 27 | 322-17 | 1 | Screw-HH |
| 28 | 3245-32 | 4 | Screw-HSH |
| 29 | 3256-22 | 5 | Washer-Flat |


● Not serviced separately

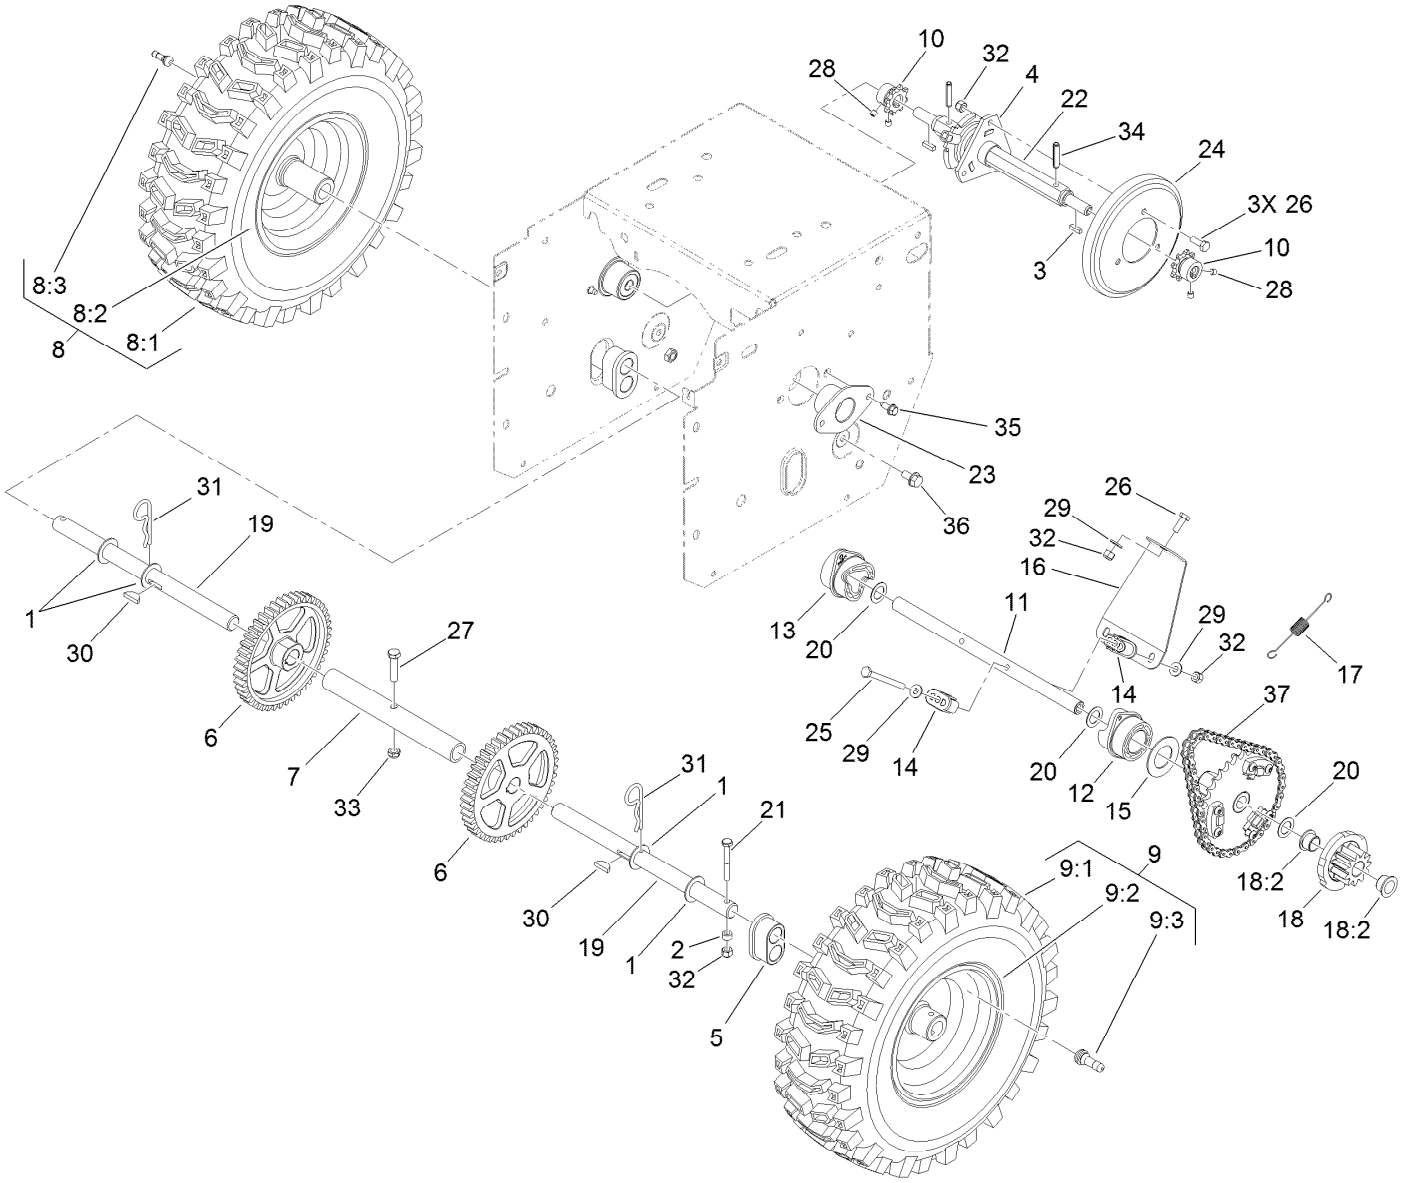


# Wheel Clutch Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 30 | 3257-7 | 2 | Key-Woodruff |
| 31 | 3290-343 | 2 | Pin-Hair |
| 32 | 3296-42 | 8 | Nut-Lock, NI |
| 33 | 3296-47 | 1 | Nut-Lock, NI |
| 34 | 32121-9 | 2 | Pin-Roll, Slotted |
| 35 | 32144-10 | 4 | Screw-HWH |
| 36 | 32144-14 | 2 | Screw-HWHTF |
| 37 | 108-0016 | 2 | Chain-Roller |
| 37 | 2710-6 | 2 | Link-Connecting |

● Not serviced separately

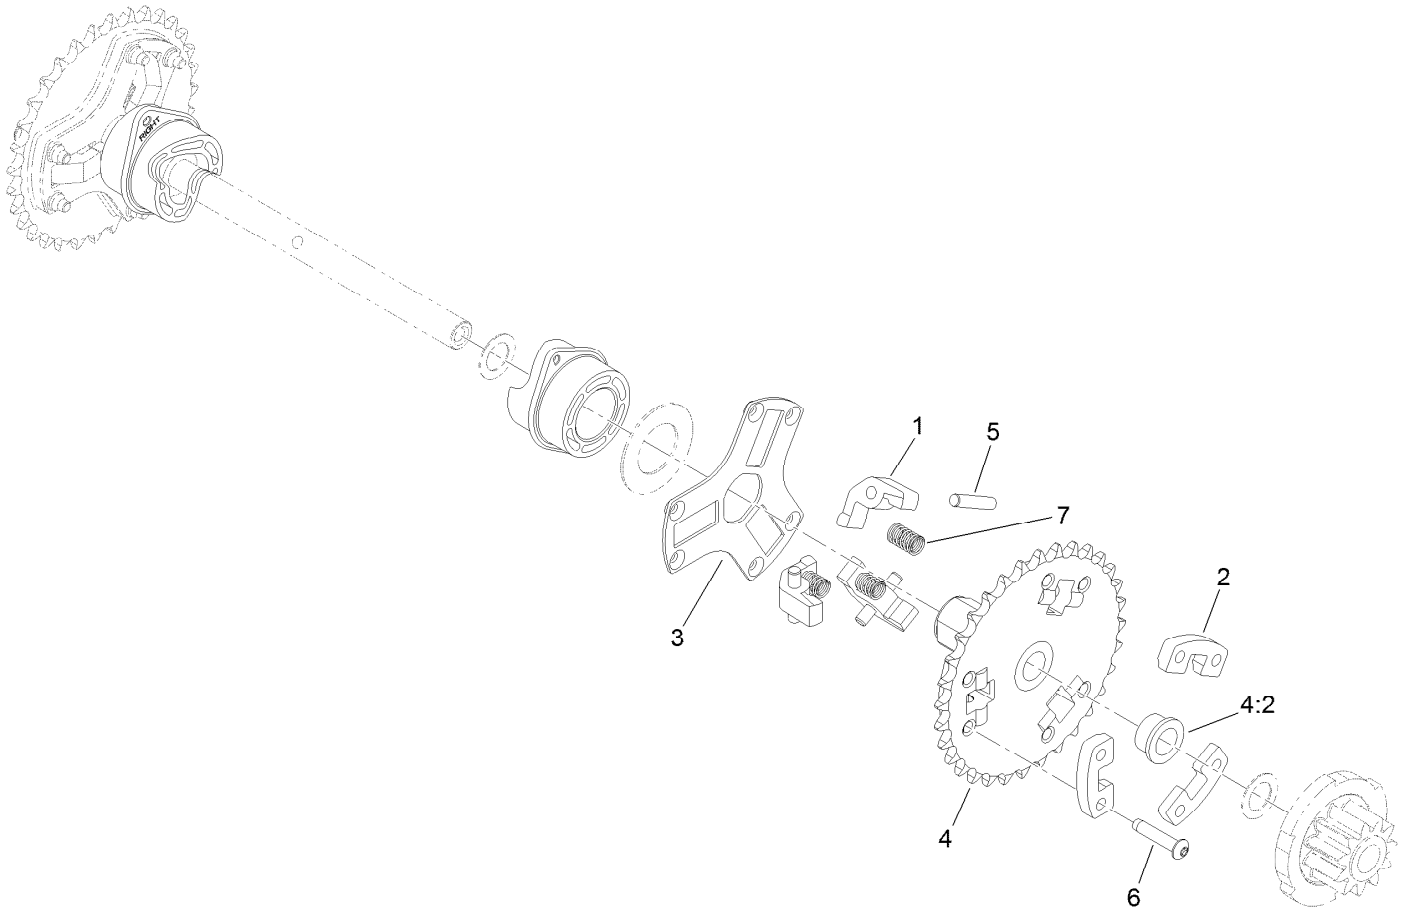


# Wheel Clutch Sprocket Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 107-8879 | 6 | Pawl-Clutch |
| 2 | 107-8880 | 6 | Support-Pawl |
| 3 | 107-8886 | 2 | Retainer-Pin, Pawl |
| 4 | 107-8895 | 2 | 32T Sprocket ASM |
| 4:2 | 108-2973 | 2 | Bushing-Flange |
| 5 | 107-8899 | 6 | Pin-Dowel |
| 6 | 108-0035 | 12 | Screw-Torx Button Head |
| 7 | 107-8885 | 6 | Spring-Compression |

# Attachments and Accessories

## For 38828 Power Max Heavy Duty 1128 OXE Snowthrower

| Product Name | Model/Part |
|---|---|
| Snow Cab | 107-3814 |
| Weight Kit | 107-3815 |
| 28 Inch Drift Breaker | 107-3817 |
| Non-Marking Skid Kit | 38211 |
| Tire Chain Kit, Snowthrowers with 16in (4.80-8) Tires | 38215 |
| Toro 2-Stage Cover | 490-7466 |
| Plain 2-Stage Cover | 490-7467 |




**Count on it.**