Form No. 3379-183 Rev A

TORO®

Count on it.

Parts Catalog

21in Heavy-Duty Recycler®/Rear Bagger Lawn Mower

Model No. 22297—Serial No. 314000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3379-183 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Housing Assembly 4
Grass Bag Assembly 6
Engine Assembly 8
Fuel Tank Assembly 10
Height-of-Cut and Wheel Assembly 12
Transmission Assembly 14
Transmission Assembly No. 125-1090 16
Handle Assembly 18
Attachments and Accessories 20

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Housing Assembly

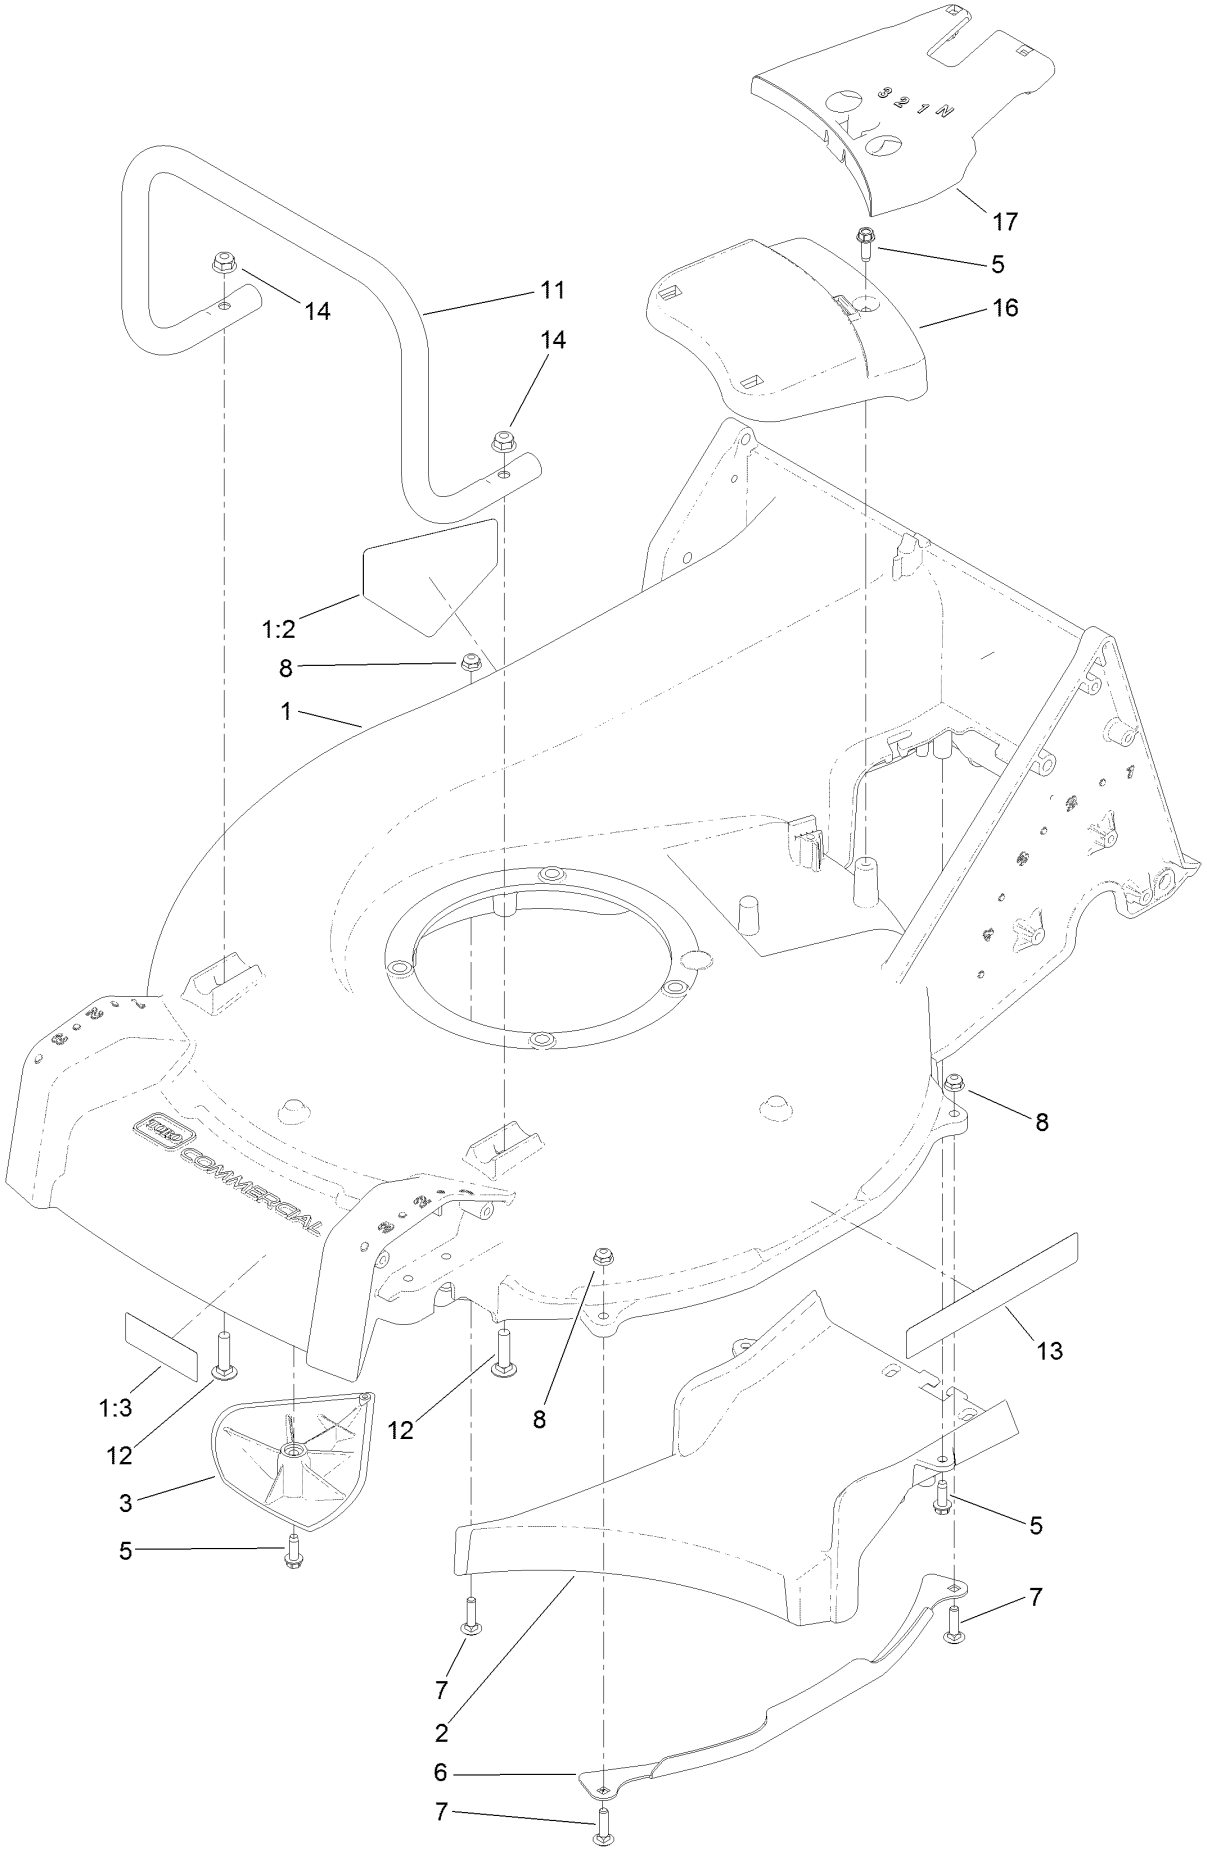

Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-8400	1	Housing ASM
1:2	94-8072	1	Decal-Danger
1:3	68-7410	1	Decal-Blade
2	125-1002-01	1	Floor-Chute
3	125-5041	2	Kicker
5	49-2040	5	Screw-HWHTF
6	125-1047-03	2	Guard-Side, Deck
7	3229-2	4	Screw-CARR
8	104-7201	4	Nut-HF
11	125-1003-03	1	Guard-Engine
12	3230-3	2	Screw-CARR
13	119-2368	2	Decal-Recycler
14	104-8300	2	Nut-Flange, NI
16	125-5038	1	Cover-Belt, Front
17	125-5039	1	Cover-Belt, Rear


Grass Bag Assembly

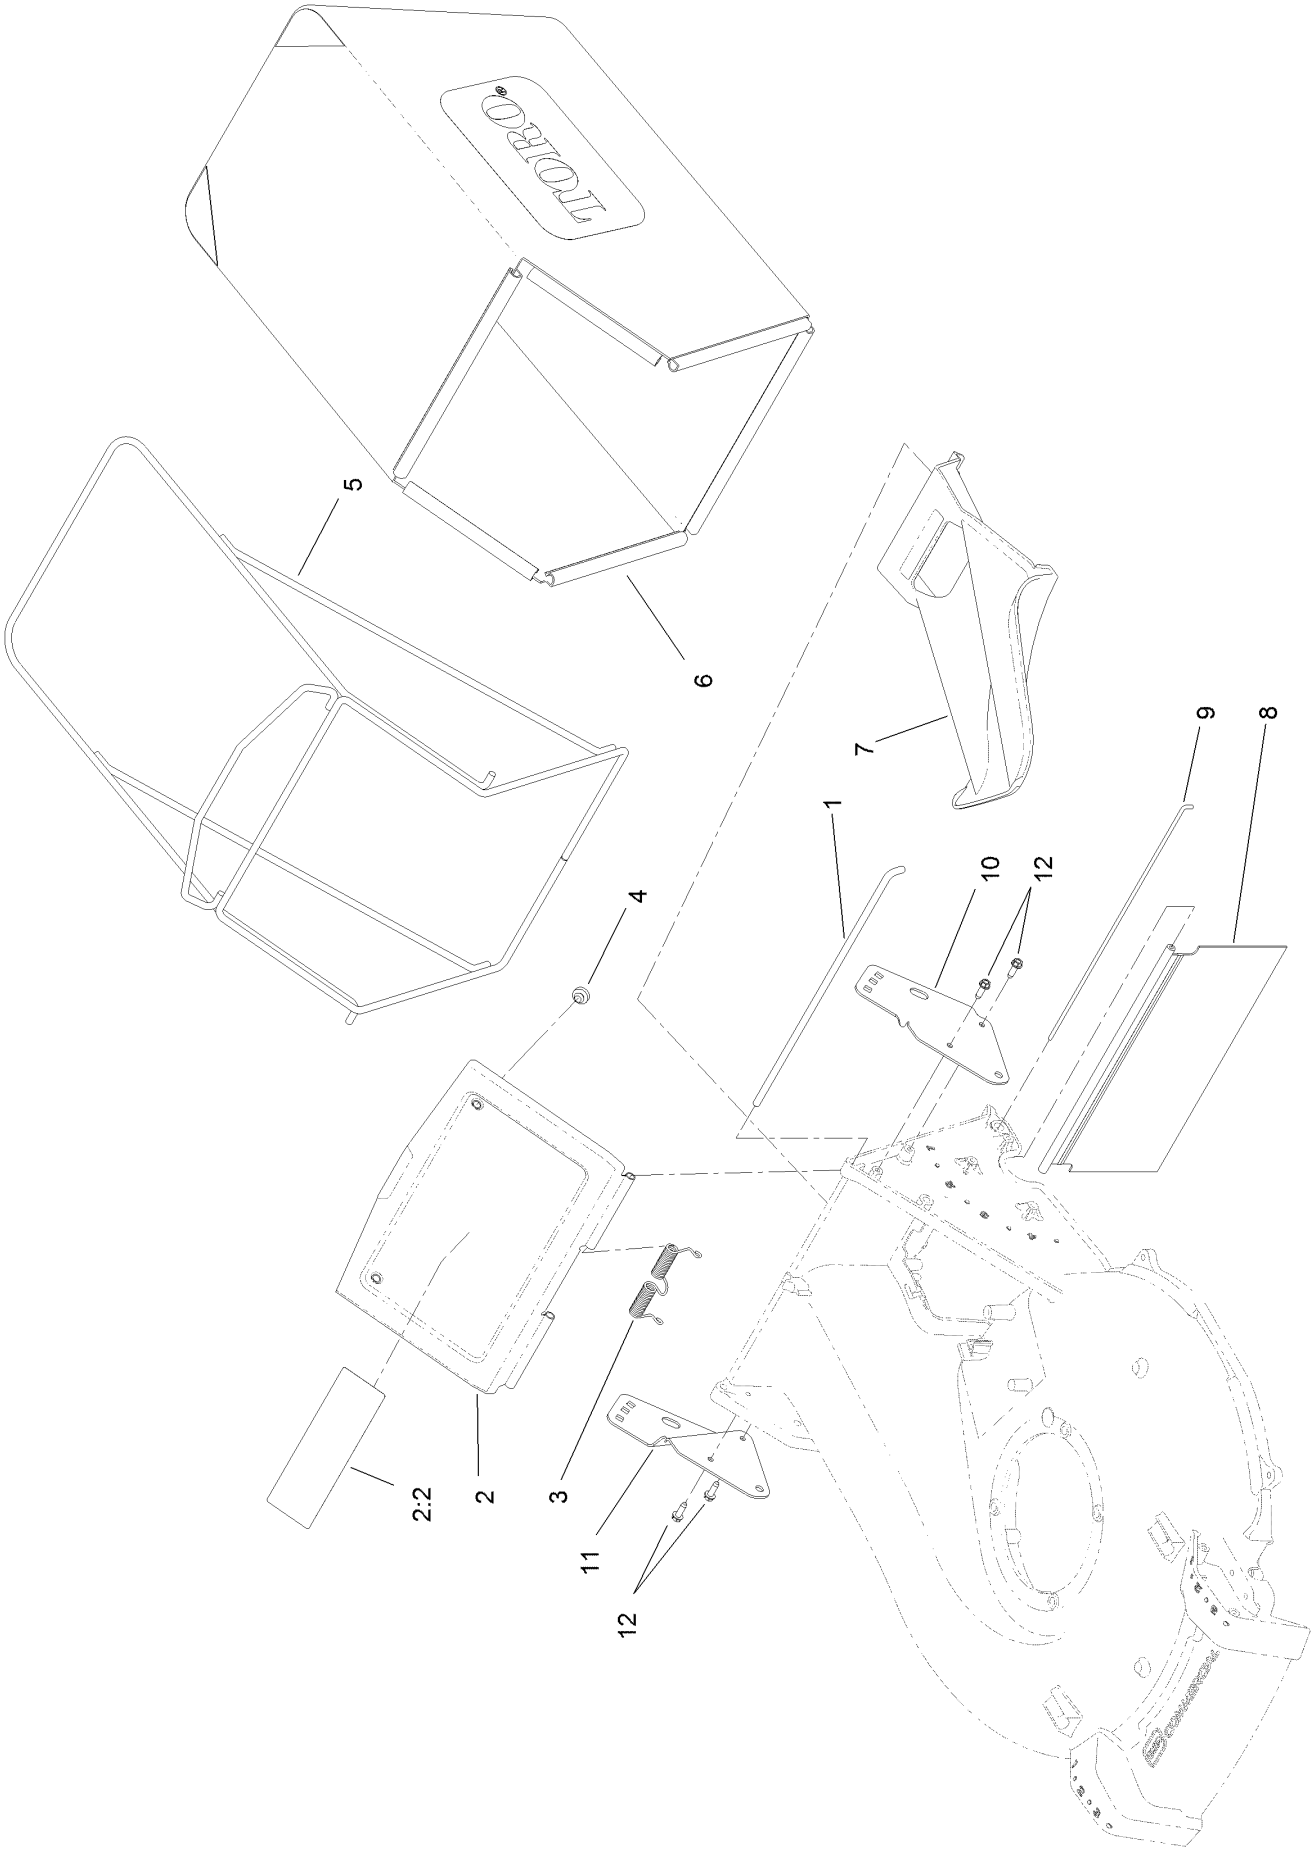

Grass Bag Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-1017	1	Rod-Door, Bag
2	125-8402	1	Bag Door ASM
2:2	116-7583	1	Decal-Warning
3	125-1019	1	Spring-Torsion
4	1-513658	2	Bumper
5	121-1399-03	1	Frame-Bag
6	125-1030	1	Bag-Grass
7	125-1008	1	Plug-Mulch
8	125-1007	1	Shield-Trailing
9	125-8413	1	Rod-Shield, Trailing
10	125-1013-03	1	Bracket-Mount, LH Handle
11	125-1014-03	1	Bracket-Mount, RH Handle
12	49-2040	4	Screw-HWHTF


Engine Assembly

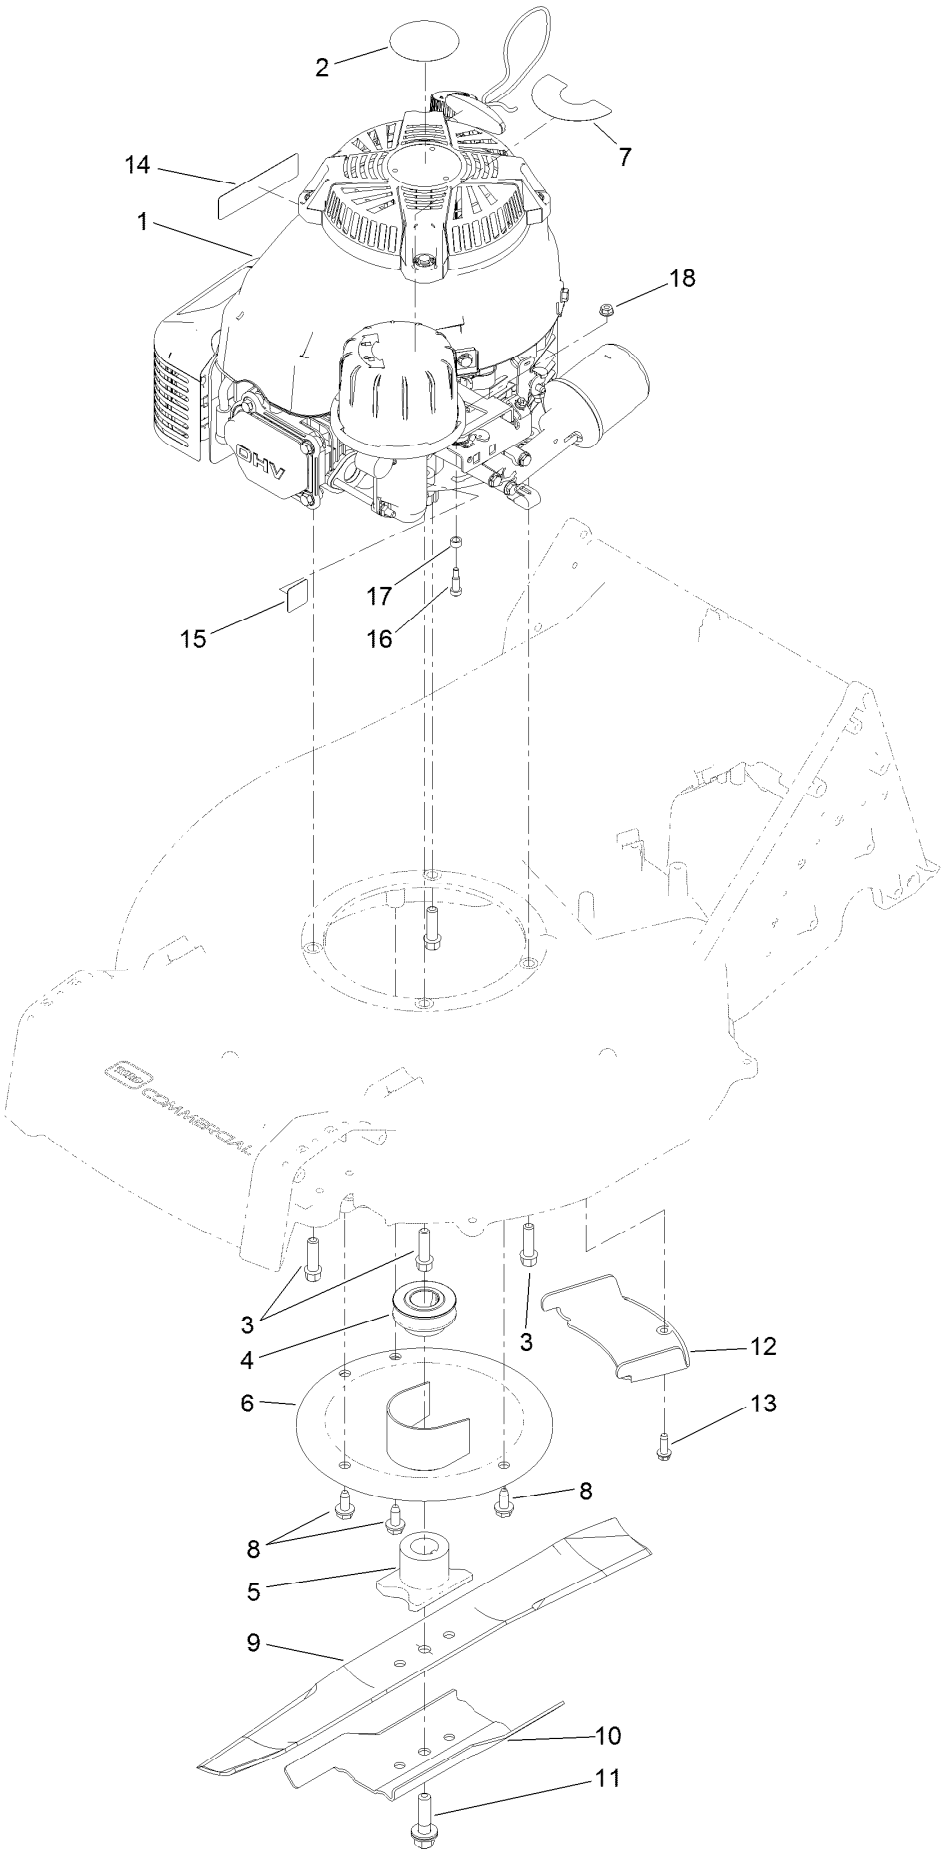

Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-1406	1	Engine-Kawasaki, Fj180V
2	110-0520	1	Decal
3	95-1727	4	Screw-Taptite
4	125-8396	1	Pulley-Driver
5	125-1004	1	Driver-Blade
6	125-8370	1	Protector-Crankshaft
7	114-3415	1	Decal
8	32144-70	3	Screw-HWHTF
9	108-3762-03	1	Blade-Recycling
10	125-1069-03	1	Accelerator-Blade
11	125-2466	1	Bolt-Blade
12	125-1024	1	Cover-Belt
13	49-2040	1	Screw-HWHTF
14	117-2718	1	Decal-Arrester, Spark
15	125-8403	1	Decal-Primer
16	125-8434	1	Screw-Shoulder
17	120-6564	1	Spacer
18	32128-17	1	Nut-Lock, Flange


Fuel Tank Assembly

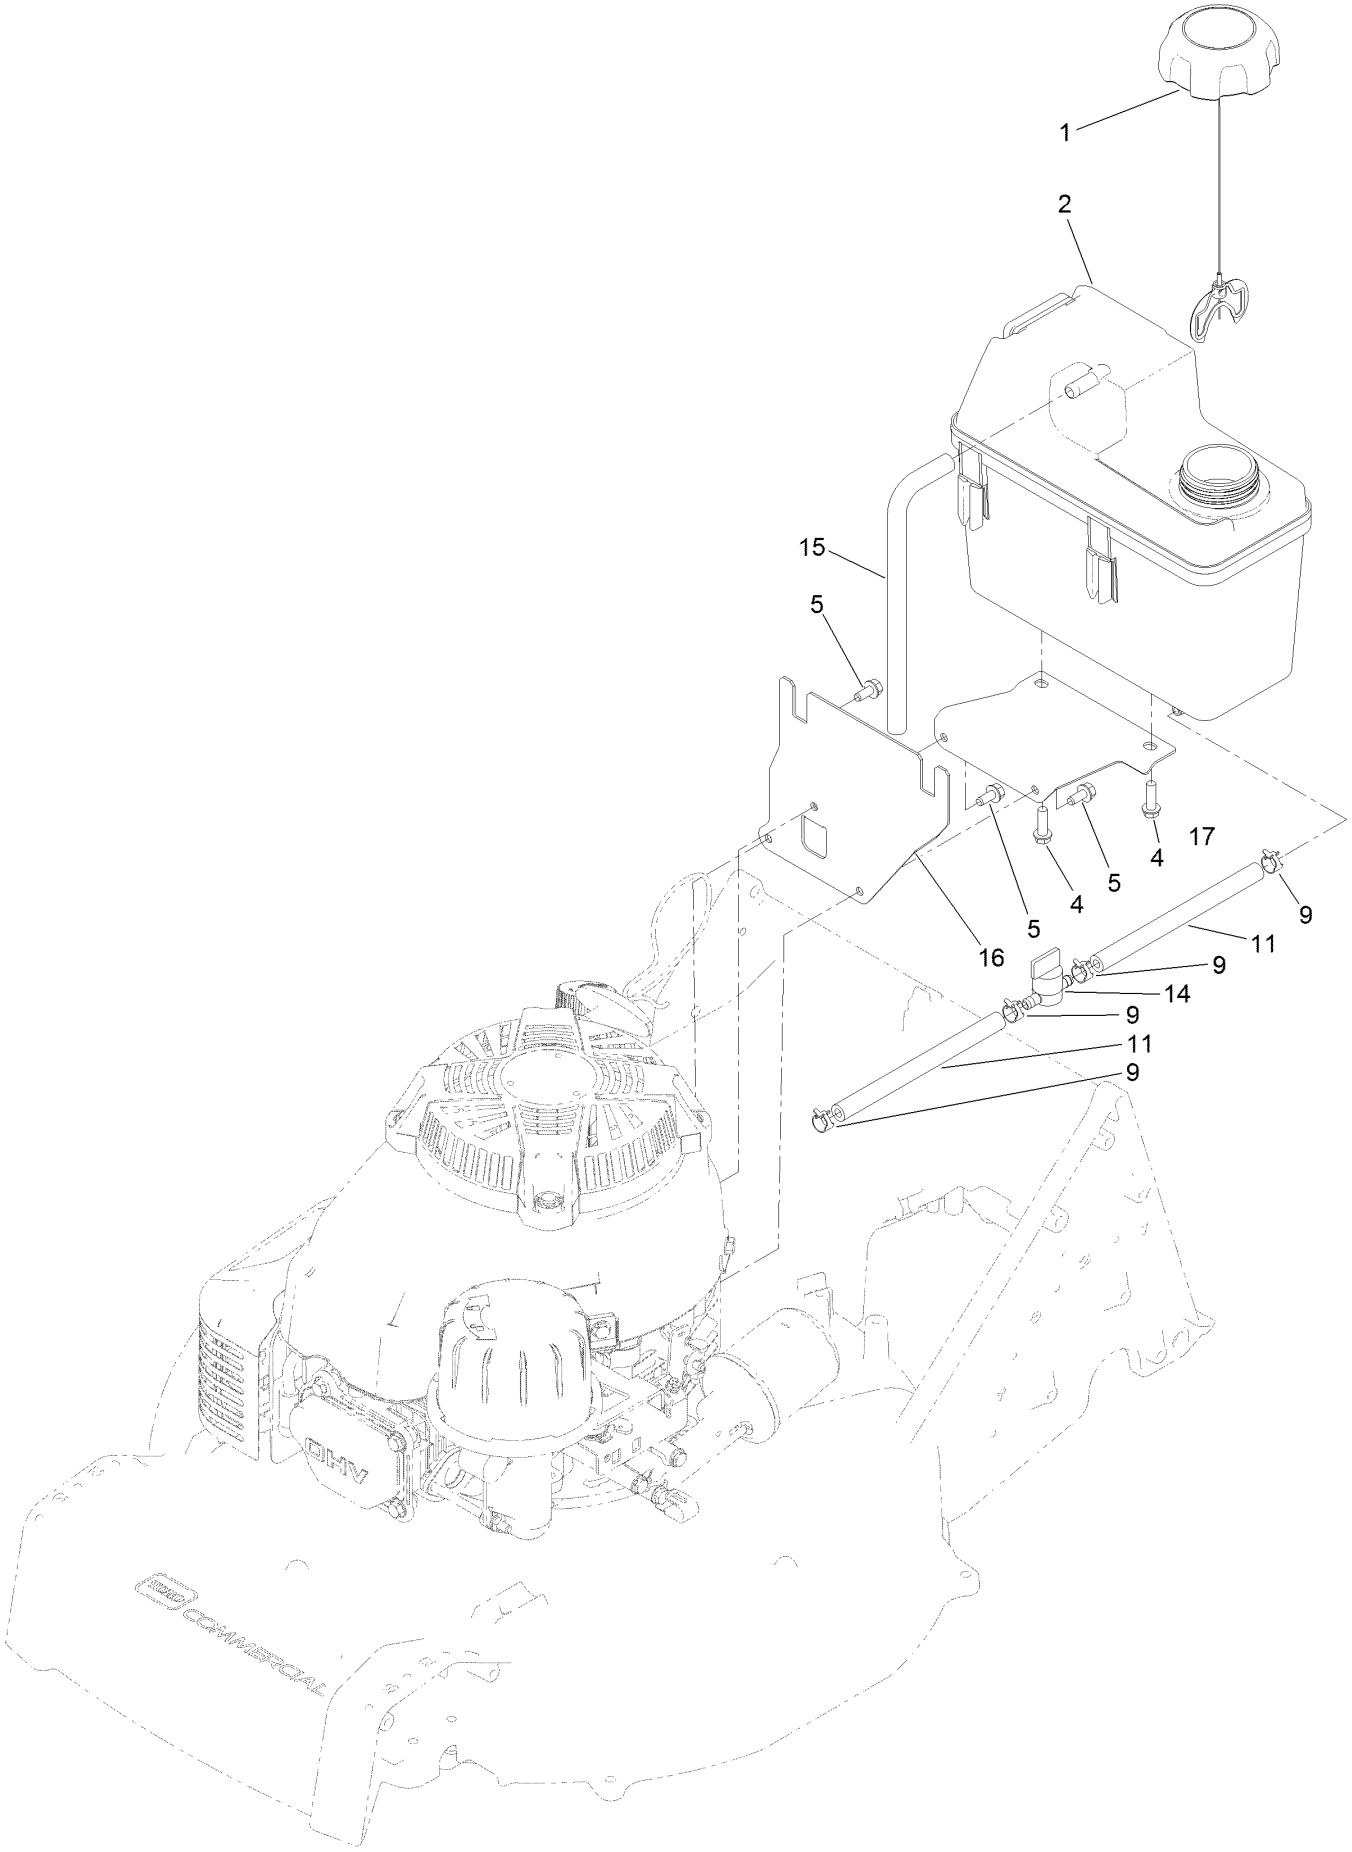

Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-6776	1	Cap-Ratchet, Tethered
2	114-0280	1	Tank-Fuel
4	46-8091	2	Screw-HWH
5	125-8383	3	Screw-HWH
9	2412-98	4	Clamp-Hose
11	107-0588	2	Hose-Fuel
14	1-603770	1	Valve-Fuel
15	115-0962	1	Hose-Vent, Canister
16	125-8381-03	1	Bracket-Tank, Mounting
17	125-8382-03	1	Bracket-Tank, Support


Height-of-Cut and Wheel Assembly

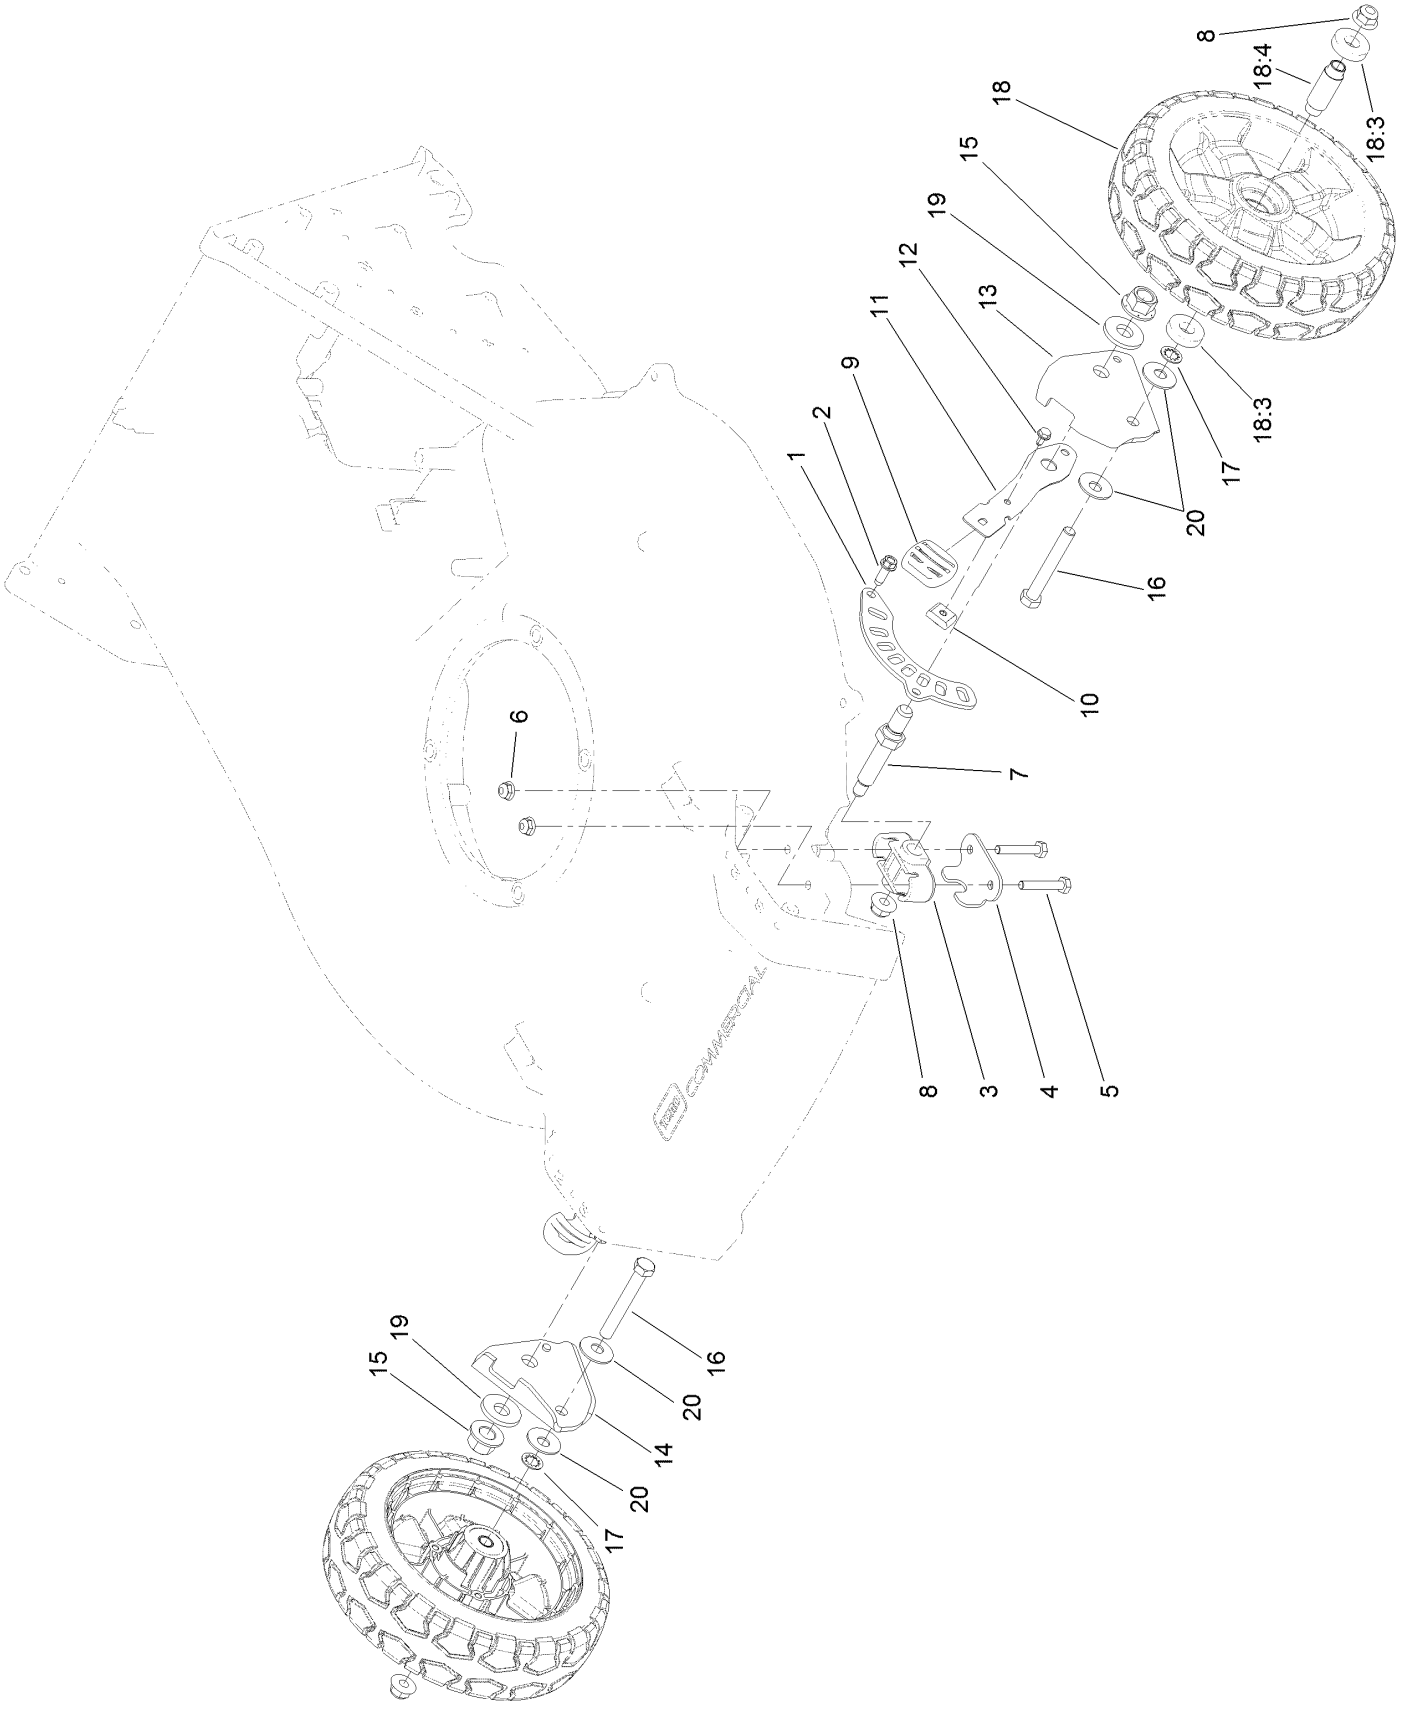

Height-of-Cut and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-1439	2	Plate-HOC, Front
2	49-2040	4	Screw-HWHTF
3	121-1427	2	Bushing-Axle, Front HOC
4	121-1442	2	Retainer-Bushing, Front Axle
5	321-9	4	Screw-HH
6	104-7201	4	Nut-HF
7	121-1428	2	Axle-Wheel
8	104-8301	4	Nut-Flange, NI
9	125-1093	2	Knob-Lever, HOC
10	121-1432	2	Key-Arm, Spring
11	121-1431	2	Arm-Spring
12	104-2065	2	Screw-HWH
13	121-1425	1	Arm-Pivot, Front LH
14	121-1426	1	Arm-Pivot, Front RH
15	99-5107	2	Nut-Lock
16	323-13	2	Screw-HH
17	3254-6	2	Washer-Lock, Internal
18	125-1080	2	Wheel
18:3	52-2450	2	Bearing-Wheel
18:4	125-1077	1	Spacer
19	1-513435	2	Washer-Spring
20	3290-461	4	Washer-Spring

Transmission Assembly

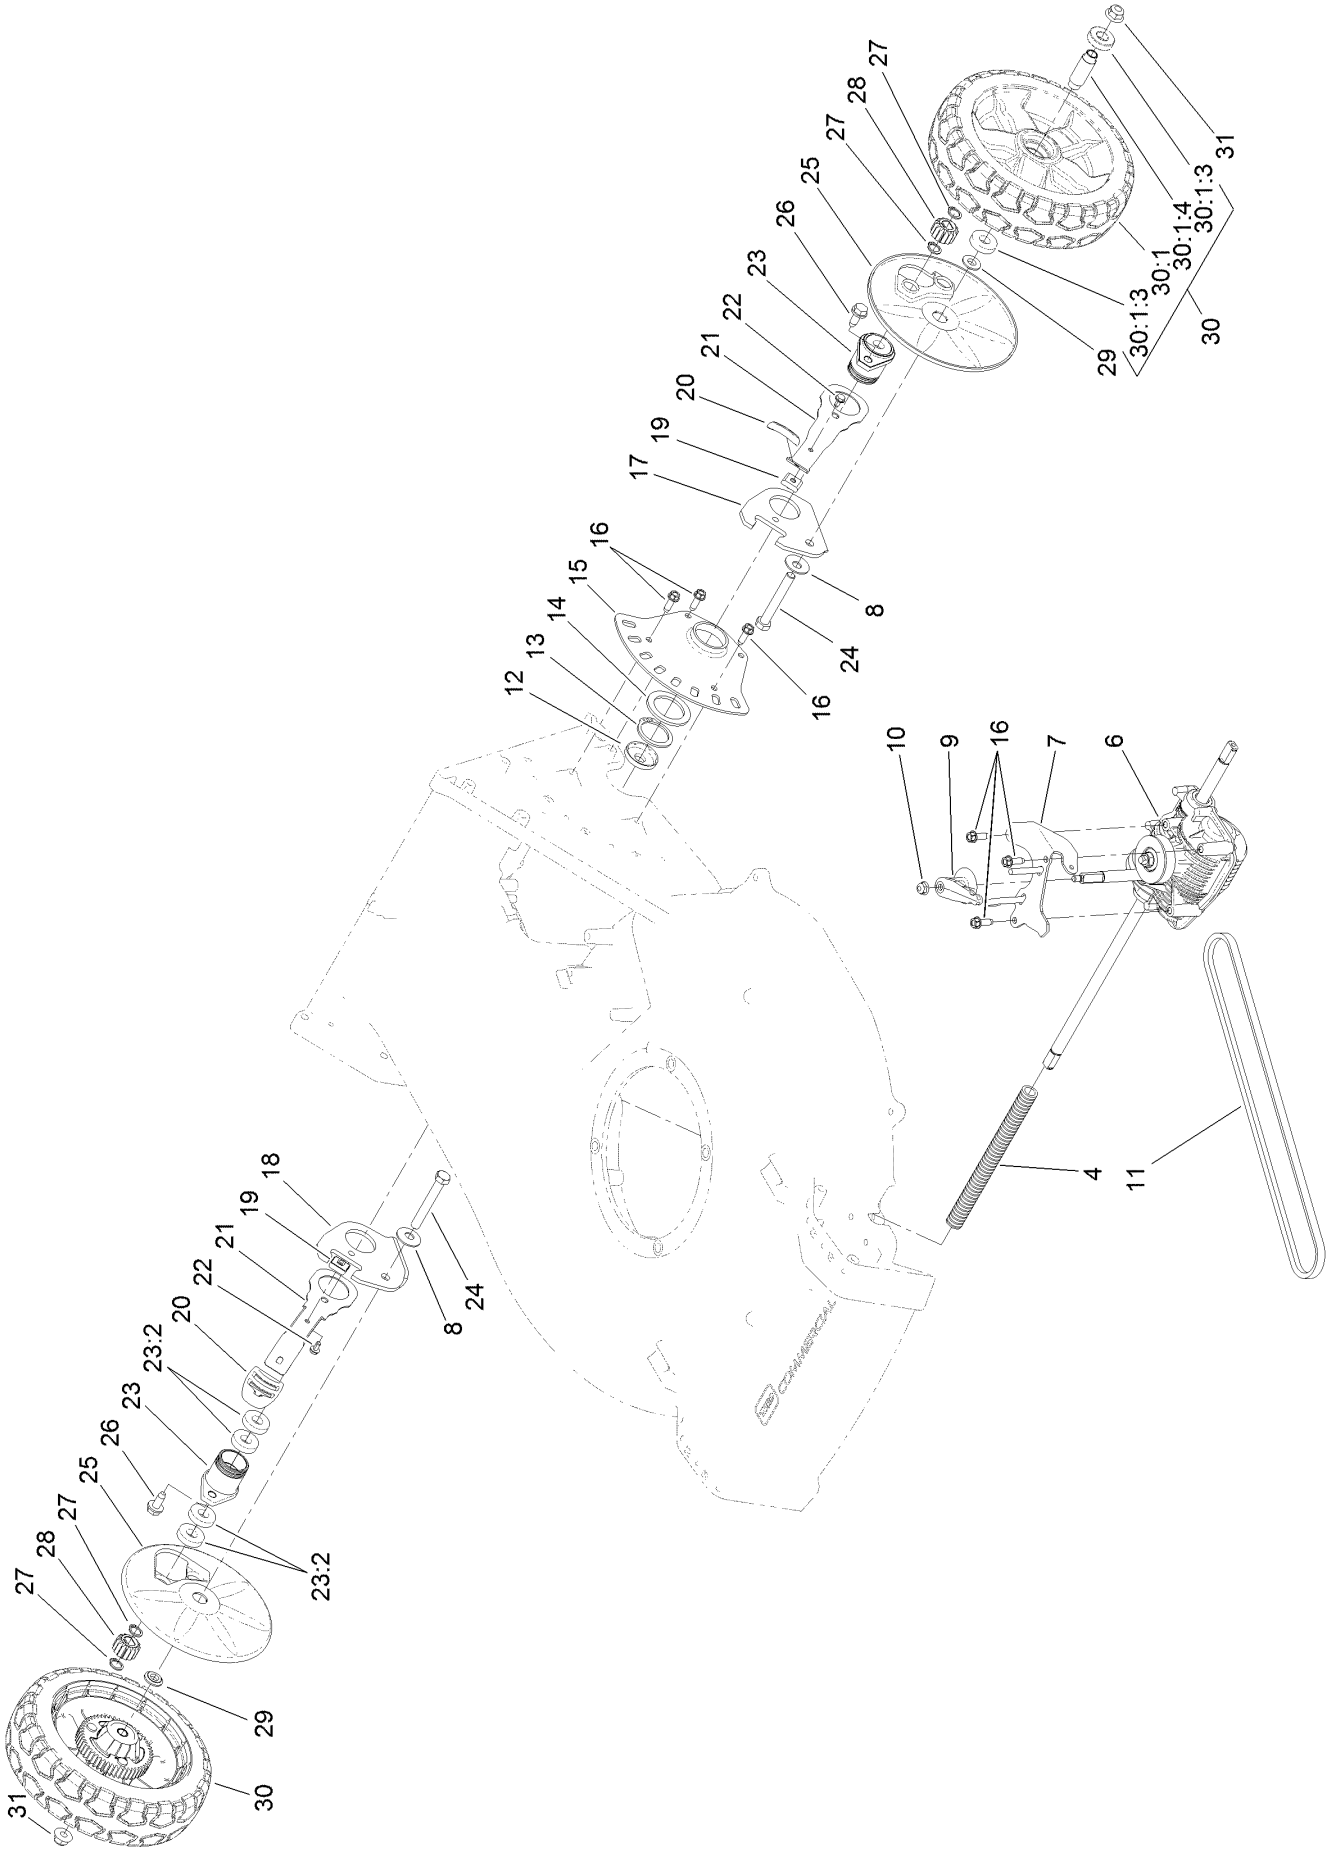


Transmission Assembly (continued)

Ref.	Part Number	Qty.	Description
4	117-5260	1	Cover-Shaft, Drive
6	125-1090	1	Transmission
7	125-5090-03	1	Guide-Belt
8	3290-461	2	Washer-Spring
9	125-5040	1	Lever-Shift
10	104-7201	1	Nut-HF
11	125-1011	1	Belt-V
12	127-6848	2	Cover-Bearing
13	32151-10	2	Ring-Retaining
14	98-1452	2	Washer-Thrust
15	121-1447	2	Plate-HOC, Rear
16	49-2040	9	Screw-HWHTF
17	121-1445	1	Arm-Pivot, Rear LH
18	121-1446	1	Arm-Pivot, Rear RH
19	121-1432	2	Key-Arm, Spring
20	125-1093	2	Knob-Lever, HOC
21	121-1448	2	Arm-Spring, Rear
22	104-2065	2	Screw-HWH
23	121-1424	2	Retainer ASM
23:2	52-2450	4	Bearing-Wheel
24	323-13	2	Screw-HH
25	125-1082	2	Cover-Wheel
26	32144-70	2	Screw-HWHTF
27	32151-61	4	Ring-Retaining
28	110-9417	2	Gear-Pinion, 15T
29	74-1671	2	Spacer-Cover, Wheel
30	125-1081	2	Wheel ASM
30:1		1	Wheel ●
30:1:3	52-2450	2	Bearing-Wheel
30:1:4	125-1077	1	Spacer
31	104-8301	2	Nut-Flange, NI

● Not serviced separately


Transmission Assembly No. 125-1090

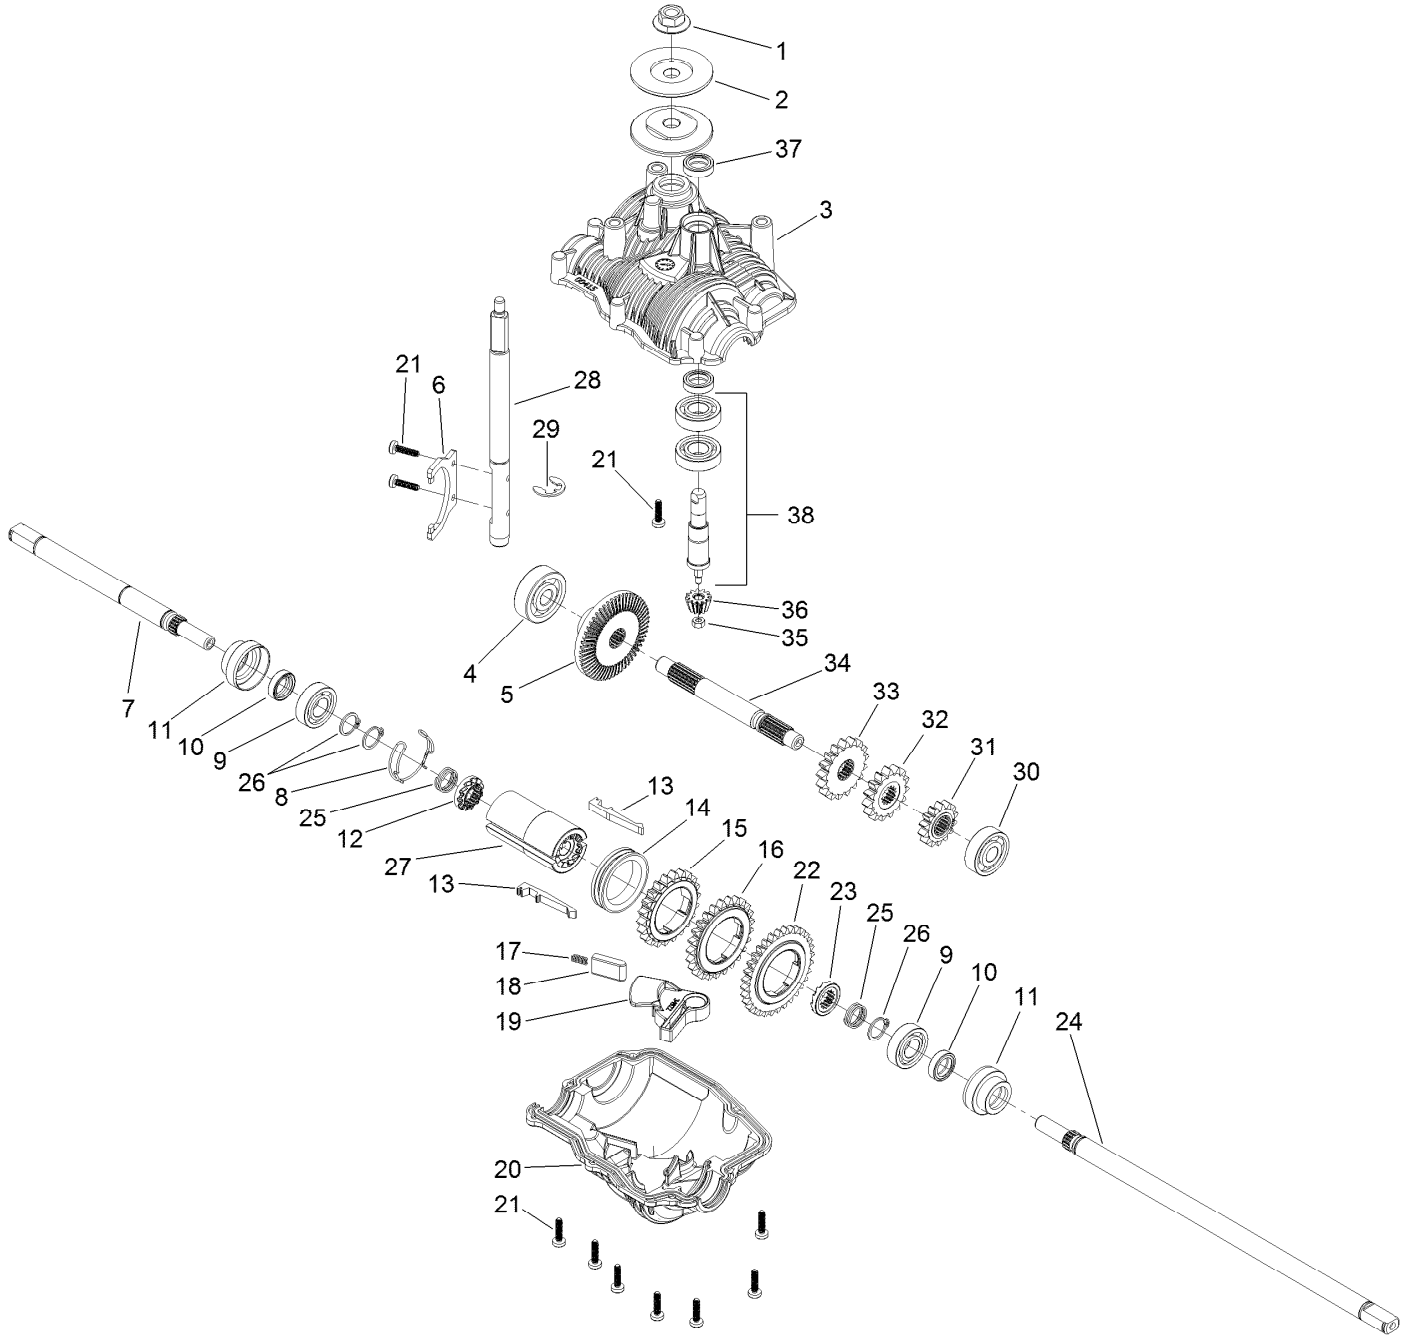

Transmission Assembly No. 125-1090 (continued)

Ref.	Part Number	Qty.	Description
1	130-2301	1	Nut-Flange
2	130-2326	2	Flange-Pulley
3	130-2336	1	Case-Upper, Transmission
4	130-2318	1	Bearing-Ball
5	130-2311	1	Gear-Bevel, 53 Tooth
6	130-2327	1	Fork-Shift
7	130-2308	1	Shaft-Output, Short
8	130-2322	1	Spring-Retaining
9	130-2320	2	Bearing-Ball
10	130-2325	2	Seal
11	130-2333	2	Bushing-Shaft, Output
12	130-2334	1	Clutch-Dog
13	130-2328	2	Key-Shift
14	130-2329	1	Ring-Shift
15	130-2315	1	Gear-Output, 22 Tooth
16	130-2316	1	Gear-Output, 25 Tooth
17	130-2321	1	Spring-Indexing, Shifter
18	130-2332	1	Pin-Indexing, Shifter
19	130-2331	1	Lever-Indexing, Shifter
20	130-2337	1	Case-Lower, Transmission
21	130-2302	10	Screw
22	130-2317	1	Gear-Output, 32 Tooth
23	130-2335	1	Clutch-Dog, RH
24	130-2309	1	Shaft-Output, Long
25	130-2323	2	Spring-Compression, Clutch
26	130-2305	3	Ring-Retaining
27	130-2330	1	Hub-Gear, Output
28	130-2306	1	Shaft-Shift
29	130-2304	1	Ring-Retaining
30	130-2319	1	Bearing-Ball
31	130-2314	1	Gear-Intermediate, 14 Tooth
32	130-2313	1	Gear-Intermediate, 15 Tooth
33	130-2312	1	Gear-Intermediate, 17 Tooth
34	130-2307	1	Shaft-Intermediate
35	130-2303	1	Nut-Shaft, Input
36	130-2310	1	Gear-Bevel, 12 Tooth
37	130-2324	2	Seal
38	130-2300	1	Shaft, Input

Handle Assembly

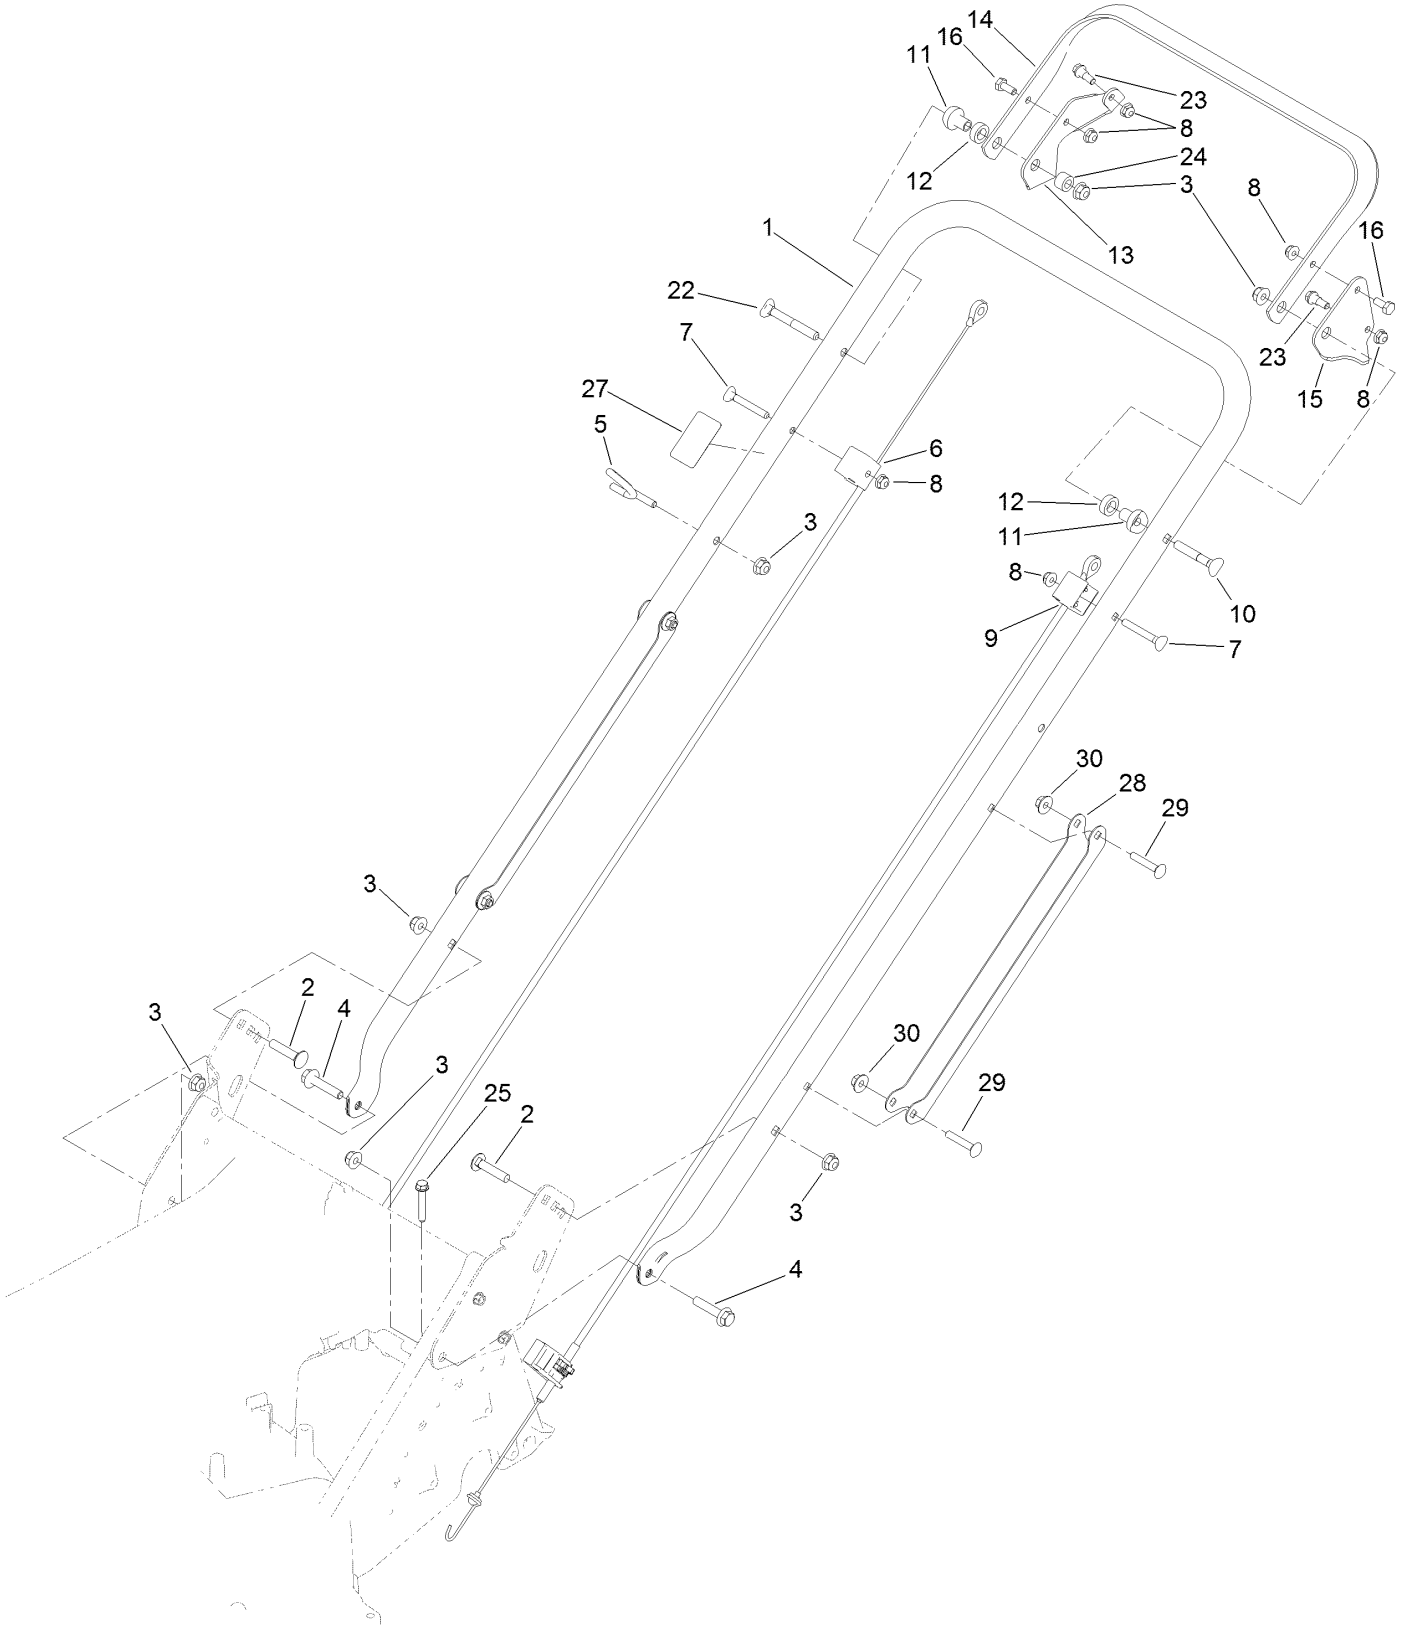

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-1016-03	1	Handle
2	3230-4	2	Screw-CARR
3	104-8300	7	Nut-Flange, NI
4	115-1794	2	Screw-HHF
5	116-1056	1	Guide,Rope
6	125-8365	1	Cable-Brake, Kawasaki
7	95-4453	2	Screw
8	104-7201	4	Nut-HF
9	125-8366	1	Cable-Traction
10	17-9428	1	Handle Screw
11	49-1630	2	Spacer-Support
12	256-276	2	Spacer-Nylon
13	125-8398-03	1	Bracket-Control, Brake
14	125-8355-03	1	Bar-Control, Zone Start
15	125-1068-03	1	Lever-Control, Traction
16	321-3	2	Screw-HH
22	125-8408	1	Screw-Handle
23	42-3560	2	Bolt-Shoulder
24	98-4695	1	Spacer
25	94-2691	1	Screw-HWH
27	125-8404	1	Decal-Primer
28	127-6897-03	2	Guard-Cable, Handle
29	108-0988	4	Screw-CARR
30	114-3778	4	Nut-Lock, NI

Attachments and Accessories

For 22297 21in Heavy-Duty Recycler/Rear Bagger Lawn Mower

Product Name	Model/Part
Blade-21in	108-0954-03
Blade-Bagging, 21in	125-1072-03
Cup-Anti Scalp	125-8440

Notes:

Notes:

Notes:



Count on it.