Form No. 3379-918 Rev A

TORO®

Count on it.

Parts Catalog

Commercial Walk-Behind Mower

Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Model No. 30632—Serial No. 314000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3379-918 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Engine and Exhaust Assembly 4
Fuel System Assembly 6
Frame and Transmission Assembly 7
Drive Wheel and Brake Assembly 9
Handle Control Assembly 11
Handle Assembly 12
Deck and Shield Assembly 13
Deck Decal Assembly No. 110-6901 14
Deflector Assembly No. 119-6529 15
Idler Arm and Caster Wheel Assembly 16
Spindle and Blade Assembly 18
Cutter Housing Assembly No. 107-4065 19
Attachments and Accessories 20

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

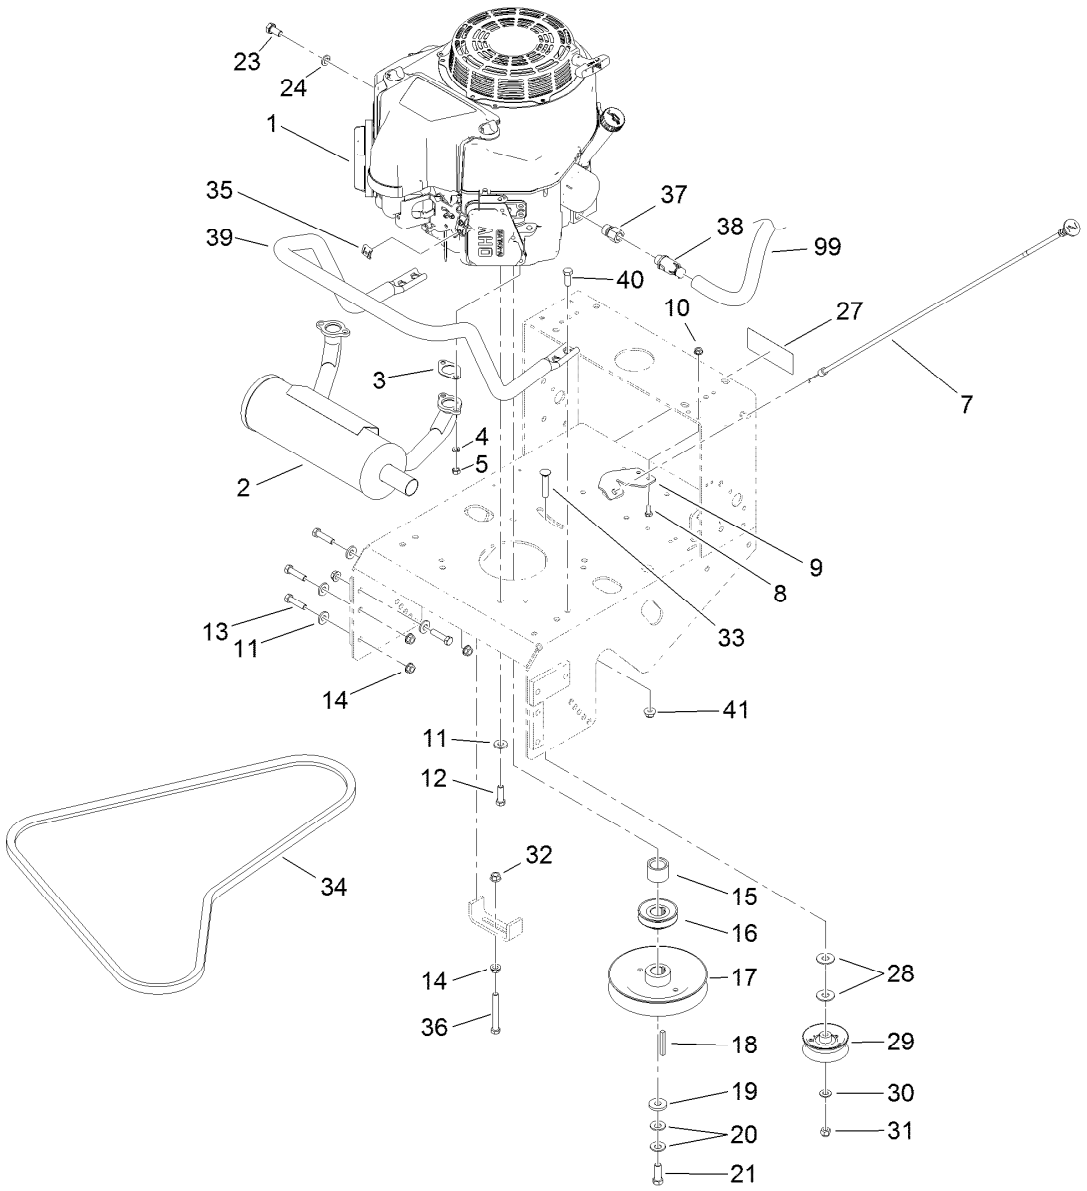


Engine and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs481V-As06 ●■
2	116-3734	1	Muffler-Horizontal, Offset
3	1-653313	2	Gasket-Exhaust
4	114-3550	4	Washer-Lock, Spring
5	114-3549	4	Nut
7	103-1796	1	Cable-Choke
8	321-3	2	Screw-HH
9	103-1797-01	1	Bracket-Cable, Choke
10	32128-33	2	Nut-HF
11	98-5975	12	Washer-Belleville
12	323-7	4	Screw-HH
13	323-8	8	Screw-HH
14	3290-357	9	Nut-HHF, Whiz
15	1-633453	1	Spacer-Clutch
16	103-1666	1	Sheave-Transmission
17	103-1667	1	Sheave
18	103-4177	1	Key

Ref.	Part Number	Qty.	Description
19	1-373034	1	Washer
20	1-603610	2	Washer-Spring
21	116-3702	1	Screw-HH
23	33114-016	1	Screw-HH
24	3253-4	1	Washer-Lock
27	98-0776	1	Decal-Caution
28	3256-5	2	Washer-Flat
29	1-323285	1	Pulley-Idler, Flat
30	3256-24	1	Washer-Flat
31	3296-39	1	Nut-Lock, NI
32	32128-21	1	Nut-HF
33	3231-6	1	Screw-CARR
34	1-323745	1	Belt-V
35	81-1690	1	Clamp-Cable
36	323-14	1	Screw-HH
37	103-1966	1	Adapter
38	120-4321	1	Valve-Drain, Oil
39	116-6278-03	1	Guard-Muffler

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

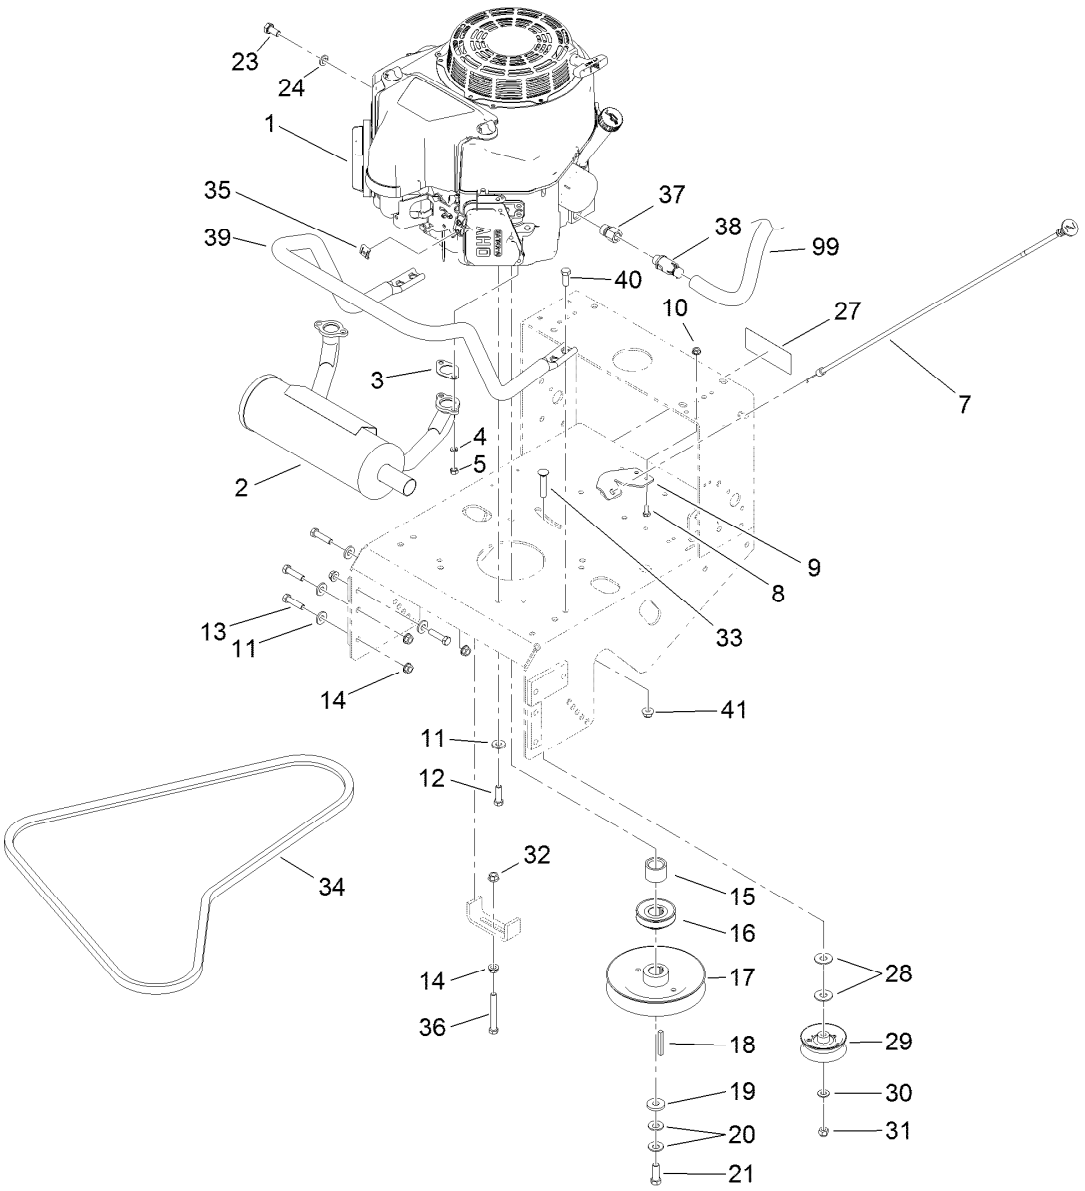


Engine and Exhaust Assembly (continued)

Ref.	Part Number	Qty.	Description
40	323-6	4	Screw-HH

Ref.	Part Number	Qty.	Description
41	104-8301	4	Nut-Flange, NI
99	103-1964	1	Hose-Drain, Oil

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

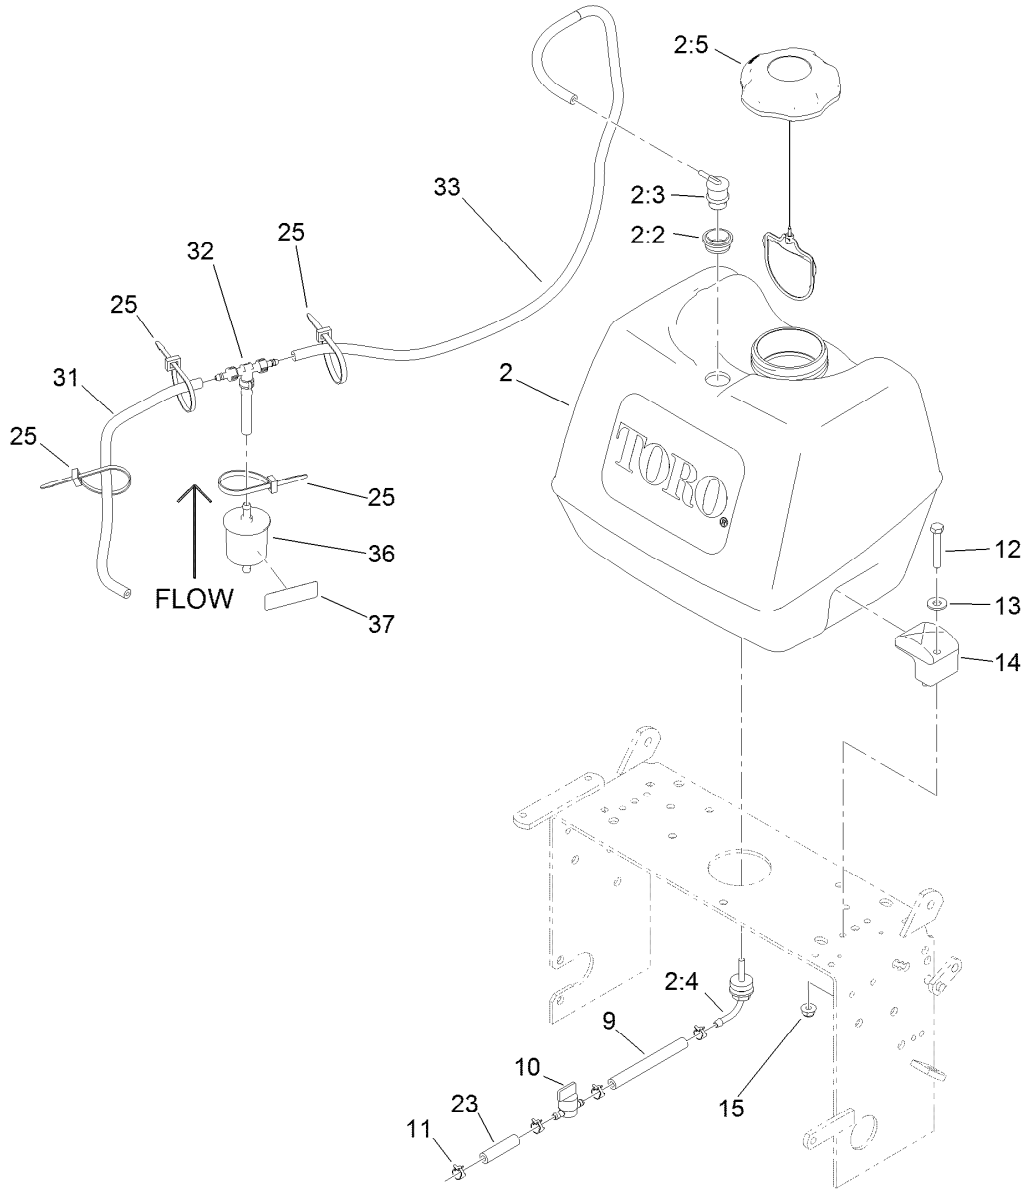

Fuel System Assembly

Ref.	Part Number	Qty.	Description
2	126-1526	1	Fuel Tank ASM
2:2	114-0284	1	Grommet
2:3	119-3547	1	Valve-Vent, Fuel
2:4	103-2605	1	Fitting-Fuel, Bulkhead
2:5	120-5461	1	Cap-Fuel, Ratcheting
9	109-0650	1	Hose-Fuel
10	1-603770	1	Valve-Fuel
11	2412-98	4	Clamp-Hose
12	322-10	2	Screw-HH
13	3256-3	2	Washer-Flat


Ref.	Part Number	Qty.	Description
14	107-4543	2	Clamp
15	104-8300	2	Nut-Flange, NI
23	99-9415	1	Hose-Fuel
25	3290-378	4	Tie-Cable
31	115-7872	1	Hose-Fuel
32	116-5464	1	Tee And Check
33	116-4346	1	Hose-Emissions
36	120-2235	1	Filter-Fuel
37	116-4769	1	Decal-Filter, Emissions

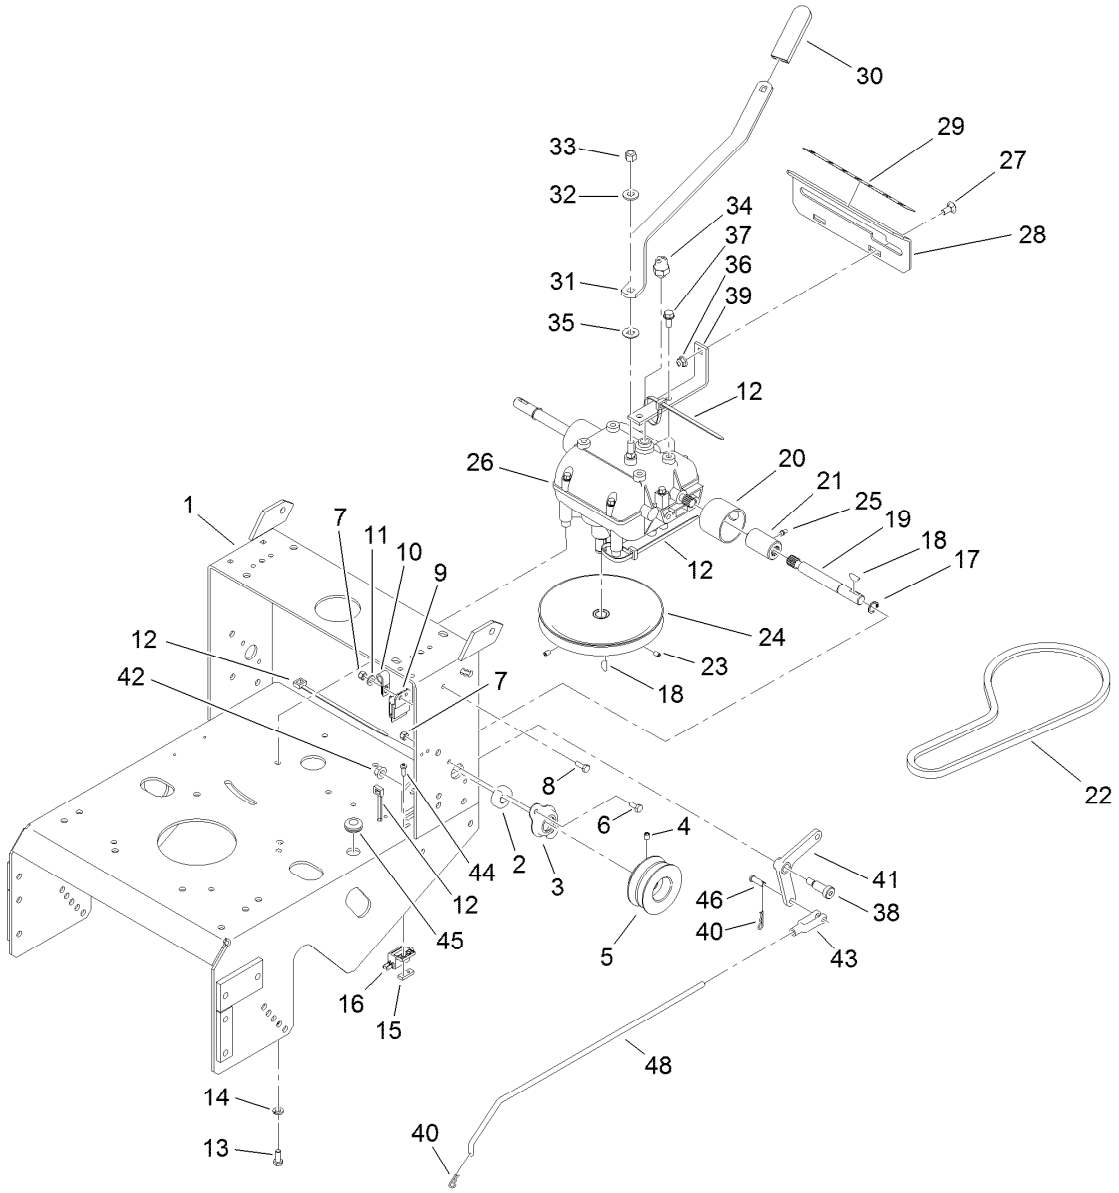

Frame and Transmission Assembly


Ref.	Part Number	Qty.	Description
1	116-6084-01	1	Frame-Gear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	3246-18	2	Setscrew
5	103-6512	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	3296-42	5	Nut-Lock, NI
8	321-4	1	Screw-HH
9	1-323430	1	Module-Interlock
10	1-513762	1	Clip-Loom
11	3256-22	1	Washer-Flat
12	1-303335	3	Tie-Plastic
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler

Ref.	Part Number	Qty.	Description
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
34	1-303282	1	Switch-Start, Neutral
35	1-323379	1	Washer
36	104-8300	2	Nut-Flange, NI
37	32144-11	4	Screw-HWHTF
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	2	Pin-Cotter, Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF, Whiz

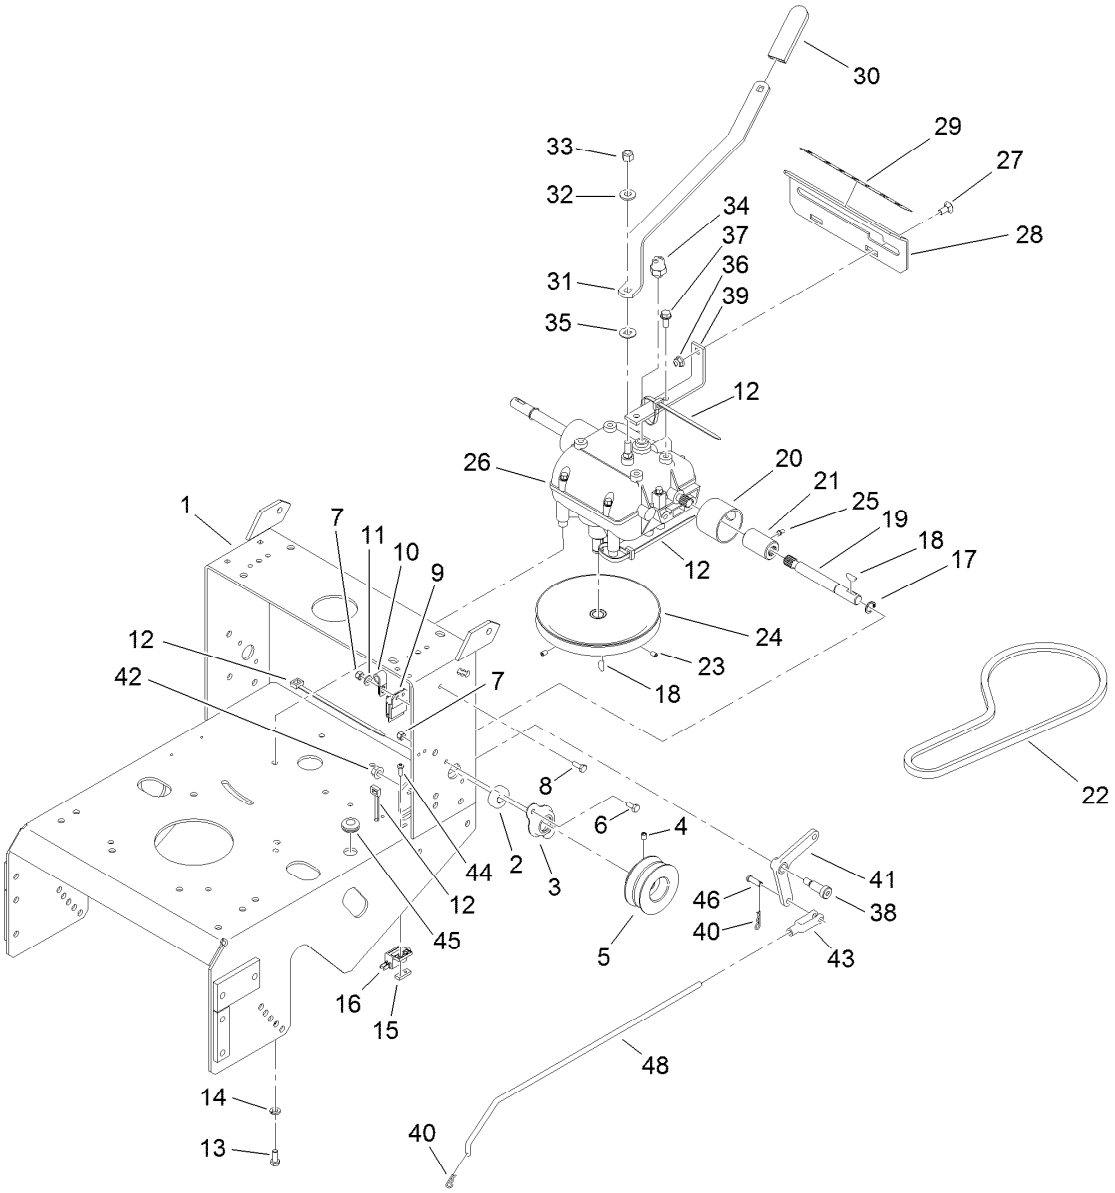

Frame and Transmission Assembly (continued)

Ref.	Part Number	Qty.	Description
43	1-303105	1	Yoke-Adjustable
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	1-808280	1	Pin-Clevis
48	1-323303	1	Arm-Assist, Linkage

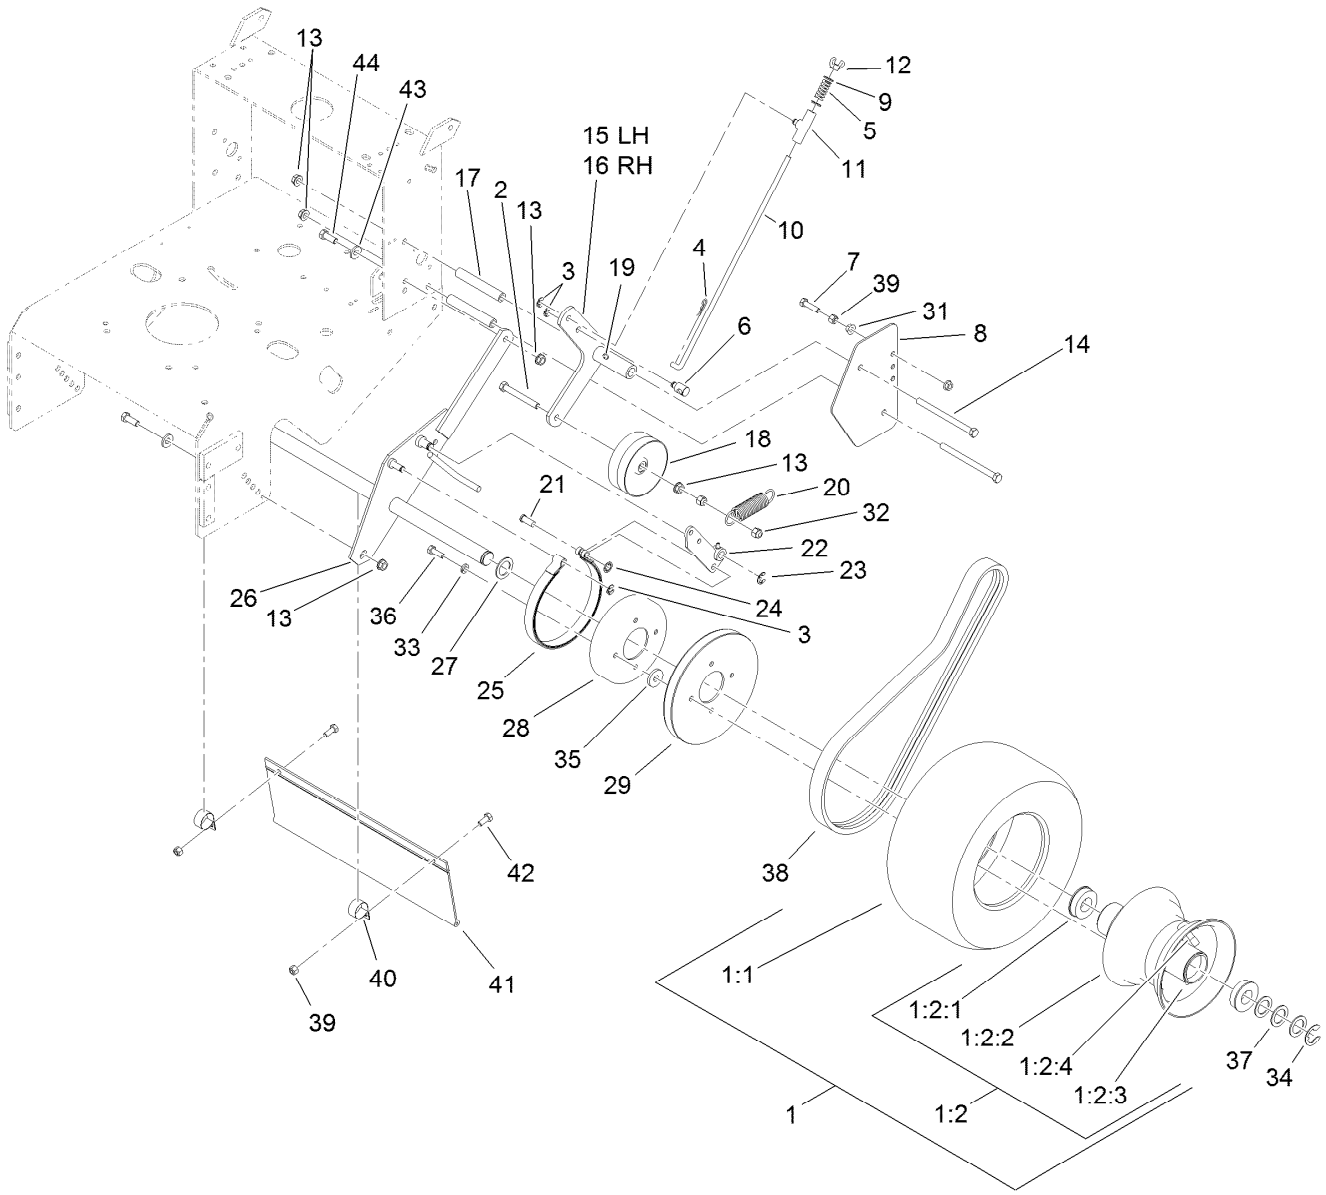


Drive Wheel and Brake Assembly

Ref.	Part Number	Qty.	Description
1	130-4551	2	Wheel And Tire ASM
1:1	1-323361	1	Tire
1:2	130-4566	1	Wheel And Hub ASM
1:2:1	1-323329	2	Bearing-Flanged
1:2:2		1	Rim ASM ●
1:2:3		1	Fitting-Grease ●
1:2:4		1	Valve Stem And Cap ●
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Cotter, Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	116-3515	2	Screw-HH, Special
8	1-323287-01	2	Shield-Wheel, Drive
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock

Ref.	Part Number	Qty.	Description
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
15	116-7542-03	1	Arm-Idler, LH
16	116-7543-03	1	Arm-Idler, RH
17	1-323283	4	Spacer-Shield
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
20	1-603402	2	Spring-Extension
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-543436	2	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive
31	32128-20	4	Nut-HF

● Not serviced separately

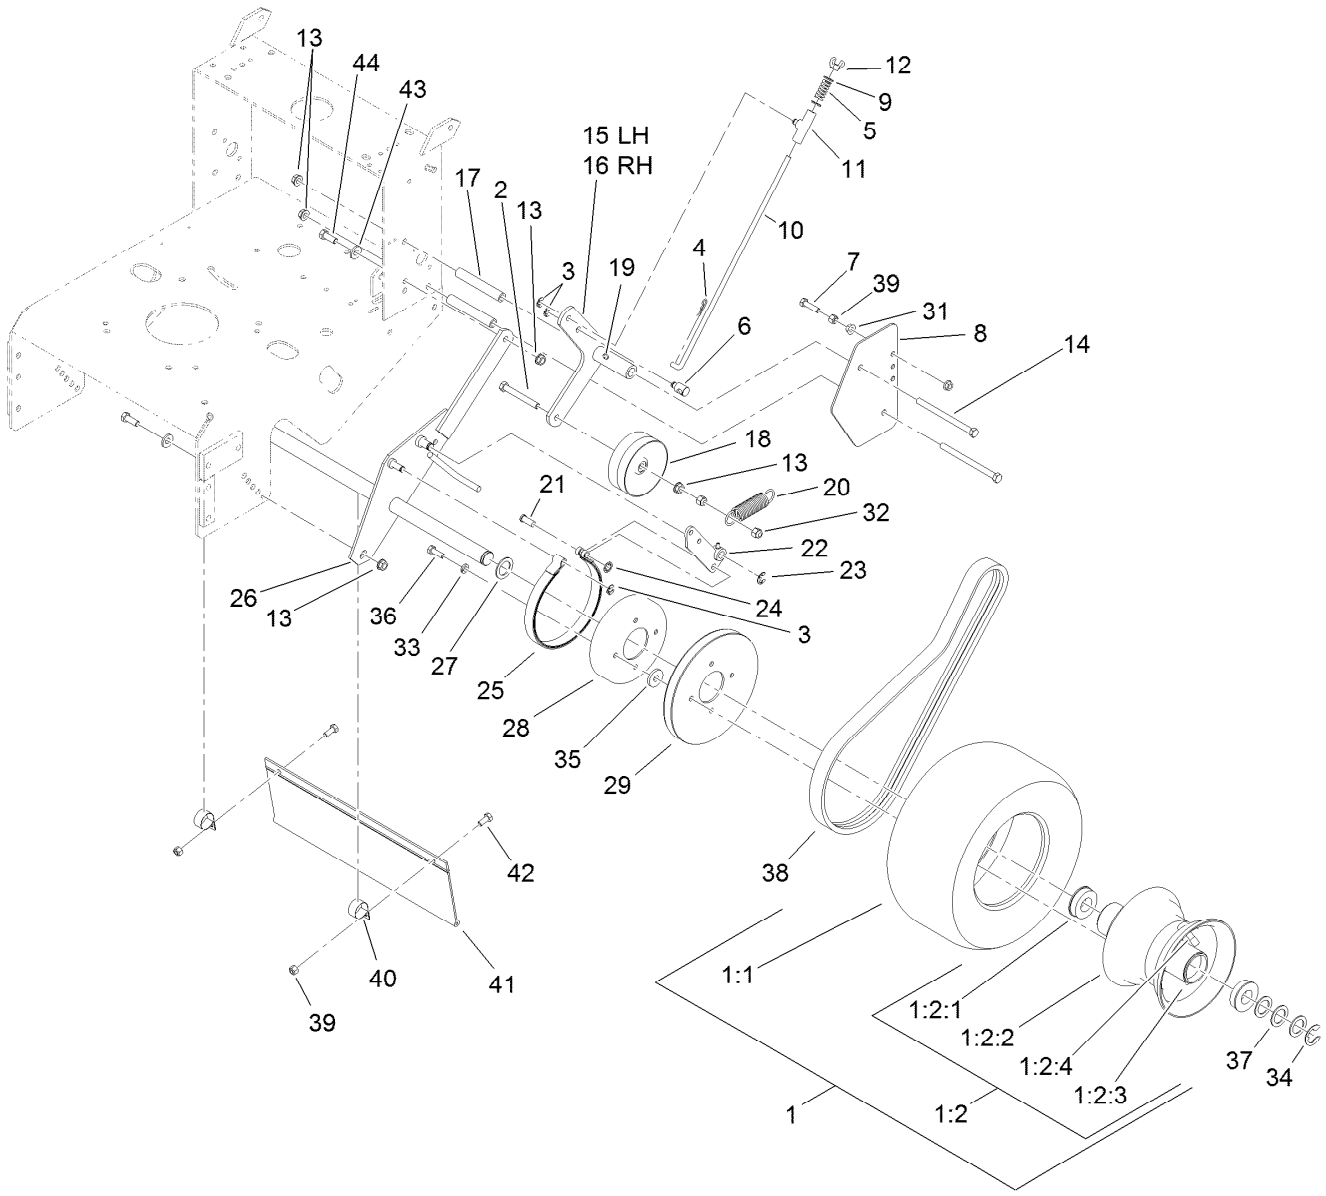


Drive Wheel and Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
32	3296-39	4	Nut-Lock, NI
33	1-805005	8	Washer-Lock
34	1-808519	2	Ring-Snap
35	1-373034	8	Washer
36	322-5	8	Screw-HH
37	1-523157	6	Washer-Spacer
38	1-323744	2	Belt-Drive, Wheel


Ref.	Part Number	Qty.	Description
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	Clamp-R
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH

● Not serviced separately

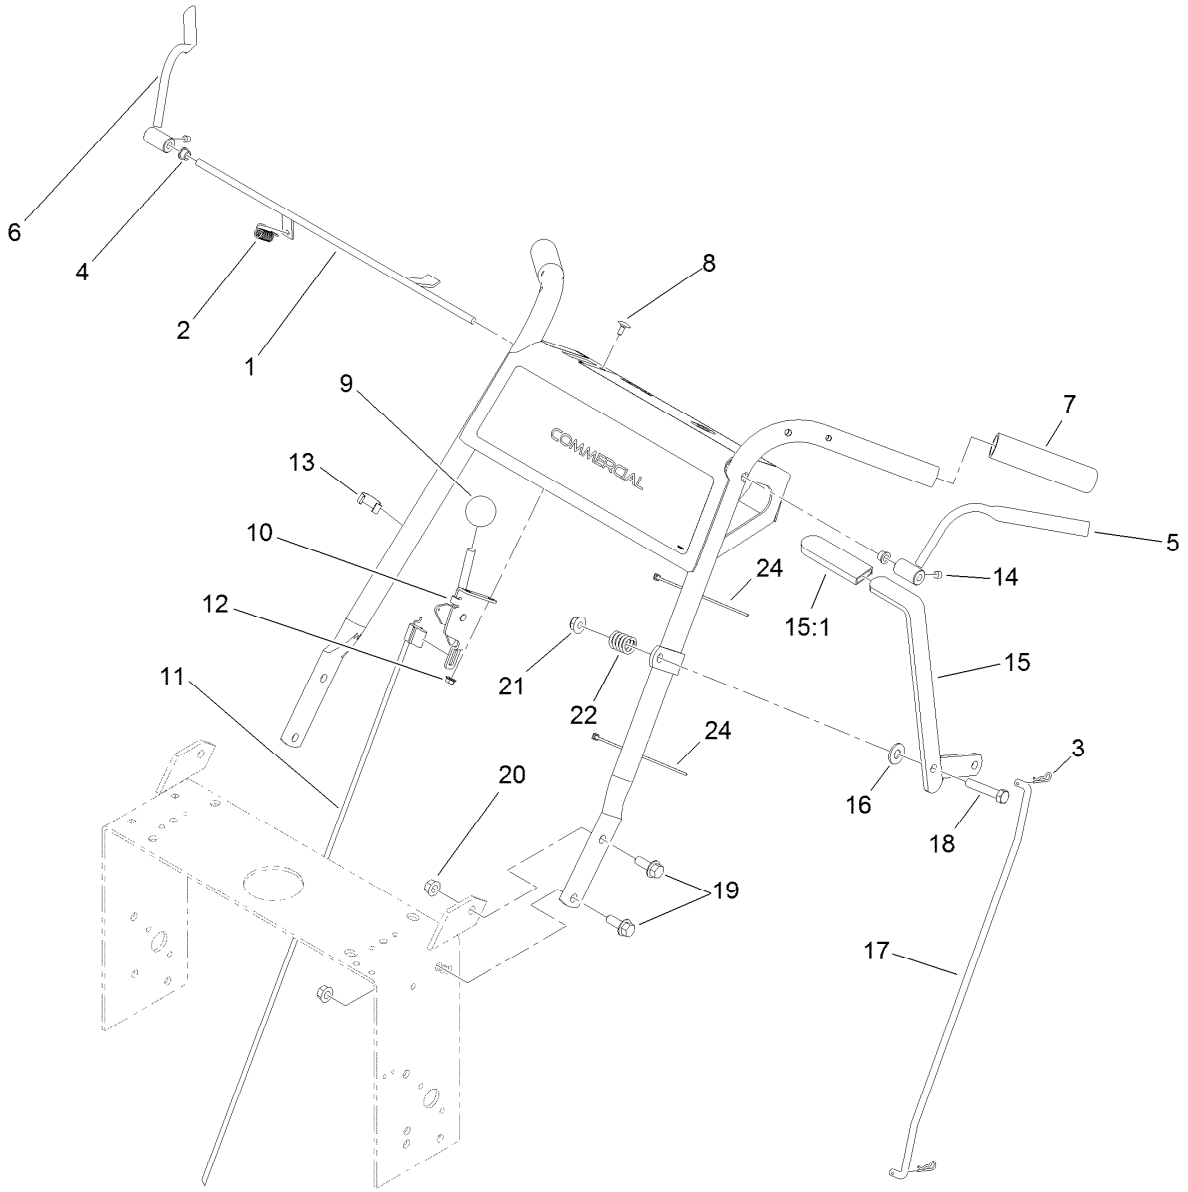

Handle Control Assembly

Ref.	Part Number	Qty.	Description
1	106-2717-03	1	Rod-Control, Operator Presence
2	1-303363	1	Spring-Extension
3	1-806003	2	Pin-Cotter, Hair
4	1-303365	2	Bushing-Nylon
5	106-5485	1	LH Operator Presence Control Lever ASM
6	106-5486	1	RH Operator Presence Control Lever ASM
7	104-9838	2	Grip-Foam
8	1-807513	2	Bolt-CARR
9	1-603175	1	Knob-Ball
10	110-5547	1	Lever-Control
11	119-1823	1	Cable-Control, Throttle
12	32128-17	2	Nut-Lock, Flange
13	1-303088	1	Clip-Cable
14	1-803322	2	Screw-Set
15	116-6331	1	Lever ASM
15:1	1-303020	1	Grip-Lever
16	3256-4	1	Washer-Flat
17	1-323298	1	Linkage-Blade, Upper
18	323-10	1	Screw-HH
19	32128-21	4	Nut-HF
20	3234-11	4	Screw-HHF
21	104-8301	1	Nut-Flange, NI
22	1-303160	1	Spring-Compression
24	1-303287	2	Tie-Cable

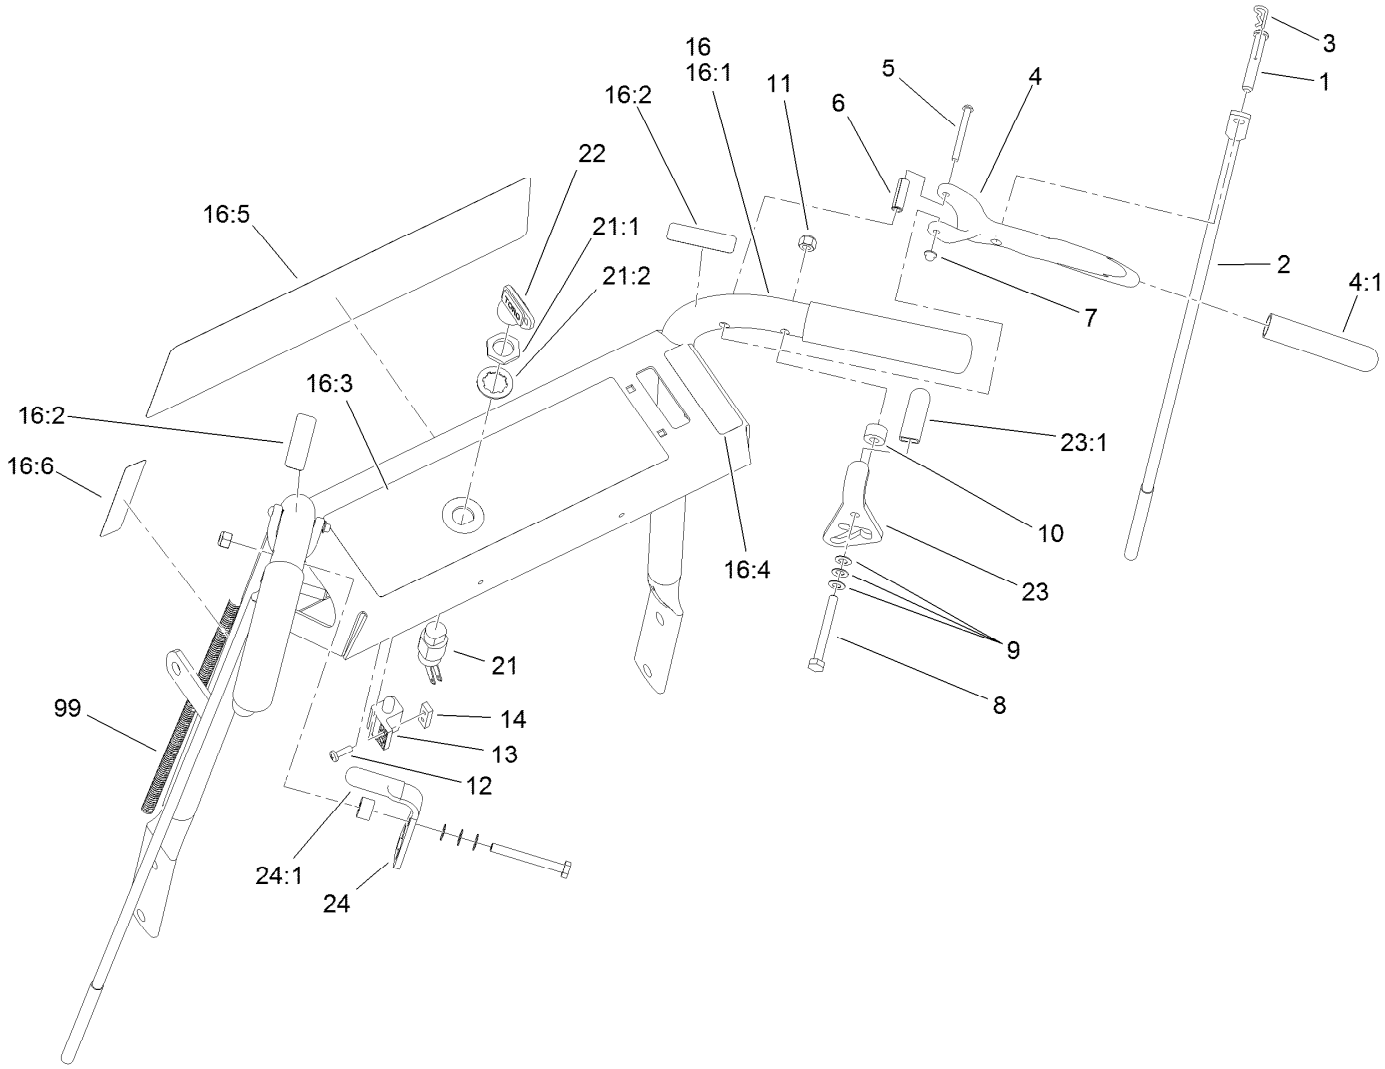


Handle Assembly

Ref.	Part Number	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
3	1-806003	2	Pin-Cotter, Hair
4	1-302006	2	Drive Lever ASM
4:1	1-303021	1	Grip-Lever, Drive
5	1-808250	2	Pin-Lever, Drive
6	1-806340	2	Pin-Roll
7	1-803001	2	Nut
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-633181	1	Plate-Tapped
16	119-3638	1	Handle ASM

Ref.	Part Number	Qty.	Description
16:1		1	Pistol Grip Handle ASM ●
16:2	105-4111	2	Decal-Lock, Neutral
16:3	106-2737	1	Decal-Warning
16:4	106-2733	1	Decal-Throttle
16:5	110-6917	1	Decal
16:6	95-5537	1	Decal-Engage, Deck
21	29-5560	1	Switch-On / Off
21:1	218-461	1	Nut-HH
21:2	3254-5	1	Washer-Tooth, Internal
22	63-8360	1	Key-Ignition
23	1-324280	1	RH Thumb Latch ASM
23:1	1-303019	1	Grip-Latch
24	1-324279	1	LH Thumb Latch ASM
24:1	1-303019	1	Grip-Latch
99	116-2661	1	Harness-Wire


● Not serviced separately

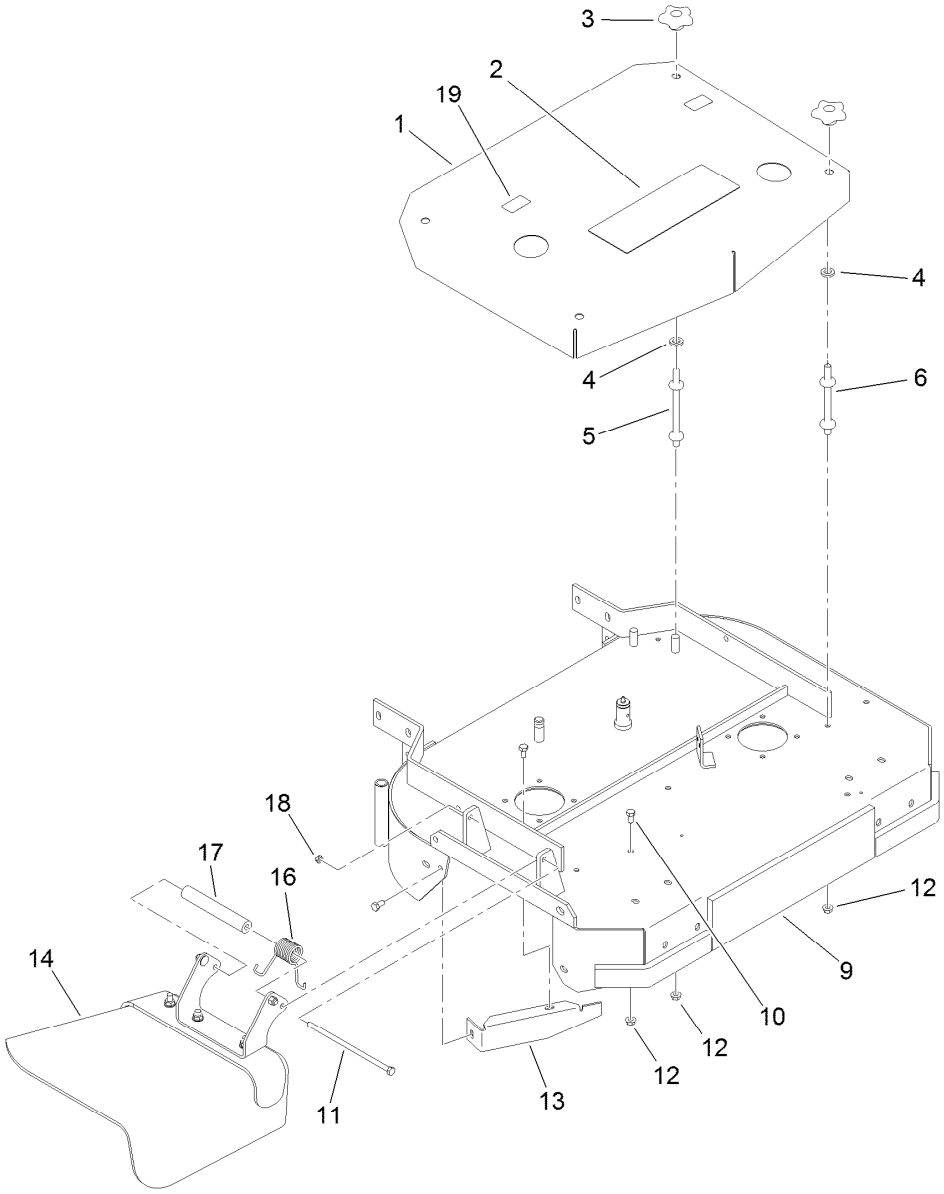

Deck and Shield Assembly

Ref.	Part Number	Qty.	Description
1	1-322149-01	1	Shield ASM
2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	110-6901	1	32 Inch Deck ASM
10	322-2	7	Screw-HH


Ref.	Part Number	Qty.	Description
11	322-50	1	Screw-HH
12	32128-20	11	Nut-HF
13	116-1730-01	1	Baffle-Dogleg
14	119-6529	1	Deflector ASM
16	108-4052	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-47	1	Nut-Lock, NI
19	103-2076	2	Decal-Caution

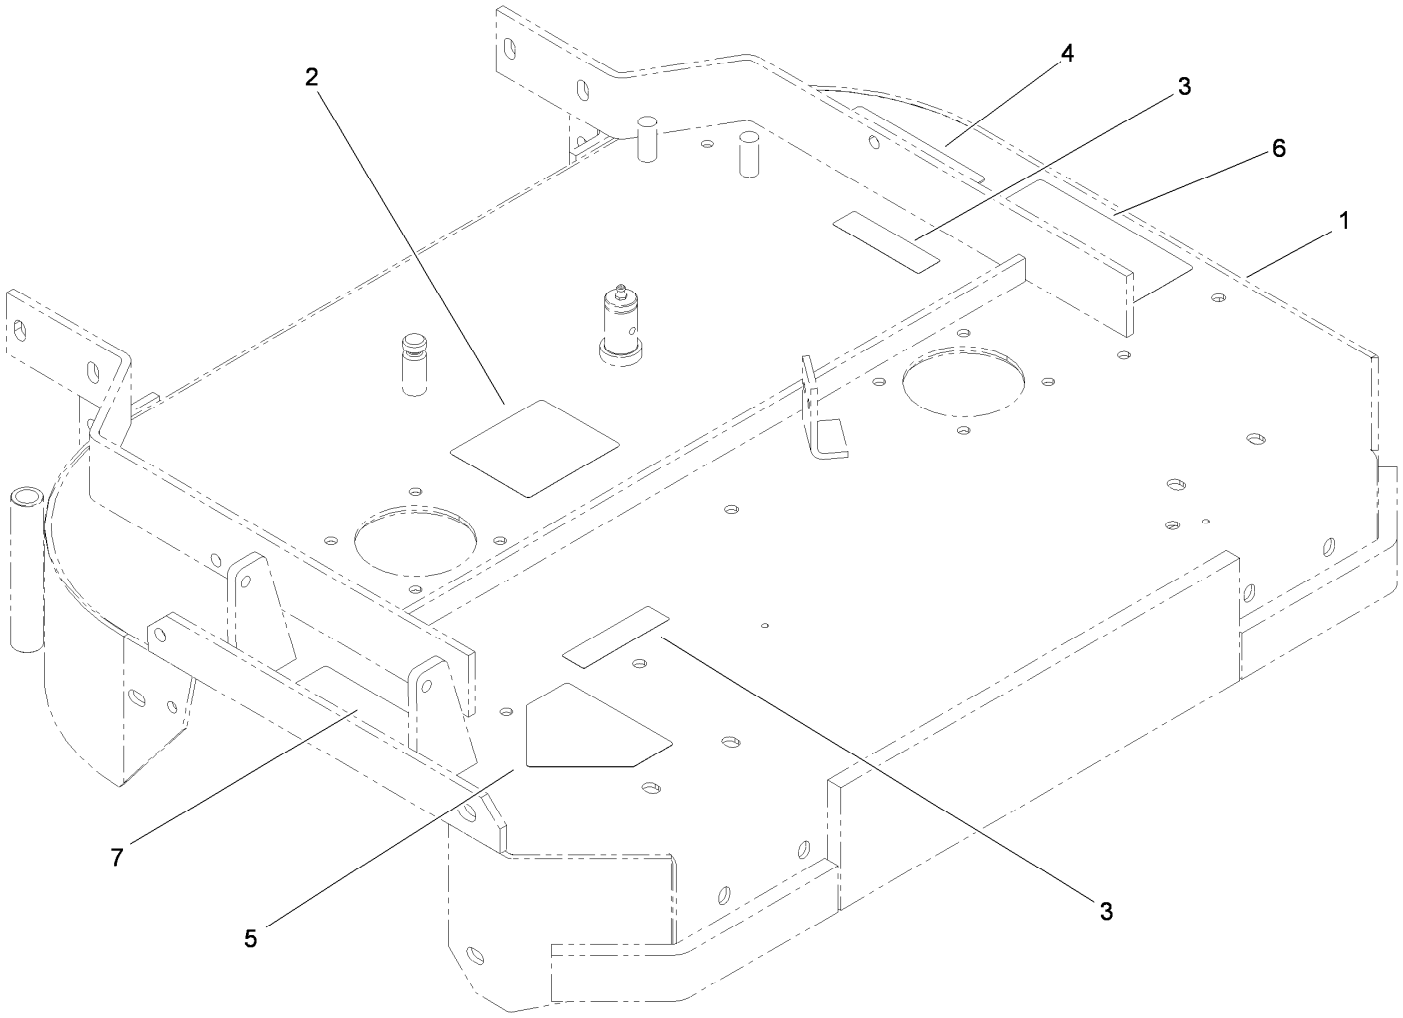

Deck Decal Assembly No. 110-6901


Ref.	*Part Number*	*Qty.*	*Description*
1		1	Deck ●
2	98-3296	1	Decal-Routing, Belt
3	98-5954	2	Decal-Missing Cover
4	98-5130	1	Decal-Torque, Bolt
5	1-403005	1	Decal-Danger
6	66-1340	1	Decal-Danger, Thrown Object
7	104-8569	1	Decal-Warning

● Not serviced separately

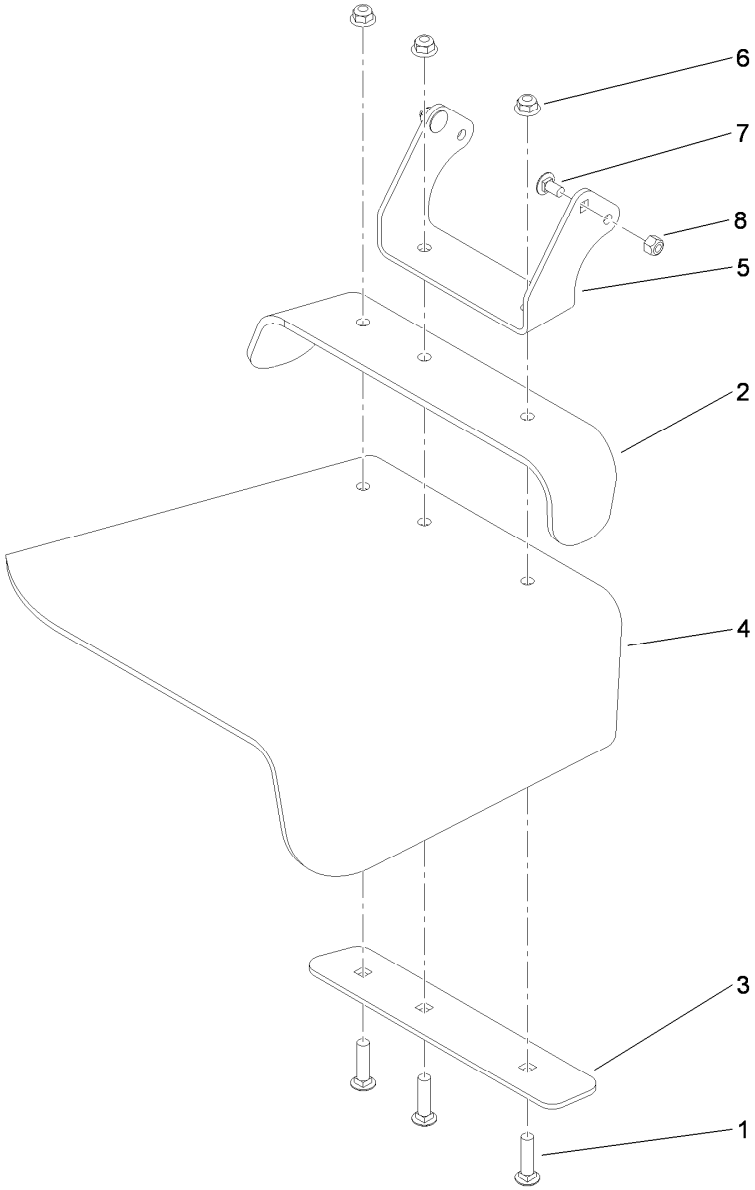

Deflector Assembly No. 119-6529

Ref.	*Part Number*	*Qty.*	*Description*
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	119-6532-01	1	Bracket-Mounting, Deflector
6	104-8301	3	Nut-Flange, NI
7	3230-18	2	Screw-CARR
8	3296-29	2	Nut-Lock, NI

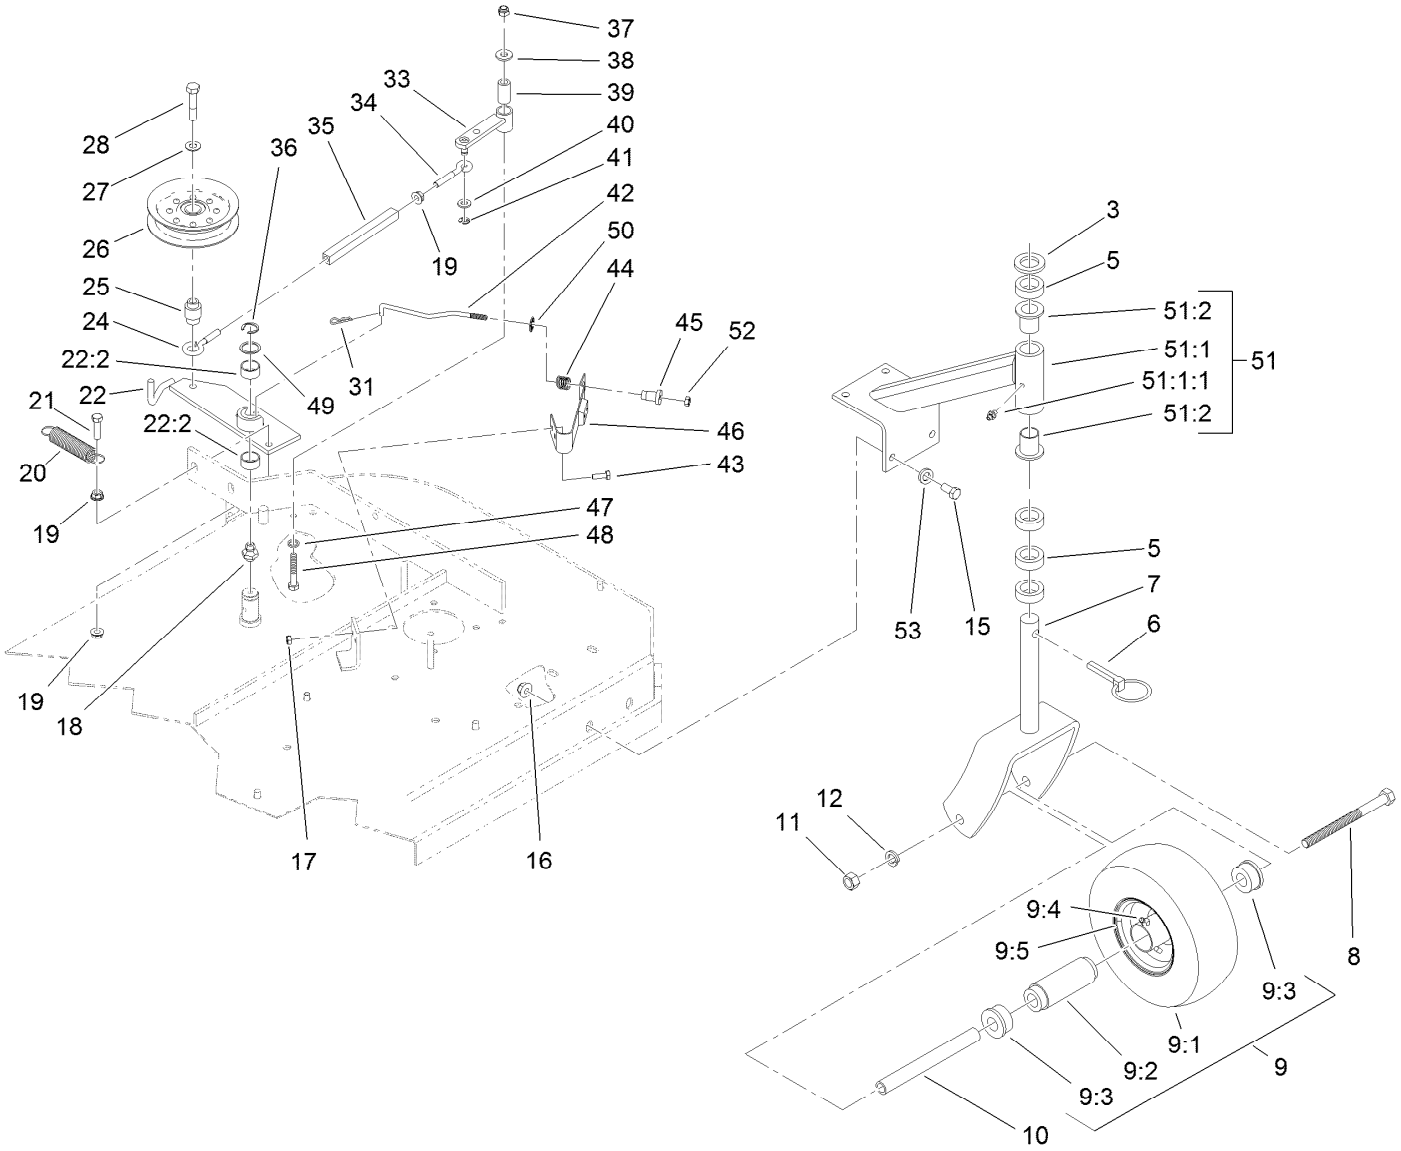


Idler Arm and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	116-7942-01	2	Fork-Caster
8	325-20	2	Screw-HH
9	130-4557	2	Wheel And Tire ASM
9:1		1	Tire ●
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Fitting-Grease
9:5		1	Wheel ●
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	104-8301	8	Nut-Flange, NI
17	3296-42	2	Nut-Lock, NI
18	302-40	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	116-3515	1	Screw-HH, Special
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	116-3626	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-HH
31	1-806003	1	Pin-Cotter, Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Retaining, EXT
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot

● Not serviced separately

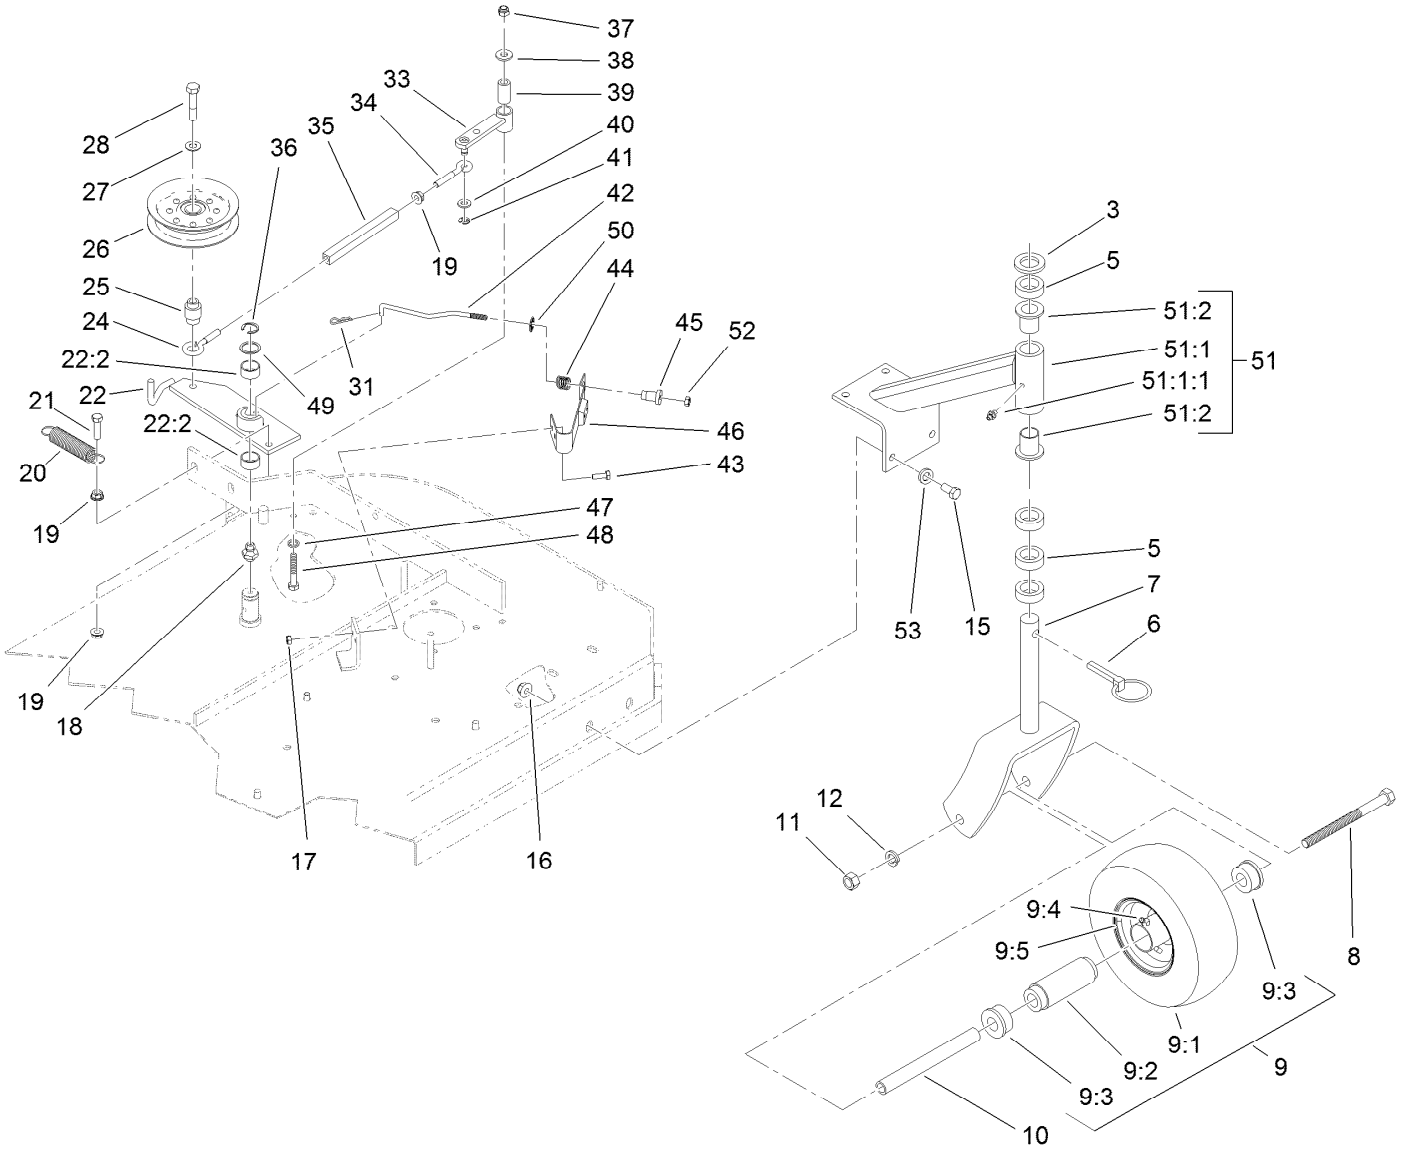


Idler Arm and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH


Ref.	Part Number	Qty.	Description
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
51:1		1	Support-Caster ●
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

● Not serviced separately

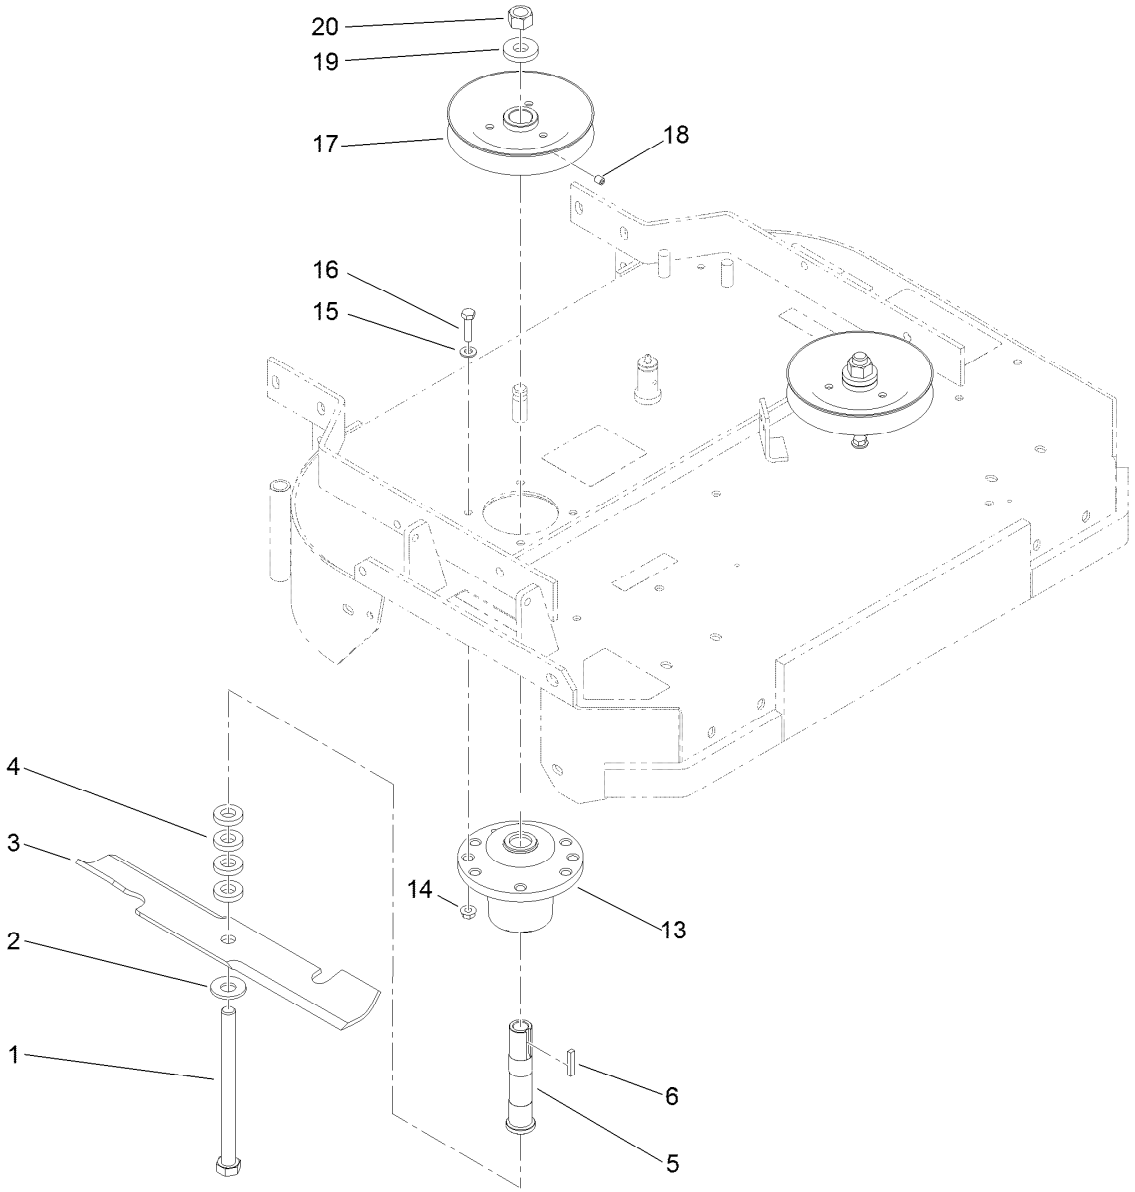

Spindle and Blade Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2527	2	Blade-Notched
4	1-323539	8	Spacer
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
13	107-4065	2	Cutter Housing ASM
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	3246-18	2	Setscrew
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex

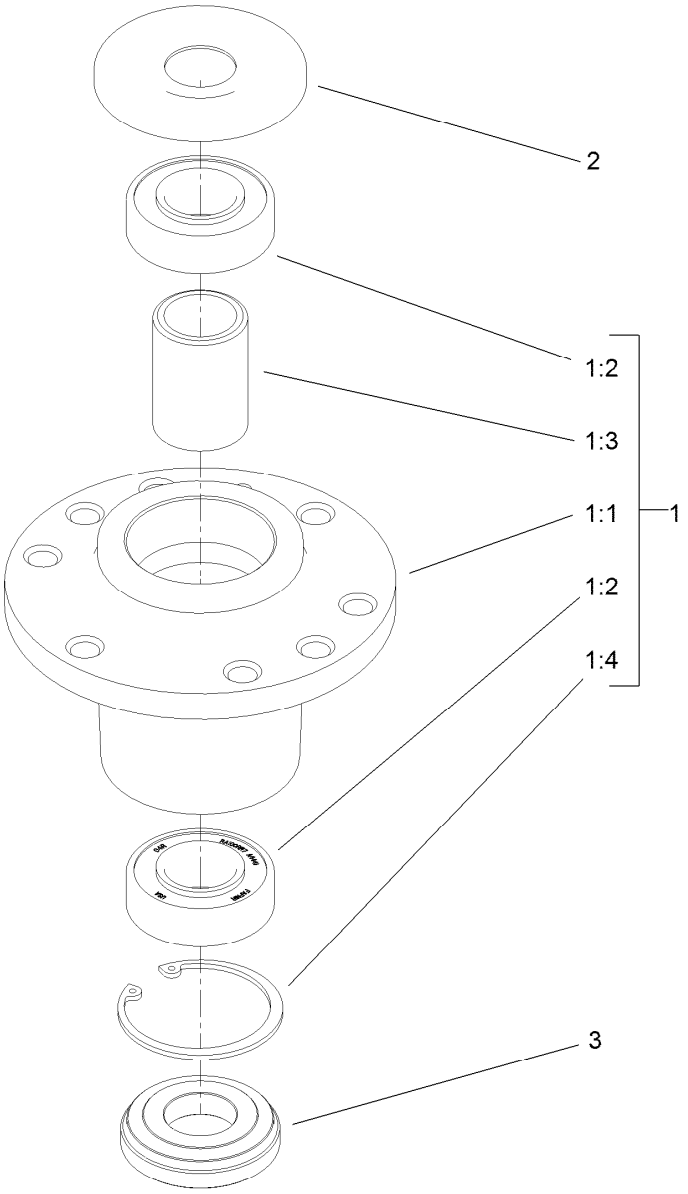

Cutter Housing Assembly No. 107-4065

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Cutter Housing ASM ●
1:1	103-7975	1	Housing-Spindle
1:2	103-2477	2	Bearing-Jackshaft
1:3	103-2534	1	Spacer-Bearing
1:4	32120-8	1	Ring-Snap
2	103-1330	1	Guard-Bearing, Top
3	103-2535	1	Spacer-Guard, Bottom

● Not serviced separately

Attachments and Accessories

For 30632 Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Product Name	Model/Part
Soft Bag (3 Bushel)	30198
32in Recycler Kit	110-4915
Atomic Blade and Decal Assembly	104-8595
32in and 48in Fixed Deck Low Lift Blades	103-2507
Blade-Notched	103-2527
Blade-Atomic, 16.25in (6 Pack)	110-0407
Blade-16.25 inch (6 Pack)	108-1119
Weight Kit	107-4100

Notes:

Notes:

Notes:



Count on it.