Form No. 3379-926 Rev A

TORO®

Count on it.

Parts Catalog

Commercial Walk-Behind Mower

Fixed Deck, T-Bar, Gear Drive with 32in Cutting Unit

Model No. 30672—Serial No. 314000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3379-926 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Engine and Exhaust Assembly 4
Fuel System Assembly 5
Frame and Transmission Assembly 6
Drive Wheel and Brake Assembly 7
Handle and Control Assembly 9
Wire Harness Assembly 10
Deck and Shield Assembly 11
Deck Decal Assembly No. 110-6901 12
Deflector Assembly No. 119-6529 13
Idler Arm and Caster Wheel Assembly 14
Spindle and Blade Assembly 16
Cutter Housing Assembly No. 107-4065 17
Attachments and Accessories 18

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

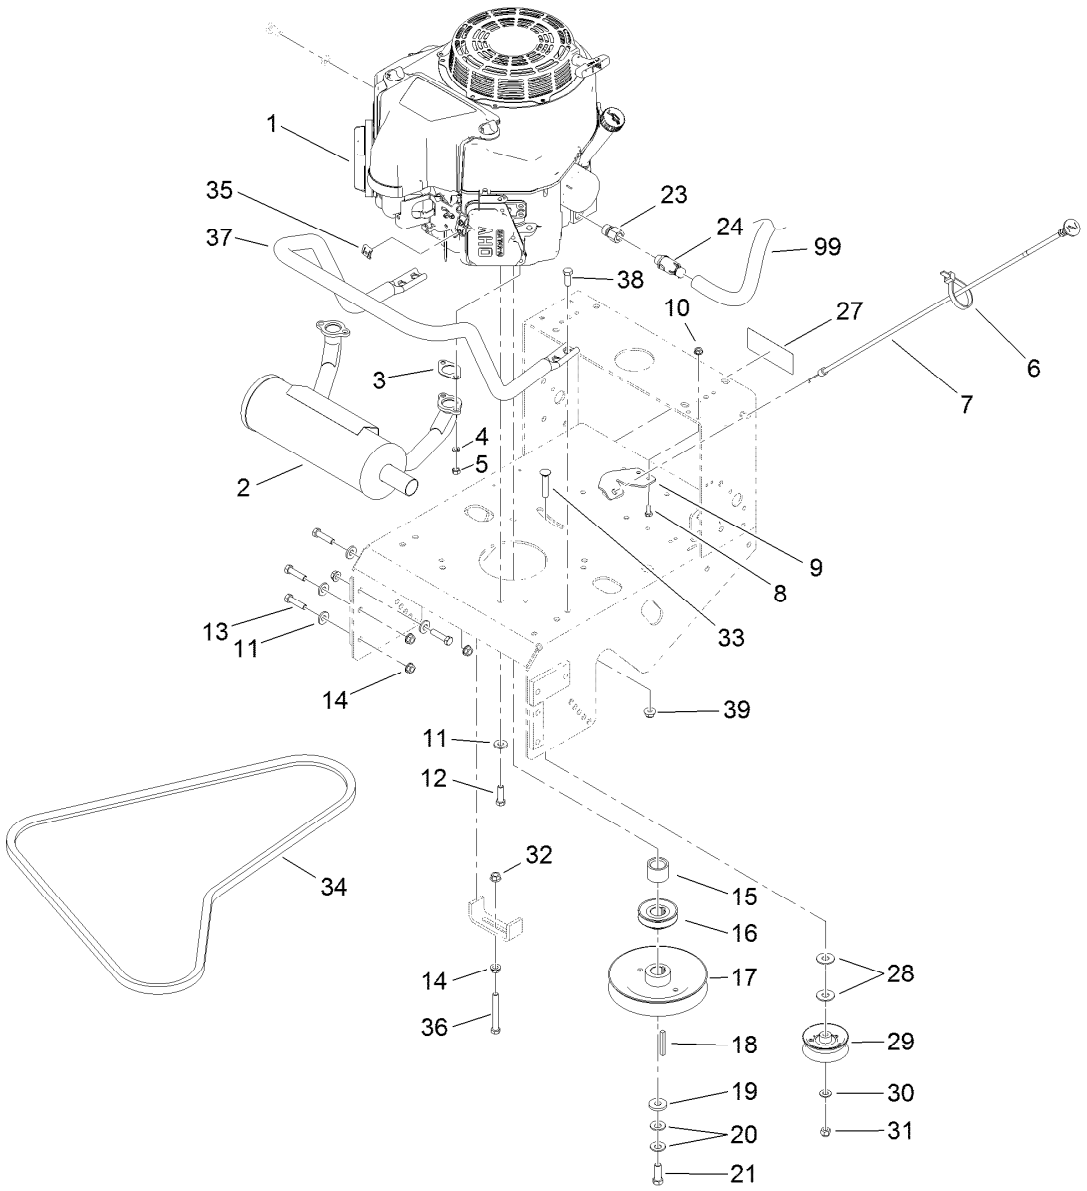


Engine and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs481V-As06 ●■
2	116-3734	1	Muffler-Horizontal, Offset
3	1-653313	2	Gasket-Exhaust
4	114-3550	4	Washer-Lock, Spring
5	114-3549	4	Nut
6	1-303287	1	Tie-Cable
7	103-1796	1	Cable-Choke
8	321-3	2	Screw-HH
9	103-1797-01	1	Bracket-Cable, Choke
10	32128-33	2	Nut-HF
11	98-5975	12	Washer-Belleville
12	323-7	4	Screw-HH
13	323-8	8	Screw-HH
14	3290-357	9	Nut-HHF, Whiz
15	1-633453	1	Spacer-Clutch
16	103-1666	1	Sheave-Transmission
17	103-1667	1	Sheave
18	103-4177	1	Key
19	1-373034	1	Washer
20	1-603610	2	Washer-Spring
21	116-3702	1	Screw-HH
23	103-1966	1	Adapter
24	120-4321	1	Valve-Drain, Oil
27	98-0776	1	Decal-Caution
28	3256-5	2	Washer-Flat
29	1-323285	1	Pulley-Idler, Flat
30	3256-24	1	Washer-Flat
31	3296-39	1	Nut-Lock, NI
32	32128-21	1	Nut-HF
33	3231-6	1	Screw-CARR
34	1-323745	1	Belt-V
35	81-1690	1	Clamp-Cable
36	323-14	1	Screw-HH
37	116-6278-03	1	Guard-Muffler
38	323-6	4	Screw-HH
39	104-8301	4	Nut-Flange, NI
99	103-1964	1	Hose-Drain, Oil


● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

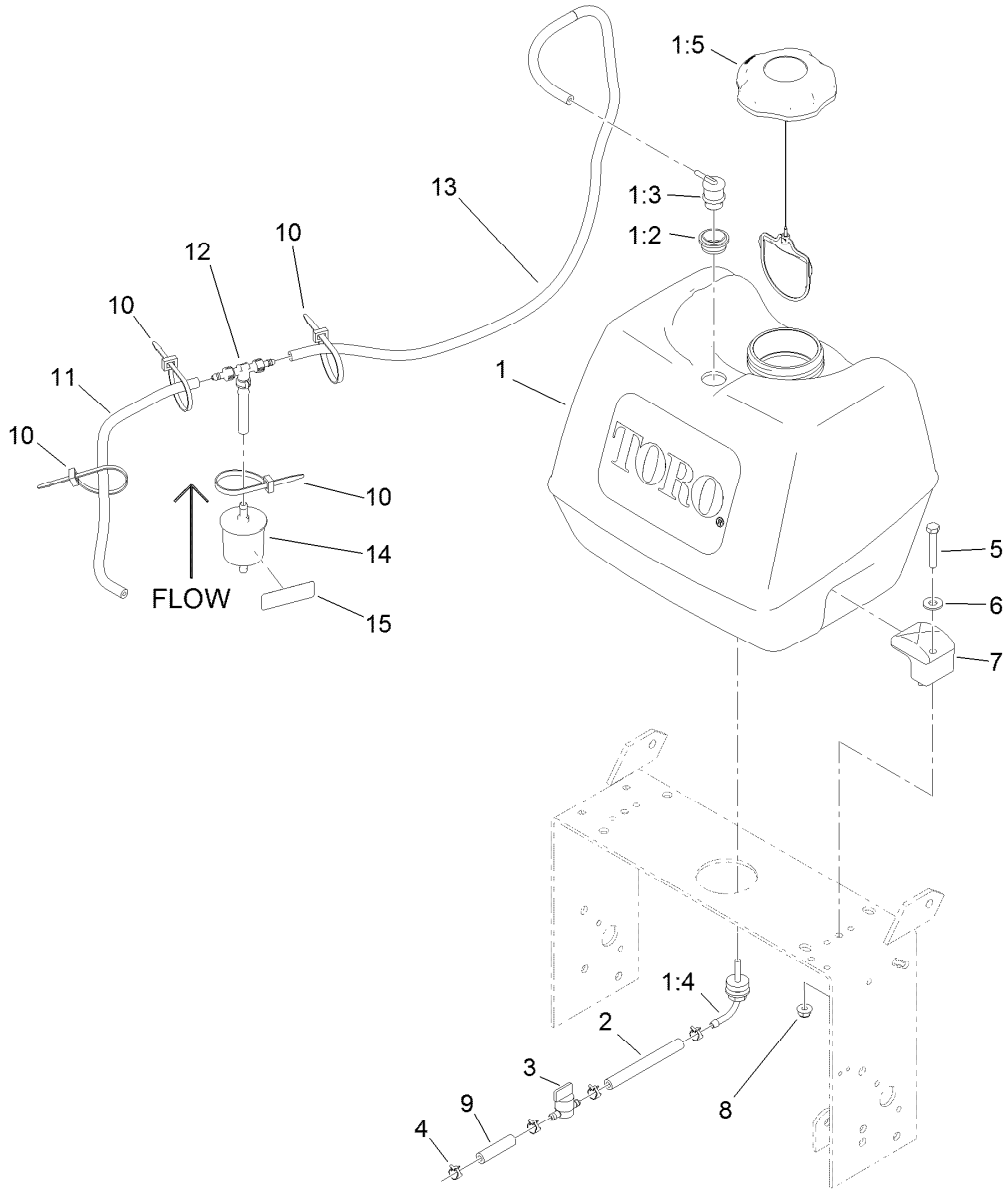

Fuel System Assembly


Ref.	Part Number	Qty.	Description
1	126-1526	1	Fuel Tank ASM
1:2	114-0284	1	Grommet
1:3	119-3547	1	Valve-Vent, Fuel
1:4	103-2605	1	Fitting-Fuel, Bulkhead
1:5	120-5461	1	Cap-Fuel, Ratcheting
2	109-0650	1	Hose-Fuel
3	1-603770	1	Valve-Fuel
4	2412-98	4	Clamp-Hose
5	322-10	2	Screw-HH
6	3256-3	2	Washer-Flat
7	107-4543	2	Clamp
8	104-8300	2	Nut-Flange, NI
9	99-9415	1	Hose-Fuel
10	3290-378	4	Tie-Cable
11	115-7872	1	Hose-Fuel
12	116-5464	1	Tee And Check
13	116-4346	1	Hose-Emissions
14	120-2235	1	Filter-Fuel
15	116-4769	1	Decal-Filter, Emissions

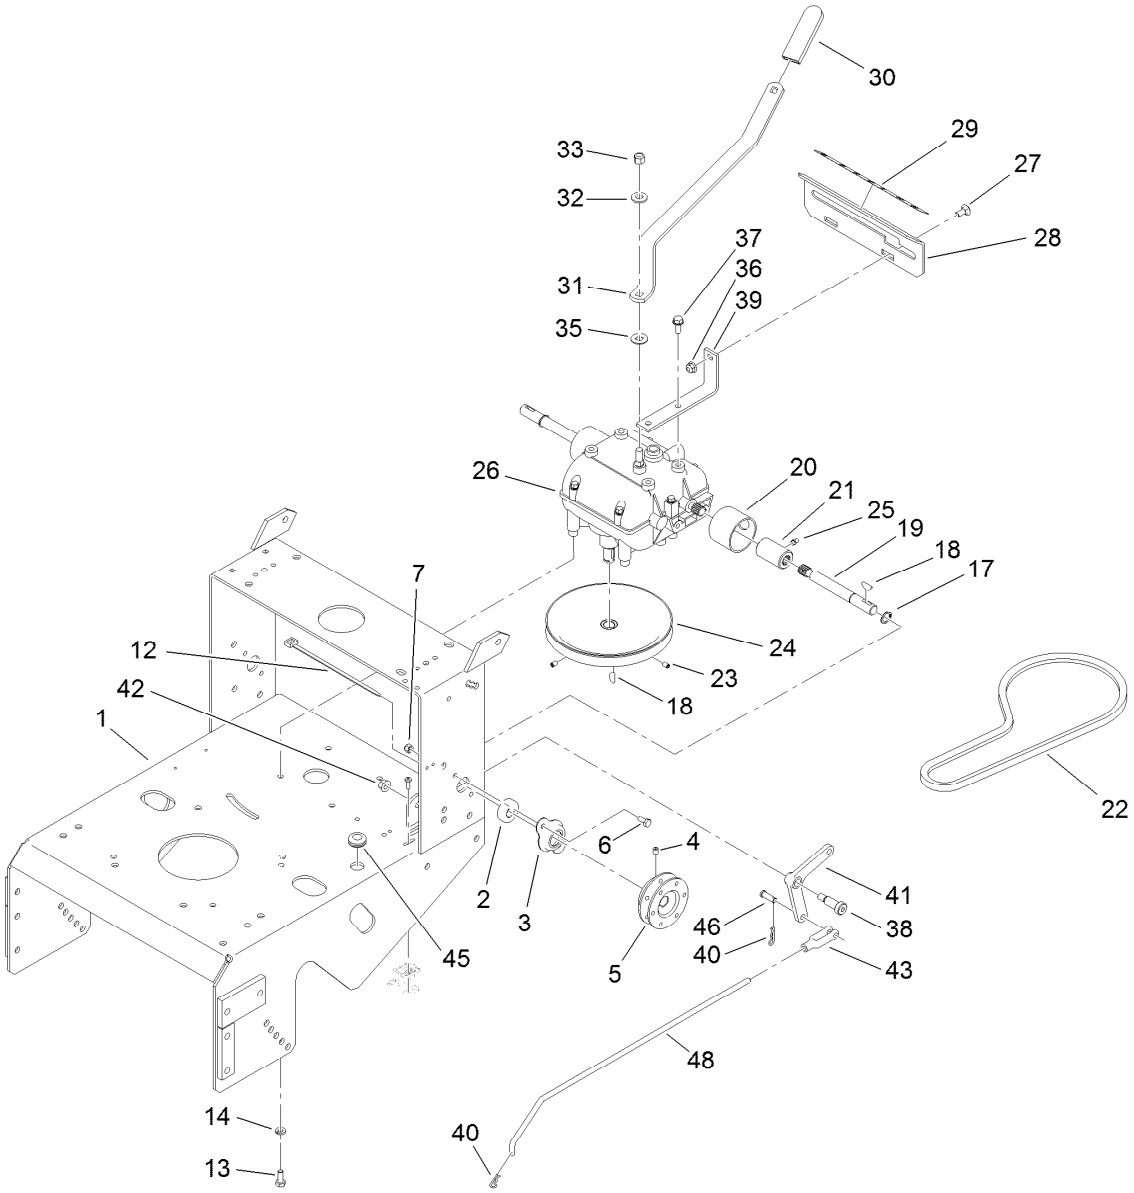

Frame and Transmission Assembly

Ref.	Part Number	Qty.	Description
1	116-6084-01	1	Frame-Gear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	3246-18	2	Setscrew
5	103-6512	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	3296-42	4	Nut-Lock, NI
12	1-303287	1	Tie-Cable
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission

Ref.	Part Number	Qty.	Description
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	104-8300	2	Nut-Flange, NI
37	32144-11	4	Screw-HWHTF
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	2	Pin-Cotter, Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF, Whiz
43	1-303105	1	Yoke-Adjustable
45	1-543296	1	Grommet
46	1-808280	1	Pin-Clevis
48	1-323303	1	Arm-Assist, Linkage

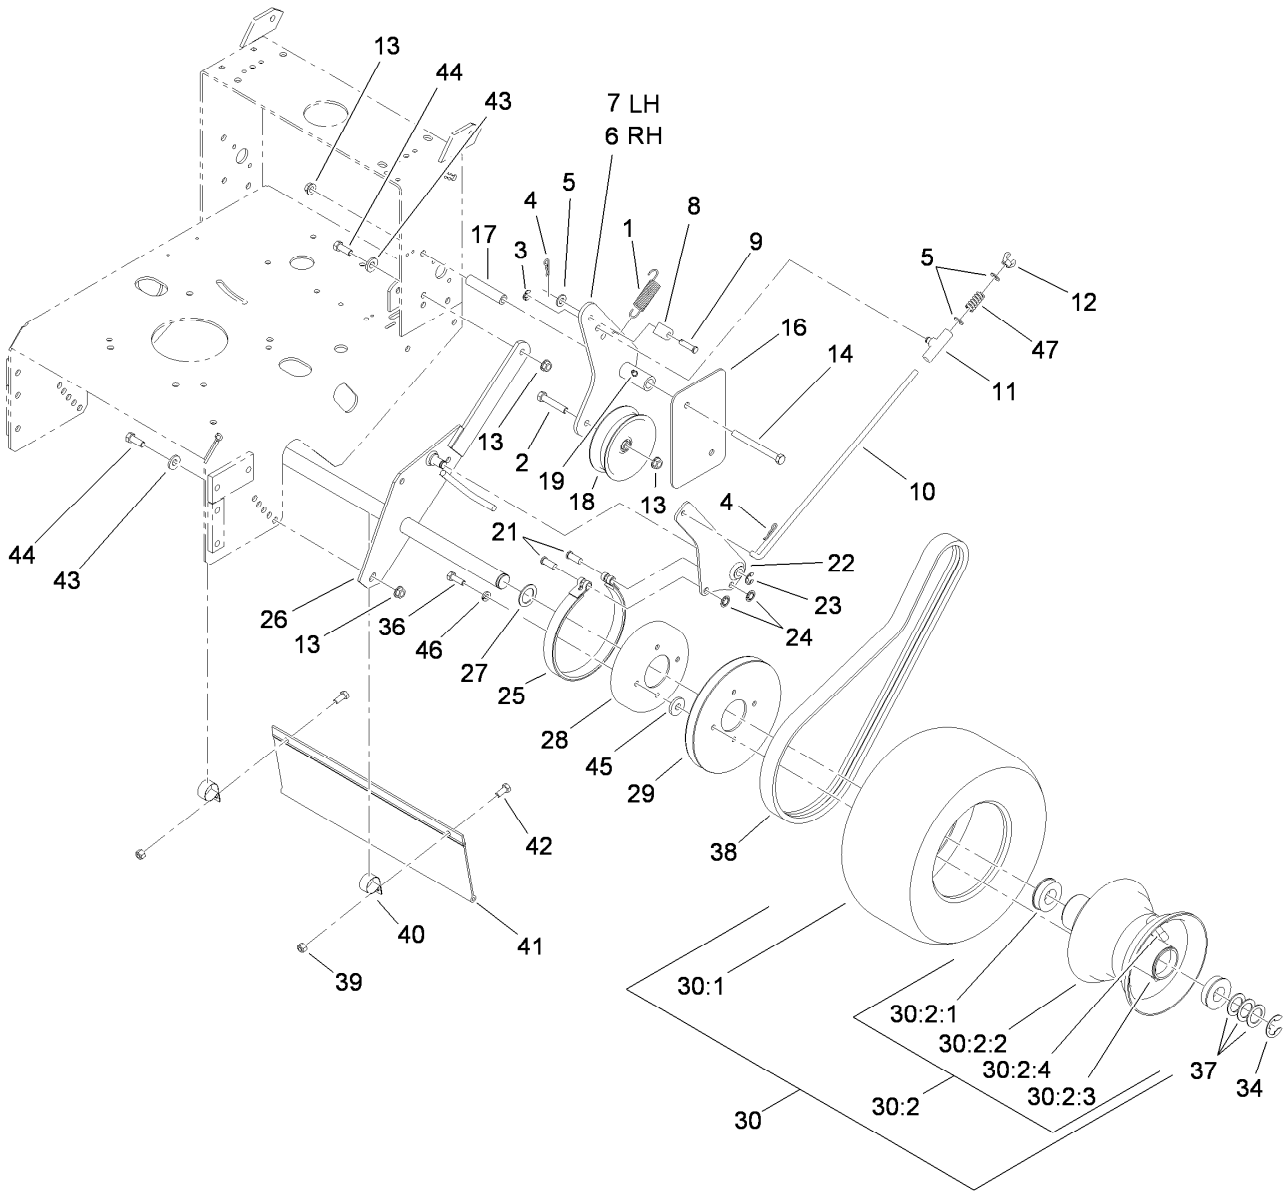


Drive Wheel and Brake Assembly

Ref.	Part Number	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Cotter, Hair
5	3256-23	4	Washer-Flat
6	110-4925-03	1	Arm-Idler, RH
7	110-4926-03	1	Arm-Idler, LH
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease

Ref.	Part Number	Qty.	Description
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322232-03	1	Axle ASM
27	1-543436	2	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive
30	130-4551	2	Wheel And Tire ASM
30:1	1-323361	1	Tire
30:2	130-4566	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
30:2:2		1	Rim ASM ●
30:2:3		1	Fitting-Grease ●
30:2:4		1	Valve Stem And Cap ●
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH


● Not serviced separately

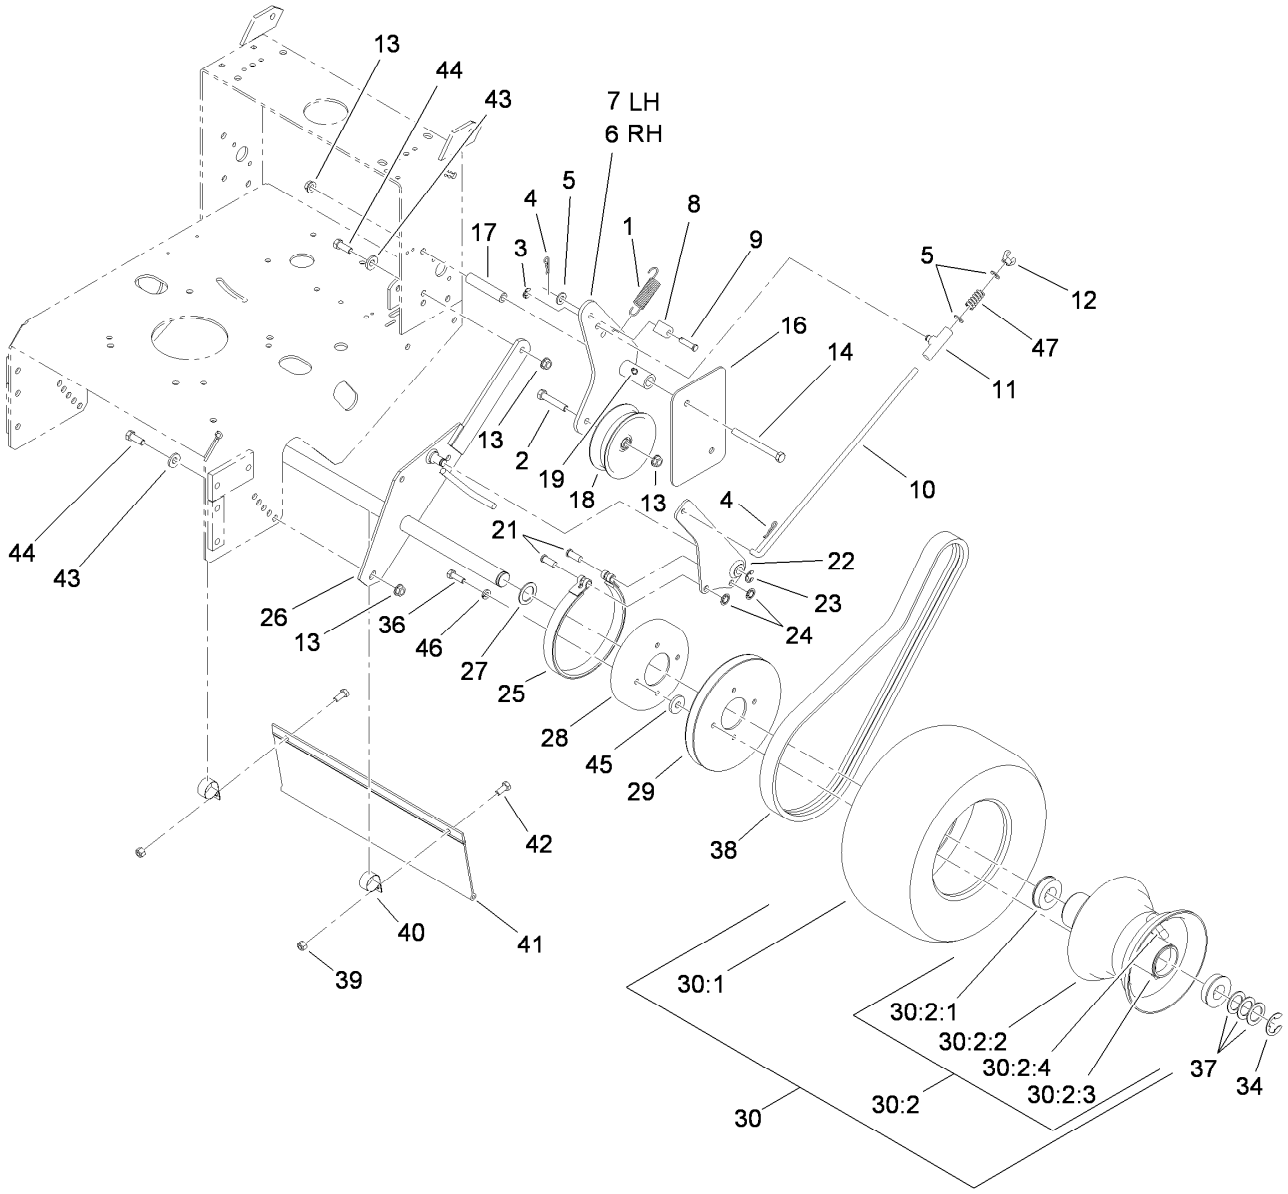

Drive Wheel and Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
37	1-523157	6	Washer-Spacer
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	Clamp-R
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
47	1-323245	2	Spring-Compression


● Not serviced separately

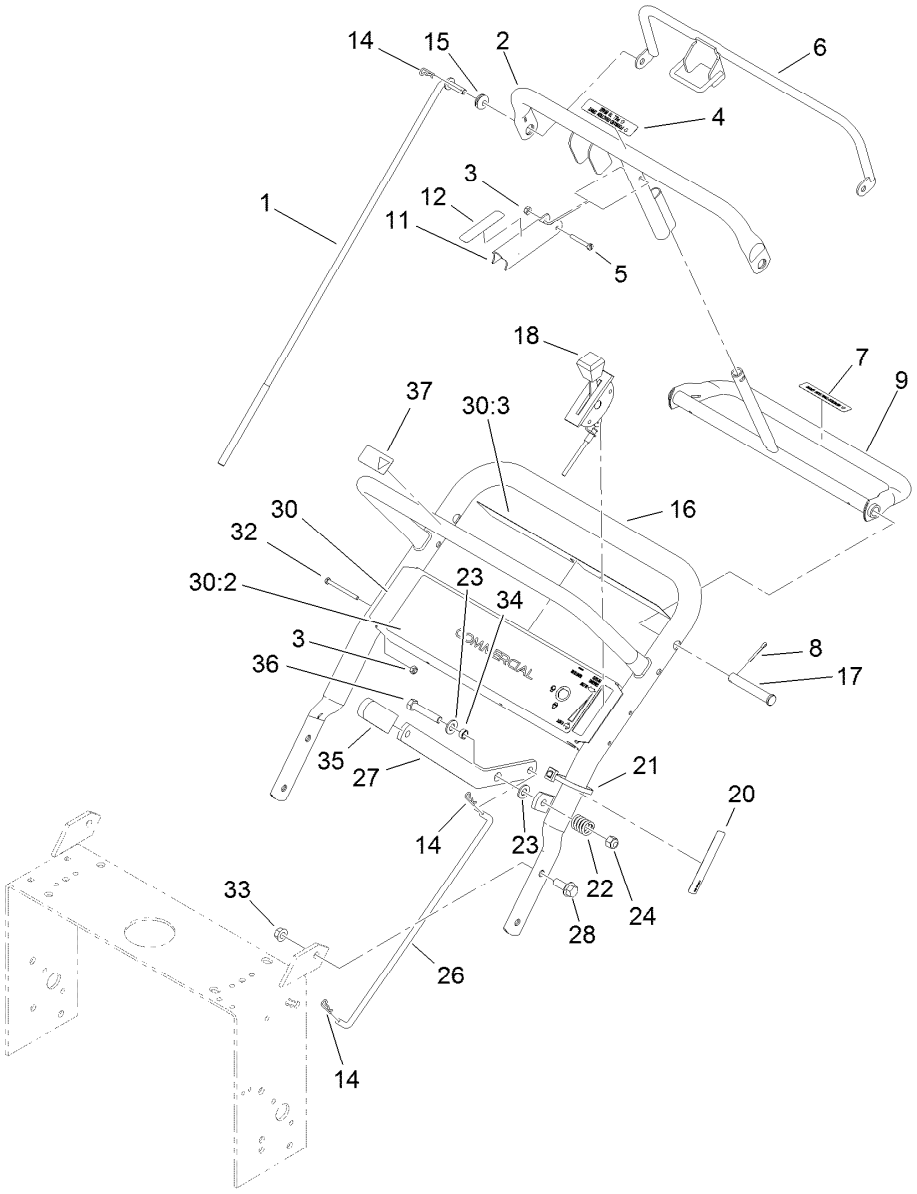

Handle and Control Assembly


Ref.	Part Number	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Bar-Control
3	3296-2	5	Nut-Lock, NI
4	82-2290	1	Decal
5	32105-1	1	Screw-SHH
6	82-7680-03	1	Bail
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	106-5477-03	1	Pivot-Control
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal
14	1-806003	3	Pin-Cotter, Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Handle-Upper
17	283-55	2	Pin-Clevis
18	119-6539	1	Cable-Throttle
20	95-5537	1	Decal-Engage, Deck

Ref.	Part Number	Qty.	Description
21	1-303335	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	104-8301	1	Nut-Flange, NI
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	3234-11	4	Screw-HHF
30	110-6905	1	Control Panel ASM
30:2	110-6916	1	Decal-Panel, Control
30:3	105-0884	1	Decal-Danger
32	32105-14	4	Screw-SHH
33	32128-21	4	Nut-HF
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear

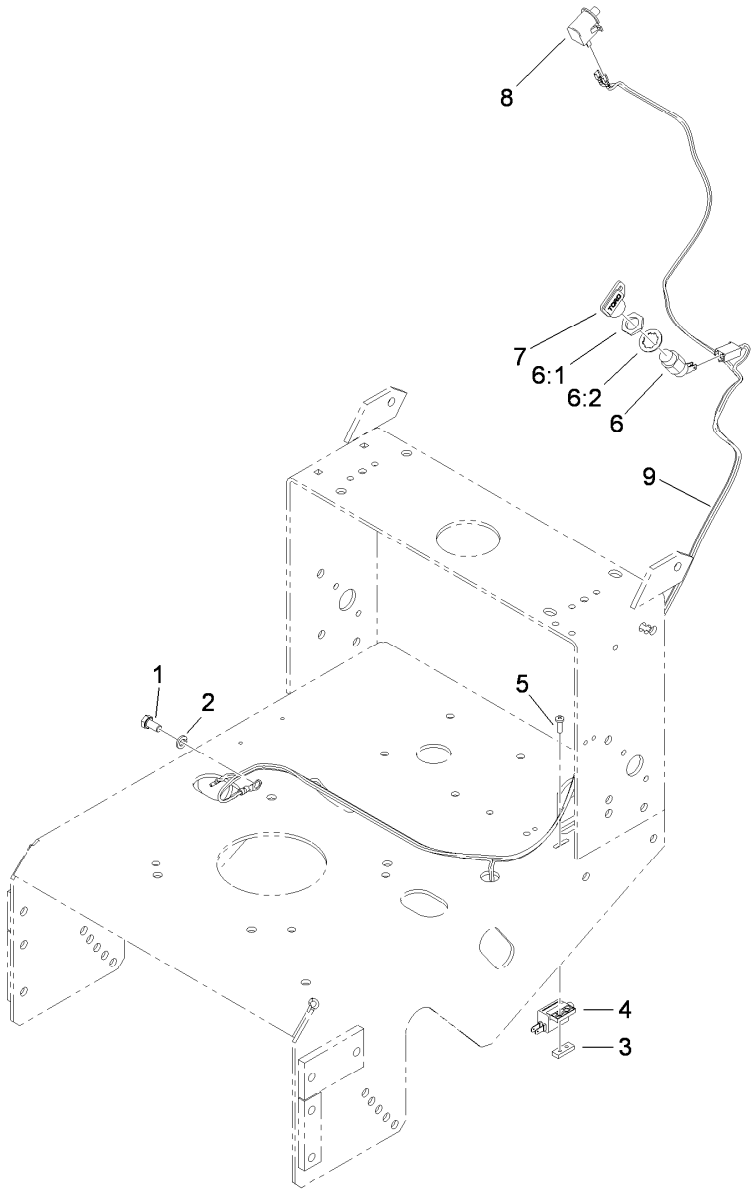

Wire Harness Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	33114-016	1	Screw-HH
2	3253-4	1	Washer-Lock
3	1-633181	1	Plate-Tapped
4	1-513152	1	Switch-Closed, Normally
5	3290-500	2	Screw-PPH
6	29-5560	1	Switch-On / Off
6:1	218-461	1	Nut-HH
6:2	3254-5	1	Washer-Tooth, Internal
7	63-8360	1	Key-Ignition
8	740275	1	Switch
9	119-6535	1	Harness-Wire

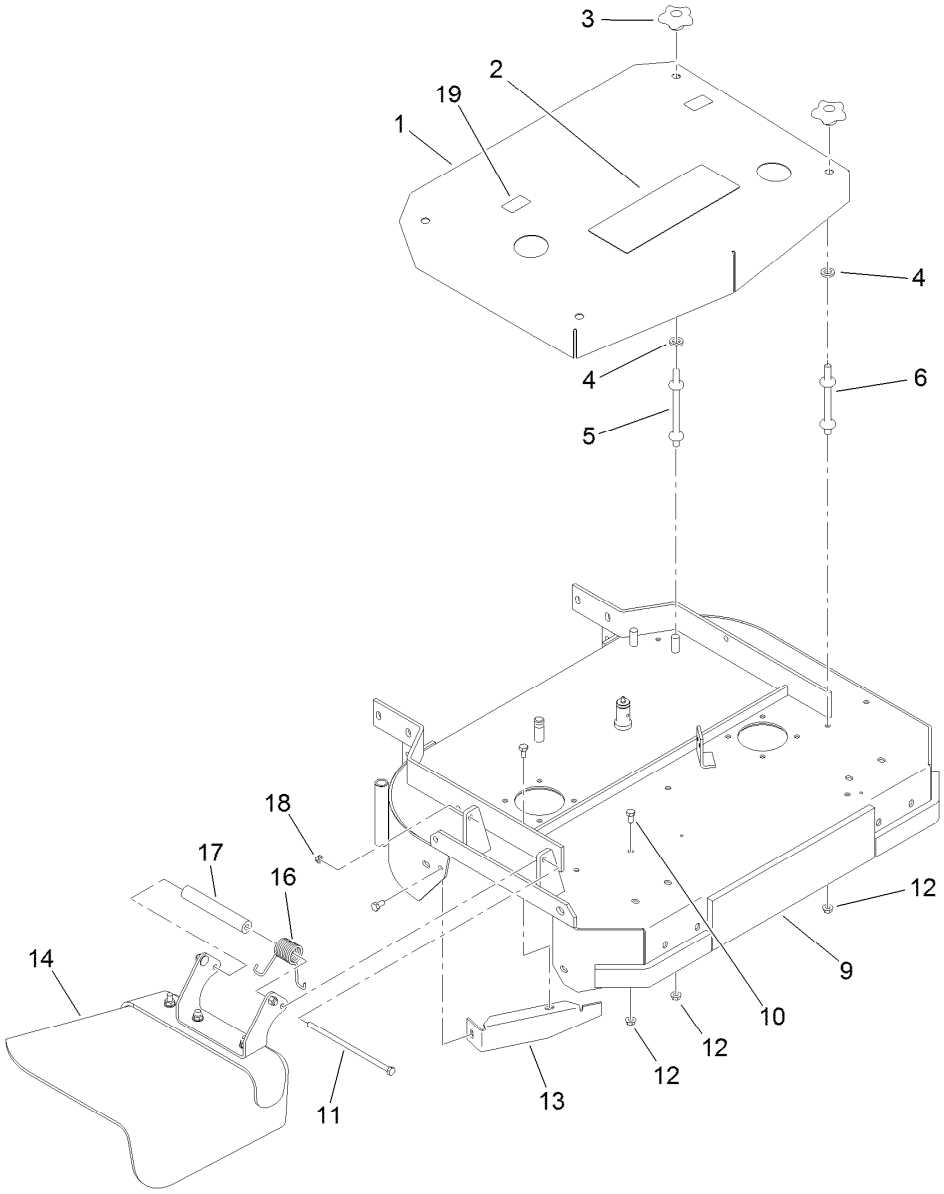

Deck and Shield Assembly

Ref.	Part Number	Qty.	Description
1	1-322149-01	1	Shield ASM
2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	110-6901	1	32 Inch Deck ASM
10	322-2	7	Screw-HH


Ref.	Part Number	Qty.	Description
11	322-50	1	Screw-HH
12	32128-20	11	Nut-HF
13	116-1730-01	1	Baffle-Dogleg
14	119-6529	1	Deflector ASM
16	108-4052	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-47	1	Nut-Lock, NI
19	103-2076	2	Decal-Caution

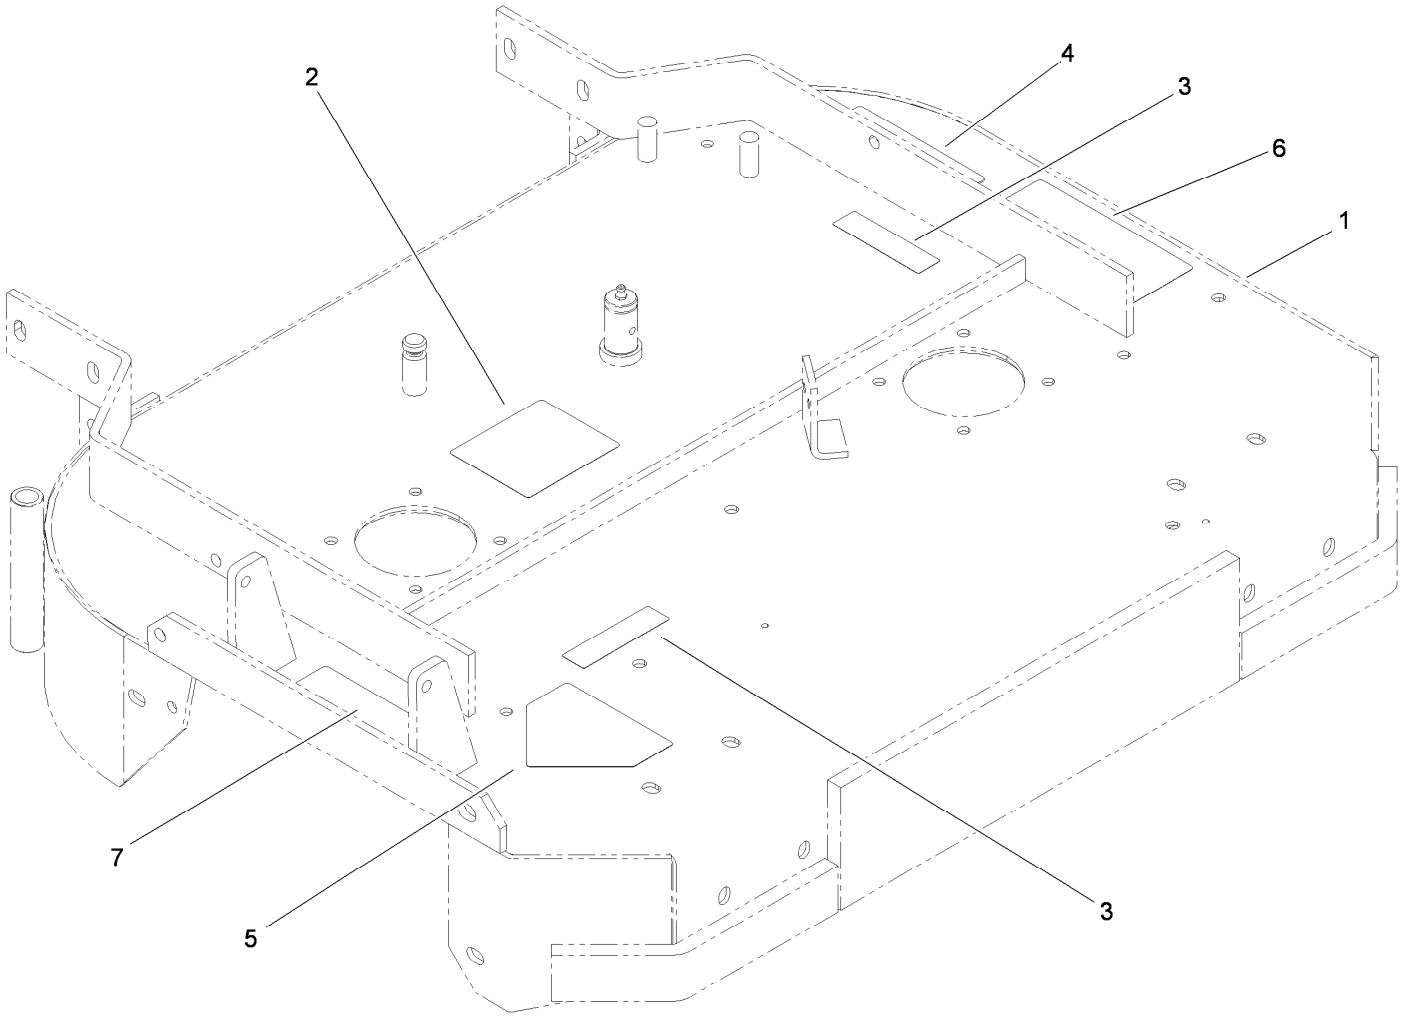

Deck Decal Assembly No. 110-6901


Ref.	*Part Number*	*Qty.*	*Description*
1		1	Deck ●
2	98-3296	1	Decal-Routing, Belt
3	98-5954	2	Decal-Missing Cover
4	98-5130	1	Decal-Torque, Bolt
5	1-403005	1	Decal-Danger
6	66-1340	1	Decal-Danger, Thrown Object
7	104-8569	1	Decal-Warning

● Not serviced separately

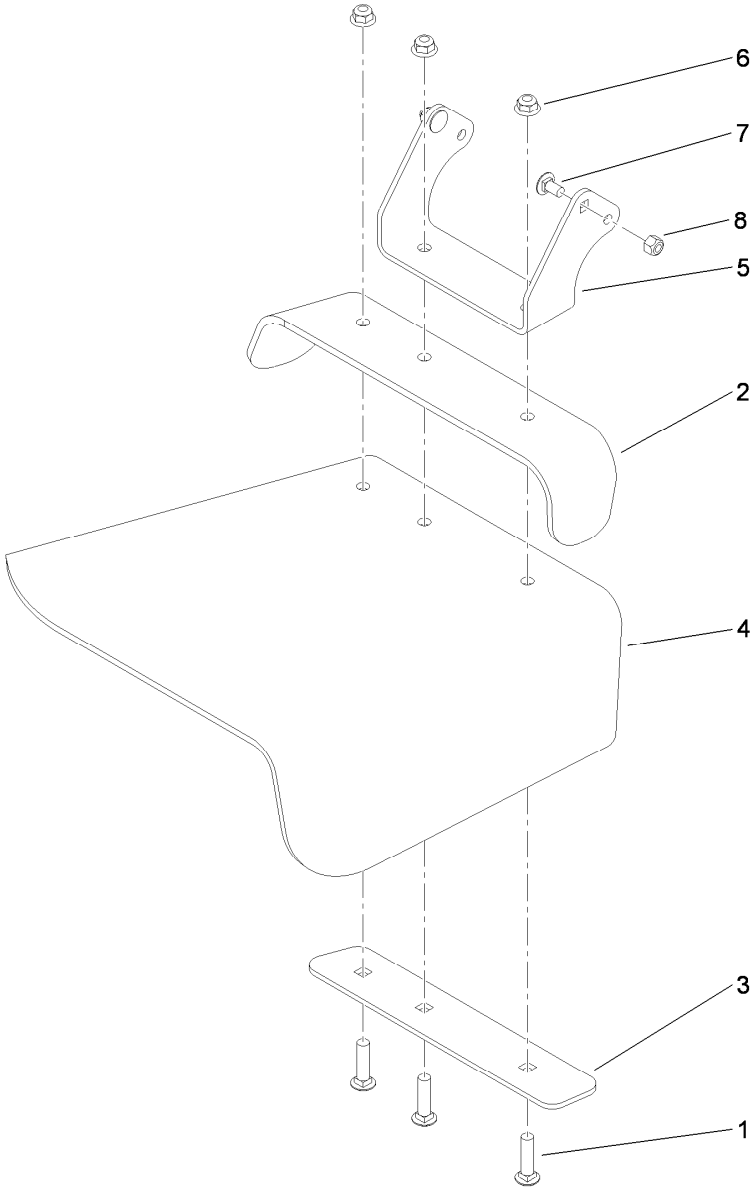

Deflector Assembly No. 119-6529

Ref.	*Part Number*	*Qty.*	*Description*
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	119-6532-01	1	Bracket-Mounting, Deflector
6	104-8301	3	Nut-Flange, NI
7	3230-18	2	Screw-CARR
8	3296-29	2	Nut-Lock, NI

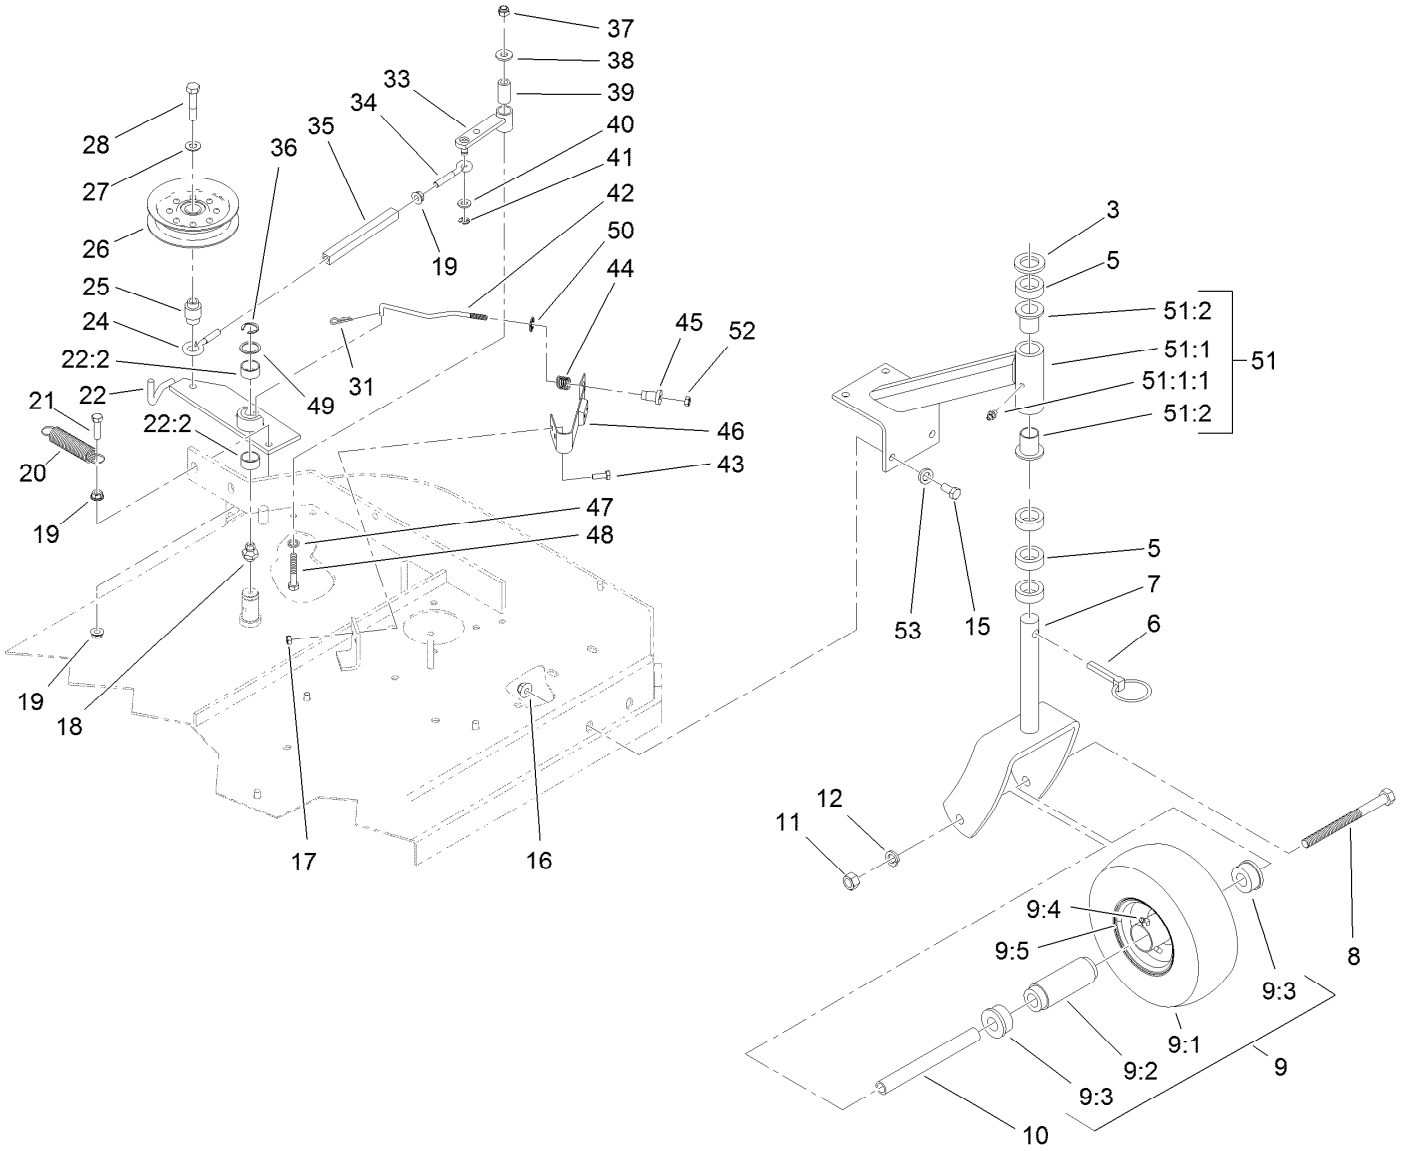


Idler Arm and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	116-7942-01	2	Fork-Caster
8	325-20	2	Screw-HH
9	130-4557	2	Wheel And Tire ASM
9:1		1	Tire ●
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Fitting-Grease
9:5		1	Wheel ●
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	104-8301	8	Nut-Flange, NI
17	3296-42	2	Nut-Lock, NI
18	302-40	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	116-3515	1	Screw-HH, Special
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	116-3626	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-HH
31	1-806003	1	Pin-Cotter, Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Retaining, EXT
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot

● Not serviced separately

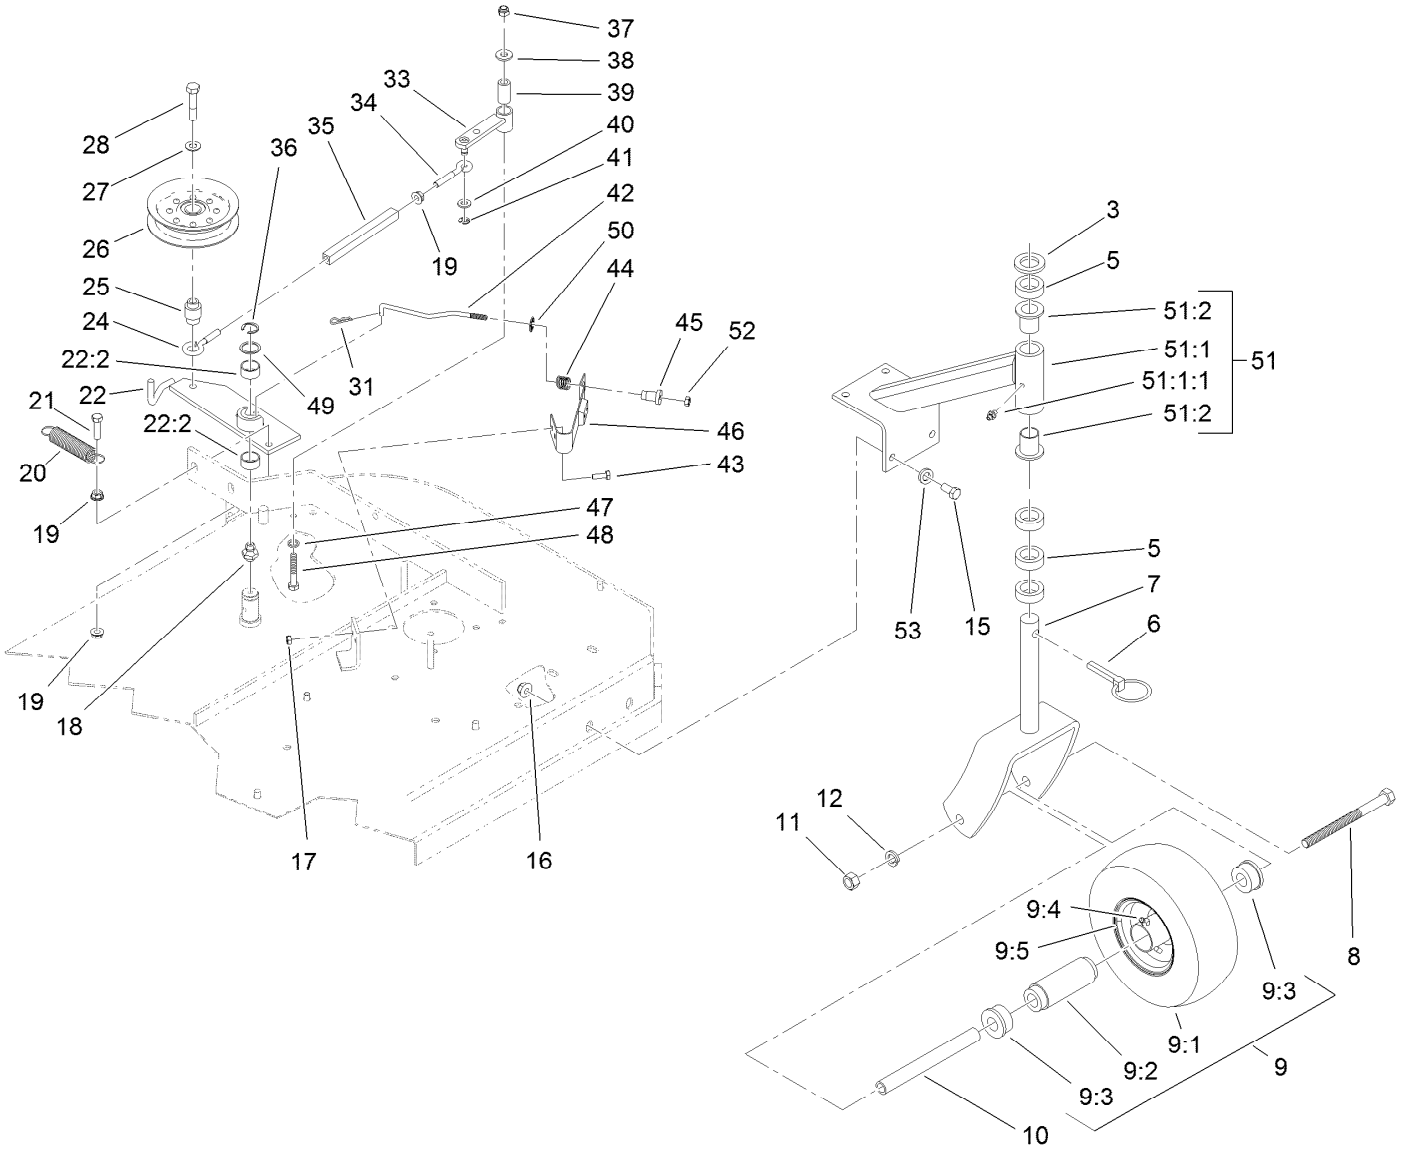


Idler Arm and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH


Ref.	Part Number	Qty.	Description
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
51:1		1	Support-Caster ●
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

● Not serviced separately

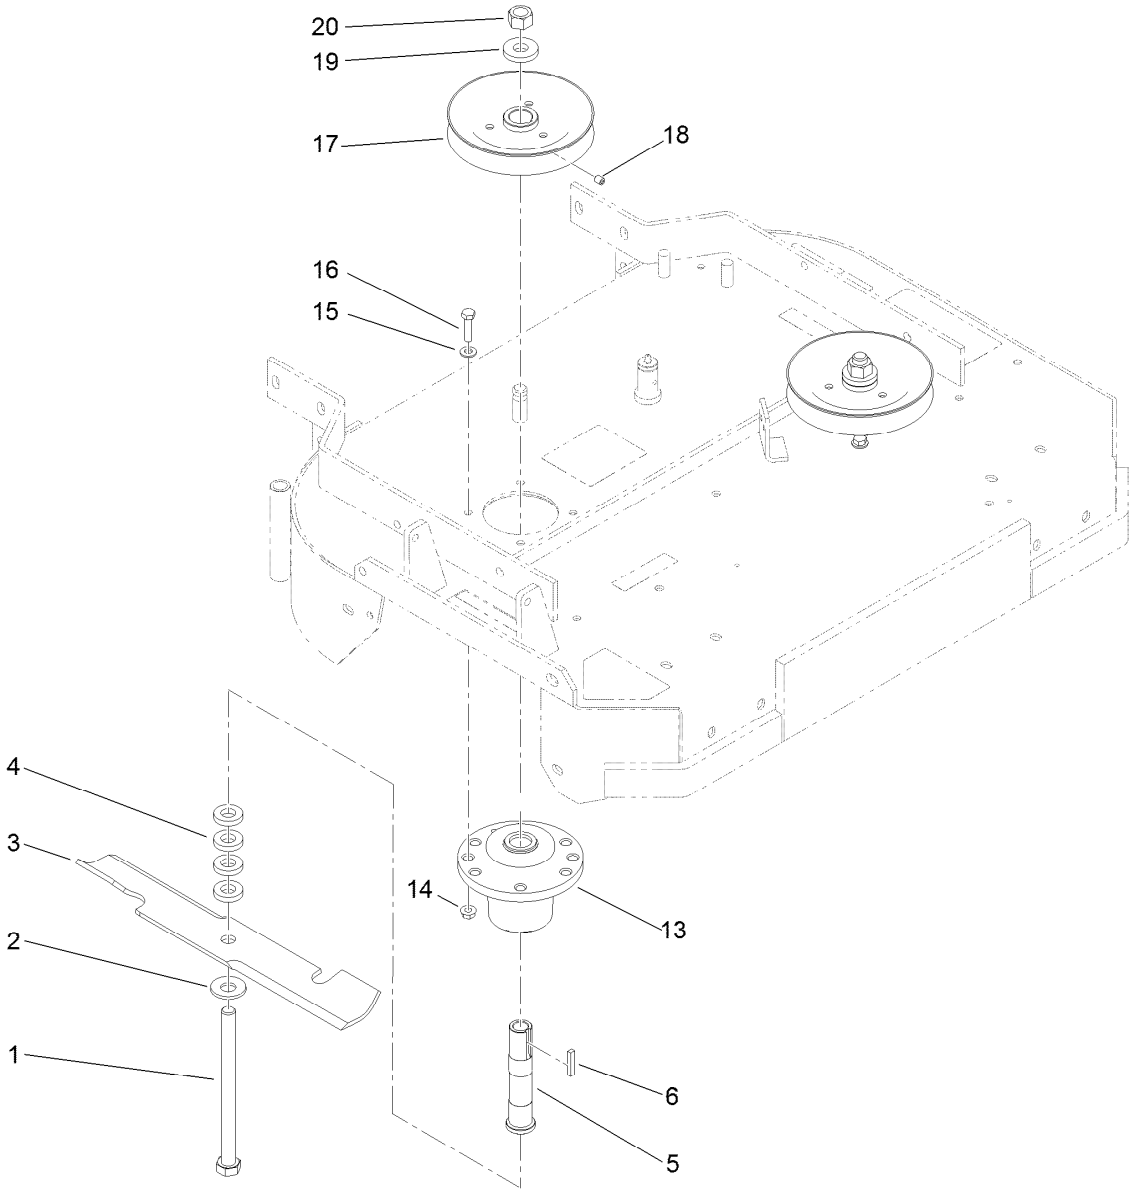

Spindle and Blade Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2527	2	Blade-Notched
4	1-323539	8	Spacer
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
13	107-4065	2	Cutter Housing ASM
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	3246-18	2	Setscrew
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex

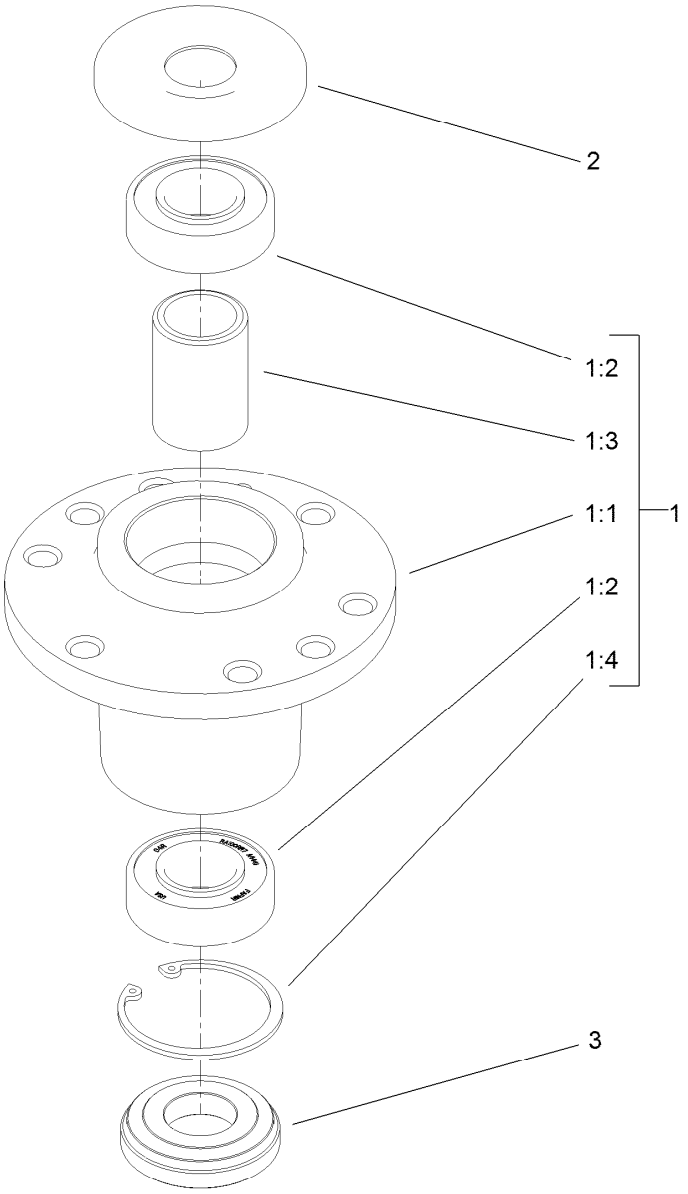

Cutter Housing Assembly No. 107-4065

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Cutter Housing ASM ●
1:1	103-7975	1	Housing-Spindle
1:2	103-2477	2	Bearing-Jackshaft
1:3	103-2534	1	Spacer-Bearing
1:4	32120-8	1	Ring-Snap
2	103-1330	1	Guard-Bearing, Top
3	103-2535	1	Spacer-Guard, Bottom

● Not serviced separately

Attachments and Accessories

For 30672 Commercial Walk-Behind Mower Fixed Deck, T-Bar, Gear Drive with 32in Cutting Unit

Product Name	Model/Part
32in and 48in Fixed Deck Low Lift Blades	103-2507
Blade-Notched	103-2527
Atomic Blade and Decal Assembly	104-8595
Blade-Atomic, 16.25in (6 Pack)	110-0407
Spring-Extension	110-1119
32in Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

Notes:



Count on it.