Form No. 3375-823 Rev B

TORO®

Count on it.

Parts Catalog

# TimeCutter® SS 4235

## Riding Mower

**Model No. 74625—Serial No. 313000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3375-823* B

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Frame, Front Axle and Caster Wheel Assembly . . . . . 4
Caster Wheel Assembly No. 120-5515. . . . . 5
Deck Lift Assembly. . . . . 6
Seat Assembly . . . . . 7
Motion Control Assembly . . . . . 8
Belt and Idler Assembly. . . . . 10
Hydro Transaxle Drive and Rear Wheel Assembly . . . . . 11
Right Hand Hydro Transaxle Assembly No. 119-3331 . . . . . 12
Left Hand Hydro Transaxle Assembly No. 119-3330 . . . . . 14
Clutch Assembly. . . . . 16
Engine and Muffler Assembly. . . . . 17
Body Styling and Fuel Tank Assembly . . . . . 18
Fuel Delivery System Assembly. . . . . 19
Battery and Electrical Assembly. . . . . 20
42 Inch Deck Assembly. . . . . 21
42 Inch Deck Assembly No. 119-8840 . . . . . 22
42 Inch Deck Belt, Spindle and Blade Assembly. . . . . 23
Attachments and Accessories . . . . . 24

**© 2013—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**




**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

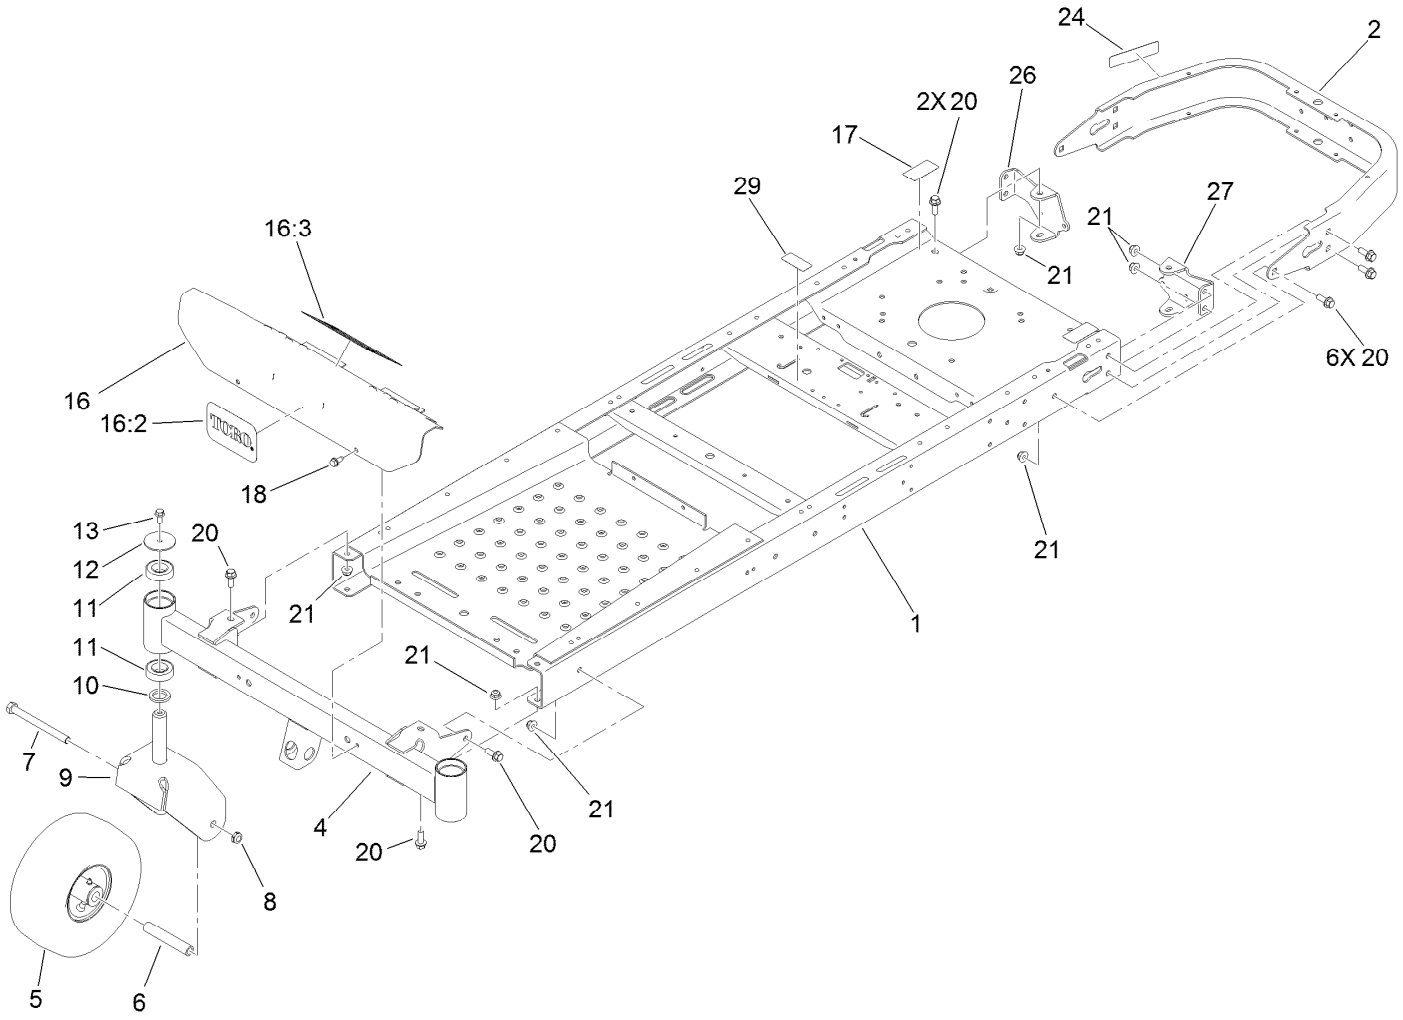


# Frame, Front Axle and Caster Wheel Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-2970-01 | 1 | Frame |
| 2 | 110-1920-01 | 1 | Bumper-Rear |
| 4 | 120-5516-01 | 1 | Axle-Front |
| 5 | 120-5515 | 2 | Caster Wheel ASM |
| 6 | 104-3667 | 2 | Spanner-Wheel |
| 7 | 325-22 | 2 | Screw-HH |
| 8 | 3296-45 | 2 | Nut-Lock, NI |
| 9 | 120-2266-01 | 2 | Fork-Caster |
| 10 | 117-7394 | 2 | Washer-Thrust |
| 11 | 109-3678 | 4 | Bearing-Ball |
| 12 | 119-8915 | 2 | Washer |
| 13 | 3234-47 | 2 | Screw-HHF |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16 | 125-0072 | 1 | Footrest ASM |
| 16:2 | 105-8278 | 1 | Decal |
| 16:3 | 120-2239 | 1 | Decal-Danger |
| 17 | 121-2989 | 2 | Decal-Bypass |
| 18 | 32144-70 | 2 | Screw-HWHTF |
| 20 | 3234-42 | 14 | Screw-HHF |
| 21 | 104-8301 | 14 | Nut-Flange, NI |
| 24 | 117-2718 | 1 | Decal-Arrester, Spark |
| 26 | 121-0737-01 | 1 | Mount-Hydro, Rear RH |
| 27 | 121-0738-01 | 1 | Mount-Hydro, Rear LH |
| 29 | 121-5684 | 1 | Decal-Location, Service Dealer |

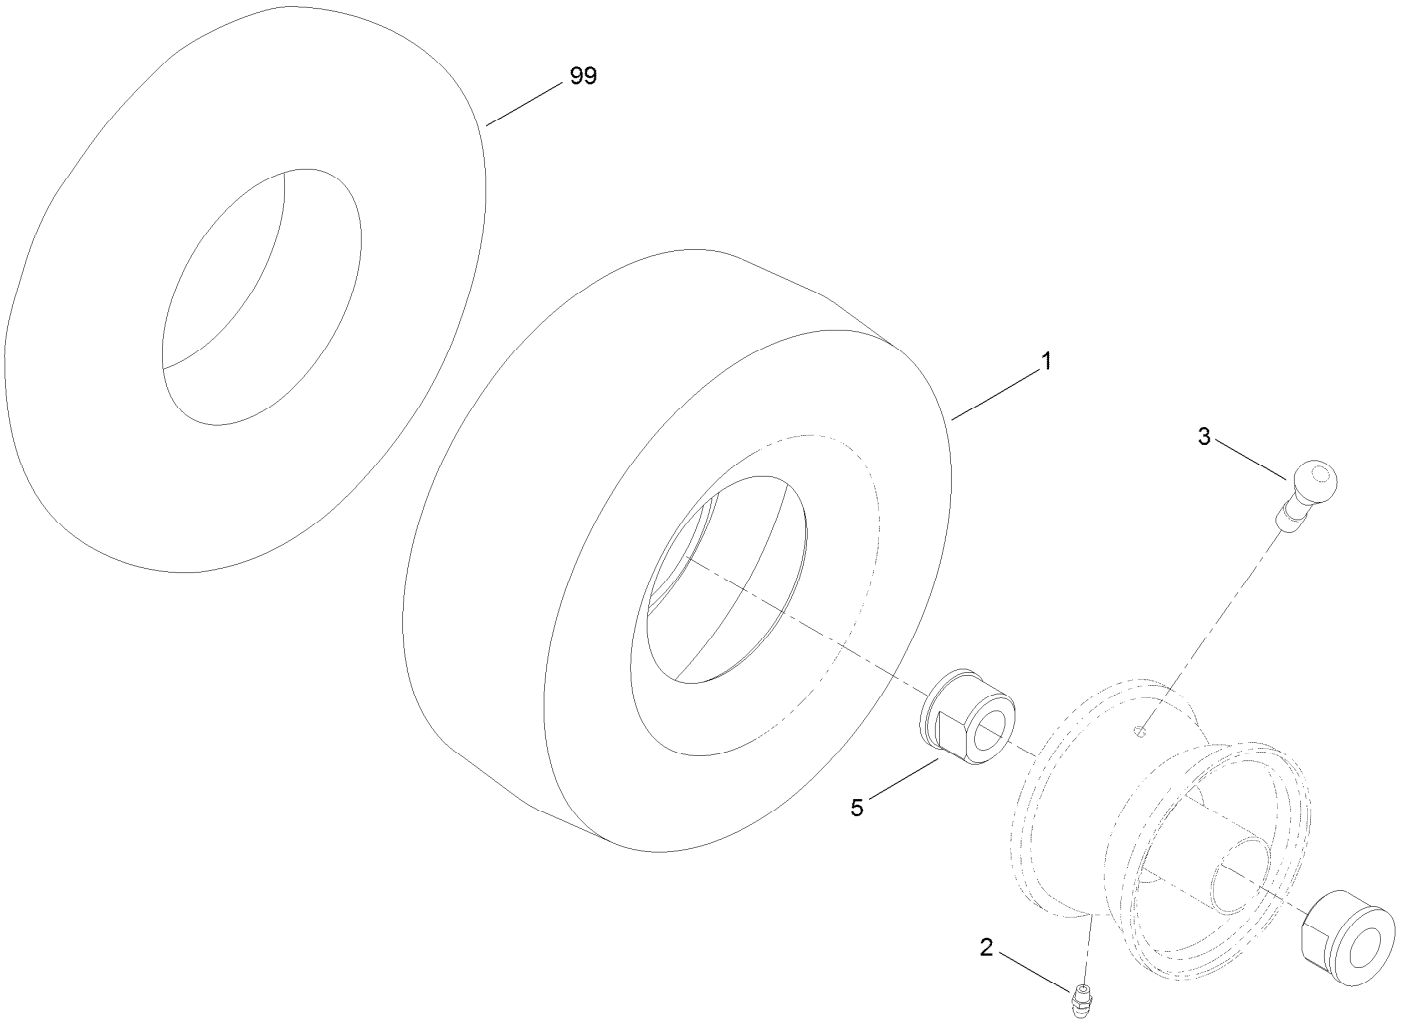


# Caster Wheel Assembly No. 120-5515


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 120-5514 | 1 | Tire-Smooth |
| 2 | 302-5 | 1 | Fitting-Grease |
| 3 | 232-27 | 1 | Stem-Valve |
| 5 | 114-1640 | 2 | Bushing-Flange |
| 99 | 93-4244 | 1 | Tube-Inner (W/Valve) |

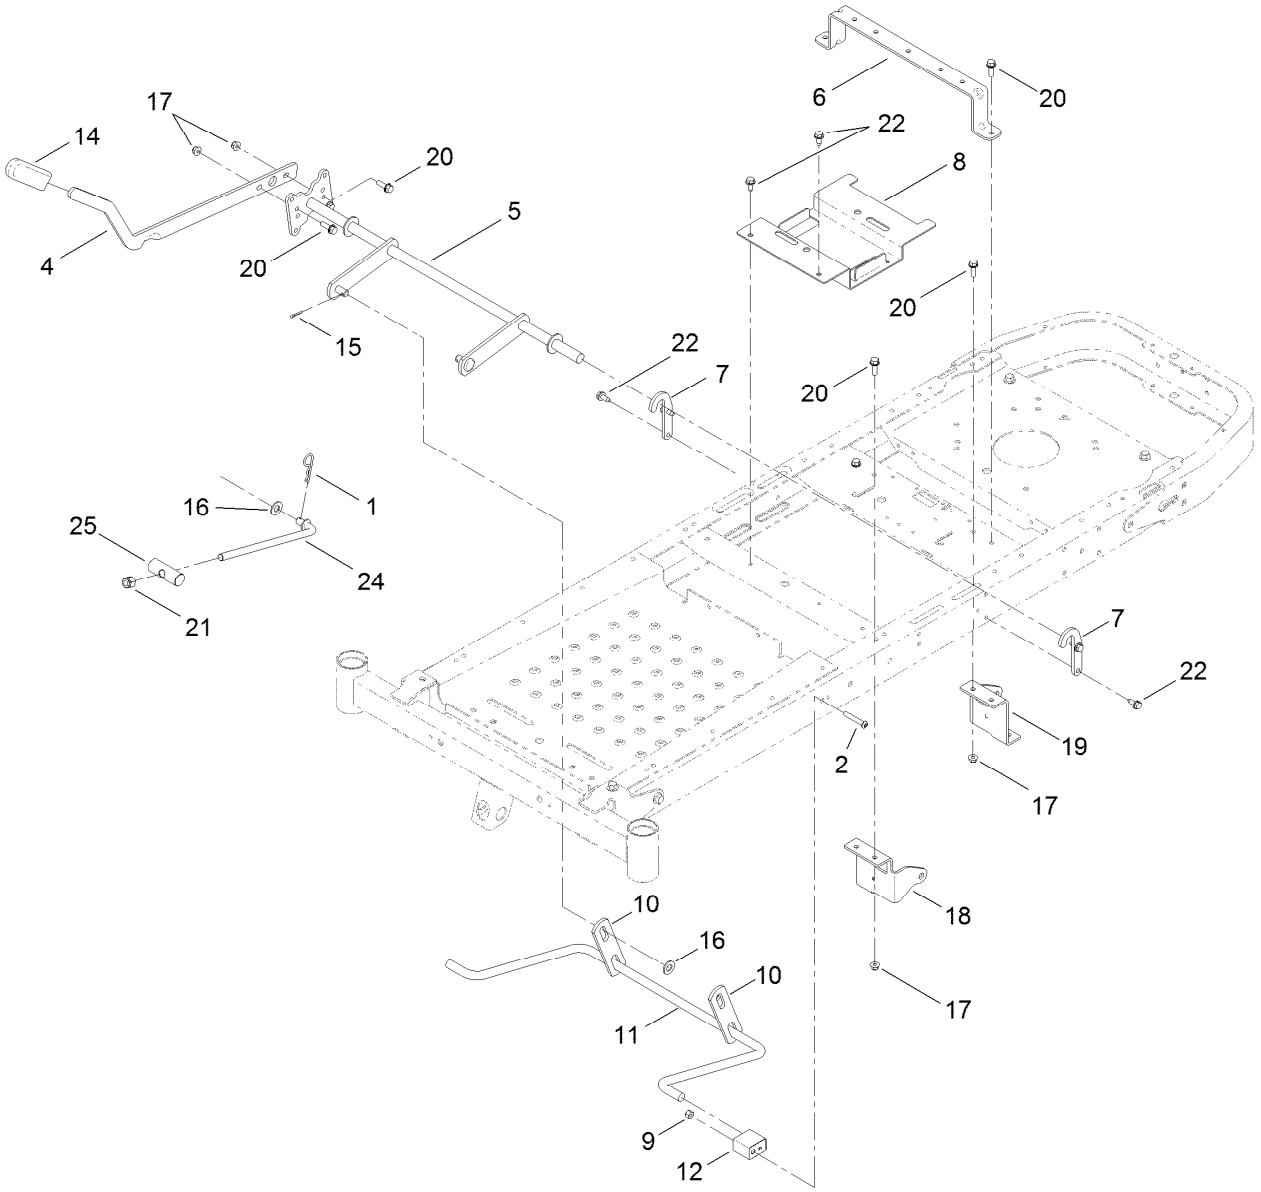


# Deck Lift Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-806005 | 1 | Pin-Hair |
| 2 | 120-5499 | 2 | Screw-HSBH |
| 4 | 119-3427-03 | 1 | Lever-Lift |
| 5 | 117-7346-03 | 1 | Lift-Deck |
| 6 | 119-3435-03 | 1 | Brace-Seat, Rear |
| 7 | 119-8875 | 2 | Bracket-Lift |
| 8 | 119-3406-03 | 1 | Bracket-Battery |
| 9 | 3296-29 | 2 | Nut-Lock, NI |
| 10 | 108-7840 | 2 | Link-Lift |
| 11 | 108-7839 | 1 | Arm-Lift, Rear |
| 12 | 108-7845 | 2 | Block-Pivot |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 14 | 1-633268 | 1 | Grip-Lever |
| 15 | 3272-10 | 2 | Pin-Cotter |
| 16 | 3256-26 | 3 | Washer-Flat |
| 17 | 104-8300 | 6 | Nut-Flange, NI |
| 18 | 119-8861-01 | 1 | Mount-Hydro, Front RH |
| 19 | 119-8862-01 | 1 | Mount-Hydro, Front LH |
| 20 | 3234-29 | 6 | Screw-HHF |
| 21 | 3296-19 | 1 | Nut-Hex |
| 22 | 32144-70 | 6 | Screw-HWHTF |
| 24 | 104-8047 | 1 | Rod-Trunion |
| 25 | 119-8810 | 1 | Pin-Pivot |

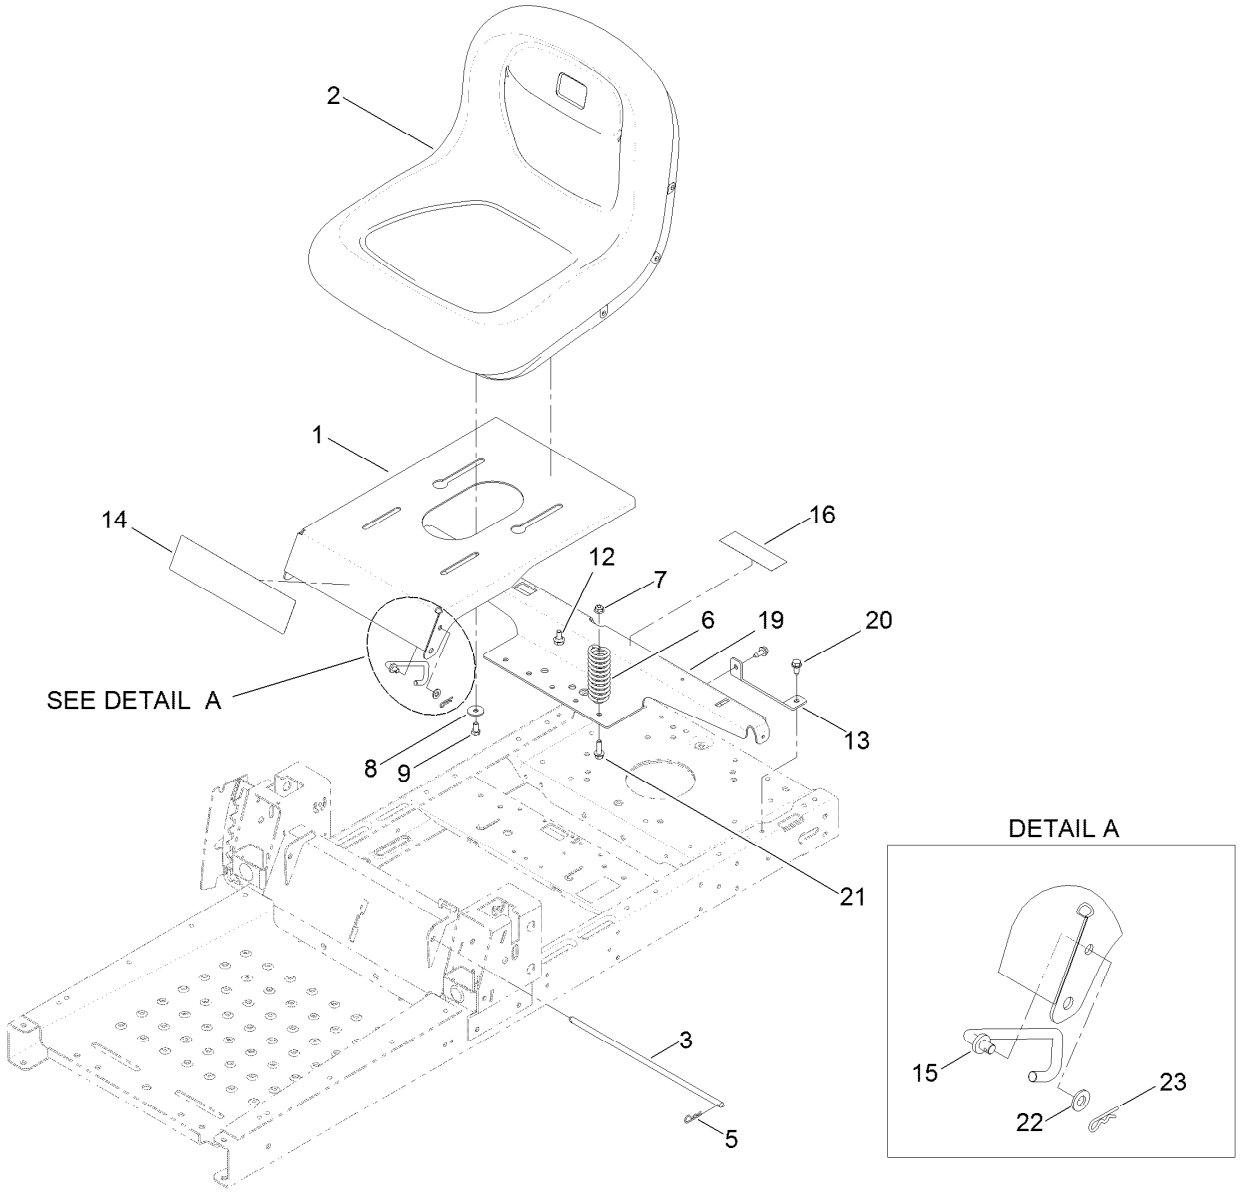



# Seat Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-3391-01 | 1 | Pan-Seat |
| 2 | 119-8828 | 1 | Seat-15 Inch |
| 3 | 119-3433 | 1 | Rod-Pivot, Narrow |
| 5 | 3290-250 | 2 | Pin-Hair |
| 6 | 92-7054 | 3 | Spring-Compression |
| 7 | 104-8300 | 3 | Nut-Flange, NI |
| 8 | 5-4460 | 2 | Washer-Pivot |
| 9 | 322-2 | 2 | Screw-HH |
| 12 | 37-8771 | 2 | Bolt-Shoulder |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 119-3431-03 | 2 | Support-Tank, Rear |
| 14 | 120-5458 | 1 | Decal-Timecutter |
| 15 | 119-8972 | 1 | Stop-Seat |
| 16 | 106-8717 | 1 | Decal-Service |
| 19 | 121-0732-03 | 1 | Support-Pod |
| 20 | 32144-70 | 4 | Screw-HWHTF |
| 21 | 3234-29 | 3 | Screw-HHF |
| 22 | 3256-23 | 1 | Washer-Flat |
| 23 | 3290-307 | 1 | Pin-Hair |

# Motion Control Assembly

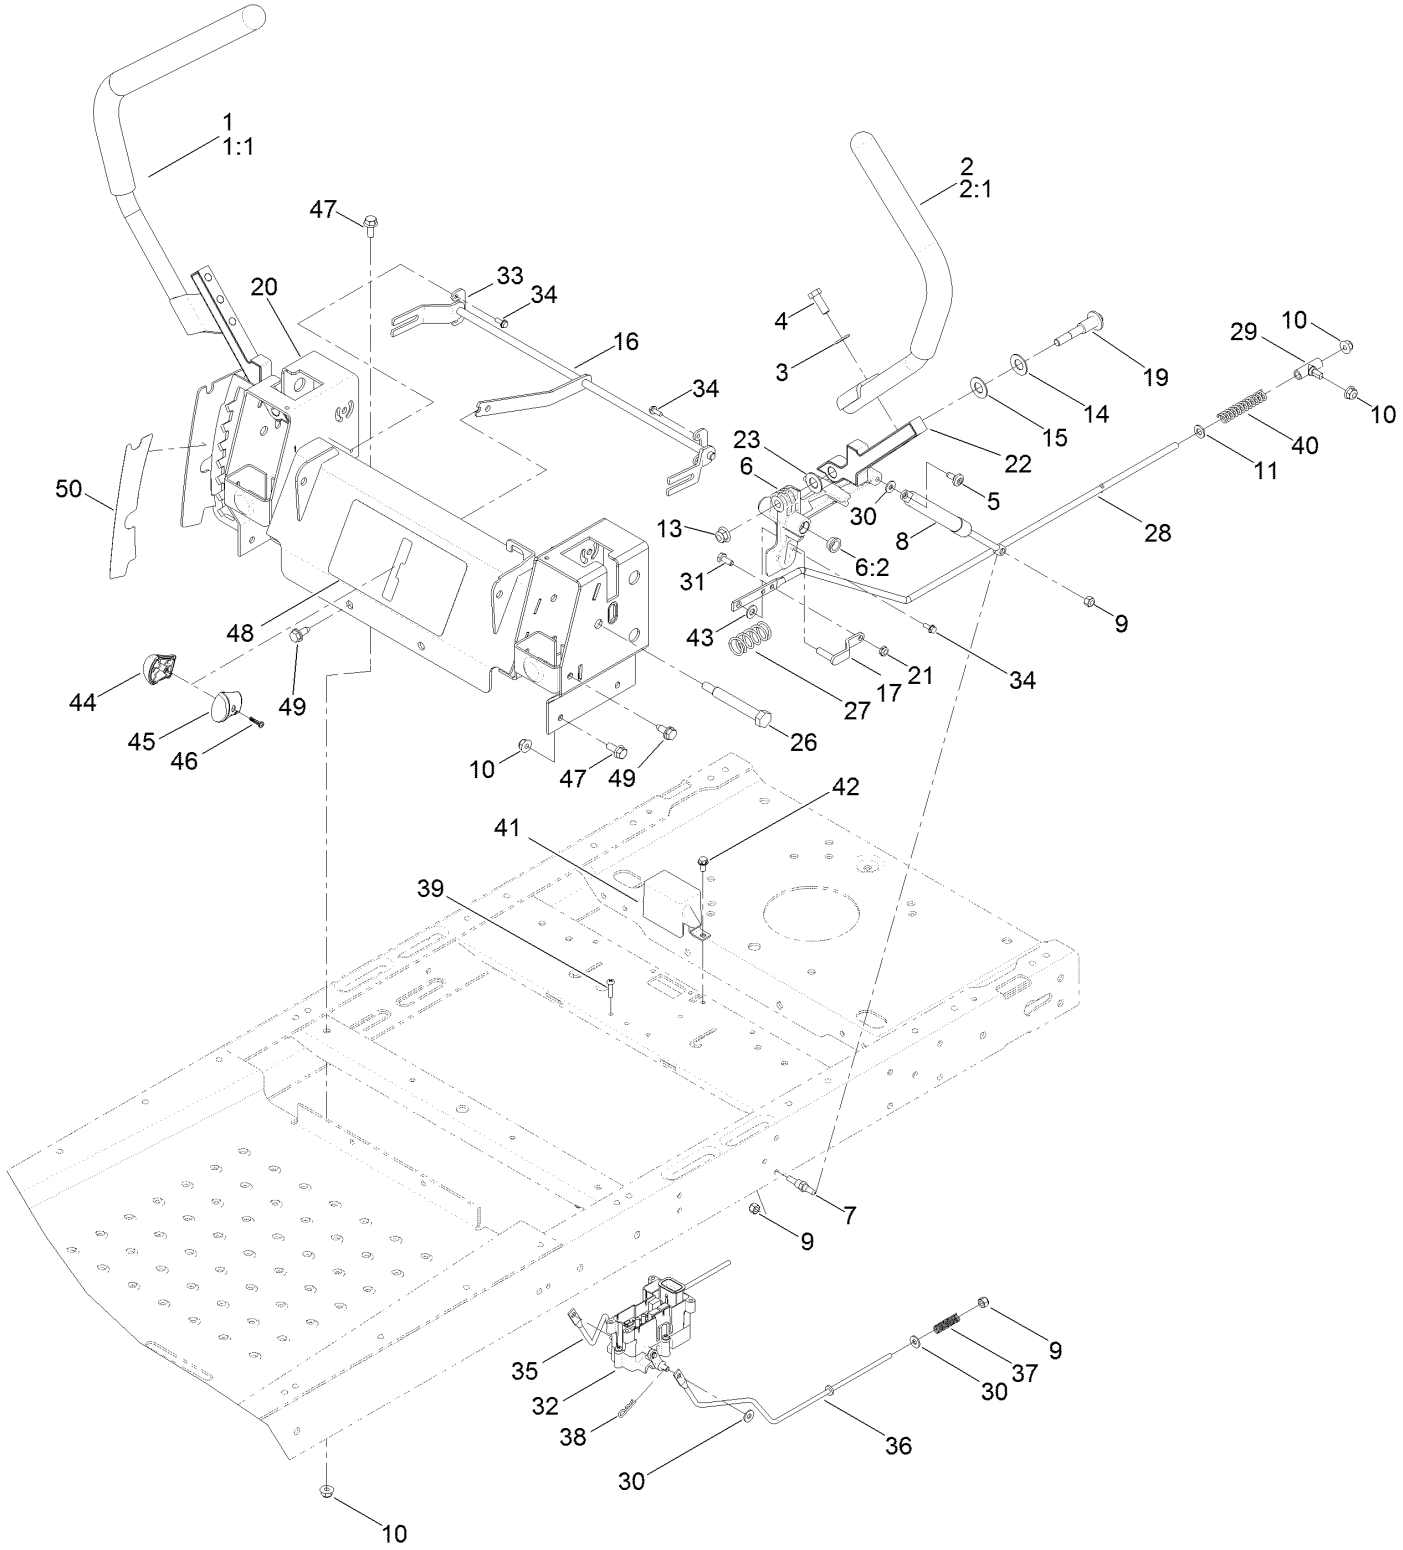


# Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-0731 | 1 | Handle-Control, RH |
| 1:1 | 121-0726 | 1 | Grip |
| 2 | 121-0730 | 1 | Handle-Control, LH |
| 2:1 | 121-0726 | 1 | Grip |
| 3 | 3256-24 | 4 | Washer-Flat |
| 4 | 323-6 | 4 | Screw-HH |
| 5 | 120-7950 | 2 | Screw-Shoulder |
| 6 | 119-3470 | 2 | Actuator Arm ASM |
| 6:2 | 256-156 | 2 | Bushing-Flange |
| 7 | 110-6810 | 2 | Stud-Damper |
| 8 | 103-2913 | 2 | Damper-Control, Motion |
| 9 | 3296-42 | 6 | Nut-Lock, NI |
| 10 | 104-8300 | 10 | Nut-Flange, NI |
| 11 | 3256-23 | 2 | Washer-Flat |
| 13 | 104-8301 | 4 | Nut-Flange, NI |
| 14 | 119-8925 | 2 | Washer-Belleville |
| 15 | 117-1240 | 2 | Washer |
| 16 | 119-8832 | 1 | Control-Speed |
| 17 | 119-3303 | 2 | Pin-Rod, Hydro |
| 19 | 117-1198 | 2 | Bolt-Pivot |
| 20 | 125-5473-03 | 1 | Control Box ASM |
| 21 | 3296-56 | 2 | Nut-Lock, NI |
| 22 | 115-5098-05 | 2 | Lever-Control |
| 23 | 120-2273 | 2 | Washer-Nylon |
| 26 | 115-5099 | 2 | Bolt-Pivot |
| 27 | 119-8876 | 2 | Spring-Return |
| 28 | 117-5388 | 2 | Rod-Hydro |
| 29 | 119-8842 | 2 | Mount-Rod, Hydro |
| 30 | 119-8952 | 8 | Washer |
| 31 | 321-3 | 2 | Screw-HH |
| 32 | 121-3017 | 1 | Brake Control Module ASM |
| 33 | 117-5385 | 2 | Retainer |
| 34 | 32144-1 | 4 | Screw-Taptite |
| 35 | 121-2974 | 1 | Rod-Brake, RH |
| 36 | 121-2975 | 1 | Rod-Brake, LH |
| 37 | 117-1169 | 4 | Spring-Compression |
| 38 | 3290-307 | 2 | Pin-Hair |
| 39 | 32144-36 | 4 | Screw-PPH |
| 40 | 1-603807 | 2 | Spring-Return, Neutral |
| 41 | 119-8859 | 1 | Cover-Brake |
| 42 | 32144-4 | 1 | Screw-HWH |
| 43 | 93-6079 | 2 | Spacer-Nylon |
| 44 | 119-8935 | 1 | Knob-RH |
| 45 | 119-8936 | 1 | Knob-LH |
| 46 | 94-4496 | 1 | Screw-PPH |
| 47 | 3234-47 | 6 | Screw-HHF |
| 48 | 119-8874 | 1 | Decal-Speed Control |
| 49 | 32144-70 | 4 | Screw-HWHTF |
| 50 | 119-8871 | 1 | Decal |

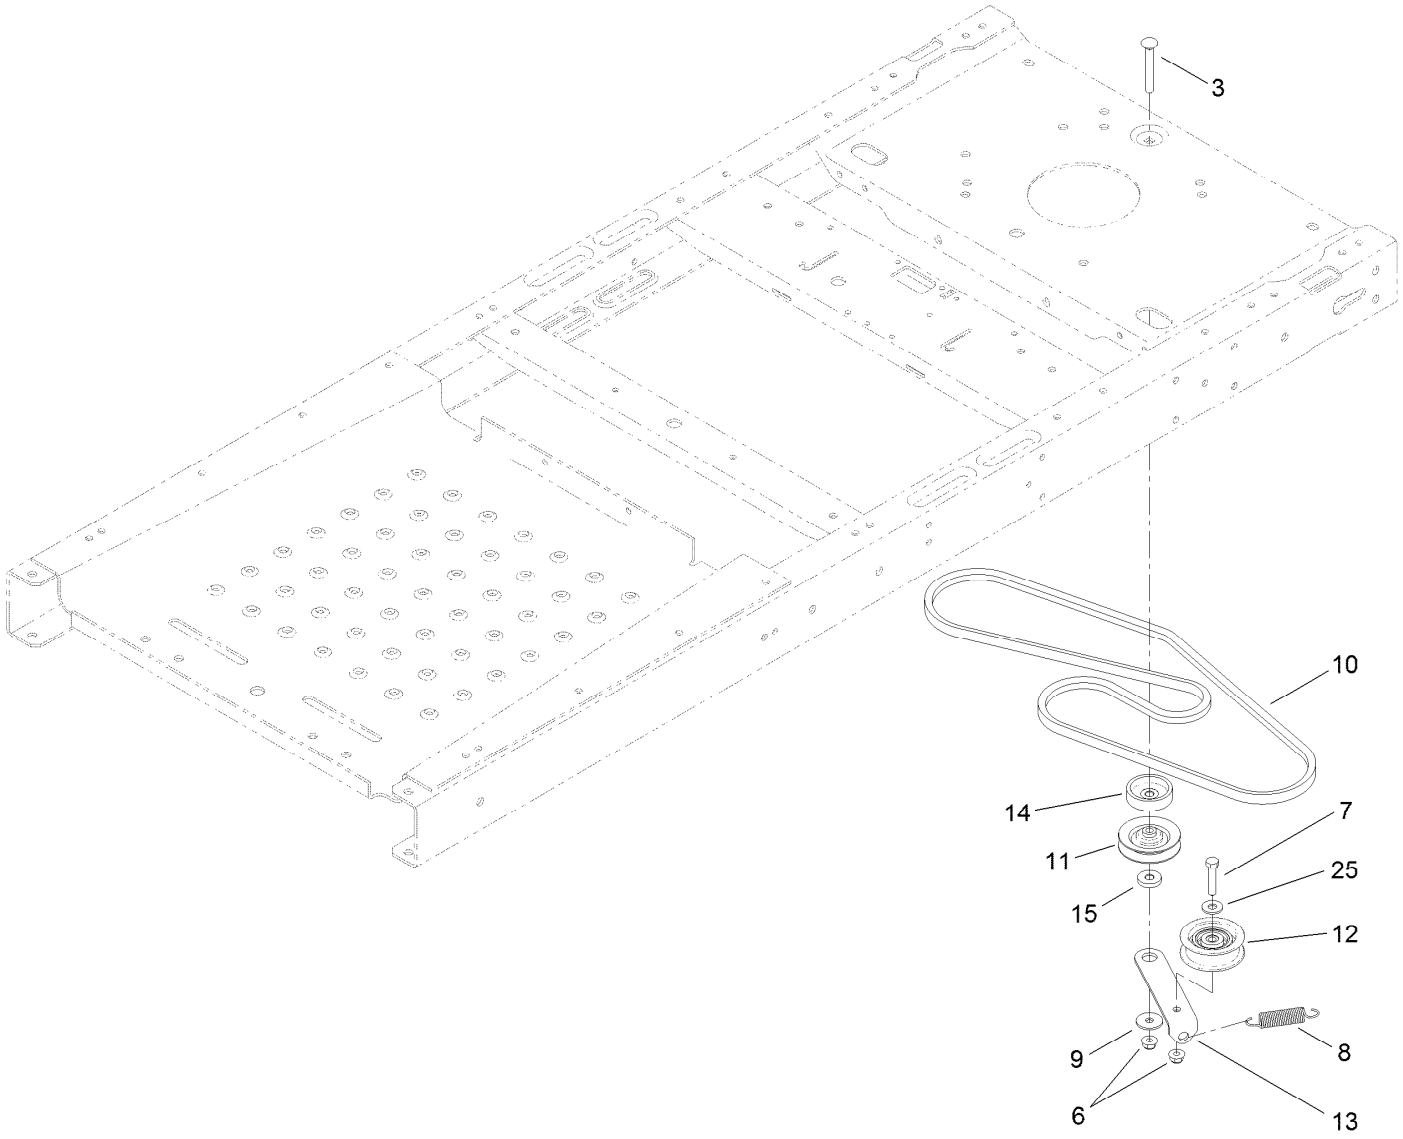


# Belt and Idler Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 3 | 3230-8 | 1 | Screw-CARR |
| 6 | 104-8300 | 2 | Nut-Flange, NI |
| 7 | 322-7 | 1 | Screw-HH |
| 8 | 104-6415 | 1 | Spring-Return, Pedal |
| 9 | 5-4460 | 1 | Washer-Pivot |
| 10 | 119-3309 | 1 | V-Belt |
| 11 | 119-8822 | 1 | Pulley-Idler |
| 12 | 106-2176 | 1 | Pulley-Idler |
| 13 | 119-3326 | 1 | Arm-Idler |
| 14 | 119-3353 | 1 | Spacer |
| 15 | 119-3327 | 1 | Spacer-Arm, Idler |
| 25 | 3256-3 | 1 | Washer-Flat |

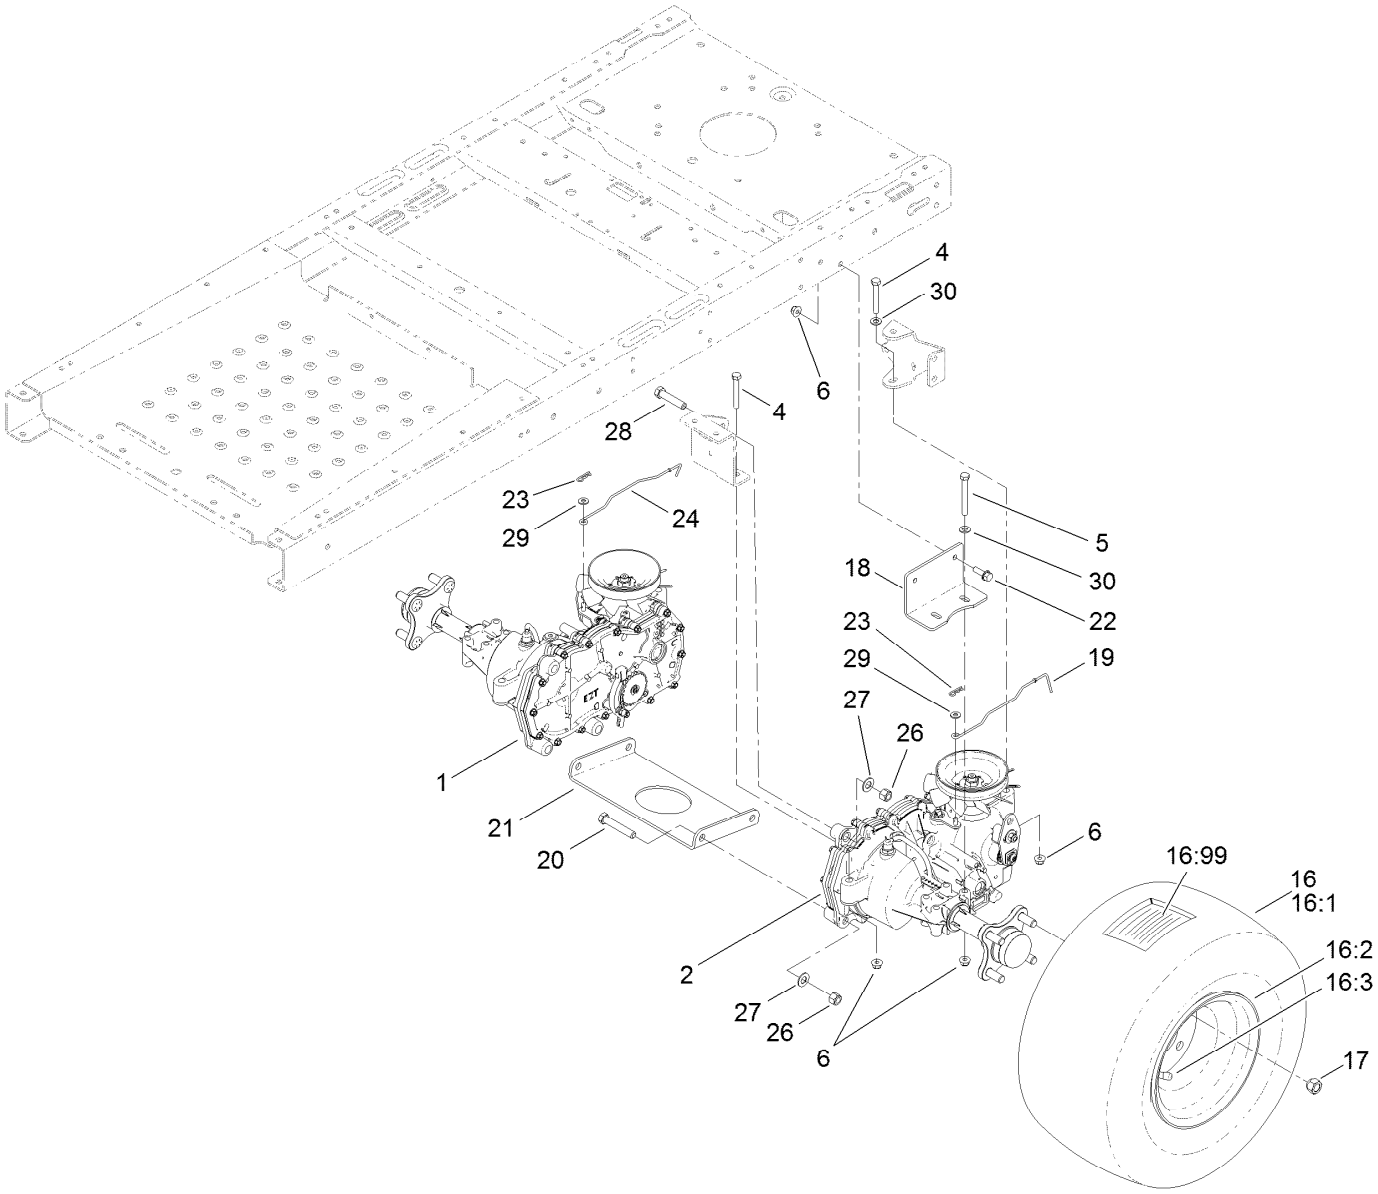



# Hydro Transaxle Drive and Rear Wheel Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-3331 | 1 | RH Hydro Transaxle ASM |
| 2 | 119-3330 | 1 | LH Hydro Transaxle ASM |
| 4 | 322-11 | 4 | Screw-HH |
| 5 | 322-13 | 4 | Screw-HH |
| 6 | 104-8300 | 12 | Nut-Flange, NI |
| 16 | 120-5523 | 2 | Wheel And Tire ASM |
| 16:1 | 119-8907 | 1 | Tire |
| 16:2 | 107-2475 | 1 | Wheel |
| 16:3 | 232-27 | 1 | Stem-Valve |
| 16:99 | 107-2491 | 1 | Tube-Tire |
| 17 | 242-50 | 8 | Nut-Lug |
| 18 | 117-7264-03 | 2 | Mount-Hydro |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 121-2971 | 1 | Rod-Bypass, LH |
| 20 | 324-10 | 4 | Screw-HH |
| 21 | 119-3339-03 | 1 | Plate-Cross, Hydro |
| 22 | 3234-29 | 4 | Screw-HHF |
| 23 | 3290-307 | 2 | Pin-Hair |
| 24 | 121-0752 | 1 | Rod-Bypass, RH |
| 26 | 3296-48 | 6 | Nut-Lock, NI |
| 27 | 3256-25 | 6 | Washer-Flat |
| 28 | 324-8 | 2 | Screw-HH |
| 29 | 3256-22 | 2 | Washer-Flat |
| 30 | 3256-23 | 6 | Washer-Flat |

# Right Hand Hydro Transaxle Assembly No. 119-3331

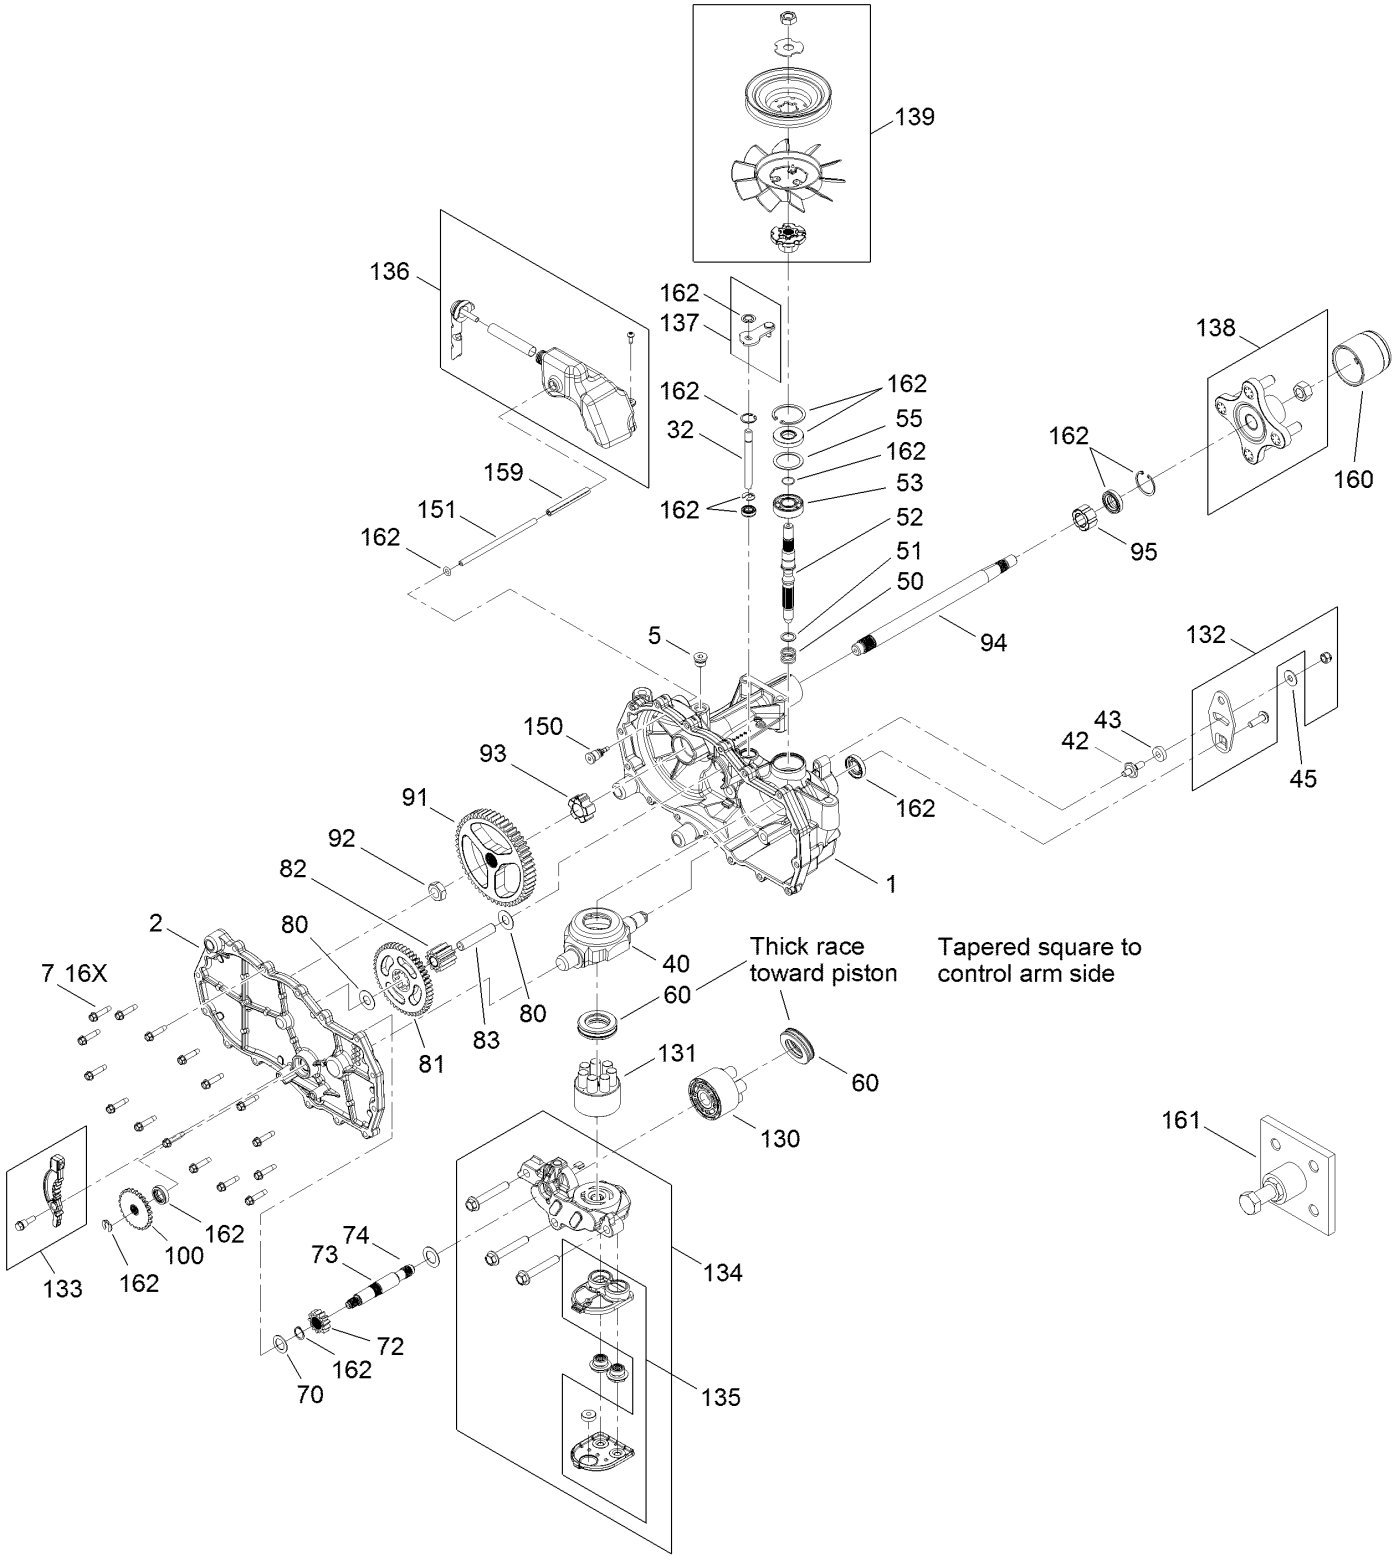


# Right Hand Hydro Transaxle Assembly No. 119-3331 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-5531 | 1 | Main Housing ASM |
| 2 | 120-5533 | 1 | Housing Side Kit |
| 5 | 104-2189 | 1 | Plug-Thread, Straight |
| 7 | 117-5359 | 16 | Screw-HHF |
| 13 | 104-2147 | 1 | Sealant ● |
| 32 | 106-8678 | 2 | Rod-Bypass |
| 40 | 104-5304 | 1 | Swashplate-Trunnion |
| 42 | 104-2116 | 1 | Stud |
| 43 | 112-9853 | 1 | Puck-Friction |
| 45 | 114-8491 | 1 | Washer |
| 50 | 120-5537 | 1 | Spring-Compression |
| 51 | 120-5538 | 1 | Washer |
| 52 | 104-5306 | 1 | Shaft-Input |
| 53 | 104-5311 | 1 | Bearing-Ball |
| 55 | 104-5308 | 1 | Spacer |
| 60 | 94-6922 | 1 | Bearing-Thrust |
| 70 | 104-5339 | 1 | Washer-Flat |
| 72 | 104-5316 | 1 | Gear-Pinnion, 13T |
| 73 | 106-8683 | 1 | Shaft-Motor |
| 74 | 104-5360 | 1 | Washer |
| 80 | 119-5541 | 2 | Washer |
| 81 | 104-5317 | 1 | Gear-10T/48T |
| 82 | 104-5318 | 1 | Gear-Jackshaft, 10T |
| 83 | 104-5329 | 1 | Pin-Jackshaft |
| 91 | 120-5539 | 1 | Gear-Bull |
| 92 | 104-2142 | 1 | Nut-HJ |
| 93 | 115-8314 | 1 | Bushing-Inboard |
| 94 | 120-5540 | 1 | Shaft-Axle |
| 95 | 120-5541 | 1 | Bearing-Sleeve |
| 100 | 106-8694 | 1 | Disc-Brake, Cog |
| 130 | 103-2666 | 1 | Cylinder Block Kit |
| 131 | 110-8561 | 1 | Pump Block ASM |
| 132 | 117-5362 | 1 | Arm Control Kit |
| 133 | 106-8688 | 1 | Brake Arm Kit |
| 134 | 112-9862 | 1 | Center Section Filter Kit |
| 135 | 114-1634 | 1 | Filter Kit |
| 136 | 121-5735 | 1 | LH Expansion Tank Kit |
| 137 | 107-2489 | 1 | Bypass Arm Kit |
| 138 | 121-5731 | 1 | Hub Kit |
| 139 | 121-5729 | 1 | Fan Pulley Kit |
| 150 | 104-5349 | 1 | Fitting-Sae |
| 151 | 115-8302 | 1 | Hose |
| 159 | 121-5728 | 1 | Case-Tube |
| 160 | 125-0041 | 1 | Cap-Axle |
| 161 | 114-8467 | 1 | Hub-Puller, 4 Bolt |
| 162 | 120-7103 | 1 | Seal And Ring Kit |

● Not illustrated


# Left Hand Hydro Transaxle Assembly No. 119-3330

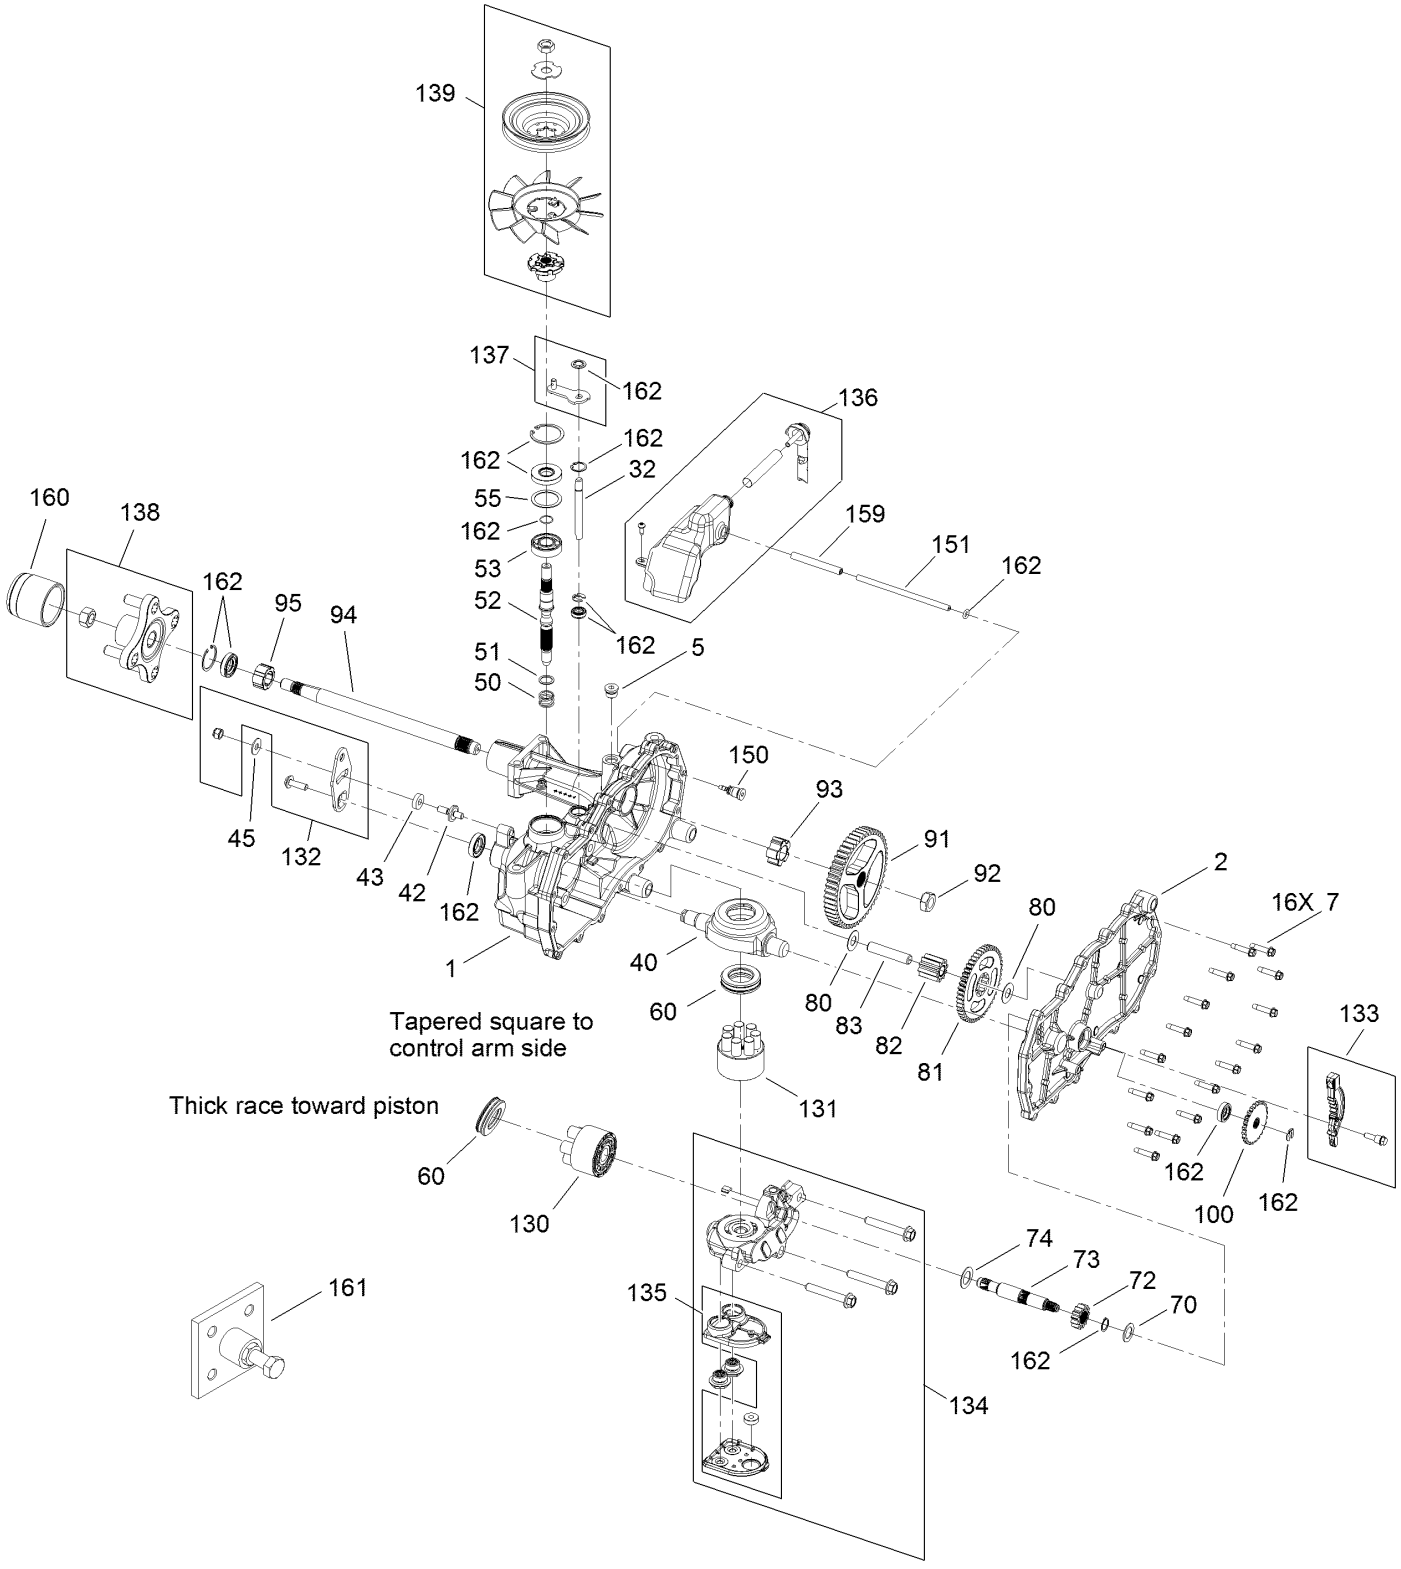

# Left Hand Hydro Transaxle Assembly No. 119-3330 (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-5532 | 1 | Main Housing ASM |
| 2 | 120-5534 | 1 | Housing Side Kit |
| 5 | 104-2189 | 1 | Plug-Thread, Straight |
| 7 | 117-5359 | 16 | Screw-HHF |
| 13 | 104-2147 | 1 | Sealant ● |
| 32 | 106-8678 | 2 | Rod-Bypass |
| 40 | 104-5304 | 1 | Swashplate-Trunnion |
| 42 | 104-2116 | 1 | Stud |
| 43 | 112-9853 | 1 | Puck-Friction |
| 45 | 114-8491 | 1 | Washer |
| 50 | 120-5537 | 1 | Spring-Compression |
| 51 | 120-5538 | 1 | Washer |
| 52 | 104-5306 | 1 | Shaft-Input |
| 53 | 104-5311 | 1 | Bearing-Ball |
| 55 | 104-5308 | 1 | Spacer |
| 60 | 94-6922 | 1 | Bearing-Thrust |
| 70 | 104-5339 | 1 | Washer-Flat |
| 72 | 104-5316 | 1 | Gear-Pinnion, 13T |
| 73 | 106-8683 | 1 | Shaft-Motor |
| 74 | 104-5360 | 1 | Washer |
| 80 | 119-5541 | 2 | Washer |
| 81 | 104-5317 | 1 | Gear-10T/48T |
| 82 | 104-5318 | 1 | Gear-Jackshaft, 10T |
| 83 | 104-5329 | 1 | Pin-Jackshaft |
| 91 | 120-5539 | 1 | Gear-Bull |
| 92 | 104-2142 | 1 | Nut-HJ |
| 93 | 115-8314 | 1 | Bushing-Inboard |
| 94 | 120-5540 | 1 | Shaft-Axle |
| 95 | 120-5541 | 1 | Bearing-Sleeve |
| 100 | 106-8694 | 1 | Disc-Brake, Cog |
| 130 | 103-2666 | 1 | Cylinder Block Kit |
| 131 | 110-8561 | 1 | Pump Block ASM |
| 132 | 117-5362 | 1 | Arm Control Kit |
| 133 | 106-8688 | 1 | Brake Arm Kit |
| 134 | 112-9861 | 1 | Center Section Filter Kit |
| 135 | 114-1634 | 1 | Filter Kit |
| 136 | 121-5730 | 1 | RH Expansion Tank Kit |
| 137 | 120-5549 | 1 | Bypass Kit |
| 138 | 121-5731 | 1 | Hub Kit |
| 139 | 121-5729 | 1 | Fan Pulley Kit |
| 150 | 104-5349 | 1 | Fitting-Sae |
| 151 | 115-8302 | 1 | Hose |
| 159 | 121-5728 | 1 | Case-Tube |
| 160 | 125-0041 | 1 | Cap-Axle |
| 161 | 114-8467 | 1 | Hub-Puller, 4 Bolt |
| 162 | 120-7103 | 1 | Seal And Ring Kit |

● Not illustrated

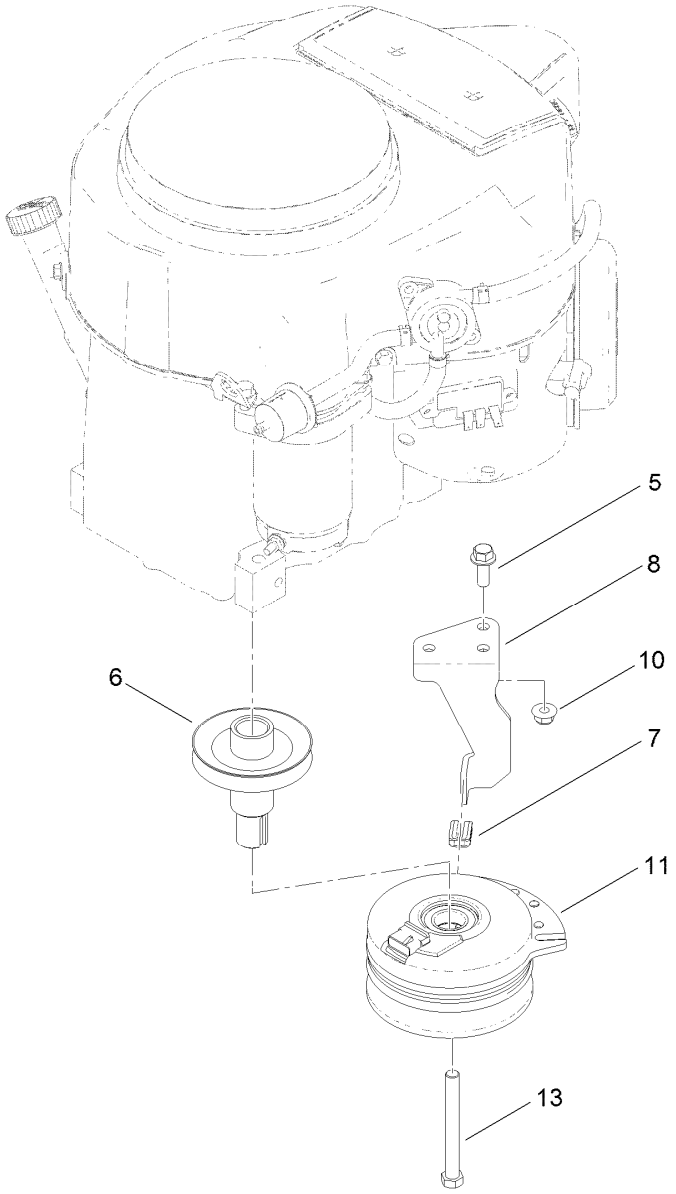


# Clutch Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 5 | 3234-42 | 1 | Screw-HHF |
| 6 | 119-3318 | 1 | Pulley-Engine |
| 7 | 120-2217 | 1 | Isolator-Clutch |
| 8 | 119-8884 | 1 | Stop-Clutch |
| 10 | 104-8301 | 1 | Nut-Flange, NI |
| 11 | 117-7468 | 1 | Clutch-Electric |
| 13 | 3212-16 | 1 | Screw-HH |

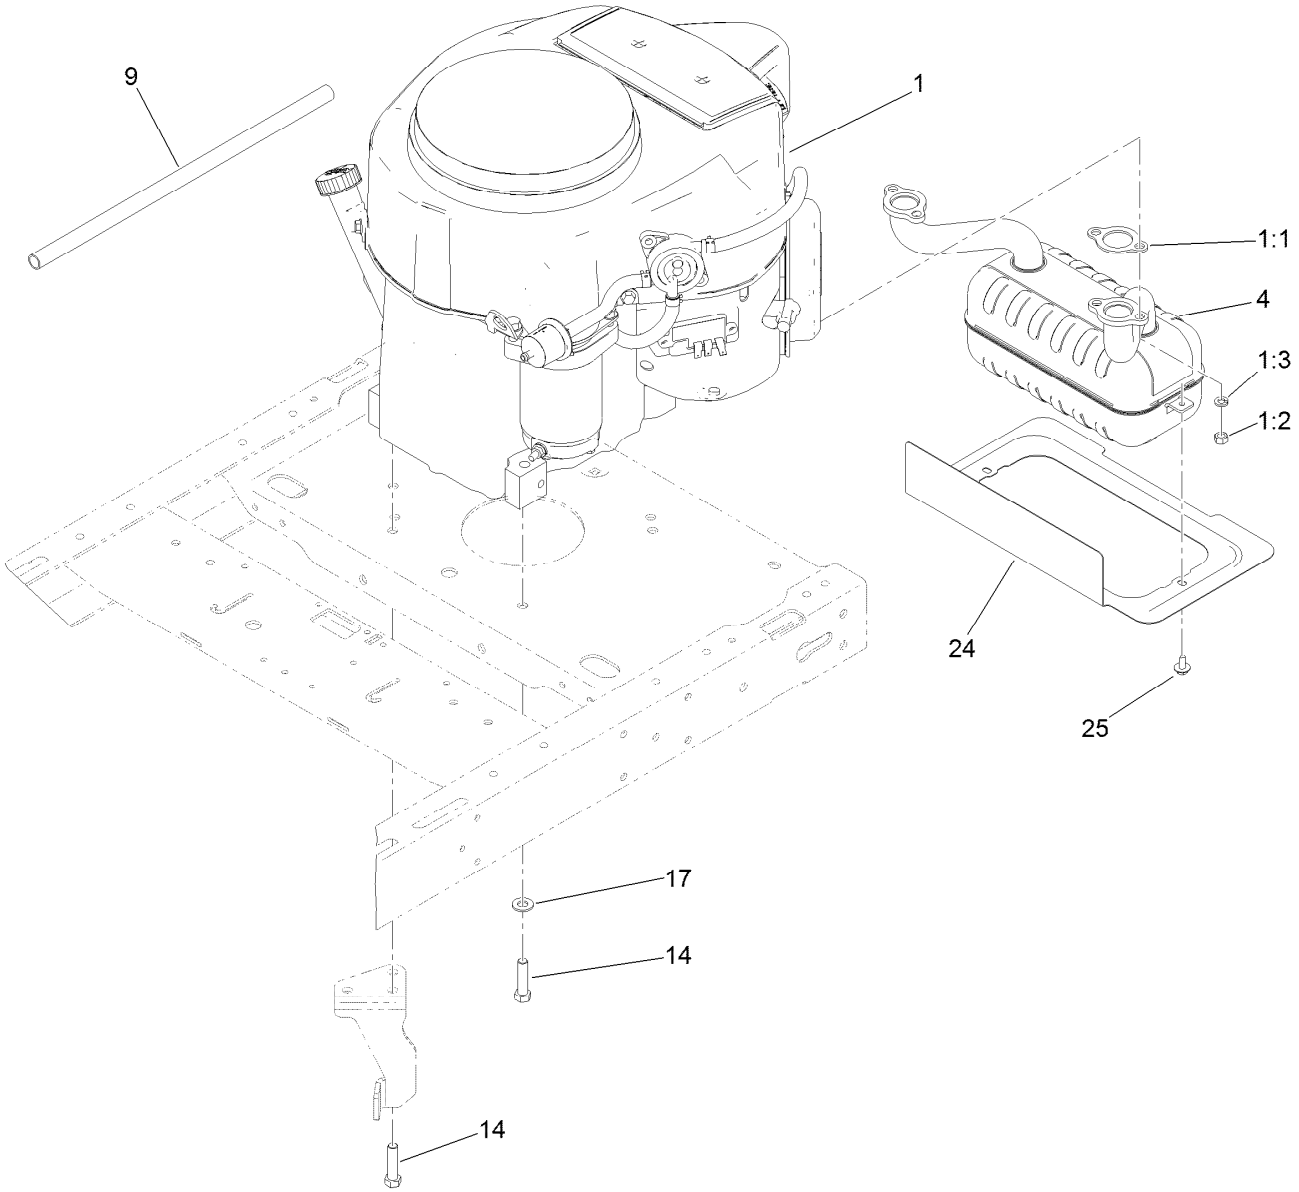



# Engine and Muffler Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki, Fr600V ●■ |
| 1:1 | 1-653313 | 2 | Gasket-Exhaust |
| 1:2 | 114-3549 | 4 | Nut |
| 1:3 | 114-3550 | 4 | Washer-Lock, Spring |
| 4 | 116-2450 | 1 | Muffler-Kawasaki |
| 9 | 106-7022 | 1 | Tube-Drain, Oil |
| 14 | 323-50 | 4 | Bolt-HH |
| 17 | 3256-24 | 3 | Washer-Flat |
| 24 | 121-2973-03 | 1 | Shield-Heat |
| 25 | 46-8560 | 2 | Screw-HHFTF |


● Not serviced separately

■ Obtain parts from www.kohlerplus.com

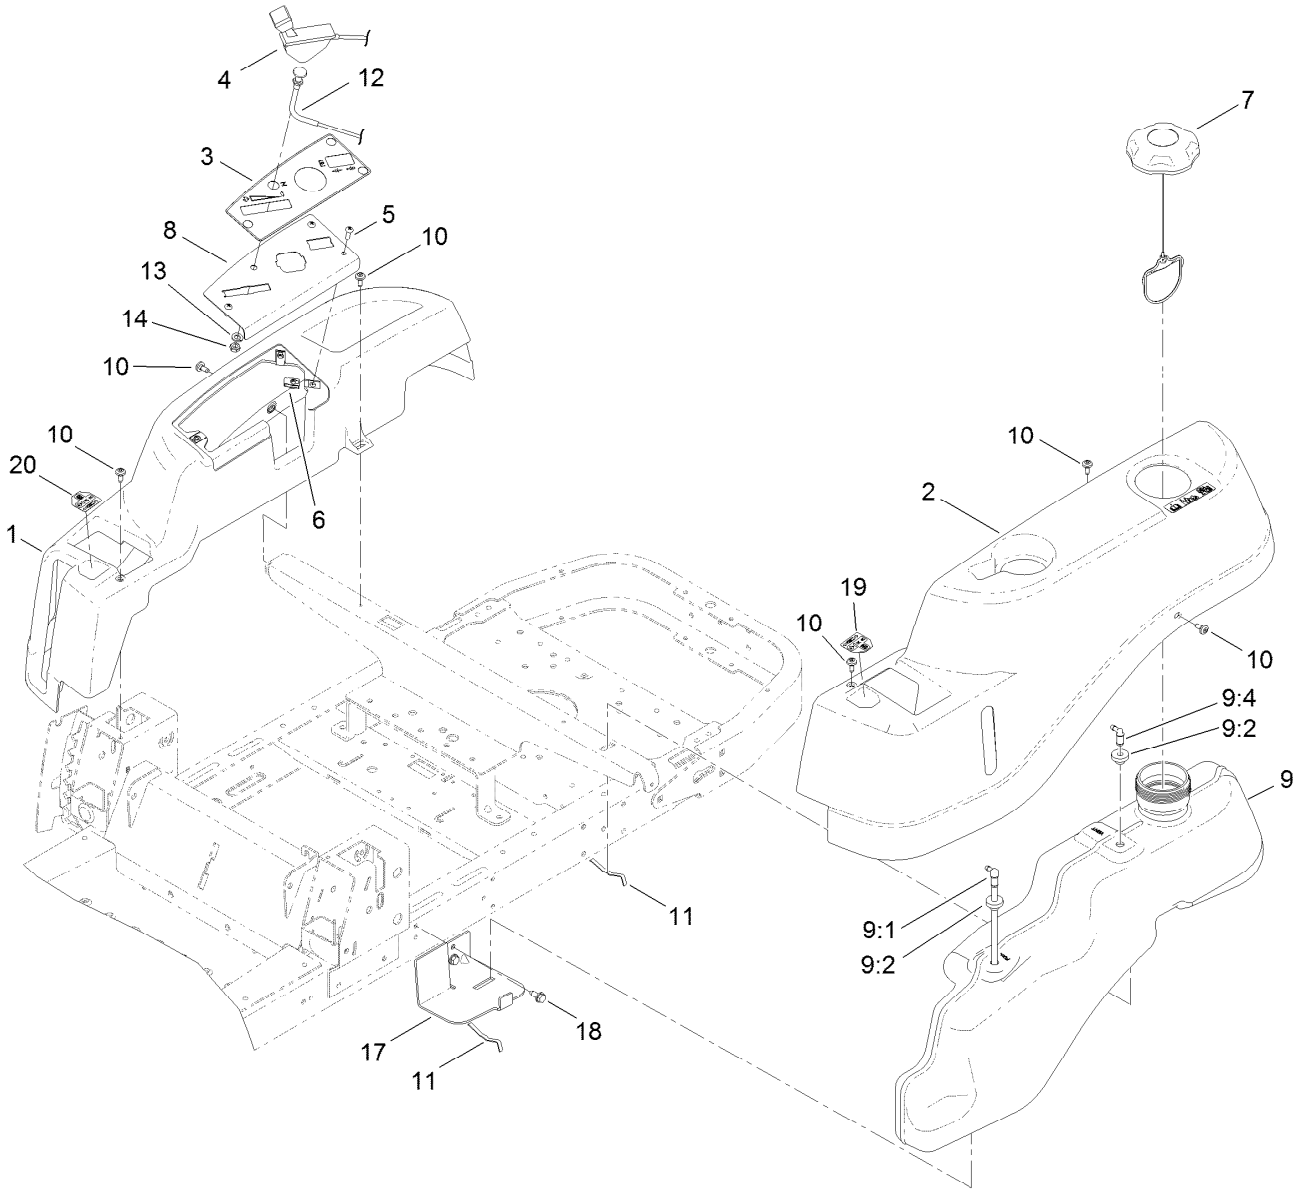



# Body Styling and Fuel Tank Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-3335 | 1 | Pod-RH |
| 2 | 119-3334 | 1 | Pod-LH |
| 3 | 121-0772 | 1 | Decal-Panel, Control |
| 4 | 121-0769 | 1 | Cable-Throttle |
| 5 | 3258-166 | 3 | Screw-PRH |
| 6 | 107069 | 3 | Clip |
| 7 | 120-5461 | 1 | Cap-Fuel, Ratcheting |
| 8 | 119-3378-03 | 1 | Plate-Control |
| 9 | 119-3324 | 1 | Fuel Tank ASM |
| 9:1 | 121-0793 | 1 | Connector-Elbow, 90 DEG |
| 9:2 | 46-6560 | 2 | Bushing |
| 9:4 | 117-7400 | 1 | Fitting-Plastic |
| 10 | 120-7950 | 6 | Screw-Shoulder |
| 11 | 609830 | 2 | Spring |
| 12 | 112-9753 | 1 | Cable-Choke |
| 13 | 3253-21 | 1 | Washer-Lock |
| 14 | 3220-3 | 1 | Nut-HJ |
| 17 | 119-3476-03 | 1 | Support-Tank, Front |
| 18 | 32144-70 | 2 | Screw-HWHTF |
| 19 | 119-8814 | 1 | Decal-Control Lever, LH |
| 20 | 119-8815 | 1 | Decal-Control Lever, RH |

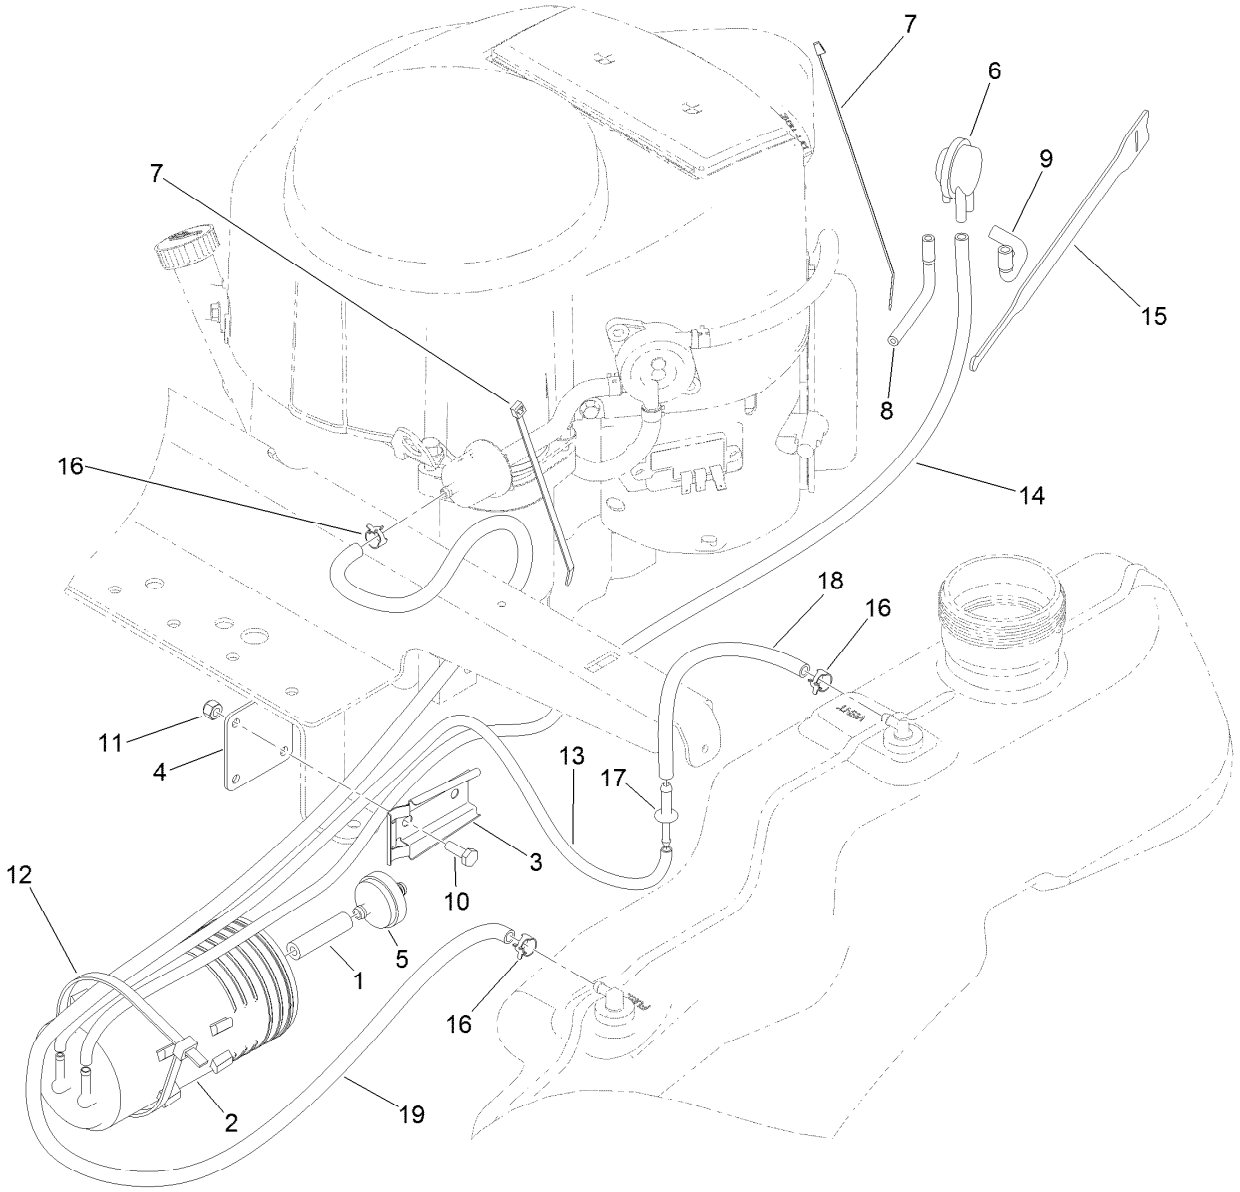


# Fuel Delivery System Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 99-9415 | 1 | Hose-Fuel |
| 2 | 117-1221 | 1 | Canister-Carbon, 800Cc |
| 3 | 114-0292 | 1 | Bracket-Canister, Carbon |
| 4 | 119-8992-03 | 1 | Plate-Adapter |
| 5 | 115-7854 | 1 | Filter-Fuel, Inline |
| 6 | 116-2232 | 1 | Valve-Control, Vacuum |
| 7 | 614249 | 2 | Tie-Cable |
| 8 | 119-8501 | 1 | Hose-Vent, Formed |
| 9 | 119-8502 | 1 | Hose-Vent, Formed |
| 10 | 321-4 | 2 | Screw-HH |
| 11 | 3296-42 | 2 | Nut-Lock, NI |
| 12 | 3334-945 | 3 | Tie-Cable |
| 13 | 121-3003 | 1 | Hose-Fuel |
| 14 | 109-0307 | 1 | Hose-Fuel |
| 15 | 116-2469 | 1 | Strap-Velcro, Cable Tie |
| 16 | 2412-98 | 3 | Clamp-Hose |
| 17 | 117-5399 | 1 | Adaptor-Orifice |
| 18 | 110-1876 | 1 | Hose-Fuel |
| 19 | 109-0301 | 1 | Hose-Fuel |

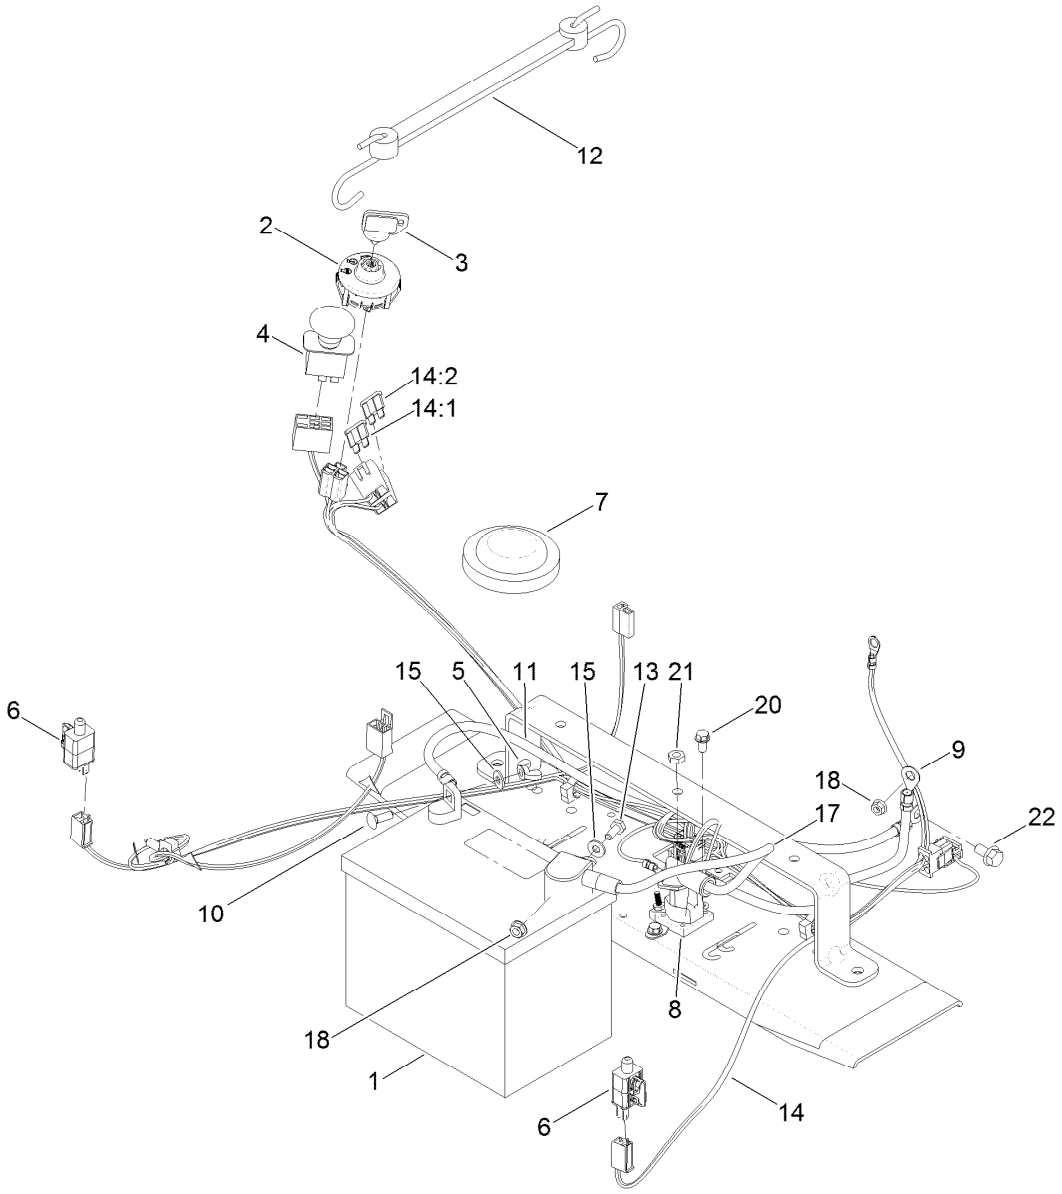


# Battery and Electrical Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 105-1692 | 1 | Battery |
| 2 | 117-2221 | 1 | Switch-Ignition |
| 3 | 63-8360 | 1 | Key-Ignition (W/Shield) |
| 4 | 103-5221 | 1 | Switch-PTO |
| 5 | 32103-22 | 1 | Nut-Wing |
| 6 | 110-6765 | 2 | Switch-Single Pole No |
| 7 | 100-3524 | 1 | Switch-Seat |
| 8 | 117-1197 | 1 | Solenoid |
| 9 | 119-8898 | 1 | Cable-Battery, Red |
| 10 | 3229-1 | 1 | Bolt-CARR |
| 11 | 119-8899 | 1 | Cable-Battery, Black |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 104-2466 | 1 | Holddown-Battery |
| 13 | 321-3 | 1 | Screw-HH |
| 14 | 121-5652 | 1 | Harness-Wire |
| 14:1 | 109103 | 1 | Fuse-Blade, 30 Amp |
| 14:2 | 109102 | 1 | Fuse-Blade, 25 Amp |
| 15 | 3256-22 | 2 | Washer-Flat |
| 17 | 119-8897 | 1 | Cable-Battery, Red |
| 18 | 32128-33 | 2 | Nut-HF |
| 20 | 32144-4 | 2 | Screw-HWH |
| 21 | 3220-2 | 2 | Nut-Jam |
| 22 | 33104-016 | 1 | Screw-HHF |

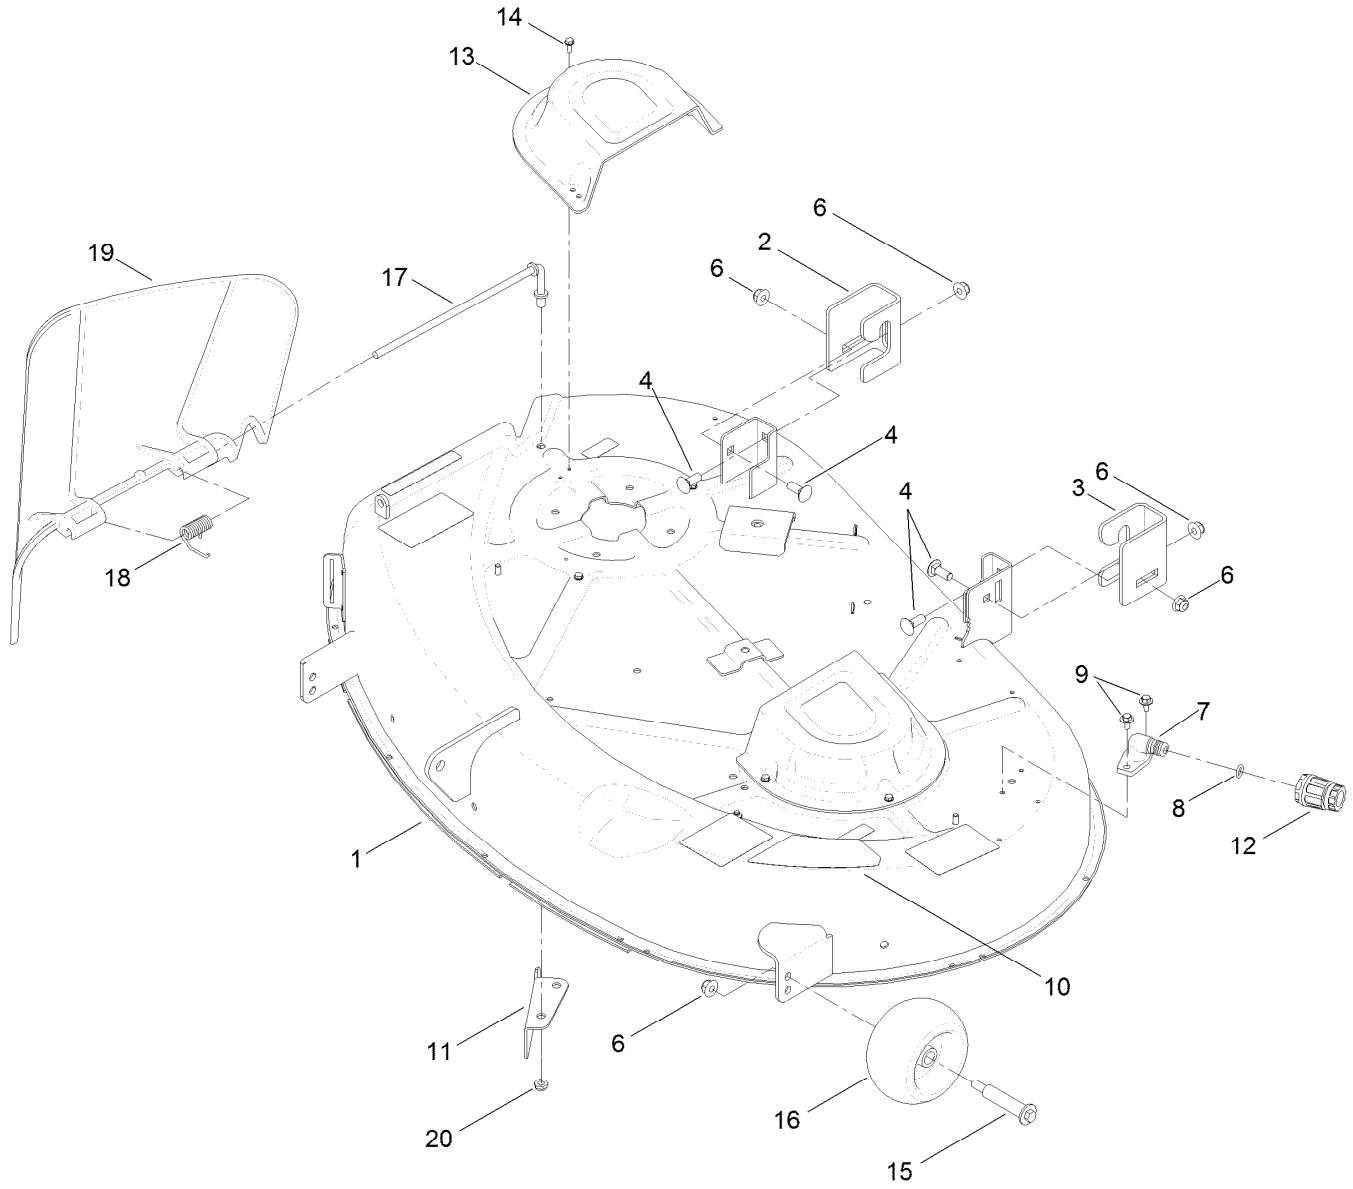


# 42 Inch Deck Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-8840 | 1 | 42 Inch Deck And Decal ASM |
| 2 | 119-3494 | 1 | Bracket-Hanger, RH |
| 3 | 119-3496 | 1 | Bracket-Hanger, LH |
| 4 | 3231-2 | 4 | Bolt-CARR |
| 6 | 104-8301 | 6 | Nut-Flange, NI |
| 7 | 95-2747 | 1 | Fitting-Washout |
| 8 | 46-6290 | 1 | O-Ring, Seal |
| 9 | 46-8560 | 2 | Screw-HHFTF |
| 10 | 117-1222 | 1 | Decal |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 112-3983-03 | 1 | Baffle-Cutoff |
| 12 | 95-3270 | 1 | Connector-Hose |
| 13 | 108-7889 | 2 | Cover-Belt |
| 14 | 32144-1 | 6 | Screw-Taptite |
| 15 | 112-3977 | 2 | Bolt-Shoulder |
| 16 | 1-603299 | 2 | Roller-Scalp, Anti |
| 17 | 112-4026 | 1 | Rod-Pivot |
| 18 | 110-6694 | 1 | Spring-Torsion |
| 19 | 112-3951 | 1 | Deflector |
| 20 | 3296-59 | 1 | Nut-Lock, NI |

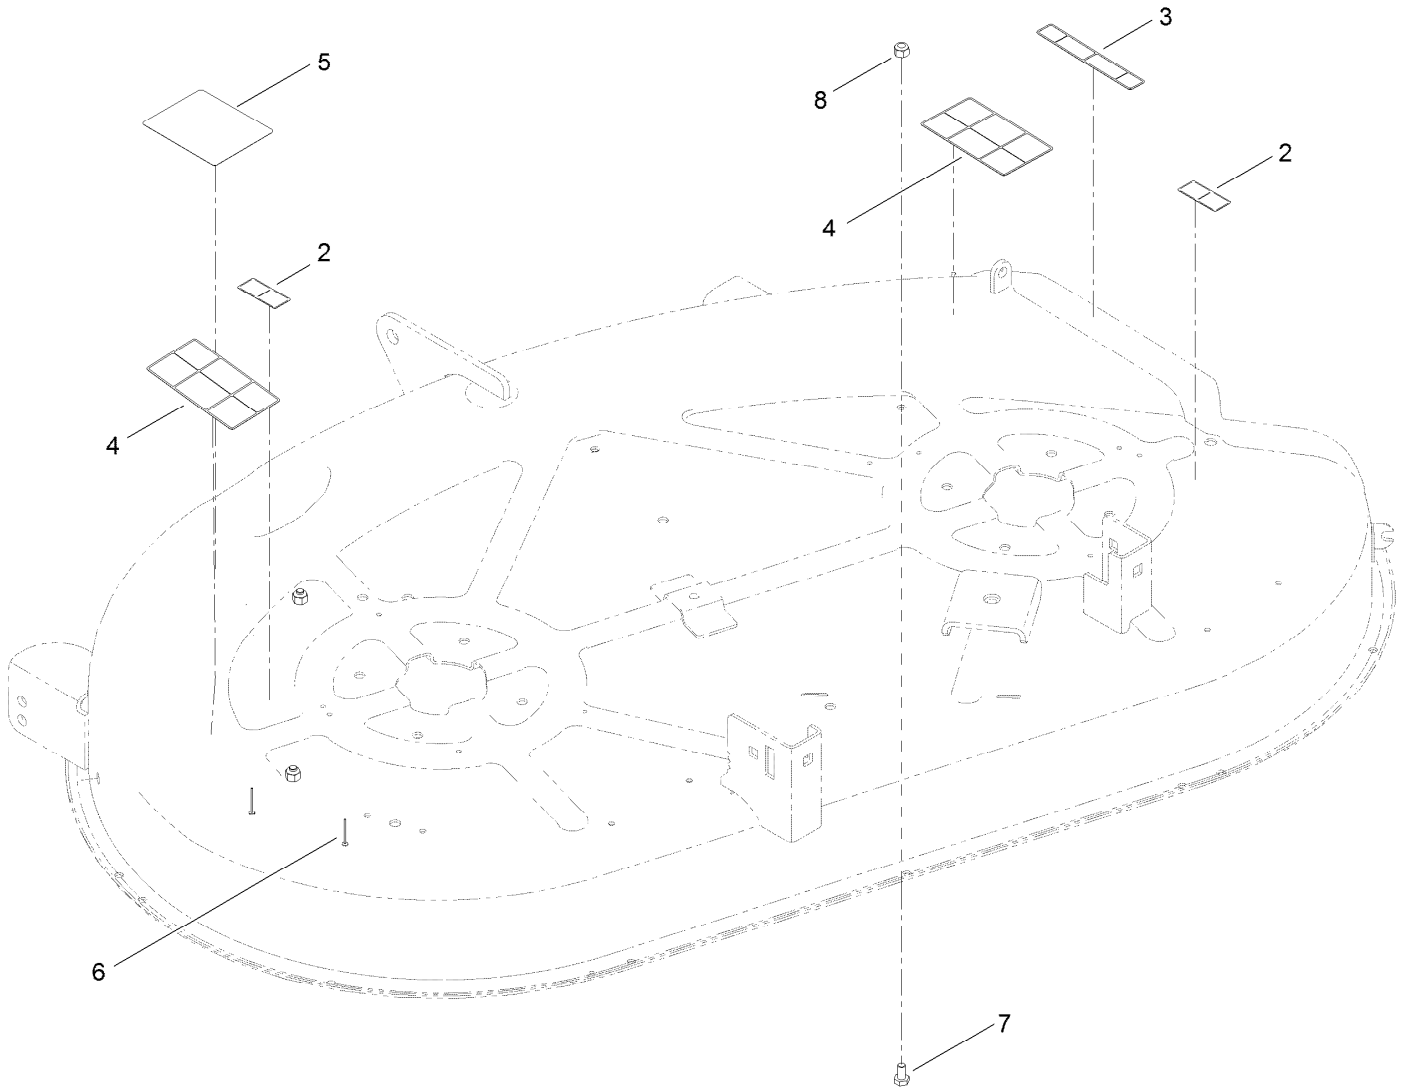


# 42 Inch Deck Assembly No. 119-8840

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 114-1606 | 2 | Decal-Danger |
| 3 | 93-7009 | 1 | Decal-Danger, Deflector |
| 4 | 110-6691 | 2 | Decal-Danger |
| 5 | 105-7015 | 1 | Decal-Routing, Belt |
| 6 | 3290-282 | 2 | Rivet-Blind |
| 7 | 321-2 | 3 | Screw-HH |
| 8 | 3296-42 | 3 | Nut-Lock, NI |

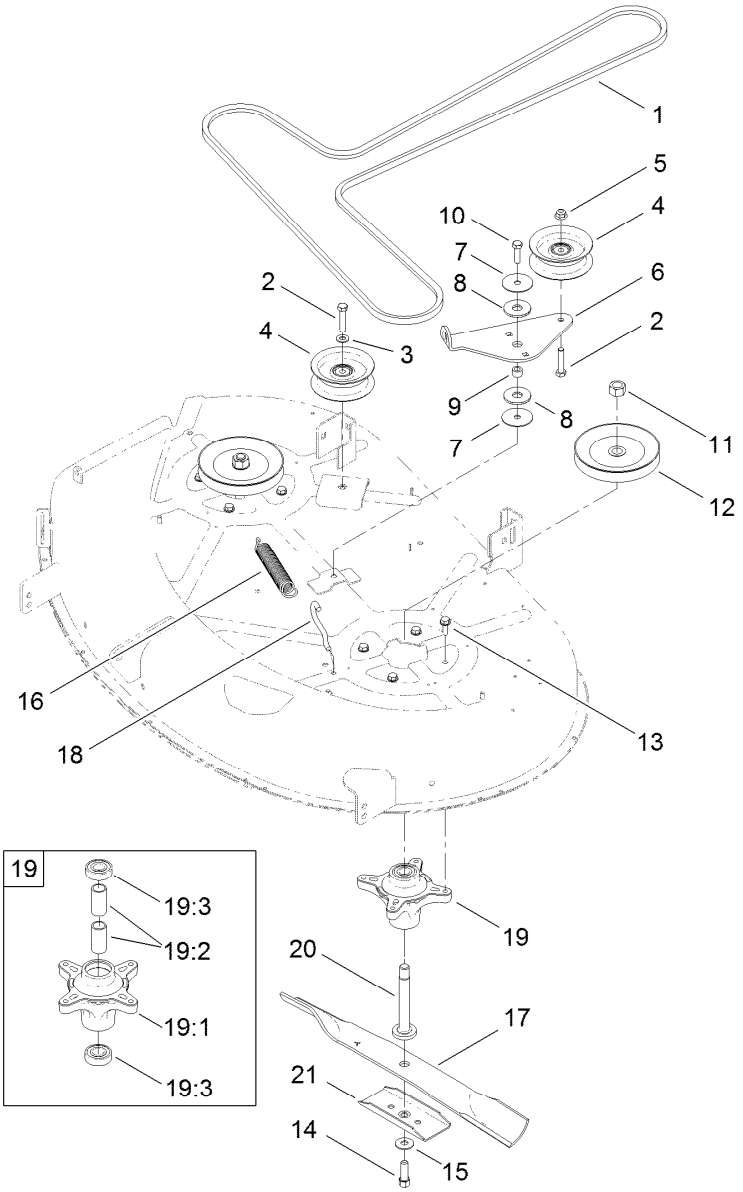


# 42 Inch Deck Belt, Spindle and Blade Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 119-8819 | 1 | V-Belt |
| 2 | 323-9 | 2 | Screw-HH |
| 3 | 3256-24 | 1 | Washer-Flat |
| 4 | 106-2175 | 2 | Pulley-Idler, Flat |
| 5 | 104-8301 | 1 | Nut-Flange, NI |
| 6 | 114-8540 | 1 | Arm-Idler |
| 7 | 120-2229 | 2 | Washer-Idler Pivot |
| 8 | 114-0463 | 2 | Washer-Friction, Composite |
| 9 | 115-4986 | 1 | Spacer |
| 10 | 323-7 | 1 | Screw-HH |
| 11 | 3219-6 | 2 | Nut-Hex |
| 12 | 110-6864 | 2 | Pulley |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 13 | 32144-41 | 8 | Screw-Taptite |
| 14 | 26-0671 | 2 | Screw-HH |
| 15 | 3290-465 | 2 | Washer-Belleville |
| 16 | 106-2177 | 1 | Spring-Extension |
| 17 | 110-6568-03 | 2 | Blade-21.6 Inch |
| 18 | 88-5970 | 1 | Hook-Return, Spring |
| 19 | 121-0751 | 2 | Spindle ASM |
| 19:1 | 117-7267 | 1 | Spindle |
| 19:2 | 120-7935 | 2 | Spacer |
| 19:3 | 100-1048 | 2 | Bearing-Ball |
| 20 | 117-7268 | 2 | Shaft-Spindle |
| 21 | 106-2248-03 | 2 | Stiffener-Blade |

# Attachments and Accessories

## For 74625 TimeCutter SS 4235 Riding Mower

| Product Name | Model/Part |
|---|---|
| 42in Blowout Ring Kit | 114-1620 |
| Hourmeter Kit, 2011 and After TimeCutter Riding Mower | 120-5498 |
| Striping Kit, 42in and 50in Mowers | 120-7905 |
| Engine Guard Kit | 79009 |
| Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower | 79010 |
| Sunshade Kit, 2011 and After Zero-Turn-Radius Riding Mower | 79011 |
| Hitch Kit | 79014 |
| 42in Recycler Kit, 2007 and After Riding Mower | 79018 |
| Floor Mat Kit, 2011 and After Zero-Turn-Radius Riding Mower w/ 32in or 42in Cutting Unit | 79020 |
| Cargo Carrier | 79030 |
| Front Weight Kit | 79031 |
| 42in Replacement Blade Kit | 79220 |
| Storage Cover | 79317 |
| 42in Bagger, 2011 and After TimeCutter 4000 Series Riding Mower | 79334 |
| 10 cu. ft. Poly Dump Cart | 79991 |

## Notes:

## Notes:

## Notes:




**Count on it.**