Form No. 3380-757 Rev A

TORO®

Count on it.

Parts Catalog

Z Master® Commercial 2000 Series Riding Mower

with 60in TURBO FORCE® Side Discharge Mower

Model No. 74145—Serial No. 314000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3380-757 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Frame and Caster Wheel Assembly 4
Roll-Over Protection System Assembly No. 116-0231 6
Caster Wheel and Fork Assembly 8
Hydro Drive System Assembly 10
Hydro Idler Arm Assembly 12
Fuel Tank and Hose Assembly 14
Seat Mounting Assembly 16
Seat Assembly No. 127-9538 18
Motion Control Assembly 20
Parking Brake Assembly 22
Engine, Muffler and Control Panel Assembly 24
Deck Lift Assembly 26
Height-of-Cut Assembly No. 120-2530 28
Deck Assembly 30
Deck Decal Assembly No. 120-2461 32
Deflector Assembly No. 120-2451 34
Idler Assembly 36
Electrical Assembly 38
Attachments and Accessories 40

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame and Caster Wheel Assembly

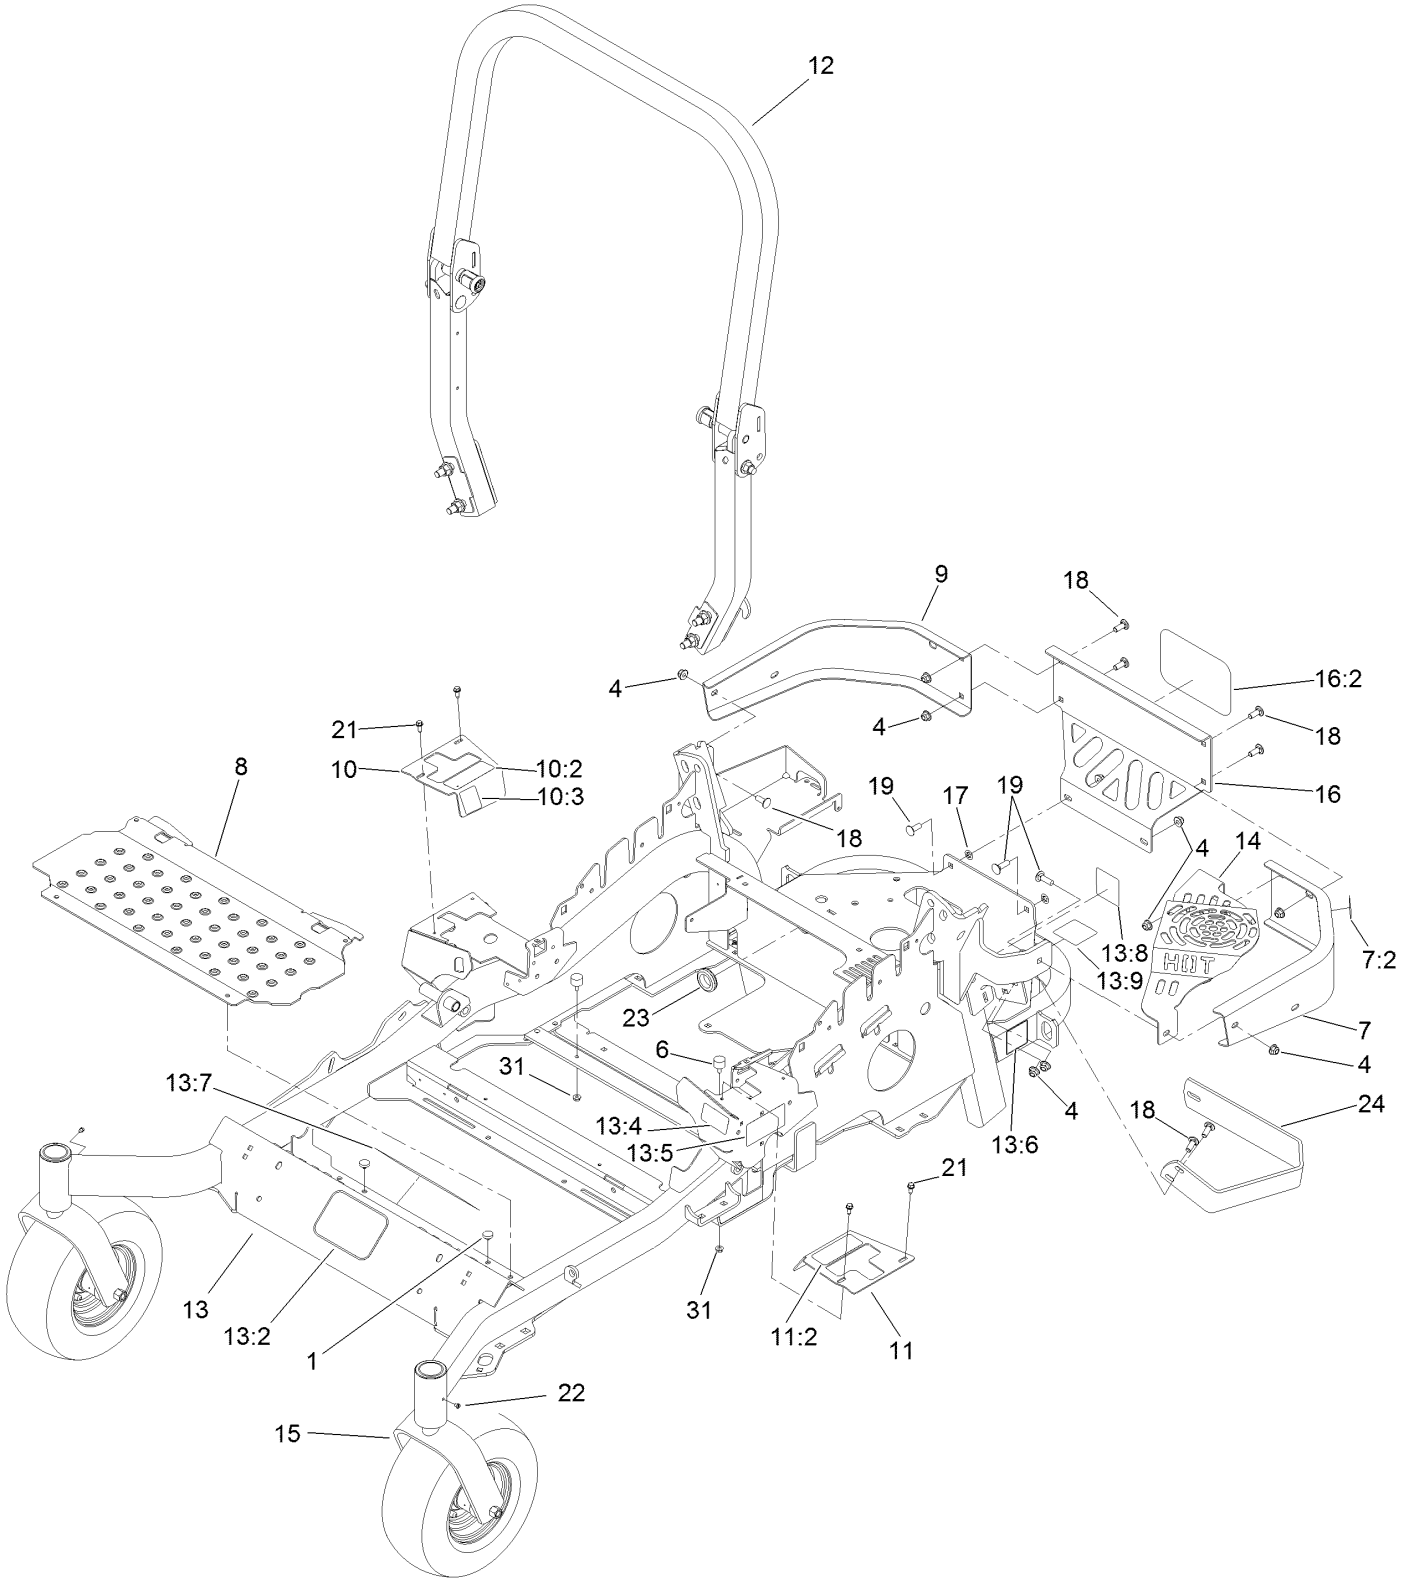


Frame and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-513658	2	Bumper
4	104-8301	10	Nut-Flange, NI
6	116-6380	2	Bumper-Rubber (W/ Stud)
7	109-9869	1	Bumper-Rear, LH
7:2	103-2076	1	Decal-Caution
8	116-8898-01	1	Floorpan
9	116-0508-03	1	Bumper-Rear, RH
10	120-3280	1	Cover ASM-Motion Control
10:2	109-7232	1	Decal-Motion Control
10:3	116-5944	1	Decal-Park Brake
11	120-3279	1	Cover ASM-Motion Control
11:2	109-7232	1	Decal-Motion Control
12	116-0231	1	ROPS ASM
13	117-8591	1	Frame ASM
13:2	68-3640	1	Decal
13:4	116-1654	1	Decal-Fuel Fill
13:5	120-5891	2	Decal
13:6	116-0205	2	Decal-Belt Drive
13:7	116-3303	1	Decal-Slope
13:8	116-4858	1	Decal-Spark Arrester
13:9	117-1158	2	Decal-Bypass
14	120-7896-03	1	Guard-Muffler
15		2	Caster Wheel ASM ●
16	119-2691	1	Rear Guard ASM
16:2	67-7320	1	Decal
17	107-3154	2	Nut-Push
18	3231-22	7	Screw-CARR
19	3231-25	3	Bolt-CARR
21	32144-10	4	Screw-HWH
22	1-811010	2	Plug
23	120-3265	1	Grommet
24	119-2607-03	1	Guard-Muffler, Side
31	104-7201	2	Nut-HF

● Not serviced separately

Roll-Over Protection System Assembly No. 116-0231

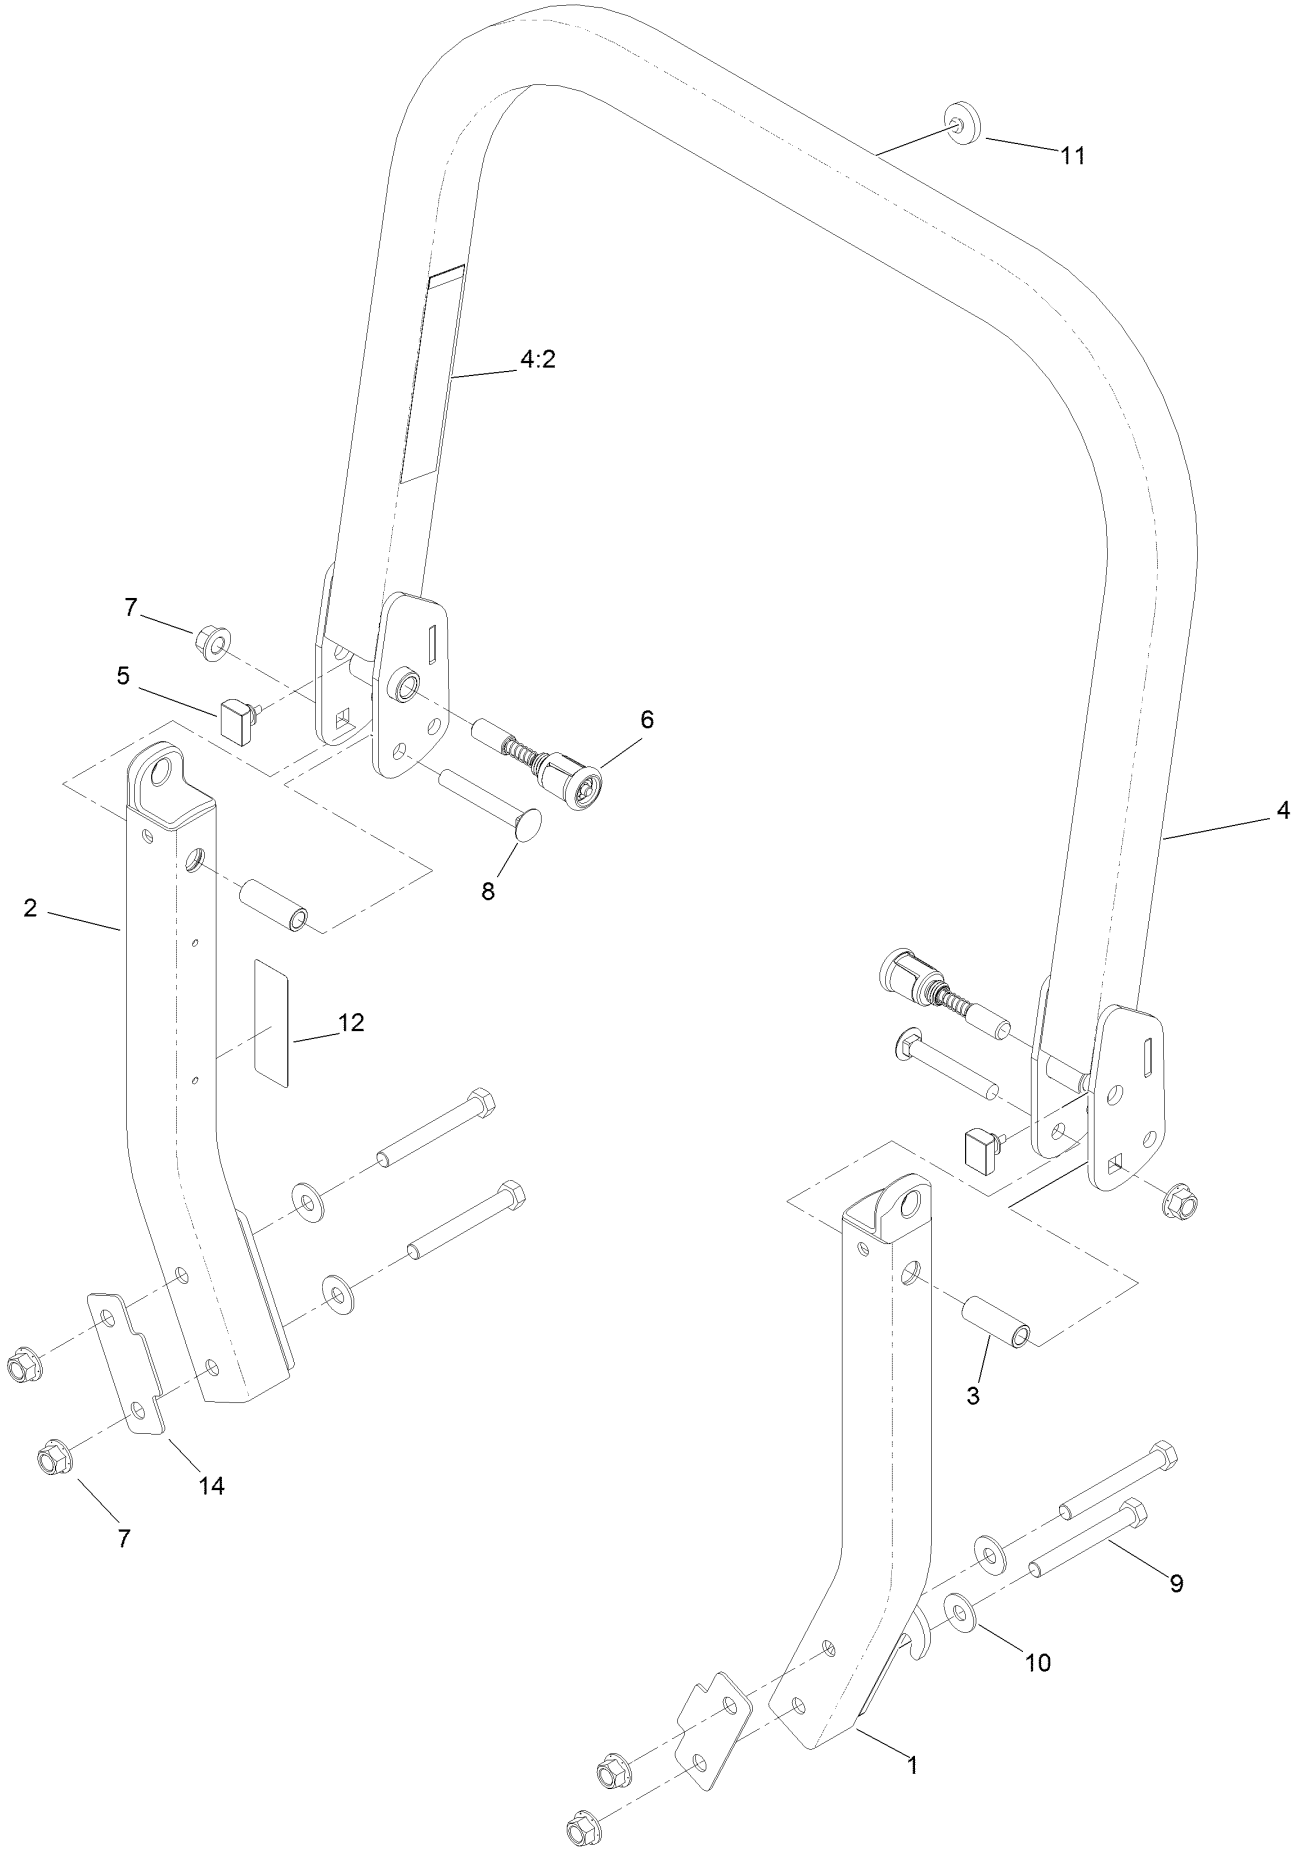


Roll-Over Protection System Assembly No. 116-0231 (continued)

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-2102	1	Decal-Warning, Folding ROPS
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-17	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	116-0090	1	Decal-Caution
14	116-0960	2	Spacer

● Not serviced separately

Caster Wheel and Fork Assembly

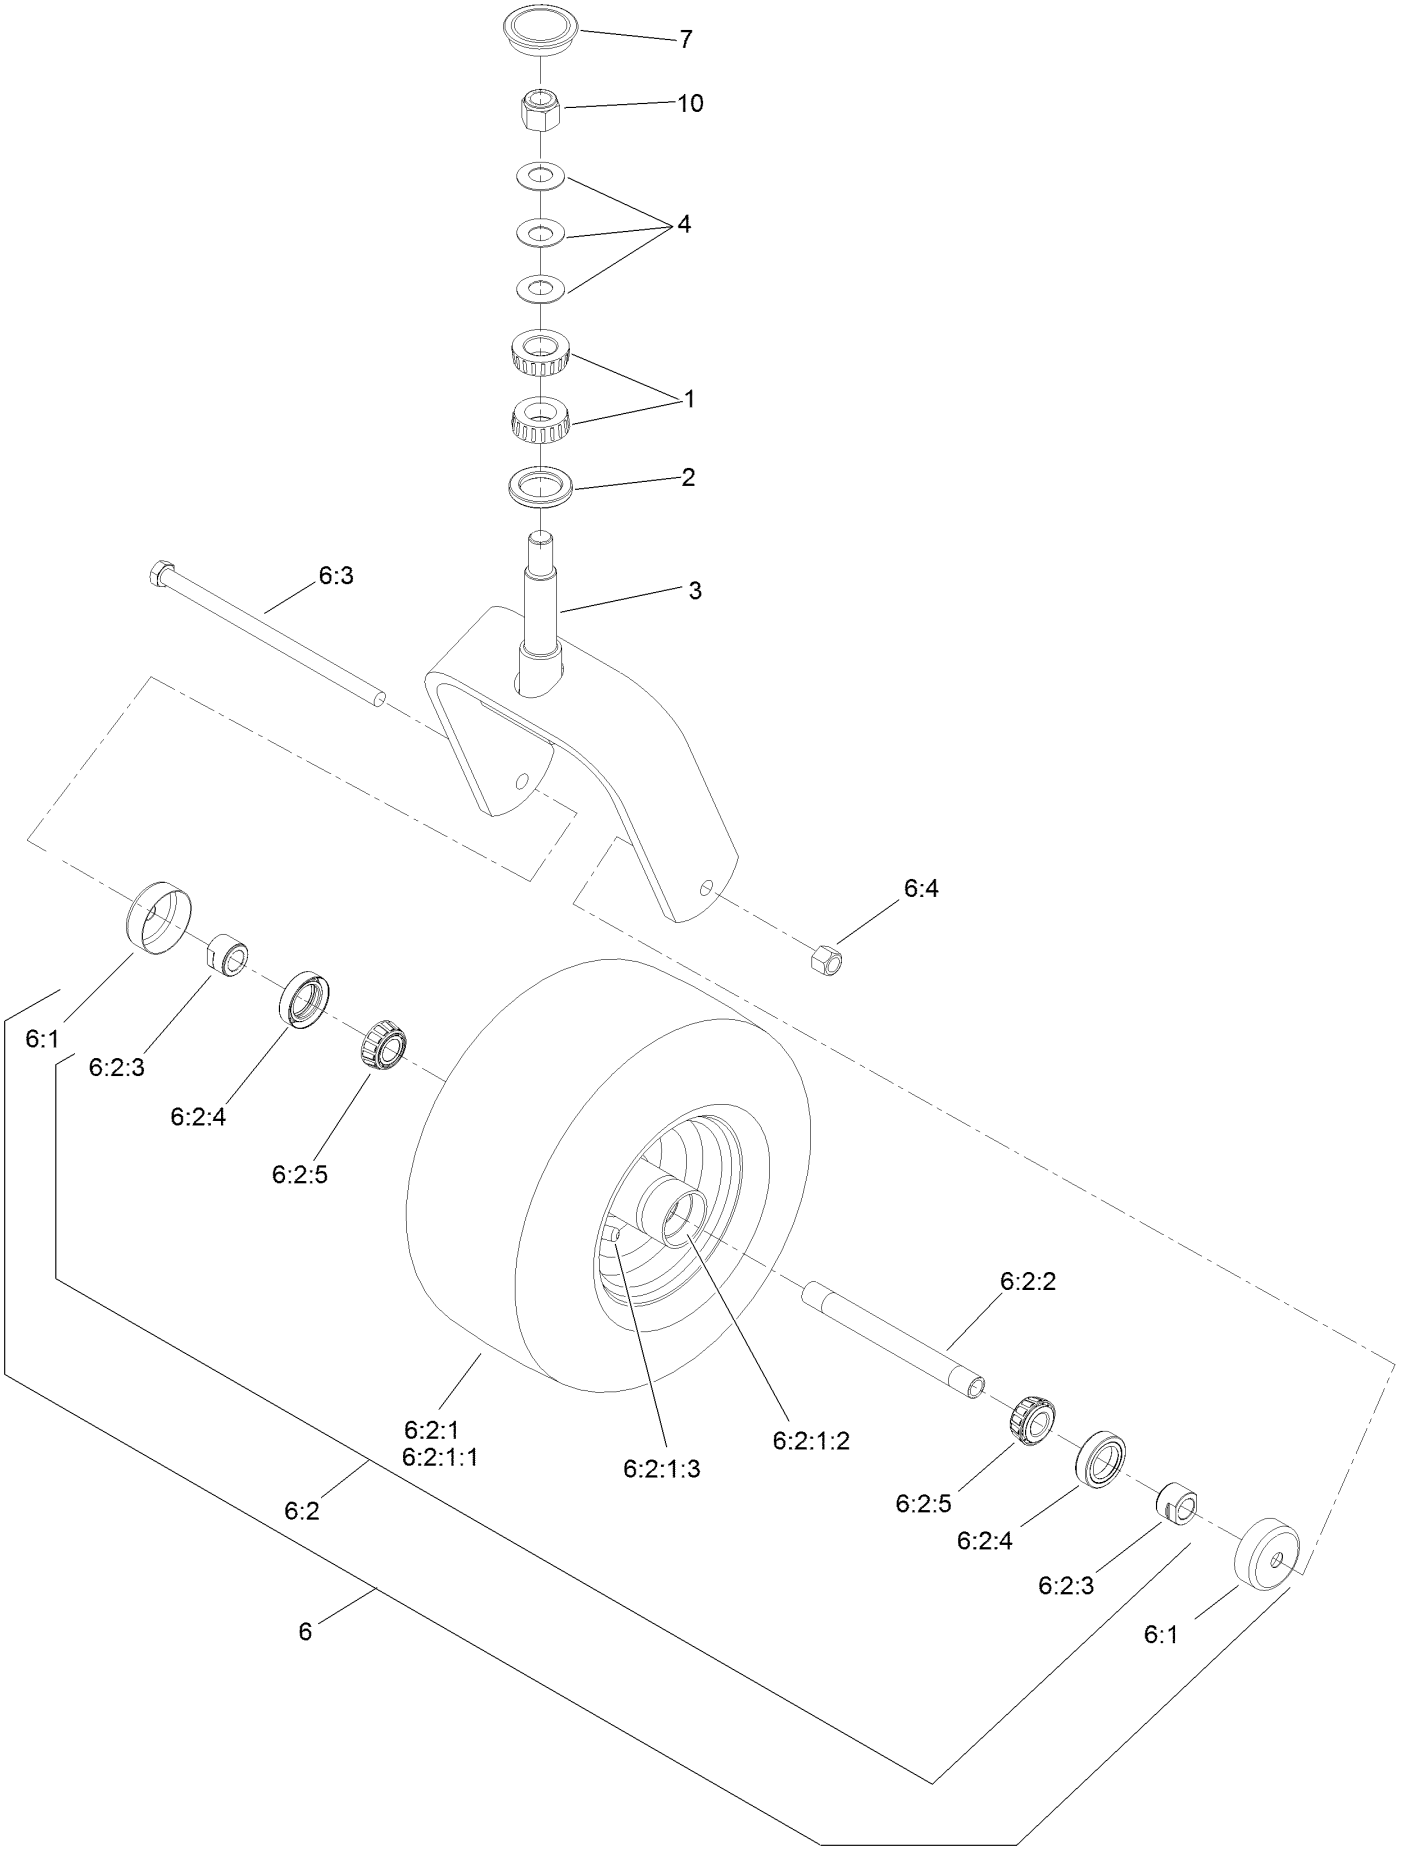


Caster Wheel and Fork Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	116-6707-01	1	Caster
4	1-633508	3	Washer-Bellville
6	127-9540	1	Wheel And Axle ASM
6:1	103-2768	2	Guard-Seal
6:2		1	Wheel And Bearing ASM ●
6:2:1		1	Wheel And Tire ASM ●
6:2:1:1	1-523009	1	Tire
6:2:1:2	1-633584	2	Bearing-Cup
6:2:1:3	5108	1	Valve
6:2:2	103-5156	1	Axle-Caster
6:2:3	103-3051	2	Spacer-Nut
6:2:4	103-0063	2	Seal-Caster
6:2:5	1-633585	2	Bearing-Cone, Taper
6:3	325-39	1	Screw-HH
6:4	3296-23	1	Nut-Lock, NI
7	103-4882	1	Cap-Grease
10	3296-51	1	Nut-Lock, NI

● Not serviced separately

Hydro Drive System Assembly

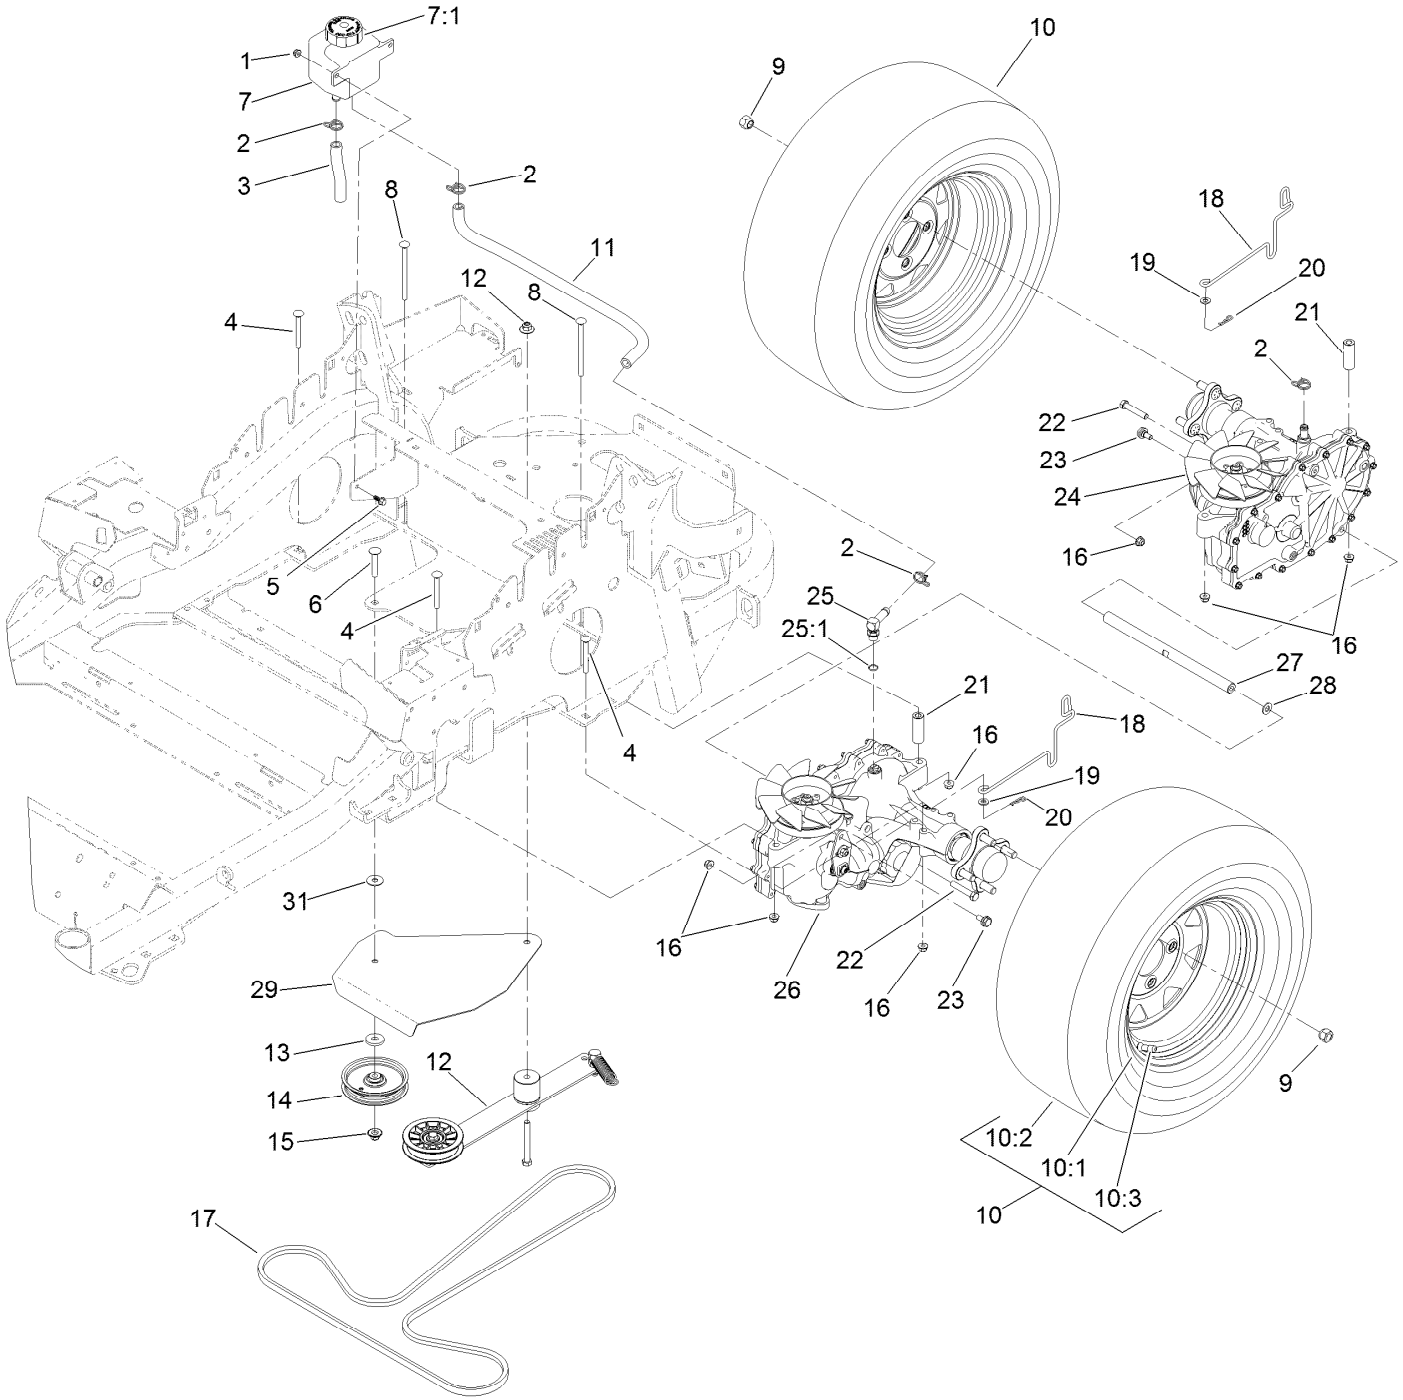


Hydro Drive System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-7201	2	Nut-HF
2	117-1193	4	Clamp-Hose
3	119-2642	1	Hose-HYD
4	3230-9	6	Screw-CARR
5	99-6810	2	Screw-HHF
6	117-9971	1	Bolt-Carriage
7	109-2250	1	Vent-Tank, Hydro
7:1	109-3320	1	Cap-Reservoir, HYD
8	3230-30	2	Screw-CARR
9	242-50	8	Nut-Lug
10	127-9508	2	Wheel And Tire ASM
10:1	127-9509	1	Wheel
10:2	120-3269	1	Tire
10:3	232-27	1	Stem-Valve
11	119-2689	1	Hose-HYD
12		1	Hydro Idler Arm ASM ●
13	1-373034	1	Washer
14	93-1622	1	Pulley-Idler
15	109-6658	1	Nut-Flange, NI
16	104-8300	10	Nut-Flange, NI
17	114860	1	Belt-V
18	125-8950	2	Rod-Bypass
19	3256-23	2	Washer-Flat
20	1-806003	2	Pin-Cotter, Hair
21	109-3652	2	Spacer-Hydro
22	94-7972	2	Screw-HH W/Loctite
23	37-8771	2	Bolt-Shoulder
24	130-2850	1	RH Transaxle ASM
25	109-6449	1	Fitting-Elbow, 90
25:1	237-42	1	O-Ring
26	130-2851	1	LH Transaxle ASM
27	117-8585	1	Shaft-Cross, Hydro
28	3256-24	1	Washer-Flat
29	125-4777-01	1	Plate-Guard
31	52-2860	1	Washer

● Not serviced separately


Hydro Idler Arm Assembly

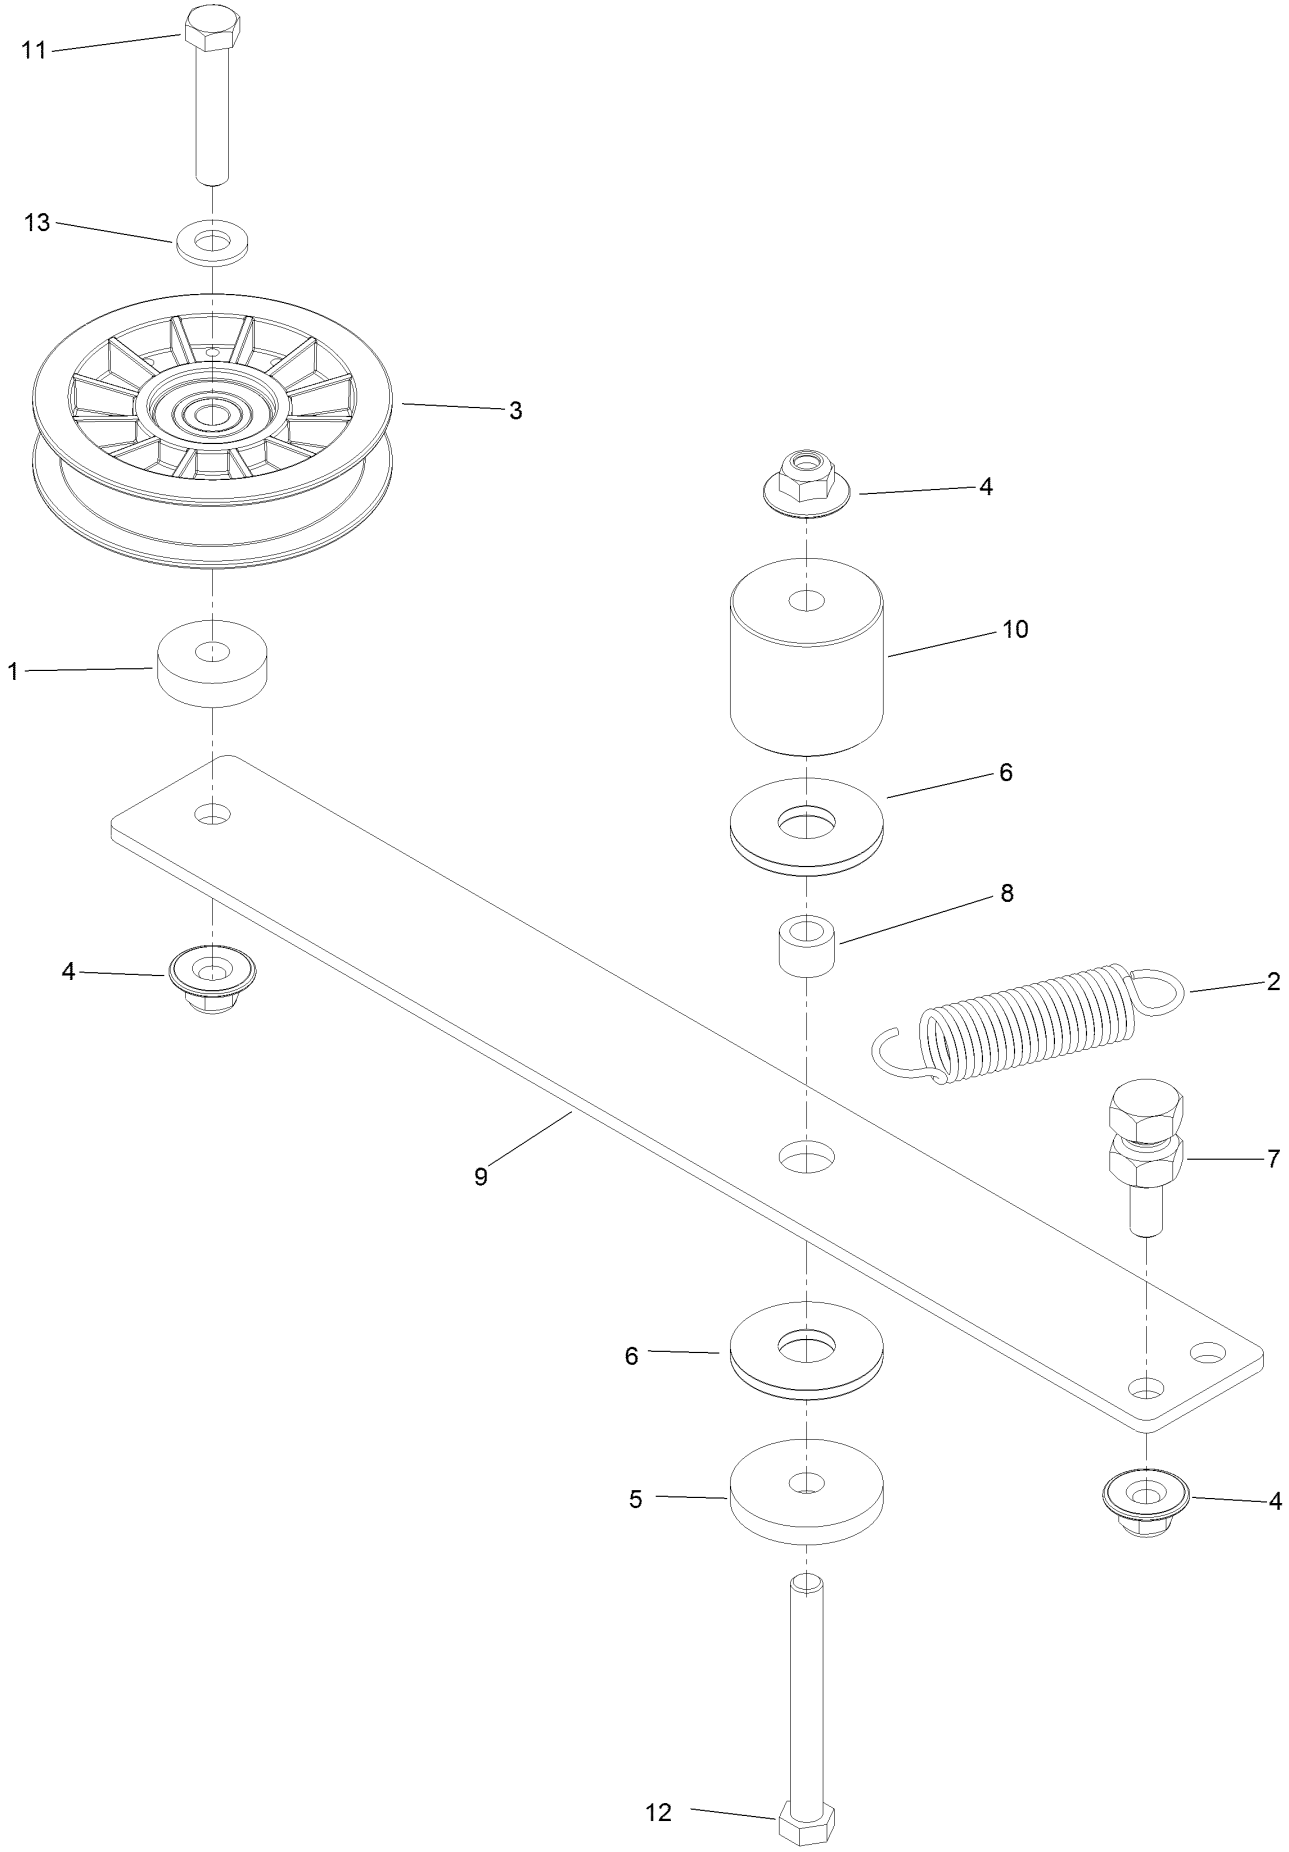

Hydro Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	105-7788	1	Spacer
2	108-4056	1	Spring-Extension
3	109-3397	1	Pulley-Idler, Flat
4	109-6658	3	Nut-Flange, NI
5	110-9981	1	Washer-Plain
6	114-0463	2	Washer-Friction, Composite
7	114-5866	1	Anchor-Spring, Short
8	115-4986	1	Spacer
9	119-9914	1	Arm-Idler, Hydro
10	119-2657	1	Spacer-Plain
11	323-10	1	Screw-HH
12	323-20	1	Screw-HH
13	3256-24	1	Washer-Flat


Fuel Tank and Hose Assembly

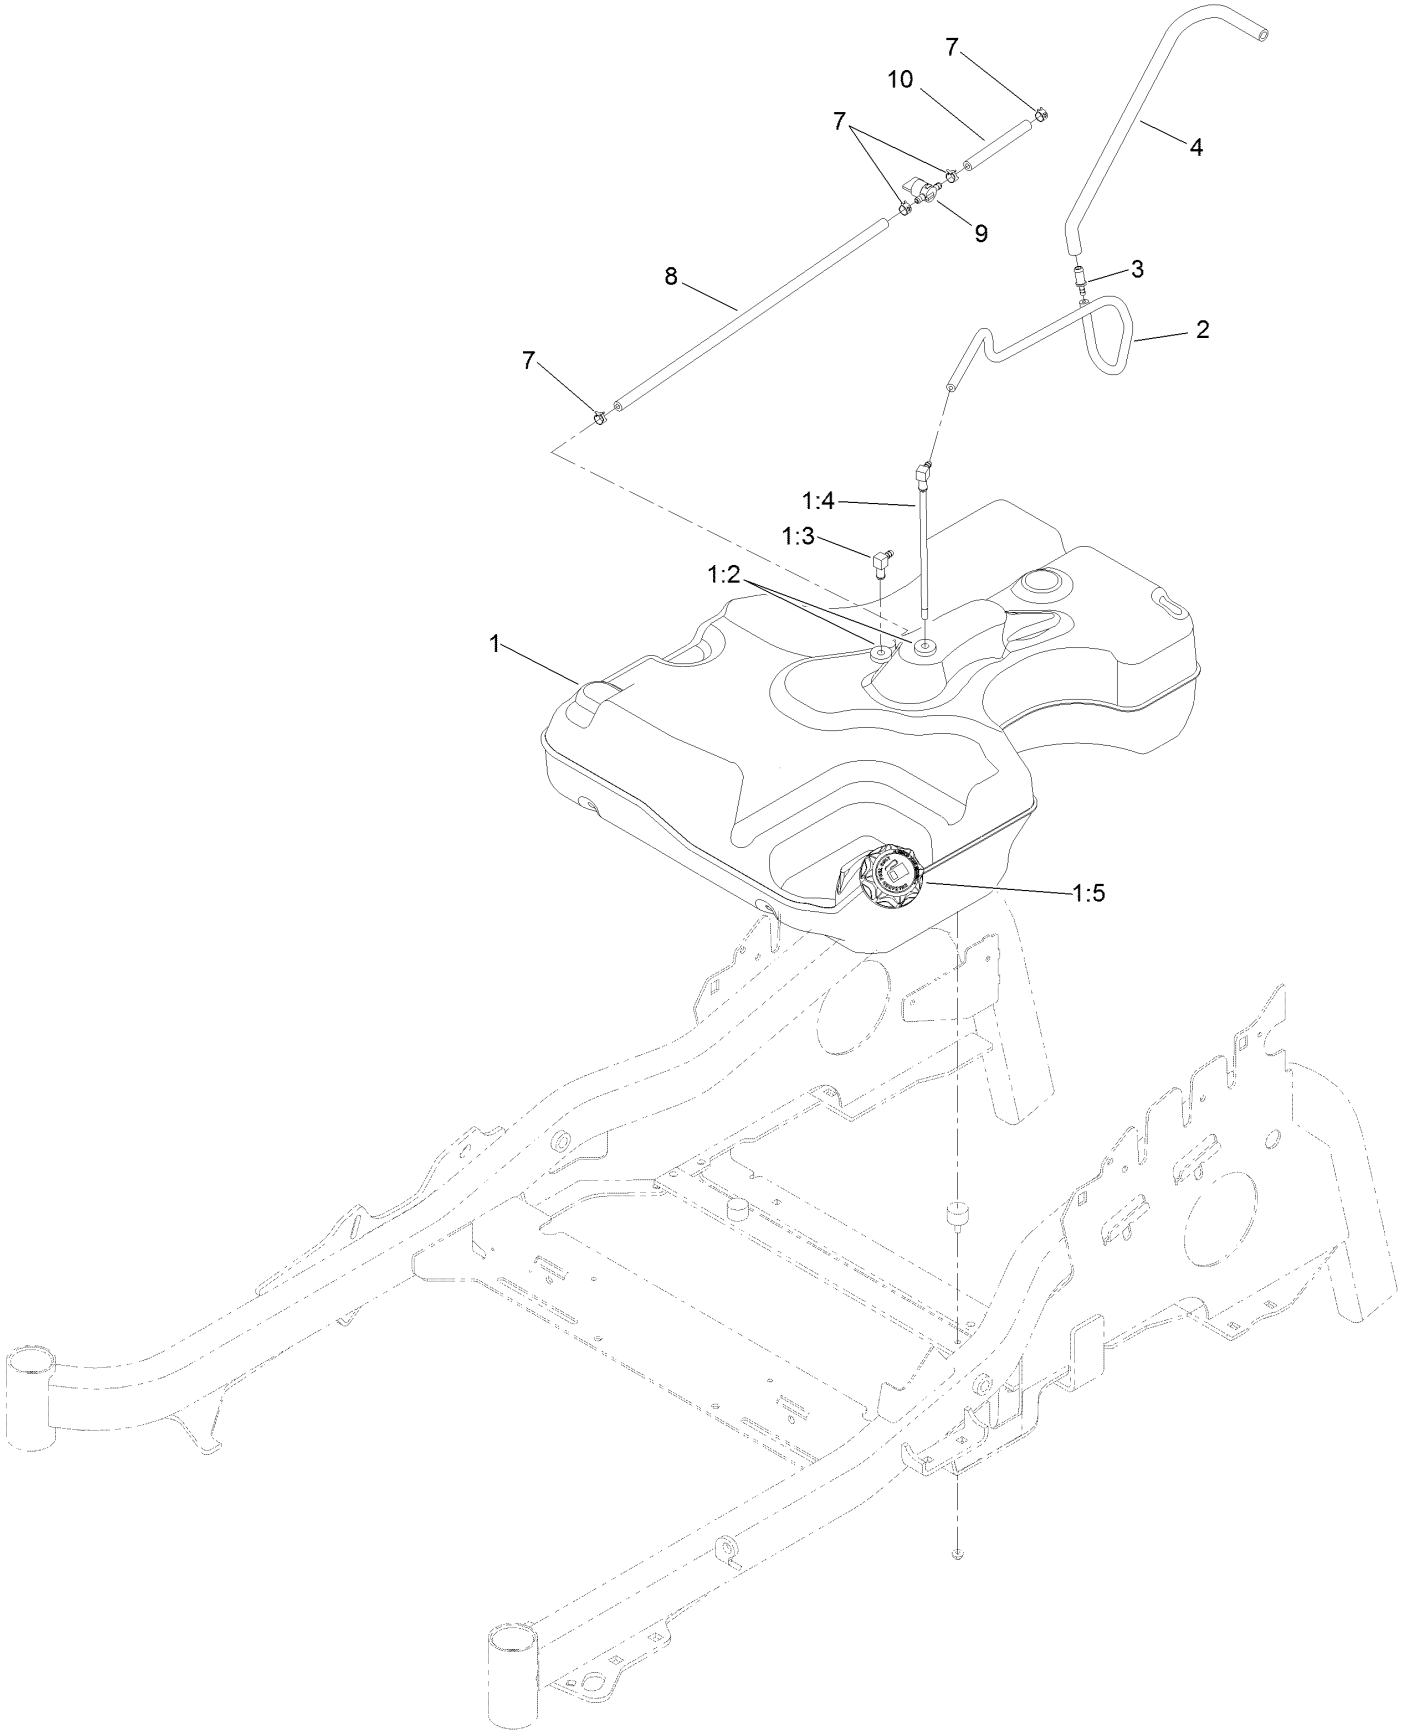

Fuel Tank and Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-4765	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	116-2288	1	Fitting-90 Elbow
1:4	125-4767	1	Fuel Line ASM
1:5	126-1789	1	Cap-Fuel, Ratcheting
2	119-6074	1	Hose-Fuel
3	98-2952	1	Fitting-Straight
4	119-8562	1	Hose-Fuel
7	2412-98	4	Clamp-Hose
8	110-5701	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	109-0650	1	Hose-Fuel


Seat Mounting Assembly

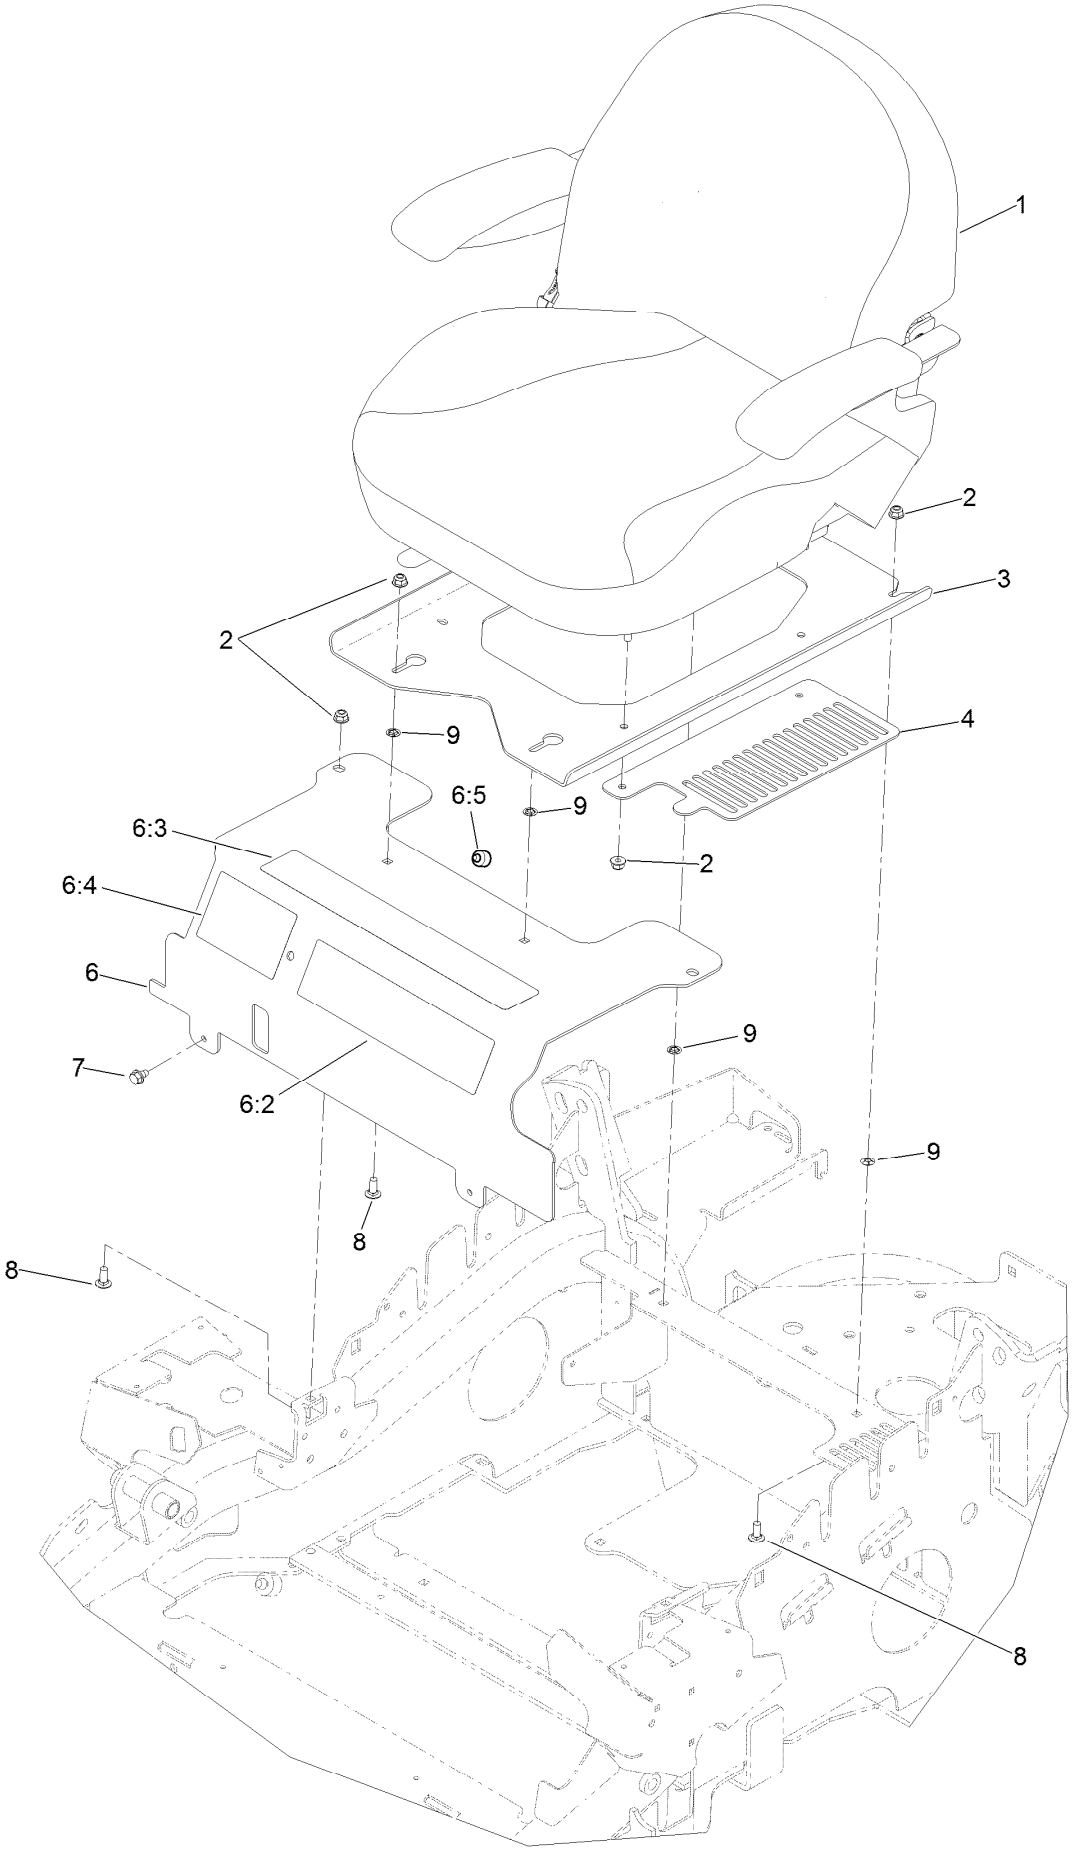

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9538	1	Seat ASM
2	104-8300	10	Nut-Flange, NI
3	117-8615-03	1	Plate-Mount, Seat
4	117-8618-03	2	Plate-Cover, Fan
6	119-2597	1	Seat Mount Panel ASM
6:2	114-5878	1	Decal
6:3	109-7069	1	Decal-Console
6:4	121-3223	1	Decal-Service Aid
6:5	120-7893	1	Bumper-Grommet
7	9266934	2	Screw
8	3230-23	6	Screw-CARR
9	117-2749	4	Nut-Push


Seat Assembly No. 127-9538

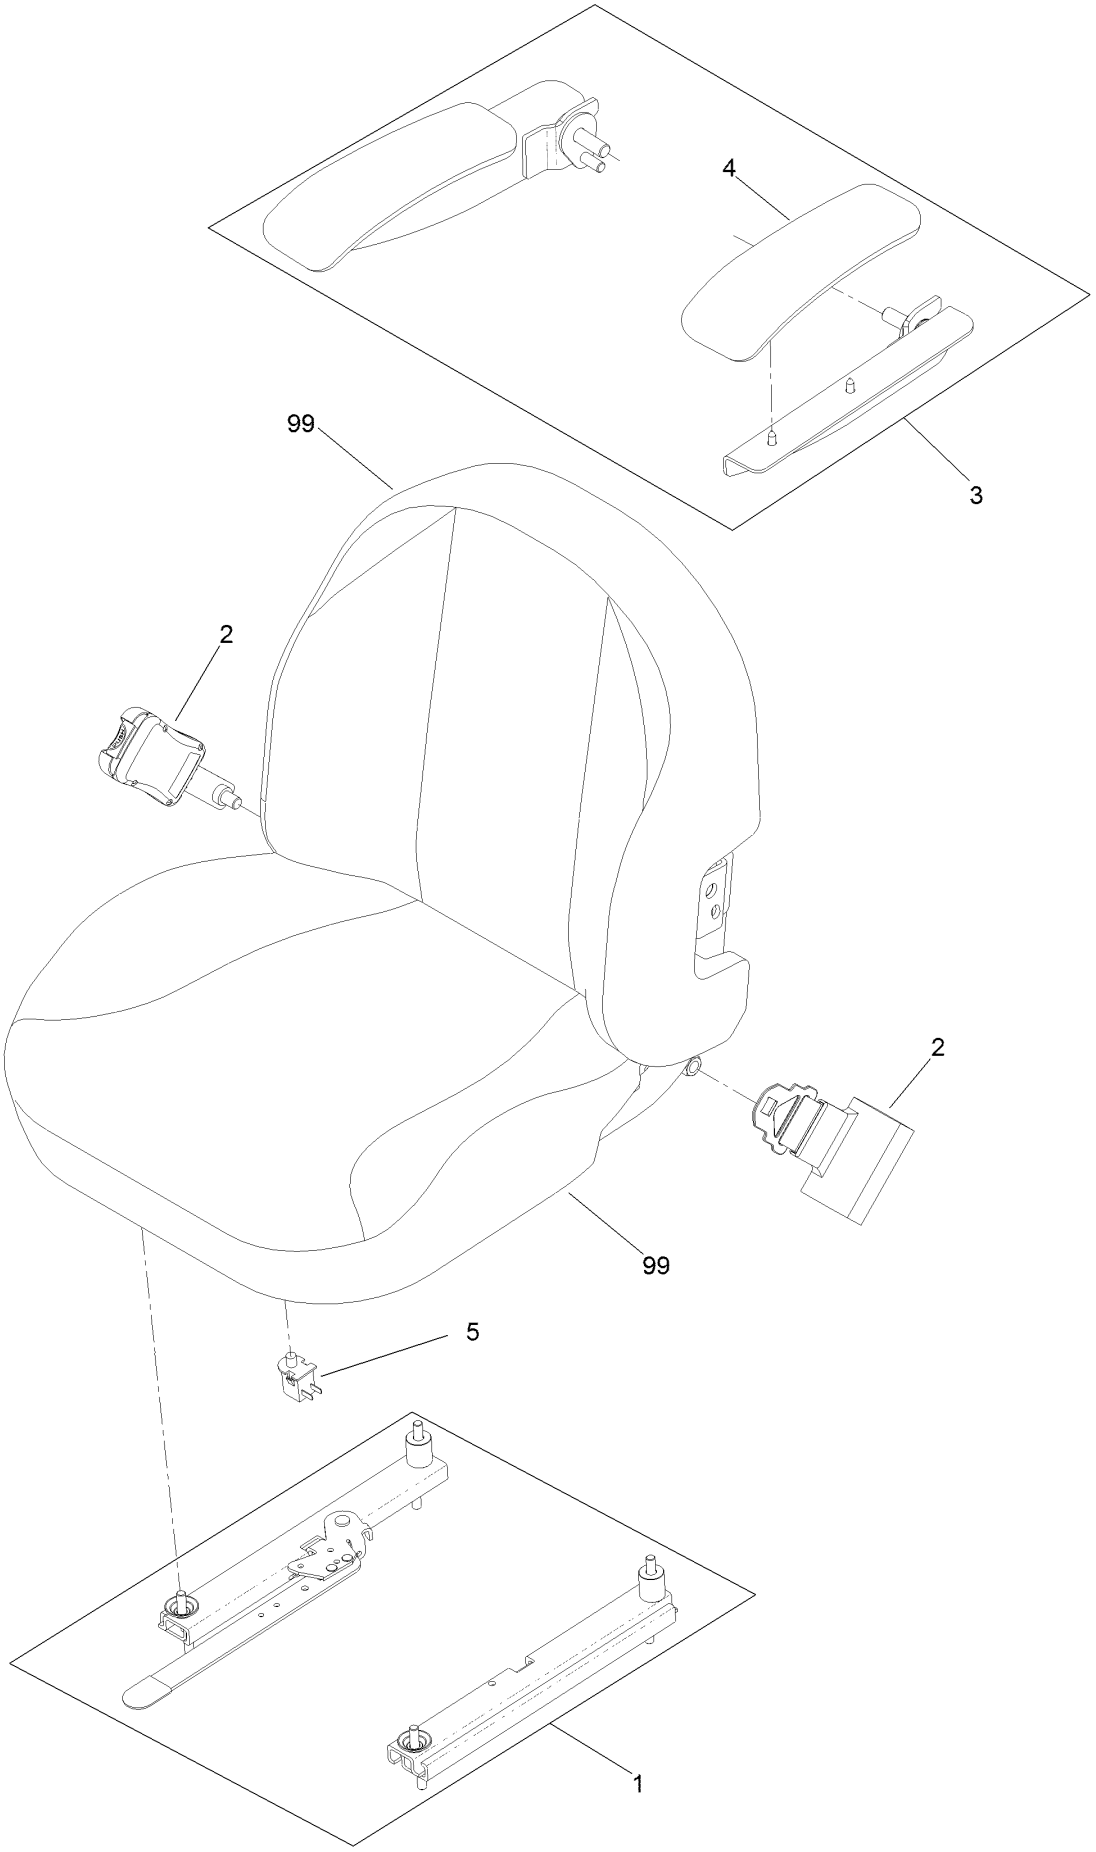

Seat Assembly No. 127-9538 (continued)

Ref.	Part Number	Qty.	Description
1	130-2853	1	Seat Track Kit
2	130-2854	1	Seat Belt Kit
3	126-2058	1	Armrest Kit
4	110-4163	2	Cushion-Rest, Arm
5	82-2190	1	Switch-Bail
99	130-2855	1	Cover-Seat, Back
99	130-2856	1	Cover-Seat, Bottom


Motion Control Assembly

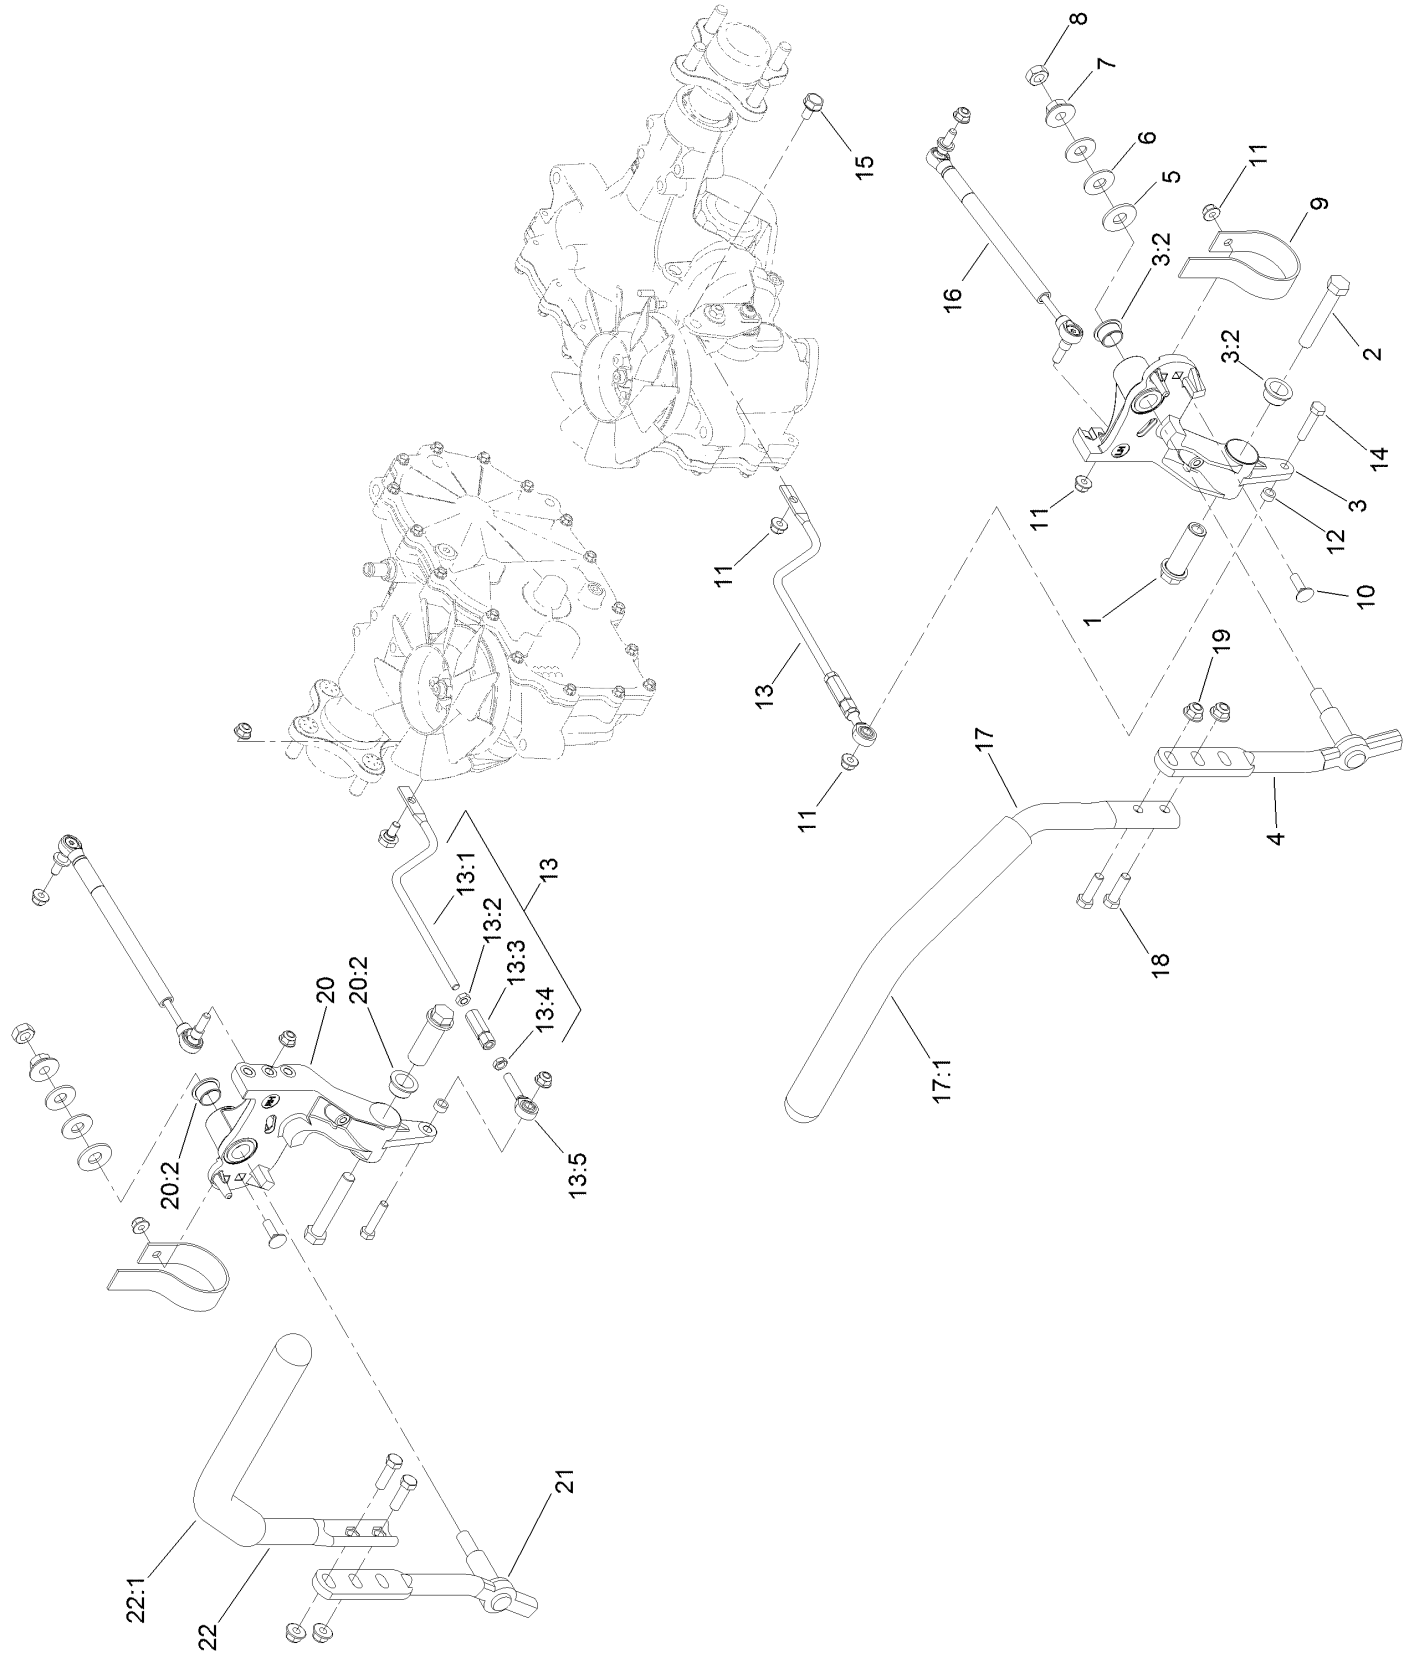

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-5891	2	Hub-Threaded
2	325-12	2	Screw-HH
3	116-0881	1	LH Motion Control And Bushing ASM
3:2	109-8054	4	Bushing-Flange
4	116-0040	1	Lever-Control Motion, LH
5	3256-6	2	Washer-Flat
6	109-9505	4	Washer-Spring
7	32128-56	2	Nut-HF
8	3218-5	2	Nut-Jam
9	109-5575	2	Spring-Leaf
10	3230-2	2	Bolt-CARR
11	104-8300	10	Nut-Flange, NI
12	92-6998	2	Spacer-Yoke, Right
13	119-2605	2	Hydro Control Rod ASM
13:1	119-2606	1	Rod-Control, Hydro
13:2	3220-2	1	Nut-Jam
13:3	109-3728	1	Nut-Rod Adjustment
13:4	3220-20	1	Nut-Jam
13:5	2411-53	1	Bearing-Rod End, LH
14	322-7	2	Screw-HH
15	37-8771	2	Bolt-Shoulder
16	116-0027	2	Damper-Control, Motion
17	109-6590	1	LH Steering Handle ASM
17:1	109-5668	1	Grip-Control, Lever
18	323-7	4	Screw-HH
19	104-8301	4	Nut-Flange, NI
20	116-0880	1	RH Motion Control And Bushing ASM
20:2	109-8054	4	Bushing-Flange
21	116-0039	1	Lever-Control Motion, RH
22	109-6589	1	RH Steering Handle ASM
22:1	109-5668	1	Grip-Control, Lever


Parking Brake Assembly

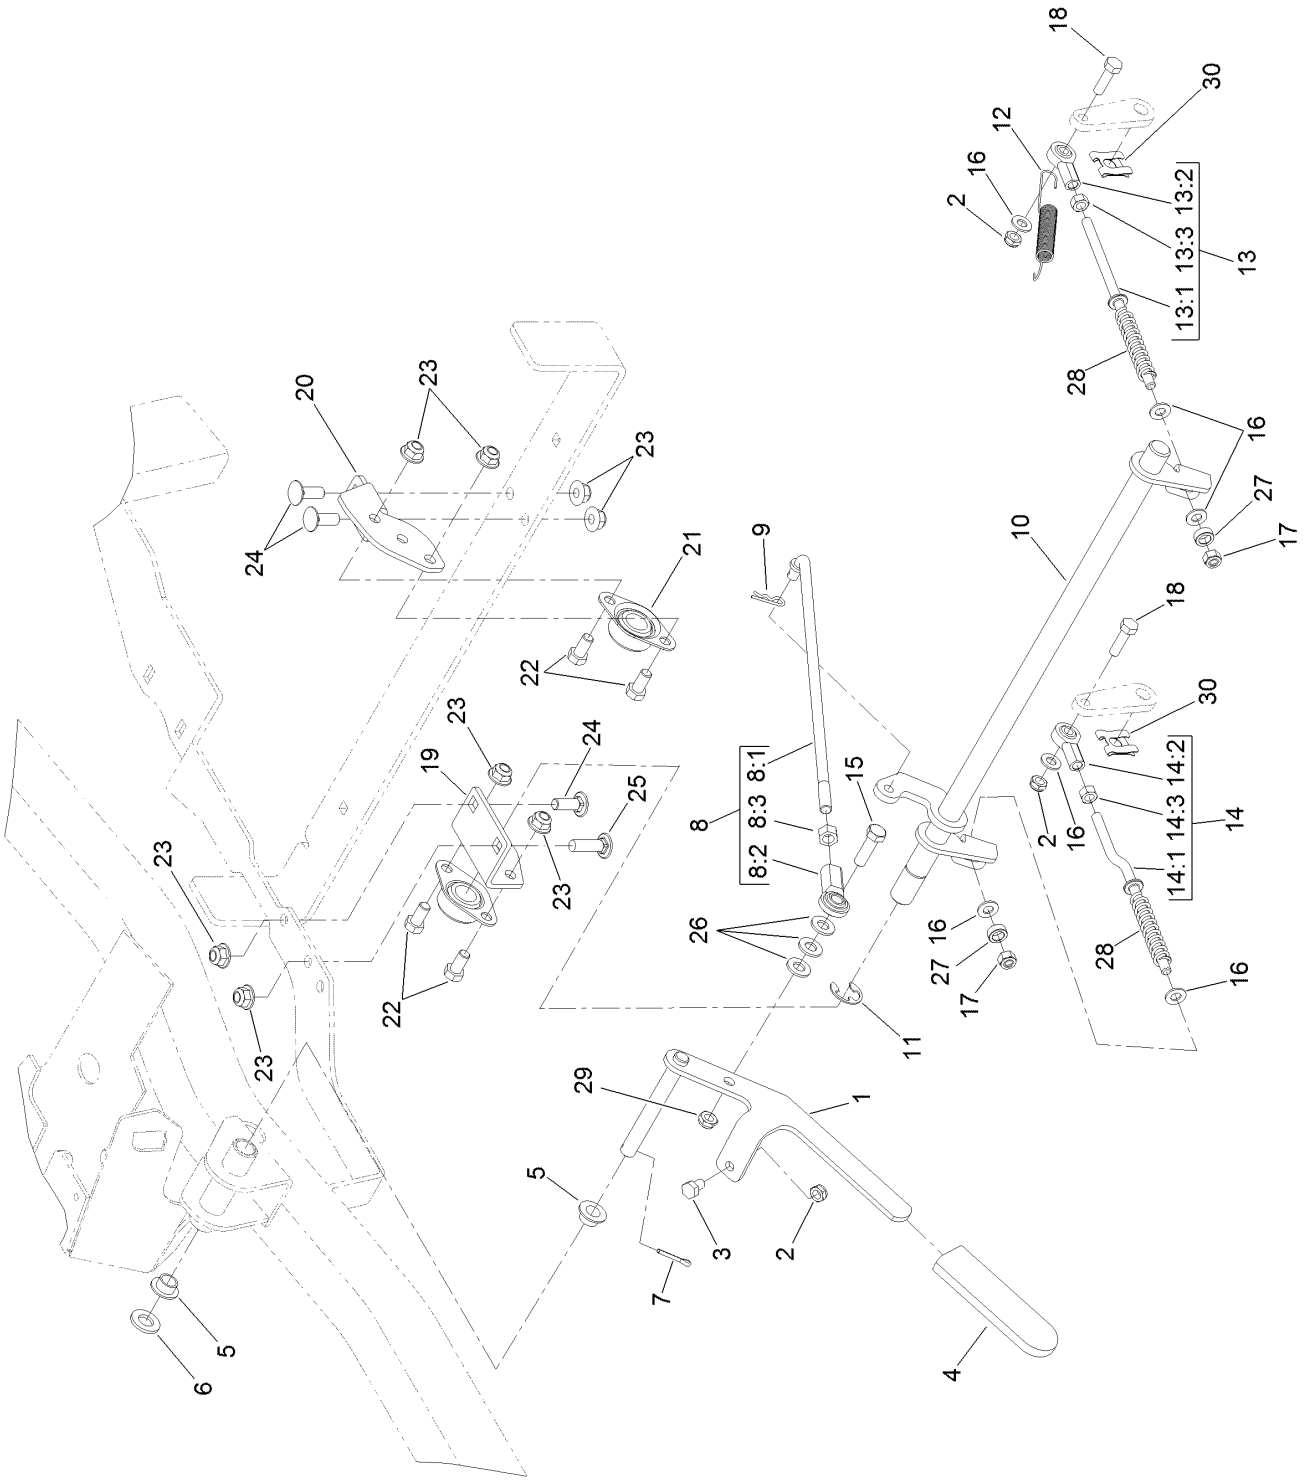

Parking Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-4766-03	1	Handle-Brake
2	3296-47	3	Nut-Lock, NI
3	322-1	1	Screw-HH
4	1-633268	1	Grip-Lever
5	1-513140	2	Bearing-Control
6	106-9888	1	Washer-Flat
7	3272-10	1	Pin-Cotter
8	121-4807	1	Brake Link ASM
8:1	121-4795	1	Rod-Link, Brake
8:2	103-0608	1	Joint-Ball, End
8:3	3219-3	1	Nut-Hex
9	3290-307	1	Pin-Hair
10	121-4804-03	1	Shaft-Brake
11	32151-48	1	E-Ring
12	110769	1	Spring-Extension
13	121-4805	1	LH Brake Rod ASM
13:1	121-4755	1	Rod-Brake
13:2	1-543017	1	Balljoint-RH
13:3	3219-2	1	Nut-Hex
14	121-4806	1	RH Brake Rod ASM
14:1	121-4770	1	Rod-Brake
14:2	1-543017	1	Balljoint-RH
14:3	3219-2	1	Nut-Hex
15	323-7	1	Screw-HH
16	3256-23	6	Washer-Flat
17	3296-4	2	Nut-Lock
18	322-16	2	Screw-HH
19	121-4761-01	1	Bracket-Shaft Mount, RH
20	121-4793-01	1	Bracket-Shaft Mount, LH
21	1-633102	2	Bearing-Flange, Side
22	323-4	4	Screw-HH
23	104-8301	8	Nut-Flange, NI
24	3231-22	3	Screw-CARR
25	3231-28	1	Screw-CARR
26	3256-24	3	Washer-Flat
27	103-5677	2	Spacer
28	1-603807	2	Spring-Return, Neutral
29	3296-59	1	Nut-Lock, NI
30	114-8450	2	Clip-Retaining

Engine, Muffler and Control Panel Assembly

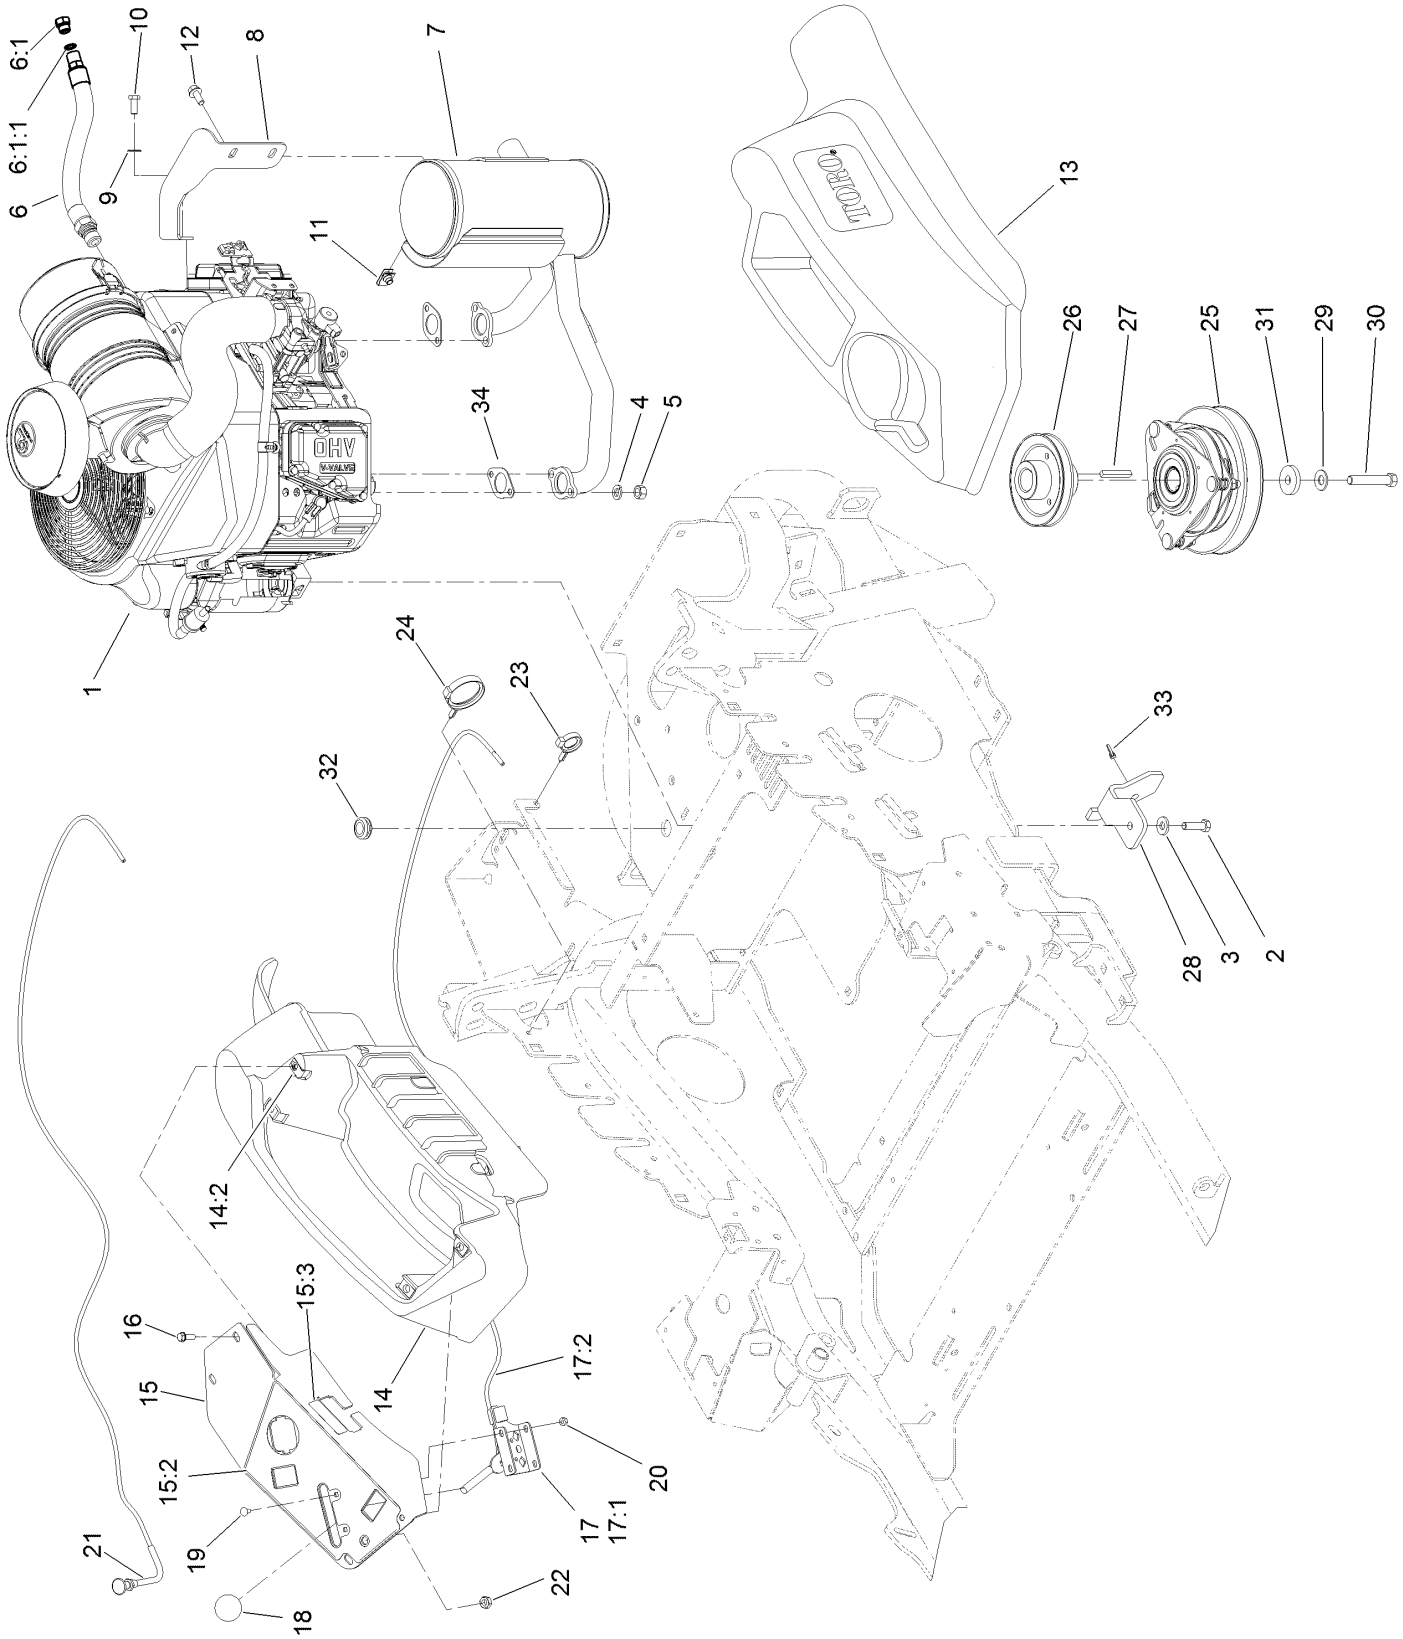


Engine, Muffler and Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx730 ●■
2	323-7	4	Screw-HH
3	98-5975	4	Washer-Belleville
4	114-3550	4	Washer-Lock, Spring
5	114-3549	4	Nut
6	116-4924	1	Engine Oil Drain Hose ASM
6:1	353-508	1	Plug-HH
6:1:1	237-42	1	O-Ring
7	119-2645	1	Muffler
8	119-2659	1	Bracket-Muffler
9	1-303334	1	Washer-Spring
10	33114-020	1	Screw-HH
11	94-2413	2	U-Nut
12	3234-5	2	Screw-HHF
13	119-2602	1	LH Console ASM
14	119-2603	1	RH Console ASM
14:2	107069	4	Clip
15	119-2694	1	Control Panel ASM
15:2	119-2501	1	Decal-Panel, Control
15:3	114-4466	1	Decal-Fuses
16	32105-15	4	Screw-HWH
17	110-5727	1	Throttle Control ASM
17:1	112-2334	1	Lever-Throttle
17:2	110-5728	1	Cable-Throttle
18	1-603175	1	Knob-Ball
19	1-807513	2	Bolt-CARR
20	3296-2	2	Nut-Lock, NI
21	115-2753	1	Control-Choke
22	3220-3	1	Nut-HJ
23	105-1853	1	Clamp-Hose
24	117-7817	1	Clamp-Harness
25	119-2595	1	Clutch
26	119-9915	1	Pulley-Engine
27	608006	1	Key-Square
28	119-2658-01	1	Bracket-Stop, Clutch
29	1-603610	1	Washer-Spring
30	3212-10	1	Screw-HH
31	107-4136	1	Washer
32	112-7069	1	Grommet
33	1-303287	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com


Deck Lift Assembly

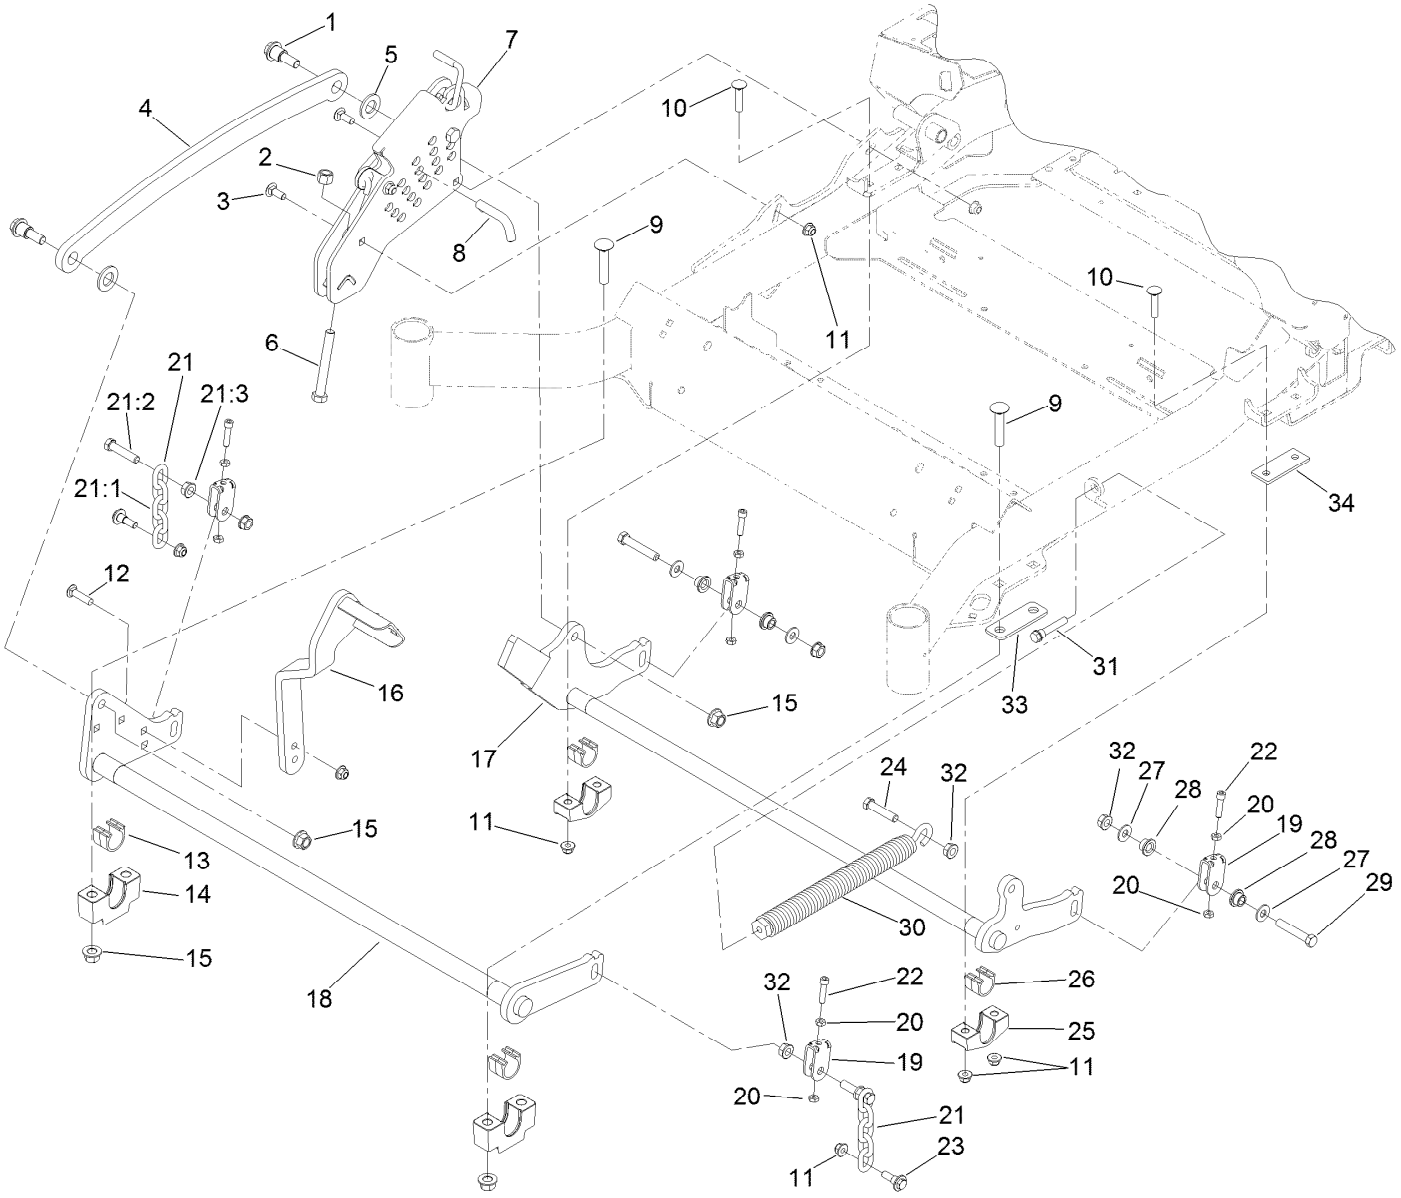

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0780	2	Screw-HHF, Shoulder
2	3296-23	1	Nut-Lock, NI
3	3231-2	2	Bolt-CARR
4	116-0797-03	1	Link-Lift, Deck
5	3256-28	2	Washer-Flat
6	116-0559	1	Bolt-TAP
7	120-2530	1	HOC ASM
8	116-5584	1	Pin-HOC
9	116-1700	4	Bolt-CARR
10	3231-5	4	Screw-CARR
11	104-8301	10	Nut-Flange, NI
12	3231-4	2	Screw-CARR
13	109-9410	2	Bearing-Cross Shaft, Front
14	109-9409	2	Support-Cross Shaft, Front Bearing
15	99-5107	6	Nut-Lock
16	116-1919-01	1	Lever-Foot
17	116-0459-03	1	Lift-Deck, Rear
18	116-2217-03	1	Cross Shaft-Front
19	109-9066	4	Yoke-Adjust, Deck
20	3218-2	8	Nut-Jam
21	116-0756	2	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	322-47	4	Screw-HH
23	109-9840	2	Screw-Shoulder, HHF
24	109-9065	1	Screw-HH
25	116-0818-03	2	Support-Cross Shaft, Rear Bearing
26	109-7173	2	Bearing-Cross Shaft, Rear
27	3256-4	4	Washer-Flat
28	116-2428	4	Bushing-Flanged
29	324-10	2	Screw-HH
30	116-0886	1	Extension Spring ASM
31	92-7674	1	Bolt-Shoulder
32	32128-37	6	Nut-HF
33	121-7593-01	2	Spacer-Decklift, Front
34	121-7594-01	2	Spacer-Decklift, Back


Height-of-Cut Assembly No. 120-2530

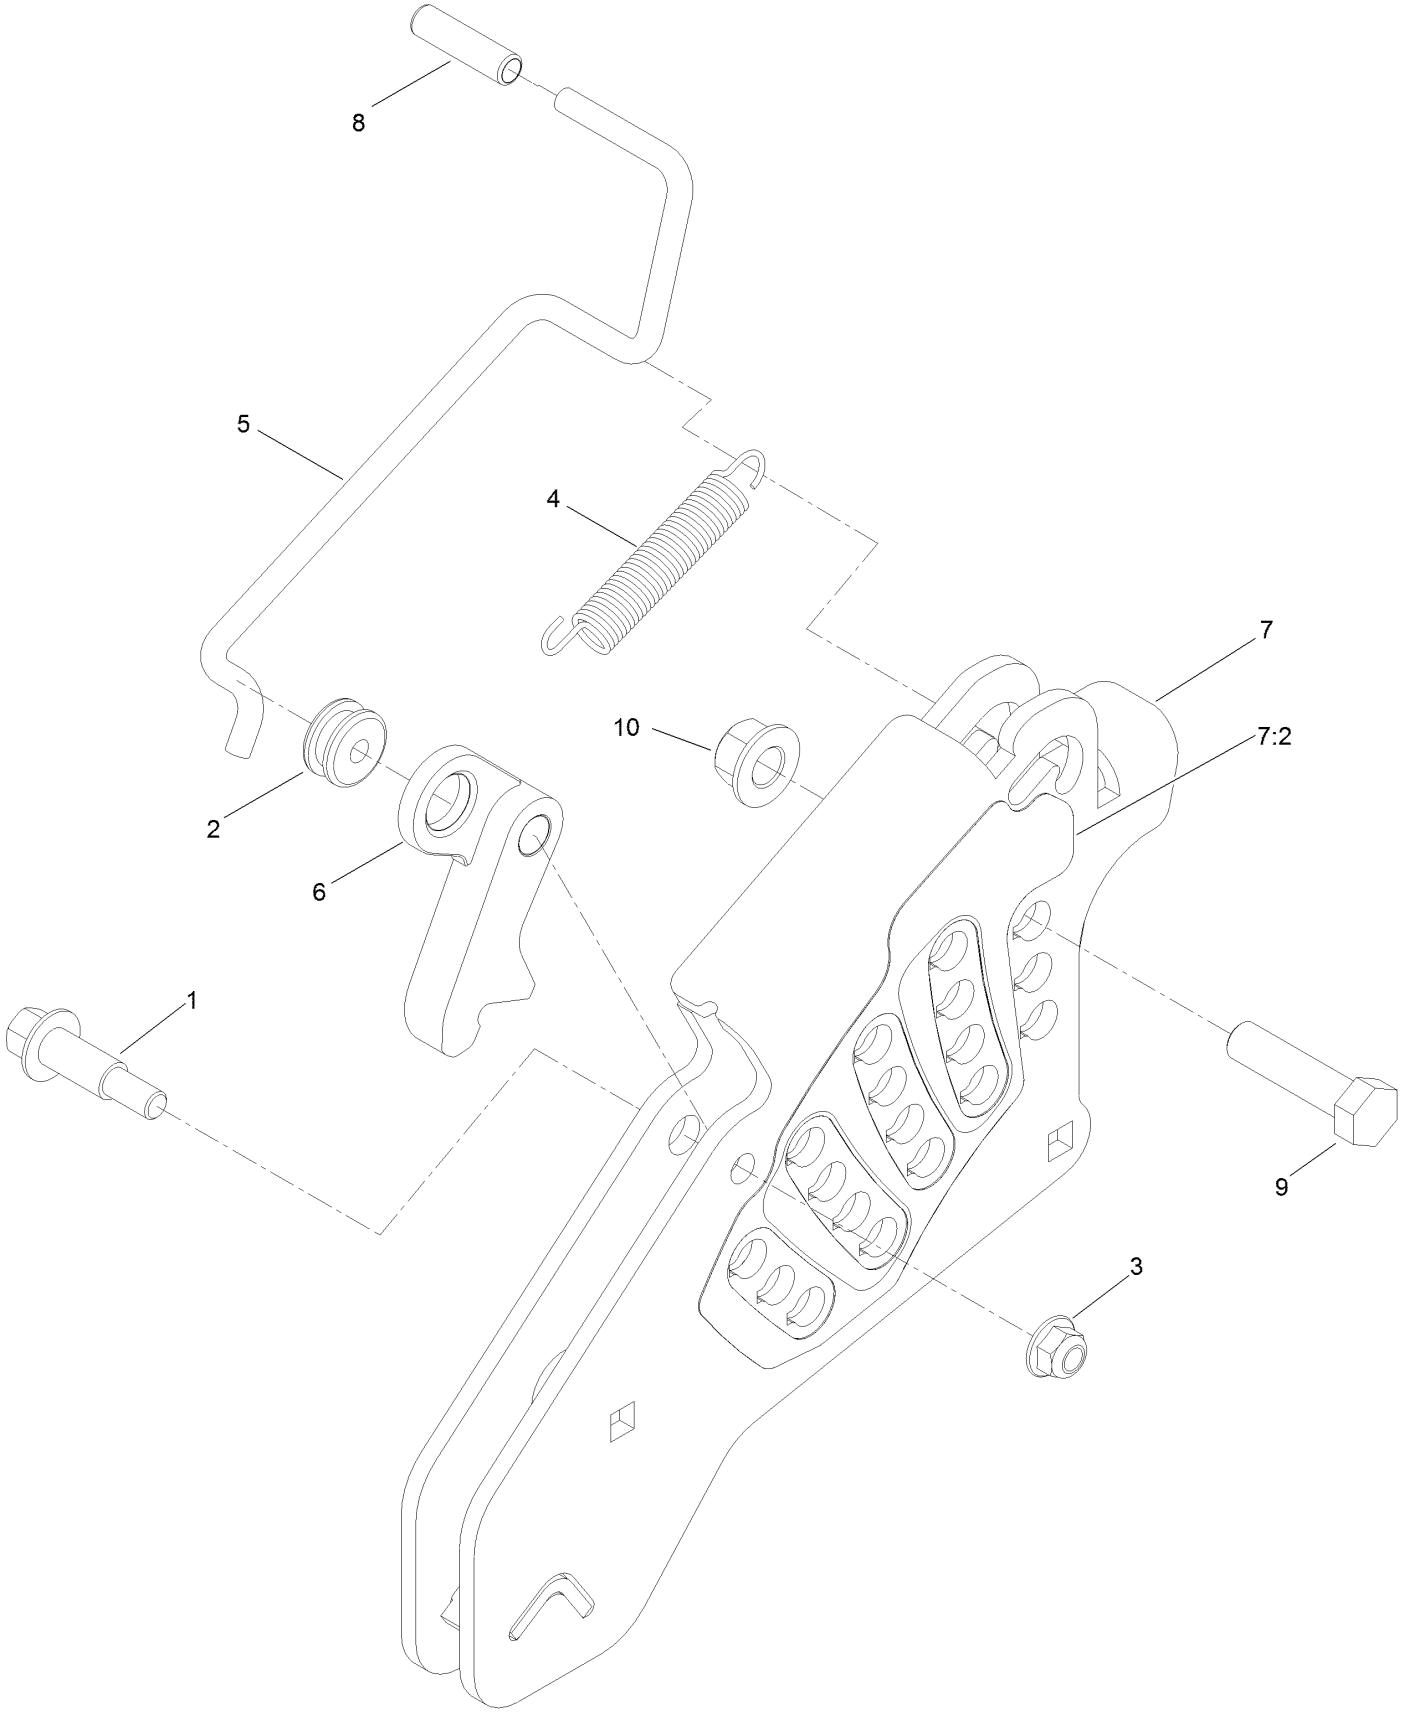

Height-of-Cut Assembly No. 120-2530 (continued)

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-Flange, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	120-2531	1	HOC Plate ASM
7:2	120-2532	1	Decal-HOC
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH
10	99-5107	1	Nut-Lock

Deck Assembly

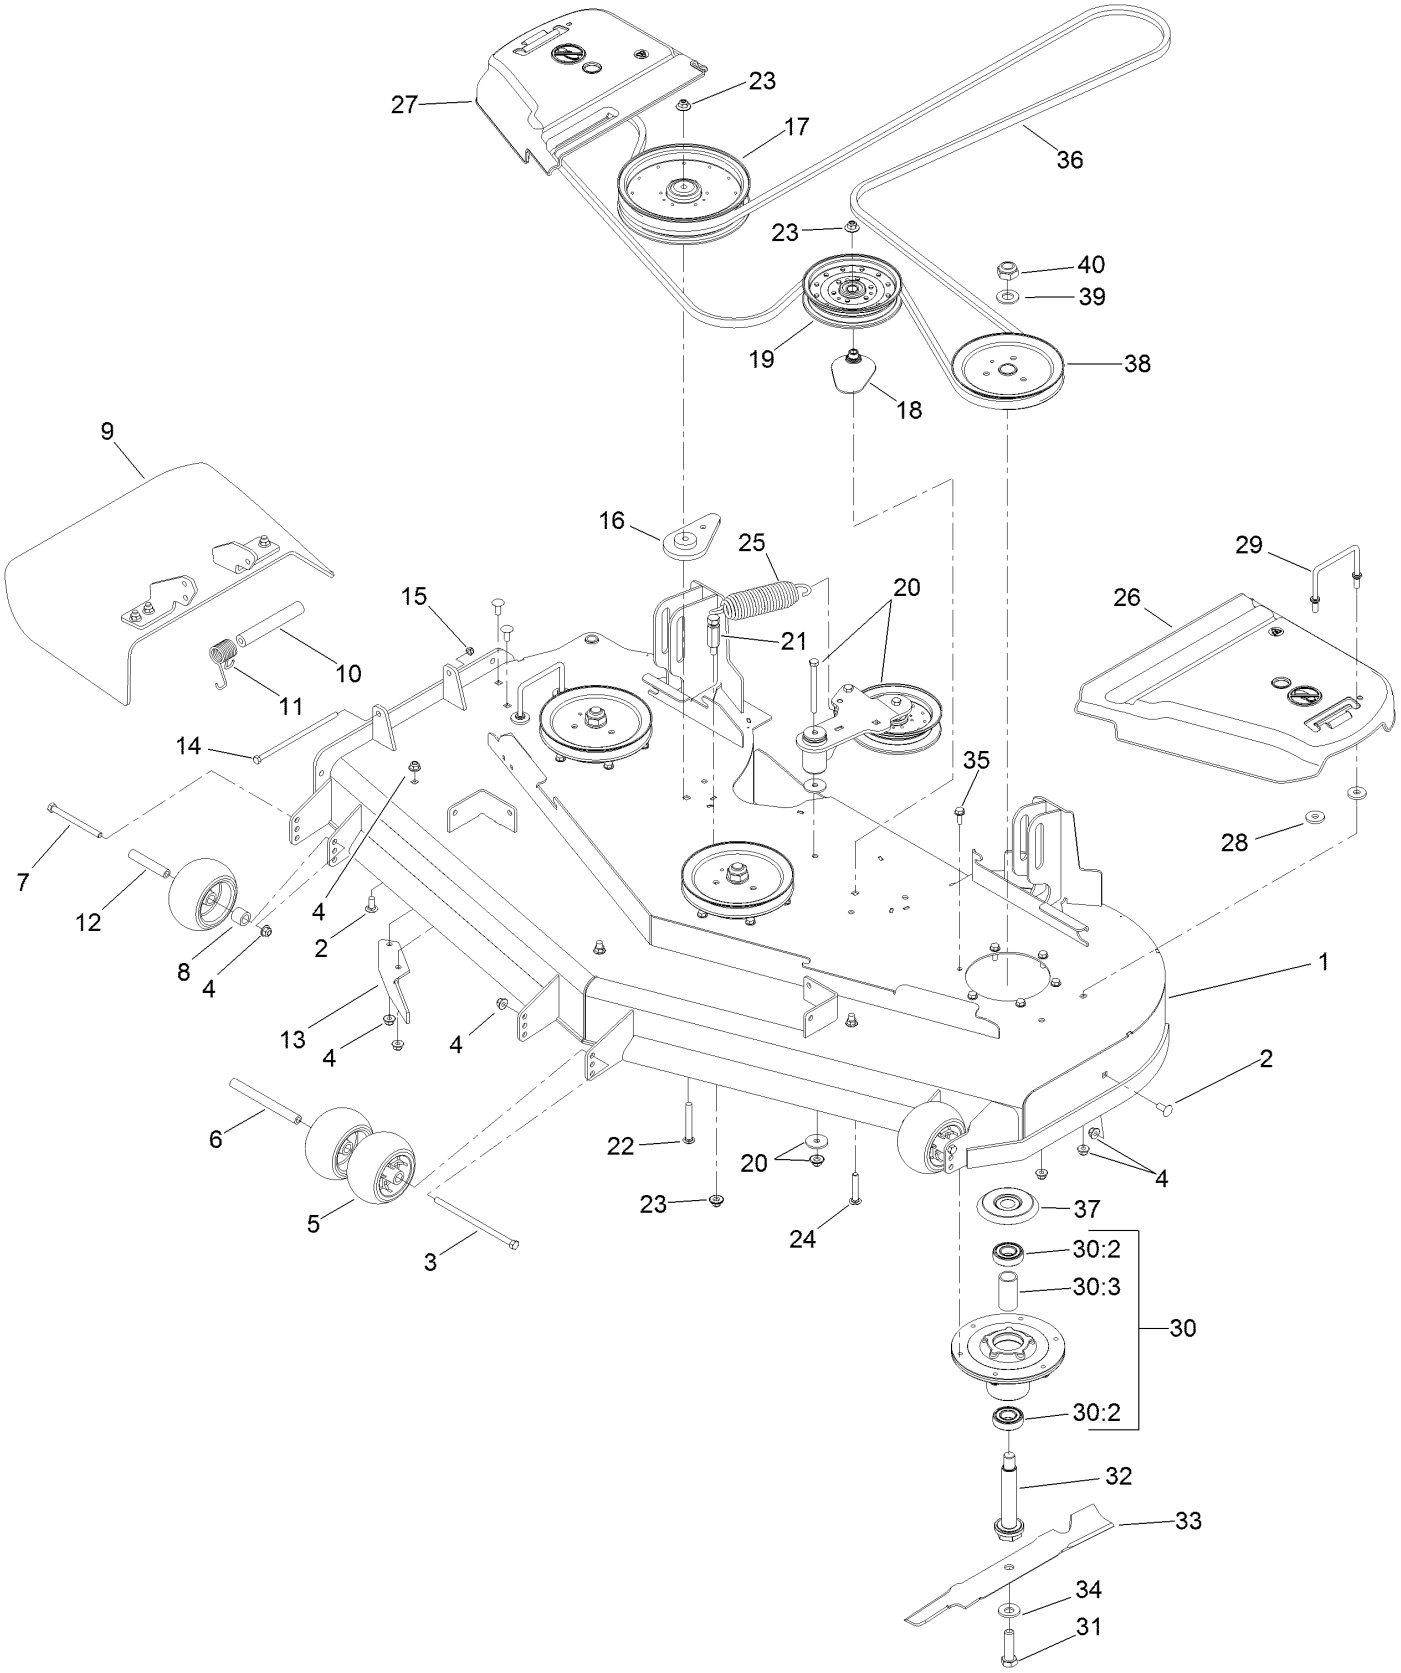


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-2461	1	Deck Decal ASM
2	3231-27	6	Screw-CARR
3	108-5388	1	Screw-HH
4	104-8301	13	Nut-Flange, NI
5	1-603299	4	Roller-Scalp, Anti
6	98-5967	1	Spacer-Wheel
7	323-23	2	Screw-HH
8	98-7913	2	Tube-Spacer
9	120-2451	1	Deflector ASM
10	105-4622	1	Spacer
11	108-4052	1	Spring-Torsion
12	98-7912	2	Tube-Spanner
13	106-3216-01	1	Baffle-Discharge
14	322-50	1	Screw-HH
15	3296-47	1	Nut-Lock, NI
16	109-9416	1	Spacer-Idler
17	109-8590	1	Pulley-Idler
18	109-2872	1	Spacer-Pulley
19	116-4670	1	Pulley-Idler, Flat
20		1	Idler Arm ASM ●
21	114-5867	1	Anchor-Spring, Tall
22	3231-42	1	Screw-CARR
23	109-6658	3	Nut-Flange, NI
24	3231-40	1	Bolt-CARR, Short Neck
25	116-6317	1	Spring-Extension
26	109-6938	1	Cover-Belt, LH
27	116-0094	1	Cover-Belt, RH
28	1-373034	4	Washer
29	109-6982	2	Wireform-Cover
30	120-5477	3	Spindle ASM
30:2	116-0720	2	Bearing-Ball
30:3	115-2641	1	Spacer-Bearing
31	51-4060	3	Screw-Blade
32	120-2505	3	Spindle-Shaft
33	115-9649-03	3	Blade-Hi Flo, 20.5In
34	125-1736	3	Washer-Belleville
35	32144-41	18	Screw-Taptite
36	114-5858	1	Belt-V
37	117-7210	3	Shield-Bearing
38	120-7856	3	Pulley B Section
39	92-5836	3	Washer
40	3296-67	3	Nut-Lock, NI

● Not serviced separately


Deck Decal Assembly No. 120-2461

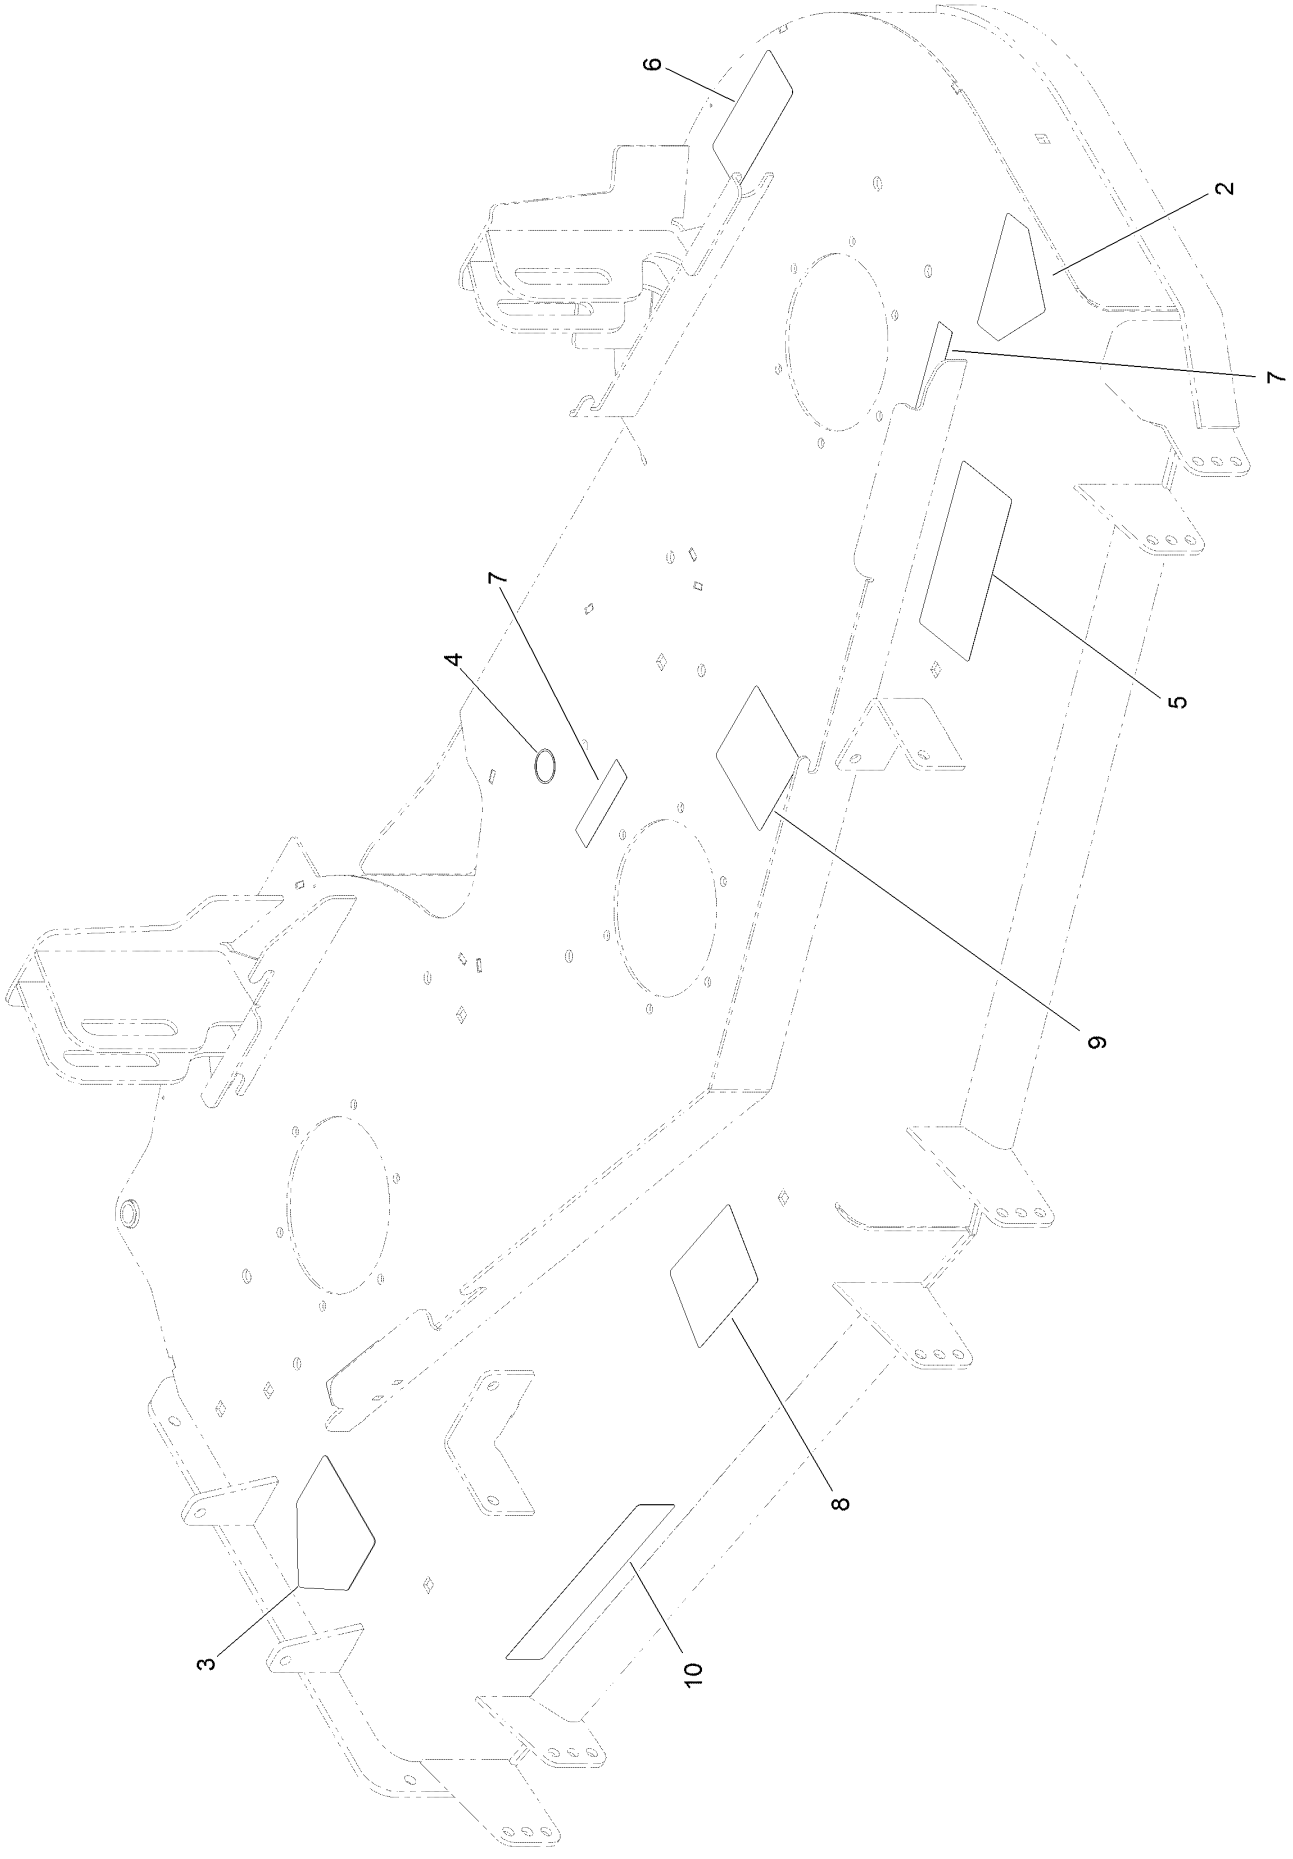

Deck Decal Assembly No. 120-2461 (continued)

Ref.	Part Number	Qty.	Description
2	1-403005	1	Decal-Danger
3	54-9220	1	Decal-Danger
4	58-6520	1	Decal-Grease
5	66-1340	1	Decal-Danger, Thrown Object
6	68-8340	1	Decal-Torque
7	98-5954	3	Decal-Missing Cover
8	112-3858	1	Decal-Anti Scalp
9	117-8639	1	Decal-Routing, Deck Belt
10	121-3206	1	Decal


Deflector Assembly No. 120-2451

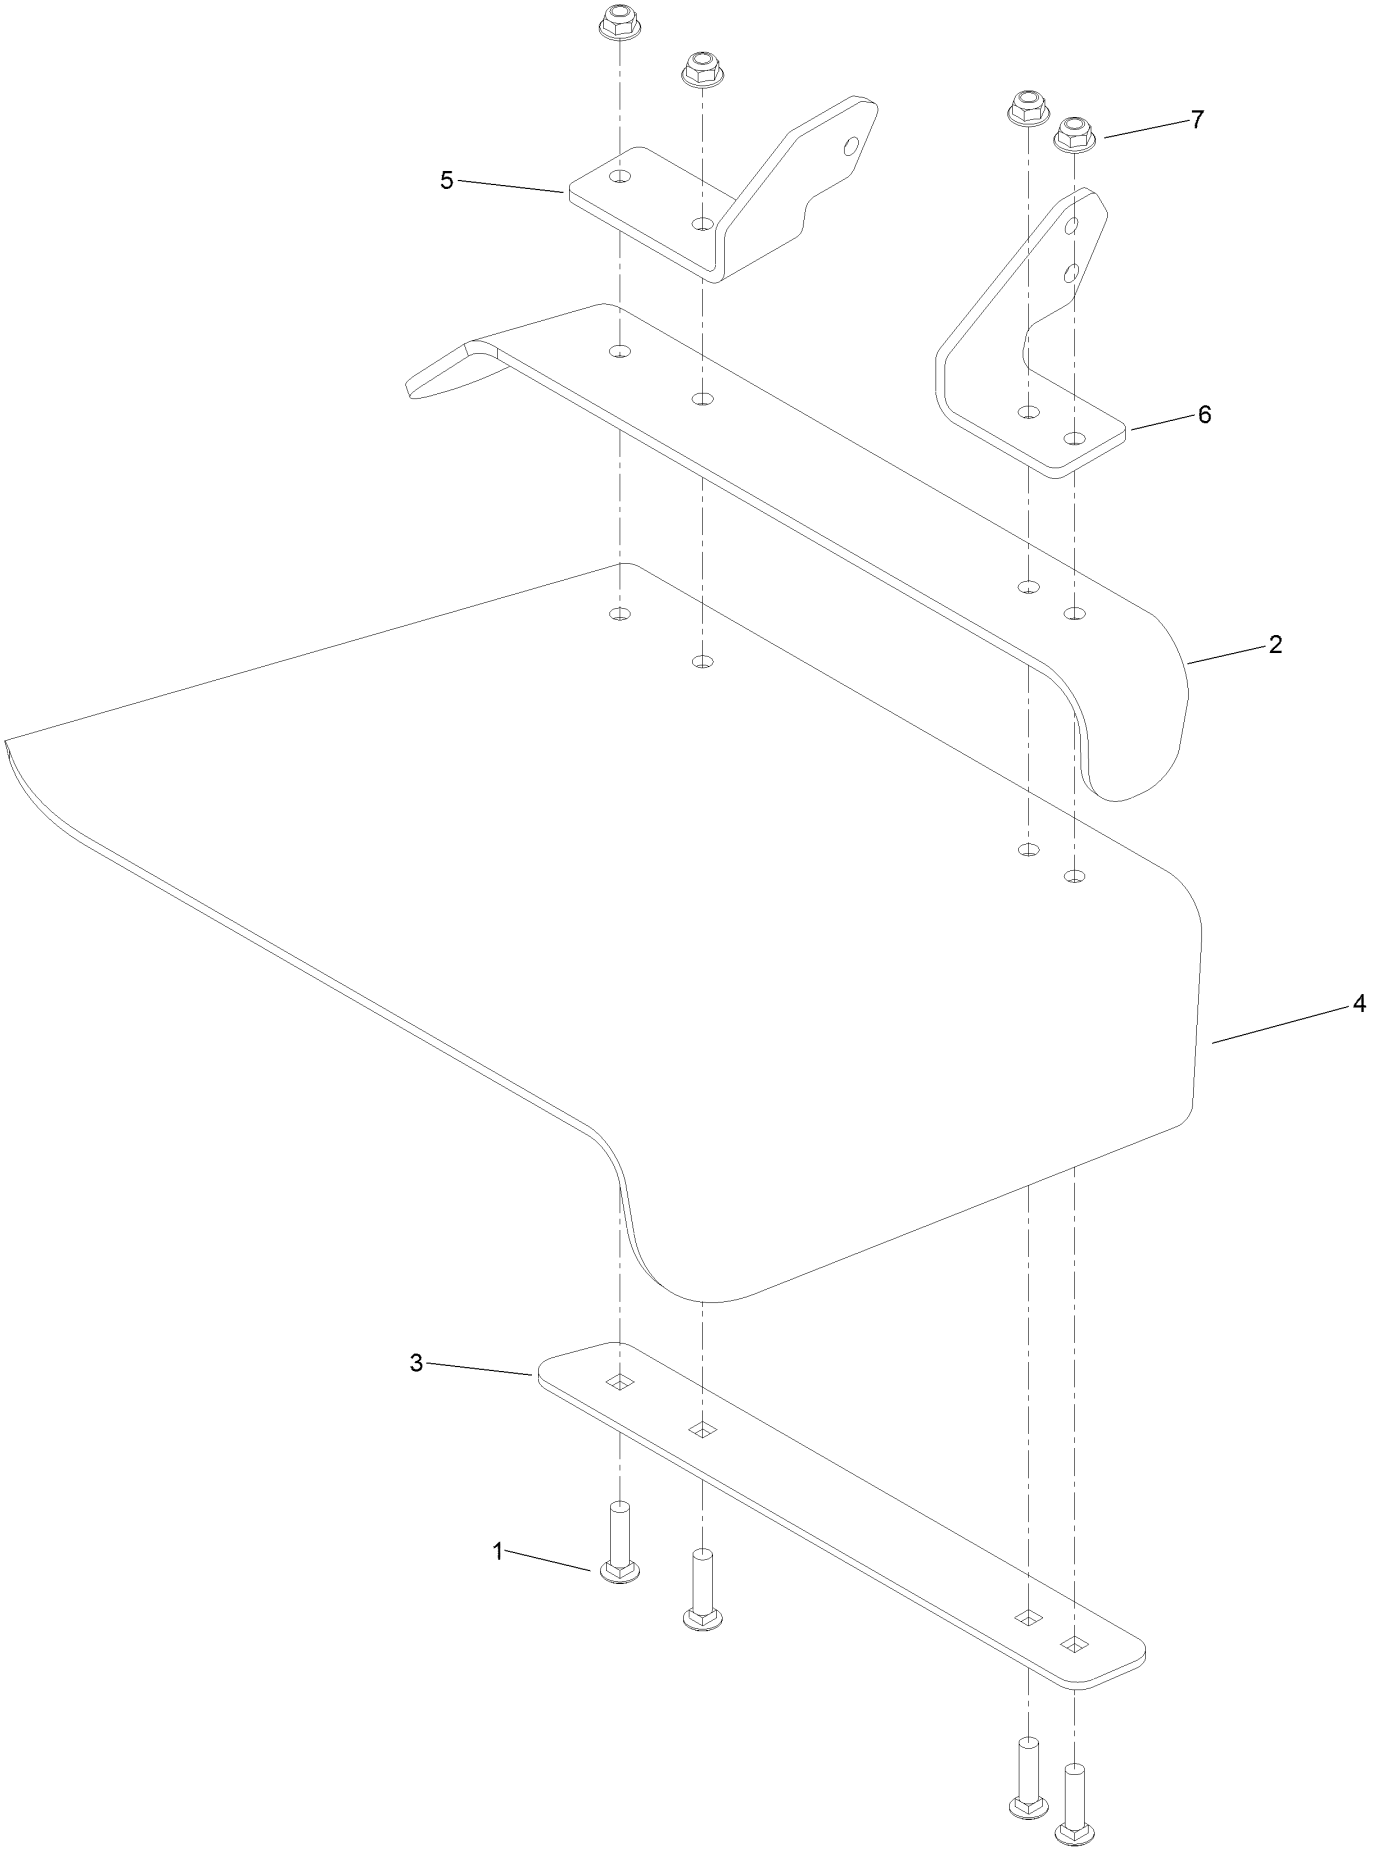

Deflector Assembly No. 120-2451 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-Flange, NI


Idler Assembly

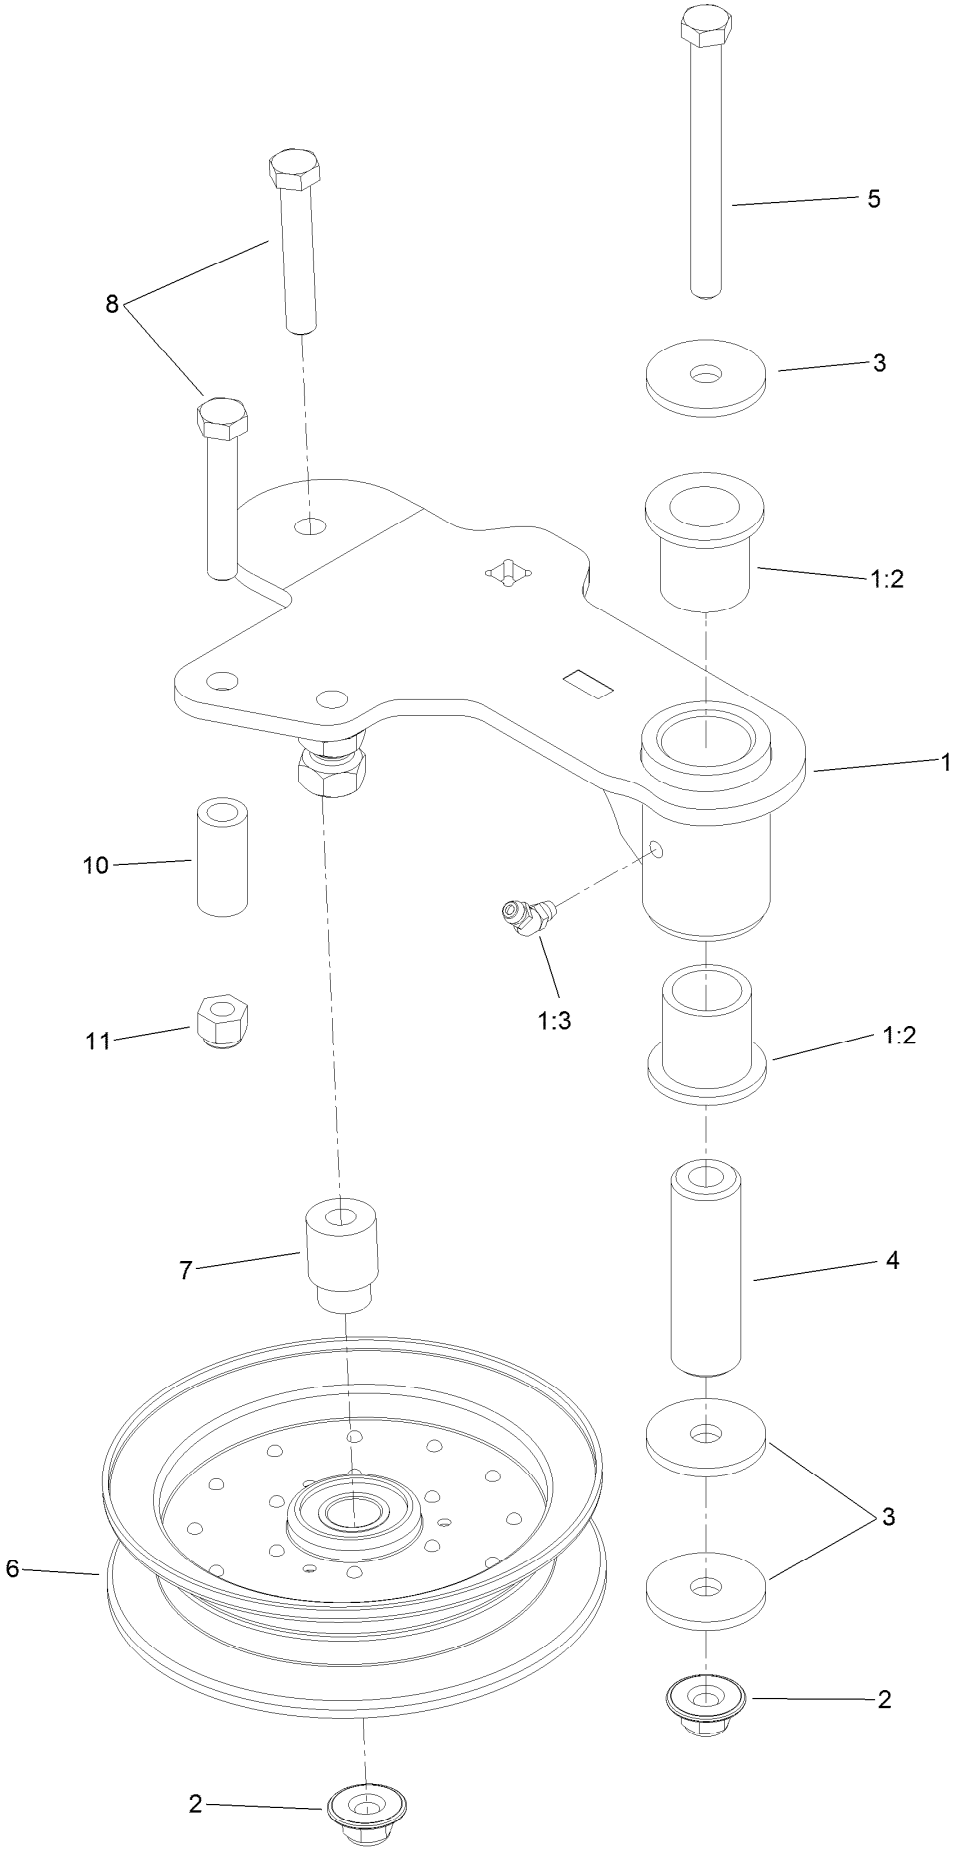

Idler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-2501	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	2	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	116-4668	1	Idler-Pulley, Flanged
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
10	104-0151	1	Spacer
11	3296-39	1	Nut-Lock, NI

Electrical Assembly

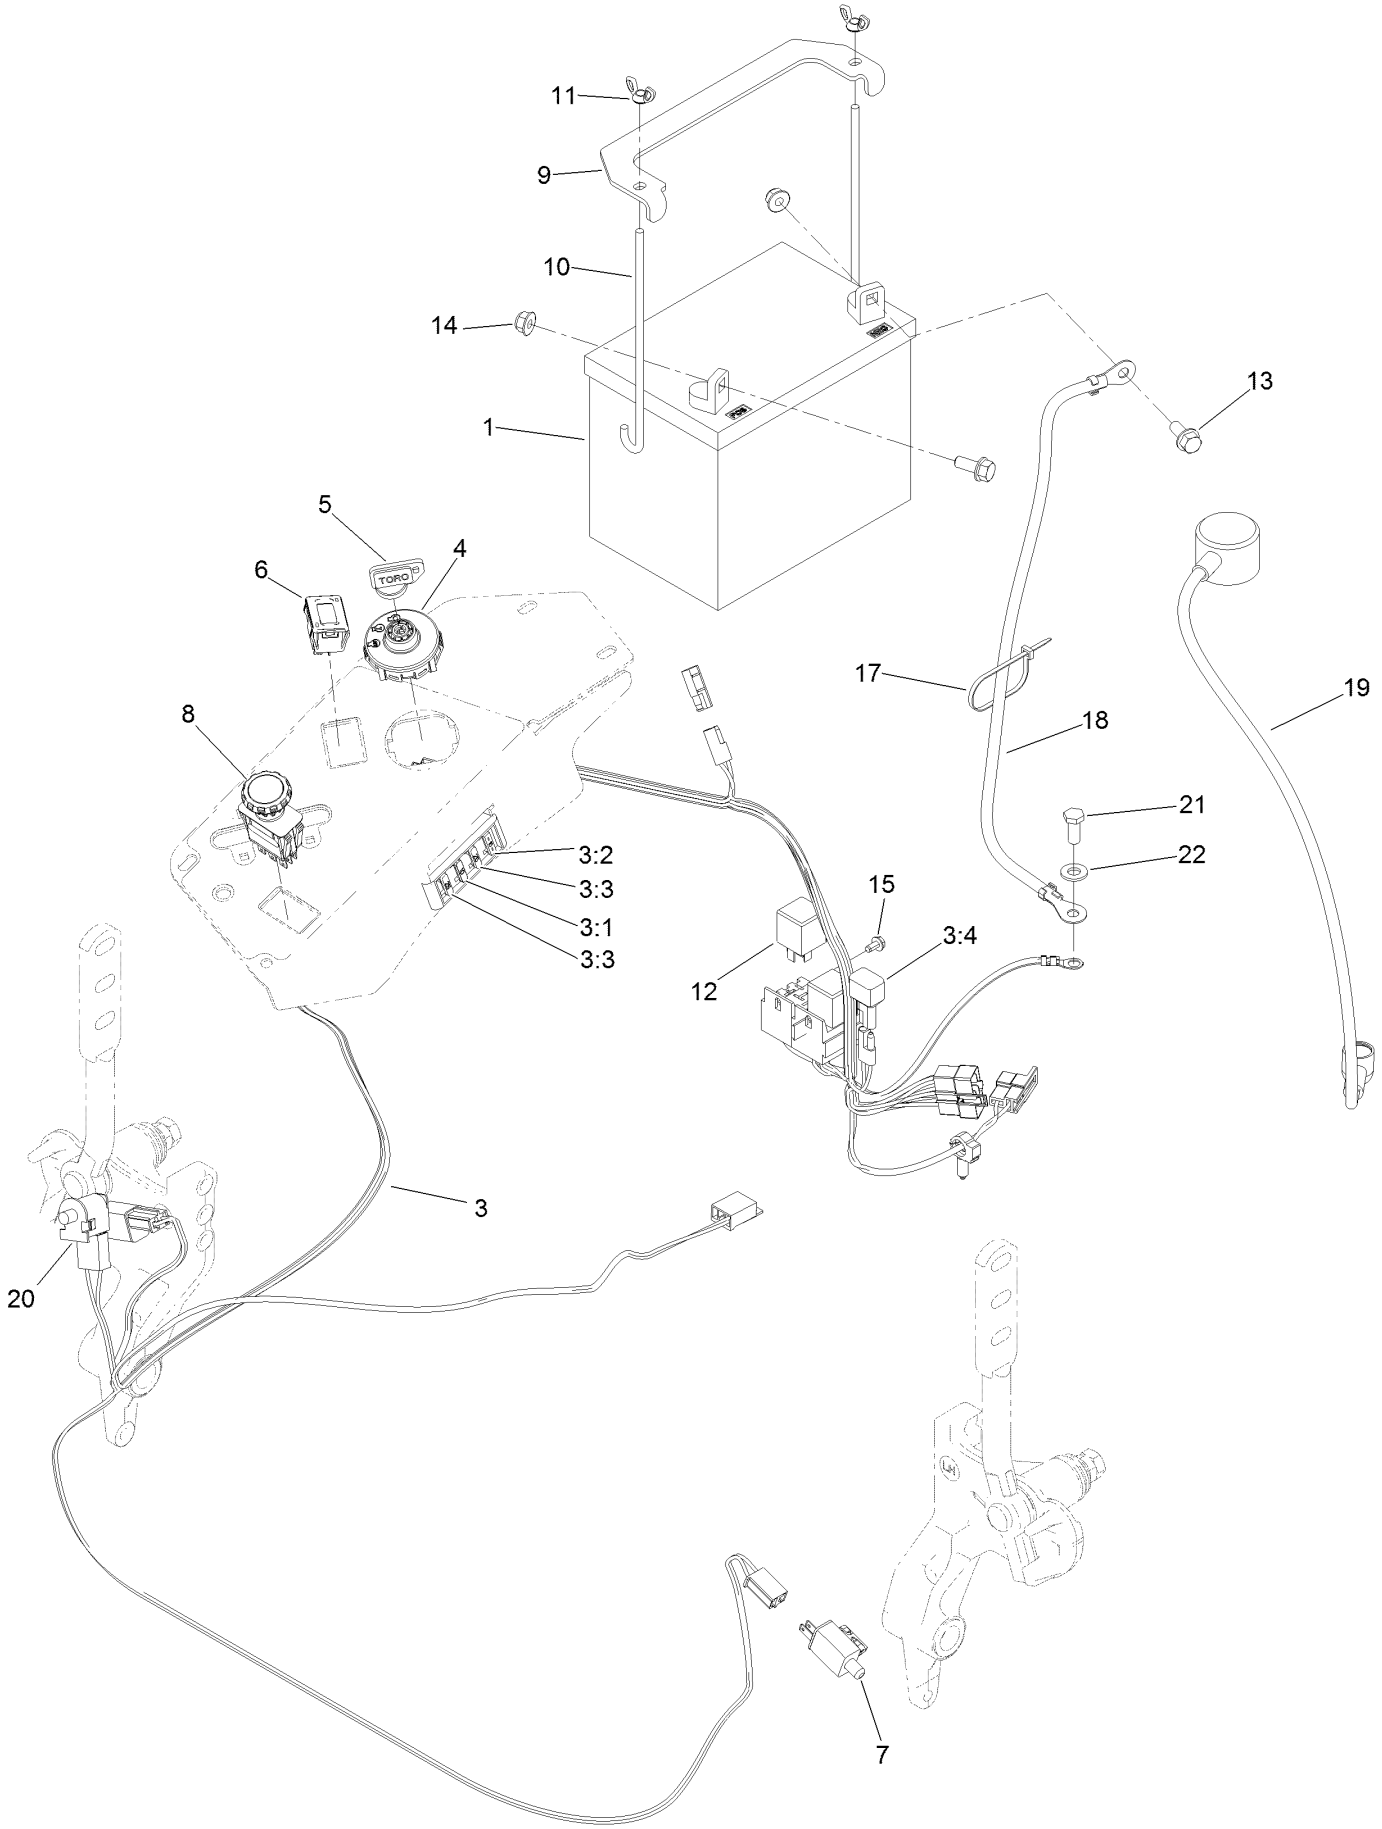

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
3	117-2582	1	Harness-Wire
3:1	218-578	1	Fuse-Blade, 10 Amp
3:2	109355	1	Fuse-Blade, 15 Amp
3:3	109102	2	Fuse-Blade, 25 Amp
3:4	116-0053	1	Cap-Plug
4	117-2221	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	120-2244	1	Hourmeter
7	110-6765	2	Switch-Single Pole No
8	116-0124	1	Switch-PTO, 10A
9	116-0042-03	1	Strap-Tie Down, Battery
10	1-633651	2	Bolt-Holddown
11	1-543792	2	Wingnut
12	1-643275	2	Relay
13	3234-5	2	Screw-HHF
14	104-8300	2	Nut-Flange, NI
15	104-2065	1	Screw-HWH
17	1-303287	3	Tie-Cable
18	114-1218	1	Cable-Battery, Negative
19	115-3864	1	Cable-Battery, Positive
20	82-2190	1	Switch-Bail
21	33114-020	1	Screw-HH
22	33094-00	1	Washer-Plain

Attachments and Accessories

For 74145 Z Master Commercial 2000 Series Riding Mower with 60in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Turbo Baffle Kit	107-1634
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Blade-mulch, 20.50in	115-5002-03
Blade-hi Flo, 20.5in	115-9649-03
Light Kit	116-1154
Operator-Controlled Discharge Chute Kit	117-3600
Recycler Kit	120-2403
Z Stand Kit	121-4811
Deluxe Seat Kit	121-7595
MVP Belt and Blade Kit	127-1633
Toro Deluxe Rider Cover	490-7319
Spark Arrestor Screen	75-6880
E-Z VAC Twin Soft Bagger	78569
Blower and Drive Kit	78573
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26

Notes:

Notes:

Notes:



Count on it.