Form No. 3382-971 Rev A

TORO®

Count on it.

Parts Catalog

MM-655H-P Mortar Mixer

Model No. 68014—Serial No. 314000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3382-971 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Frame and Axle Assembly 4
Hub Assembly No. 125-8171 6
Drum Assembly 8
Engine, Belt and Pinion Assembly 10
Pinion Assembly No. 131-5704 12
Cowl and Decal Assembly 14
Attachments and Accessories 16

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame and Axle Assembly

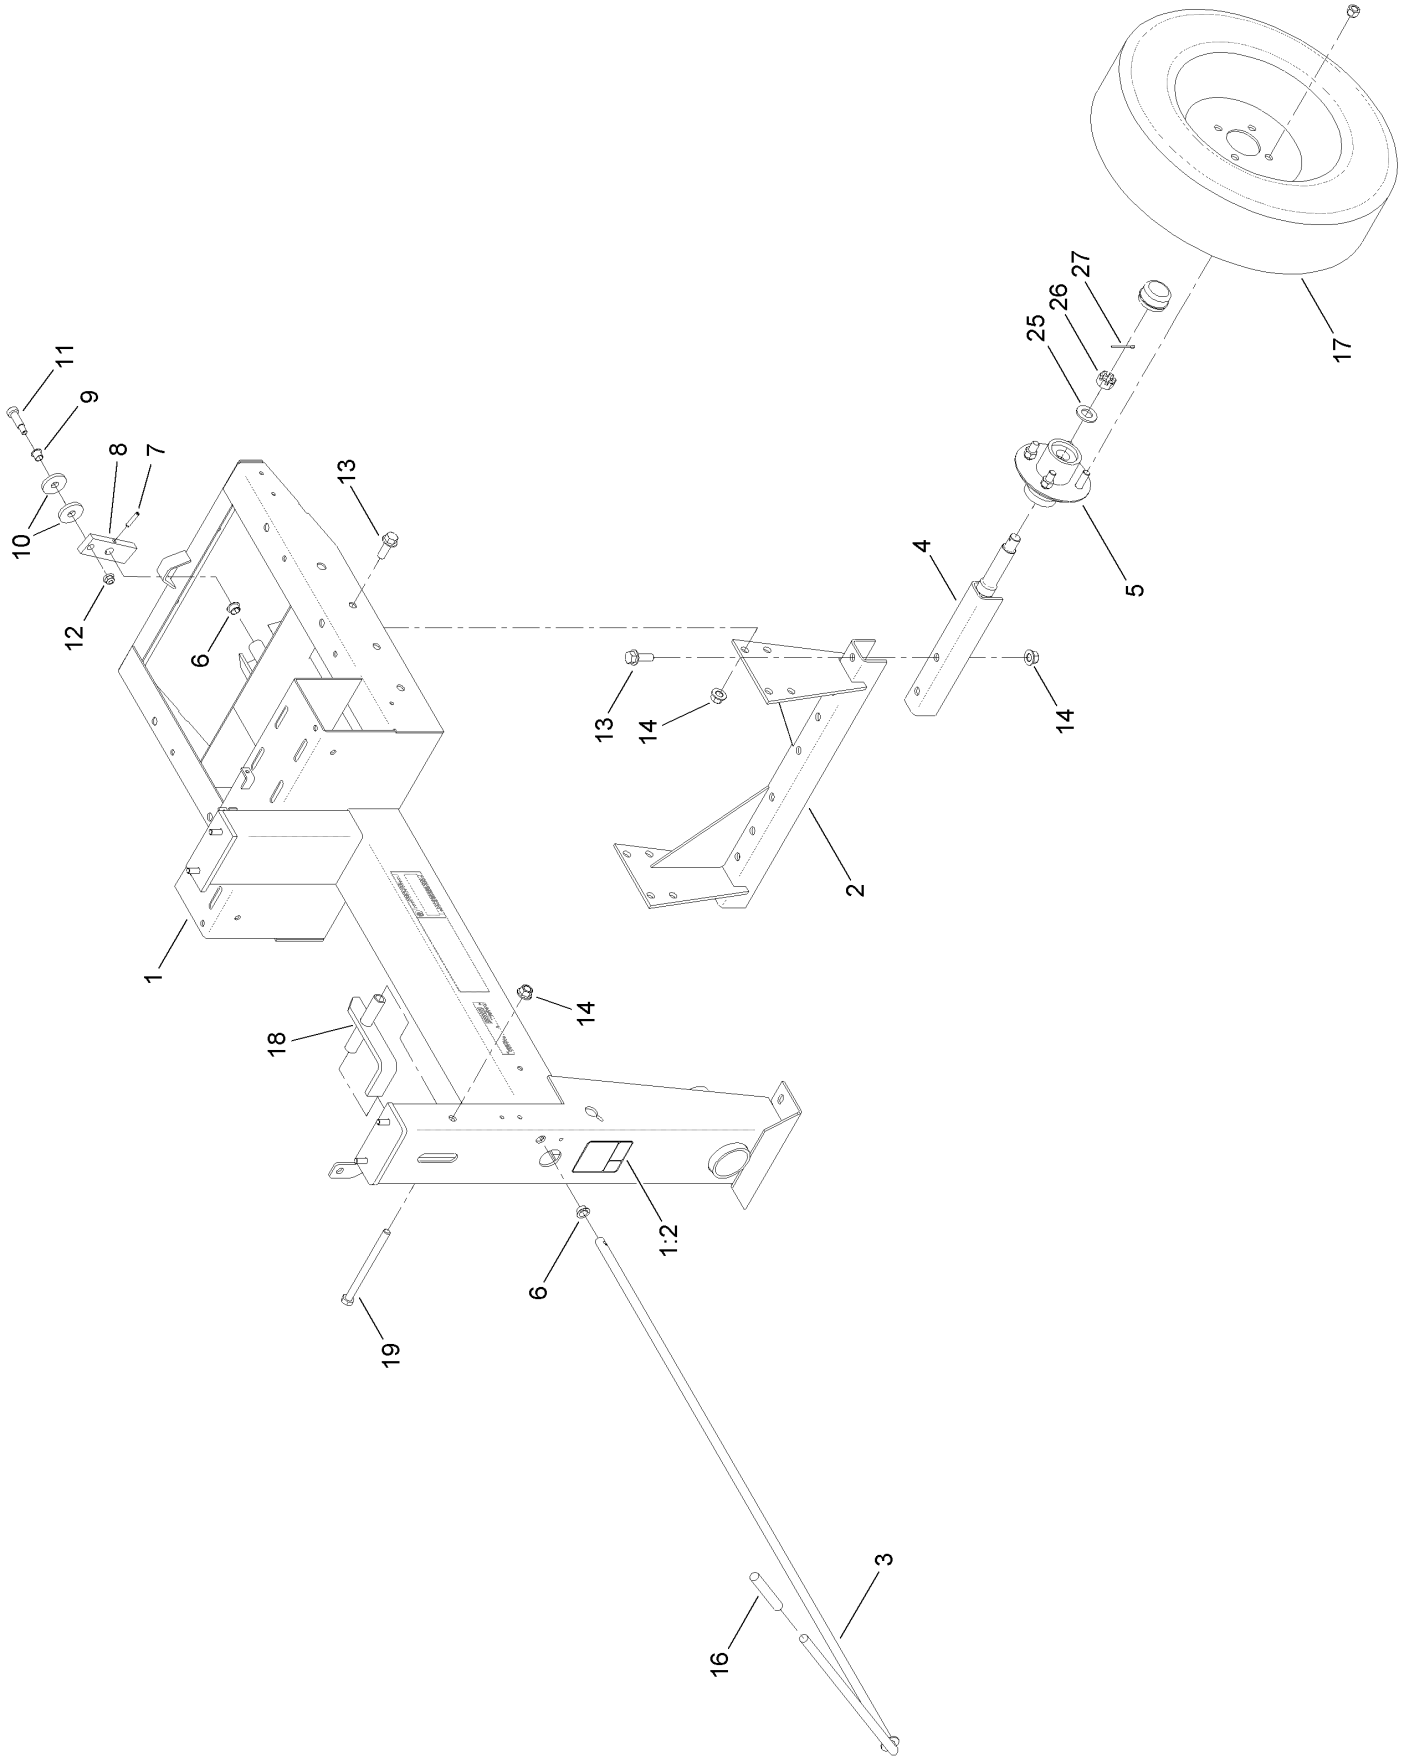

Frame and Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-1680	1	Frame ASM
1:2	125-8216	1	Decal-Safety Chain, Towing
2	125-8219-03	1	Support-Axle
3	ST39568-03	1	Lever-Clutch
4	ST22512-03	2	Axle-Half
5	125-8171	2	Hub ASM
6	ST32116	2	Bushing-Flange
7	32121-69	1	Pin-Spring
8	ST39446	1	Link-Clutch
9	ST32099	1	Bushing-Flange
10	ST26326	2	Washer-Flat
11	ST81153	1	Screw-HSBH
12	104-8301	1	Nut-Flange, NI
13	100-6116	8	Screw-HHF
14	99-5107	9	Nut-Lock
16	ST34687	1	Grip-Handle
17	ST32306	2	Tire And Rim ASM
18	ST24027-03	1	Latch-Drum
19	325-33	1	Screw-HH
25	3256-28	2	Washer-Flat
26	ST80054	2	Nut
27	3272-13	2	Pin-Cotter


Hub Assembly No. 125-8171

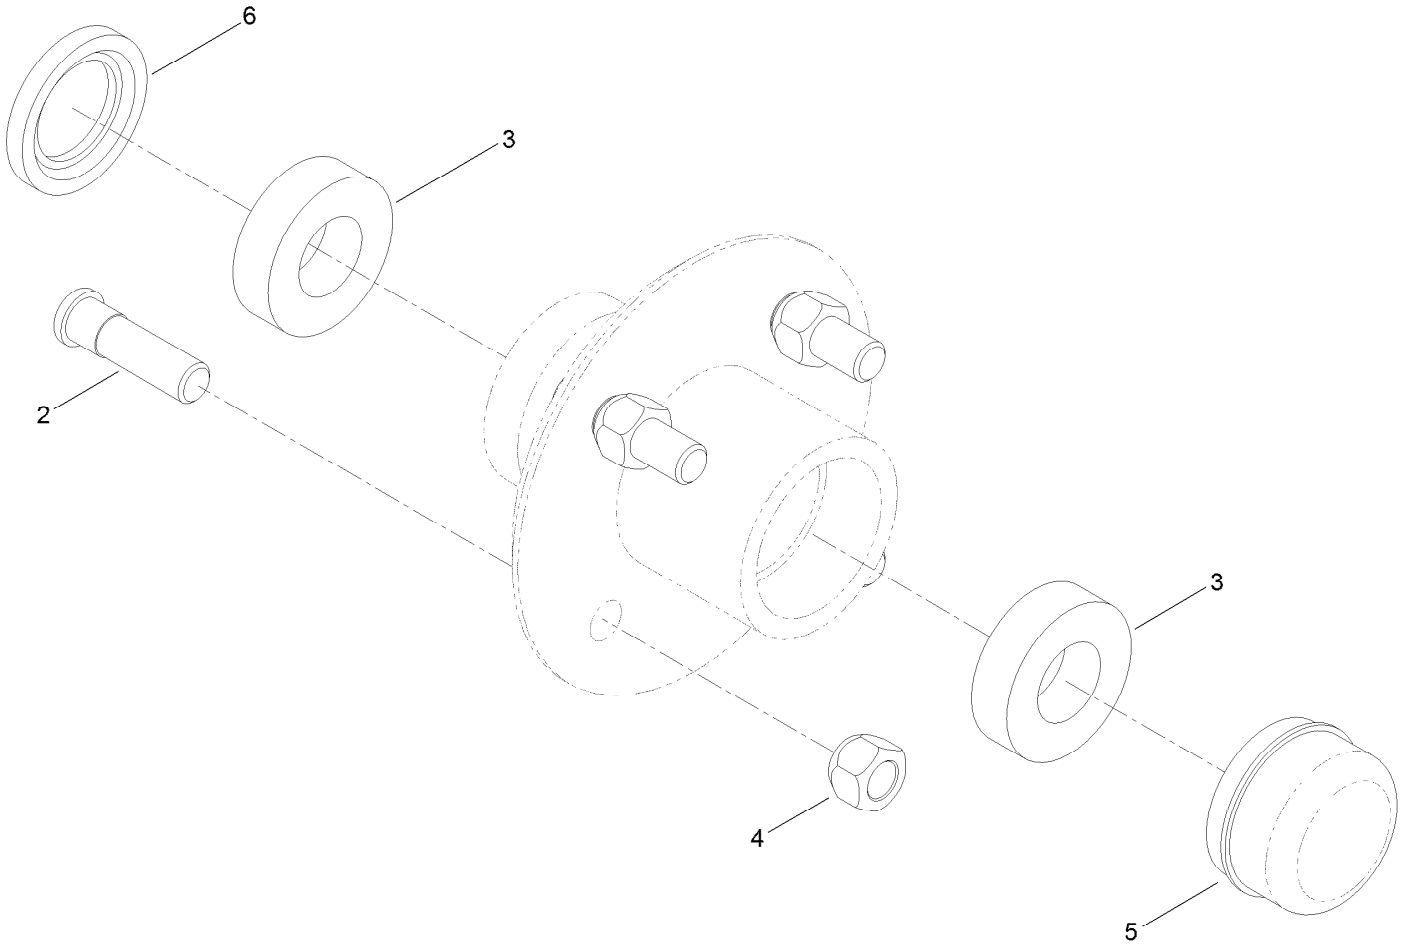

Hub Assembly No. 125-8171 (continued)

Ref.	Part Number	Qty.	Description
2	ST39190	4	Stud-Wheel
3	ST32233	2	Bearing-Roller
4	ST80045	4	Nut-Lug
5	ST34573	1	Cap-Dust
6	ST32052	1	Seal-Hub, Wheel


Drum Assembly

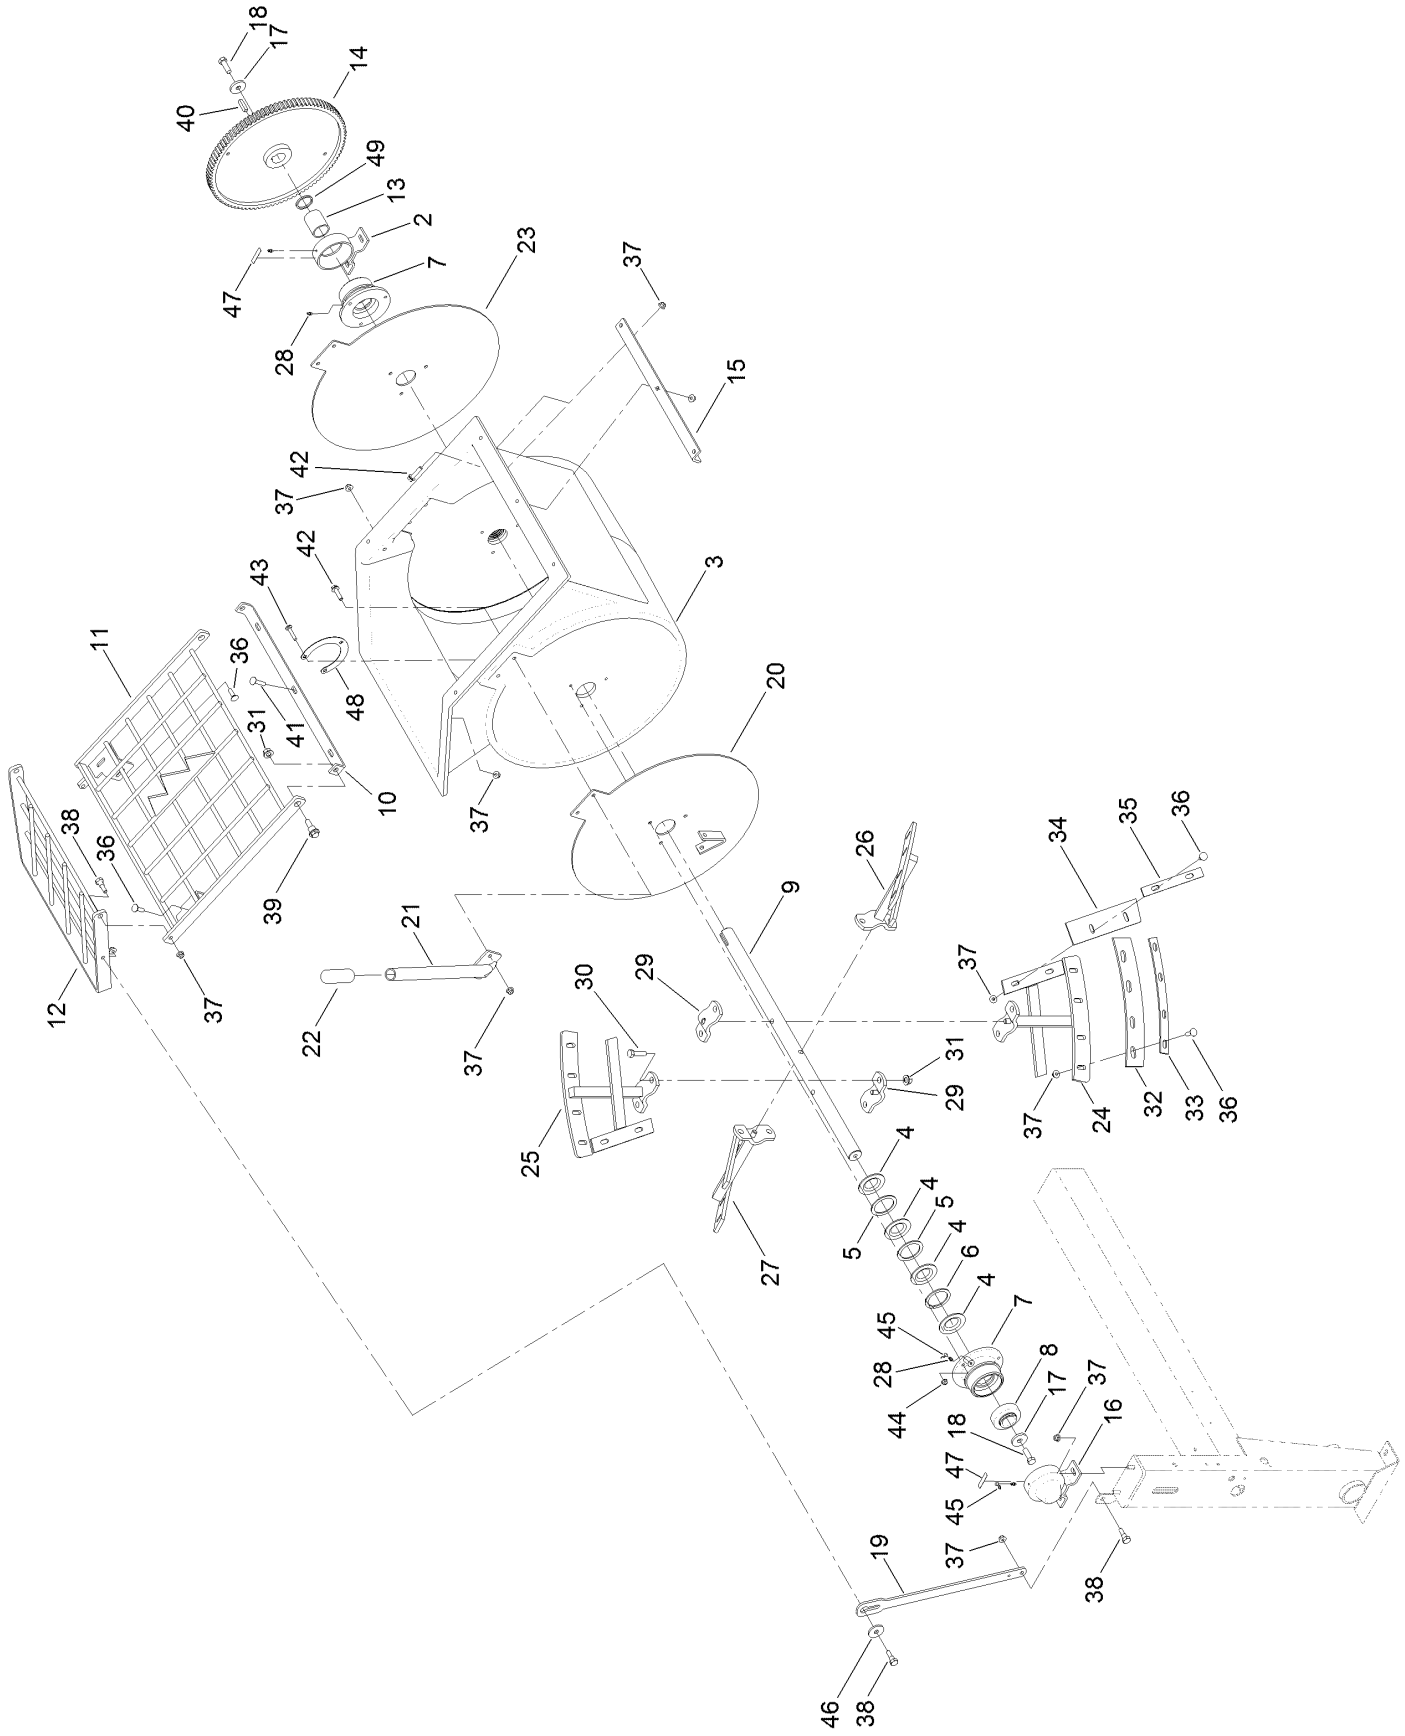

Drum Assembly (continued)

Ref.	Part Number	Qty.	Description
2	ST24021-01	1	Trunnion
3	127-2876	1	Drum
4	ST32324	8	Seal-Drum
5	ST24017	4	Washer-Flat
6	ST25881	2	Washer-Split
7	ST32326-01	2	Housing-Bearing
8	ST32003	2	Bearing-Ball
9	ST45844-01	1	Shaft-Drum
10	ST45838-01	1	Bracket-Guard, Mount
11	125-6288-01	1	Guard-Drum
12	125-6289-01	1	Guard-Moveable
13	ST25909	1	Spacer-Shaft, Drum
14	ST26933-03	1	Gear-94 Teeth
15	ST45856-01	1	Bracket-Support, Guard
16	ST36574-01	1	Trunnion-Capped
17	ST26326	2	Washer-Flat
18	325-6	2	Screw-HH
19	125-6290-03	1	Bar-Guard, Lifter
20	ST45845-01	1	End-Drum
21	ST24406-01	1	Handle
22	ST47023	1	Grip-Hand
23	ST45846-01	1	End-Drum
24	ST45848-01	1	Paddle
25	ST45849-01	1	Paddle
26	ST45852-01	1	Paddle
27	ST45853-01	1	Paddle
28	ST46042	4	Fitting-Grease
29	ST24107-01	2	Clamp
30	325-7	6	Screw-HH
31	99-5107	8	Nut-Lock
32	ST24106	4	Blade-Rubber, Long
33	ST24104-01	4	Bar-Backer, Long
34	ST47331	2	Blade-Rubber, Short
35	ST42707-01	2	Bar-Backer, Side
36	3231-25	24	Bolt-CARR
37	104-8301	43	Nut-Flange, NI
38	80-1300	4	Bolt-Shoulder
39	116-0780	2	Screw-HHF, Shoulder
40	ST81060	1	Key-Square
41	3231-5	3	Screw-CARR
42	114-4681	8	Screw-HHF
43	3230-5	6	Screw-CARR
44	104-8300	6	Nut-Flange, NI
45	ST47001	4	Cap-Plug
46	106-2008	1	Washer-Thrust
47	125-8175	2	Decal-Grease
48	127-1666-01	2	Spacer-Bolt
49	ST44284	1	Spacer-Shaft, Drum

Engine, Belt and Pinion Assembly

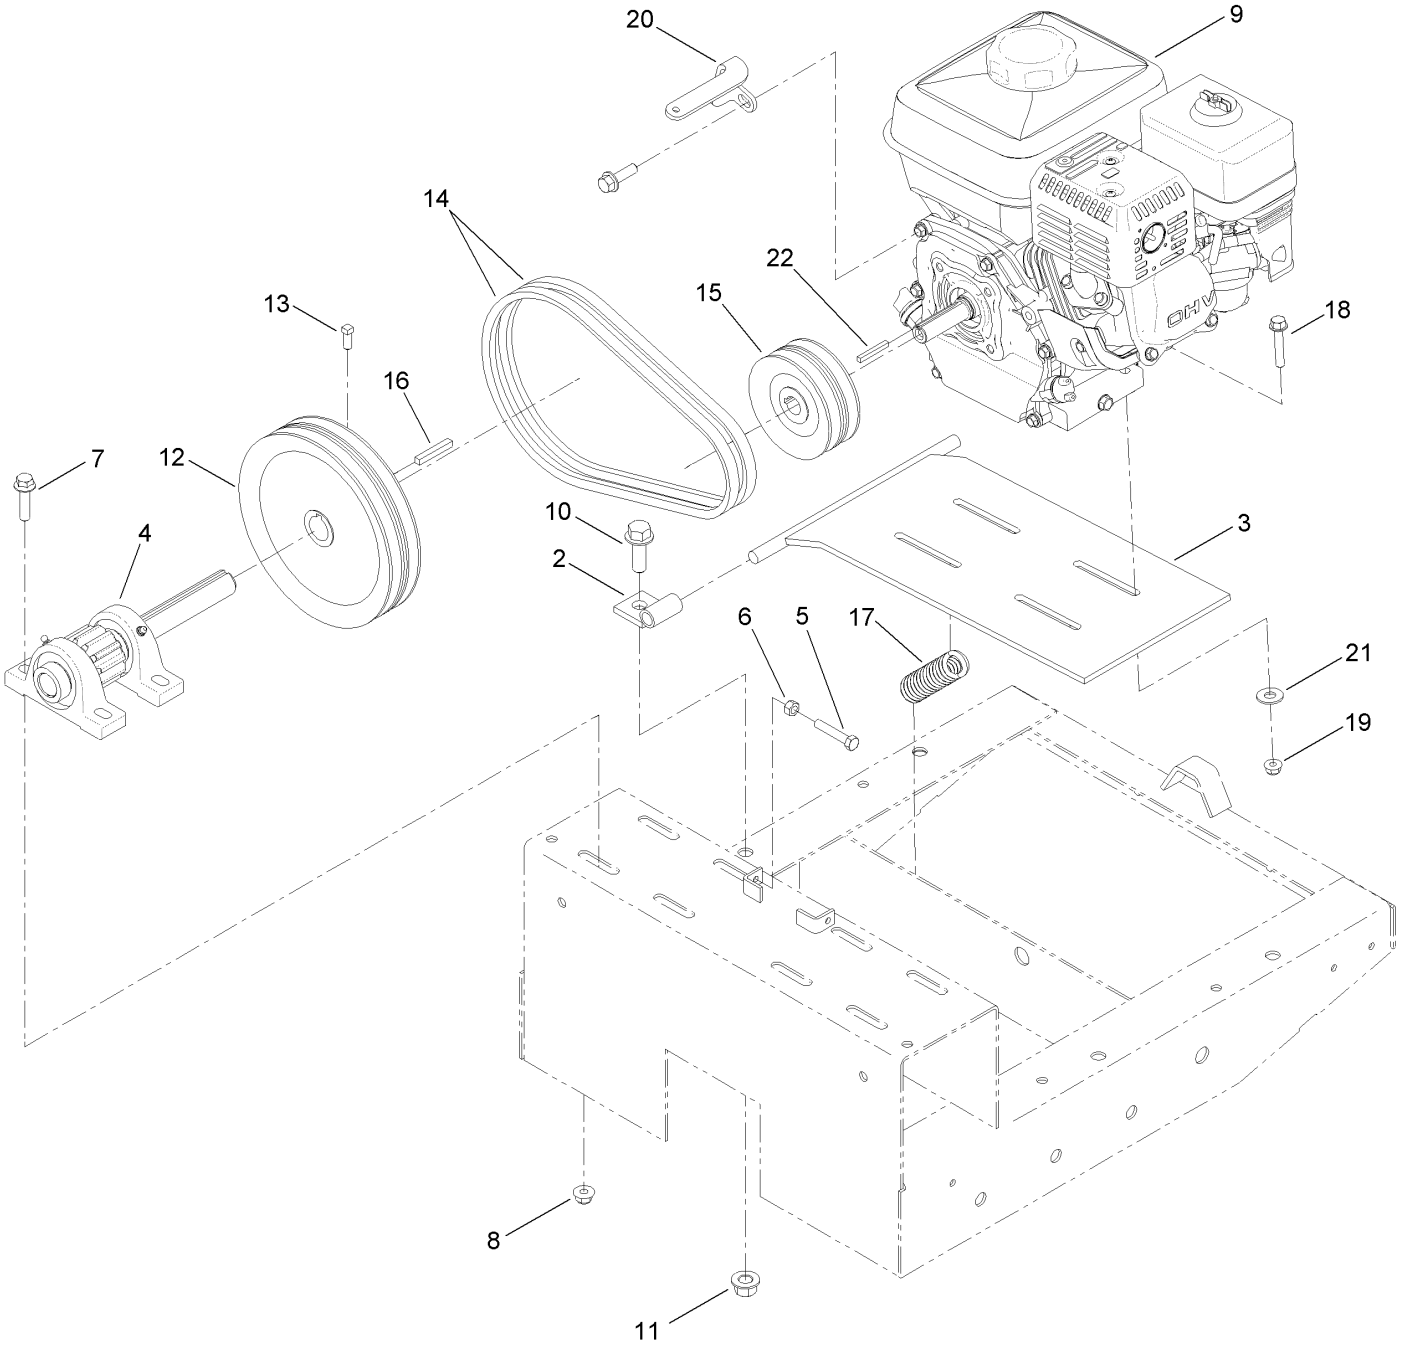


Engine, Belt and Pinion Assembly (continued)

Ref.	Part Number	Qty.	Description
2	ST57786-03	2	Mount-Motor
3	ST39565-03	1	Base-Motor
4	131-5704	1	Pinion ASM
5	322-41	1	Screw-HH
6	3217-6	1	Nut-Hex
7	114-4681	4	Screw-HHF
8	104-8301	4	Nut-Flange, NI
9	125-4820	1	Engine-Honda, Gx160 ●
10	100-6116	2	Screw-HHF
11	99-5107	2	Nut-Lock
12	ST38450	1	Sheave
13	120-6474	2	Screw-Set, SQH
14	ST34052	2	Belt-V
15	ST38664	1	Sheave
16	7-0238	1	Key-Square
17	ST34849	1	Spring
18	94-5780	4	Screw-HWH
19	104-8300	4	Nut-Flange, NI
20	127-1665-03	1	Guide-Belt
21	3256-4	4	Washer-Flat
22	ST37716	1	Key-Square

● Obtain parts from www.honda-engines.com


Pinion Assembly No. 131-5704

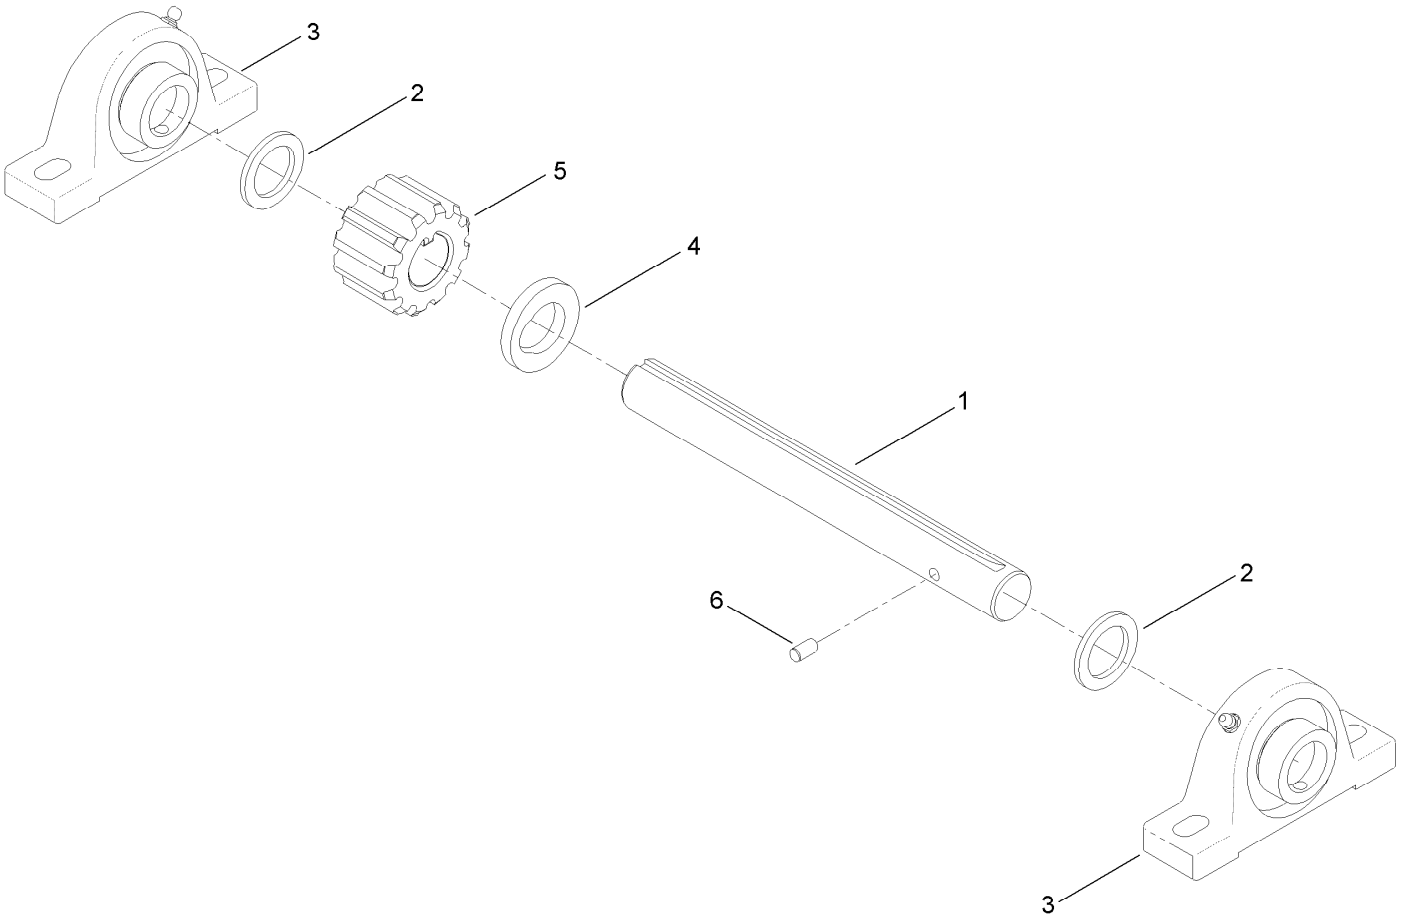

Pinion Assembly No. 131-5704 (continued)

Ref.	Part Number	Qty.	Description
1	131-5705	1	Shaft-Pinion
2	3-8514	2	Washer-Thrust
3	ST32208	2	Bearing-Block, Pillow
4	131-5706	1	Washer
5	ST57625	1	Gear-Spur
6	95-0715	1	Pin-Dowel

Cowl and Decal Assembly

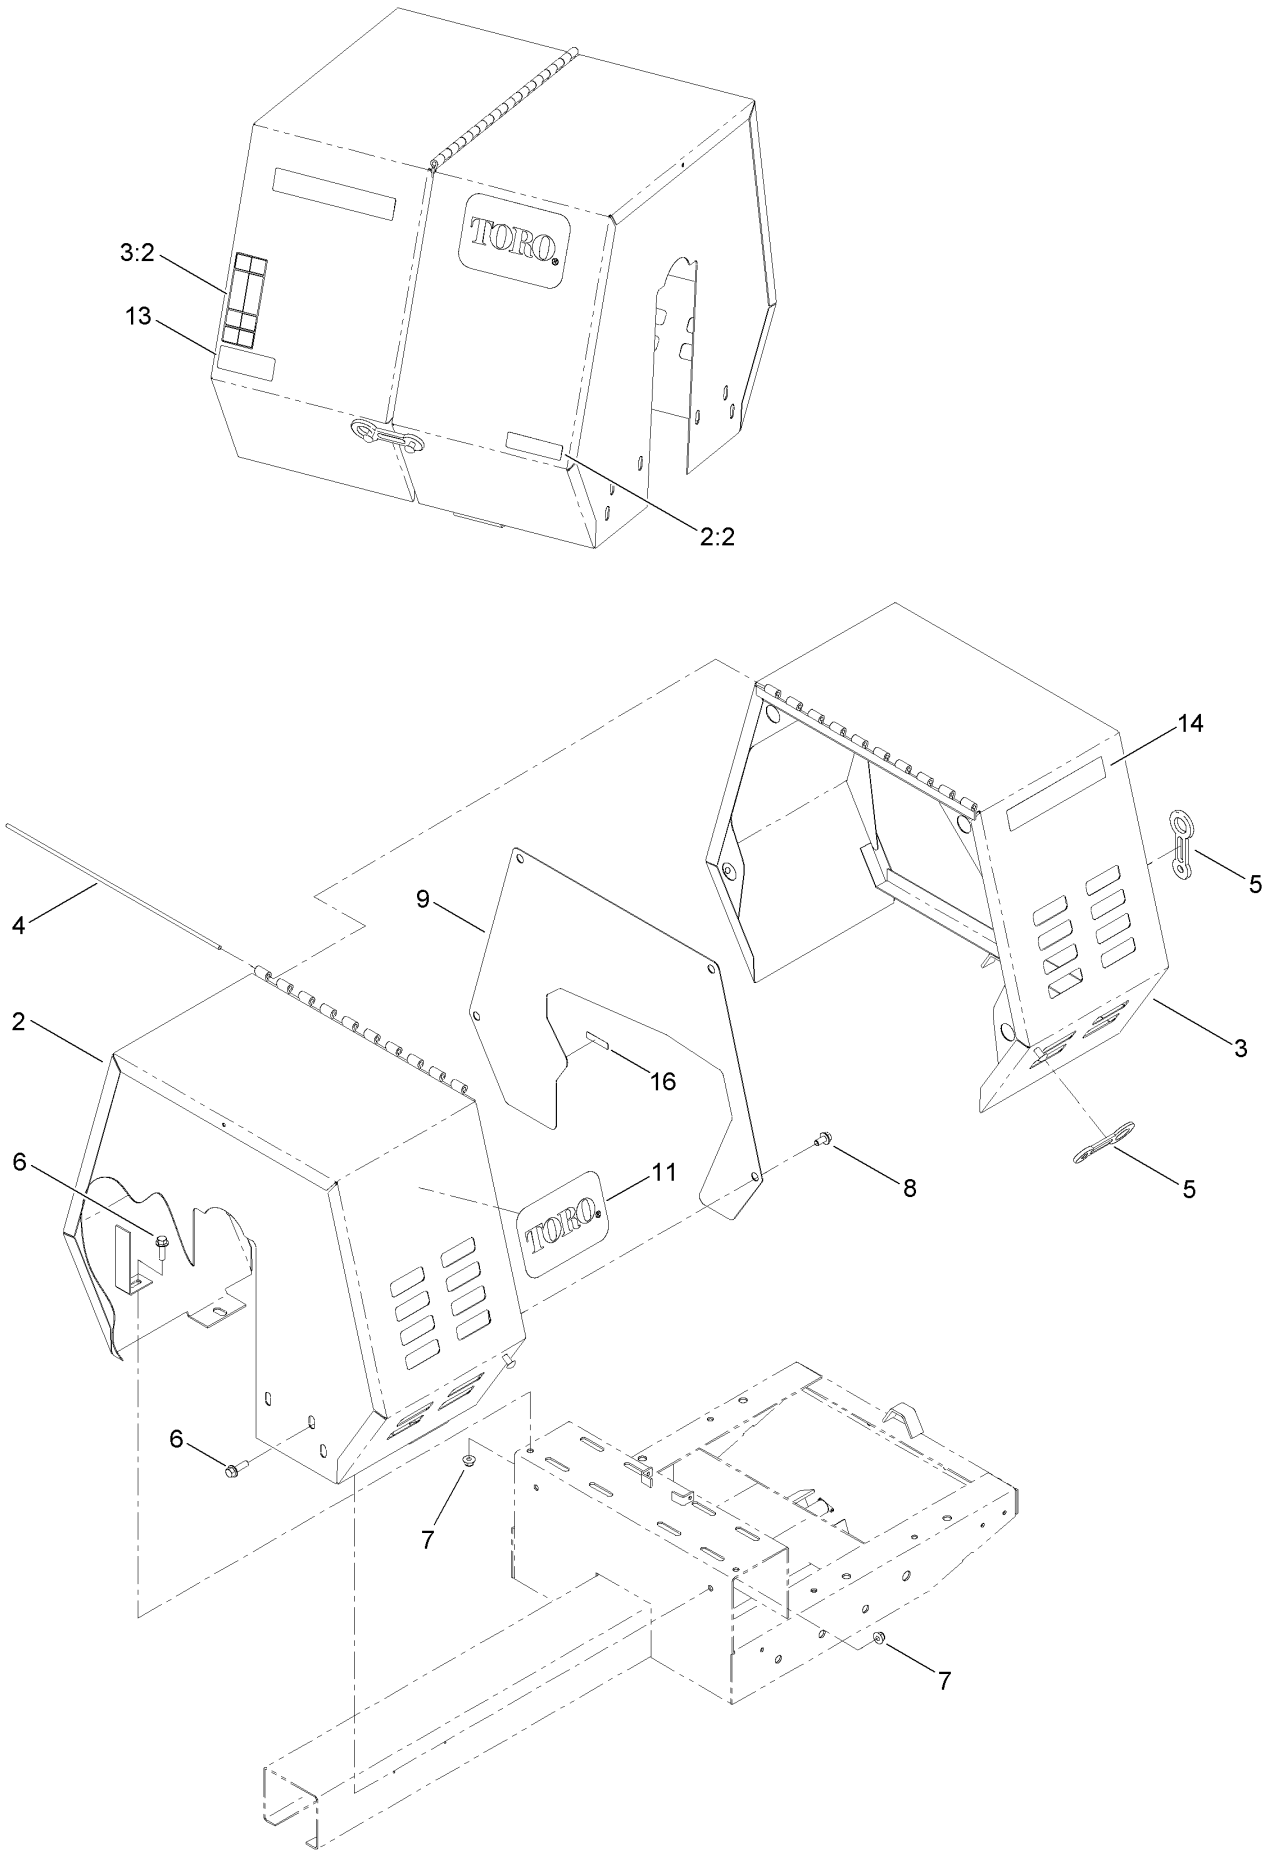

Cowl and Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
2	127-1683	1	Stationary Cowl ASM
2:2	117-2718	1	Decal-Arrester, Spark
3	127-1685	1	Movable Cowl ASM
3:2	125-4939	1	Decal-Warning
4	ST44368	1	Pin
5	ST47182	3	Latch-Rubber
6	3234-24	6	Screw-HHF
7	104-8301	6	Nut-Flange, NI
8	110-9380	4	Screw-HWH
9	125-6310-03	1	Plate-Guard
11	67-7320	2	Decal
13	125-4942	1	Decal
14	125-4948	2	Decal-Mm-655H
16	125-8175	1	Decal-Grease

Attachments and Accessories

For 68014 MM-655H-P Mortar Mixer

Product Name	Model/Part
31in Forged Tow Pole Hitch	68056
31in Pintel Tow Pole Hitch	68058
31in Stamped Tow Pole Hitch	68060
Trailer Light Kit	68062

Notes:

Notes:

Notes:



Count on it.