Form No. 3383-809 Rev A

TORO®

Count on it.

Parts Catalog

DH 140 Lawn Tractor

Model No. 74560—Serial No. 314000151 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3383-809 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Engine Assembly 4
Front Axle Assembly 6
Steering Control Assembly 8
Transmission Drive Assembly 10
Main Housing Transmission Assembly No. 121-0999 12
Center Section and Fan Pulley Assembly Transmission Assembly No. 121-0999 14
Side Housing Transmission Assembly No. 121-0999. 16
Frame Assembly. 18
Mower Lift Assembly 20
92cm Deck Assembly 22
Operation-Travel Pedal Assembly 24
Operation-Brake Assembly. 26
Electrical-Wiring Harness Assembly 28
Seat and Body Fender Assembly 30
Hood and Control Panel Assembly 32
Grass Collector Assembly. 34
Tunnel Assembly 36
Mulch Plug Assembly 38
Attachments and Accessories 40

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Engine Assembly

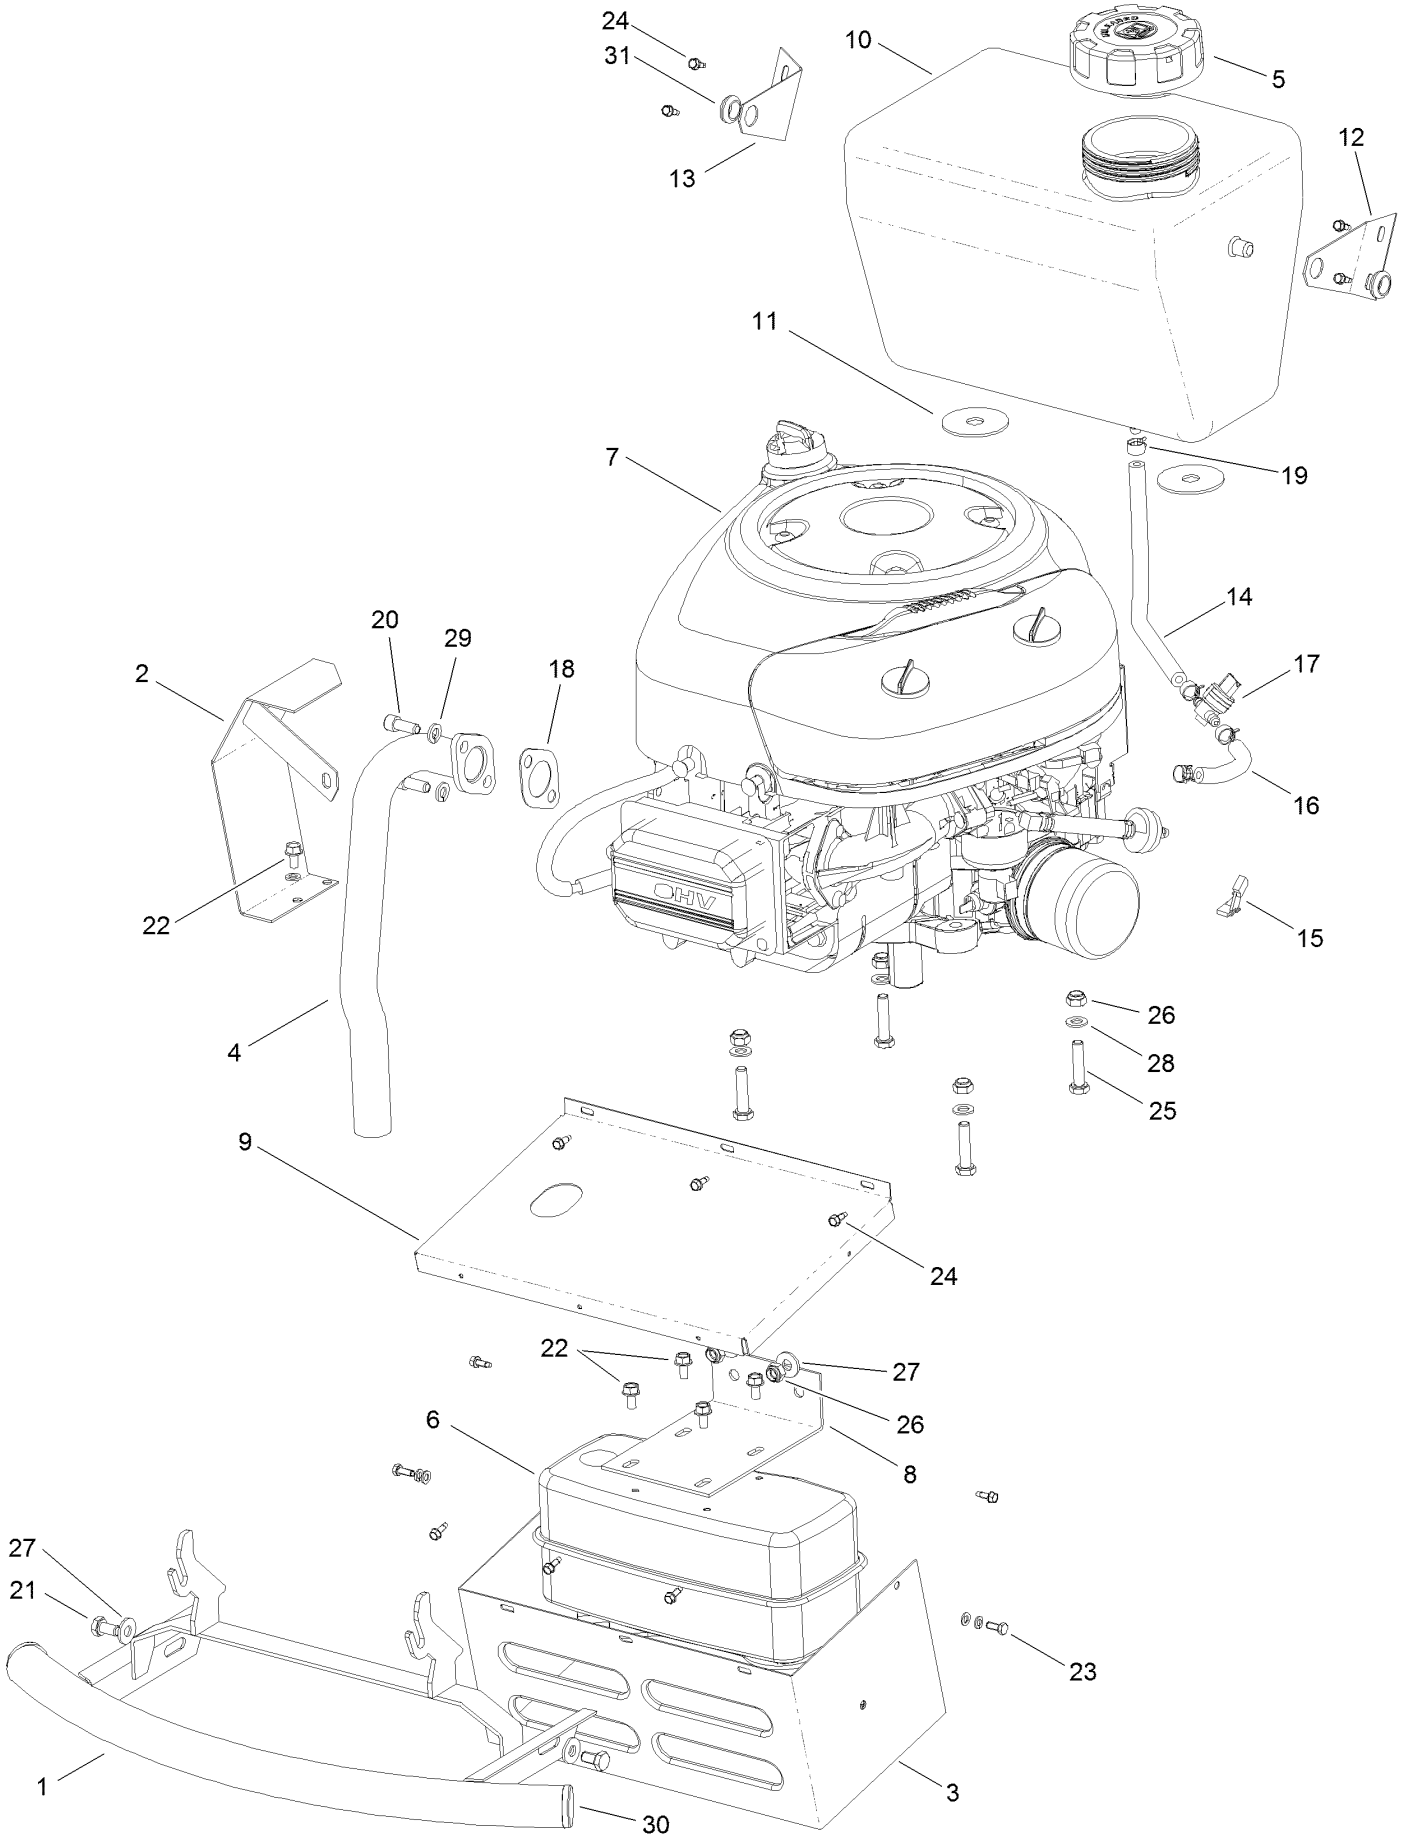


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5350	1	Bumper
2	119-5351	1	Shield-Exhaust Tube
3	119-5352	1	Shield-Muffler
4	119-5353	1	Tube-Exhaust
5	119-5354	1	Cap-Fuel
6	104-3229	1	Muffler
7		1	Engine-Briggs, 21R877-0019-B1 ●
8	120-8711	1	Bracket-Muffler Mount
9	119-5357	1	Cover-Top
10	119-5358	1	Tank-Fuel
11	119-5500	2	Washer-Rubber
12	119-5359	1	Bracket-Fuel Tank, Left
13	119-5360	1	Bracket-Fuel Tank, Right
14	119-5361	1	Hose-Fuel
15	88-4490	1	Reducer-Throttle, Rpm
16	104-3213	1	Line-Fuel
17	104-3224	1	Valve-Tank, Fuel
18	119-5362	1	Gasket
19	104-3212	4	Clamp-Line, Fuel
20	322-3	2	Screw-HH
21	33114-016	2	Screw-HH
22	110-7170	5	Screw-HH
23	104-2980	5	Screw
24	104-2977	7	Screw-TAP
25	48-7740	6	Screw
26	33024-00	6	Nut-Lock, NI
27	104-2946	4	Washer-Plain
28	106-4756	7	Washer-Plain
29	104-2927	2	Washer-Spring
30	119-5363	2	Cap-Bumper
31	119-5364	2	Bushing

● Not serviced separately

Front Axle Assembly

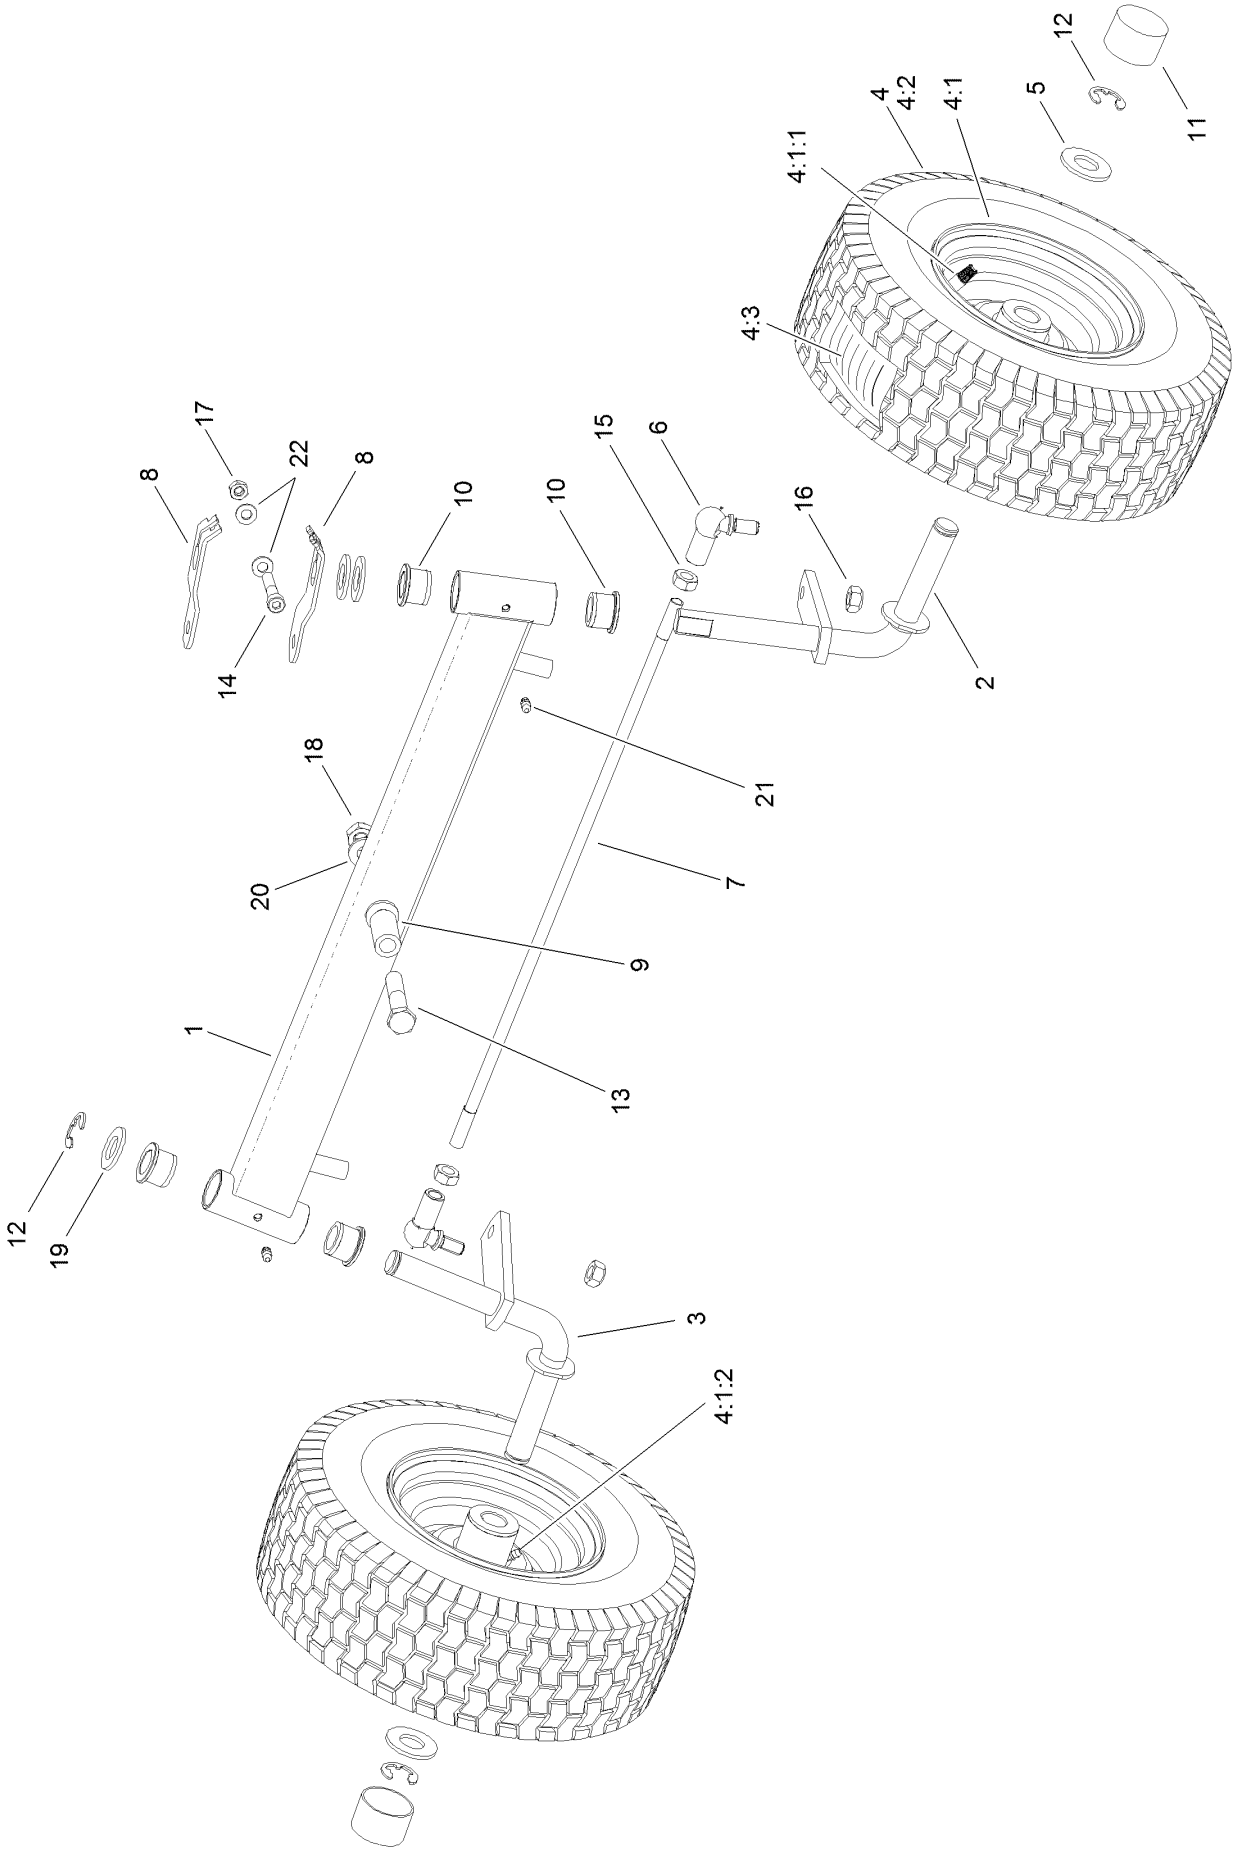


Front Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5365	1	Front Axle ASM
2	120-8712	1	Spindle-LH
3	119-5367	1	Spindle-RH
4		2	Wheel ASM ●
4:1	119-5521	1	Front Rim ASM
4:1:1	106-8596	1	Valve-Tire
4:1:2	104-2904	1	Fitting-Grease
4:2	119-5522	1	Tire
4:3	232-38	1	Tube
5	120-8739	2	Washer
6	104-2876	2	Joint-Ball, Angle
7	119-5369	1	Tie Rod-Axle, Front
8	120-8713	2	Lever-Spindle, Steering
9	119-5370	1	Spacer
10	119-5371	4	Bushing-Swivel
11	104-2857	2	Cap-Hub
12	104-2891	3	Clip-Spring
13	33116-060	1	Screw-HH
14	120-8774	1	Screw
15	33015-00	2	Nut-Hex
16	33025-00	2	Nut-Lock, NI
17	33024-00	1	Nut-Lock, NI
18	48-9540	1	Nut-Lock, Hex NI
19	104-2905	3	Washer-Flat
20	119-5372	2	Washer
21	104-2904	2	Fitting-Grease
22	106-4756	1	Washer-Plain

● Not serviced separately


Steering Control Assembly

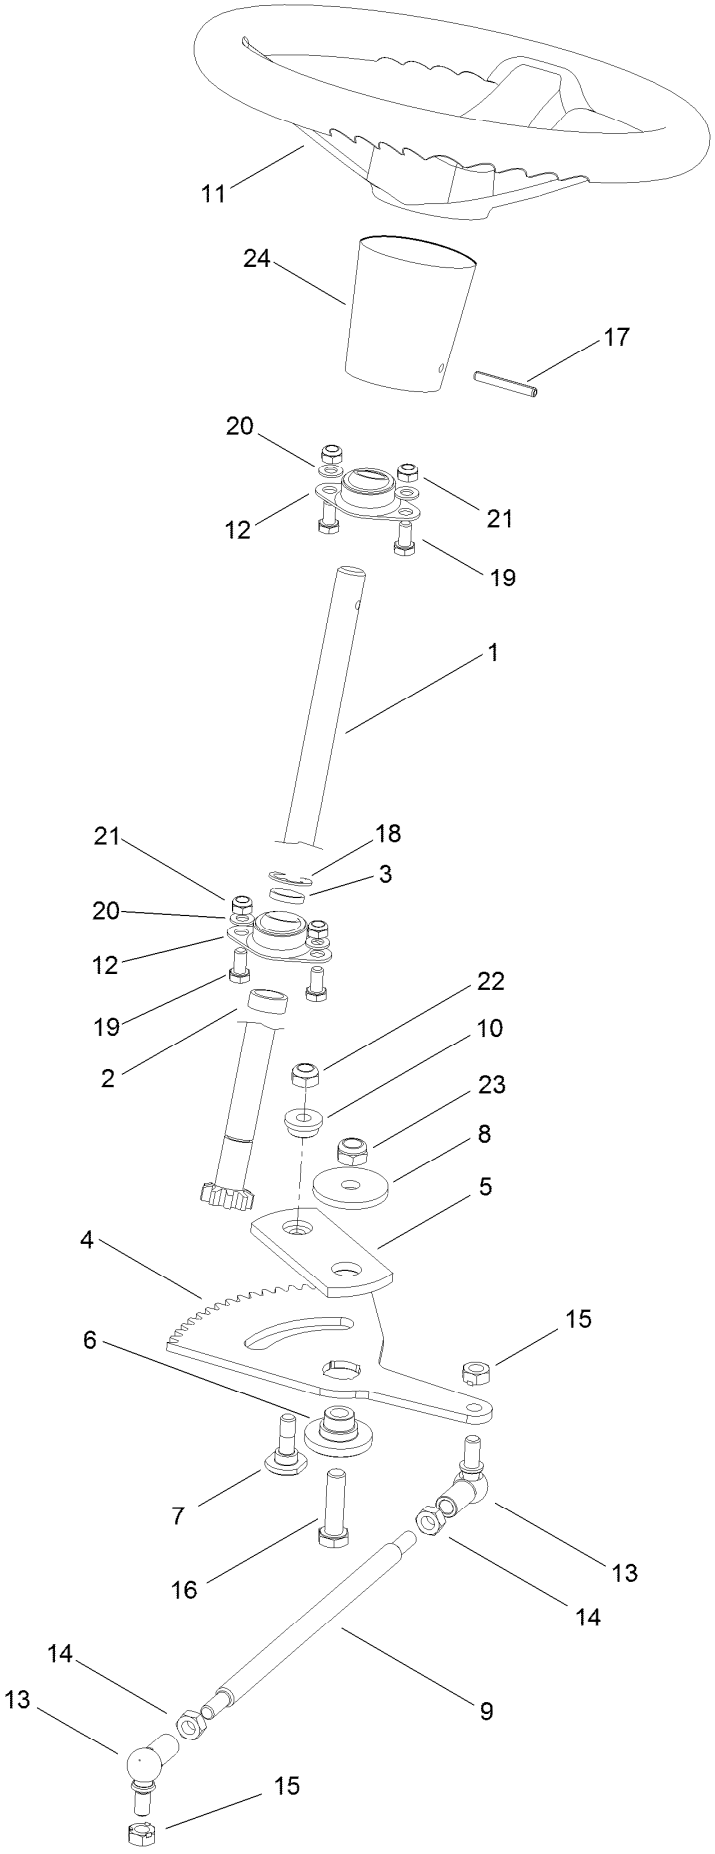

Steering Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5373	1	Shaft-Steering
2	104-2879	1	Spacer-Lower
3	104-2877	1	Spacer-Upper
4	119-5374	1	Gear-Sector
5	105-1238	1	Plate-Steering
6	105-1240	1	Pivot-Steering
7	105-1239	1	Bolt-Shoulder
8	108-8892	1	Washer
9	119-5375	1	Link-Drag
10	105-1241	1	Bushing
11	125-2237	1	Wheel-Steering
12	104-2878	2	Bearing-Spherical
13	104-2876	2	Joint-Ball, Angle
14	33015-00	2	Nut-Hex
15	33025-00	2	Nut-Lock, NI
16	104-2910	1	Screw-HH
17	119-5377	1	Pin-Spirol
18	104-2891	1	Clip-Spring
19	33114-016	4	Screw-HH
20	106-4756	4	Washer-Plain
21	33024-00	4	Nut-Lock, NI
22	33023-00	1	Nut-Lock
23	33016-00	1	Nut-Hex
24	125-2238	1	Cover

Transmission Drive Assembly

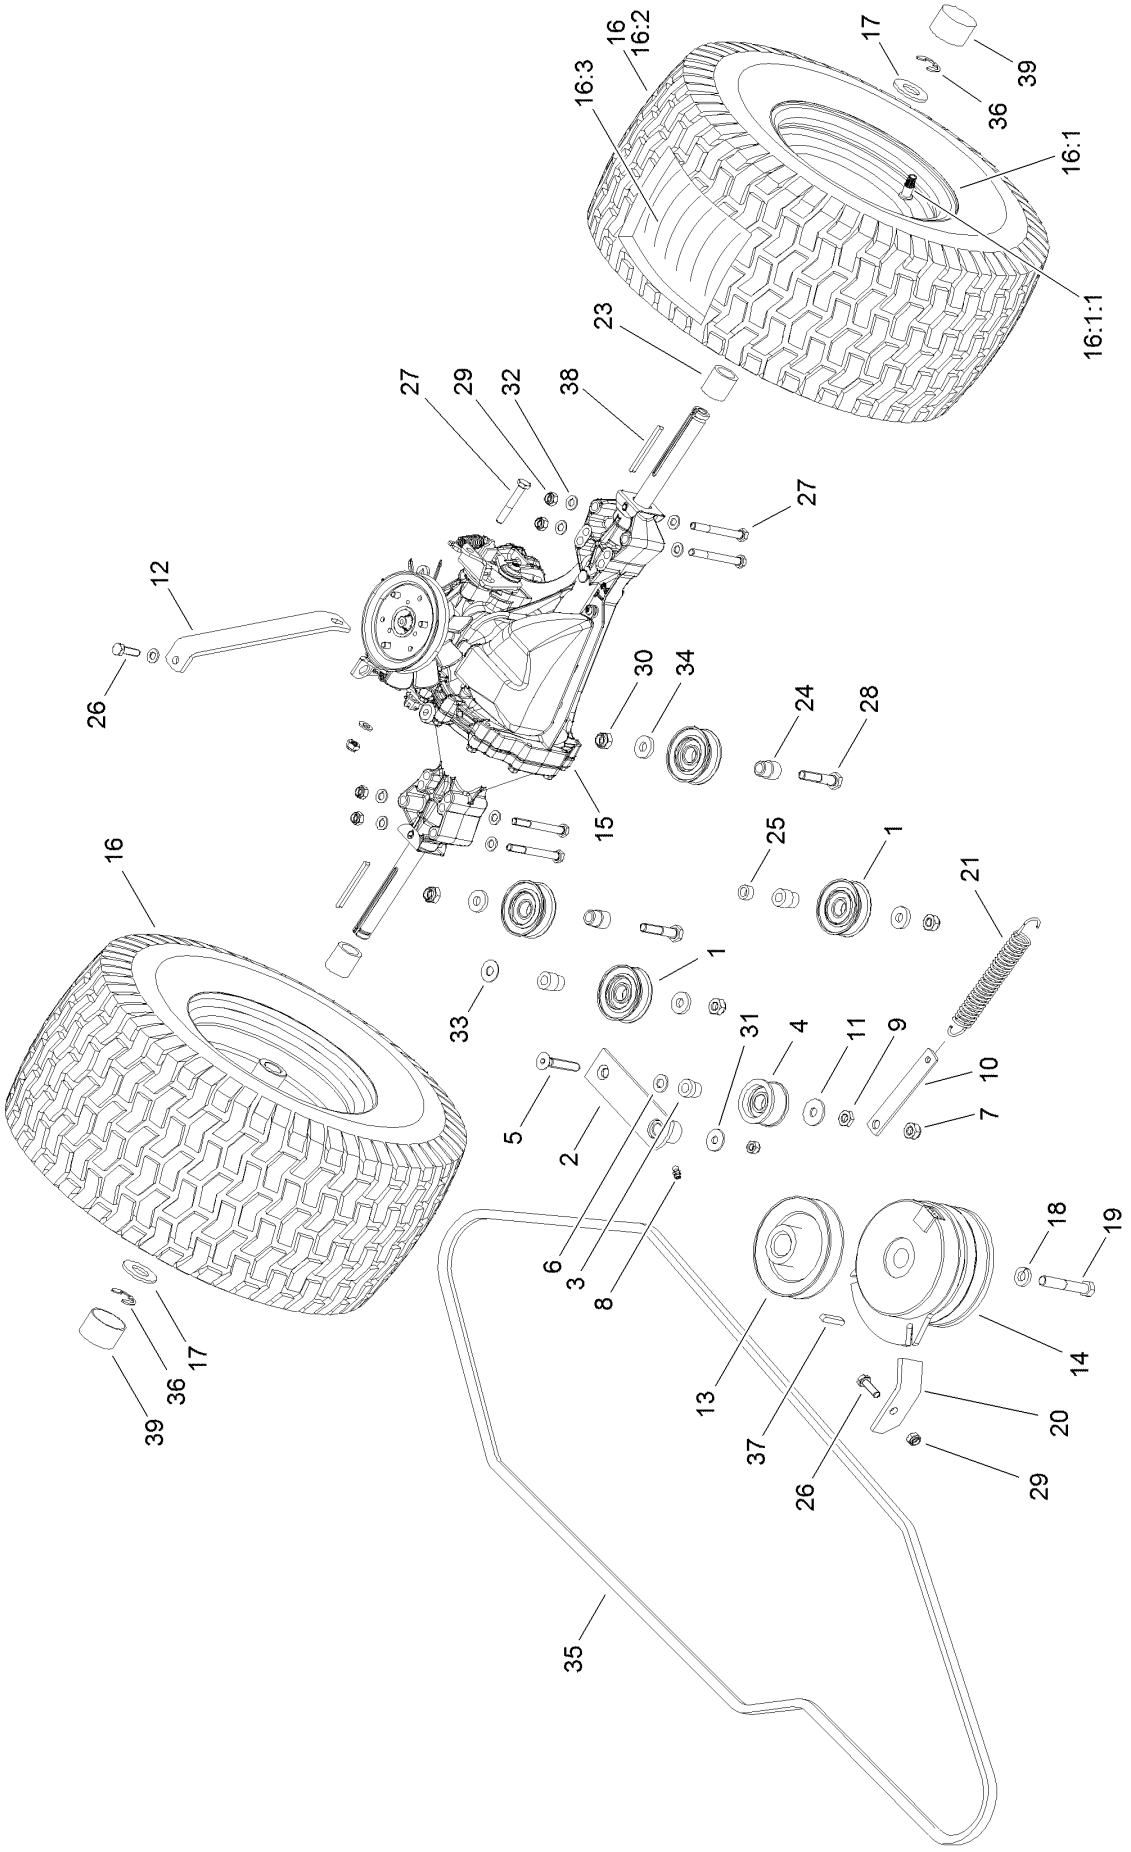


Transmission Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5378	4	Pulley-Idler
2	119-5379	1	Arm-Idler
3	104-2896	1	Bushing-Idler
4	119-5380	1	Pulley-Idler
5	119-5381	1	Screw
6	33095-00	1	Washer-Flat
7	33023-00	1	Nut-Lock
8	104-2904	1	Fitting-Grease
9	33035-00	1	Nut-Hex
10	119-5382	1	Bracket-Tention
11	119-5383	1	Washer
12	119-5384	1	Bracket
13	119-5385	1	Pulley-Engine
14	119-5501	1	Clutch-Electric
15	121-0999	1	Transmission ASM
16		2	Wheel ASM ●
16:1	119-5523	1	Rim-Rear
16:1:1	106-8596	1	Valve-Tire
16:2	119-5524	1	Tire
16:3	232-41	1	Tube
17	120-8739	2	Washer
18	93-9043	1	Washer-Spring, Belleville
19	3212-10	1	Screw-HH
20	119-5502	1	Bracket-Retainer
21	104-2897	1	Spring
23	120-8715	2	Spacer-Axle
24	119-5388	4	Bushing
25	119-5389	1	Spacer
26	33114-020	3	Screw-HH
27	60-6690	5	Capscrew
28	117-5664	2	Screw-HH
29	33024-00	9	Nut-Lock, NI
30	33023-00	4	Nut-Lock
31	104-2946	1	Washer-Plain
32	106-4756	11	Washer-Plain
33	106-5768	1	Washer
34	108-8709	4	Washer-Flat
35	119-5390	1	V-Belt, Traction
36	104-2891	2	Clip-Spring
37	104-2899	1	Key-Square
38	104-2892	2	Key-Square
39	104-2857	2	Cap-Hub

● Not serviced separately

Main Housing
Transmission Assembly No. 121-0999

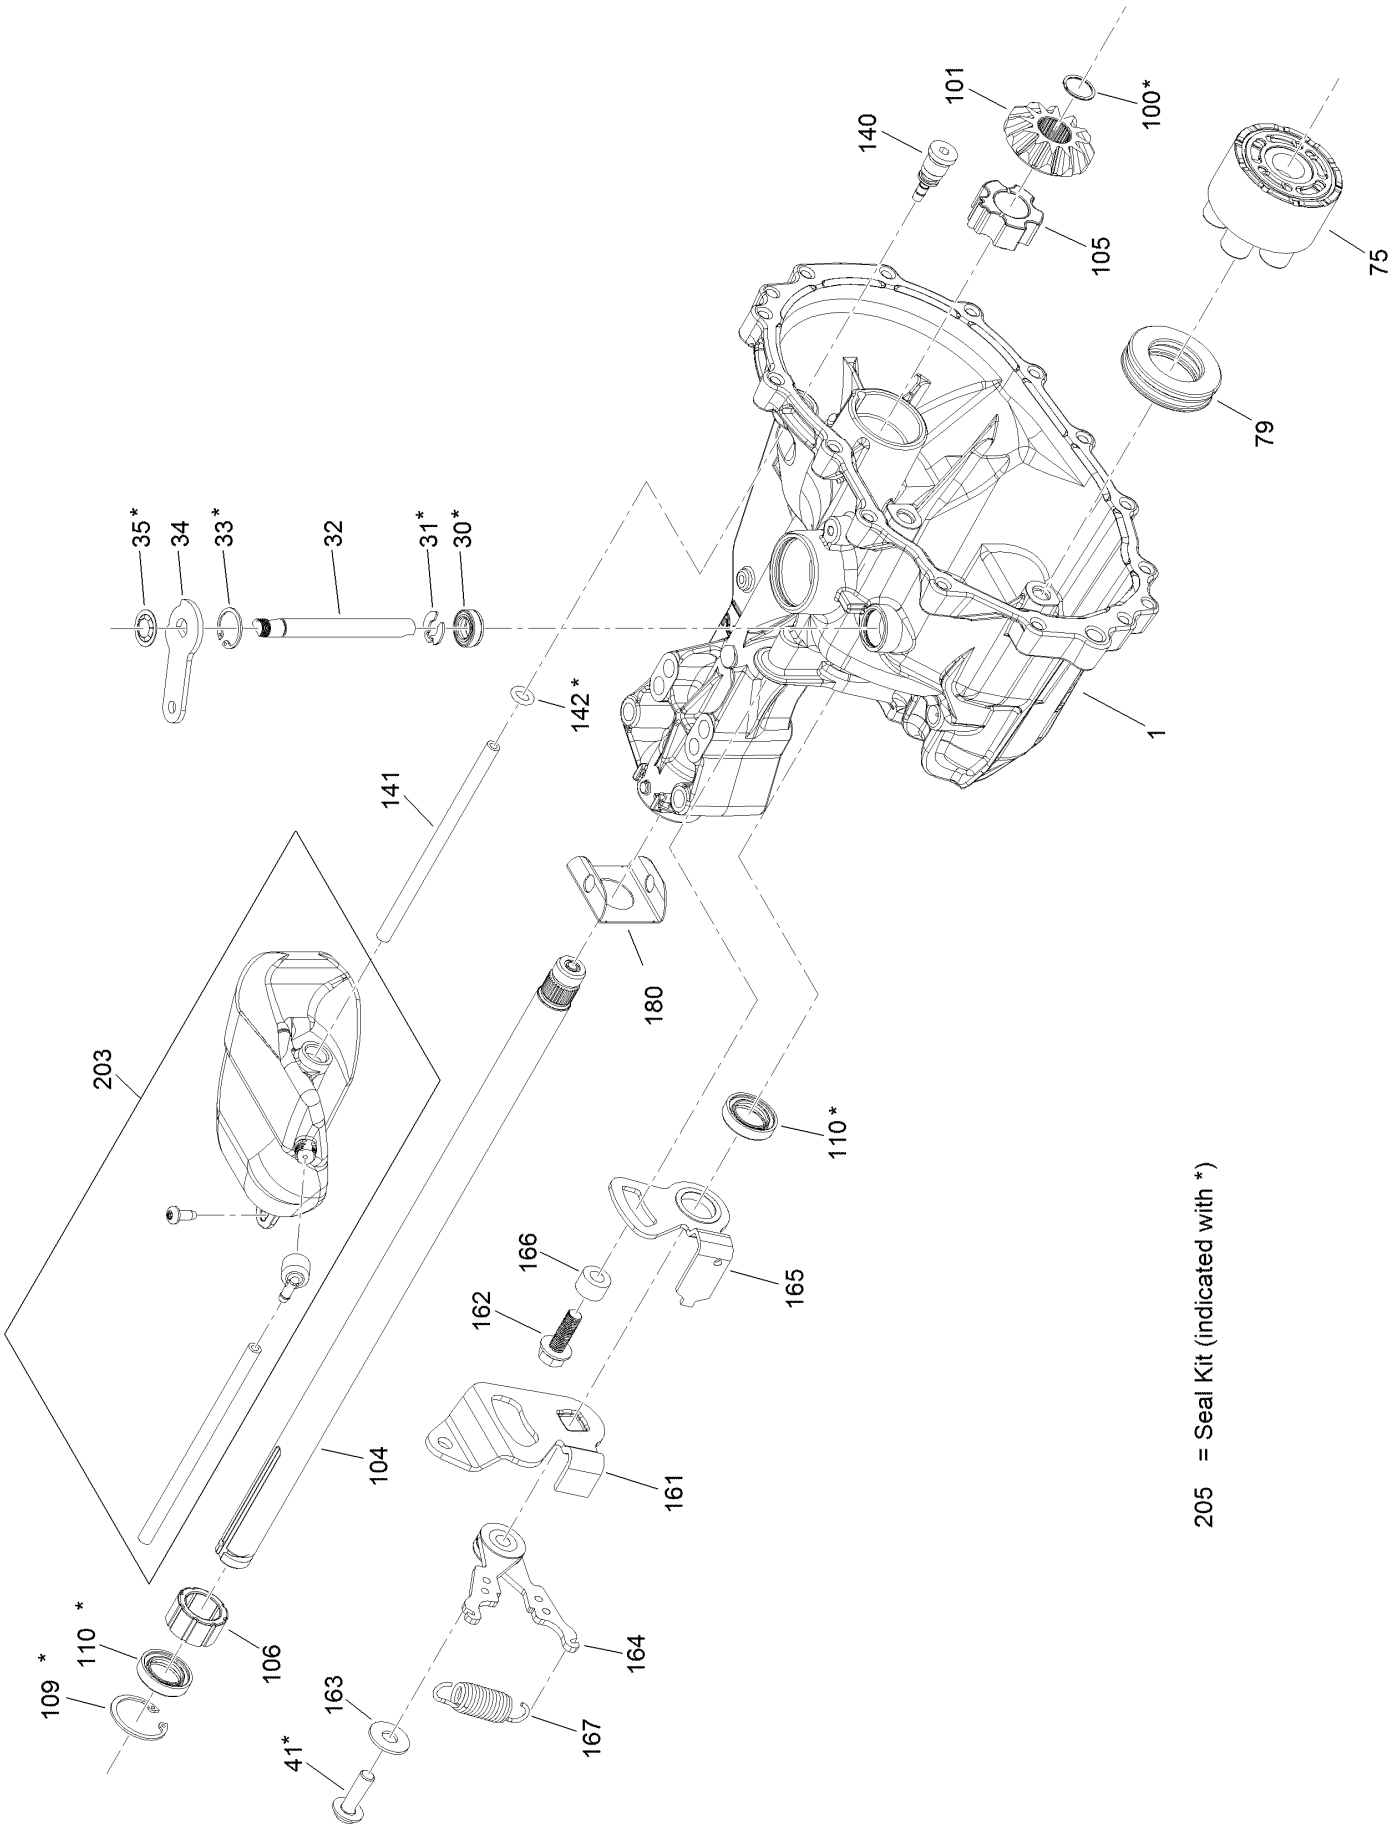


Main Housing
Transmission Assembly No. 121-0999 (continued)

Ref.	Part Number	Qty.	Description
1	115-8313	1	Main Housing Kit
10	104-2147	1	Sealant ●
11	104-5342	1	Oil, 20W-50 ●
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	115-8312	1	Rod-Bypass, Actuator
33	106-8679	1	Ring-Retaining, Int
34	115-8311	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
41	107-2488	1	Screw
75	103-2666	1	Cylinder Block Kit
79	94-6922	1	Bearing-Thrust
100	104-5328	1	Ring-Retaining, Spiral
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)
104	121-0969	1	Shaft-Axle, Keyed
105	115-8314	1	Bushing-Inboard
106	115-8304	1	Bushing-Outboard
109	115-8303	1	Ring-Retaining, Int
110	121-0970	2	Seal-Lip
140	104-5349	1	Fitting-Sae
141	115-8302	1	Hose
142	104-5361	1	O-Ring
161	115-8308	1	Arm-Control, Return
162	104-5312	1	Screw-HF
163	114-8491	1	Washer
164	115-8306	1	Bi Directional Return Kit
165	115-8310	1	Arm-Neutral
166	115-8309	1	Bushing
167	115-8307	1	Spring-Extension
180	119-5527	1	Spring Clip-Housing Thrust
203	115-8301	1	Expansion Tank Kit
205	115-8316	1	Seal Kit ●

● Not illustrated

Center Section and Fan Pulley Assembly
Transmission Assembly No. 121-0999

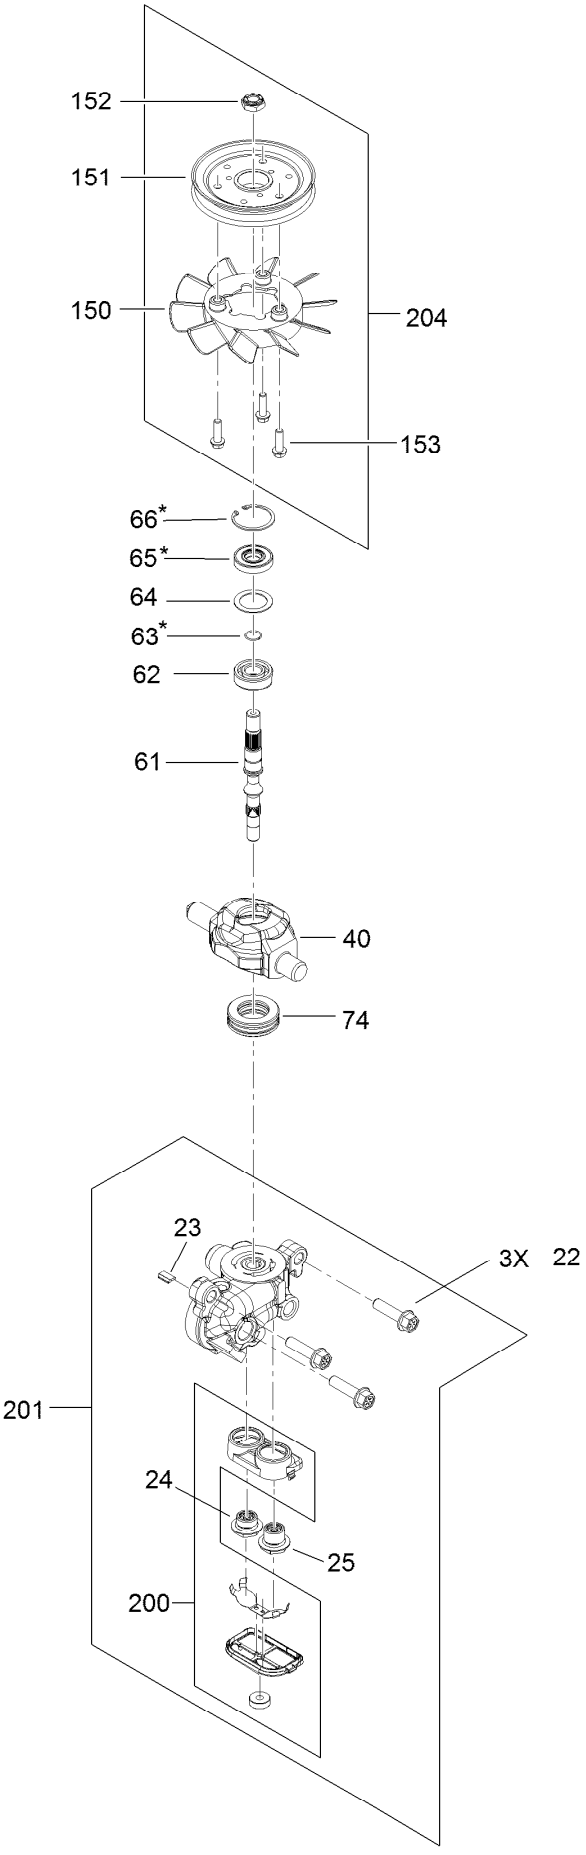


Main Seal Kit items are indicated with *

Center Section and Fan Pulley Assembly
Transmission Assembly No. 121-0999 (continued)

Ref.	Part Number	Qty.	Description
22	114-1684	3	Screw-Hfhc
23	119-5528	1	Plate-Bypass
24	104-5348	1	Check Plug ASM
25	119-5529	1	Check Plug ASM
40	115-8319	1	Trunnion-Plate, Swash
61	115-8317	1	Shaft-Input
62	119-5530	1	Bearing-Ball
63	119-5531	1	Ring-Retaining, Wire
64	104-2104	1	Spacer
65	119-5532	1	Seal-Lip
66	119-5533	1	Ring-Retaining
70	121-0967	1	Piston Block ASM ●
74	115-8320	1	Bearing-Thrust, Ball
150	105-1927	1	Fan
151	119-5534	1	Pulley ASM
152	121-0971	1	Nut-Hex Jam
153	105-1897	3	Screw
200	115-8323	1	Filter Kit
201	121-0972	1	Center Section Kit
204	119-5537	1	Fan Pulley Kit

● Not illustrated


Side Housing
Transmission Assembly No. 121-0999

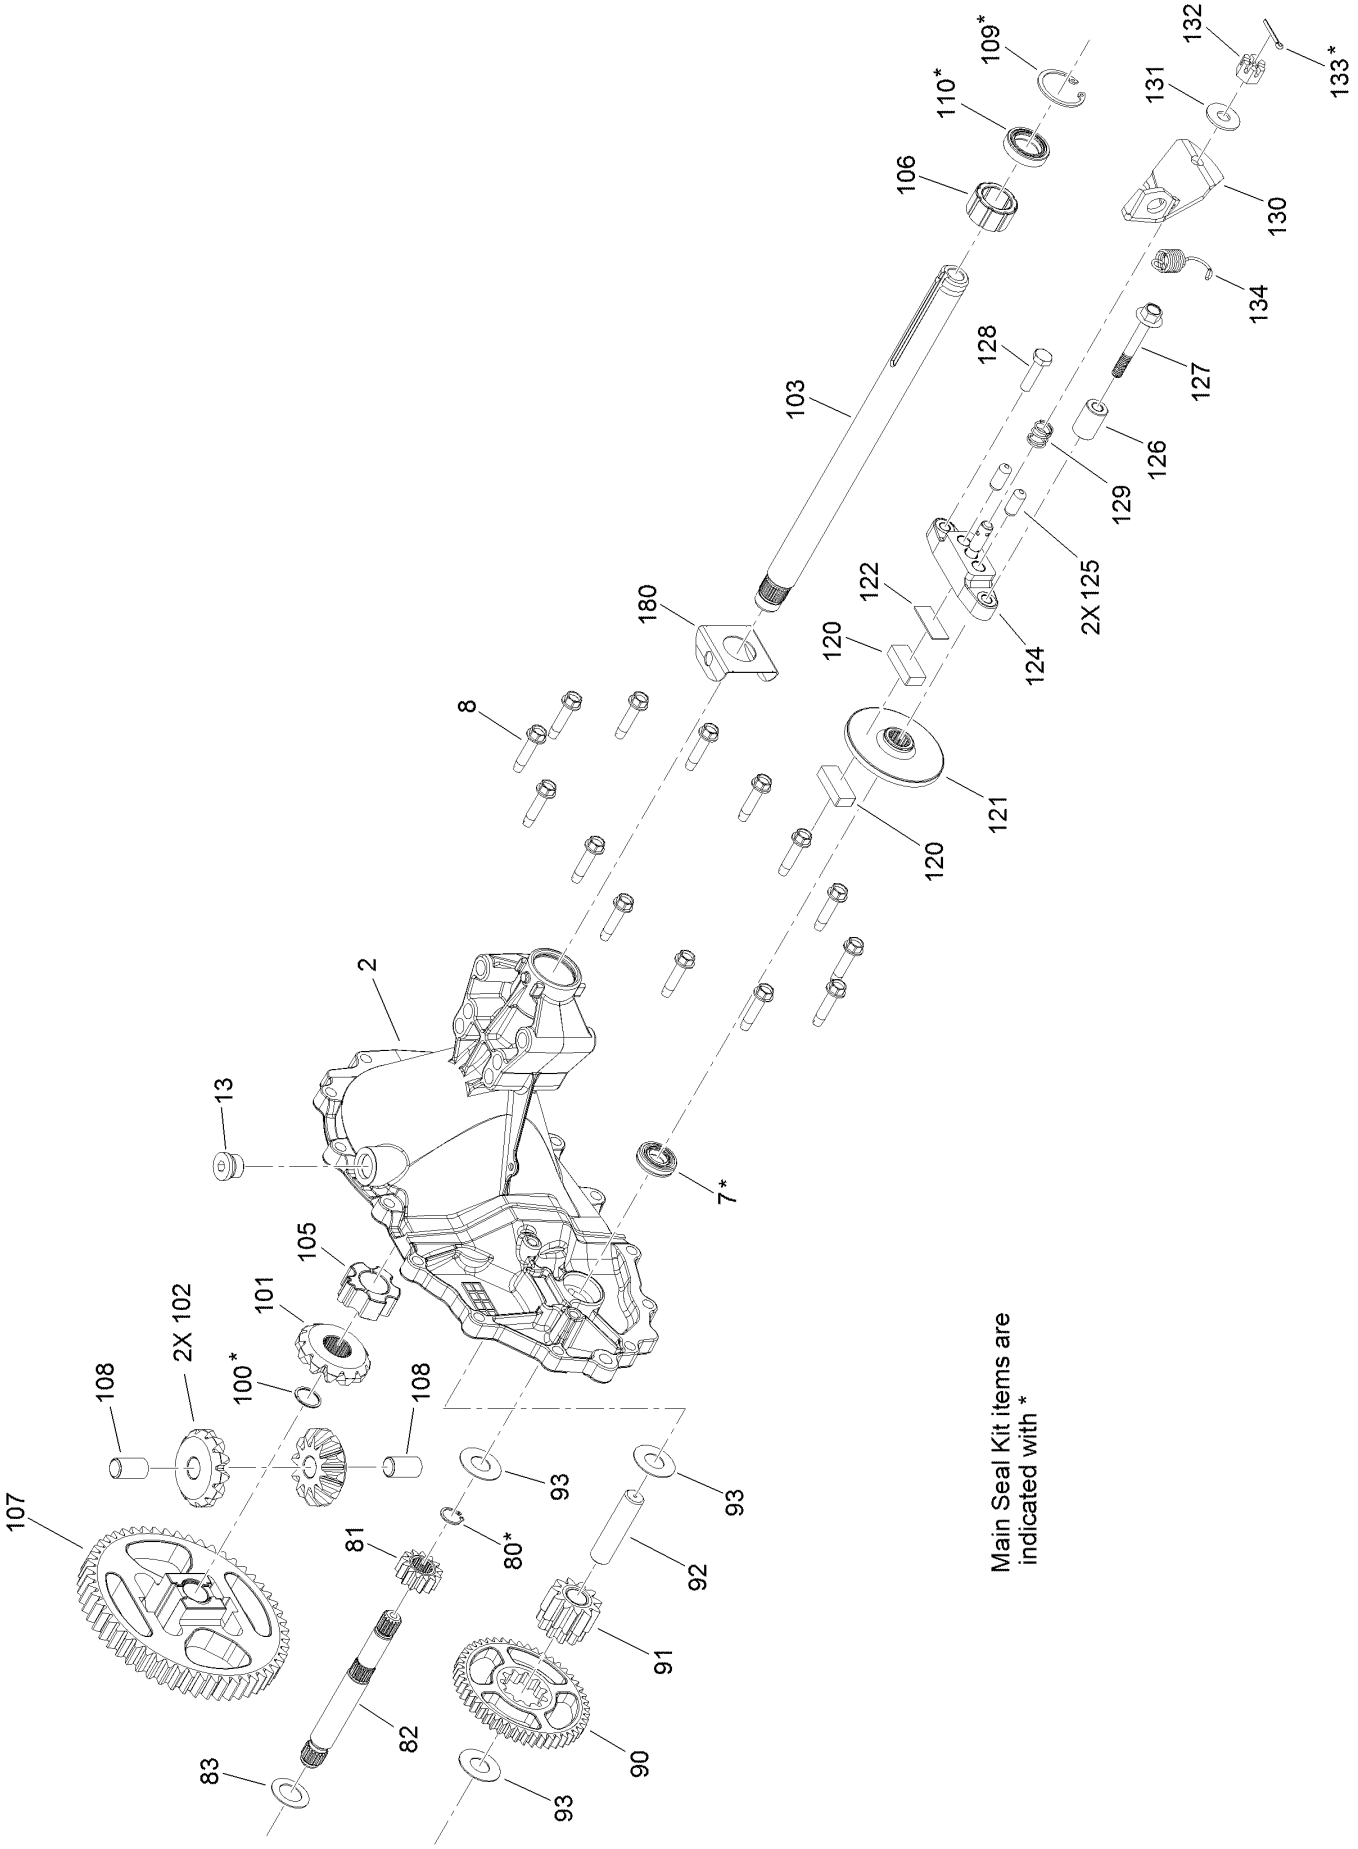

Side Housing
Transmission Assembly No. 121-0999 (continued)

Ref.	Part Number	Qty.	Description
2	119-5538	1	Housing Side Kit
7	115-8335	1	Seal-Lip
8	117-5359	14	Screw-HHF
13	104-2189	1	Plug-Thread, Straight
80	115-8331	1	Ring-Retaining, EXT
81	119-5539	1	Gear-Pinion
82	115-8329	1	Shaft-Motor
83	115-8328	1	Washer
90	119-5540	1	Gear
91	115-8333	1	Gear-Jackshaft, 11T
92	115-8334	1	Pin-Jackshaft
93	119-5541	3	Washer
100	104-5328	1	Ring-Retaining, Spiral
101	115-8315	1	Gear-Bevel, 12T (Spline, Id)
102	115-8327	2	Gear-Bevel, 12T (.50 Id)
103	121-0968	1	Shaft-Axle, Keyed
105	115-8314	1	Bushing-Inboard
106	115-8304	1	Bushing-Outboard
107	115-8325	1	Gear-53T, Bull
108	115-8326	2	Pin-Differential
109	115-8303	1	Ring-Retaining, Int
110	119-5526	1	Seal-Lip
120	104-2171	2	Puck-Brake
121	115-8337	1	Rotor-Brake
122	104-2181	1	Puck-Plate
124	104-5343	1	Yoke-Brake
125	104-2176	2	Pin-Brake
126	104-2180	1	Spacer
127	104-5345	1	Screw-HF
128	115-8339	1	Screw-Hhcs
129	104-2188	1	Spring-Brake, Anti Drag
130	119-5542	1	Arm-Brake
131	114-8491	1	Washer
132	119-5543	1	Nut-Castle
133	3272-7	1	Pin-Cotter
134	115-8338	1	Spring-Brake, Arm
180	119-5527	1	Spring Clip-Housing Thrust


Frame Assembly

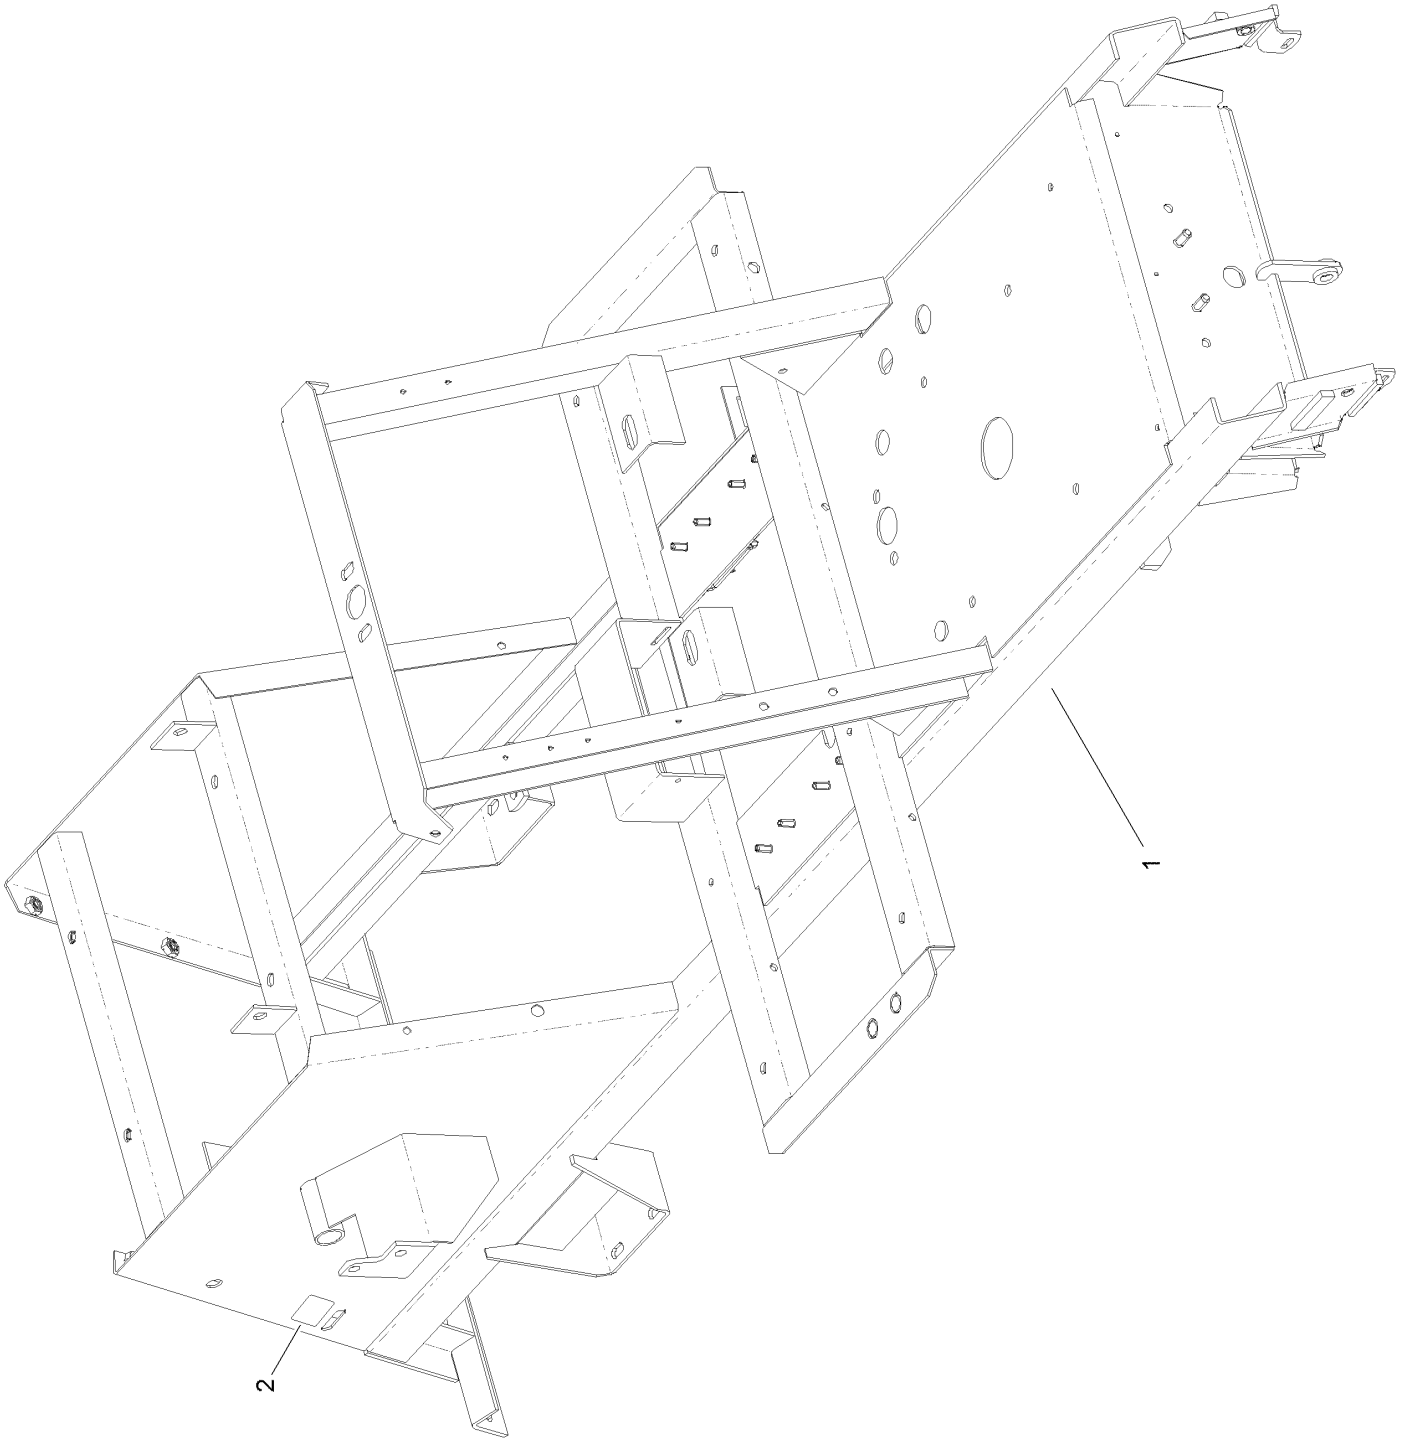

Frame Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	120-8710	1	Frame-Complete
2	119-5515	1	Decal-Bypass


Mower Lift Assembly

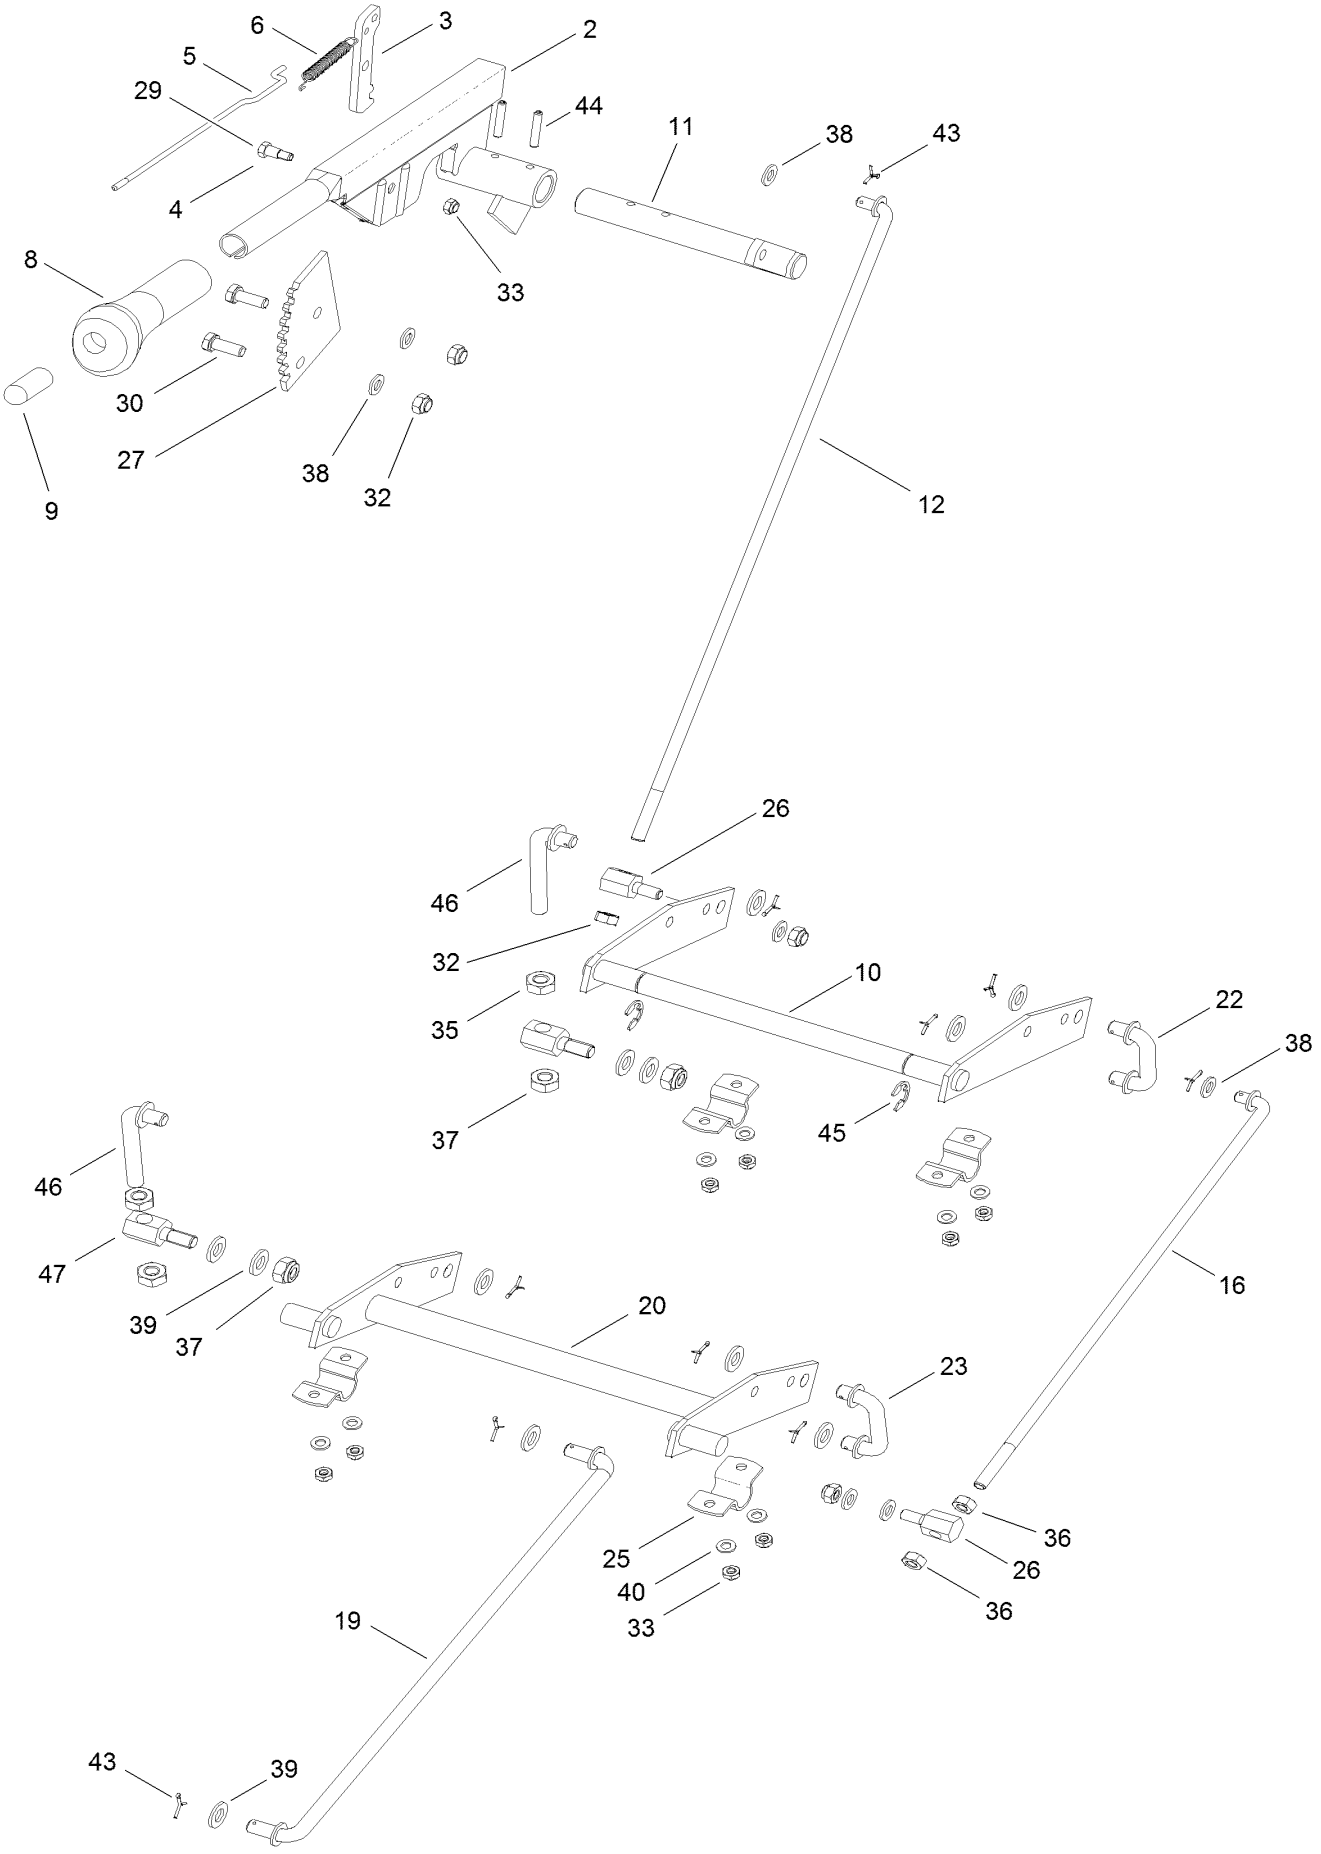

Mower Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
2	120-8716	1	Lever-Arm
3	104-3130	1	Ratchet-Plate, Pivot
4	120-8754	1	Bushing
5	104-3132	1	Rod-Connection
6	104-3134	1	Spring
8	104-3129	1	Grip-Handle
9	104-3131	1	Button-Plunger
10	120-8717	1	Hanger-Rear
11	120-8718	1	Shaft-Adjustment, Height
12	120-8719	1	Rod
16	119-5397	1	Rod-Linkage
19	120-8720	1	Rod
20	119-5401	1	Hanger-Front
22	119-5403	1	Link-Deck, U-Shape
23	119-5404	1	Link-Deck, U-Shape
25	119-5406	4	Clamp
26	119-5407	1	Trunion
27	114-3244	1	Gear-Segment, Lift (Deck)
29	33113-016	1	Screw-HH
30	33114-020	2	Screw-HH
32	33024-00	4	Nut-Lock, NI
33	33023-00	9	Nut-Lock
35	33015-00	2	Nut-Hex
36	33014-00	4	Nut-Hex
37	33025-00	4	Nut-Lock, NI
38	106-4756	7	Washer-Plain
39	104-2906	10	Washer-Flat
40	104-3193	8	Washer
43	104-3151	9	Pin-Cotter
44	104-2994	2	Pin-Spring
45	119-5503	2	E-Clip
46	119-5544	2	Link-Deck, L-Shape (Adjustable)
47	119-5545	2	Trunion


92cm Deck Assembly

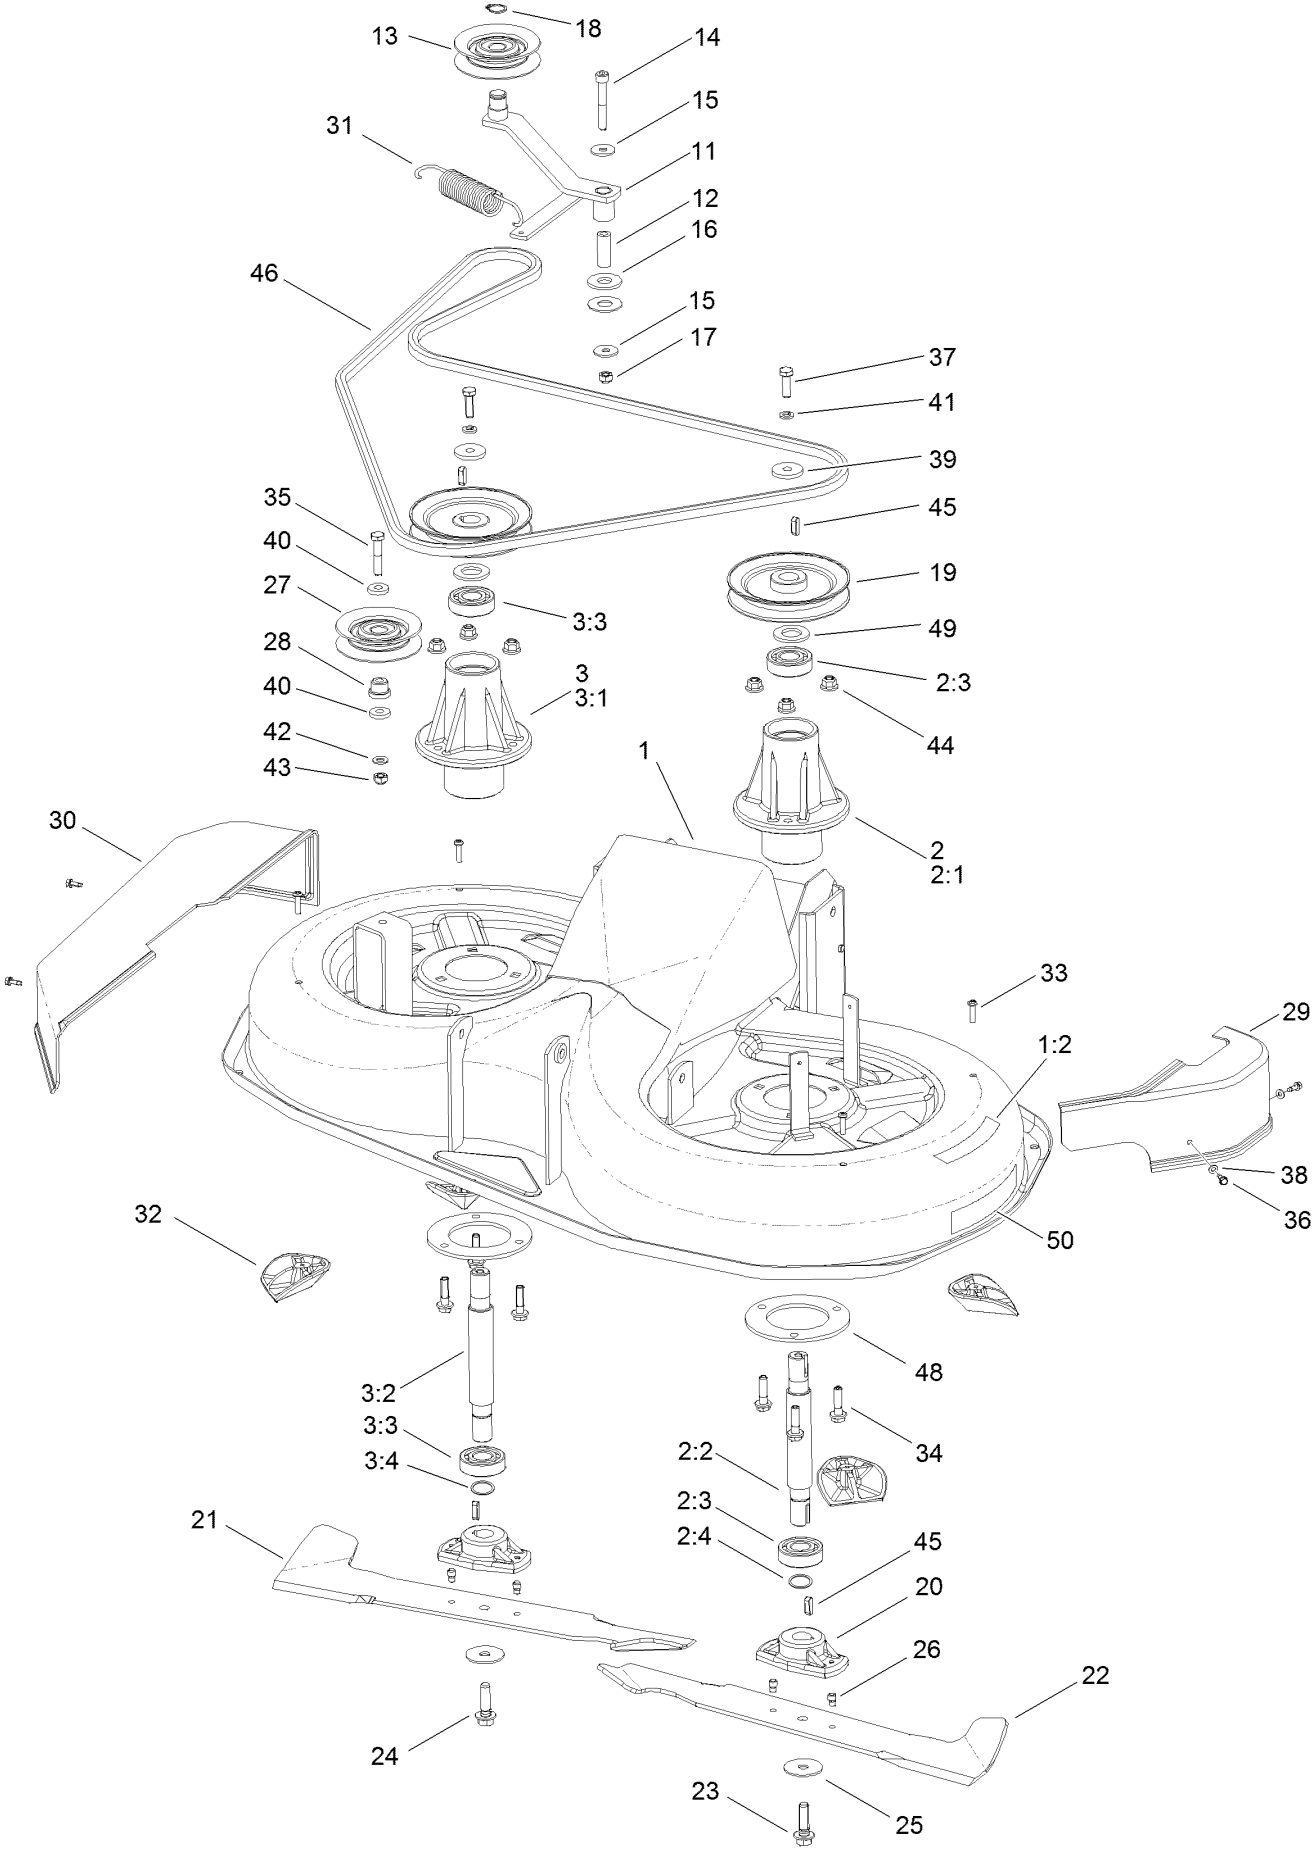

92cm Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5508	1	Deck ASM
1:2	119-2726	2	Decal-Danger
2	119-5425	1	Left Spindle ASM
2:1	119-5426	1	Housing-Spindle
2:2	119-5409	1	Shaft-Blade, Left
2:3	119-5505	2	Bearing
2:4	119-5410	1	Ring-Lock
3	119-5427	1	Right Spindle ASM
3:1	119-5426	1	Housing-Spindle
3:2	119-5411	1	Shaft-Blade, Right
3:3	119-5505	2	Bearing
3:4	119-5410	1	Ring-Lock
11	119-5412	1	Arm-Idler
12	119-5547	1	Spacer
13	119-5414	1	Pulley-Idler
14	60-6700	1	Bolt-HH
15	104-2946	2	Washer-Plain
16	119-5548	1	Washer-Plain
17	33024-00	1	Nut-Lock, NI
18	119-5525	1	Ring-Lock
19	119-5416	2	Pulley-Belt, Mowing
20	119-5506	2	Adapter-Mount, Blade
21	117-0035	1	Blade-RH
22	117-0036	1	Blade-LH
23	104-3088	1	Screw-Hex
24	104-3091	1	Screw-HH, Left
25	104-3092	2	Washer-Belleville
26	104-3093	4	Pin-Shear, Grooved
27	119-5414	1	Pulley-Idler
28	104-3104	1	Bushing
29	119-5419	1	Guard-Belt, Left
30	119-5420	1	Guard-Belt, Right
31	119-5421	1	Spring
32	119-0369	4	Kicker
33	119-5423	4	Screw
34	33104-030	6	Screw-HHF
35	33114-040	1	Screw-HH
36	104-3190	4	Screw
37	33114-025	2	Screw-HH
38	104-2984	4	Washer
39	119-5507	2	Washer
40	106-8588	2	Washer-Flat
41	104-2927	2	Washer-Spring
42	106-4756	1	Washer-Plain
43	33024-00	1	Nut-Lock, NI
44	104-3082	6	Nut-Lock, HHF
45	119-2424	4	Key
46	119-2425	1	Belt-Wedge, Double
48	104-3084	2	Support-Ring
49	119-5549	2	Washer-Plain
50	114-3255	1	Decal-Recycler


Operation-Travel Pedal Assembly

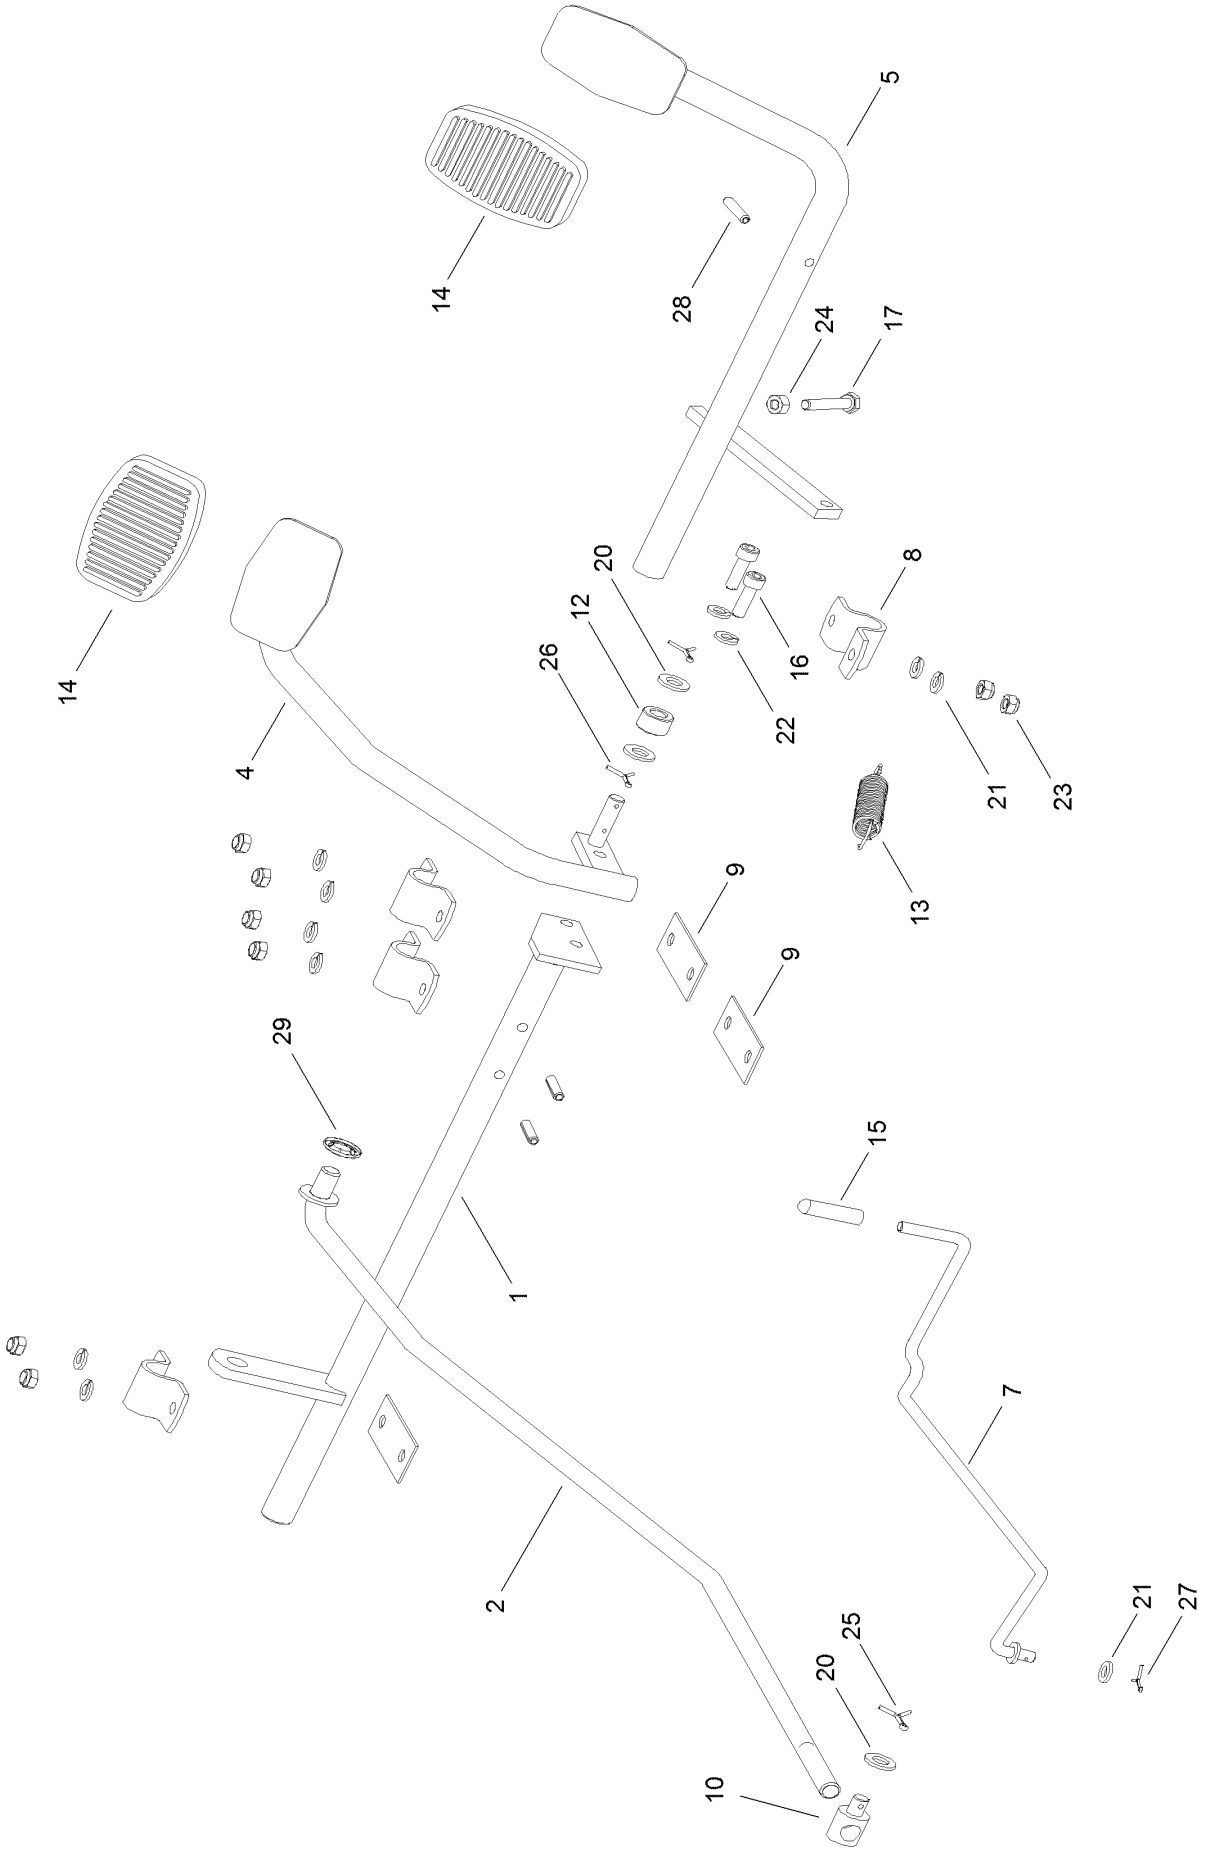

Operation-Travel Pedal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-8721	1	Shaft-Pivot
2	120-8722	1	Rod-Linkage
4	120-8723	1	Pedal-Travel, Forward
5	120-8724	1	Pedal-Travel, Reverse
7	119-2432	1	Rod-Lever, Bypass
8	119-2433	3	Clamp
9	119-2434	2	Spacer
10	119-2435	1	Pin
12	106-8581	1	Roller
13	119-2436	1	Spring
14	104-3018	2	Pad-Pedal
15	108-8708	1	Cap-Bypass Lever, Hydro
16	120-8779	2	Screw
17	33113-030	1	Screw-HH
20	106-4756	3	Washer-Plain
21	104-3193	3	Washer
22	104-3186	2	Washer-Spring
23	33023-00	8	Nut-Lock
24	104-2991	1	Nut-Hex
25	104-3027	1	Pin-Cotter
26	104-3151	2	Pin-Cotter
27	104-2997	1	Pin-Cotter
28	104-3008	3	Pin-Spring
29	121-0962	1	Washer-M10


Operation-Brake Assembly

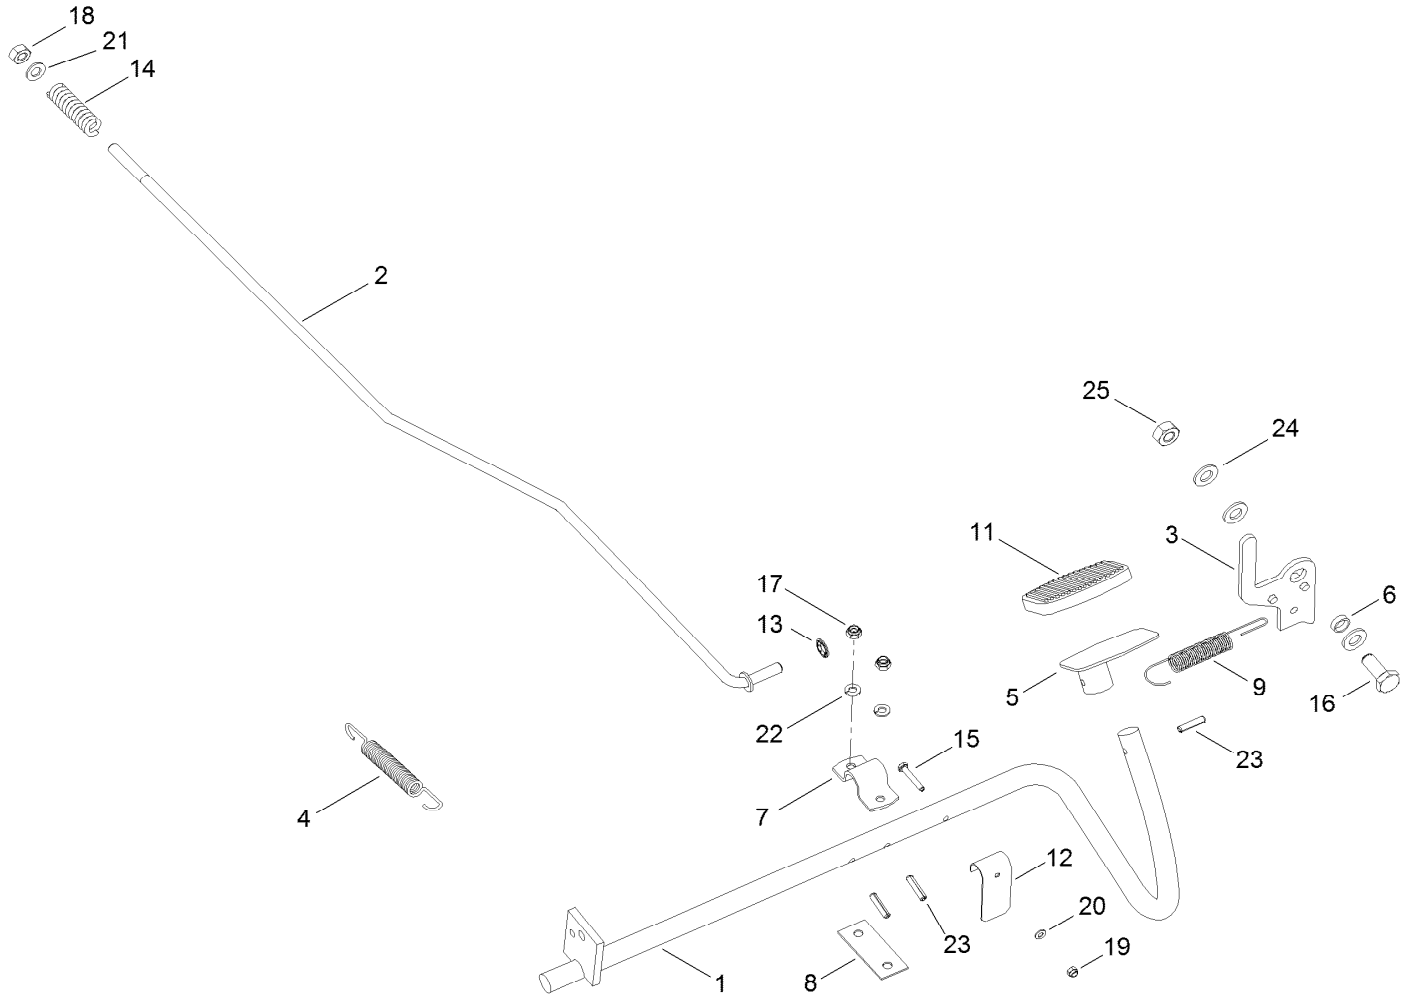

Operation-Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-8763	1	Pedal
2	120-8725	1	Rod-Brake, Linkage
3	120-8726	1	Lever-Parking, Brake
4	104-3001	1	Spring
5	120-8727	1	Pedal-Travel, Brake
6	120-8728	1	Spacer
7	119-5406	1	Clamp
8	119-2434	1	Spacer
9	104-3005	1	Spring-Brake, Hand
11	104-3018	1	Pad-Pedal
12	119-5509	1	Bracket-Parking Brake
13	121-0963	1	Washer
14	104-3002	1	Spring-Brake
15	104-3009	1	Screw-Hex
16	104-3041	1	Screw-Hex
17	33023-00	2	Nut-Lock
18	33024-00	1	Nut-Lock, NI
19	104-2985	1	Nut-Hex
20	106-5766	1	Washer
21	106-4756	2	Washer-Plain
22	104-3193	2	Washer
23	104-3008	3	Pin-Spring
24	33095-00	3	Washer-Flat
25	33023-00	1	Nut-Lock


Electrical-Wiring Harness Assembly

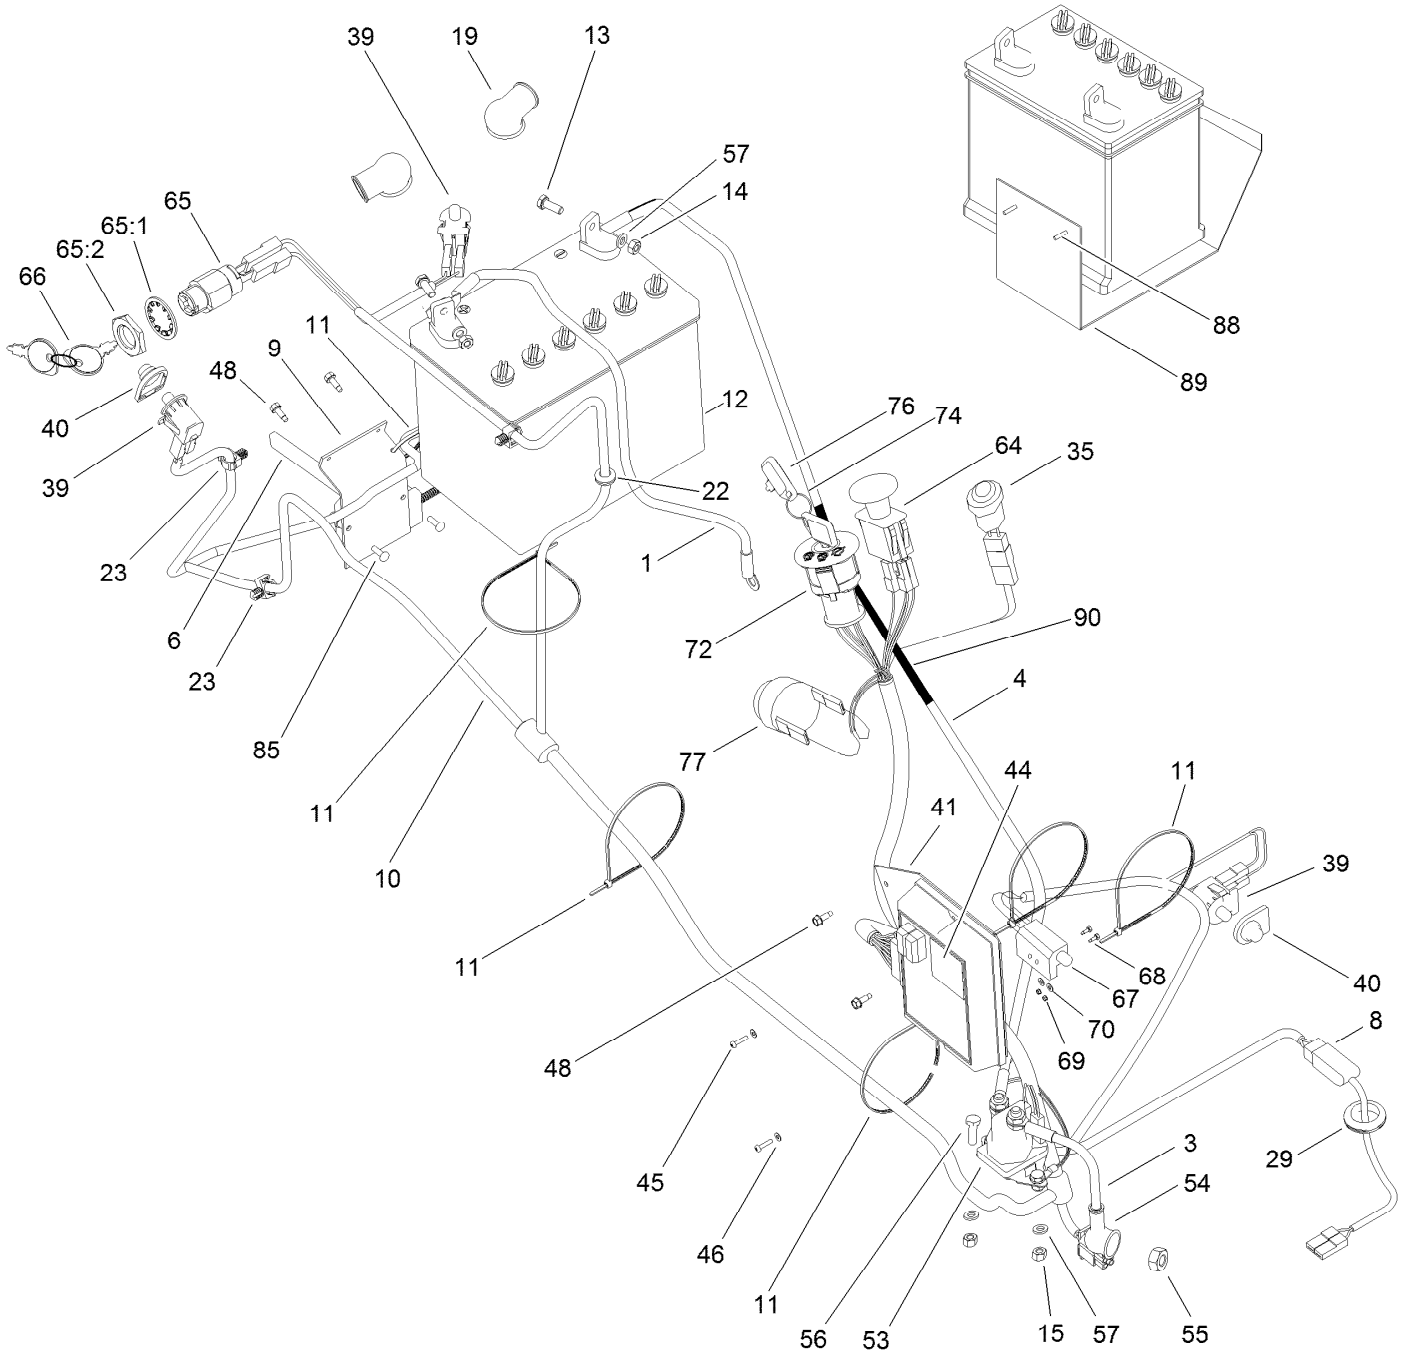

Electrical-Wiring Harness Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5417	1	Cable-Battery, Negative
3	119-5418	1	Lead-Starter, Electric
4	120-8729	1	Cable-Battery, Positive
6	119-5429	1	Switch-Omron
8	119-5430	1	Harness-Clutch
9	119-5431	1	Bracket-Switch
10	119-5432	1	Harness-Wiring
11	111-6843	5	Tie-Cable
12	104-2491	1	Battery
13	33113-016	2	Screw-HH
14	104-2991	2	Nut-Hex
15	33023-00	2	Nut-Lock
19	104-3154	2	Boot-Rubber
22	104-3164	1	Bushing
23	104-3157	4	Clip-Snap
29	104-2959	1	Bushing
35	119-5441	1	Lamp-Indicator
39	104-3179	3	Switch-Delta
40	104-3178	2	Cover-Protective
41	119-5433	1	Bracket-Module, Support
44	119-5434	1	Module-Control
45	119-5436	2	Screw
46	119-5437	2	Washer
48	104-2977	4	Screw-TAP
53	104-3189	1	Solenoid
54	104-3187	1	Boot-Rubber
55	32128-32	1	Nut-HHF
56	33113-012	2	Screw-HH
57	104-3193	4	Washer
64	93-9998	1	Switch-PTO
65	46-5780	1	Starter Switch ASM
65:1	3254-5	1	Washer-Tooth, Internal
65:2	218-461	1	Nut-HH
66	62-7770	2	Key-Ignition
67	119-5440	1	Switch-Delta
68	104-3331	2	Bolt
69	104-2985	1	Nut-Hex
70	104-2984	1	Washer
72	119-5438	1	Switch-Ignition
74	119-5439	1	Ring
76	119-5510	2	Key-Ignition
77	119-5511	1	Buzzer
85	104-3349	2	Screw
88	106-5763	4	Screw
89	125-2290	1	Holder-Battery
90	111-6844	1	Protection-Cable


Seat and Body Fender Assembly

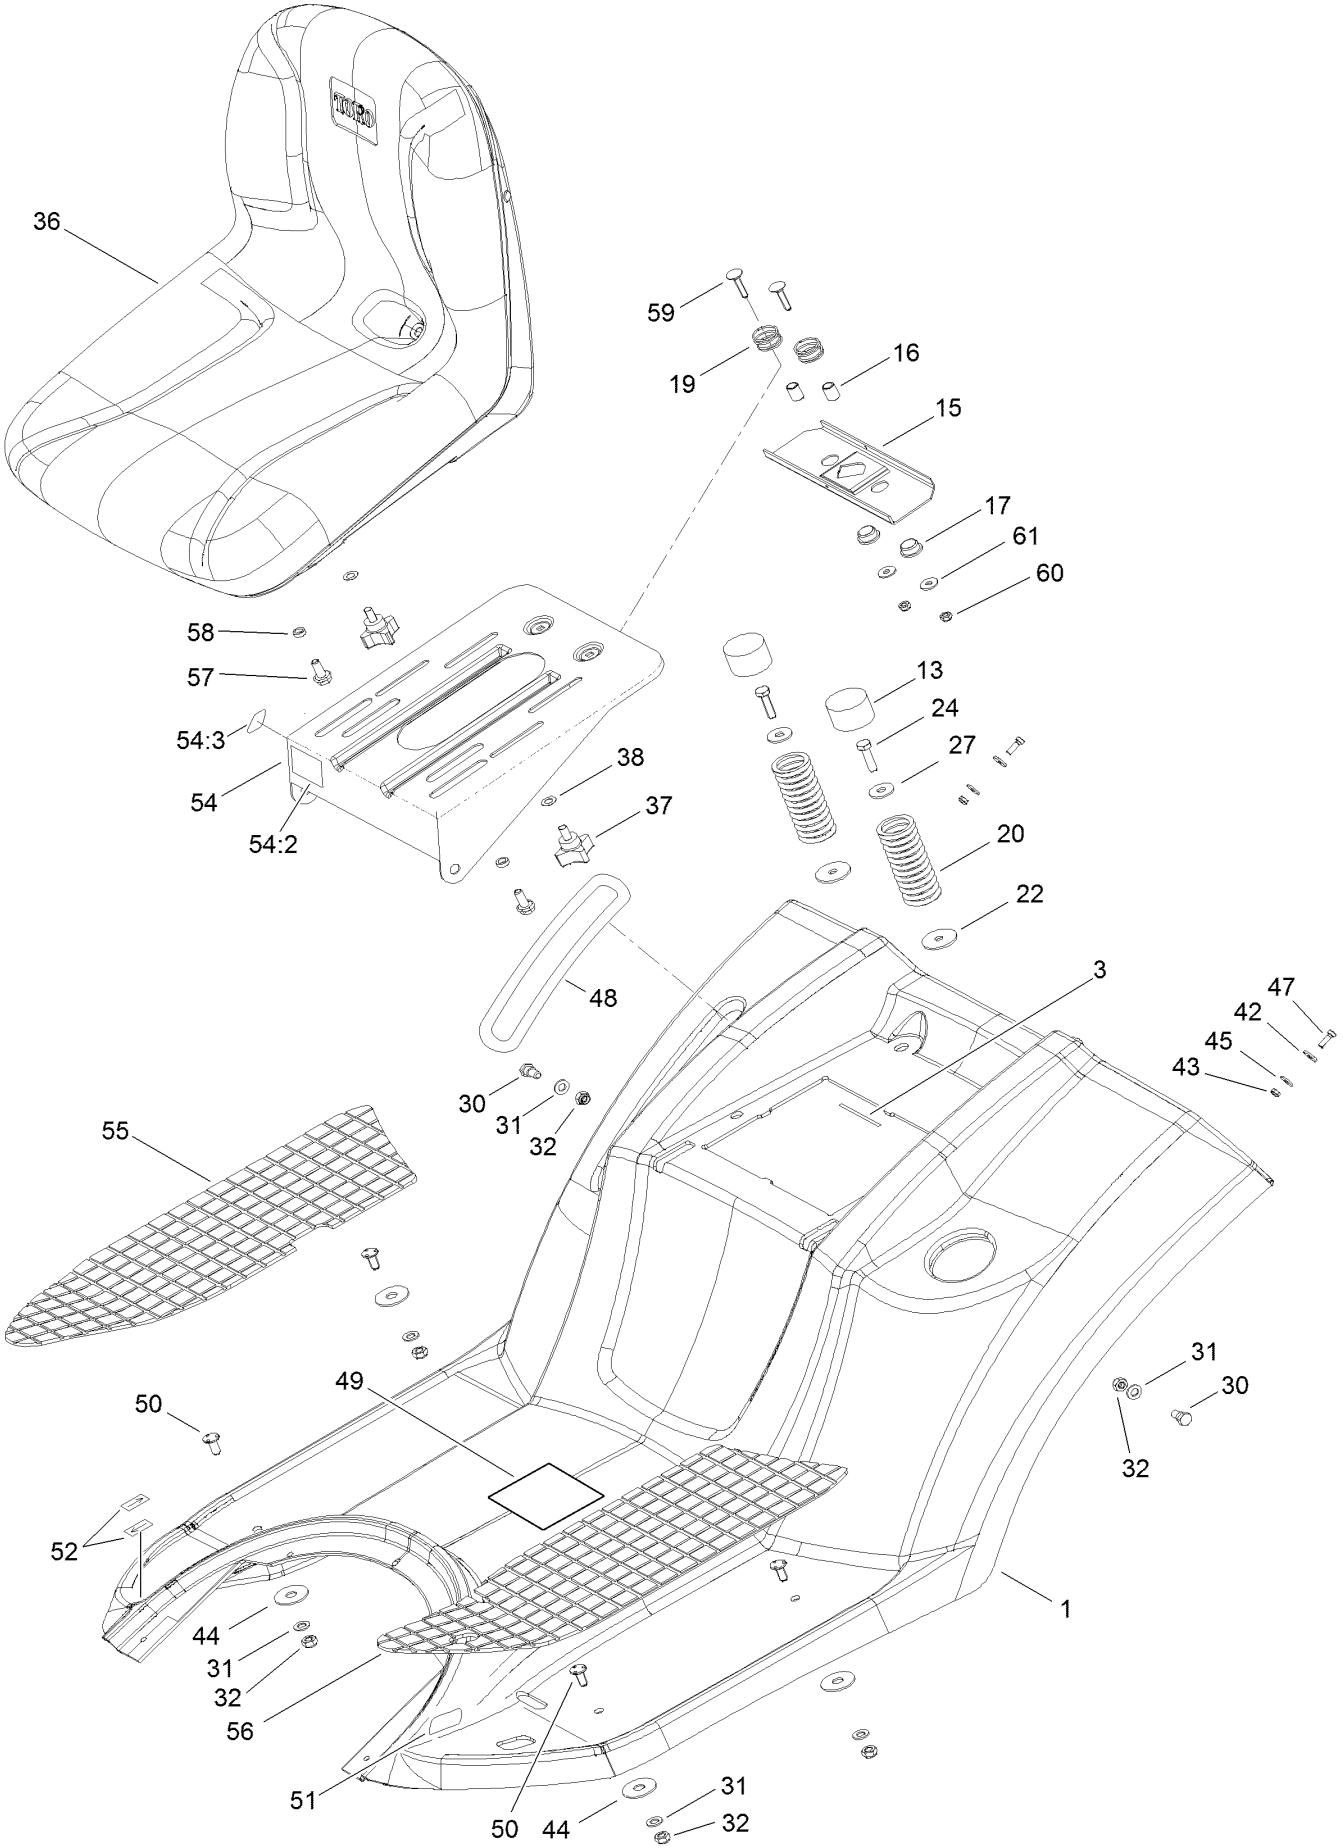

Seat and Body Fender Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-2306	1	Fender-Rear
3	111-6845	1	Rubber-Purl, Battery
13	104-2857	2	Cap-Hub
15	104-2934	1	Bracket
16	104-2933	2	Spacer-Split
17	104-2935	2	Bushing
19	119-5514	2	Seat-Spring
20	104-2945	2	Spring-Seat
22	120-8747	2	Washer
24	33114-025	2	Screw-HH
27	104-2946	2	Washer-Plain
30	104-2939	2	Screw-Support, Seat
31	33094-00	6	Washer-Plain
32	33024-00	6	Nut-Lock, NI
36	119-5455	1	Seat
37	119-5456	2	Knob-Adjust
38	104-2936	2	Washer-Spring
42	104-2943	2	Washer-Flat
43	87-5140	2	Nut-Lock
44	104-2949	4	Washer-Rubber
45	104-2952	2	Washer-Rubber
47	104-2980	2	Screw
48	120-8748	1	Decal-HOC
49	119-2725	1	Decal-Danger, Tractor
50	100-8159	4	Screw-HSFH
51	104-3237	1	Decal-Brake, Parking
52	119-5487	2	Decal-Travel
54	119-5513	1	Bracket-Support, Seat
54:2	119-2730	1	Decal-Danger
54:3	99-5340	1	Decal-Switch
55	120-8745	1	Mat-Foot, RH
56	120-8746	1	Mat-Foot, LH
57	33104-020	2	Screw-HHF
58	119-5457	2	Spacer
59	33123-00	2	Screw
60	33023-00	2	Nut-Lock
61	104-2931	2	Washer-Flat


Hood and Control Panel Assembly

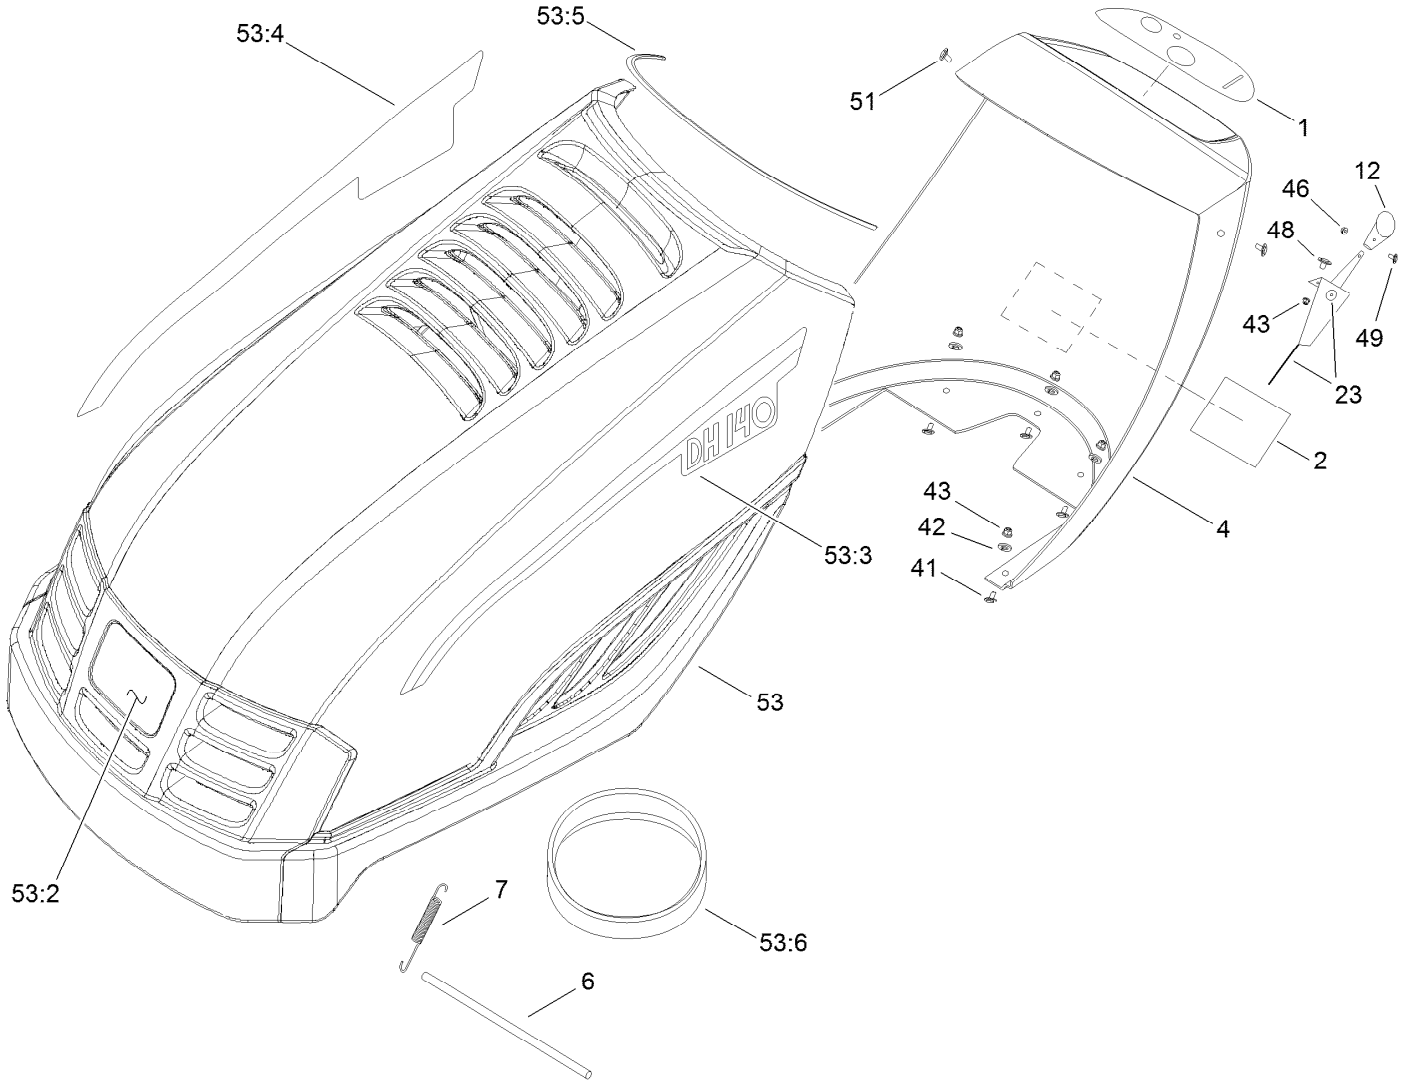

Hood and Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5486	1	Decal-Panel
2	119-5517	1	Decal-Instructions, Operating
4	119-5444	1	Panel-Dash
6	104-2974	1	Bar-Safety
7	104-2975	1	Spring-Hood
12	119-5448	1	Knob-Throttle/Choke
23	119-5453	1	Cable-Throttle/Choke
41	104-2978	5	Screw-Hex
42	104-2943	10	Washer-Flat
43	87-5140	7	Nut-Lock
46	104-2985	1	Nut-Hex
48	104-2966	2	Screw-Flat Head
49	119-5458	1	Screw
51	119-5460	2	Screw
53	119-5520	1	Hood Assembly
53:2	117-0871	1	Decal
53:3	119-2718	1	Decal-Dh 140 (LH)
53:4	119-2719	1	Decal-Dh 140 (RH)
53:5	119-5445	1	Rubber-Purl
53:6	119-5446	1	Gasket-Foam


Grass Collector Assembly

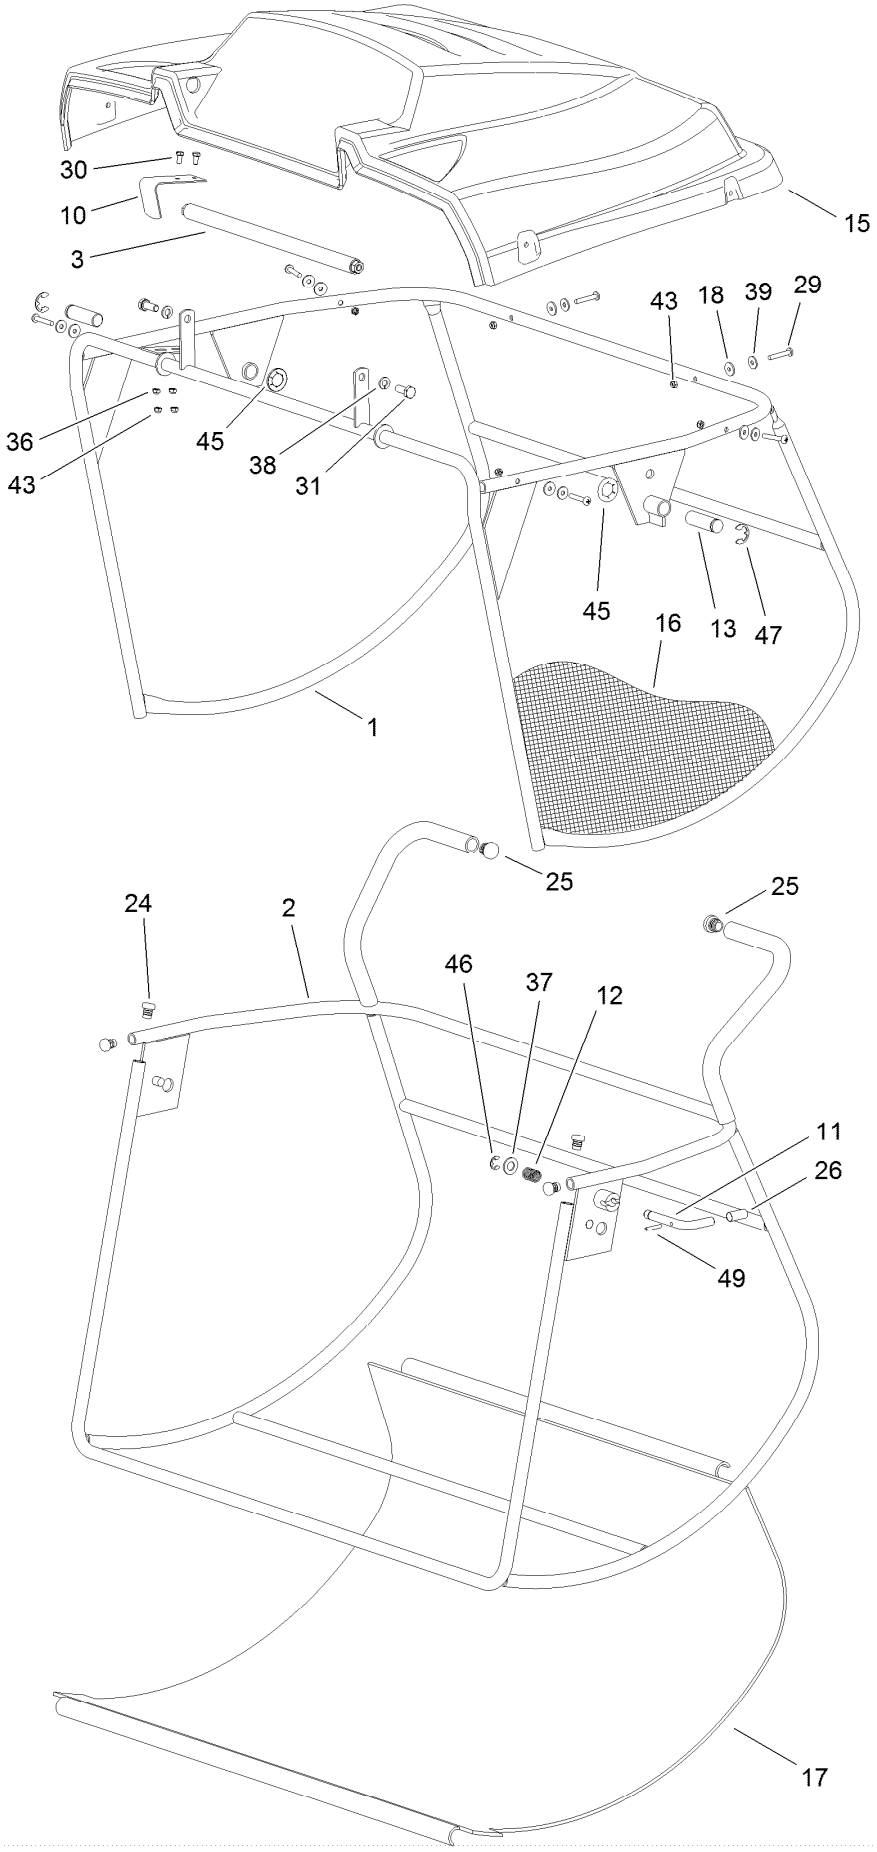

Grass Collector Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5463	1	Upper Frame ASM
2	119-5464	1	Lower Frame ASM
3	119-5465	1	Handle-Lift
10	119-5466	1	Bracket-Collector, Interlock
11	119-5467	1	Lever-Collector Lock
12	119-5468	1	Spring
13	119-5469	2	Pin
15	119-5470	1	Cover-Collector
16	119-5471	1	Bag-Grass
17	119-5472	1	Bag-Lower
18	104-2952	6	Washer-Rubber
24	119-5475	4	Cap
25	119-5474	2	Cap
26	119-5473	1	Cap
29	119-5476	6	Screw
30	119-5477	2	Screw
31	33114-020	2	Screw-HH
36	52-6430	2	Washer
37	33095-00	1	Washer-Flat
38	104-2927	2	Washer-Spring
39	104-2943	2	Washer-Flat
43	87-5140	8	Nut-Lock
45	119-5478	2	Ring-Lock
46	104-3015	2	E-Clip
47	119-5503	2	E-Clip
49	119-5479	1	Pin


Tunnel Assembly

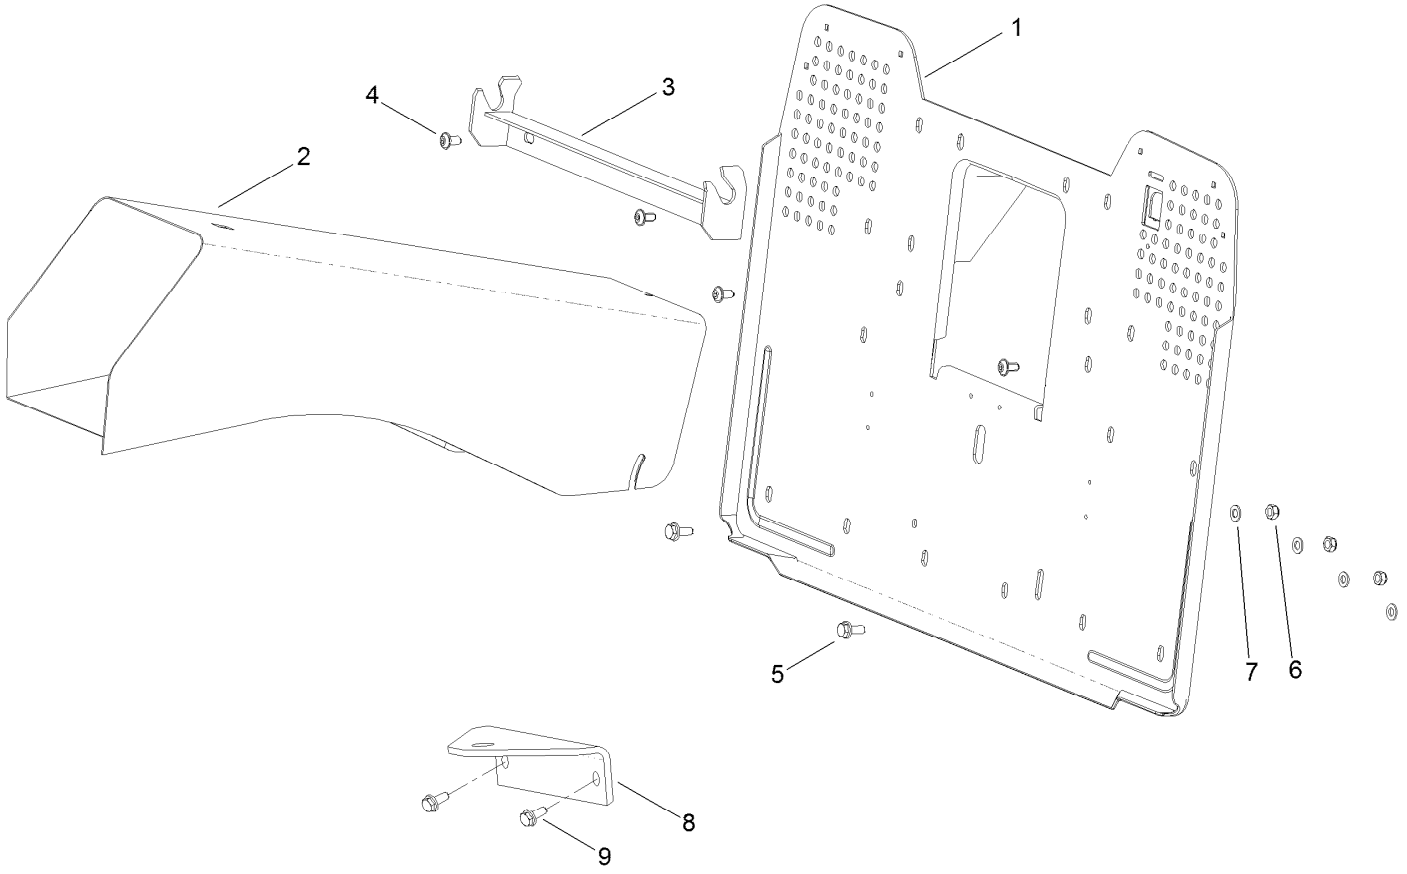

Tunnel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-5480	1	Collector Plate ASM
2	119-5481	1	Tunnel
3	119-5482	1	Support-Collector
4	104-3060	4	Bolt-Carriage
5	119-5483	2	Screw
6	33024-00	4	Nut-Lock, NI
7	33094-00	4	Washer-Plain
8	119-5516	1	Hitch-Tow
9	33104-025	2	Screw-HHF

Mulch Plug Assembly

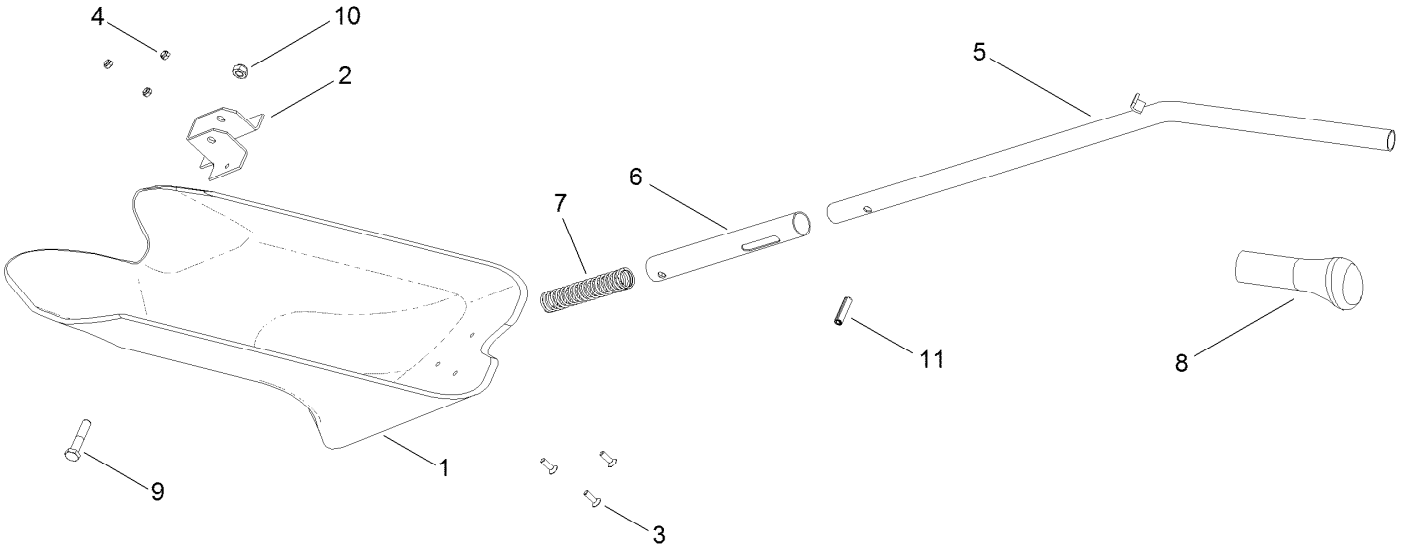

Mulch Plug Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-8732	1	Shield-Mulching
2	120-8733	1	Bracket-Shield, Mulching
3	120-8775	3	Screw
4	87-5140	3	Nut-Lock
5	120-8734	1	Handle-Mulching, Top
6	120-8735	1	Handle-Mulching, Bottom
7	120-8736	1	Spring, Mulching
8	120-8737	1	Handle-Mulching
9	33114-040	2	Screw-HH
10	33024-00	1	Nut-Lock, NI
11	121-0964	1	Pin-Spiral

Attachments and Accessories

For 74560 DH 140 Lawn Tractor

Product Name	Model/Part
Rear Discharge Chute Kit	117-0054
Belt Guard Kit	120-1180

Notes:

Notes:

Notes:



Count on it.