Form No. 3375-553 Rev B

TORO®

Count on it.

Parts Catalog

Z Master® Commercial 2000 Series Riding Mower

with 52in TURBO FORCE® Side Discharge Mower

Model No. 74143—Serial No. 313000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3375-553 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Frame and Caster Wheel Assembly 4
Roll-Over Protection System Assembly No. 116-0231 5
Fork and Caster Wheel Assembly 6
Hydro Drive System Assembly 7
RH Transaxle Assembly No. 117-2610 8
LH Transaxle Assembly No. 117-2611 10
Hydro Idler Arm Assembly 12
Fuel Tank and Hose Assembly 13
Seat Mounting Assembly 14
Seat Assembly No. 120-7886 15
Motion Control Assembly 16
Parking Brake Assembly 17
Engine, Muffler and Control Panel Assembly 18
Deck Lift Assembly 20
Height-of-Cut Assembly No. 120-2530 21
Deck Assembly 22
Deck Decal Assembly No. 120-2351 24
Deflector Assembly No. 120-2451 25
Idler Assembly 26
Electrical Assembly 27
Attachments and Accessories 28

© 2014—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

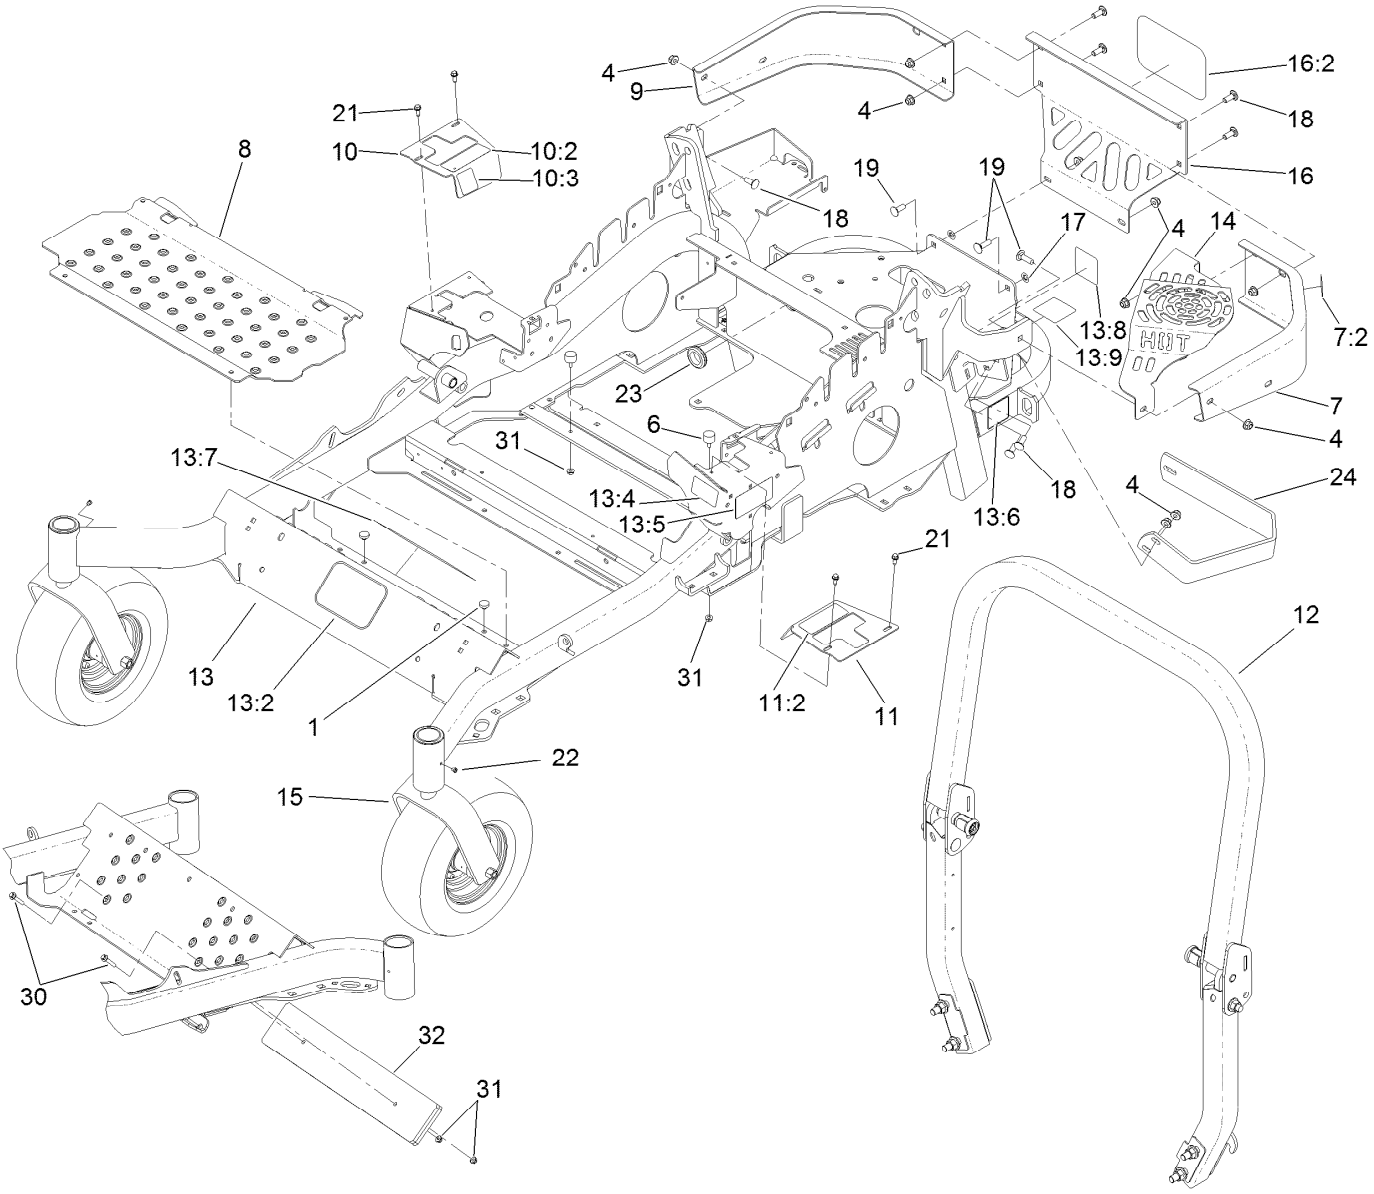


Frame and Caster Wheel Assembly

Ref.	Part Number	Qty.	Description
1	1-513658	2	Bumper
4	104-8301	10	Nut-Flange, NI
6	116-6380	2	Bumper-Rubber (W/ Stud)
7	109-9869	1	Bumper-Rear, LH
7:2	103-2076	1	Decal-Caution
8	116-8898-01	1	Floorpan
9	116-0508-03	1	Bumper-Rear, RH
10	120-3280	1	Cover ASM-Motion Control
10:2	109-7232	1	Decal-Motion Control
10:3	116-5944	1	Decal-Park Brake
11	120-3279	1	Cover ASM-Motion Control
11:2	109-7232	1	Decal-Motion Control
12	116-0231	1	ROPS ASM
13	117-8581	1	Frame ASM
13:2	68-3640	1	Decal
13:4	116-1654	1	Decal-Fuel Fill
13:5	120-5891	2	Decal
13:6	116-0205	2	Decal-Belt Drive

Ref.	Part Number	Qty.	Description
13:7	116-3303	1	Decal-Slope
13:8	116-4858	1	Decal-Spark Arrester
13:9	117-1158	2	Decal-Bypass
14	120-7896-03	1	Guard-Muffler
15		2	Front Caster W/Fork ASM ●
16	119-2691	1	Rear Guard ASM
16:2	67-7320	1	Decal
17	107-3154	2	Nut-Push
18	3231-22	7	Screw-CARR
19	3231-25	3	Bolt-CARR
21	32144-10	4	Screw-HWH
22	1-811010	2	Plug
23	120-3265	1	Grommet
24	119-2607-03	1	Guard-Muffler, Side
30	3234-21	2	Screw-HHF
31	104-7201	4	Nut-HF
32	121-4773-01	2	Weight


● Not serviced separately

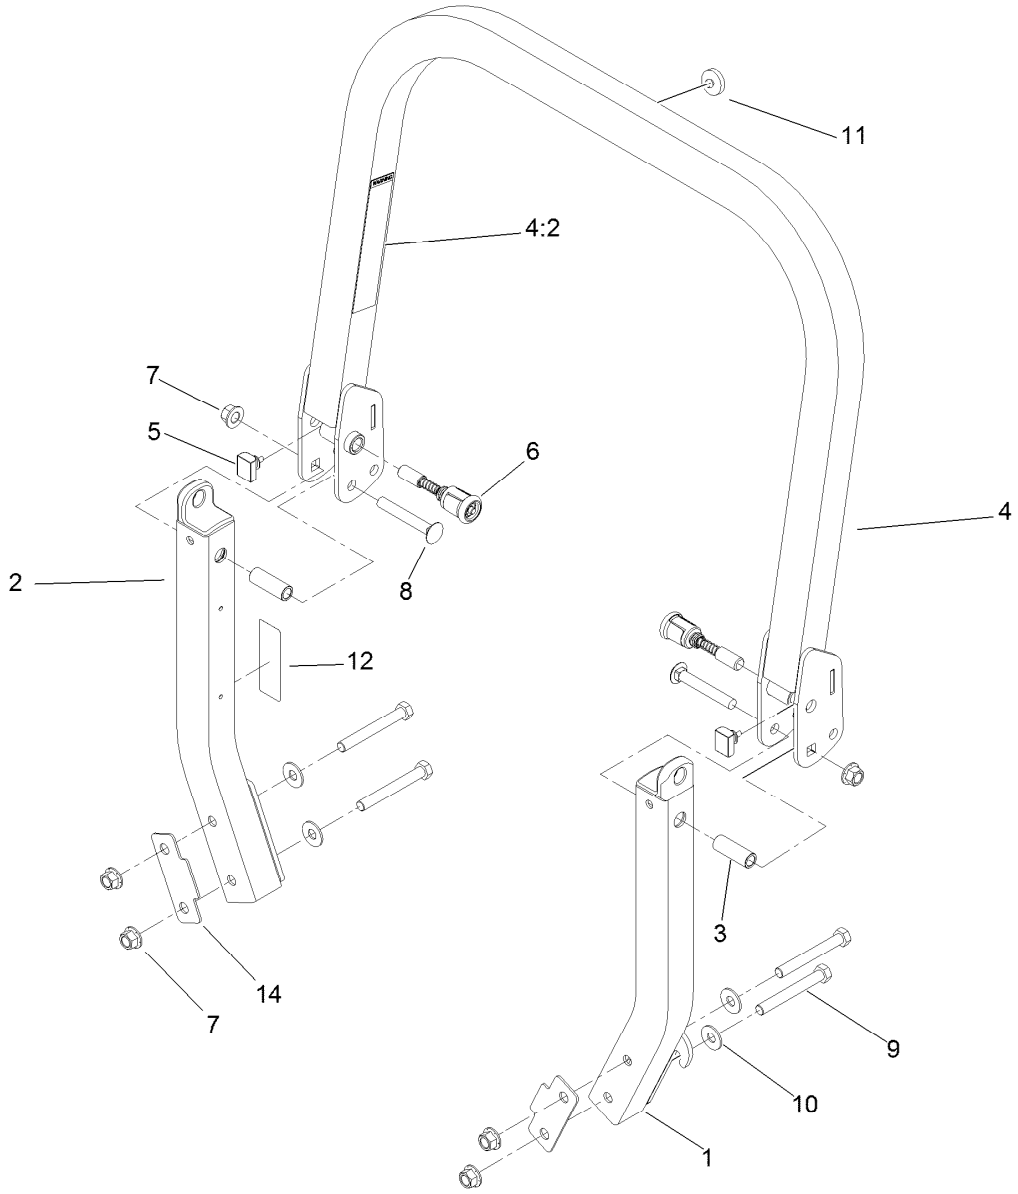

Roll-Over Protection System Assembly No. 116-0231

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-2102	1	Decal-Warning, Folding ROPS
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-17	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	116-0090	1	Decal-Caution
14	116-0960	2	Spacer

● Not serviced separately

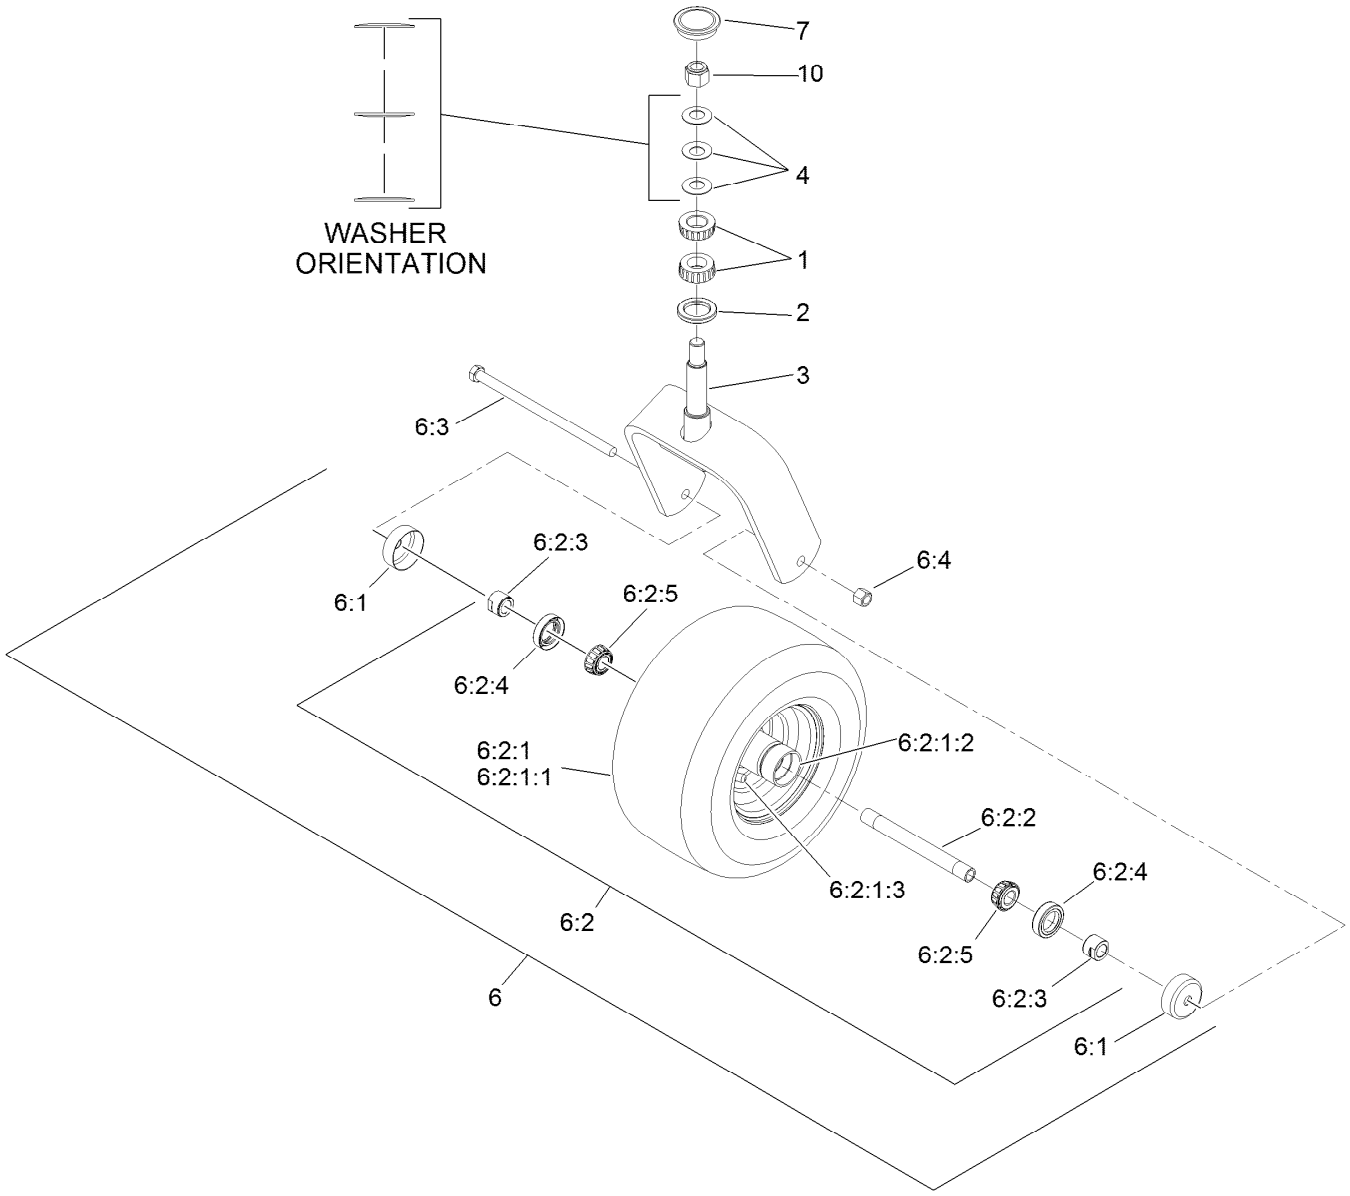


Fork and Caster Wheel Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	116-6707-01	1	Caster
4	1-633508	3	Washer-Bellville
6	117-0361	1	Castor Wheel ASM
6:1	103-2768	2	Guard-Seal
6:2		1	Wheel ASM ●
6:2:1		1	Wheel And Tire ASM ●
6:2:1:1	1-523009	1	Tire
6:2:1:2	1-633584	2	Bearing-Cup

Ref.	*Part Number*	*Qty.*	*Description*
6:2:1:3	5108	1	Valve
6:2:2	103-5156	1	Axle-Caster
6:2:3	103-3051	2	Spacer-Nut
6:2:4	103-0063	2	Seal-Caster
6:2:5	1-633585	2	Bearing-Cone, Taper
6:3	325-39	1	Screw-HH
6:4	3296-23	1	Nut-Lock, NI
7	103-4882	1	Cap-Grease
10	3296-51	1	Nut-Lock, NI

● Not serviced separately

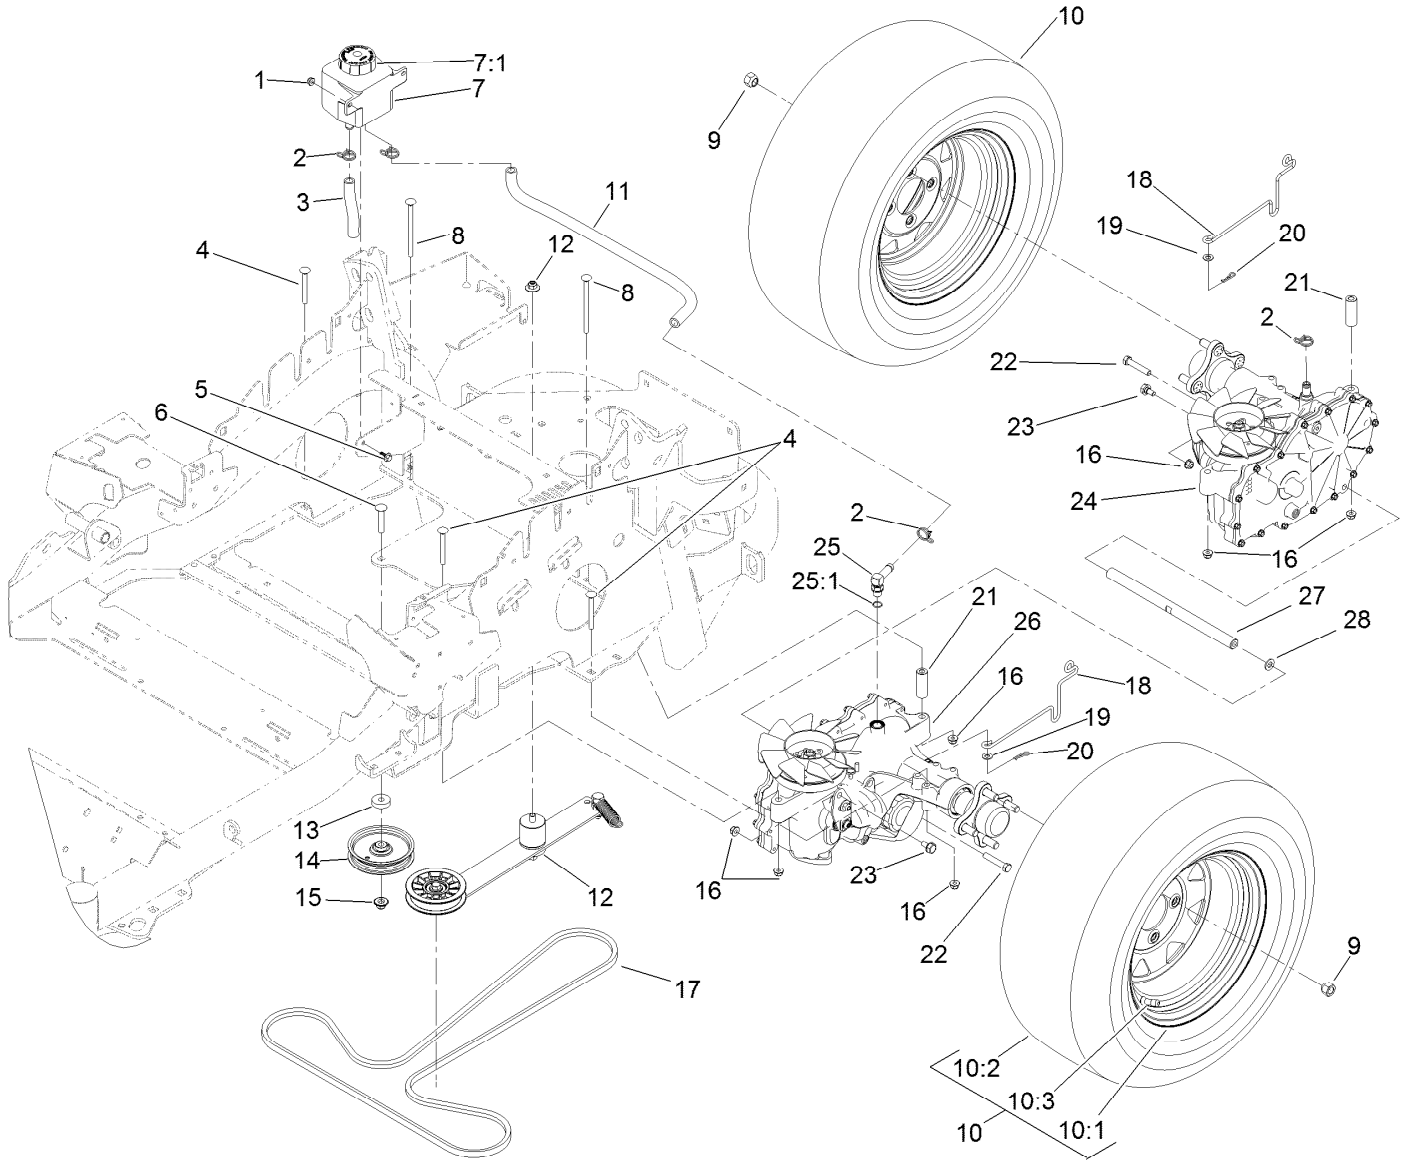


Hydro Drive System Assembly

Ref.	Part Number	Qty.	Description
1	104-7201	2	Nut-HF
2	117-1193	4	Clamp-Hose
3	119-2642	1	Hose-HYD
4	3230-9	6	Screw-CARR
5	99-6810	2	Screw-HHF
6	117-9971	1	Bolt-Carriage
7	109-2250	1	Vent-Tank, Hydro
7:1	109-3320	1	Cap-Reservoir, HYD
8	3230-30	2	Screw-CARR
9	242-50	8	Nut-Lug
10	119-2675	2	Wheel And Tire ASM
10:1	120-3273	1	Wheel
10:2	120-3270	1	Tire
10:3	232-27	1	Stem-Valve
11	119-2689	1	Hose-HYD
12		1	Hydro Idler Arm ASM ●
13	105-7788	1	Spacer

Ref.	Part Number	Qty.	Description
14	93-1622	1	Pulley-Idler
15	109-6658	1	Nut-Flange, NI
16	104-8300	10	Nut-Flange, NI
17	114860	1	Belt-V
18	115-4990	2	Rod-Bypass
19	3256-23	2	Washer-Flat
20	1-806003	2	Pin-Cotter, Hair
21	109-3652	2	Spacer-Hydro
22	94-7972	2	Screw-HH W/Loctite
23	37-8771	2	Bolt-Shoulder
24	117-2610	1	RH Transaxle ASM
25	109-6449	1	Fitting-Elbow, 90
25:1	237-42	1	O-Ring
26	117-2611	1	LH Transaxle ASM
27	117-8585	1	Shaft-Cross, Hydro
28	3256-24	1	Washer-Flat

● Not serviced separately

RH Transaxle Assembly No. 117-2610

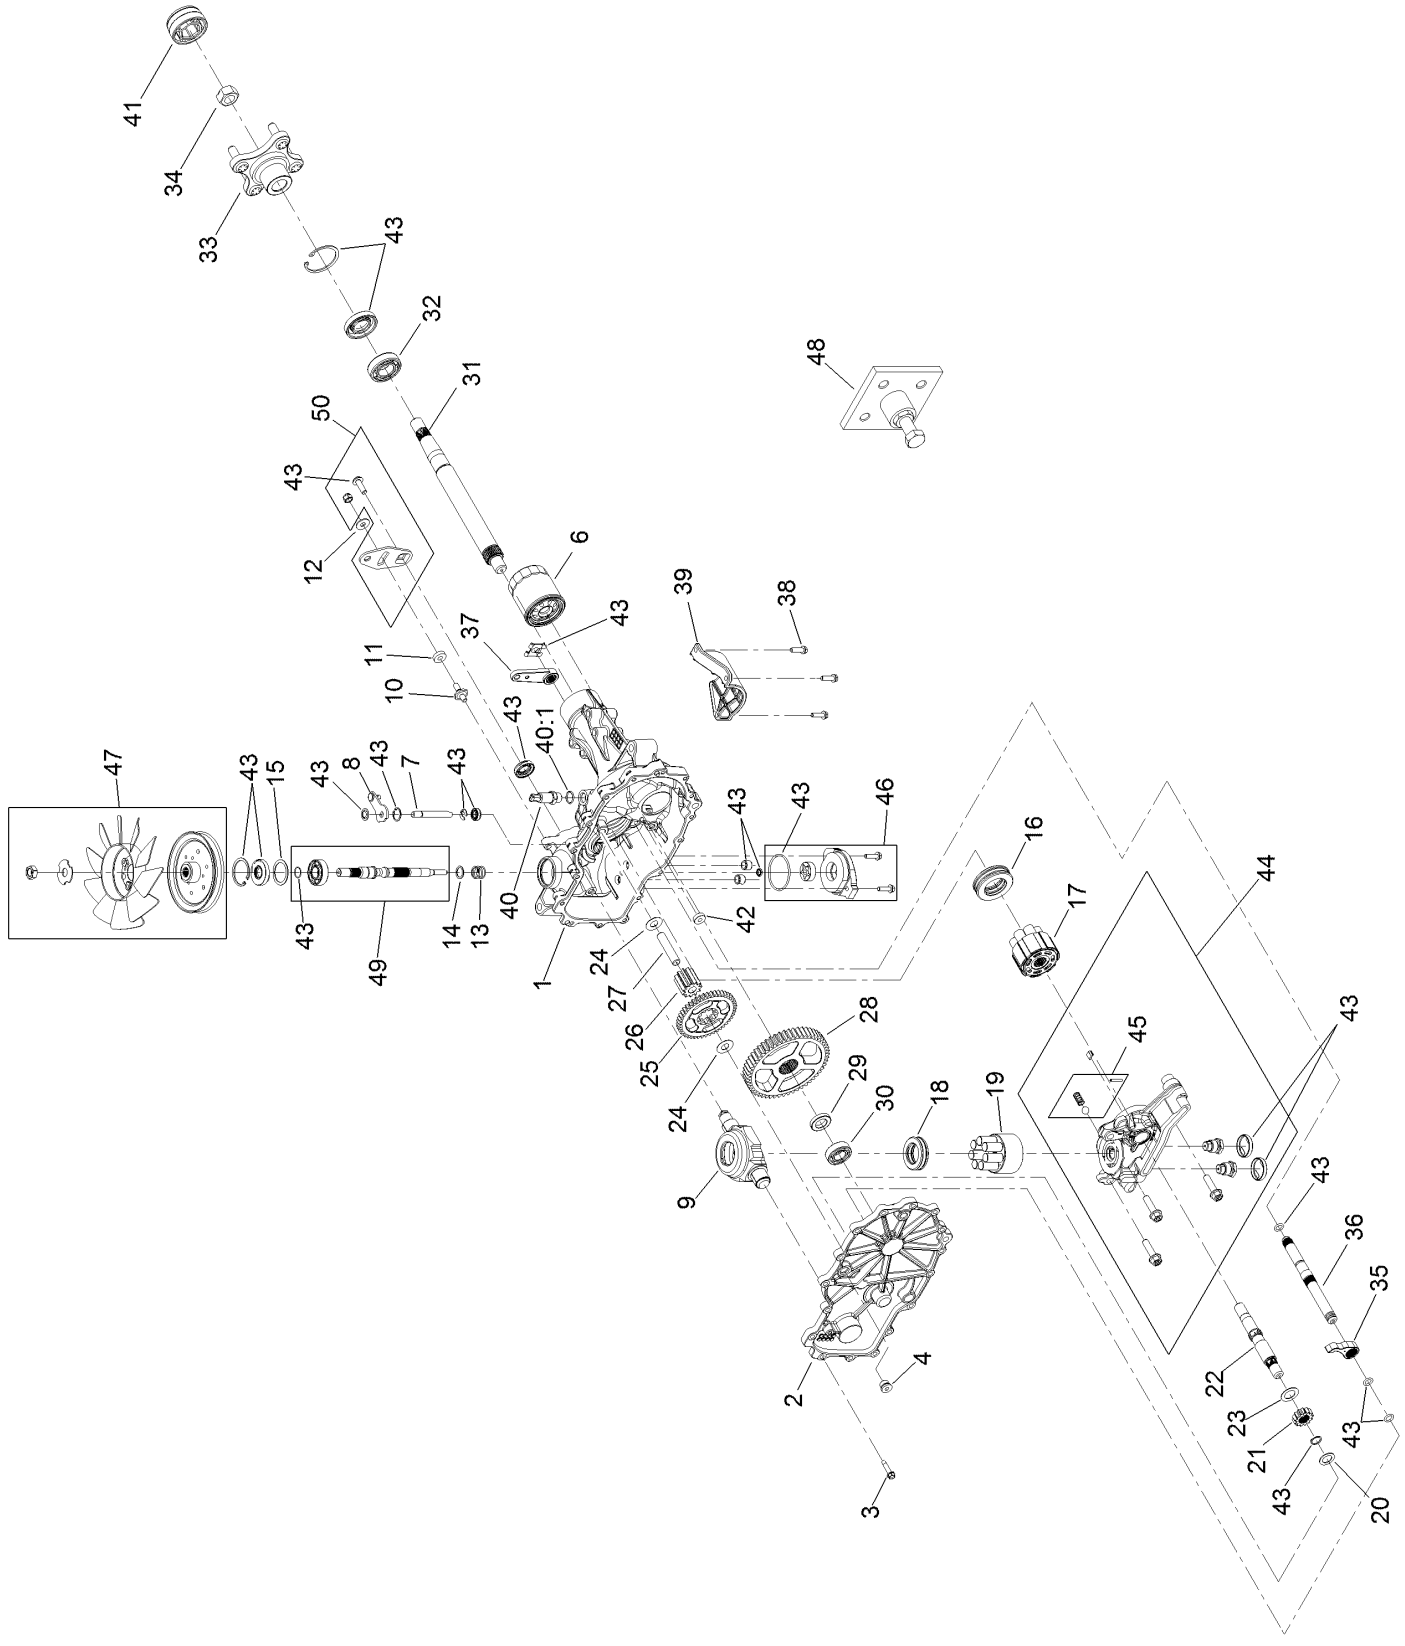


RH Transaxle Assembly No. 117-2610 (continued)

Ref.	Part Number	Qty.	Description
1	121-3231	1	RH Main Housing Kit
2	121-3232	1	RH Side Cover Kit
3	117-5359	16	Screw-HHF
4	104-2189	1	Plug-Thread, Straight
5	104-2147	1	Sealant ●
6	109-3321	1	Element-Oil Filter, HYD
7	114-1685	1	Rod-Bypass
8	107-2490	1	Arm-Bypass
9	104-5304	1	Swashplate-Trunnion
10	104-2116	1	Stud
11	112-9853	1	Puck-Friction
12	114-8491	1	Washer
13	120-5537	1	Spring-Compression
14	120-5538	1	Washer
15	104-5308	1	Spacer
16	109-2865	1	Bearing-Thrust
17	114-1689	1	Motor Cylinder Block Kit
18	121-3235	1	Bearing-Thrust, Plastic Cage
19	121-3236	1	7 Piston Block ASM
20	104-5339	1	Washer-Flat
21	120-7972	1	Gear-13T
22	114-1691	1	Shaft-Motor
23	104-5360	1	Washer
24	94-1933	2	Washer
25	120-7973	1	Gear-46T
26	120-7974	1	Gear-11T
27	104-5329	1	Pin-Jackshaft
28	121-3237	1	Gear-54T
29	120-7975	1	Spacer
30	114-1696	1	Bearing-Ball
31	121-3238	1	Shaft-Axle
32	104-2143	1	Bearing-Ball
33	109-5939	1	Hub Kit
34	109-3536	1	Nut-Hub
35	114-1697	1	Pawl-Brake
36	120-7977	1	Brake Shaft Kit
37	125-0021	1	Handle-Brake
38	121-3242	3	Screw-HF
39	120-7981	1	Guard-Filter, RH
40	109-3278	1	Adapter-Straight
40:1	1-603921	1	O-Ring
41	115-5057	1	Cover-Nut, Axle
42	104-5330	1	Magnet-Ring
43	121-3243	1	Seal Kit
44	121-3244	1	RH Center Section Kit
45	114-8464	1	Charge Relief Kit
46	121-3246	1	Charge Pump Kit
47	121-3247	1	Fan And Pulley Kit
48	114-8467	1	Hub-Puller, 4 Bolt
49	121-3248	1	Input Shaft Kit
50	117-5362	1	Arm Control Kit

● Not illustrated


LH Transaxle Assembly No. 117-2611

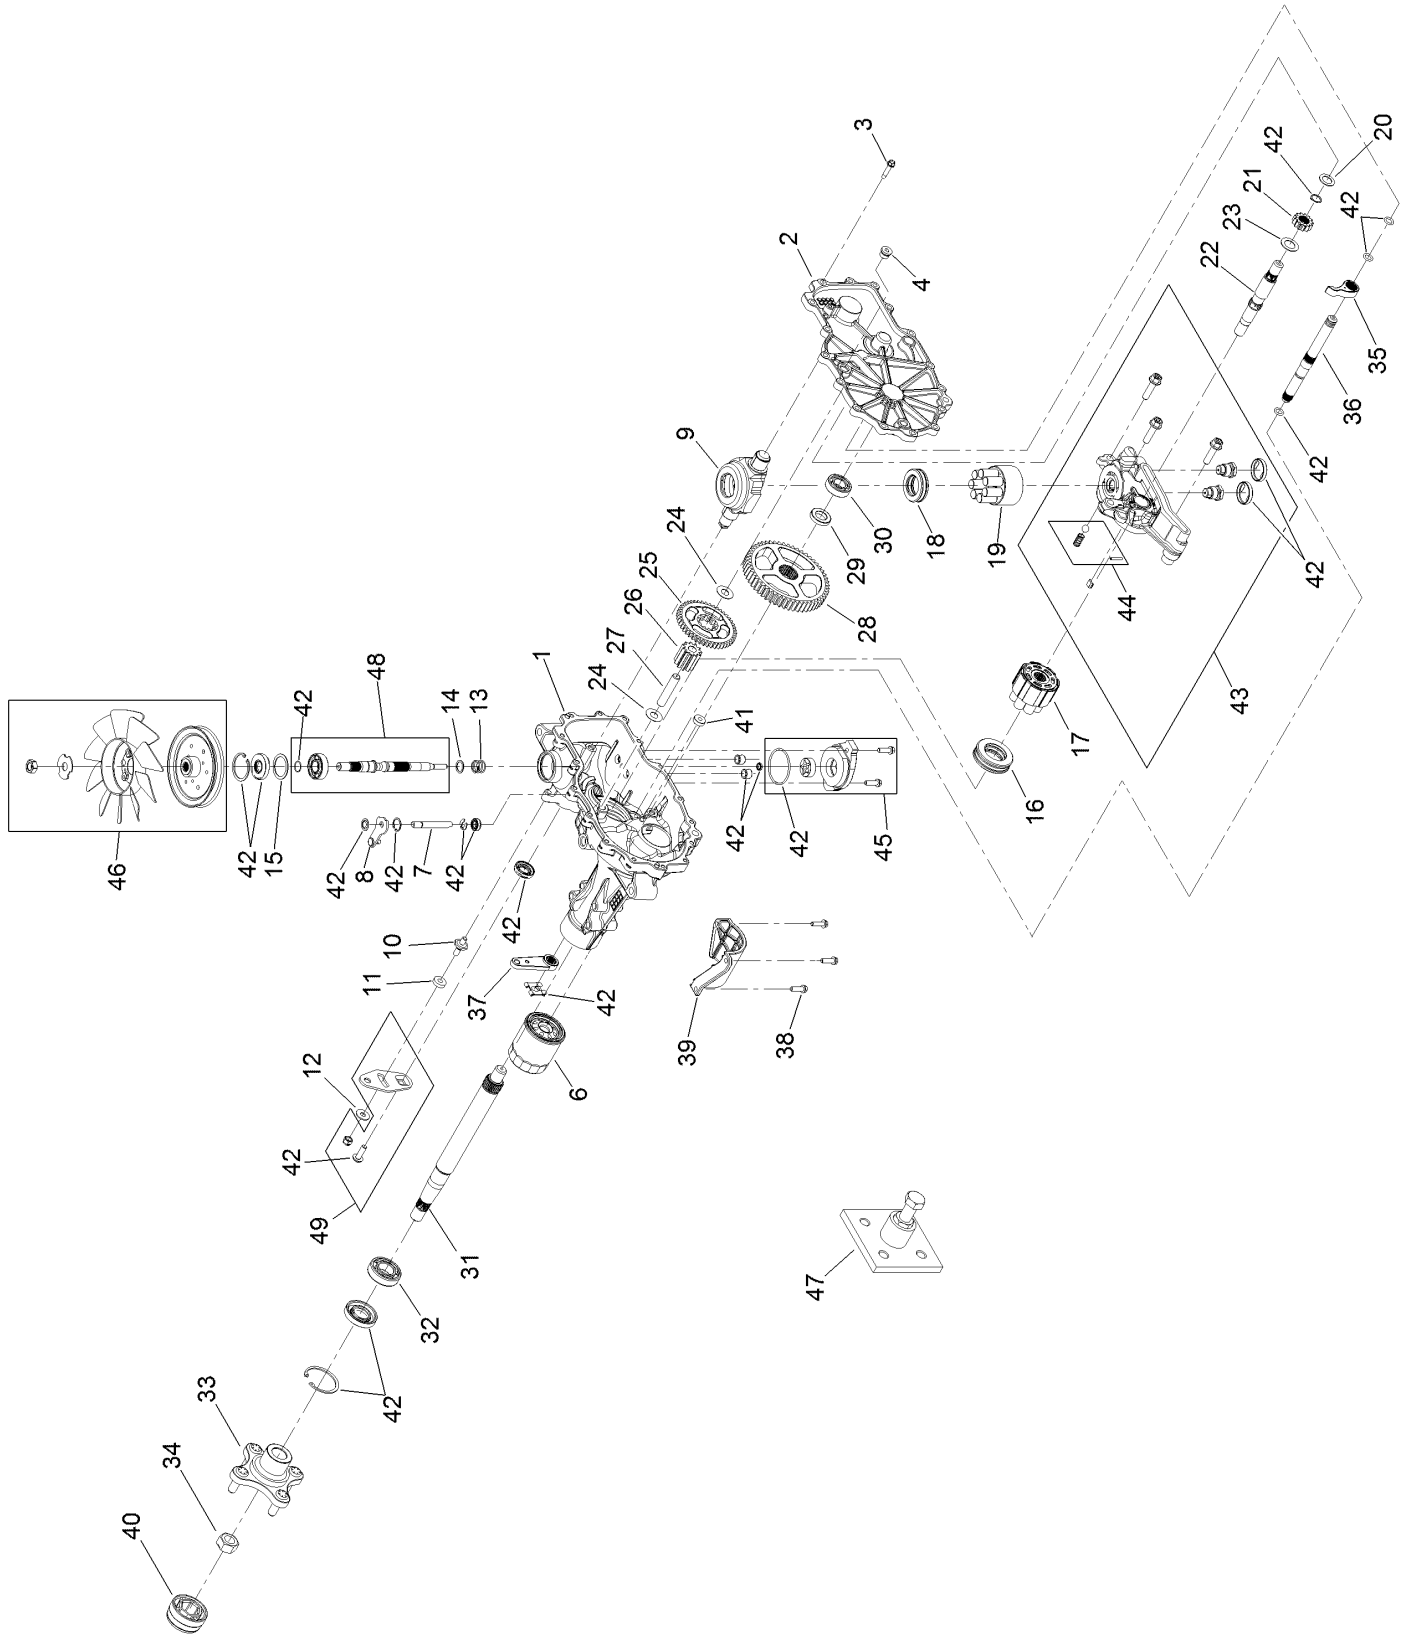

LH Transaxle Assembly No. 117-2611 (continued)


Ref.	Part Number	Qty.	Description
1	121-3233	1	LH Main Housing Kit
2	121-3234	1	LH Side Cover Kit
3	117-5359	16	Screw-HHF
4	104-2189	1	Plug-Thread, Straight
5	104-2147	1	Sealant ●
6	109-3321	1	Element-Oil Filter, HYD
7	114-1685	1	Rod-Bypass
8	107-2490	1	Arm-Bypass
9	104-5304	1	Swashplate-Trunnion
10	104-2116	1	Stud
11	112-9853	1	Puck-Friction
12	114-8491	1	Washer
13	120-5537	1	Spring-Compression
14	120-5538	1	Washer
15	104-5308	1	Spacer
16	109-2865	1	Bearing-Thrust
17	114-1689	1	Motor Cylinder Block Kit
18	121-3235	1	Bearing-Thrust, Plastic Cage
19	121-3236	1	7 Piston Block ASM
20	104-5339	1	Washer-Flat
21	120-7972	1	Gear-13T
22	114-1691	1	Shaft-Motor
23	104-5360	1	Washer
24	94-1933	2	Washer
25	120-7973	1	Gear-46T
26	120-7974	1	Gear-11T
27	104-5329	1	Pin-Jackshaft
28	121-3237	1	Gear-54T
29	120-7975	1	Spacer
30	114-1696	1	Bearing-Ball
31	121-3238	1	Shaft-Axle
32	104-2143	1	Bearing-Ball
33	109-5939	1	Hub Kit
34	109-3536	1	Nut-Hub
35	114-1697	1	Pawl-Brake
36	114-1698	1	Shaft-Brake, Inboard
37	125-0021	1	Handle-Brake
38	121-3242	3	Screw-HF
39	120-7979	1	Guard-Filter, LH
40	115-5057	1	Cover-Nut, Axle
41	104-5330	1	Magnet-Ring
42	121-3243	1	Seal Kit
43	121-3245	1	LH Center Section Kit
44	114-8464	1	Charge Relief Kit
45	121-3246	1	Charge Pump Kit
46	121-3247	1	Fan And Pulley Kit
47	114-8467	1	Hub-Puller, 4 Bolt
48	121-3248	1	Input Shaft Kit
49	117-5362	1	Arm Control Kit

● Not illustrated

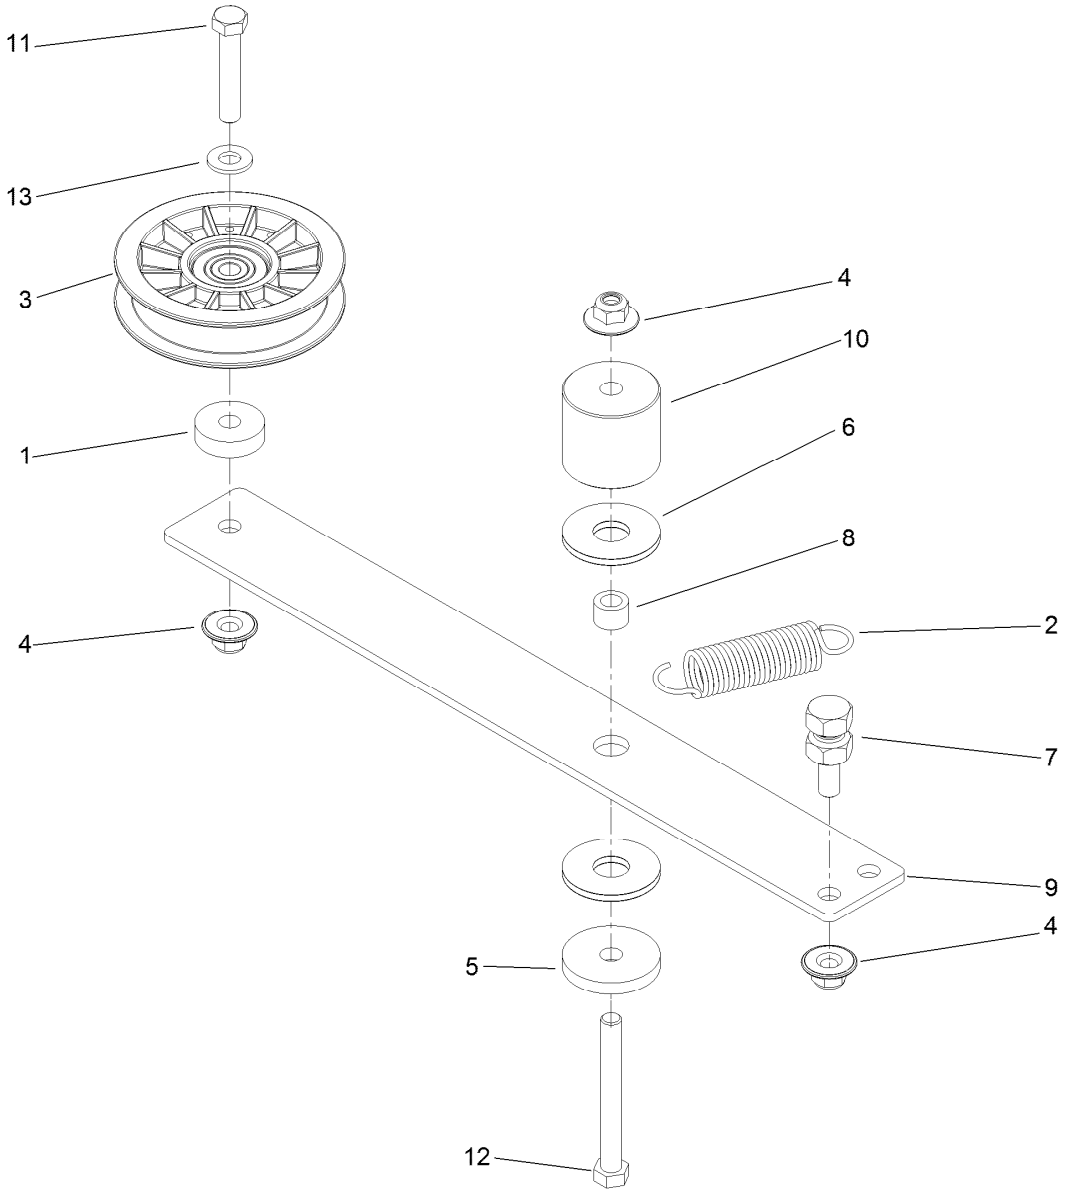


Hydro Idler Arm Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	105-7788	1	Spacer
2	108-4056	1	Spring-Extension
3	109-3397	1	Pulley-Idler, Flat
4	109-6658	3	Nut-Flange, NI
5	110-9981	1	Washer-Plain
6	114-0463	2	Washer-Friction, Composite
7	114-5866	1	Anchor-Spring, Short
8	115-4986	1	Spacer
9	119-9914	1	Arm-Idler, Hydro
10	119-2657	1	Spacer-Plain
11	323-10	1	Screw-HH
12	323-20	1	Screw-HH
13	3256-24	1	Washer-Flat

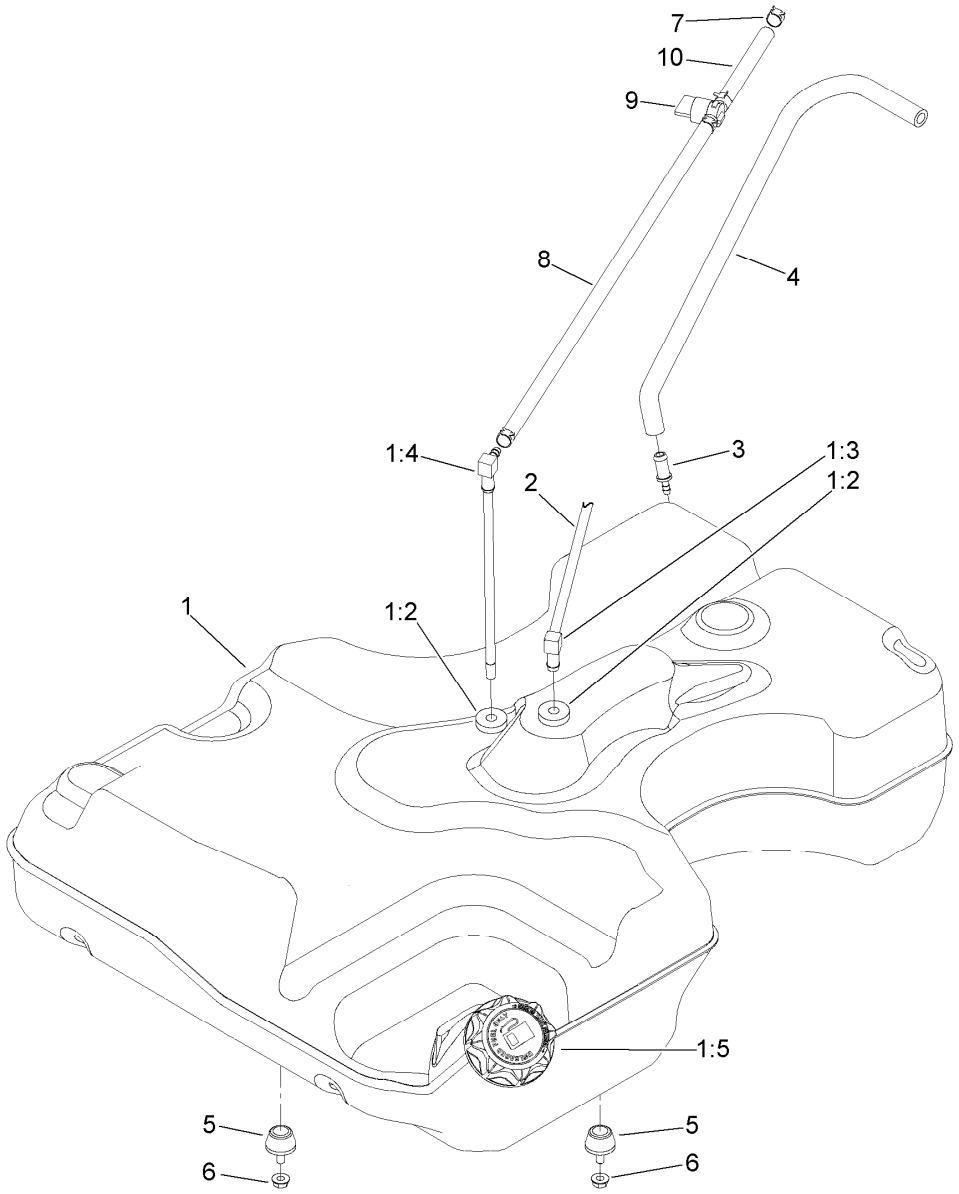


Fuel Tank and Hose Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	125-4765	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	116-2288	1	Fitting-90 Elbow
1:4	125-4767	1	Fuel Line ASM
1:5	116-1704	1	Cap-Fuel, Ratcheting
2	119-6074	1	Hose-Fuel
3	98-2952	1	Fitting-Straight
4	119-8562	1	Hose-Fuel
5	109-2365	2	Bumper-Rubber
6	32128-33	2	Nut-HF
7	2412-98	4	Clamp-Hose
8	110-5701	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	109-0650	1	Hose-Fuel

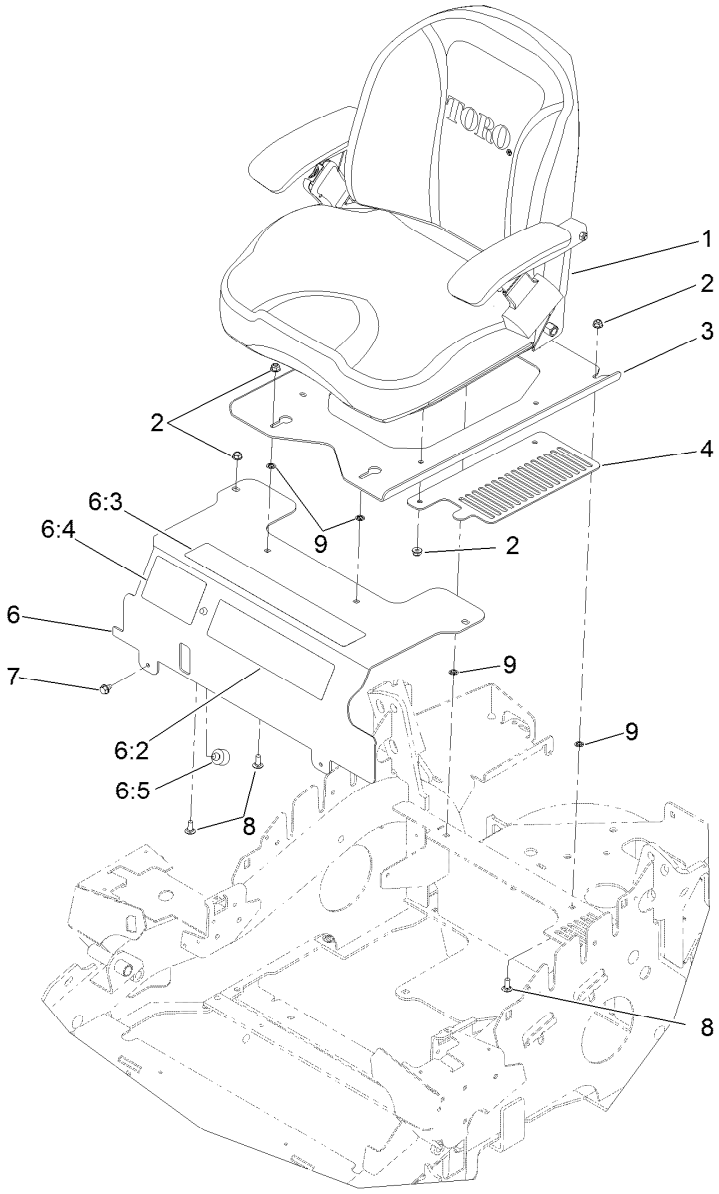


Seat Mounting Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	120-7886	1	Seat
2	104-8300	10	Nut-Flange, NI
3	117-8615-03	1	Plate-Mount, Seat
4	117-8618-03	2	Plate-Cover, Fan
6	119-2597	1	Seat Mount Panel ASM
6:2	114-5878	1	Decal
6:3	109-7069	1	Decal-Console
6:4	121-3223	1	Decal-Service Aid
6:5	120-7893	1	Bumper-Grommet
7	9266934	2	Screw
8	3230-23	6	Screw-CARR
9	117-2749	4	Nut-Push

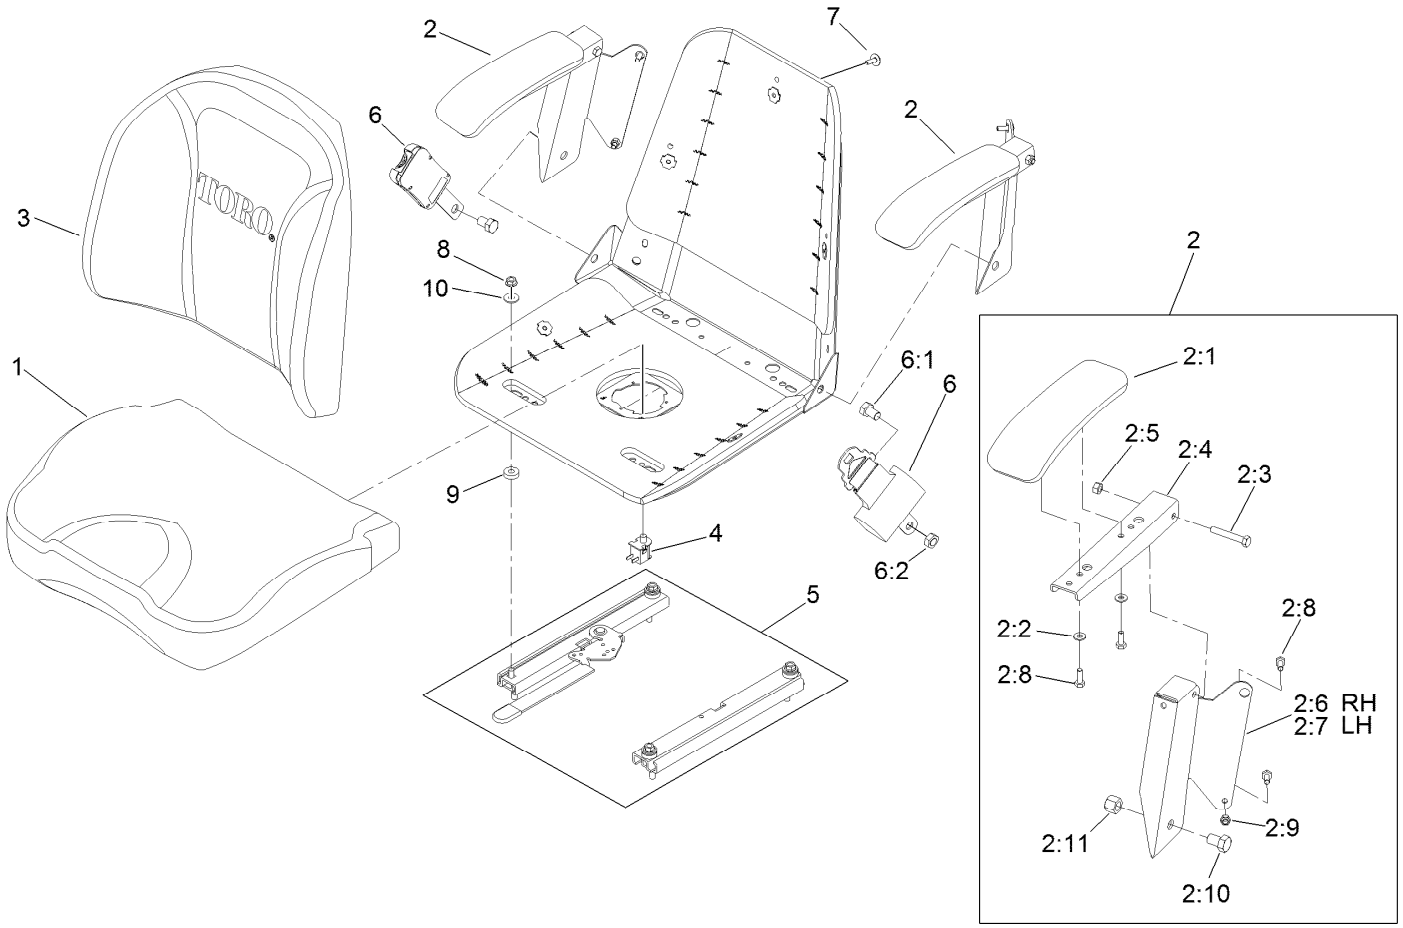


Seat Assembly No. 120-7886

Ref.	Part Number	Qty.	Description
1	121-4751	1	Cushion-Seat, Bottom
2	110-5719	1	Armrest Kit
2:1	110-4163	2	Cushion-Rest, Arm
2:2	3256-22	4	Washer-Flat
2:3	322-10	2	Screw-HH
2:4	105-3623	2	Channel-Armrest
2:5	32153-3	2	Nut-Hex, Side Deform
2:6	105-3621	1	Bracket-Armrest, RH
2:7	105-3622	1	Bracket-Armrest, LH
2:8	321-30	8	Screw-HH
2:9	3296-42	4	Nut-Lock, NI
2:10	325-2	2	Screw-HH
2:11	3296-23	2	Nut-Lock, NI
3	121-4752	1	Cushion-Seat, Back
4	82-2190	1	Switch-Bail
5	121-4754	1	Track-Seat
6	116-2981	1	Seat Belt Kit
6:1	325-2	2	Screw-HH
6:2	3296-23	2	Nut-Lock, NI
7	103-8383	7	Bolt-Seat
8	32128-20	4	Nut-HF
9	26-4840	8	Spacer-Pin, Mounting
10	3256-3	6	Washer-Flat

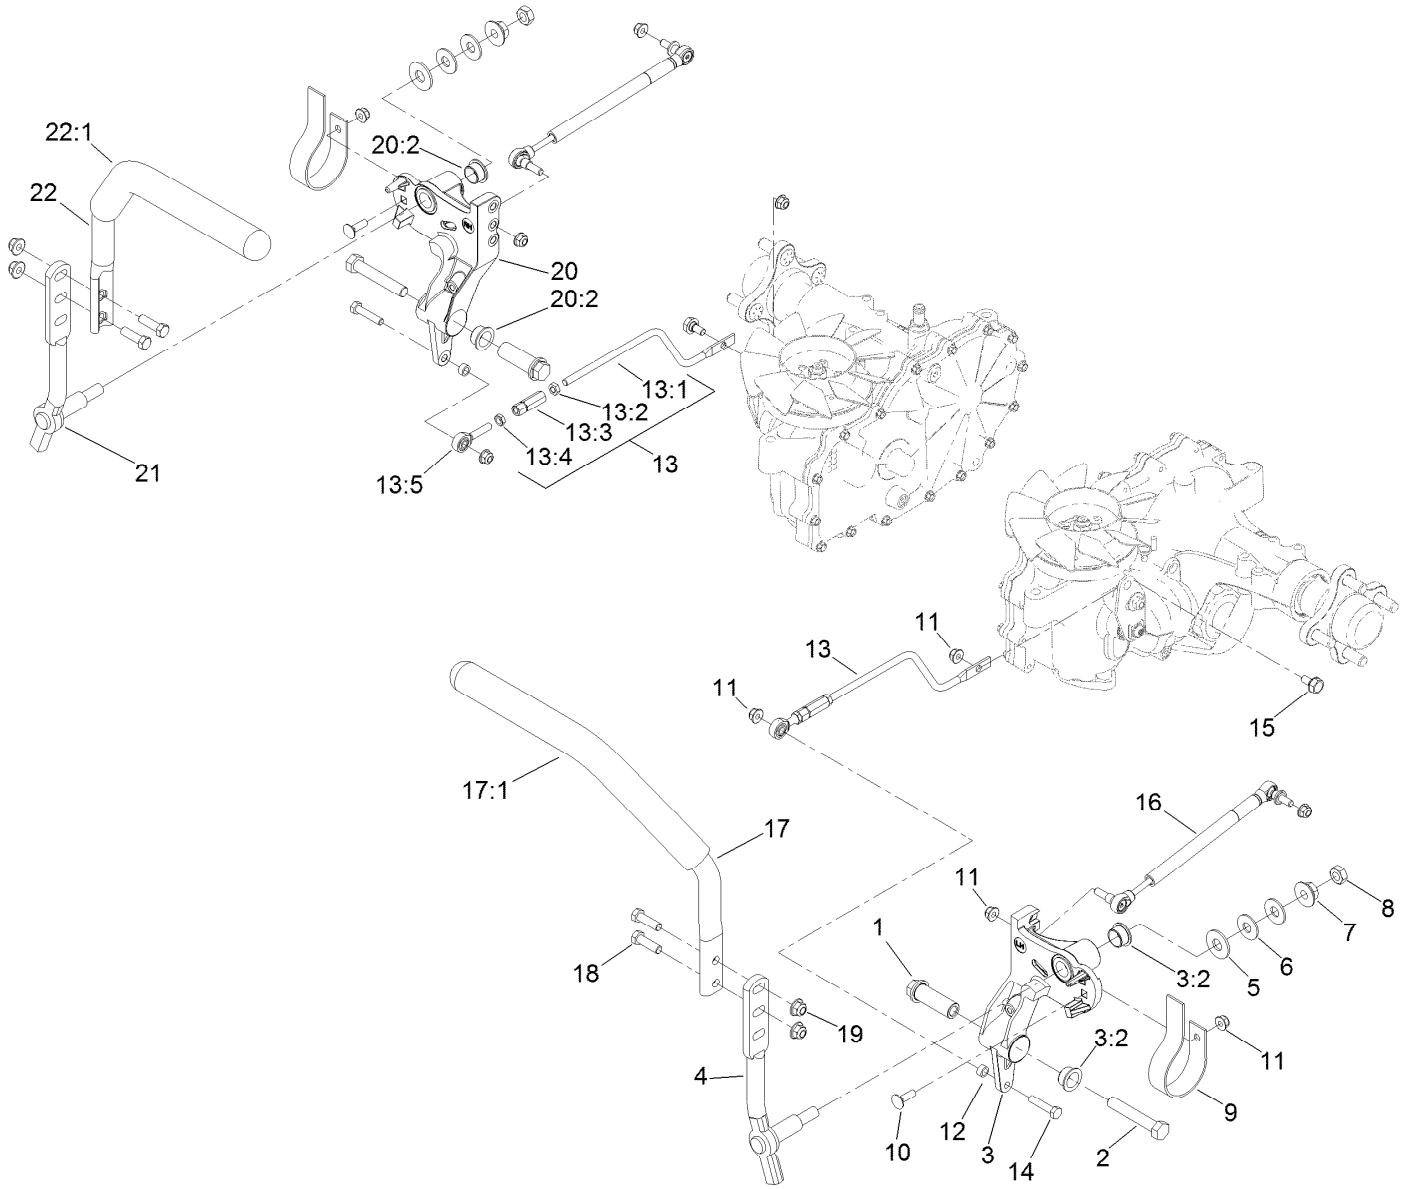

Motion Control Assembly


Ref.	Part Number	Qty.	Description
1	109-5891	2	Hub-Threaded
2	325-12	2	Screw-HH
3	116-0881	1	LH Motion Control And Bushing ASM
3:2	109-8054	4	Bushing-Flange
4	116-0040	1	Lever-Control Motion, LH
5	3256-6	2	Washer-Flat
6	109-9505	4	Washer-Spring
7	32128-56	2	Nut-HF
8	3218-5	2	Nut-Jam
9	109-5575	2	Spring-Leaf
10	3230-2	2	Bolt-CARR
11	104-8300	10	Nut-Flange, NI
12	92-6998	2	Spacer-Yoke, Right
13	119-2605	2	Hydro Control Rod ASM
13:1	119-2606	1	Rod-Control, Hydro
13:2	3220-2	1	Nut-Jam
13:3	109-3728	1	Nut-Rod Adjustment
13:4	3220-20	1	Nut-Jam
13:5	2411-53	1	Bearing-Rod End, LH
14	322-7	2	Screw-HH
15	37-8771	2	Bolt-Shoulder
16	116-0027	2	Damper-Control, Motion
17	109-6590	1	LH Steering Handle ASM
17:1	109-5668	1	Grip-Control, Lever
18	323-7	4	Screw-HH
19	104-8301	4	Nut-Flange, NI
20	116-0880	1	RH Motion Control And Bushing ASM
20:2	109-8054	4	Bushing-Flange
21	116-0039	1	Lever-Control Motion, RH
22	109-6589	1	RH Steering Handle ASM
22:1	109-5668	1	Grip-Control, Lever

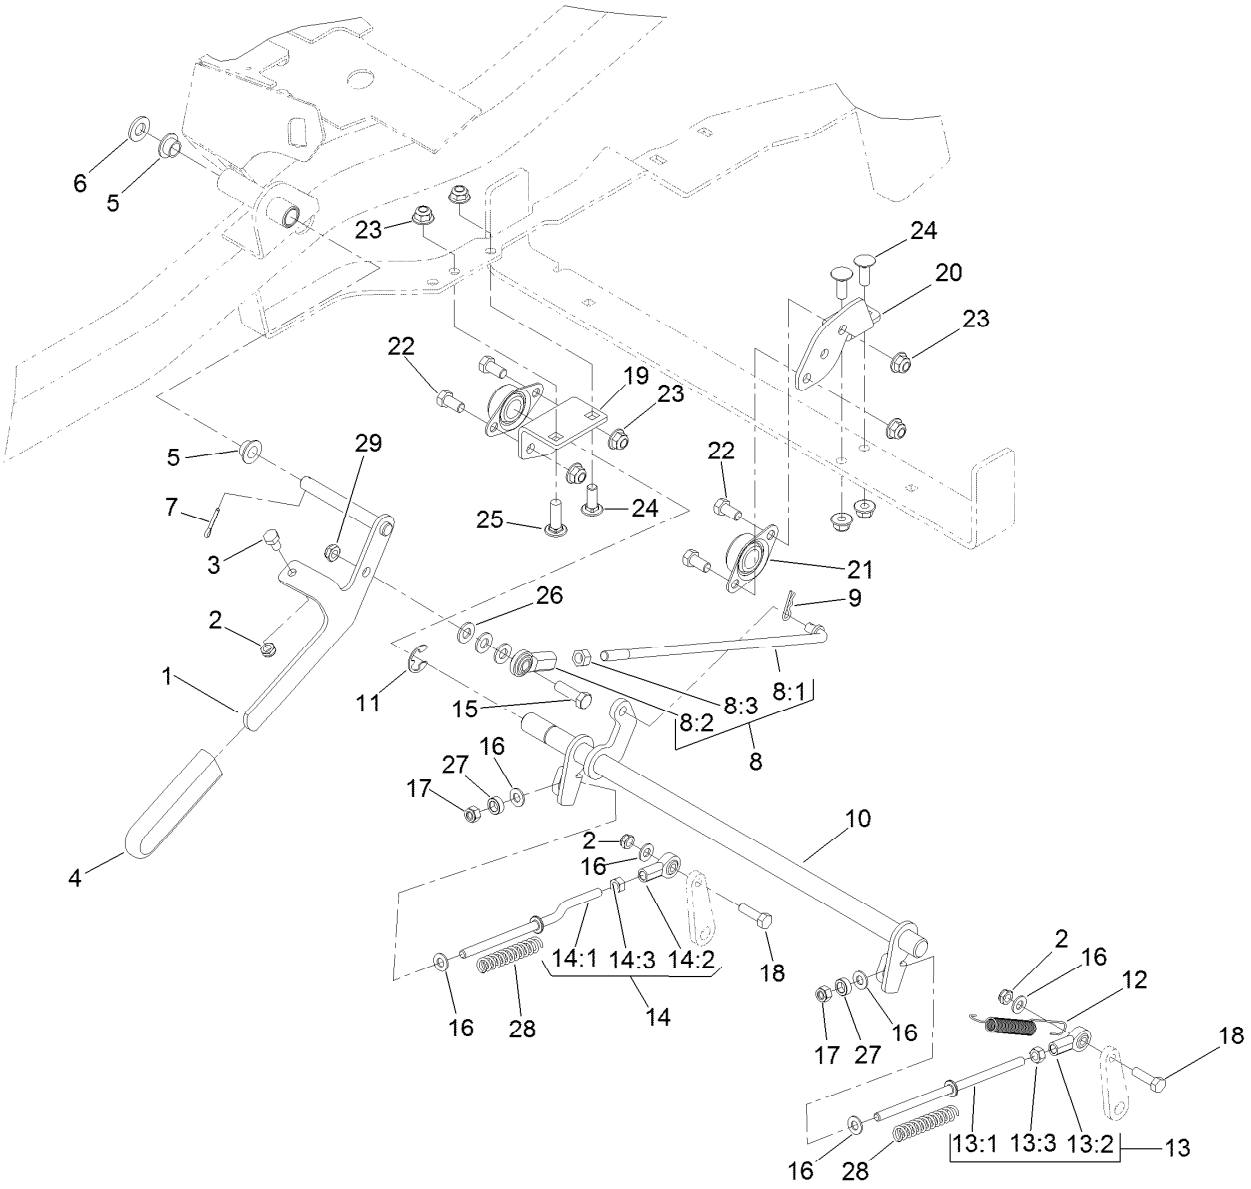

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	121-4766-03	1	Handle-Brake
2	3296-47	3	Nut-Lock, NI
3	322-1	1	Screw-HH
4	1-633268	1	Grip-Lever
5	1-513140	2	Bearing-Control
6	106-9888	1	Washer-Flat
7	3272-10	1	Pin-Cotter
8	121-4807	1	Brake Link ASM
8:1	121-4795	1	Rod-Link, Brake
8:2	103-0608	1	Joint-Ball, End
8:3	3219-3	1	Nut-Hex
9	3290-307	3	Pin-Hair
10	121-4804-03	1	Shaft-Brake
11	32151-48	1	E-Ring
12	110769	1	Spring-Extension
13	121-4805	1	LH Brake Rod ASM
13:1	121-4755	1	Rod-Brake
13:2	1-543017	1	Balljoint-RH
13:3	3219-2	1	Nut-Hex

Ref.	Part Number	Qty.	Description
14	121-4806	1	RH Brake Rod ASM
14:1	121-4770	1	Rod-Brake
14:2	1-543017	1	Balljoint-RH
14:3	3219-2	1	Nut-Hex
15	323-7	1	Screw-HH
16	3256-23	6	Washer-Flat
17	3296-4	2	Nut-Lock
18	322-16	2	Screw-HH
19	121-4761-01	1	Bracket-Shaft Mount, RH
20	121-4793-01	1	Bracket-Shaft Mount, LH
21	1-633102	2	Bearing-Flange, Side
22	323-4	4	Screw-HH
23	104-8301	8	Nut-Flange, NI
24	3231-22	3	Screw-CARR
25	3231-28	1	Screw-CARR
26	3256-24	3	Washer-Flat
27	103-5677	2	Spacer
28	1-603807	2	Spring-Return, Neutral
29	3296-59	1	Nut-Lock, NI

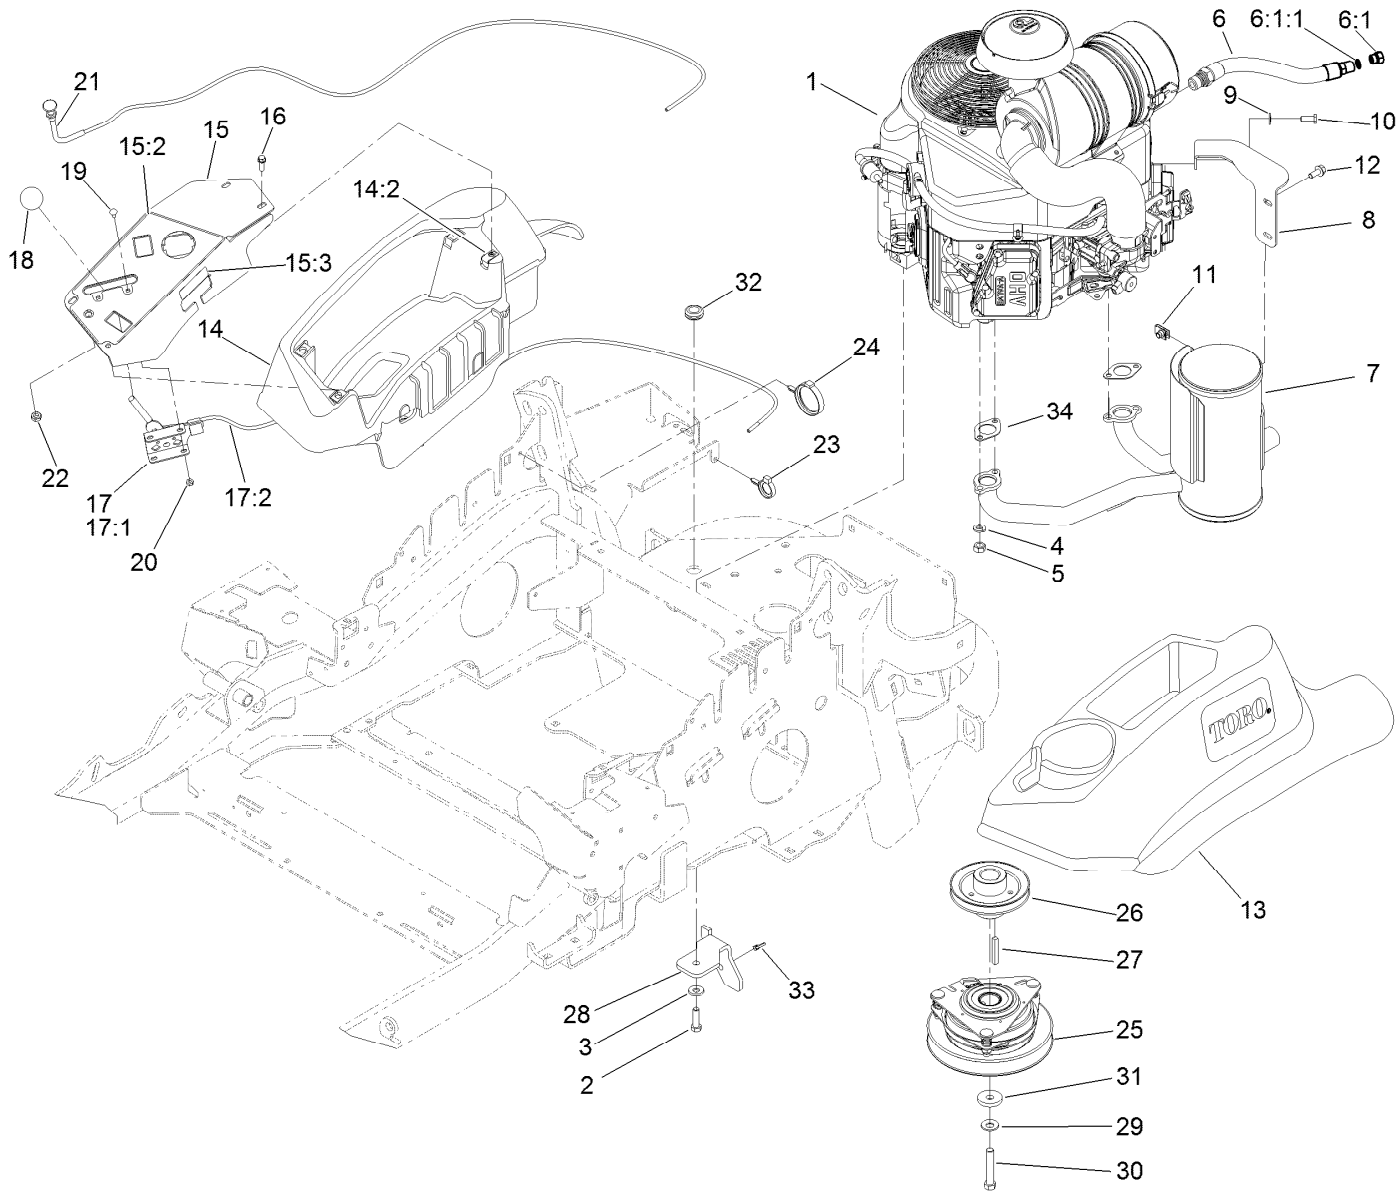


Engine, Muffler and Control Panel Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawaski, Fx691 ●■
2	323-7	4	Screw-HH
3	98-5975	4	Washer-Belleville
4	114-3550	4	Washer-Lock, Spring
5	114-3549	4	Nut
6	116-4924	1	Engine Oil Drain Hose ASM
6:1	353-508	1	Plug-HH
6:1:1	237-42	1	O-Ring
7	119-2645	1	Muffler
8	119-2659	1	Bracket-Muffler
9	1-303334	1	Washer-Spring
10	33114-020	1	Screw-HH
11	94-2413	2	U-Nut
12	3234-5	2	Screw-HHF
13	119-2602	1	LH Console ASM
14	119-2603	1	RH Console ASM
14:2	107069	4	Clip
15	119-2694	1	Control Panel ASM
15:2	119-2501	1	Decal-Panel, Control
15:3	114-4466	1	Decal-Fuses
16	32105-15	4	Screw-HWH
17	110-5727	1	Throttle Control ASM
17:1	112-2334	1	Lever-Throttle
17:2	110-5728	1	Cable-Throttle
18	1-603175	1	Knob-Ball
19	1-807513	2	Bolt-CARR
20	3296-2	2	Nut-Lock, NI
21	115-2753	1	Control-Choke
22	3220-3	1	Nut-HJ
23	105-1853	1	Clamp-Hose
24	117-7817	1	Clamp-Harness
25	119-2595	1	Clutch
26	119-9915	1	Pulley-Engine
27	608006	1	Key-Square
28	119-2658-01	1	Bracket-Stop, Clutch
29	1-603610	1	Washer-Spring

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

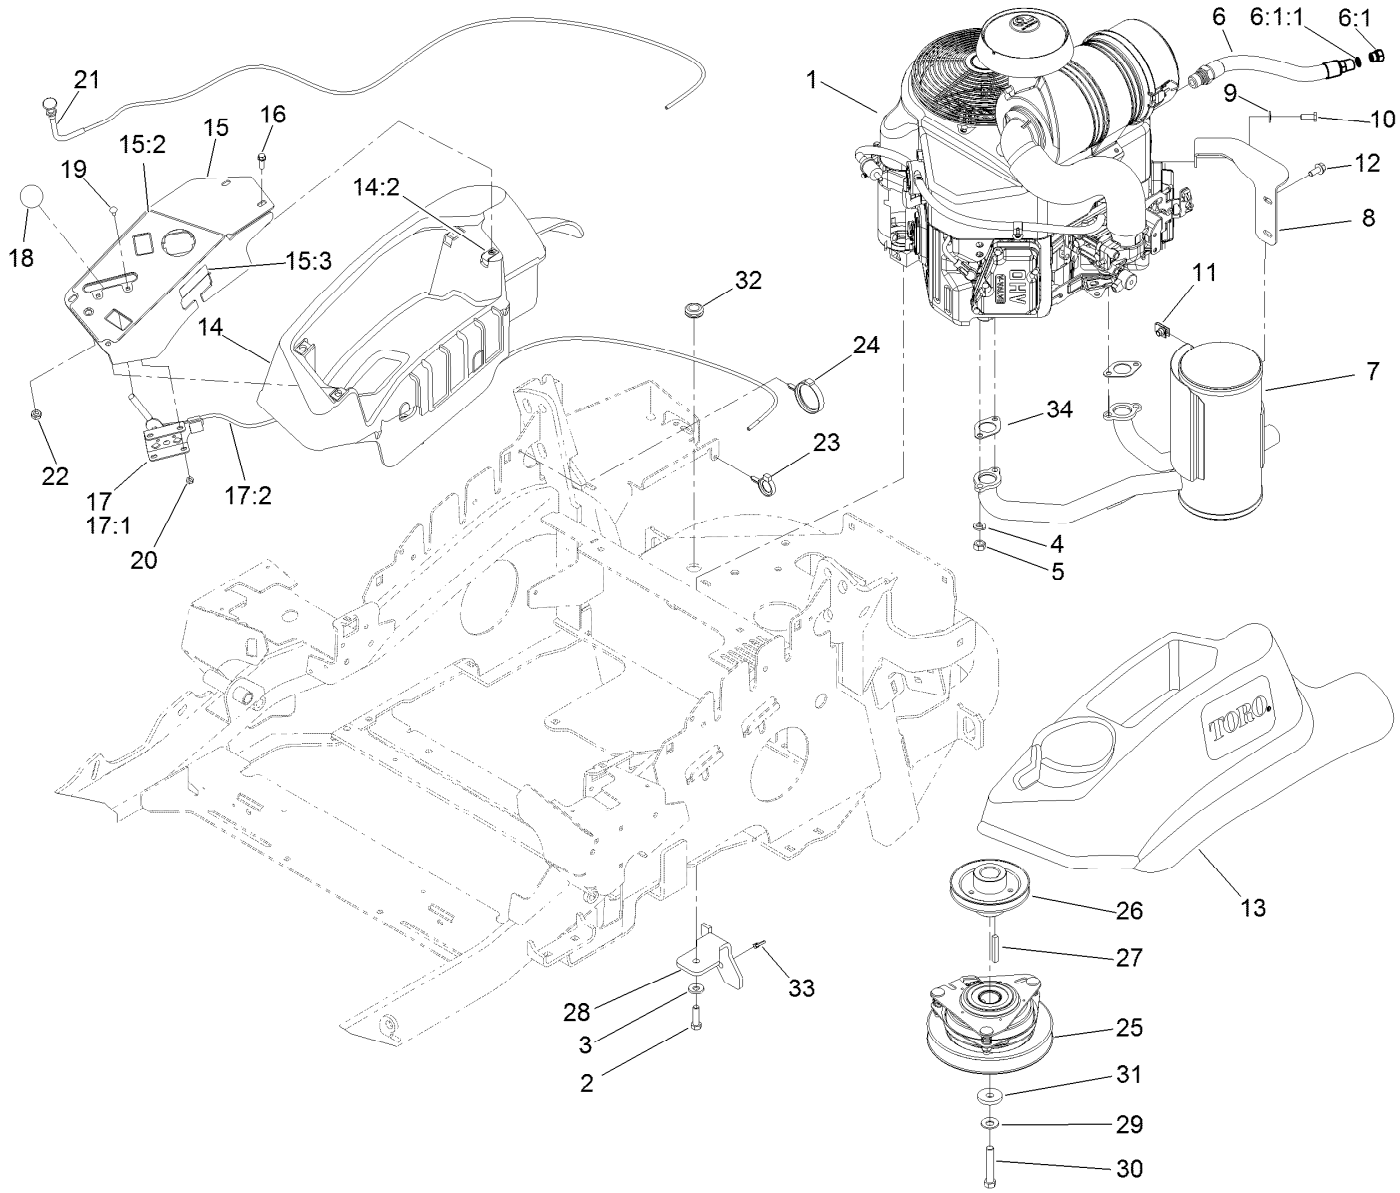


Engine, Muffler and Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
30	3212-10	1	Screw-HH
31	107-4136	1	Washer
32	112-7069	1	Grommet
33	1-303287	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

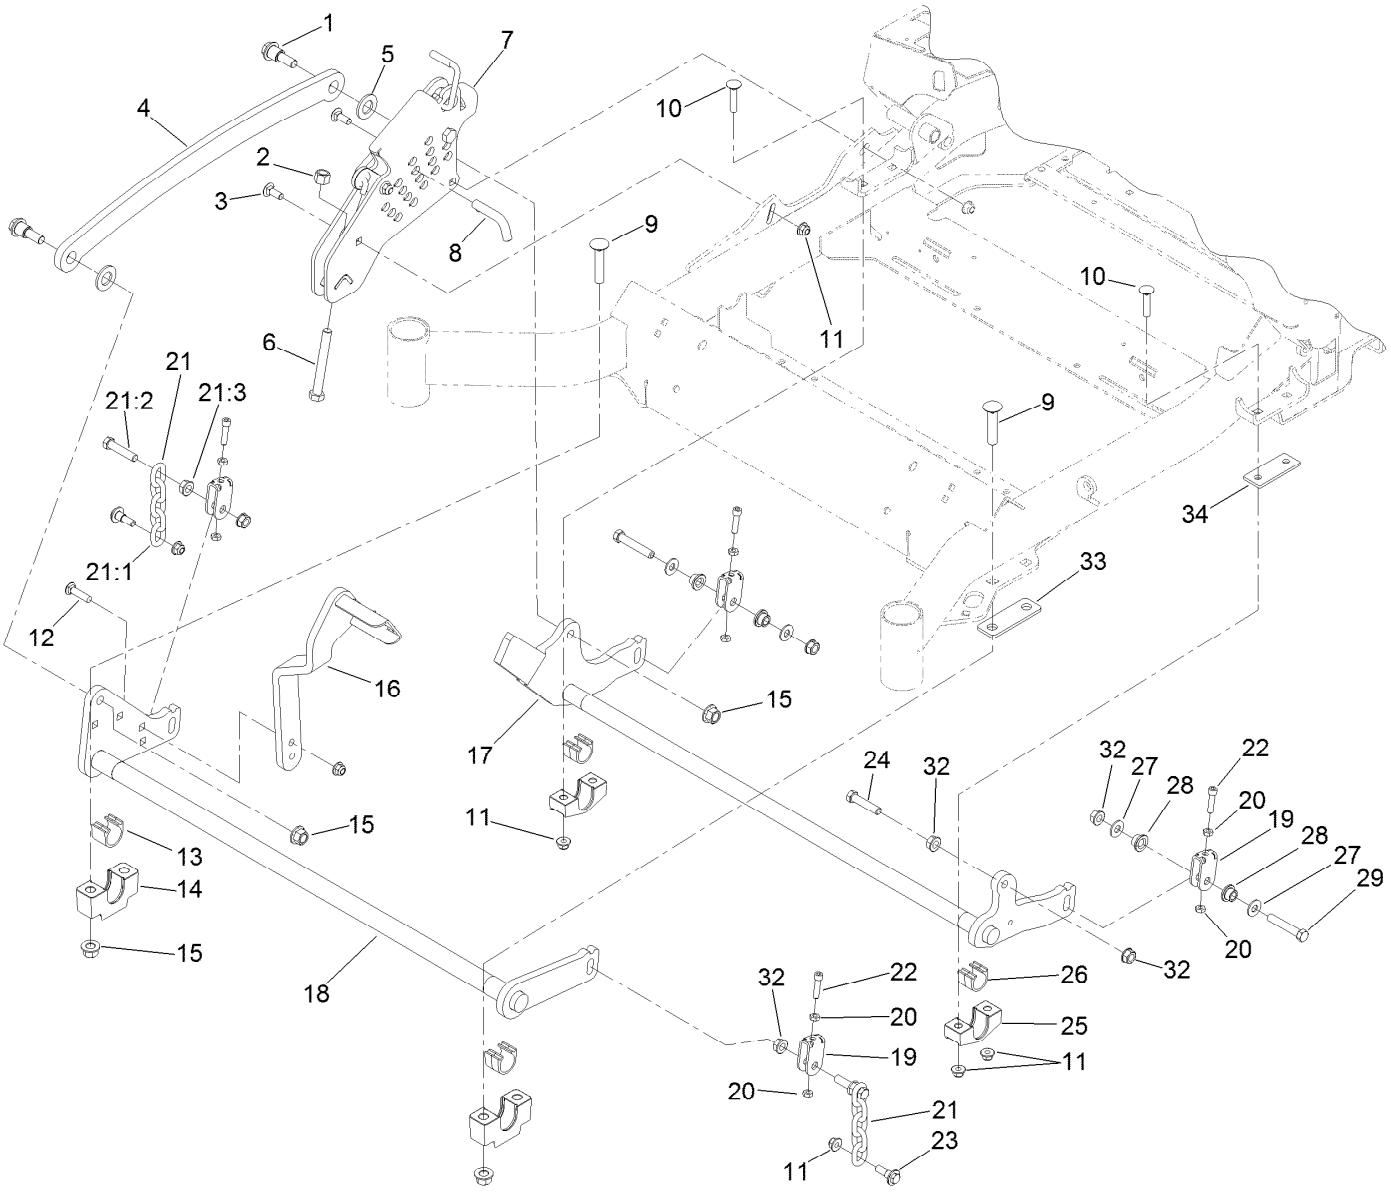

Deck Lift Assembly

Ref.	Part Number	Qty.	Description
1	116-0780	2	Screw-HHF, Shoulder
2	3296-23	1	Nut-Lock, NI
3	3231-2	2	Bolt-CARR
4	116-0797-03	1	Link-Lift, Deck
5	3256-28	2	Washer-Flat
6	116-0559	1	Bolt-TAP
7	120-2530	1	HOC ASM
8	116-5584	1	Pin-HOC
9	116-1700	4	Bolt-CARR
10	3231-5	4	Screw-CARR
11	104-8301	10	Nut-Flange, NI
12	3231-4	2	Screw-CARR
13	109-9410	2	Bearing-Cross Shaft, Front
14	109-9409	2	Support-Cross Shaft, Front Bearing
15	99-5107	6	Nut-Lock
16	116-1919-01	1	Lever-Foot
17	116-0459-03	1	Lift-Deck, Rear
18	116-2217-03	1	Cross Shaft-Front


Ref.	Part Number	Qty.	Description
19	109-9066	4	Yoke-Adjust, Deck
20	3218-2	8	Nut-Jam
21	116-0756	2	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	322-47	4	Screw-HH
23	109-9840	2	Screw-Shoulder, HHF
24	109-9065	1	Screw-HH
25	116-0818-03	2	Support-Cross Shaft, Rear Bearing
26	109-7173	2	Bearing-Cross Shaft, Rear
27	3256-4	4	Washer-Flat
28	116-2428	4	Bushing-Flanged
29	324-10	2	Screw-HH
32	32128-37	6	Nut-HF
33	121-7593-01	2	Spacer-Decklift, Front
34	121-7594-01	2	Spacer-Decklift, Back

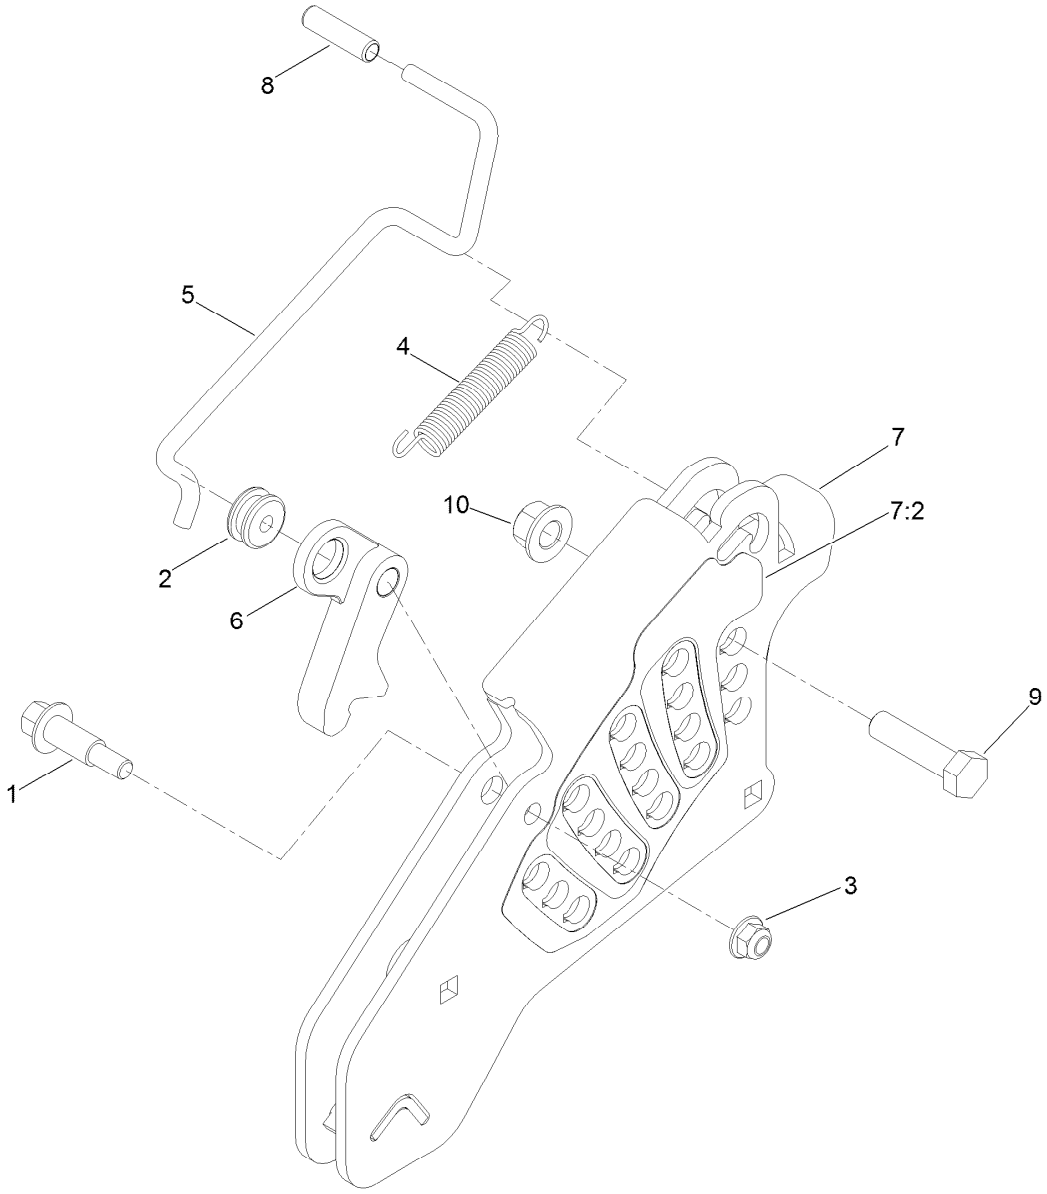

Height-of-Cut Assembly No. 120-2530

Ref.	*Part Number*	*Qty.*	*Description*
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-Flange, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	120-2531	1	HOC Plate ASM
7:2	120-2532	1	Decal-HOC
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH
10	99-5107	1	Nut-Lock


Deck Assembly

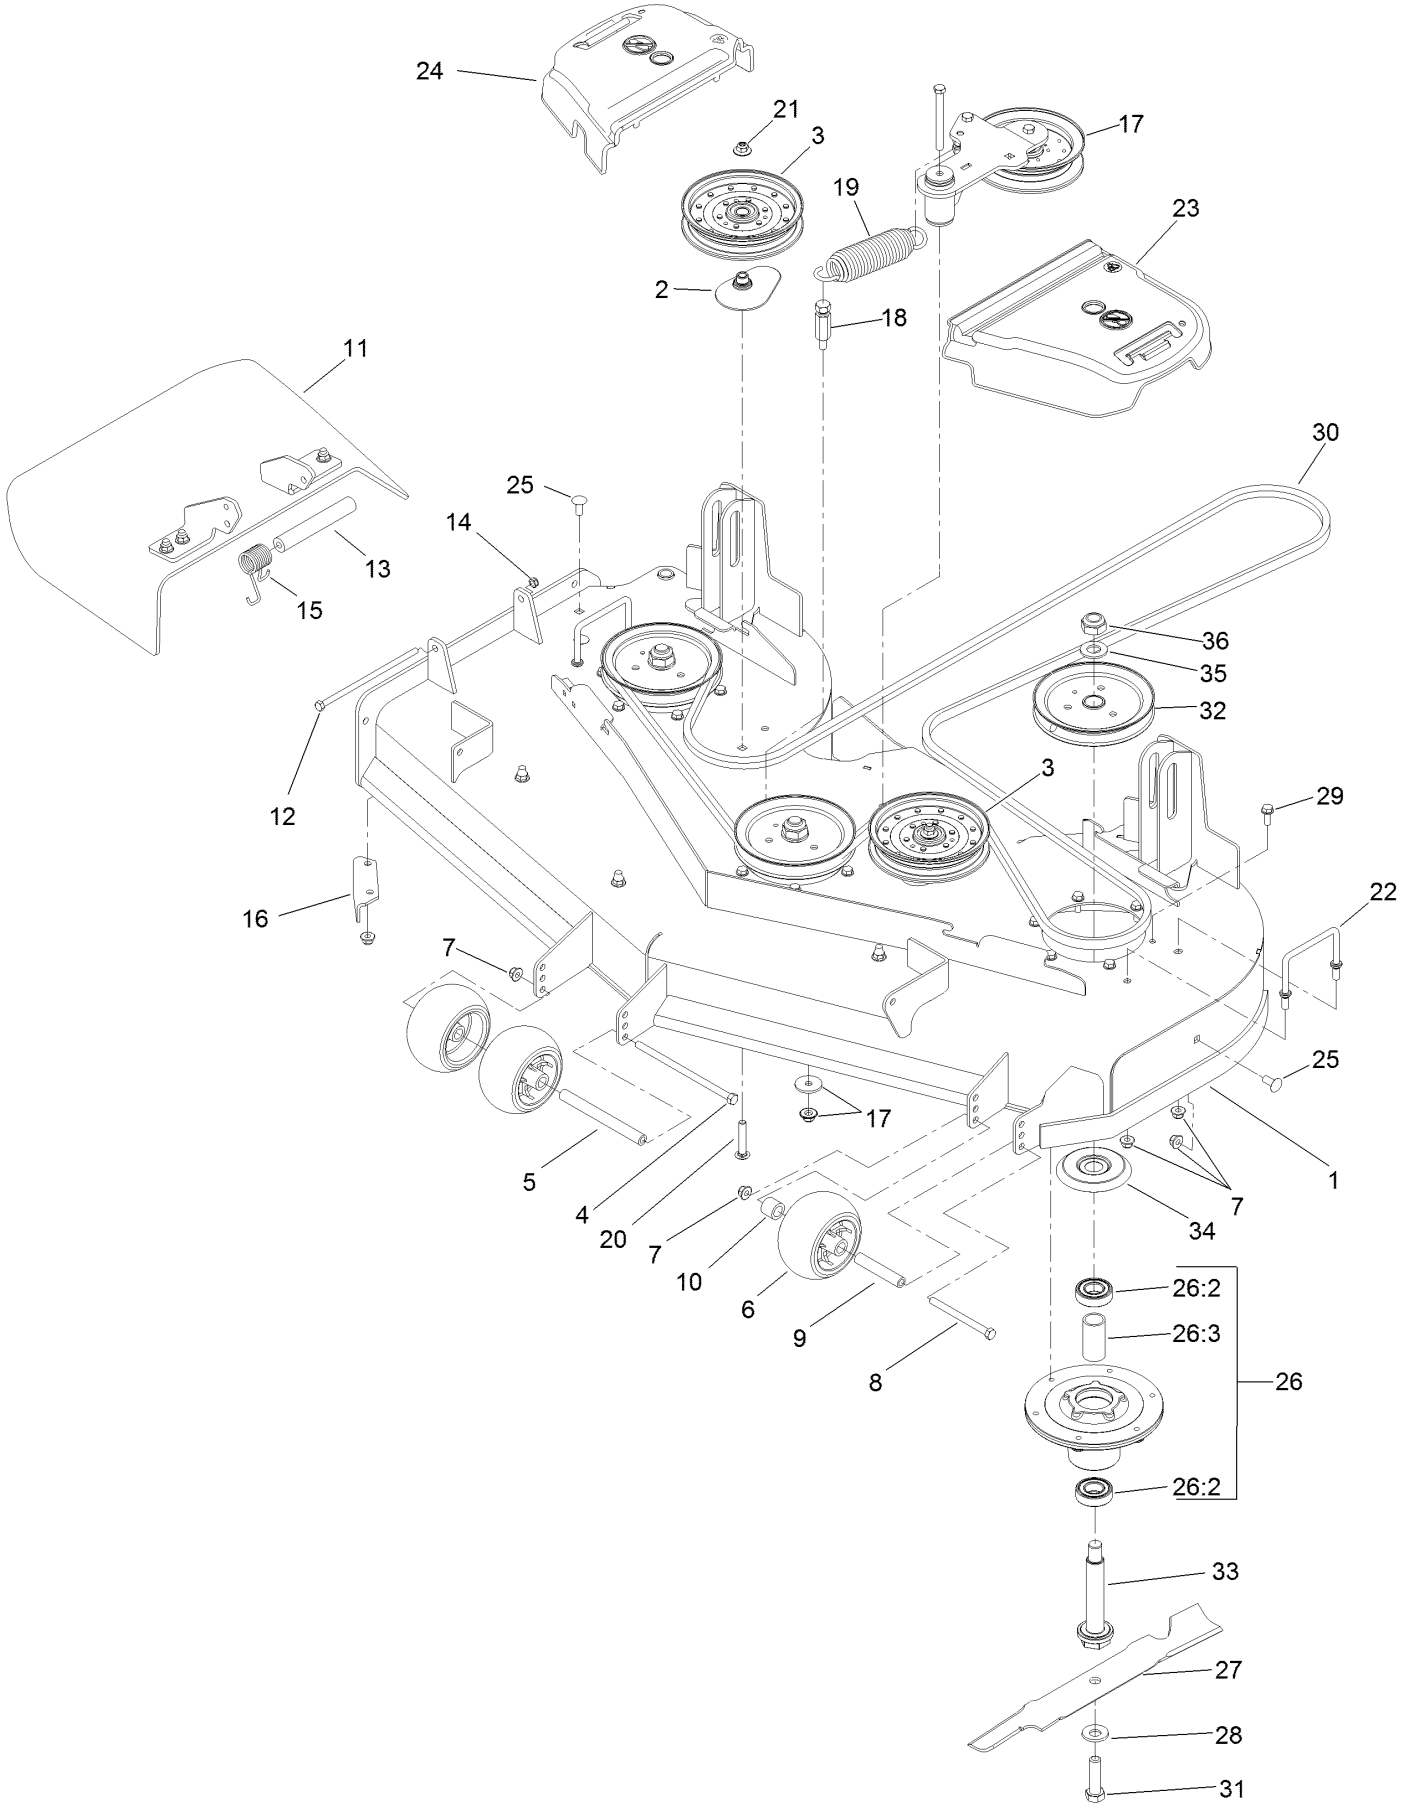

Deck Assembly (continued)


Ref.	Part Number	Qty.	Description
1	120-2351	1	Deck Decal ASM
2	109-2872	2	Spacer-Pulley
3	116-4670	2	Pulley-Idler, Flat
4	108-5388	1	Screw-HH
5	98-5967	1	Spacer-Wheel
6	1-603299	3	Roller-Scalp, Anti
7	104-8301	13	Nut-Flange, NI
8	323-23	1	Screw-HH
9	98-7912	1	Tube-Spanner
10	98-7913	1	Tube-Spacer
11	120-2451	1	Deflector ASM
12	322-50	1	Screw-HH
13	105-4622	1	Spacer
14	3296-47	1	Nut-Lock, NI
15	108-4052	1	Spring-Torsion
16	107-8541-01	1	Baffle-Discharge
17		1	Idler Arm ASM ●
18	114-5867	1	Anchor-Spring, Tall
19	116-6317	1	Spring-Extension
20	3231-40	2	Bolt-CARR, Short Neck
21	109-6658	2	Nut-Flange, NI
22	109-6982	2	Wireform-Cover
23	109-6936	1	Cover-Belt, LH
24	109-6935	1	Cover-Belt, RH
25	3231-27	6	Screw-CARR
26	120-5477	3	Spindle ASM
26:2	116-0720	2	Bearing-Ball
26:3	115-2641	1	Spacer-Bearing
27	120-2379-03	3	Blade-Hi Flow, 18 In
28	125-1736	3	Washer-Belleville
29	32144-41	18	Screw-Taptite
30	114-5857	1	Belt-V
31	51-4060	3	Screw-Blade
32	120-7855	3	Pulley
33	120-2505	3	Spindle-Shaft
34	117-7210	3	Shield-Bearing
35	92-5836	3	Washer
36	3296-67	3	Nut-Lock, NI

● Not serviced separately

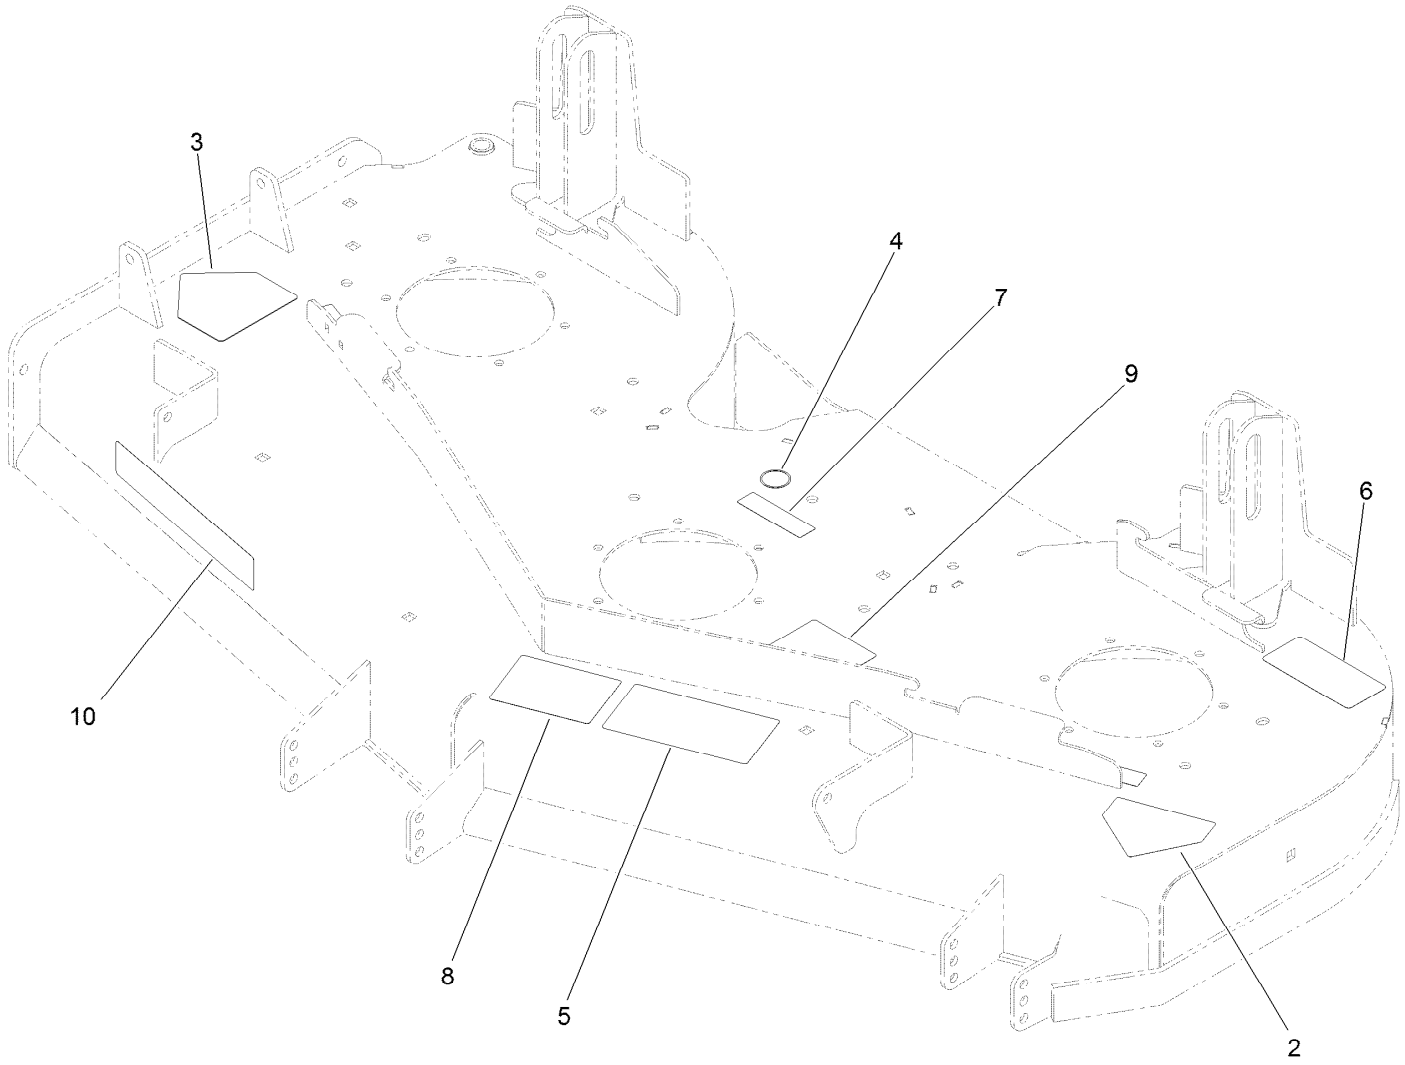


Deck Decal Assembly No. 120-2351

Ref.	*Part Number*	*Qty.*	*Description*
2	1-403005	1	Decal-Danger
3	54-9220	1	Decal-Danger
4	58-6520	1	Decal-Grease
5	66-1340	1	Decal-Danger, Thrown Object
6	68-8340	1	Decal-Torque
7	98-5954	3	Decal-Missing Cover
8	112-3858	1	Decal-Anti Scalp
9	117-8639	1	Decal-Routing, Deck Belt
10	121-3205	1	Decal

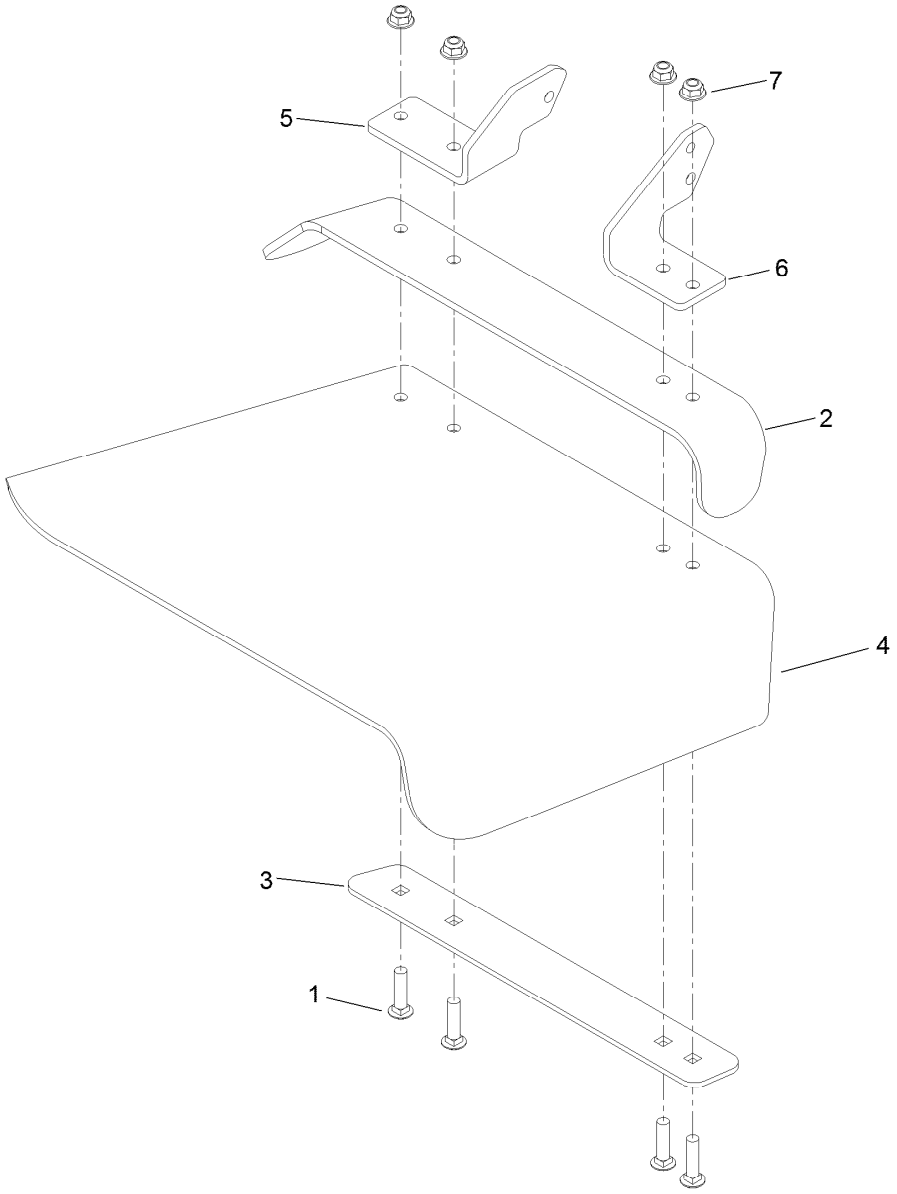


Deflector Assembly No. 120-2451

Ref.	*Part Number*	*Qty.*	*Description*
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-Flange, NI

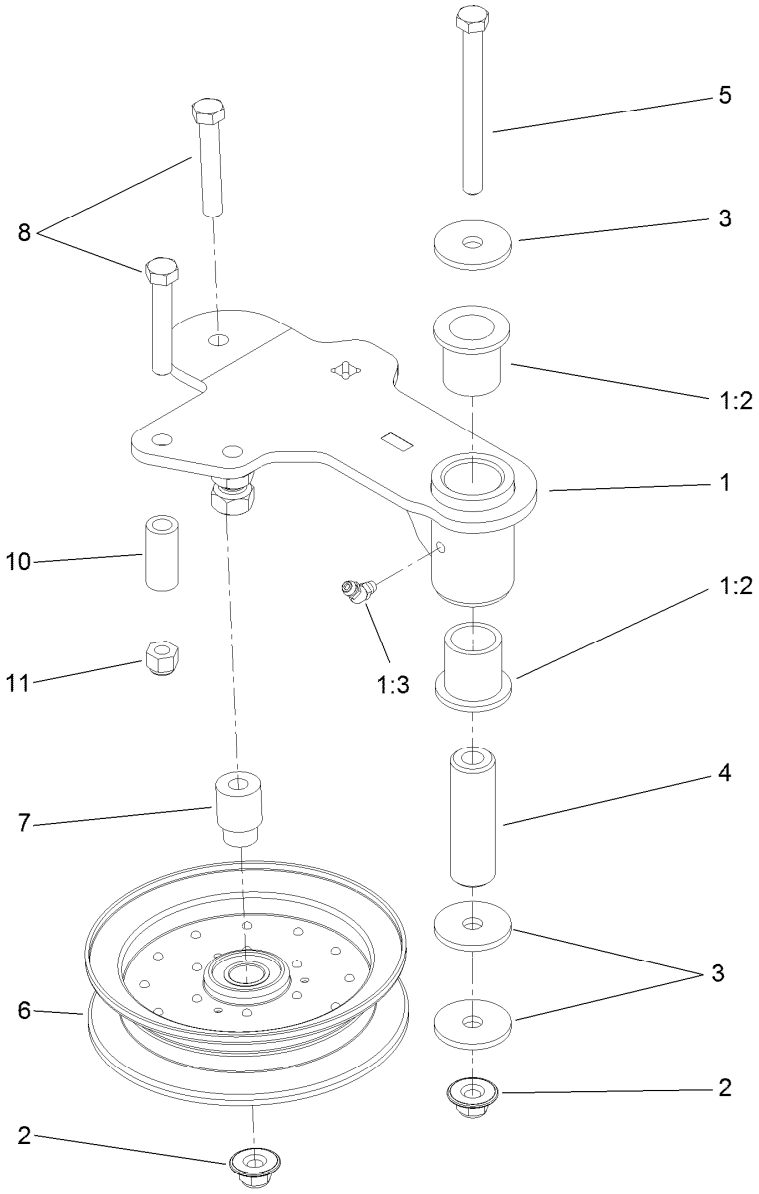

Idler Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	120-2501	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	2	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	116-4668	1	Idler-Pulley, Flanged
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
10	104-0151	1	Spacer
11	3296-39	1	Nut-Lock, NI

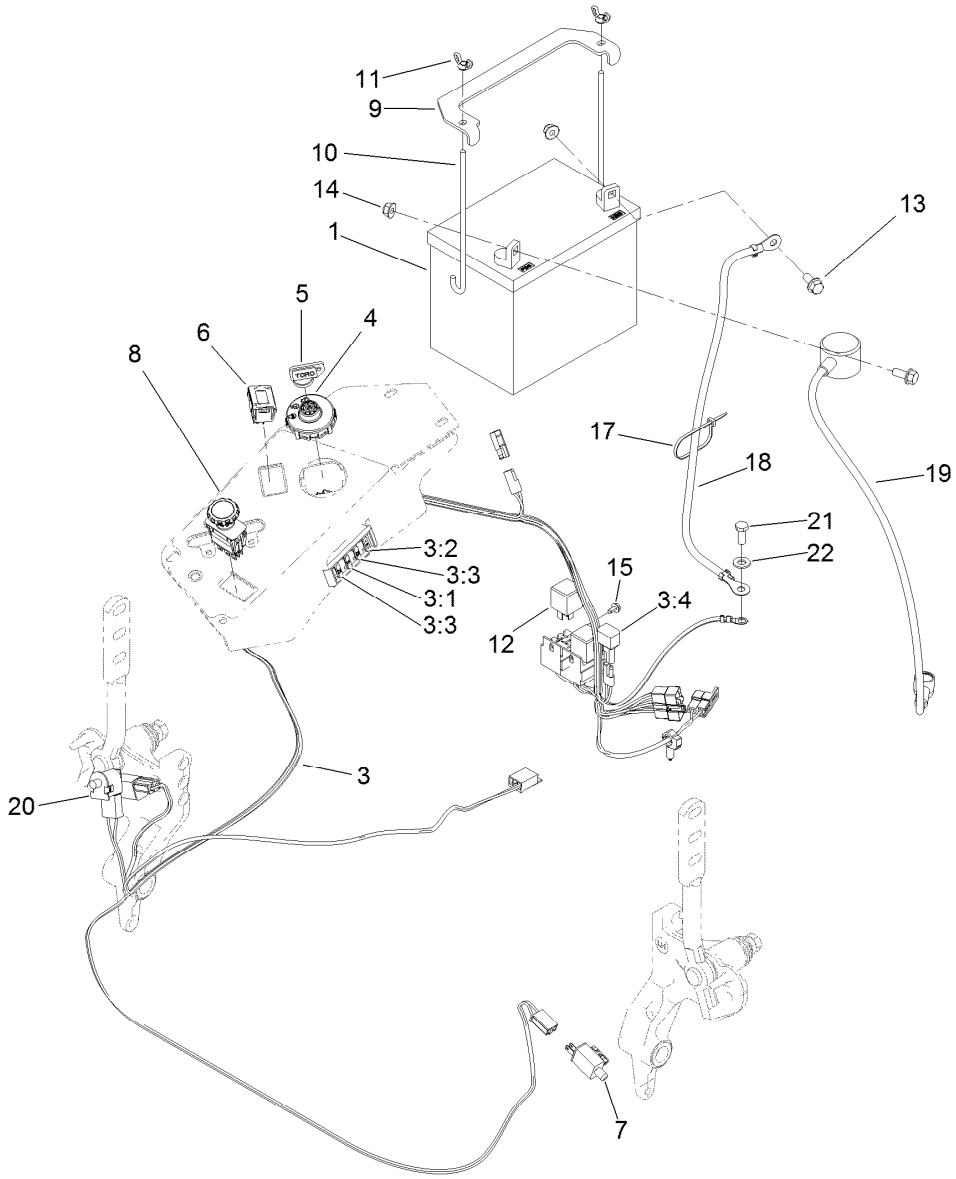

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
3	117-2582	1	Harness-Wire
3:1	218-578	1	Fuse-Blade, 10 Amp
3:2	109355	1	Fuse-Blade, 15 Amp
3:3	109102	2	Fuse-Blade, 25 Amp
3:4	116-0053	1	Cap-Plug
4	117-2221	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	120-2244	1	Hourmeter
7	110-6765	2	Switch
8	116-0124	1	Switch-PTO, 10A
9	116-0042-03	1	Strap-Tie Down, Battery

Ref.	Part Number	Qty.	Description
10	1-633651	2	Bolt-Holddown
11	1-543792	2	Wingnut
12	1-643275	2	Relay
13	3234-5	2	Screw-HHF
14	104-8300	2	Nut-Flange, NI
15	104-2065	1	Screw-HWH
17	1-303287	3	Tie-Cable
18	114-1218	1	Cable-Battery, Negative
19	115-3864	1	Cable-Battery, Positive
20	82-2190	1	Switch-Bail
21	33114-020	1	Screw-HH
22	33094-00	1	Washer-Plain

Attachments and Accessories

For 74143 Z Master Commercial 2000 Series Riding Mower with 52in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Turbo Baffle Kit	107-1634
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Light Kit	116-1154
Operator-Controlled Discharge Chute Kit	117-3600
Blade-Hi Flow, 18in	120-2379-03
Recycler Kit	120-2402
Blade-Mulch, 18in	120-2408-03
Z Stand Kit	121-4811
Deluxe Seat Kit	121-4812
Deluxe Seat Kit	121-7595
Toro Deluxe Rider Cover	490-7319
Spark Arrestor Screen	75-6880
E-Z VAC Twin Soft Bagger	78569
E-Z Vac Blower and Drive Kit	78572
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26

Notes:

Notes:

Notes:



Count on it.