
LAZER Z® E-SERIES

Model No. LZE740KC604—Serial No. 312000000 and Up

Picture below may not reflect actual product.

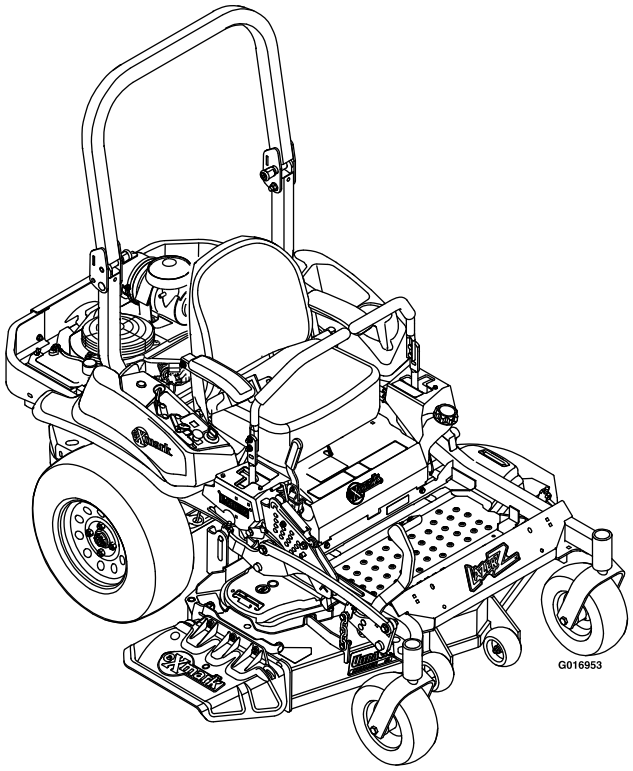

Parts Manual

Part No. 4501-010 Rev. G

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2014—Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310


Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved



If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)


Contents

Complete Deck Assembly 4
Deck Assembly 5
Deck W/Decals Assembly No. 116-5651 6
Deck Idler Assembly No. 116-3755 7
Main Frame Assembly 8
Roll-Over Protection System Assembly No. 116-2882 9
Caster Wheel and Fork Assembly 10
Deck Lift Assembly 11
Height-of-Cut Assembly No. 116-1970 12
Control Assembly 13
Motion Control Assembly 14
Rear Wheel and Park Brake Assembly 15
Parking Brake Handle Assembly No. 116-7551 16
Seat Assembly 17
Seat W/Tracks Assembly No. 116-6192 18
Fuel Tank Mounting Assembly 19
Fuel Tank Assembly No. 116-3978 20
Engine Assembly 21
Hydraulic Assembly 22
LH Hydro Assembly No. 116-6417 23
RH Hydro Assembly No. 116-6418 24
Pump Idler Assembly No. 116-1255 25
Electrical Assembly 26

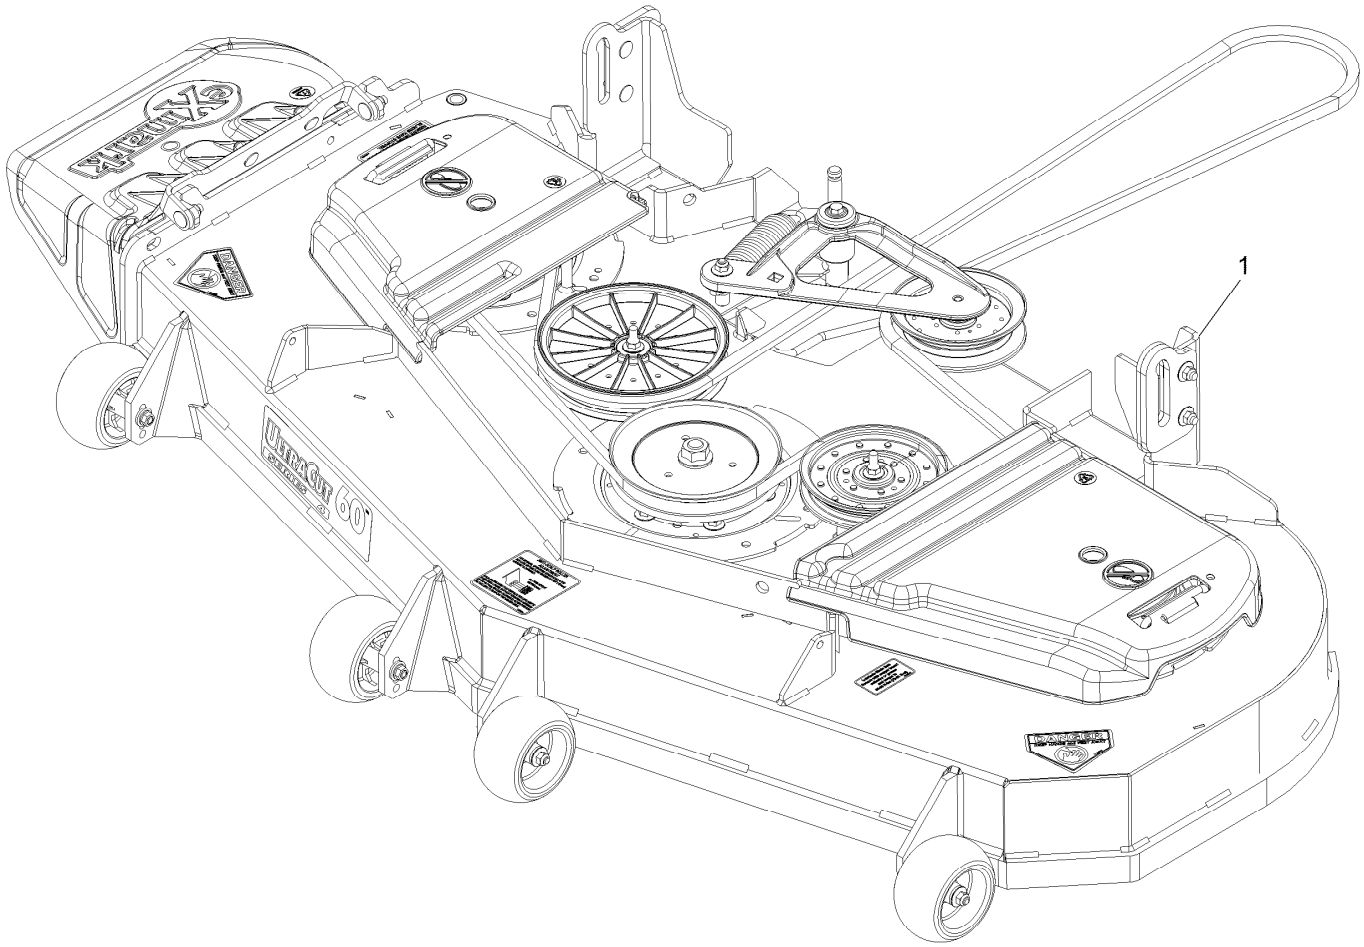

Complete Deck Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	116-5653	1	ASM,Deck Complete 604

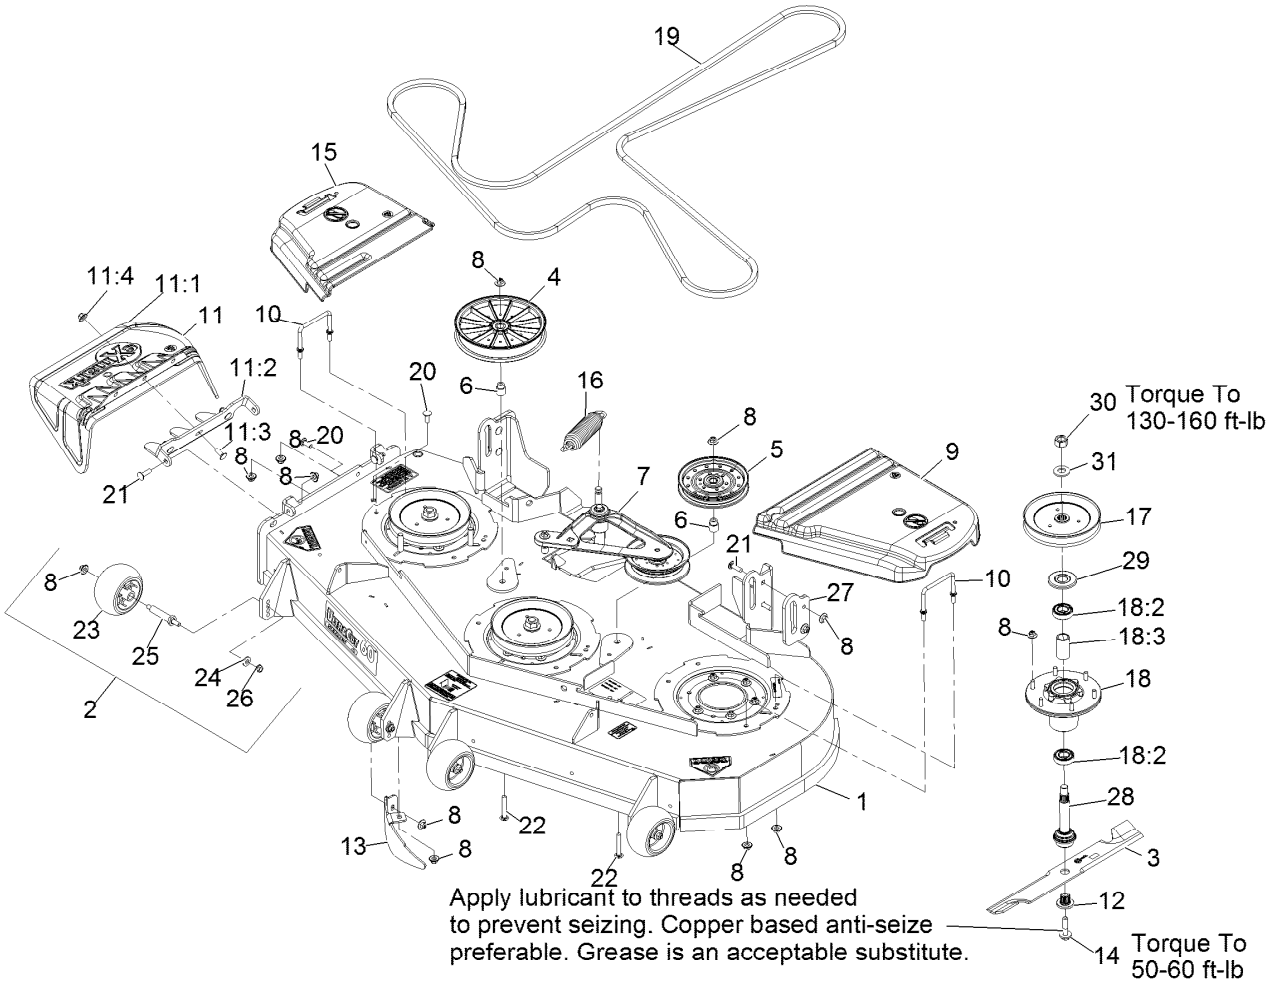


Deck Assembly

Ref.	Part Number	Qty.	Description
1	116-5651	1	Deck ASM,W/Decals 604
2	103-4051	4	Kit,Anti-Scalp Roller
3	116-5174	3	Blade-Extreme 2, 20.50"
3	103-6403	3	Blade, Notched 20.5 (.94 Hole)
3	103-6393	3	Blade, Mulch 20.5 (.94 Hole) ●
3	103-6388	3	Blade- Low Lift 20.5 (.94 Hole)
3	103-6383	3	Blade, Solid 20.5 (.94 Hole)
4	109-0996	1	Pulley,Idler 8"flat
5	116-4667	1	Idler-Pulley, Flat
6	1-633456	2	Bushing,Idler
7	116-3755	1	Deck Idler ASM
8	109-6658	36	Nut-Nyloc 3/8-16 Flg
9	109-6938	1	Cover-Belt, LH
10	109-6982	2	Wireform-Cover
11	109-7188	1	ASM,Discharge Chute
11:1	109-2738	1	Chute,Discharge
11:2	109-8675-01	1	Bracket,Discharge Chute
11:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
11:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
12	103-3037	3	Bushing,Splined


Ref.	Part Number	Qty.	Description
13	116-5614-01	1	Dogleg - Lz60
14	109-9220	3	Screw-Sems 1/2-20 X 2.19
15	116-0094	1	Cover-Belt, RH
16	116-6317	1	Spring-Extension
17	116-0676	3	Sheave,Blade Drive 7.25
18	116-3344	3	ASM-Cutter Hsg With Bearings
18:2	116-0720	2	Bearing-Ball
18:3	116-3312	1	Spacer-Bearing
19	109-8073	1	Belt,V-5V-198.75
20	3231-22	2	Bolt-Carriage 3/8-16 X 1
21	3231-28	6	Bolt-Carriage 3/8-16 X 1 1/4
22	3231-44	2	Bolt-Carriage 3/8-16 X 2 1/2
23	1-603299	4	Roller-Scalp, Anti
24	98-5975	4	Washer-Spring Disc 3/8
25	99-2842	4	Spacer
26	3290-357	4	Nut-Whizlock 3/8-16
27	116-3445	2	Plate-Reinf,Push Tower
28	116-3341	3	ASM-Spindle And Seal
29	116-1286	3	Guard,Bearing Top .989
30	116-7306	3	Nut-Hex
31	103-2802	3	Washer-Spring Disc 3/4

● Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

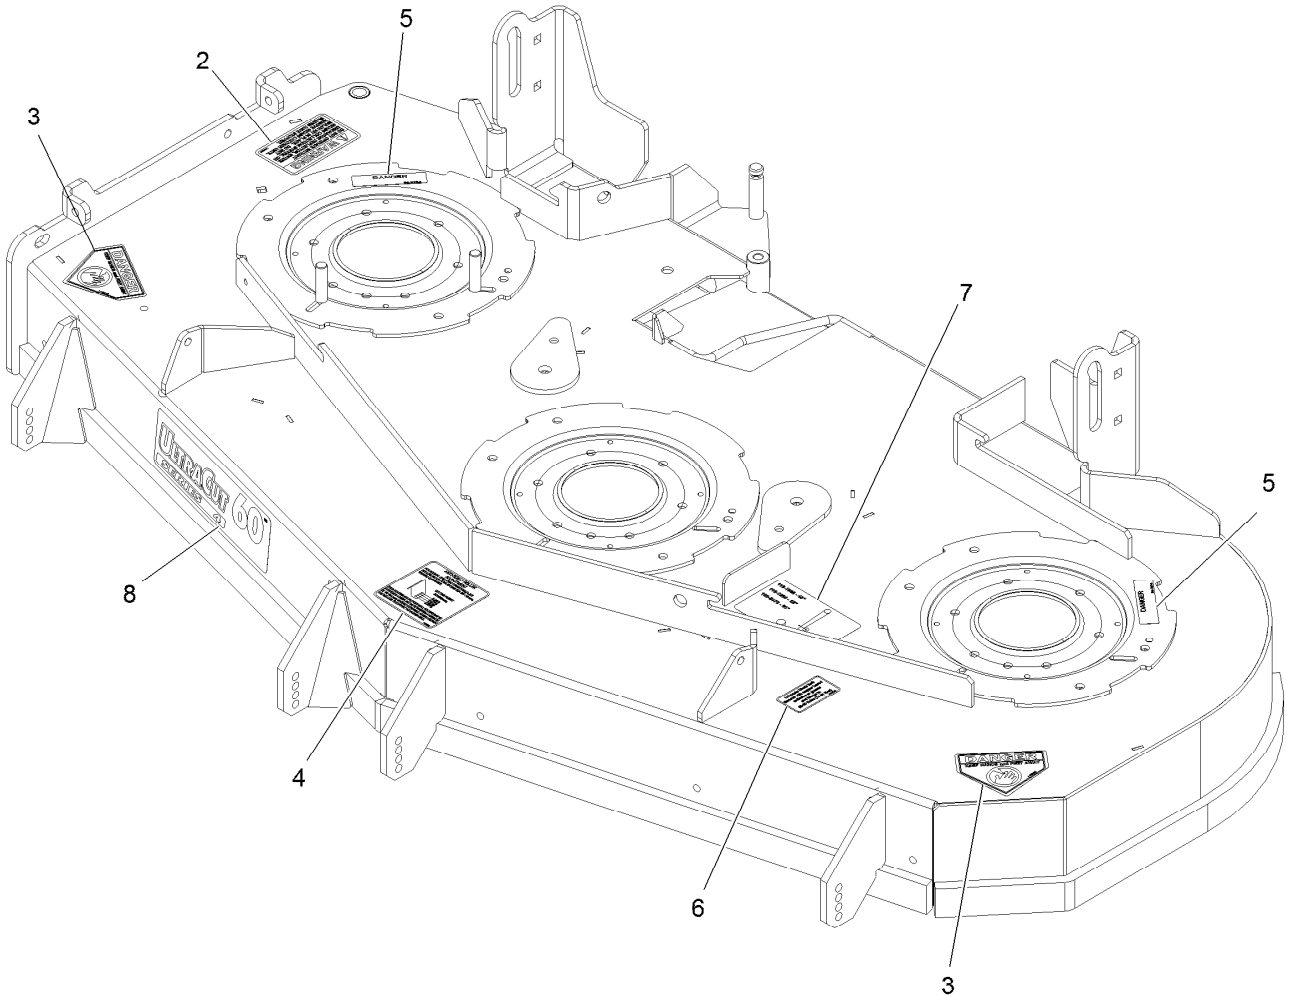


Deck W/Decals Assembly No. 116-5651

Ref.	*Part Number*	*Qty.*	*Description*
2	1-303508	1	Decal-Warning, Discharge
3	1-403005	2	Decal-Danger
4	1-633922	1	Decal,Antiscalp
5	98-5954	2	Decal-Missing Cover
6	109-3148	1	Decal,Bolt Torque
7	116-2630	1	Decal-Belt Routing
8	116-0025	1	Decal,Ultracut 60 Series 4

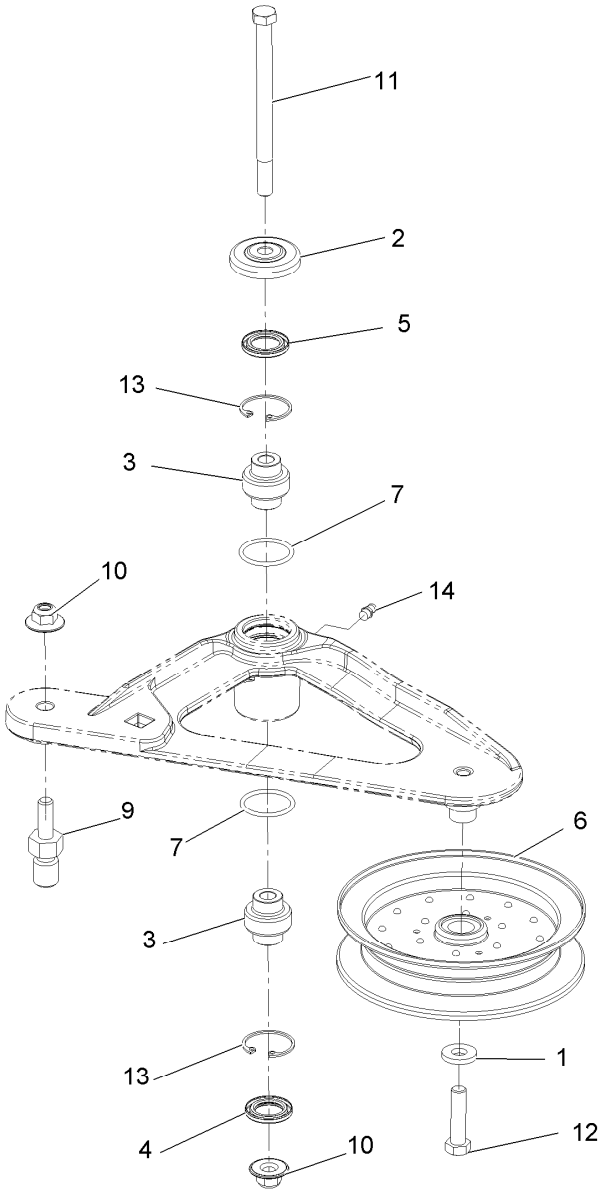

Deck Idler Assembly No. 116-3755


Ref.	*Part Number*	*Qty.*	*Description*
1	43-0940	1	Spacer
2	103-2916	1	Guard-Top
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Double Lip
5	103-3506	1	Seal-Single Lip
6	116-4668	1	Idler-Pulley, Flanged
7	106-7159	2	O-Ring
9	116-3467	1	Pin-Spring, Anchor
10	109-6658	2	Nut-Nyloc 3/8-16 Flg
11	109-7409	1	Screw-Shoulder 3/8-16 X 5
12	323-8	1	Screw-HH 3/8-16 X 1 1/2
13	32120-10	2	Ring-Retaining
14	302-19	1	Zerk-1/4-28 Str

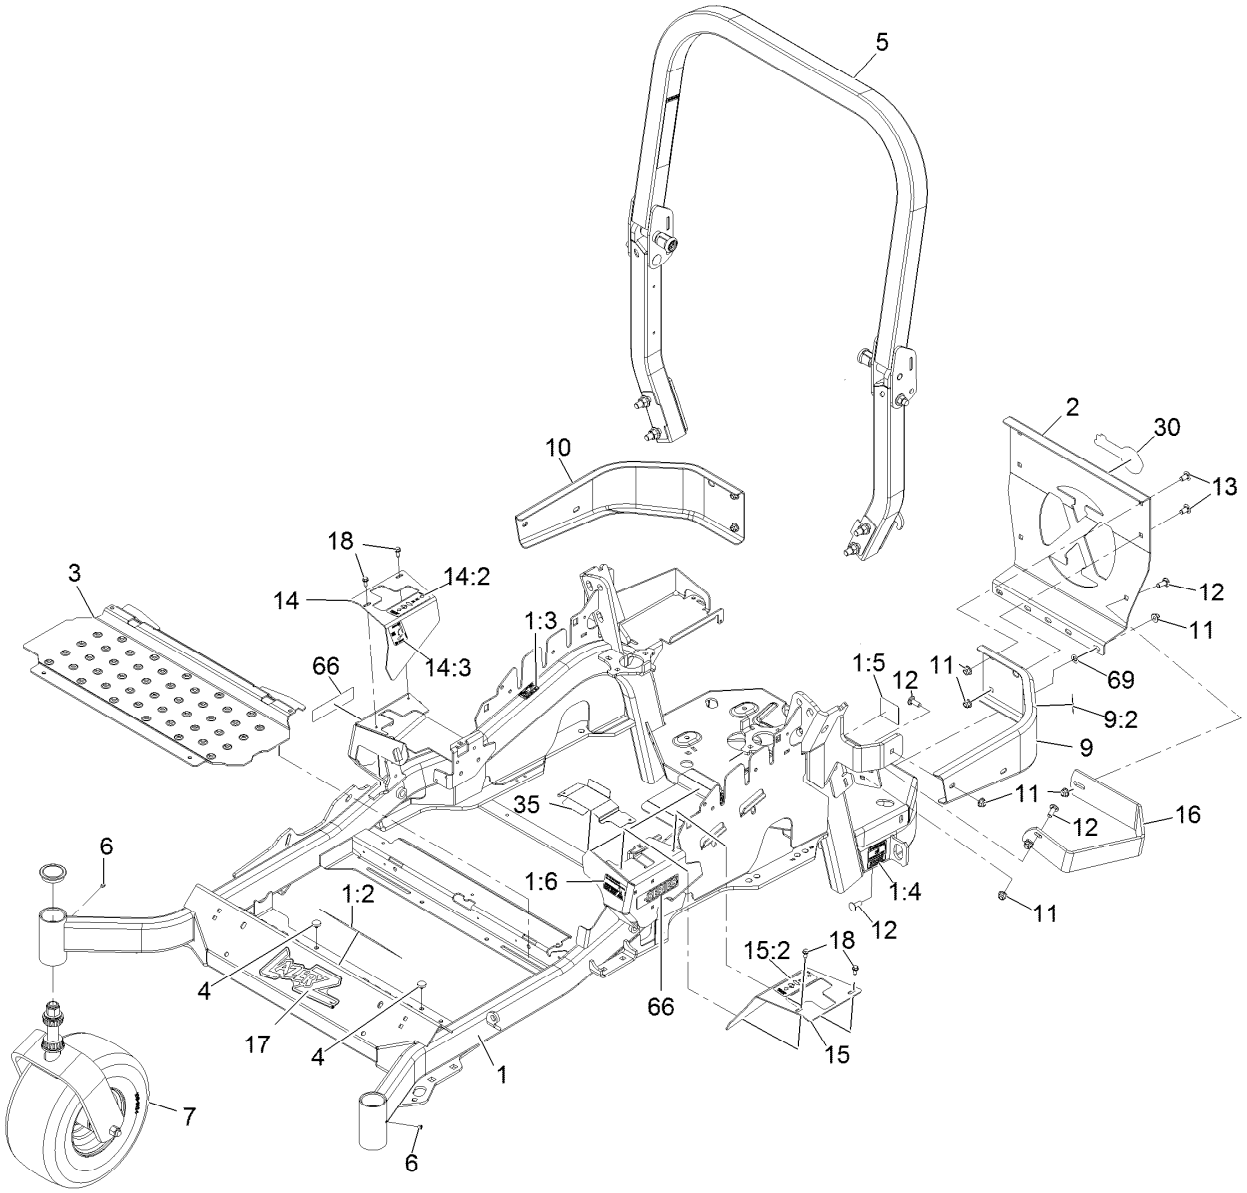

Main Frame Assembly


Ref.	Part Number	Qty.	Description
1	116-5902	1	Mainframe ASM
1:2	116-3303	1	Decal-Slope
1:3	103-2076	2	Decal-Caution
1:4	116-0205	2	Decal-Belt Drive
1:5	116-4858	1	Decal-Spark Arrester
1:6	116-1654	1	Decal-Fuel Fill
2	109-8863-03	1	Plate,Rear Guard
3	116-0024-01	1	Floorpan
4	1-513658	2	Bumper
5	116-2882	1	ROPS ASM
6	1-811010	2	Plug
7		2	Castor W/Fork ASM ●
9	116-0180	1	LH Bumper ASM
9:2	103-2076	1	Decal-Caution
10	116-0057-03	1	Bumper-RH
11	104-8301	11	Nut-Nyloc 3/8-16 Flg
12	3231-22	7	Bolt-Carriage 3/8-16 X 1
13	3231-21	4	Bolt-Carriage 3/8-16 X 3/4
14	116-5899	1	RH Motion Control Cover ASM
14:2	109-7232	1	Decal-Motion Control
14:3	116-5944	1	Decal-Park Brake
15	116-0580	1	LH Motion Control Cover ASM
15:2	109-7232	1	Decal-Motion Control
16	116-0043-03	1	Guard-Muffler
17	103-3113	1	Decal,Lazer Model
18	32144-10	4	Screw-HWH 1/4-20 X .62
30	103-2883	1	Decal
35	116-2999-01	1	Guard-Belt
66	116-3885	2	Decal-E-Series
69	107-3154	2	Nut-Push 3/8-16

● Not serviced separately

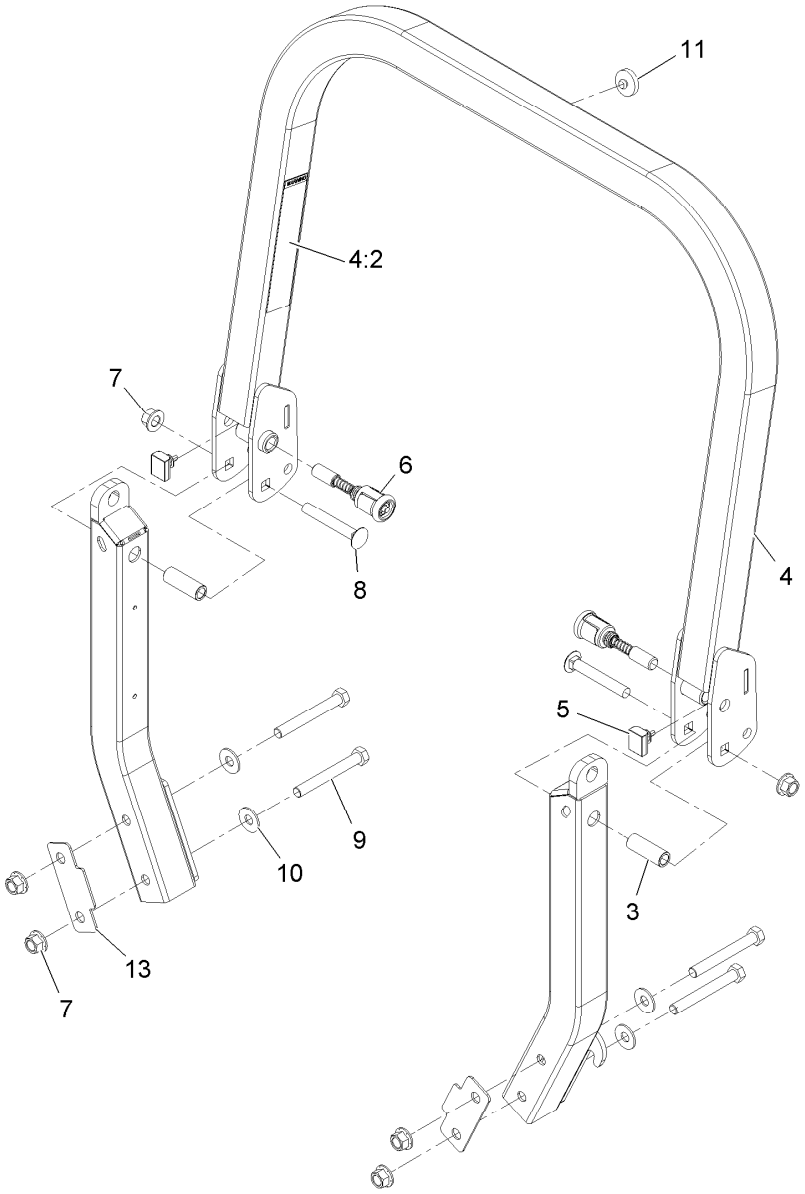

Roll-Over Protection System Assembly No. 116-2882


Ref.	*Part Number*	*Qty.*	*Description*
3	109-6653	2	Spacer
4	116-0019	1	Upper ROPS ASM
4:2	107-2102	1	Decal-Warning, Folding ROPS
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	6	Nut-Lock 1/2-13
8	3233-10	2	Bolt-Carriage 1/2-13 X 3 1/2
9	325-17	4	Screw-HH 1/2-13 X 4
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
13	116-0960	2	Spacer

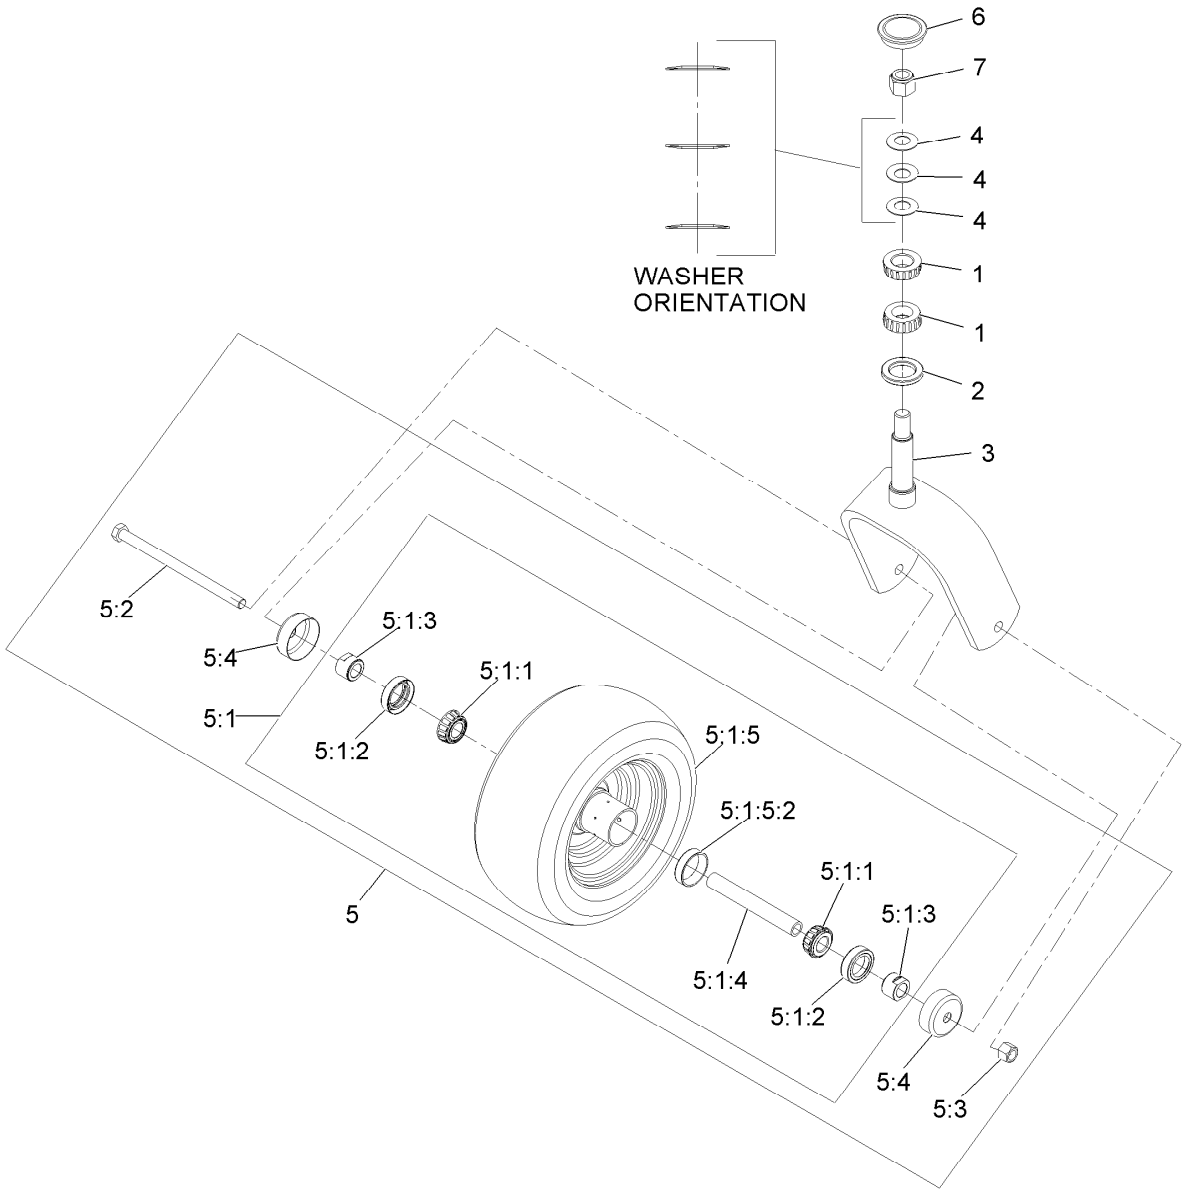

Caster Wheel and Fork Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	1-543509	2	Cone-Bearing Tapered Roller
2	1-543511	1	Seal-Grease
3	116-1092-01	1	Wld,Caster
4	1-633508	3	Washer-Spring Disc
5	117-0362	1	Castor Wheel ASM
5:1		1	ASM,Wheel, Tire And Brgs 13X5.00-6 ●
5:1:1	1-633585	2	Bearing-Cone Tapered Roller
5:1:2	103-0063	2	Seal-Double Lip
5:1:3	103-3051	2	Spacer-Nut ■
5:1:4	103-3155	1	Axle-Caster
5:1:5		1	ASM,Wheel And Tire 13X5.00-6 ●
5:1:5:2	1-633584	2	Bearing-Cup
5:2	325-42	1	Screw-HH 1/2-13 X 8
5:3	3296-23	1	Nut-Nyloc 1/2-13
5:4	103-2768	2	Guard-Seal
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Nyloc 3/4-10


● Not serviced separately
■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

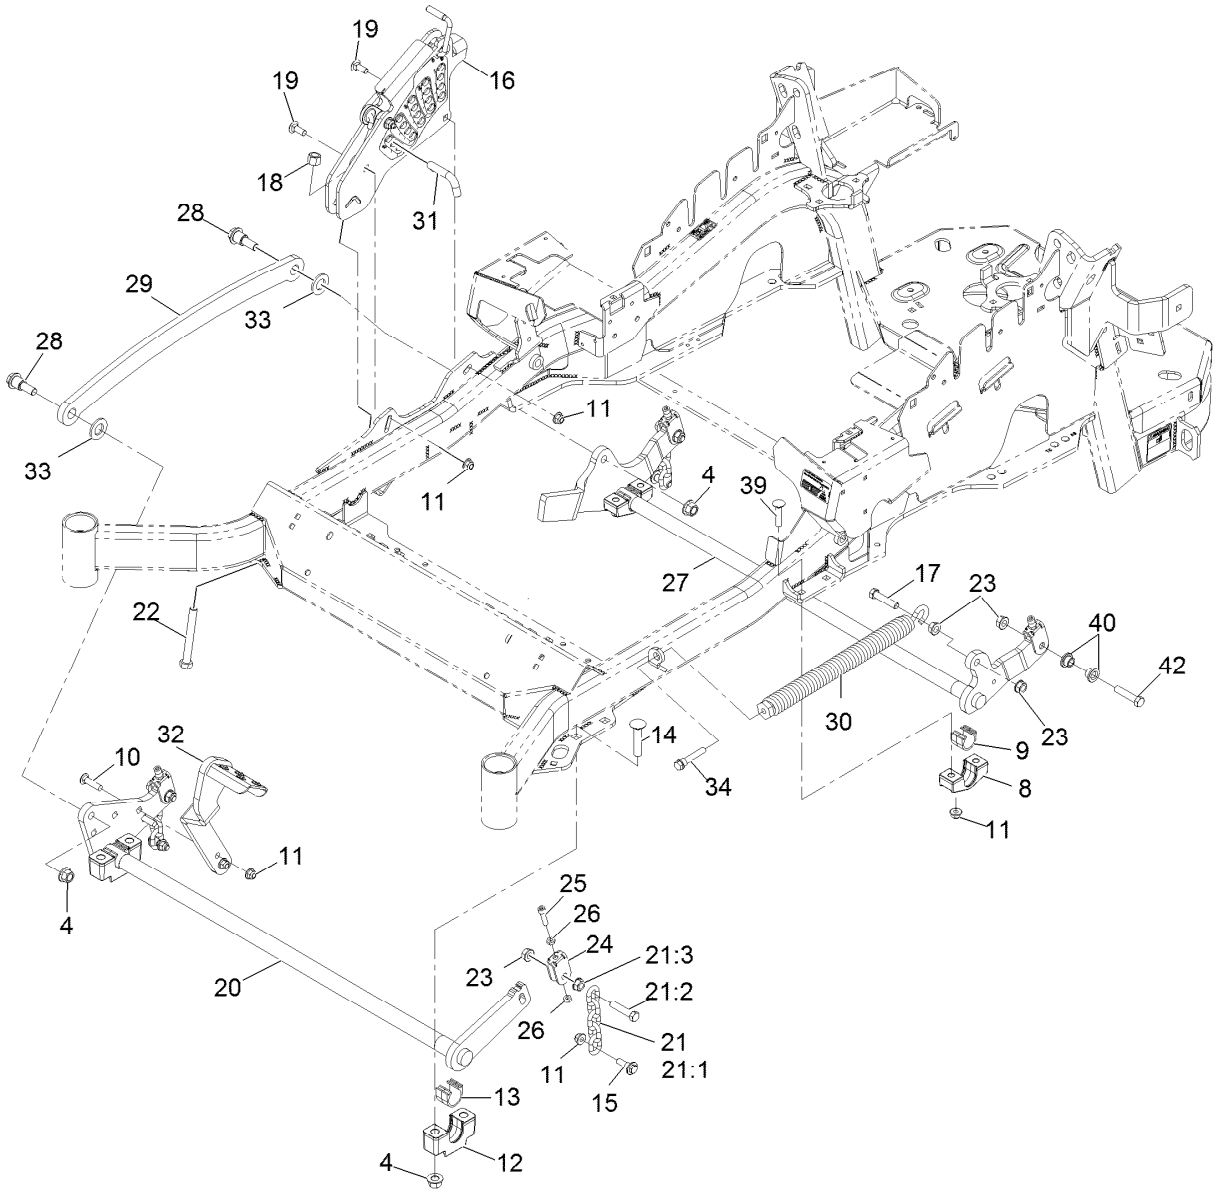

Deck Lift Assembly


Ref.	Part Number	Qty.	Description
4	99-5107	6	Nut-Lock
8	116-0818-03	2	Support-Cross Shaft, Rear Bearing
9	109-7173	2	Bearing-Cross Shaft, Rear
10	3231-4	2	Screw-CARR
11	104-8301	10	Nut-Flange, NI
12	109-9409	2	Support-Cross Shaft, Front Bearing
13	109-9410	2	Bearing-Cross Shaft, Front
14	116-1700	4	Bolt-CARR
15	109-9840	2	Screw-Shoulder, HHF
16	116-1970	1	Height-Of-Cut ASM
17	109-9065	1	Screw-HH
18	3296-23	1	Nut-Lock, NI
19	3231-2	2	Bolt-CARR
20	116-2217-03	1	Cross Shaft-Front
21	116-0756	2	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck

Ref.	Part Number	Qty.	Description
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	116-0559	1	Bolt-TAP
23	32128-37	6	Nut-HF
24	109-9066	4	Yoke-Adjust, Deck
25	3274-18	4	Screw-HSH
26	3218-2	8	Nut-Jam
27	116-0459-03	1	Lift-Deck, Rear
28	116-0780	2	Screw-HHF, Shoulder
29	116-0797-03	1	Link-Lift, Deck
30	116-0886	1	Extension Spring ASM
31	116-5584	1	Pin-HOC
32	116-3452-01	1	Foot Lever
33	3256-28	2	Washer-Flat
34	92-7674	1	Bolt-Shoulder
39	3231-5	4	Screw-CARR
40	116-2428	4	Bushing-Flanged
42	324-10	2	Screw-HH

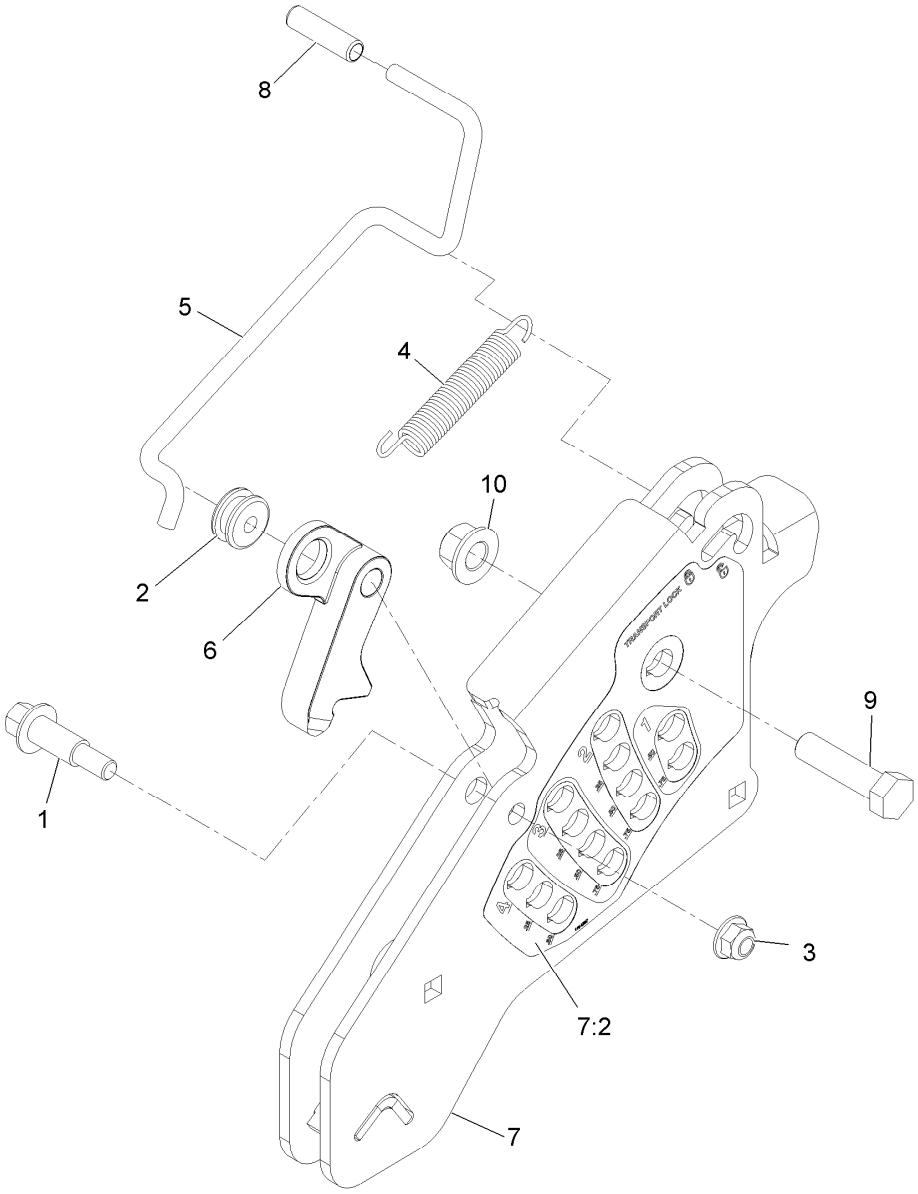


Height-of-Cut Assembly No. 116-1970

Ref.	*Part Number*	*Qty.*	*Description*
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-Nyloc 3/8-16 Flg
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	116-1961	1	HOC Plate ASM
7:2	116-2927	1	Decal-HOC
8	109-8250	1	Grip-Lever
9	325-8	1	Screw-HH 1/2-13 X 1 1/4
10	99-5107	1	Nut-Lock 1/2-13

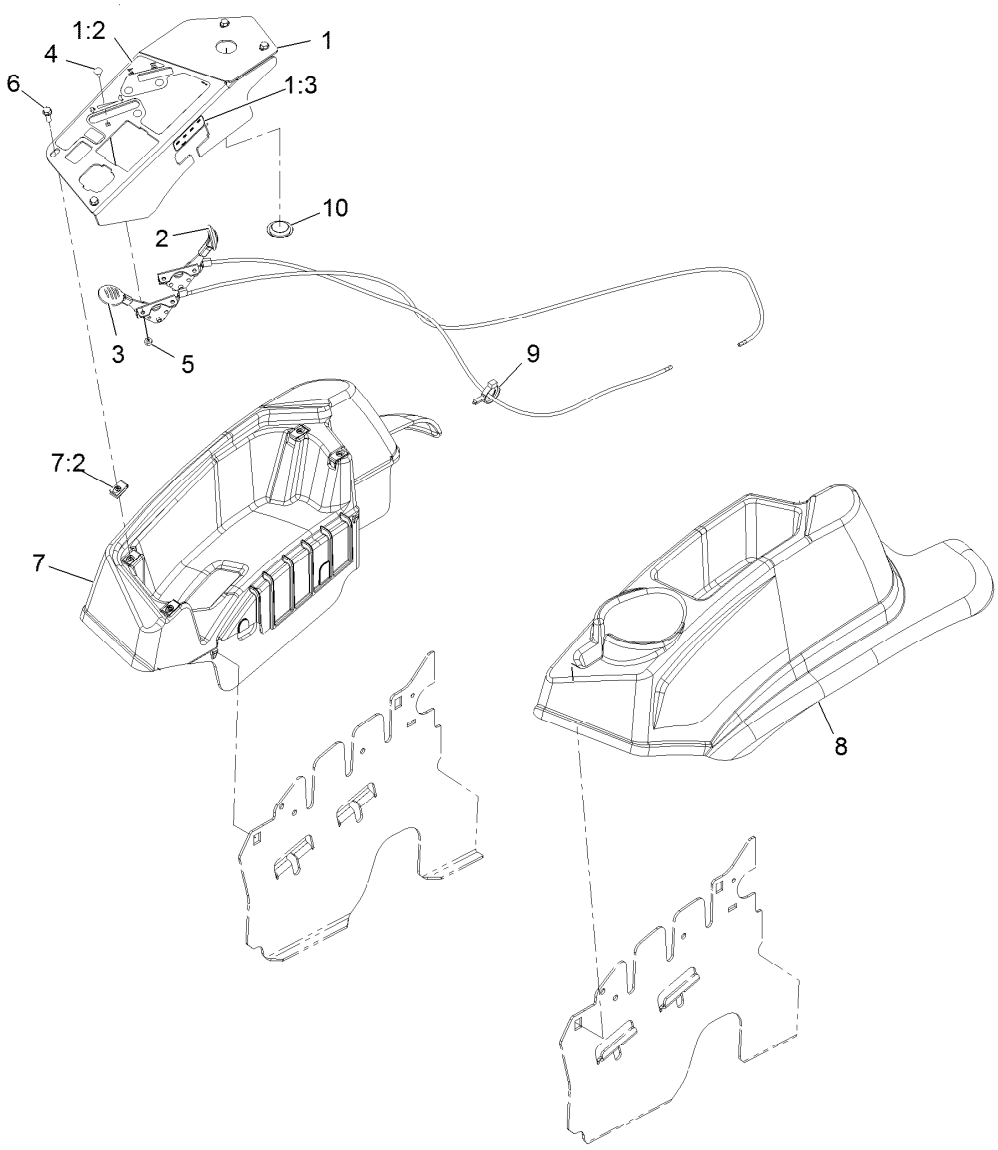

Control Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	116-1845	1	ASM,Console Panel W/Decal
1:2	109-8483	1	Decal-Control Panel
1:3	109-7330	1	Decal-Fuse
2	109-8165	1	ASM, Choke Cable
3	116-0969	1	ASM,Throttle Cable
4	1-807513	4	Bolt-Carriage #10-24 X 1/2
5	3296-2	4	Nut-Nyloc #10-24
6	32105-15	4	Screw-Machine 1/4-20 X 3/4
7	116-1278	1	Console,RH As ASM
7:2	107069	4	Nut-Retainer-Panel 1/4-20
8	109-9457	1	Console, LH As
9	105-1853	1	Clamp-Hose
10	116-1875	1	Plug,Plastic

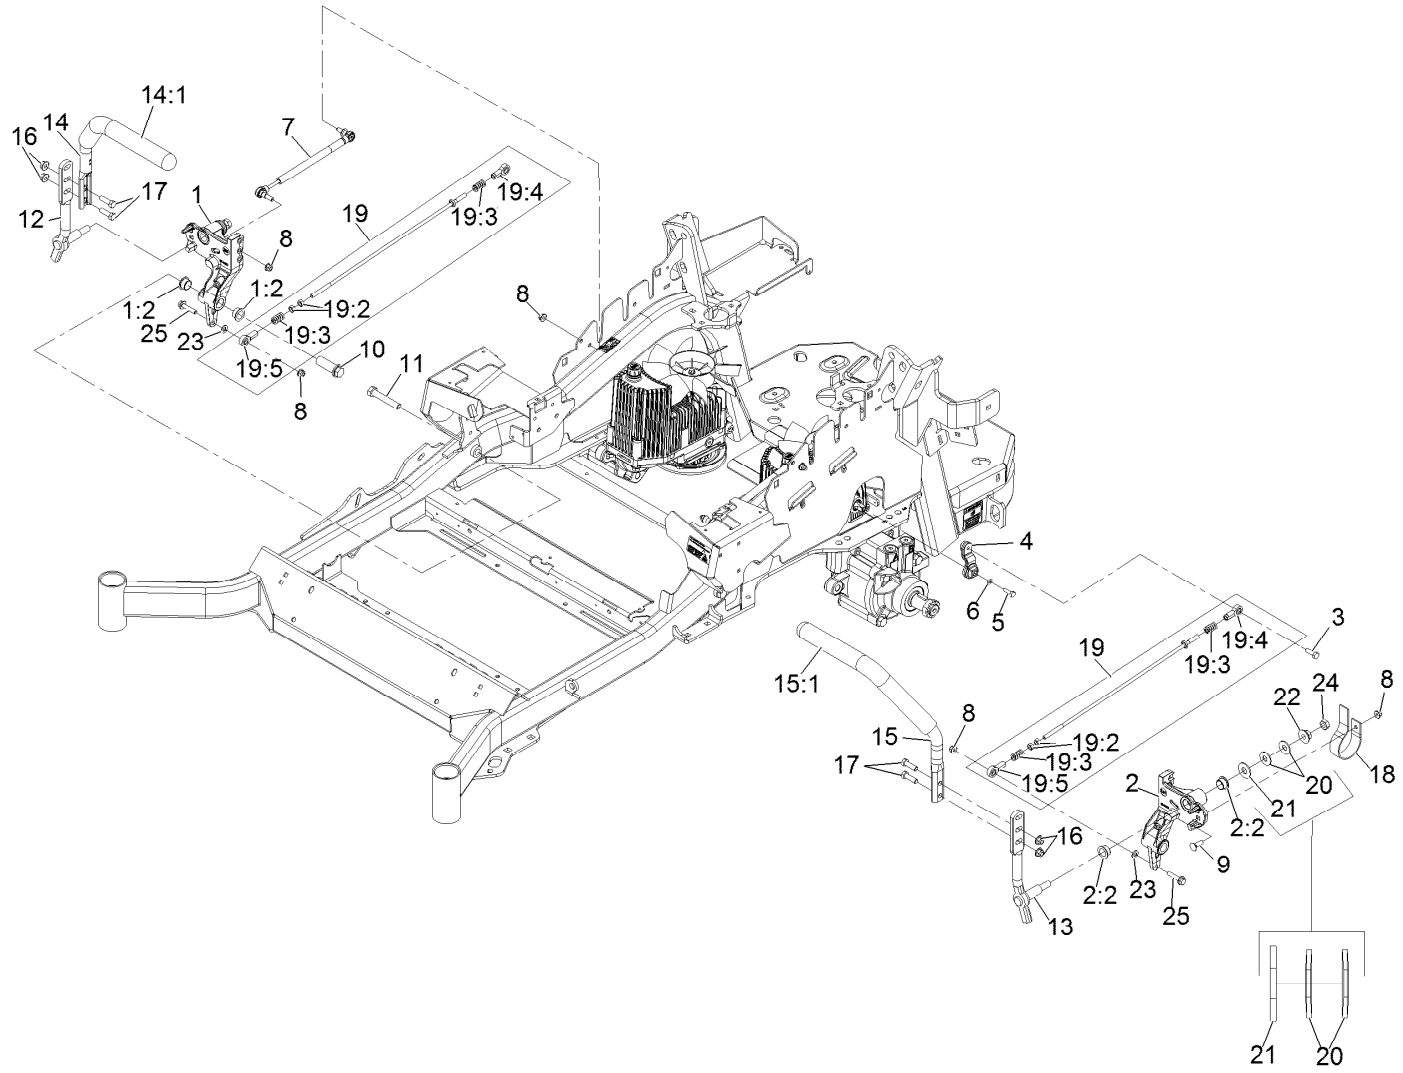

Motion Control Assembly

Ref.	Part Number	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flanged
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flanged
3	116-0648	2	Screw-HH 5/16-18 X 1 W/Patch ●
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH 1/4-20 X 7/8 ●
6	1-303435	2	Washer-Spring Disc 1/4
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Nyloc 5/16-18 Flg
9	3230-2	2	Bolt-Carriage 5/16-18 X 1
10	109-5891	2	Hub-Threaded
11	325-12	2	Screw-HH 1/2-13 X 3
12	116-0039	1	Lever-Control Motion, RH
13	116-0040	1	Lever-Control Motion, LH
14	109-6589	1	RH Steering Handle ASM
14:1	109-5668	1	Grip-Control, Lever
15	109-6590	1	LH Steering Handle ASM
15:1	109-5668	1	Grip-Control, Lever
16	104-8301	4	Nut-Nyloc 3/8-16 Flg
17	323-7	4	Screw-HH 3/8-16 X 1 1/4
18	109-5575	2	Spring-Leaf
19	109-8107	2	Pump Linkage Rear ASM
19:2	3219-2	2	Nut-Hex 5/16-24
19:3	1-323245	2	Spring-Compression
19:4	1-633152	1	Balljoint
19:5	1-543017	1	Balljoint
20	109-9505	4	Washer, Spring Disc 1/2
21	3256-6	2	Washer
22	32128-56	2	Nut-Hex 1/2-13 Flange
23	3256-23	2	Washer-5/16 Sae
24	3218-5	2	Nut-Jam 1/2-13
25	115-1794	2	Screw-Hex Flange 5/16-18 X 1 1/2


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

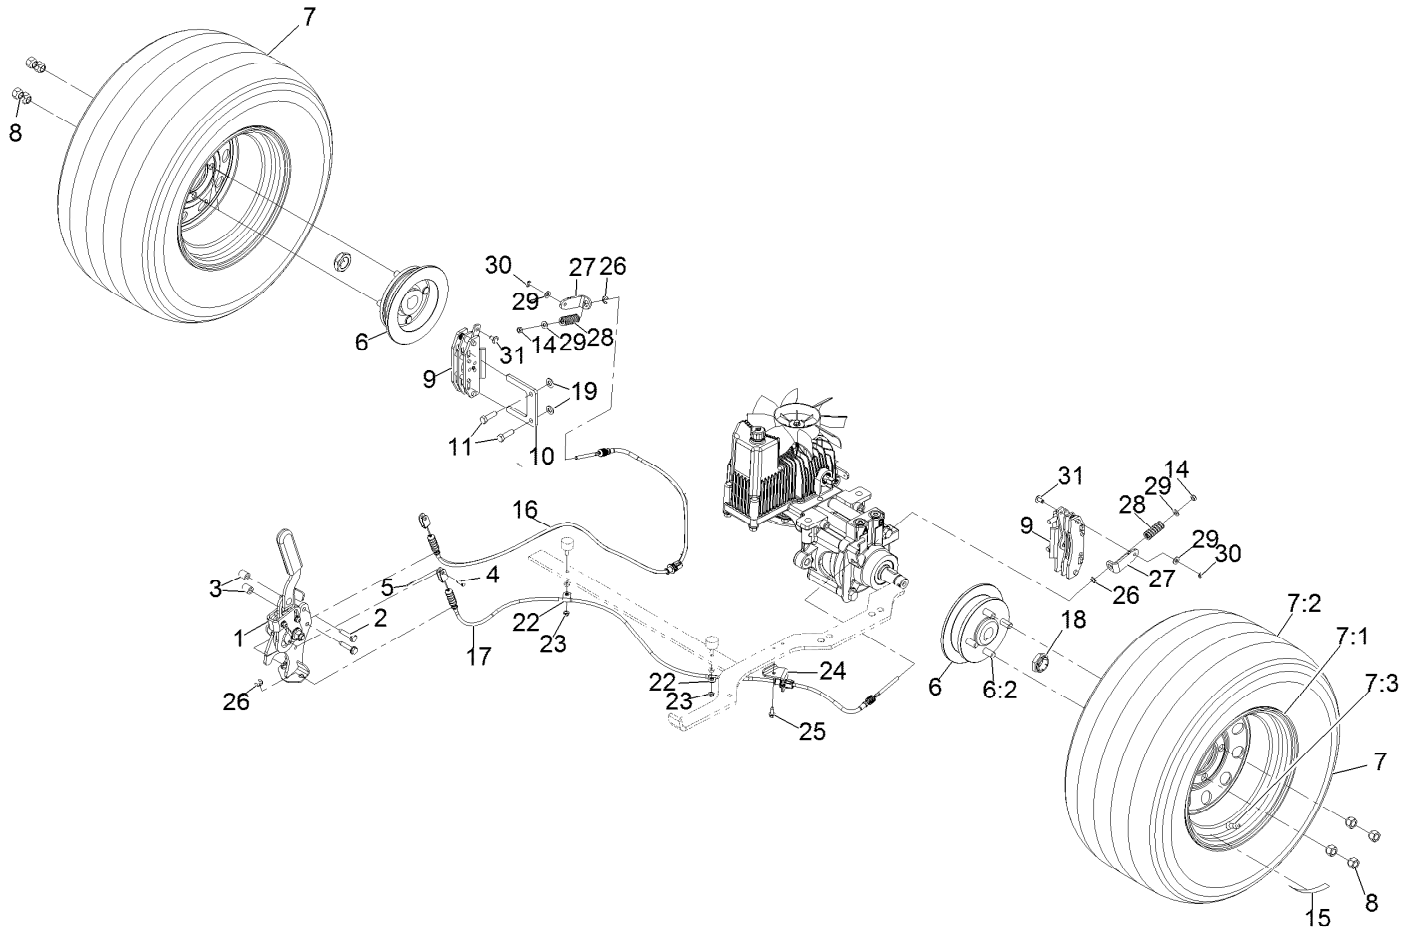

Rear Wheel and Park Brake Assembly

Ref.	Part Number	Qty.	Description
1	116-7551	1	Brake Handle ASM
2	32144-57	2	Screw
3	82-6840	2	Spacer
4	60-1730	2	Pin-Clevis
5	3272-1	2	Pin-Cotter 1/16 X 1/2
6	116-1746	2	Wheel Hub ASM
6:2	116-1696	4	Stud-Wheel
7	116-3138	2	Tire And Wheel ASM
7:1	109-2871	1	Rim
7:2	116-3139	1	Tire-Turf Master
7:3	232-27	1	Stem-Valve
8	242-50	8	Nut-Lug 1/2-20
9	109-2889	2	Caliper-Brake
10	109-0958	2	Plate-Mount, Brake
11	92-5727	4	Screw-HH 3/8-16 X 1 1/4 Patch Lock


Ref.	Part Number	Qty.	Description
14	3296-13	2	Nut-Nyloc 1/4-28
15	116-2643	2	Decal-Wheel Nut Torque
16	116-6364	1	Cable-Park Brake, RH
17	116-6365	1	Cable-Park Brake, LH
18	116-1399	2	Locknut
19	3256-24	4	Washer-3/8 Sae
22	88-7970	2	Clip
23	3296-56	2	Nut-Nyloc 1/4-20 Thin
24	116-6397	1	Bracket-Cable
25	32144-10	1	Screw-HWH 1/4-20 X .62
26	32120-18	4	E-Ring
27	116-6182	2	Bracket-Brake, L
28	116-6347	2	Spring-Die
29	3256-22	4	Washer-1/4 Sae
30	32151-86	2	E-Ring
31	116-6348	2	Pin-Brake

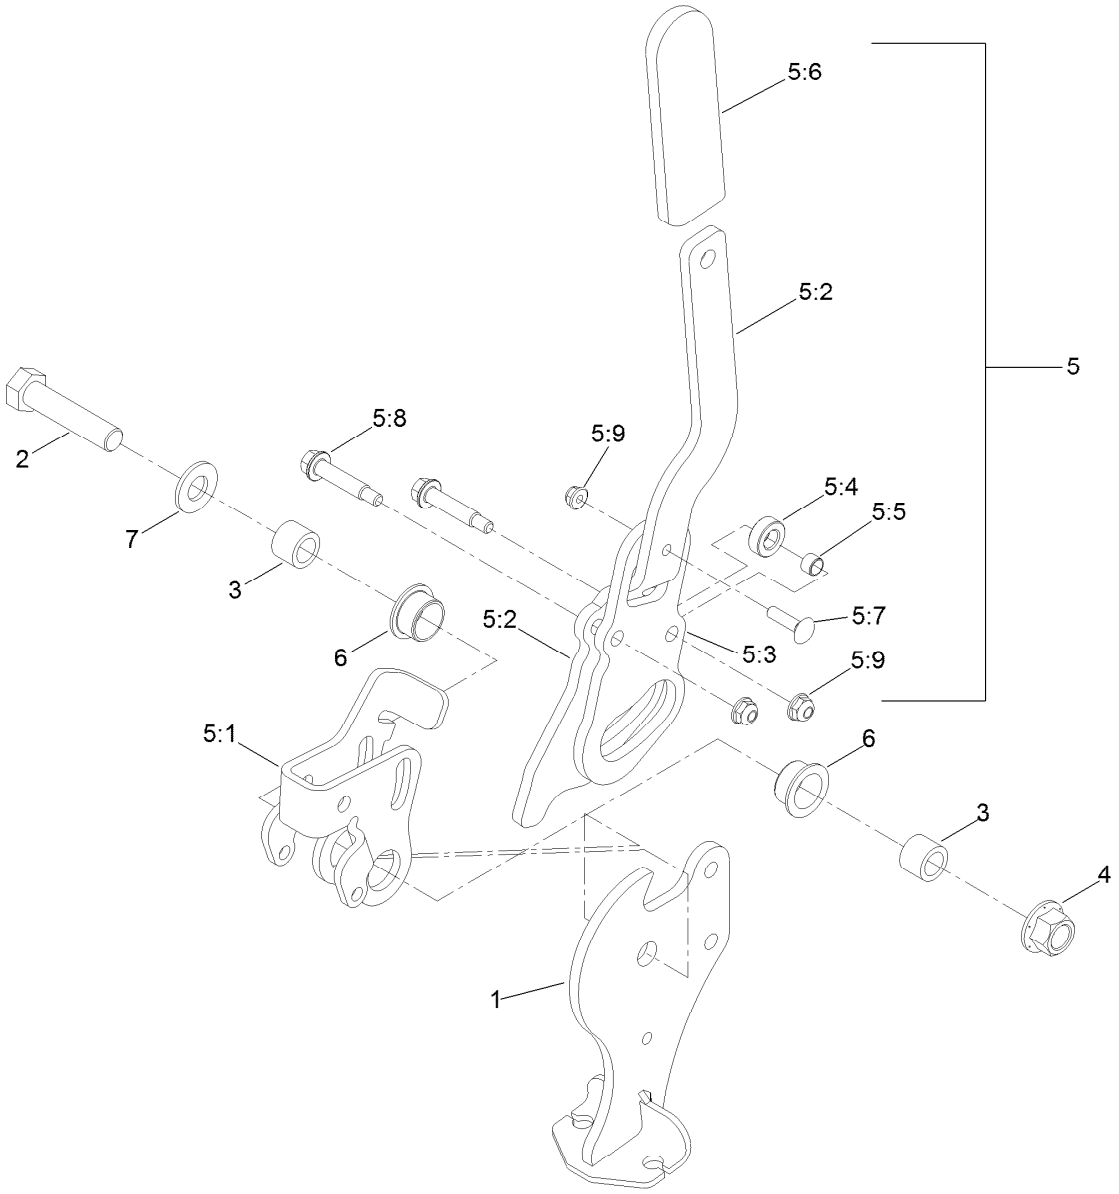

Parking Brake Handle Assembly No. 116-7551


Ref.	*Part Number*	*Qty.*	*Description*
1	116-7263	1	Pivot-Brake
2	325-9	1	Screw-HH 1/2-13 X 2 1/4
3	116-5384	2	Spacer
4	99-5107	1	Nut-Lock 1/2-13
5	116-6860	1	Handle ASM
5:1	116-6856	1	Bellcrank-Brake
5:2	116-6857	1	Handle-Brake
5:3	116-6858	1	Plate-Handle

Ref.	*Part Number*	*Qty.*	*Description*
5:4	116-6846	1	Roller-Brake
5:5	116-6852	1	Bearing-Sleeve
5:6	1-633268	1	Grip-Lever
5:7	3229-2	1	Bolt-Carriage 1/4-20 X 1
5:8	116-6876	2	Screw-Shoulder
5:9	104-7201	3	Nut-Nyloc 1/4-20 Flg
6	109-8054	2	Bushing-Flanged
7	3256-26	1	Washer-1/2 Sae

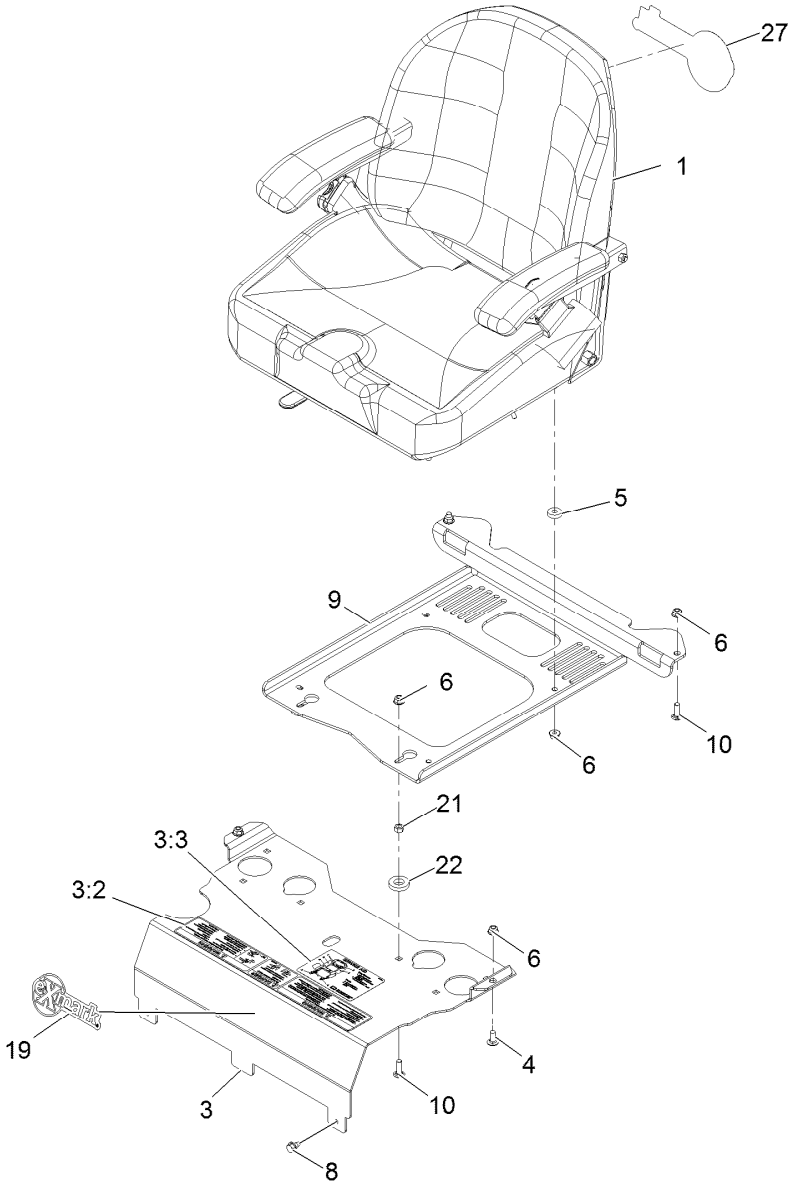


Seat Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	116-6192	1	ASM-Seat, Lze
3	116-2323	1	Mount-Seat
3:2	109-7069	1	Decal-Console
3:3	116-0211	1	Decal-Service Aid
4	3230-23	2	Bolt-Carriage 5/16-18 X 3/4 Short Neck
5	26-4840	4	Spacer-Pin, Mounting
6	104-8300	10	Nut-Nyloc 5/16-18 Flg
8	9266934	2	Screw-HWH 5/16 X 1/2 Tf
9	116-0192-03	1	Plate-Support, Seat
10	3230-22	4	Bolt-Carriage 5/16-18 X 1 Sp
19	103-2883	1	Decal
21	3217-6	2	Nut-Hex 5/16-18
22	1-323539	2	Spacer-Blade Drive
27	103-2882	1	Decal,Exmark Logo

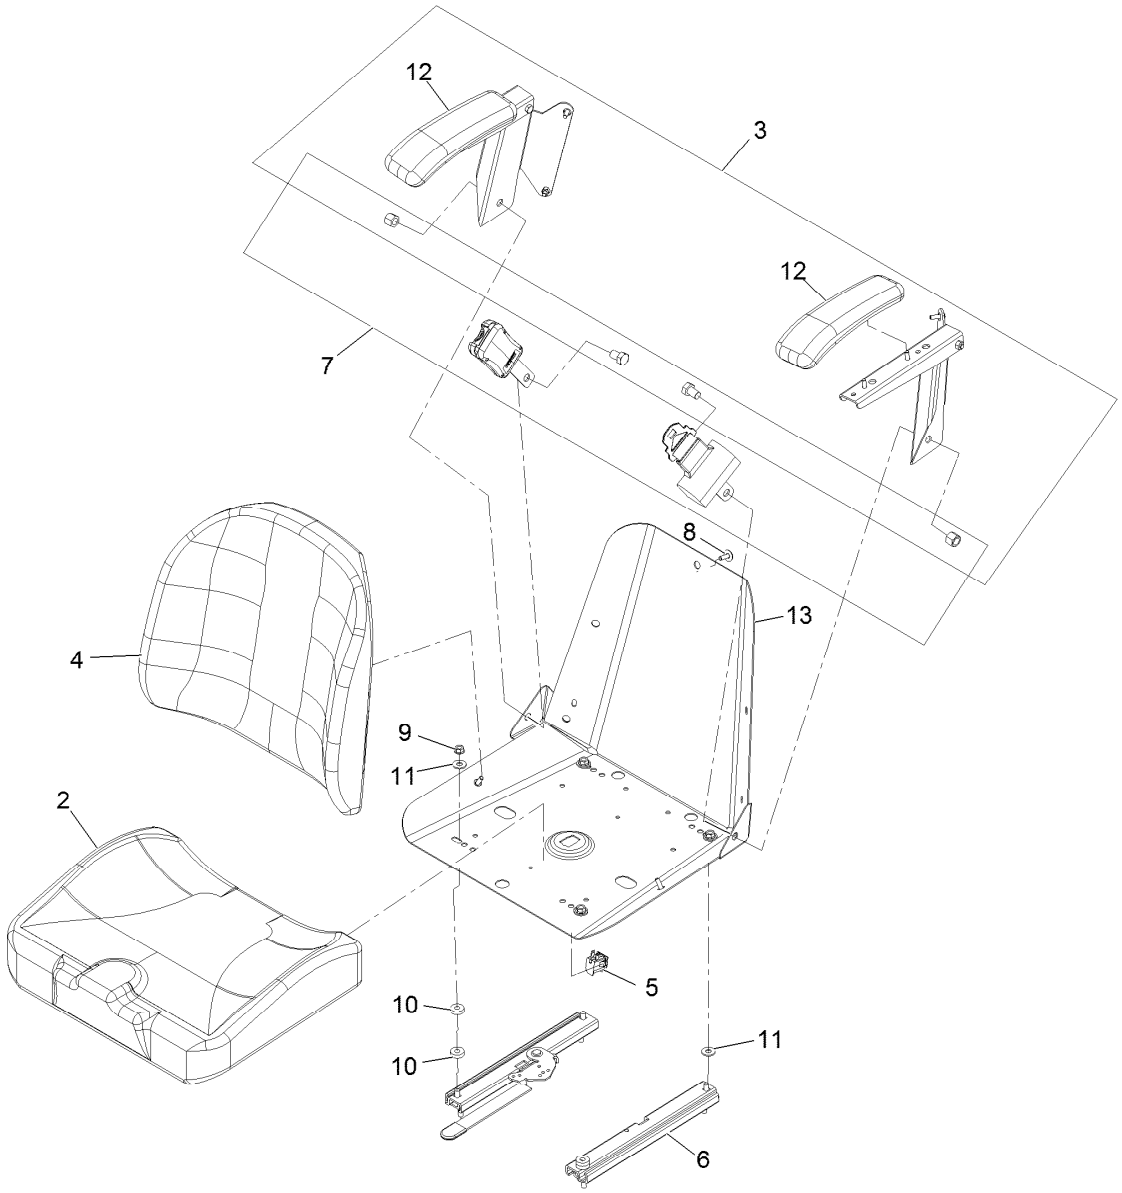


Seat W/Tracks Assembly No. 116-6192

Ref.	*Part Number*	*Qty.*	*Description*
2	116-7329	1	Cushion-Seat Bottom
3	110-5719	1	Armrest Kit
4	116-3738	1	Cushion,Seat Back
5	82-2190	1	Switch
6	1-643255	1	Track-Seat
7	116-2981	1	Seat Belt Kit
8	103-8383	7	Screw-HWH 1/4-20 X 3/4 Taptite
9	32128-20	4	Nut-Whizlock 5/16-18
10	26-4840	4	Spacer-Pin, Mounting
11	3256-3	6	Washer-5/16 Std
12	110-4163	2	Cushion-Rest, Arm
13	116-7496	1	Frame-Seat

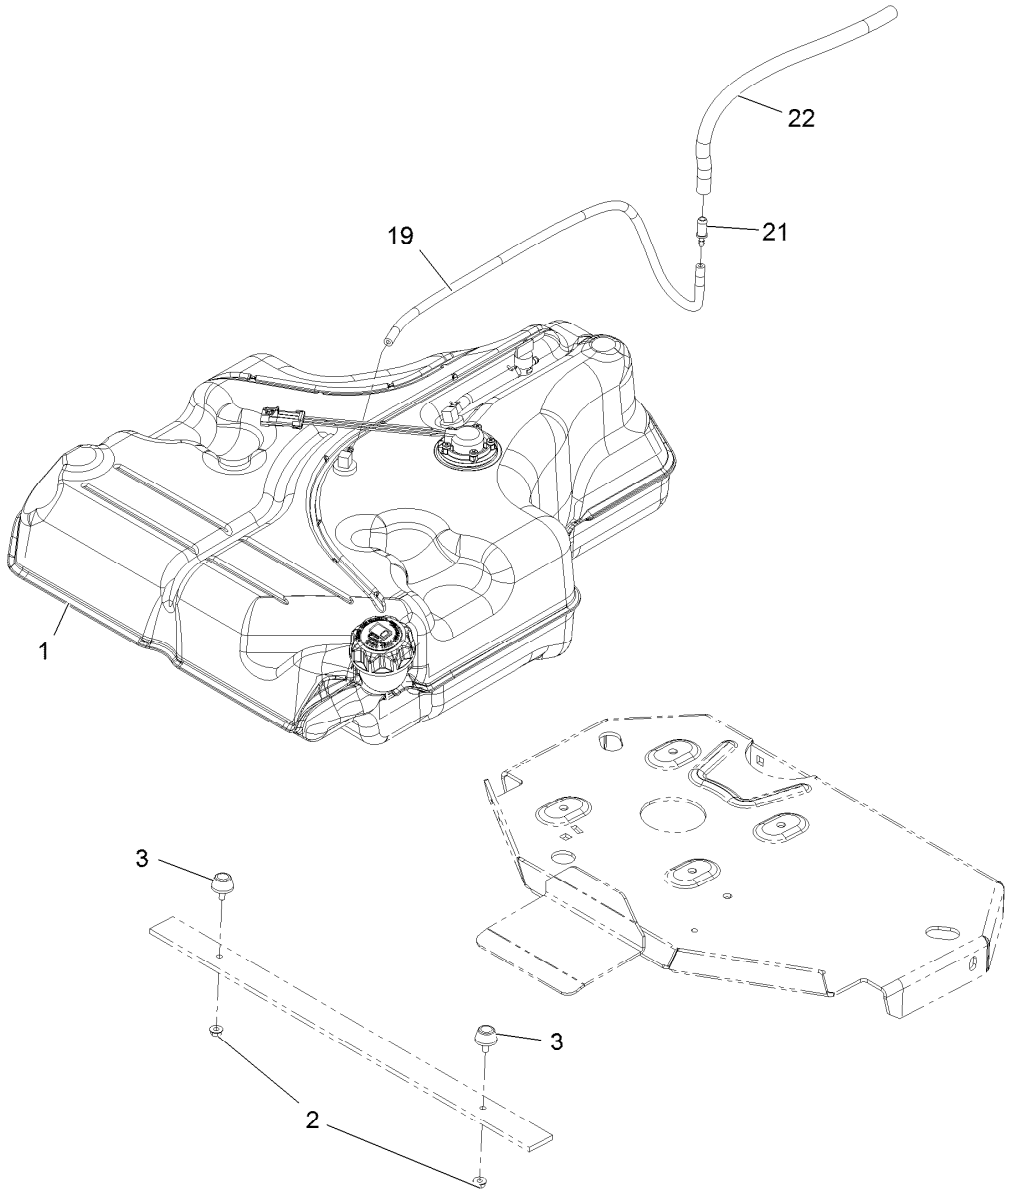


Fuel Tank Mounting Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	116-3978	1	Fuel Tank ASM
2	3218-1	2	Nut-Jam
3	116-6380	2	Bumper-Rubber (W/ Stud)
19	117-9569	1	Hose-Fuel
21	98-2952	1	Fitting-Straight
22	116-4344	1	Hose-Fuel

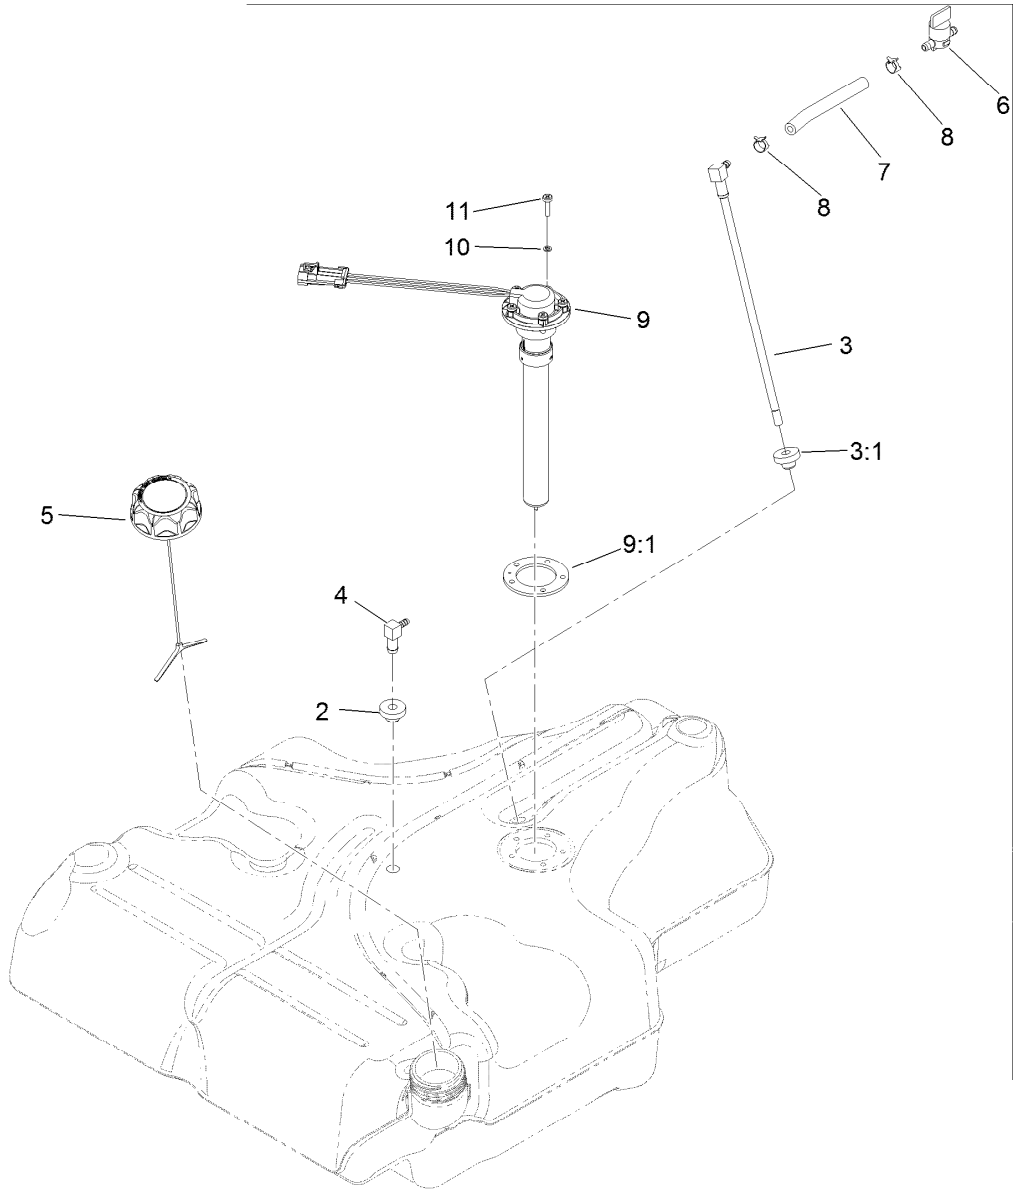

Fuel Tank Assembly No. 116-3978

Ref.	*Part Number*	*Qty.*	*Description*
2	46-6560	2	Bushing
3	116-2459	1	Fuel Line Kit (With Grommet)
3:1	46-6560	1	Bushing
4	116-2288	1	Fitting-90 Elbow
5	116-1704	1	Cap-Fuel, Ratcheting
6	1-603770	1	Valve-Fuel
7	109-0650	1	Hose-Fuel
8	2412-98	2	Clamp-Hose
9	116-1981	1	Sender-Fuel
9:1	109-9620	1	Gasket-Sender, Fuel
10	3253-17	5	Washer-Lock 3/16
11	9107944	5	Screw-Pan 10-24 X 3/4

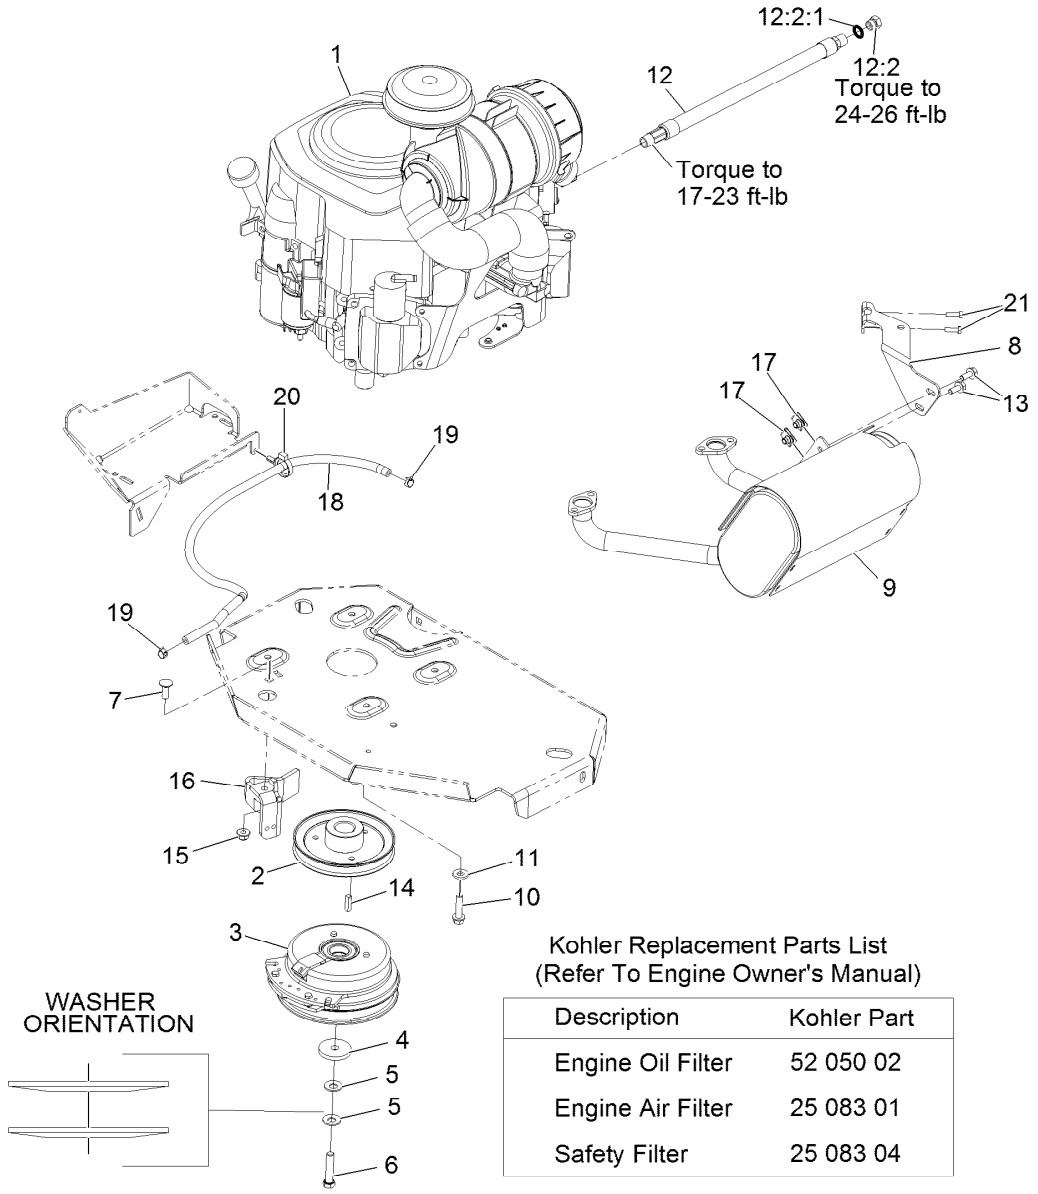

Kohler Replacement Parts List
(Refer To Engine Owner's Manual)

Description	Kohler Part
Engine Oil Filter	52 050 02
Engine Air Filter	25 083 01
Safety Filter	25 083 04

Engine Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1		1	Engine-Kohler, Ps-Cv740-3135 ●■
2	116-1946	1	Sheave-Pump, Drive
3	116-1620	1	Clutch Kit
4	109-6919	1	Washer-Clutch
5	1-603610	2	Washer-Spring Disc 7/16
6	109-9762	1	Screw-HH 7/16-20 X 2 W/Loctite ▲
7	3231-22	1	Bolt-Carriage 3/8-16 X 1
8	116-4297	1	Muffler Bracket Kit
9	116-1713	1	Muffler
10	32144-102	4	Screw-HWH 3/8-16 X 1 1/2 Taptite
11	98-5975	4	Washer-Spring Disc 3/8

Ref.	*Part Number*	*Qty.*	*Description*
12	116-5316	1	Oil Drain Hose ASM
12:2	353-508	1	Plug-W/O-Ring
12:2:1	237-42	1	O-Ring
13	3234-5	3	Screw-HH Flg 5/16-18 X 3/4
14	1-807259	1	Key-Machine 1/4 X 1/4 X 1
15	104-8301	1	Nut-Nyloc 3/8-16 Flg
16	116-2612-01	1	Clutch-Anchor
17	94-2413	3	U-Nut
18	109-0286	1	Hose-Fuel Line 35"
19	2412-98	2	Clamp-Hose
20	104-2490	1	Clamp-Hose
21	116-4295	2	Screw-HH M6-1 X 20Mm W/Patch

● Not serviced separately

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


■ Obtain parts from www.kohlerplus.com

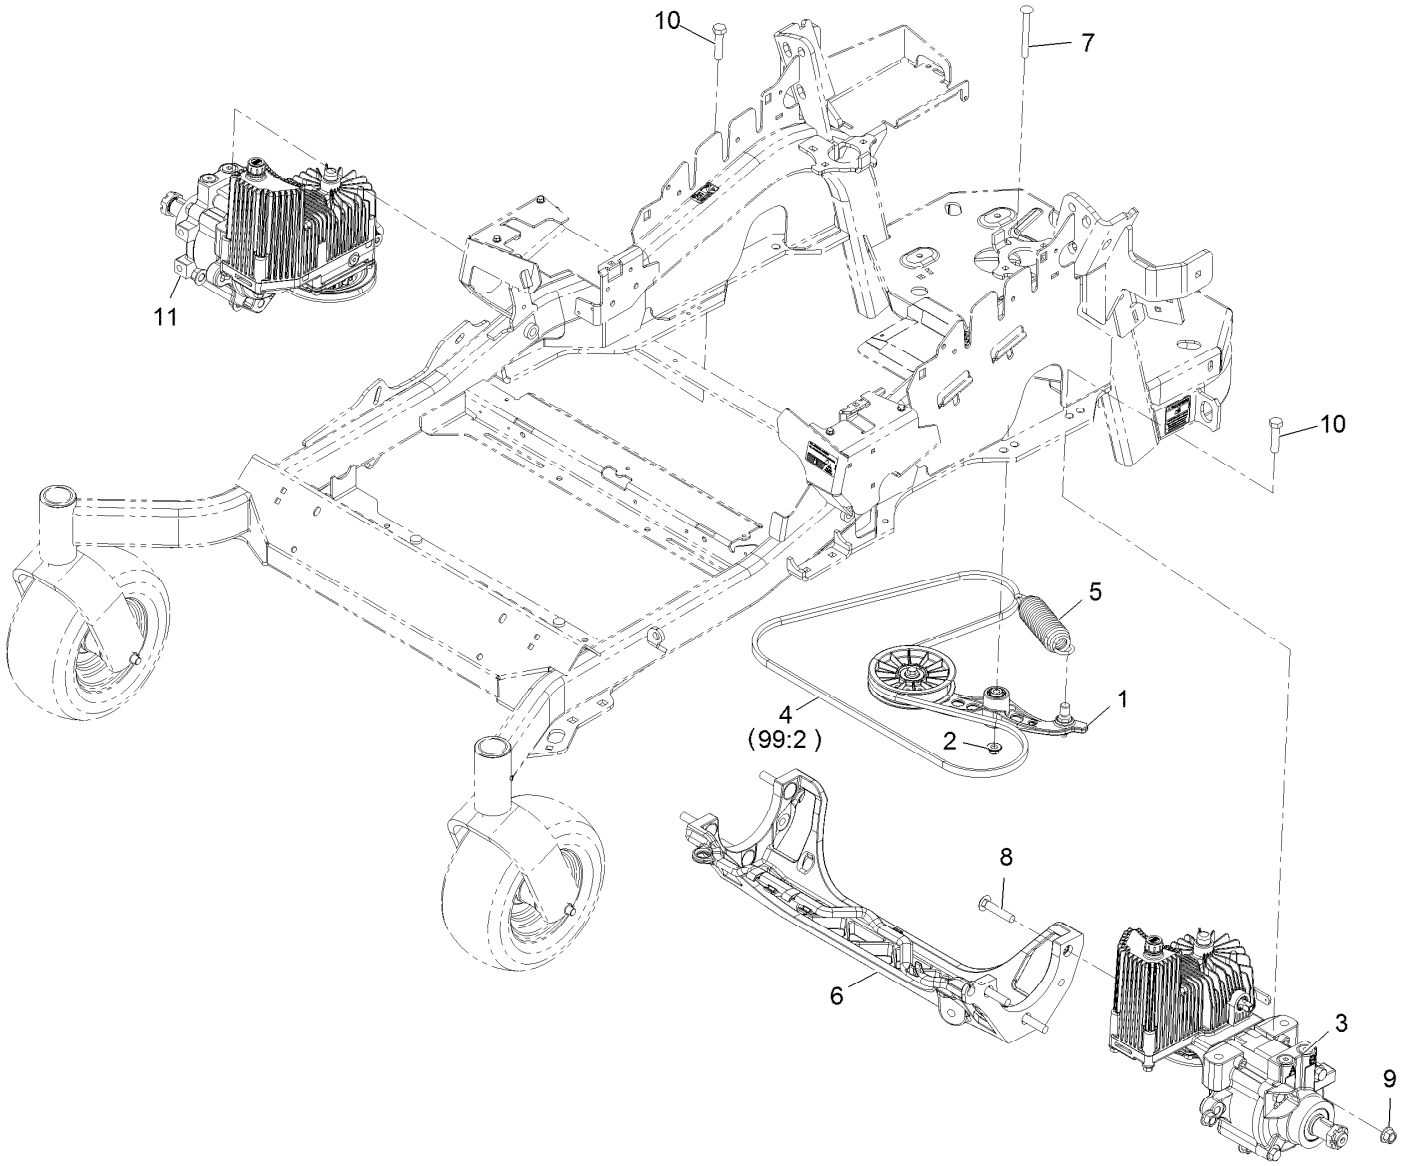

Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	116-1255	1	Pump Idler ASM
2	109-6658	1	Nut-Nyloc 3/8-16 Flg
3	116-6417	1	LH Hydro ASM (12Cc No Fan)
4	116-1953	1	Belt-V
5	116-6317	1	Spring-Extension
6	109-9375	1	Cradle-Hydro
7	116-1502	1	Bolt-Carriage Shoulder 3/8-16 X 3 1/2
8	126-0095	6	Screw-CARR
9	99-5107	6	Nut-Lock 1/2-13
10	325-8	4	Screw-HH 1/2-13 X 1 1/4
11	116-6418	1	RH Hydro ASM (12Cc No Fan)
99	109-9828	1	Bottle-Oil, 32Oz Hydraulic ●
99	116-0164	1	Filter-Hydro ●
99	116-1218	1	Bottle,Oil 1 Gallon Hydraulic ●
99	116-3282	1	Kit,Hydro Service ●
99:1	109-9828	4	Bottle-Oil, 32Oz Hydraulic ●
99:2	116-1953	1	Belt-V
99:3	116-0164	2	Filter-Hydro ●

● Not illustrated

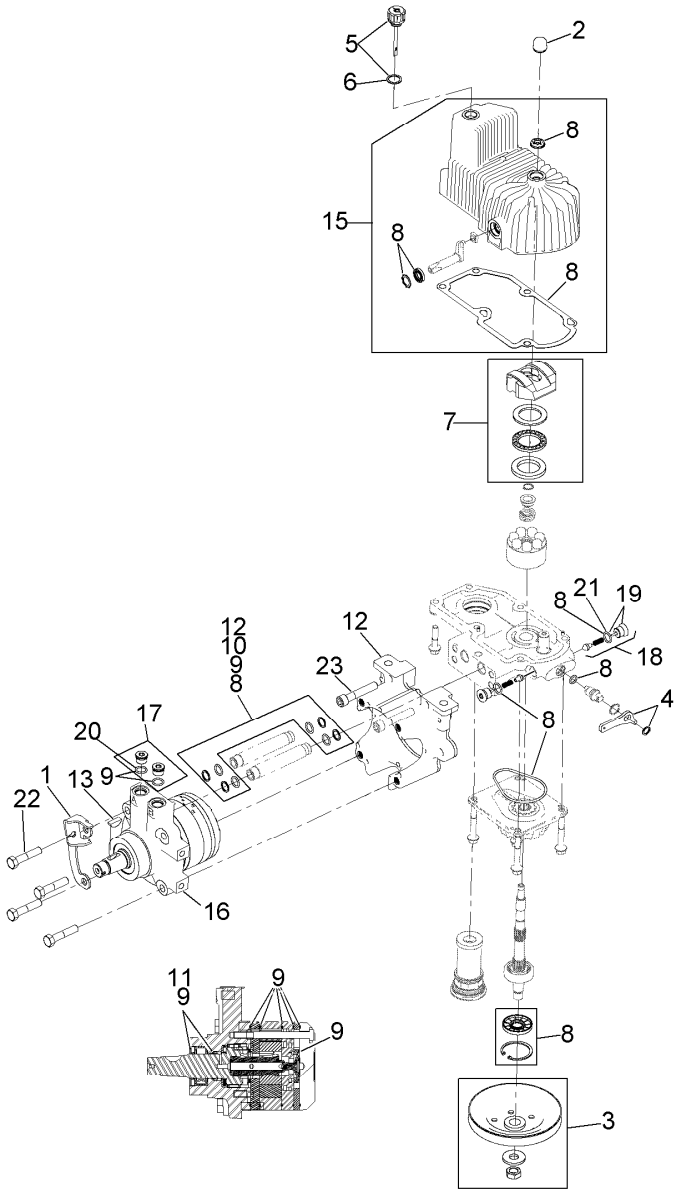


LH Hydro Assembly No. 116-6417

Ref.	Part Number	Qty.	Description
1	116-6859	1	Bracket-Anchor, Cable
2	116-3052	1	Cover-Shaft, Hydro
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle-Bypass Valve, Hydro
5	116-0236	1	Dipstick-Hydro W/Gasket
6	116-0237	1	Gasket-Dipstick, Hydro
7	116-1367	1	Swash Block Kit
8	116-1368	1	Pump Seal Kit
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit

Ref.	Part Number	Qty.	Description
12	116-5469	1	Nose Cup-Uht
13	3257-42	1	Key-Woodruff 5/16 X 1
15	116-3287	1	Housing-LH
16	116-8915	1	Motor-Hydraulic LH 240Cc
17	116-7901	1	Magnetic Plugs Service Kit
18	116-1630	2	Check Valve ASM
19	116-1631	2	Plug-Check (W/O-Ring)
20	76-1900	2	O-Ring
21	116-8662	2	O-Ring-Check Valve
22	116-8974	4	Screw-HH 1/2-20 X 2 1/4
23	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
99	116-1373	1	Flow Test Kit ●


● Not illustrated

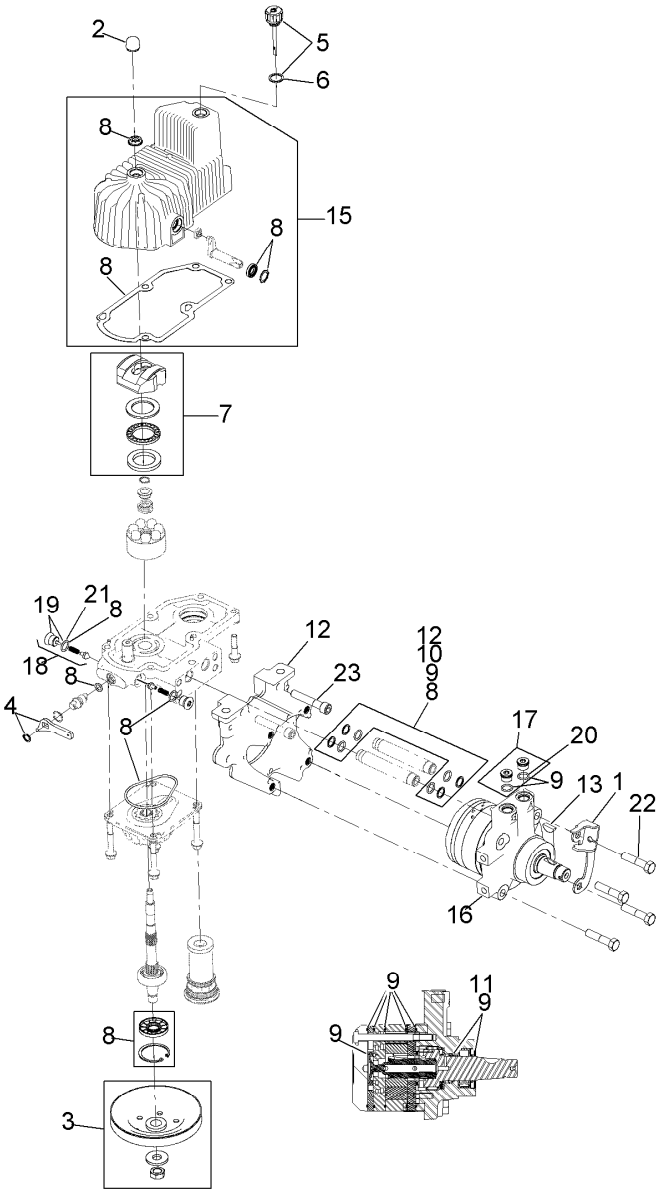

RH Hydro Assembly No. 116-6418


Ref.	Part Number	Qty.	Description
1	116-6859	1	Bracket-Anchor, Cable
2	116-3052	1	Cover-Shaft, Hydro
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle-Bypass Valve, Hydro
5	116-0236	1	Dipstick-Hydro W/Gasket
6	116-0237	1	Gasket-Dipstick, Hydro
7	116-1367	1	Swash Block Kit
8	116-1368	1	Pump Seal Kit
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Nose Cup-Uht
13	3257-42	1	Key-Woodruff 5/16 X 1
15	116-3288	1	Housing-RH
16	116-8916	1	Motor-Hydraulic RH 240Cc
17	116-7901	1	Magnetic Plugs Service Kit
18	116-1630	2	Check Valve ASM
19	116-1631	2	Plug-Check (W/O-Ring)
20	76-1900	2	O-Ring
21	116-8662	2	O-Ring-Check Valve
22	116-8974	4	Screw-HH 1/2-20 X 2 1/4
23	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
99	116-1373	1	Flow Test Kit ●

● Not illustrated

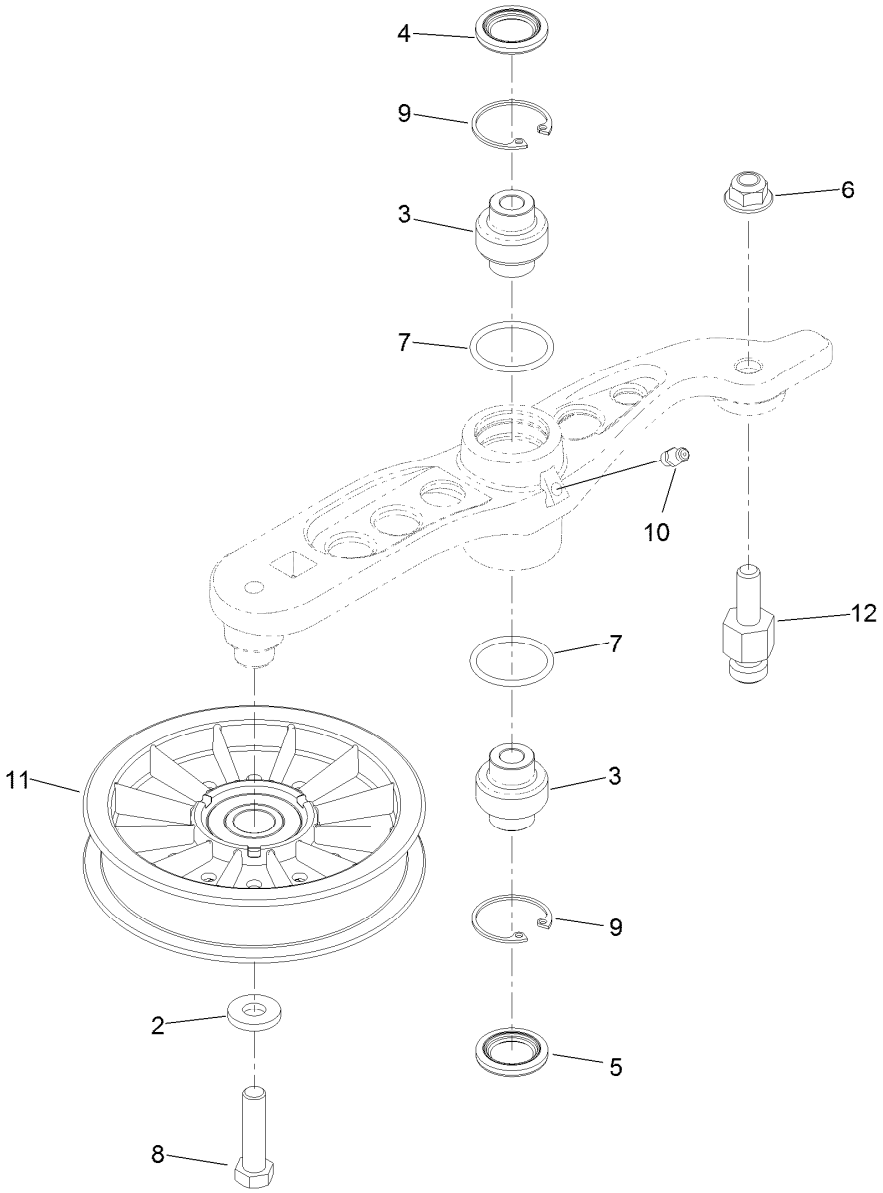

Pump Idler Assembly No. 116-1255

Ref.	*Part Number*	*Qty.*	*Description*
2	43-0940	1	Spacer
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Double Lip
5	103-3506	1	Seal-Single Lip
6	109-6658	1	Nut-Flange, NI
7	106-7159	2	O-Ring
8	323-8	1	Screw-HH
9	32120-10	2	Ring-Snap
10	302-19	1	Fitting-Grease
11	109-8076	1	Pulley-Idler
12	116-3467	1	Pin-Spring, Anchor

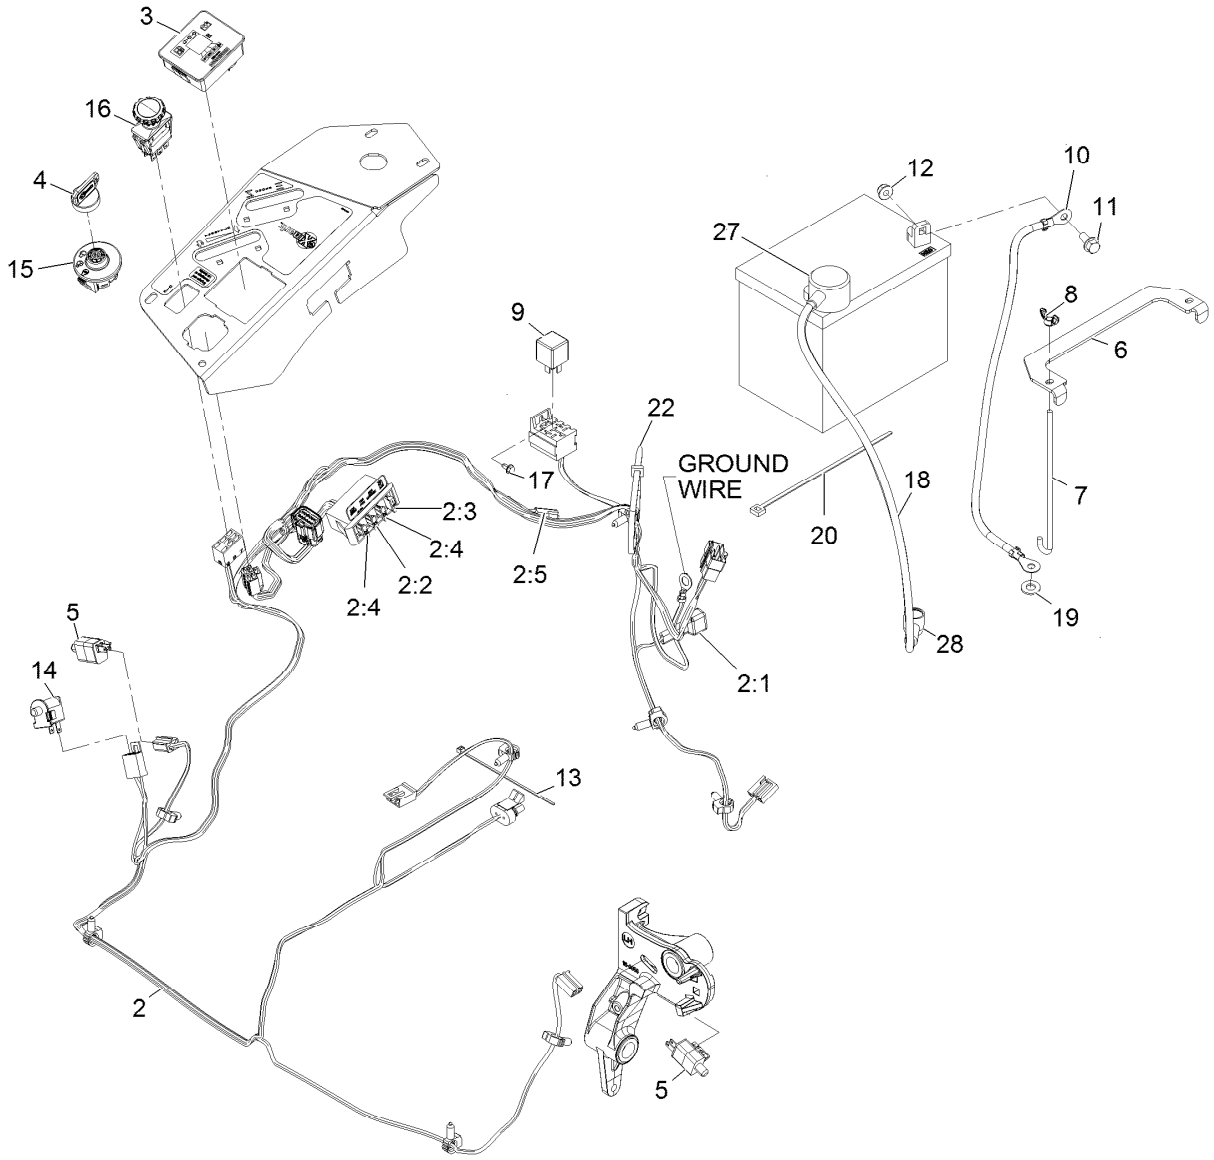

Electrical Assembly

Ref.	Part Number	Qty.	Description
2	116-6009	1	Harness-Wire, Main ●
2:1	103-3895	1	Diode-Tvs
2:2	218-578	1	Fuse-Blade, 10 Amp
2:3	109355	1	Fuse-Blade, 15 Amp
2:4	109102	2	Fuse-Blade, 25 Amp
2:5	116-0053	1	Cap-Plug
3	117-3882	1	Fuel/Hour Meter ASM
4	1-603511	1	Key-Ignition
4	103-2106	1	Key-Exmark Logo
5	110-6765	2	Switch
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut-Nyloc 1/4-20
9	1-643275	1	Relay-12Vdc 40 Amp

Ref.	Part Number	Qty.	Description
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
12	104-8300	2	Nut-Nyloc 5/16-18 Flg
13	1-303287	3	Tie-Cable 5 1/2 (Small)
14	82-2190	1	Switch
15	117-2221	1	Switch-Ignition
16	116-0124	1	Switch-PTO, 10A
17	104-2065	1	Screw-HWH #10-24 X 3/8
18	115-3864	1	Cable-Battery, Positive
19	3256-24	1	Washer-3/8 Sae
20	1-303335	1	Tie-Cable 7 15/16 (Large)
22	1-303335	1	Tie-Cable 7 15/16 (Large)
27	109-2407	1	Insulator-Battery
28	1-543393	1	Insulator-Solenoid

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2014 Exmark Mfg. Co., Inc.
All Rights Reserved

Industrial Park Box 808
Beatrice, NE 68310
(402) 223-6300
Fax (402) 223-5489

Part No. 4501-010 Rev. G
Printed in the USA.



www.exmark.com