Form No. 3388-589 Rev A

TORO®

Count on it.

Parts Catalog

# 53cm Super Recycler®

## Lawn Mower

**Model No. 20797—Serial No. 315000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3388-589* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents


Housing Assembly . . . . . 4
Housing Assembly No. 115-2855 . . . . . 6
Rear Door and Mulch Plug Assembly . . . . . 8
Bag Assembly . . . . . 10
Engine and Blade Assembly . . . . . 12
Front Wheel and Height-of-Cut Assembly . . . . . 14
Rear Wheel and Height-of-Cut Assembly . . . . . 16
Handle Assembly . . . . . 18
Electrical Assembly . . . . . 20
Attachments and Accessories . . . . . 22

**© 2015—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**


# Housing Assembly

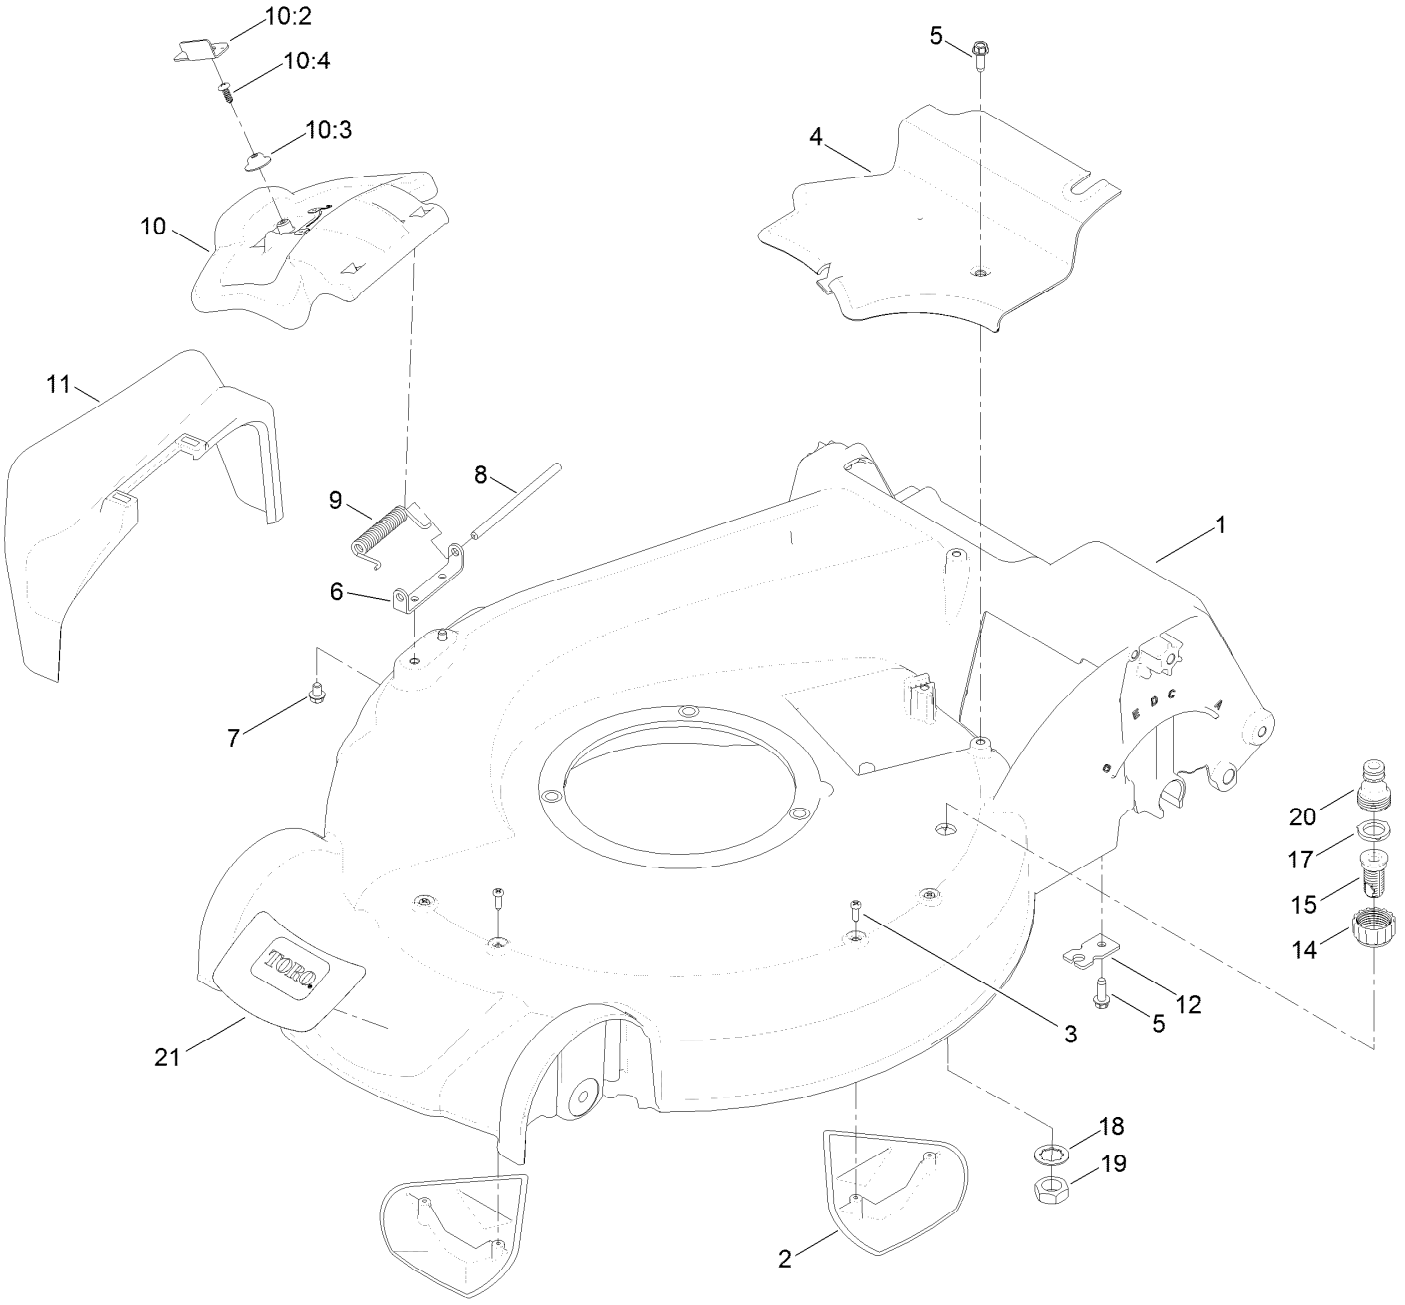

# Housing Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 115-2855 | 1 | Housing ASM |
| 2 | 108-3798 | 2 | Kicker-Housing |
| 3 | 32144-111 | 4 | Screw-PPH |
| 4 | 107-7494 | 1 | Cover-Belt |
| 5 | 49-2040 | 2 | Screw-HWHTF |
| 6 | 112-6416 | 1 | Bracket-Cover |
| 7 | 99-8445 | 2 | Screw-HWH |
| 8 | 99-5291 | 1 | Rod-Cover |
| 9 | 99-5293 | 1 | Spring-Torsion |
| 10 | 107-3717 | 1 | Discharge Door ASM |
| 10:2 | 107-0795 | 1 | Latch-Door |
| 10:3 | 107-7456 | 1 | Cap-Door |
| 10:4 | 107-7461 | 1 | Screw-Plastite |
| 11 | 108-3753 | 1 | Chute-Discharge, Side |
| 12 | 107-7497 | 1 | Bracket-Cable, Traction |
| 14 | 112-6401 | 1 | Coupling-Hose, Washout Port |
| 15 | 112-6400 | 1 | Port-Washout |
| 17 | 112-6438 | 1 | Washer-Seal, Washout Port |
| 18 | 3254-5 | 1 | Washer-Tooth, Internal |
| 19 | 3218-6 | 1 | Nut-Jam |
| 20 | 112-6437 | 1 | Adapter-Connect, Quick |
| 21 | 120-5232 | 1 | Decal-Deck |


# Housing Assembly No. 115-2855

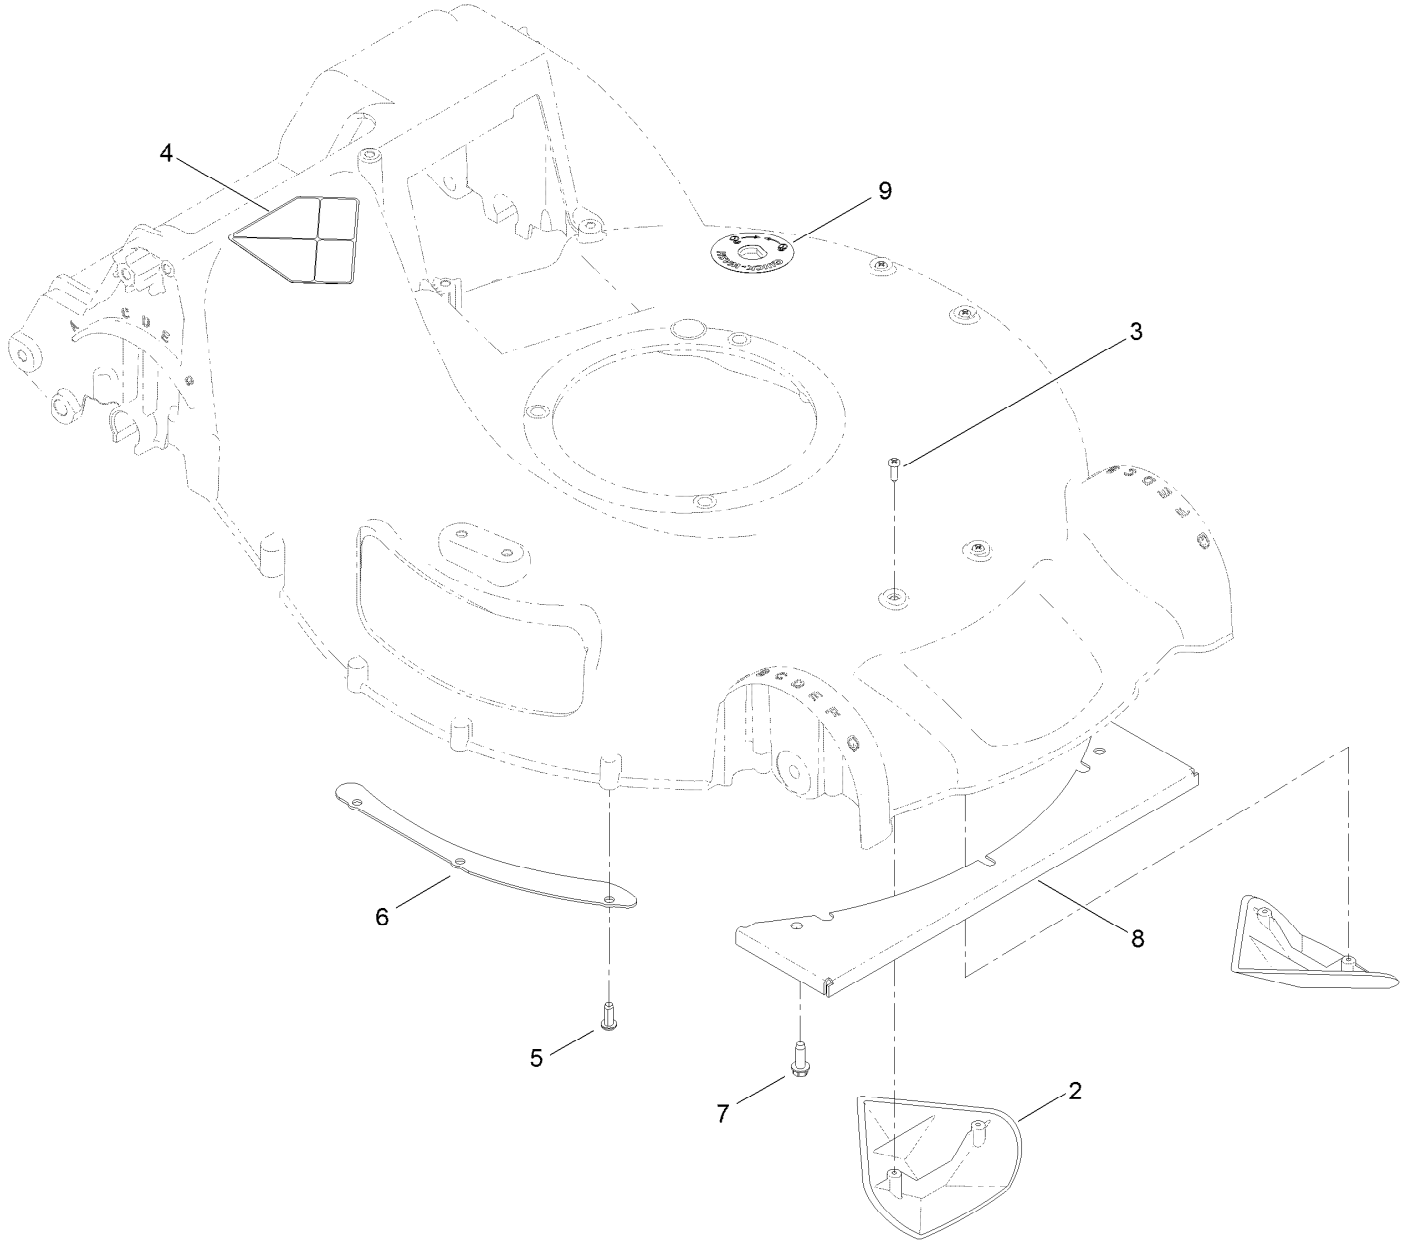

# Housing Assembly No. 115-2855 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 108-3798 | 2 | Kicker-Housing |
| 3 | 32144-111 | 4 | Screw-PPH |
| 4 | 112-8760 | 1 | Decal-Danger |
| 5 | 63-8590 | 3 | Screw |
| 6 | 105-1316-03 | 1 | Sheet-Lip |
| 7 | 49-2040 | 3 | Screw-HWHTF |
| 8 | 108-3797-03 | 1 | Plate-Cover, Front |
| 9 | 112-8867 | 1 | Decal-Port, Washout |


# Rear Door and Mulch Plug Assembly

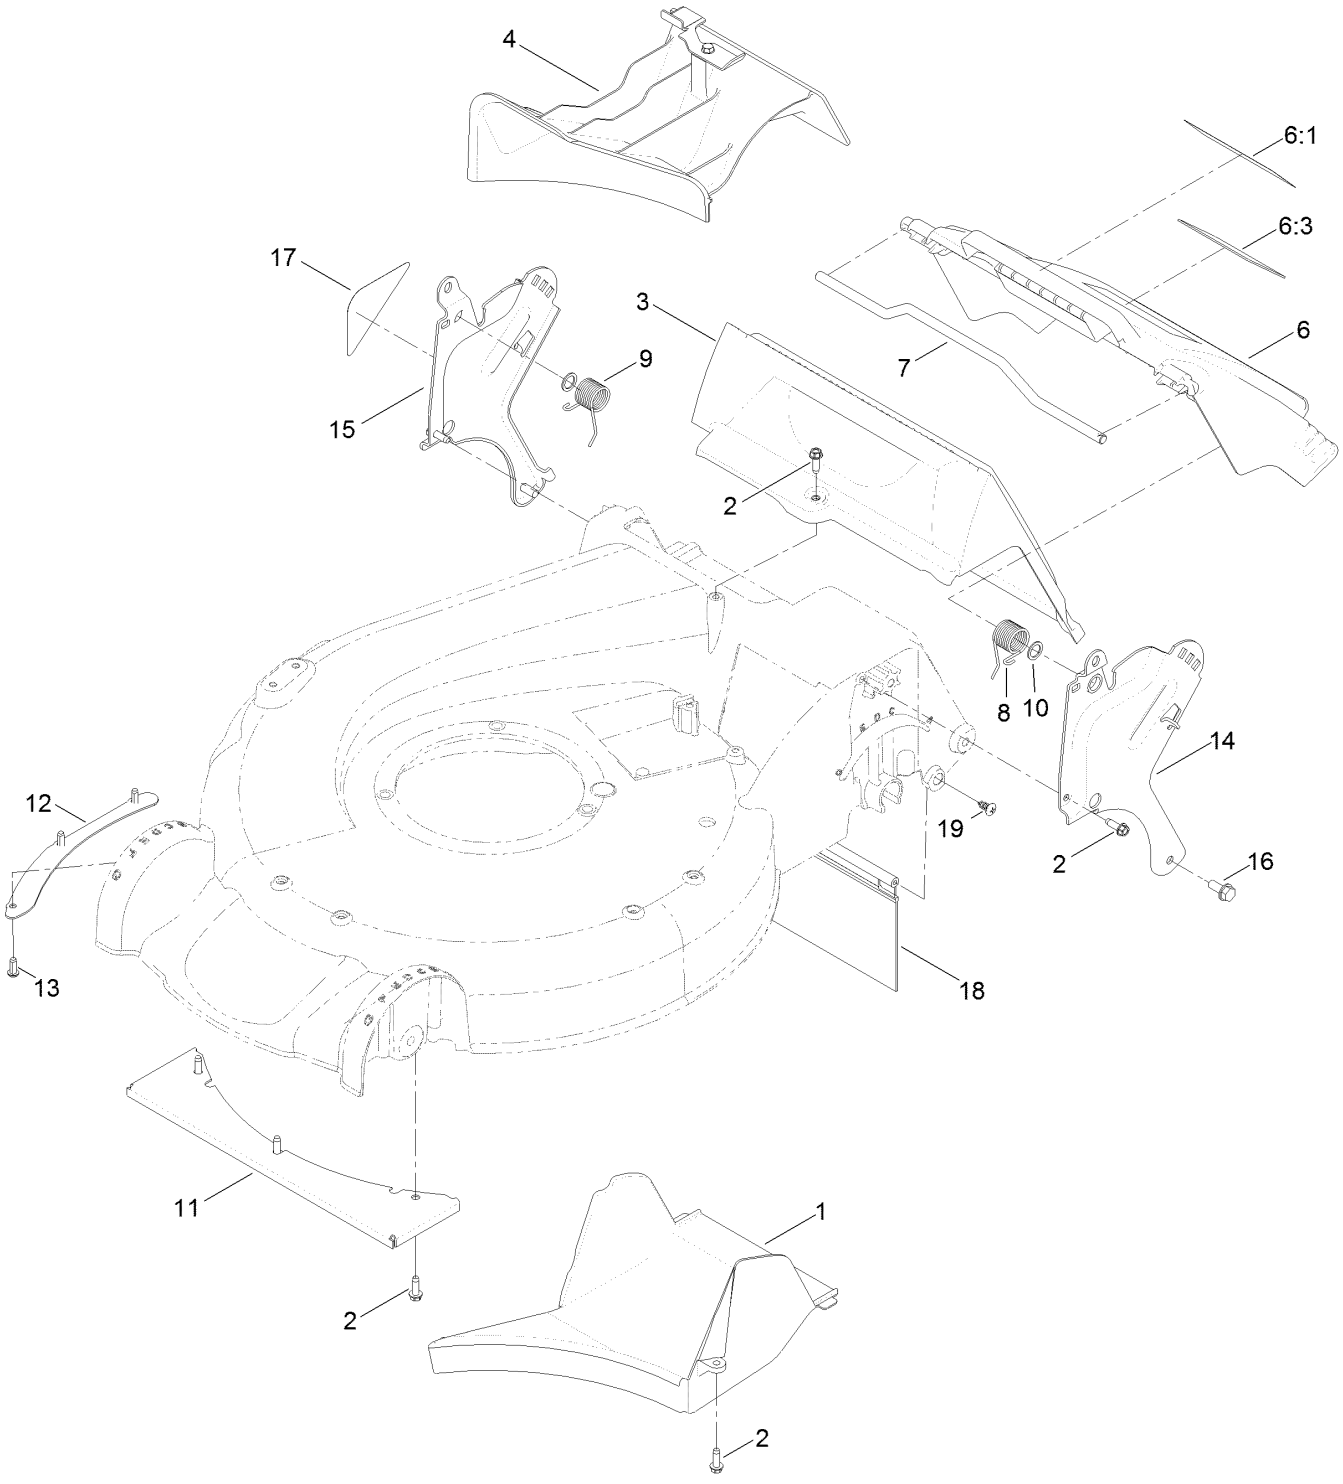

# Rear Door and Mulch Plug Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 107-7495 | 1 | Tunnel-Discharge |
| 2 | 49-2040 | 8 | Screw-HWHTF |
| 3 | 114-2668 | 1 | Chute |
| 4 | 115-8413 | 1 | Mulch Plug ASM |
| 6 | 119-3803 | 1 | Rear Door ASM |
| 6:1 | 131-4514 | 1 | Decal-Warning |
| 6:3 | 104-7908 | 1 | Decal-Warning |
| 7 | 117-9378 | 1 | Rod-Deflector |
| 8 | 115-2859 | 1 | Spring-Torsion |
| 9 | 114-7924 | 1 | Spring-Torsion |
| 10 | 94-8196 | 2 | Washer-Nylon |
| 11 | 108-3797-03 | 1 | Plate-Cover, Front |
| 12 | 105-1316-03 | 1 | Sheet-Lip |
| 13 | 63-8590 | 3 | Screw |
| 14 | 114-2671-03 | 1 | Bracket-Handle, LH |
| 15 | 114-2672-03 | 1 | Bracket-Handle, RH |
| 16 | 32144-11 | 2 | Screw-HWHTF |
| 17 | 115-2884 | 1 | Decal-Instruction |
| 18 | 120-7011 | 1 | Shield-Trailing |
| 19 | 117-1092 | 2 | Screw-PTH |


# Bag Assembly

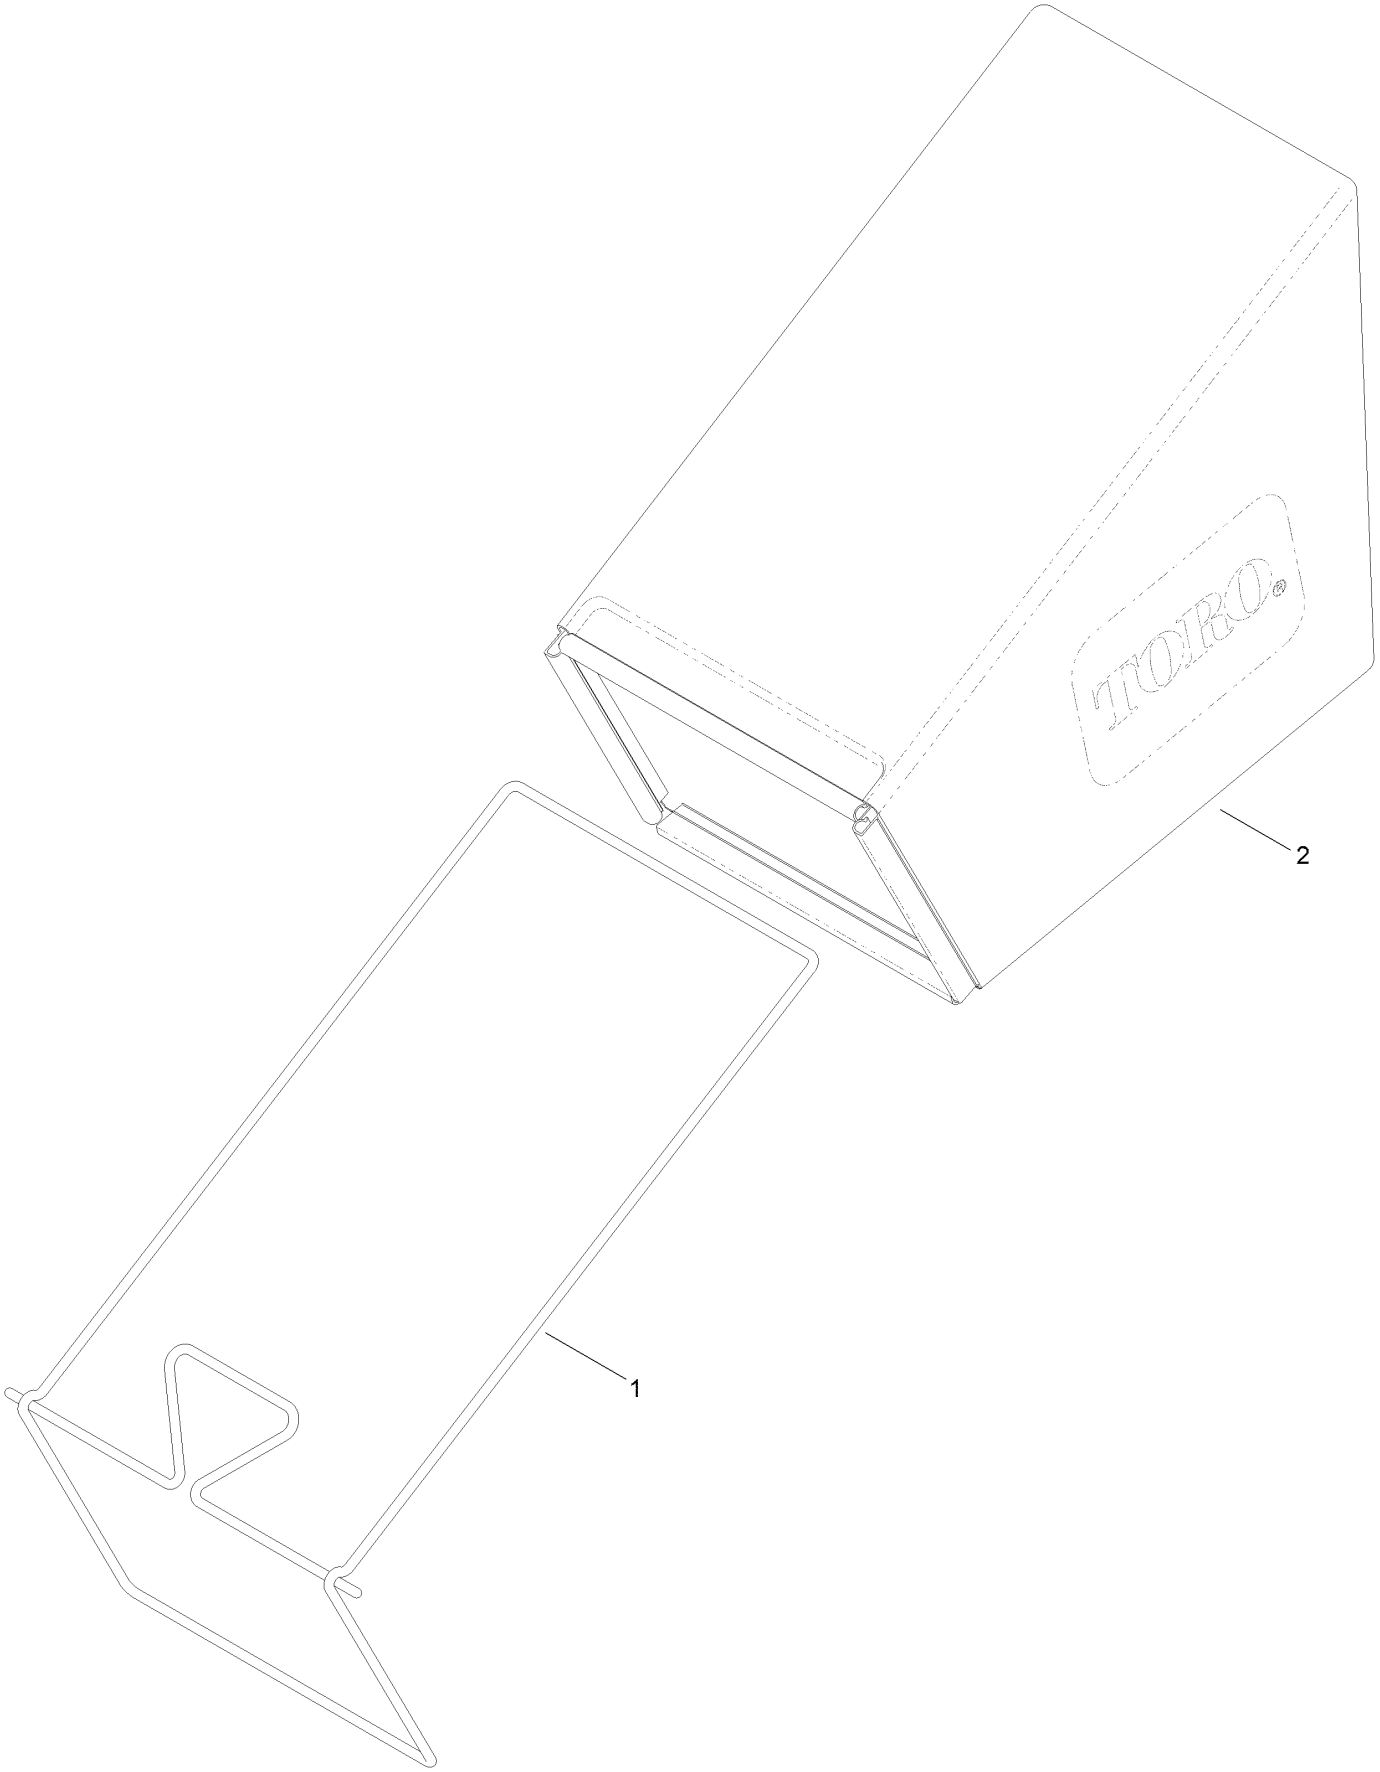

# Bag Assembly (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 121-2333-03 | 1 | Frame-Bag |
| 2 | 114-2664 | 1 | Grass Bag ASM |

# Engine and Blade Assembly

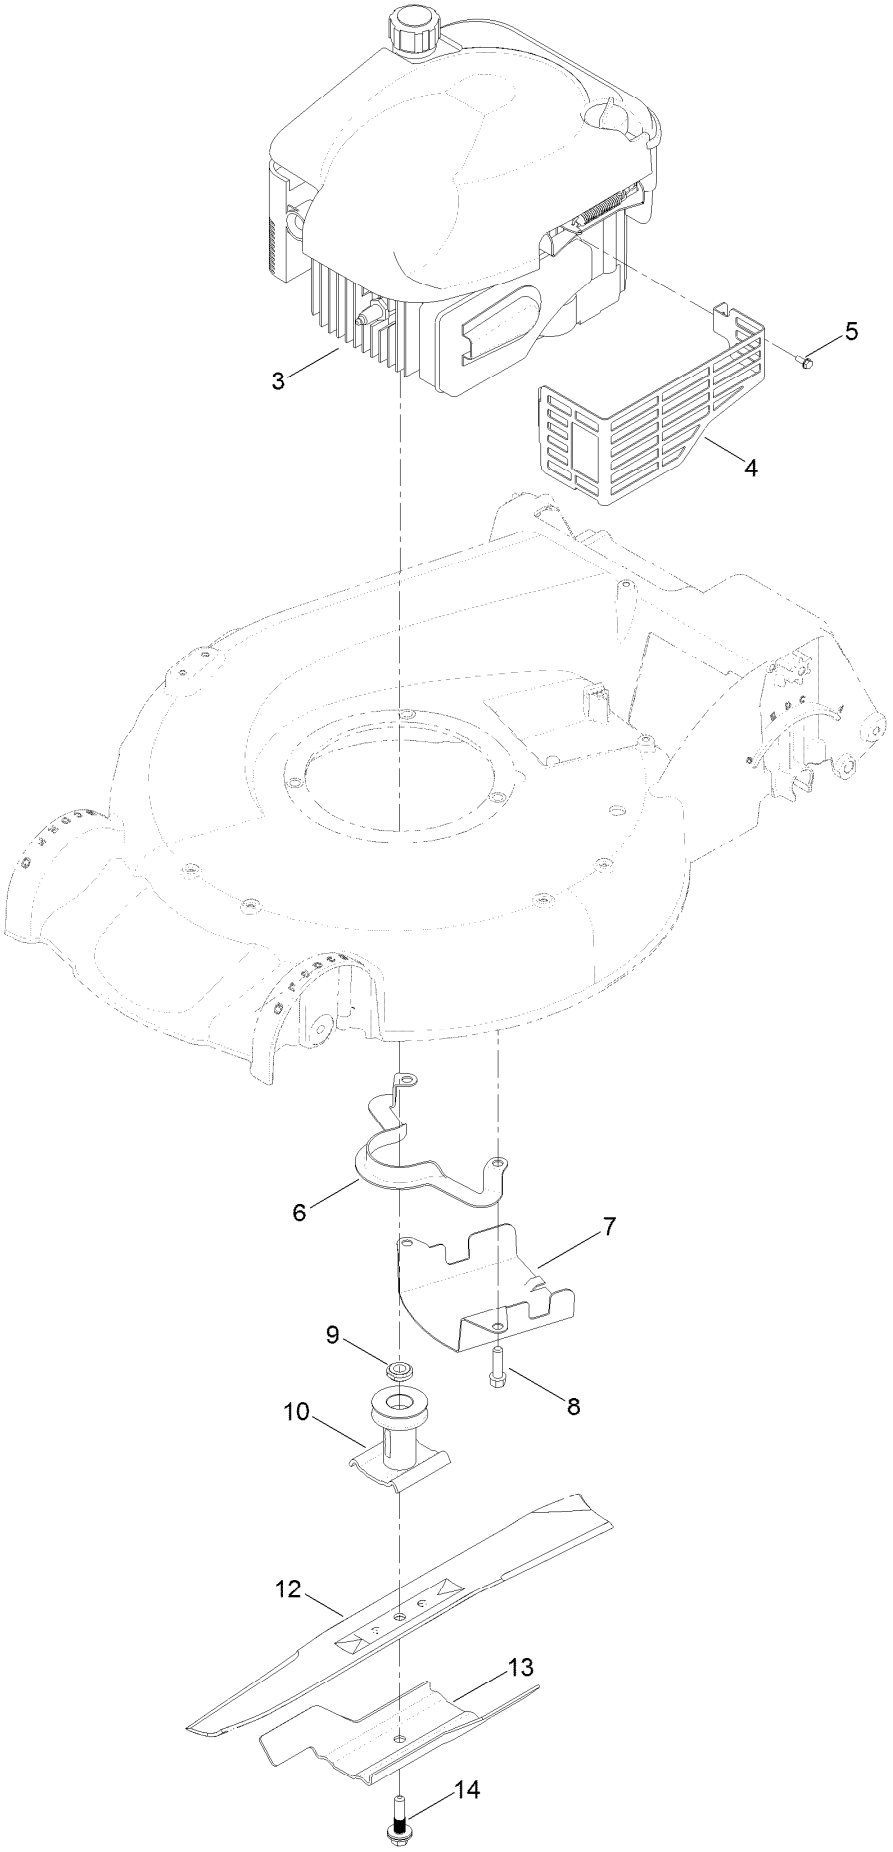


# Engine and Blade Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 3 | | 1 | Engine-Briggs, 126M070129F1 ●■ |
| 4 | 104-7577-03 | 1 | Shield-Muffler |
| 5 | 32144-1 | 3 | Screw-Taptite |
| 6 | 108-8110-03 | 1 | Guide-Belt |
| 7 | 107-7489-03 | 1 | Shield-Grass |
| 8 | 95-1727 | 3 | Screw-Taptite |
| 9 | 106-3999 | 1 | Spacer-Driver |
| 10 | 106-3987 | 1 | Driver-Blade |
| 12 | 108-3762-03 | 1 | Blade-Recycling |
| 13 | 105-6848-03 | 1 | Accelerator-Blade |
| 14 | 125-2466 | 1 | Bolt-Blade |

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


# Front Wheel and Height-of-Cut Assembly

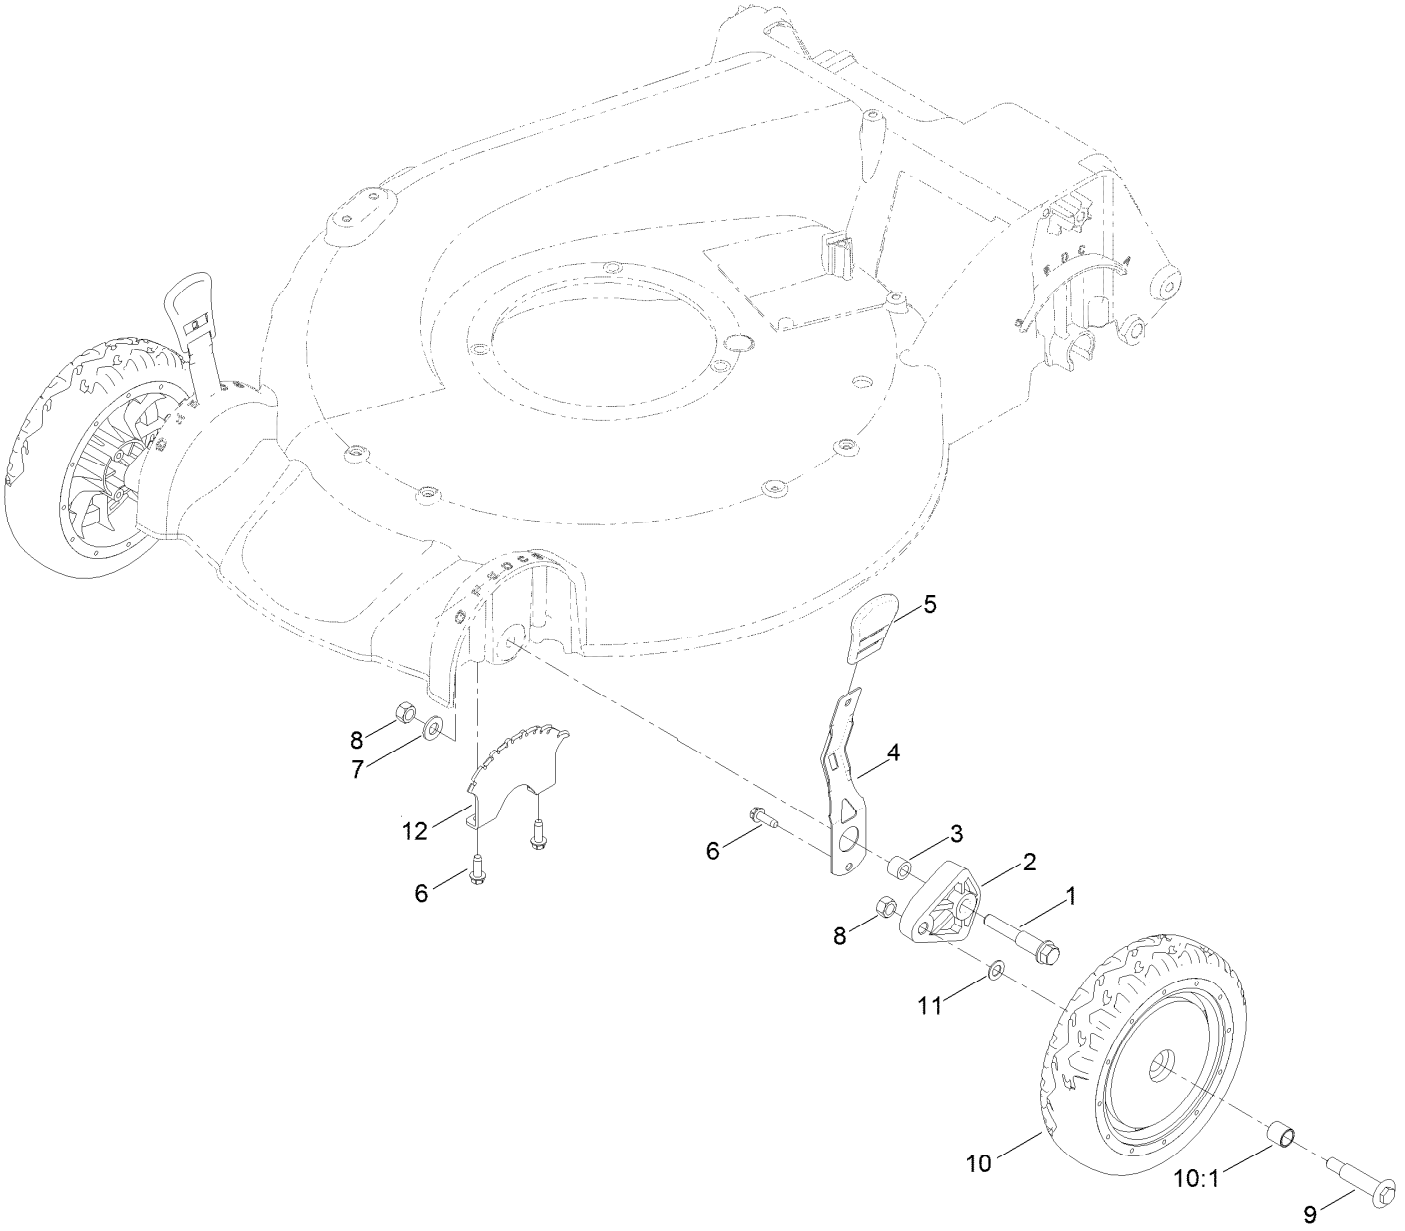

# Front Wheel and Height-of-Cut Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-3467 | 2 | Screw-Shoulder |
| 2 | 107-7492 | 2 | Arm-Pivot |
| 3 | 52-2480 | 2 | Spacer-Wheel |
| 4 | 107-7491 | 2 | Arm-Spring |
| 5 | 110-0549 | 2 | Knob-HOC |
| 6 | 49-2040 | 6 | Screw-HWHTF |
| 7 | 3256-24 | 2 | Washer-Flat |
| 8 | 125-5069 | 4 | Nut-Hex |
| 9 | 92-1057 | 2 | Bolt-Shoulder |
| 10 | 107-3706 | 2 | 8 Inch Wheel ASM |
| 10:1 | 27-6250 | 2 | Bushing |
| 11 | 40-1940 | 2 | Washer |
| 12 | 107-7478 | 2 | Plate-HOC |

# Rear Wheel and Height-of-Cut Assembly

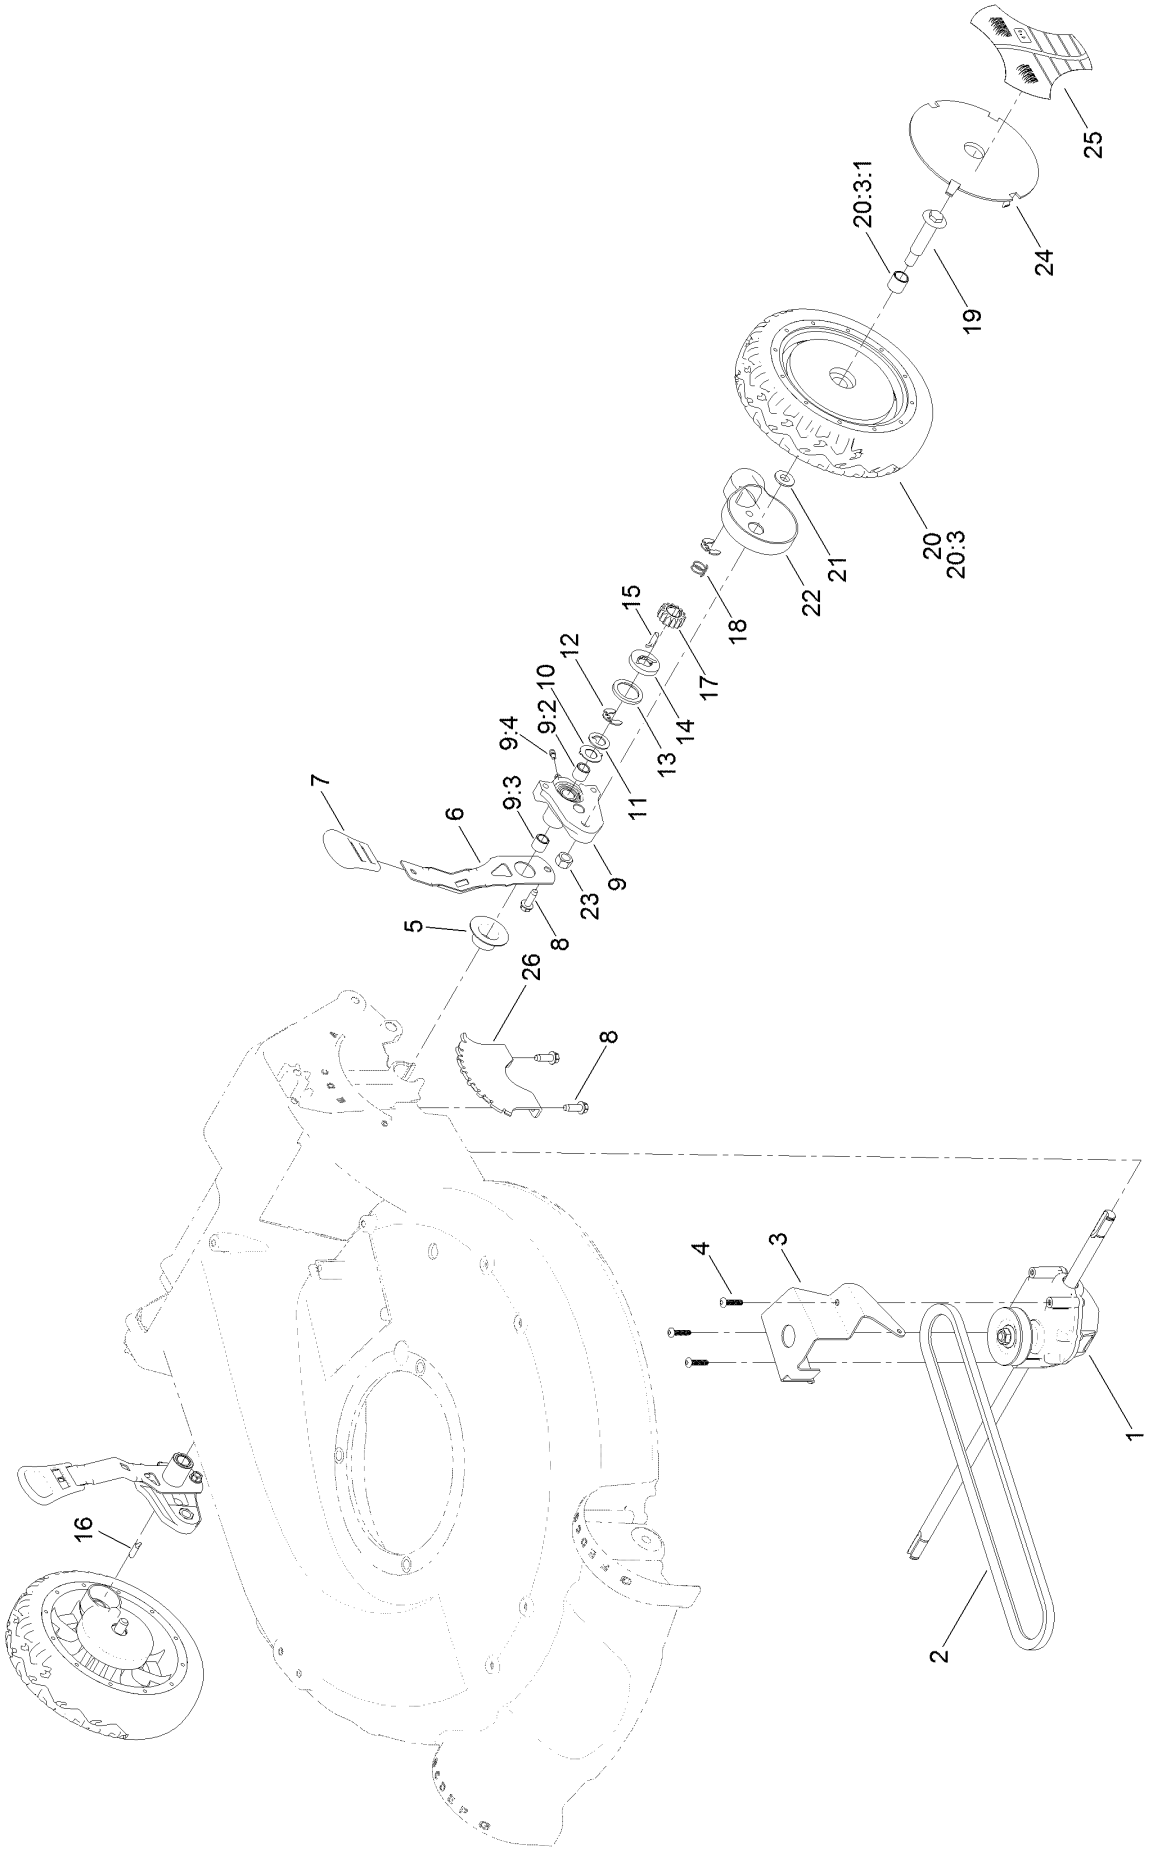


# Rear Wheel and Height-of-Cut Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-9184 | 1 | Transmission ASM |
| 2 | 92-1043 | 1 | V-Belt |
| 3 | 114-7977-03 | 1 | Bracket-Transmission |
| 4 | 108-7476 | 3 | Screw-Plastite |
| 5 | 42-3520 | 2 | Cap-End |
| 6 | 107-7491 | 2 | Arm-Spring |
| 7 | 110-0549 | 2 | Knob-HOC |
| 8 | 49-2040 | 6 | Screw-HWHTF |
| 9 | 100-8774 | 2 | Pivot Arm ASM |
| 9:2 | 47-2900 | 1 | Bushing |
| 9:3 | 70-9760 | 1 | Bushing |
| 9:4 | 302-56 | 1 | Fitting-Grease |
| 10 | 65-4730 | 2 | Washer-Arm, Pivot |
| 11 | 65-4740 | 4 | Washer-Thrust, Keyed |
| 12 | 65-2720 | 4 | Ring-Clip, Locking |
| 13 | 65-4710 | 2 | Ring-Friction |
| 14 | 65-4760 | 2 | Washer-Clutch |
| 15 | 66-6050 | 1 | Key-Rocking, LH |
| 16 | 66-6040 | 1 | Key-Rocking, RH |
| 17 | 65-4750 | 2 | Gear-Pinion |
| 18 | 65-4720 | 2 | Spring-Compression |
| 19 | 92-1057 | 2 | Bolt-Shoulder |
| 20 | 107-3707 | 2 | 8 Inch Wheel And Gear ASM |
| 20:3 | | 1 | 8 Inch Wheel ASM ● |
| 20:3:1 | 27-6250 | 2 | Bushing |
| 21 | 74-1671 | 2 | Spacer-Cover, Wheel |
| 22 | 74-1660 | 2 | Cover-Wheel |
| 23 | 125-5069 | 2 | Nut-Hex |
| 24 | 100-6351 | 1 | Cover-Wheel |
| 25 | 100-1519 | 1 | Label-Wheel, Smart |
| 26 | 107-7478 | 2 | Plate-HOC |

● Not serviced separately


# Handle Assembly

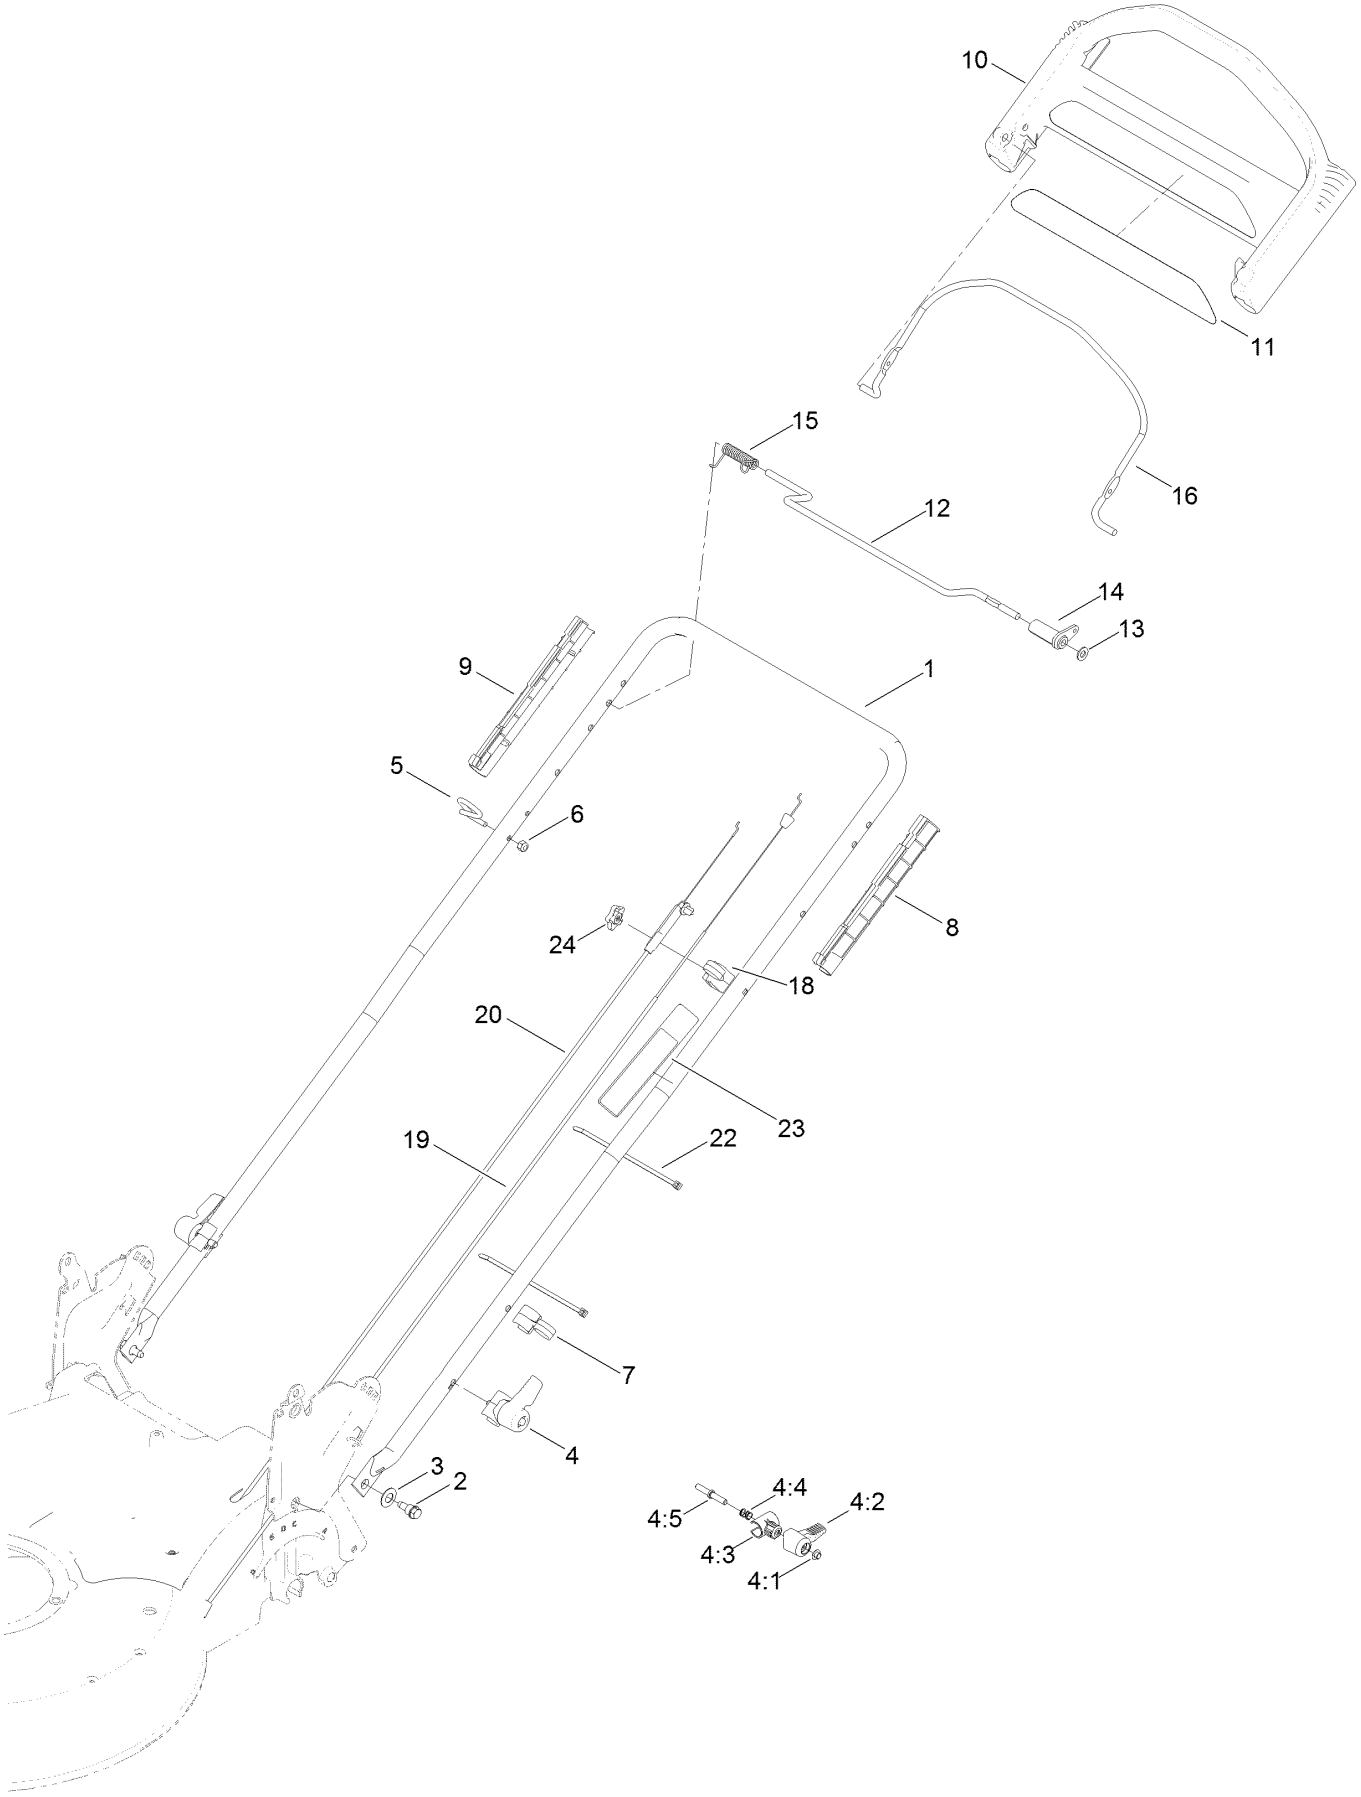

# Handle Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-9167-05 | 1 | Handle |
| 2 | 115-1958 | 2 | Bolt-Shoulder |
| 3 | 112-9972 | 2 | Washer-Conical, Spring |
| 4 | 115-2860 | 2 | Quick Release ASM |
| 4:1 | 109-0917 | 1 | Nut-Push |
| 4:2 | 114-7995 | 1 | Lever |
| 4:3 | 114-7996 | 1 | Anchor-Spring |
| 4:4 | 115-2858 | 1 | Spring-Compression |
| 4:5 | 114-2675 | 1 | Rod-Release |
| 5 | 86-9671 | 1 | Guide-Rope |
| 6 | 3296-73 | 1 | Nut-Lock, NI |
| 7 | 114-7988 | 1 | Guide-Cable |
| 8 | 105-6842 | 1 | Guide-LH |
| 9 | 105-6841 | 1 | Guide-RH |
| 10 | 104-8678 | 1 | Handle-Control |
| 11 | 120-3911 | 1 | Decal-Handle |
| 12 | 99-1588 | 1 | Bar-Control, Traction |
| 13 | 3256-23 | 1 | Washer-Flat |
| 14 | 99-1589 | 1 | Lever-Traction |
| 15 | 121-9118 | 1 | Spring-Torsion |
| 16 | 104-8679-03 | 1 | Bail-Brake |
| 18 | 99-5239 | 1 | Anchor-Cable |
| 19 | 108-8158 | 1 | Cable-Traction |
| 20 | 117-5900 | 1 | Cable-Brake |
| 22 | 614249 | 3 | Tie-Cable |
| 23 | 131-0894 | 1 | Decal-Traction, Adjust |
| 24 | 131-0897 | 1 | Knob-Handle, Locking |

# Electrical Assembly

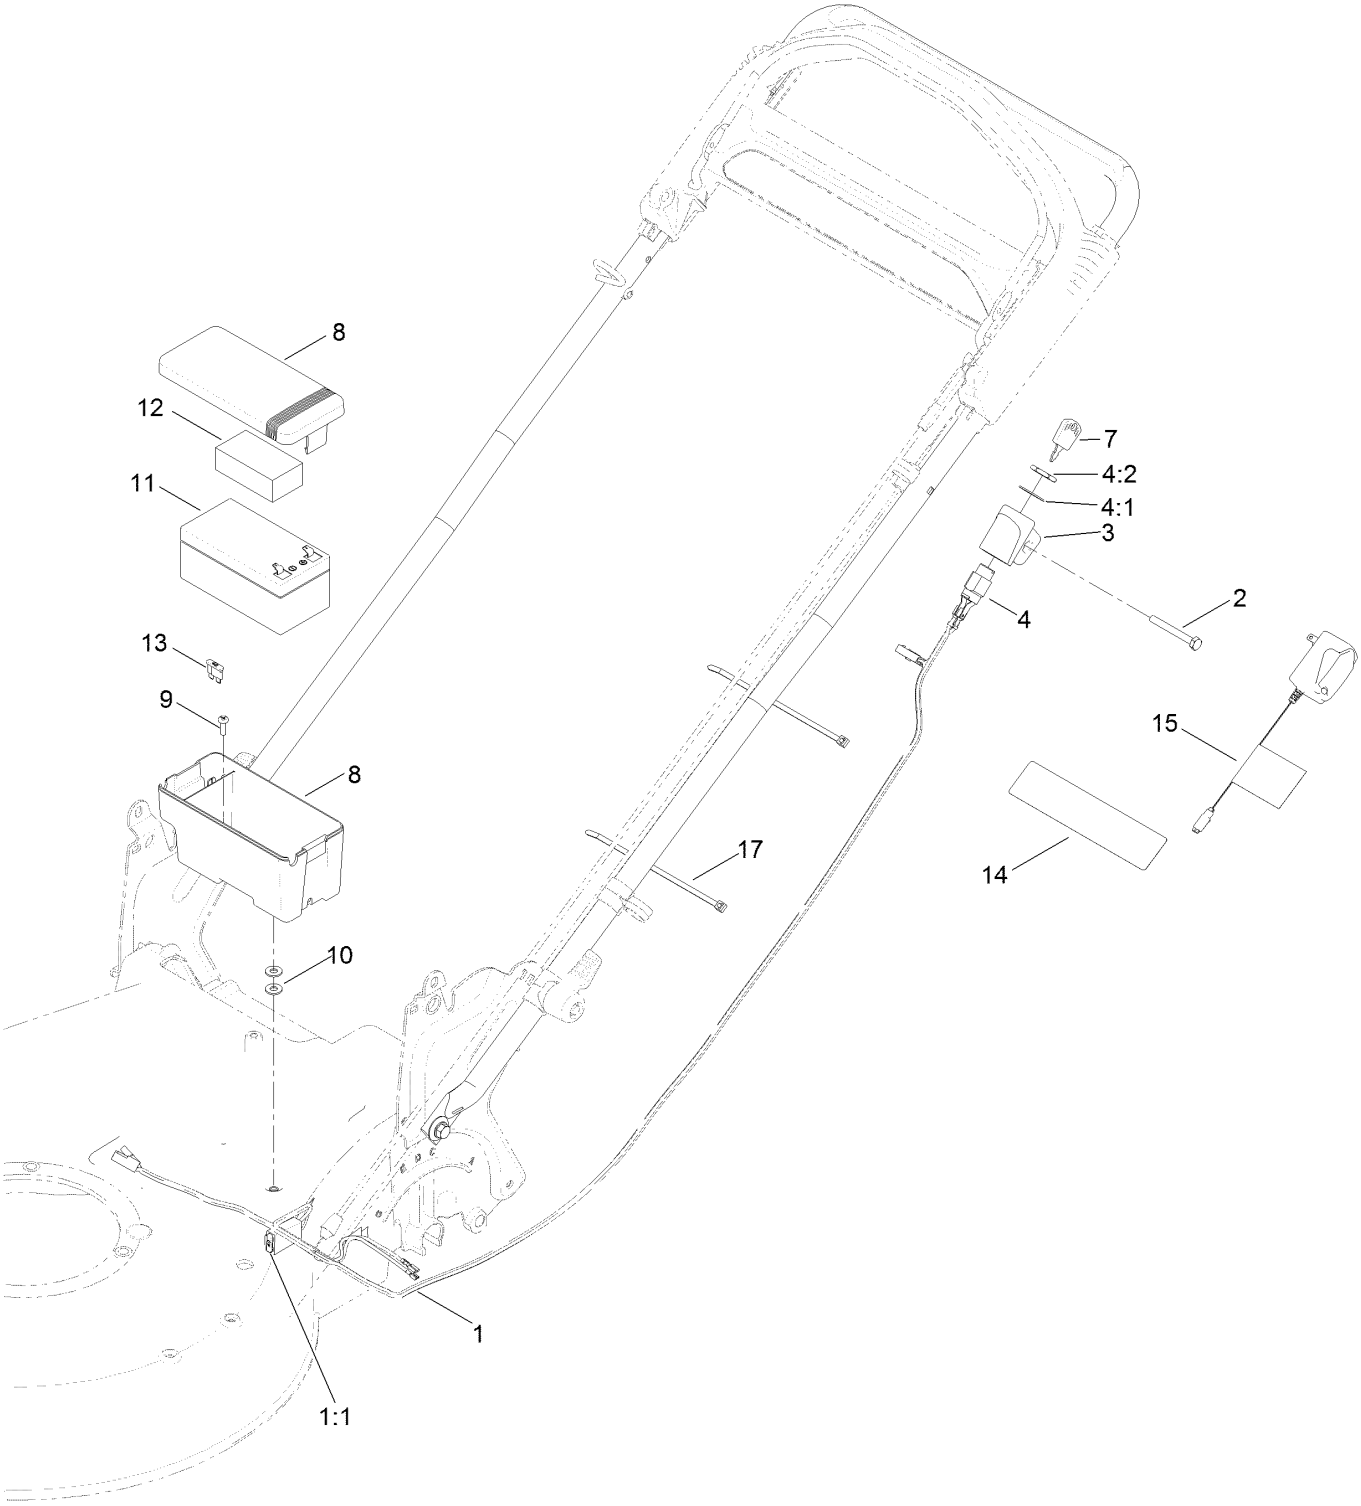

# Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 114-2625 | 1 | Harness-Wire |
| 1:1 | 99-6124 | 1 | Fuse-40 Amp |
| 2 | 321-50 | 1 | Screw-HH |
| 3 | 108-9760 | 1 | Mount-Switch |
| 4 | 46-5780 | 1 | Starter Switch ASM |
| 4:1 | 3254-5 | 1 | Washer-Tooth, Internal |
| 4:2 | 218-461 | 1 | Nut-HH |
| 7 | 700918 | 1 | Key |
| 8 | 108-4844 | 1 | Battery Box ASM |
| 9 | 32144-32 | 1 | Screw |
| 10 | 3256-22 | 2 | Washer-Flat |
| 11 | 106-8397 | 1 | Battery-Wet |
| 12 | 107-3774 | 1 | Foam-Battery, Top |
| 13 | 99-6124 | 1 | Fuse-40 Amp |
| 14 | 104-7953 | 1 | Decal |
| 15 | 120-3947 | 1 | Charger-Ce |
| 17 | 614249 | 3 | Tie-Cable |

# Attachments and Accessories

## For 20797 53cm Super Recycler Lawn Mower

| Product Name | Model/Part |
|---|---|
| Traction Assist Handle Kit | 108-8120 |
| Lawnmower Cover | 490-7462 |

## Notes:




**Count on it.**