Form No. 3392-740 Rev A

TORO®

Count on it.

Parts Catalog

# EU Light Kit

## 2015 and After Groundsmaster® 5910 Series Rotary Mower with Cab

**Model No. 30639**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3392-740* A

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Headlamp and Electrical Assembly . . . . . 4
Cab Headlamp Assembly . . . . . 5
Rear Lamp Assembly . . . . . 6

**© 2015—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

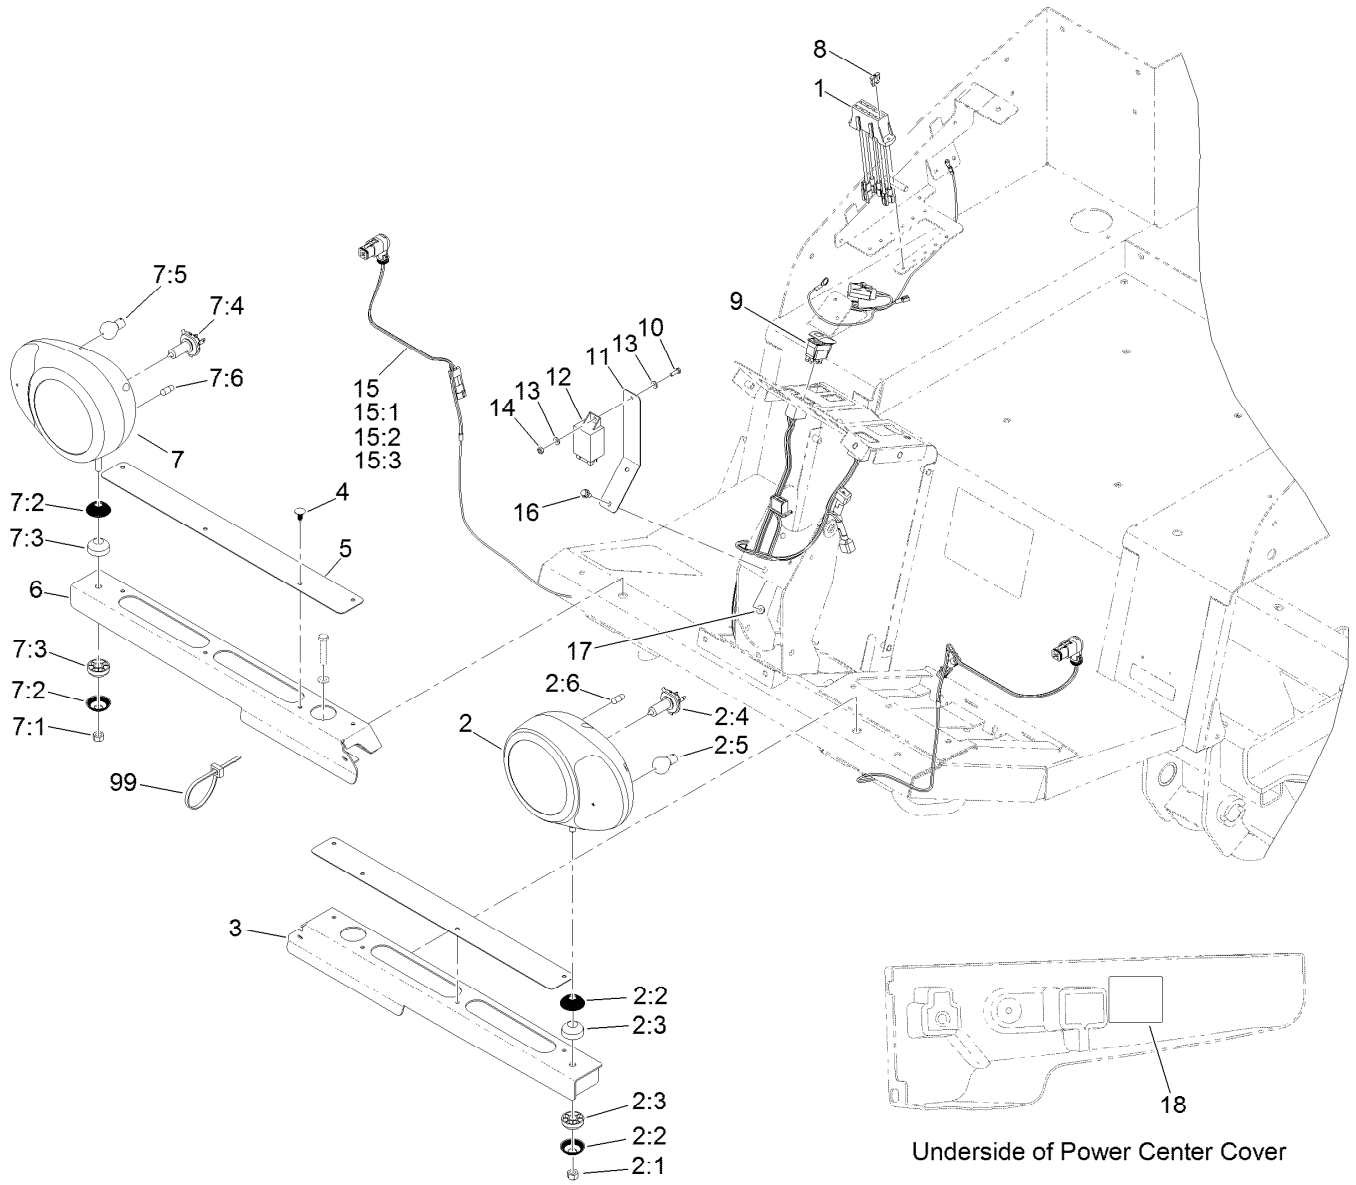



Underside of Power Center Cover

# Headlamp and Electrical Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 92-2641 | 1 | Block-Fuse |
| 2 | 119-8324 | 1 | LH Headlamp ASM |
| 2:1 | 33025-00 | 1 | Nut-Lock, NI |
| 2:2 | 120-0475 | 2 | Shell-Articulated |
| 2:3 | 120-0474 | 2 | Joint-Articulated |
| 2:4 | 120-0471 | 1 | Bulb-Halogen |
| 2:5 | 120-0472 | 1 | Bulb-Lamp |
| 2:6 | 120-0473 | 1 | Bulb-Lamp |
| 3 | 120-9850-03 | 1 | Mount-Headlamp, LH |
| 4 | 117-2382 | 8 | Plug-Plastic |
| 5 | 120-9853-03 | 2 | Panel-Cover, Headlamp |
| 6 | 120-9880-03 | 1 | Mount-Headlamp, RH |
| 7 | 119-8323 | 1 | RH Headlamp ASM |
| 7:1 | 33025-00 | 1 | Nut-Lock, NI |
| 7:2 | 120-0475 | 2 | Shell-Articulated |
| 7:3 | 120-0474 | 2 | Joint-Articulated |
| 7:4 | 120-0471 | 1 | Bulb-Halogen |
| 7:5 | 120-0472 | 1 | Bulb-Lamp |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 7:6 | 120-0473 | 1 | Bulb-Lamp |
| 8 | 218-578 | 1 | Fuse-Blade, 10 Amp |
| 9 | 119-7769 | 1 | Switch-Rocker, On-None-On |
| 10 | 3290-134 | 1 | Screw |
| 11 | 120-9854-01 | 1 | Bracket-Flasher |
| 12 | 119-9880 | 1 | Module-Flasher |
| 13 | 3256-14 | 2 | Washer-Flat |
| 14 | 3296-2 | 1 | Nut-Lock, NI |
| 15 | 120-6334 | 1 | Harness-Wire |
| 15:1 | 110928 | 2 | Fuse-Blade, 5 Amp |
| 15:2 | 218-578 | 1 | Fuse-Blade, 10 Amp |
| 15:3 | 100-4918 | 2 | Diode-Over Molded |
| 16 | 3234-13 | 2 | Screw-HHF |
| 17 | 104-7201 | 2 | Nut-HF |
| 18 | 121-3853 | 1 | Decal-Fuse, Turn Signal |
| 99 | 3290-378 | 30 | Tie-Cable |

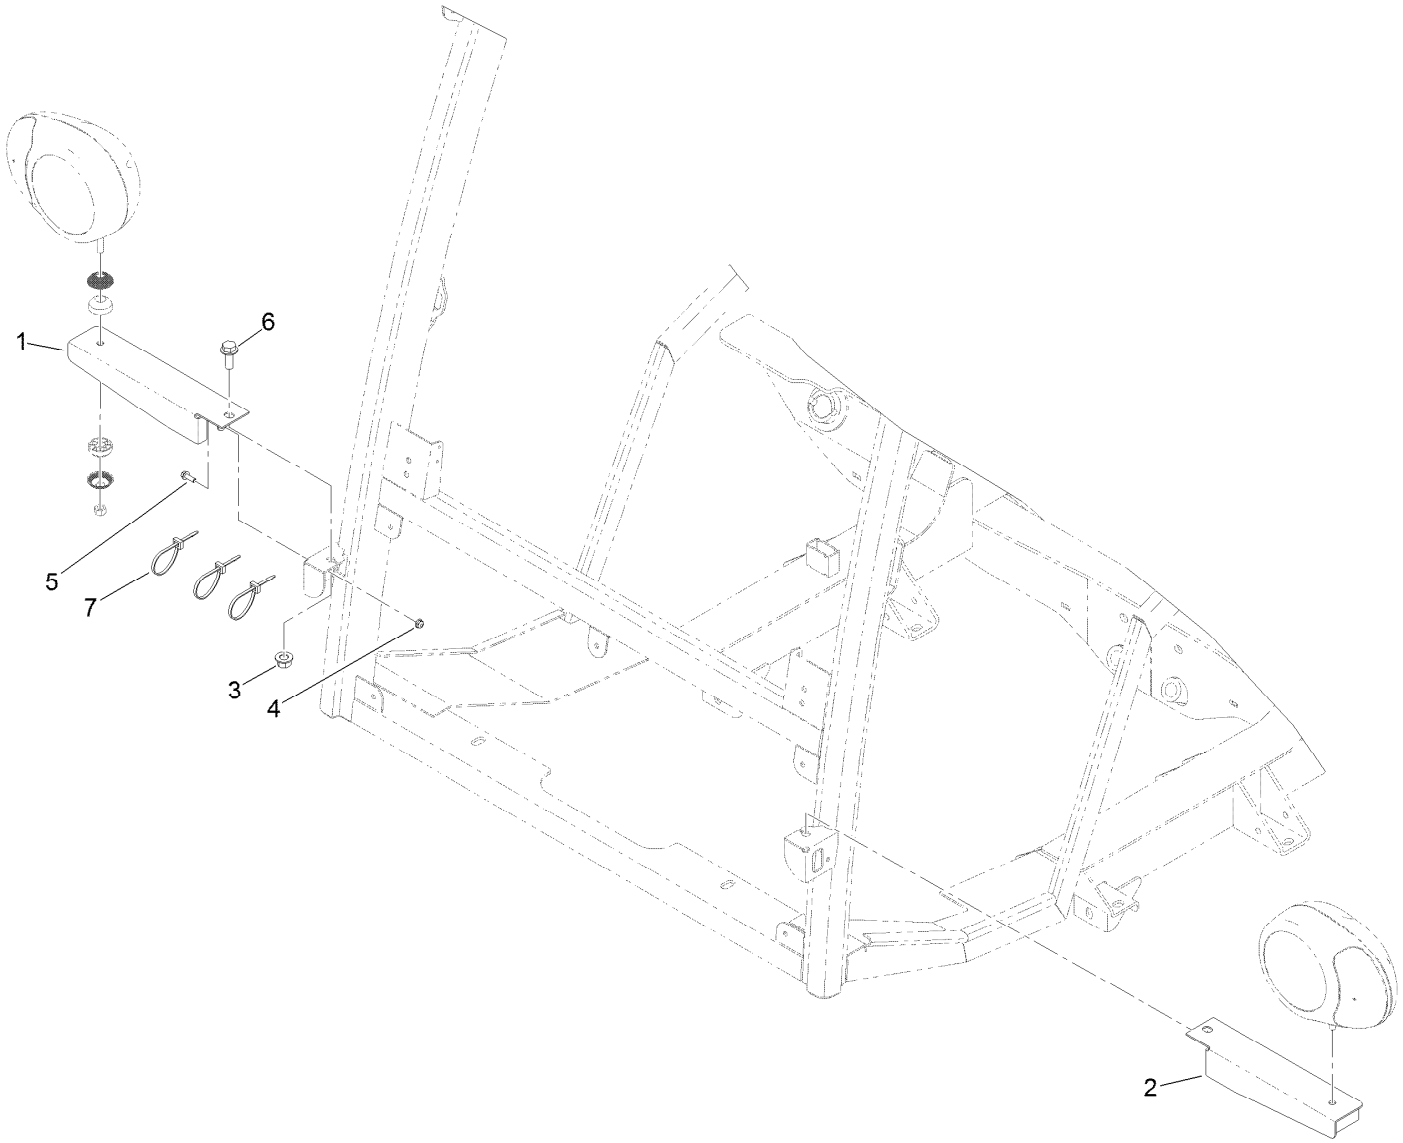


# Cab Headlamp Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 130-0515-03 | 1 | Mount-Headlight, Cab (RH) |
| 2 | 130-0516-03 | 1 | Mount-Headlight, Cab (LH) |
| 3 | 99-5107 | 2 | Nut-Lock |
| 4 | 104-7201 | 2 | Nut-HF |
| 5 | 115-5103 | 2 | Screw-HHF |
| 6 | 3234-38 | 2 | Screw-HHF |
| 7 | 3290-378 | 6 | Tie-Cable |

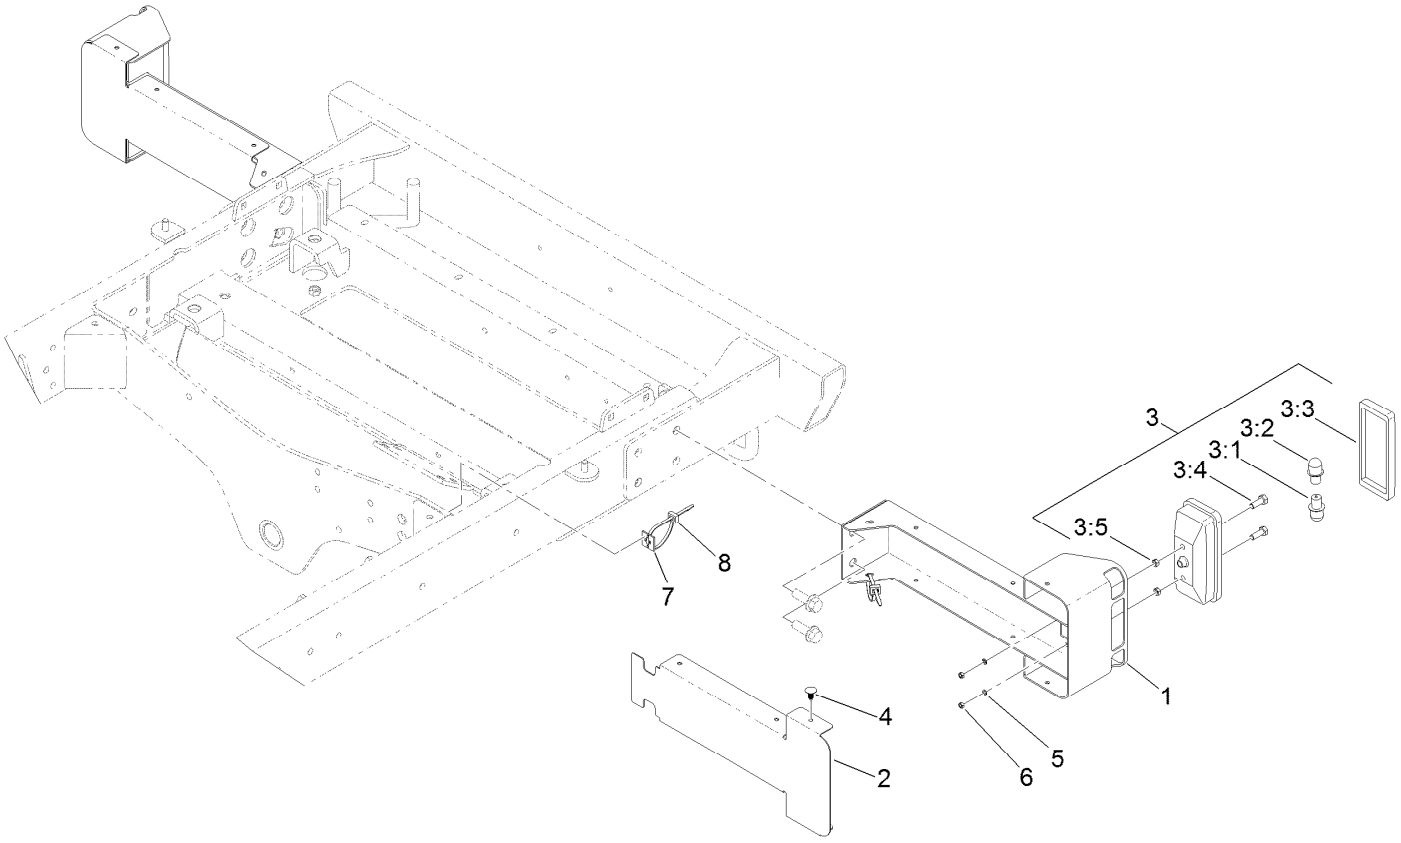


# Rear Lamp Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 120-9860-03 | 2 | Mount-Lamp, Rear |
| 2 | 120-9859-03 | 2 | Panel-Lamp, Rear |
| 3 | 119-8093 | 2 | Rear Lamp ASM |
| 3:1 | 120-7552 | 1 | Bulb-12V |
| 3:2 | 120-6657 | 1 | Bulb-5W |
| 3:3 | 120-6656 | 1 | Lens-Red |
| 3:4 | 60-6910 | 2 | Screw-HH |
| 3:5 | 48-7880 | 4 | Nut-Hex |
| 4 | 117-2382 | 12 | Plug-Plastic |
| 5 | 48-8000 | 4 | Washer-Lock |
| 6 | 48-7880 | 4 | Nut-Hex |
| 7 | 93-3922 | 2 | Mount-Tie, Cable |
| 8 | 3290-378 | 4 | Tie-Cable |

## Notes:




**Count on it.**