Form No. 3395-170 Rev A

TORO®

Count on it.

Parts Catalog

MMX-858H-S

Mortar Mixer

Model No. 60220C—Serial No. 315000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

3395-170 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Frame and Axle Assembly 4
Hub Assembly No. 125-8171 6
Drum, Paddle and Bearing Assembly 8
Drive Assembly 10
Pinion Assembly No. 131-5704 12
Cowl Assembly 14
Trailer Light Assembly 16
Attachments and Accessories 18

© 2015—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame and Axle Assembly

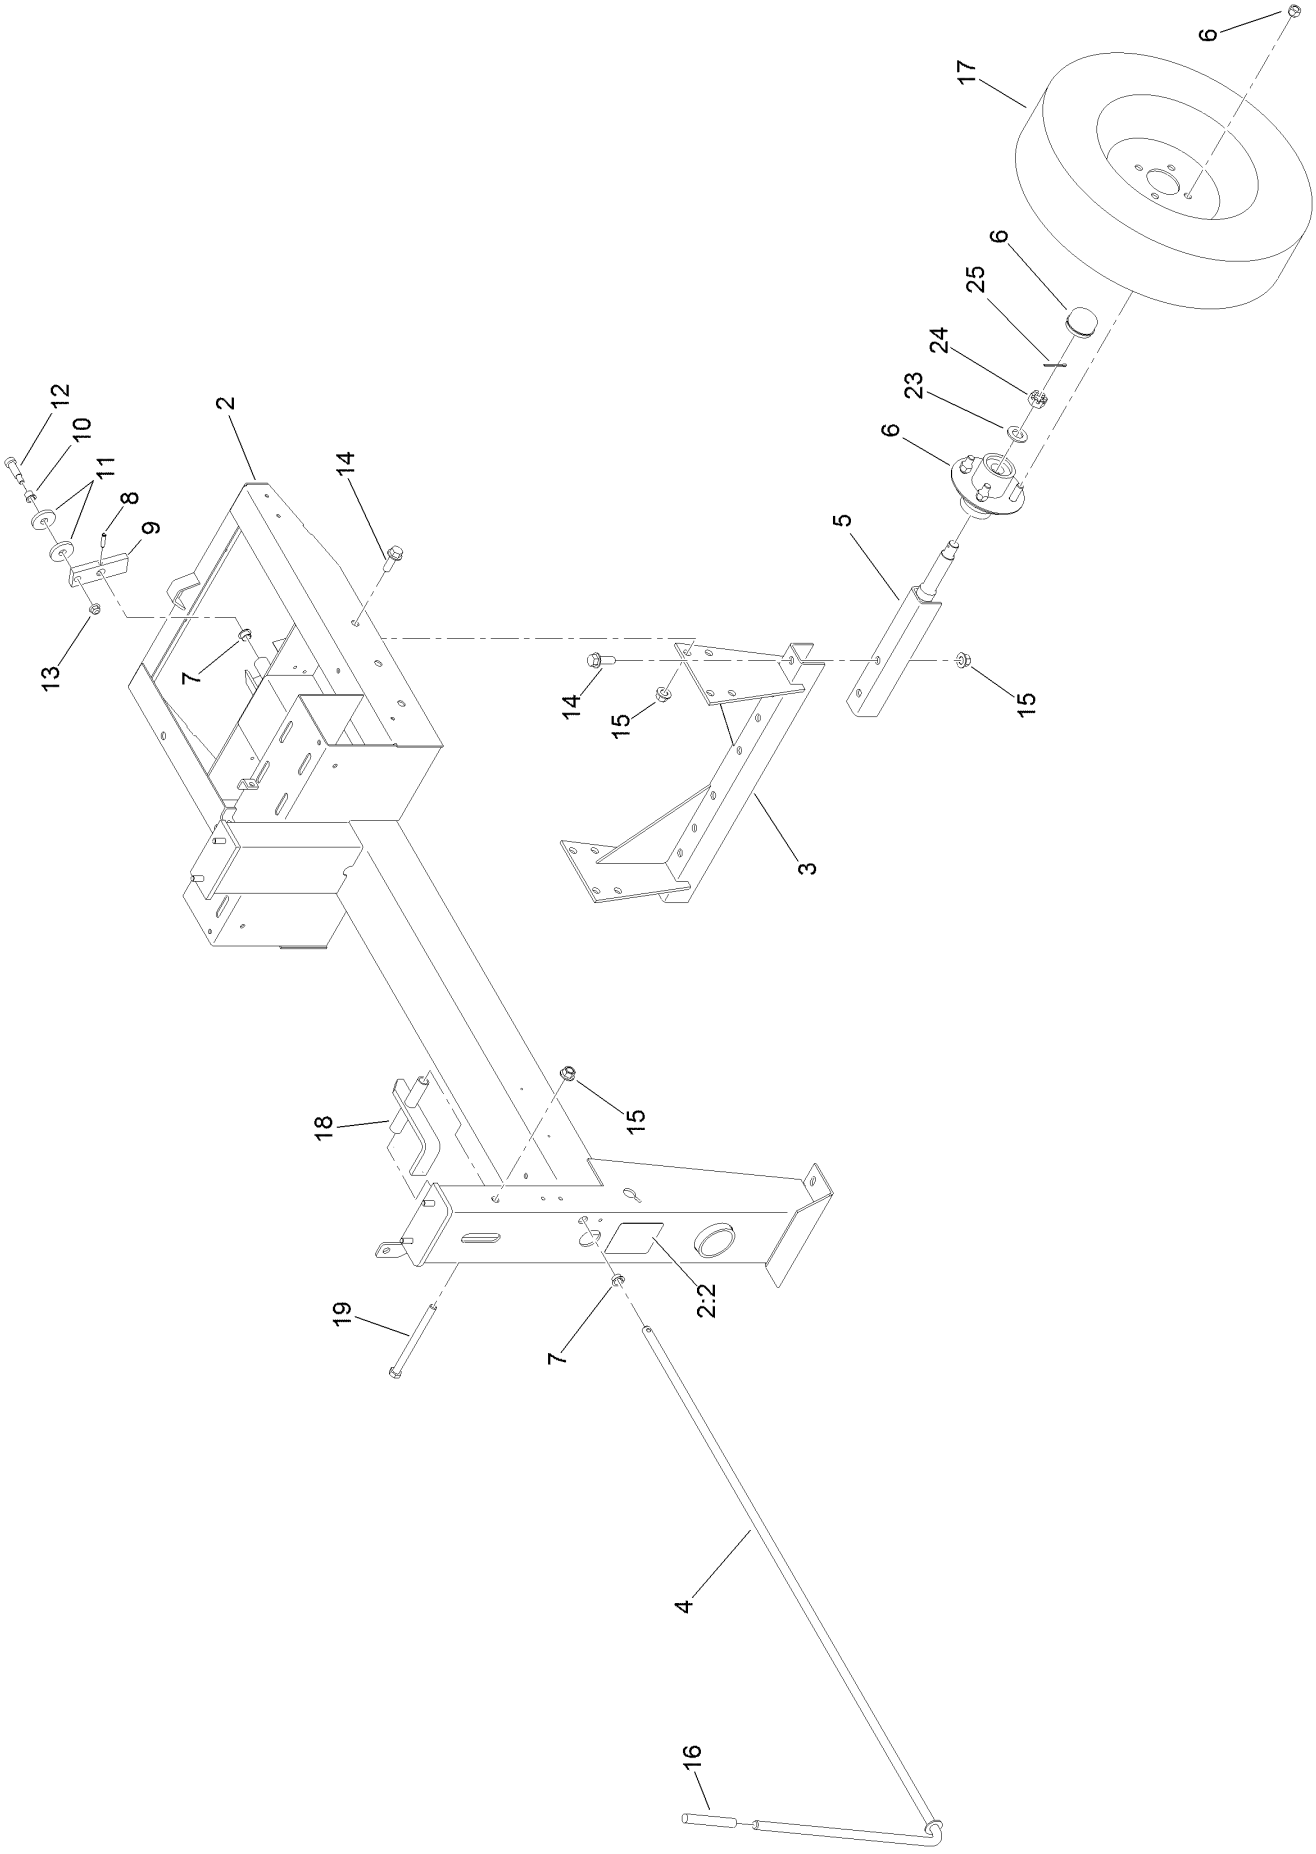

Frame and Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
2	131-7533	1	Frame ASM
2:2	125-8216	1	Decal-Safety Chain, Towing
3	125-8219-03	1	Support-Axle
4	131-5253-03	1	Lever-Clutch
5	ST22512-03	2	Axle-Half
6	125-8171	2	Hub ASM
7	ST32116	2	Bushing-Flange
8	32121-69	1	Pin-Spring
9	ST39446	1	Link-Clutch
10	ST32099	1	Bushing-Flange
11	ST26326	2	Washer-Flat
12	ST81153	1	Screw-HSBH
13	104-8301	1	Nut-Flange, NI
14	100-6116	8	Screw-HHF
15	99-5107	9	Nut-Lock
16	ST34687	1	Grip-Handle
17	ST32307	2	Tire And Rim ASM
18	ST24027-03	1	Latch-Drum
19	325-33	1	Screw-HH
23	3256-28	2	Washer-Flat
24	ST80054	2	Nut
25	3272-13	2	Pin-Cotter


Hub Assembly No. 125-8171

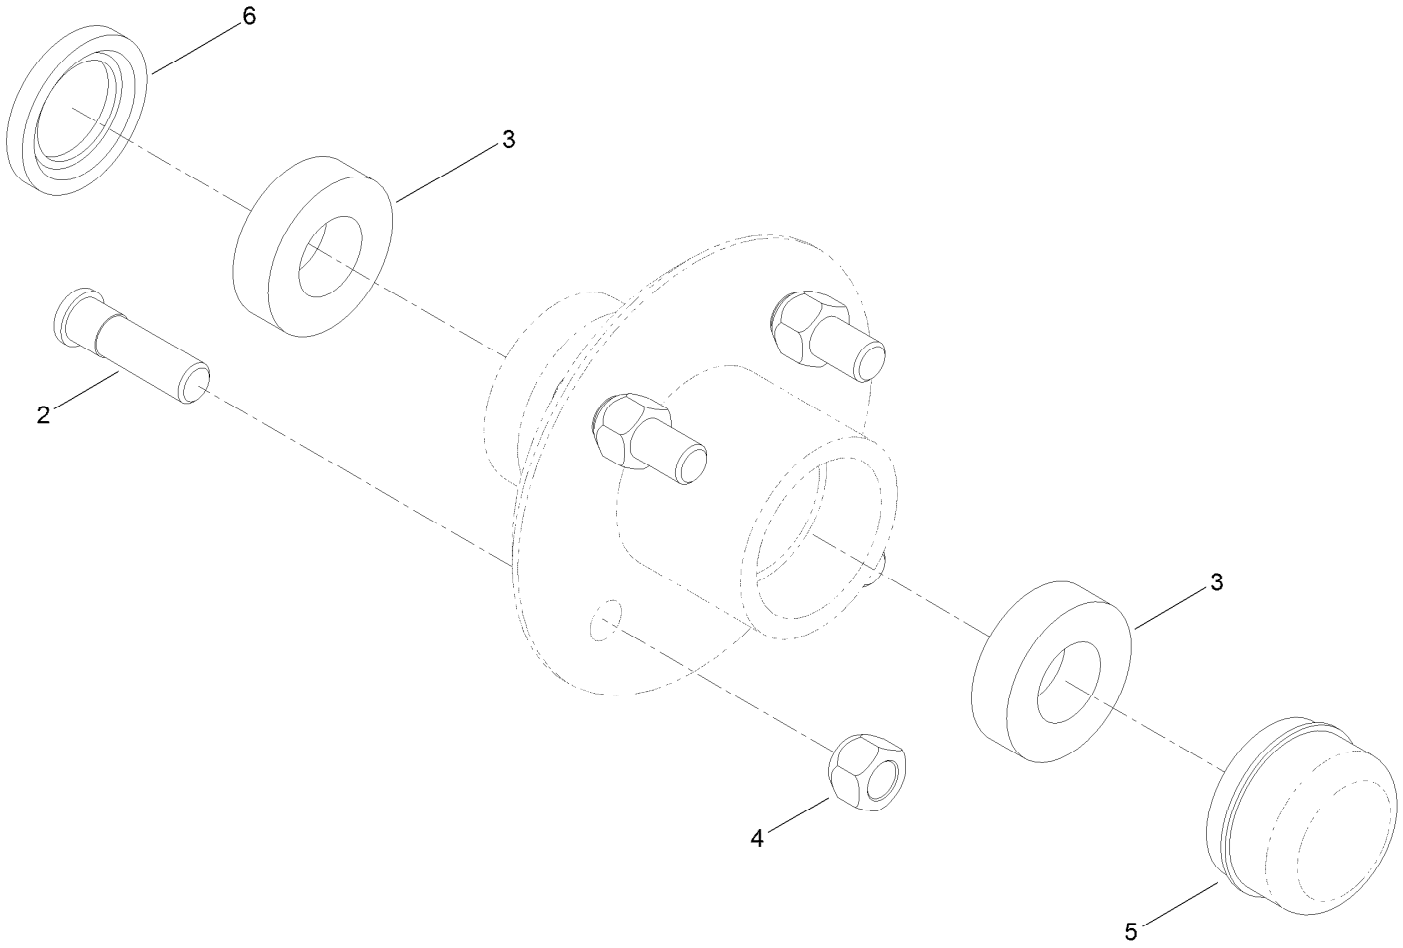

Hub Assembly No. 125-8171 (continued)

Ref.	Part Number	Qty.	Description
2	ST39190	4	Stud-Wheel
3	ST32233	2	Bearing-Roller
4	ST80045	4	Nut-Lug
5	ST34573	1	Cap-Dust
6	ST32052	1	Seal-Hub, Wheel


Drum, Paddle and Bearing Assembly

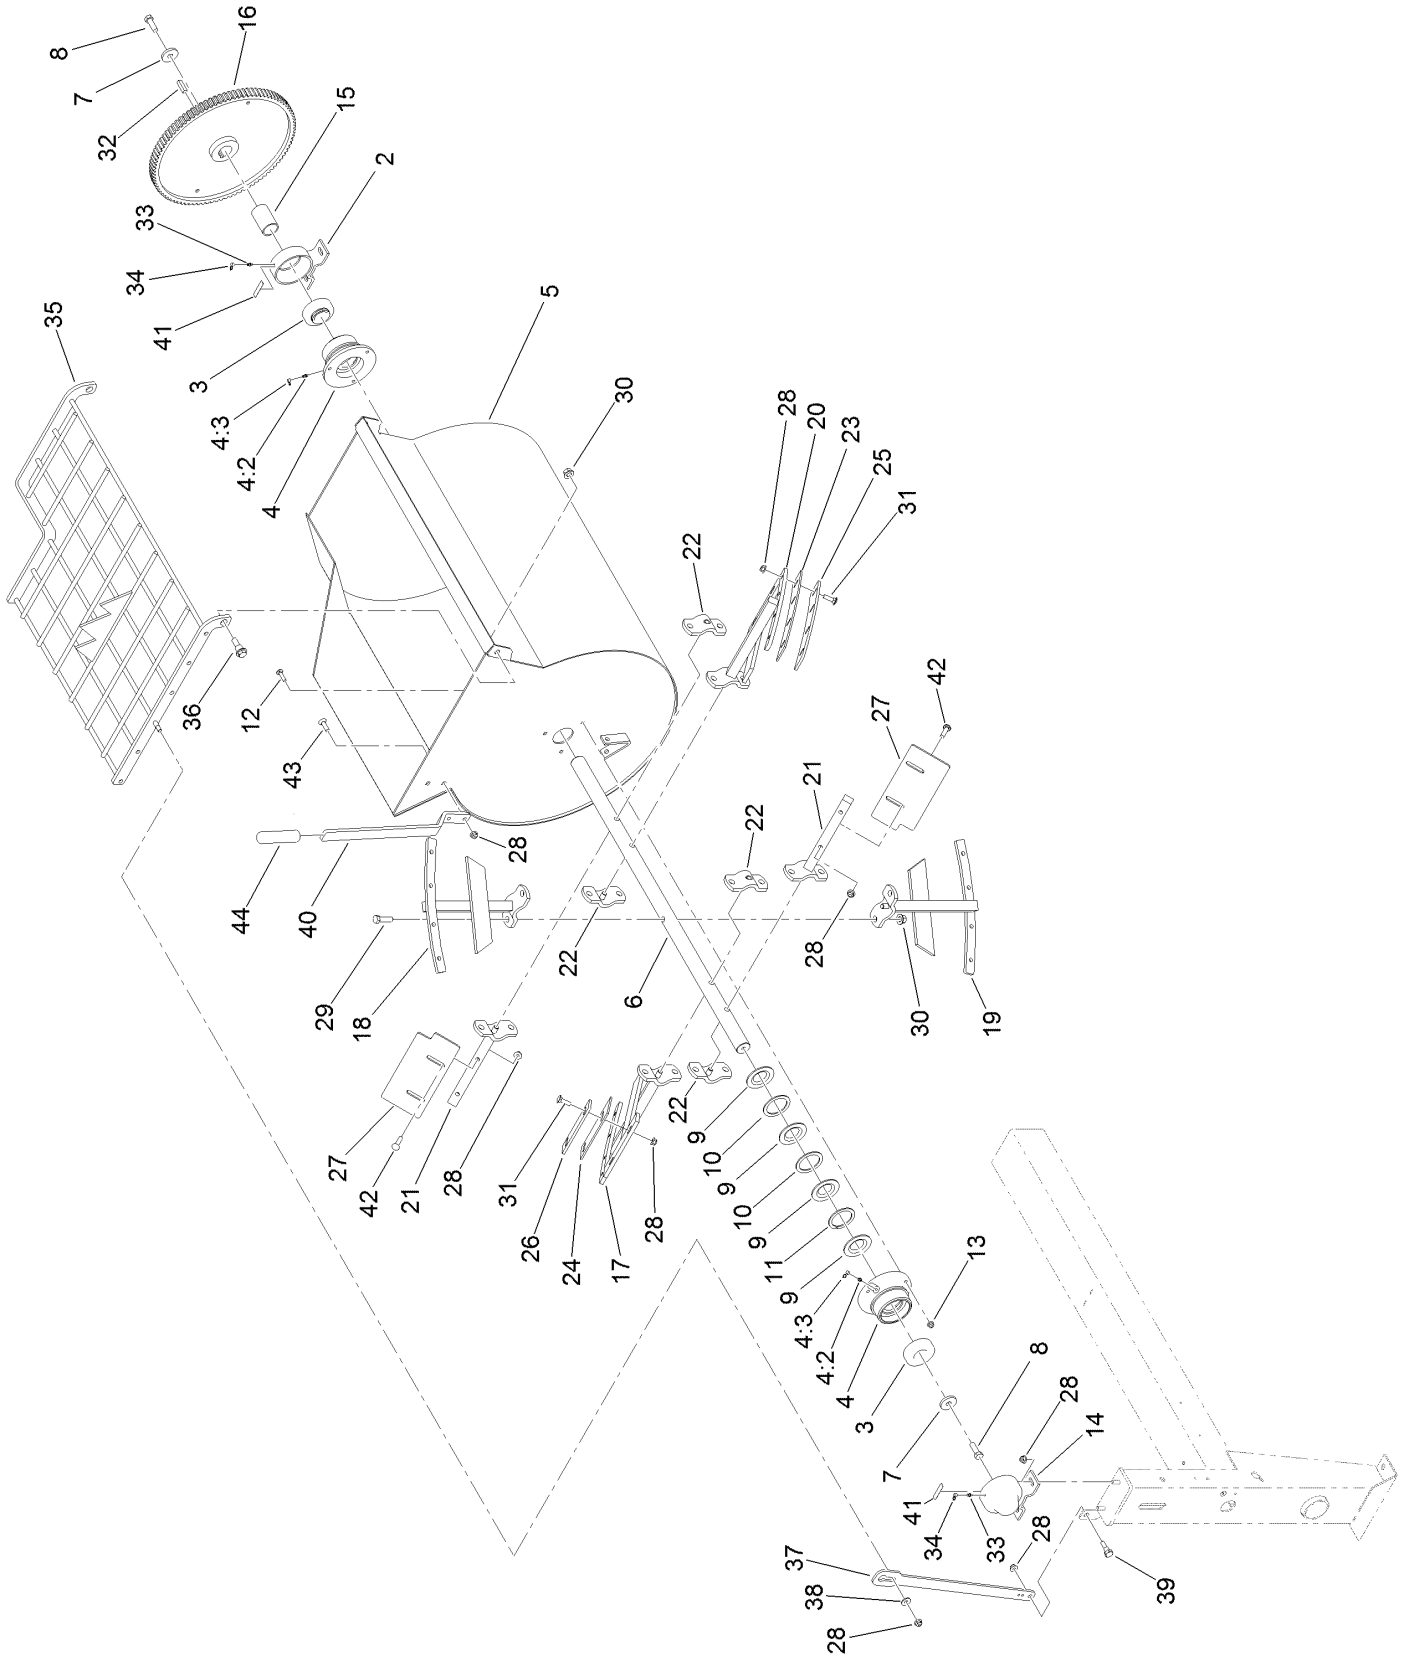

Drum, Paddle and Bearing Assembly (continued)

Ref.	Part Number	Qty.	Description
2	ST24021-01	1	Trunnion
3	ST32003	2	Bearing-Ball
4	132-4117	2	Kit-Housing, Bearing
4:2	ST46042	1	Fitting-Grease
4:3	ST47001	1	Cap-Plug
5	130-2255-01	1	Drum
6	130-2274-01	1	Shaft-Paddle
7	ST26326	2	Washer-Flat
8	325-6	2	Screw-HH
9	ST32324	8	Seal-Drum
10	ST24017	4	Washer-Flat
11	ST25881	2	Washer-Split
12	3230-3	6	Screw-CARR
13	104-8300	6	Nut-Flange, NI
14	ST36574-01	1	Trunnion-Capped
15	131-5276	1	Spacer-Shaft
16	ST26933-03	1	Gear-94 Teeth
17	130-2281-01	1	Paddle-Leading
18	130-2275-01	1	Paddle-Mid
19	130-2277-01	1	Paddle-Mid
20	130-2283-01	1	Paddle-Trailing
21	130-2282-01	2	Paddle-Pusher
22	ST24107-01	4	Clamp
23	131-5260	4	Paddle-Rubber, Top
24	131-5261	2	Paddle-Rubber, Mixer End
25	131-5257-01	4	Bar-Backer, Top
26	131-5722-01	2	Bar-Backer, End
27	131-5717-01	2	Bar-Backer, Pusher End
28	104-8301	32	Nut-Flange, NI
29	325-7	10	Screw-HH
30	99-5107	12	Nut-Lock
31	3231-25	20	Bolt-CARR
32	ST81060	1	Key-Square
33	ST46042	4	Fitting-Grease
34	ST47001	4	Cap-Plug
35	130-2265-01	1	Guard-Drum, 85Mm
36	116-0780	2	Screw-Shoulder, HHF
37	131-5288-03	1	Arm-Lift, Grate
38	80-6990	1	Washer-Hardened
39	80-1300	1	Bolt-Shoulder
40	131-7527-01	1	Handle-Dump
41	125-8175	2	Decal-Grease
42	3231-29	4	Screw-CARR
43	3231-28	2	Screw-CARR
44	104-9838	1	Grip-Foam

Drive Assembly

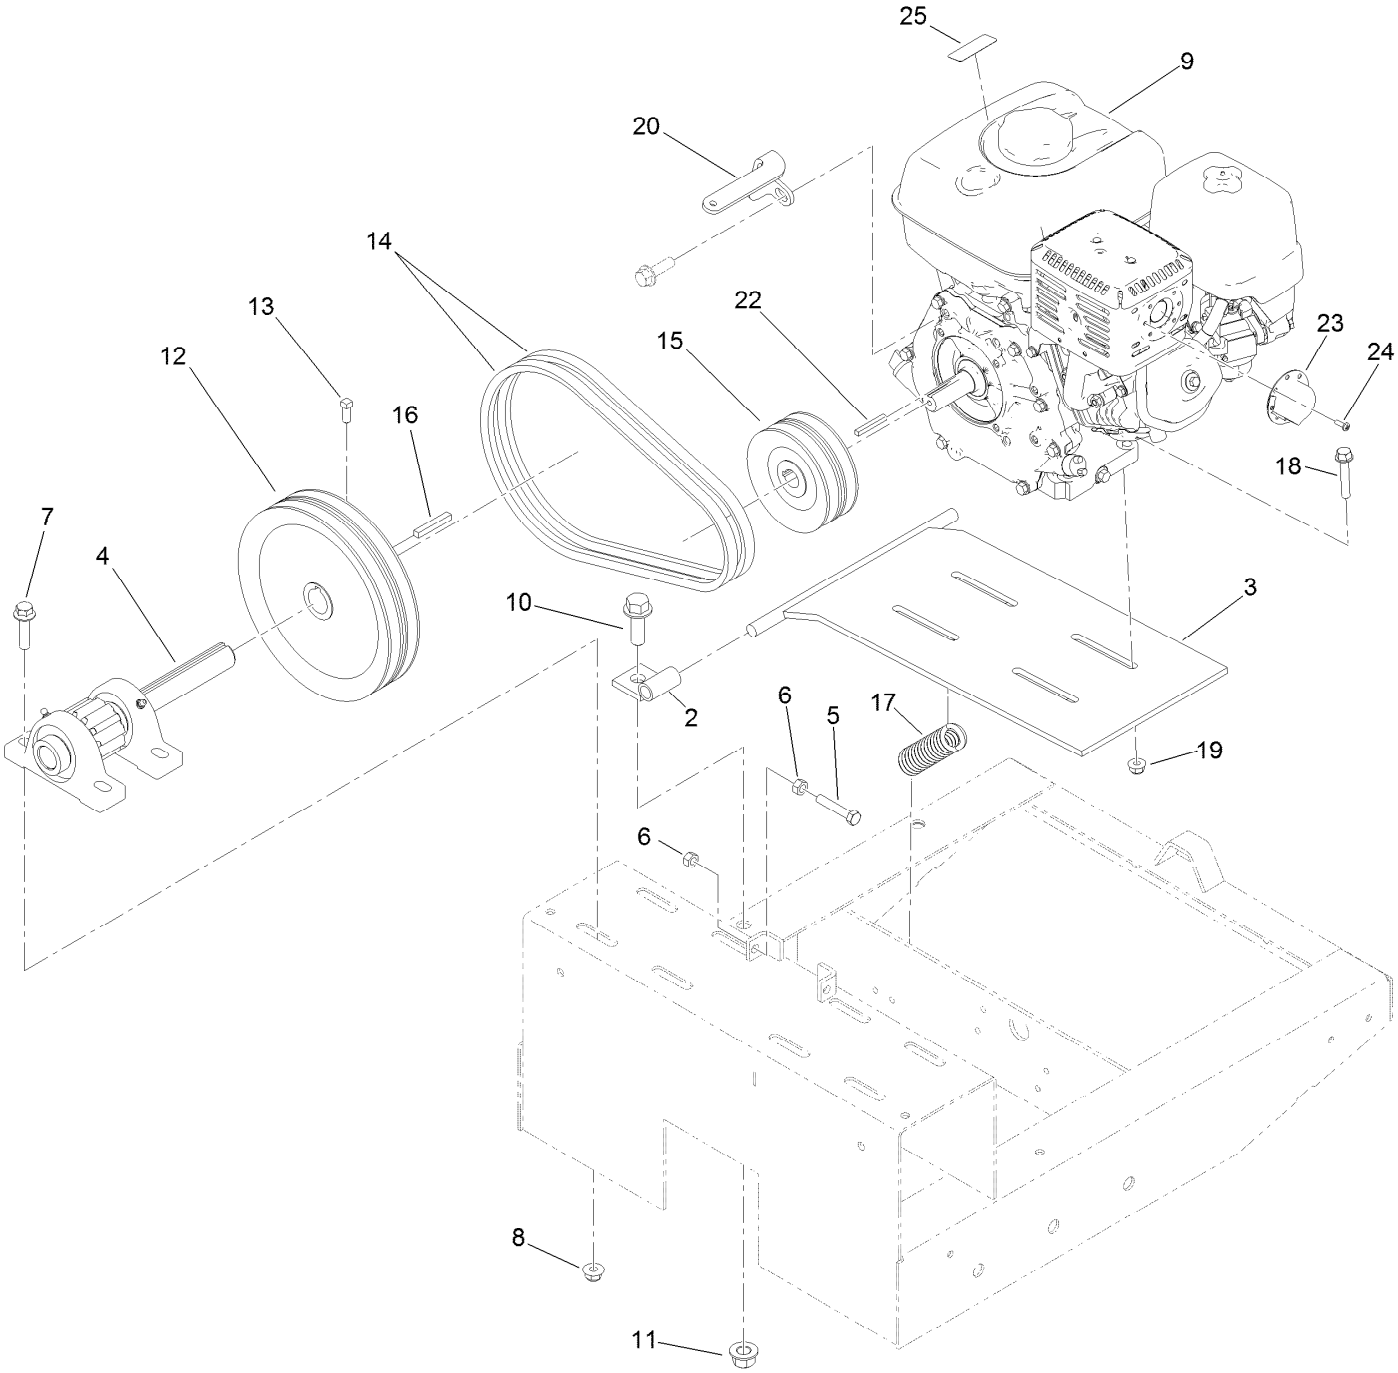


Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
2	ST57786-03	2	Mount-Motor
3	ST39557-03	1	Base-Motor
4	131-5704	1	Pinion ASM
5	322-41	1	Screw-HH
6	3217-6	2	Nut-Hex
7	114-4681	4	Screw-HHF
8	104-8301	4	Nut-Flange, NI
9	125-4812	1	Engine-Honda, Gx240 ●
10	100-6116	2	Screw-HHF
11	99-5107	2	Nut-Lock
12	ST38450	1	Sheave
13	120-6474	2	Screw-Set, SQH
14	ST34052	2	Belt-V
15	ST38449	1	Sheave
16	7-0238	1	Key-Square
17	ST34849	1	Spring
18	108-3742	4	Screw-HHF
19	104-8301	4	Nut-Flange, NI
20	127-1665-03	1	Guide-Belt
22	7-0238	1	Key-Square
23	120-1886	1	Deflector-Exhaust
24	363-8245	3	Screw-TAP
25	130-8322	1	Decal-Warning, Ethanol

● Obtain parts from www.honda-engines.com


Pinion Assembly No. 131-5704

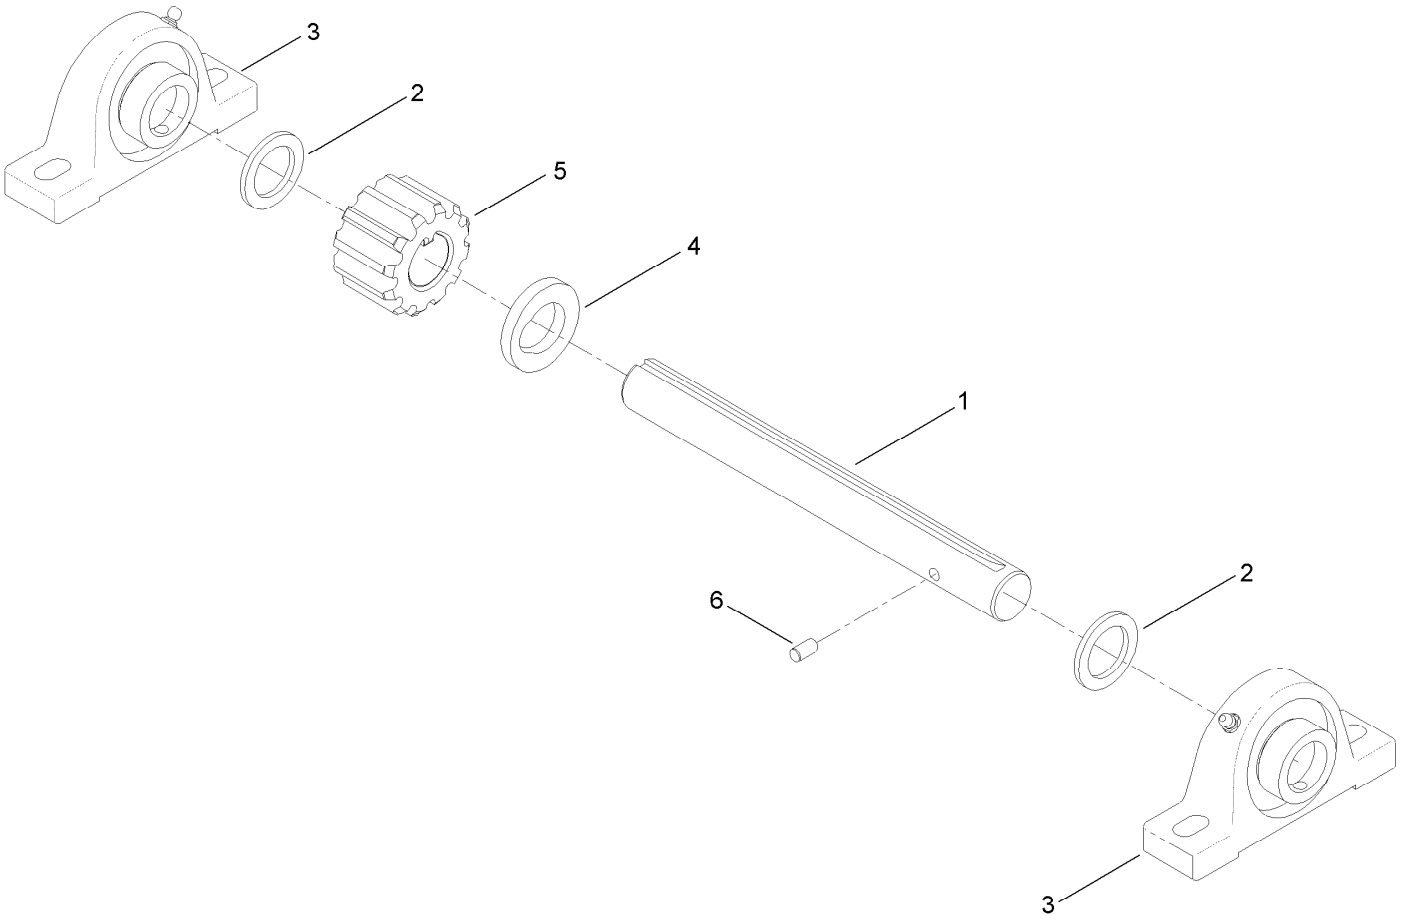

Pinion Assembly No. 131-5704 (continued)

Ref.	Part Number	Qty.	Description
1	131-5705	1	Shaft-Pinion
2	3-8514	2	Washer-Thrust
3	ST32208	2	Bearing-Block, Pillow
4	131-5706	1	Washer
5	ST57625	1	Gear-Spur
6	95-0715	1	Pin-Dowel


Cowl Assembly

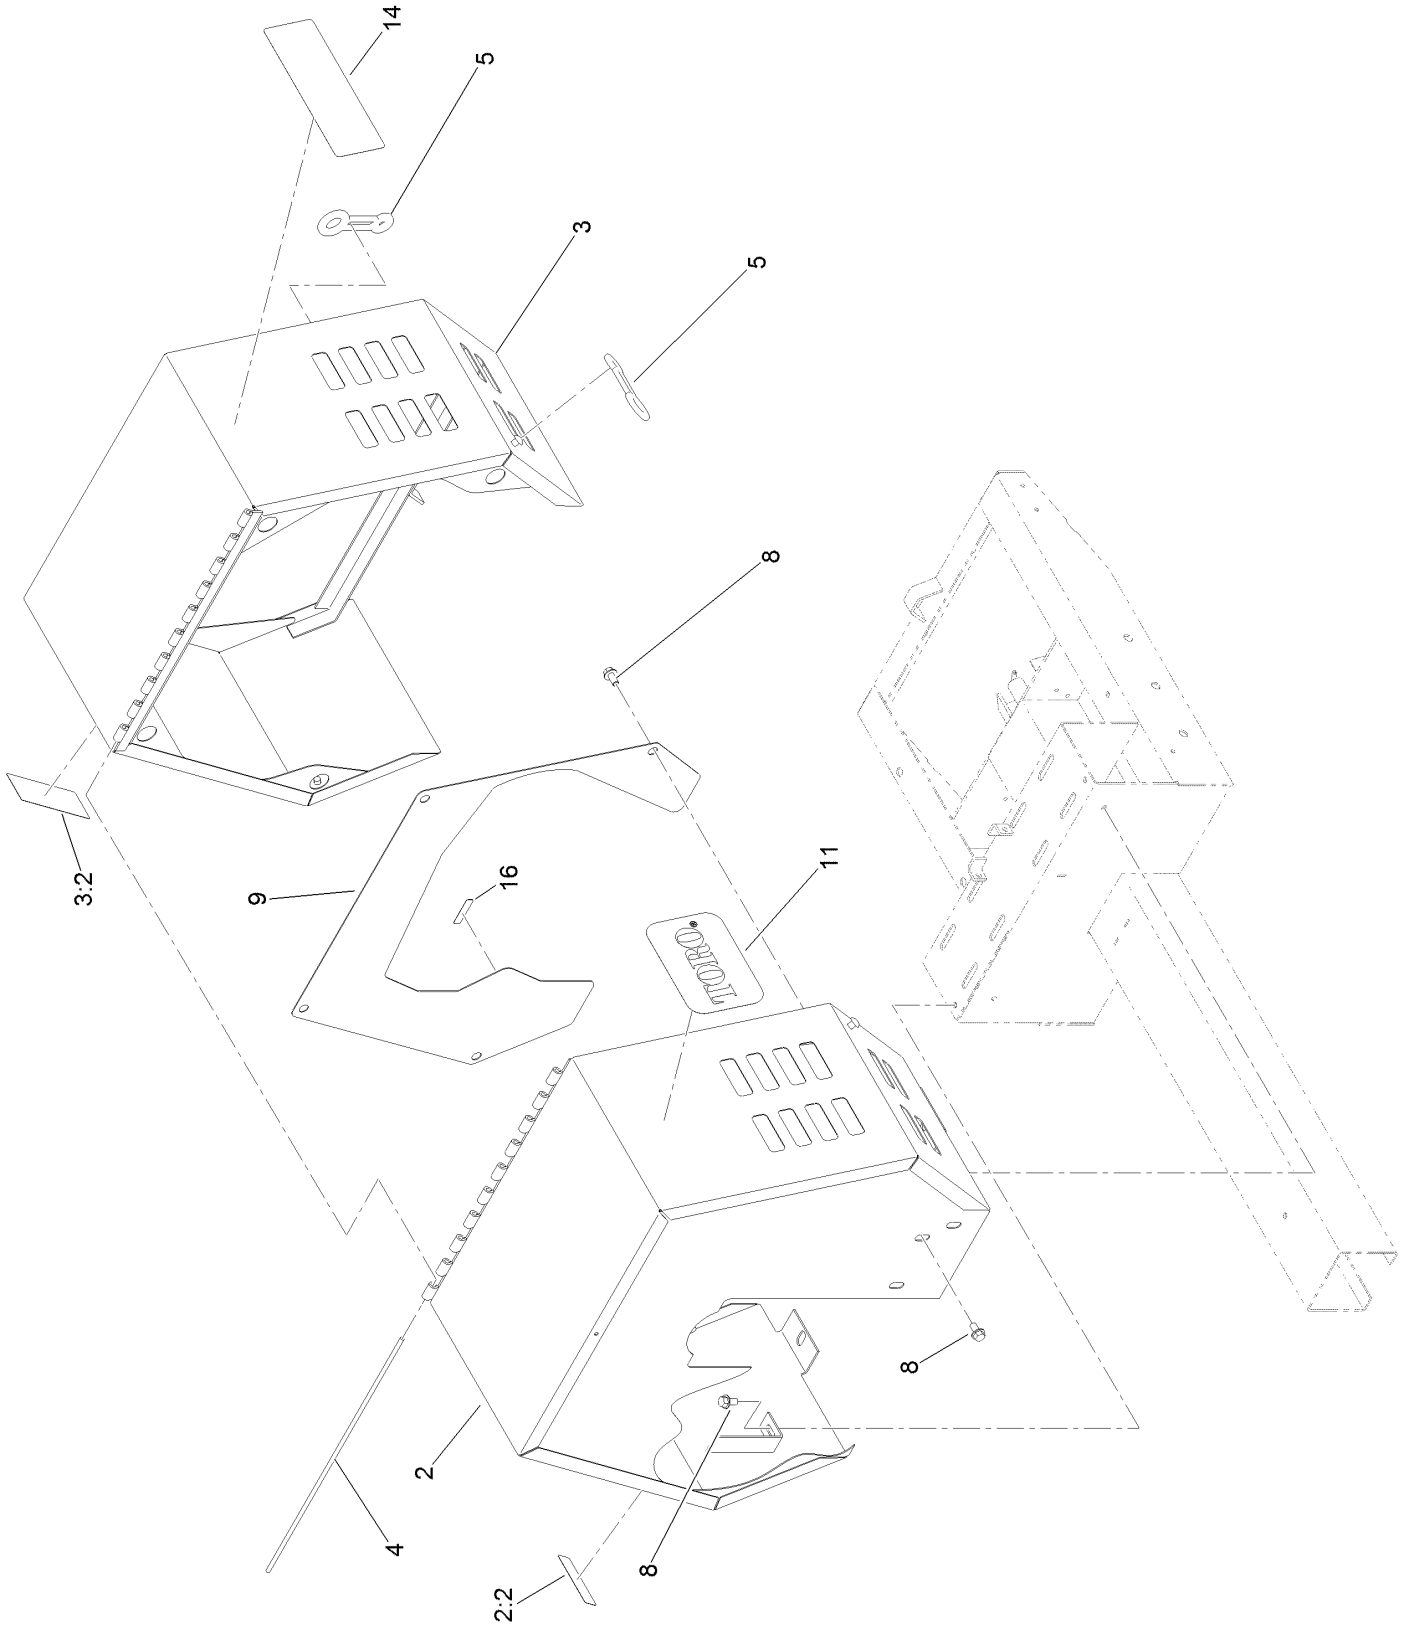

Cowl Assembly (continued)

Ref.	Part Number	Qty.	Description
2	127-1683	1	Stationary Cowl ASM
2:2	117-2718	1	Decal-Arrester, Spark
3	127-1685	1	Movable Cowl ASM
3:2	125-4939	1	Decal-Warning
4	ST44368	1	Pin
5	ST47182	3	Latch-Rubber
8	110-9380	10	Screw-HWH
9	125-6214-03	1	Plate-Access, Belt
11	67-7320	2	Decal
14	131-5729	2	Decal
16	125-8175	1	Decal-Grease

Trailer Light Assembly

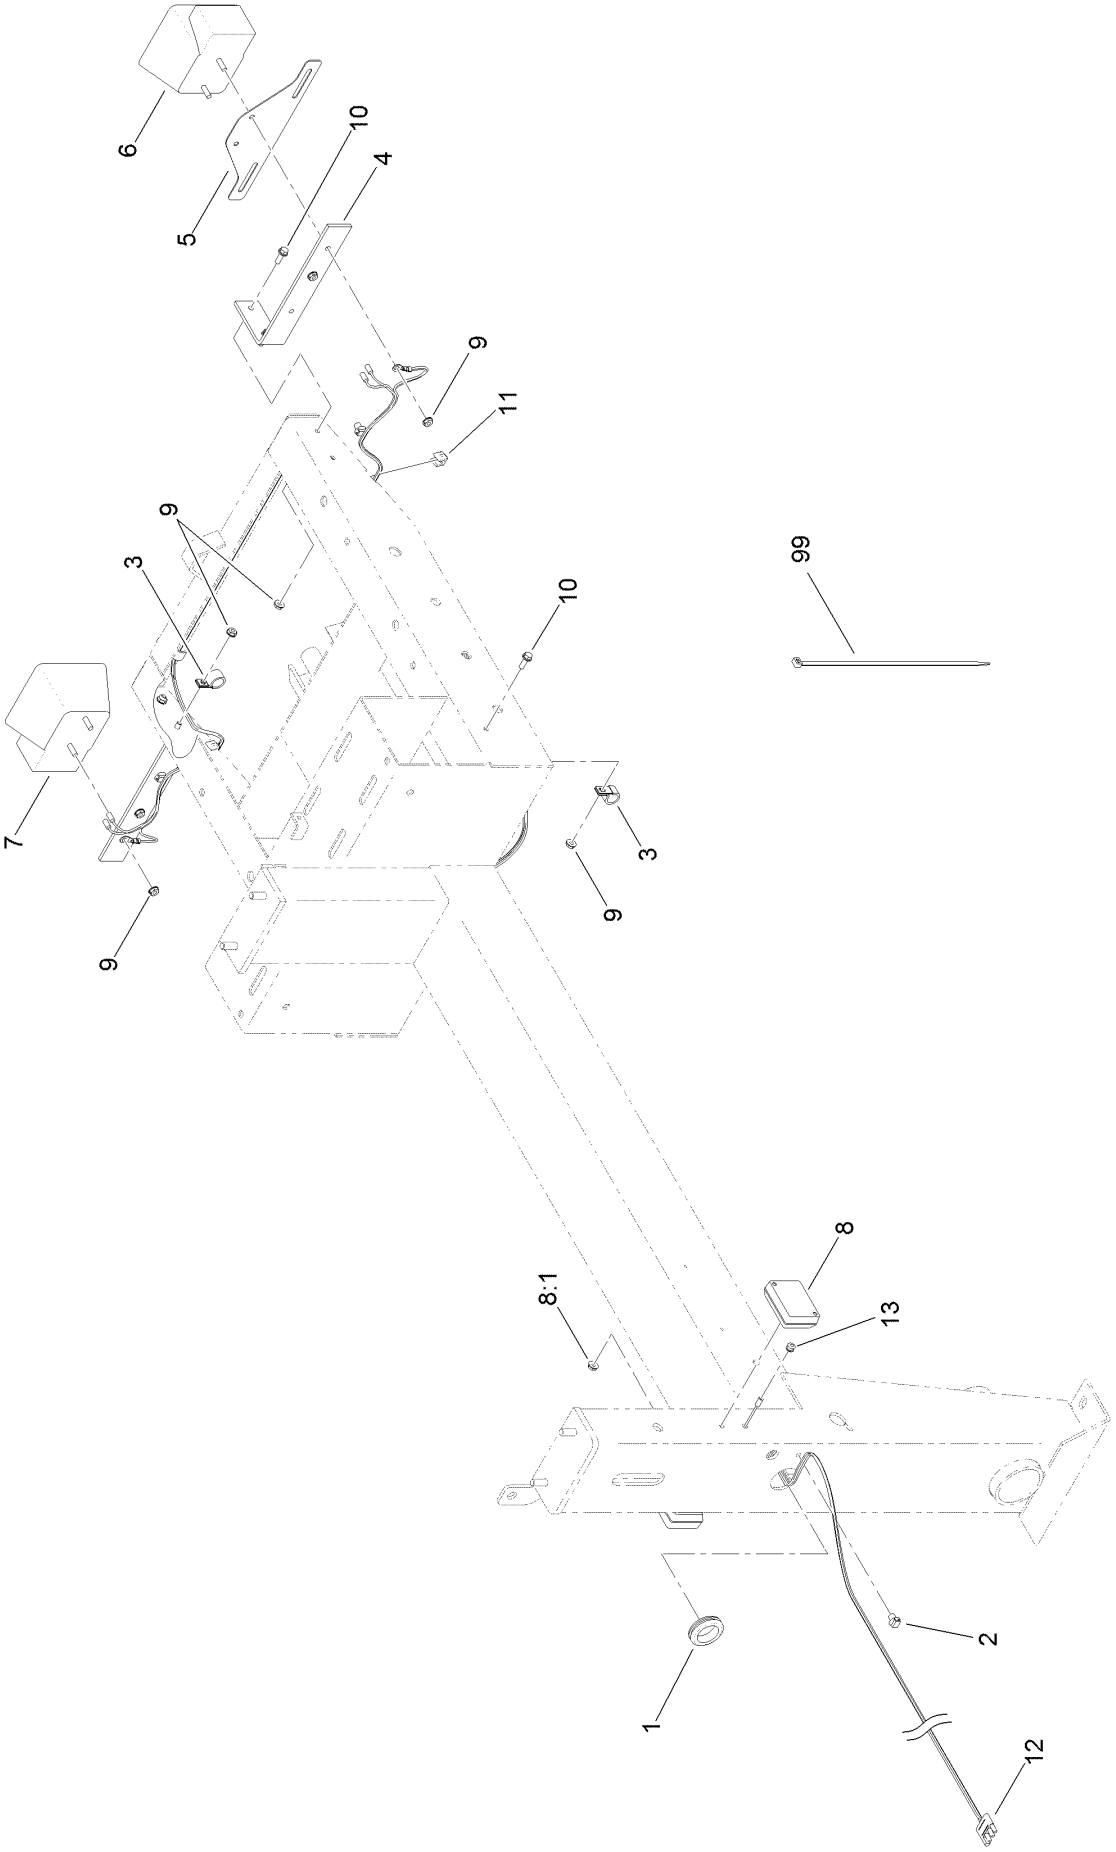

Trailer Light Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-4831	1	Grommet
2	32180-030	1	Clip-Tie
3	2412-87	5	Clamp-Cable
4	ST36003-03	2	Bracket-Universal
5	125-8659-03	1	Holder-Plate, License
6	120-3735	1	Light-Tail, LH
7	120-3734	1	Light-Tail, RH
8	127-7562	2	Lamp-Marker, Front Side
8:1	32149-2	1	Nut-Keps
9	32149-2	11	Nut-Keps
10	115-5103	7	Screw-HHF
11	32180-078	4	Clip-Edge
12	127-7567	1	Harness-Wire
13	127-7566	2	Grommet
99	3290-379	5	Tie-Cable

Attachments and Accessories

For 60220C MMX-858H-S Mortar Mixer

Product Name	Model/Part
31in Forged Tow Pole Hitch	68056
31in Pintel Tow Pole Hitch	68058
31in Stamped Tow Pole Hitch	68060

Notes:



Count on it.