
STAND-ON SPREADER SPRAYER

Model No. SSS270CSB00000—Serial No. 316000000 and Up

Picture below may not reflect actual product.

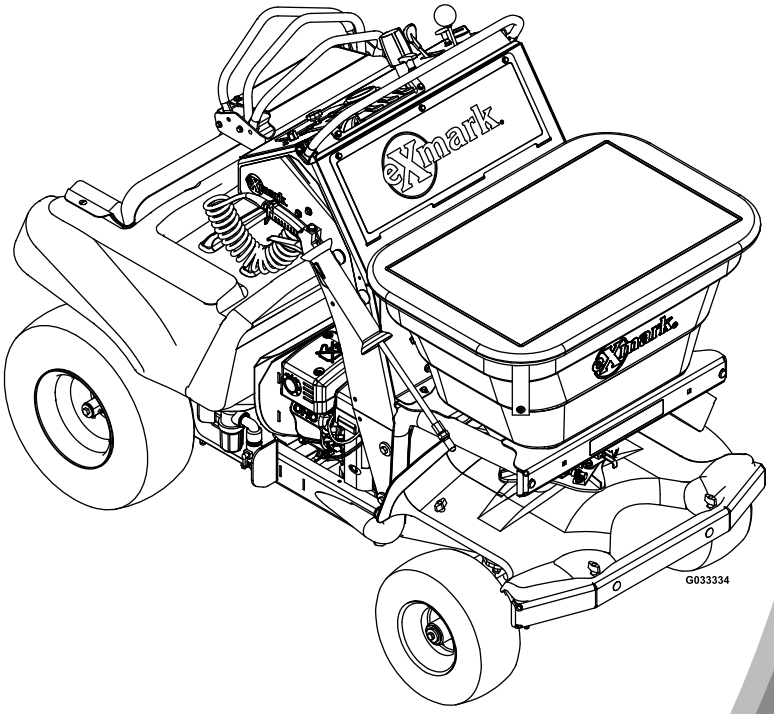

Parts Manual

Part No. 4502-676 Rev. A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2015—Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310

Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Frame Assembly 4
Control Tower W/Decals No. 126-6398 6
Knee Pad Assembly 8
Steering Assembly 10
Steering Linkage Assembly 12
Spray System Assembly 14
Sprayer Tank Assembly 16
Control Valve Manifold Assembly 18
Control Valve Manifold Assembly (cont.) 20
Hose Assembly No. 126-2250 22
Hose Assembly No. 126-7304 24
Strainer Assembly 26
Left Nozzle Assembly No. 126-3667 28
Center Nozzle Assembly No. 126-3668 30
Right Nozzle Assembly No. 126-3669 32
Spreader Assembly 34
Side Deflector Assembly 36
Hopper Assembly 38
Spreader Motor Assembly 40
Ground Drive Assembly 42
Transaxle Cover Assembly No. 126-1462 44
Engine Assembly 46
Electrical Assembly 48

Frame Assembly

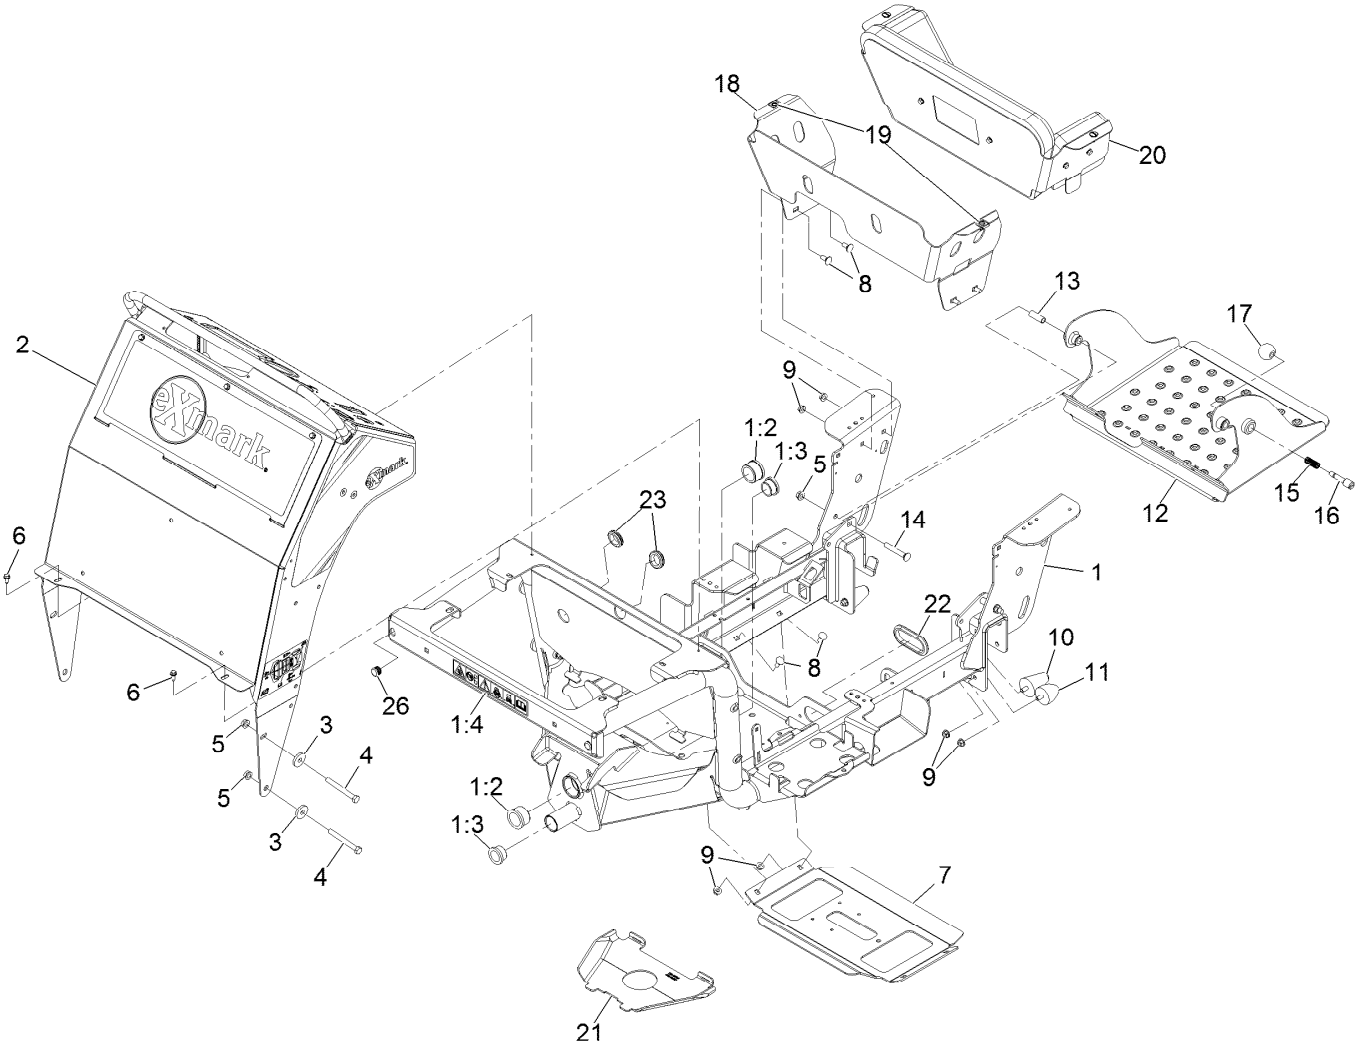


Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-0198	1	Frame ASM
1:2	126-3008	2	Bearing-Flanged
1:3	126-3002	2	Bearing-Flanged
1:4	126-4994	1	Decal-Tie Down
2	126-6398	1	Control Tower ASM
3	126-3875	4	Washer
4	126-2661	4	Screw-HH
5	126-2233	6	Nut-Hex Flg 3/8-16 Nyloc Ss
6	32144-10	2	Screw-HWH 1/4-20 X .62
7	126-1415	1	Guard-Lower
8	126-0695	8	Screw-CARR
9	126-2232	12	Nut-Nyloc 5/16-18 Ss
10	114-1925	2	Bumper-Rubber
11	114-1926	2	Bumper-Rubber
12	126-0435	1	Operator Platform ASM
13	126-0434	2	Bushing-Pivot, Platform
14	126-0702	2	Screw-CARR
15	114-5348	1	Spring
16	119-8650	1	Pin-Latch
17	1-603175	1	Knob-Ball
18	126-1234-03	1	Mount-Pad, Knee
19	119-1730	2	Receptacle-Clip, Mini
20		1	Knee Pad ASM ●
21	126-2567	1	Shield-Dust
22	237-164	2	Grommet
23	240-5	2	Grommet
26	126-5147	2	Plug-Tube

● Not serviced separately


Control Tower W/Decals No. 126-6398

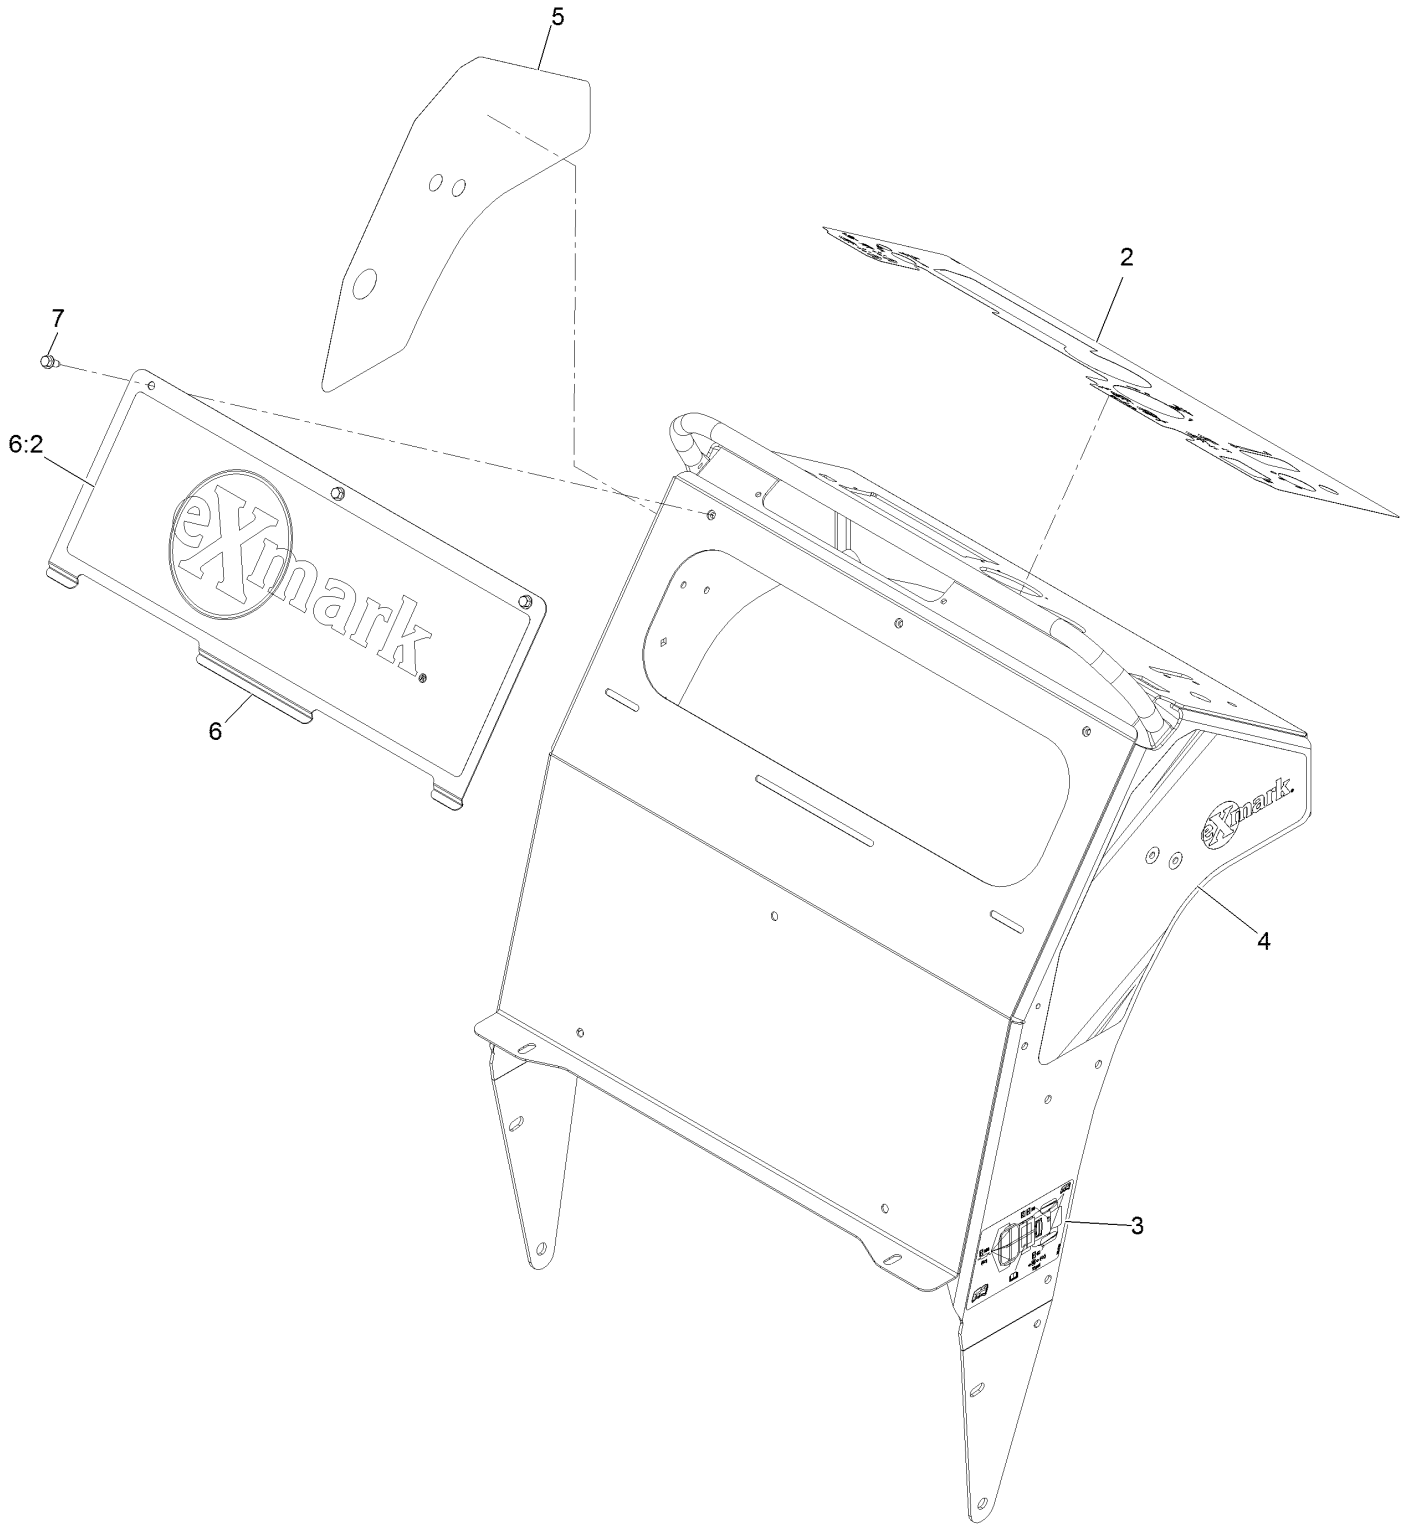

Control Tower W/Decals No. 126-6398 (continued)

Ref.	Part Number	Qty.	Description
2	126-7312	1	Decal-Control
3	126-5186	1	Decal-Service Aid
4	126-7207	1	Decal-LH Side Panel
5	126-7208	1	Decal-RH Side Panel
6	126-7215	1	Access Panel W/ Decal
6:2	126-7206	1	Decal-Exmark Front Panel
7	32144-10	3	Screw-HWH 1/4-20 X .62


Knee Pad Assembly

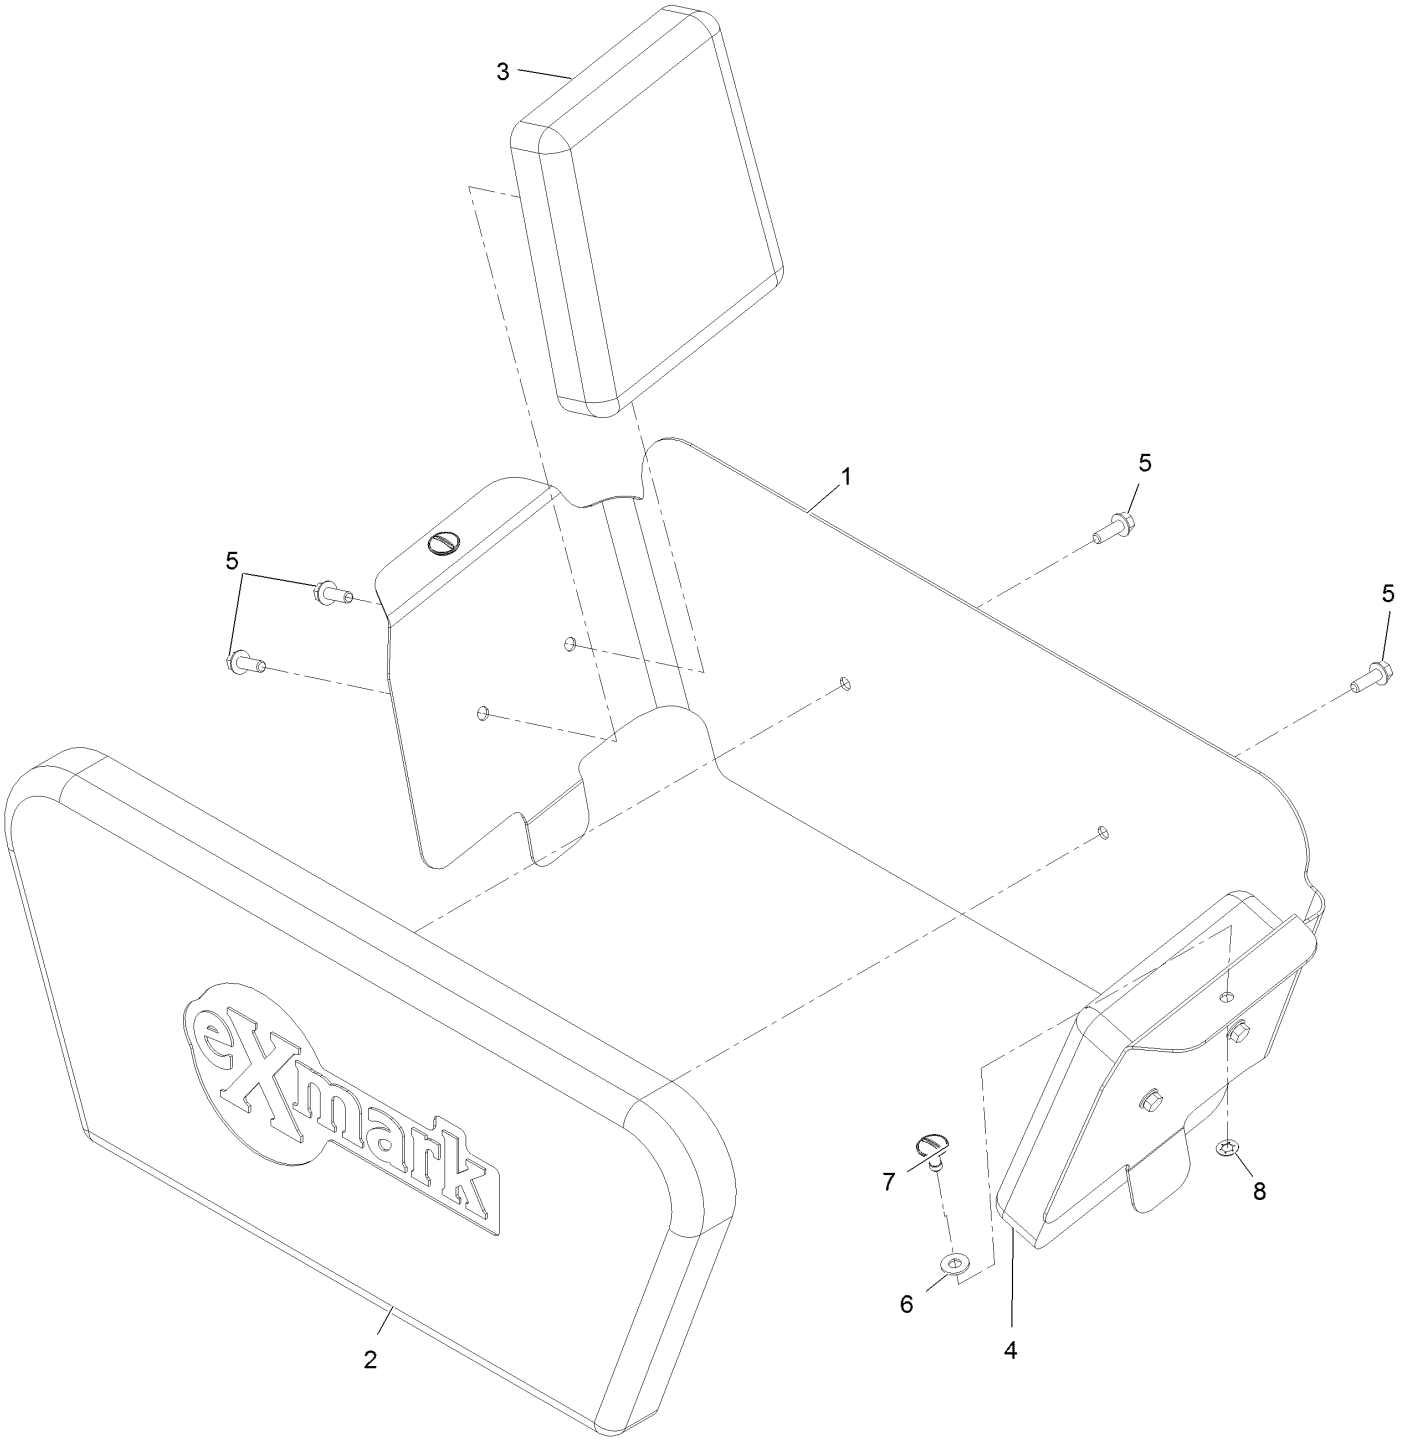

Knee Pad Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-1244-03	1	Bracket-Pad, Knee
2	126-1249	1	Pad-Knee, Center
3	126-1250	1	Pad-Knee, LH Side
4	126-2773	1	Pad-Knee, RH Side
5	117-8304	6	Screw-Hex Flange 1/4-20 X 3/4
6	360-0140	2	Washer-Flat
7	119-1728	2	Stud-1/4 Turn
8	119-1729	2	Retainer-Stud


Steering Assembly

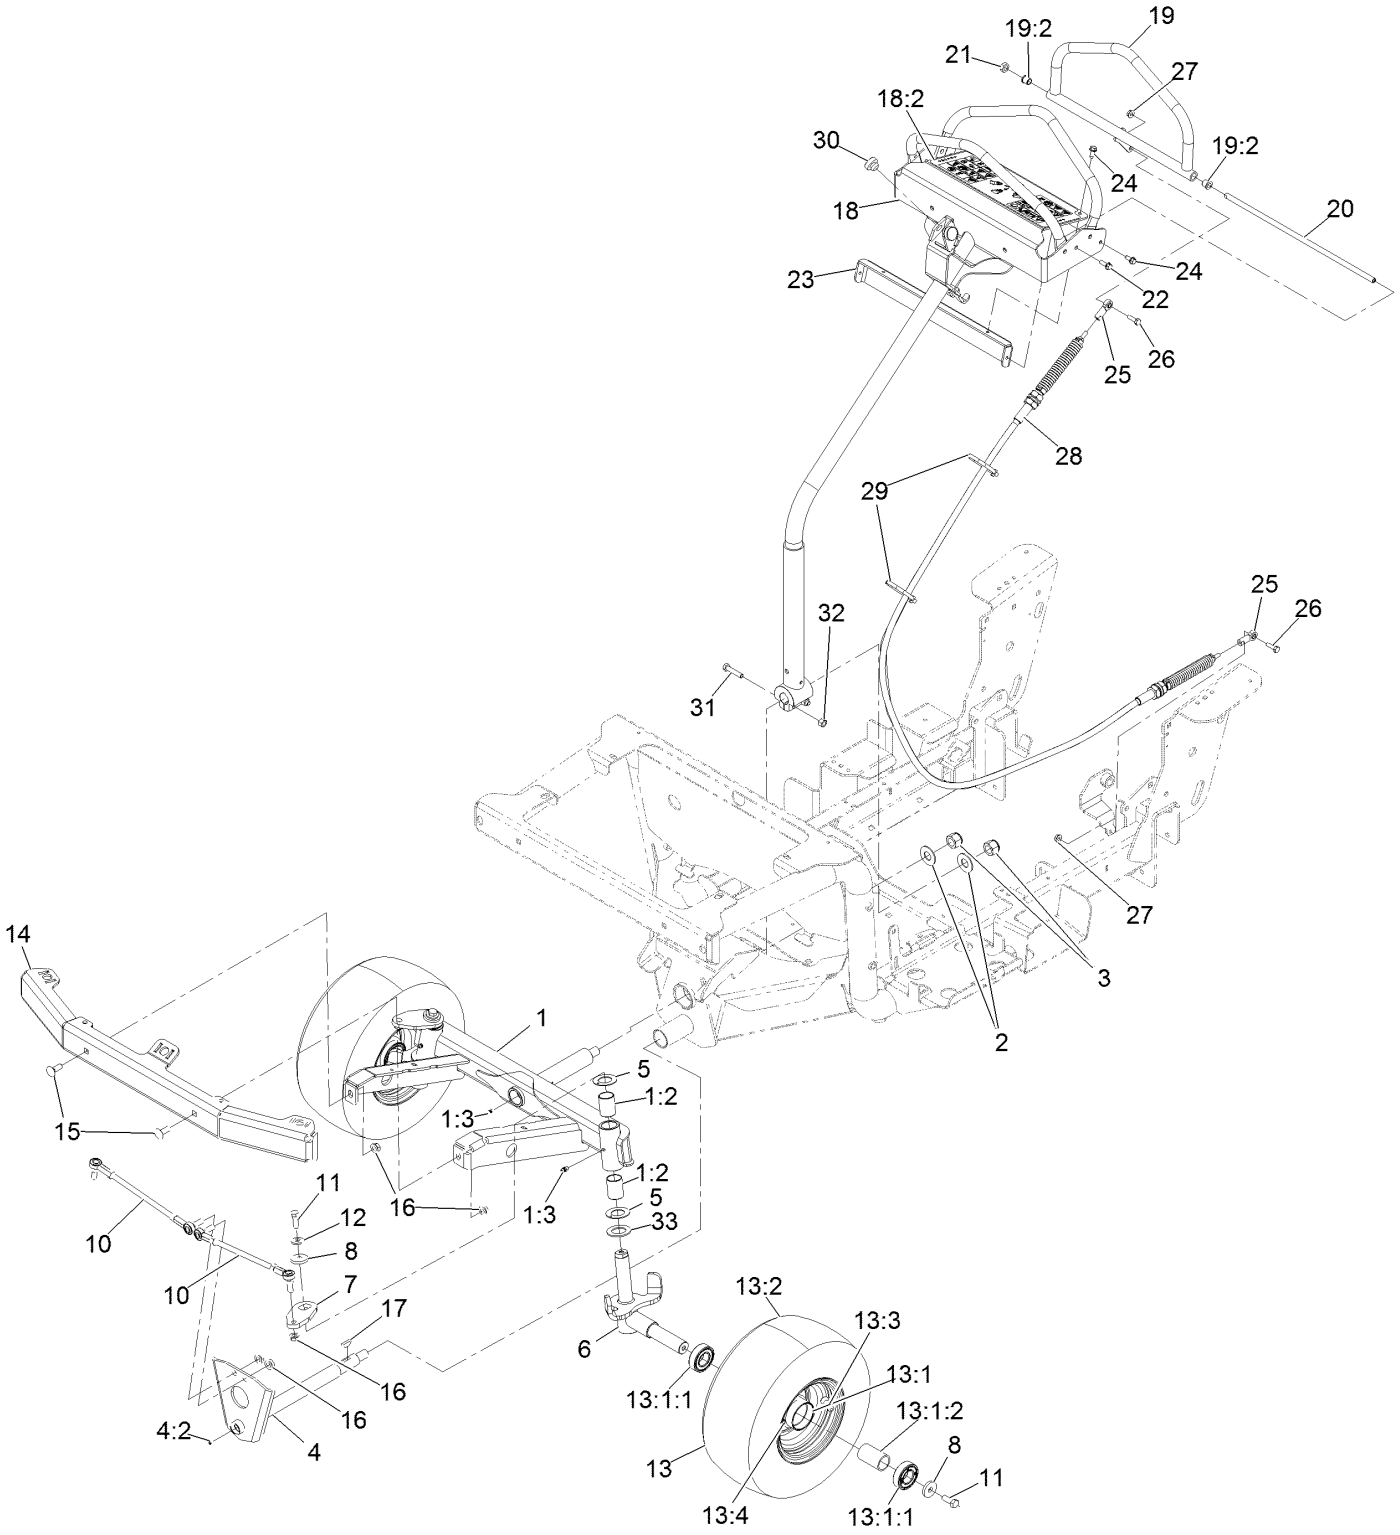

Steering Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-7045	1	Front Axle ASM
1:2	126-7048	4	Bearing-Sleeve
1:3	126-1375	3	Zerk-Grease
2	126-0656	2	Washer-Flat
3	126-3841	2	Nut-Hex Nyloc 5/8-11 Ss
4	126-6048	1	Steering Shaft ASM
4:2	126-1375	1	Zerk-Grease
5	126-7044	4	Washer-Thrust
6	126-6733	2	Front Axle ASM
7	126-7069	2	Arm-Steering
8	126-3875	4	Washer
10	126-7185	2	Steering Linkage ASM
11	3235-22	4	Screw-HH, Lock
12	98-5975	2	Washer-Spring Disc 3/8
13	126-7220	2	Wheel And Tire ASM
13:1	126-7258	1	Wheel ASM
13:1:1	116-0720	2	Bearing-Ball
13:1:2	126-7260	1	Spacer
13:2	126-1509	1	Tire
13:3	232-27	1	Stem-Valve
13:4	302-62	1	Fitting-Grease
14	116-9789	1	Bumper-Front
15	126-0980	2	Screw-Carriage 3/8-16 X 1 Ss
16	126-2233	6	Nut-Hex Flg 3/8-16 Nyloc Ss
17	3257-7	1	Key-Woodruff
18	126-1614	1	Motion Handle ASM
18:2	126-2612	1	Decal-Warning
19	126-1598	1	Motion Handle ASM
19:2	103-9928	2	Bearing
20	126-0496	1	Shaft-Pivot, Speed Control
21	116-4198	1	Spacer-Shaft, Drive Lever
22	117-8304	2	Screw-Hex Flange 1/4-20 X 3/4
23	126-1604-03	1	Panel-Rear, Steering
24	32144-10	4	Screw-HWH 1/4-20 X .62
25	2411-41	2	Rod End-Ball Joint
26	126-0498	2	Screw-HH 1/4-20 X 7/8 Ss
27	126-2231	2	Nut-Nyloc 1/4-20 Ss
28	126-2169	1	Cable-Motion
29	1-303335	2	Tie-Cable 7 15/16 (Large)
30	104-1412	2	Bumper-Rubber
31	3210-8	2	Screw-HH 5/16-24 X 1 1/2
32	32152-5	2	Nut-Hex 5/16-24
33	126-7050	2	Spacer-Relief


Steering Linkage Assembly

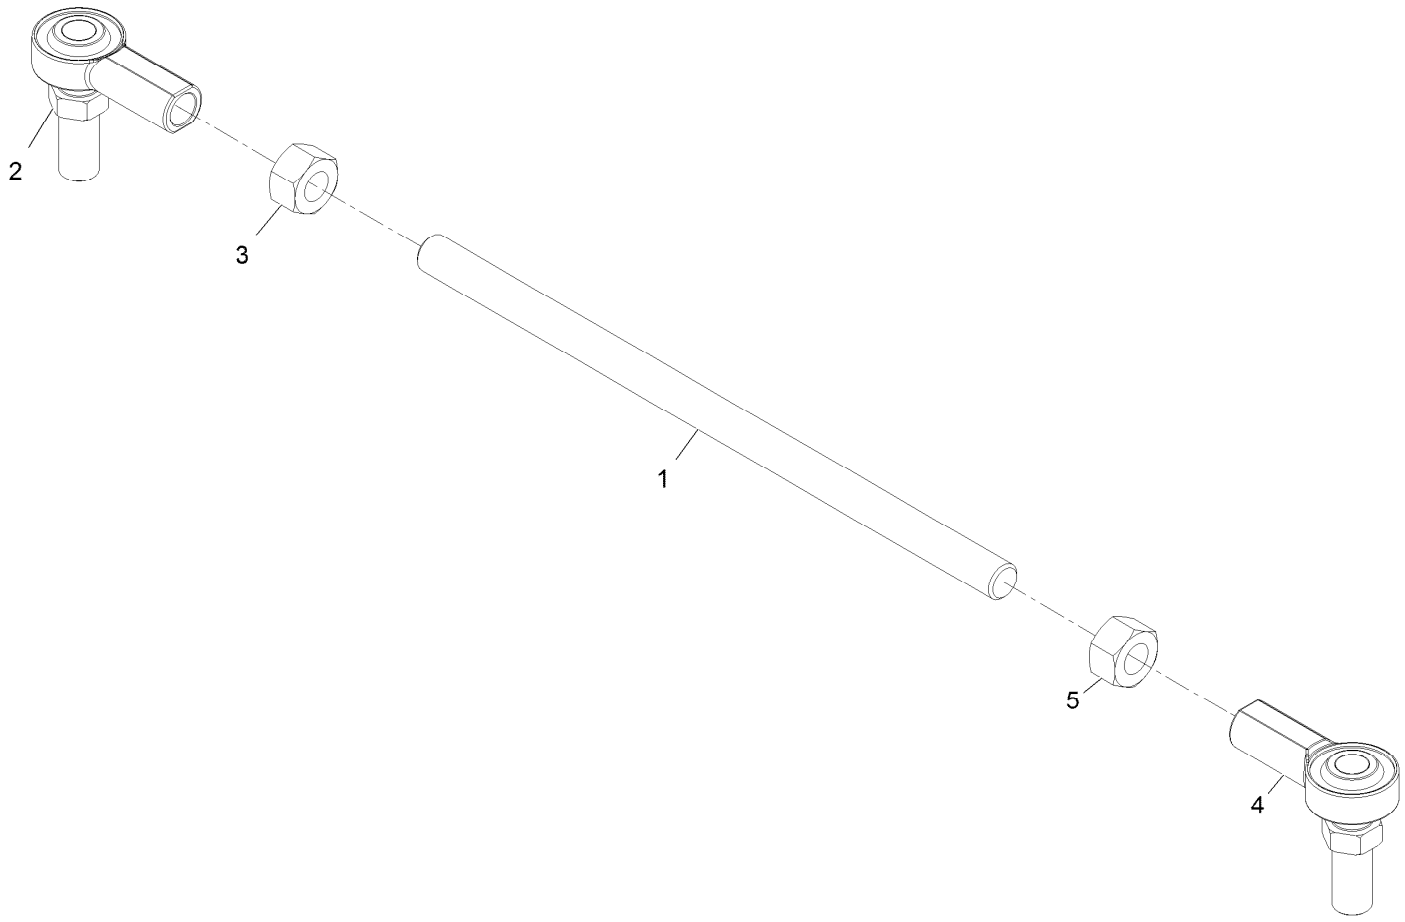

Steering Linkage Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH

Spray System Assembly

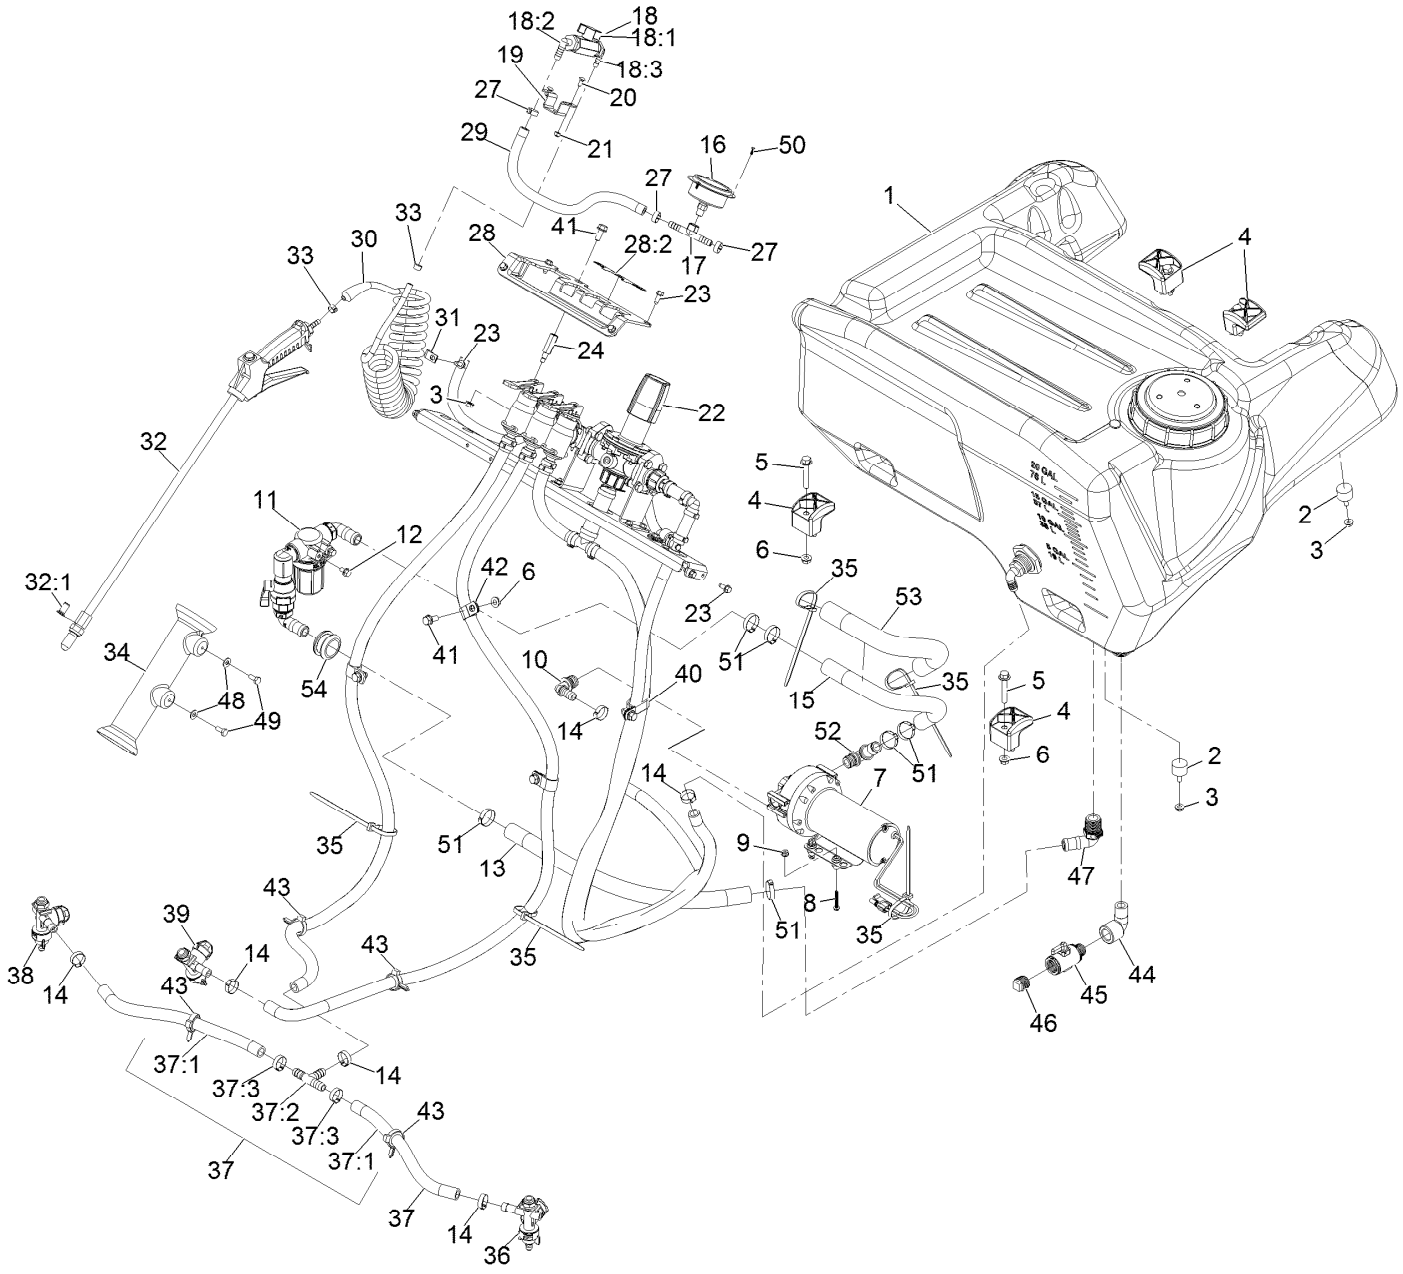


Spray System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-0286	1	Tank-Sprayer
2	116-6380	4	Bumper-Rubber (W/ Stud)
3	126-2231	5	Nut-Nyloc 1/4-20 Ss
4	107-4543	4	Clamp
5	126-2711	4	Screw-HHF
6	126-2232	8	Nut-Nyloc 5/16-18 Ss
7	126-4839	1	Pump-Diaphragm, 3.8 Gpm
8	692501	4	Screw-SHWH
9	126-2645	4	Nut-HF
10	126-0961	1	Fitting-Elbow, Barbed
11	126-4358	1	Strainer ASM
12	126-2713	2	Screw-HHF
13	126-4422	1	Hose-Water
14	126-4778	6	Clamp
15	126-4637	1	Hose-Water
16	126-4110	1	Gauge-Pressure
17	126-2348	1	Fitting-Tee
18		1	Wand Control ASM ●
18:1	126-0242	1	Valve-Ball
18:2	126-4992	1	Fitting-Elbow-90
18:3	126-4993	1	Fitting-Elbow-90
19	126-0239-03	1	Bracket-Valve
20	1-807513	2	Bolt-Carriage #10-24 X 1/2
21	3296-2	2	Nut-Nyloc #10-24
22		1	Control Valve Manifold ASM ●
23	32144-10	9	Screw-HWH 1/4-20 X .62
24	126-4914	1	Spacer-Mount, Manifold
27	126-3749	3	Clamp
28	126-4180	1	Cover-Controls
28:2	126-4161	1	Decal-Control, Lever
29	126-5847	1	Hose-Water, 3/8 Pvc Red
30	126-1493	1	Hose-Coiled
31	2412-89	1	Clamp-R
32	126-8000	1	Spray Wand ASM
32:1	126-3943	1	Strainer-Nozzle, 50M 5Psi Check
33	126-2707	2	Clamp
34	126-3987	1	Holder-Wand
35	1-303335	5	Tie-Cable 7 15/16 (Large)
36	126-3667	1	Left Nozzle Sub ASM
37	126-2252	1	Hose ASM
37:1	126-2264	2	Hose-Water
37:2	126-0968	1	Fitting-Tee
37:3	126-4778	2	Clamp
38	126-3669	1	Right Nozzle Sub ASM
39	126-3668	1	Center Nozzle Sub ASM
40	120-1959	1	Clamp-R, Double
41	126-2712	5	Screw-HHF 5/16-18 X 3/4 Ss
42	1-633396	3	Clip-Loom 5/8
43	105-1853	4	Clamp-Hose
44	108-3573	1	Elbow-90 DEG
45	126-1494	1	Microvalve
46	363-3125	1	Plug
47	119-0490	1	Elbow-Hosebarb
48	360-0140	2	Washer-Flat
49	126-1290	2	Screw-HH 1/4-20 X 5/8 Ss
50	363-8552	3	Screw-TAP
51	126-4779	6	Clamp
52	126-4420	1	Fitting-Elbow
53	126-5065	1	Sleeve-Corrugated, Split
54	126-7410	1	Grommet

● Not serviced separately

Sprayer Tank Assembly

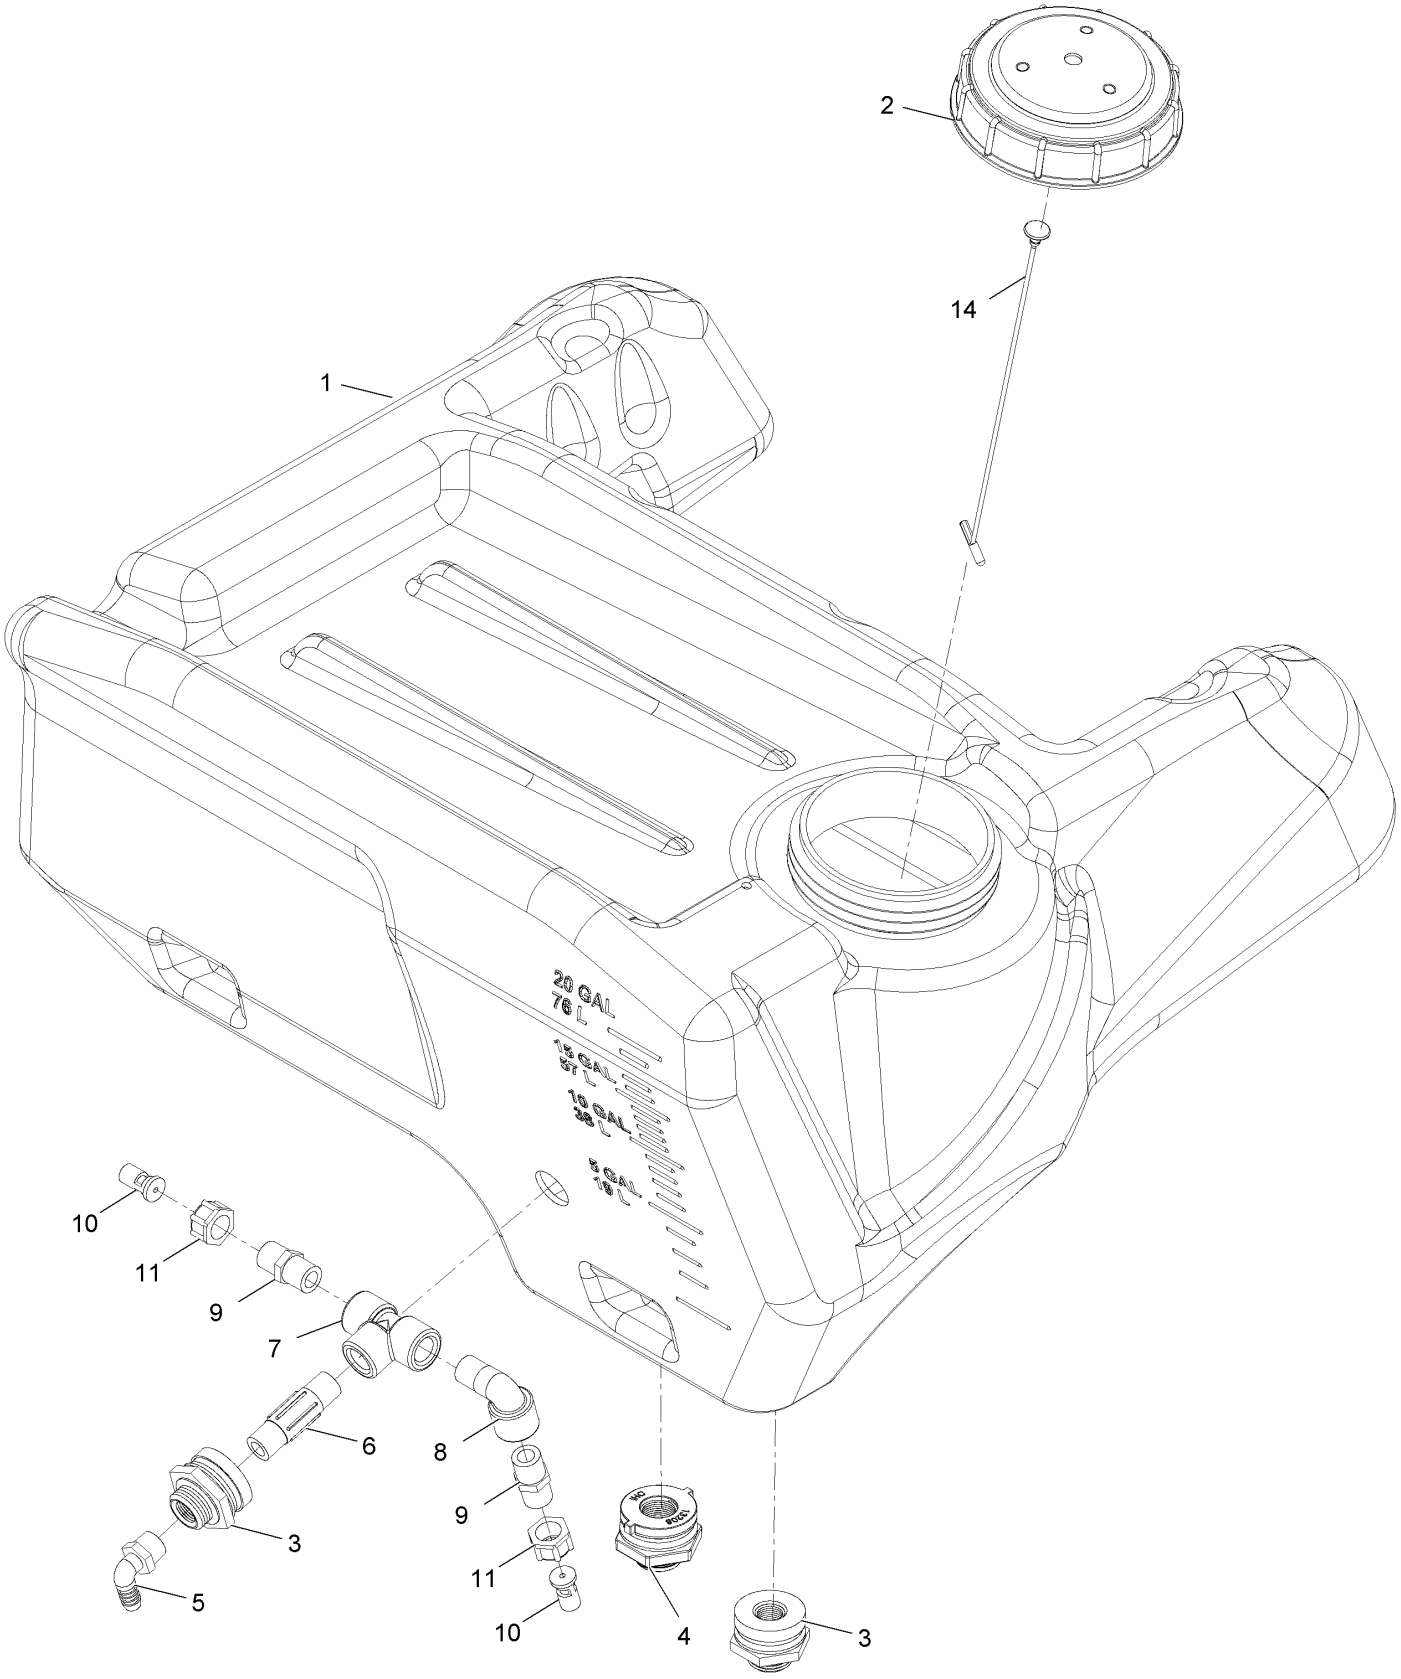


Sprayer Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Tank-Sprayer ●
2	126-0285	1	Cap-Water, 5 Inch Vent
3	126-0400	2	Fitting-Bulkhead
4	126-4393	1	Fitting-Bulkhead
5	42046	1	Elbow-90 DEG
6	94-7103	1	Nipple
7	94-7100	1	Tee
8	108-3573	1	Elbow-90 DEG
9	108-3574	2	Nipple-Short
10	100-6705	2	Nozzle-Agitation
11	99-0766	2	Nut
14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)

● Not serviced separately


Control Valve Manifold Assembly

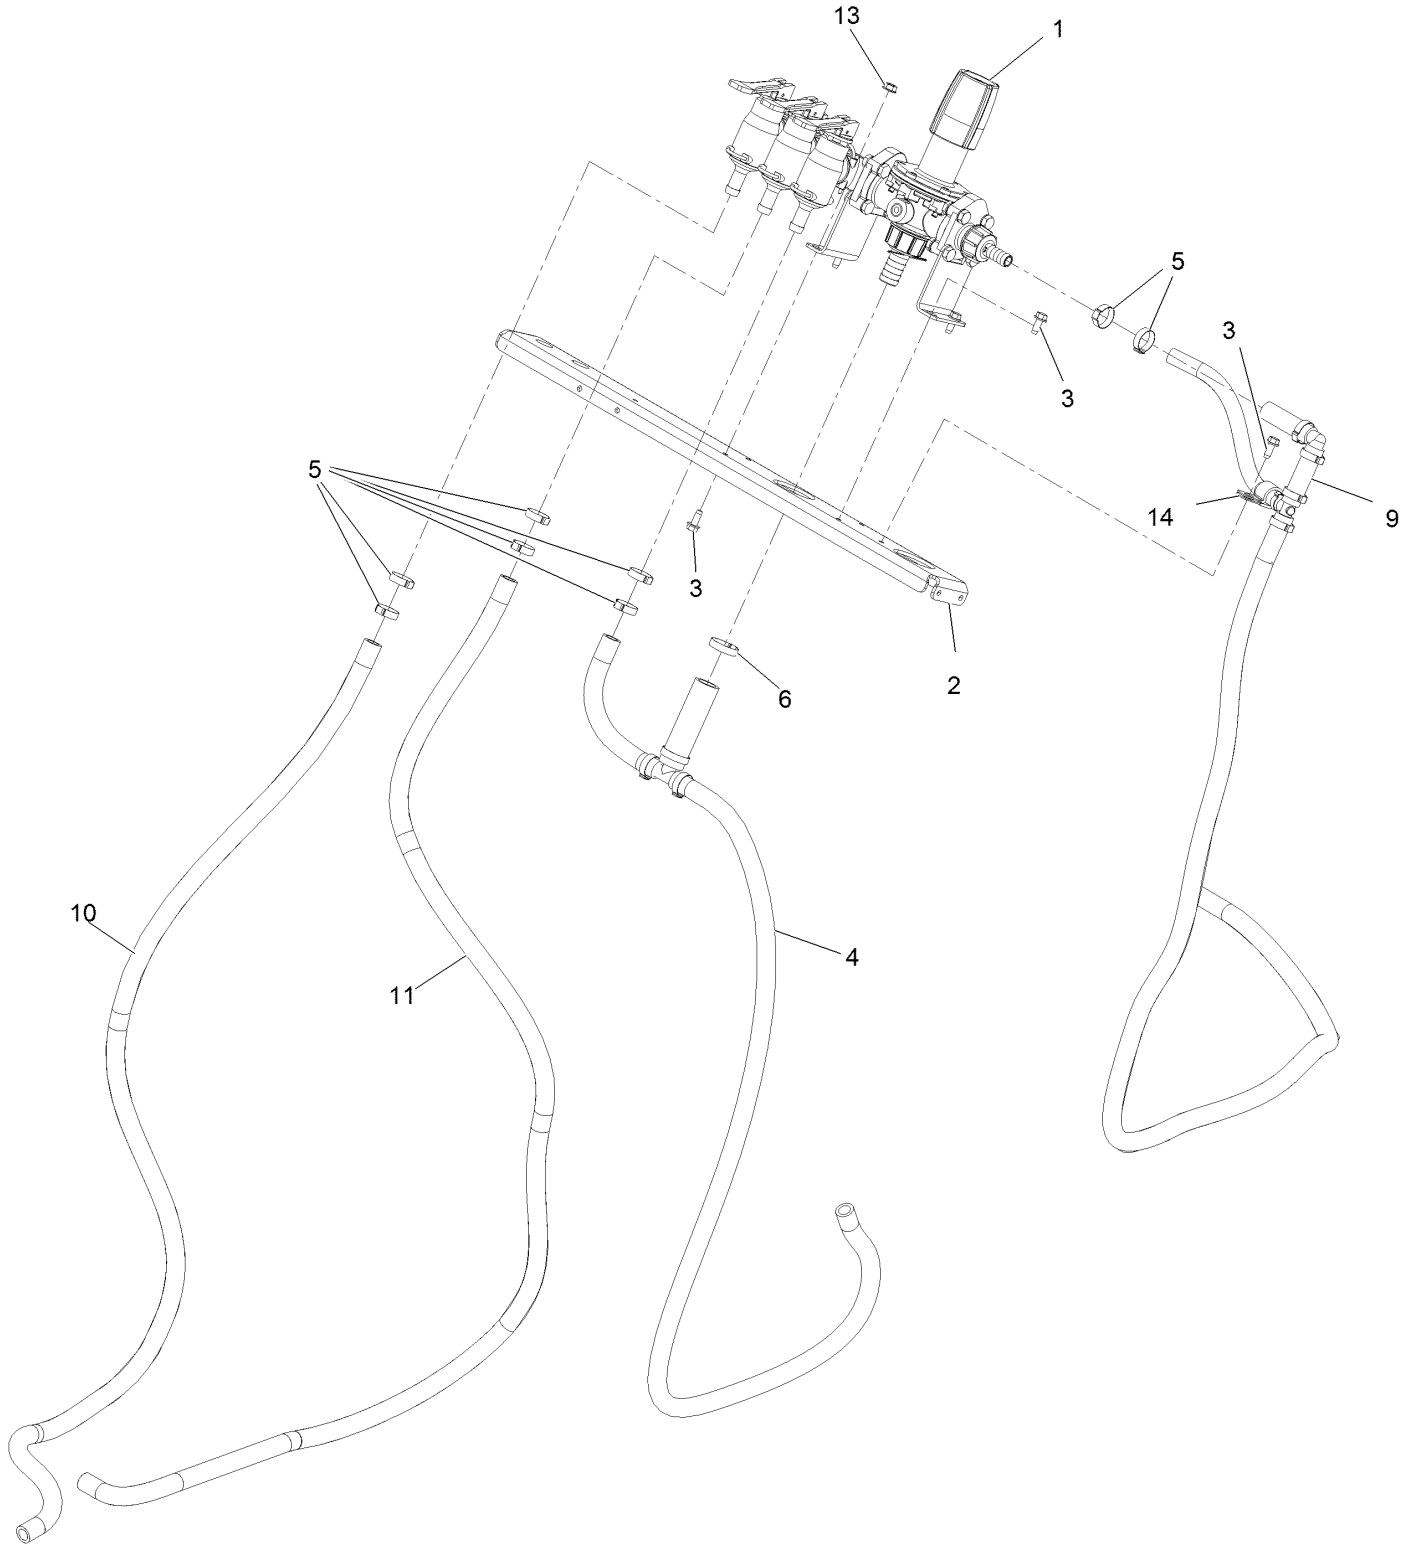

Control Valve Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-7635	1	Spray Manifold Assembly
2	126-7302-03	1	Crossmember-Column
3	32144-10	5	Screw-HWH 1/4-20 X .62
4	126-2250	1	Hose ASM
5	126-4778	8	Clamp
6	126-4779	1	Clamp
9	126-7304	1	Hose ASM
10	126-2263	1	Hose-Water
11	126-2261	1	Hose-Water
13	126-2231	1	Nut-Nyloc 1/4-20 Ss
14	1-633396	1	Clip-Loom 5/8


Control Valve Manifold Assembly (cont.)

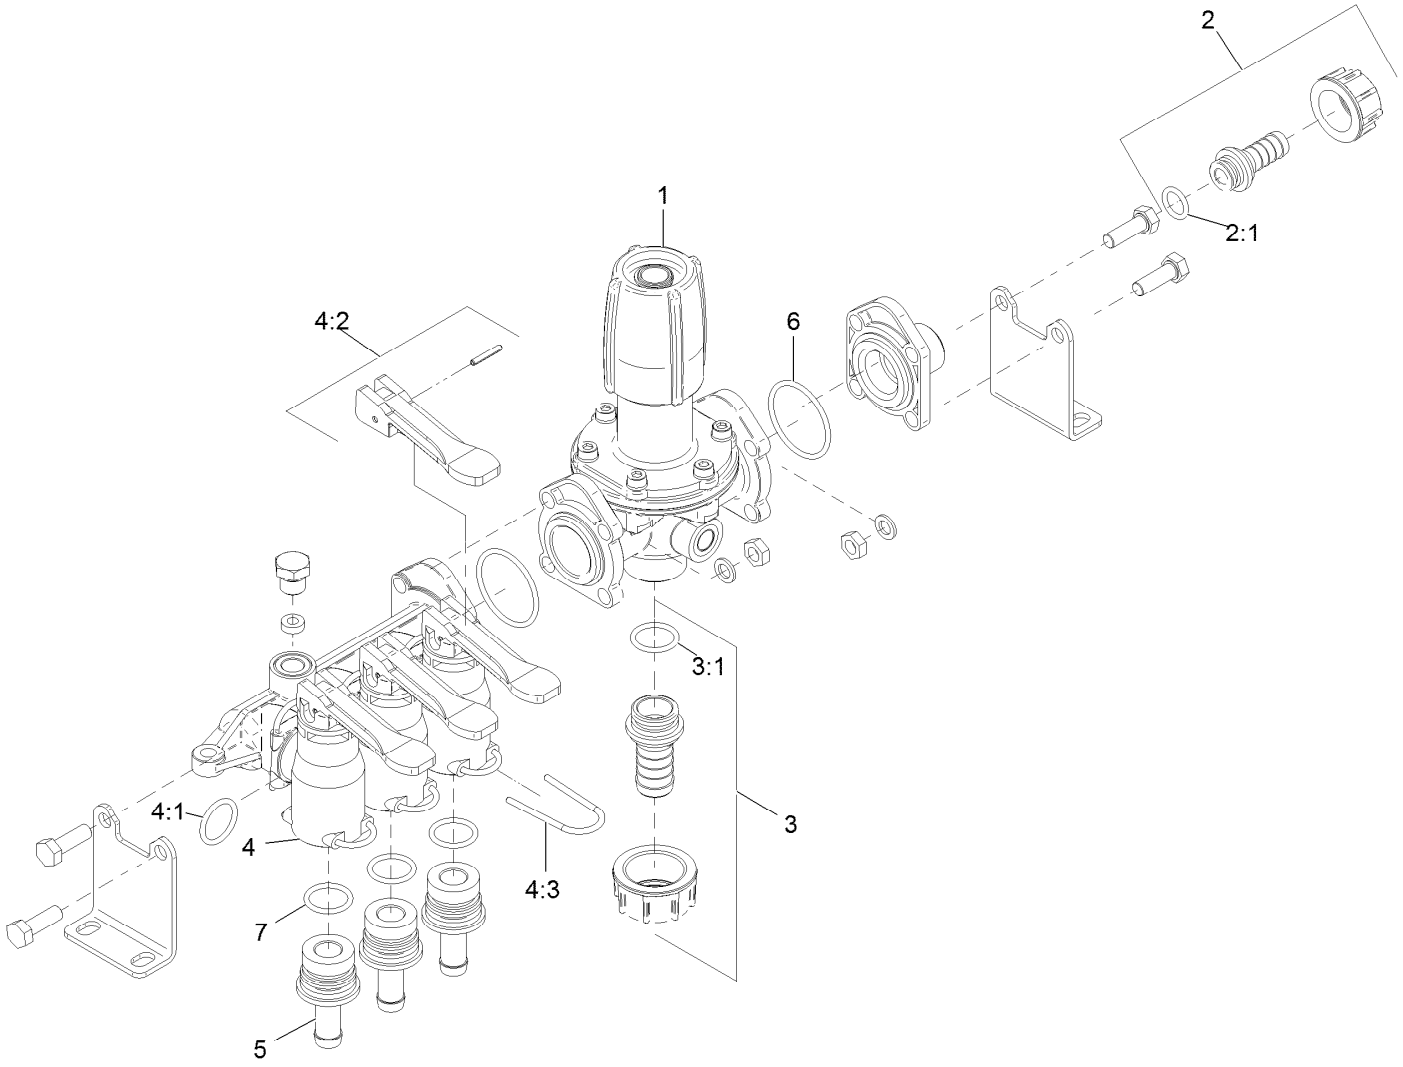

Control Valve Manifold Assembly (cont.) (continued)

Ref.	Part Number	Qty.	Description
1	126-6303	1	Regulator
2	126-6304	1	Flynut Assembly
2:1	126-6322	1	O-Ring Kit, Regulator Inlet Barb
3	126-6317	1	Flynut Assembly
3:1	126-6323	1	O-Ring Kit, Regulator Outlet Barb
4	126-7641	1	Valve Assembly W/ O-Ring
4:1	126-6328	1	O-Ring Kit, Valve Inlet
4:2	126-6319	1	Lever And Pin Assembly
4:3	126-6332	1	Wireform Retainer Kit
5	126-6321	1	Hose Barb
6	126-6326	1	O-Ring Kit, Regulator Flange
7	126-6327	1	O-Ring Kit, Valve Outlet Barb


Hose Assembly No. 126-2250

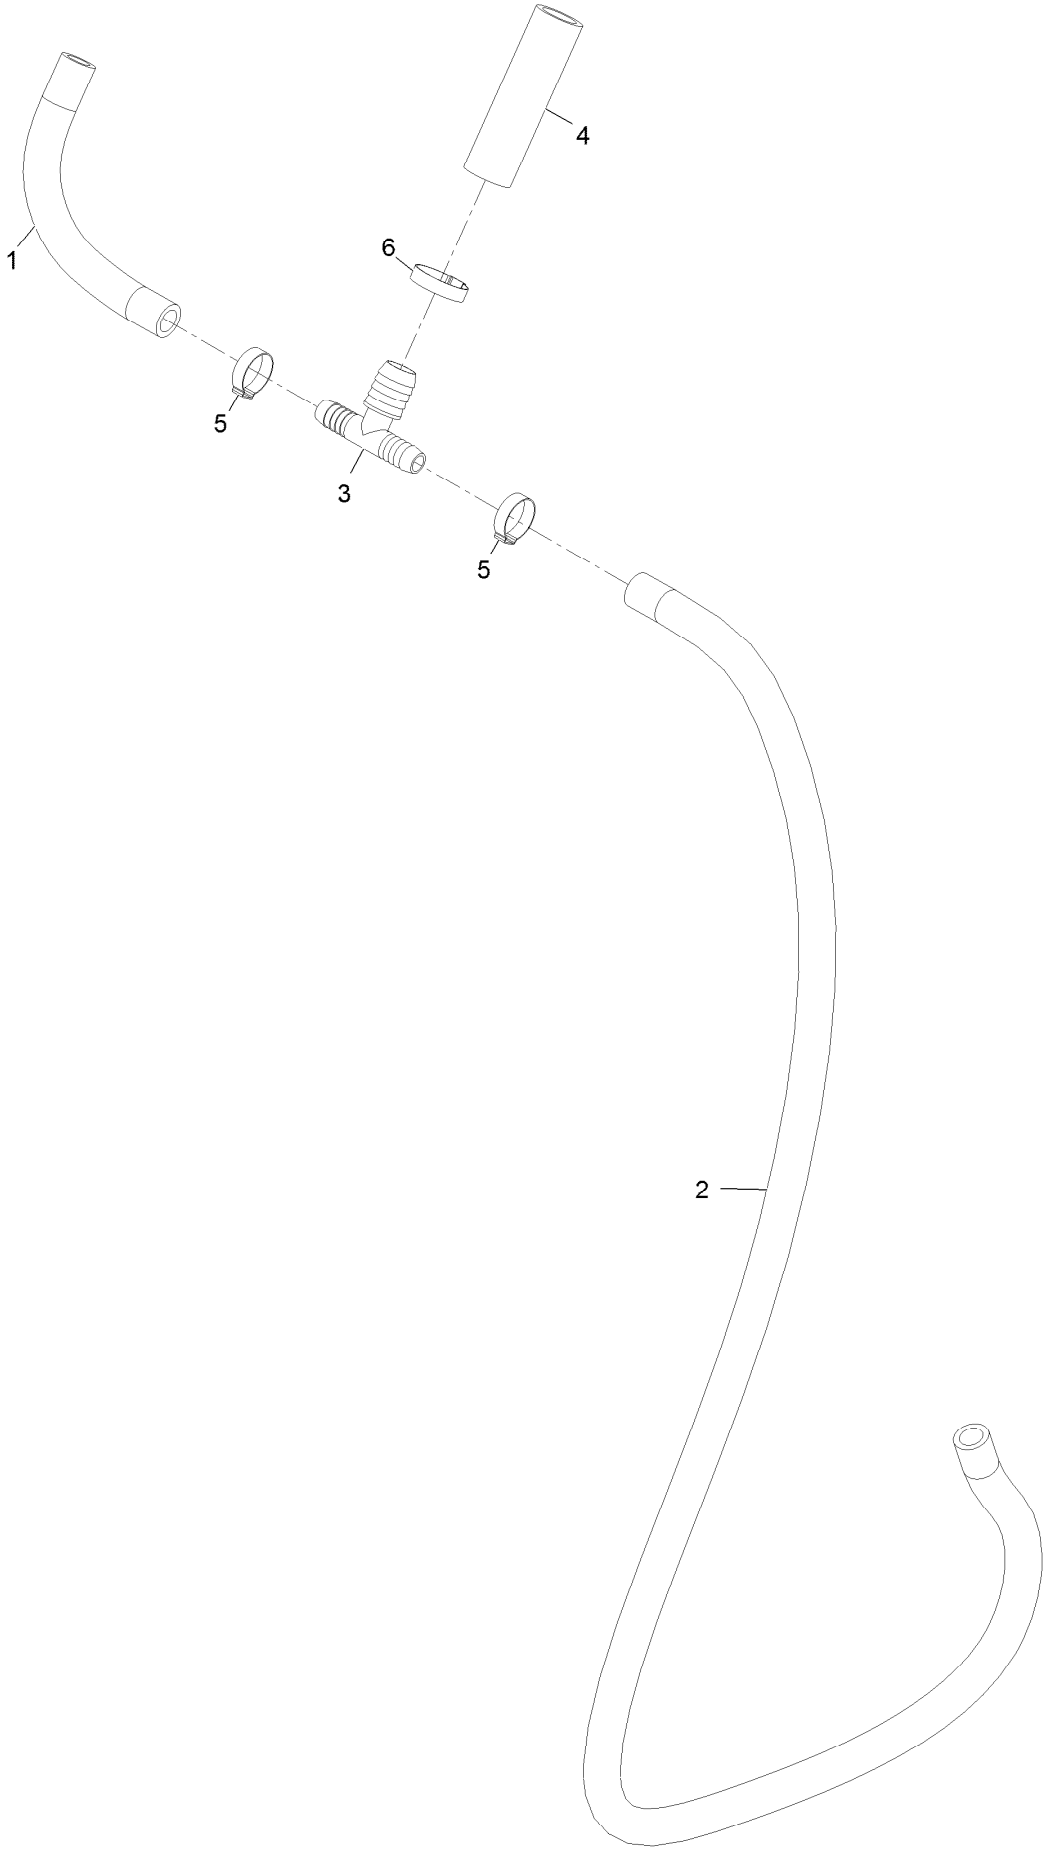

Hose Assembly No. 126-2250 (continued)

Ref.	Part Number	Qty.	Description
1	126-2257	1	Hose-Water
2	126-2259	1	Hose-Water
3	126-0969	1	Fitting-Tee
4	126-0865	1	Hose-Water
5	126-4778	2	Clamp
6	126-4779	1	Clamp


Hose Assembly No. 126-7304

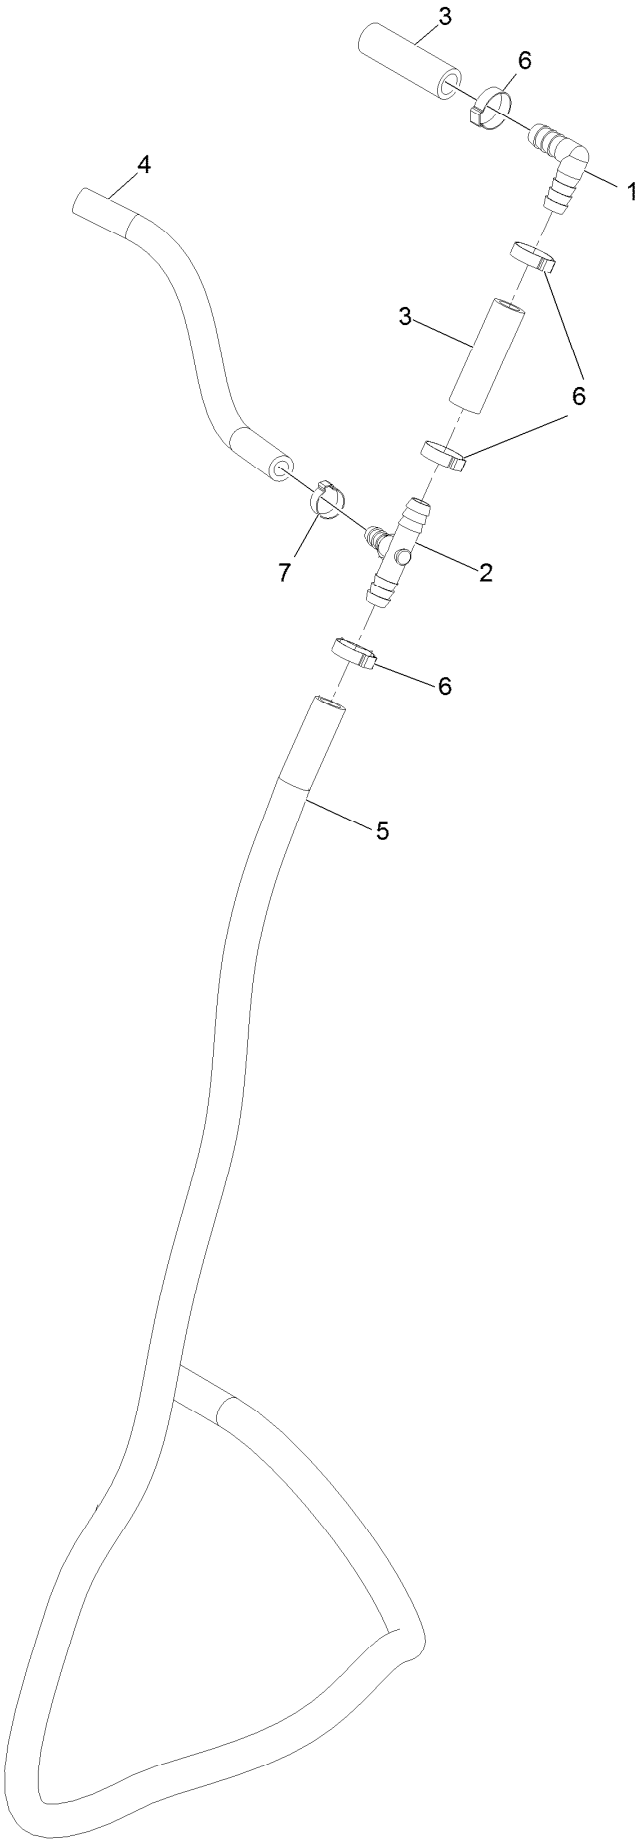

Hose Assembly No. 126-7304 (continued)

Ref.	Part Number	Qty.	Description
1	126-1001	1	Fitting-Elbow-90
2	99-7371	1	Connector-Tee
3	126-7231	2	Hose-Water
4	126-7307	1	Hose-Water
5	126-7306	1	Hose-Water
6	126-4778	4	Clamp
7	126-3749	1	Clamp


Strainer Assembly

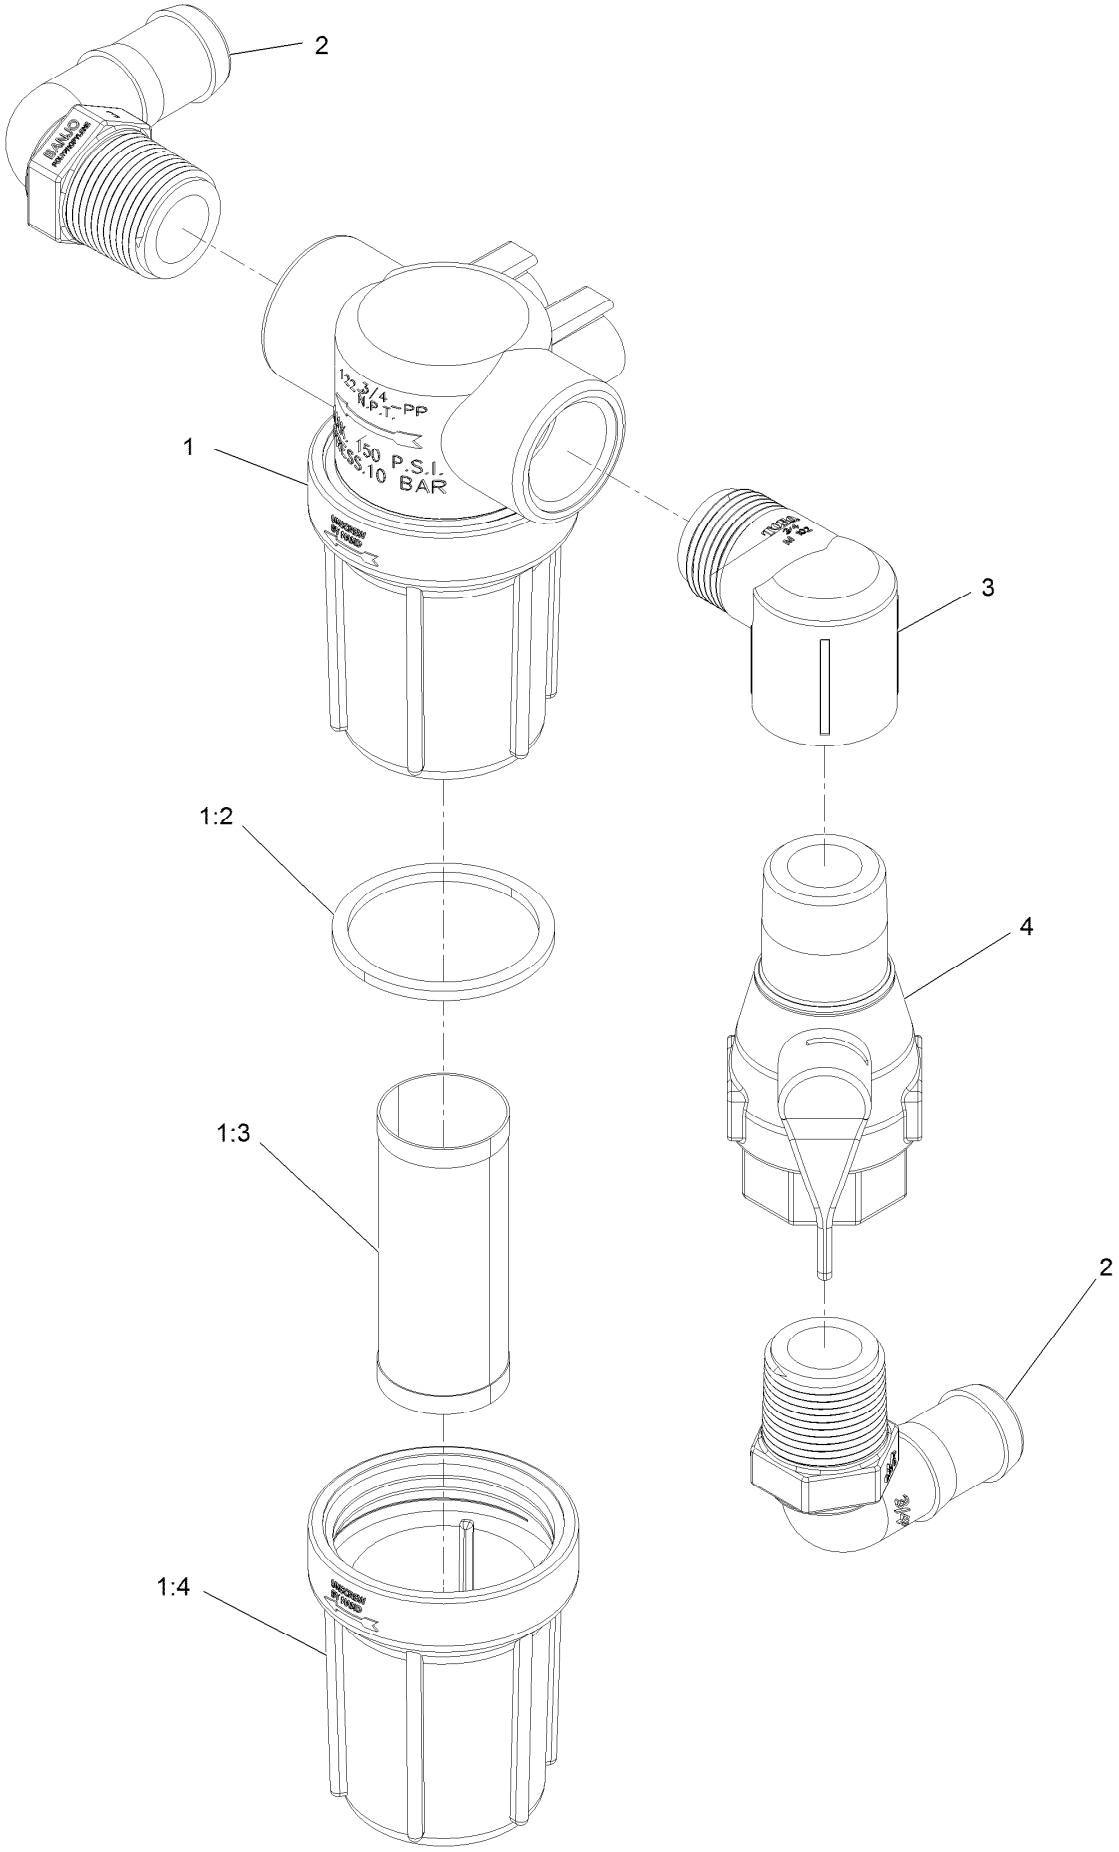

Strainer Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4374	1	Strainer-Line
1:2	126-2272	1	Gasket-Head, Line Strainer
1:3	126-2273	1	Screen-Strainer, 30 Mesh Ss
1:4	126-7195	1	Bowl-Strainer
2	119-0490	2	Elbow-Hosebarb
3	102-4272	1	Elbow
4	126-4451	1	Valve-Ball

Left Nozzle Assembly No. 126-3667

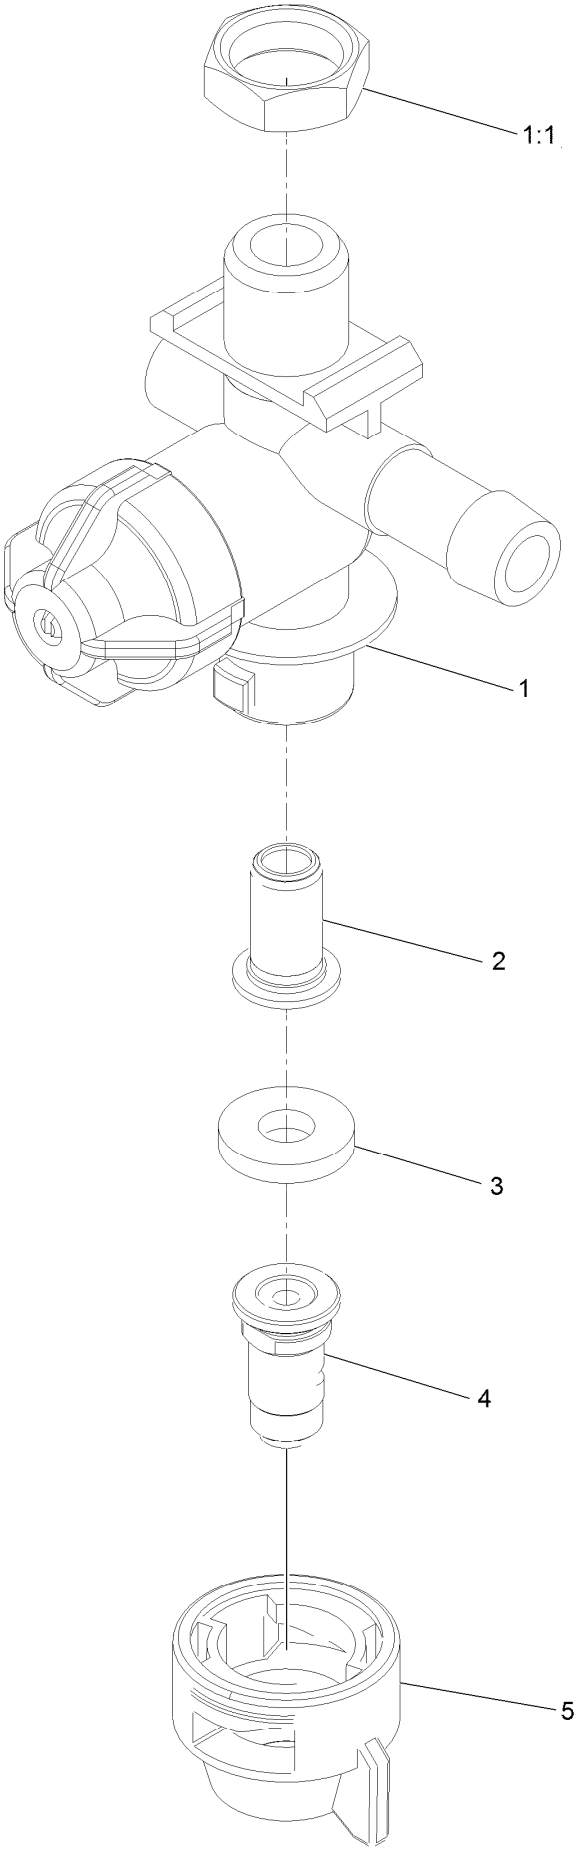


Left Nozzle Assembly No. 126-3667 (continued)

Ref.	Part Number	Qty.	Description
1	116-9790	1	LH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7170	1	Nozzle-Spray, Gray ●■
99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Center Nozzle Assembly No. 126-3668

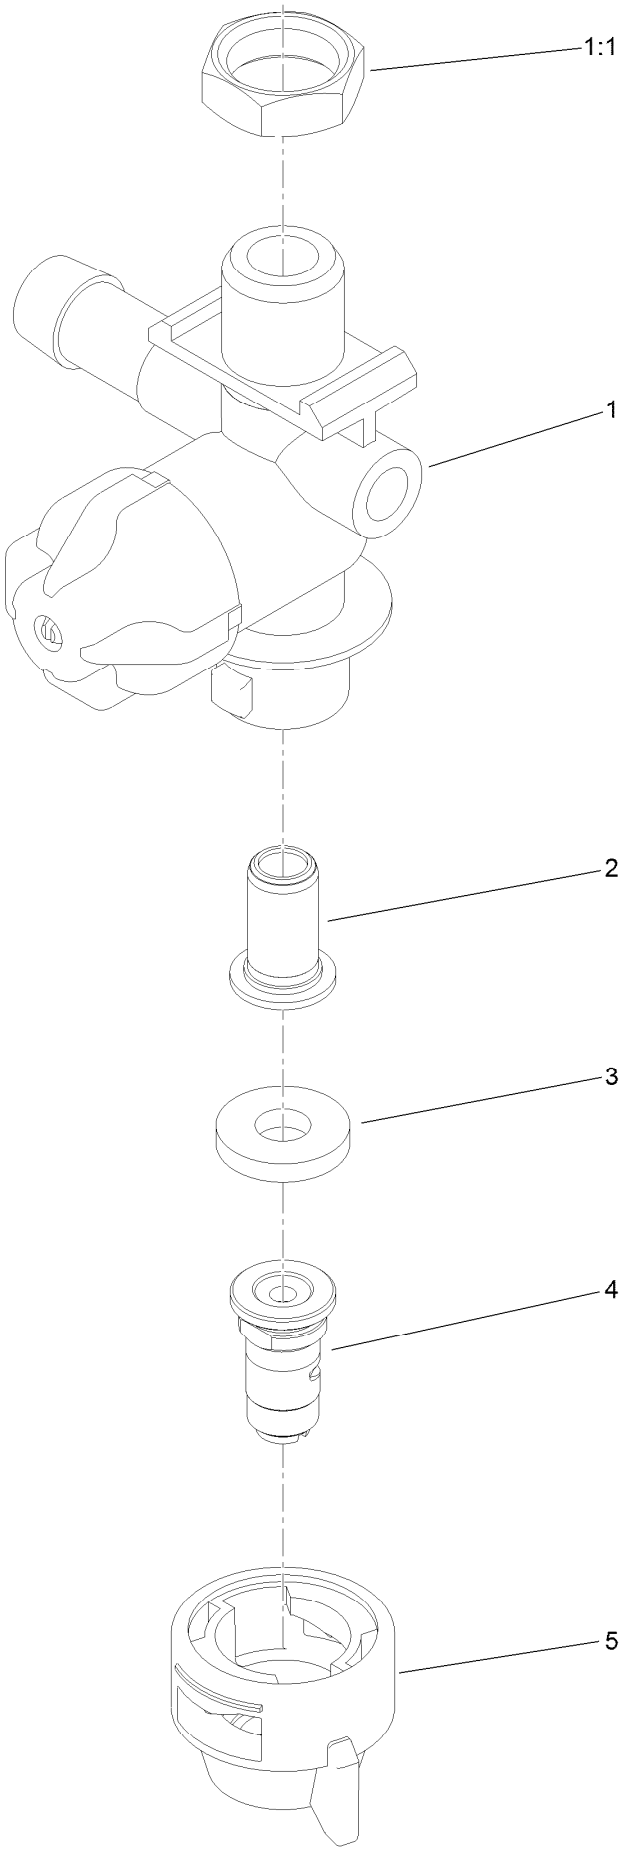


Center Nozzle Assembly No. 126-3668 (continued)

Ref.	Part Number	Qty.	Description
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

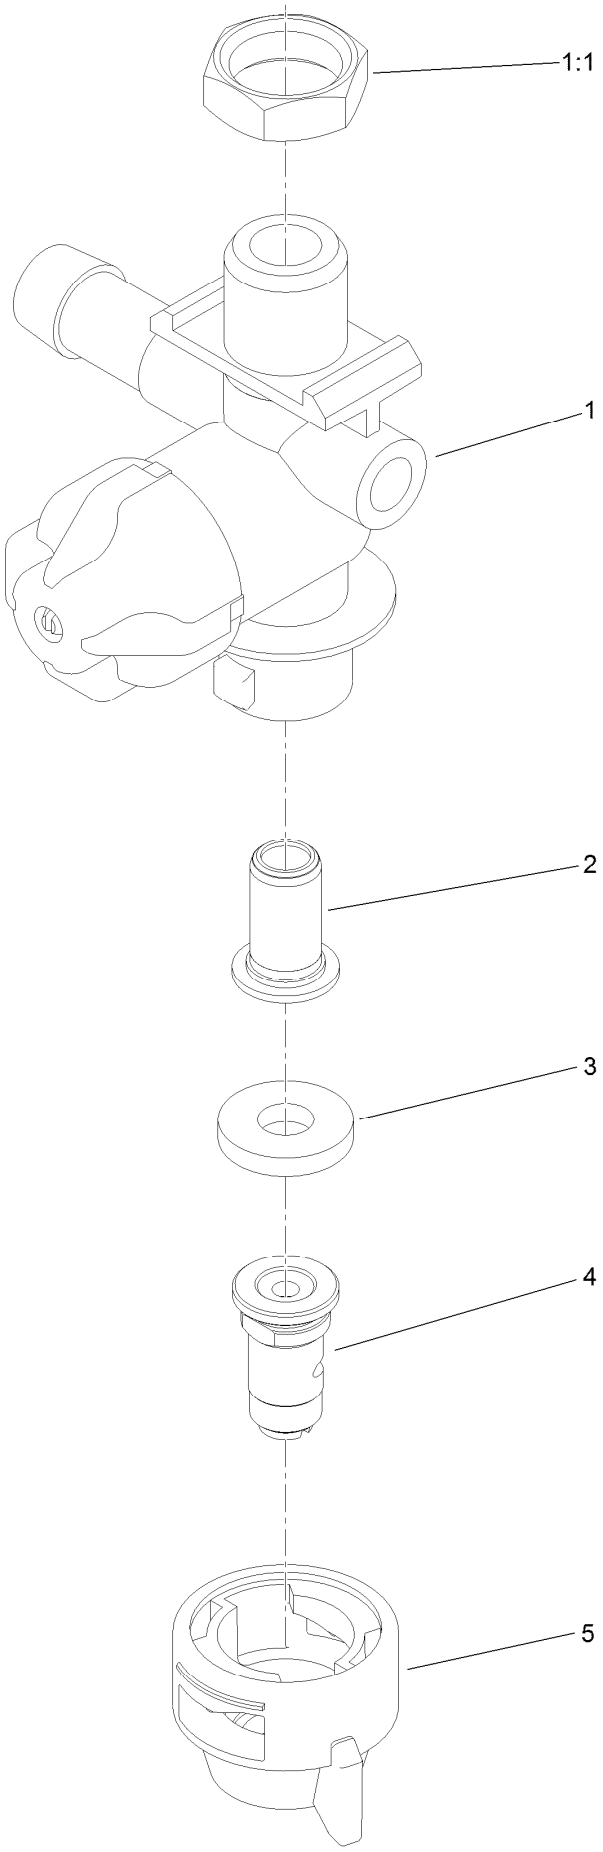


Right Nozzle Assembly No. 126-3669 (continued)

Ref.	Part Number	Qty.	Description
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Spreader Assembly

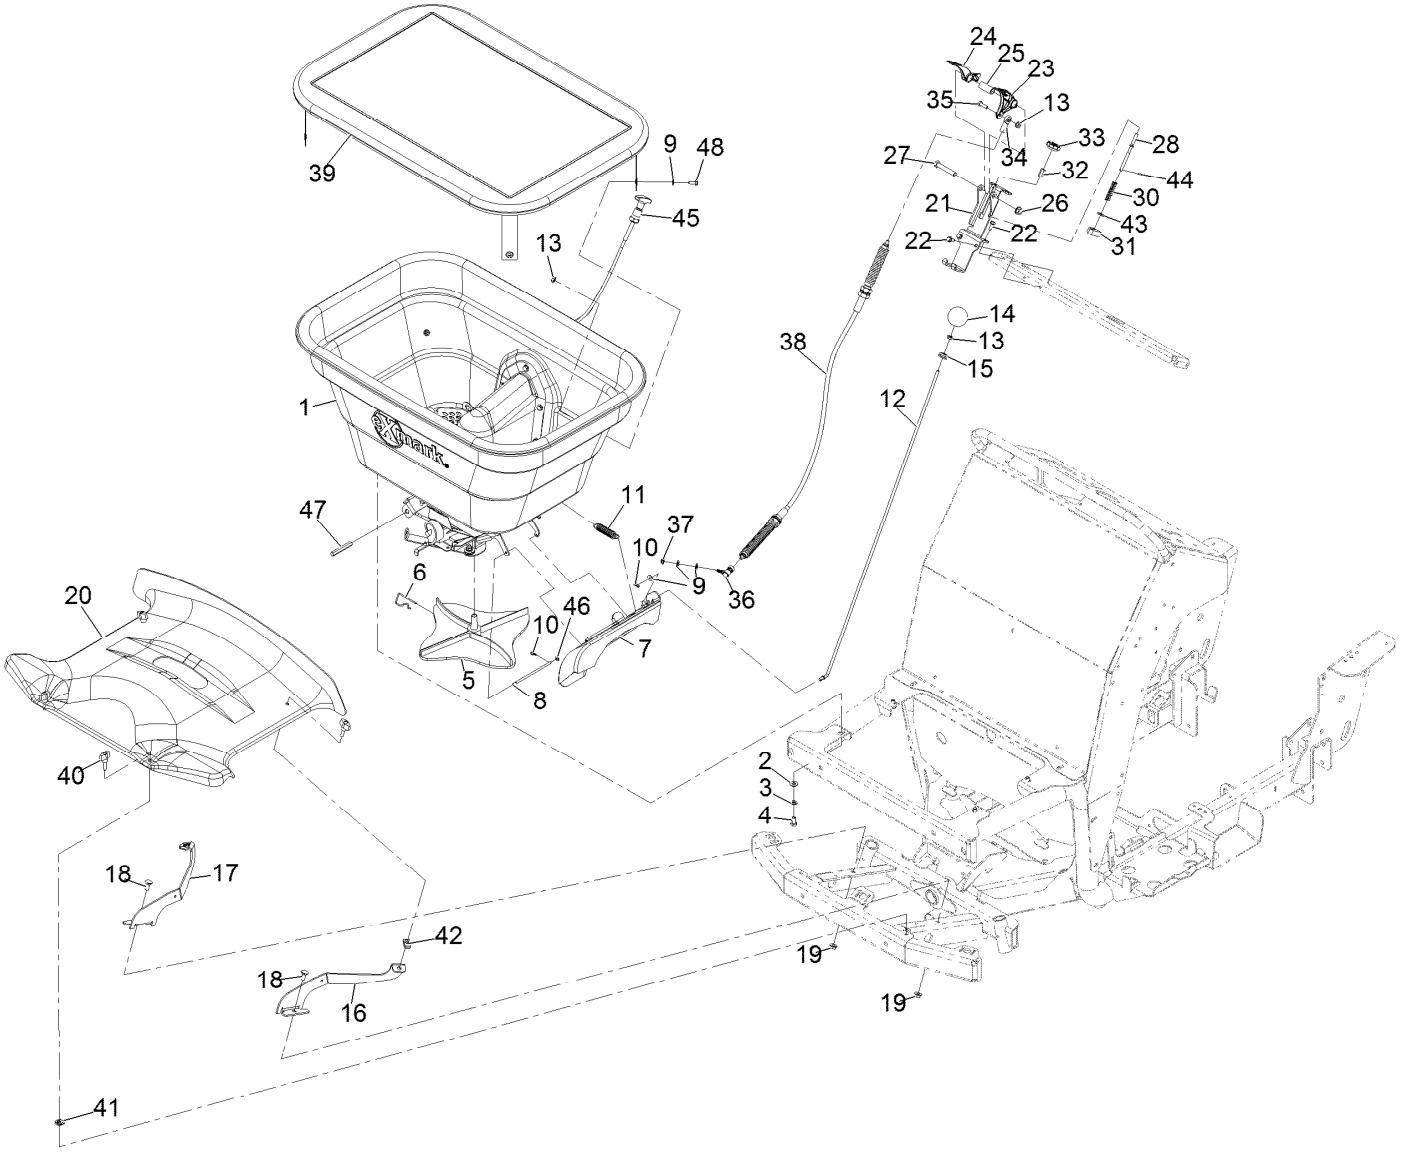


Spreader Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Spreader Hopper ASM ●
2	107-0279	4	Washer
3	107-0280	4	Washer-Lock
4	126-2506	4	Screw-HH
5	126-0858	1	Spinner-Spreader
6	126-1246	1	Spinner Clip
7		1	Side Deflector ASM ●
8	126-1629	1	Pin-Deflector
9	360-0140	5	Washer-Flat
10	126-1631	2	Pin-Cotter, Hair
11	126-2127	1	Spring-Extension
12	126-2190	1	Rod-Control, Deflector
13	126-2231	4	Nut-Nyloc 1/4-20 Ss
14	121-1877	1	Knob-Rate, Flow
15	1-633630	1	Grommet
16	126-2145	1	Bracket-Cover, Front (LH)
17	126-2146	1	Bracket-Cover, Front (RH)
18	126-0695	2	Screw-CARR
19	126-2232	2	Nut-Nyloc 5/16-18 Ss
20	126-2063	1	Cover-Front, Spreader/Sprayer
21	126-3133	1	Mount-Handle
22	32144-10	3	Screw-HWH 1/4-20 X .62
23	126-3947	1	Lever-Spread, Wide
24	126-3948	1	Lever-Spread, Narrow
25	126-3984	1	Spacer
26	126-2233	1	Nut-HF
27	323-11	1	Screw-HH 3/8-16 X 2 1/4
28	126-3929	1	Link-Adjust, Narrow
30	125-0547	1	Spring-Compression, Bail
31	126-3147	1	Stop-Spread, Narrow
32	126-4891	1	Nut-Coupler
33	126-3905	1	Knob
34	2411-41	1	Rod End-Ball Joint
35	126-0498	1	Screw-HH
36	126-2005	1	Ball-Joint
37	126-2725	1	Nut-Hex, NI
38	126-1783	1	Cable
39	126-2815	1	Cover-Hopper
40	126-5846	4	Knob-T
41	126-3740	2	Nut-Retainer, U Style
42	126-3739	2	Nut-Retainer, U Style
43	3256-78	1	Washer
44	3272-5	1	Pin-Cotter 3/32 X 1/2
45	126-4150	1	Cable-Control, Turn Lock
46	126-0759	1	Washer-Flat
47	126-4655	1	Post-Hex, Diffuser Guide
48	126-1290	2	Screw-HH 1/4-20 X 5/8 Ss

● Not serviced separately


Side Deflector Assembly

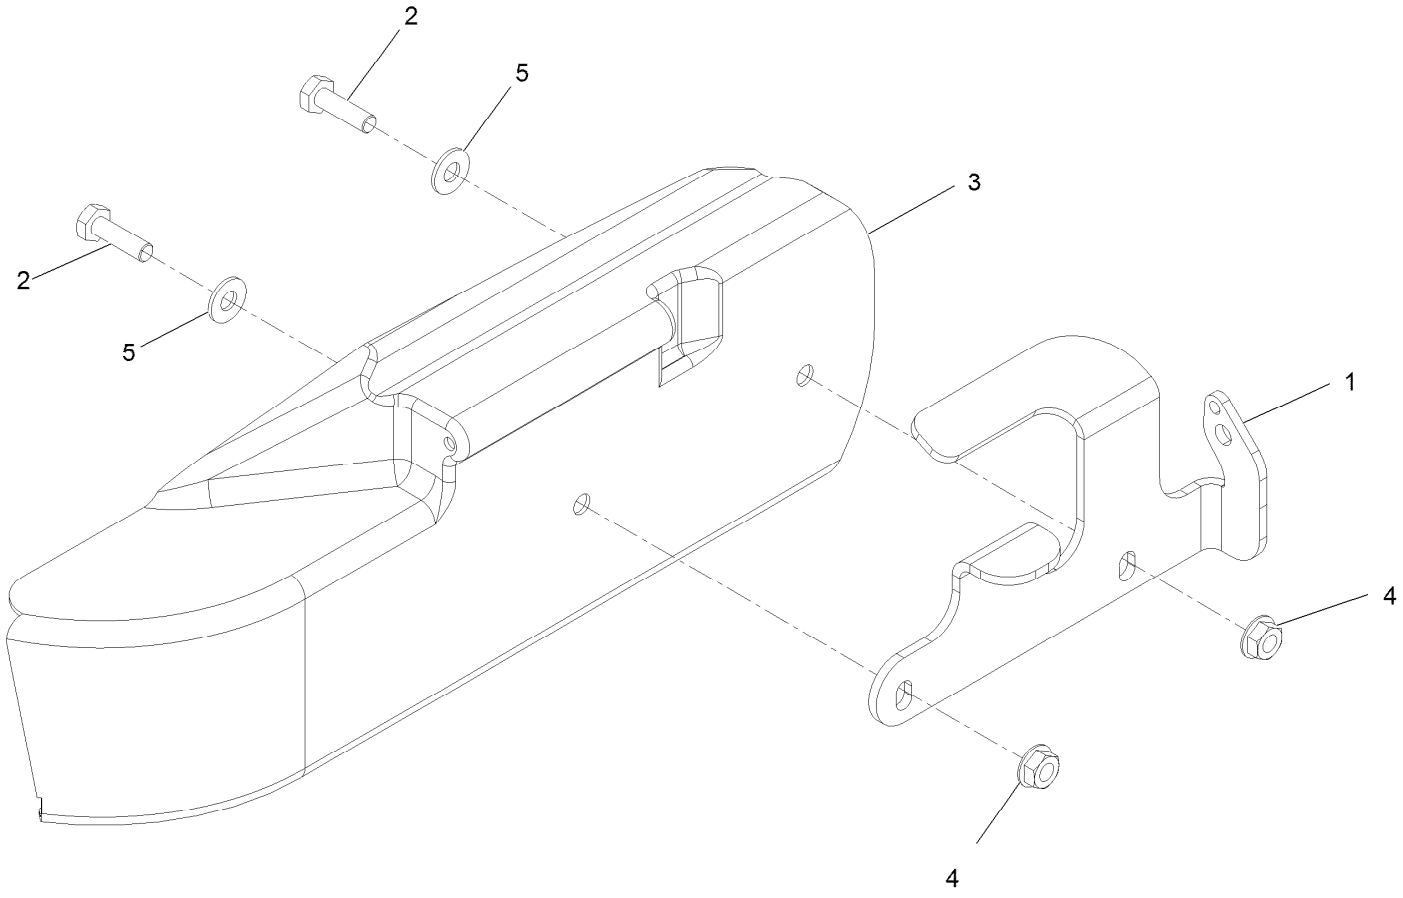

Side Deflector Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-0374	1	Bracket-Deflector, Side
2	126-0498	2	Screw-HH
3	126-1217	1	Deflector-Side
4	126-2231	2	Nut-HF
5	360-0140	2	Washer-Flat

Hopper Assembly

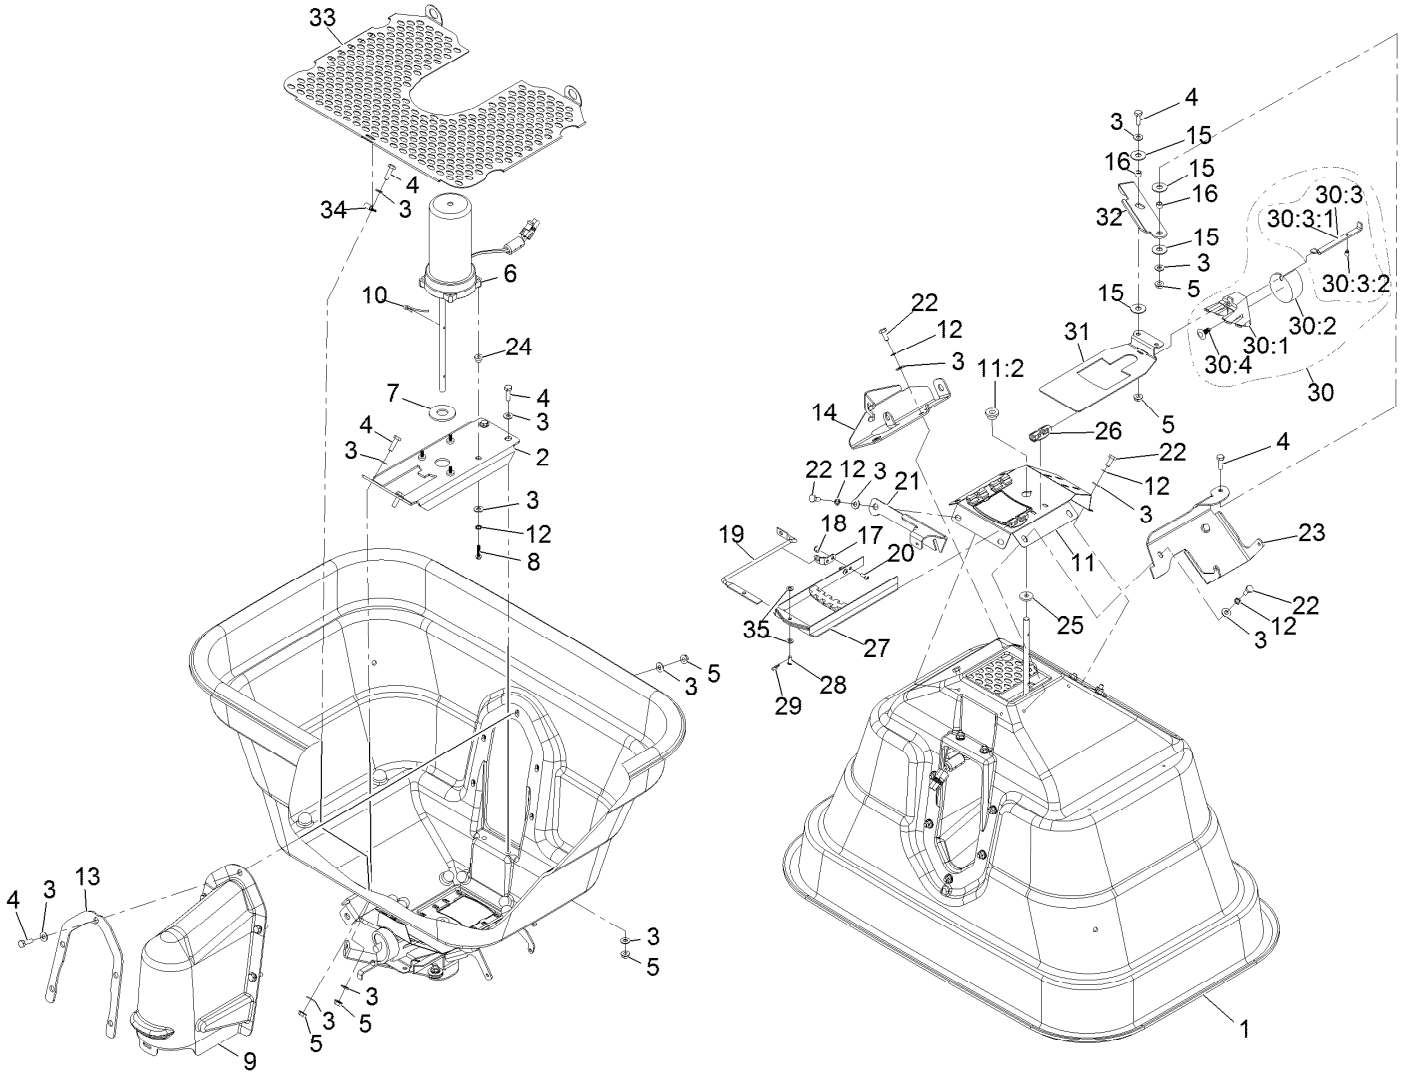


Hopper Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-1349	1	Hopper-175 Lb
2	126-4245	1	Bracket-Mount, Motor
3	360-0140	34	Washer-Flat
4	126-0498	12	Screw-HH 1/4-20 X 7/8 Ss
5	126-2231	12	Nut-Nyloc 1/4-20 Ss
6	126-6231	1	Spreader Motor ASM
7	83-2400	1	Spacer
8	739001	4	Screw-SHWH 10-32 X 7/8
9	126-1348	1	Cover-Motor
10	126-1247	1	Agitator
11	126-6284	1	Mulch Plate W/ Bearing ASM
11:2	126-0984	1	Bearing-Bottom, Hopper
12	363-8641	12	Washer-Lock, Int
13	126-6334	1	Flange-Cover, Motor
14	126-4650	1	Bracket-Hopper, Gate Controls
15	93-1633	4	Washer
16	126-3684	2	Spacer
17	126-1237	1	Bracket-Diffuser
18	364-0371	2	Nut-HJ, NI
19	126-1646	1	Rod-Control, Diffuser
20	363-3707	2	Screw-PPH
21	126-2082	1	Bracket-Spring, Hopper Deflector
22	126-1290	8	Screw-HH 1/4-20 X 5/8 Ss
23	126-1916	1	Bracket-Lever, Hopper Gate
24	126-6190	4	Spacer-Flanged
25	126-1252	1	Washer-Felt
26	126-0990	4	Guide-Rate, Gate
27	126-0991	1	Diffuser
28	126-3729	1	Pin-Clevis
29	126-1631	1	Pin-Cotter, Hair
30	126-0998	1	Rate Dial ASM
30:1	126-0985	1	Mount-Dial
30:2	126-0988	1	Dial
30:3		1	Rate Gate Link ASM ■
30:3:1	126-0987	1	Link-Gate, Rate
30:3:2	126-4196	1	Screw-Shoulder, Slotted
30:4	126-0986	1	Clip
31	126-1903	1	Gate-Rate
32	126-4112	1	Lever-Gate
33	126-3143	1	Screen-Hopper-Large Hole ●
33	126-3240	1	Screen-Hopper-Medium Hole
33	126-3242	1	Screen-Hopper-Small Hole ●
34	126-1624	1	Clamp-Loop
35	126-0759	2	Washer-Flat

● Sold separately

■ Not serviced separately


Spreader Motor Assembly

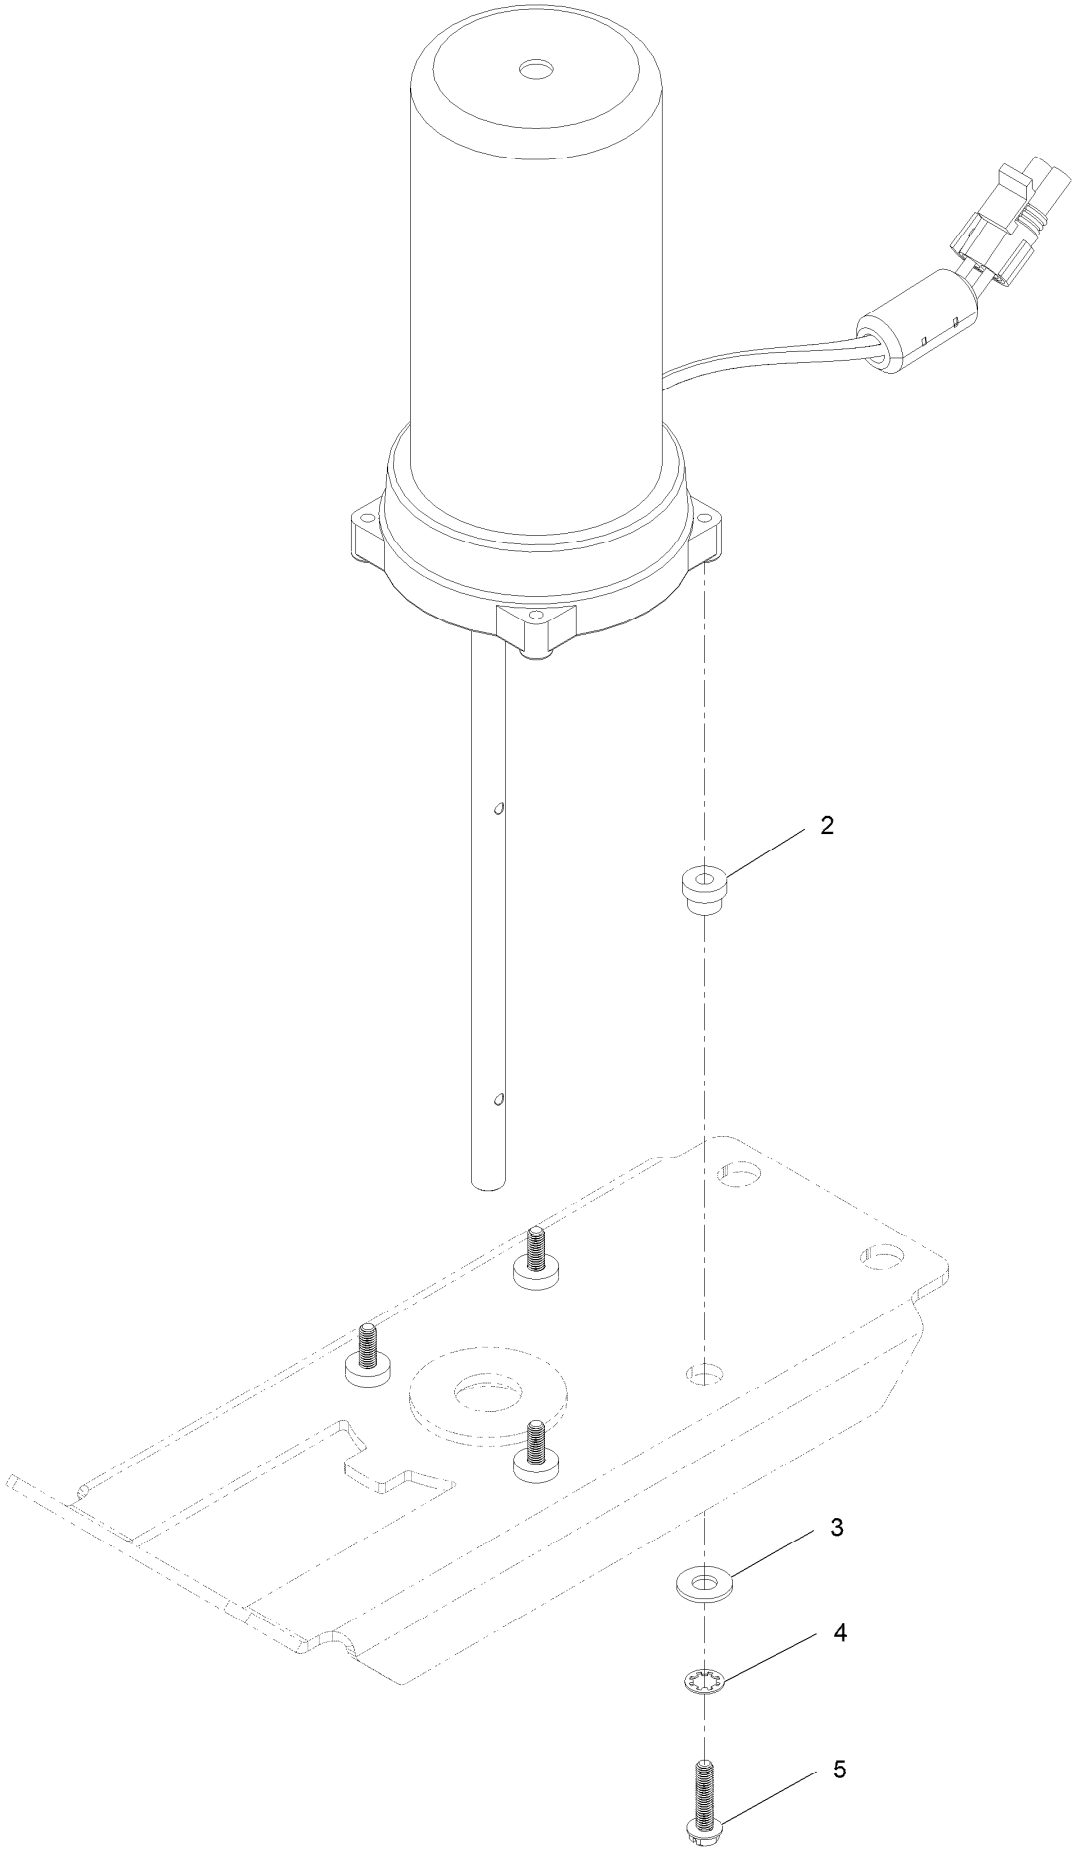

Spreader Motor Assembly (continued)

Ref.	Part Number	Qty.	Description
2	126-6190	4	Spacer-Flanged
3	360-0140	4	Washer-Flat
4	363-8641	4	Washer-Lock, Int
5	739001	4	Screw-SHWH


Ground Drive Assembly

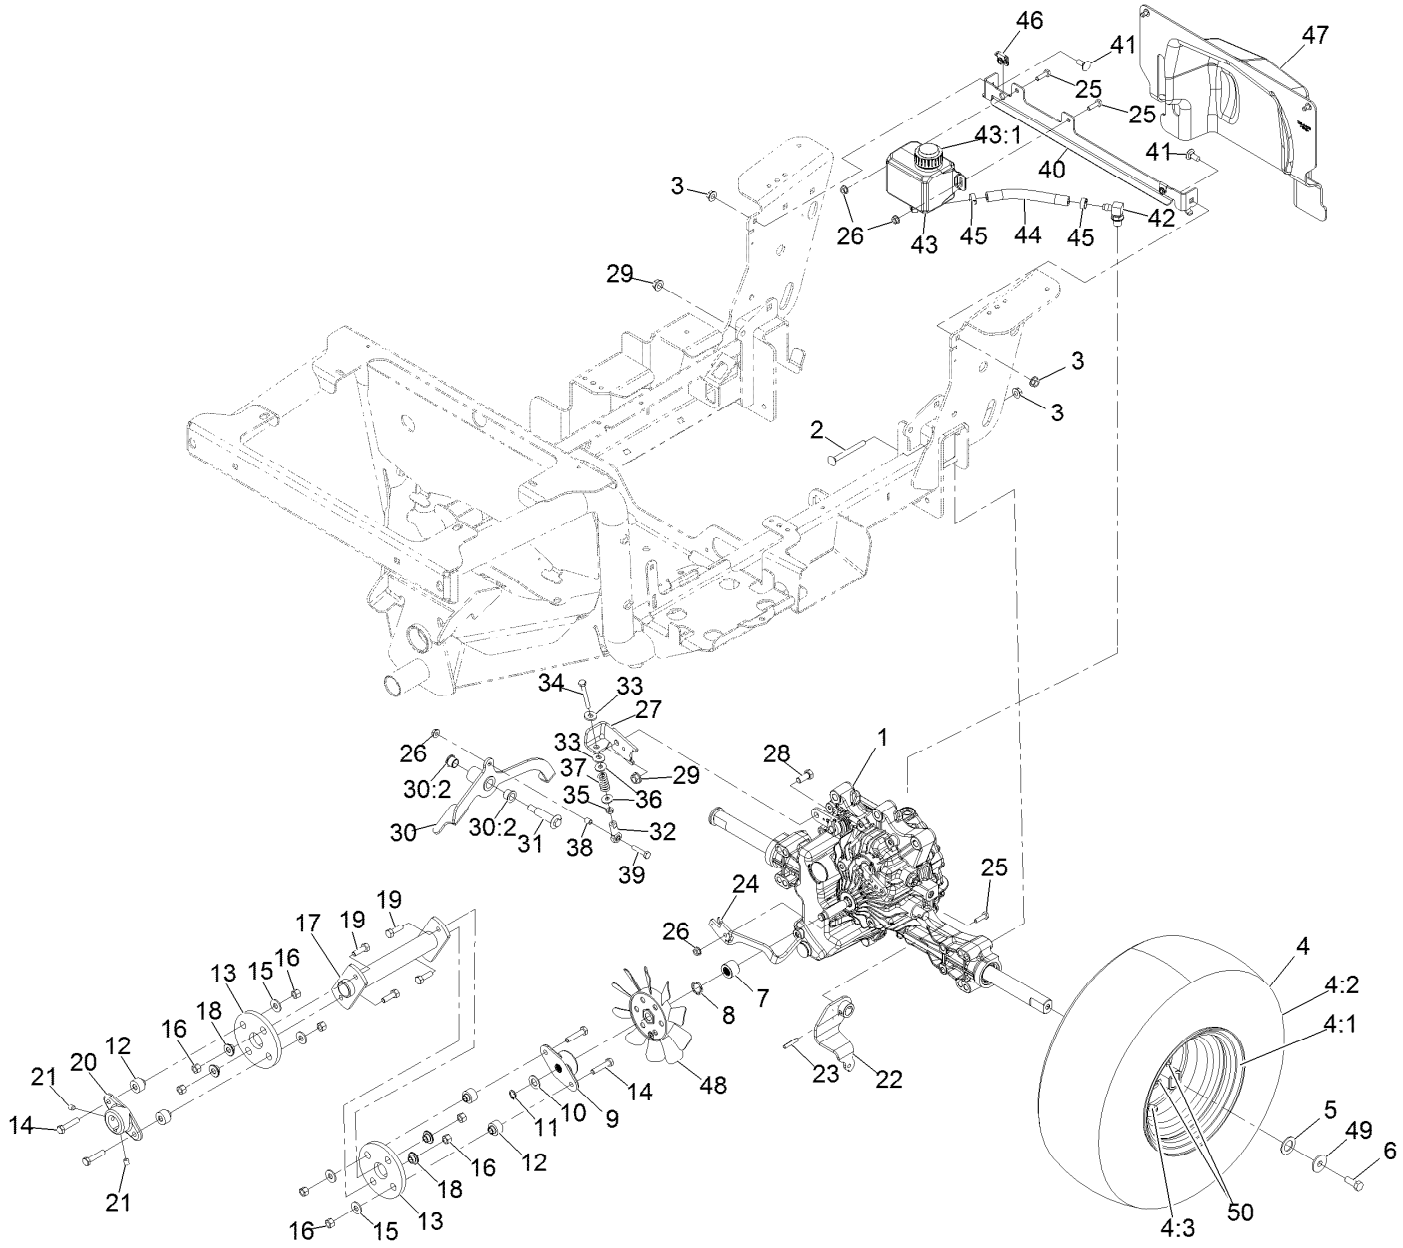

Ground Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2814	1	Transaxle
2	126-0703	4	Screw-CARR
3	126-2232	6	Nut-Nyloc 5/16-18 Ss
4	126-7265	2	Wheel And Tire ASM
4:1	126-7266	1	Wheel
4:2	126-1618	1	Tire
4:3	232-27	1	Stem-Valve
5	126-7888	2	Washer-Nylon
6	3235-22	2	Screw-HH, Lock
7	126-2983	1	Spacer-Shaft, Input
8	3290-317	1	Washer-Spring
9	116-9787	1	Hub-Shaft, Transaxle
10	605256	1	Washer-Plain
11	32151-61	1	Ring-Retaining
12	27-6590	4	Spacer-Coupling, Rubber
13	115-4523	2	Coupling-Rubber
14	3210-8	4	Screw-HH 5/16-24 X 1 1/2
15	3256-3	4	Washer-5/16 Std
16	32152-5	8	Nut-Hex 5/16-24
17	126-3838-03	1	Shaft-Drive
18	125-9249	4	Spacer-Coupler, Rubber
19	3210-5	4	Screw-HH
20	116-9788	1	Hub-Shaft, Engine
21	3246-18	2	Setscrew-5/16-18 X 3/8
22	126-6243-03	1	Motion Arm ASM [black]
23	126-4295	1	Pin-Spiral
24	126-2811-03	1	Arm-Release
25	126-0498	3	Screw-HH 1/4-20 X 7/8 Ss
26	126-2231	4	Nut-Nyloc 1/4-20 Ss
27	126-3937-03	1	Arm-Brake
28	126-0520	1	Screw-HH
29	126-2233	2	Nut-Hex Flg 3/8-16 Nyloc Ss
30	126-0433	1	Brake Lever ASM
30:2	116-4279	2	Bearing-Flange
31	92-1057	1	Bolt-Shoulder
32	2411-41	1	Rod End-Ball Joint
33	1-303334	2	Washer-Spring Disc 5/16
34	126-4009	1	Screw-HH
35	3220-1	1	Nut-Jam 1/4-28
36	3256-78	2	Washer
37	1-323245	1	Spring-Compression
38	612503	1	Spacer
39	321-8	1	Screw-HH 1/4-20 X 1 1/4
40	126-4423-03	1	Bracket-Mount, Tank
41	126-0695	2	Screw-CARR
42	126-2927	1	Fitting-90 DEG
43	126-2578	1	Tank ASM
43:1	126-2579	1	Cap-Tank
44	126-2842	1	Hose-Expansion
45	126-3749	2	Clamp
46	119-1730	2	Receptacle-Clip, Mini
47	126-1462	1	Transaxle Cover ASM
48	126-2980	1	Fan-7 Inch
49	126-7889	2	Spacer-Wheel
50	126-3824	4	Screw-Set, SQH

Transaxle Cover Assembly No. 126-1462

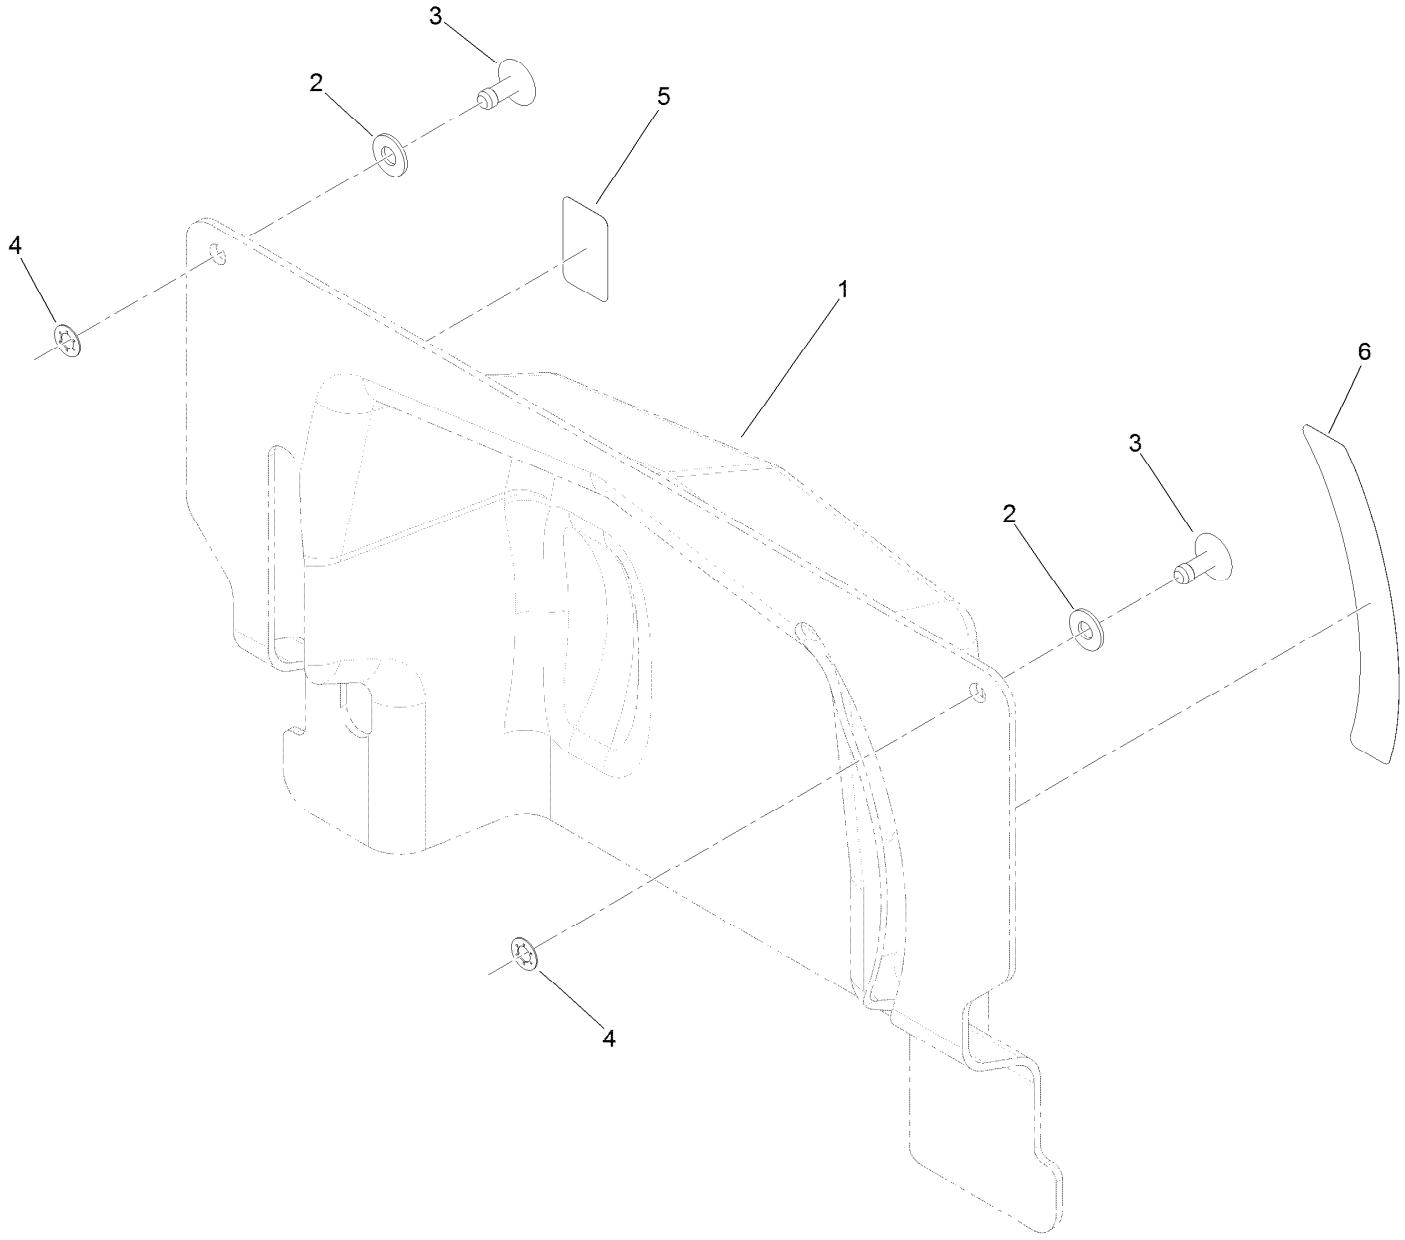


Transaxle Cover Assembly No. 126-1462 (continued)

Ref.	Part Number	Qty.	Description
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately

Engine Assembly

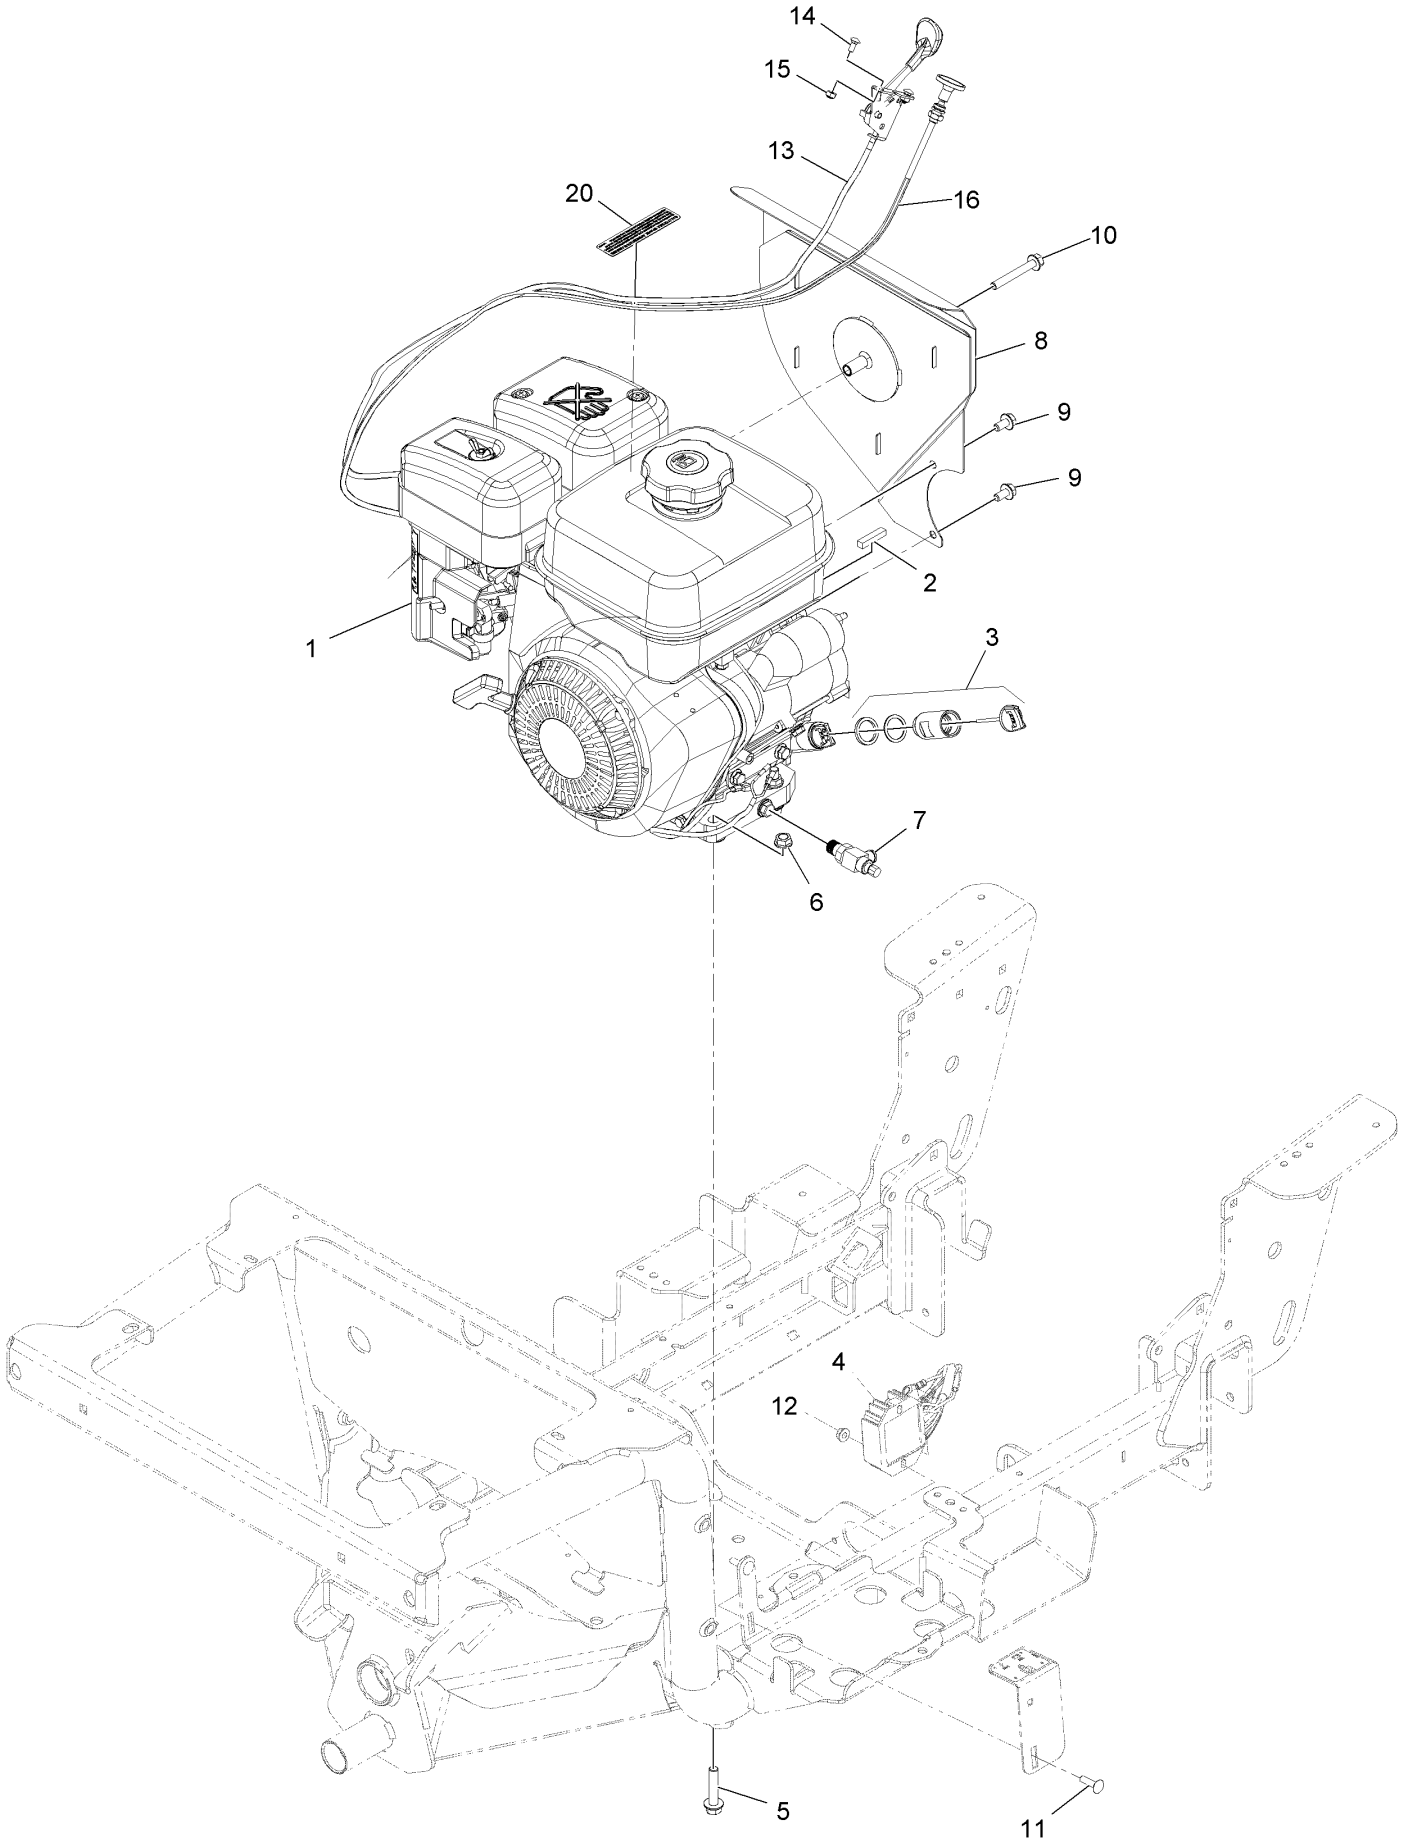


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Subaru, Ex27 ●
2	126-2532	1	Key-Crankshaft
3	126-1432	1	Extender-Dipstick
4	126-4658	1	Regulator
5	126-2710	4	Screw-HHF
6	126-2233	4	Nut-HF
7	103-6602	1	Valve-Oil Drain
8	126-2426	1	Heat Shield ASM
9	117-1836	2	Screw-HHF, Lock
10	33104-060	1	Screw-HHF
11	126-1455	2	Screw-CARR
12	126-2231	2	Nut-HF
13	126-2240	1	Control-Throttle
14	1-807513	2	Bolt-Carriage #10-24 X 1/2
15	3296-2	2	Nut-Nyloc #10-24
16	126-2285	1	Cable-Choke, Push/Pull
20	117-2718	1	Decal-Arrester, Spark

● Not serviced separately

Electrical Assembly

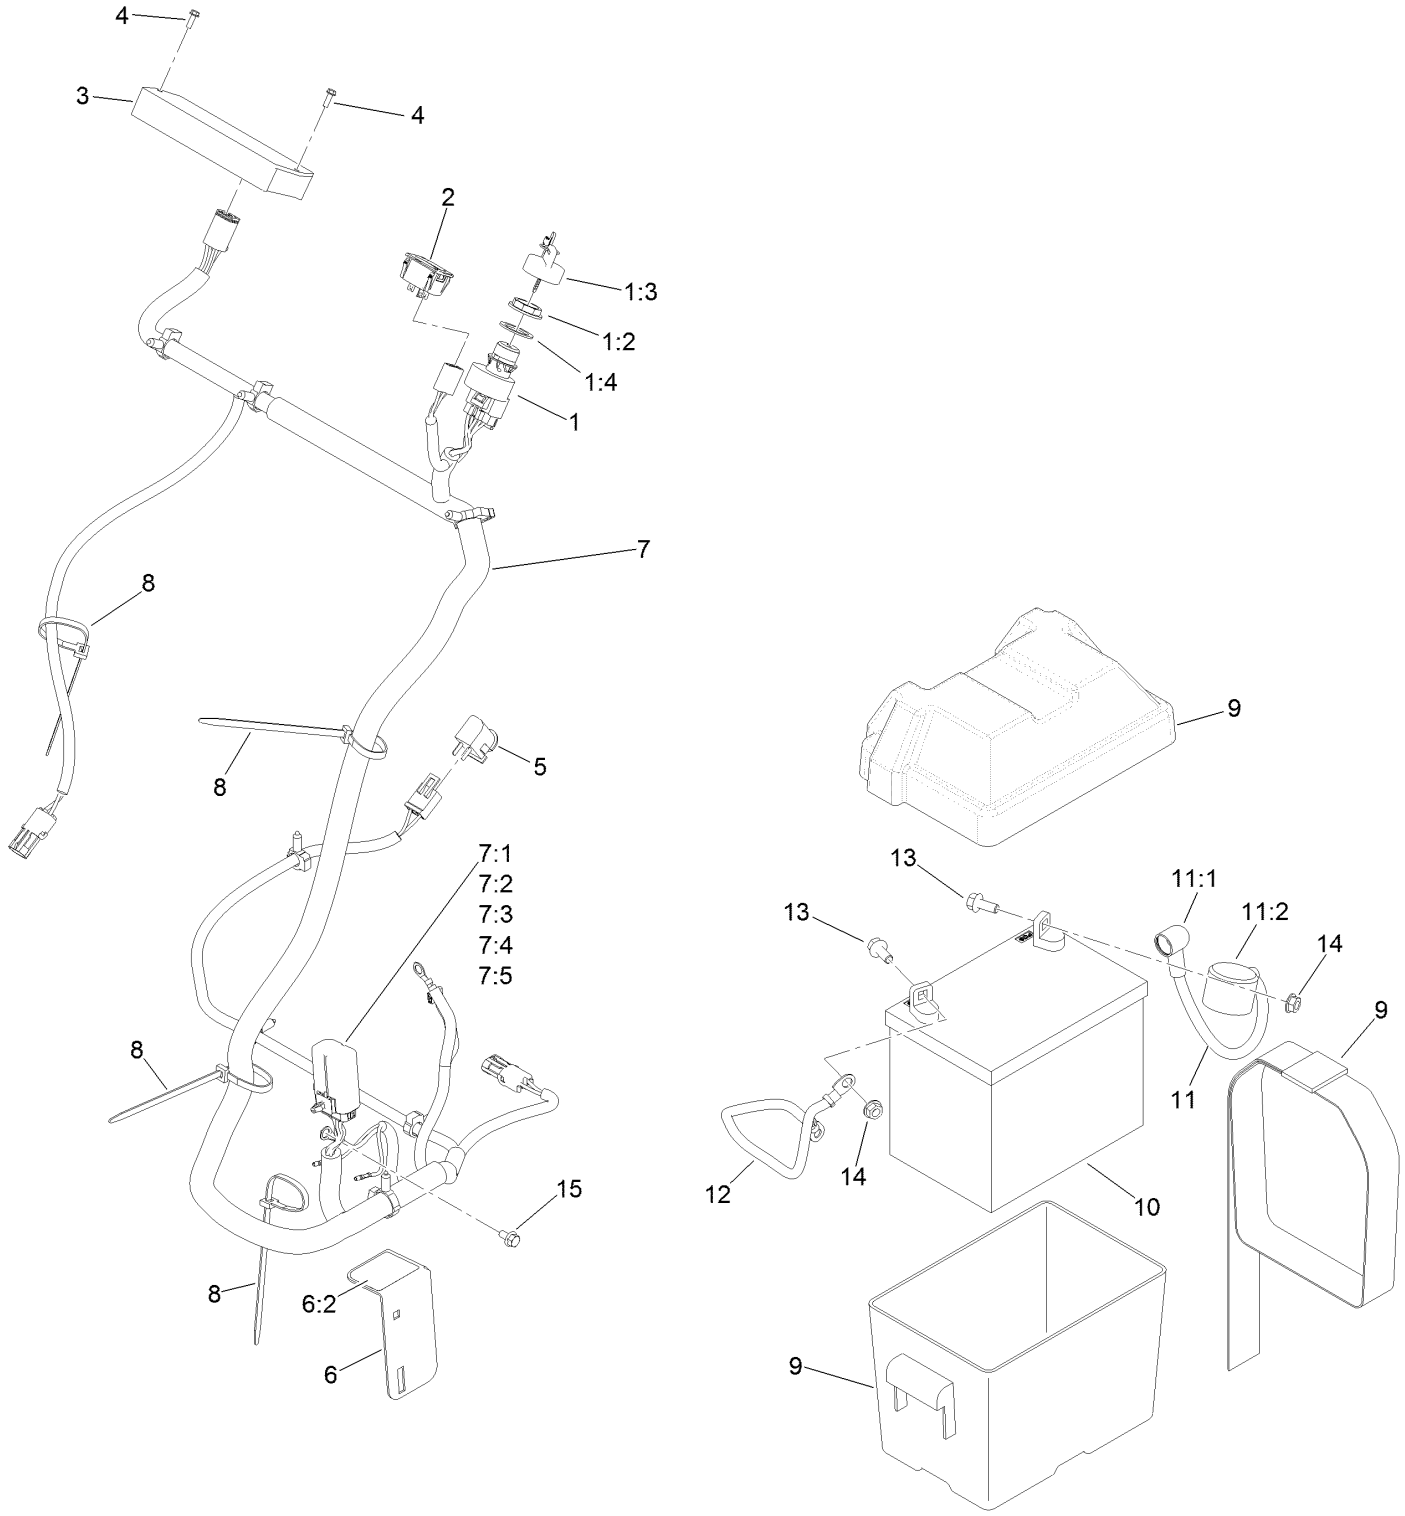

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-3956	1	Ignition Switch ASM
1:2	108-8660	1	Nut-Mounting
1:3	106-5270	1	Ignition Key Set
1:4	108-8659	1	Washer-Backup
2	126-3931	1	Hour Meter
3	126-6622	1	Controller-Dc
4	32144-87	2	Screw-HWHTF
5	82-2190	1	Switch
6	126-4656	1	Fuse Bracket ASM
6:2	126-4122	1	Decal-Fuse
7	126-3458	1	Harness-Wire ■
7:1	121-8868	2	Fuse-Mini Blade, 20 Amp
7:2	126-3991	1	Relay-Micro
7:3	126-4101	1	Cap-Power Distribution Module
7:4	126-4102	1	Clip-Power Distribution Module
7:5	126-6343	1	Block-Foam
8	1-303335	4	Tie-Cable 7 15/16 (Large)
9	126-1424	1	Battery Box
10		1	Battery (300 Cca, Wet) ●
11	116-4730	1	Cable-Battery, Positive
11:1	1-543393	1	Insulator-Solenoid
11:2	109-2407	1	Insulator-Battery
12	114-9715	1	Cable-Battery, Negative
13	126-2712	2	Screw-HHF 5/16-18 X 3/4 Ss
14	126-2232	2	Nut-Nyloc 5/16-18 Ss
15	33103-012	1	Screw-HHF

● Not serviced separately
■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2015 Exmark Mfg. Co., Inc.
All Rights Reserved

Industrial Park Box 808
Beatrice, NE 68310
(402) 223-6300
Fax (402) 223-5489

Part No. 4502-676 Rev. A
Printed in the USA.





www.exmark.com