Form No. 3400-906 Rev A

TORO®

Count on it.

Parts Catalog

55cm Recycler®

Lawn Mower

Model No. 20960—Serial No. 316000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3400-906 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Housing and Rear Deflector Assembly 4
Rear Bag Assembly 6
Engine and Blade Assembly 8
Transmission and Front Wheel Drive Assembly 10
Rear Wheel and Height-of-Cut Assembly 12
Handle Assembly 14
Attachments and Accessories 16

© 2016—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Housing and Rear Deflector Assembly

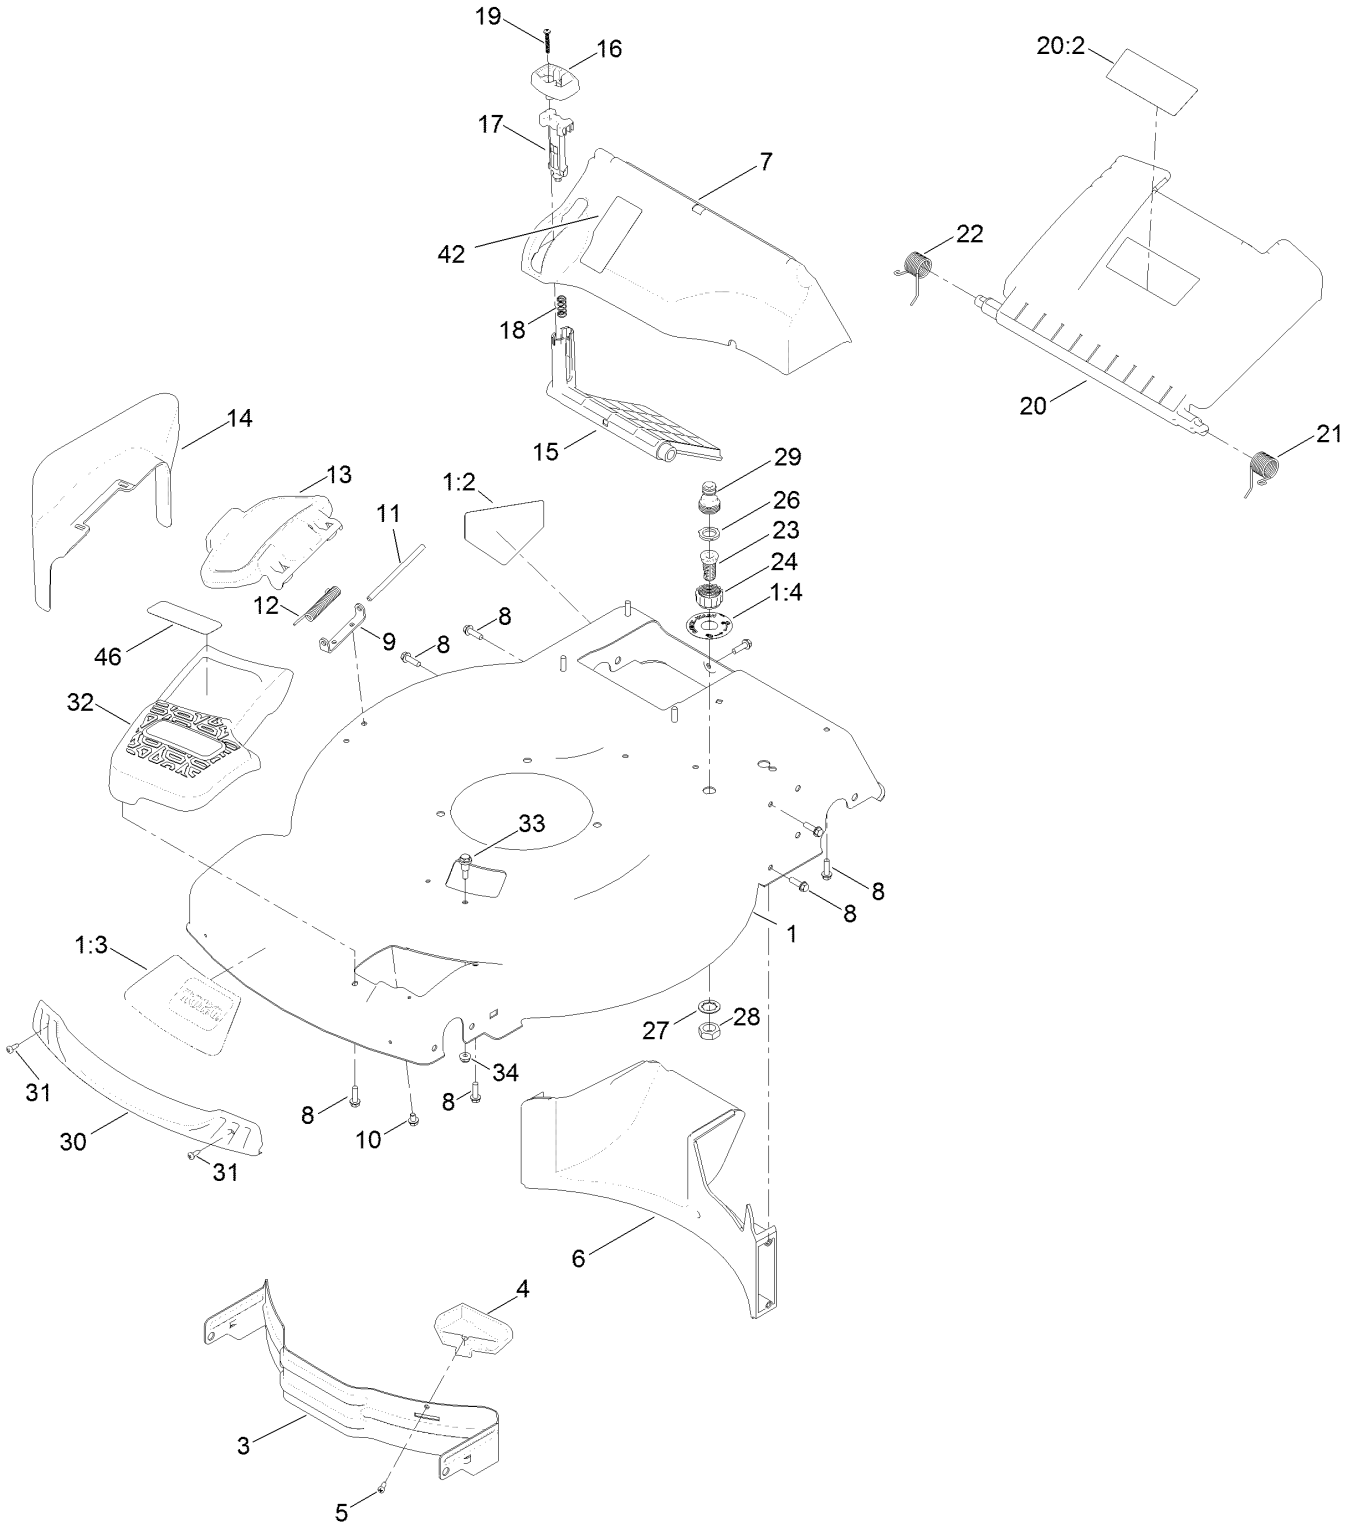

Housing and Rear Deflector Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-9671	1	Housing ASM
1:2	112-8760	1	Decal-Danger
1:3	120-3323	1	Decal-Deck
1:4	112-8867	1	Decal-Port, Washout
3	115-4667-01	1	Baffle-Front
4	115-4672	1	Kicker-Front
5	32144-111	1	Screw-PPH
6	114-7961	1	Baffle-Rear
7	132-4501	1	Chute-Recycle
8	46-8091	11	Screw-HWH
9	112-6416	1	Bracket-Cover
10	99-8445	2	Screw-HWH
11	99-5291	1	Rod-Cover
12	99-5293	1	Spring-Torsion
13	115-8449	1	Deflector-Side
14	115-8447	1	Chute-Discharge, Side
15	114-7960	1	Deflector-Recycle
16	114-7958	1	Knob-Recycle
17	114-7959	1	Latch-Recycle
18	117-1031	1	Spring-Compression
19	32104-120	2	Screw-PPH
20	121-5776	1	Rear Door ASM
20:2	131-4514	1	Decal-Warning
21	115-2859	1	Spring-Torsion
22	114-7924	1	Spring-Torsion
23	112-6400	1	Port-Washout
24	112-6401	1	Coupling-Hose, Washout Port
26	112-6438	1	Washer-Seal, Washout Port
27	3254-5	1	Washer-Tooth, Internal
28	3218-6	1	Nut-Jam
29	112-6437	1	Adapter-Connect, Quick
30	114-7987	1	Bumper
31	105-6849	2	Screw-Thread Forming
32	130-6708	1	Cover-Belt, Front
33	104-0858	1	Bolt-Shoulder
34	3296-16	1	Nut-Lock, NI
42	125-5026	1	Decal-Bag On Demand
46	131-4527	1	Decal-Cover


Rear Bag Assembly

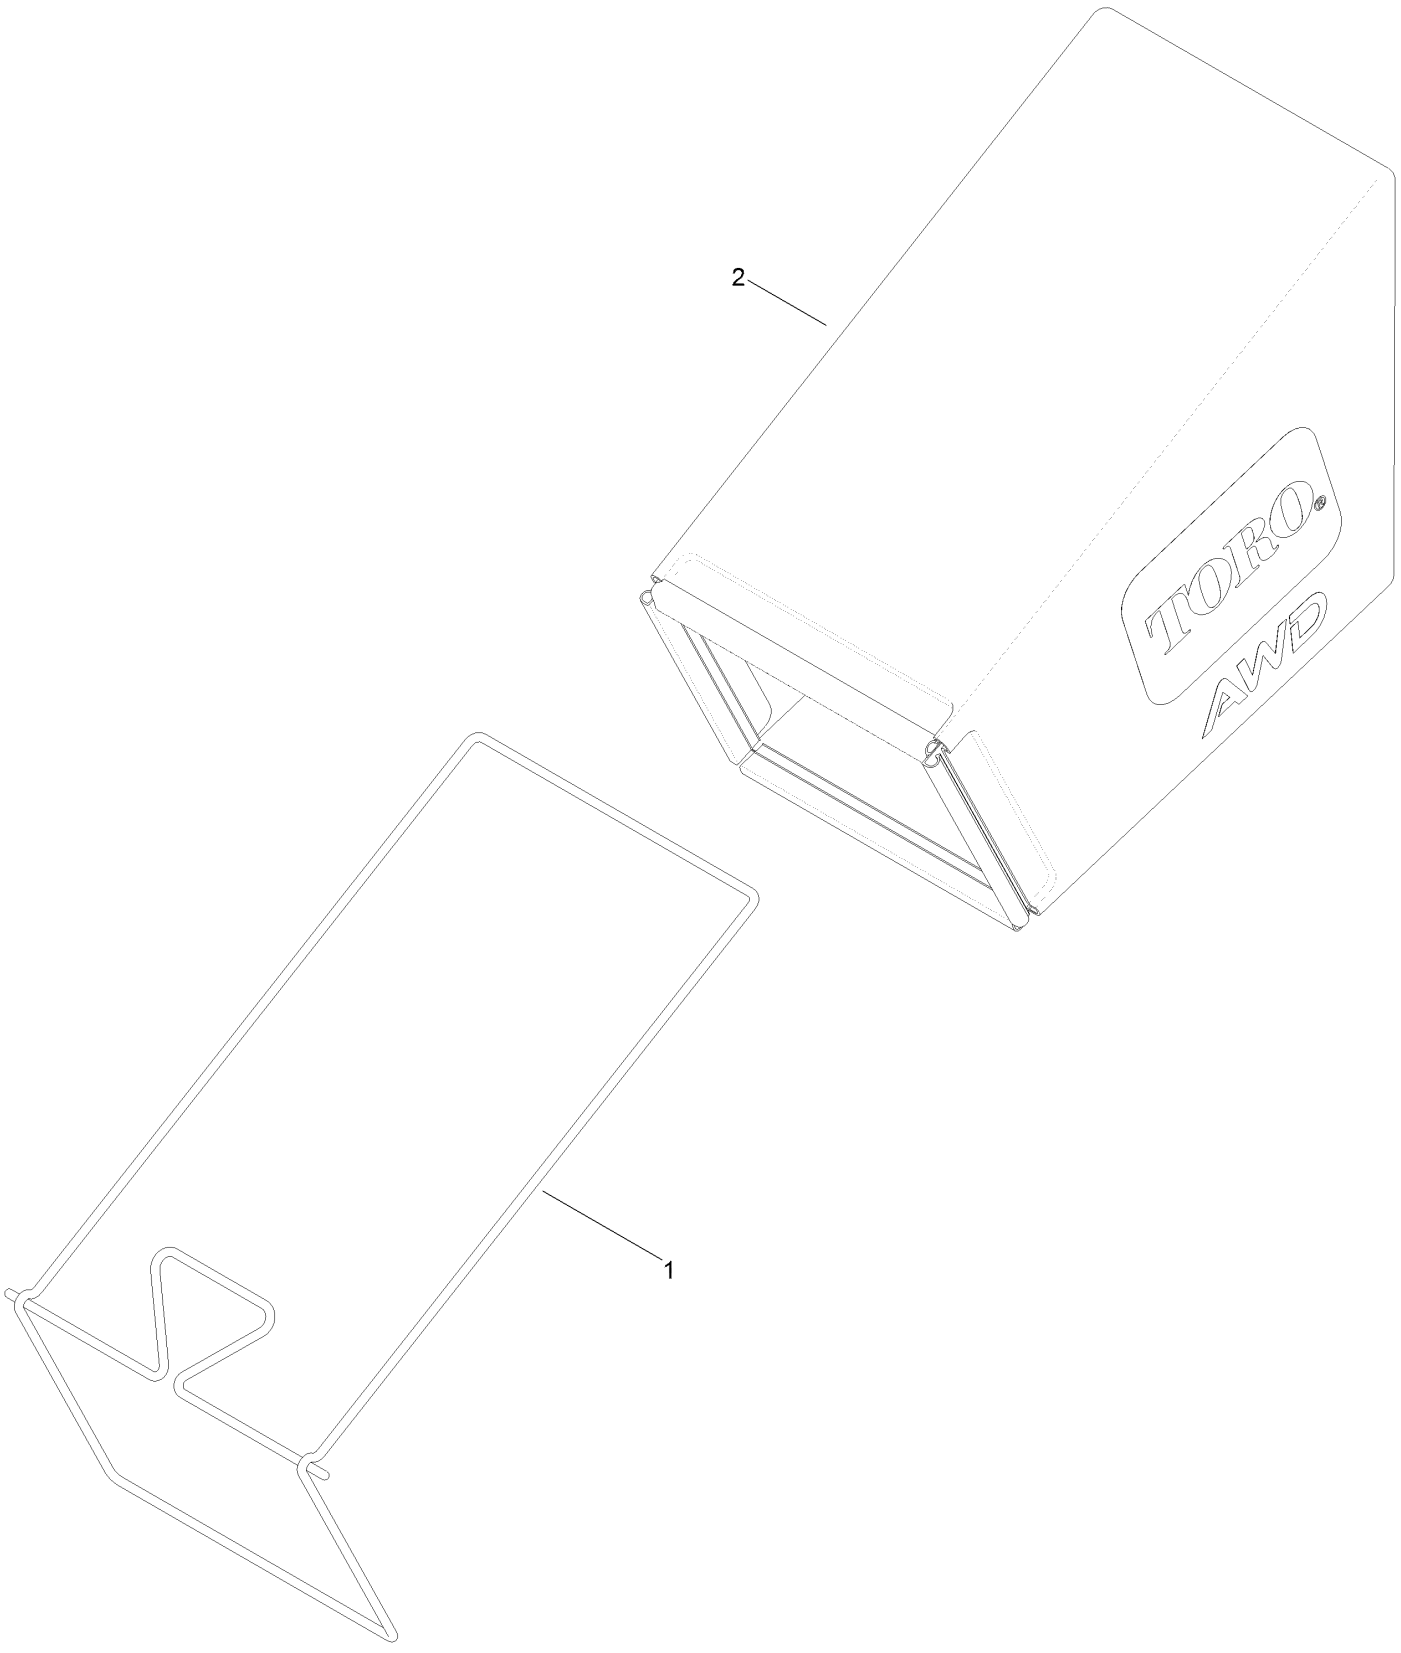

Rear Bag Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	132-4503-03	1	Frame-Bag
2	131-0893	1	Grass Bag ASM

Engine and Blade Assembly

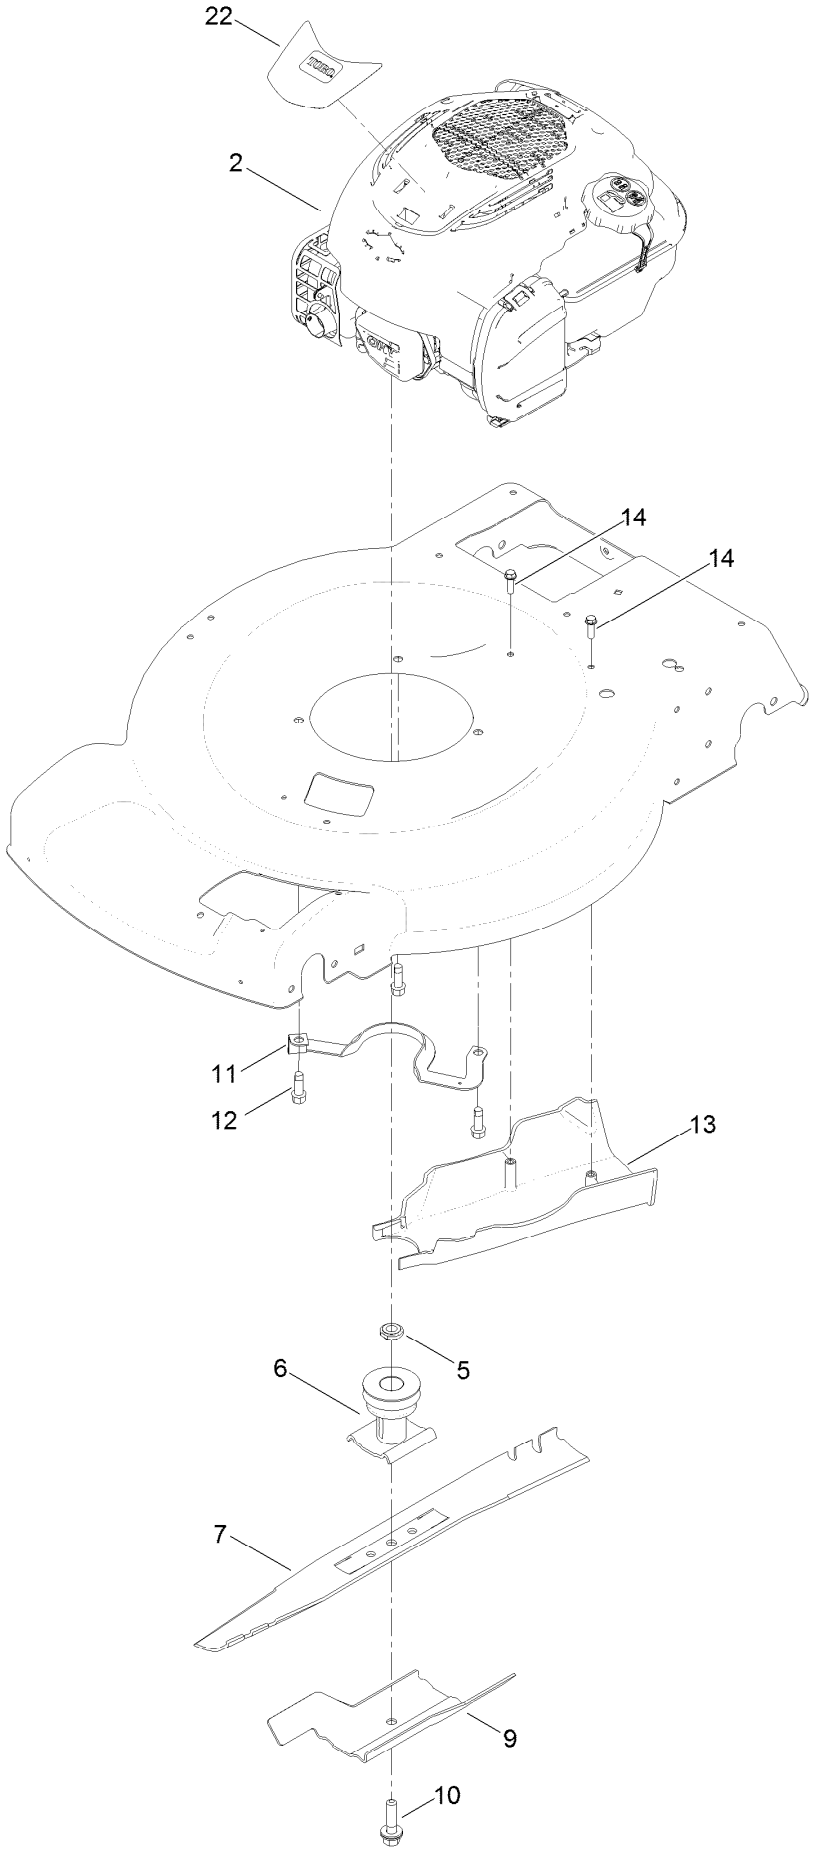


Engine and Blade Assembly (continued)

Ref.	Part Number	Qty.	Description
2		1	Engine-Briggs 104M020043F1 ●■
5	106-3999	1	Spacer-Driver
6	130-6705	1	Driver-Blade
7	131-9683-03	1	Blade
9	105-6848-03	1	Accelerator-Blade
10	125-2466	1	Bolt-Blade
11	130-6702-03	1	Guide-Belt
12	95-1726	3	Screw-Taptite
13	130-6709	1	Cover-Belt (Rear)
14	46-8091	2	Screw-HWH
22	132-4472	1	Decal-Shroud

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


Transmission and Front Wheel Drive Assembly

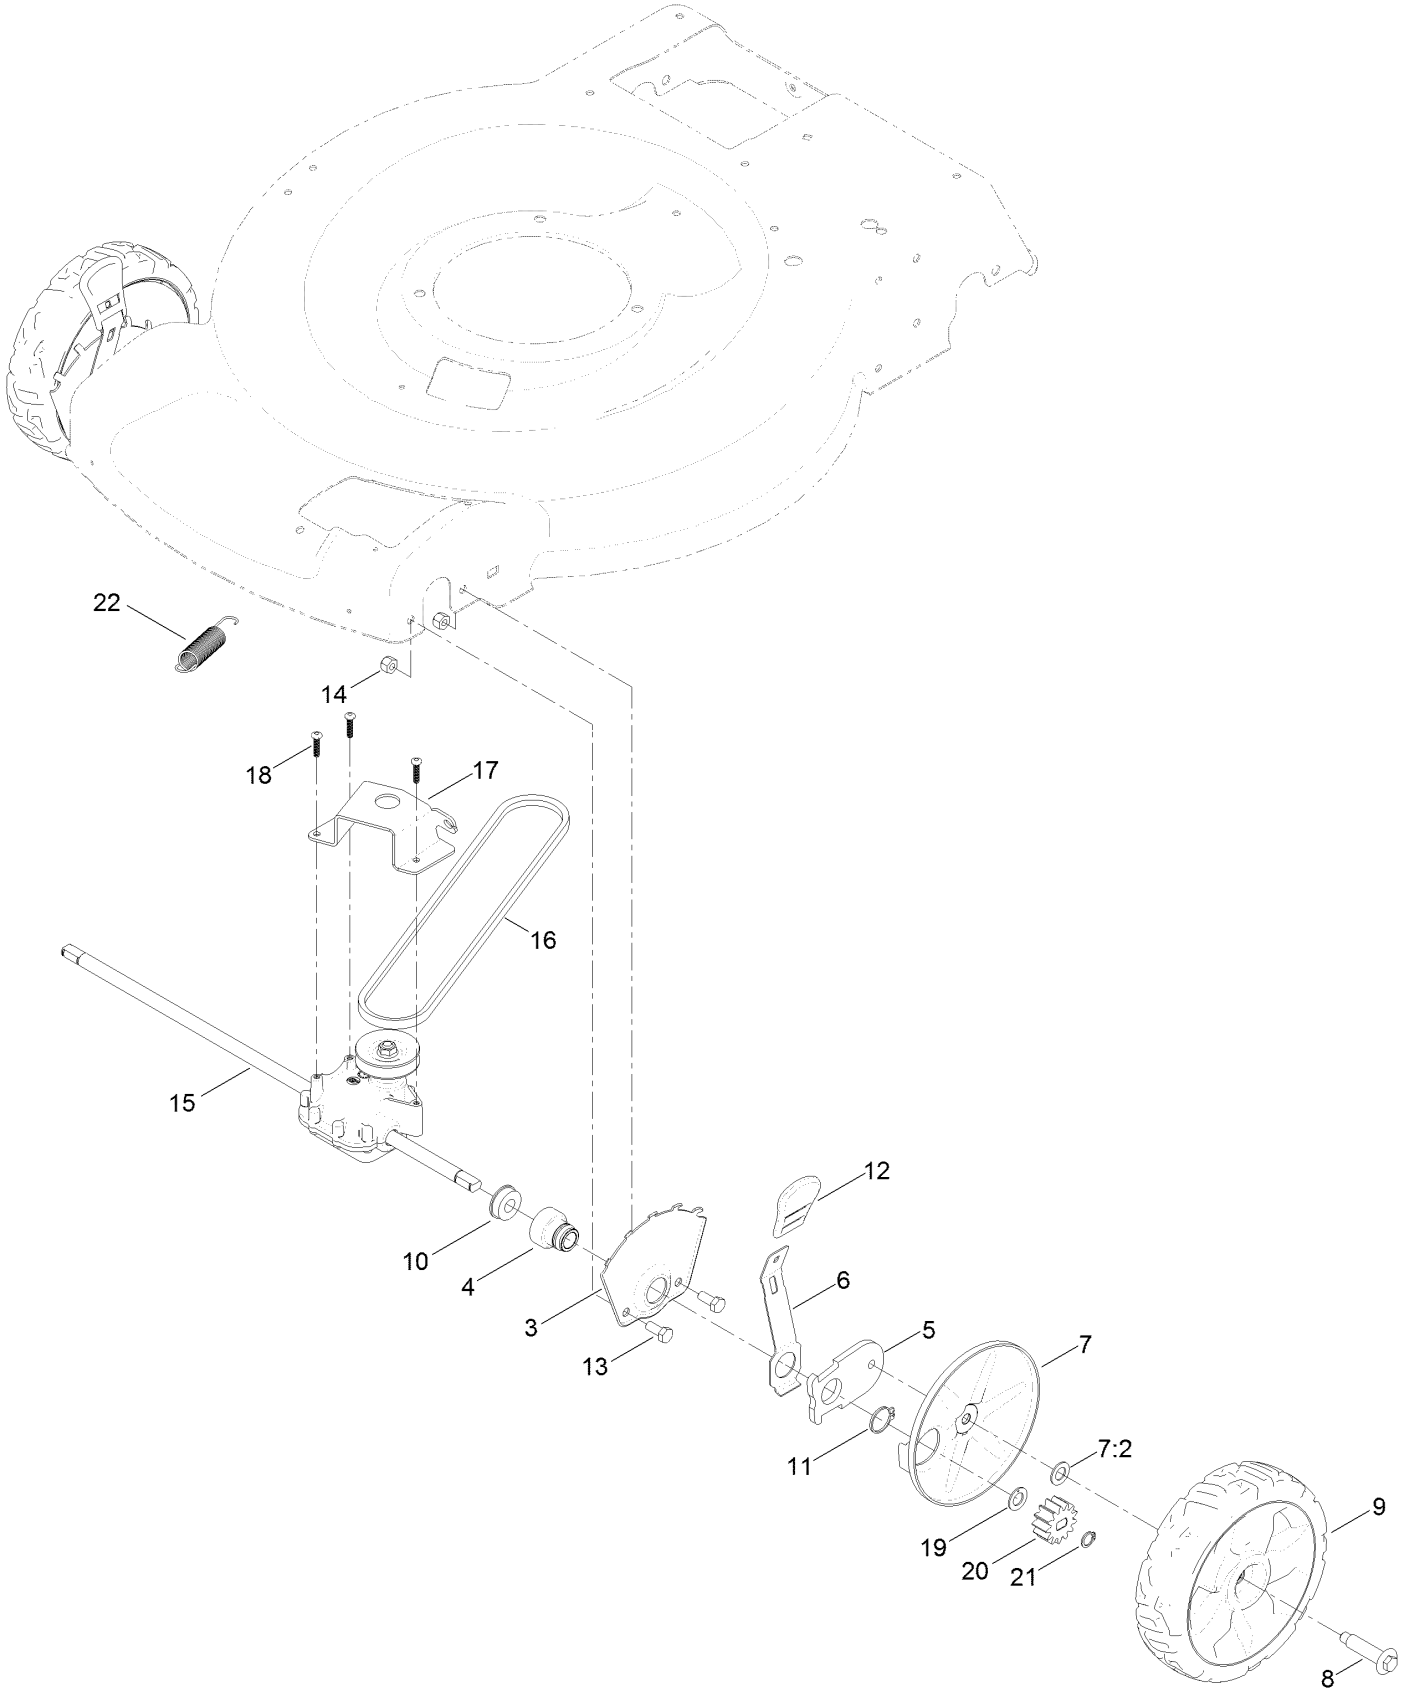

Transmission and Front Wheel Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
3	115-1956-03	2	Plate-HOC, Front
4	131-0836	2	Retainer-Bearing, HOC
5	105-1807	2	Arm-Pivot, Front
6	105-1809	2	Arm-Spring
7	131-4513	2	Wheel Cover ASM
7:2	614426	1	Washer-Stepped
8	614650	2	Bolt-Shoulder
9	130-6711	2	8 Inch Wheel ASM (Front)
10	104-8699	2	Bearing-Ball
11	32151-36	2	Ring-Retaining
12	110-0549	2	Knob-HOC
13	322-3	4	Screw-HH
14	3296-29	4	Nut-Lock, NI
15	121-9180	1	Transmission ASM
16	71-9450	1	V-Belt
17	114-7978-03	1	Bracket-Transmission
18	108-7476	3	Screw-Plastite
19	110-7191	2	Washer-Thrust
20	131-0896	2	Gear-Pinion, 13T
21	32151-61	2	Ring-Retaining
22	131-4560	1	Spring-Extension


Rear Wheel and Height-of-Cut Assembly

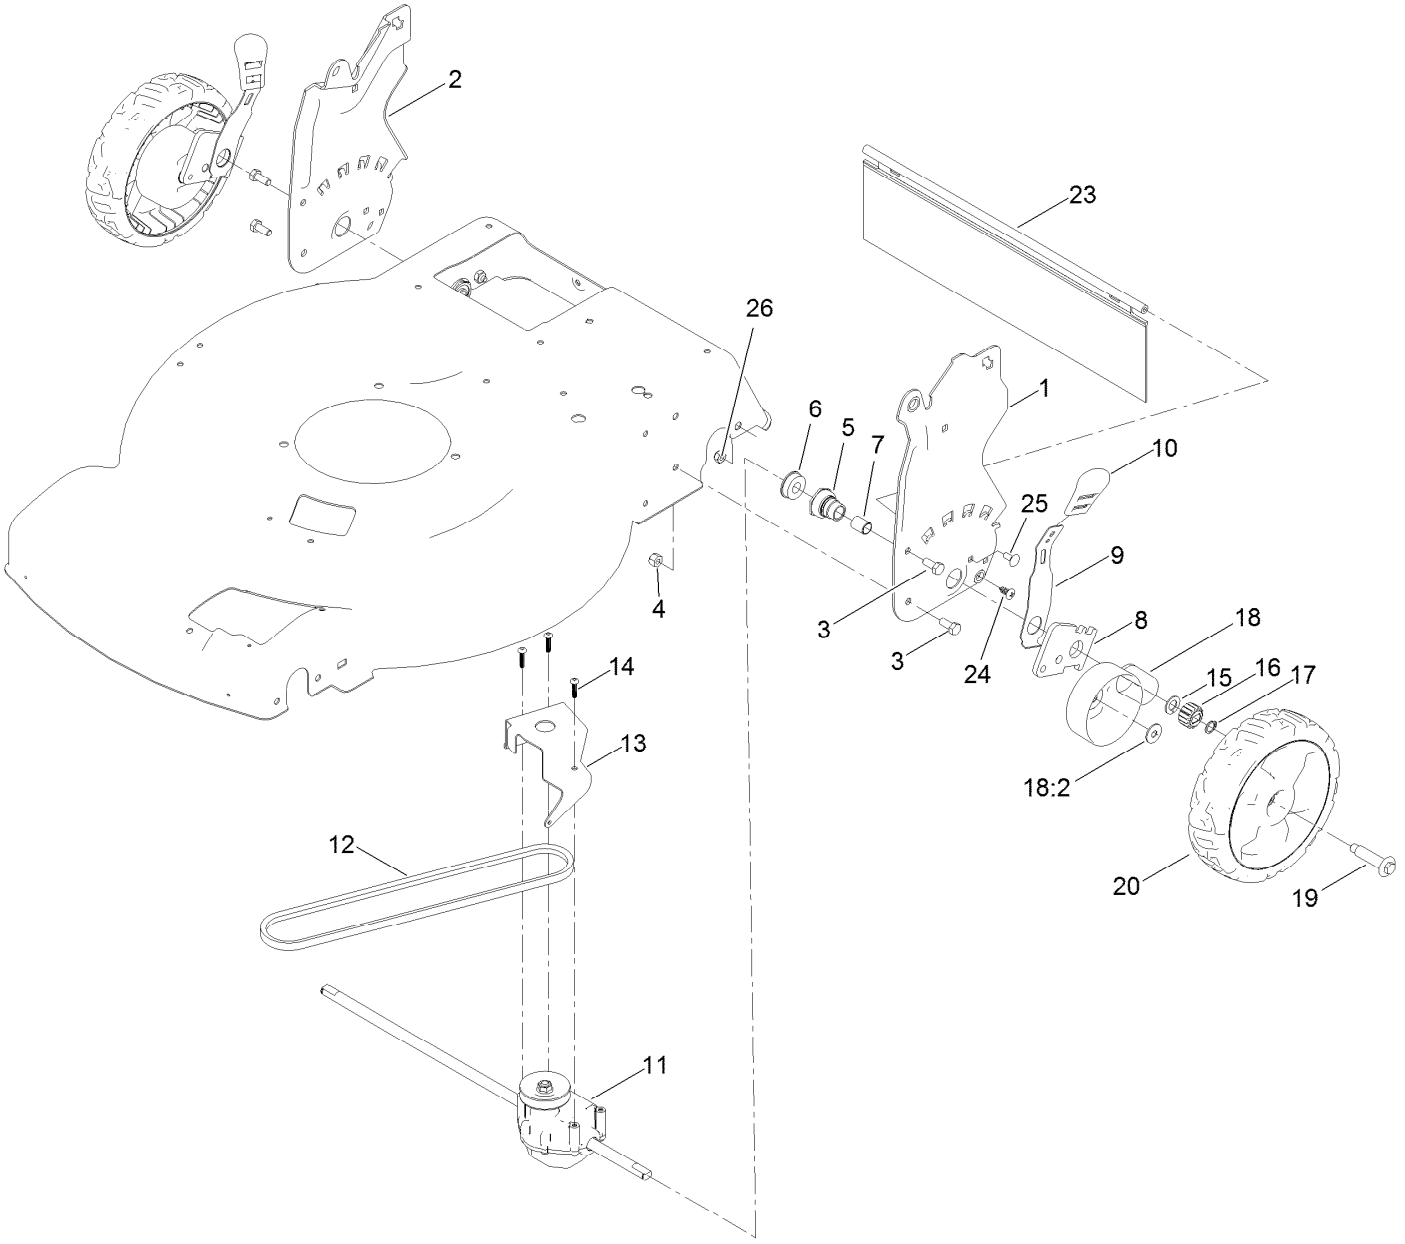

Rear Wheel and Height-of-Cut Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-9693-03	1	Plate-HOC, LH
2	131-9694-03	1	Plate-HOC, RH
3	322-3	4	Screw-HH
4	3296-29	4	Nut-Lock, NI
5	108-9779	2	Retainer-Bushing, HOC
6	104-8699	2	Bearing-Ball
7	108-9782	2	Bushing-Sleeve
8	132-4459	2	Arm-Pivot, Rear
9	108-9780	2	Arm-Spring
10	110-0549	2	Knob-HOC
11	121-9178	1	Transmission ASM
12	115-4669	1	Belt-V
13	114-7977-03	1	Bracket-Transmission
14	108-7476	3	Screw-Plastite
15	110-7191	2	Washer-Thrust
16	131-0875	2	Gear-Pinion, 15T
17	32151-61	2	Ring-Retaining
18	132-4531	2	Cover-Gear, ASM
18:2	614426	1	Washer-Stepped
19	614650	2	Bolt-Shoulder
20	130-6714	2	8 Inch Wheel Gear ASM
23	120-7012	1	Shield-Trailing
24	117-1092	2	Screw-PTH
25	3229-11	2	Screw-CARR
26	3296-16	2	Nut-Lock, NI

Handle Assembly

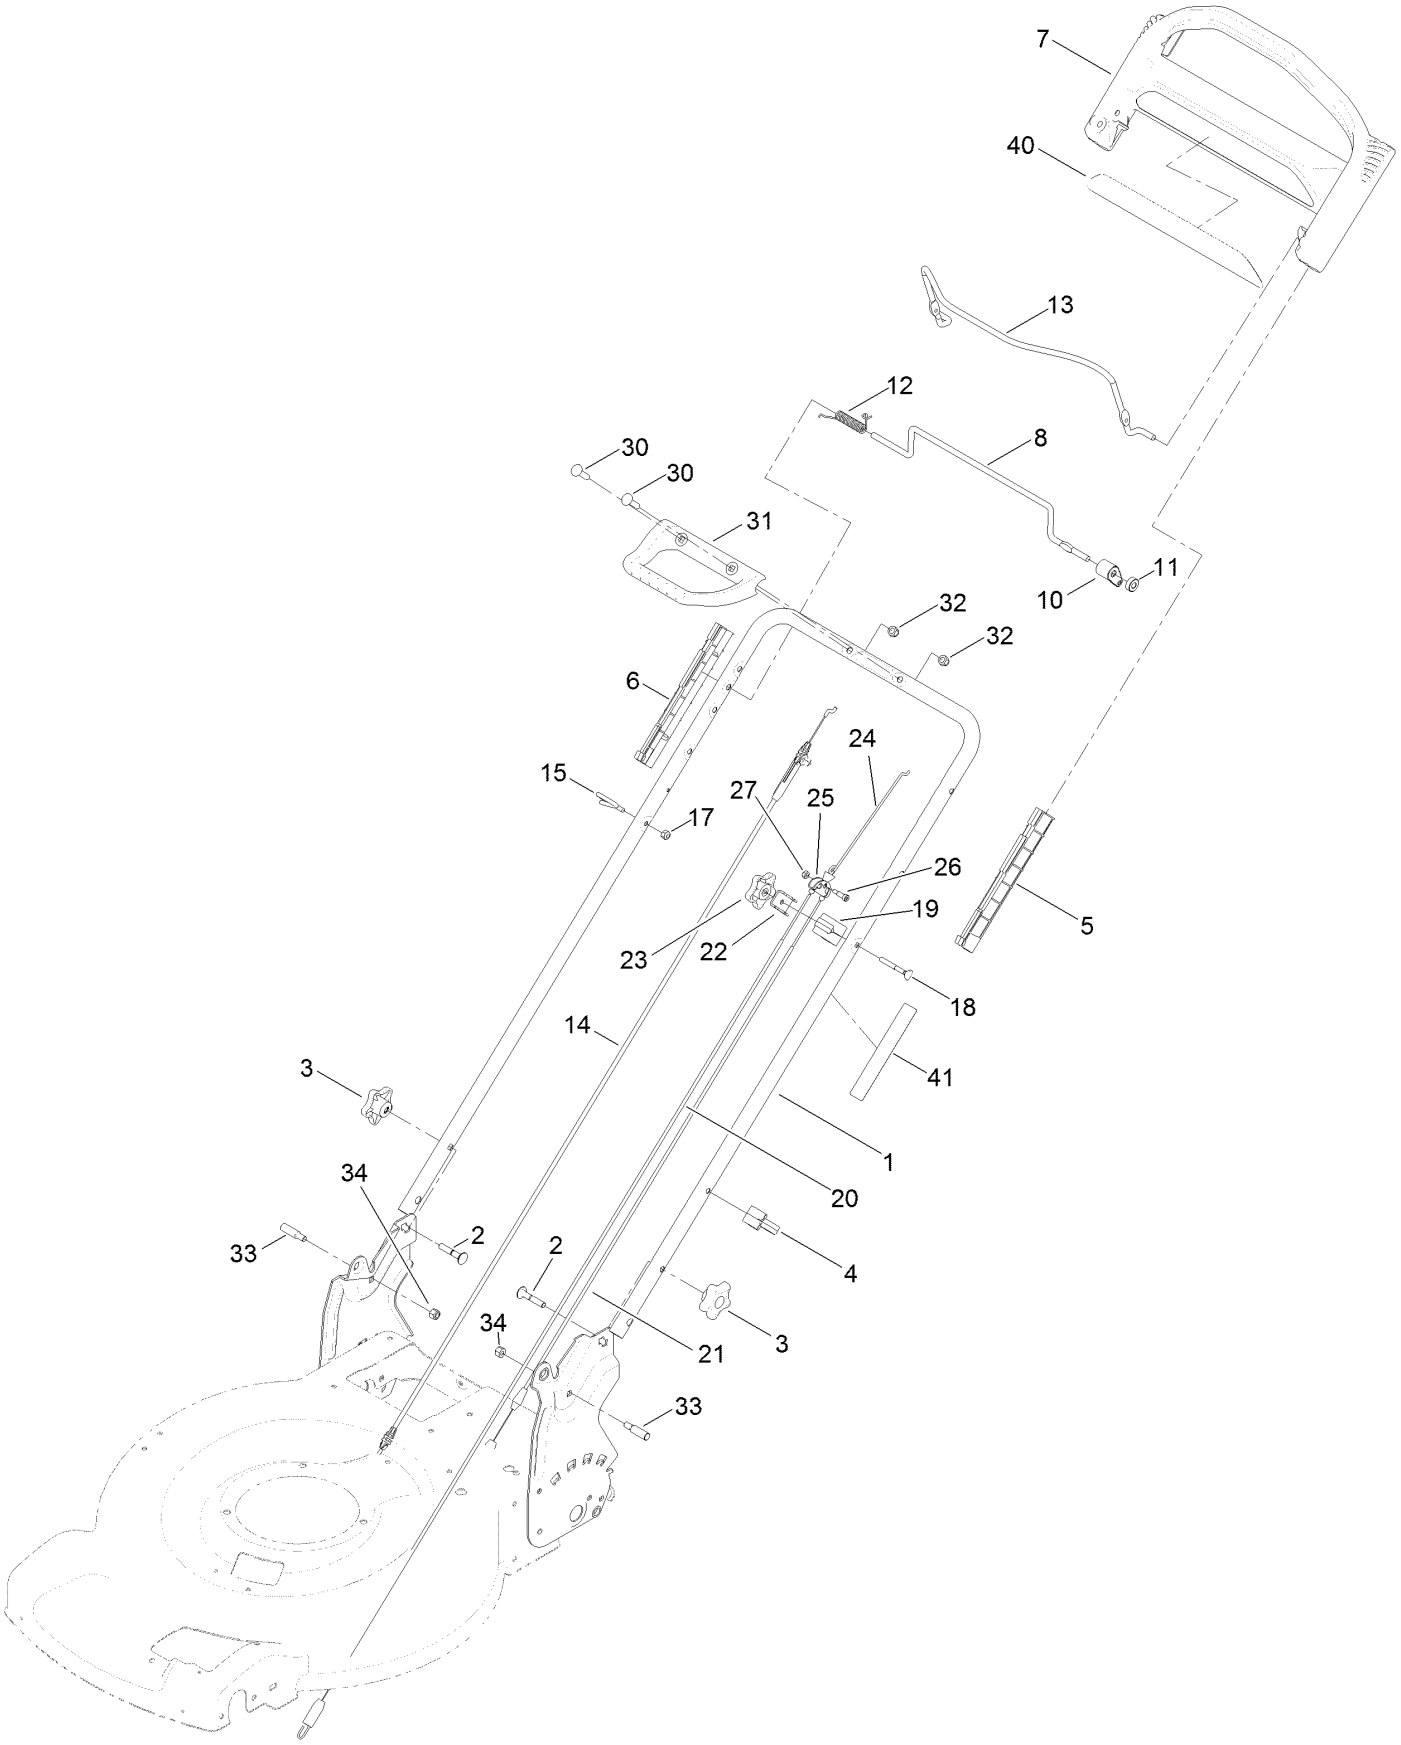

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-9695-05	1	Handle
2	131-9663	2	Screw-CARR
3	117-5976	2	Knob-Handle
4	114-7988	1	Guide-Cable
5	105-6842	1	Guide-LH
6	105-6841	1	Guide-RH
7	104-8678	1	Handle-Control
8	99-1588	1	Bar-Control, Traction
10	127-6842	1	Lever-Traction
11	130-2343	1	Spacer
12	121-9118	1	Spring-Torsion
13	131-0880-03	1	Bail-Brake
14	115-8437	1	Cable-Brake
15	86-9671	1	Guide-Rope
17	3296-73	1	Nut-Lock, NI
18	92-2269	1	Screw-Handle
19	130-6716	1	Mount-Cable, Traction
20	130-6717	1	Cable-Traction, Front
21	130-6718	1	Cable-Traction, Rear
22	130-6704	1	Clamp-Cable
23	131-0897	1	Knob-Handle, Locking
24	131-4559	1	Linkage,Equalizer
25	130-6719	1	Yoke-Cable
26	132-4519	1	Screw-Shoulder
27	3296-2	1	Nut-Lock, NI
30	99-6005	2	Bolt-Carriage
31	131-0847	1	Handle-Assist, Traction
32	131-4535	2	Nut-Acorn
33	131-4591	2	Bolt-Shoulder
34	3296-29	2	Nut-Lock, NI
40	131-4539	1	Decal-Drive, Automatic
41	132-4470	1	Decal-Traction, Adjust

Attachments and Accessories

For 20960 55cm Recycler Lawn Mower

Product Name	Model/Part
Fuel Stabilizer .05 oz	130-2393
AWD Replacement Bag and Frame Kit	131-4556
Traction Assist Handle Kit	131-4590
Lawn Striping Kit with 22in Roller	20601

Notes:

Notes:

Notes:



Count on it.