FORM NO. 3321 – 117

LAWN-BOY®

48cm REAR BAGGING MOWER

MODEL NO. 10915 – 8900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.


To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly	3	Carburetor Assembly	10
Engine Assembly	4	Rear Axle Assembly	11
Blade Assembly	5	Gear Case Assembly	12
Shroud & Block Assembly	6	Handle Assembly	13
Brake & Muffler Assembly	7	Bag Assembly	14
Block Assembly	8	Numeric Parts Index	15–16
Recoil Starter Assembly	9		


Copyright 1997 The Lawn–Boy Co. Inc
All Rights Reserved

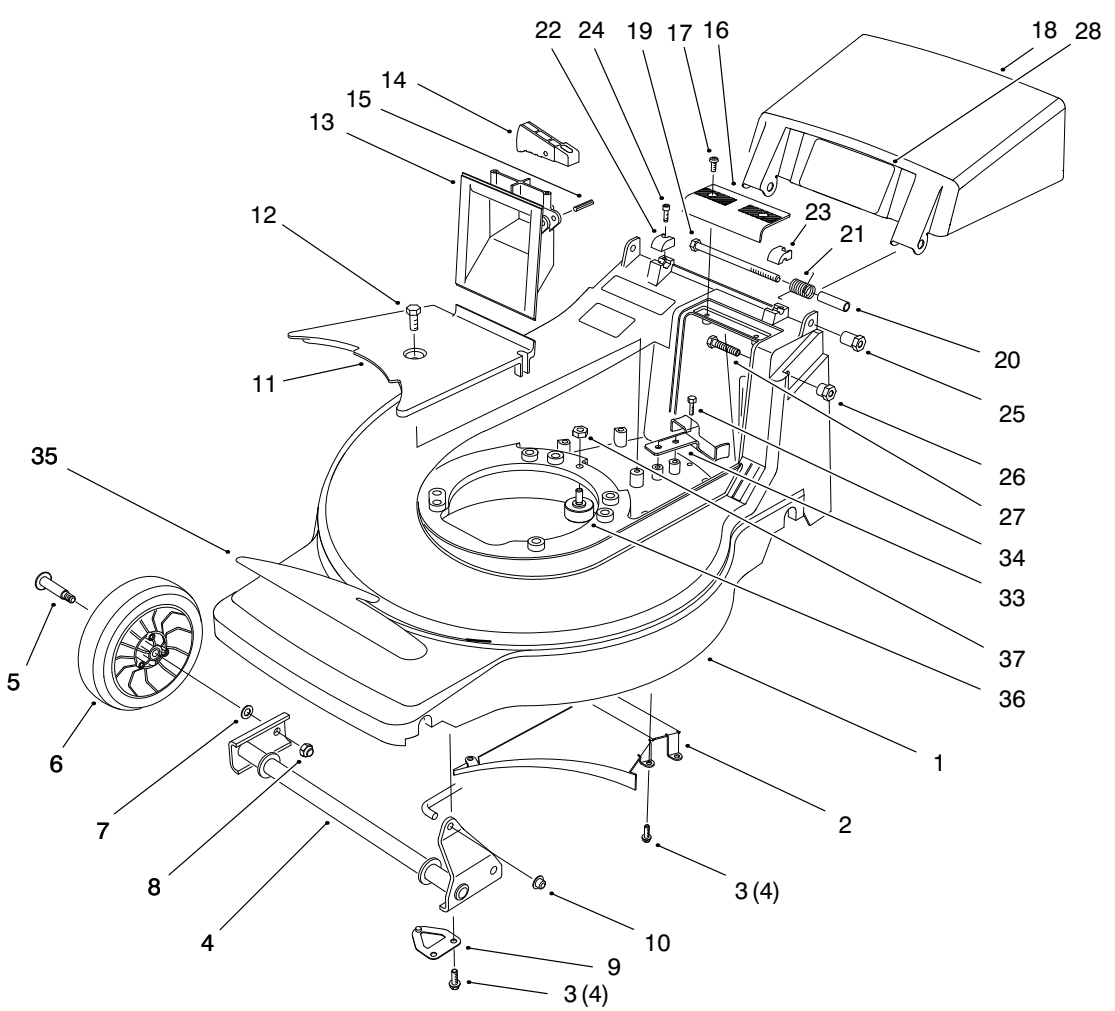

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	16–8889	Housing – Deck (Incl. Ref. # 35)	1
2	71–7990	Ramp – Discharge	1
3	32144–4	Screw – HH Tap	8
4	92–9304	Pivot – Front	1
5	92–8811	Bolt – Wheel	2
6	92–8810	Wheel & Tire Assembly	2
7	40–1940	Washer	2
8	92–8819	Nut – Lock	2
9	71–8830	Shaft Retainer Assembly	2
10	32112–1	Nut – Push	1
11	71–7920	Cover – Belt	1
12	32144–70	Screw – Tap	1
13	71–7870	Grip – Lower	1
14	71–7930	Trigger – Hoc	1
15	3284–5	Pin – Groove	1
16	71–7860	Grip – Upper	1
17	32144–97	Screw – PPH	2

Ref. No.	Part No.	Description	No. Used
18	17–1569	Door – Discharge (Incl. Ref. # 28)	1
19	92–8806	Screw – HH	2
20	92–9313	Spacer – Door	2
21	71–9840	Spring – Door	2
22	71–7910	Cap – Bolt Hinge (RH)	1
23	71–7900	Cap – Bolt Hinge (LH)	1
24	65–5210	Screw – Thread Forming	2
25	93–7161	Spacer – Handle	2
26	93–7162	Spacer – Handle	2
27	92–8818	Screw – HH	2
28	93–4105	Decal – Danger	1
33	71–7890	Guide – Belt Rear	1
34	32144–4	Screw – HH Tap	2
35	92–8837	Decal – Deck	1
36	92–8808	Ball – Bearing, Stud	1
37	3296–29	Nut – Hex Lock	1

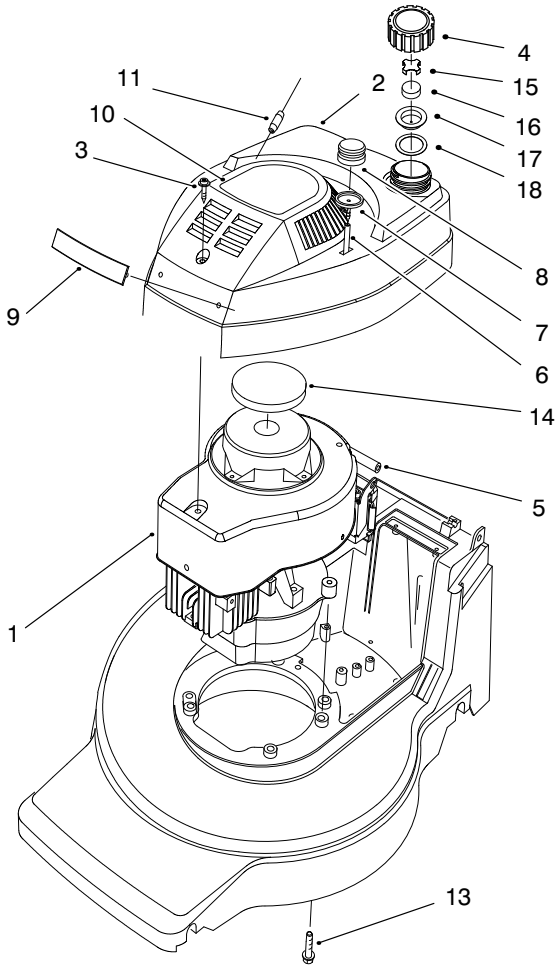


C−2672

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Engine Assembly	1
2	92−8898	Shroud & Tank Assembly	1
3	93−4302	Screw	3
4	93−3660	Fuel Cap Assembly	1
5	612782	Gas Line	1
6	44−3174	Hose Primer	1
7	44−2750	Body − Primer	1
8	66−7460	Bulb − Primer	1
9	92−8615	Applique − Shroud	1


Ref. No.	Part No.	Description	No. Used
10	92−8828	Decal − Shroud Top	1
11	92−1701	Rope − Stop	1
13	32144−102	Screw	3
14	93−1201	Disc − Foam	1
15	93−3175	Baffle	1
16	609150	Baffle − Foam	1
17	93−1230	Cover	1
18	613311	Gasket	1

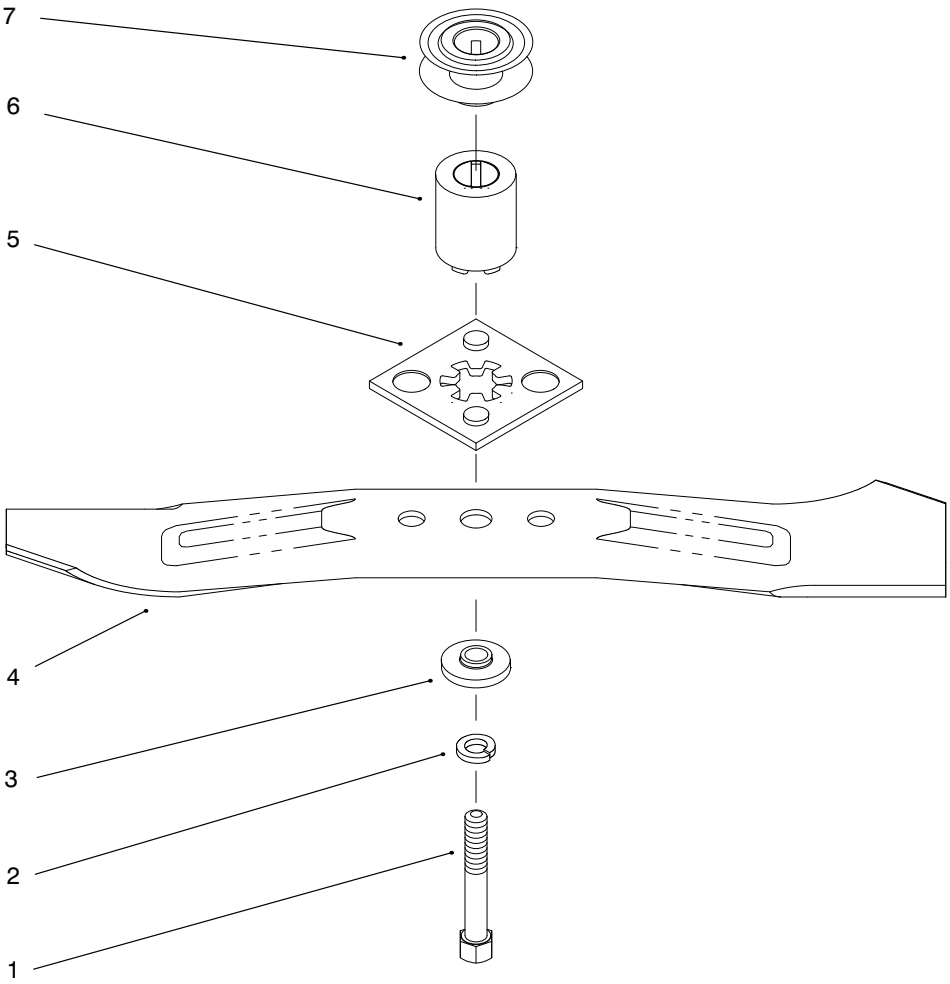

C−1887

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	26−0670	Bolt − Blade	1
2	3253−22	Washer − Lock	1
3	92−8626	Spacer − Blade	1
4	612079	Blade 19”	1
5	146046	Plate − Blade Driver	1
6	92−8807	Hub − Blade Driver	1
7	93−0278	Pulley − Driver	1

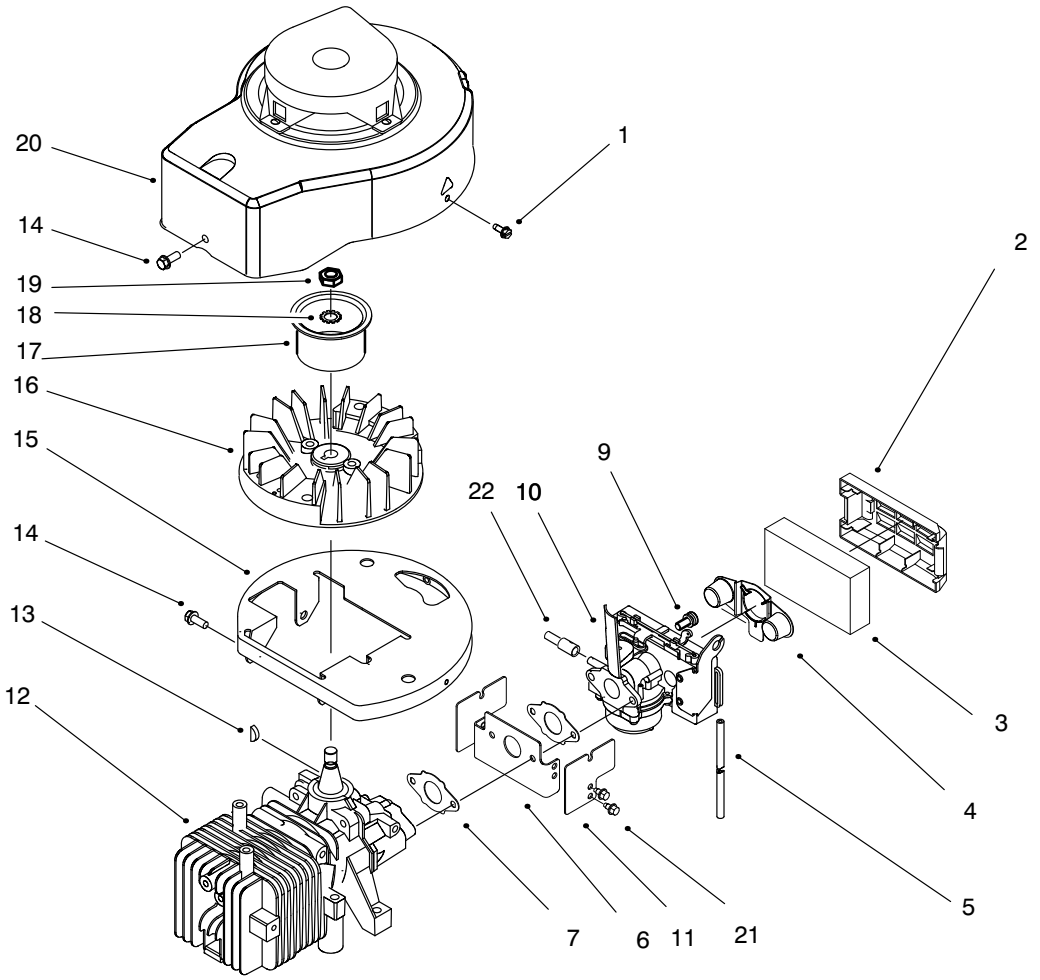


C−2438

SHROUD & BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	93−4303	Cover − Air Filter	1
3	609493	Element − Air Filter	1
4	93−4320	Shield − Fuel	1
5	44−3174	Hose − Primer	1
6	93−4315	Shield − Carburetor	1
7	92−4948	Gasket − Carburetor	2
9	609482	Screw	2
10	94−4331	Carburetor Assembly	1
11	93−4316	Shield − Governor	2
12	94−5731	Short Block Assembly	1

Ref. No.	Part No.	Description	No. Used
13	607199	Key	1
14	614702	Screw	4
15	93−1216	Base − Shroud	1
16	684743	Flywheel Assembly	1
17	614640	Hub − Starter	1
18	316959	Washer − Lock	1
19	130743	Nut	1
20	93−4304	Shroud	1
21	613269	Screw	4
22	92−6398	Cap	1

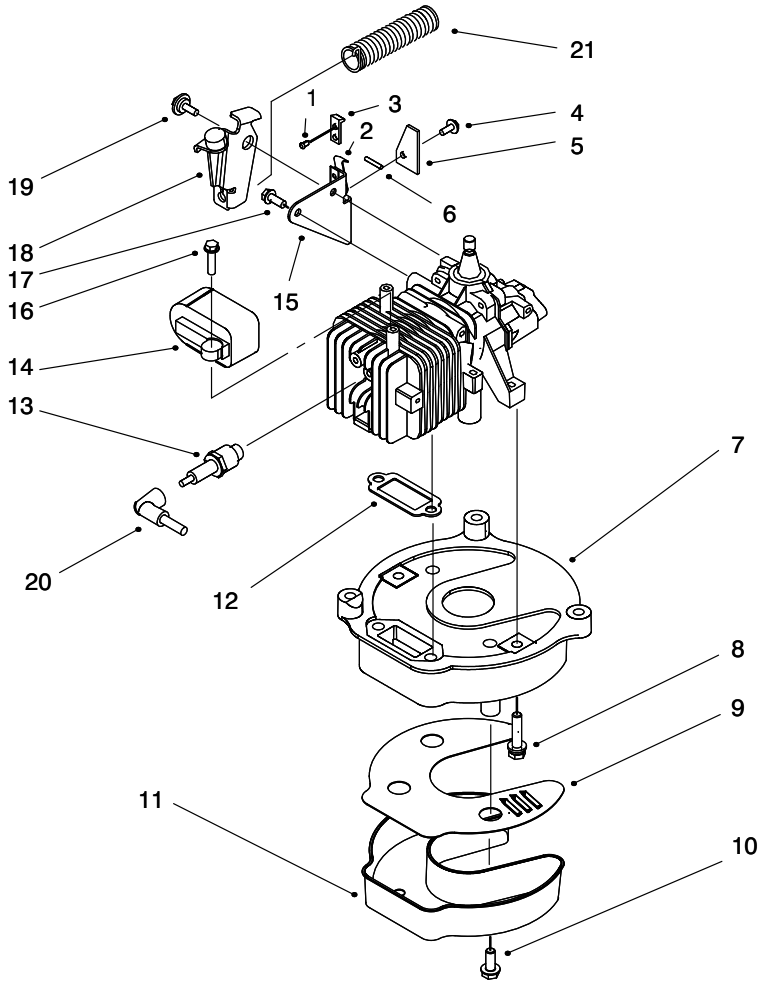


C−1899

BRAKE & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290−459	Rivet	2
2	60−9010	Strap − Ground	1
3	92−2925	Strap − Insulation	1
4	12−5450	Screw − Thread Forming	1
5	53−4690	Stop − Ground Strap	1
6	92−1156	Wire − Brake Switch Lead	1
7	614654	Plate − Muffler	1
8	607601	Screw	4
9	93−1217	Baffle	1
10	609471	Screw	3
11	93−1108	Cover − Muffler	1

Ref. No.	Part No.	Description	No. Used
12	93−1233	Gasket − Exhaust	1
13	614008	Plug − Spark	1
14	684049	Ignition Assembly (Incl. Ref. #20)	1
15	84−7820	Plate − Brake Mount	1
16	613208	Screw − Hex Washer Hd.	2
17	614702	Screw	1
18	66−5380	Plate − Brake Assembly	1
19	92−9698	Screw − Shoulder	1
20	684179	Lead & Cover Assembly	1
21	66−5370	Spring − Compression	1

3321−117

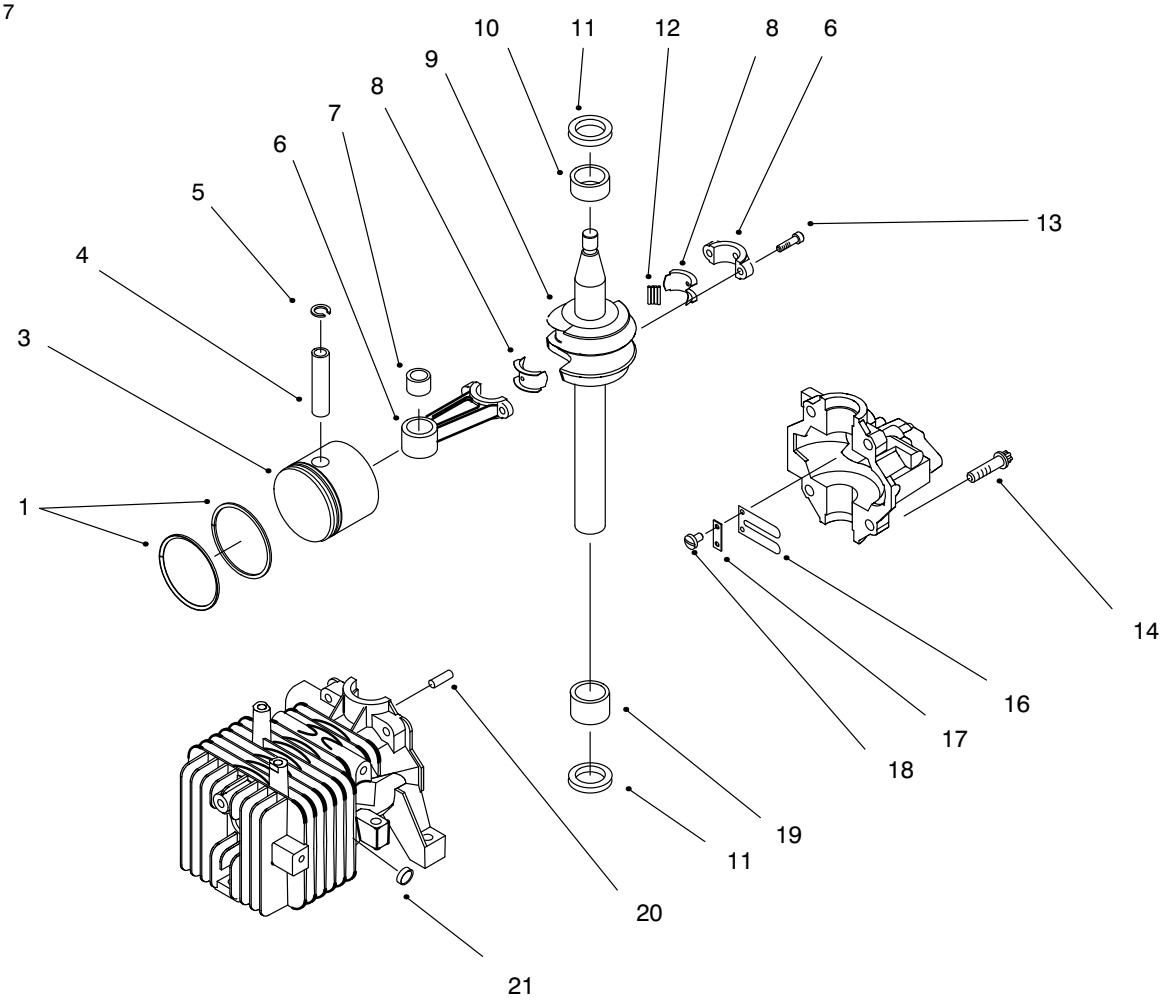


C−1295A

BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	681737	Set − Rings, Piston	1
3	92−4925	Piston & Connecting Rod (Incl. Ref. #1, 3−7 & 13)	1
4	606608	Pin − Wrist	1
5	303712	Ring − Retaining	2
6	92−4921	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)	1
7	92−4927	Bearing	1
8	677982	Liner − Split (Set of 2)	1
9	92−6379	Crankshaft	1
10	681830	Bearing − Upper Main	1
11	611396	Seal − Oil	2

Ref. No.	Part No.	Description	No. Used
12	683911	Bearing − Needle	1
13	611393	Screw − Hex. Hd.	2
14	614636	Screw − Hex. Washer Hd.	4
16	602588	Reed − Carburetor	1
17	602587	Reed − Backup Plate	1
18	612872	Screw	2
19	681831	Bearing − Needle	1
20	609629	Dowel	1
21	609123	Plug − Core	4
22	252−76	Bearing − Thrust	1
23	252−80	Washer − Thrust	1
*	684725	Cylinder & Crankcase Asm.	1

* Not Illustrated

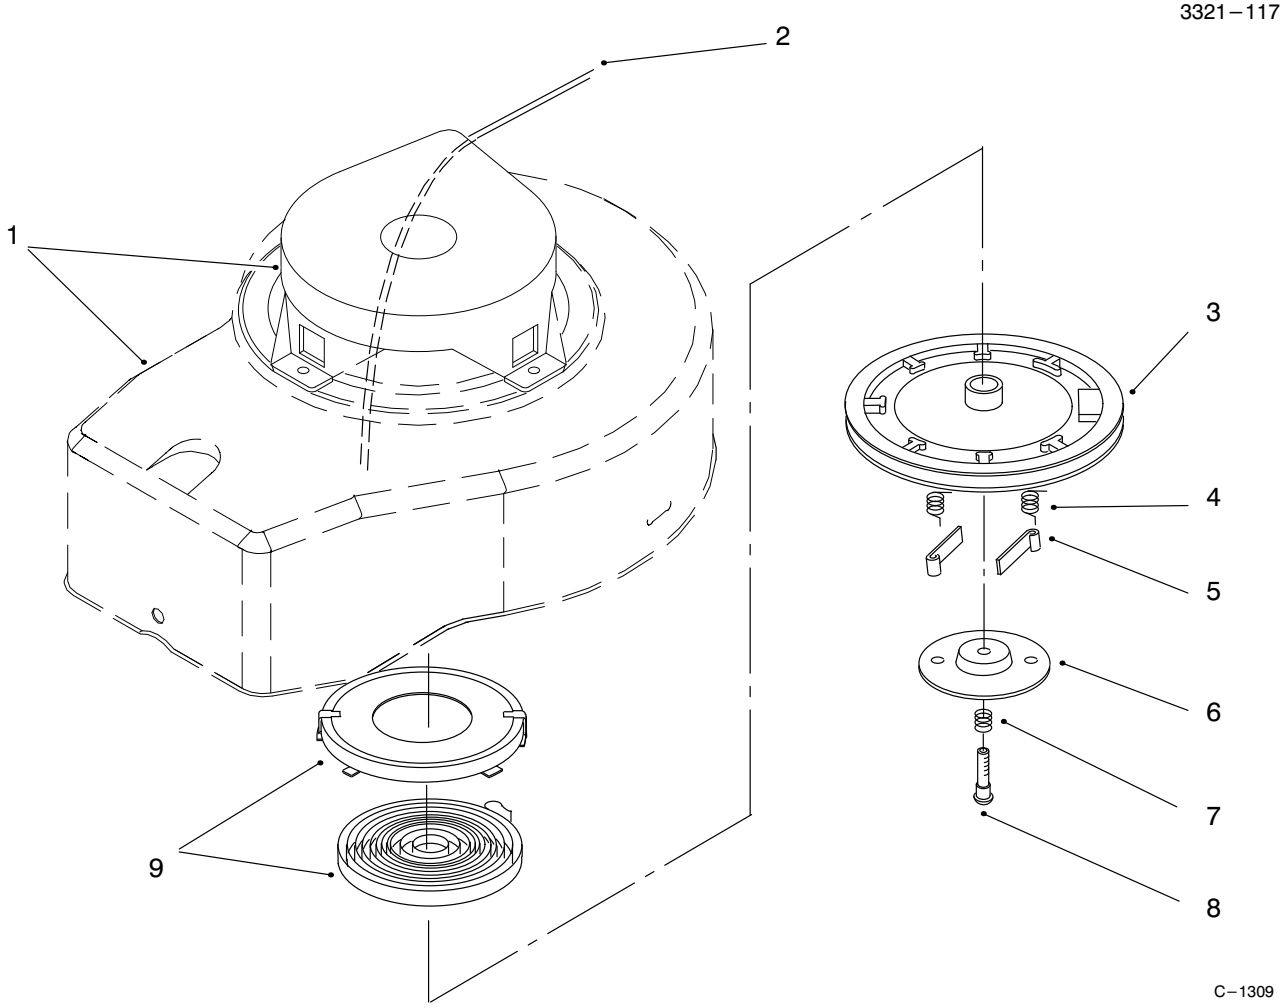


C – 1309

RECOIL STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93 – 4304	Housing Assembly	1
2	93 – 4305	Rope – Starter	1
3	92 – 4929	Pulley Assembly	1
4	92 – 4930	Spring – Dog	2
5	92 – 4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92 – 9692	Retainer	1
7	92 – 4933	Screw	1
8	92 – 4934	Spring	1
9	92 – 4935	Spring Keeper Assembly	1

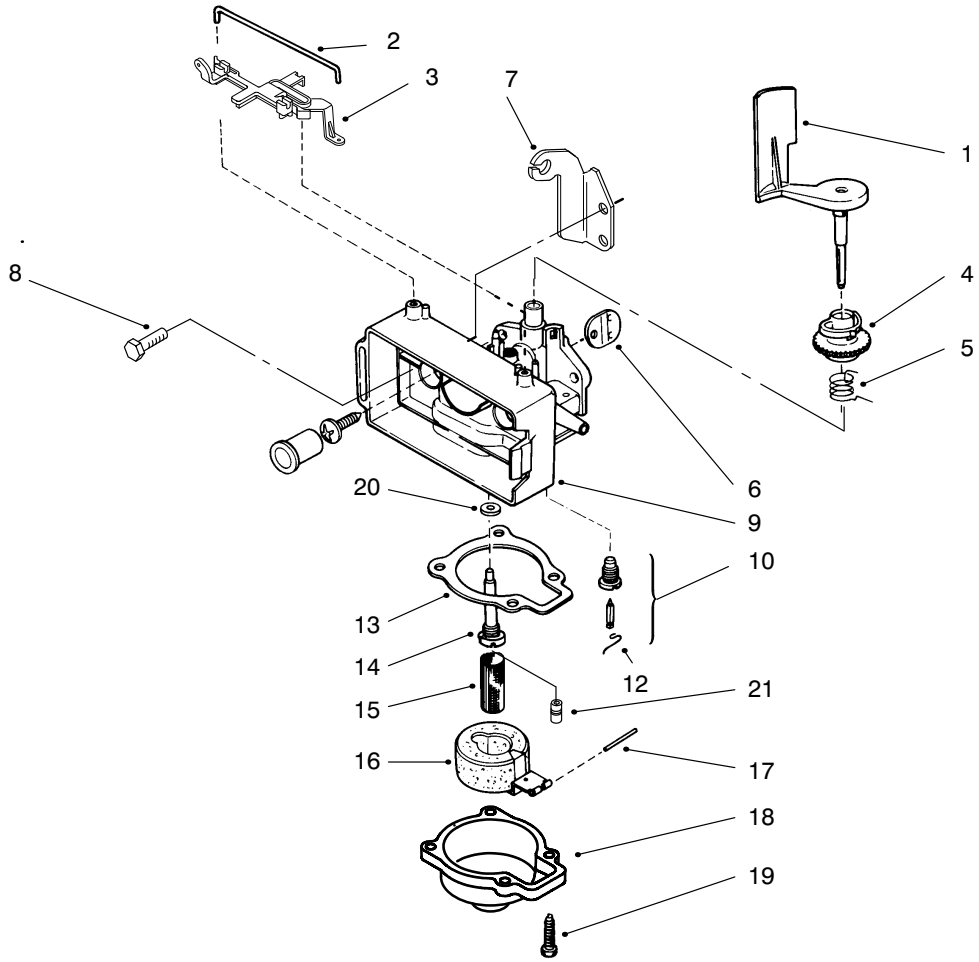


C−2130A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92−6376	Air Vane & Shaft	1
2	610165	Retainer − Speed Control	1
3	93−1225	Lever − Speed Adjust	1
4	610834	Collar − Air Vane	1
5	92−4944	Spring − Governor	1
6	92−6373	Disc − Throttle	1
7	92−4949	Bracket − Throttle Control	1
8	613269	Screw	2
9	93−4324	Carburetor Body	1
10	92−9697	Kit − Float Valve, Body & Seat (Incl. Ref. #12)	1
12	603145	Spring	1

Ref. No.	Part No.	Description	No. Used
13	602850	Gasket	1
14	92−6371	Nozzle	1
15	611071	Filter − Fuel	1
16	678113	Float & Arm Assembly	1
17	92−6389	Pin	1
18	92−9691	Float Chamber	1
19	608850	Screw	4
20	612383	Washer	1
21	92−6370	Main Jet	1
*	92−6385	Jet − High Altitude	1
*	93−4331	Carburetor Assembly (Incl. Ref. #7 pg.6)	1

*Not Illustrated

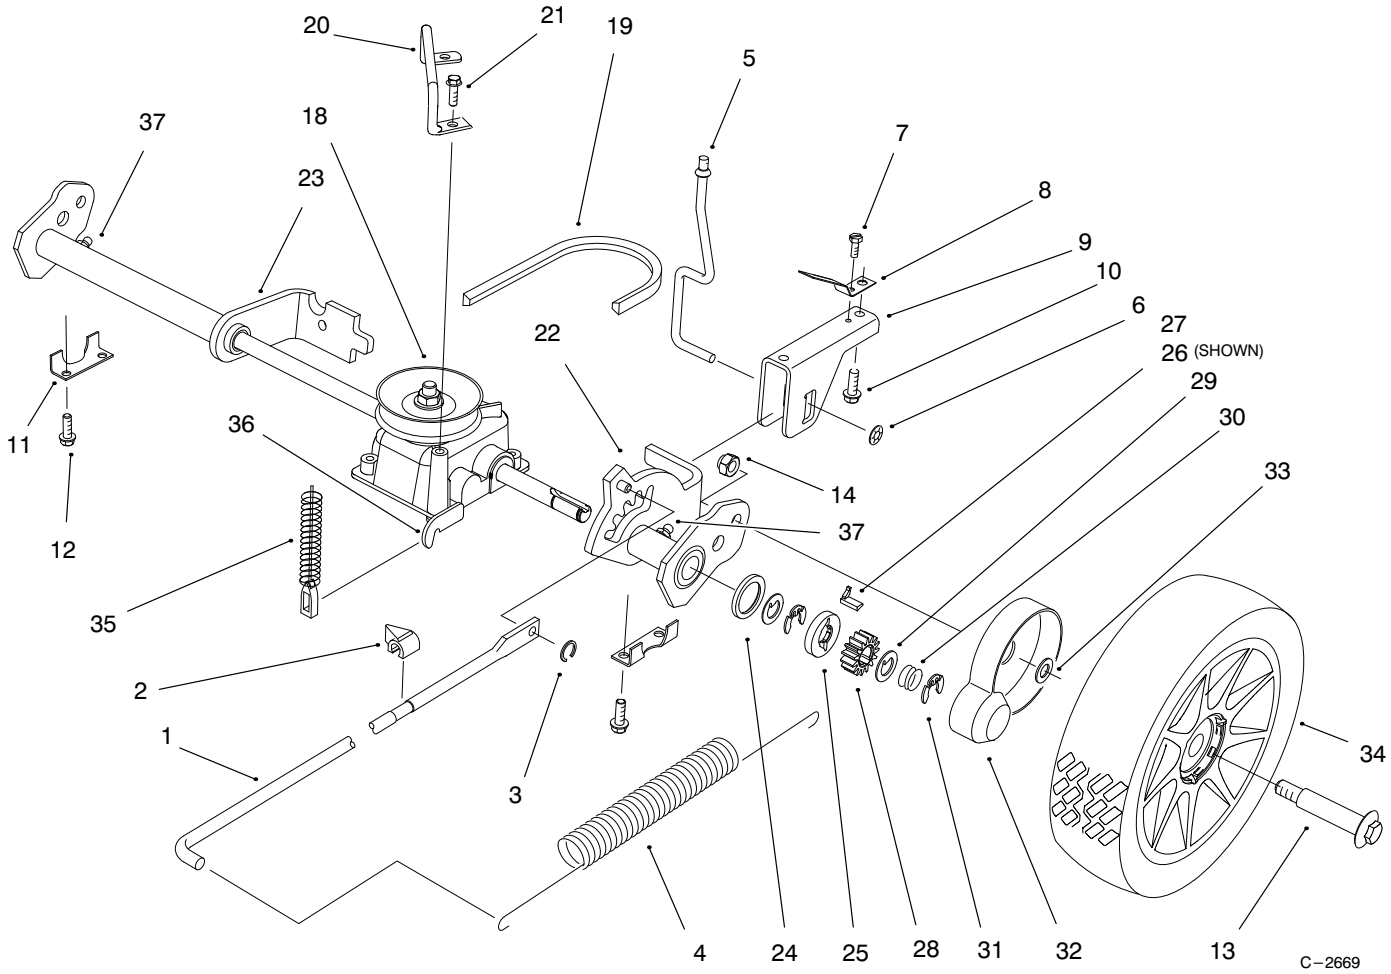


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92−9301	Rod −Link	1
2	71−7980	Indicator − HOC	1
3	32151−93	Ring − Grip	1
4	92−9300	Spring − Counterbalance	1
5	71−7840	Rod −Trigger	1
6	32112−13	Nut − Push	1
7	32144−31	Screw	1
8	71−8060	Spring − Trigger Retainer	2
9	71−8080	Saddle − HOC	1
10	63−8590	Screw	2
11	71−7770	Plate − Securing	2
12	32144−4	Screw−HH Tap	4
13	92−1057	Bolt − Shoulder	2
14	3296−59	Nut−Lock	2
18	71−9600	Gear Case Assembly	1
19	71−9450	V−Belt	1
20	95−2740	Retainer − Belt	1
21	32144−4	Screw − HH Tap	2

Ref. No.	Part No.	Description	No. Used
22	92−9311	Pivot Arm Assembly LH	1
23	92−9310	Pivot Arm Assembly RH	1
24	65−4710	Ring − Friction	2
25	65−4760	Washer	2
26	66−6050	Key − Rocking LH	1
*27	66−6040	Key − Rocking RH	1
28	65−4750	Gear − Pinion	2
29	65−4740	Washer − Thrust	4
30	65−4720	Spring − Compression	2
31	65−2720	Ring − Retaining	4
32	74−1660	Cover − Wheel	2
33	74−1670	Spacer − Wheel	2
34	92−9318	Wheel & Tire Assembly	2
35	71−8310	Spring − Compression	1
36	98−2039	Bracket − Traction (Incl. with 71−9600)	1
37	302−26	Grease Zerk	2

* Not Illustrated

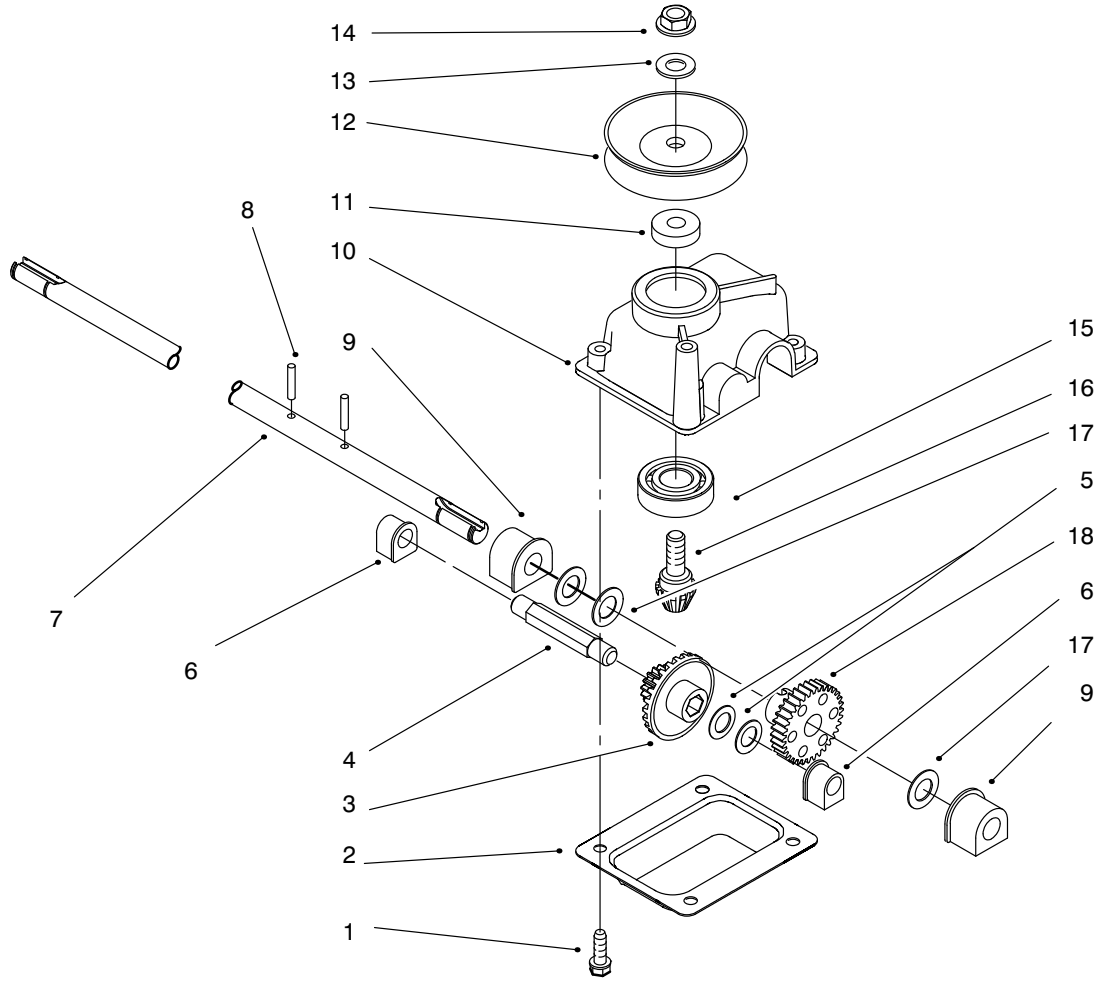


C−1292

GEAR CASE ASSEMBLY #71−9600

Ref. No.	Part No.	Description	No. Used
1	49−2040	Screw − Taptite	4
2	614668	Cover − Gear Case	1
3	55−3760	Pinion − 15 Tooth	1
4	614696	Shaft − Intermediate	1
5	36−4791	Washer	2
6	60−8750	Bushing	2
7	71−9620	Shaft − Output	1
8	32121−114	Pin − Groove	2
9	60−8850	Bushing − Output	2
10	614578	Cover − Gear Case	1

Ref. No.	Part No.	Description	No. Used
11	62−6660	Spacer	1
12	71−9610	Pulley − Half	2
13	3256−24	Washer	1
14	3296−5	Nut	1
15	38−7820	Bearing − Ball	1
16	60−8890	Gear − Bevel Pinion	1
17	36−4780	Washer − Thrust	3
18	614596	Gear 34 Tooth	1
*	71−9600	Gear Case Ass'y Complete	1

* Not Illustrated

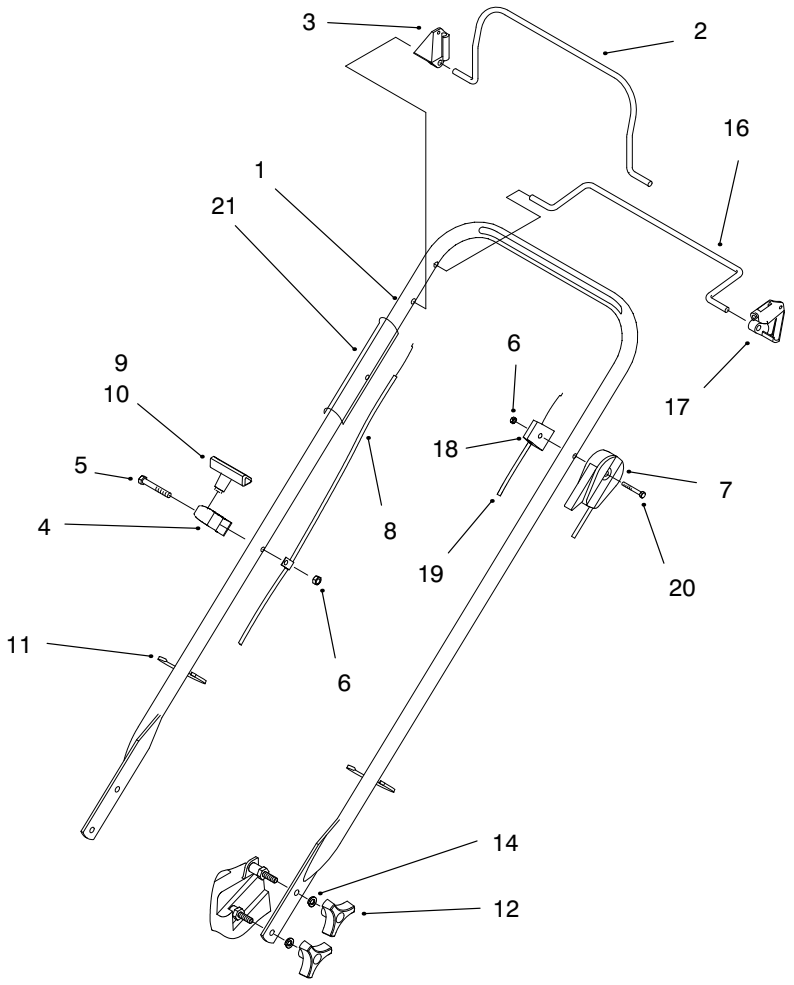


C−2673

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92−8800	Handle	1
2	92−1002	Bail − Fly Wheel Brake	1
3	92−5412	Stop − Pivot	1
4	93−7383	Guide − Rope	1
5	321−53	Screw − HH	1
6	3296−73	Nut − Lock Insert	2
7	92−9327	Cable − Throttle	1
8	92−9328	Cable − Brake	1
9	612824	Clip − Rope Insert	1
10	612825	Handle − Starter	1

Ref. No.	Part No.	Description	No. Used
11	3290−378	Tie − Cable	2
12	93−7159	Knob	4
14	3253−33	Washer − Lock	4
16	92−1001	Bail − Control	1
17	92−5412	Stop − Pivot	1
18	92−7729	Anchor − Cable	1
19	92−9316	Cable − Traction	1
20	321−57	Screw − HH	1
21	93−7266	Decal − Operation	1

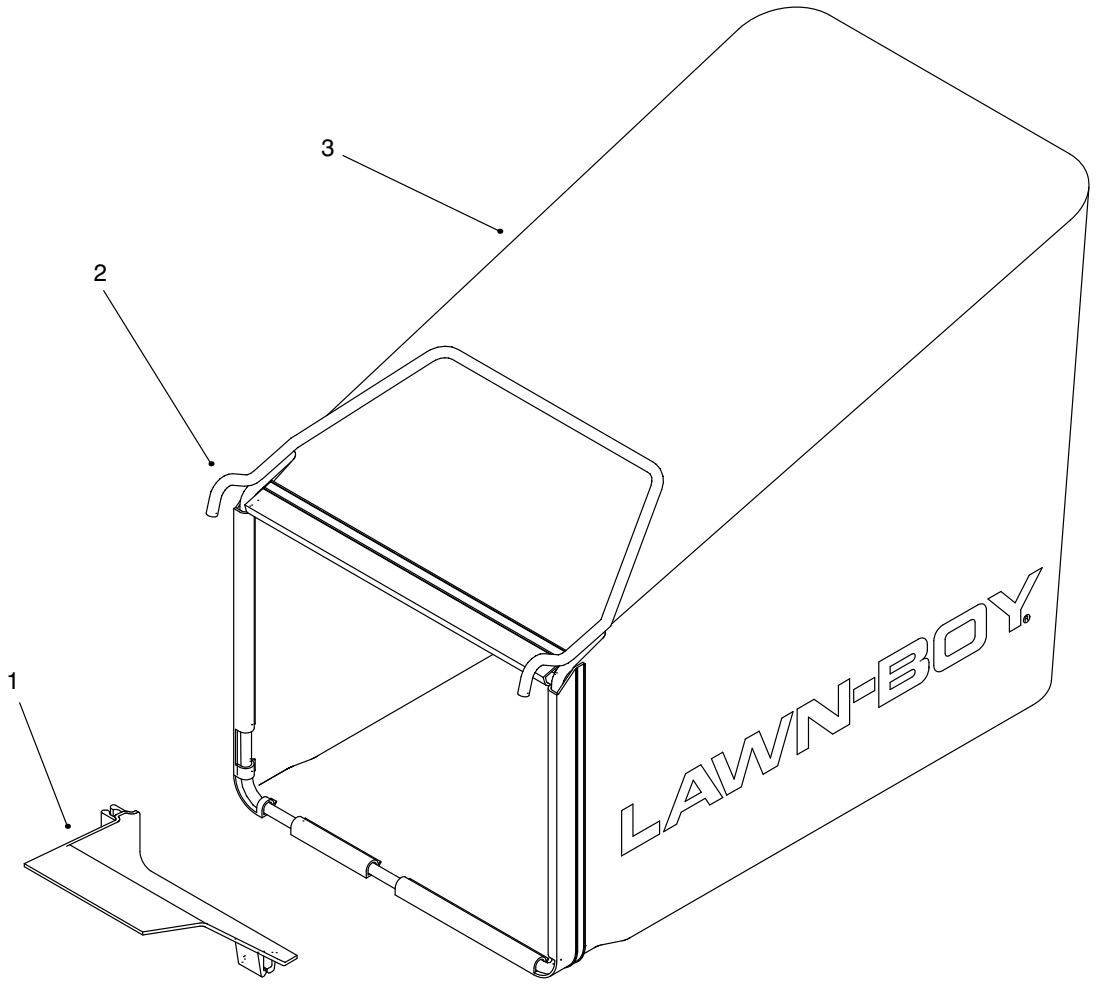

C−1890

BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71−3750	Ramp − Grass Bag	1
2	71−8180	Frame	1

Ref. No.	Part No.	Description	No. Used
3	92−8890	Bag − Grass	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut	6	19	1
146046	Plate − Blade Driver	5	5	1
303712	Ring − Retaining	8	5	2
316959	Washer − Lock	6	18	1
602587	Reed − Backup Plate	8	17	1
602588	Reed − Carburetor	8	16	1
602850	Gasket	10	13	1
603145	Spring	10	12	1
606608	Pin − Wrist	8	4	1
607199	Key	6	13	1
607601	Screw	7	8	4
608850	Screw	10	19	4
609123	Plug − Core	8	21	4
609150	Baffle − Foam	4	16	1
609471	Screw	7	10	3
609482	Screw	6	9	2
609493	Element − Air Filter	6	3	1
609629	Dowel	8	20	1
610165	Retainer − Speed Control	10	2	1
610834	Collar − Air Vane	10	4	1
611071	Filter − Fuel	10	15	1
611393	Screw − Hex. Hd.	8	13	2
611396	Seal − Oil	8	11	2
612079	Blade 19	5	4	1
612383	Washer	10	20	1
612782	Gas Line	4	5	1
612824	Clip − Rope Insert	13	9	1
612825	Handle − Starter	13	10	1
612872	Screw	8	18	2
613208	Screw − Hex Washer Hd.	7	16	2
613269	Screw	10	8	2
613269	Screw	6	21	4
613311	Gasket	4	18	1
614008	Plug − Spark	7	13	1
614578	Cover − Gear Case	12	10	1
614596	Gear 34 Tooth	12	18	1
614636	Screw − Hex. Washer Hd.	8	14	4
614640	Hub − Starter	6	17	1
614654	Plate − Muffler	7	7	1
614668	Cover − Gear Case	12	2	1
614696	Shaft − Intermediate	12	4	1
614699	Screw	6	1	3
614702	Screw	6	14	4
614702	Screw	7	17	1
677982	Liner − Split (Set of 2)	8	8	1
678113	Float & Arm Assembly	10	16	1
681737	Set − Rings, Piston	8	1	1
681830	Bearing − Upper Main	8	10	1
681831	Bearing − Needle	8	19	1
683911	Bearing − Needle	8	12	1
684049	Ignition Assembly	7	14	1
684179	Lead & Cover Assembly	7	20	1
684725	Cylinder & Crankcase Asm.	8	*	1
684743	Flywheel Assembly	6	16	1
12−5450	Screw − Thread Forming	7	4	1
16−8889	Housing − Deck	3	1	1
17−1569	Door − Discharge	3	18	1
26−0670	Bolt − Blade	5	1	1
36−4780	Washer − Thrust	12	17	3
36−4791	Washer	12	5	2
38−7820	Bearing − Ball	12	15	1
40−1940	Washer	3	7	2
44−2750	Body − Primer	4	7	1
44−3174	Hose − Primer	6	5	1
44−3174	Hose Primer	4	6	1
49−2040	Screw − Taptite	12	1	4
53−4690	Stop − Ground Strap	7	5	1
55−3760	Pinion − 15 Tooth	12	3	1
60−8750	Bushing	12	6	2
60−8850	Bushing − Output	12	9	2
60−8890	Gear − Bevel Pinion	12	16	1
60−9010	Strap − Ground	7	2	1
62−6660	Spacer	12	11	1
63−8590	Screw	11	10	2
65−2720	Ring − Retaining	11	31	4
65−4710	Ring − Friction	11	24	2
65−4720	Spring − Compression	11	30	2
65−4740	Washer − Thrust	11	29	4
65−4750	Gear − Pinion	11	28	2
65−4760	Washer	11	25	2
65−5210	Screw − Thread Forming	3	24	2
66−5370	Spring − Compression	7	21	1
66−5380	Plate − Brake Assembly	7	18	1
66−6040	Key − Rocking RH	11	*27	1
66−6050	Key − Rocking LH	11	26	1
66−7460	Bulb − Primer	4	8	1
71−3750	Ramp − Grass Bag	14	1	1
71−7770	Plate − Securing	11	11	2
71−7840	Rod −Trigger	11	5	1
71−7860	Grip − Upper	3	16	1
71−7870	Grip − Lower	3	13	1
71−7890	Guide − Belt Rear	3	33	1
71−7900	Cap − Bolt Hinge (LH)	3	23	1
71−7910	Cap − Bolt Hinge (RH)	3	22	1
71−7920	Cover − Belt	3	11	1
71−7930	Trigger − Hoc	3	14	1
71−7980	Indicator − HOC	11	2	1
71−7990	Ramp − Discharge	3	2	1
71−8060	Spring − Trigger Retainer	11	8	2
71−8080	Saddle − HOC	11	9	1
71−8180	Frame	14	2	1
71−8310	Spring − Compression	11	35	1
71−8830	Shaft Retainer Assembly	3	9	2
71−9450	V−Belt	11	19	1
71−9600	Gear Case Ass'y Complete	12	*	1
71−9600	Gear Case Assembly	11	18	1
71−9610	Pulley − Half	12	12	2
71−9620	Shaft − Output	12	7	1
71−9840	Spring − Door	3	21	2
74−1660	Cover − Wheel	11	32	2
74−1670	Spacer − Wheel	11	33	2
84−7820	Plate − Brake Mount	7	15	1
92−1001	Bail − Control	13	16	1
92−1002	Bail − Fly Wheel Brake	13	2	1
92−1057	Bolt − Shoulder	11	13	2
92−1156	Wire − Brake Switch Lead	7	6	1
92−1701	Rope − Stop	4	11	1
92−2925	Strap − Insulation	7	3	1
92−4921	Connecting Rod Assembly	8	6	1
92−4925	Piston & Connecting Rod	8	3	1
92−4927	Bearing	8	7	1
92−4929	Pulley Assembly	9	3	1
92−4930	Spring − Dog	9	4	2
92−4931	Dog	9	5	2
92−4933	Screw	9	7	1
92−4934	Spring	9	8	1
92−4935	Spring Keeper Assembly	9	9	1
92−4944	Spring − Governor	10	5	1
92−4948	Gasket − Carburetor	6	7	2
92−4949	Bracket − Throttle Control	10	7	1
92−5412	Stop − Pivot	13	3	1
92−5412	Stop − Pivot	13	17	1
92−6370	Main Jet	10	21	1
92−6371	Nozzle	10	14	1
92−6373	Disc − Throttle	10	6	1
92−6376	Air Vane & Shaft	10	1	1
92−6379	Crankshaft	8	9	1
92−6385	Jet − High Altitude	10	*	1
92−6389	Pin	10	17	1
92−6398	Cap	6	22	1
92−7729	Anchor − Cable	13	18	1
92−8615	Applique − Shroud	4	9	1
92−8626	Spacer − Blade	5	3	1
92−8800	Handle	13	1	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92−8806	Screw − HH	3	19	2
92−8807	Hub − Blade Driver	5	6	1
92−8808	Ball − Bearing, Stud	3	36	1
92−8810	Wheel & Tire Assembly	3	6	2
92−8811	Bolt − Wheel	3	5	2
92−8818	Screw − HH	3	27	2
92−8819	Nut − Lock	3	8	2
92−8828	Decal − Shroud Top	4	10	1
92−8837	Decal − Deck	3	35	1
92−8890	Bag − Grass	14	3	1
92−8898	Shroud & Tank Assembly	4	2	1
92−9300	Spring − Counterbalance	11	4	1
92−9301	Rod −Link	11	1	1
92−9304	Pivot − Front	3	4	1
92−9310	Pivot Arm Assembly RH	11	23	1
92−9311	Pivot Arm Assembly LH	11	22	1
92−9313	Spacer − Door	3	20	2
92−9316	Cable − Traction	13	19	1
92−9318	Wheel & Tire Assembly	11	34	2
92−9327	Cable − Throttle	13	7	1
92−9328	Cable − Brake	13	8	1
92−9691	Float Chamber	10	18	1
92−9692	Retainer	9	6	1
92−9697	Kit − Float Valve, Body	10	10	1
92−9698	Screw − Shoulder	7	19	1
93−0278	Pulley − Driver	5	7	1
93−1108	Cover − Muffler	7	11	1
93−1201	Disc − Foam	4	14	1
93−1216	Base − Shroud	6	15	1
93−1217	Baffle	7	9	1
93−1225	Lever − Speed Adjust	10	3	1
93−1230	Cover	4	17	1
93−1233	Gasket − Exhaust	7	12	1
93−3175	Baffle	4	15	1
93−3660	Fuel Cap Assembly	4	4	1
93−4105	Decal − Danger	3	28	1
93−4302	Screw	4	3	3
93−4303	Cover − Air Filter	6	2	1
93−4304	Housing Assembly	9	1	1
93−4304	Shroud	6	20	1
93−4305	Rope −Starter	9	2	1
93−4315	Shield − Carburetor	6	6	1
93−4316	Shield − Governor	6	11	2
93−4320	Shield − Fuel	6	4	1
93−4324	Carburetor Body	10	9	1
93−4331	Carburetor Assembly	10	*	1
93−7159	Knob	13	12	4
93−7161	Spacer − Handle	3	25	2
93−7162	Spacer − Handle	3	26	2
93−7266	Decal − Operation	13	21	1
93−7383	Guide − Rope	13	4	1
94−4331	Carburetor Assembly	6	10	1
94−5731	Short Block Assembly	6	12	1
95−2740	Retainer − Belt	11	20	1
98−2039	Bracket − Traction	11	36	1
252−76	Bearing − Thrust	8	22	1
252−80	Washer − Thrust	8	23	1
302−26	Grease Zerk	11	37	2
321−53	Screw − HH	13	5	1
321−57	Screw − HH	13	20	1
3253−22	Washer − Lock	5	2	1
3253−33	Washer − Lock	13	14	4
3256−24	Washer	12	13	1
3284−5	Pin − Groove	3	15	1
3290−378	Tie − Cable	13	11	2
3290−459	Rivet	7	1	2
3296−5	Nut	12	14	1
3296−29	Nut − Hex Lock	3	37	1
3296−59	Nut−Lock	11	14	2
3296−73	Nut − Lock Insert	13	6	2
32112−1	Nut − Push	3	10	1
32112−13	Nut − Push	11	6	1
32121−114	Pin − Groove	12	8	2
32144−4	Screw − HH Tap	3	3	8
32144−4	Screw − HH Tap	11	21	2
32144−4	Screw − HH Tap	3	34	2
32144−4	Screw−HH Tap	11	12	4
32144−31	Screw	11	7	1
32144−70	Screw − Tap	3	12	1
32144−97	Screw − PPH	3	17	2
32144−102	Screw	4	13	3
32151−93	Ring − Grip	11	3	1

*Not Illustrated