Form No. 3404-676 Rev A

TORO®

Count on it.

Parts Catalog

Rotation Motor Hydraulic Kit

4045 Directional Drill

Model No. 133-6318

Register at www.Toro.com.
Original Instructions (EN)

CE

3404-676 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Manifold Assembly 4
Spike Clipper Manifold Assembly 6
Latch Assembly 8

© 2017—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Manifold Assembly

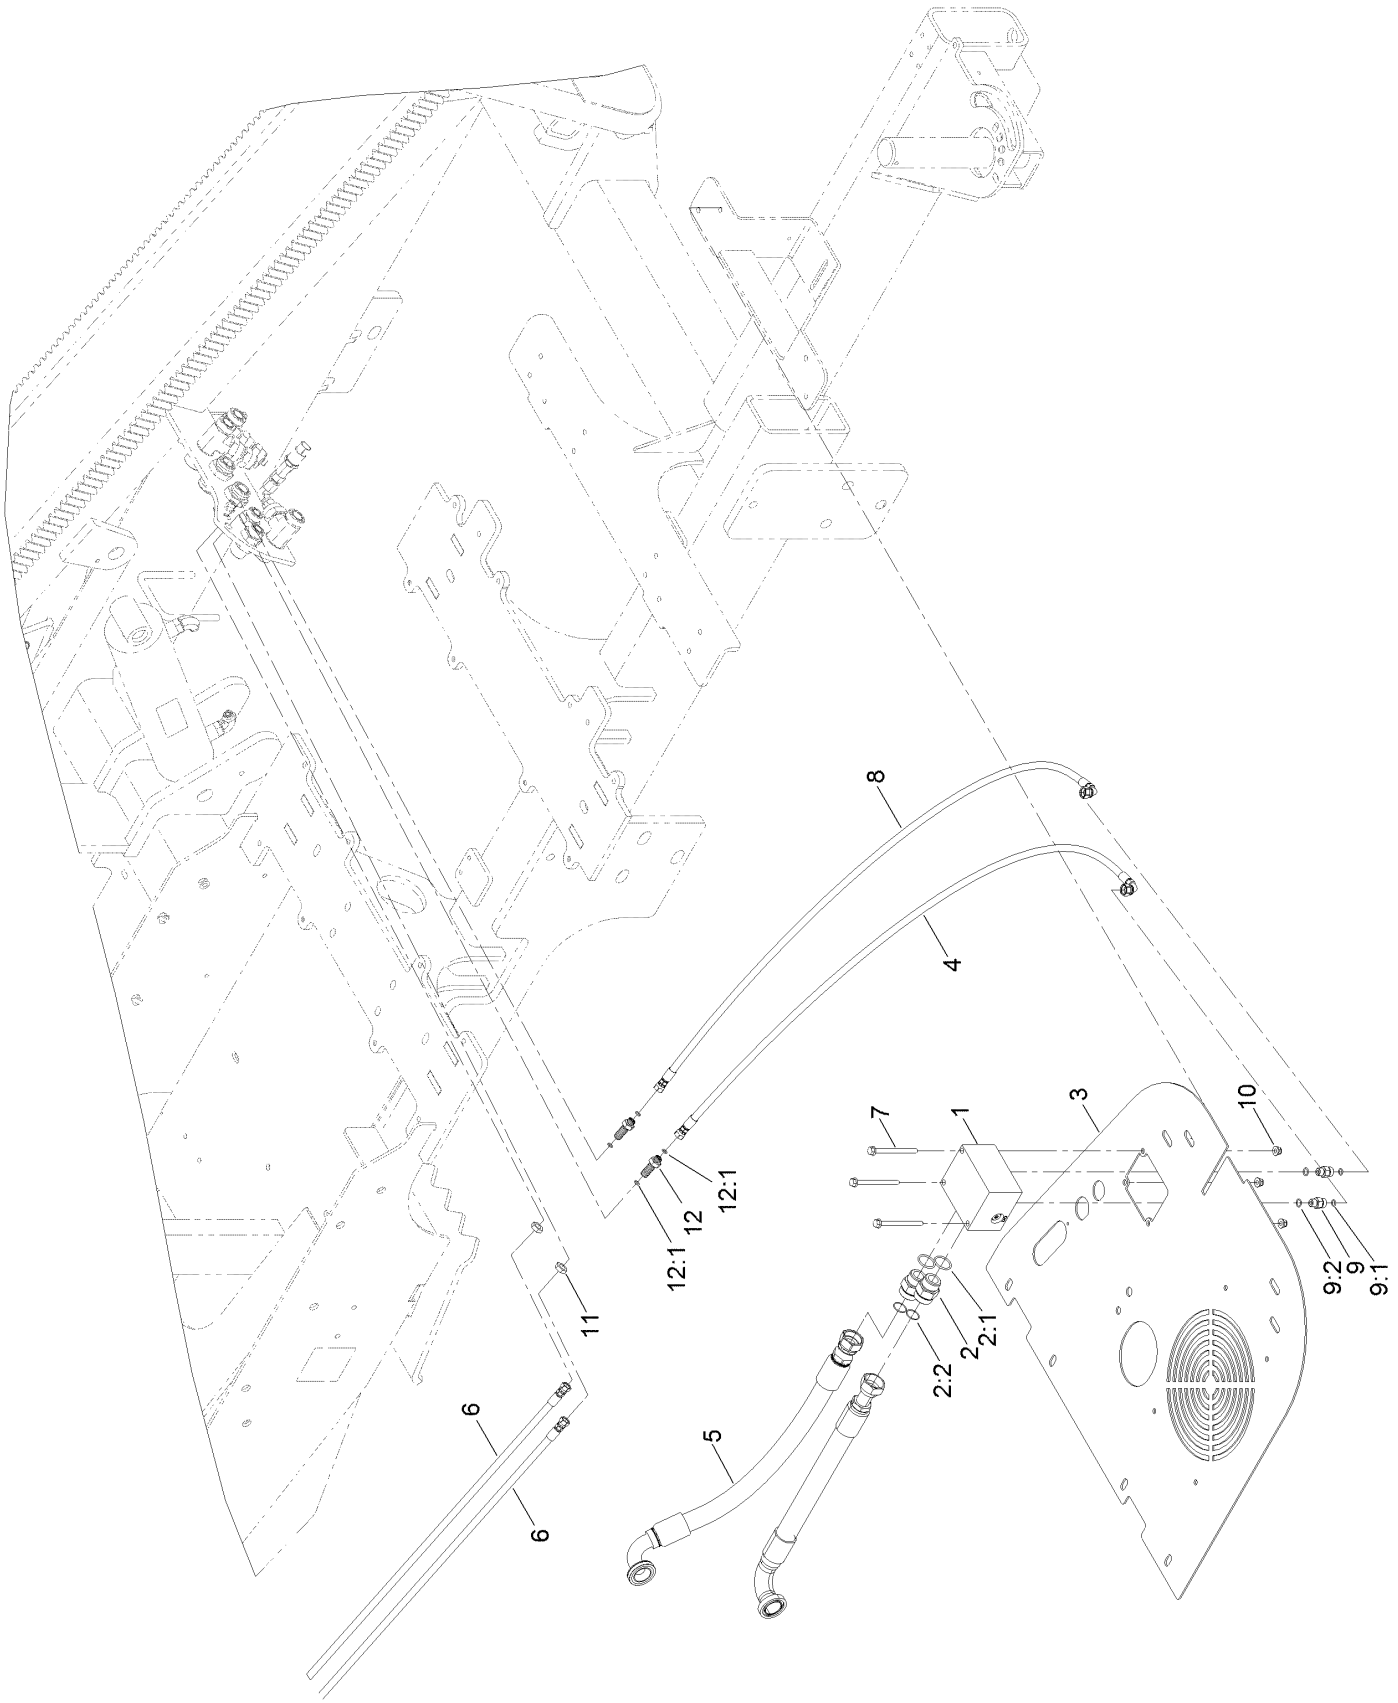

Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	131-9035	1	Manifold-Valve
1:1	136-1592	2	Valve-Poppet ●
1:2	136-1593	2	Seal Kit ●
2	104-3797	2	Fitting-Straight
2:1	237-146	1	O-Ring
2:2	340-65	1	O-Ring
3	131-9037-03	1	Plate-Bulkhead
4	131-9027	1	HYD Hose ASM
5	132-5702	1	HYD Hose ASM
6	133-9569	2	HYD Hose ASM
7	AU100328	3	Screw-HHF
8	133-9590	1	HYD Hose ASM
9	340-2	2	Fitting-Straight
9:1	237-22	1	O-Ring
9:2	237-42	1	O-Ring
10	104-3082	3	Nut-Lock, HHF
11	340-78	2	Nut-Lock
12	94-1444	2	Union-Bulkhead
12:1	237-21	2	O-Ring

● Not illustrated

Spike Clipper Manifold Assembly

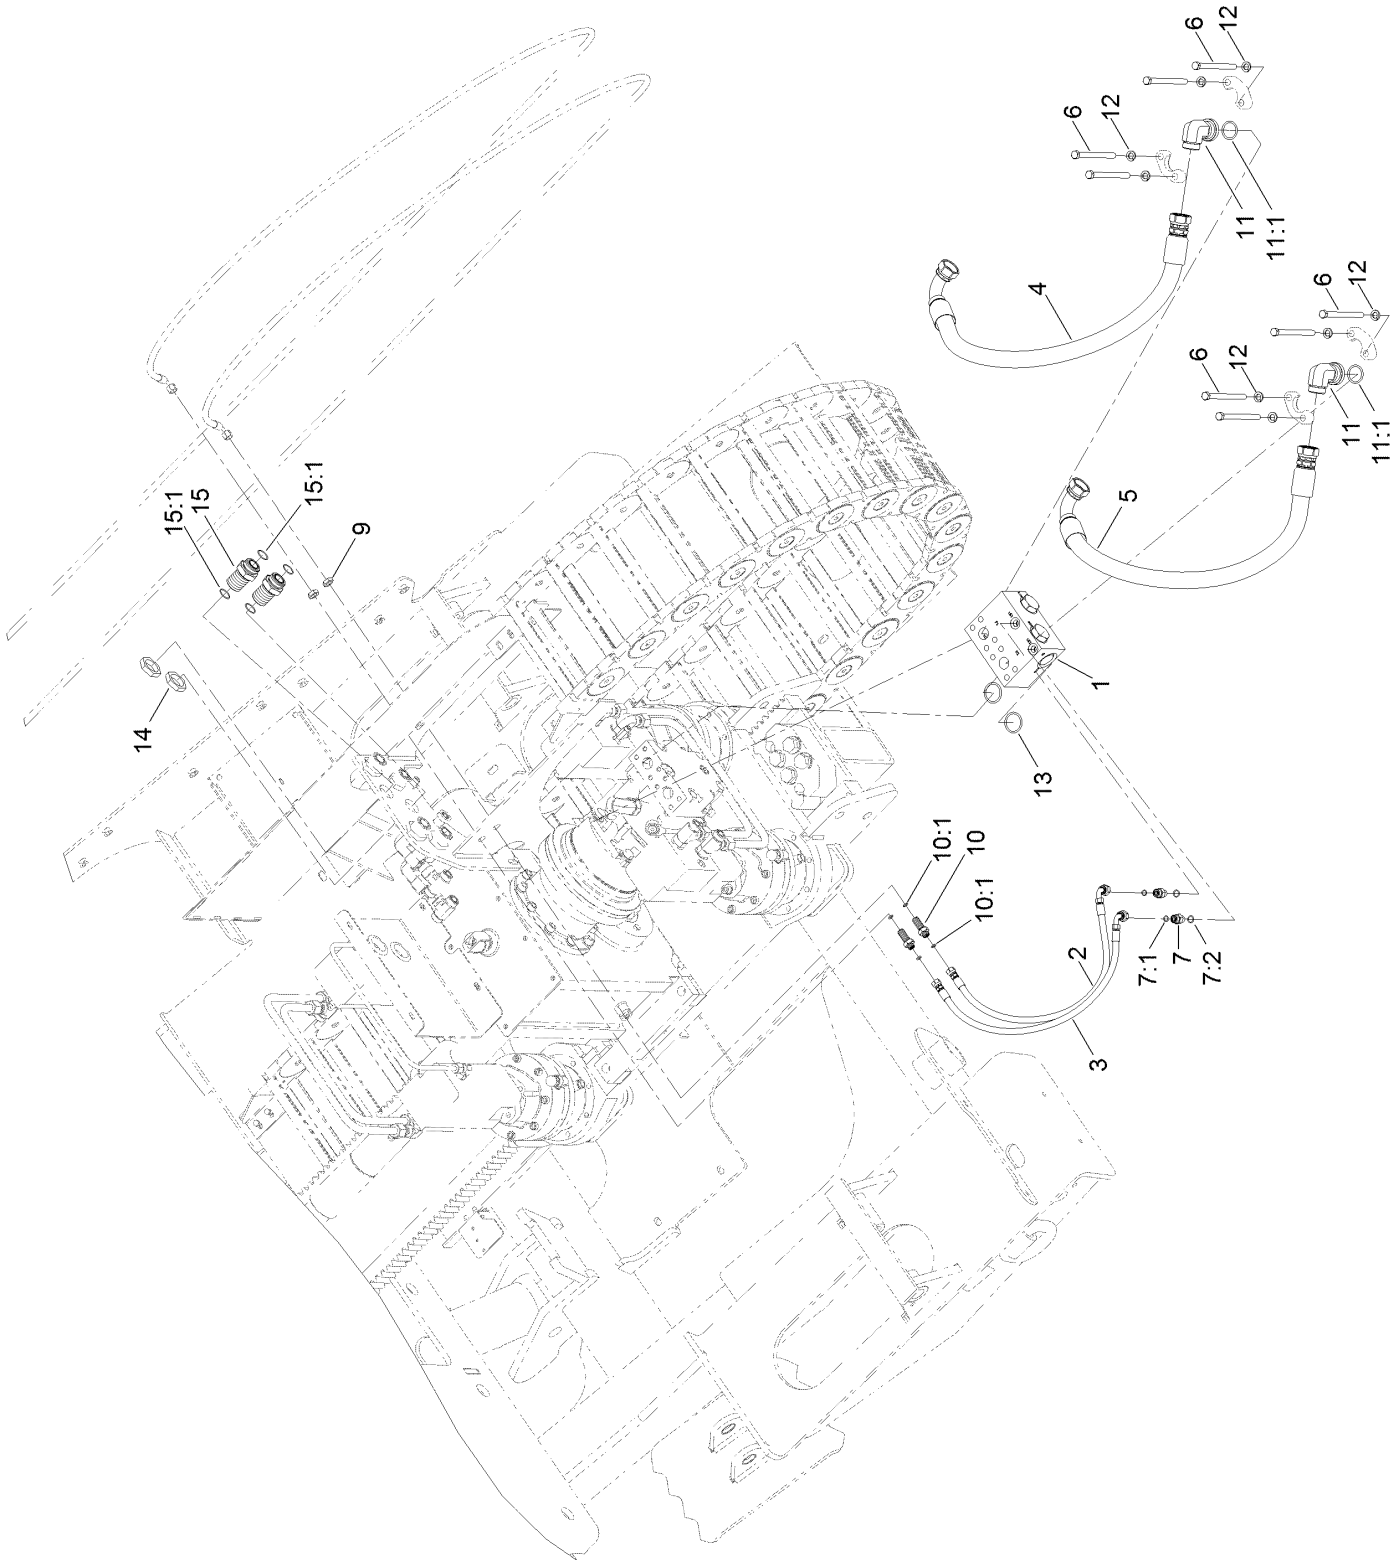

Spike Clipper Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-0886	1	Spike Clipper Manifold ASM
1:1	125-4328	2	Valve-Check ●
1:1:1	125-4336	1	Seal Kit ●
1:1:1:1		1	Hose ASM ■●
1:1:1:2		1	Hose ASM ■●
1:2	136-1596	2	Valve-Logic, Element ●
1:2:1	136-1595	1	Seal Kit ●
2	131-9029	1	HYD Hose
3	131-9030	1	HYD Hose ASM
4	131-9031	1	HYD Hose ASM
5	131-9032	1	HYD Hose ASM
6	133-9625	8	Screw-HH
7	340-2	2	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
9	340-78	2	Nut-Lock
10	94-1444	2	Union-Bulkhead
10:1	237-21	2	O-Ring
11	133-9495	2	Fitting-Elbow, 90 Degree
11:1	340-65	1	O-Ring
12	3253-7	8	Washer-Lock
13	115-5420	2	O-Ring
14	340-128	2	Nut-Bulkhead
15	106-0060	2	Adapter-HYD
15:1	340-65	2	O-Ring

● Not illustrated

■ Not serviced separately

Latch Assembly

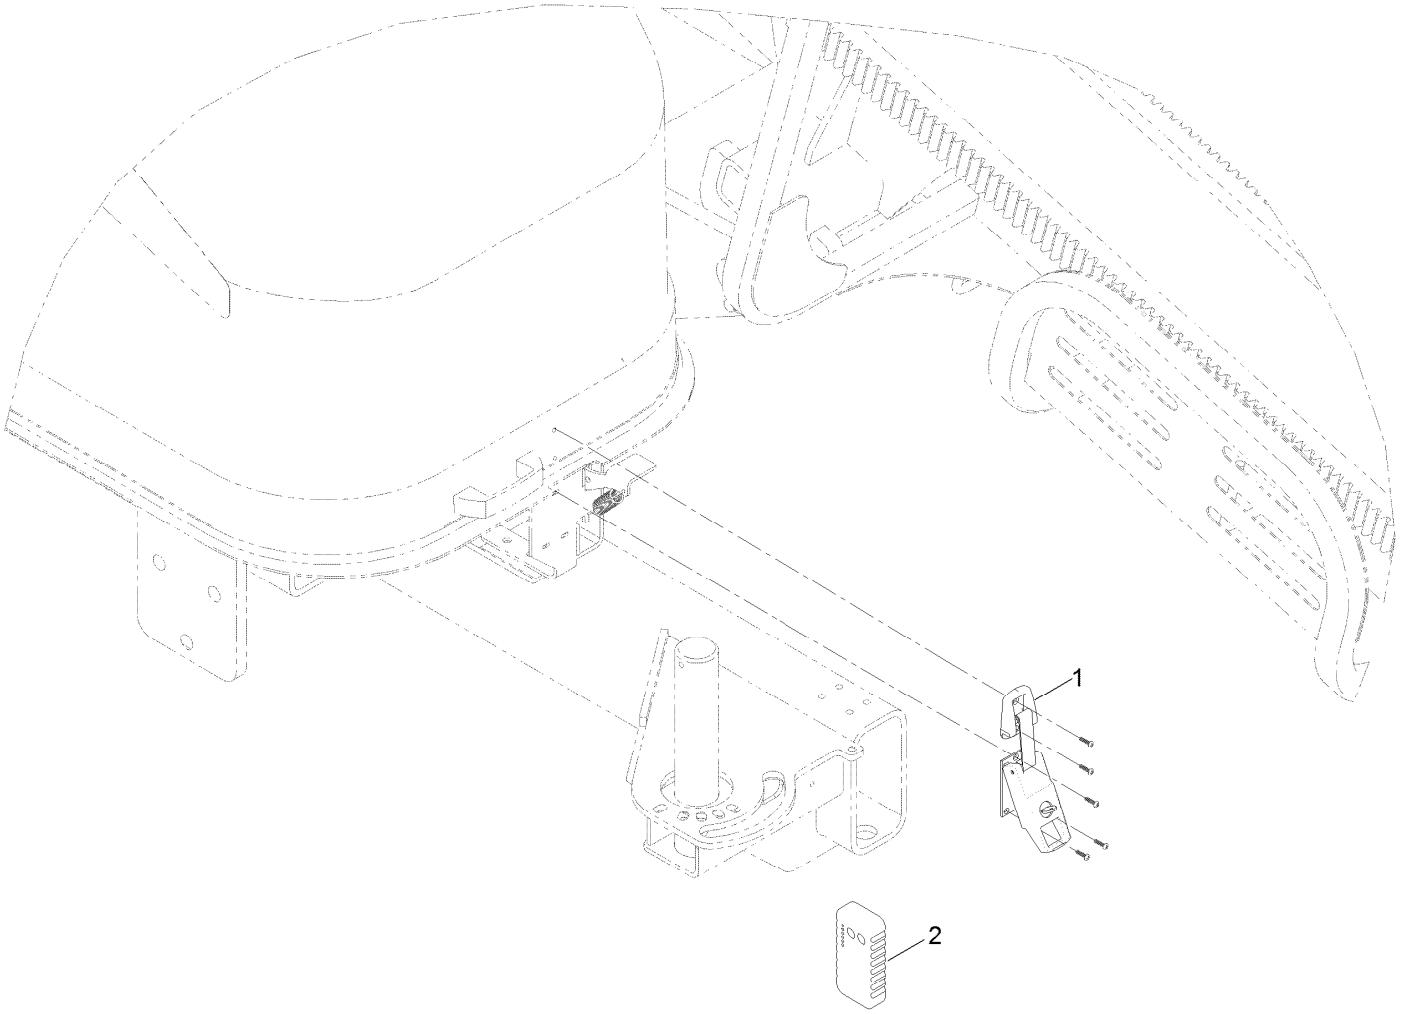

Latch Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	133-9685	1	Latch-Draw, Lockable
2	133-6315	1	Handheld-Range, Long

Notes:

Notes:

Count on it.