FORM NO. 3321−435

TORO®

PART NO. 98−9761

INSTALLATION INSTRUCTIONS

HYDRAULIC HOSE REPLACEMENT KIT

REELMASTER® 5100−5400

⚠ WARNING

Before disconnecting or performing any work on the hydraulic system, all pressure in the system must be relieved by stopping the engine and lowering the cutting units to the ground.

Keep body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid. Use cardboard or paper to find hydraulic leaks. Hydraulic fluid escaping under pressure can penetrate skin and cause injury. Fluid accidentally injected into the skin must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

1. Using diagram below, locate and remove hoses to be replaced.

Note: When removing old hoses, remember how they were routed through components in machine.

2. Replace old hoses with appropriate new hose. Part number of each new hose shown on diagram.

NOTE: Review TORO Hose Servicing Manual, Form 94−813SL for proper routing practices and installation techniques.

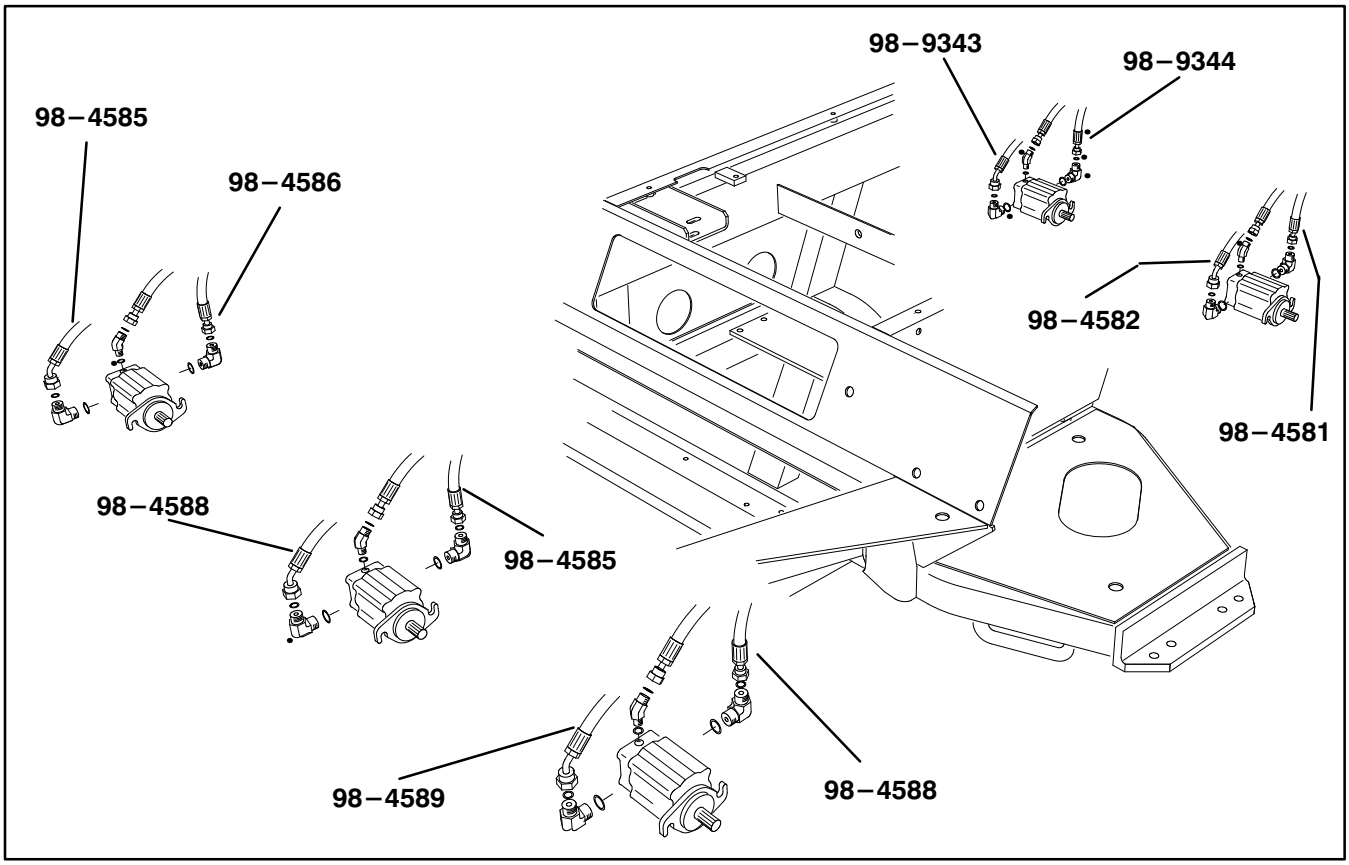

Figure 1

©The Toro Company-1998