Form No. 3404-622 Rev B

TORO®

Count on it.

Parts Catalog

DH 210 Lawn Tractor

Model No. 74585—Serial No. 316000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3404-622 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Engine and Muffler Assembly 4
Front Axle Assembly 6
Steering Assembly 8
Transmission Drive Assembly 10
Control Shaft Assembly Transmission Assembly No. 114-3155 12
Differential Gear Assembly Transmission Assembly No. 114-3155 14
Final Pinion Assembly Transmission Assembly No. 114-3155 16
Axle Shaft Assembly Transmission Assembly No. 114-3155 18
Brake Assembly Transmission Assembly No. 114-3155 20
Fan Pulley Assembly Transmission Assembly No. 114-3155 22
Range Shift Assembly Transmission Assembly No. 114-3155 24
Center Case Assembly Transmission Assembly No. 114-3155 26
Pump Shaft Assembly Transmission Assembly No. 114-3155 28
Motor Shaft Assembly Transmission Assembly No. 114-3155 30
Transaxle Case Assembly Transmission Assembly No. 114-3155 32
Mower Lift Assembly 34
Cutting Drive System Assembly 36
Mower Housing Assembly 38
Travel Pedals and Brake Assembly 40
Battery and Electrical Assembly 42
Body and Hood Assembly 44
Grass Collector Assembly No. 125-2325 46
Tunnel and Collector Plate Assembly 48
Decal Assembly 50
Frame Assembly 52
Attachments and Accessories 54

© 2017—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Engine and Muffler Assembly

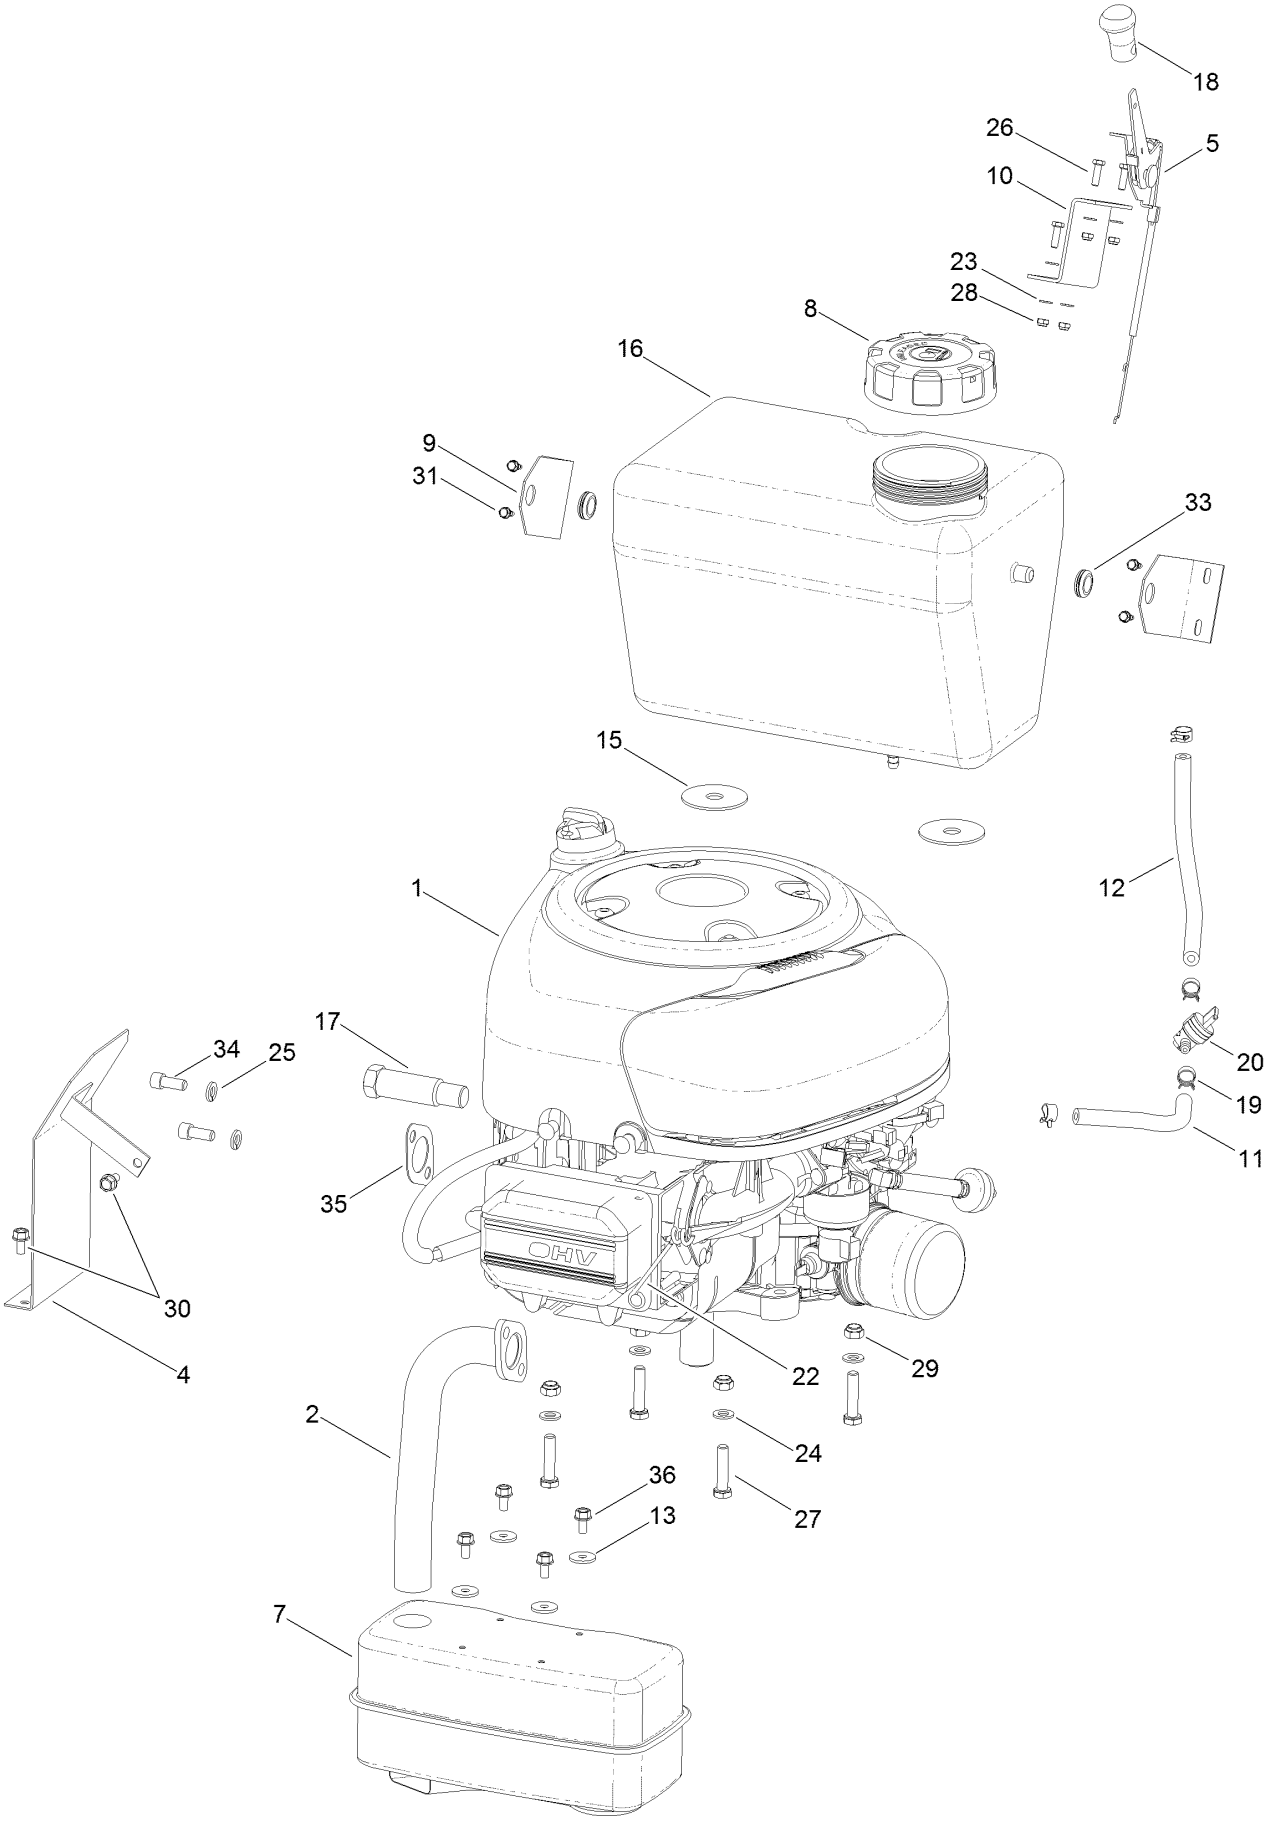


Engine and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 31G777-4130-B1 ●■
2	125-2208	1	Tube-Exhaust
4	125-2207	1	Cover-Exhaust
5	119-5453	1	Cable-Throttle/Choke
7	104-3225	1	Muffler
8	119-5354	1	Cap-Fuel
9	125-2202	2	Bracket-Fuel, Tank
10	125-2206	1	Holder
11	125-2204	1	Line-Fuel
12	125-2203	1	Line-Fuel
13	111-7601	4	Washer-Flat
15	119-5500	2	Washer-Rubber
16	119-5358	1	Tank-Fuel
17	120-8755	1	Coupler-Drain, Oil
18	119-5448	1	Knob-Throttle/Choke
19	104-3212	4	Clamp-Line, Fuel
20	104-3224	1	Valve-Tank, Fuel
22	104-3156	1	Holder-Harness, Wiring
23	52-6430	6	Washer
24	106-4756	4	Washer-Plain
25	104-2927	2	Washer-Spring
26	107-8918	4	Screw
27	33114-035	4	Screw-HH
28	87-5140	4	Nut-Lock
29	33024-00	4	Nut-Lock, NI
30	110-7170	3	Screw-HH
31	104-2977	4	Screw-TAP
33	119-5364	2	Bushing
34	322-3	2	Screw-HH
35	119-5362	1	Gasket
36	111-7602	4	Screw-Hhtf

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


Front Axle Assembly

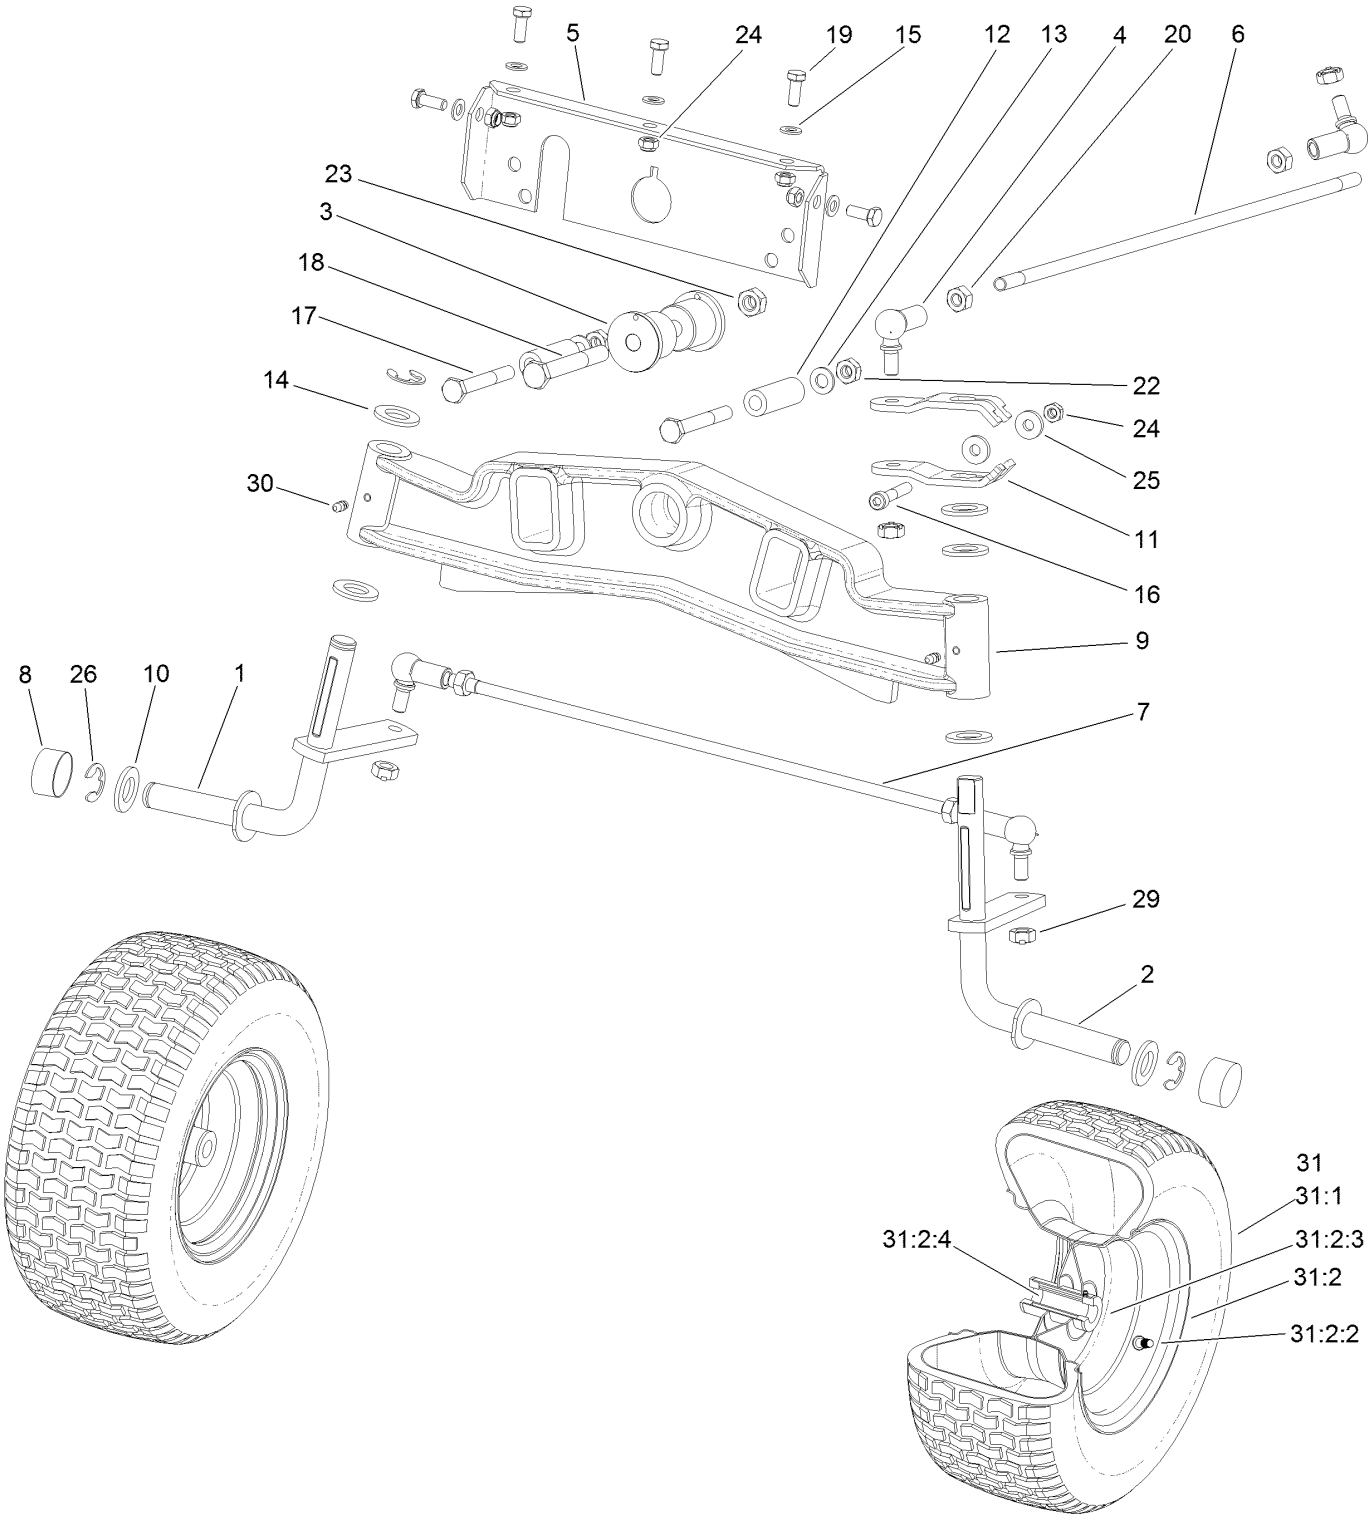

Front Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	110-9084	1	Spindle-Front, RH
2	120-8705	1	Spindle-Front, LH
3	104-2890	2	Bushing-Axle, Front
4	104-2876	4	Joint-Ball, Angle
5	125-2219	1	Plate-Axle
6	125-2223	1	Link-Drag
7	125-2222	1	Rod-Tie, Front Axle
8	104-2857	2	Cap-Hub
9	104-2852	1	Axle-Front
10	120-8739	2	Washer
11	120-8713	2	Lever-Spindle, Steering
12	104-2851	2	Spacer
13	33095-00	2	Washer-Flat
14	104-2905	5	Washer-Flat
15	106-4756	5	Washer-Plain
16	120-8774	1	Screw
17	33115-080	2	Screw-HH
18	33116-090	1	Screw-HH
19	33114-020	5	Screw-HH
20	33015-00	4	Nut-Hex
22	33025-00	2	Nut-Lock, NI
23	48-9540	1	Nut-Lock, Hex NI
24	33024-00	6	Nut-Lock, NI
25	106-8588	2	Washer-Flat
26	104-2891	3	Clip-Spring
29	106-4668	4	Nut-Lock
30	104-2904	3	Fitting-Grease
31	114-3240	2	Wheel ASM
31:1	99-2336	1	Tire
31:2	110-9086	1	Wheel ASM
31:2:2	106-8596	1	Valve-Tire
31:2:3	110513	2	Bearing-Wheel
31:2:4	127-6232	1	Spacer-Wheel


Steering Assembly

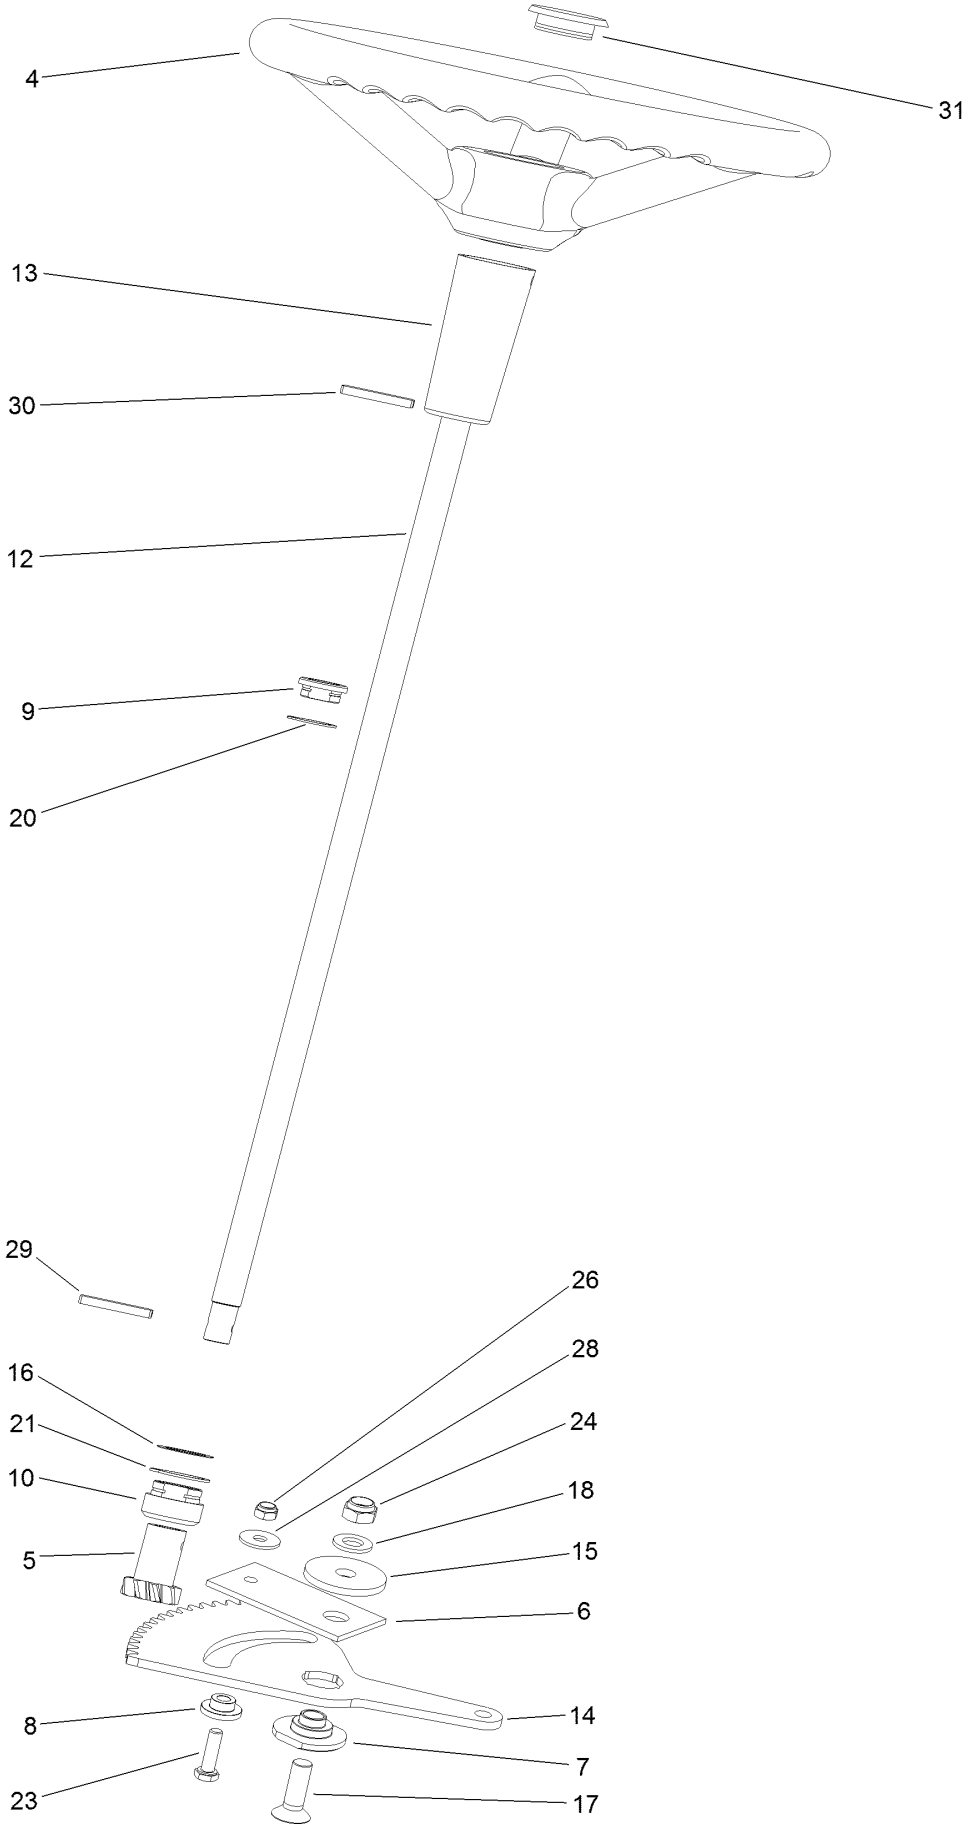

Steering Assembly (continued)

Ref.	Part Number	Qty.	Description
4	125-2237	1	Wheel-Steering
5	125-2231	1	Pinion-Steering
6	125-2225	1	Plate-Steering
7	125-2230	1	Pivot-Steering
8	125-2226	1	Bushing-Sector
9	125-2224	2	Bearing
10	125-2227	1	Bushing-Pinion
12	125-2228	1	Shaft-Steering
13	125-2238	1	Cover
14	119-5374	1	Gear-Sector
15	108-8892	1	Washer
16	125-2235	1	Washer
17	125-2232	1	Screw
18	104-3124	1	Washer-Flat
20	125-2236	1	Ring-Locking
21	125-2234	1	Ring-Locking
23	33114-030	1	Screw-HH
24	33016-00	1	Nut-Hex
26	33024-00	1	Nut-Lock, NI
28	104-2946	1	Washer-Plain
29	125-2233	1	Pin-Spiral
30	119-5377	1	Pin-Spirol
31	111-8266	1	Cap-Wheel, Steering

Transmission Drive Assembly

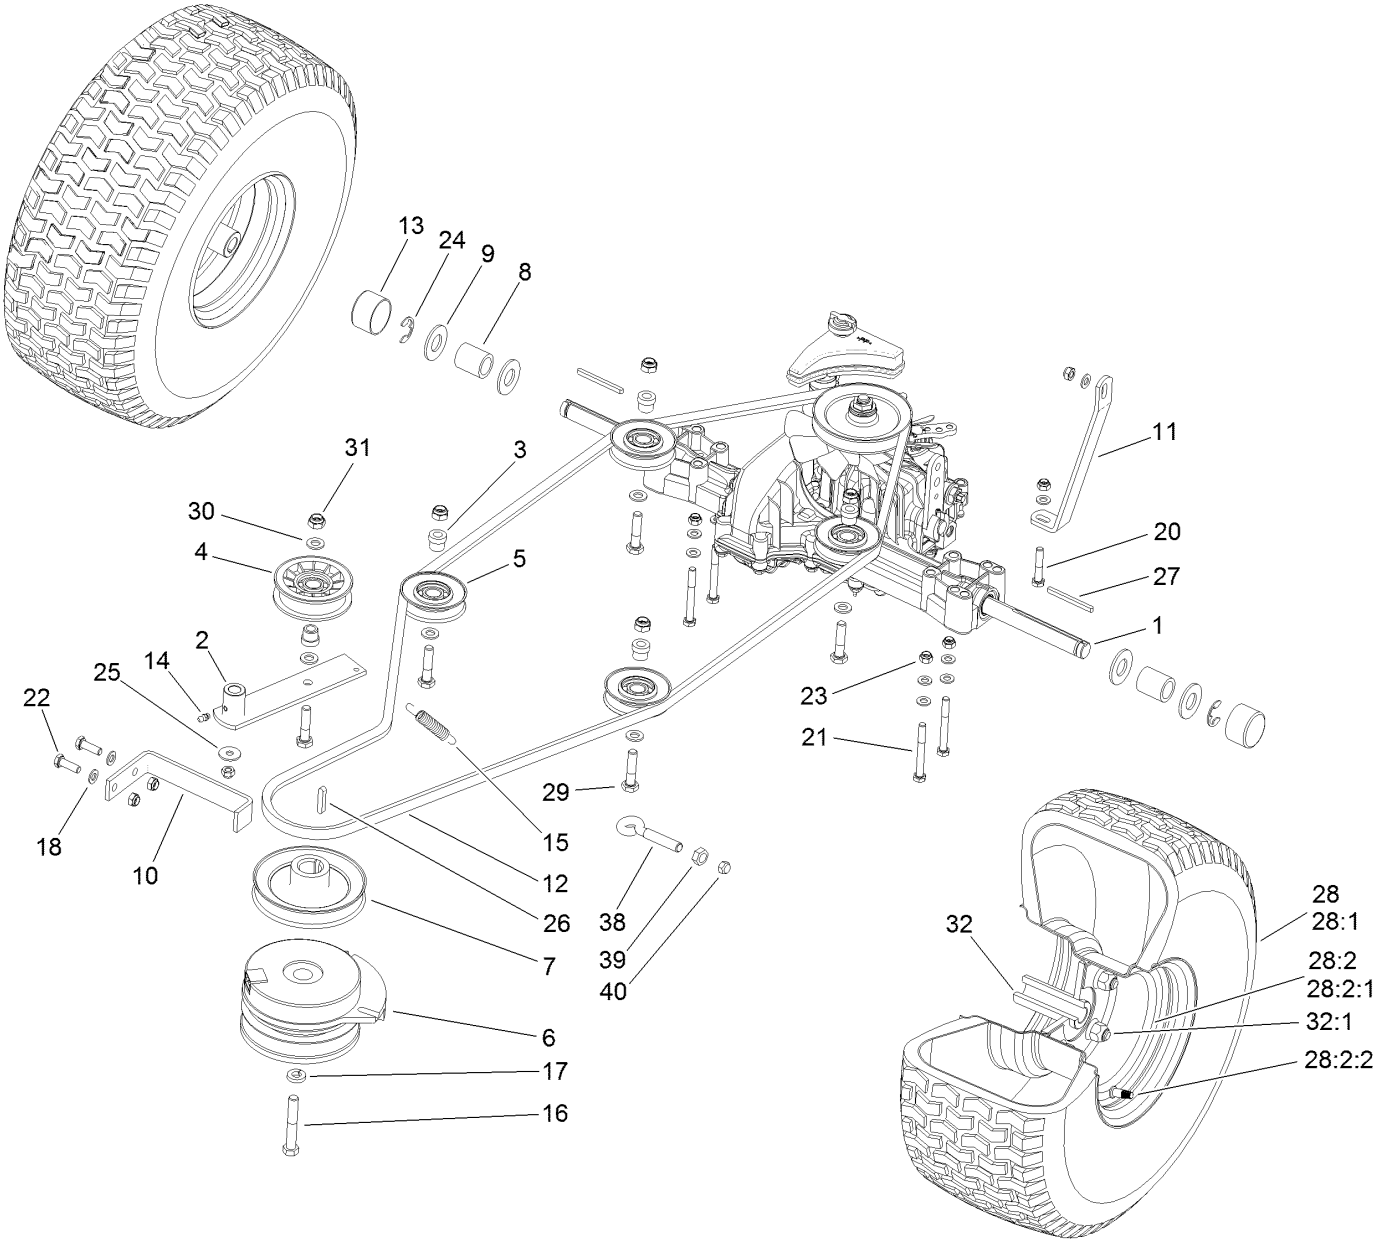


Transmission Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-3155	1	Transmission
2	125-2239	1	Arm-Idler
3	104-2896	5	Bushing-Idler
4	104-2913	1	Pulley-Idler
5	104-2887	4	Pulley-Idler
6	119-5501	1	Clutch-Electric
7	104-2911	1	Pulley-Engine
8	104-2895	2	Spacer-Axle
9	120-8739	4	Washer
10	125-2240	1	Retainer
11	125-2241	1	Stabilizer
12	111-9294	1	Belt-Transmission, Heavy Duty
13	104-2857	2	Cap-Hub
14	104-2904	1	Fitting-Grease
15	104-2897	1	Spring
16	3212-10	1	Screw-HH
17	93-9043	1	Washer-Spring, Belleville
18	106-4756	12	Washer-Plain
20	33114-040	1	Screw-HH
21	125-2242	4	Screw
22	33114-025	2	Screw-HH
23	33024-00	9	Nut-Lock, NI
24	104-2891	2	Clip-Spring
25	104-2946	1	Washer-Plain
26	104-2899	1	Key-Square
27	104-2892	2	Key-Square
28	107-8929	2	Tire And Wheel ASM
28:1	99-2994	1	Tire
28:2	107-8932	1	Wheel ASM
28:2:1		1	Rim ●
28:2:2	106-8596	1	Valve-Tire
29	33115-040	5	Screw-HH
30	33095-00	6	Washer-Flat
31	33025-00	5	Nut-Lock, NI
32	108-8718	2	Hub-Wheel
32:1	108-8717	4	Nut-Lug
38	111-9501	1	Screw-Eyelet
39	104-2991	1	Nut-Hex
40	33023-00	1	Nut-Lock

● Not serviced separately


Control Shaft Assembly
Transmission Assembly No. 114-3155

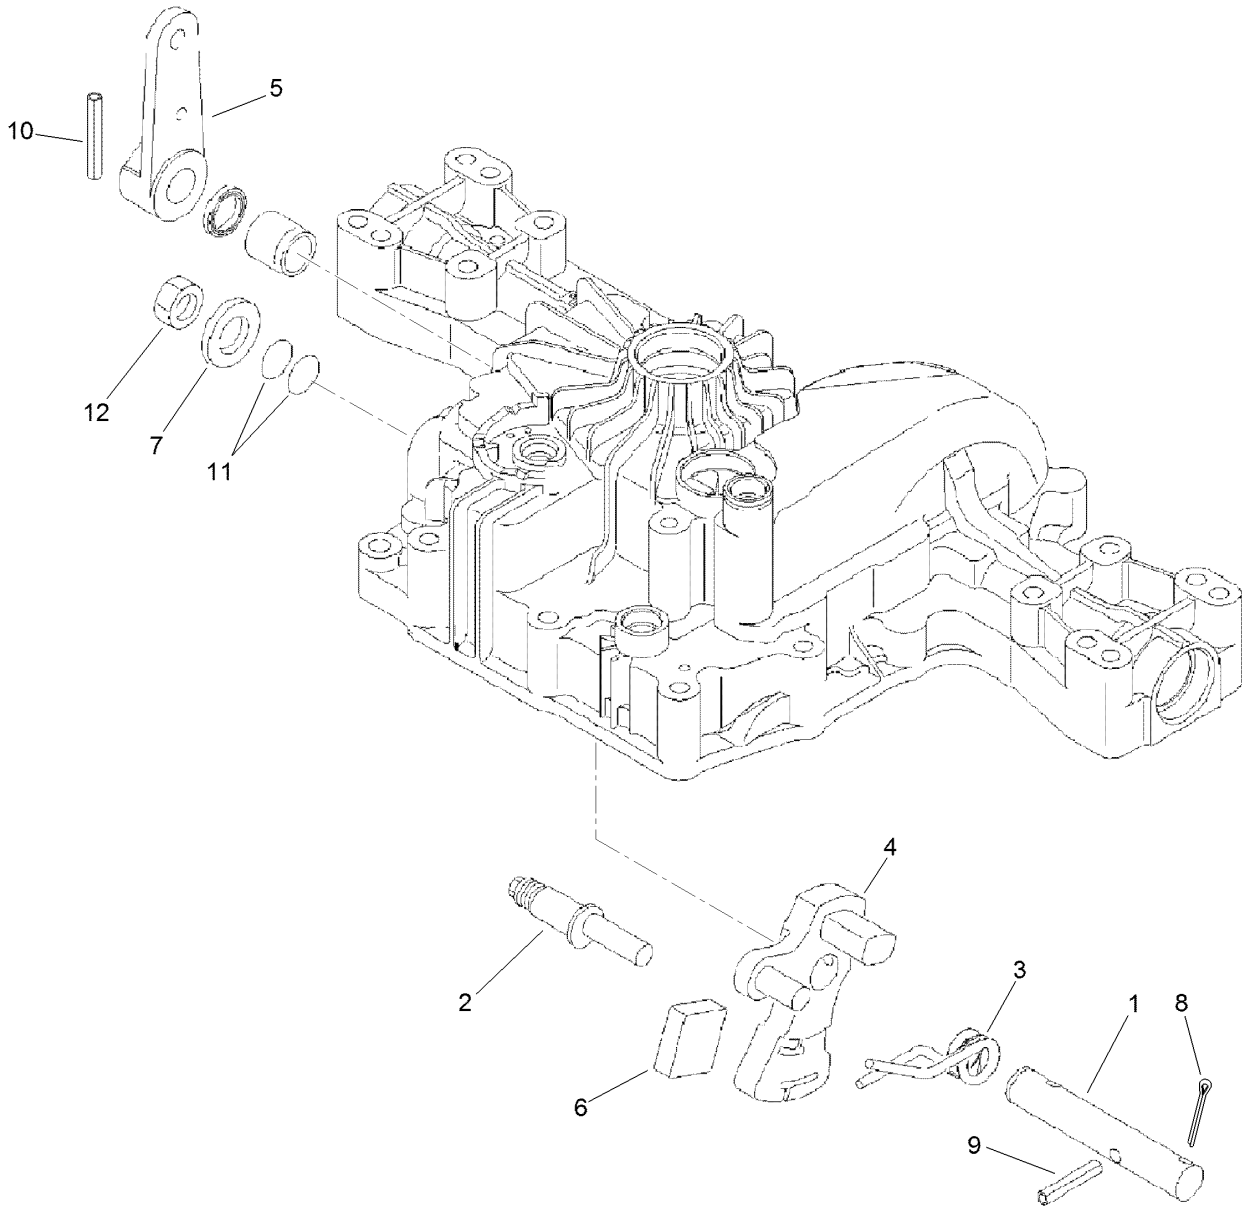

Control Shaft Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	114-3217	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut


Differential Gear Assembly
Transmission Assembly No. 114-3155

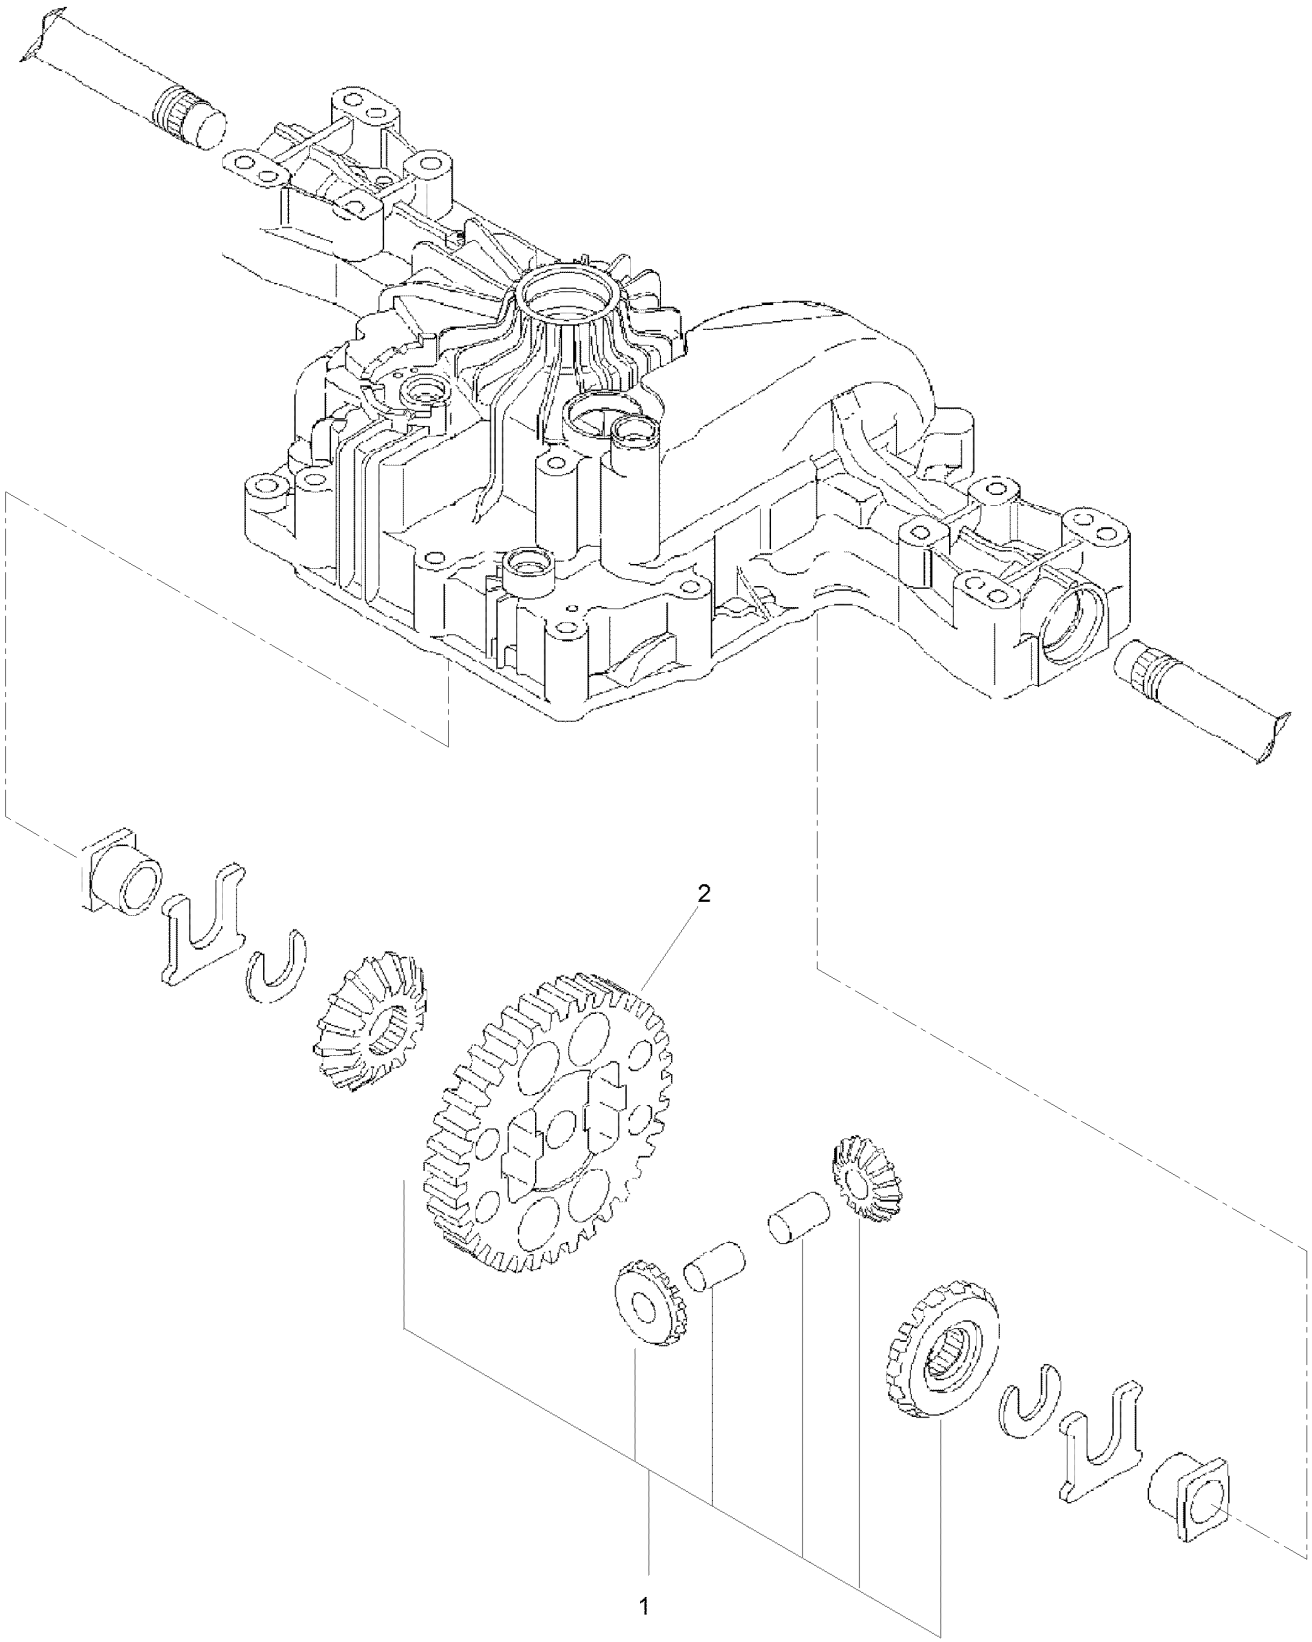

Differential Gear Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final


Final Pinion Assembly
Transmission Assembly No. 114-3155

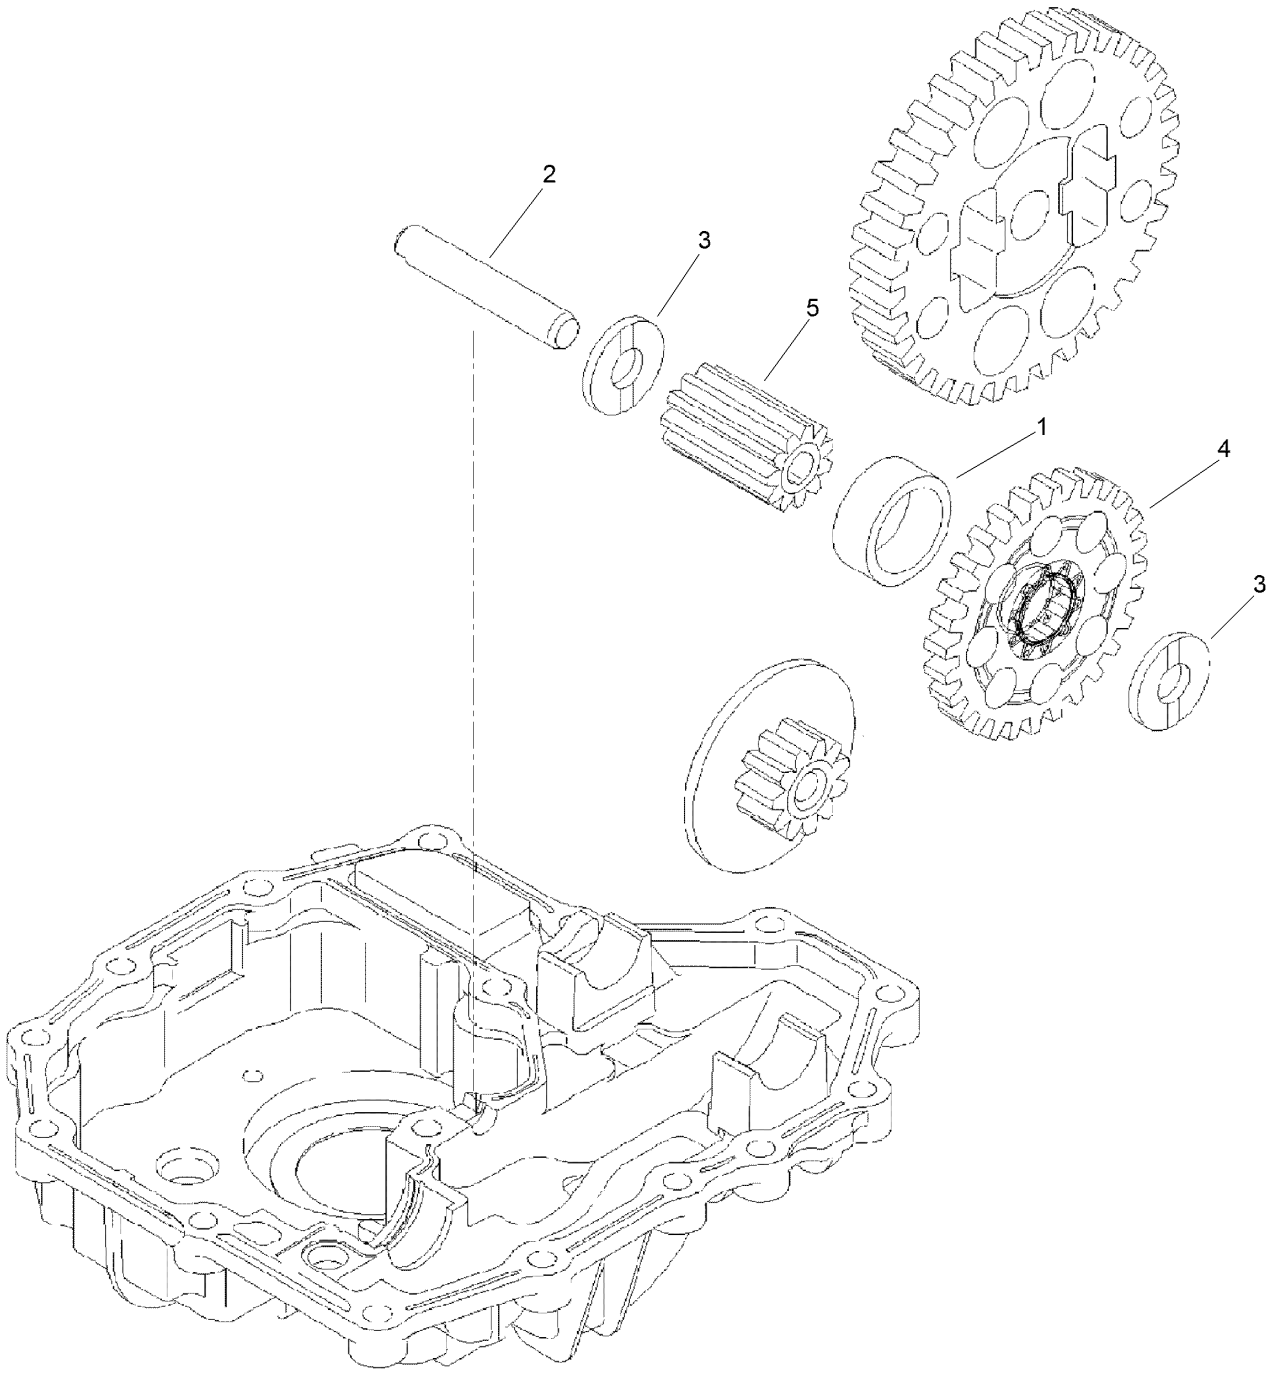

Final Pinion Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3302	1	Collar-Pinion, Final
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final


Axle Shaft Assembly
Transmission Assembly No. 114-3155

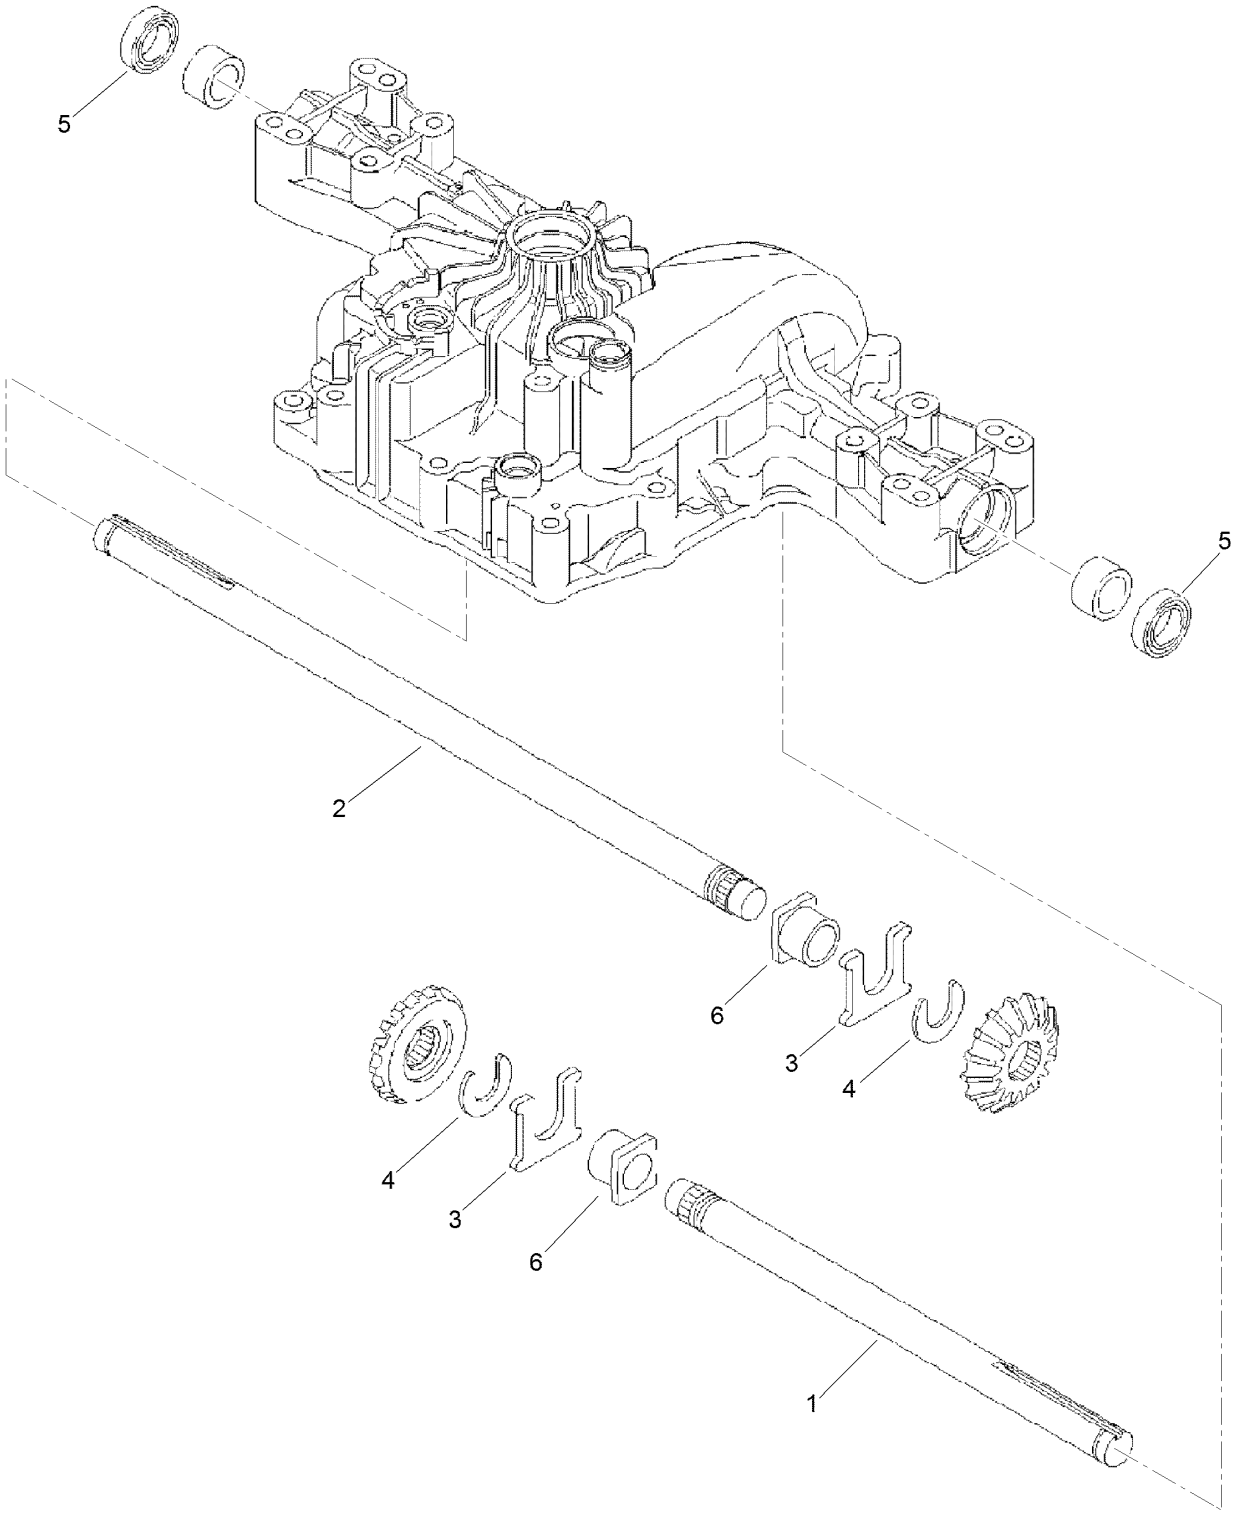

Axle Shaft Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3307	1	Shaft-Axle, RH
2	104-3308	1	Shaft-Axle, LH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing


Brake Assembly
Transmission Assembly No. 114-3155

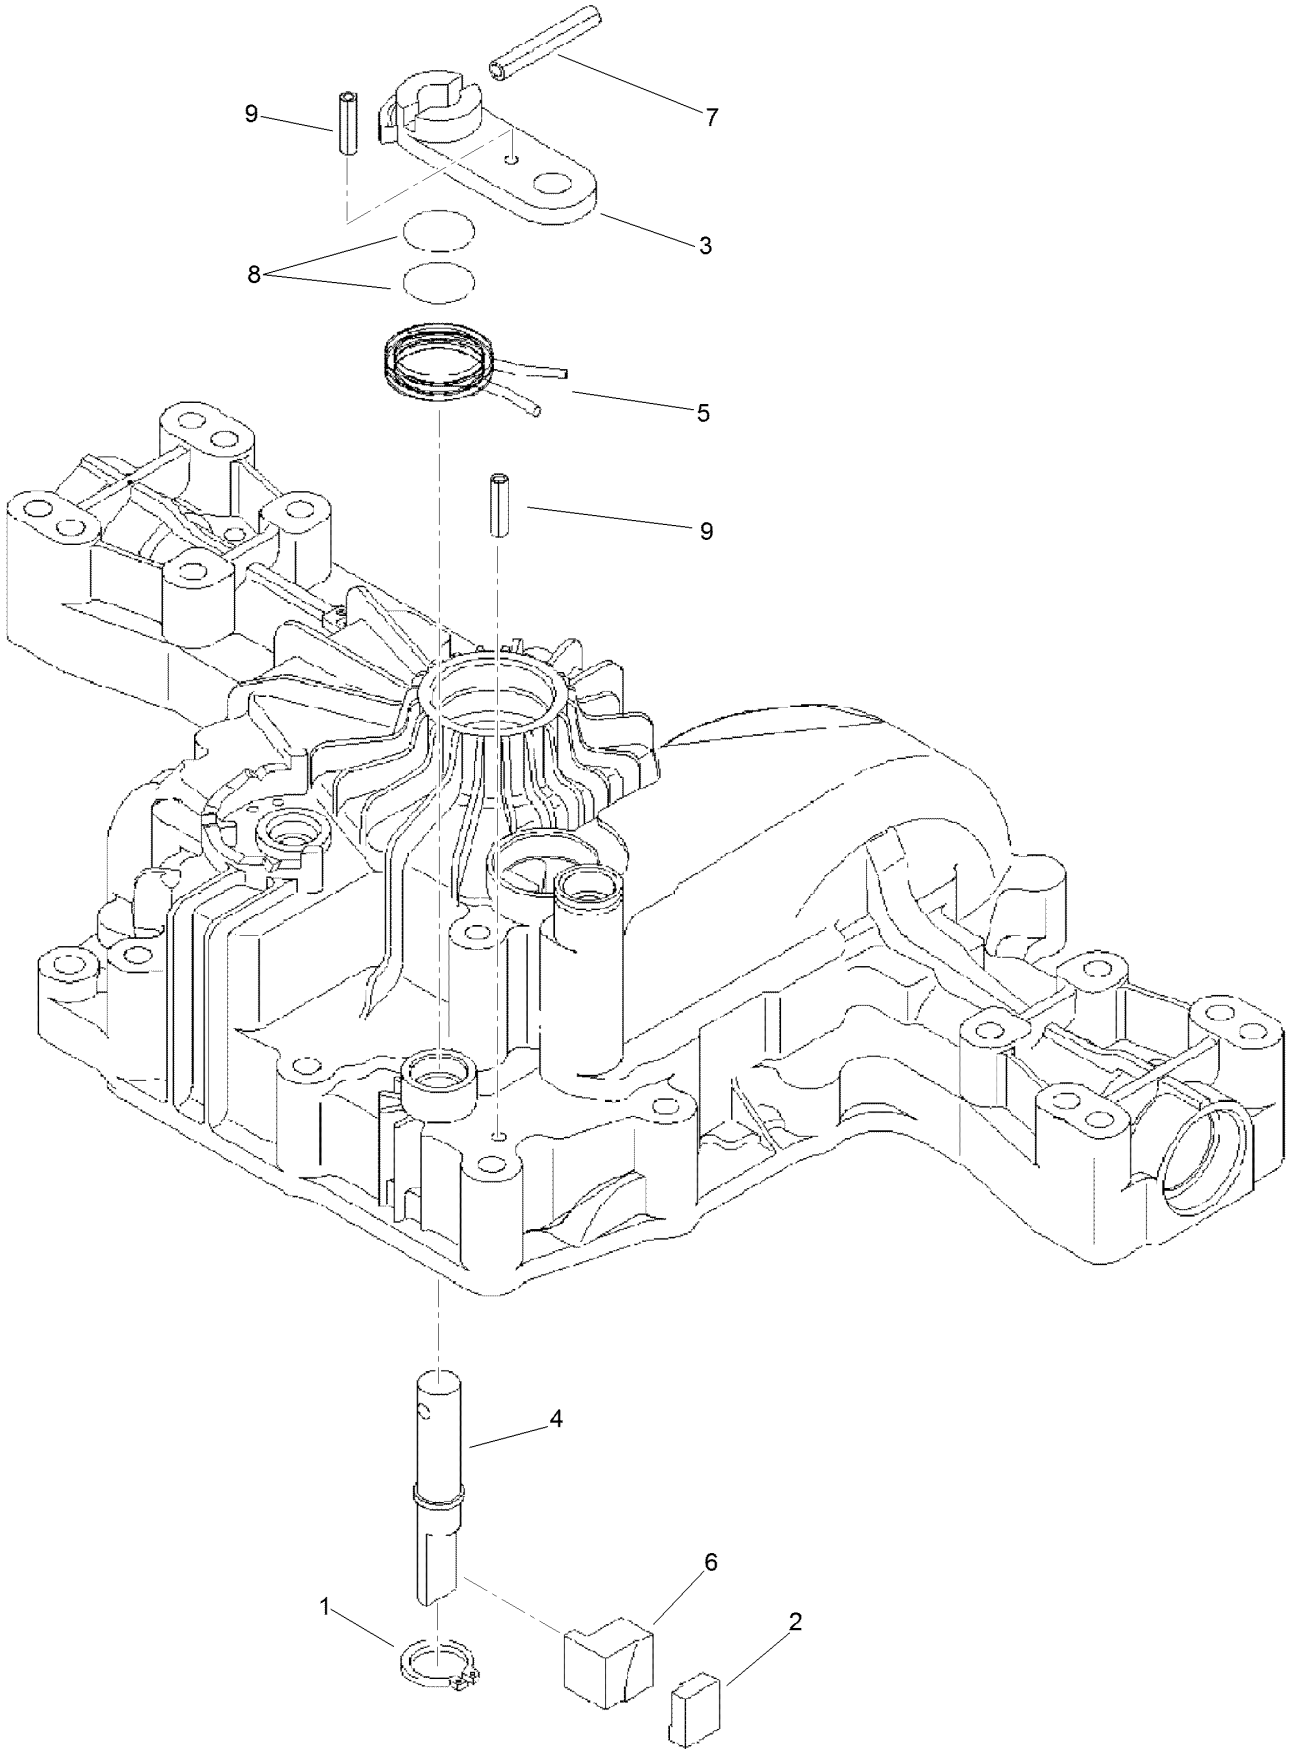

Brake Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	93-0418	2	O-Ring
9	104-3319	2	Pin


Fan Pulley Assembly
Transmission Assembly No. 114-3155

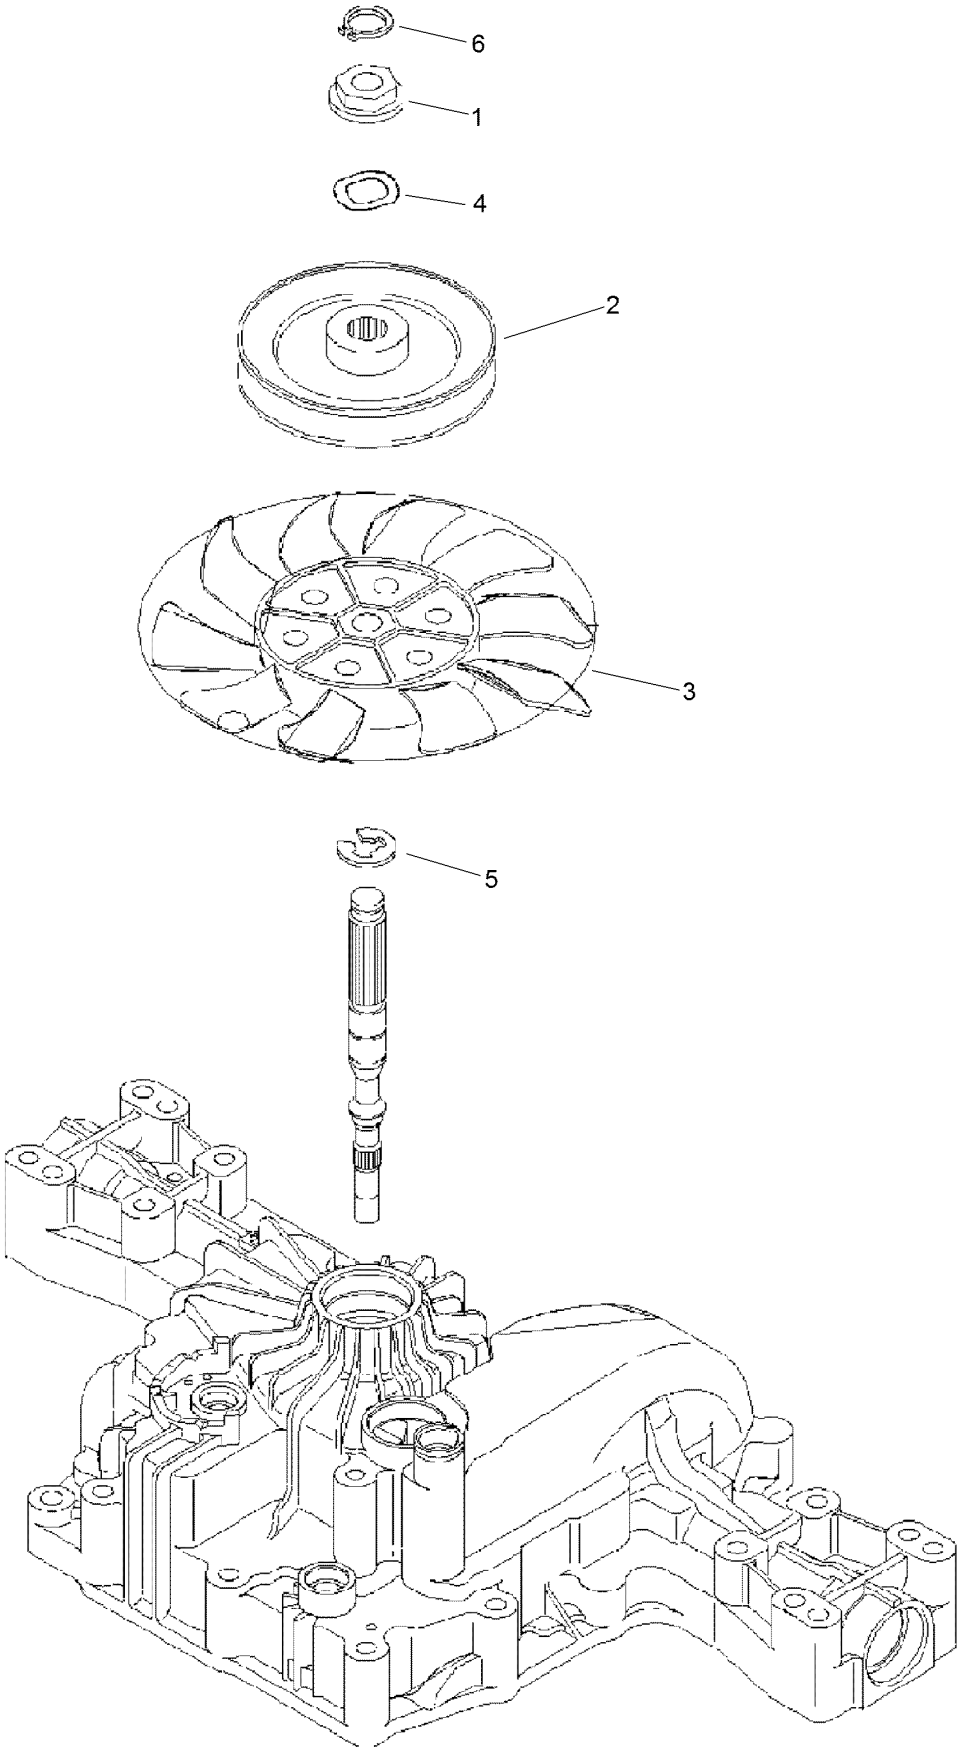

Fan Pulley Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan-Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring


Range Shift Assembly
Transmission Assembly No. 114-3155

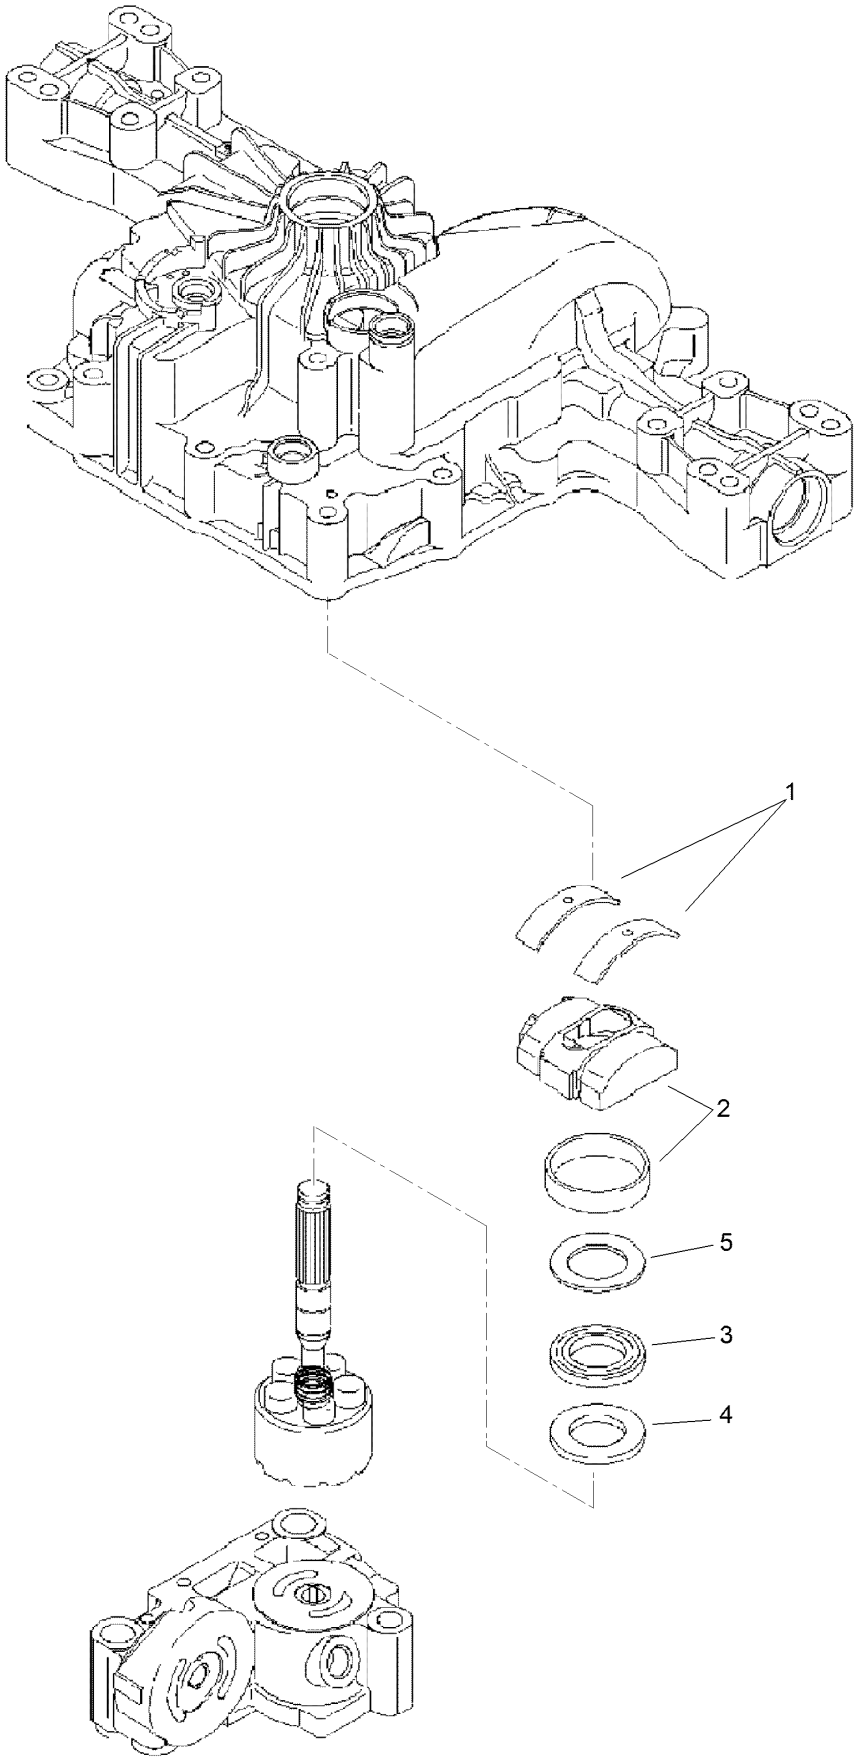

Range Shift Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B


Center Case Assembly
Transmission Assembly No. 114-3155

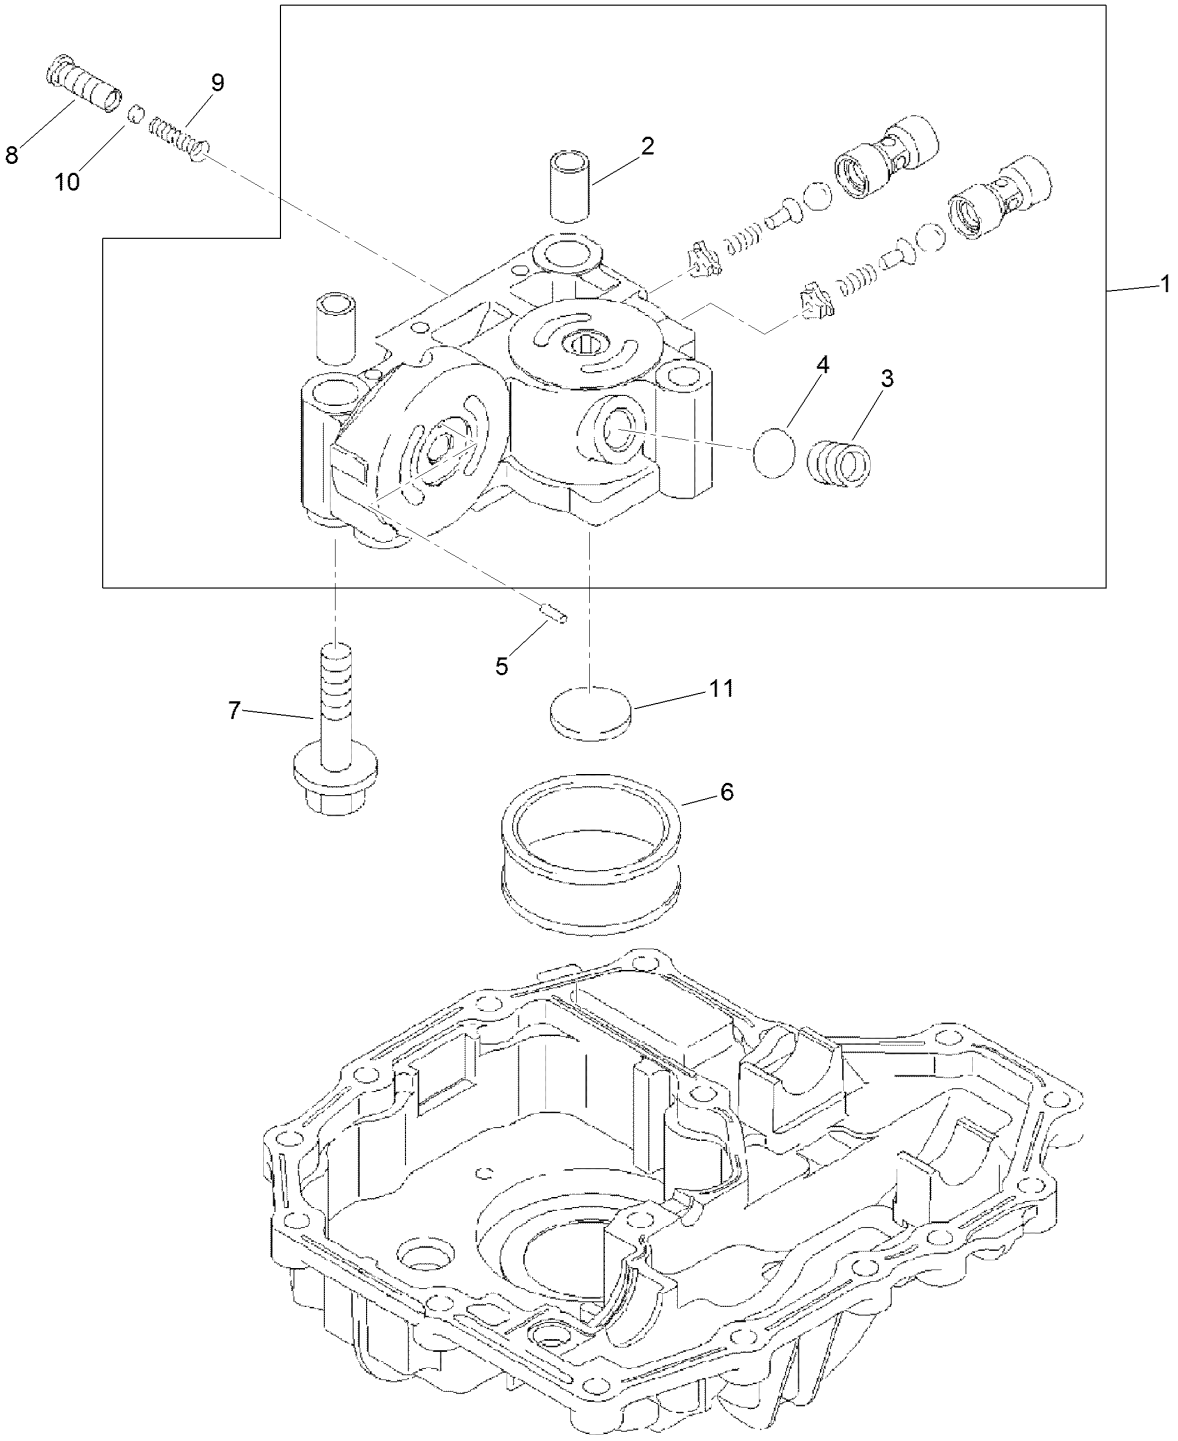

Center Case Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet


Pump Shaft Assembly
Transmission Assembly No. 114-3155

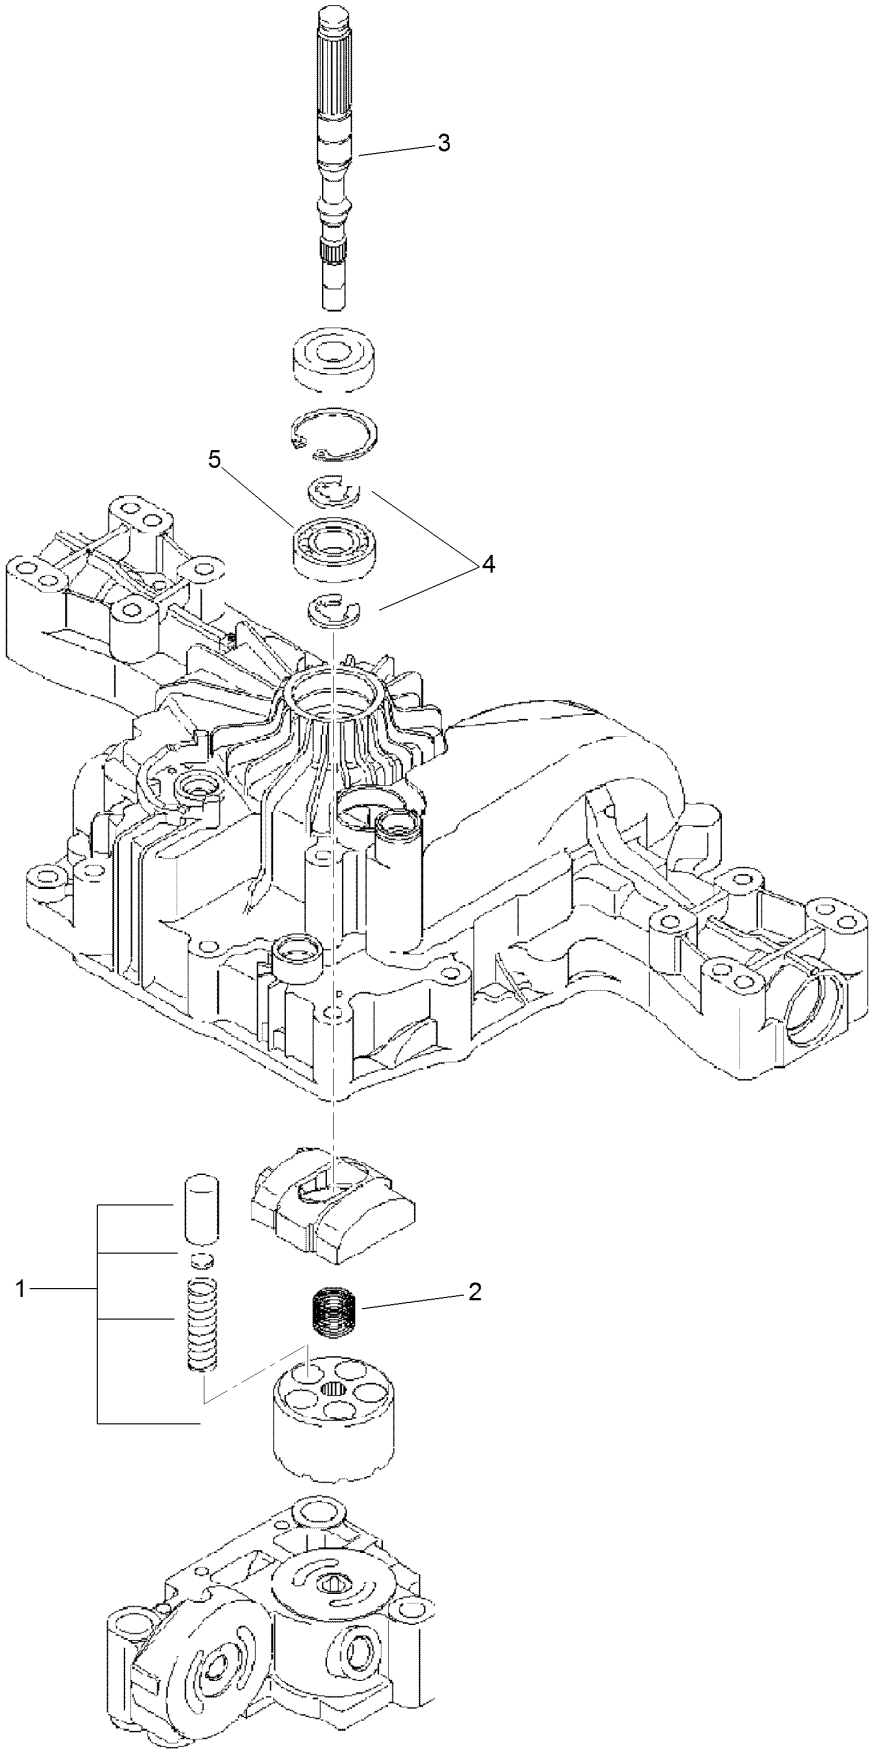

Pump Shaft Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball


Motor Shaft Assembly
Transmission Assembly No. 114-3155

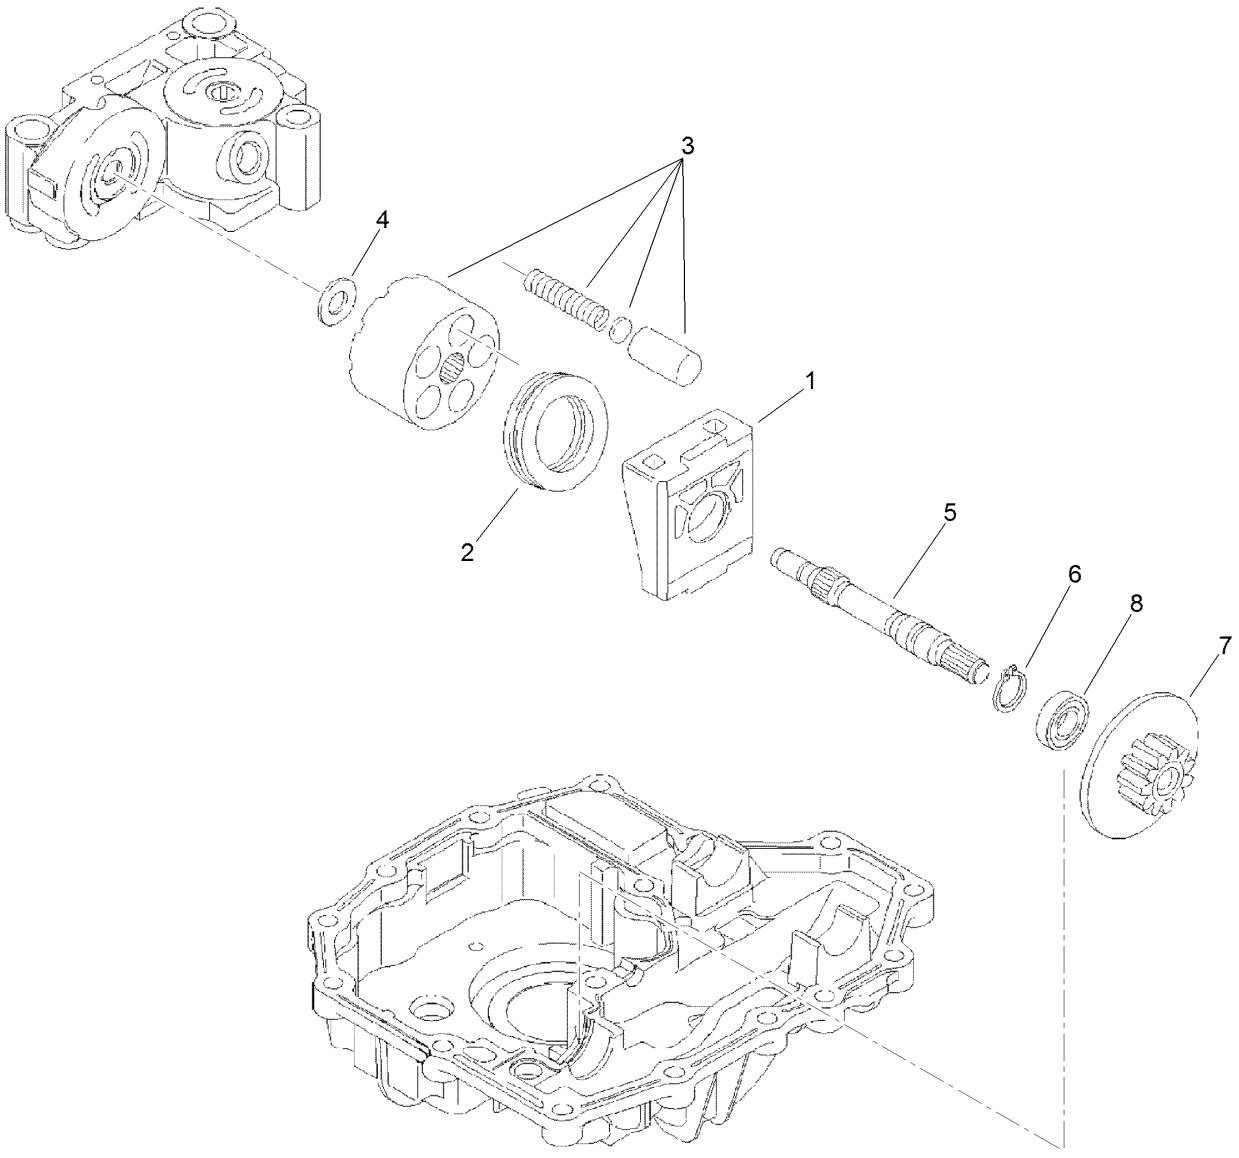

Motor Shaft Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing


Transaxle Case Assembly
Transmission Assembly No. 114-3155

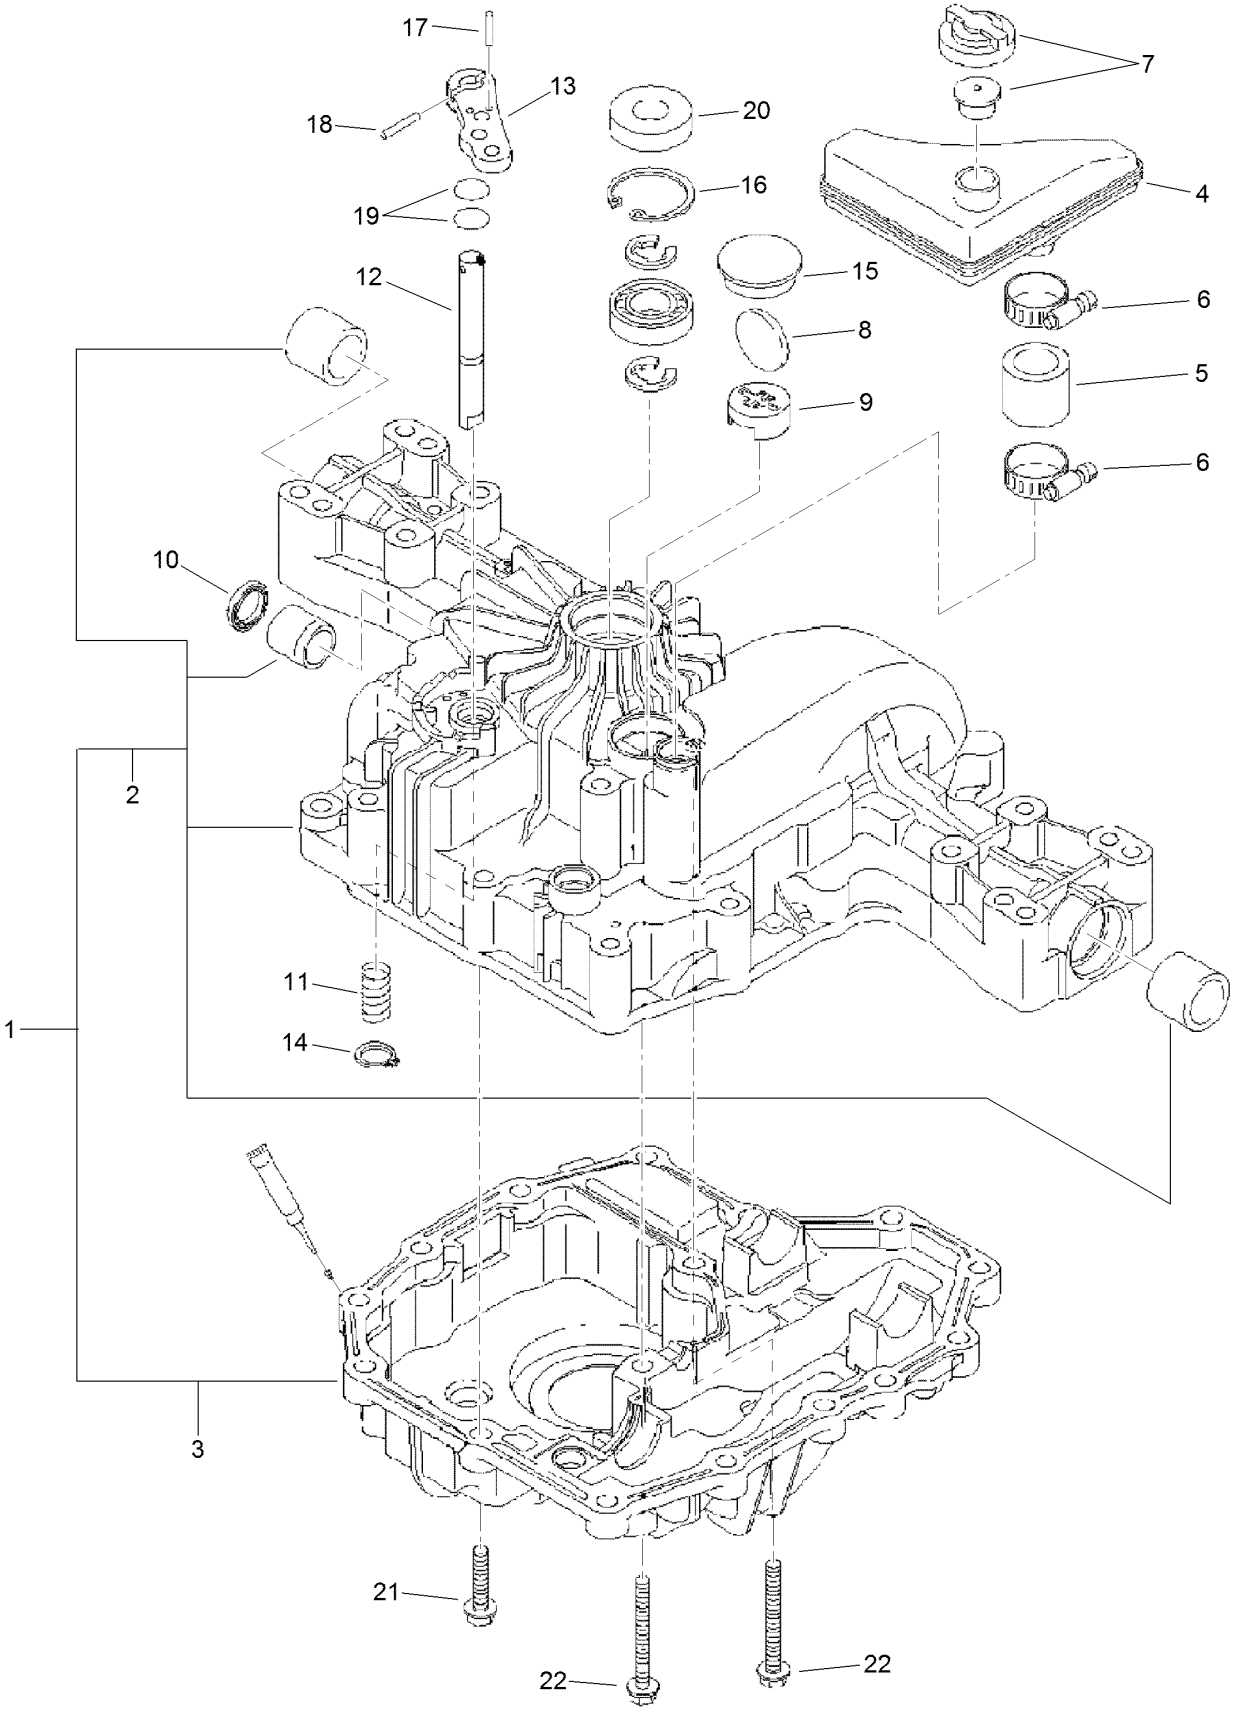

Transaxle Case Assembly
Transmission Assembly No. 114-3155 (continued)

Ref.	Part Number	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Reservoir Tank ASM With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-Tap


Mower Lift Assembly

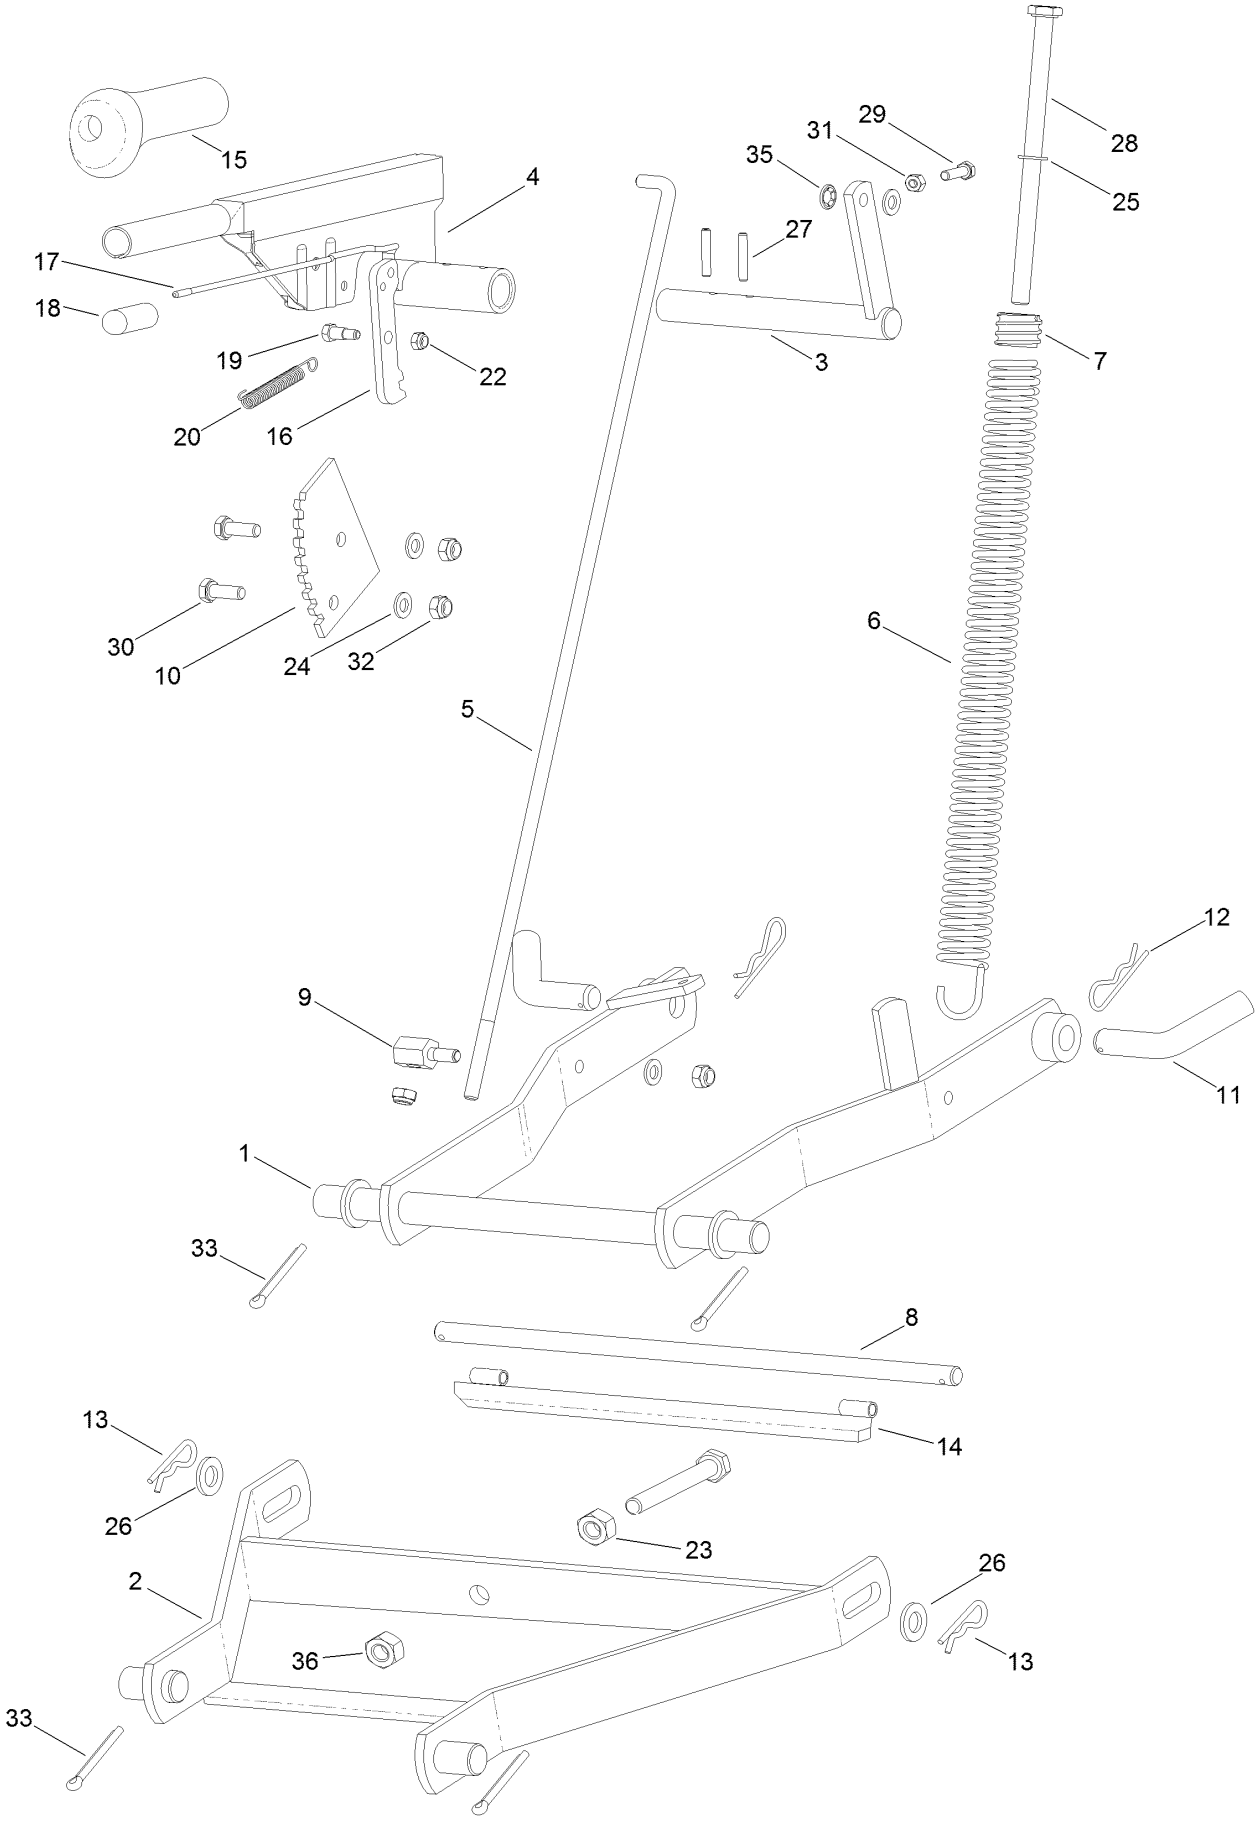

Mower Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-6846	1	Suspension-Deck, Mower
2	111-6847	1	Suspension-Mower Deck, Front
3	125-2251	1	Shaft-Adjustment, Height
4	125-2249	1	Lever-Arm, Height Adjust
5	125-2252	1	Rod-Adjustment, Height
6	125-2254	1	Spring
7	125-2255	1	Nut-Spring
8	111-6849	1	Shaft
9	119-5407	1	Trunnion
10	104-3133	1	Segment-Gear
11	120-8757	2	Pin-Bent
12	104-3144	2	Pin-Hair
13	104-3148	2	Pin-Hair
14	111-6848	1	Holder-Front
15	104-3129	1	Grip-Handle
16	104-3130	1	Ratchet-Plate, Pivot
17	104-3132	1	Rod-Connection
18	104-3131	1	Button-Plunger
19	125-2250	1	Screw-Lever
20	104-3134	1	Spring
22	33023-00	1	Nut-Lock
23	33016-00	1	Nut-Hex
24	106-4756	3	Washer-Plain
25	108-8709	1	Washer-Flat
26	104-3124	2	Washer-Flat
27	104-2994	2	Pin-Spring
28	125-2253	1	Screw M10X180
29	33113-016	1	Screw-HH
30	33114-020	2	Screw-HH
31	104-2991	1	Nut-Hex
32	33024-00	4	Nut-Lock, NI
33	125-2256	4	Pin-Cotter
35	121-0963	1	Washer
36	48-9540	1	Nut-Lock, Hex NI

Cutting Drive System Assembly

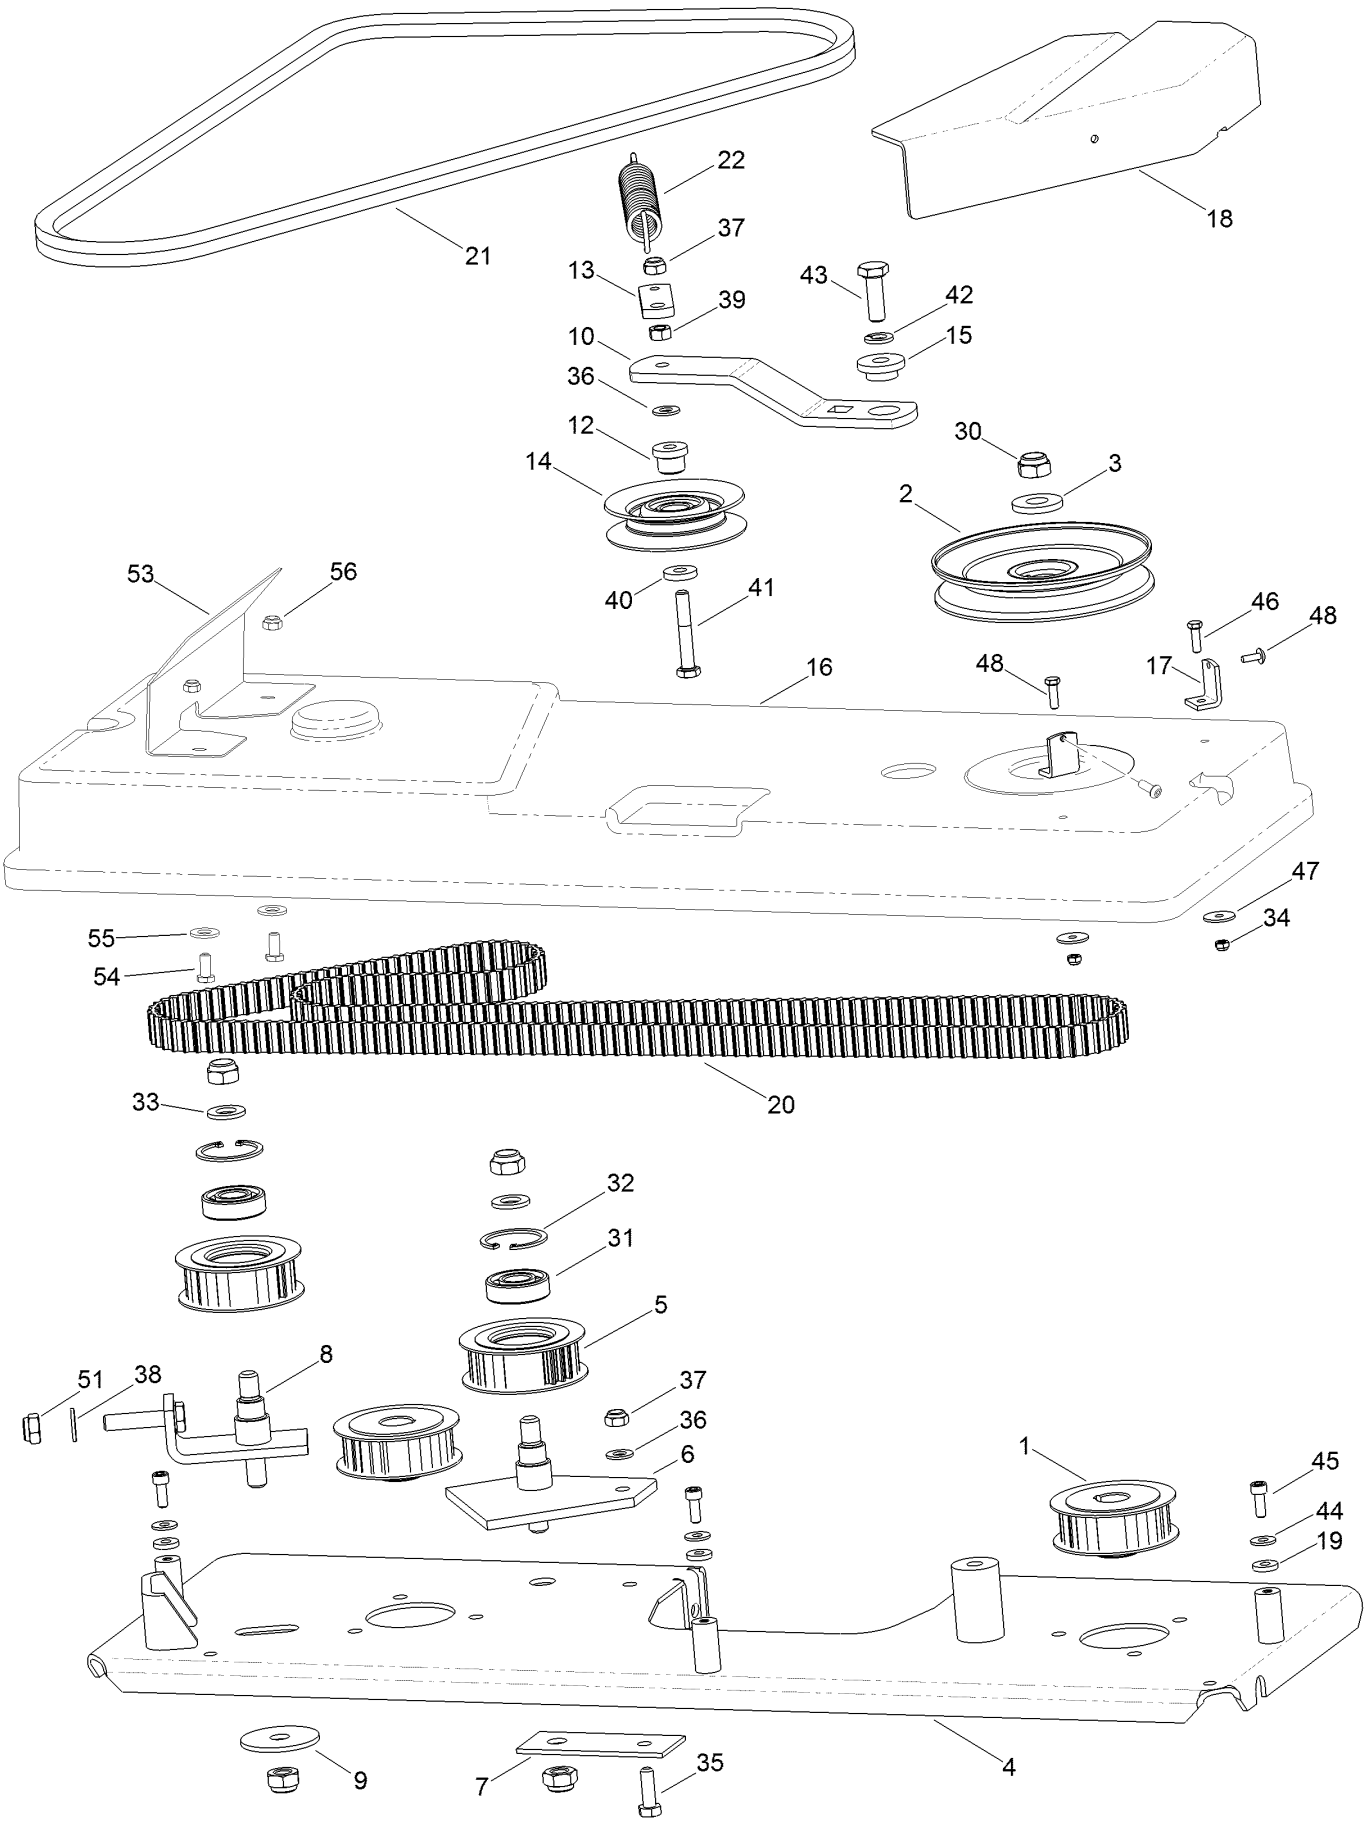


Cutting Drive System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-3116	2	Pulley-Cog, Drive
2	125-2263	1	Pulley-Drive
3	33099-00	2	Washer-Flat
4	107-8996	1	Plate-Drive, Blade
5	104-3121	2	Pulley-Cog
6	125-2264	1	Bracket-Idler
7	104-3117	1	Plate-Anchor
8	125-2265	1	Bracket-Idler
9	103-8892	1	Washer
10	125-2266	1	Arm-Idler
12	104-3104	1	Bushing
13	125-2185	1	Lever-Engagement
14	104-3103	1	Pulley-Idler
15	125-2268	1	Shim-Arm, Idler
16	106-8589	1	Belt-Cover
17	107-8940	2	Bracket
18	107-8941	1	Guard-Belt
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	125-2182	1	Belt
22	104-3101	1	Spring
30	48-9540	6	Nut-Lock, Hex NI
31	100-1048	2	Bearing-Ball
32	104-3123	2	Ring-Locking
33	104-3124	2	Washer-Flat
34	87-5140	2	Nut-Lock
35	33114-025	1	Screw-HH
36	106-4756	2	Washer-Plain
37	33024-00	2	Nut-Lock, NI
38	33095-00	1	Washer-Flat
39	33014-00	1	Nut-Hex
40	106-8588	1	Washer-Flat
41	33114-050	1	Screw-HH
42	125-2269	1	Washer
43	125-2270	1	Screw
44	106-8568	3	Washer-Flat
45	33113-016	3	Screw-HH
46	107-8918	2	Screw
47	125-2277	2	Washer
48	111-6851	2	Screw
51	33025-00	1	Nut-Lock, NI
52	111-6850	1	Cutting Unit ASM ●
53	111-8303	1	Guard, Belt
54	119-5477	2	Screw
55	104-2943	2	Washer-Flat
56	87-5140	2	Nut-Lock

● Not illustrated


Mower Housing Assembly

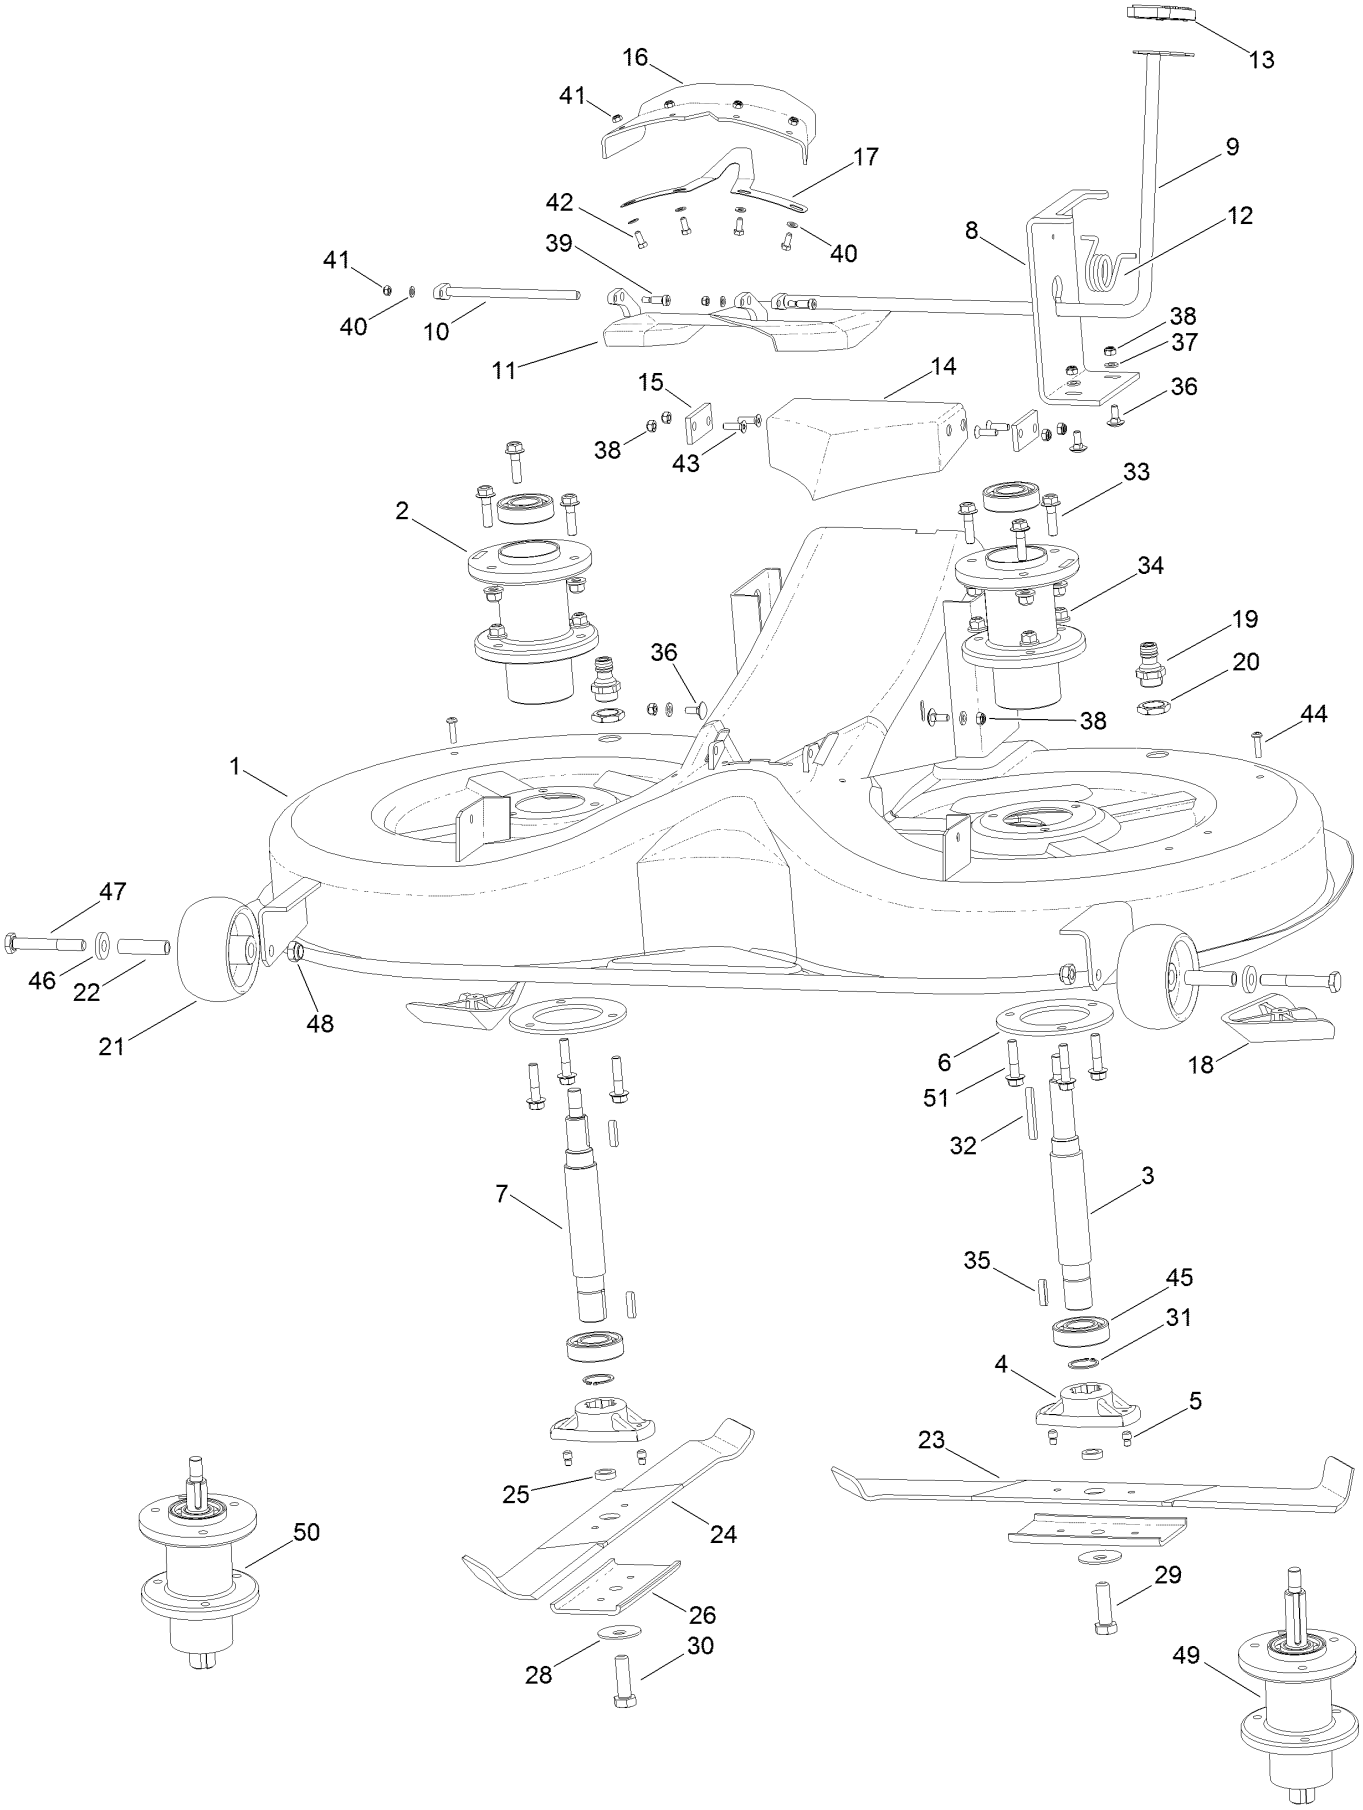

Mower Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-6852	1	Deck ASM With Decals
2	107-8992	2	Housing-Spindle
3	125-2261	1	Shaft-Blade, Left
4	106-4185	2	Adapter-Blade
5	104-3093	4	Pin-Shear, Grooved
6	104-3084	2	Support-Ring
7	106-8566	1	Shaft-Blade, Right
8	125-2271	1	Holder
9	125-2272	1	Lever-Foot
10	106-8585	1	Rod-Door, Mulch
11	107-8968	1	Door-Mulch
12	125-2273	1	Spring
13	104-3018	1	Pad-Pedal
14	106-8573	1	Baffle-Center
15	106-8572	2	Plate-Baffle, Center
16	106-8586	1	Gasket-Door, Mulch
17	106-8567	1	Guide
18	106-8587	2	Kicker
19	125-2274	2	Connection
20	125-2275	2	Nut
21	125-2186	2	Wheel-Gauge
22	131-2703	2	Spacer
23	106-8558	1	Blade-LH
24	106-8557	1	Blade-RH
25	106-6530	2	Spacer
26	106-6533	2	Stiffener-Blade
28	106-6532	2	Washer-Blade
29	106-5797	1	Bolt-HH
30	106-5798	1	Bolt-Blade, HH
31	104-3095	2	Ring-Locking
32	125-2262	1	Key
33	33104-030	6	Screw-HHF
34	104-3082	12	Nut-Lock, HHF
35	104-3097	3	Key-Square
36	33123-016	4	Screw-CARR
37	104-3193	4	Washer
38	33023-00	8	Nut-Lock
39	87-5150	2	Bolt
40	52-6430	6	Washer
41	87-5140	6	Nut-Lock
42	119-5477	4	Screw
43	106-8574	4	Screw
44	104-1451	2	Screw-TAP, PPH
45	116-0720	4	Bearing-Ball
46	108-8709	2	Washer-Flat
47	33115-070	2	Screw-HH
48	33025-00	2	Nut-Lock, NI
49	125-2259	1	LH Spindle Housing ASM
50	125-2260	1	RH Spindle Housing ASM
51	104-3085	6	Bolt-HHF


Travel Pedals and Brake Assembly

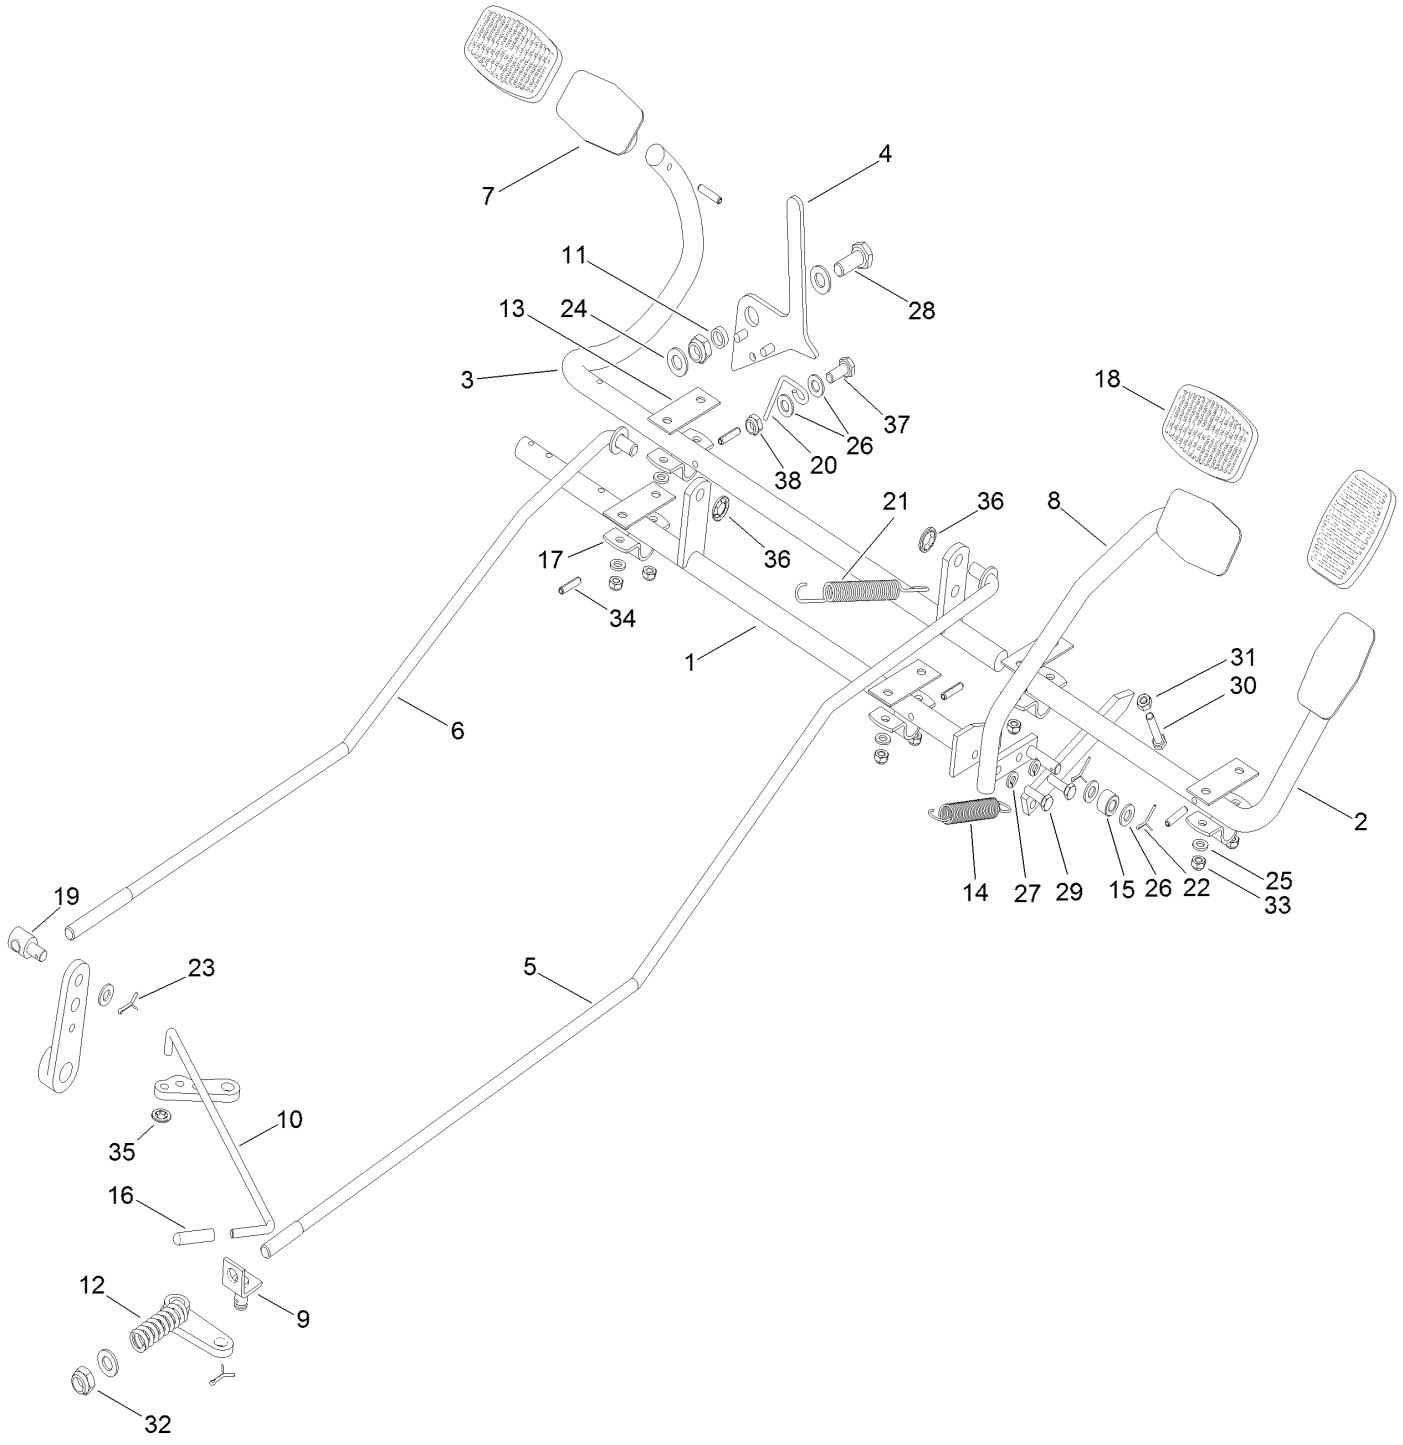

Travel Pedals and Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-2278	1	Shaft-Diagonal
2	125-2279	1	Pedal-Travel, Rear
3	125-2280	1	Pedal-Brake
4	125-2282	1	Lever-Brake, Hand
5	125-2287	1	Rod-Connecting, Brake
6	125-2286	1	Rod-Tie
7	120-8763	1	Pedal
8	120-8723	1	Pedal-Travel, Forward
9	104-3011	1	Bracket-Rod, Brake
10	125-2284	1	Rod-Lever, Bypass
11	125-2283	1	Spacer
12	125-2288	1	Spring-Brake
13	119-2434	5	Spacer
14	119-2436	1	Spring
15	106-8581	1	Roller
16	108-8708	1	Cap-Bypass Lever, Hydro
17	119-2433	5	Clamp
18	104-3018	3	Pad-Pedal
19	104-3029	1	Pin
20	111-8243	1	Spring-Lever
21	104-3001	1	Spring
22	104-3151	2	Pin-Cotter
23	104-3027	2	Pin-Cotter
24	33095-00	4	Washer-Flat
25	104-3193	10	Washer
26	106-4756	4	Washer-Plain
27	104-3186	2	Washer-Spring
28	104-3041	1	Screw-Hex
29	33113-016	2	Screw-HH
30	33113-030	1	Screw-HH
31	104-2991	1	Nut-Hex
32	33025-00	1	Nut-Lock, NI
33	33023-00	10	Nut-Lock
34	104-3008	5	Pin-Spring
35	125-2285	1	Ring-Locking
36	125-2281	2	Ring-Locking
37	33114-020	1	Screw-HH
38	33024-00	1	Nut-Lock, NI


Battery and Electrical Assembly

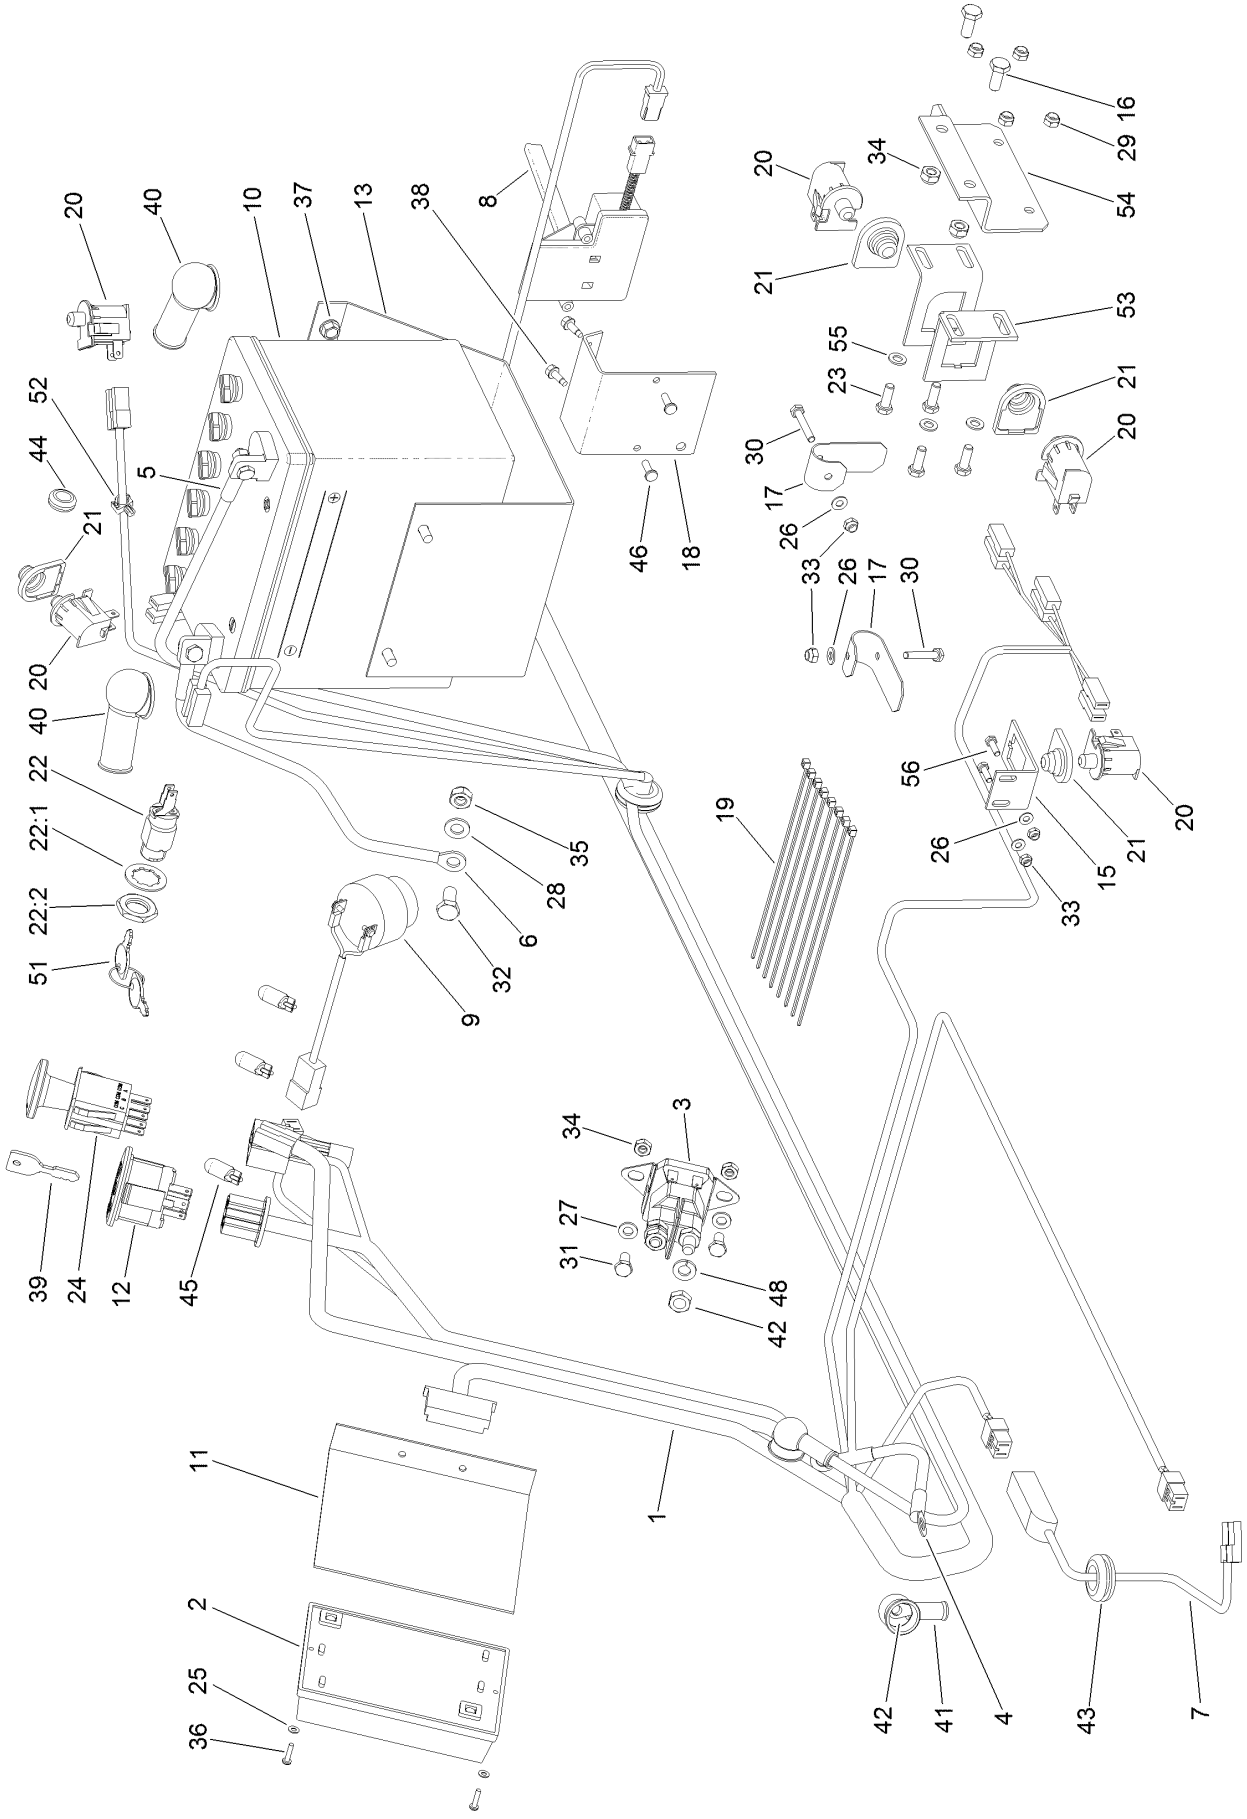

Battery and Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-8251	1	Harness-Wiring
2	111-8248	1	Control Module
3	740207	1	Solenoid
4	125-2300	1	Cable-Starter
5	120-8729	1	Cable-Battery, Positive
6	119-5417	1	Cable-Battery, Negative
7	119-5430	1	Harness-Clutch
8	104-3074	1	Overload Switch ASM
9	119-5511	1	Buzzer
10	104-3152	1	Battery-12V
11	119-5433	1	Bracket-Support, Module
12	125-2295	1	Switch-Ignition
13	125-2290	1	Holder-Battery
15	125-2291	1	Holder
16	111-8254	2	Screw
17	125-2305	2	Lever-Spring
18	119-5431	1	Bracket-Switch
19	3334-945	8	Tie-Cable
20	104-3179	5	Switch-Delta
21	104-3178	4	Cover-Protective
22	46-5780	1	Starter Switch ASM
22:1	3254-5	1	Washer-Tooth, Internal
22:2	218-461	1	Nut-HH
23	111-8253	4	Screw
24	103-5221	1	Switch-PTO
25	119-5437	2	Washer
26	104-2984	4	Washer
27	104-3193	2	Washer
28	33094-00	1	Washer-Plain
29	87-5140	4	Nut-Lock
30	104-3009	2	Screw-Hex
31	33113-012	2	Screw-HH
32	33114-016	1	Screw-HH
33	104-2985	4	Nut-Hex
34	33023-00	4	Nut-Lock
35	33024-00	1	Nut-Lock, NI
36	119-5436	2	Screw
37	106-5763	4	Screw
38	104-2977	2	Screw-TAP
39	119-5510	2	Key-Ignition
40	104-3154	2	Boot-Rubber
41	104-3187	2	Boot-Rubber
42	32128-32	5	Nut-HHF
43	125-2302	3	Bushing
44	125-2303	1	Bushing
45	104-3176	4	Bulb
46	104-3349	2	Screw
48	104-2927	2	Washer-Spring
51	62-7770	2	Key-Ignition
52	104-3157	1	Clip-Snap
53	111-8247	2	Holder-Switch
54	111-8252	1	Holder-Switch
55	52-6430	4	Washer
56	125-2304	2	Screw


Body and Hood Assembly

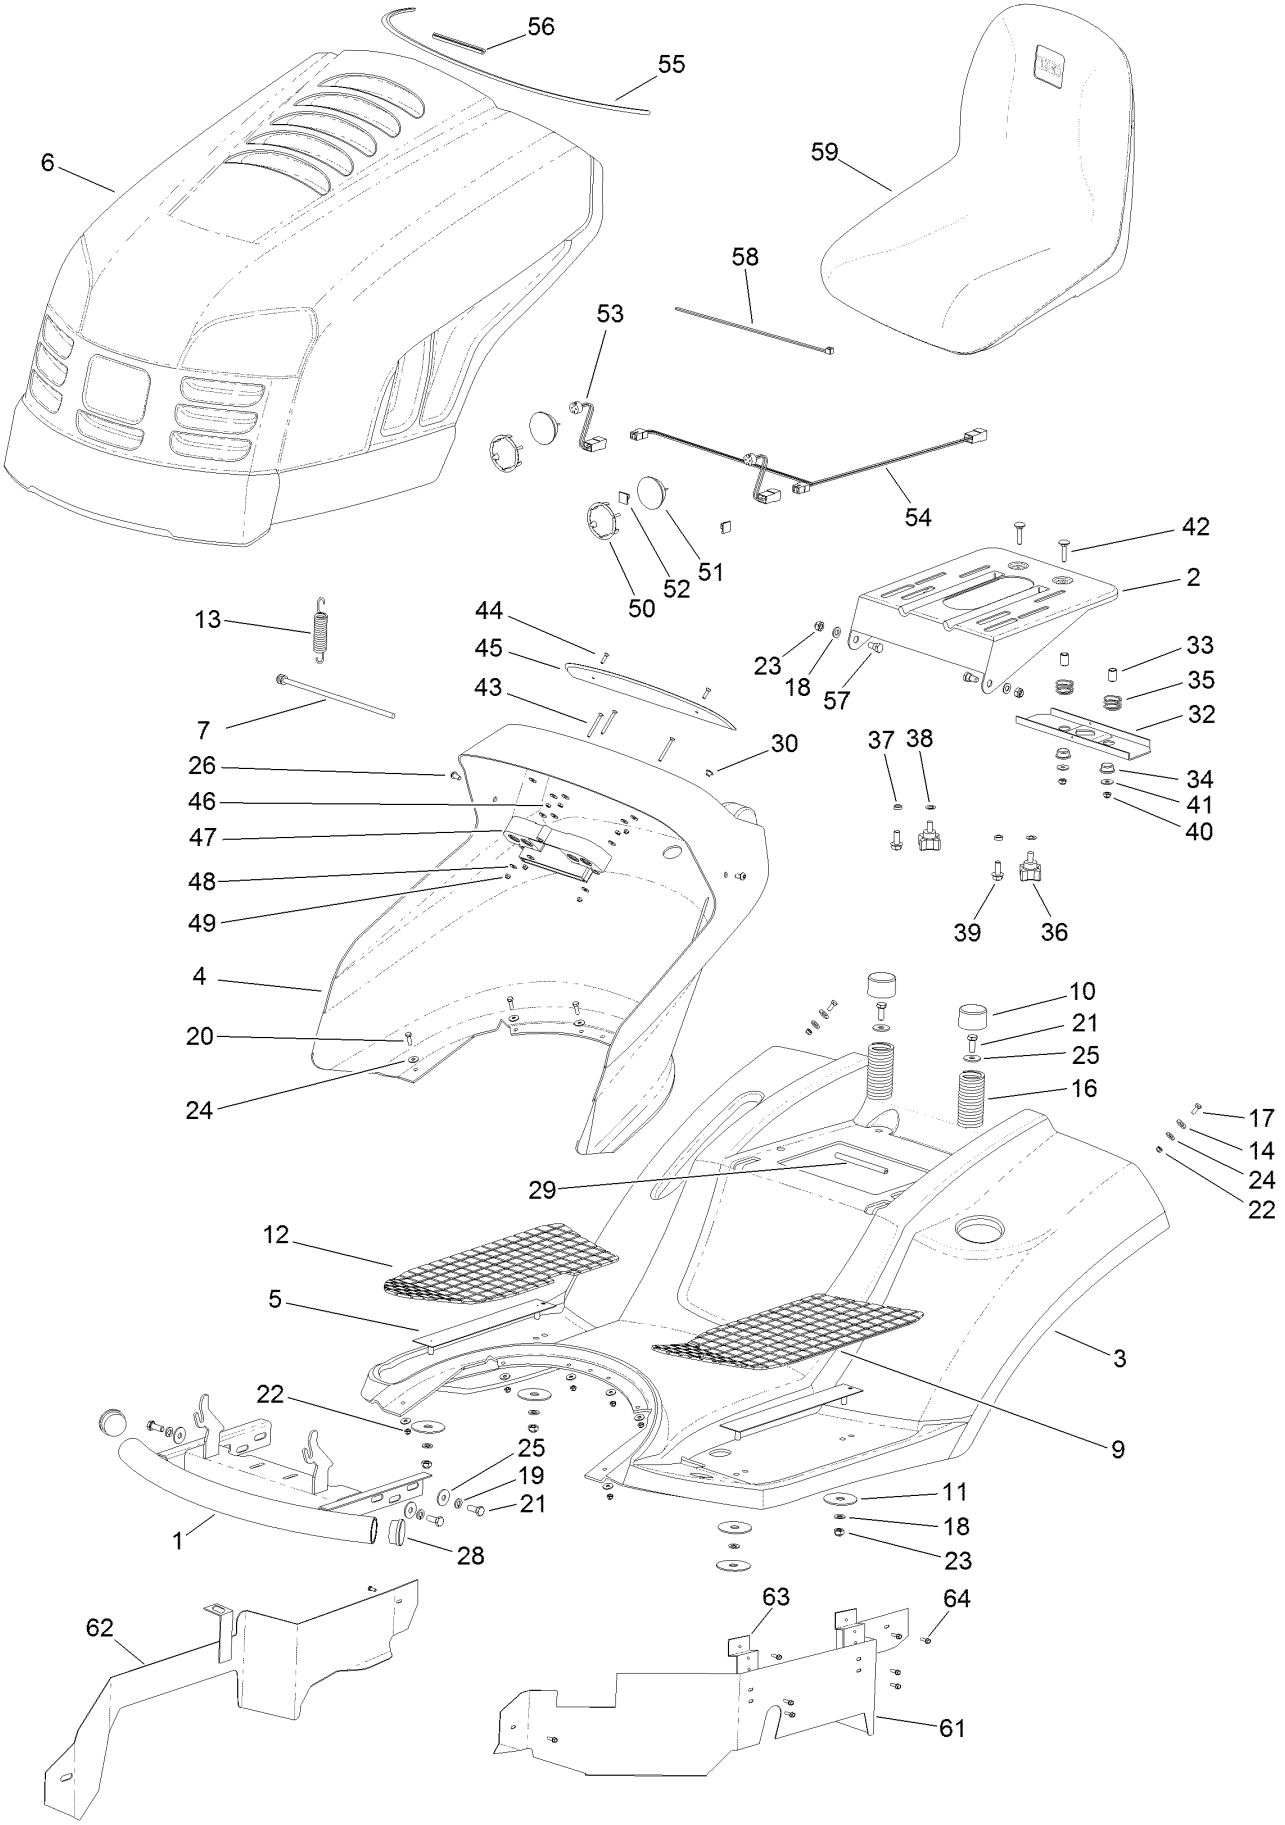

Body and Hood Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-2320	1	Bumper
2	119-5513	1	Bracket-Support, Seat
3	125-2306	1	Fender-Rear
4	125-2307	1	Panel-Dash
5	125-2321	2	Holder
6	125-2316	1	Hood ASM
7	125-2324	1	Holder-Spring
9	125-2322	1	Mat-Foot, LH
10	104-2857	2	Cap-Hub
11	119-5500	4	Washer-Rubber
12	120-8745	1	Mat-Foot, RH
13	104-2975	1	Spring-Hood
14	104-2952	2	Washer-Rubber
16	104-2945	2	Spring-Seat
17	104-2980	2	Screw
18	33094-00	6	Washer-Plain
19	104-2927	4	Washer-Spring
20	107-8918	6	Screw
21	33114-020	6	Screw-HH
22	87-5140	8	Nut-Lock
23	33024-00	6	Nut-Lock, NI
24	104-2943	14	Washer-Flat
25	104-2946	6	Washer-Plain
26	33113-012	2	Screw-HH
28	125-2323	2	Cover
29	125-2313	1	Trim-Rubber
30	125-2187	1	Cover
32	104-2934	1	Bracket
33	104-2933	2	Spacer-Split
34	104-2935	2	Bushing
35	119-5514	2	Seat-Spring
36	119-5456	2	Knob-Adjust
37	119-5457	2	Spacer
38	104-2936	2	Washer-Spring
39	104-2939	2	Screw-Support, Seat
40	33023-00	2	Nut-Lock
41	104-2931	2	Washer-Flat
42	33123-030	2	Screw-CARR
43	104-3191	3	Screw
44	125-2310	2	Screw
45	125-2308	1	Lens-Dash
46	125-2309	3	Nut
47	92-6732	1	Housing-Light, Indicator
48	104-3175	11	Washer
49	104-2985	5	Nut-Hex
50	125-2319	2	Socket-Lamp
51	125-2318	2	Bulb-Light
52	104-3167	2	Clip-Nylon
53	125-2314	2	Harness-Wiring, Light Bulb
54	125-2315	1	Harness-Wiring, Light
55	125-2194	1	Trim-Rubber, Hood
56	125-2311	1	Gasket-Foam
57	104-2939	2	Screw-Support, Seat
58	3334-945	1	Tie-Cable
59	107-2214	1	Seat ASM
61	111-8297	1	Cover,-Left
62	111-8298	1	Cover-Right
63	111-8299	2	Holder
64	104-2977	9	Screw-TAP


Grass Collector Assembly No. 125-2325

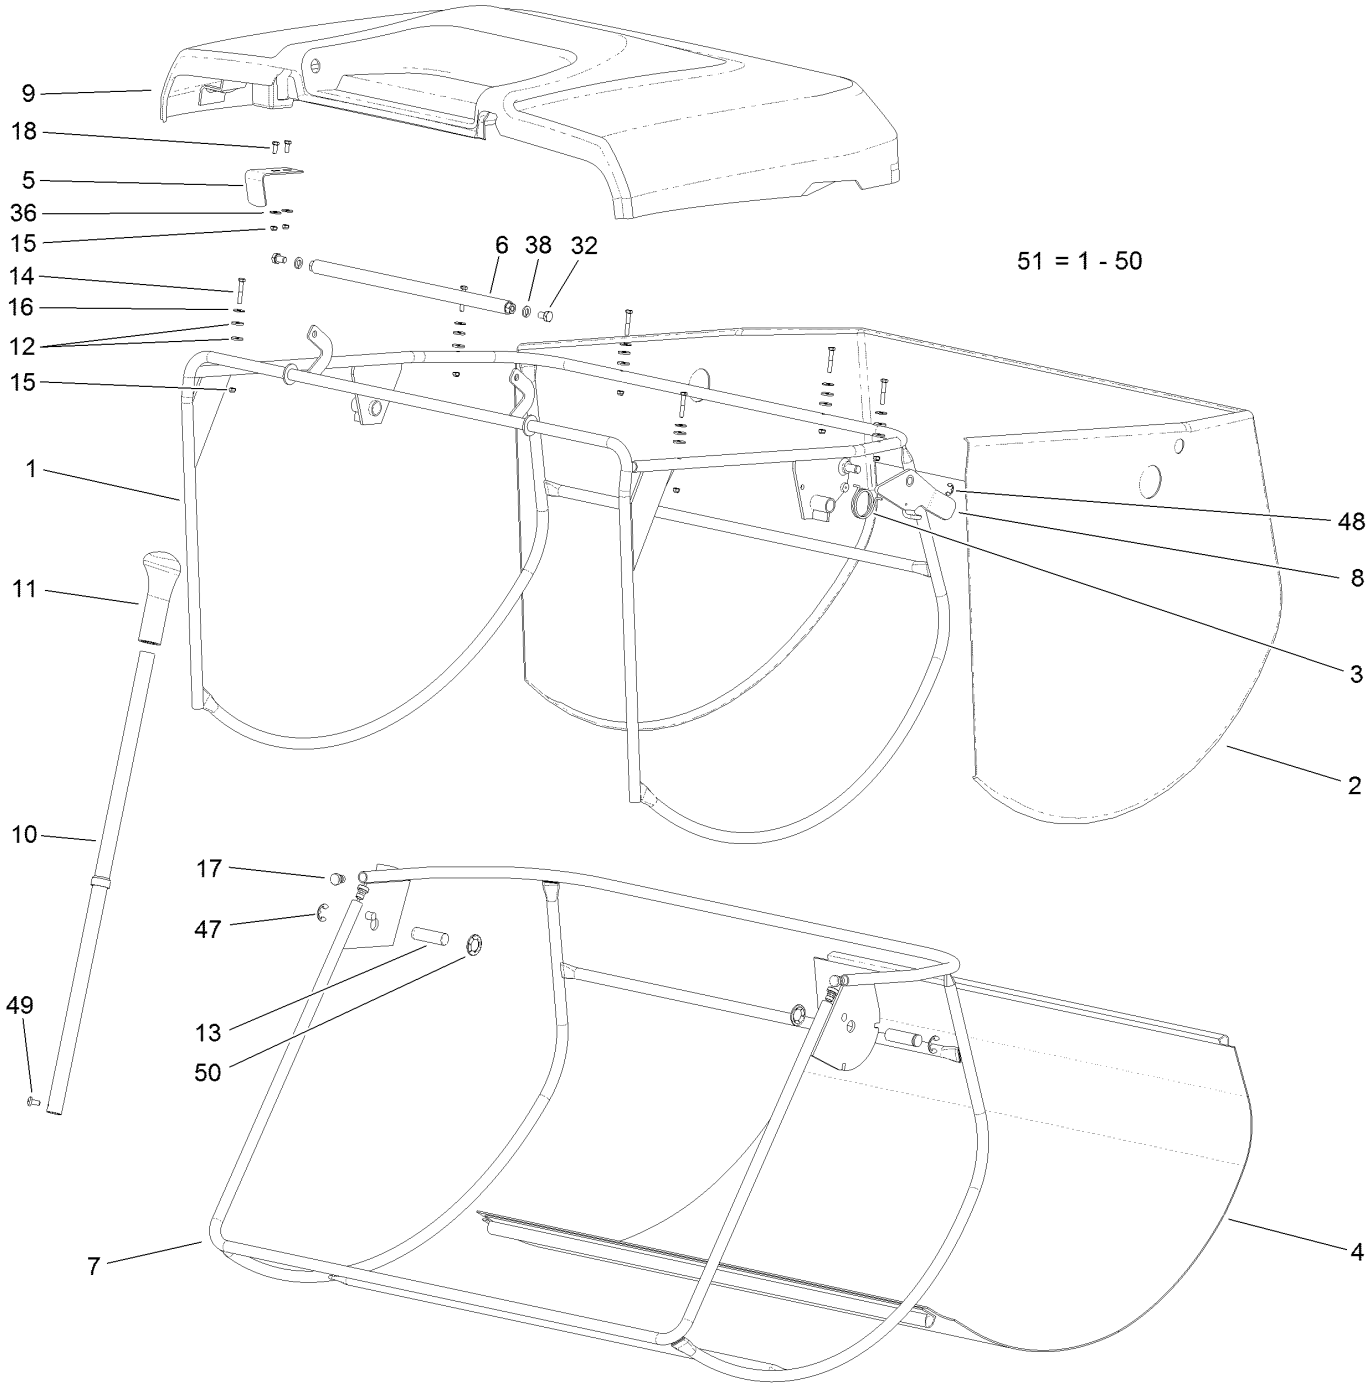

Grass Collector Assembly No. 125-2325 (continued)

Ref.	Part Number	Qty.	Description
1	125-2326	1	Frame ASM
2	125-2328	1	Bag-Grass, Upper
3	125-2331	1	Spring
4	125-2332	1	Bag-Grass, Lower
5	125-2334	1	Spring-Coil, Interlock Switch
6	125-2327	1	Handle-Lift
7	125-2329	1	Lower Frame ASM
8	125-2330	1	Lever-Arrestment
9	125-2333	1	Cover-Collector
10	125-2335	1	Lever-Dump
11	120-8737	1	Handle-Mulching
12	104-2943	6	Washer-Flat
13	119-5469	1	Pin
14	106-5759	6	Screw
15	87-5140	8	Nut-Lock
16	104-2952	12	Washer-Rubber
17	119-5475	4	Cap
18	107-8918	2	Screw
32	68-9410	2	Screw-HHF
36	52-6430	2	Washer
38	104-2927	2	Washer-Spring
47	104-3015	2	E-Clip
48	106-8592	1	Ring-Locking
49	106-5763	1	Screw
50	119-5478	1	Ring-Lock
51	125-2325	1	Grass Collector ASM


Tunnel and Collector Plate Assembly

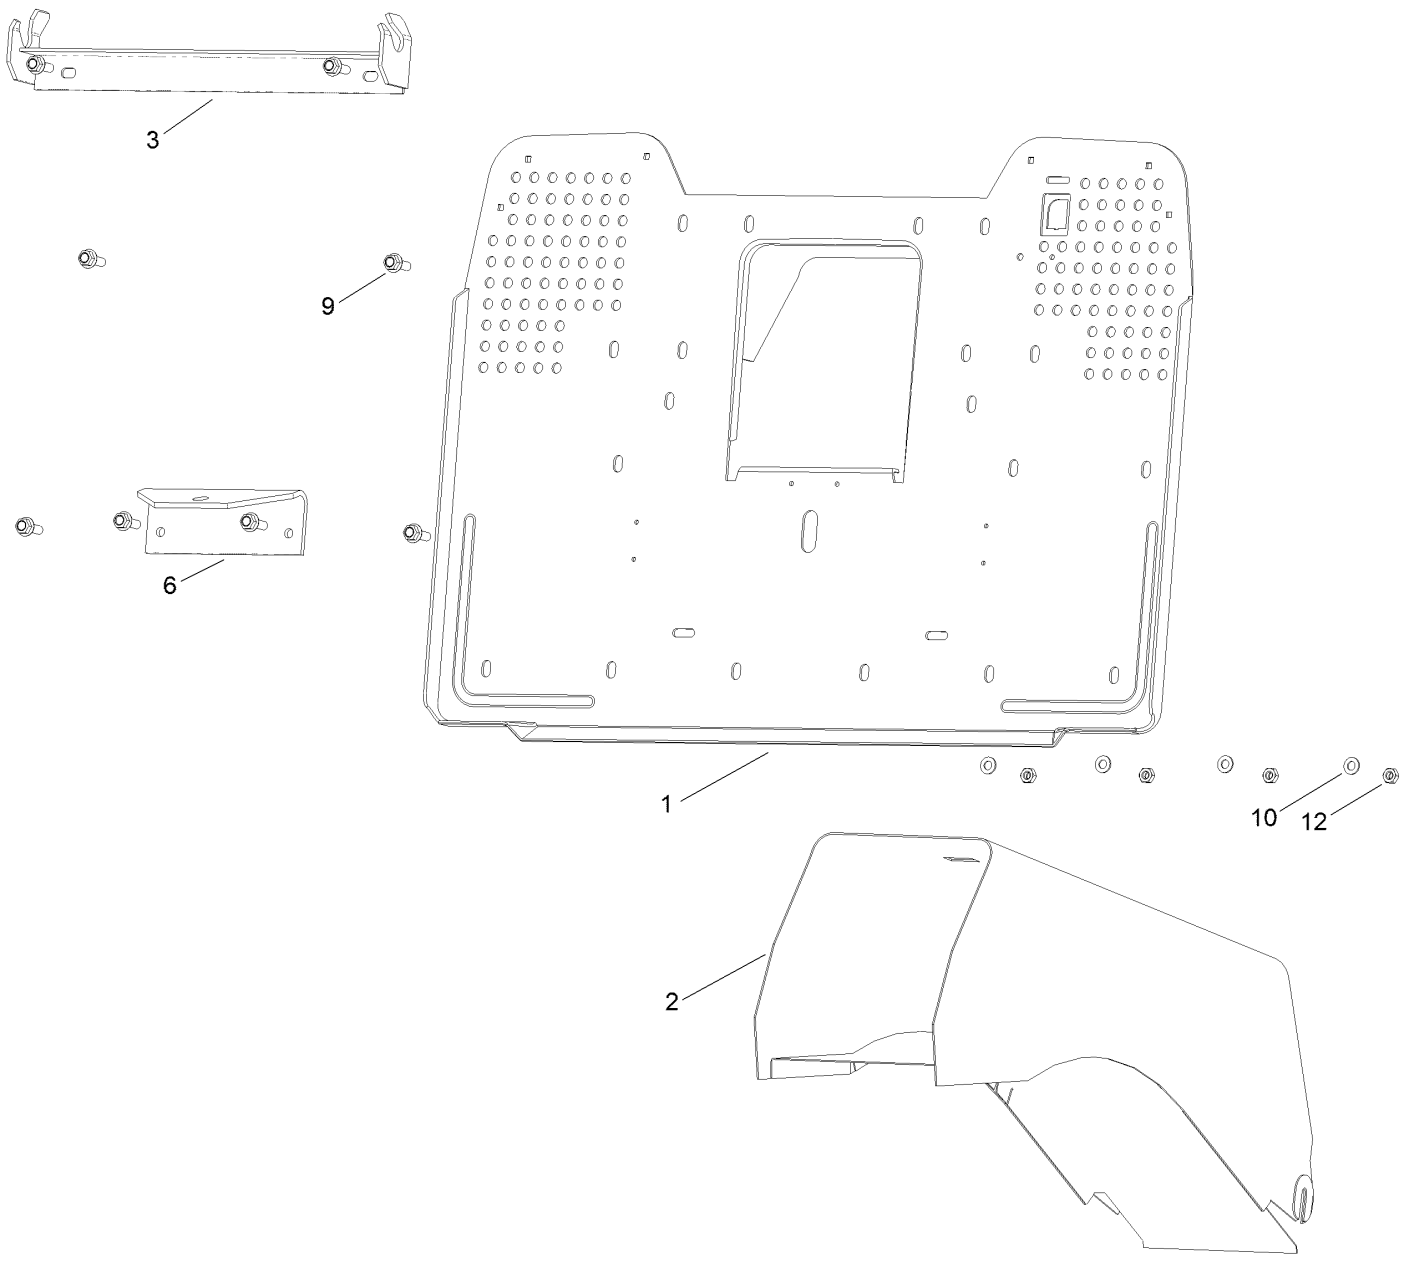


Tunnel and Collector Plate Assembly (continued)

Ref.	Part Number	Qty.	Description
1	125-2336	1	Collector Plate ASM
2	120-8767	1	Tunnel
3	125-2337	1	Support-Collector
6	119-5516	1	Hitch-Tow
9	119-5483	8	Screw
10	33094-00	4	Washer-Plain
12	33024-00	4	Nut-Lock, NI

Decal Assembly



1



2




3




4


5



7



8



9

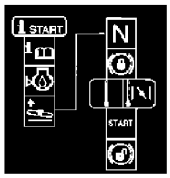



11


12



13

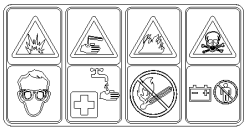
16


19



25


26



28



35




36


39

Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111-5606	1	Decal-Hood, Left
2	111-5607	1	Decal-Hood, Right
3	117-0871	1	Decal
4	111-5942	1	Decal-HOC
5	111-5953	1	Decal-HOC
7	111-5631	1	Decal-Dash, Dh210
8	107-4906	1	Decal-Engine
9	111-8217	1	Decal-Warning, Hood
11	119-5517	1	Decal-Instructions, Operating
12	119-2725	1	Decal-Danger
13	104-3237	1	Decal-Brake, Parking
16	93-7276	2	Decal-Danger
19	125-2345	1	Decal-Bypass
25	99-5340	1	Decal-Switch
26	119-2730	1	Decal-Danger
28	119-2726	2	Decal-Danger
35	119-2727	1	Decal-Recycler
36	106-8552	2	Decal-Operation
39	111-5941	2	Decal-Warning

Frame Assembly

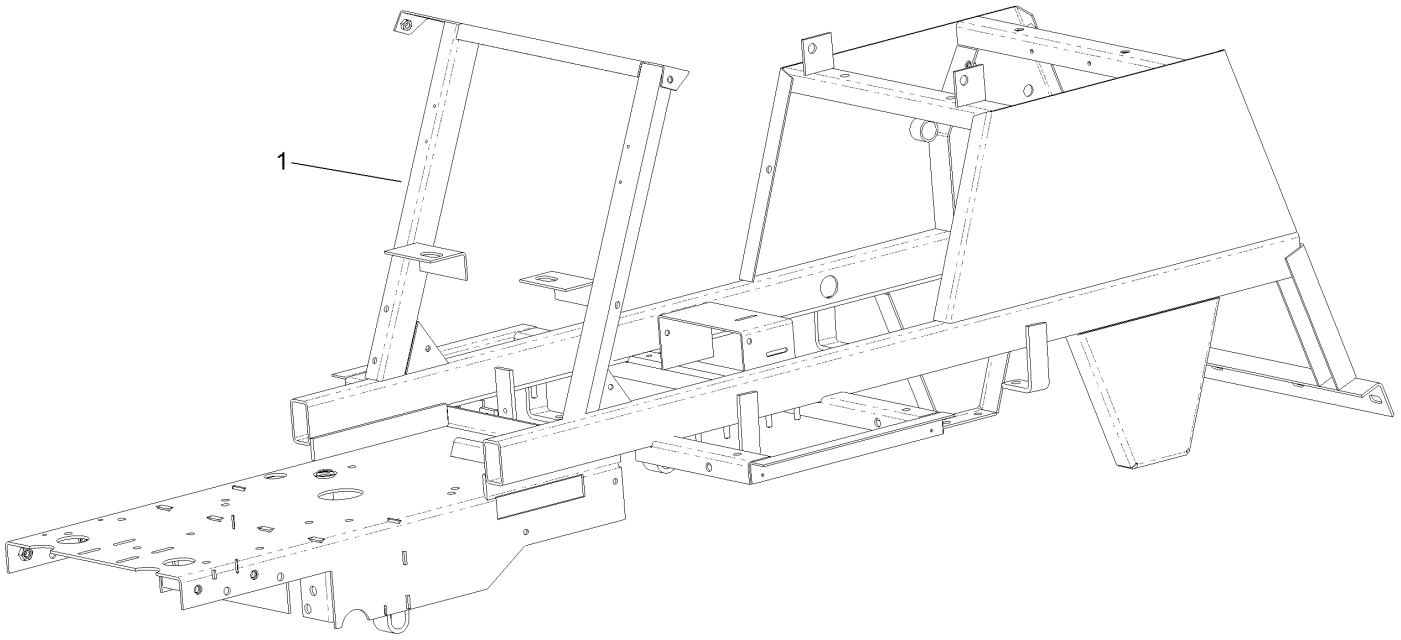

Frame Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	125-2200	1	Chassis-Frame

Attachments and Accessories

For 74585 DH 210 Lawn Tractor

Product Name	Model/Part
Rear Deck Idler Wheels Kit	111-9502
Rear Discharge Chute Kit	117-0054
Hourmeter Kit	125-2346

Notes:



Count on it.