FORM NO. 3322–255

TORO®

Proline

15 HP Kohler Mid–Size Hydro Traction Unit

Model No. 30187 – 990001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Engine & Oil Cooler Assembly	1
Pivot & Linkage Assembly	2
Handle Assembly	3
Control Panel Assembly	4
Fuel Tank, Hydro Pump & PTO Assembly	5
Hydraulic & Drive System Assembly	6
Battery	7
Crankcase	8
Oil Pan / Lubrication	9
Cylinder Head, Valves And Breather	10
Ignition / Electrical	11
Blower Housing And Baffles	12
Starter System	13
Fuel System	14
Engine Controls	15
Air Cleaner	16
Exhaust	17
Clutch Assembly No. 54−3200	18
Hydraulic Pump Assembly No. 95−1538	19
Traction Drive Motor	20
Electric Schematic	21
Hydraulic Schematic	22

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

© The TORO Company — 1998
All Rights Reserved

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

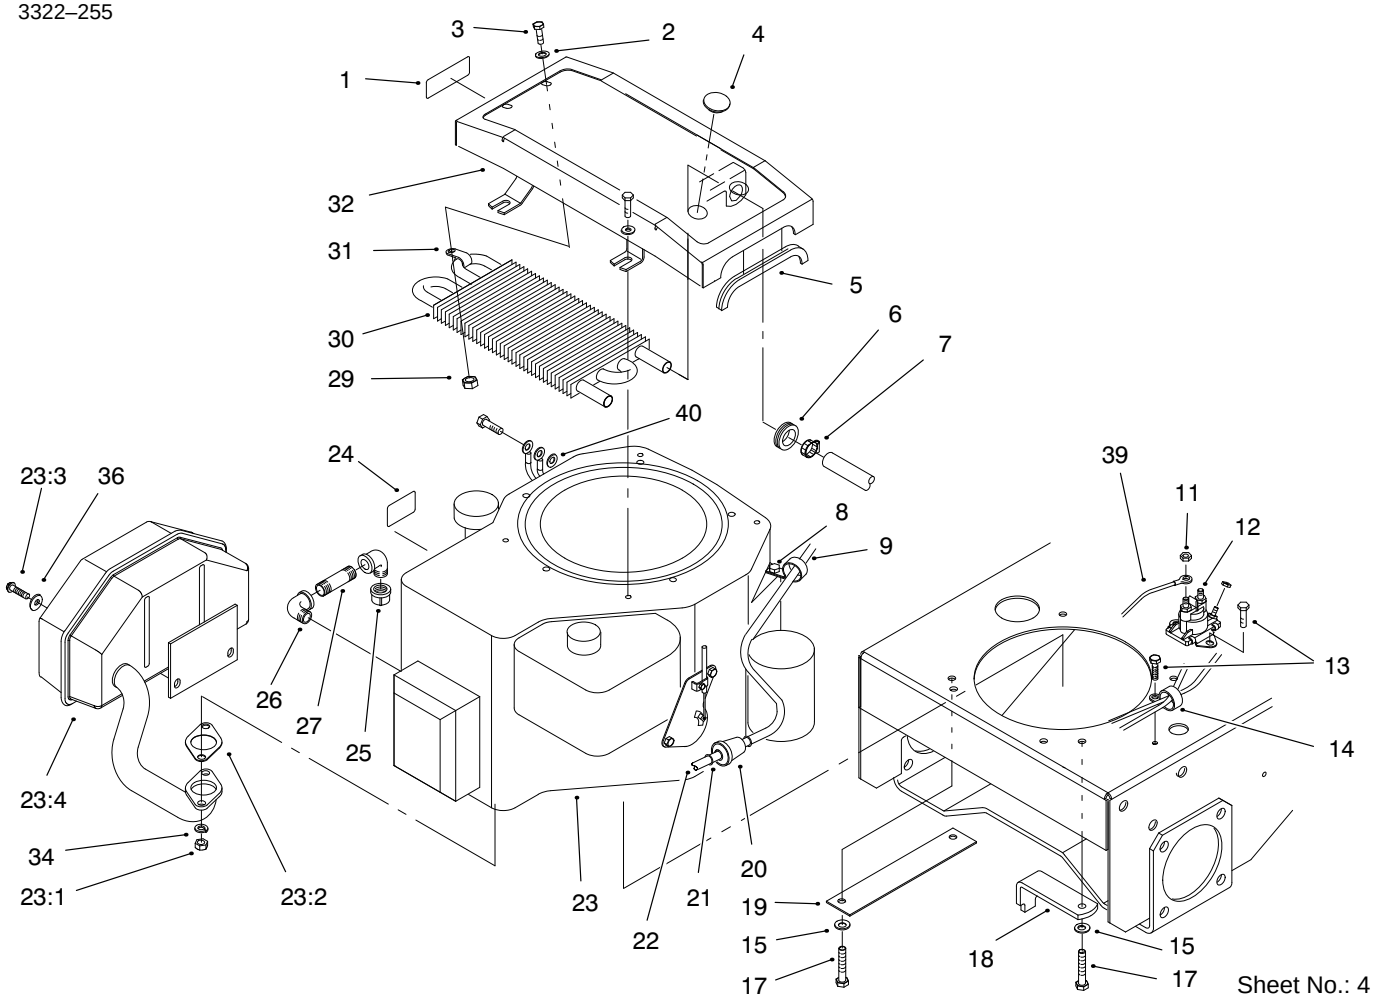

Sheet No.: 4

Engine & Oil Cooler Assembly

Ref. No.	Part No.	Qty.	Description
1	95–2814	1	Decal–Fuel Shut–Off
2	3256–1	6	Washer–Flat
3	321–39	6	Screw–HH
4	2410–71	2	Cap–Plug
5	29–0642	1	Jiffy–Trim
6	240–9	2	Grommet
7	2412–136	2	Clamp
8	32144–19	1	Screw–Self TAP
9	2412–106	1	R Clamp
11	32149–2	2	Nut–Hex Lock
12	92–9845	1	Solenoid
13	32144–4	3	Screw–TAP
14	2412–106	1	R Clamp
15	3256–23	4	Washer–Flat
17	57–6380	4	Screw–HH
18	51–4540–03	1	Retainer–Clutch
19	74–0930–01	1	Guard–Pulley
20	56–6360	1	Filter–Fuel
21	2412–98	2	Clamp–Hose
22	47–2964	1	Hose–Gas
23		1	Engine–15 Hp Kohler
23:1	93–7034	2	Nut
23:2	93–7032	1	Gasket
23:3	93–7033	2	Screw
23:4	95–5517	1	Muffler
24	63–8440	1	Decal–Hot Surface

Ref. No.	Part No.	Qty.	Description
25	288–4	1	Cap–Pipe
26	74–0950	2	Elbow
27	289–51	1	Nipple–Pipe
29	3296–42	2	Nut–Lock
30	82–4220	1	Cooler–Oil
31	2412–134	2	Clamp R
32	82–4500–03	1	Mount–Cooler
34	3253–4	2	Washer–Lock
36	3256–78	2	Washer
39	28–3891	1	Wire ASM
40	93–7034	2	Nut

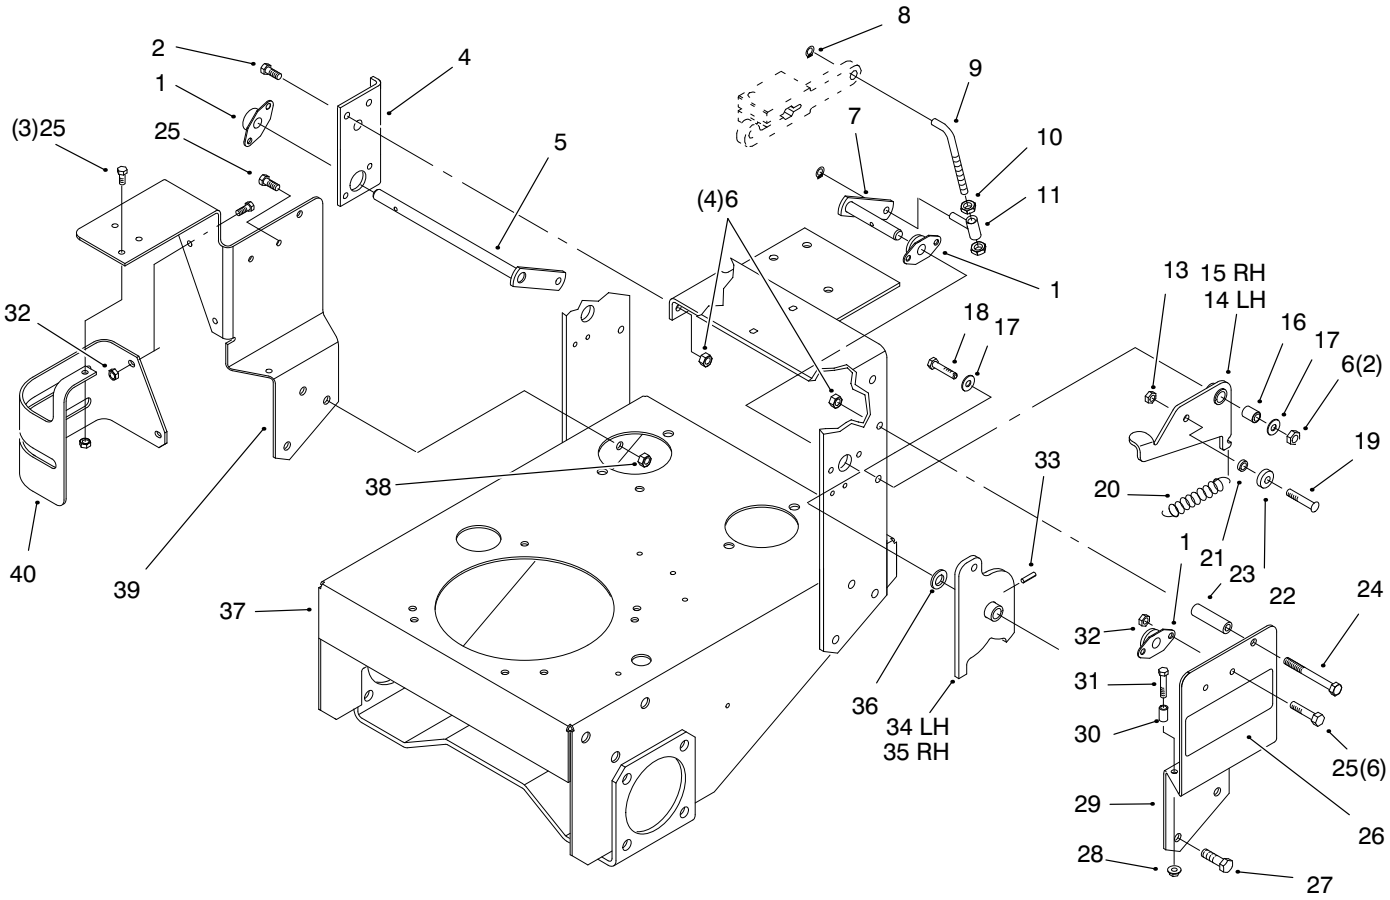

Sheet No.: 5

Pivot & Linkage Assembly

Ref. No.	Part No.	Qty.	Description
1	82–4130	4	Bearing
2	322–5	2	Screw–HH
4	82–4210–01	1	Bracket–Bushing
5	94–9059	1	Lever–Pivot RH
6	3296–29	6	Nut–Lock
7	94–9057	1	Lever–Pivot LH
8	32151–3	4	Ring–Retaining
9	94–9093	2	Rod–Link
10	3218–2	4	Nut–Hex Jam
11	94–9062	2	Sleeve
13	3296–47	2	Nut–Lock
14	82–4330–01	1	Arm–Detent LH
15	82–4340–01	1	Arm–Detent RH
16	82–4370	2	Bushing–Arm
17	3256–23	4	Washer–Flat
18	322–7	2	Screw–HH
19	3274–32	2	Screw–HH
20	82–4160	2	Spring–Detent
21	82–4240	2	Spacer–Bearing
22	251–259	2	Bearing–Ball
23	82–3920	2	Stop–Reverse
24	322–14	2	Screw–HH
25	321–3	11	Screw–HH
26	82–4600	2	Decal–Hydro
27	323–6	6	Screw–HH
28	32128–10	2	Nut–Lock HHF

Ref. No.	Part No.	Qty.	Description
29	95–1530–01	1	Bracket–Pivot
30	95–1516	2	Spacer–Tubular
31	321–8	2	Screw–HH
32	3296–42	11	Nut–Lock
33	32121–4	2	Pin–Roll
34	94–9054–01	1	Arm–Pivot LH
35	94–9061–01	1	Arm–Pivot RH
36	257–5	2	Washer–Thrust
37	94–9096–01	1	Frame ASM
38	3296–39	6	Nut–Lock
39	95–1522–01	1	Bracket–Pivot
40	95–5868–01	1	Guard–Filter

3322–255

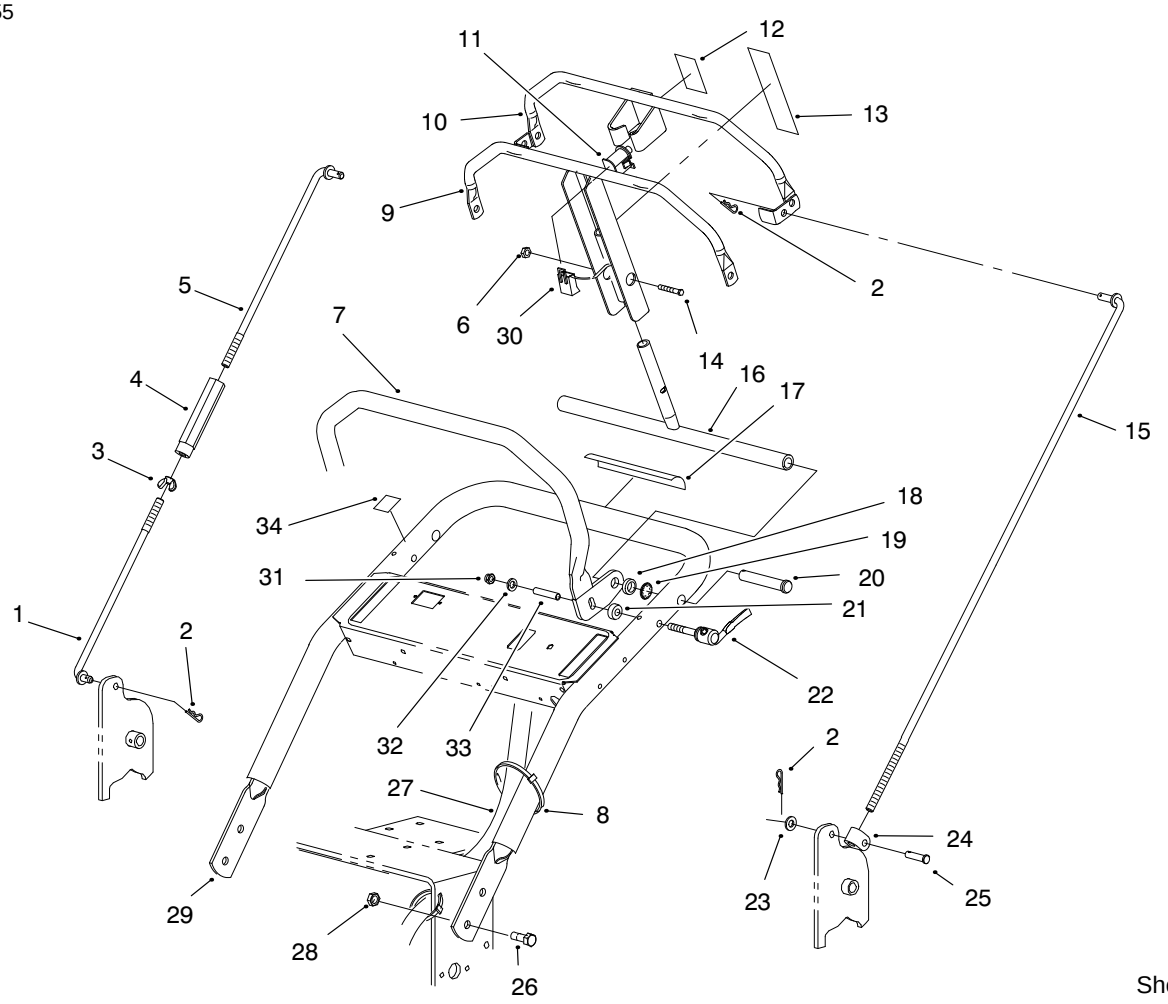

Sheet No.: 6

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	95–1506	1	Rod–Control
2	3290–307	4	Pin–Cotter
3	32103–3	1	Nut–Wing
4	95–1504	1	Turnbuckle
5	95–1505	1	Rod–Control
6	32153–1	1	Nut Lock
7	95–1536	1	Handle
8	3290–378	3	Tie–Cable
9	95–1507–03	1	Control Bar
10	95–1510–03	1	Bail
11	82–2190	1	Switch–Bail
12	95–1523	1	Decal–Traction Drive
13	95–1524	1	Decal–T Bar
14	32105–12	1	Screw–Hex
15	94–9095	1	Rod–Control
16	95–1513–03	1	Pivot
17	82–4590	1	Decal–Slope Warning
18	95–5855–03	2	Spacer–Pivot
19	32151–80	2	Ring–Push On
20	283–55	2	Pin–Clevis
21	82–3840	2	Spacer–Latch
22	95–5853	2	Lock ASM–Quick Release
23	3256–23	1	Washer–Flat
24	74–0521	1	Fitting–Rod
25	283–6	1	Pin–Clevis

Ref. No.	Part No.	Qty.	Description
26	3234–11	4	Screw–HHF
27	95–2807	1	Harness–Wire
28	32128–21	4	Nut–HHF
29	95–5856–03	1	Handle–Upper
30	218–595	1	Connector–Body
31	33023–00	2	Nut–Lock Ni
32	3290–436	2	Washer–Belleville
33	95–5854	2	Sleeve
34	95–5862	1	Decal–Speed Lock

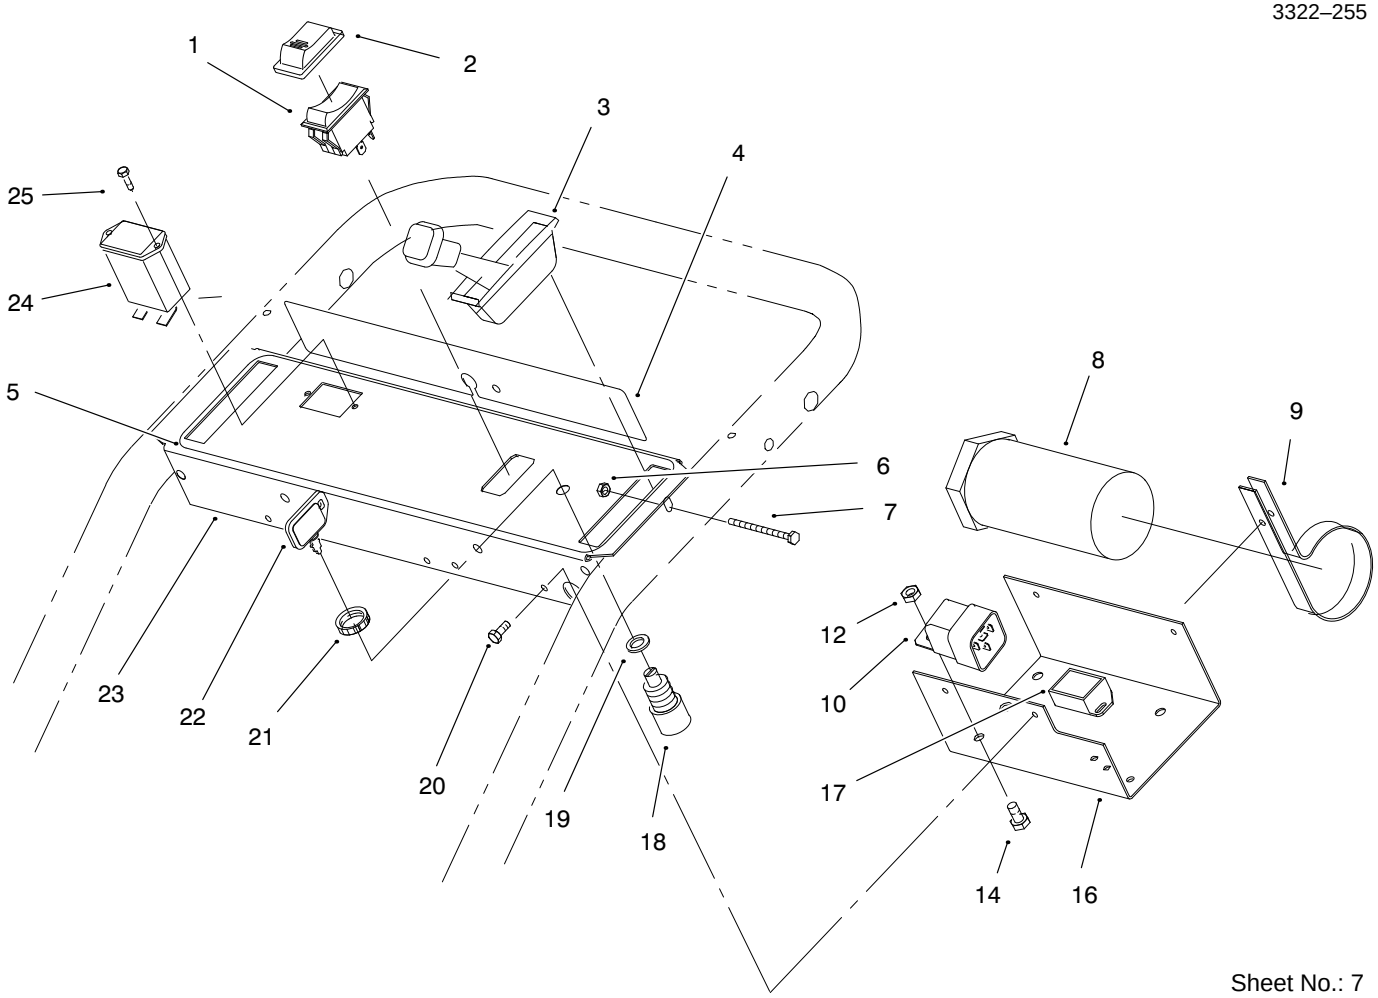

Sheet No.: 7

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	82–2300	1	Switch
2	82–3820	1	Boot–Switch
3	74–0630	1	Control–Throttle
4	95–1544	1	Decal–Warning
5	95–5859	1	Decal–Control Panel
6	3296–2	4	Nut Lock
7	32105–14	4	Screw–HH
8	74–0720	1	Tube–Manual
9	2412–120	2	Clamp–R
10	63–7590	1	Relay
12	3296–42	1	Nut–Lock
14	321–3	1	Screw–HH
16	93–1187–03	1	Panel–Bottom
17	94–9666	1	Module
18	23–0660	1	Switch–Starter
19	3254–5	1	Washer–Lock
20	32104–76	4	Screw–Self TAP
21	218–461	1	Nut–HH
22	63–8360	2	Key–Ignition
23	82–2181–03	1	Panel–Control
24	75–6820	1	Hour Meter
25	32144–18	2	Screw–HWH

Ref. No.	Part No.	Qty.	Description

3322–255

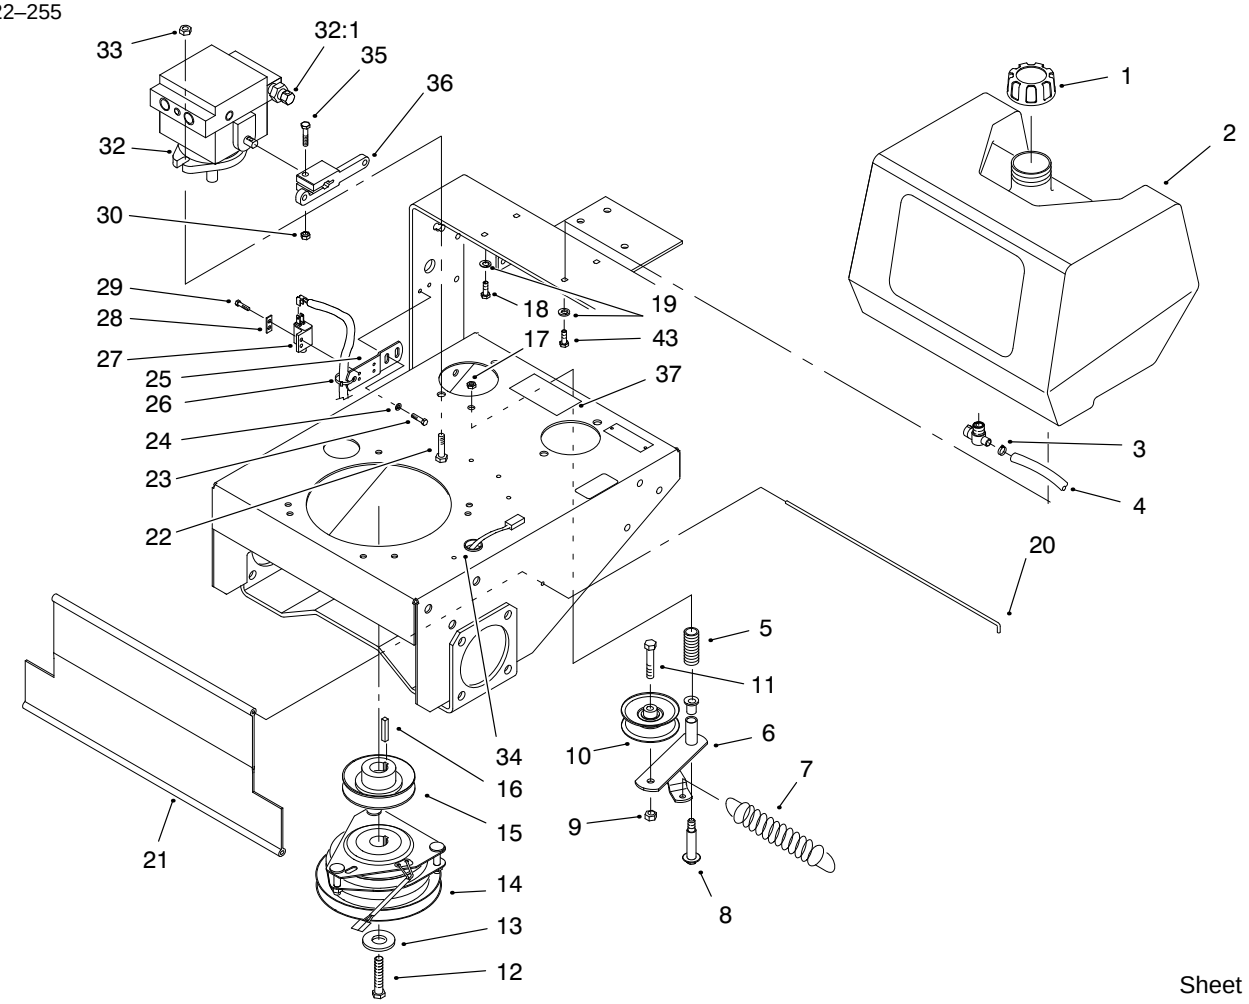

Sheet No.: 8

Fuel Tank, Hydro Pump & PTO Assembly

Ref. No.	Part No.	Qty.	Description
1	55–3570	1	Cap–Fuel
2	95–2802	1	Tank–Fuel
3	2412–98	2	Clamp–Hose
4	47–2982	1	Hose–Fuel
5	88–1880	1	Spring–Compression
6	86–4770–03	1	Lever–Idler
7	68–2190	1	Spring–Extension
8	27–6230	1	Bolt–Wheel
9	3296–39	1	Nut–Lock
10	62–4540–03	1	Pulley–Idler
11	323–9	1	Screw–HH
12	3212–9	1	Screw–HH
13	112843	1	Washer–PTO
14	54–3200	1	Clutch ASM
15	44–5940	1	Pulley–Drive
16	608006	1	Key
17	3296–6	1	Nut–Lock
18	322–3	2	Screw–HH
19	3253–4	4	Washer–Lock
20	95–1529	1	Rod–Shield
21	95–1526	1	Trailing Shield
22	324–5	4	Screw–HH
23	32144–4	4	Screw–HH
24	3256–1	4	Washer–Flat
25	82–4580–03	2	Bracket–Neutral
26	3290–378	2	Tie–Cable

Ref. No.	Part No.	Qty.	Description
27	65–7410	2	Switch–Single Pole
28	82–4570	2	Plate–Switch
29	32144–1	4	Screw–HH
30	3296–29	2	Nut–Lock
32	95–1538	2	Hydraulic Pump ASM
32:1	95–1539	2	Valve ASM
33	32128–42	4	Nut–Hex Flange
34	237–124	1	Grommet
35	322–7	2	Screw–HH
36	82–3790	2	Arm–Control
37	95–1543	1	Decal–Valve Adjust
43	322–4	2	Screw–HH

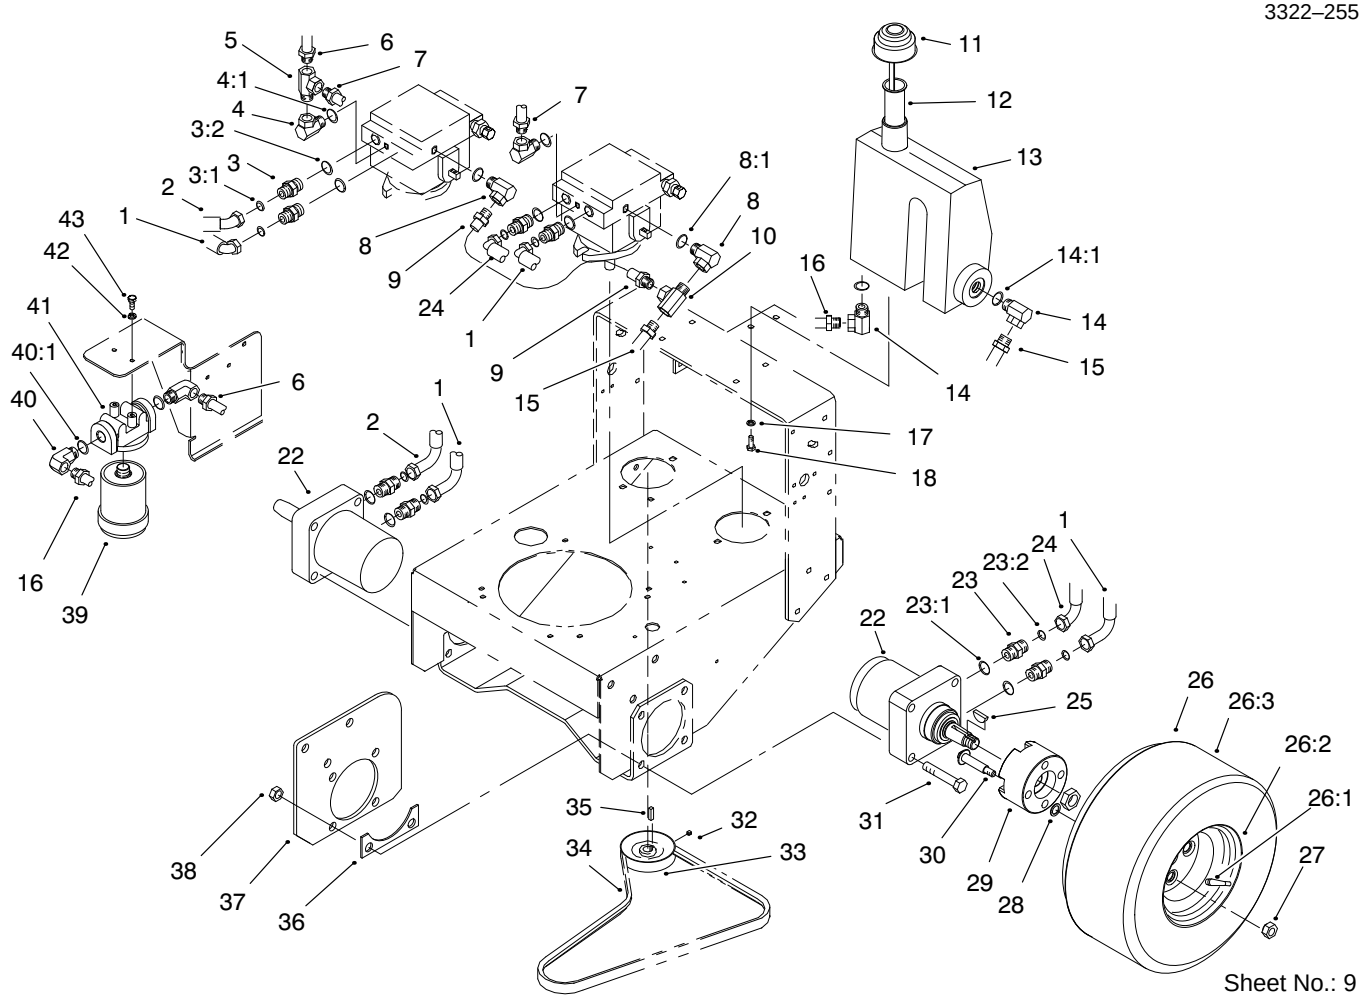

Sheet No.: 9

Hydraulic & Drive System Assembly

Ref. No.	Part No.	Qty.	Description
1	82–4550	2	ASM–Hose
2	82–4540	1	ASM–Hose
3	340–4	4	Fitting–Hydraulic
3:1	237–30	4	O–Ring
3:2	237–79	4	O–Ring
4	354–116	2	Fitting–Hydraulic
5	2815–16	1	Fitting–Hydraulic
6	95–5880	1	ASM–Hose
7	82–4170	1	ASM–Hose
8	354–115	2	Fitting–Hydraulic
8:1	237–42	A/R	O–Ring
9	82–4201	1	ASM–Hose
10	2815–15	1	Fitting–Hydraulic
11	76–0200	1	Oil Cap ASM
12	29–0590	1	Screen–Filler
13	95–1532	1	Reservoir–Oil
14	354–118	2	Fitting–Hydraulic
14:1			O–Ring
15	82–4192	2	ASM–Hose
16	82–4200	1	ASM–Hose
17	3253–4	3	Washer–Lock
18	322–3	3	Screw–HH
22	82–8230	2	Motor–Wheel
23	340–6	4	Fitting–Hydraulic
23:1	237–80	4	O–Ring
23:2	237–30	4	O–Ring

Ref. No.	Part No.	Qty.	Description
24	82–4560	1	ASM–Hose
25	3257–8	2	Key–Woodruff
26	94–9664	2	ASM–Wheel & Tire
26:1	232–27	2	Valve Stem & Cap Asm
26:2	242–87	2	Wheel
26:3	231–117	2	Tire
27	242–50	8	Nut–Lug
28	32112–17	8	Pushnut
29	82–3830	2	Hub–Wheel
30	3213–8	8	Screw–HH
31	325–11	8	Screw–HH
32	3241–5	4	Set Screw
33	95–1528	2	Pulley–Pump
34	82–4110	1	V Belt
35	80–6090	2	Key–Square
36	86–4740–01	2	Spacer–Frame
37	86–4730–01	2	Plate–Frame
38	3296–23	8	Nut–Lock
39	67–8110	2	Filter–Oil
40	354–117	2	Fitting–Hydraulic
40:1	237–79	2	O–Ring
41	86–9080	1	Head–Filter
42	3253–3	2	Washer–Lock
43	321–3	2	Screw–HH

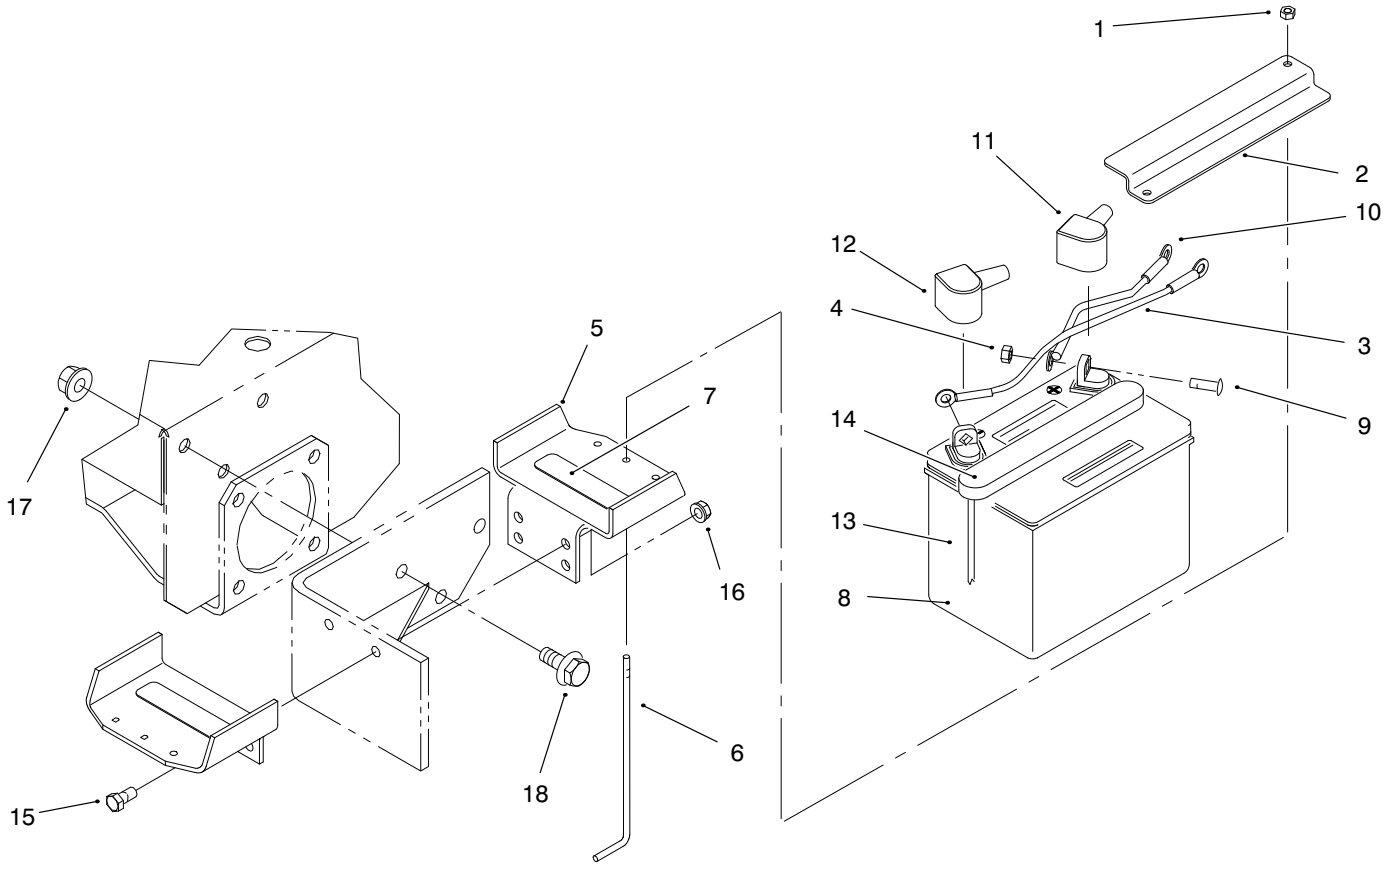

Sheet No.: 10

Battery

Ref. No.	Part No.	Qty.	Description
1	3296–42	2	Nut–Lock
2	82–4620–01	1	Strap–Battery
3	54–3094	1	Wire ASM
4	32149–1	2	Nut–Keps
5	92–2350–01	2	Holder–Battery
6	12–5950	2	Rod–Support
7	51–4210	2	Pad–Tank
8	82–4640	1	Battery–12 Volt
9	322–3	2	Screw–HH
10	93–1189	1	Wire–Red
11	77–0981	1	Boot–Terminal
12	77–0980	1	Boot–Terminal
13	68–3810	1	Tube–Vent
14	84–1830	1	Cap–Battery
15	323–9	2	Screw–HH
16	3296–39	2	Nut–Lock
17	32128–23	6	Nut–Lock
18	3234–32	6	Screw–HH

Ref. No.	Part No.	Qty.	Description

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

3322–255

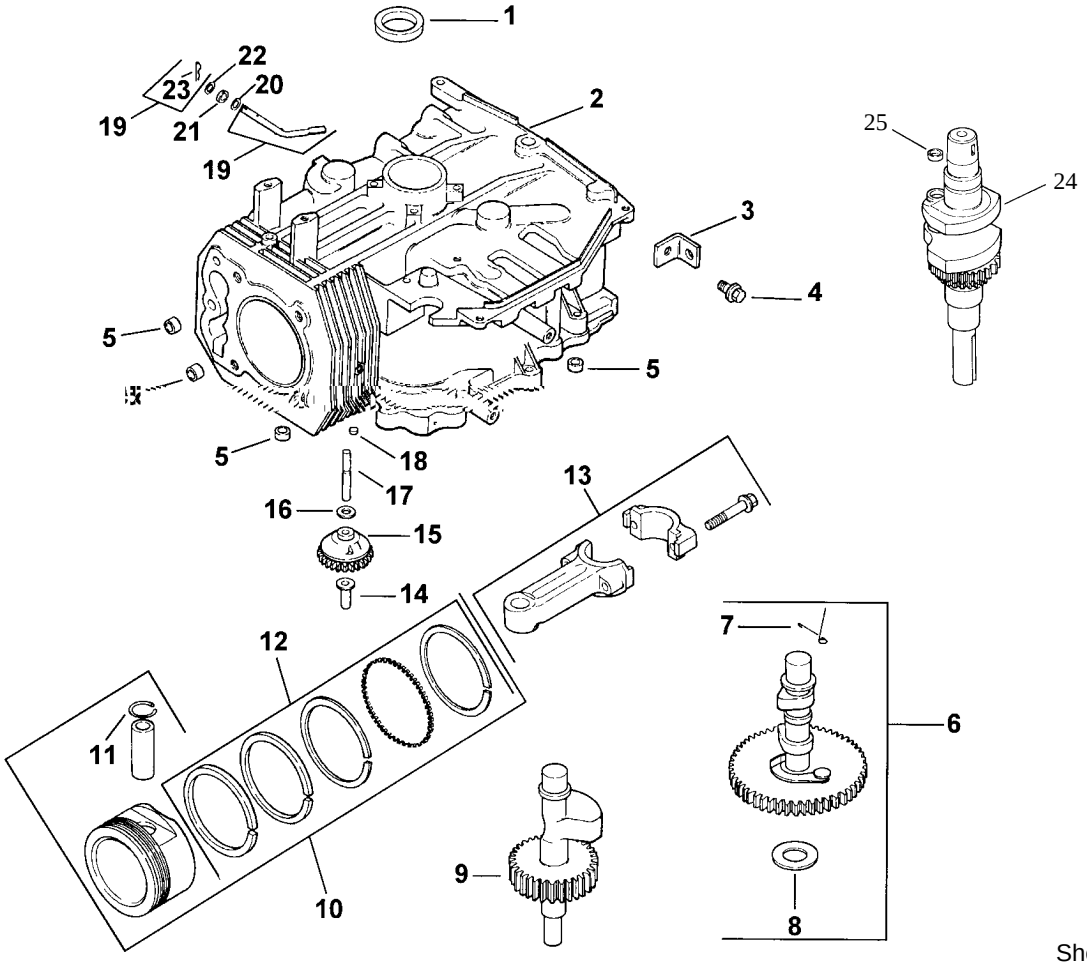

Sheet No.: 2 01

Crankcase

Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal–Crankshaft
2	12 522 18	1	Shortblock
3	12 445 02	1	Strap–Lifting
4	M–0839025	1	Screw M8x1.25x22
5	12 380 17	4	Dowel–Locating
6	12 755 49	1	Kit–Camshaft INC 7–8
7	12 089 31	1	Spring–Actuating
8	12 422 07	A/R	Shim–Camshaft A/R
8	12 422 08	1	Shim–Camshaft A/R
8	12 422 09	A/R	Shim–Camshaft A/R
8	12 422 10	A/R	Shim–Camshaft A/R
8	12 422 11	A/R	Shim–Camshaft A/R
8	12 422 12	A/R	Shim–Camshaft A/R
8	12 422 13	A/R	Shim–Camshaft A/R
9	12 144 27	1	Shaft–Balance
10	12 847 07	1	Set Piston w/Ring STD
10	12 847 08	1	Set–Piston w/Ring .25
10	12 847 09	1	Set–Piston w/Ring .50
11	12 018 02	2	Retainer–Piston Pin
12	12 108 07	1	Ring Set STD
12	12 108 08	1	Ring Set .25
12	12 108 09	1	Ring Set .50
13	12 067 05	1	Rod Connecting STD
13	12 067 06	1	Rod Connecting .25

Ref. No.	Part No.	Qty.	Description
14	12 380 01	1	Pin–Governor Regulating
15	12 043 05	1	Gear–Governor ASM
16	M–0631005	1	Washer–Governor
17	12 144 02	1	Shaft–Governor Gear
18	52 139 09	1	Plug–Cup
19	12 755 64	1	Kit – Shaft–Governor Cross (Incl. Ref.#23)
20	X–25–102	1	Washer–Flat
21	12 032 01	1	Seal–Governor Shaft
22	M–0631015	1	Washer–Governor Shaft
23	12 154 05	1	Clip – Hitch Pin
24	12 014 30	1	Crankshaft ASM
25	12 139 01	1	Plug–Cup
*	12 030 02	1	Bearing – Crankshaft 0.25
*	12 030 03	1	Bearing – Crankshaft 0.50
*	12 755 82	1	Set – Gasket

* Not Illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

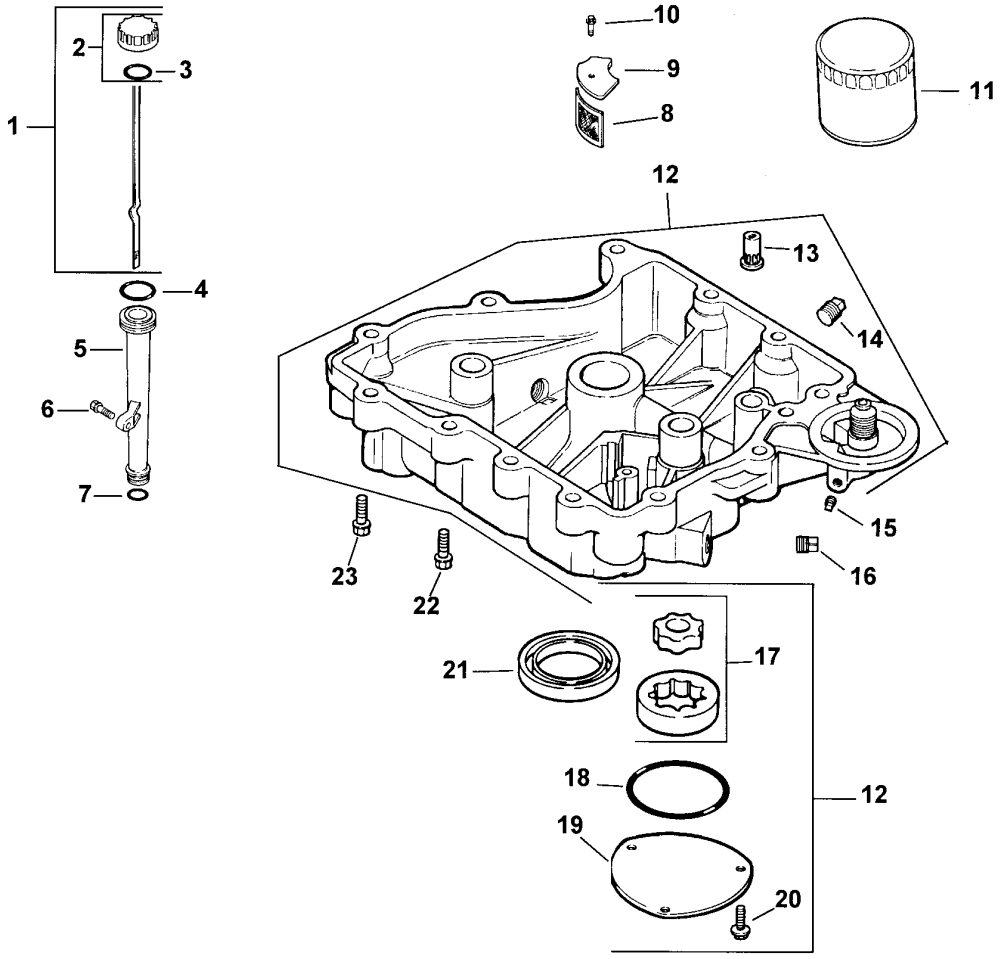

Sheet No.: 2 02

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INC 2–3
2	25 755 13	1	Kit–Oil Cap INC 3
3	12 153 03	1	O Ring–Fill Cap
4	12 153 02	1	O Ring–Upper Fill Tube
5	12 123 04	1	Tube–Oil Fill
6	M–0545020	1	Screw M5x0.8x20
7	12 153 01	2	O Ring–Lower Fill Tube
8	25 162 07	1	Screen–Oil
9	12 096 03	1	Cover–Oil Pickup Screen
10	M–0545016	1	Screw M5x0.8x16
11	52 050 02	1	Filter–Oil
12	12 199 45	1	Pan – Oil (Incl. Ref. #13, 14, 17–20)
13	25 462 09	1	Valve – Oil Pressure
14	X–75–2	2	Plug–1/4nptf
15	X–75–1	2	Plug–1/8nptf
16	X–75–10	2	Plug–SH 3/8 NPTF
17	12 393 01	1	Pump–Oil
18	12 153 06	1	O Ring–Oil Pump Cover
19	12 096 34	1	Cover–Oil Pump
20	M–0545016	3	Screw M5x0.8x16
21	12 032 03	1	Seal–Crankshaft

Ref. No.	Part No.	Qty.	Description
22	24 086 16	11	Screw–M8X1.25X45
23	24 068 17	1	Screw–M5X1.25X45

* Not illustrated

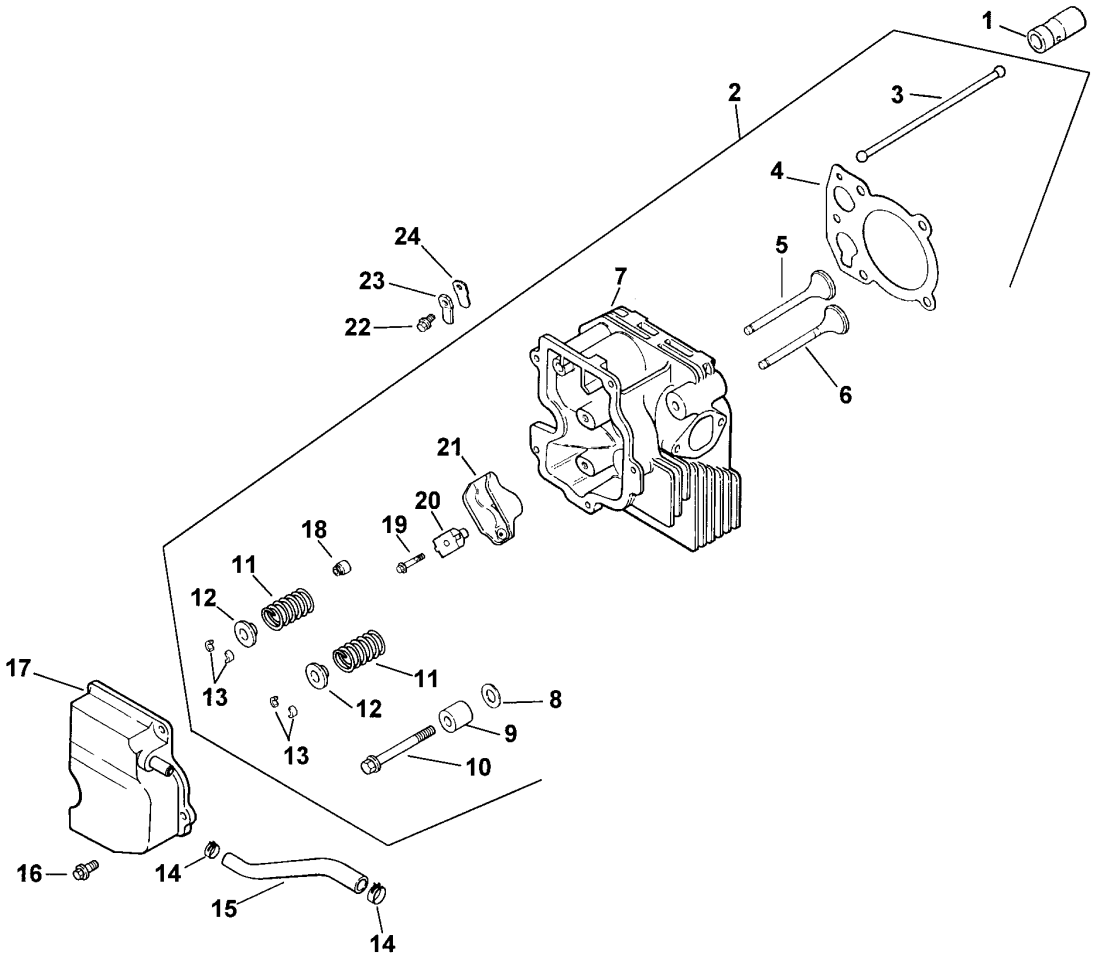

eet No.: 2 03

Cylinder Head, Valves And Breather

Ref. No.	Part No.	Qty.	Description
1	12 351 02	2	Lifter–Valve
2	12 755 81	1	Kit–Cylinder Head
3	12 411 01	2	Rod–Push
4	12 041 10	1	Gasket–Cylinder Head
5	12 017 01	1	Valve–Intake STD
5	12 017 02	1	Valve–Intake .25
6	12 016 01	1	Valve–Exhaust STD
6	12 016 02	1	Valve–Exhaust .25
7	12 318 19	1	Head – Cylinder
8	12 468 05	1	Washer–Flat
9	12 112 13	1	Spacer–Head Bolt Exhaust
10	12 086 15	5	Screw M10x1.5x80
11	12 089 01	1	Spring–Valve
12	12 173 01	2	Cap–Valve Spring
13	12 755 03	2	Kit–Retainer
14	X–426–9	2	Clamp–Hose
15	12 326 03	1	Hose–Breather
16	M–0645020	3	Screw–HH M6x1.0x20
17	12 096 07	1	Cover–Valve w/Nipple
18	24 023 05	1	Seal–Valve Spring
19	M–0640034	2	Screw M6x1.0x34
20	12 599 03	2	Pivot – Rocker Arm
21	25 186 01	2	Arm–Rocker
22	M–0545010	1	Screw M5x0.8x10
23	12 018 01	1	Retainer–Breather Reed
24	12 402 02	1	Reed–Breather

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

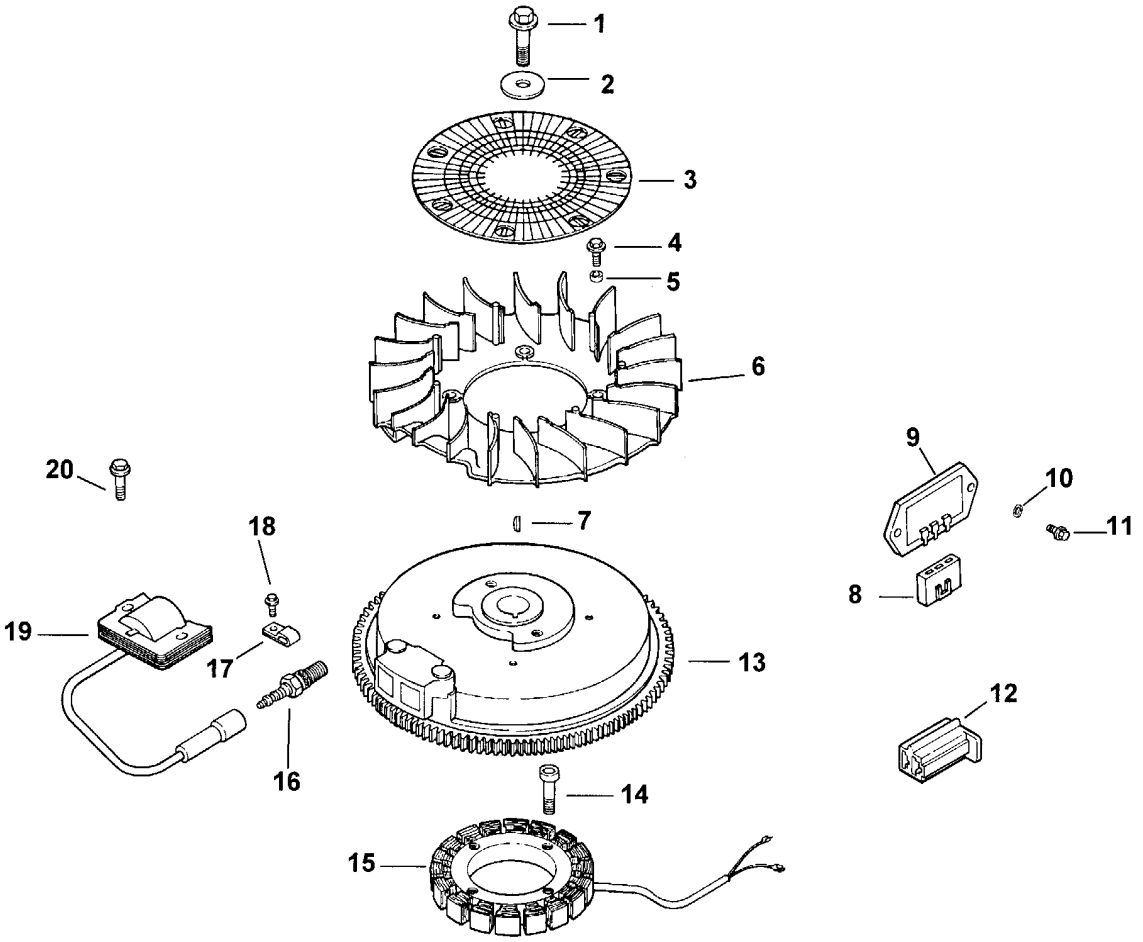

:t No.: 2 04

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw–Flywheel Mounting
2	12 486 03	1	Washer–Flat
3	12 162 03	1	Screen–Grass
4	M–0639016	4	Screw M6x1.0x16
5	12 112 01	4	Spacer–Fan
6	12 157 02	1	Fan
7	X–42–15	1	Key
8	236602	1	Connector–Regulator
9	12 403 01	1	Rectifier–Unregulated
10	X–22–11	2	Washer – Lock
11	M–0639016	2	Screw M6x1.0x16
12	41 155 03	1	Connector
13	12 025 33	1	Flywheel ASM
14	M–0548025	4	Screw M5x0.8x25
15	54 755 09	1	Kit – Stator–15 Amp (Incl.Bracket P/N #24 126 71)
16	12 132 02	1	Spark Plug
17	X–728–1	2	Clip–Kill Lead
18	M–0545010	1	Screw M5x0.8x10
19	12 584 02	1	Module–Ignition
20	M–0545020	2	Screw M5x0.8x20
*	X–25–5	1	Washer
	12 518 01	1	Lead–White
*	25 518 05	1	Lead–Black
*	25 518 29	1	Lead–Black
*	24 126 71	1	Bracket – Stator Wire

* Not illustrated

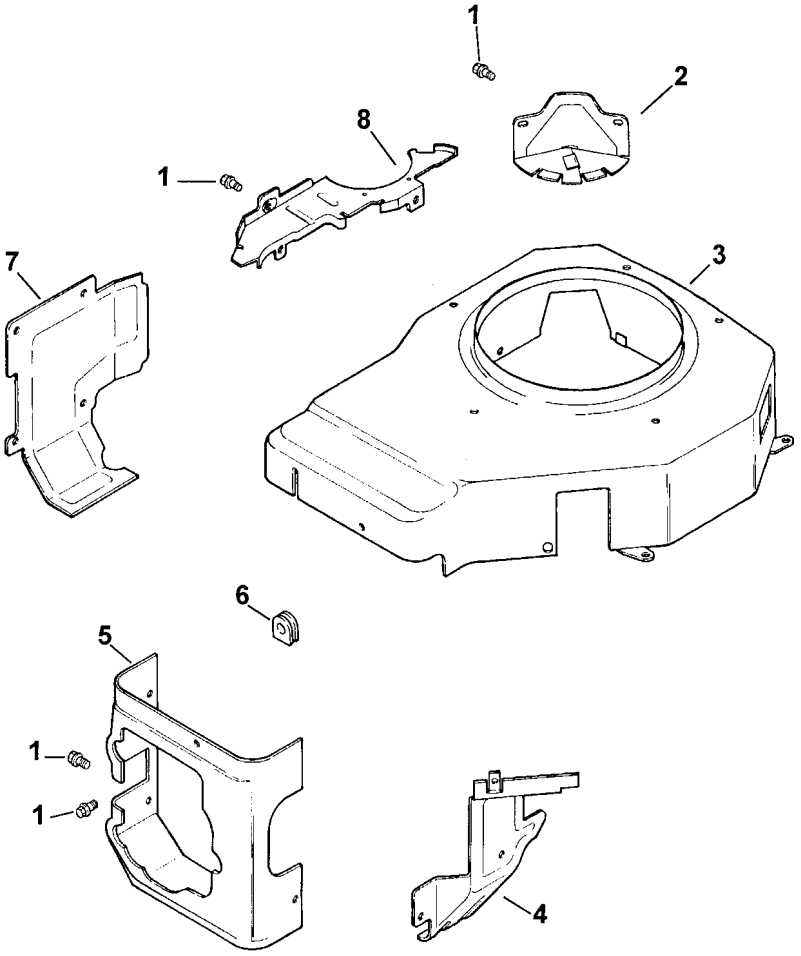

Sheet No.: 2 05

Blower Housing And Baffles

Ref. No.	Part No.	Qty.	Description
1	M–0545010	15	Screw M5x0.8x10
2	12 096 29	1	Cover–Starter
3	12 027 37	1	Housing–Blower
4	12 063 05	1	Baffle–Carburetor
5	12 063 08	1	Baffle–Cyl. Head
6	12 313 03	1	Grommet–Blower
7	12 063 01	1	Baffle–Cylinder
8	12 146 07	1	Plate–Blower Housing
*	12 133 67	1	Decal–Hoursepower

Ref. No.	Part No.	Qty.	Description

* Not illustrated

ENGINE KOHLER MODEL NO. CV15T Spec 41560
Obtain Parts From Kohler

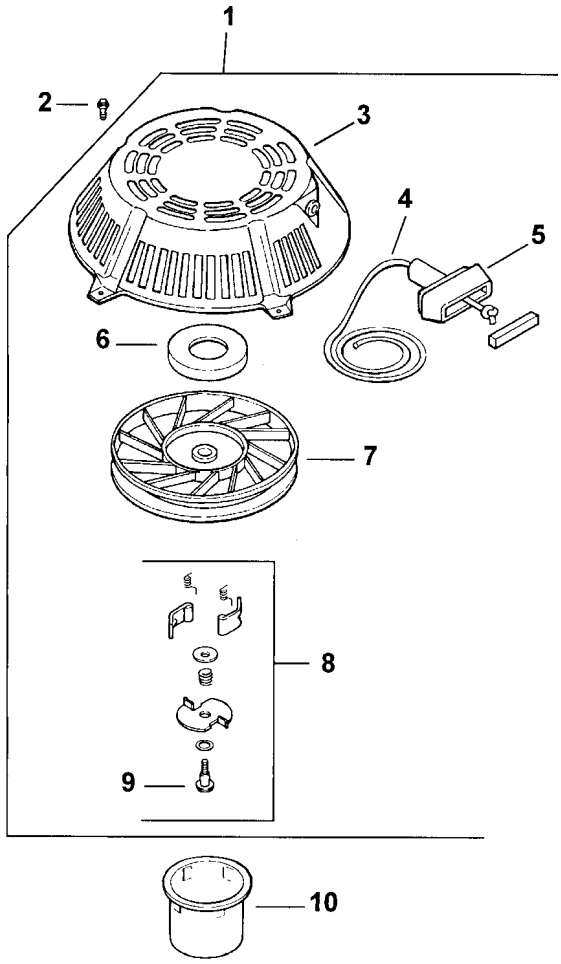

Sheet No.: 2 06

Starter System

Ref. No.	Part No.	Qty.	Description
1	12 165 01	1	Starter Incl 3–9
2	M–0545010	5	Screw M5x0.8x10
3	12 081 01	1	Housing–Starter
4	12 160 01	1	Rope–Starter
5	25 166 01	1	Handle–Recoil
6	12 089 06	1	Spring & Keeper
7	12 093 01	1	Pulley
8	12 757 06	1	Kit–Dog Replacement (incl. Ref.#9)
9	41 086 09	1	Screw–Posidrive
10	15 109 01	1	Cup–Driver
*	12 113 07	1	Decal–Starting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

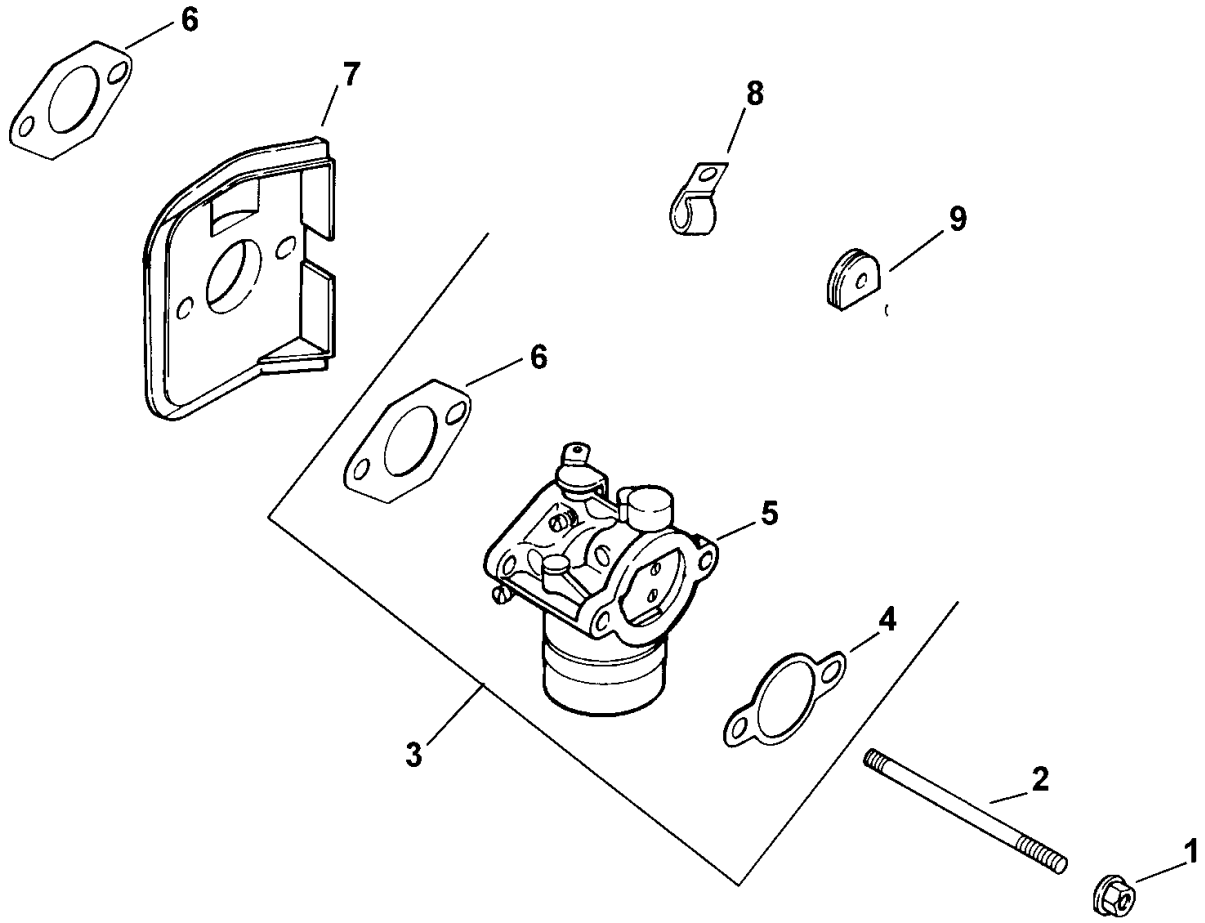

: 2 08

Fuel System

Ref. No.	Part No.	Qty.	Description
1	M–0641060	2	Nut M6x1.0
2	M–0629122	2	Stud M6x1.0x110
3	12 853 80	1	Kit–Carburetor w/Gaskets
4	12 041 02	1	Gasket–Air Cleaner
5	12 053 80	1	Carburetor ASM
6	12 041 01	2	Gasket–Carburetor
7	12 265 04	1	Deflector–Heat
8	47 154 01	1	Clip–Cable
9	12 313 01	1	Grommet
*	12 757 02	1	Kit–Float
*	12 757 08	1	Kit–Choke Repair
*	12 757 03	1	Kit–Carburetor Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated

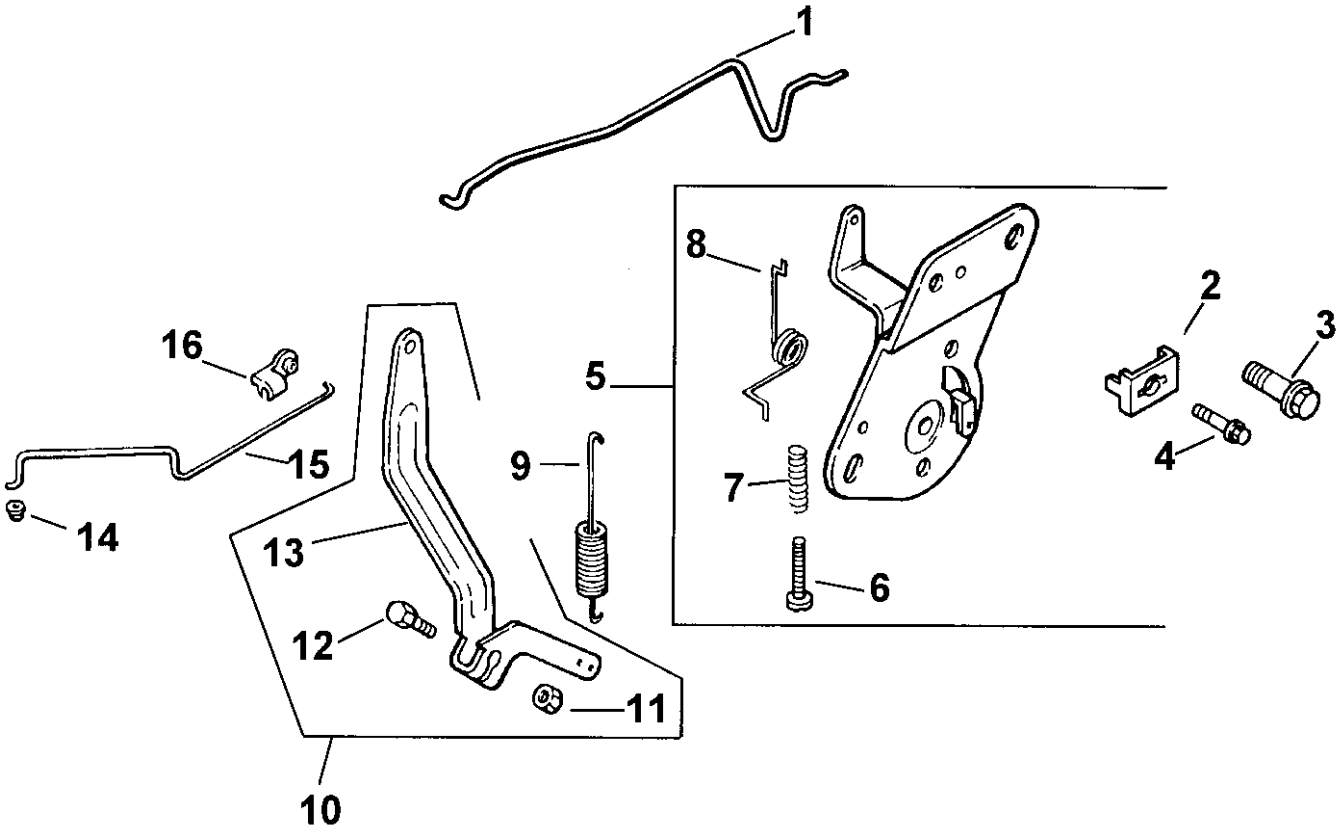

Sheet No.: 2 09

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke
2	12 237 01	1	Clamp–Cable
3	M–0664020	2	Screw M6X1.0X20
4	M–0645016	1	Screw–HH M6x1.0x16
5	12 536 01	1	Control–Speed
6	SM–0443025	1	Screw
7	12 089 11	1	Spring
8	12 089 23	1	Spring–Choke Return
9	12 089 19	1	Spring–Governor
10	12 755 83	1	Kit – Governor Lever (Incl. Ref.#11–13)
11	12 100 07	1	Nut
12	52 211 04	1	Bolt – Round HD
13	12 090 26	1	Lever–Governor
14	25 158 08	1	Bushing–Linkage
15	12 079 01	1	Linkage–Throttle
16	25 158 11	1	Bushing–Linkage

Ref. No.	Part No.	Qty.	Description

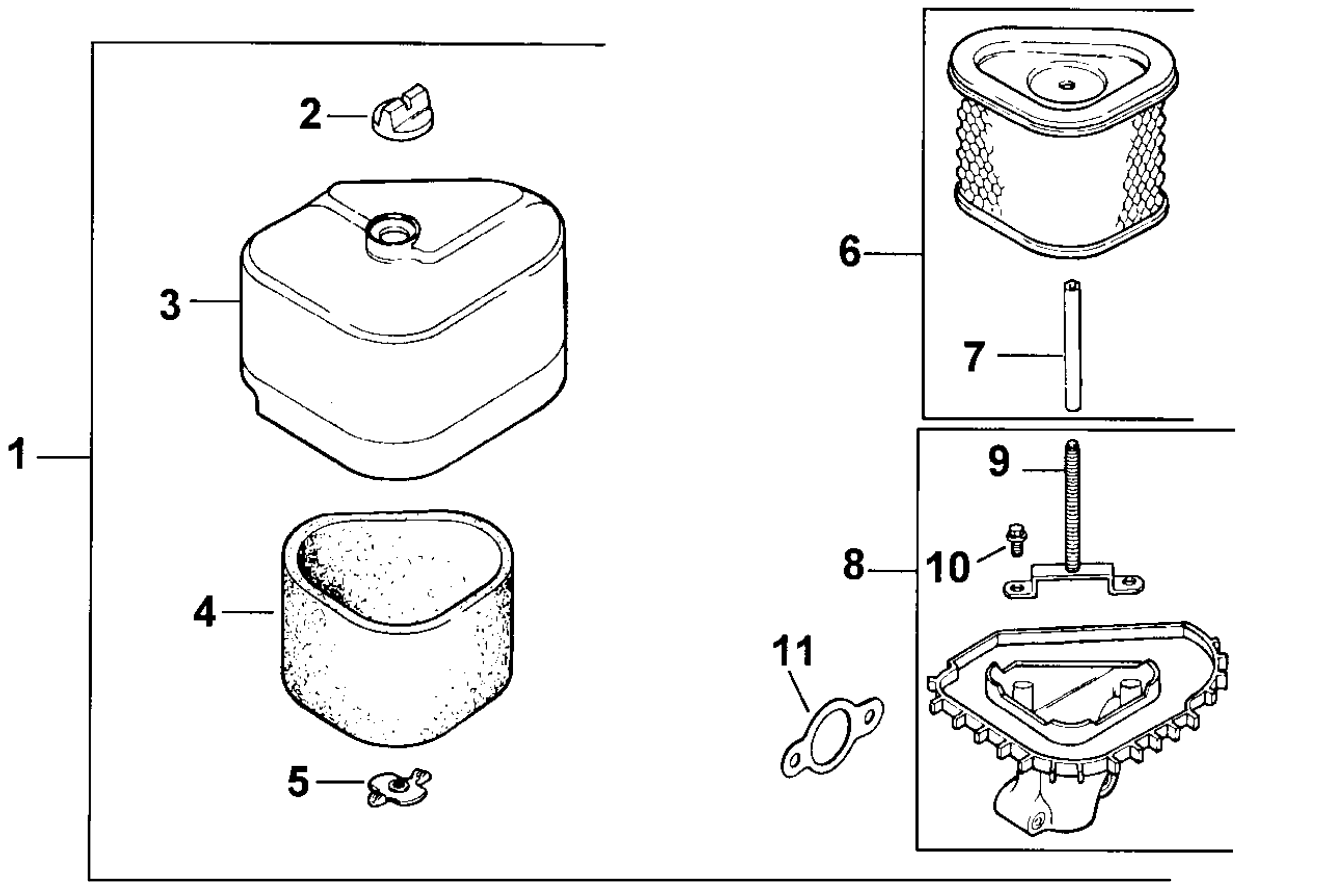

Sheet No.: 207

Air Cleaner

Ref. No.	Part No.	Qty.	Description
1	12 734 02	1	Kit–Air Cleaner (Incl. Ref.# 2–11)
2	25 341 03	1	Knob–Cover
3	12 096 16	1	Cover–Air Cleaner
4	12 083 12	1	Precleaner–Element
5	12 100 01	1	Nut–Wing
6	12 083 10	1	Element–Air Cleaner (Incl. Ref.#7)
7	12 032 11	1	Seal
8	12 094 07	1	Base–Air Cleaner (Incl. Ref.#9, 10)
9	12 072 04	1	Stud–Mounting Plate
10	12 086 01	1	Screw–Mounting Plate
11	12 041 02	1	Gasket–Air Cleaner
*	12 113 04	1	Decal–Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated

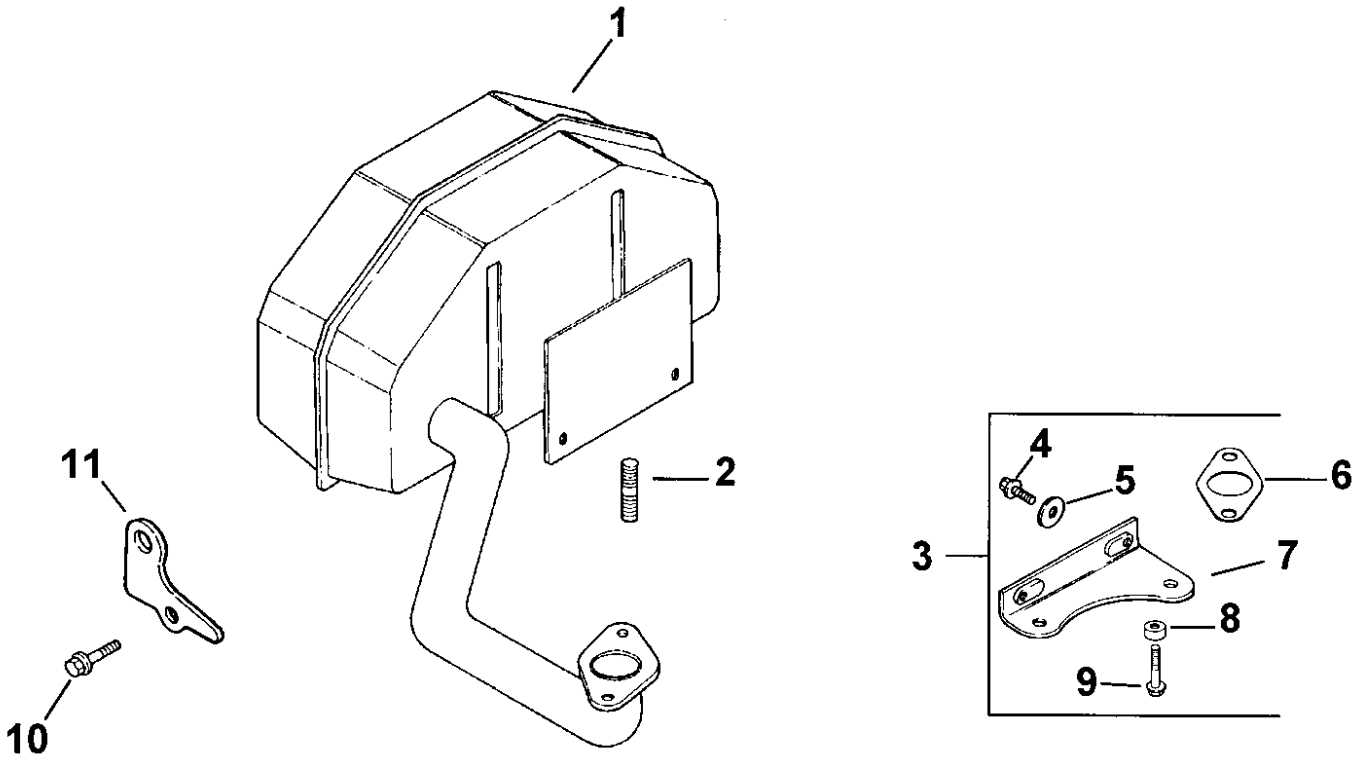

Sheet No.: 2 10

Exhaust

Ref. No.	Part No.	Qty.	Description
1	12 068 03	1	Muffler
2	M–0829033	2	Stud M8x1.25x20
3	12 755 30	1	Kit–Bracket (Incl. Ref.#4–9)
4	M–0650012	2	Screw
5	X–25–52	2	Washer
6	12 041 03	1	Gasket – Exhaust
7	12 126 55	1	Bracket–Muffler
8	12 468 01	1	Washer
9	12 086 13	1	Screw
10	M–0645025	1	Screw
11	12 445 06	1	Strap–Lifting

Ref. No.	Part No.	Qty.	Description

* Not illustrated

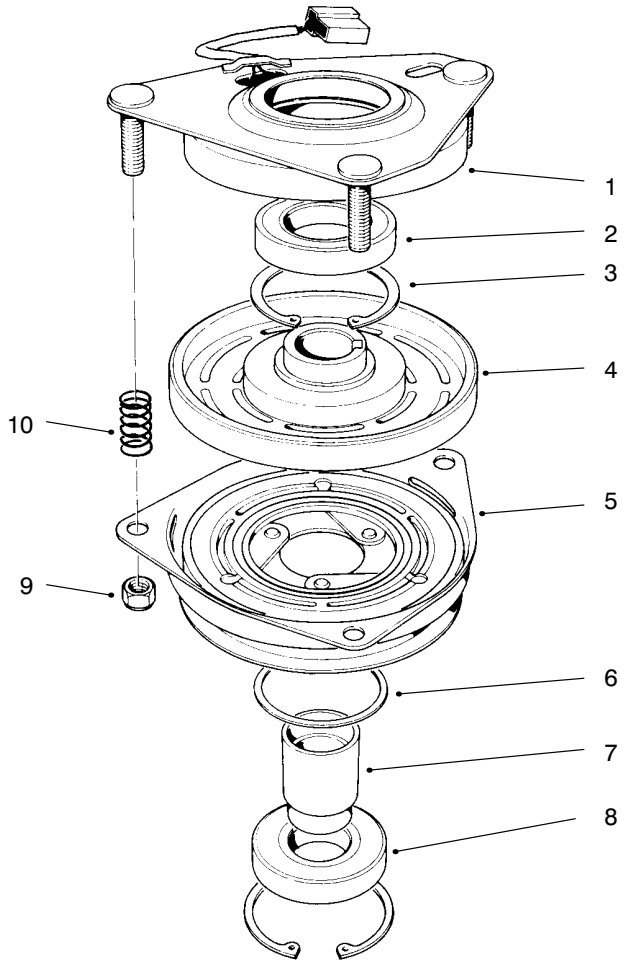

T−0080

CLUTCH ASSEMBLY NO. 54−3200

Ref. No.	Part No.	Description	No. Used
1	54−0230	Field Ass'y (Incl. Ref. #2 & 3)	1
2	251−292	Bearing − Field	1
3	44−8310	Ring − Retaining	2
4	44−8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1
5	55−7410	Armature & Pulley Assemble (Incl. Ref. #3,6,7, & 8)	1
6	44−8330	Spacer	1
7	44−8340	Collar − Bearing	1
8	251−291	Bearing − Pulley	1
9	3296−5	Nut − Lock	3
10	44−8320	Spring	3

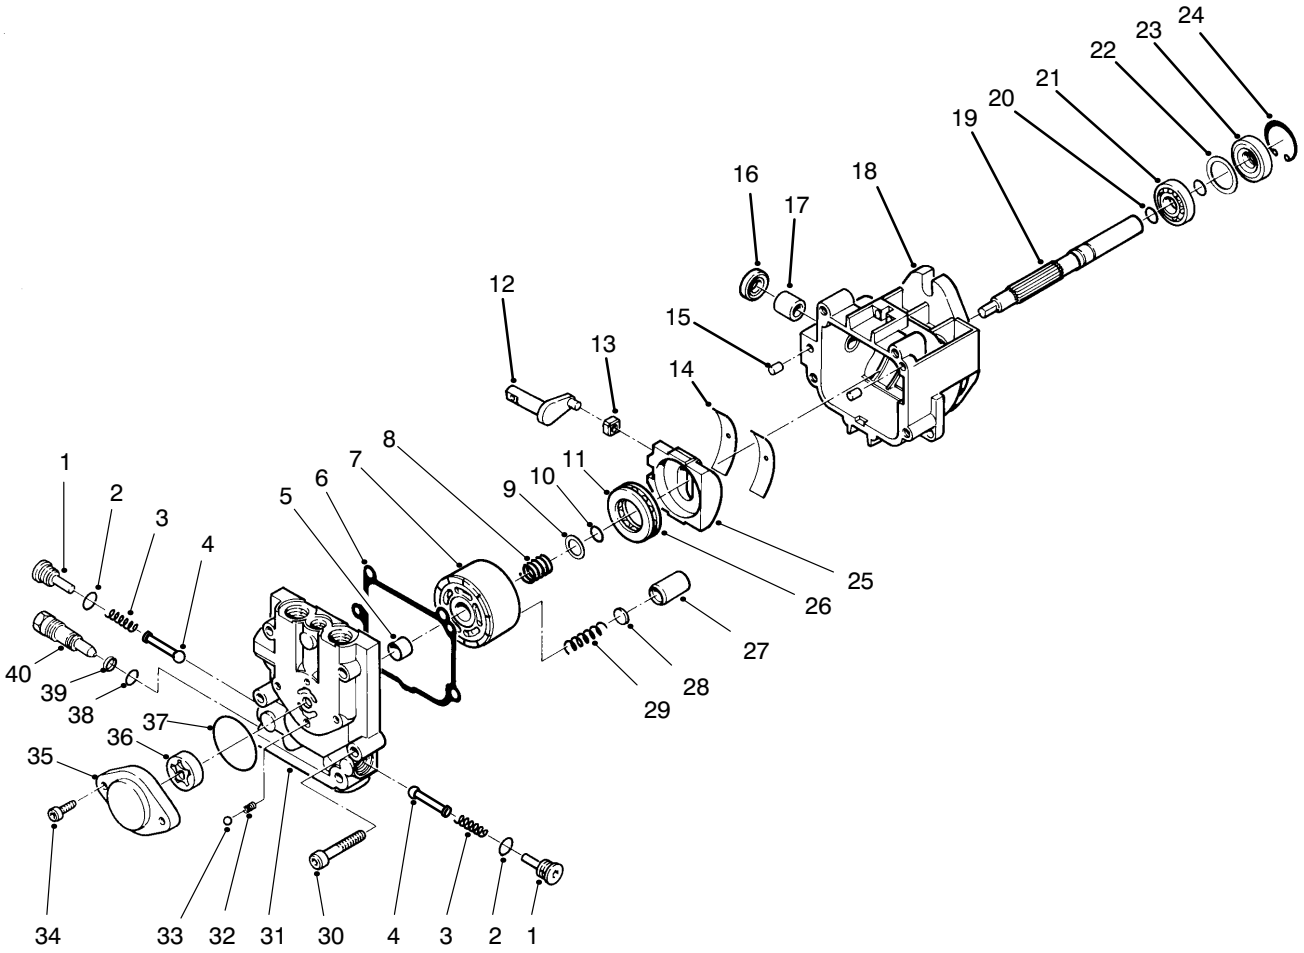

T−1236

Hydraulic Pump Assembly No. 95–1538

Ref. No.	Part No.	Description	No. Used
*	82−6120	Check Valve Kit (Incl. Ref. #2−4	1
2		Seal − O−Ring	2
3		Spring	2
4		Poppet	2
5		Journal − Bearing	1
6		Gasket − End Cap	1
7		Cylinder Block Kit (Incl. Ref. #8−10 & 27−29)	1
8		Spring	1
9		Washer	1
10		Ring − Retaining	1
11		Plate − Thrust	1
12		Arm − Trunnion	1
13		Guide − Slot	1
14		Cradle − Bearing	2
15		Pin	2
16		Seal − Lip	1
17		Journal − Bearing	1
18		Housing − Assembly (Incl. Ref. #16 & 17)	1
19		Shaft	1
20		Ring − Retaining	2
21		Bearing − Ball	1
22		Spacer	1

Ref. No.	Part No.	Description	No. Used
23		Seal − Lip	1
24		Ring − Retaining	1
25		Swashplate Assembly	1
26		Roller − Thrust	1
27		Piston	5
28		Washer − Thrust	5
29		Spring − Piston	5
30		Screw	4
31		End Cap Assembly (Incl. Ref. #5)	1
32		Ball	1
33		Spring	1
34		Screw	2
35		Housing − Charge Pump	1
36		Gerotor Assembly	1
37		Seal − O−Ring	1
38		Seal − O−Ring	1
39		Ring − Back−Up	1
40		Valve − Bypass	1
*	80−6110	Charge Relief Valve Kit (Incl. Ref. #32−33)	1
*	80−6130	Overhaul Seal Kit (Incl. Ref. #6, 10, 16, 20, 23 & 37−39)	1

*Not Illustrated

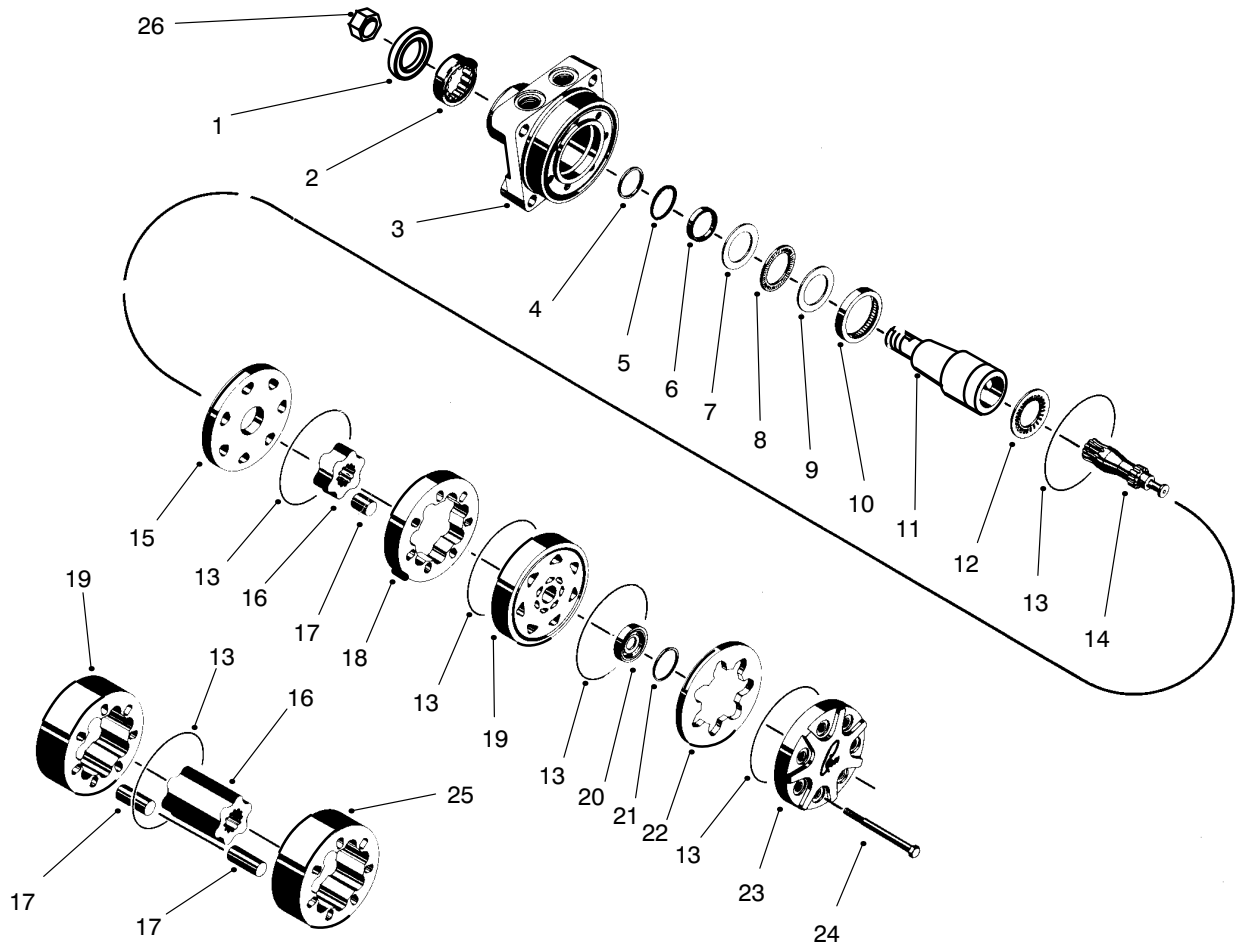

C–0737

Traction Drive Motor

Ref. No.	Part No.	Description	No. Used
1		Seal	1
2		Bearing	1
3		Housing	1
4		Washer – Back Up	1
5		Washer – Back Up	1
6		Seal	1
7		Washer – Thrust	1
8		Bearing – Thrust	1
9		Washer – Thrust	1
10		Bearing – Inner	1
11		Coupling – Shaft	1
12		Bearing – Thrust	1
13		”O”Ring	5
14		Link – Drive	1

Ref. No.	Part No.	Description	No. Used
15		Plate Wear	1
16		Rotor	1
17		Vane	7
18		Stator	
19		Manifold	1
20		Commutator	1
21		Seal – Commutator	1
22		Commutator – Ring	1
23		Cover – End	1
24		Bolt – Special	A/R
25		Stator Half	
26	85–7310	Nut	1
*	85–7320	Kit – Seal	
		(Incl. Ref. #1,4,6,13 & 20)	1

*Not Illustrated

3322−255

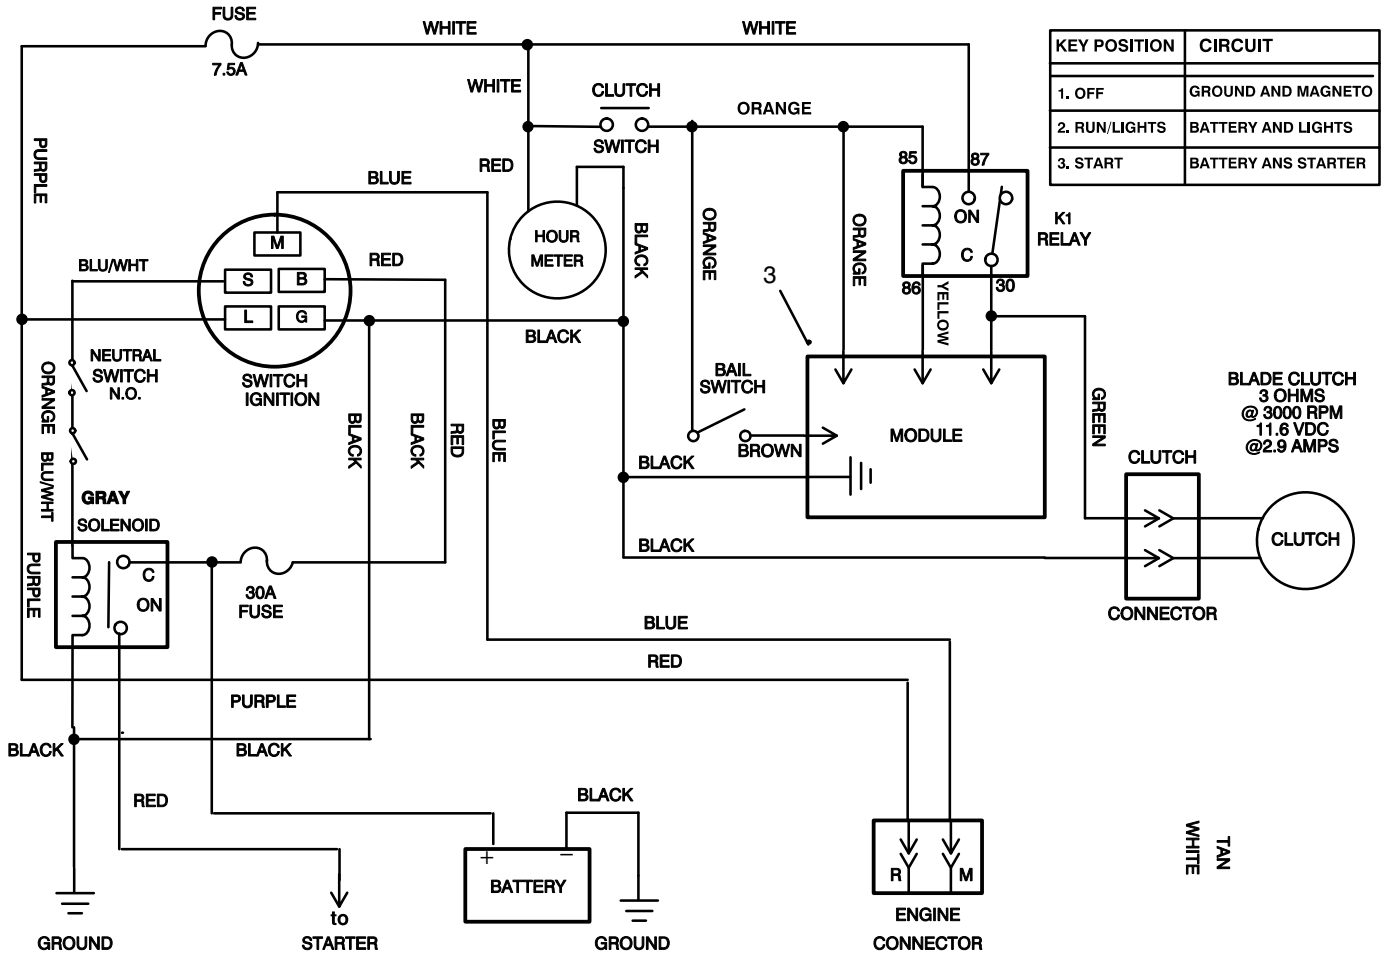

Electric Schematic

Ref. No.	Part No.	Description	No. Used
1	95−2807	Wire Harness (Ref.)	1
2	63−7590	Relay (Ref.)	1

Ref. No.	Part No.	Description	No. Used
3	94−9666	Interlock Module (Ref.)	1

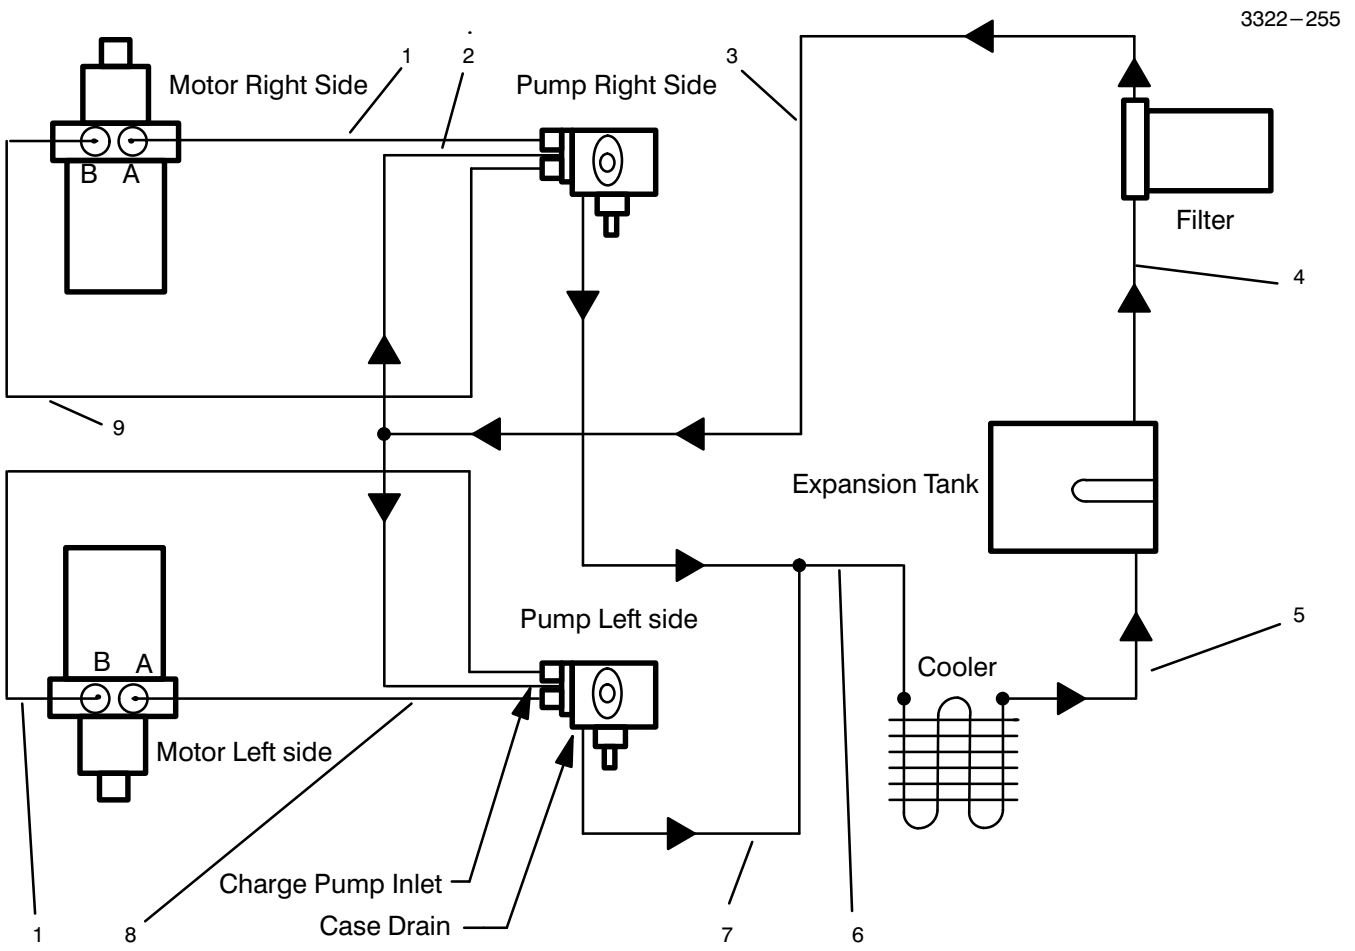

C−0708

Hydraulic Schematic

Ref. No.	Part No.	Description	No. Used
1	82−4550	Hose Assembly	2
2	82−4170	Hose Assembly	1
3	95−5880	Hose Assembly	1
4	82−4200	Hose Assembly	1
5	82−4193	Hose Assembly	1

Ref. No.	Part No.	Description	No. Used
6	82−4192	Hose Assembly	1
7	82−4201	Hose Assembly	1
8	82−4560	Hose Assembly	1
9	82−4540	Hose Assembly	1

TORO PART NUMBER INDEX

Part No.	Pg. No.	Ref. No.	Qty.	Description
112843	5	13	1	Washer−PTO
608006	5	16	1	Key
12−5950	7	6	2	Rod−Support
23−0660	4	18	1	Switch−Starter
27−6230	5	8	1	Bolt−Wheel
28−3891	1	39	1	Wire ASM
29−0590	6	12	1	Screen−Filler
29−0642	1	5	1	Jiffy−Trim
44−5940	5	15	1	Pulley−Drive
47−2964	1	22	1	Hose−Gas
47−2982	5	4	1	Hose−Fuel
51−4210	7	7	2	Pad−Tank
51−4540−03	1	18	1	Retainer−Clutch
54−3094	7	3	1	Wire ASM
54−3200	5	14	1	Clutch ASM
55−3570	5	1	1	Cap−Fuel
56−6360	1	20	1	Filter−Fuel
57−6380	1	17	4	Screw−HH
62−4540−03	5	10	1	Pulley−Idler
63−7590	4	10	1	Relay
63−8360	4	22	2	Key−Ignition
63−8440	1	24	1	Decal−Hot Surface
65−7410	5	27	2	Switch−Single Pole
67−8110	6	39	2	Filter−Oil
68−2190	5	7	1	Spring−Extension
68−3810	7	13	1	Tube−Vent
74−0521	3	24	1	Fitting−Rod
74−0630	4	3	1	Control−Throttle
74−0720	4	8	1	Tube−Manual
74−0761	1	23	1	Engine−Kohler
74−0930−01	1	19	1	Guard−Pulley
74−0950	1	26	2	Elbow
75−6820	4	24	1	Hour Meter
76−0200	6	11	1	ASM−Cap
77−0980	7	12	1	Boot−Terminal
77−0981	7	11	1	Boot−Terminal
80−6090	6	35	2	Key−Square
82−2181−03	4	23	1	Panel−Control
82−2190	3	11	1	Switch−Bail
82−2300	4	1	1	Switch
82−3790	5	36	2	Arm−Control
82−3820	4	2	1	Boot−Switch
82−3830	6	29	2	Hub−Wheel
82−3840	3	21	2	Spacer−Latch
82−3920	2	23	2	Stop−Reverse
82−4110	6	34	1	V Belt
82−4130	2	1	4	Bearing
82−4160	2	20	2	Spring−Detent
82−4170	6	7	1	ASM−Hose
82−4192	6	15	2	ASM−Hose
82−4200	6	16	1	ASM−Hose
82−4201	6	9	1	ASM−Hose
82−4210−01	2	4	1	Bracket−Bushing
82−4220	1	30	1	Cooler−Oil
82−4240	2	21	2	Spacer−Bearing
82−4330−01	2	14	1	Arm−Detent LH
82−4340−01	2	15	1	Arm−Detent RH
82−4370	2	16	2	Bushing−Arm
82−4500−03	1	32	1	Mount−Cooler
82−4540	6	2	1	ASM−Hose
82−4550	6	1	2	ASM−Hose
82−4560	6	24	1	ASM−Hose
82−4570	5	28	2	Plate−Switch
82−4580−03	5	25	2	Bracket−Neutral
82−4590	3	17	1	Decal−Slope Warning
82−4600	2	26	2	Decal−Hydro
82−4620−01	7	2	1	Strap−Battery
82−4640	7	8	1	Battery−12 Volt
82−7721	4	5	A/R	Decal−Panel
82−8230	6	22	2	Motor−Wheel
84−1830	7	14	1	Cap−Battery
86−4730−01	6	37	2	Plate−Frame
86−4740−01	6	36	2	Spacer−Frame
86−4770−03	5	6	1	Lever−Idler
86−9080	6	41	1	Head−Filter
88−1880	5	5	1	Spring−Compression
92−2350−01	7	5	2	Holder−Battery
92−9845	1	12	1	Solenoid
93−1187−03	4	16	1	Panel−Bottom
93−1189	7	10	1	Wire−Red
93−7032	1	23:2	1	Gasket (Supplied w/Eng)
93−7033	1	23:3	2	Screw
93−7034	1	23:1	2	Nut (Supplied w/Eng)
94−9054−01	2	34	1	Arm−Pivot LH
94−9057	2	7	1	Lever−Pivot LH
94−9059	2	5	1	Lever−Pivot RH
94−9061−01	2	35	1	Arm−Pivot RH
94−9062	2	11	2	Sleeve
94−9093	2	9	2	Rod−Link
94−9095	3	15	1	Rod−Control
94−9096−01	2	37	1	Frame ASM
94−9664	6	26	2	ASM−Wheel & Tire
94−9666	4	17	1	Module
95−1504	3	4	1	Turnbuckle
95−1505	3	5	1	Rod−Control
95−1506	3	1	1	Rod−Control
95−1507−03	3	9	1	Control Bar
95−1510−03	3	10	1	Bail
95−1513−03	3	16	1	Pivot
95−1516	2	30	2	Spacer−Tubular
95−1522−01	2	39	1	Bracket−Pivot
95−1523	3	12	1	Decal−Traction Drive
95−1524	3	13	1	Decal−T Bar
95−1526	5	21	1	Trailing Shield
95−1528	6	33	2	Pulley−Pump
95−1529	5	20	1	Rod−Shield
95−1530−01	2	29	1	Bracket−Pivot
95−1532	6	13	1	Reservoir−Oil
95−1536	3	7	1	Handle
95−1538	5	32	2	Hydraulic Pump ASM
95−1543	5	37	1	Decal−Valve Adjust
95−1544	4	4	1	Decal−Warning
95−2802	5	2	1	Tank−Fuel
95−2807	3	27	1	Harness−Wire
95−2814	1	1	1	Decal−Fuel Shut−Off
95−5517	1	23:4	1	Muffler (Supplied w/Eng)
95−5853	3	22	2	Lock ASM−Quick Release
95−5854	3	33	2	Sleeve
95−5855−03	3	18	2	Spacer−Pivot
95−5856−03	3	29	1	Handle−Upper
95−5859	4	5	1	Decal−Control Panel
95−5862	3	34	1	Decal−Speed Lock
95−5868−01	2	40	1	Guard−Filter
95−5880	6	6	1	ASM−Hose
218−461	4	21	1	Nut−HH
218−595	3	30	1	Connector−Body
231−117	6	26:3	2	Tire
232−27	6	26:1	2	Valve Stem & Cap ASM
237−30	6	3:1	4	O−Ring
237−79	6	3:2	4	O−Ring
237−124	5	34	1	Grommet
240−9	1	6	2	Grommet
242−50	6	27	8	Nut−Lug
242−87	6	26:2	2	Wheel
2410−71	1	4	2	Cap−Plug
2412−98	1	21	2	Clamp−Hose
2412−98	5	3	2	Clamp−Hose
2412−106	1	9	1	R Clamp
2412−106	1	14	1	R Clamp
2412−120	4	9	2	Clamp−R
2412−134	1	31	2	Clamp R
2412−136	1	7	2	Clamp
251−259	2	22	2	Bearing−Ball
257−5	2	36	2	Washer−Thrust

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Pg. No.	Ref. No.	Qty.	Description
283−6	3	25	1	Pin−Clevis
283−55	3	20	2	Pin−Clevis
288−4	1	25	1	Cap−Pipe
289−51	1	27	1	Nipple−Pipe
2815−15	6	10	1	Fitting−Hydraulic
2815−16	6	5	1	Fitting−Hydraulic
321−3	2	25	11	Screw−HH
321−3	4	14	1	Screw−HH
321−3	6	43	2	Screw−HH
321−8	2	31	2	Screw−HH
321−39	1	3	6	Screw−HH
322−3	5	18	2	Screw−HH
322−3	6	18	3	Screw−HH
322−3	7	9	2	Screw−HH
322−4	5	43	2	Screw−HH
322−5	2	2	2	Screw−HH
322−7	2	18	2	Screw−HH
322−7	5	35	2	Screw−HH
322−14	2	24	2	Screw−HH
323−6	2	27	6	Screw−HH
323−9	5	11	1	Screw−HH
323−9	7	15	2	Screw−HH
324−5	5	22	4	Screw−HH
325−11	6	31	8	Screw−HH
3212−9	5	12	1	Screw−HH
3213−8	6	30	8	Screw−HH
3218−2	2	10	4	Nut−Hex Jam
3234−11	3	26	4	Screw−HHF
3234−32	7	18	6	Screw−HH
3241−5	6	32	4	Set Screw
3253−3	6	42	2	Washer−Lock
3253−4	1	34	2	Washer−Lock
3253−4	5	19	4	Washer−Lock
3253−4	6	17	3	Washer−Lock
3254−5	4	19	1	Washer−Lock
3255−7	4	13	A/R	Washer−Lock
3255−8	1	40	1	Washer−Lock
3256−1	1	2	6	Washer−Flat
3256−1	5	24	4	Washer−Flat
3256−23	1	15	4	Washer−Flat
3256−23	2	17	4	Washer−Flat
3256−23	3	23	1	Washer−Flat
3256−78	1	36	2	Washer−Plain
3257−8	6	25	2	Key−Woodruff
3269−8	5	38	2	Rivet
3274−32	2	19	2	Screw−HH
3290−307	3	2	4	Pin−Cotter
3290−378	2	3	1	Tie−Cable
3290−378	3	8	3	Tie−Cable
3290−378	5	26	2	Tie−Cable
3290−392	4	15	A/R	Screw−HH
3290−436	3	32	2	Washer−Belleville
3296−2	4	6	4	Nut Lock
3296−6	5	17	1	Nut−Lock
3296−23	6	38	8	Nut−Lock
3296−29	2	6	6	Nut−Lock
3296−29	5	30	2	Nut−Lock
3296−39	2	38	6	Nut−Lock
3296−39	5	9	1	Nut−Lock
3296−39	7	16	2	Nut−Lock
3296−42	1	29	2	Nut−Lock
3296−42	2	32	11	Nut−Lock
3296−42	4	12	1	Nut−Lock
3296−42	7	1	2	Nut−Lock
3296−47	2	13	2	Nut−Lock
3296−54	4	11	A/R	Nut
32103−3	3	3	1	Nut−Wing
32104−76	4	20	4	Screw−Self TAP
32105−12	3	14	1	Screw−Hex
32105−14	4	7	4	Screw−HH
32112−17	6	28	8	Pushnut
32121−4	2	33	2	Pin−Roll
32128−10	2	28	2	Nut−Lock HHF
32128−21	3	28	4	Nut−HHF
32128−23	7	17	6	Nut−Lock
32128−42	5	33	4	Nut−Hex Flange
32144−1	5	29	4	Screw−HH
32144−4	5	23	4	Screw−HH
32144−4	1	13	3	Screw−TAP
32144−18	4	25	2	Screw−HWH
32144−19	1	8	1	Screw−HH
32149−1	7	4	2	Nut−Keps
32149−2	1	11	2	Nut−Hex Lock
32151−3	2	8	4	Ring−Retaining
32151−80	3	19	2	Ring−Push On
32153−1	3	6	1	Nut Lock
33023−00	3	31	2	Nut−Lock Ni
340−4	6	3	4	Ftg−Hyd
340−6	6	23	4	Fitting−Ors
354−115	6	8	2	Ftg−Hyd
354−116	6	4	2	Fitting−Hydraulic
354−117	6	40	2	Fitting−Hydraulic
354−118	6	14	2	Fitting−Hydraulic

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.