FORM NO. 3321–665

TORO®

Z–Master™

250 Series Z255 with 72” Side Discharge Mower

Model No. 74205 – 990001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Front Frame Assembly	1
Caster And Wheel Assembly	2
Rear Frame And Wheel Assembly	3
Brake And Wheel Hub Assembly	4
Control Panel Assembly	5
Hydraulic System Assembly	6
Hydraulic System Assembly (Continued)	7
Tank And Fuel Lines Assembly	8
Shields And Clutch Assembly	9
Idler Assembly	10
Electrical System Assembly	11
Frame And Deck Assembly	12
Cover And Rollers Assembly	13
Deflector, Spindle And Pulley Assembly	14
Baffle And Belt Assembly	15

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INC	incorporated
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

© The TORO Company — 1998
All Rights Reserved

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

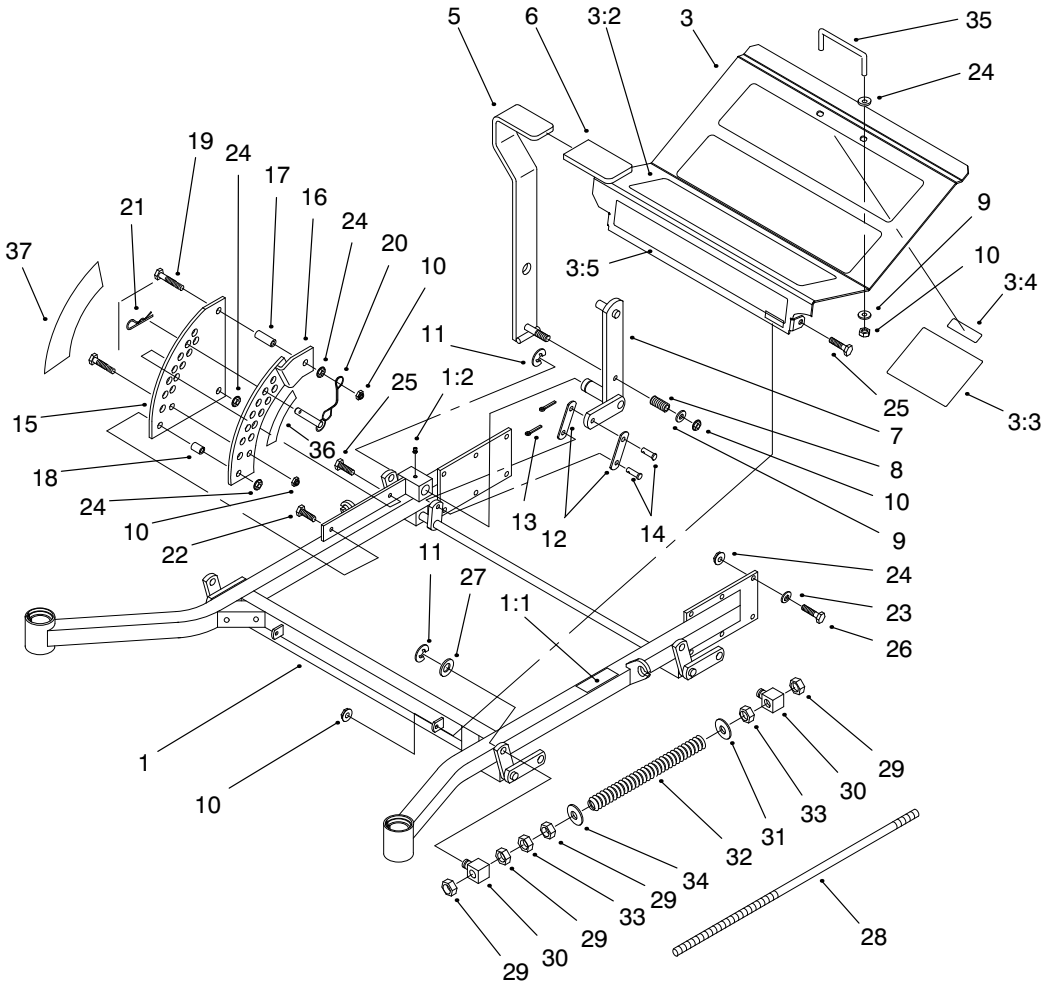

Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	99–4601	1	Front Frame ASM
1:1	E633818	1	Decal
1:2	320–19	5	Fitting–Grease
3	99–4622	1	Floorpan ASM
3:2	E633553	3	Pad–Anti skid
3:3	E633766	1	Decal–Service
3:4	98–5954	1	Decal–Cover Missing
3:5	E633737	1	Decal–Z–Master
3:6	E633706	1	Decal–HOC
5	E632324	1	Lever–Lift
6	E633295	1	Grip–Lift Lever
7	E632219	1	Arm–Deck Lift
8	E633325	1	Spring–Compression
9	3256–24	3	Washer–Flat
10	32146–2	7	Nut–Hex Lock
11	E808505	5	Ring–Retaining
12	E633068	2	Arm–Deck Lift
13	3272–10	2	Pin–Cotter
14	E808284	2	Pin–Clevis
15	E633889	1	Plate–Deck Lift
16	E632899	1	Plate–Deck Lift
17	E633082	1	Bushing
18	E633080	1	Bushing
19	323–13	1	Screw–HH
20	E633097	1	Hitch Pin w/Lanyard
21	E806005	1	Hairpin

Ref. No.	Part No.	Qty.	Description
22	323–9	2	Screw–HH
23	E303327	12	Washer–Lock
24	3290–357	17	Nut–Lock Flange
25	323–6	3	Screw–HH
26	323–7	12	Screw–HH
27	3256–29	4	Washer–Flat
28	E633096	2	Rod–Deck Lift
29	3217–11	8	Nut
30	E633441	4	Swivel–Deck Mount
31	3256–7	2	Washer–Flat
32	E633064	2	Spring–Deck Support
33	3218–6	4	Nut–Hex Jam
34	3256–7	2	Washer–Flat
35	E633587	1	Handle
37	E633345	1	Decal–HOC

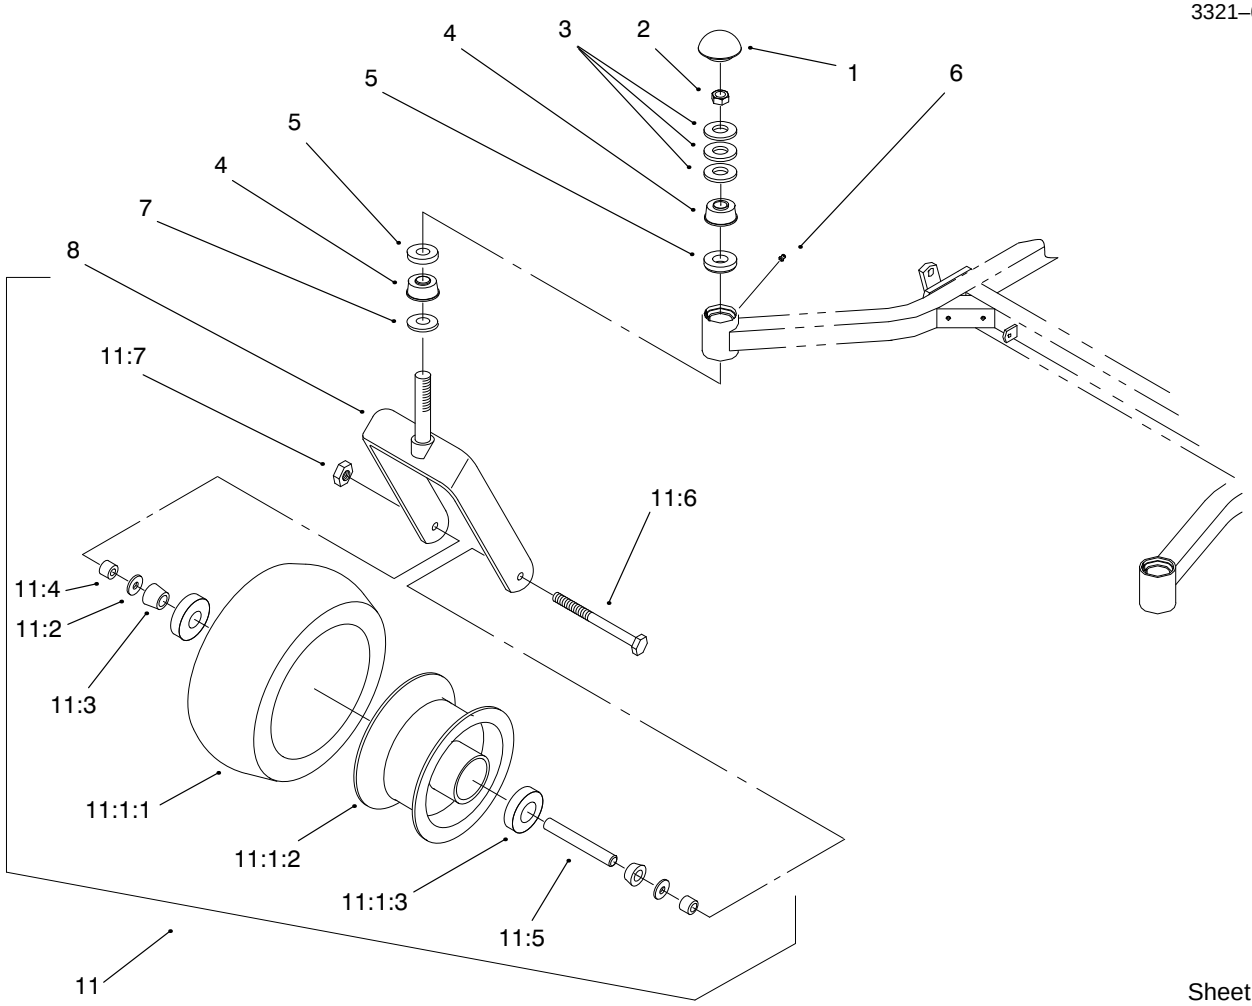

Sheet No.:3

Caster And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	E543513	2	Cap–Grease
2	32146–14	2	Nut–Lock
3	E633508	6	Washer–Belleville
4	254–94	4	Cone–Bearing
5	254–72	4	Cup–Bearing
6	E811010	2	Plug
7	E543511	2	Seal–Grease
8	E632511	2	Fork–Castor
11	E634662	2	Caster Wheel ASM
*11:1	E633582	2	Wheel & Tire ASM
11:1:1	E633002	2	Tire
11:1:2	E633583	2	Wheel
11:1:3	254–79	4	Cup–Bearing
11:2	E633580	4	Seal–Bearing
11:3	254–78	4	Cone–Bearing
11:4	E633581	4	Spacer – Bearing
11:5	E633579	2	Spacer
11:6	E800339	2	Screw–HH
11:7	E804269	2	Nut–Lock

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

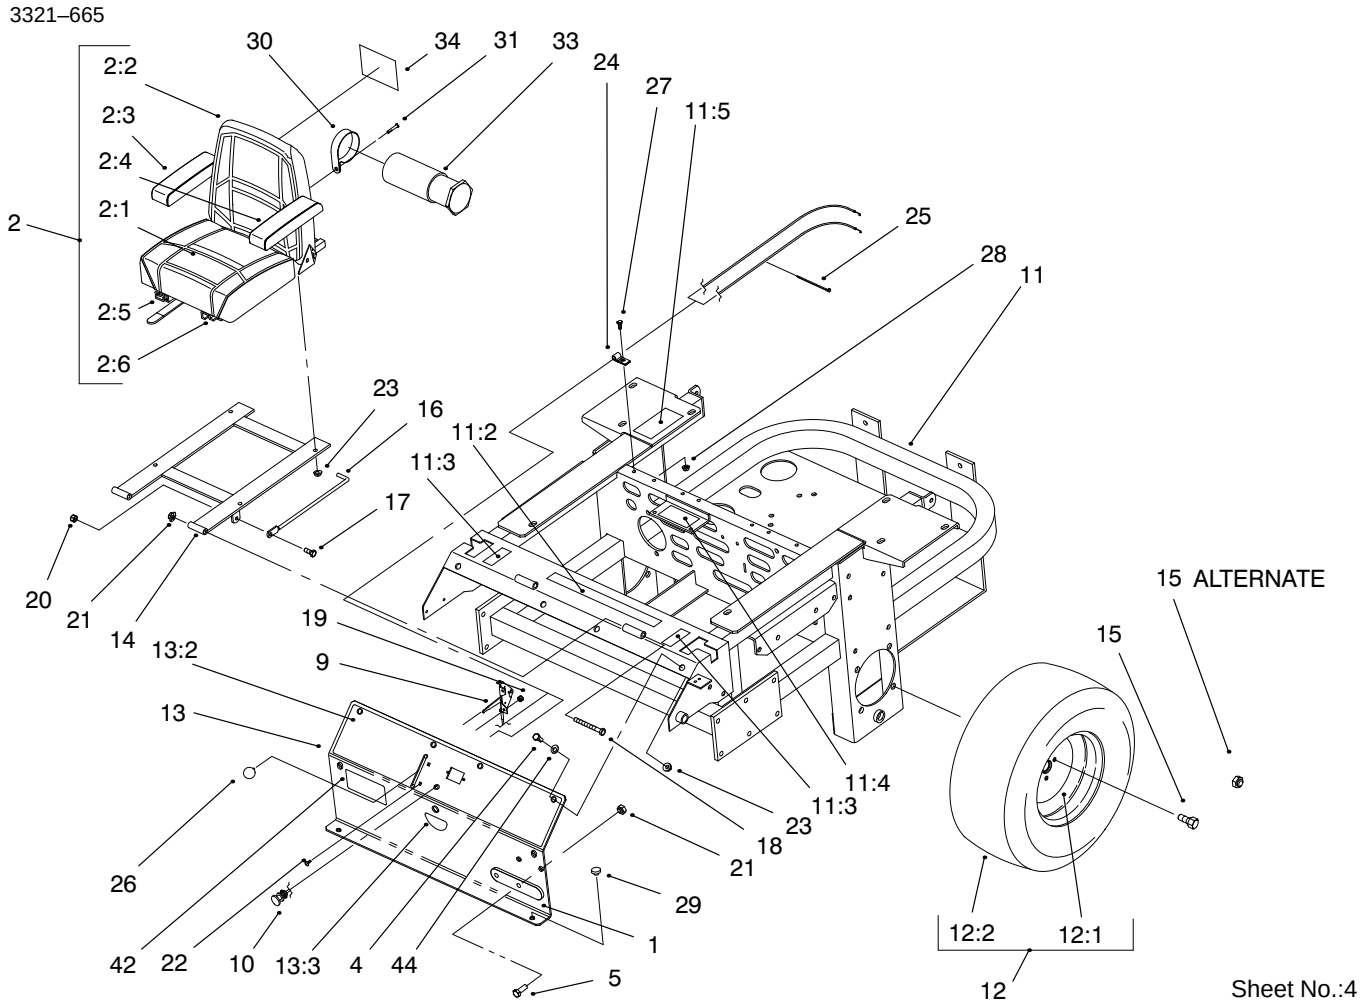

Rear Frame And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	E633964	1	Stop–Park Brake
2	99–4635	1	Seat/Armrest ASM (For Serial #990001 – 992099.)
2	E633705	1	Seat/Armrest ASM (Serial #993000 & Up)
2:1	E543407	1	Cushion–Seat
2:2	E633709	1	Cushion–Seat Back
2:3	E633710	1	Armrest–RH
2:4	E633711	1	Armrest–LH
2:5	E543401	4	Spacer–Track
2:6	E523428	1	4” Locking Track Set
4	322–3	8	Screw–HH
5	323–6	2	Screw–HH
9	E633696	1	Cable
10	E603336	1	Cable–Choke
11	99–4624	1	Frame ASM
11:2	E513747	1	Decal–Warning
11:3	E633354	2	Decal–Motion Control
11:4	E513929	1	Decal–Drive Release
11:5	E633771	1	Decal–Pump Belt
12	E633007	2	Wheel & Tire ASM
12:1	E633009	2	Wheel
12:2	E633008	2	Tire
13	99–4623	1	Console ASM
13:2	99–4611	1	Decal–Control Panel

Ref. No.	Part No.	Qty.	Description
13:3	E633346	1	Decal–Fuel Valve
14	E632187	1	Frame–Seat
15	E513011	8	Nut
15	E633273	8	Wheel Bolt
16	E633293	1	Rod–Seat Holdup
17	322–5	1	Screw–HH
18	323–21	2	Screw–HH
19	32146–18	2	Nut–Lock
20	32146–4	2	Nut–Lock
21	32146–2	4	Nut–Hex Lock
22	E807513	2	Bolt–CARR
23	32128–20	12	Nut–Lock
24	E513762	1	Clip
25	E303335	1	Tie–Plastic
26	E513592	1	Knob
27	321–4	1	Screw–HH
28	32128–33	1	Nut–Hex Flange
29	E513658	2	Bumper
30	2412–120	2	Clamp–R
31	E803060	2	Screw
33	74–0720	1	Tube–Manual
34	93–7340	1	Decal–Toro
42	E633736	1	Decal–Z255
44	3256–23	6	Washer–Flat

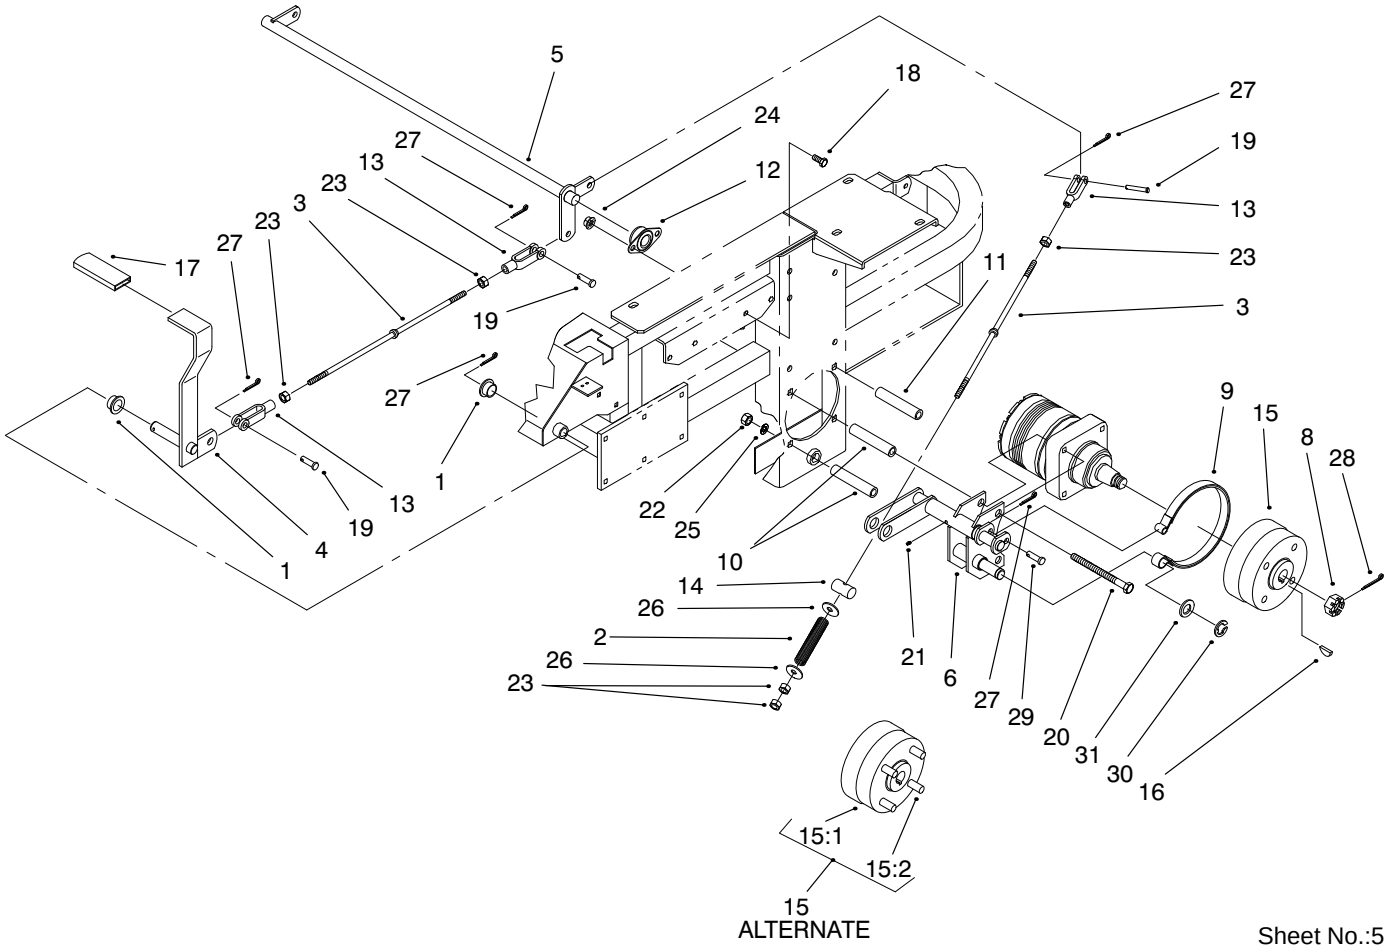

Sheet No.:5

Brake And Wheel Hub Assembly

Ref. No.	Part No.	Qty.	Description
1	E513140	2	Bearing
2	E633454	2	Spring–Brake
3	E633477	3	Rod–Brake
4	E632489	1	Lever–Brake
5	E632217	1	Shaft–Brake
6	E632712	1	Brake Bracket–LH
*7	E632713	1	Brake Bracket–RH
8	E809036	2	Nut
9	E633693	2	Brake Band
10	E633060	4	Spacer
11	E633062	4	Spacer
12	E633102	2	Bearing–Side Flange
13	E633131	4	Yoke–Brake Linkage
14	E633144	2	Pin–Trunnion
15	E633548	2	Hub–Wheel
15	E634927	2	Wheel Hub w/Studs
15:1	E633980	2	Hub
15:2	E633926	8	Stud–Wheel
16	E807020	2	Key–Woodruff
17	E633268	1	Grip–Brake Lever
18	323–4	4	Screw–HH
19	E808285	4	Pin–Clevis
20	325–20	8	Screw–HH
21	302–19	2	Fitting–Grease
22	3217–9	8	Nut–HH
23	3219–3	8	Nut–Hex

Ref. No.	Part No.	Qty.	Description
24	3290–357	4	Nut–Lock Flange
25	3253–7	8	Washer–Lock
26	3256–4	4	Washer–Flat
27	3272–10	7	Pin–Cotter
28	E806800	2	Pin–Cotter
29	E808283	2	Pin–Clevis
30	E808514	2	E Ring Retainer
31	3256–28	2	Washer

* Not Illustrated

3321–665

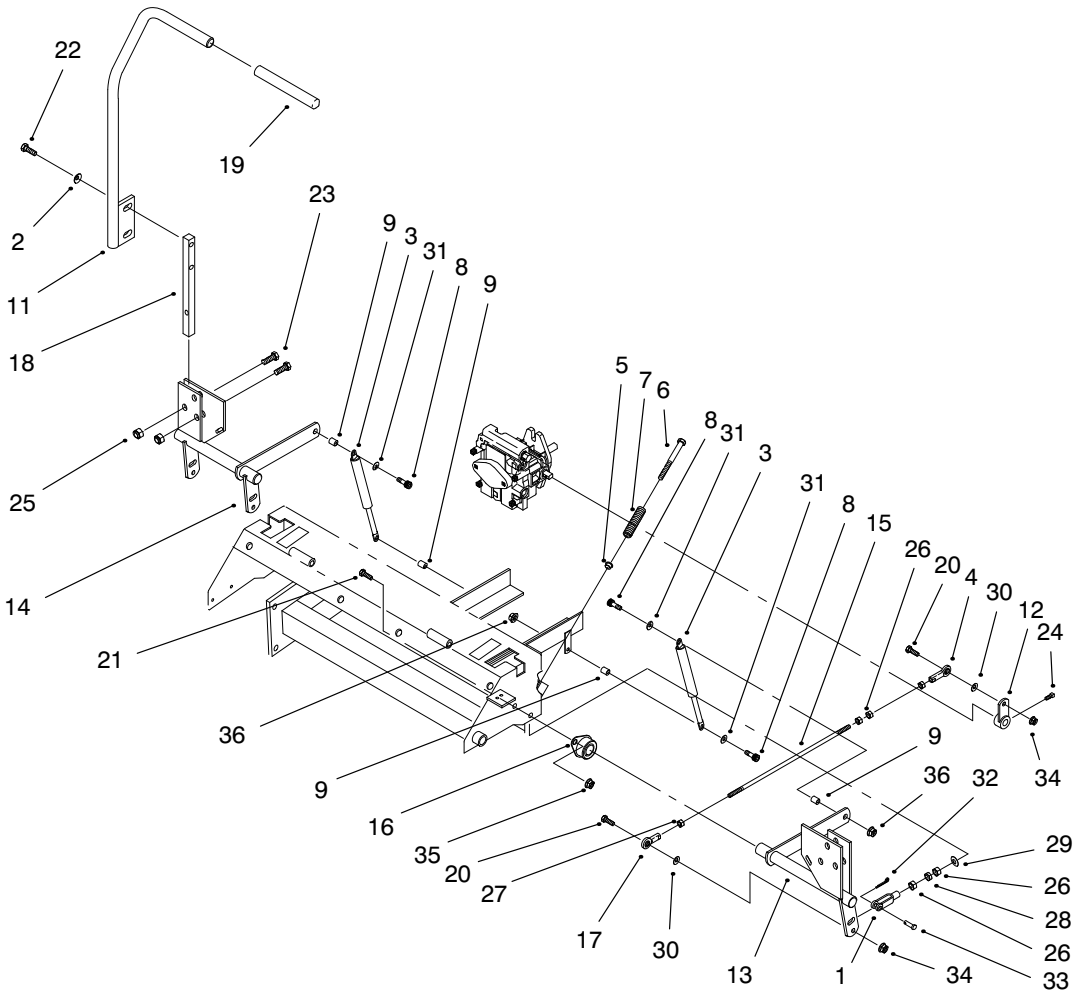

Sheet No.:6

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	E303105	2	Yoke
2	E303327	4	Washer–Lock
3	E523027	2	Damper
4	E543017	2	Ball Joint
5	E603735	2	Bushing
6	E603737	2	Bolt
7	E603807	2	Spring
8	E809057	4	Screw–HSH
9	E603903	4	Spacer
*10	E632191	1	Lever–Control LH
11	E632193	1	Lever–Control RH
12	E632208	2	Arm–Pump Control
13	E632911	1	Motion Control
14	E632912	1	Motion Control
15	E633153	2	Linkage
16	E633102	4	Bearing–Side Flange
17	E633152	2	Ball Joint LH
18	E633177	2	Arm
19	E633257	2	Grip
20	322–6	4	Screw–HH
21	323–4	8	Screw–HH
22	323–6	4	Screw–HH
23	323–9	6	Screw–HH
24	E803022	2	Screw–Set
25	32146–2	6	Nut–Hex Lock
26	3219–2	10	Nut

Ref. No.	Part No.	Qty.	Description
27	E804524	2	Nut
28	3220–2	2	Nut–Jam
29	3256–2	2	Washer–Flat
30	3256–3	4	Washer–Flat
31	3256–23	4	Washer–Flat
32	3272–5	2	Pin–Cotter
33	E808280	2	Pin–Clevis
34	32128–20	4	Nut–Lock
35	3290–357	8	Nut–Lock Flange
36	32128–33	4	Nut–Hex Flange

* Not Illustrated

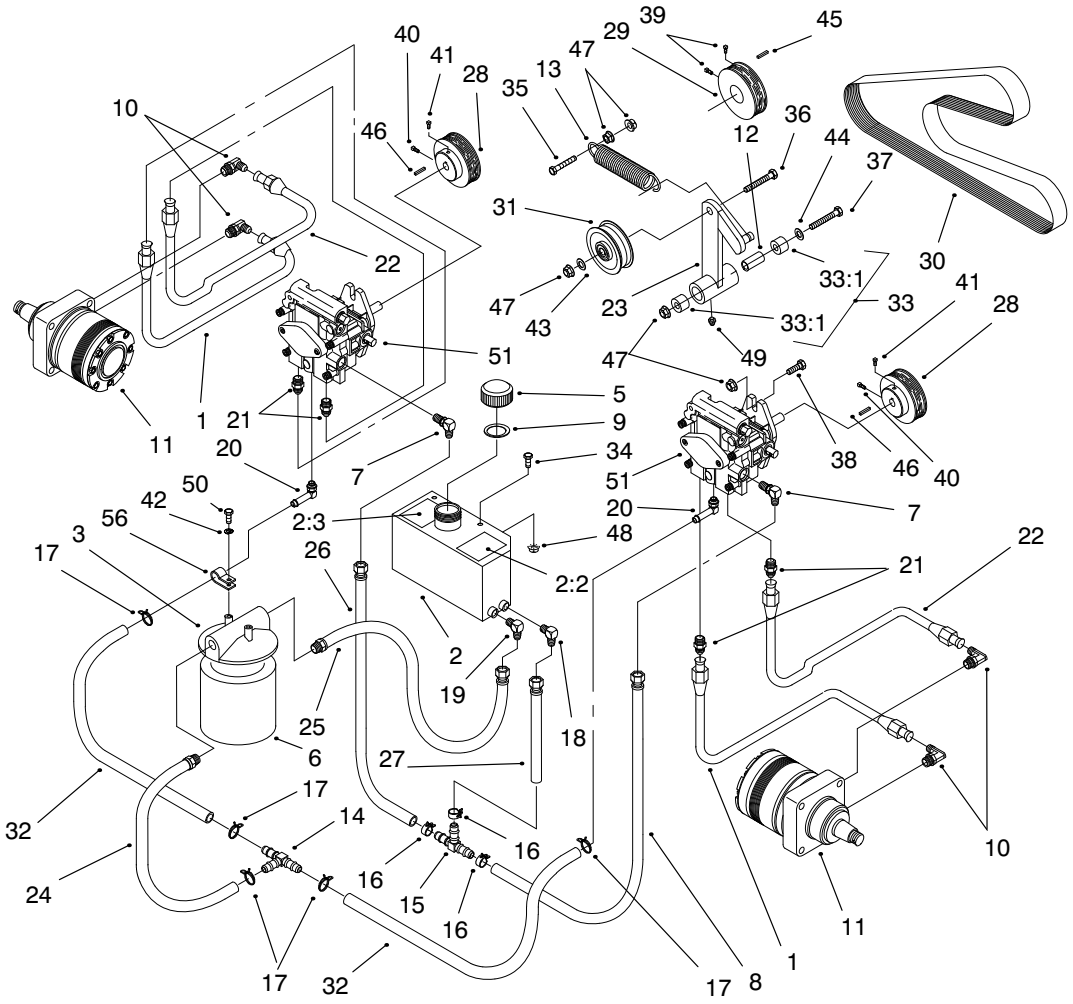

Sheet No.:7

Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description
1	E633776	2	Hose
2	99–4625	1	Hydraulic Tank ASM
2:2	65–2690	1	Decal–Hot Surface
2:3	E513890	1	Decal–Hydraulic Tank
3	E513006	1	Filter Head
5	E513167	1	Cap
6	E633750	1	Filter–Hydro
6	E633752	1	Filter–Winter Hydro
7	E513840	2	Elbow
8	E522217	1	Hose ASM–Low Pressure
9	E523103	1	Gasket
10	E633786	4	Elbow 90°
11	E523328	2	Motor–Wheel
*11:1	E000099	2	Kit–Seal
*11:2	E807020	2	Key–Woodruff
*11:3	E000139	2	Kit–Bearing
*11:4	E809036	2	Nut
12	E603384	1	Bushing
13	E603413	1	Spring–Extension
14	E603721	1	Fitting–Tee
15	E603722	1	Fitting–Tee
16	E603826	3	Clamp–Hose
17	E603827	5	Clamp–Hose
18	E603987	1	Elbow
19	E603988	1	Elbow

Ref. No.	Part No.	Qty.	Description
20	E603989	2	Elbow
21	E603990	4	Adapter
22	E633777	2	Hose
23	E632201	1	Arm–Pump Idler
24	E632281	1	Hose ASM–Low Pressure
25	E632282	1	Hose ASM–Low Pressure
26	E632285	1	Hose ASM–Low Pressure
27	E632286	1	Hose ASM–Low Pressure
28	E633568	2	Sheave
29	E633567	1	Sheave
30	E633749	1	Belt
31	E633167	1	Pulley–Idler
32	E633335	2	Hose–Low Pressure
33	E634277	1	Arm ASM
33:1	E513034	2	Bearing–Pivot
34	321–4	2	Screw–HH
35	323–8	1	Screw–HH

* Not illustrated

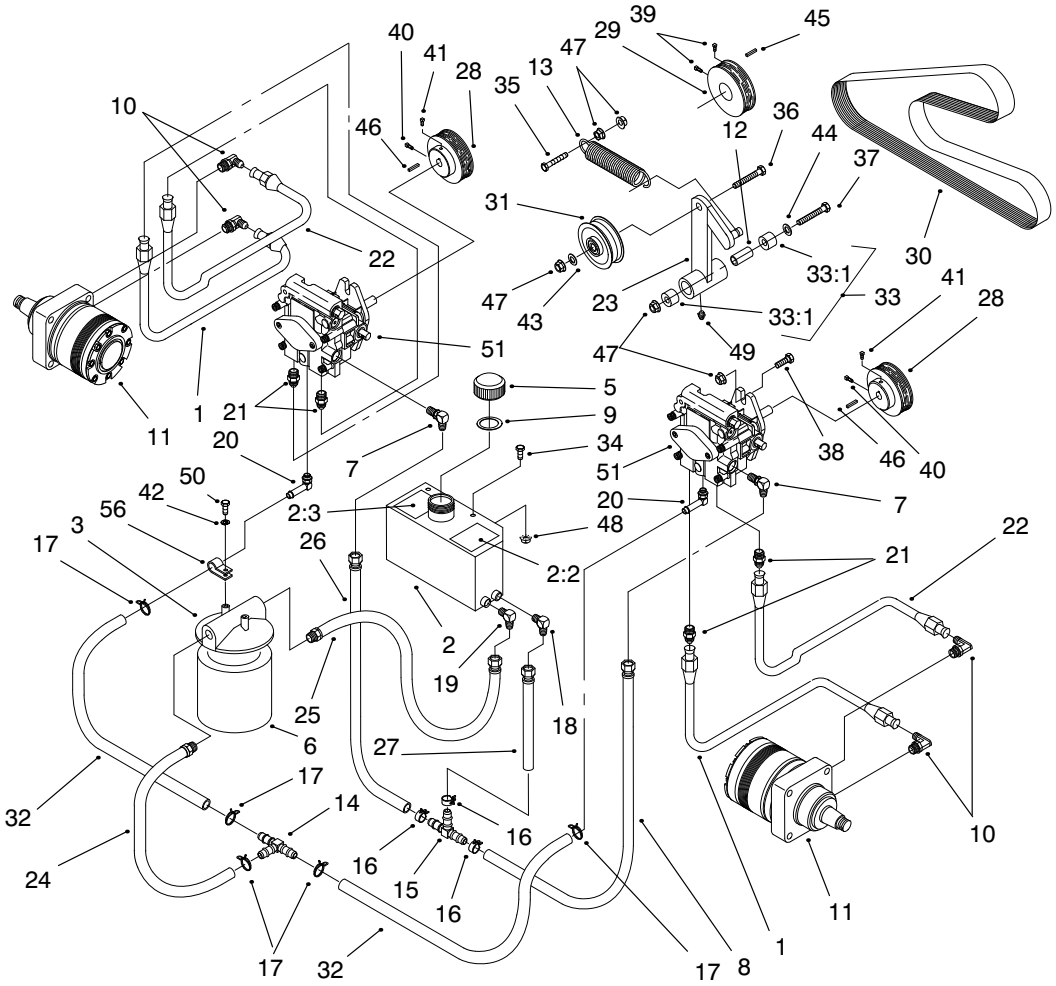

Sheet No.:7

Hydraulic System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
36	323–9	1	Screw–HH
37	E800805	1	Screw–HH
38	E803016	4	Bolt
39	E803022	2	Screw–Set
40	3242–6	2	Screw–Sqh Set
41	3242–4	2	Screw–Set
42	3253–3	2	Washer–Lock
43	3256–3	1	Washer–Flat
44	3256–4	1	Washer–Flat
45	13–2840	1	Key
46	E807272	2	Key
47	3290–357	8	Nut–Lock Flange
48	32128–33	2	Nut–Hex Flange
49	E811008	1	Fitting–Grease
50	321–3	2	Screw–HH
51	E603841	2	Pump – Hydro RH
56	E513762	1	Clip

Ref. No.	Part No.	Qty.	Description

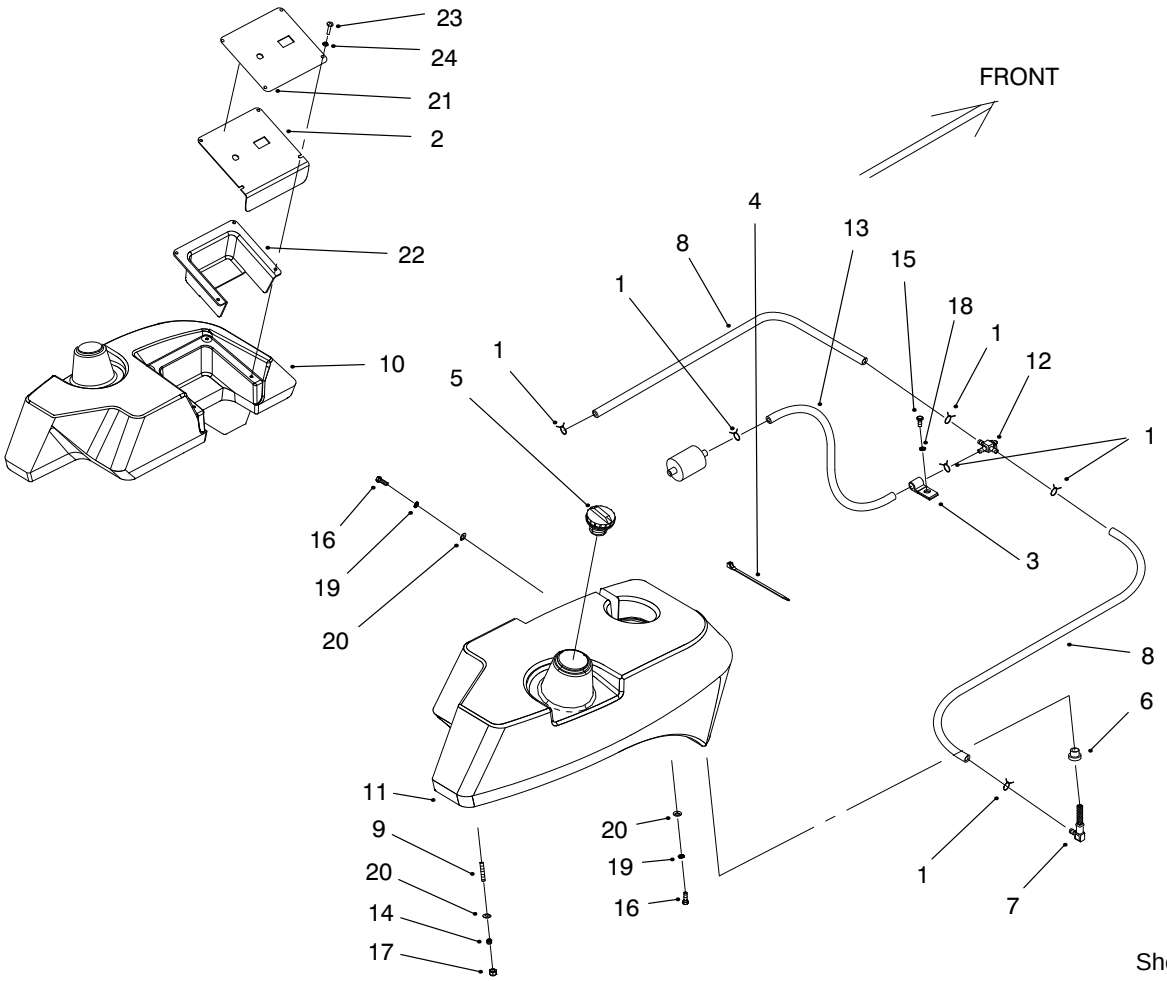

Sheet No.:8

Tank And Fuel Lines Assembly

Ref. No.	Part No.	Qty.	Description
1	E303077	6	Clamp
2	99–4656	1	Panel–Control
3	E513762	1	Clip
4	E303335	1	Tie–Plastic
5	93–3101	2	Gas Cap
6	E513645	2	Bushing
7	E543277	2	Elbow
8	E543456	2	Line–Fuel
9	E653314	6	Stud
10	99–4608	1	Tank–LH Fuel
11	99–4607	1	Tank–RH Fuel
12	E633347	1	Valve–Fuel Line
13	E633348	1	Fuel Line
14	E633349	6	Spring–Fuel Tank
15	321–3	2	Screw–HH
16	322–3	4	Screw–HH
17	3296–29	6	Nut–Lock
18	3253–3	2	Washer–Lock
19	3253–4	4	Washer–Lock
20	3256–23	10	Washer–Flat
21	99–4632	1	Decal–Control Panel
22	99–4940	1	Shield–Control Panel
23	E803071	4	Screw
24	E303435	4	Washer

Ref. No.	Part No.	Qty.	Description

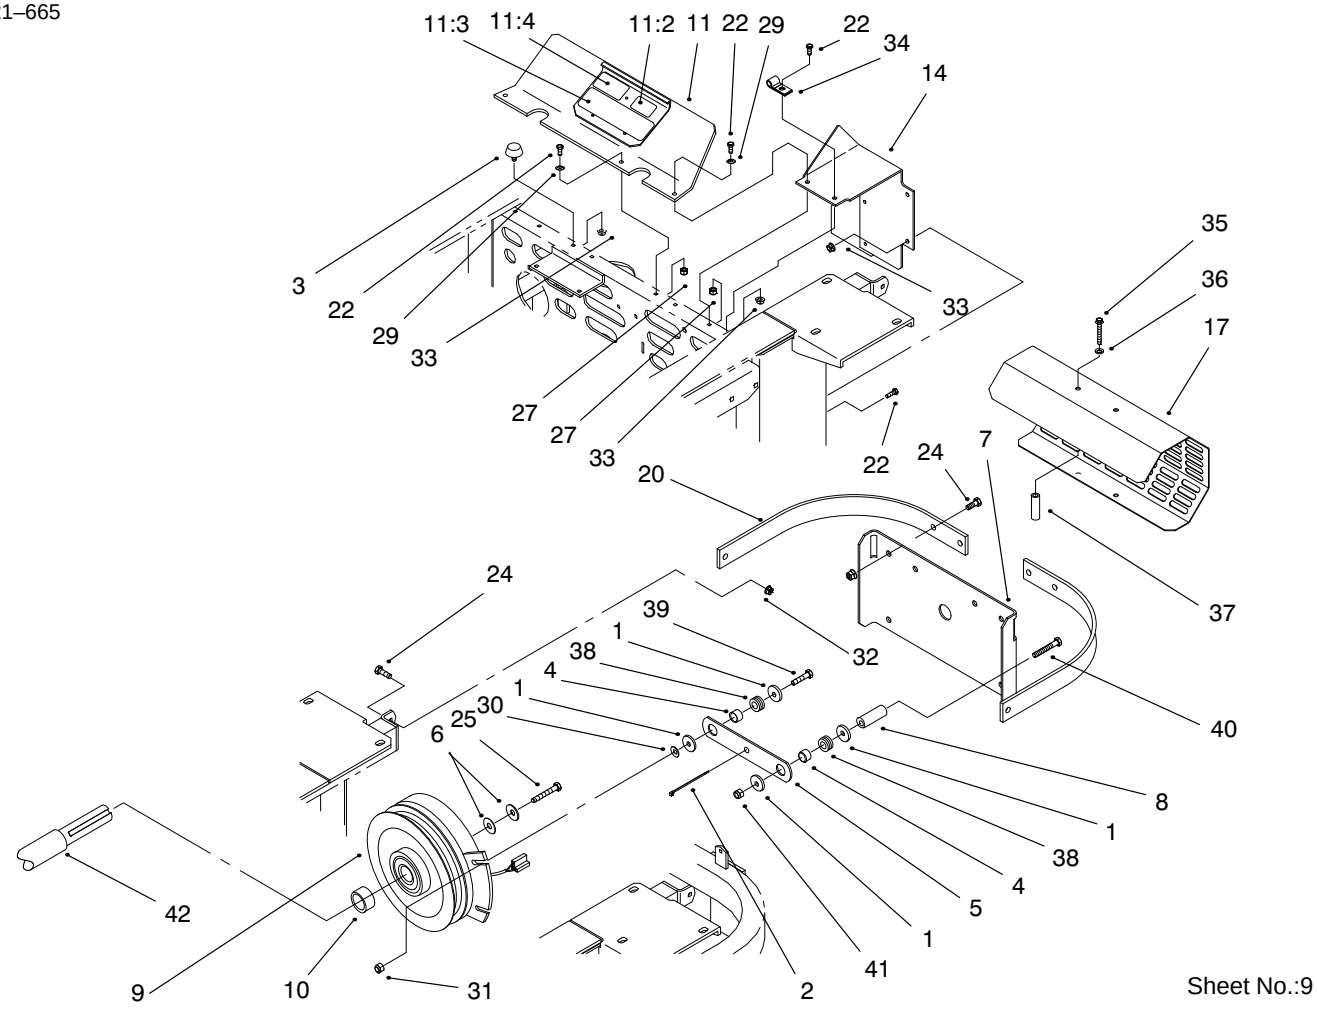

Sheet No.:9

Shields And Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	E613235	4	Washer
2	E303335	1	Tie–Plastic
3	E523420	2	Bumper
4	E633545	2	Spacer–Grommet
5	E633543	1	Strap–Clutch
6	E603610	2	Disc–Spring
7	E633615	1	Guard
8	E633988	1	Spacer
9	E633099	1	Clutch
10	E633179	1	Spacer
11	E634862	1	Shield ASM
11:2	E513748	1	Decal–Guard
11:3	E303517	1	Decal–Belt Drive
11:4	E633462	1	Decal–Important
14	E634796	1	Shield–LH
17	E633466	1	Guard–Muffler
*18	E634797	1	Shield–RH
20	E633613	2	Bracket–Guard
22	321–4	10	Screw–HH
24	323–6	6	Screw–HH
25	3212–10	1	Screw
27	32146–17	4	Nut–Lock
29	3256–2	4	Washer–Flat
30	3256–3	1	Washer–Flat
31	32128–20	1	Nut–Lock
32	3290–357	4	Nut–Lock Flange

Ref. No.	Part No.	Qty.	Description
33	32128–33	7	Nut–Hex Flange
34	E633396	1	Clip
35	E809076	2	Screw–HH
36	E323235	2	Washer–Spring
37	E323236	2	Spacer
38	E633630	2	Grommet
39	322–6	1	Screw–HH
40	322–19	1	Screw
41	3296–29	1	Nut–Lock
42	E633830	1	Kohler Command Ch25

* Not Illustrated

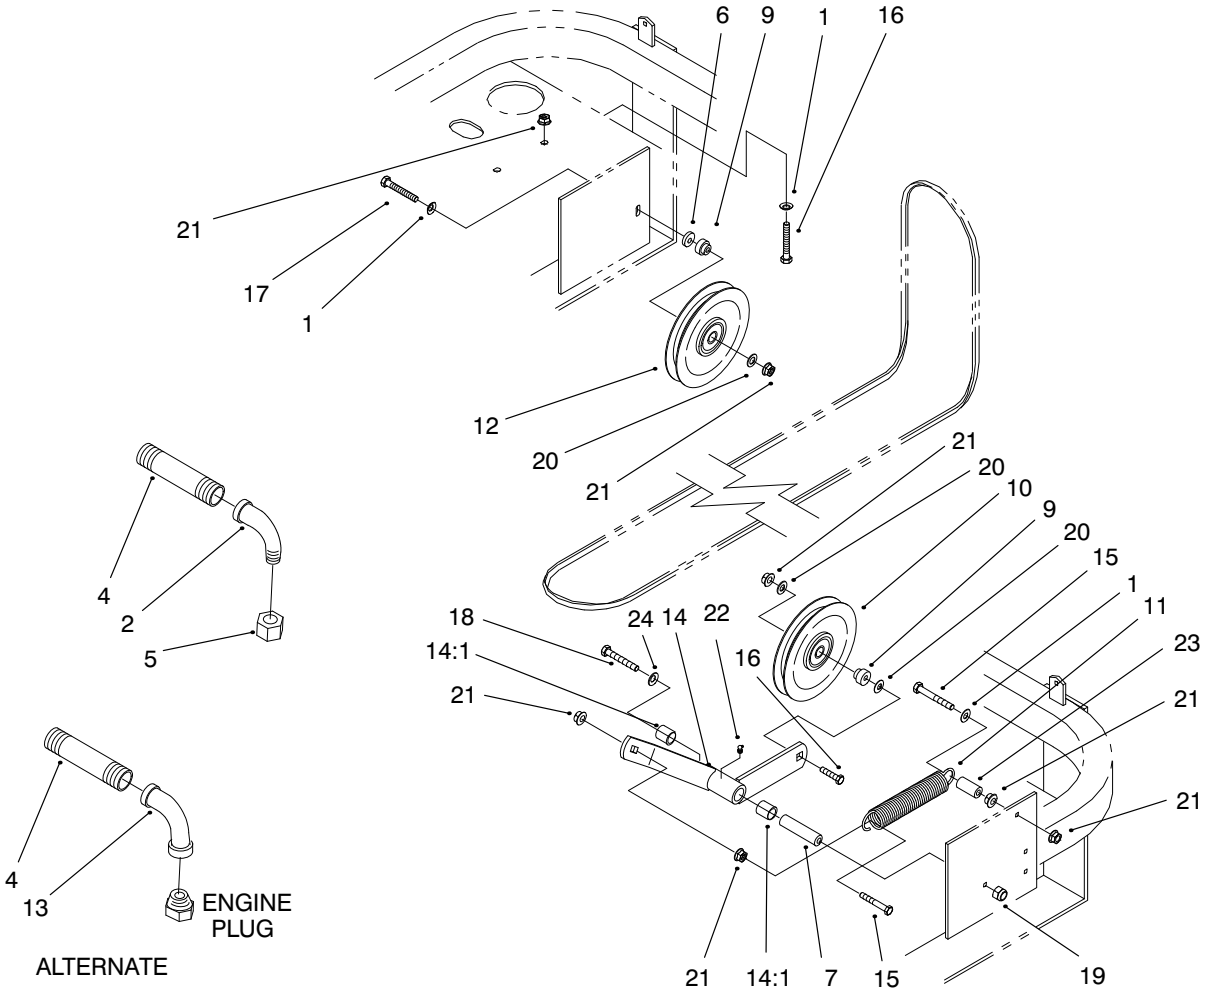

Sheet No.:10

Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	E303327	5	Washer–Lock
2	E403124	1	Elbow Street
4	E543232	1	Nipple
5	E543233	1	Cap
6	E603050	1	Spacer
7	E603384	1	Bushing
9	E603496	2	Bushing
10	99–4638	1	Pulley–Idler
11	E603402	1	Spring
12	E633166	1	Idler–Belt
13	E303428	1	Elbow–90 DEG.
14	E632469	1	Ilder Arm ASM
14:1	E513034	2	Bearing–Pivot
15	323–14	2	Screw
16	323–9	5	Screw–HH
17	323–13	1	Screw–HH
18	E800805	1	Screw–HH
19	32146–2	1	Nut–Hex Lock
20	3256–24	4	Washer–Flat
21	3290–357	10	Nut–Lock Flange
22	E811008	1	Fitting–Grease
23	99–4602	2	Pin–Spring Mount
24	3256–4	1	Washer–Flat

Ref. No.	Part No.	Qty.	Description

3321–665

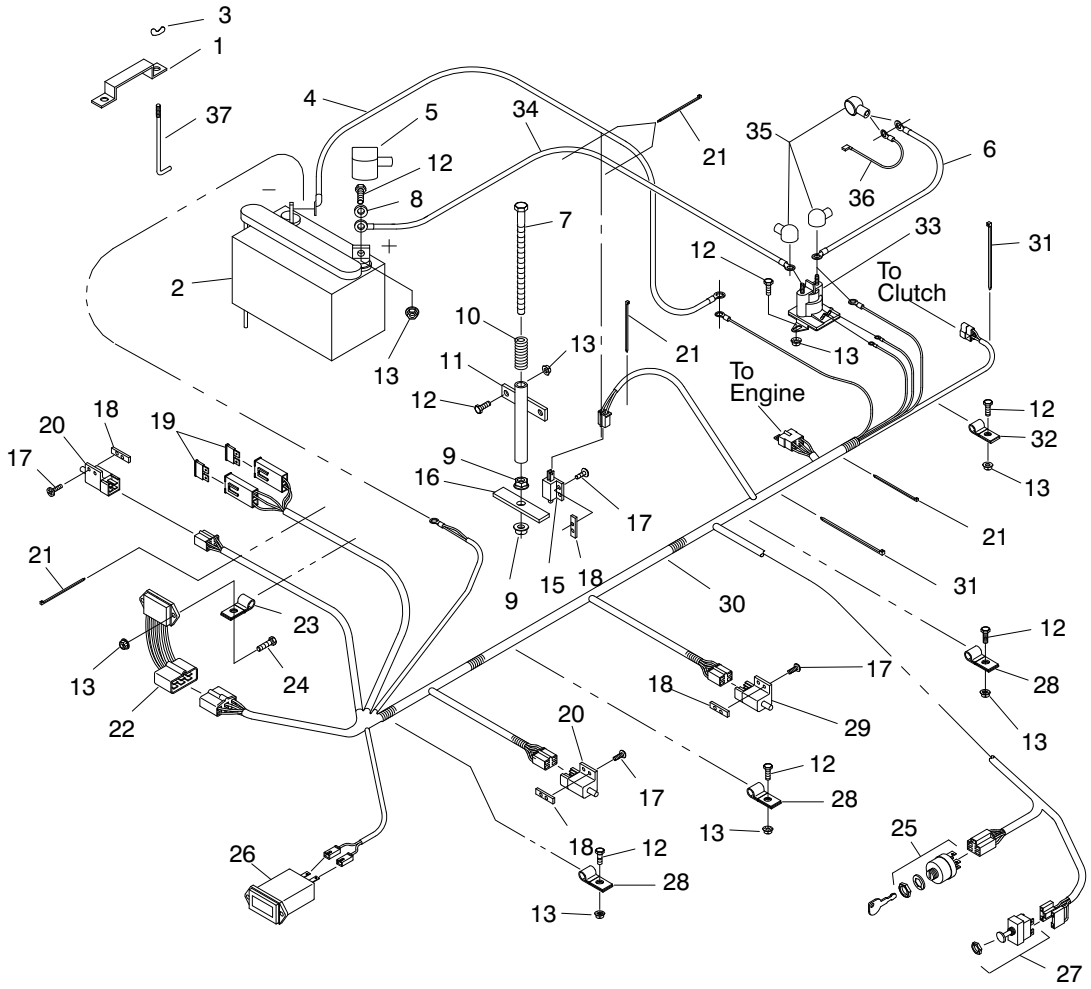

Sheet No.:11

Electrical System Assembly

Ref. No.	Part No.	Qty.	Description
1	E633652	1	Strap–Hold Down
2	E603479	1	Battery
3	E543792	2	Wingnut
4	E633307	1	Wire–Ground
5	E543391	1	Insulator–Battery
6	E633306	1	Wire–Starter
7	E800282	1	Screw
8	3256–2	2	Washer–Flat
9	32128–20	2	Nut–Lock
10	E523415	1	Spring
11	E522424	1	Mount–Spring
12	321–4	8	Screw–HH
13	32128–33	11	Nut–Hex Flange
15	E513152	1	Switch–Seat
16	E513180	1	Actuator–Switch
17	E803028	8	Screw
18	E633181	4	Plate
19	E816001	2	Fuse–20 Amp
20	E633111	2	Switch–Drive Lever
21	E303287	5	Tie–Plastic
22	E543316	1	Module–Interlock
23	E513762	1	Clip
24	321–6	1	Screw–HH
25	E543070	1	Switch–Ignition
26	E513374	1	Meter–Hour
27	E633673	1	Switch–PTO

Ref. No.	Part No.	Qty.	Description
28	E633396	3	Clip
29	E633110	1	Switch–Brake
30	E643119	1	Harness
31	E303335	2	Tie–Plastic
32	E323229	1	Clip
33	E513075	1	Switch–Solenoid
34	E523281	1	Wire–Starter
35	E543393	3	Insulator–Solenoid
36	E543084	1	Wire–Starter Solonoid
37	E633651	2	Bolt–Battery

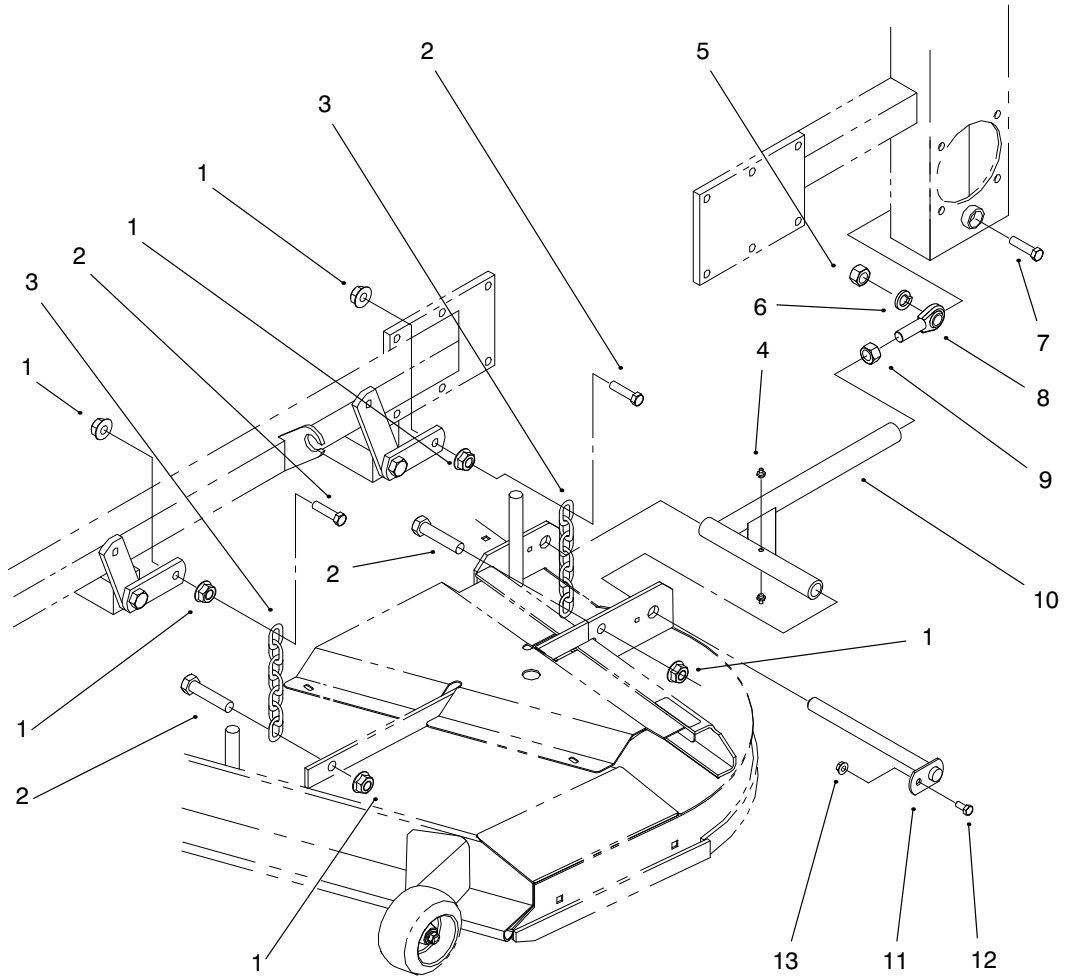

Sheet No.:12

Frame And Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	32128–37	16	Nut–Lock
2	324–6	8	Screw–HH
3	E633447	4	Chain–Lift
4	302–19	2	Fitting–Grease
5	3217–11	2	Nut
6	3253–8	2	Washer–Lock
7	327–11	2	Screw–HH
8	E633029	2	Rod End
9	3219–6	2	Nut–Hex
10	E632690	2	Strut
11	E632199	2	Pin–Strut
12	322–3	2	Screw–HH
13	32128–20	2	Nut–Lock

Ref. No.	Part No.	Qty.	Description

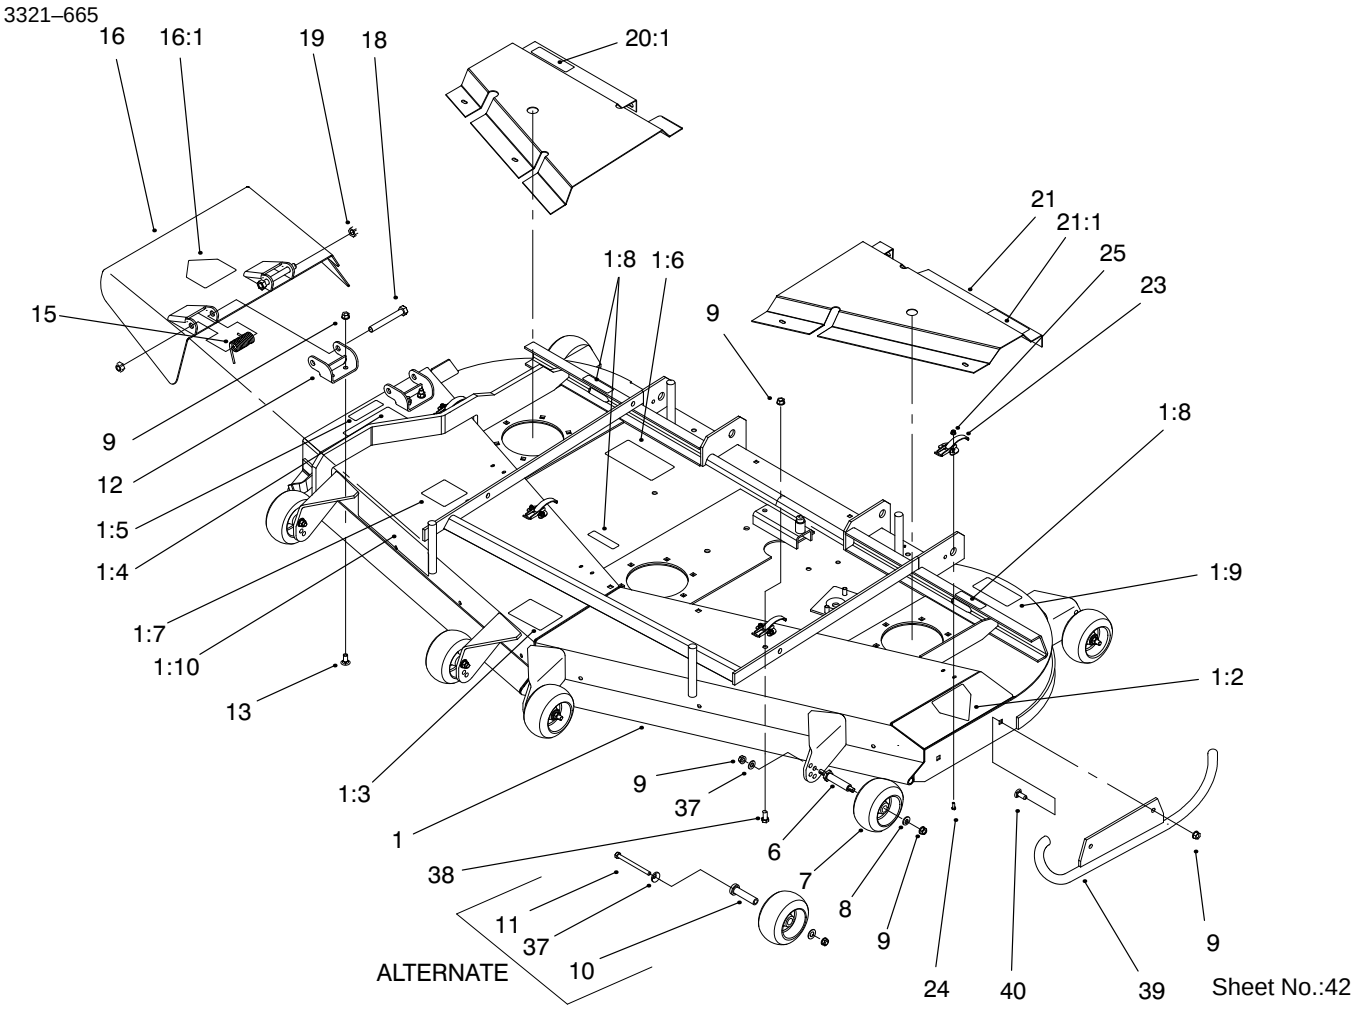

Cover And Rollers Assembly

Ref. No.	Part No.	Qty.	Description
1	99–2621	1	72” Deck ASM
1:2	43–8480	1	Decal–Danger
1:3	98–3798	1	Decal–Gage Wheel
1:4	66–1340	1	Decal–Discharge
1:5	66–6380	1	Decal–Danger
1:6	98–3799	1	Decal–Belt Routing
1:7	98–3269	1	Decal–Made In USA
1:8	98–5954	3	Decal–Cover Missing
1:9	93–7818	1	Decal–Blade Bolt
1:10	98–5995	1	Decal–72”
6	99–2842	6	Spacer–Wheel
7	68–2730	6	Wheel–Gage
8	E373034	12	Washer–Flat
9	3290–357	22	Nut–Hex
10	98–3777	6	Spacer–Wheel
11	98–5961	6	Screw–HH
12	51–1530	2	Bracket–Hinge
13	3231–27	4	Screw–CARR
15	51–1550	2	Spring
16	14–0909	1	Deflector ASM
16:1	54–9220	1	Decal–Danger
18	325–17	2	Screw–HH
19	32153–5	2	Nut–Lock
20	98–2622	1	Cover ASM RH
20:1	67–5360	1	Decal–Danger
21	99–2623	1	Cover ASM LH

Ref. No.	Part No.	Qty.	Description
21:1	67–5360	1	Decal–Danger
23	249–21	4	Latch–Draw
24	3290–321	8	Screw–HH
25	32128–17	8	Nut–Lock
37	98–5975	6	Washer
38	323–4	4	Screw–HH
39	98–7923	1	Skid
40	3231–22	2	Bolt–CARR

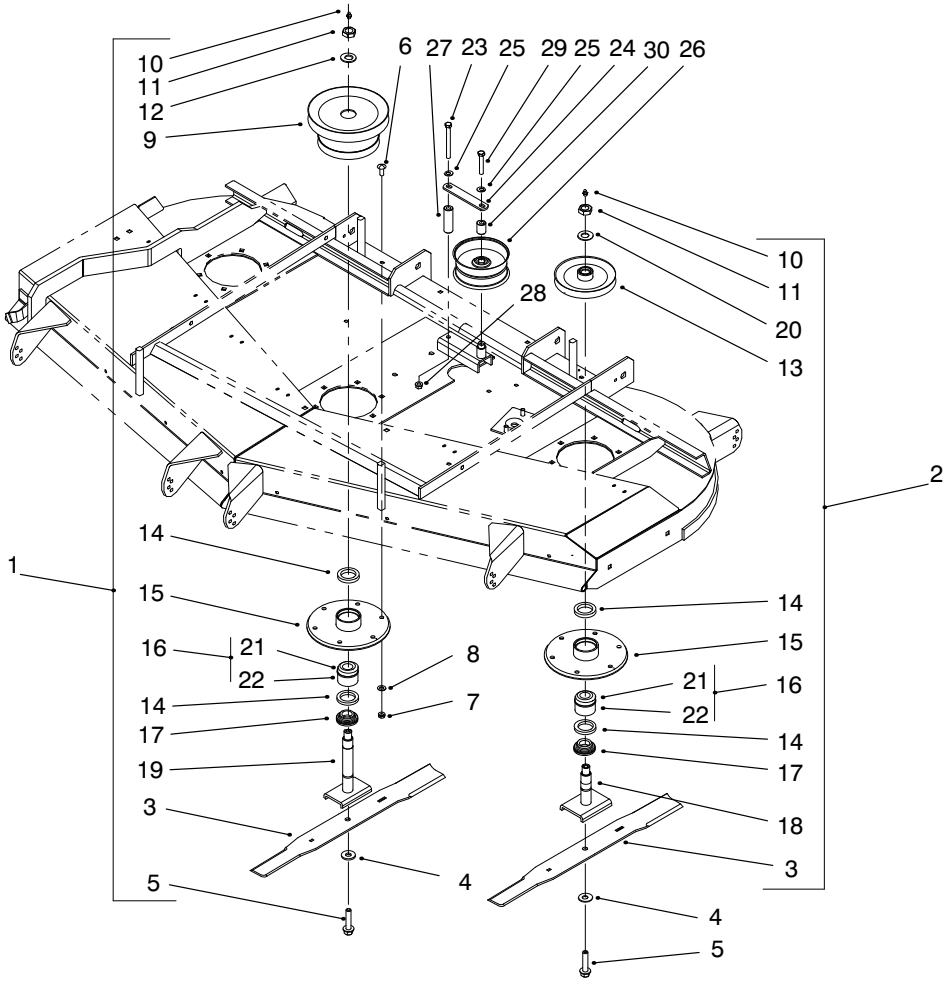

Sheet No.:43

Deflector, Spindle And Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	99–2605	1	Spindle Housing ASM
2	57–0260	2	Spindle Housing ASM
3	94–1861	3	Blade
4	E513435	3	Washer–Flat
5	92–5816	3	Screw–Blade
6	3231–22	18	Bolt–CARR
7	32128–21	18	Nut–Lock
8	3256–24	A/R	Washer–Flat
9	99–4626	1	Pulley & Hub
10	302–2	3	Fitting–Grease
11	32146–20	3	Nut–Lock Jam
12	92–5836	1	Washer–Axle
13	99–4615	2	Pulley & Hub
14	253–139	6	Seal–Oil
15	61–4160	3	Spindle
16	46–8530	3	Bearing ASM (Incl. Ref #21–22)
17	27–0950	3	Spacer–Bearing
18	27–0920	2	Shaft–Spindle
19	51–3551	1	Spindle–Center
20	7–4150	2	Washer
21	27–0960	3	Bearing ASM
22	27–5970	3	Spacer–Matched Set
23	323–42	2	Screw–HH
24	E653189	1	Plate–Belt Guide
25	E303327	2	Washer–Spring

Ref. No.	Part No.	Qty.	Description
26	E413099	1	Pulley–Idler, Flat
27	99–4659	1	Spacer–Bracket
28	3290–357	1	Nut–Flange
29	323–11	1	Screw–HH
30	E653190	1	Spacer

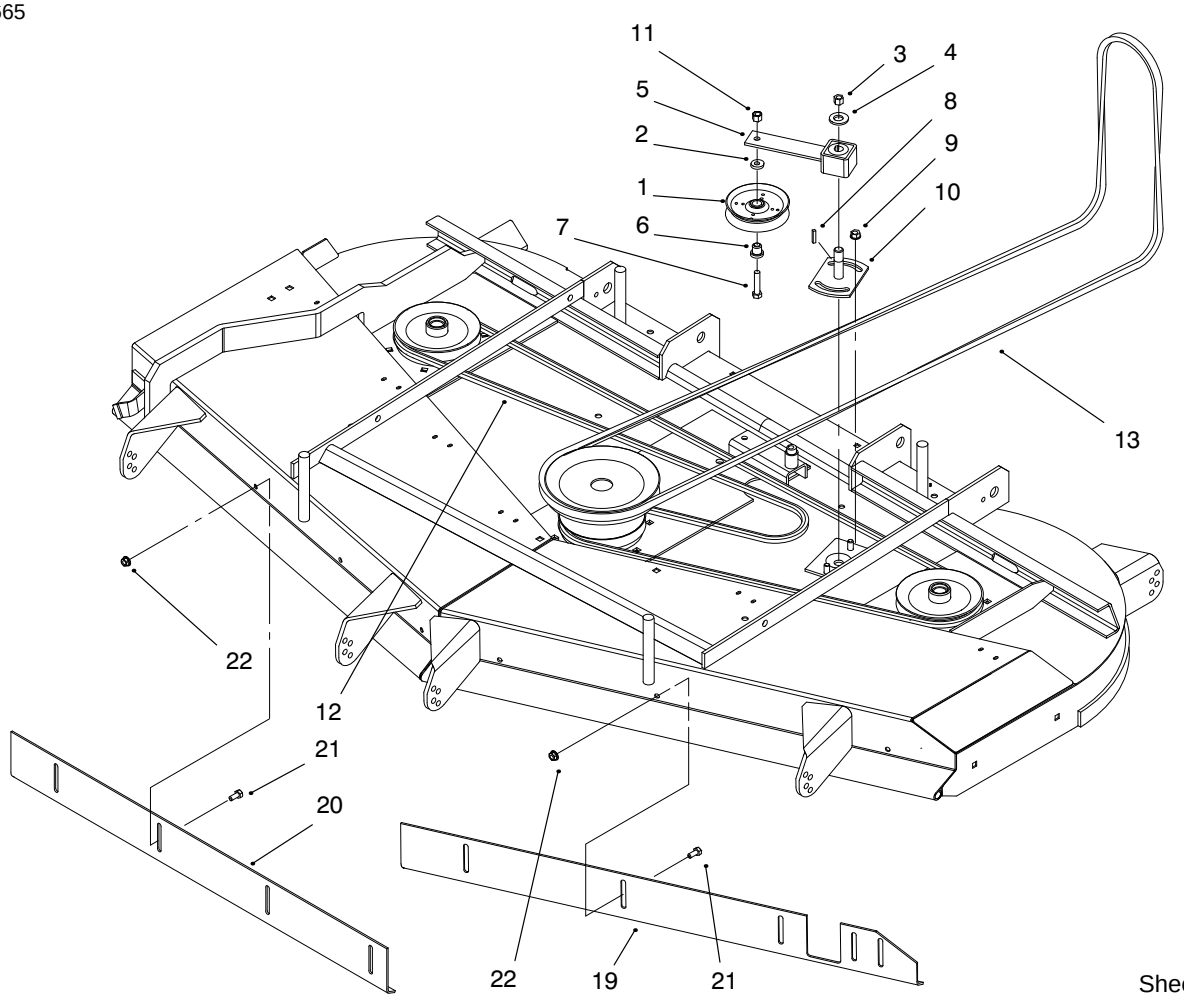

Sheet No.:44

Baffle And Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	65–5940	1	Pulley–Idler
2	7–0081	1	Washer–Special
3	3296–33	1	Nut–Lock
4	3256–27	1	Washer–Flat
5	27–8580	1	Idler Socket
6	65–5950	1	Bushing–Pulley
7	3211–8	1	Screw–HH
8	5–1077	1	Key–Square
9	3290–357	2	Nut–Flange
10	44–6300	1	Plate–Idler
11	3296–5	1	Nut–Lock
12	57–0240	1	V–Belt
13	99–4627	1	V–Belt
19	99–5156	1	Baffle–Front, LH
20	93–3215	1	Baffle–Front, RH
21	3234–5	8	Screw–Flange
22	32128–20	8	Nut–Lock Flange

Ref. No.	Part No.	Qty.	Description

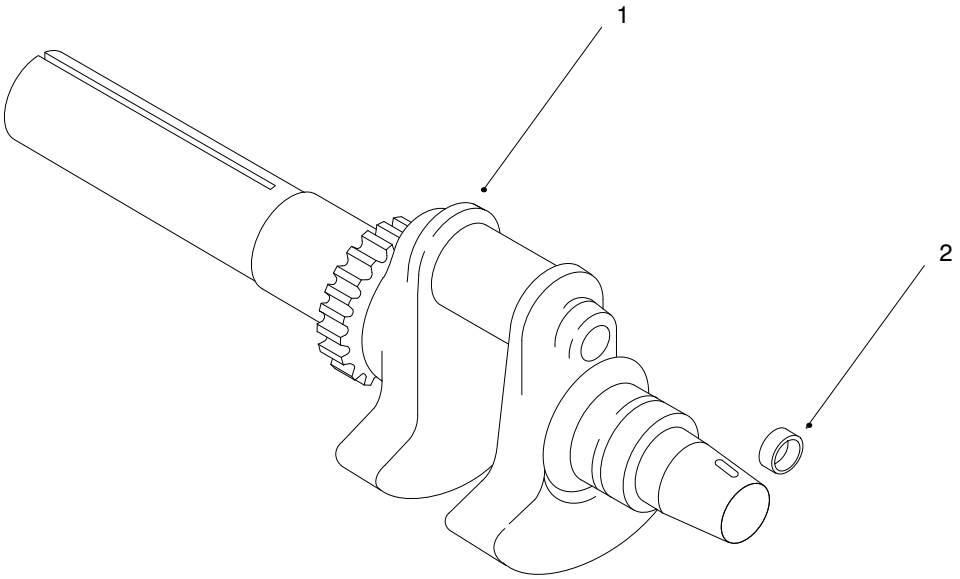

Group 1 – Crankshaft (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 014 06	Crankshaft (Includes 2)	1
2	52 139 09	Plug, cup	1

Ref. No.	Part No.	Description	No. Used

Obtain Parts From Kohler

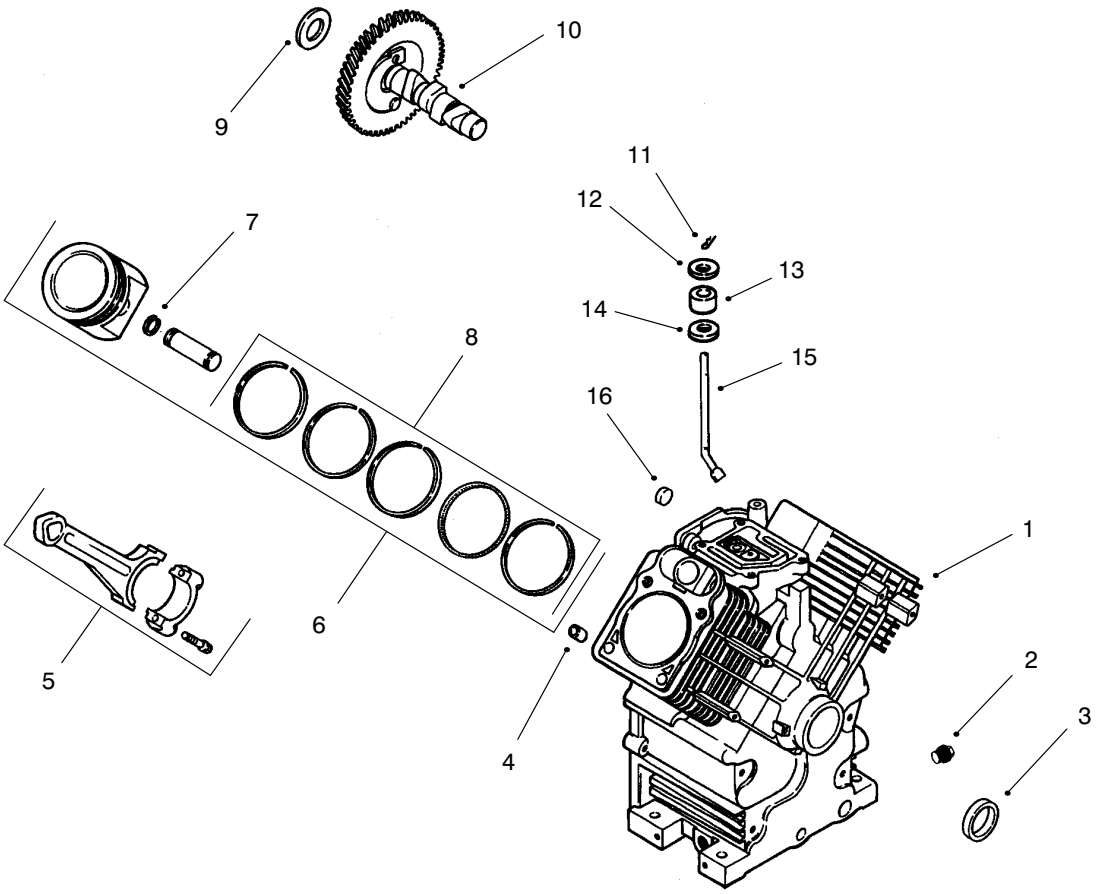

Group 2 − Crankcase (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 561 33	Cylinder Block	1
		(Includes 2,4,16,17)	1
2	X−75−10	Plug, drain	2
3	24 032 01	Seal, oil front	1
4	12 380 17	Pin, dowel locating	6
5	24 067 13	Connecting Rod (Std.)	2
	24 067 14	Connecting Rod (.25)	2
6	24 874 06	Piston w/Ring Set (Std.)	2
7	24 018 01	Retainer, piston pin	4
8	24 108 04	Ring Set (Std.)	2
9	12 422 09	Shim, camshaft − red	A/R
	12 422 13	Shim, camshaft − black	A/R
	12 422 07	Shim, camshaft − white	A/R
	12 422 08	Shim, camshaft − blue	A/R

Ref. No.	Part No.	Description	No. Used
	12 422 10	Shim, camshaft − yellow	A/R
	12 422 11	Shim, camshaft − green	A/R
	12 422 12	Shim, camshaft − gray	A/R
10	24 012 10	Camshaft	1
11	12 380 04	Pin, hitch	1
12	M−0631005	Washer, flat	1
13	12 032 01	Seal, governor cross shaft	1
14	X−25−102	Washer, plain	1
15	24 144 01	Shaft, governor cross	1
16	52 139 09	Plug, cup	1
		Not Illustrated	
17	24 113 56	Decal, Service	1

Obtain Parts From Kohler

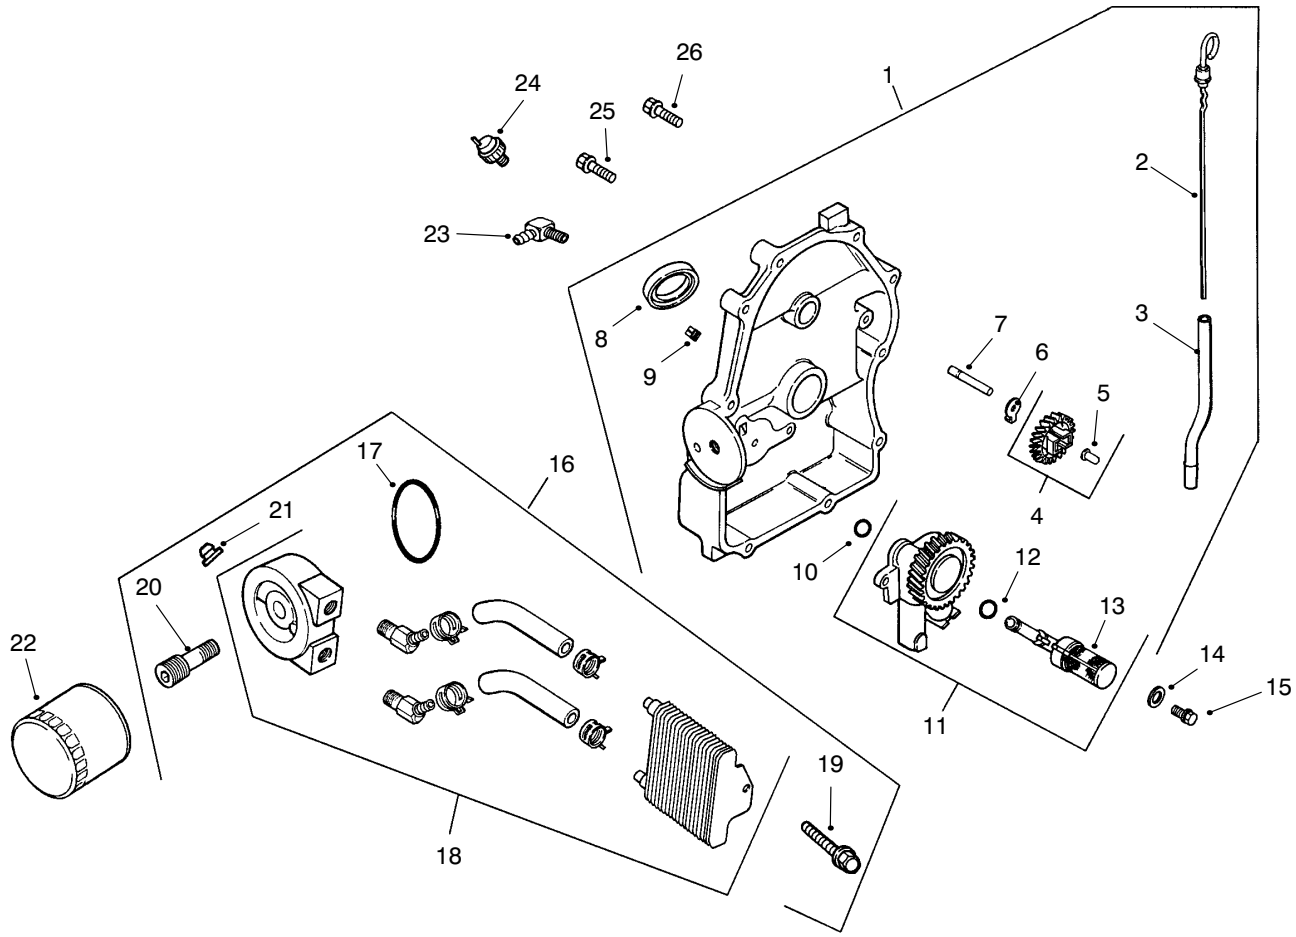

Group 3 − Oil Pan/Lubrication (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 009 83	Plate, closure assembly (Includes 2−12)	1
2	24 038 06	Dipstick	1
3	24 123 08	Tube, dipstick	1
4	24 043 12	Kit, governor gear (Includes 5)	1
5	12 380 01	Pin, governor regulating	1
6	52 448 02	Tab, locking	1
7	12 144 02	Shaft, governor gear	1
8	52 032 08	Seal, oil (PTO end)	1
9	X−75−23	Plug,pipe 1/8”	2
10	24 153 08	O−Ring	1
11	24 393 10	Oil pump assembly (Includes 12,13)	1
12	24 153 01	O−Ring, oil pick−up	1
13	24 381 04	Pick−up, oil	1
14	M−0631005	Washer, plain 6 mm	2
15	M−0645025	Screw, hex flange	2
16	54 755 14	Kit, oil cooler (Incl. 17−21)	1
17	24 253 17	O−Ring	1
18	24 594 15	Cooler, oil	1
19	24 086 12	Screw, hex	2
20	24 136 05	Nipple, oil filter	1
21	24 100 01	Nut, plastic	2
22	52 050 02	Filter, oil	1
23	25 155 02	Connector	1
24	24 099 03	Switch, pressure	1
25	24 086 16	Screw, hex flange	9
26	24 086 17	Screw, hex flange	1
		Not Illustrated	
27	24 113 25	Decal, oil cooler	1

Obtain Parts From Kohler

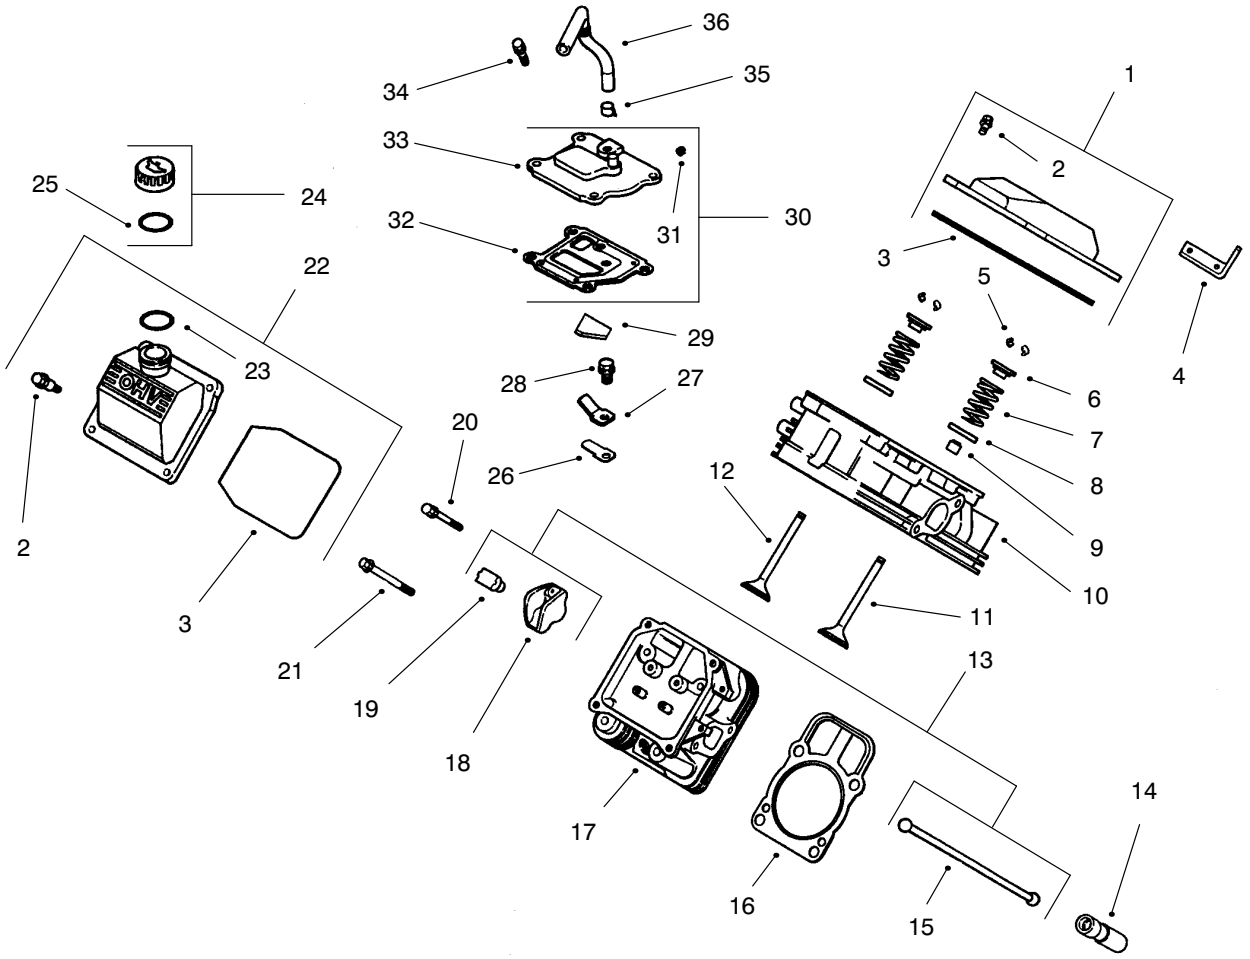

Group 4 − Head/Valve/Breather (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 755 74	Kit, valve cover − plain (Includes 2−3)	1
2	24 086 32	Screw, shoulder	4
3	24 153 16	O−Ring, valve cover	1
4	24 445 01	Strap, lifting	1
5	12 755 03	Kit, retainer	4
6	12 173 01	Cap, valve spring	4
7	24 089 02	Spring, valve	4
8	235011	Retainer, spring	4
9	24 032 05	Seal, valve stem	2
10	24 318 13	Head assembly, #1 cylinder	1
11	24 017 01	Valve, intake (Std.)	2
	24 017 02	Valve, intake (.25)	2
12	24 016 01	Valve, exhaust (Std.)	2
	24 016 02	Valve, exhaust (.25)	2
13	24 755 66	Kit, valve train (Includes 15,18,19)	1
14	12 351 02	Lifter, valve	4
15	24 411 05	Rod, push	4
16	24 041 37	Gasket, cylinder head	2
17	24 318 14	Head assembly, #2 cylinder	1

Ref. No.	Part No.	Description	No. Used
18	25 186 01	Arm, rocker	4
19	24 599 01	Pivot, rocker arm	4
20	M−0640034	Screw, hex. flange	4
21	24 086 44	Screw, hex. flange	8
22	24 755 75	Kit, valve cover − oil fill (Includes 2,3,23)	1
23	24 153 09	O−Ring	1
24	24 755 46	Kit, oil fill cap (Includes 25)	1
25	12 153 03	O−Ring, oil fill cap	1
26	24 402 03	Reed, breather	1
27	12 018 01	Retainer, breather reed	1
28	M−0545010	Screw, hex. flange	1
29	24 050 01	Filter, breather	1
30	24 033 01	Kit, breather (Includes 31−33)	1
31	X−75−23	Plug, allen head pipe	1
32	24 041 23	Gasket, breather	1
33	24 096 02	Cover, breather	1
34	M−0645020	Screw, hex. flange	4
35	X−426−9	Clamp, breather	1
36	24 326 06	Hose, breather	1

Obtain Parts From Kohler

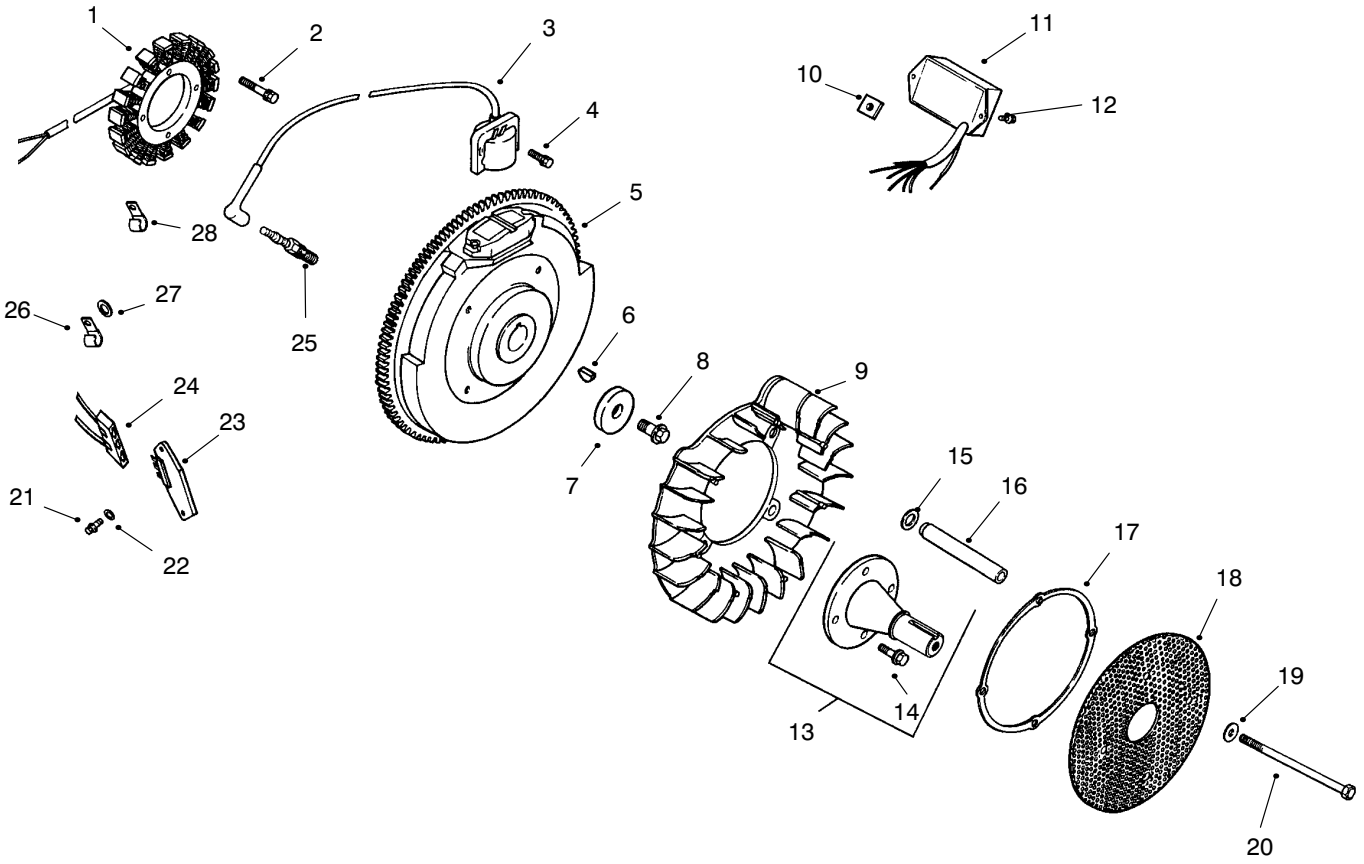

Group 5 − Ignition/Electrical (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	54 755 09	Kit, 15 amp stator (Incl. 24 126 71 bracket)	1
2	M−0548025	Screw, hex. cap	2
3	24 584 11	Module, ignition	2
4	M−0561025	Screw, hex. socket hd.	4
5	24 025 03	Flywheel	1
6	X−42−15	Key	1
7	12 468 03	Washer, plain 3/8”	1
8	12 086 14	Screw, hex flange	1
9	24 157 03	Fan	1
10	24 100 02	Nut, plastic	2
11	24 584 09	Module, spark advance	1
12	24 086 41	Screw, phillips hd.	2
13	24 755 08	Kit, front drive shaft (Includes 14)	1
14	M−0839025	Screw, hex flange	4
15	24 468 11	Washer, spring 10mm	4
16	24 112 14	Spacer	4
17	24 141 06	Ring, support	1
18	24 162 22	Screen, grass	1

Ref. No.	Part No.	Description	No. Used
19	X−25−53	Washer, plain 1/4”	4
20	M−0603100	Screw, hex	4
21	24 086 18	Screw, phillips hd.	2
22	X−25−92	Washer, plain 3/16	2
23	25 403 03	Rectifier−regulator 15 amp	1
24	236602	Connector	1
25	12 132 06	Spark Plug	2
26	47 154 01	Clip, cable	1
27	X−25−63	Washer, plain 1/4”	1
28	48 154 02	Clip, cable	1
		Not Illustrated	
	25 518 28	Lead, black, (4” − 18 gauge − insulated grip barrel eyelet terminals)	1
	24 176 38	Harness, wiring	1
	24 755 56	Kit, wiring (Includes Terminal #25 542 17 & Tie X−468−1	1
	24 126 71	Bracket, stator wire	1
	X−22−11	Washer, lock	1

Obtain Parts From Kohler

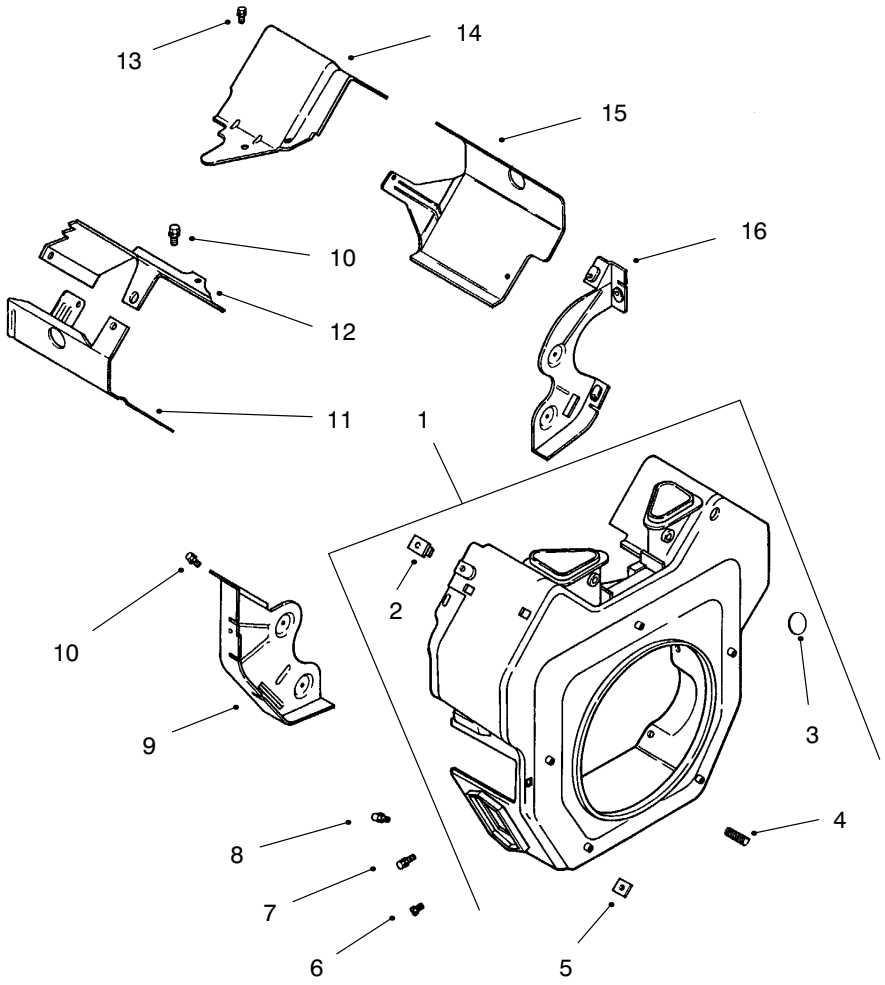

Group 6 − Blower Housing & Baffles (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 027 40	Housing, blower (Includes 2−5)	1
2	24 100 02	Nut, plastic	2
3	25 139 16	Button plug	1
4	25 086 43	Screw, set	1
5	24 100 01	Nut, plastic	2
6	M−0551016	Screw, hex. flange	1
7	M−0545016	Screw, hex. flange	5
8	M−0567020	Screw, hex. flange	2
9	24 146 11	Plate, backing − #2 side	1

Ref. No.	Part No.	Description	No. Used
10	M−0645016	Screw, hex. flange	6
11	24 063 39	Baffle, cyl. barrel−#2 side	1
12	24 063 17	Baffle, valley − #2 side	1
13	M−0545010	Screw, hex. flange	2
14	24 063 24	Baffle, valley − #1 side	1
15	24 063 30	Baffle, cyl. barrel−#1 side	1
16	24 146 08	Plate, backing − #1 side	1
		Not Illustrated	
	24 113 69	Decal, HP	1

Obtain Parts From Kohler

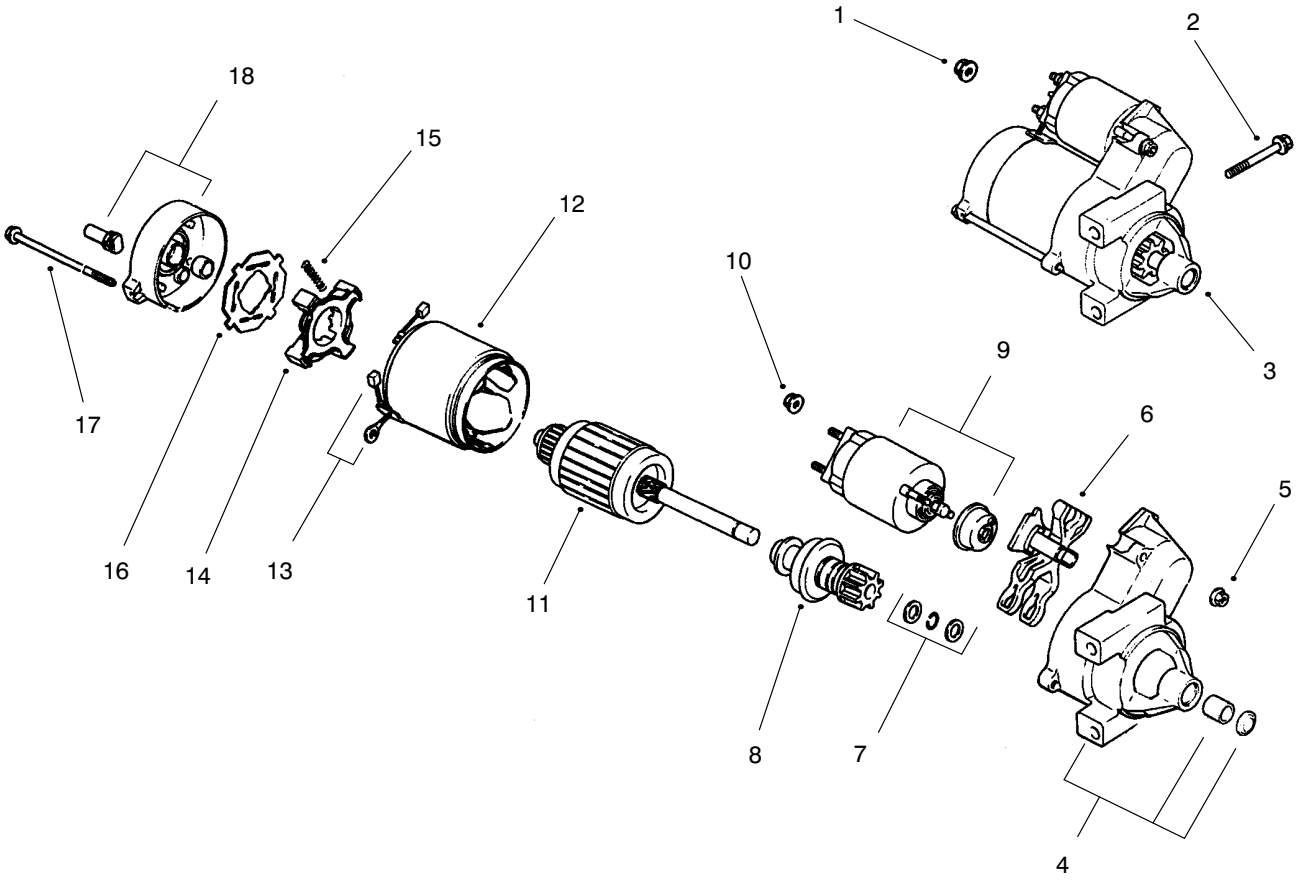

Group 7 − Starting System (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	M−0841080	Nut, hex flange	1
2	M−0839080	Screw, hex. flange	2
3	24 098 01	Starter, solenoid shift assembly (Incl. 4−18)	1
4	24 081 04	Drive, end cap	1
5	52 100 10	Nut, starter	2
6	12 090 10	Lever, starter drive	1
7	24 755 84	Kit, starter repair	1
8	12 239 01	Drive, pinion	1
9	52 435 02	Solenoid	1
10	52 100 09	Nut, starter	1
11	12 170 04	Armature, starter	1
12	12 471 01	Frame	1
13	52 221 01	Kit, brush & spring (Includes 15)	1
14	52 323 03	Holder, brush	1
15	52 089 09	Spring, brush	4
16	52 168 01	Insulator	1
17	52 211 05	Bolt, thru	2
18	24 301 01	Commutator, end cap	1

Obtain Parts From Kohler

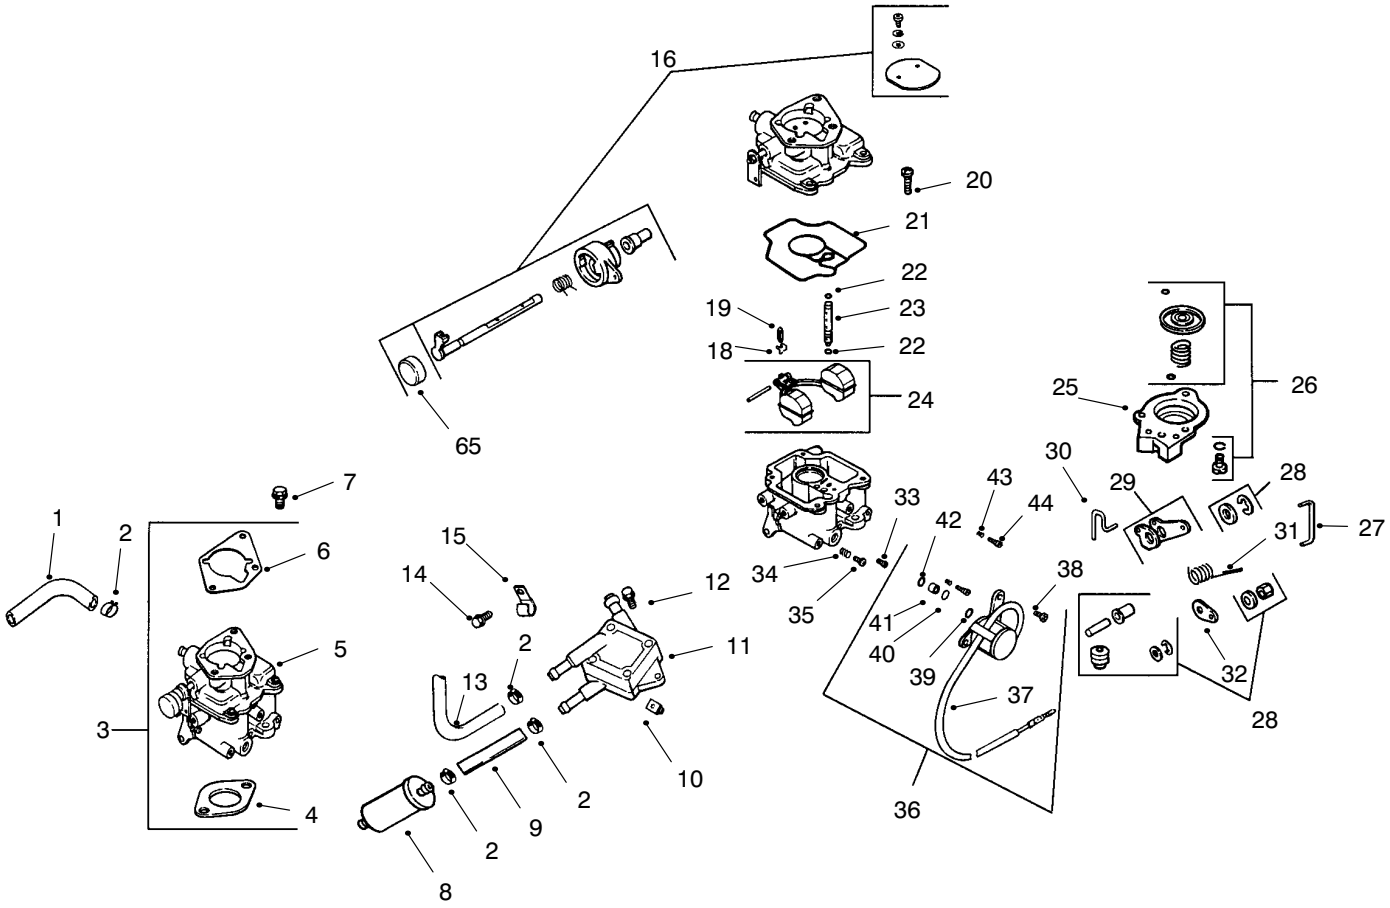

Group 8 − Fuel System (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	25 353 10	Line, fuel − 9”	2
2	X−426−9	Clamp, hose	6
3	24 853 34	Kit, carburetor w/gasket (Includes 4−6)	1
4	24 041 06	Gasket, air cleaner base	1
5	24 053 34	Carburetor assembly (For information only not available separately)	1
6	24 041 17	Gasket, carburetor	1
7	M−0651030	Screw, hex. flange	2
8	24 050 02	Filter, fuel	1
9	25 353 15	Line, fuel	1
10	24 100 01	Nut, plastic	2
11	24 393 04	Pump, fuel−pulse	1
12	24 086 12	Screw, hex	2
13	24 353 02	Line, fuel 15−1/2”	1
14	M−0650012	Screw, hex flange	1
15	47 154 01	Clip, cable	1
18	24 154 01	Clip, inlet needle valve	1
19	24 462 01	Valve, inlet needle	1
20	24 086 09	Screw, sems pan hd.	4
21	24 041 09	Gasket, carburetor body	1
22	24 153 02	O−Ring, slow jet	1
23	24 337 29	Jet, slow	1
24	24 757 02	Kit, float repair	1
25	24 081 05	Housing, pump	1

Ref. No.	Part No.	Description	No. Used
26	24 757 08	Kit repair−accelerator pump	1
27	24 079 07	Linkage, rod	1
28	24 757 09	Kit repair−accelerator pump diagram	1
29	24 090 16	Lever, rod	1
30	24 079 06	Linkage, rod	1
31	24 089 27	Spring, Linkage	1
32	24 090 15	Lever, Linkage	1
33	24 337 30	Jet, main	1
34	24 086 10	Screw, idle speed adj.	1
35	24 089 10	Spring, idle speed adj.	1
36	24 757 01	Kit, solenoid asm. (Includes 37−42)	1
37	24 153 06	O−Ring, solenoid	1
38	24 521 01	Seat, solenoid	1
39	24 153 05	O−Ring, solenoid	1
40	24 153 04	O−Ring, solenoid	1
41	24 435 01	Solenoid	1
42	24 086 07	Screw, sems pan hd.	2
43	24 089 11	Spring. idle adj.	1
44	24 368 01	Needle, idle adj.6	1
		Not Illustrated	
	24 757 03	Kit, carburetor repair	1
	24 757 07	Kit, choke repair (Includes 17)	1
	24 173 02	Cap, choke lever	1

Obtain Parts From Kohler

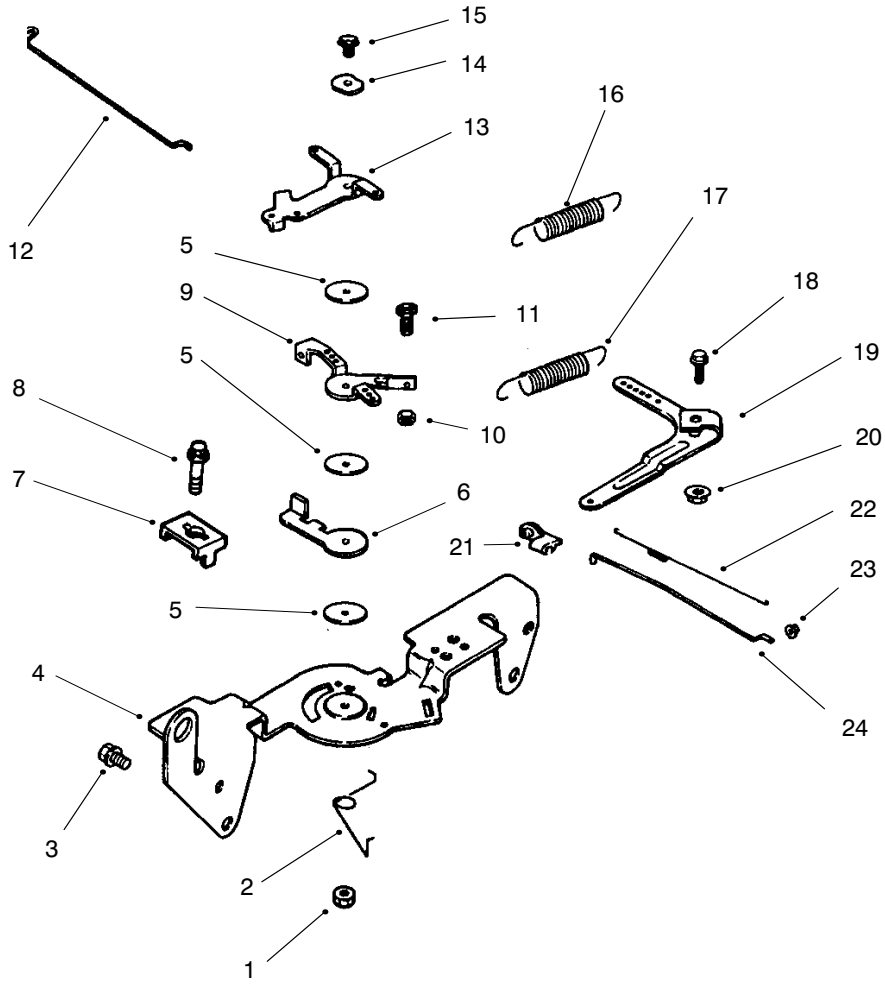

Group 9 − Engine Controls (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	M−0547050	Nut, hex. lock	1
2	24 089 03	Spring, choke return	1
3	M−0645016	Screw, hex. flange	4
4	24 126 56	Bracket, control	1
5	24 468 01	Washer, plain	3
6	24 090 07	Lever, throttle actuator	1
7	12 237 01	Clamp, cable	2
8	M−0545016	Screw, hex. flange	2
9	24 090 03	Lever, throttle control	1
10	M−0446030	Nut, hex	1
11	M−0401030	Screw, hex. cap	1
12	24 079 02	Linkage, choke	1

Ref. No.	Part No.	Description	No. Used
13	24 090 05	Lever, choke	1
14	41 468 03	Washer, spring	1
15	M−0545020	Screw, hex. flange	1
16	24 089 38	Spring, throttle limiter	1
17	24 089 15	Spring, governor	1
18	SM−0642025	Screw, hex. flange	1
19	24 090 14	Lever, governor	1
20	M−0641060	Nut, hex. flange	1
21	25 158 11	Bushing, linkage retaining	1
22	24 089 01	Spring, linkage	1
23	25 158 08	Bushing, linkage retaining	1
24	24 079 01	Linkage, throttle	1

Obtain Parts From Kohler

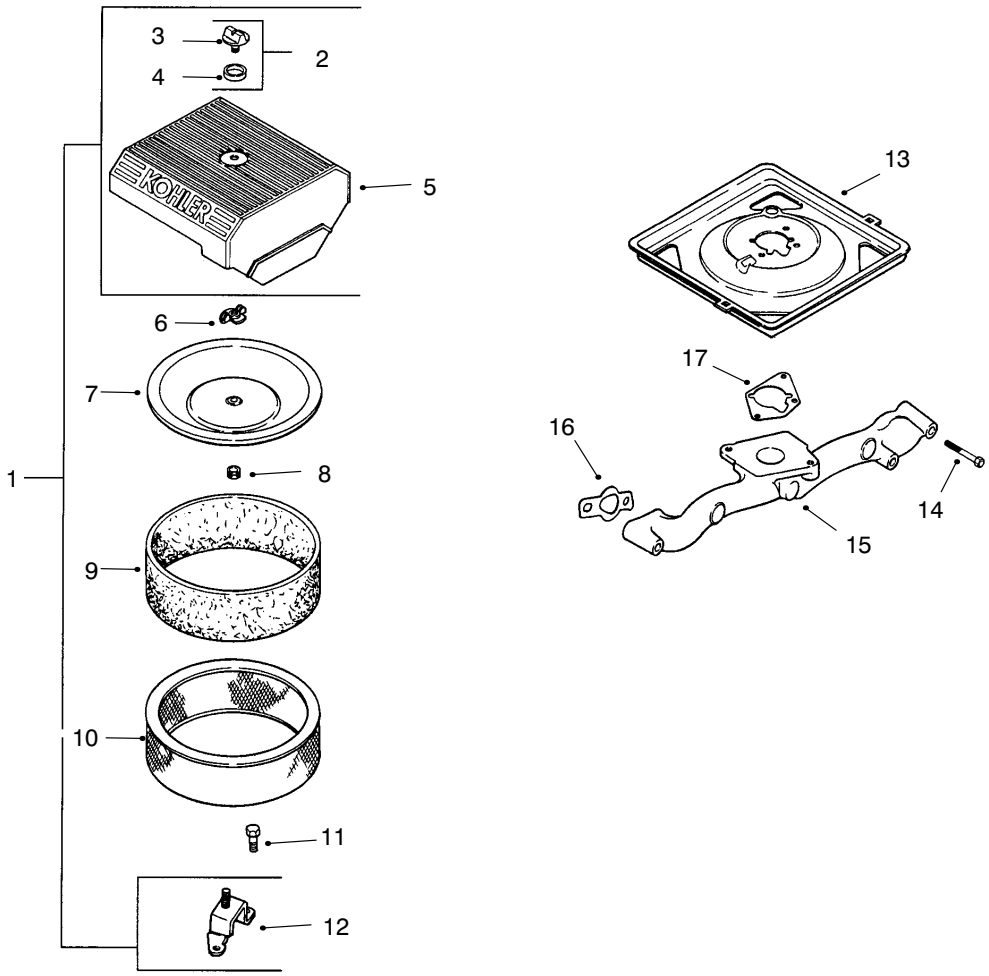

Group 10 − Air Intake/Filtration (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	24 753 05	Kit, air cleaner (Includes 2−5, 12)	1
2	54 755 01	Kit, air cleaner knob (Includes 3,4)	1
3	25 341 03	Knob, cover	1
4	24 153 15	O−Ring	1
5	24 096 24	Cover, air cleaner	1
6	12 100 01	Wing Nut	2
7	24 096 01	Cover, inner air cleaner	1
8	230046	Seal, inner air cleaner	1

Ref. No.	Part No.	Description	No. Used
9	24 083 05	Precleaner, element	1
10	24 083 03	Element, air cleaner	1
11	M−0645016	Screw, hex flange	3
12	24 126 43	Bracket, air cleaner base	1
13	24 094 11	Base, air cleaner	1
14	M−0651055	Screw, hex flange	4
15	24 164 14	Manifold, intake	1
16	24 041 01	Gasket, intake manifold	2
17	24 041 06	Gasket, air cleaner base	1

Obtain Parts From Kohler

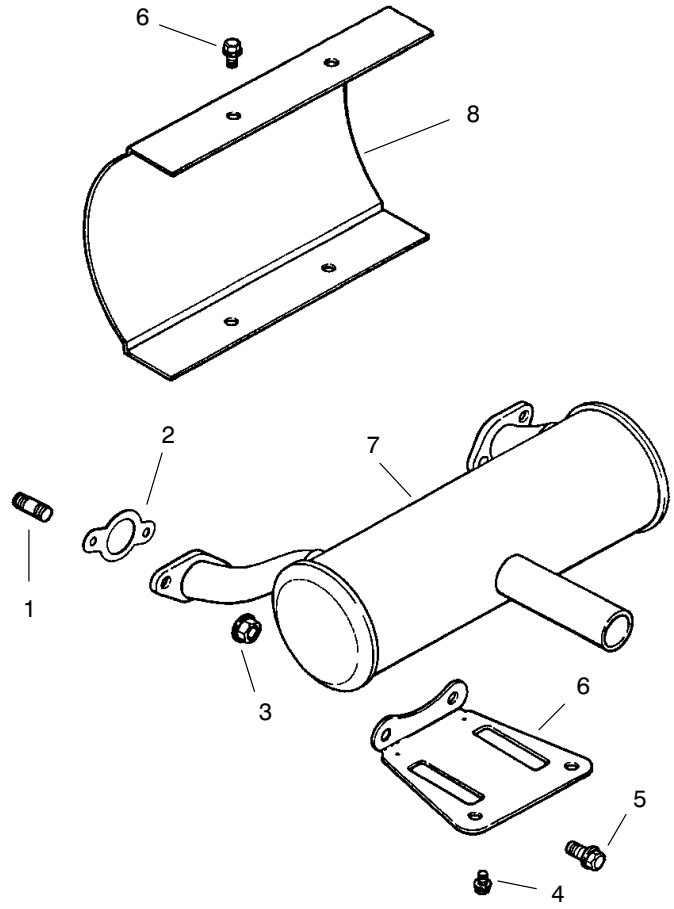

Group 11 − Exhaust (CH25S 68606 Kohler)

Ref. No.	Part No.	Description	No. Used
1	25 072 04	Stud	4
2	24 041 02	Gasket, exhaust	2
3	M−0841080	Nut, hex flange	4
4	M−0650012	Screw, hex. flange	4
5	M−0839020		2
6	24 126 12	Bracket, muffler	1
7	24 068 17	Muffler Canister − Center Outlet	1

Ref. No.	Part No.	Description	No. Used
8	24 314 04	Shield, heat	1
		Not Illustrated	
	24 522 85	Short Block	1
	24 782 01	Miniblock	1
	54 755 23	Gasket Set	1

Obtain Parts From Kohler

TORO PART NUMBER INDEX

Part No.	Pg. No.	Ref. No.	Qty.	Description
E000099	6	11:1	2	Kit–Seal
E000139	6	11:3	2	Kit–Bearing
5–1077	15	8	1	Key
E303077	8	1	6	Clamp
E303105	5	1	2	Yoke
E303287	11	21	5	Tie–Plastic
E303327	1	23	12	Washer–Lock
E303327	5	2	4	Washer–Lock
E303327	10	1	5	Washer–Lock
E303327	14	25	2	Washer–Lock
E303335	3	25	1	Tie–Plastic
E303335	8	4	1	Tie–Plastic
E303335	9	2	1	Tie–Plastic
E303335	11	31	2	Tie–Plastic
E303428	10	13	1	Elbow–90 DEG.
E303435	8	24	4	Washer
E303517	9	11:3	1	Decal–Belt Drive
E323229	11	32	1	Clip
E323235	9	36	2	Washer–Spring
E323236	9	37	2	Spacer
E373034	13	8	6	Washer–Flat
E403124	10	2	1	Elbow–Street
E413099	14	26	1	Pulley–Idler
E513006	6	3	1	Filter
E513011	3	15	8	Nut
E513034	6	33:1	2	Bearing–Pivot
E513034	10	14:1	2	Bearing–Pivot
E513075	11	33	1	Switch–Solenoid
E513140	4	1	2	Bearing
E513152	11	15	1	Switch–Seat
E513167	6	5	1	Cap
E513180	11	16	1	Actuator–Switch
E513374	11	26	1	Meter–Hour
E513435	14	4	3	Washer
E513592	3	26	1	Knob
E513645	8	6	2	Bushing
E513658	3	29	2	Bumper
E513747	3	11:2	1	Decal–Warning
E513748	9	11:2	1	Decal–Guard
E513762	3	24	1	Clip
E513762	7	56	1	Clip
E513762	8	3	1	Clip
E513762	11	23	1	Clip
E513840	6	7	2	Elbow
E513890	6	2:3	1	Decal–Hydraulic Tank
E513929	3	11:4	1	Decal–Drive Release
E522217	6	8	1	Hose ASM–Low Pressure
E522424	11	11	1	Mount–Spring
E523027	5	3	2	Damper
E523103	6	9	1	Gasket
E523281	11	34	1	Wire–Starter
E523328	6	11	2	Motor–Wheel
E523415	11	10	1	Spring
E523420	9	3	2	Bumper
E523428	3	2:6	1	4” Locking Track Set
E543017	5	4	2	Ball Joint
E543070	11	25	1	Switch–Ignition
E543084	11	36	1	Wire–Starter Solenoid
E543232	10	4	1	Nipple
E543233	10	5	1	Cap
E543277	8	7	2	Elbow
E543316	11	22	1	Module–Interlock
E543391	11	5	1	Insulator–Battery
E543393	11	35	3	Insulator–Solenoid
E543401	3	2:5	4	Spacer–Track
E543407	3	2:1	1	Cushion–Seat
E543456	8	8	2	Line–Fuel
E543511	2	7	2	Seal–Grease
E543513	2	1	2	Cap–Grease
E543792	11	3	2	Wingnut
E603050	10	6	1	Spacer
E603336	3	10	1	Cable–Choke
E603384	6	12	1	Bushing
E603384	10	7	1	Bushing
E603402	10	11	1	Spring
E603413	6	13	1	Spring–Extension
E603479	11	2	1	Battery
E603496	10	9	2	Bushing
E603721	6	14	1	Fitting–Tee
E603722	6	15	1	Fitting–Tee
E603735	5	5	2	Bushing
E603737	5	6	2	Bolt
E603807	5	7	2	Spring
E603826	6	16	3	Clamp–Hose
E603827	6	17	5	Clamp–Hose
E603841	7	51	2	Pump – Hydro RH
E603903	5	9	4	Spacer
E603987	6	18	1	Elbow
E603988	6	19	1	Elbow
E603989	6	20	2	Elbow
E603990	6	21	4	Adapter
E613235	9	1	4	Washer
E632187	3	14	1	Frame–Seat
E632191	5	10	1	Lever–Control LH
E632193	5	11	1	Lever–Control RH
E632199	12	11	2	Pin–Strut
E632201	6	23	1	Arm–Pump Idler
E632208	5	12	2	Arm–Pump Control
E632217	4	5	1	Shaft–Brake
E632219	1	7	1	Arm–Deck Lift
E632281	6	24	1	Hose ASM–Low Pressure
E632282	6	25	1	Hose ASM–Low Pressure
E632285	6	26	1	Hose ASM–Low Pressure
E632286	6	27	1	Hose ASM–Low Pressure
E632324	1	5	1	Lever–Lift
E632469	10	14	1	Idler Arm Asm
E632489	4	4	1	Lever–Brake
E632511	2	8	2	Fork–Castor
E632690	12	10	2	Strut
E632712	4	6	1	Brake Bracket–LH
E632713	4	7	1	Brake Bracket–RH
E632899	1	16	1	Plate–Deck Lift
E632911	5	13	1	Motion Control
E632912	5	14	1	Motion Control
E632923	3	11	1	Frame Weldment
E633002	2	11:1:1	2	Tire
E633007	3	12	2	Wheel & Tire ASM
E633008	3	12:2	2	Tire
E633009	3	12:1	2	Wheel
E633029	12	8	2	Rod End
E633060	4	10	4	Spacer
E633062	4	11	4	Spacer
E633064	1	32	2	Spring–Deck Support
E633068	1	12	2	Arm–Deck Lift
E633080	1	18	1	Bushing
E633082	1	17	1	Bushing
E633096	1	28	2	Rod–Deck Lift
E633097	1	20	1	Hitch Pin w/Lanyard
E633099	9	9	1	Clutch
E633102	4	12	2	Bearing–Side Flange
E633102	5	16	4	Bearing–Side Flange
E633110	11	29	1	Switch–Brake
E633111	11	20	2	Switch–Drive Lever
E633131	4	13	4	Yoke–Brake Linkage
E633144	4	14	2	Pin–Trunnion
E633152	5	17	2	Ball Joint LH
E633153	5	15	2	Linkage
E633166	10	12	1	Belt–Drive
E633167	6	31	1	Pulley–Idler
E633177	5	18	2	Arm
E633179	9	10	1	Spacer
E633181	11	18	4	Plate
E633257	5	19	2	Grip
E633268	4	17	1	Grip–Brake Lever
E633273	3	15	8	Wheel Bolt
E633293	3	16	1	Rod–Seat Holdup
E633295	1	6	1	Grip–Lift Lever
E633306	11	6	1	Wire–Starter
E633307	11	4	1	Wire–Ground
E633325	1	8	1	Spring–Compression
E633335	6	32	2	Hose–Low Pressure
E633345	1	37	1	Decal–HOC
E633346	3	13:3	1	Decal–Fuel Valve
E633347	8	12	1	Valve–Fuel Line

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Pg. No.	Qty.	Ref. No.	Description
E633348	8	13	1	Fuel Line
E633349	8	14	6	Spring–Fuel Tank
E633354	3	11:3	2	Decal–Motion Control
E633396	9	34	1	Clip
E633396	11	28	3	Clip
E633441	1	30	4	Swivel–Deck Mount
E633447	12	3	4	Chain–Lift
E633454	4	2	2	Spring–Brake
E633462	9	11:4	1	Decal–Important
E633466	9	17	1	Guard–Muffler
E633477	4	3	3	Rod–Brake
E633508	2	3	6	Washer–Belleville
E633543	9	5	1	Strap–Clutch
E633545	9	4	2	Spacer–Grommet
E633548	4	15	2	Hub–Wheel
E633553	1	3:2	3	Pad–Antiskid
E633567	6	29	1	Sheave
E633568	6	28	2	Sheave
E633579	2	11:5	2	Spacer
E633580	2	11:2	4	Seal–Bearing
E633581	2	11:4	4	Spacer – Bearing
E633582	2	11:1	2	Wheel & Tire ASM
E633583	2	11:1:2	2	Wheel
E633587	1	35	1	Handle
E633613	9	20	2	Bracket–Guard
E633615	9	7	1	Guard
E633630	9	38	2	Grommet
E633651	11	37	2	Bolt–Battery
E633652	11	1	1	Strap–Hold Down
E633673	11	27	1	Switch–PTO
E633693	4	9	2	Brake Band
E633696	3	9	1	Cable
E633705	3	2	1	Seat/Armrest ASM
E633706	1	36	1	Decal–HOC
E633709	3	2:2	1	Cushion–Seat Back
E633710	3	2:3	1	Armrest–RH
E633711	3	2:4	1	Armrest–LH
E633736	3	42	1	Decal–Z255
E633737	1	3:5	1	Decal–Z–Master
E633749	6	30	1	Belt
E633750	6	6	1	Filter–Hydro
E633752	6	6	1	Filter–Winter Hydro
E633766	1	3:3	1	Decal–Service
E633771	3	11:5	1	Decal–Pump Belt
E633776	6	1	2	Hose
E633777	6	22	2	Hose
E633786	6	10	4	Elbow 90 DEG
E633818	1	1:1	1	Decal
E633830	9	42	1	Kohler Command Ch25
E633889	1	15	1	Plate–Deck Lift
E633926	4	15:2	8	Stud–Wheel
E633964	3	1	1	Stop–Park Brake
E633980	4	15:1	2	Pubs
E633988	9	8	1	Spacer
E634277	6	33	1	Arm ASM
E634662	2	11	2	Caster Wheel ASM
E634796	9	14	1	Shield–LH
E634797	9	18	1	Shield–RH
E634862	9	11	1	Shield ASM
E634927	4	15	2	Wheel Hub w/Studs
E643119	11	30	1	Harness
E653189	14	24	1	Plate
E653190	14	30	1	Spacer
E653314	8	9	6	Stud – Toro
E800282	11	7	1	Screw
E800339	2	11:6	2	Screw–HH
E800805	7	37	1	Screw–HH
E800805	10	18	1	Screw–HH
E803016	7	38	4	Bolt
E803022	5	24	2	Screw–Set
E803022	7	39	2	Screw–Set
E803028	11	17	8	Screw
E803060	3	31	2	Screw
E803071	8	23	4	Screw
E804269	2	11:7	2	Nut–Lock
E804524	5	27	2	Nut
E806005	1	21	1	Hairpin
E806800	4	28	2	Pin–Cotter
E807020	4	16	2	Key–Woodruff
E807020	6	11:2	2	Key–Woodruff
E807272	7	46	2	Key
E807513	3	22	2	Bolt–CARR
E808280	5	33	2	Pin–Clevis
E808283	4	29	2	Pin–Clevis
E808284	1	14	2	Pin–Clevis
E808285	4	19	4	Pin–Clevis
E808505	1	11	5	Ring–Retaining
E808514	4	30	2	E Ring Retainer
E809036	4	8	2	Nut
E809036	6	11:4	2	Nut
E809057	5	8	4	Screw–HSH
E809076	9	35	2	Screw–HH
E811008	7	49	1	Fitting–Grease
E811008	10	22	1	Fitting–Grease
E811010	2	6	2	Plug
E816001	11	19	2	Fuse–20 Amp
7–0081	15	2	1	Washer–Special
7–4150	14	20	2	Washer
13–2840	7	45	1	Key
14–0909	13	16	1	Deflector w/Decal
27–0920	14	18	2	Shaft–Spindle
27–0950	14	17	3	Spacer–Bearing
27–0960	14	21	3	Bearing Ass'y
27–5970	14	22	3	Spacer–Matched Set
27–8580	15	5	1	Idler ASM
43–8480	13	1:2	1	Decal–Danger
44–6300	15	10	1	Idler Plate
46–8530	14	16	3	Bearing ASM
51–1530	13	12	2	Bracket–Hinge
51–1550	13	15	2	Spring
51–3551	14	19	1	Spindle–Shaft
54–9220	13	16:2	1	Decal–Danger
57–0240	15	12	1	V–Belt
57–0260	14	2	2	Spindle Housing ASM
61–4160	14	15	3	Spindle–52"
65–2690	6	2:2	1	Decal–Hot Surface
65–5940	15	1	1	Pulley–Idler
65–5950	15	6	1	Bushing–Pulley
66–1340	13	1:4	1	Decal–Discharge
66–6380	13	1:5	1	Decal–Danger
67–5360	13	20:1	1	Decal–Danger
67–5360	13	21:1	1	Decal–Danger
68–2730	13	7	6	Wheel–Gage
74–0720	3	33	1	Tube–Manual
92–5816	14	5	3	Screw – Blade
92–5836	14	12	1	Washer
93–3101	8	5	2	Gas Cap
93–3215	15	20	1	Baffle–Front RH
93–7340	3	34	1	Decal–Toro
93–7818	13	1:9	1	Decal–Blade Bolt Torque
94–1861	14	3	3	Blade
98–3269	13	1:7	1	Decal–Made In USA
98–3777	13	10	6	Spacer–Wheel
98–3798	13	1:3	1	Decal–Gage Wheel
98–3799	13	1:6	1	Decal–Belt Routing
98–5954	1	3:4	1	Decal–Cover Missing
98–5954	13	1:8	3	Decal–Cover Missing
98–5961	13	11	6	Screw–HH
98–5975	13	37	6	Washer
98–5995	13	1:10	1	Decal–72" Deck
98–7923	13	39	1	Skid
99–2605	14	1	1	Spindle Housing ASM
99–2621	13	1	1	72" Deck ASM w/Decals
99–2622	13	20	1	Cover
99–2623	13	21	1	Cover
99–2842	13	6	6	Spacer–Wheel
99–4601	1	1	1	Front Frame ASM
99–4602	10	23	2	Pin–Spring Mount
99–4607	8	11	1	Tank–RH Fuel
99–4608	8	10	1	Tank–LH Fuel
99–4611	3	13:2	1	Decal–Control Panel
99–4615	14	13	2	Pulley Hub
99–4622	1	3	1	Floorpan ASM
99–4623	3	13	1	Console ASM

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Pg. No.	Ref. No.	Qty.	Description
99−4624	3	11	1	Frame ASM
99−4625	6	2	1	Hydraulic Tank ASM
99−4626	14	9	1	Pulley Hub ASM
99−4627	15	13	1	V−Belt 147.4
99−4632	8	21	1	Decal−Control Panel
99−4635	3	2	1	Seat ASM w/Tracks
99−4638	10	10	1	Pulley−Idler
99−4656	8	2	1	Panel−Control
99−4659	14	27	1	Spacer−Bracket
99−4940	8	22	1	Shield−Control Panel
99−5156	15	19	1	Baffle−Front
249−21	13	23	4	Latch
2412−120	3	30	2	Clamp−R
253−139	14	14	6	Seal−Oil
254−72	2	5	4	Cup−Bearing
254−78	2	11:3	4	Cone−Bearing
254−79	2	11:1:3	4	Cup−Bearing
254−94	2	4	4	Cone−Bearing
302−2	14	10	3	Fitting−Grease
302−19	4	21	2	Fitting−Grease
302−19	12	4	2	Fitting−Grease
320−19	1	1:2	5	Fitting−Grease
321−3	7	50	2	Screw−HH
321−3	8	15	2	Screw−HH
321−4	3	27	1	Screw−HH
321−4	6	34	2	Screw−HH
321−4	9	22	10	Screw−HH
321−4	11	12	8	Screw−HH
321−6	11	24	1	Screw−HH
322−3	3	4	8	Screw−HH
322−3	8	16	4	Screw−HH
322−3	12	12	2	Screw−HH
322−5	3	17	1	Screw−HH
322−6	5	20	4	Screw−HH
322−6	9	39	1	Screw−HH
322−19	9	40	1	Screw−Hex
323−4	4	18	4	Screw−HH
323−4	5	21	8	Screw−HH
323−4	13	38	4	Screw−HH
323−6	1	25	3	Screw−HH
323−6	3	5	2	Screw−HH
323−6	5	22	4	Screw−HH
323−6	9	24	6	Screw−HH
323−7	1	26	12	Screw−HH
323−8	6	35	1	Screw−HH
323−9	1	22	2	Screw−HH
323−9	5	23	6	Screw−HH
323−9	7	36	1	Screw−HH
323−9	10	16	5	Screw−HH
323−11	14	29	1	Screw
323−13	1	19	1	Screw−HH
323−13	10	17	1	Screw−HH
323−14	10	15	2	Screw
323−21	3	18	2	Screw−HH
323−42	14	23	2	Screw−HH
324−6	12	2	8	Screw−HH
325−17	13	18	2	Screw−HH
325−20	4	20	8	Screw−HH
327−11	12	8	2	Screw−HH
3211−8	15	7	1	Screw−HH
3212−10	9	25	1	Screw
3217−9	4	22	8	Nut−HH
3217−11	1	29	8	Nut
3217−11	12	5	2	Nut
3218−6	1	33	4	Nut−Hex Jam
3219−2	5	26	10	Nut
3219−3	4	23	8	Nut−Hex
3219−6	12	9	2	Nut−Hex
3220−2	5	28	2	Nut−Jam
3231−22	13	40	2	Bolt−CARR
3231−22	14	6	18	Bolt−CARR
3231−27	13	13	4	Screw−CARR
3234−5	15	21	8	Screw−HHF
3242−4	7	41	2	Screw−Set
3242−6	7	40	2	Screw−Sqh Set
3253−3	7	42	2	Washer−Lock
3253−3	8	18	2	Washer−Lock
3253−4	8	19	4	Washer−Lock
3253−7	4	25	8	Washer−Lock
3253−8	12	6	2	Washer−Lock
3256−2	5	29	2	Washer−Flat
3256−2	9	29	4	Washer−Flat
3256−2	11	8	2	Washer−Flat
3256−3	5	30	4	Washer−Flat
3256−3	7	43	1	Washer−Flat
3256−3	9	30	1	Washer−Flat
3256−4	4	26	4	Washer−Flat
3256−4	7	44	1	Washer−Flat
3256−4	10	24	1	Washer−Flat
3256−7	1	31	2	Washer−Flat
3256−7	1	34	2	Washer−Flat
3256−23	3	44	6	Washer−Flat
3256−23	5	31	4	Washer−Flat
3256−23	8	20	10	Washer−Flat
3256−24	1	9	3	Washer−Flat
3256−24	10	20	4	Washer−Flat
3256−24	14	8	A/R	Washer−Flat
3256−27	1	34	4	Washer−Flat
3256−27	15	4	1	Washer−Flat
3256−28	4	31	2	Washer−Flat
3256−29	1	27	4	Washer−Flat
3272−5	5	32	2	Pin−Cotter
3272−10	1	13	2	Pin−Cotter
3272−10	4	27	7	Pin−Cotter
3290−321	13	24	8	Screw−HH
3290−357	1	24	17	Nut−Lock Flange
3290−357	4	24	4	Nut−Lock Flange
3290−357	5	35	8	Nut−Lock Flange
3290−357	7	47	8	Nut−Lock Flange
3290−357	9	32	4	Nut−Lock Flange
3290−357	10	21	10	Nut−Lock Flange
3290−357	13	9	22	Nut−Lock Flange
3290−357	14	28	1	Nut−Lock Flange
3290−357	15	9	2	Nut−Lock Flange
3296−5	15	11	1	Nut−Lock
3296−29	8	17	6	Nut−Lock
3296−29	9	41	1	Nut−Lock
3296−33	15	3	1	Nut−Lock
32128−17	13	25	8	Nut−Lock
32128−20	3	23	12	Nut−Lock
32128−20	5	34	4	Nut−Lock
32128−20	9	31	1	Nut−Lock
32128−20	11	9	2	Nut−Lock
32128−20	12	13	2	Nut−Lock
32128−20	15	22	8	Nut−Lock
32128−21	14	7	18	Nut−HHF
32128−33	3	28	1	Nut−Hex Flange
32128−33	5	36	4	Nut−Hex Flange
32128−33	7	48	2	Nut−Hex Flange
32128−33	9	33	7	Nut−Hex Flange
32128−33	11	13	11	Nut−Hex Flange
32128−37	12	1	16	Nut−Lock
32146−2	1	10	7	Nut−Hex Lock
32146−2	3	21	4	Nut−Hex Lock
32146−2	5	25	6	Nut−Hex Lock
32146−2	10	19	1	Nut−Hex Lock
32146−4	3	20	2	Nut−Lock
32146−14	2	2	2	Nut−Lock
32146−17	9	27	4	Nut−Lock
32146−18	3	19	2	Nut−Lock
32146−20	14	11	3	Nut−Lock
32153−5	13	19	2	Nut−Lock

*Not Illustrated