Form No. 3426-110 Rev B

TORO®

Count on it.

Parts Catalog

Spring Rake

Sand Pro®/Infield Pro® 3040 and 5040 Traction Unit

Model No. 08752—Serial No. 403300001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3426-110 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Spring Rake Assembly 4
Attachments and Accessories 6

© 2019—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Spring Rake Assembly

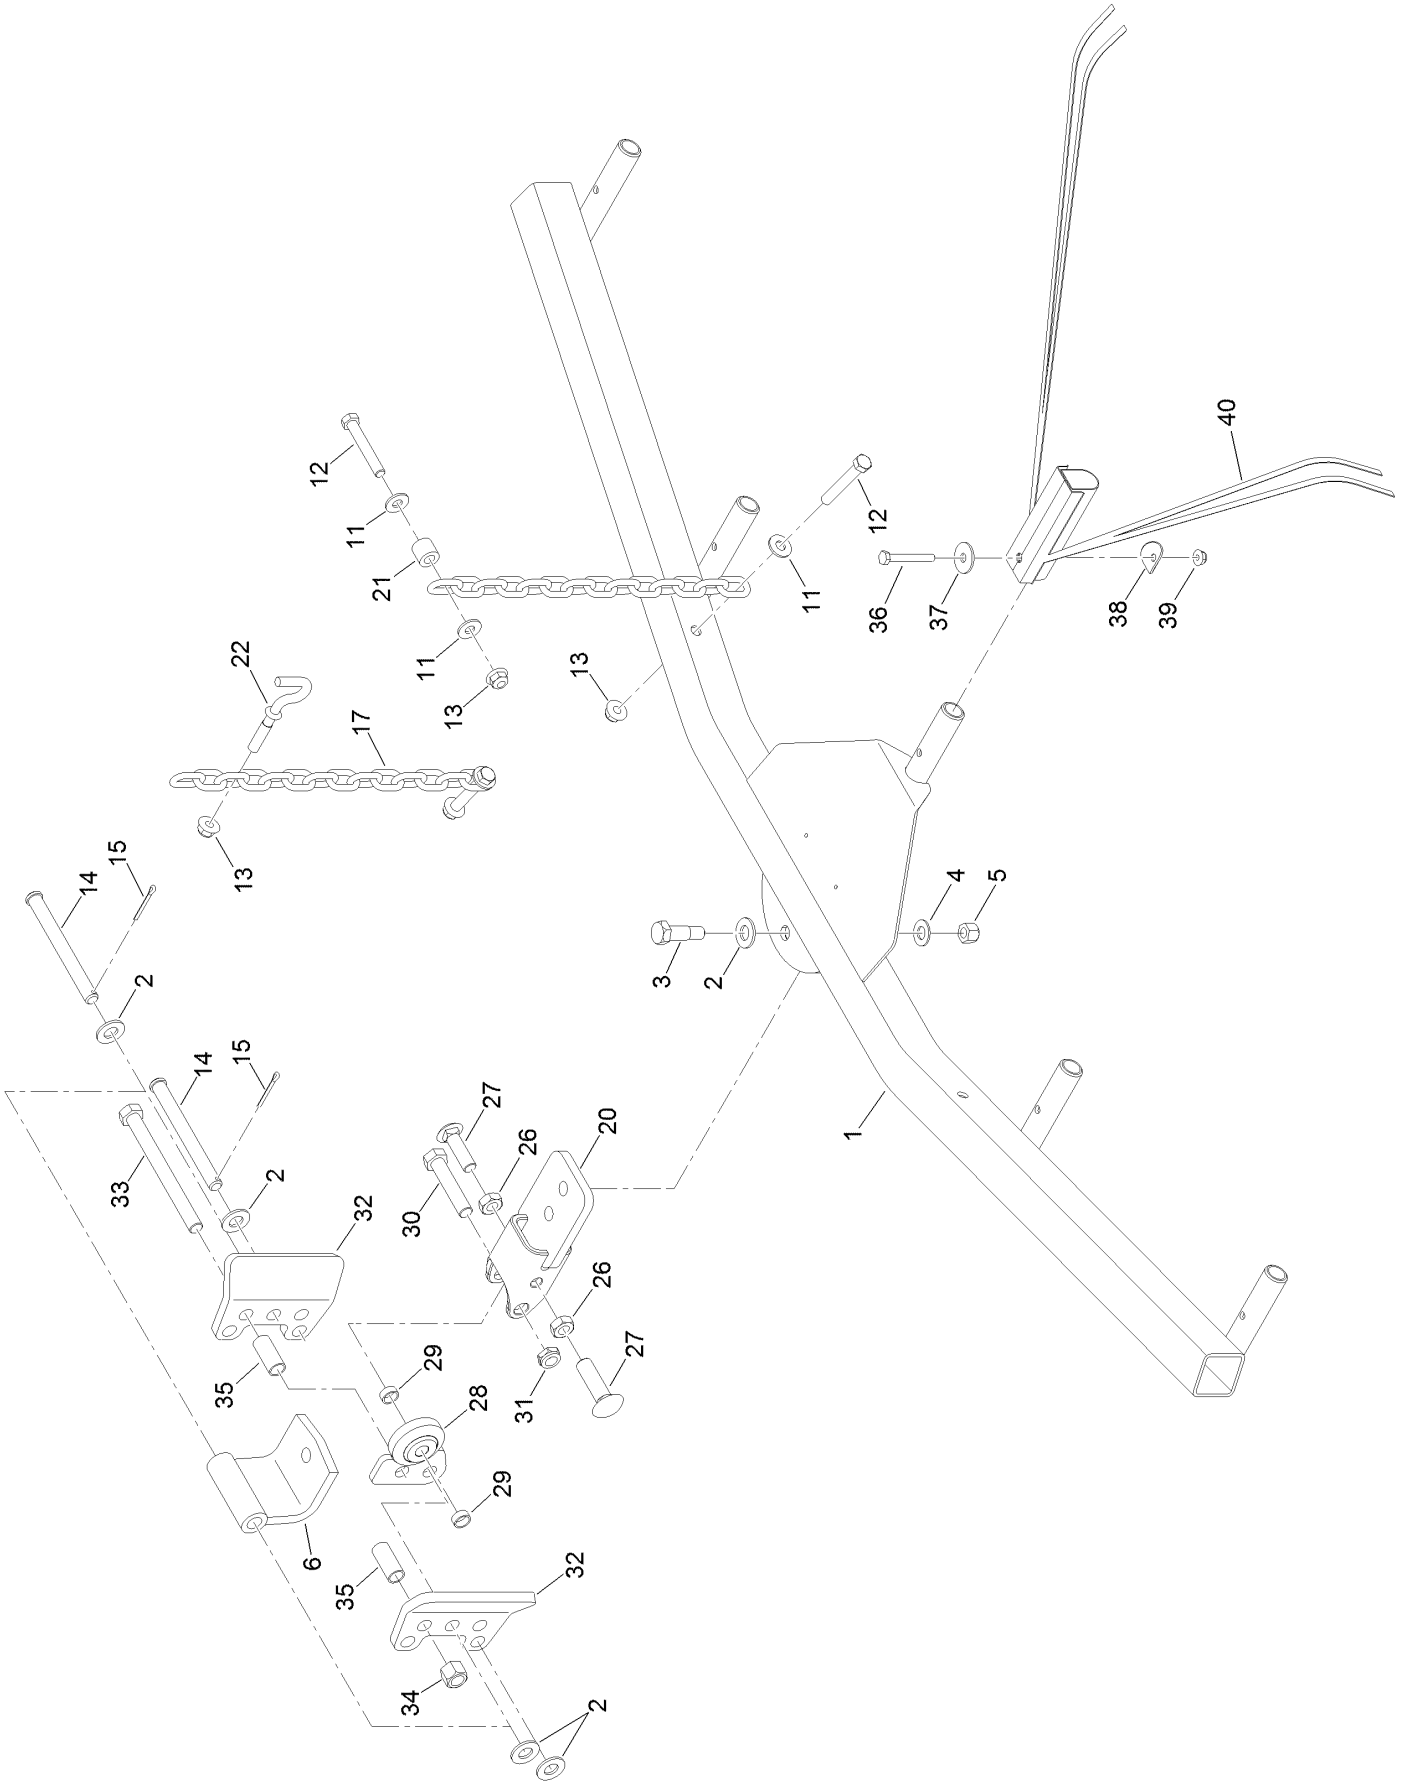

Spring Rake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	108-3198-03	1	Hanger ASM
2	3256-26	5	Washer-Flat
3	80-2050	1	Bolt-Shoulder
4	3256-25	1	Washer-Flat
5	3296-48	1	Nut-Lock, NI
6	108-9429-03	1	Pivot ASM
11	3256-3	6	Washer-Flat
12	323-47	4	Screw-HH
13	104-8301	4	Nut-HF, NI
14	100-5024	2	Pin-Clevis
15	3272-12	2	Pin-Cotter
17	84-2452	2	Chain-14 Link, Straight
19	108-9427	1	Lift Arm Adapter ASM ■●
20	138-2232-03	1	Drawbar-Rake, Common
21	121-1760	2	Spacer
22	80-2040	2	Hook
26	3218-5	2	Nut-Jam
27	3233-14	2	Screw-CARR
28	138-2228-03	1	Hitch-Ball
29	138-2235	2	Spacer
30	325-10	1	Screw-HH
31	3296-45	1	Nut-Hex
32	120-3499-03	2	Bracket-Stop
33	325-22	1	Screw-HH
34	119-8969	1	Nut-Hex
35	138-2227	2	Spacer
36	321-11	5	Screw-HH
37	3256-82	5	Washer-Flat
38	117-4687	5	Washer-Cup
39	104-7201	39	Nut-HF
40	120-3468	5	Rake-Spring

● Not illustrated

■ Optional Equipment

Attachments and Accessories

For 08752 Spring Rake Sand Pro/Infield Pro 3040 and 5040 Traction Unit

Product Name	Model/Part
Lift Arm Adapter ASM	108-9427

Notes:



Count on it.